


SEED3 SOCKET PLACES, seen from INSIDE the box (way 1 jumper block: same places; drawn: way 2 board). 4:1

Face (top of the pedal) is UP. USB-C end / footswitches on the LEFT. IN jack end on the RIGHT.

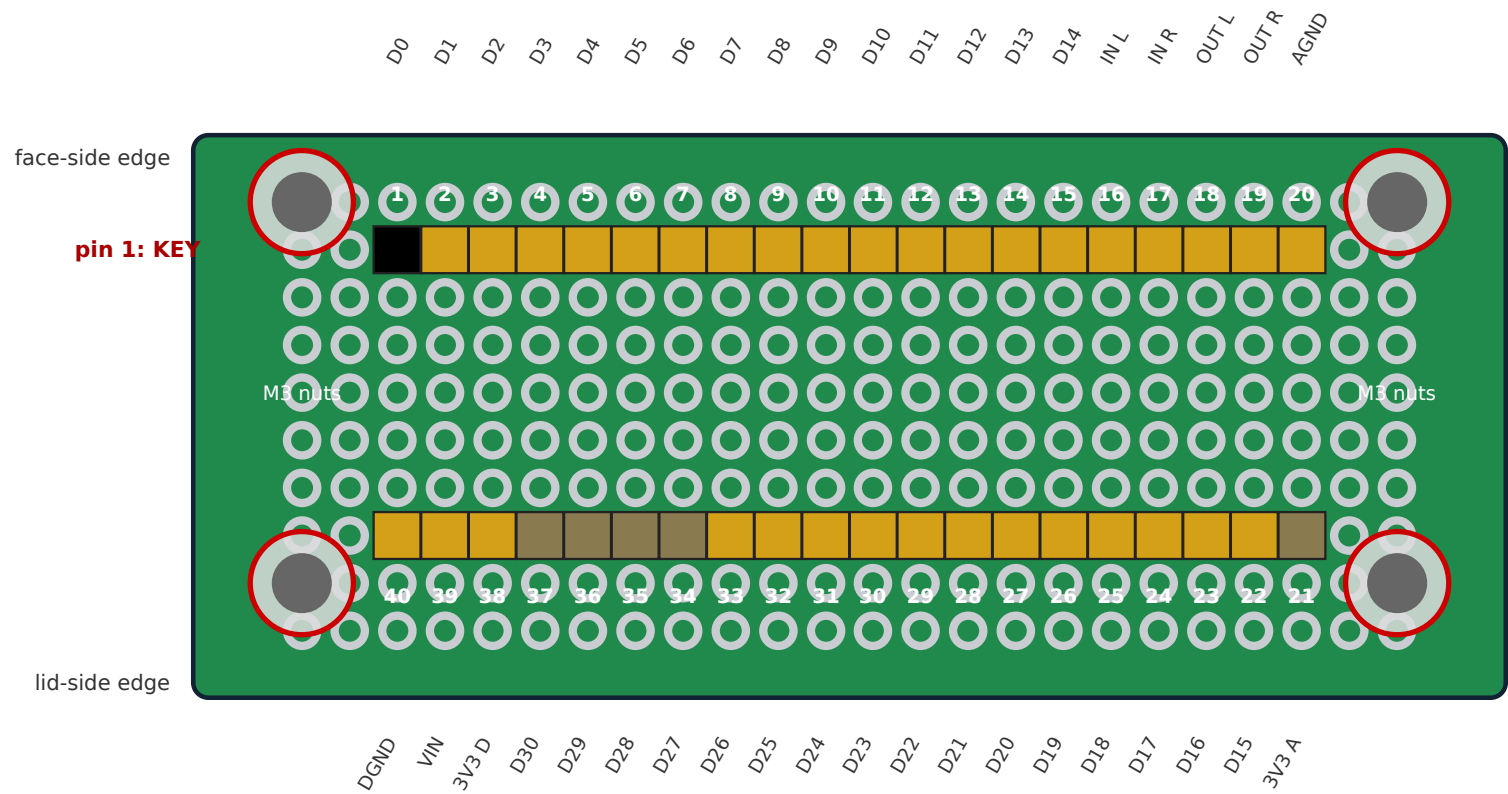

Pin 1 = D0 (not used). Snip pin 1 off the Seed3 and block place 1 (hot glue in that jumper end, or a resistor leg):
now the Seed3 only goes in the right way round. Backwards would put 9 V on the wrong pins!

Way 1: the jumper for each pin goes in the place with that number. Way 2: its wire is soldered to that header leg, under heat shrink.
Red = widen that grid hole to 3.2 mm (outer grid columns, 1st and 9th row: 58.4 x 20.3 mm apart). 4 screws: M3x12 from outside | wall | 5 mm spacer | board | nut.
Sockets go in the 2nd and 8th row from the face-side edge, 2 empty columns at each end. They're soldered, so they stay when the Seed3 is pulled.