


SEED3 SOCKET BOARD - the BACK (solder side), seen from INSIDE the box. Scale 4:1

Face (top of the pedal) is UP. USB-C end / footswitches on the LEFT. IN jack end on the RIGHT.

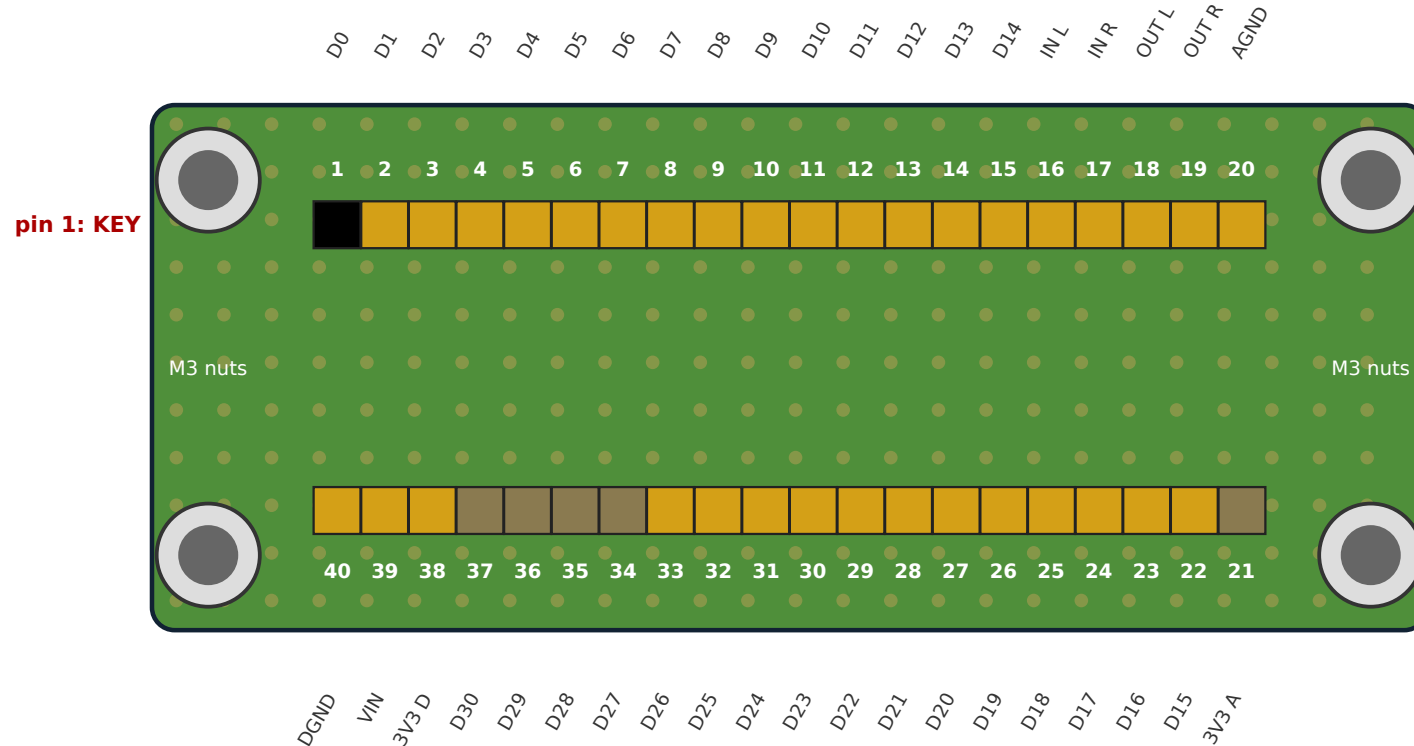

Pin 1 = D0 (not used). Snip pin 1 off the Seed3 and push a snipped resistor leg into socket 1 (glue it):

now the Seed3 only goes in the right way round. Backwards would put 9 V on the wrong pins!

Each wire is soldered to the end of the ~9 mm header leg with the SAME pin number shown here, under 6 mm of heat shrink.

4 screws, each: M3x12 from outside | side wall | 5 mm nylon spacer | this board | M3 nut. Holes 62 x 20 mm apart.

The 2 socket strips are soldered to this board, so they stay put when you pull the Seed3 out.