Office: lines, stations and shift planning

This is an informational translation. The matching Russian revision is authoritative. Guide for Markiro Autonom office administrators and technologists: shop-floor lines and the number of devices in a shift, stations on a line, product requirements, planning a shift in the Aggregation and Validation modes, lot numbers, pallets, duplicate printing, changing and deleting a shift.

Document code	MKR-INS-08
Revision	2026.11/01
Effective from	13 November 2026
Revision verification	https://markiro.app/d/MKR-INS-08/2026.11/01/13.11.2026
Language	EN
Operator	Богатырев Владислав Сергеевич
Contacts	https://markiro.app · hello@v-b.tech · +7 934 355-14-90

1. Purpose

This instruction covers preparing production in the Markiro Autonom office: creating lines, assigning stations to them and planning a shift. The office opens in the Markiro application on the host PC or on a computer paired with the host as an office. The operator opens the shift at the station — see instruction MKR-INS-01, which also shows how an operator creates a shift right at the station. Running a shift, closing it and the exports are covered by MKR-INS-09, the product card by MKR-INS-10.

The application interface is in Russian only, so the screenshots show the Russian screens. Interface labels are quoted in Russian, followed by an English gloss in parentheses.

A shift goes through three states: «Запланирована» (Planned) — the job is ready and production has not started; «Активна» (Active) — the shift was opened at a station and production is running; «Закрыта» (Closed) — production is over. Almost everything below is done in the first state: for an active shift the office changes only the plan.

Both office roles — administrator and technologist — can plan, change and delete shifts. Only the administrator changes lines; the technologist sees their list. The «Устройства» (Devices) section is available to the administrator only.

1. Check the lines and set how many devices may work in one line's shift.
2. Assign stations to lines.
3. Make sure the product is active.
4. Plan the shift: product, mode, dates, plan, line and — for aggregation — template, box capacity and pallets.
5. Hand the line over to the operator, who opens the shift at the station.


Note: The screenshots were taken on a demonstration site. Your names, numbers and quantities will differ.

2. Lines

The office describes the «Линии» (Lines) section as «Линии цеха: к ним привязаны станции и смены.» (Shop-floor lines: stations and shifts are bound to them.) The first lines are set in the host's first-start wizard; further ones are added here.

Step 1. Check the list of lines


The table has three columns: «Название» (Name), «Макс. станций» (Max stations) and «Состояние» (State) — «Действует» (Active) or «В архиве» (Archived). The pencil in a row opens the line for editing; the «…» menu holds further actions.

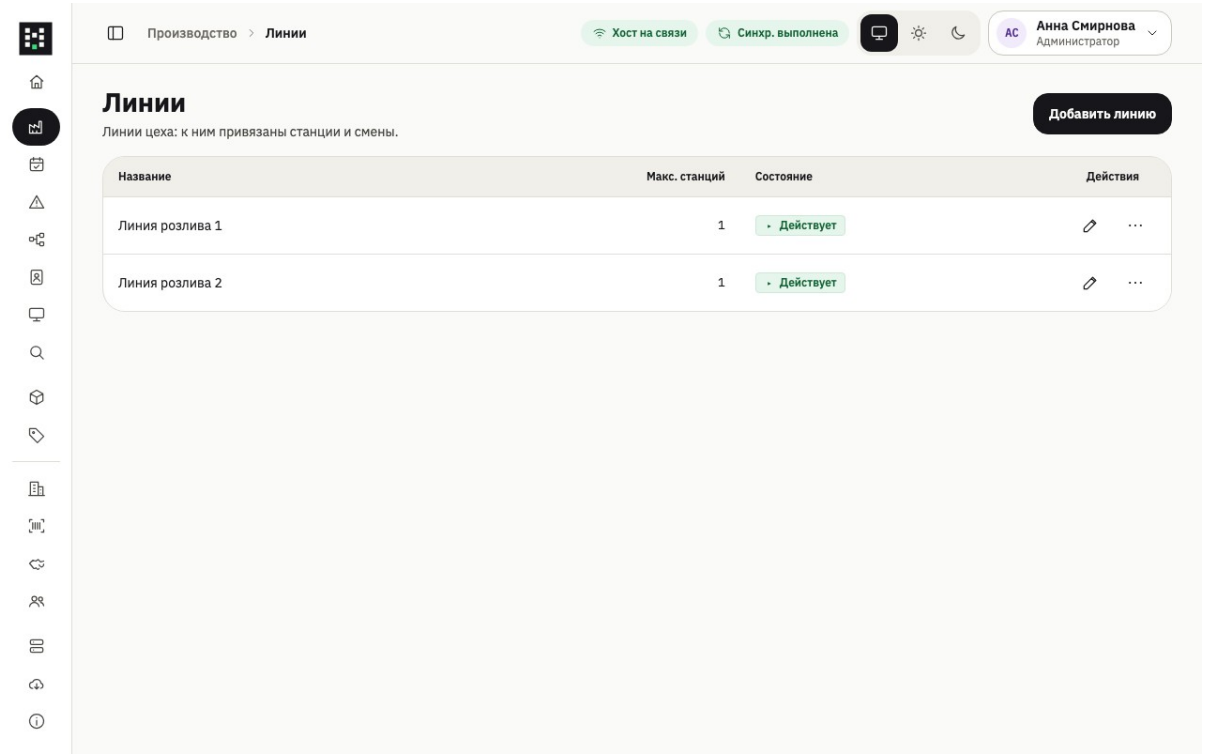

The «Линии» (Lines) section

Step 2. Add a line

Click «Добавить линию» (Add line). The «Новая линия» (New line) window has one field, «Название линии» (Line name); name the line the way the shop floor calls it so the operator recognises it at the station. Click «Добавить» (Add). Two active lines cannot share a name: the office answers «Активная линия с таким названием уже есть» (An active line with this name already exists).

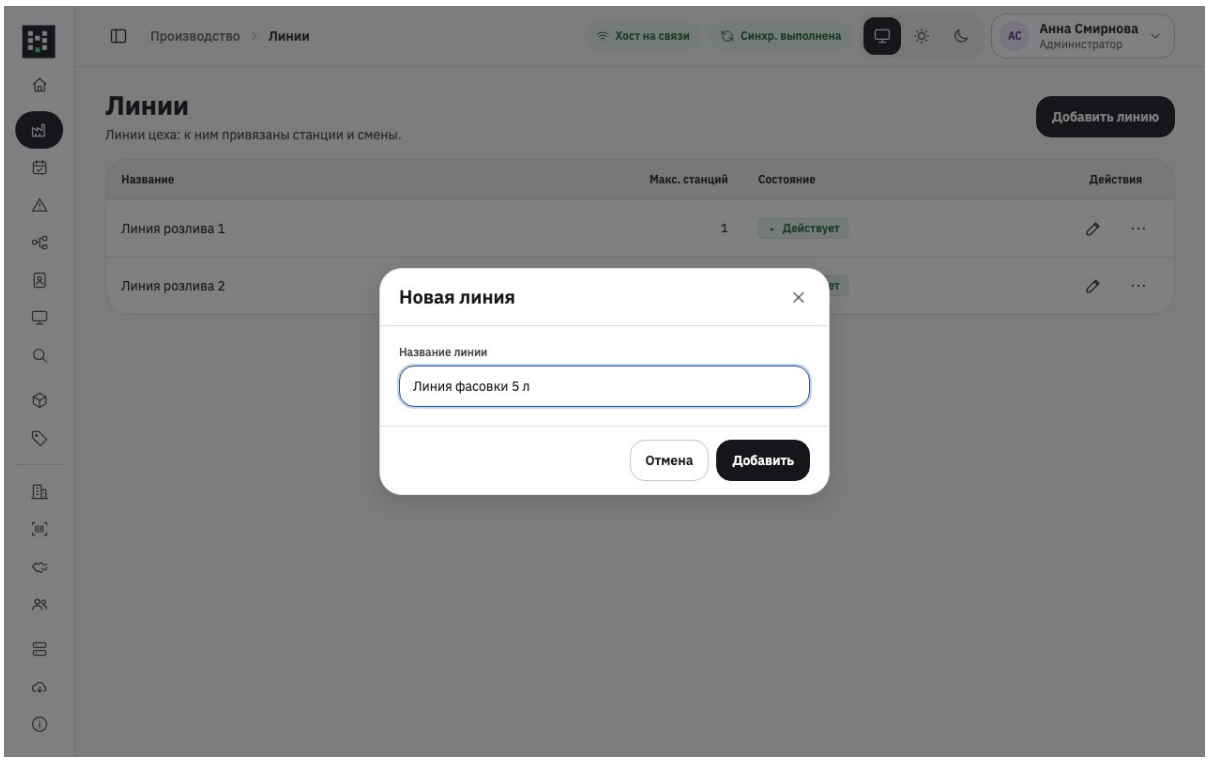


The «Новая линия» (New line) window

Expected result: The line is in the list with the state «Действует» (Active).

Step 3. Set how many devices work in a shift

The pencil in a line's row opens a window with «Название линии» (Line name) and «Максимум станций в смене» (Maximum stations in a shift). The field's hint reads: «От 1 до 16: станции и ТСД считаются вместе. Каждое устройство закрывает свою часть смены.» (1 to 16: stations and handhelds are counted together. Each device closes its own part of the shift.) A new line gets 1. While devices are working in the line's shift, the value cannot go below their number — the office says how many devices are in the shift now.

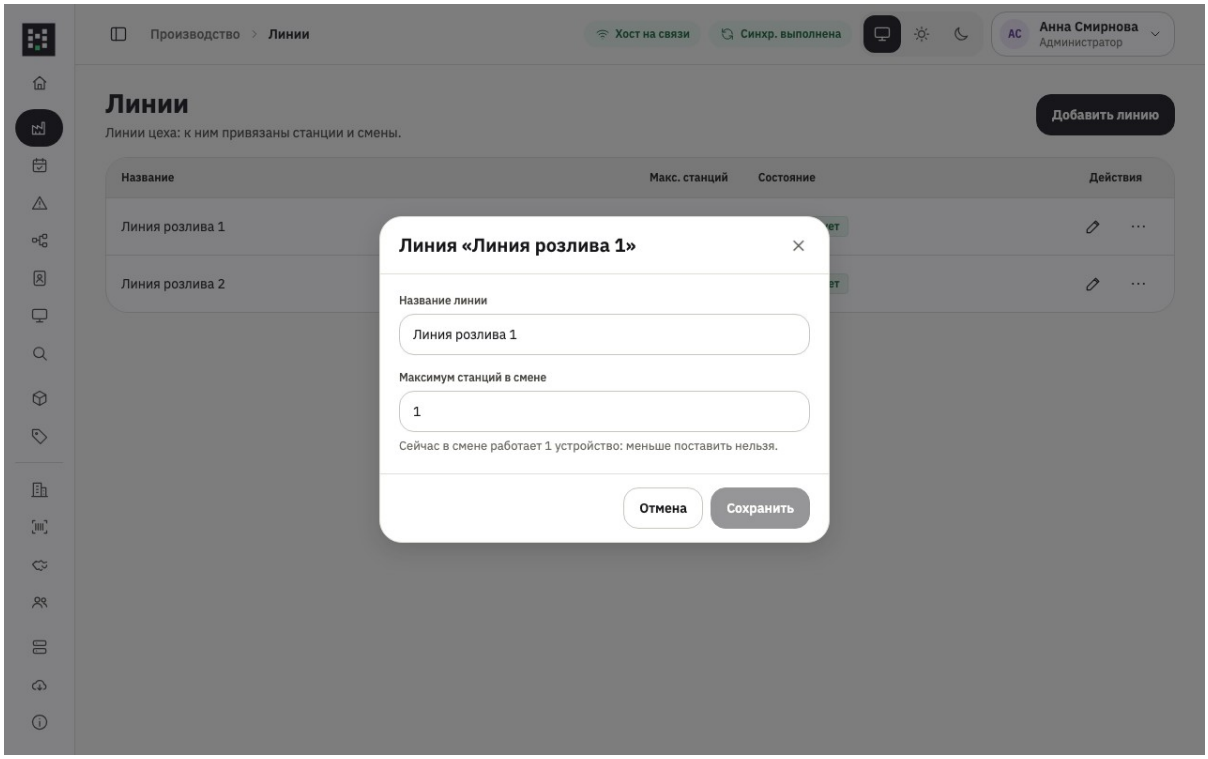

A line: its name and the maximum stations in a shift

Important: A line cannot be deleted — it is archived instead: «...» menu → «В архив» (Archive). The office warns that the line can no longer be chosen at a station, and that stations already working on it stay on it until they are moved in the «Устройства» (Devices) section. An archived line is brought back with «Вернуть» (Restore).


The site license may limit the number of lines. When the limit is reached the host refuses with «Достигнут предел лицензии: ...» (License limit reached: ...) — archive an unused line or extend the license.

3. Stations on a line

A station shows the operator the shifts of its own line, so every station must be assigned to a line. Stations, handhelds and office computers are paired with the host in the «Устройства» (Devices) section with «Подключить устройство» (Pair a device) and a one-time code; pairing is described in instruction MKR-INS-04.

Step 1. Find the station

Open «Устройства» (Devices). The table shows «Имя» (Name), «Вид» (Kind: «Станция» station, «Офис» office or «ТСД» handheld), «Линия» (Line) — marked «В смене ...» (In shift ...) when a shift is running on the device — «Версия» (Version), «Подключено» (Paired), «Связь» (Link: «на связи» online, «давно не было» not heard for a while or «нет связи» offline, with the time the host last heard the device) and «Доступ» (Access: «Действует» active or «Отозвано» revoked). The host PC itself is listed too, as «Рабочее место хоста» (Host workstation) marked «Этот ПК» (This PC).

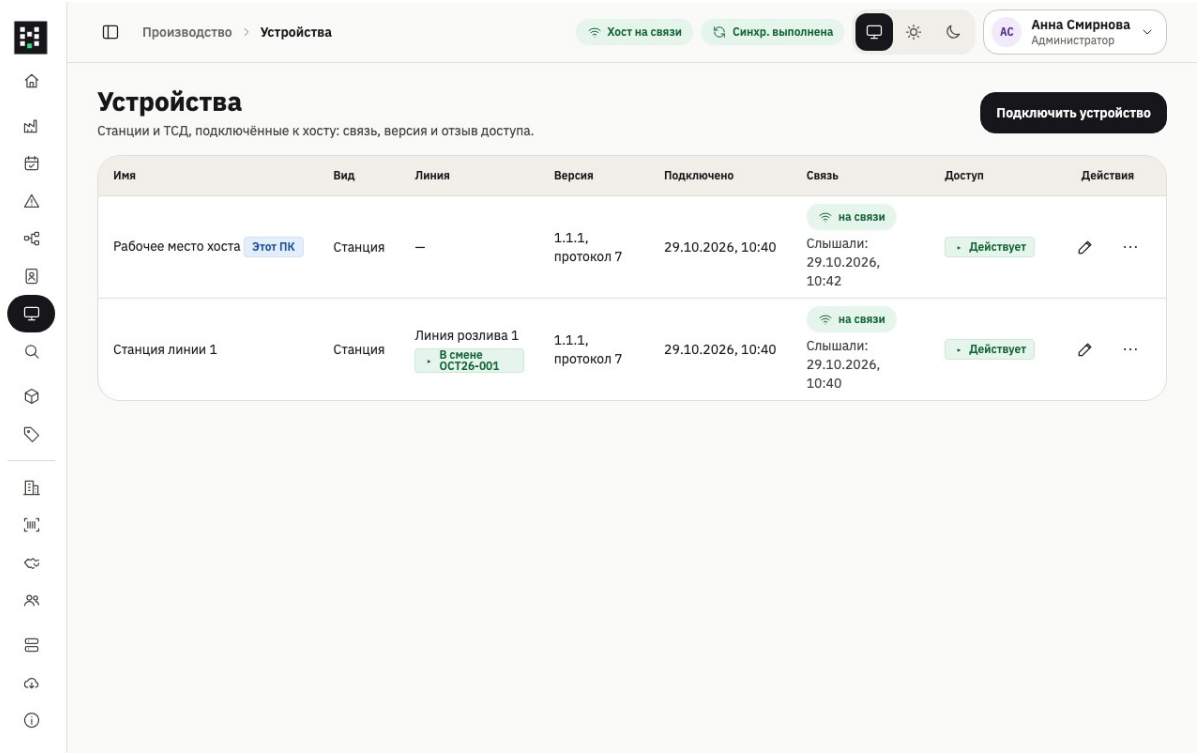


The «Устройства» (Devices) section

Expected result: The station is in the list and its access is «Действует» (Active).

Step 2. Assign a line to the station

Click the pencil in the station's row. The «Устройство «...»» (Device «...») window has two fields: «Имя» (Name) and «Линия» (Line). The line field's hint reads: «Станция перейдёт на линию, как только получит изменение от хоста. Без линии она попросит выбрать линию.» (The station moves to the line as soon as it receives the change from the host. Without a line it asks for one.) Choose the line and click «Сохранить» (Save).

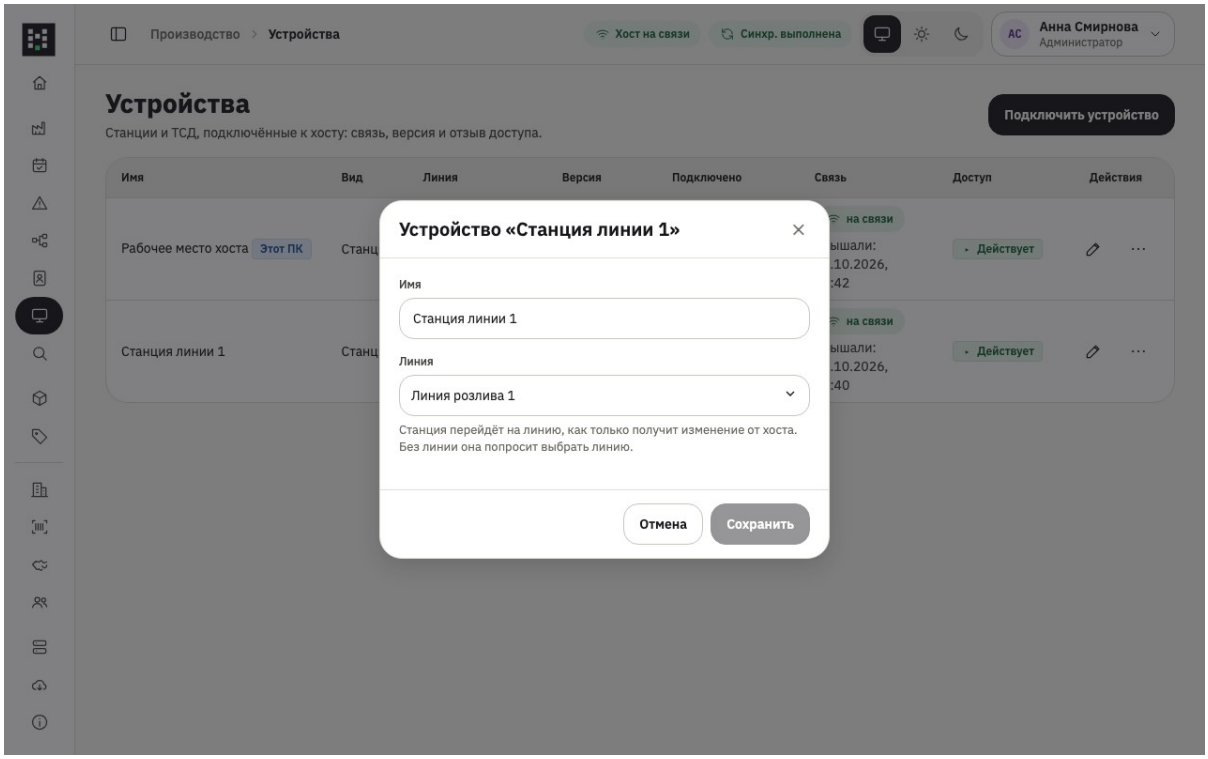

Device window: name and line

Expected result: The «Линия» (Line) column shows the chosen line.

Important: If a shift is running on the station, the office warns about it in the same window: after the move the station finishes the work in hand, signs the operator out and shows the new line's shifts, while the shift stays open — it can be closed on the «Смены» (Shifts) page. Move a station between shifts.

A station without a line asks for one itself: the «Выбор линии» (Choose a line) screen reads «Выберите линию, на которой работает эта станция.» (Choose the line this station works on.) An archived line cannot be chosen.

4. What the product needs


A shift is planned for a product from the «Товары» (Products) section. The shift form's «Товар» (Product) list contains only products in the «Активен» (Active) state; drafts and archived products are not in it. A product stays a draft until its product group, box capacity and boxes per pallet are set — completing the card is described in MKR-INS-10.

The product card saves typing: choosing a product fills the shift form with its box capacity, boxes per pallet, label templates and default counterparty. The filled values can be changed — the shift keeps what the form holds.

5. Planning a shift

Step 1. Open the «Смены» (Shifts) section


The «Местные смены» (Local shifts) tab shows this host's shifts; «Облачная история» (Cloud history) shows shifts carried over from cloud Markiro. Use «Поиск по сменам» (Search shifts) to find a shift by its number, lot number, product or print name. Filter by «Статус» (Status), «Линия» (Line), or by the «Дата производства» (Production date) and «Дата смены» (Shift date) periods. Without a period the office shows planned and active shifts plus those closed in the last 31 days. A row shows the number, product and print name, line, dates, status and mode, output and plan. The eye opens a planned shift; the «...» menu holds the actions on it.

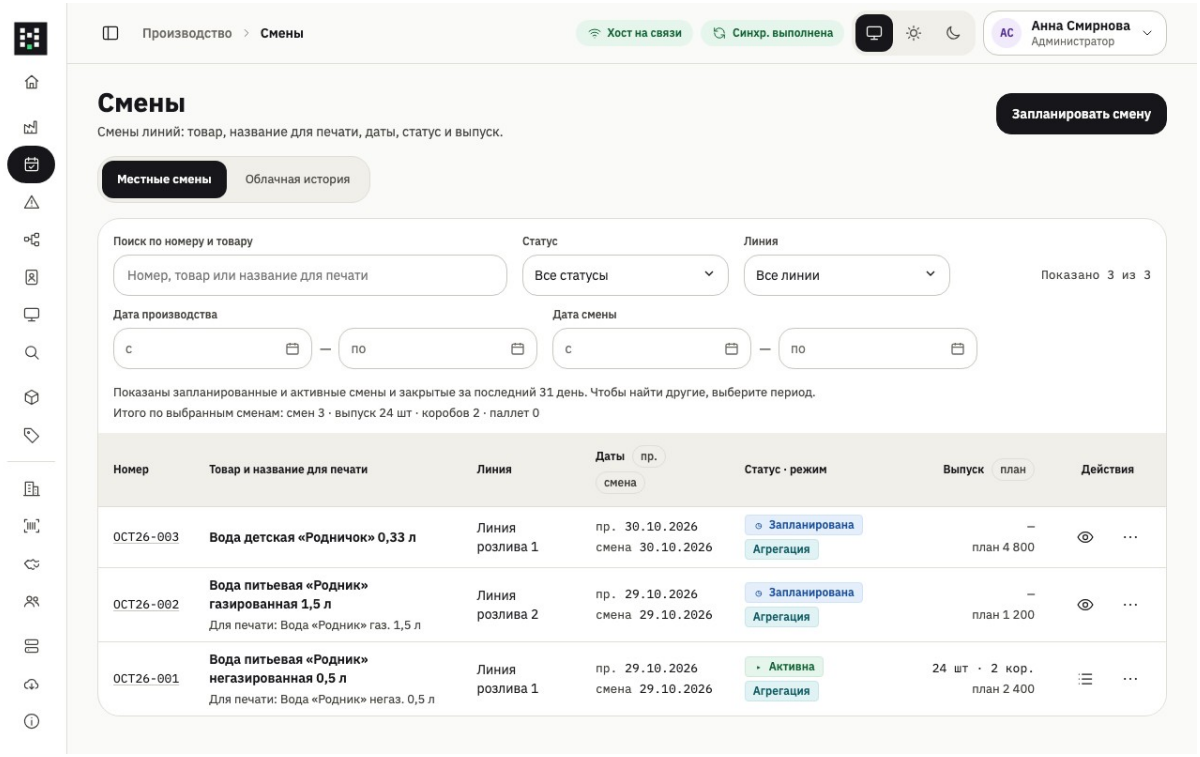

The «Смены» (Shifts) section

Step 2. Open the shift form

Click «Запланировать смену» (Plan a shift) — the «Новая смена» (New shift) panel opens on the right. Choose the product: the list shows the print name and the GTIN.

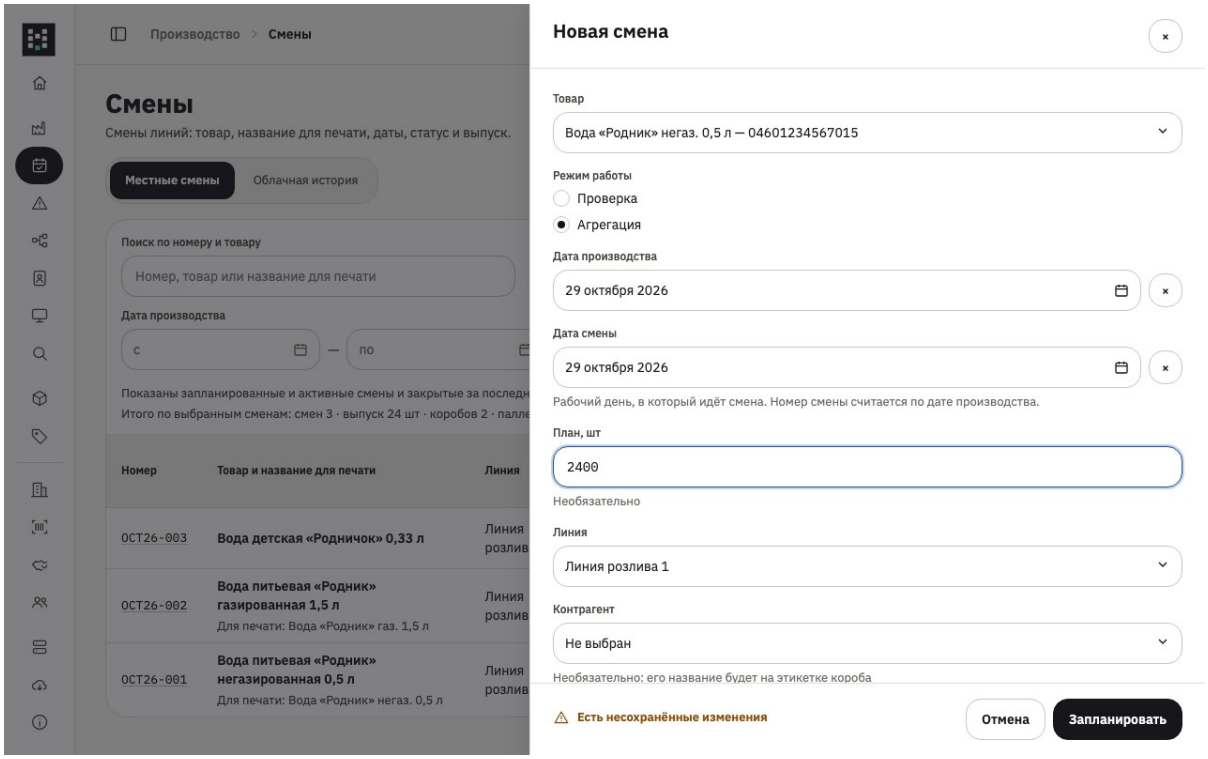

New shift: product, mode, dates, plan and line


- «Режим работы» (Mode) — «Проверка» (Validation) or «Агрегация» (Aggregation). A new form opens in Aggregation.
- «Дата производства» (Production date) and «Дата смены» (Shift date) — both default to today.

- «План, шт» (Plan, pcs) — optional: a whole number from 1 to 10,000,000. An empty field means a shift without a plan.
- «Линия» (Line) — required: without it the office answers «Выберите линию» (Choose a line).
- «Контрагент» (Counterparty) — optional: its name is printed on the box label.

Note: The two dates do not duplicate each other. The shift date is the working day of the shift, and the shift number is derived from the production date. The production date is printed on labels and goes into the exports. If a night shift produces the next day's goods, set both dates.

Step 3. Enable lot numbers


If your site prints lot numbers on labels, an administrator opens «Организация» (Organization) → «Профиль» (Profile), selects «Использовать номера партий» (Use lot numbers) and clicks «Сохранить» (Save). A technologist can see the setting in the profile and enter the number when planning a shift.

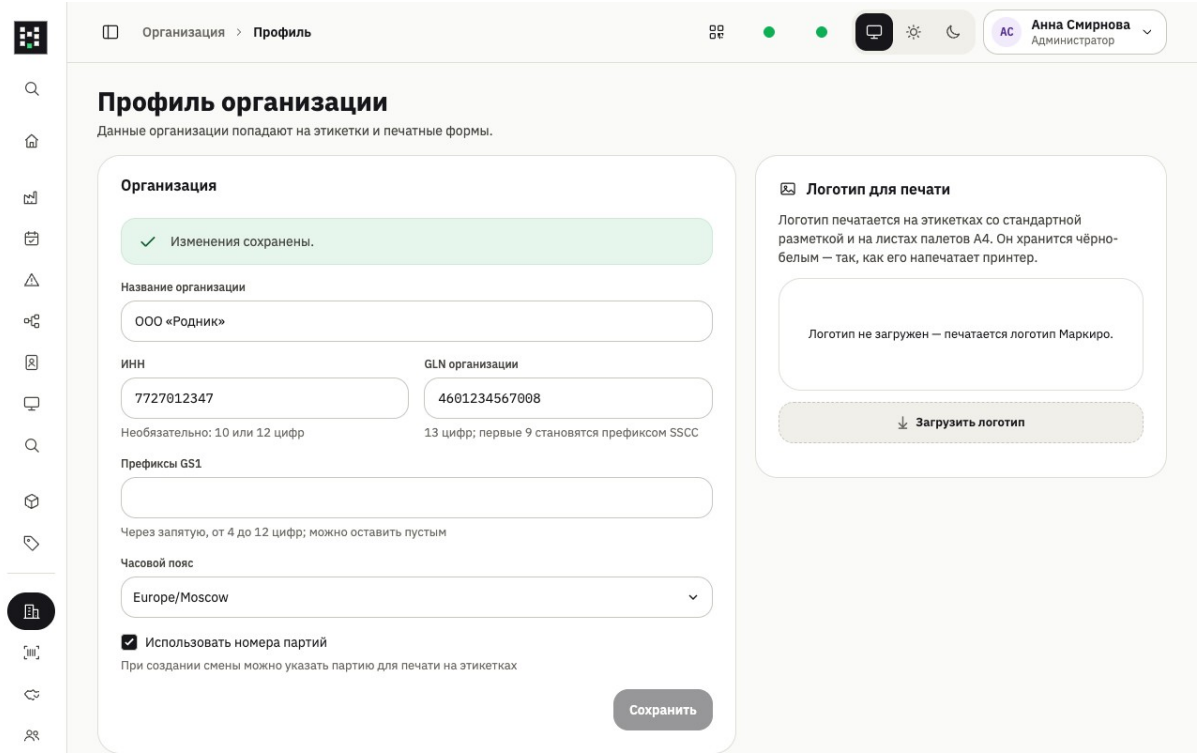

Organization profile with lot numbers enabled

Step 4. Enter the lot number while planning

In «Новая смена» (New shift), find «Номер партии (необязательно)» (Lot number, optional) after the dates. Enter Russian or Latin letters and digits 0–9, for example 00A42. Letter case and leading zeros are preserved. Spaces within the number, hyphens and other characters cause a validation error. Leave the field blank if a lot number is unnecessary.

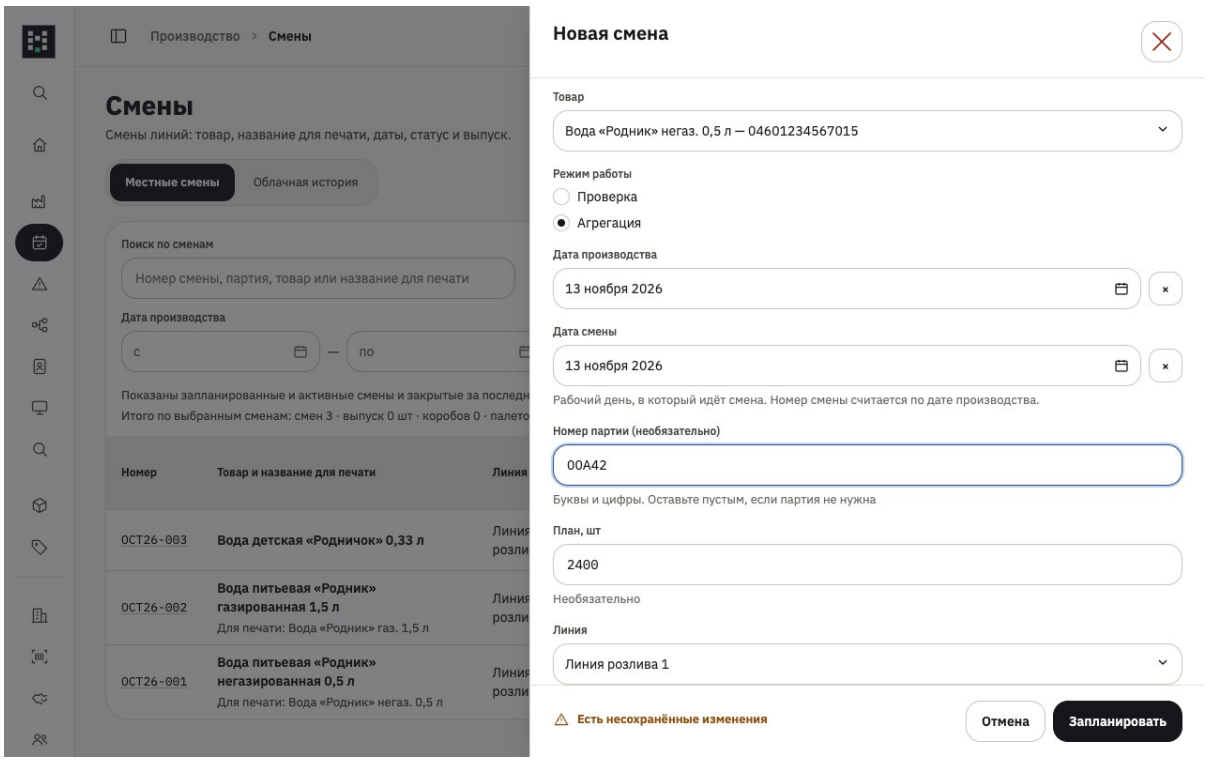

Lot number in the new shift form

On save, the office checks that the whole number fits in the shift's selected layouts and that they have a «Номер партии» (Lot number) field. In Aggregation, check the box label. If the shift uses pallets, also check the pallet label and the selected or default A4 sheet. In Validation, the check applies to the duplicate template when duplicate printing is enabled. If the field is missing or the number does not fit, choose a suitable layout in the shift form or edit the layout in «Шаблоны» (Templates).


Note: The shift list and card show the saved number as «Партия …» (Lot …). Use «Изменить» (Edit) to change or clear it before the shift opens. Once open, the shift uses the saved number for its labels.

6. Aggregation and pallets

In the Aggregation mode the station packs codes into boxes and prints box labels. «Шаблон этикетки короба» (Box label template) is required — without it the office answers «Выберите шаблон этикетки короба» (Choose a box label template); the template is filled from the product or from the default templates. «Вместимость короба, шт» (Box capacity, pcs) is taken from the product and can be changed, from 1 to 100,000.

Step 1. Turn pallets on if boxes are stacked on pallets

The «С паллетами» (With pallets) checkbox means the station stacks boxes on a pallet and closes it when it is full. It brings the fields «Коробов на паллете» (Boxes per pallet; from the product, 1 to 10,000; boxes, not units), «Шаблон этикетки паллеты» (Pallet label template; required) and «Лист А4» (A4 sheet) — the sheet is printed instead of the pallet's thermal label at a station with an A4 printer. If the product has no boxes-per-pallet value, the checkbox is unavailable: «У товара не задана вместимость паллеты: смена без паллет» (The product has no pallet capacity: a shift without pallets).

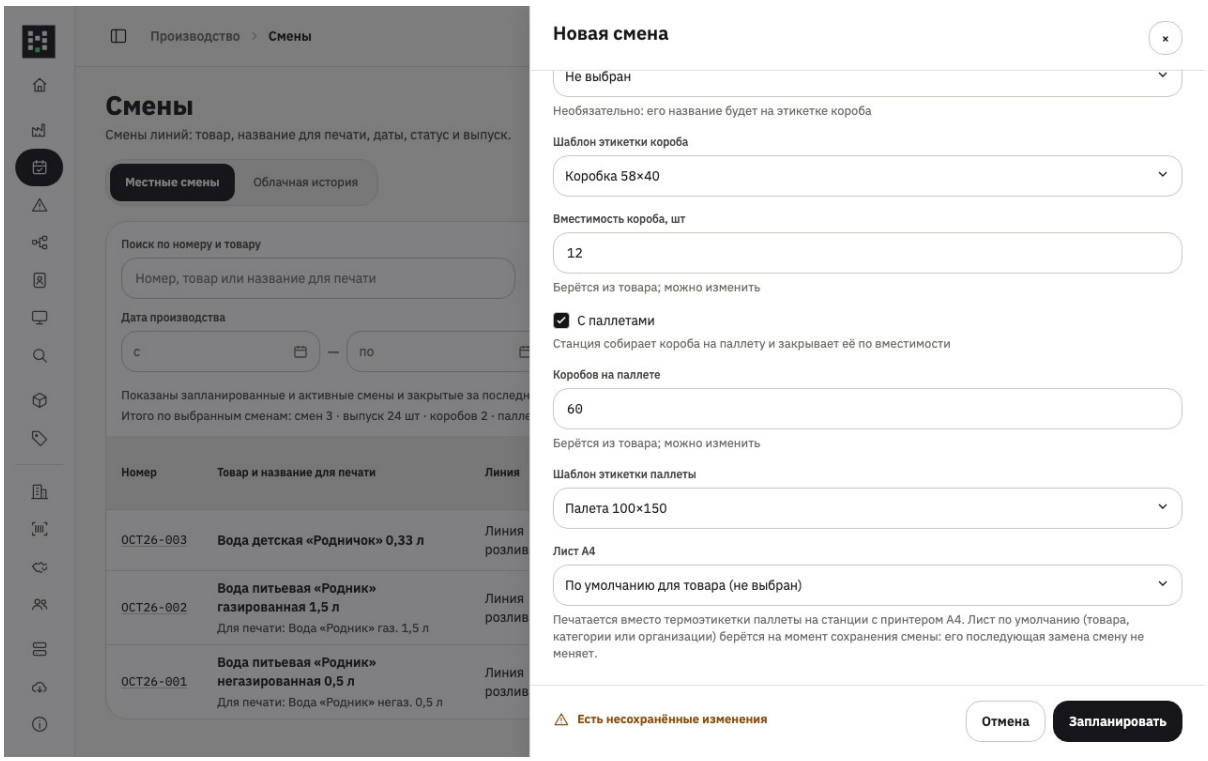

Aggregation with pallets

Expected result: The pallet fields are filled.

Important: Pallets are a feature of the site license. Without it the host does not save a shift with pallets and answers that pallets are not included in the site license: plan the shift without pallets or extend the license.

Step 2. Save the shift

Click «Запланировать» (Plan). The office reports «Смена … запланирована.» (Shift … planned.), and the shift appears in the list with the status «Запланирована» (Planned). Until the form is saved, the panel's footer shows «Есть несохранённые изменения» (There are unsaved changes).


Expected result: A row with the status «Запланирована» (Planned) is in the list.

7. Validation and duplicate printing

In the Validation mode the station checks codes without packing them into boxes. The form has no capacity or pallets, and the «Шаблон этикетки короба» (Box label template) field reads «В режиме проверки этикетки коробов не печатаются» (Box labels are not printed in the validation mode).

Step 1. Turn duplicate printing on

If the code on the product cannot be read further down the supply chain — for example, the packaging covers it — tick «Печатать дубликат Data Matrix» (Print a Data Matrix duplicate). The «Печать дубликата» (Duplicate printing) section appears: choose «Шаблон этикетки продукции» (Product label template; the list shows sizes) and decide whether «Обязательная проверка этикетки» (Mandatory label check) is needed — then the operator must scan the new label before the next unit. Without it the next unit can be scanned as soon as the label is sent to the printer.

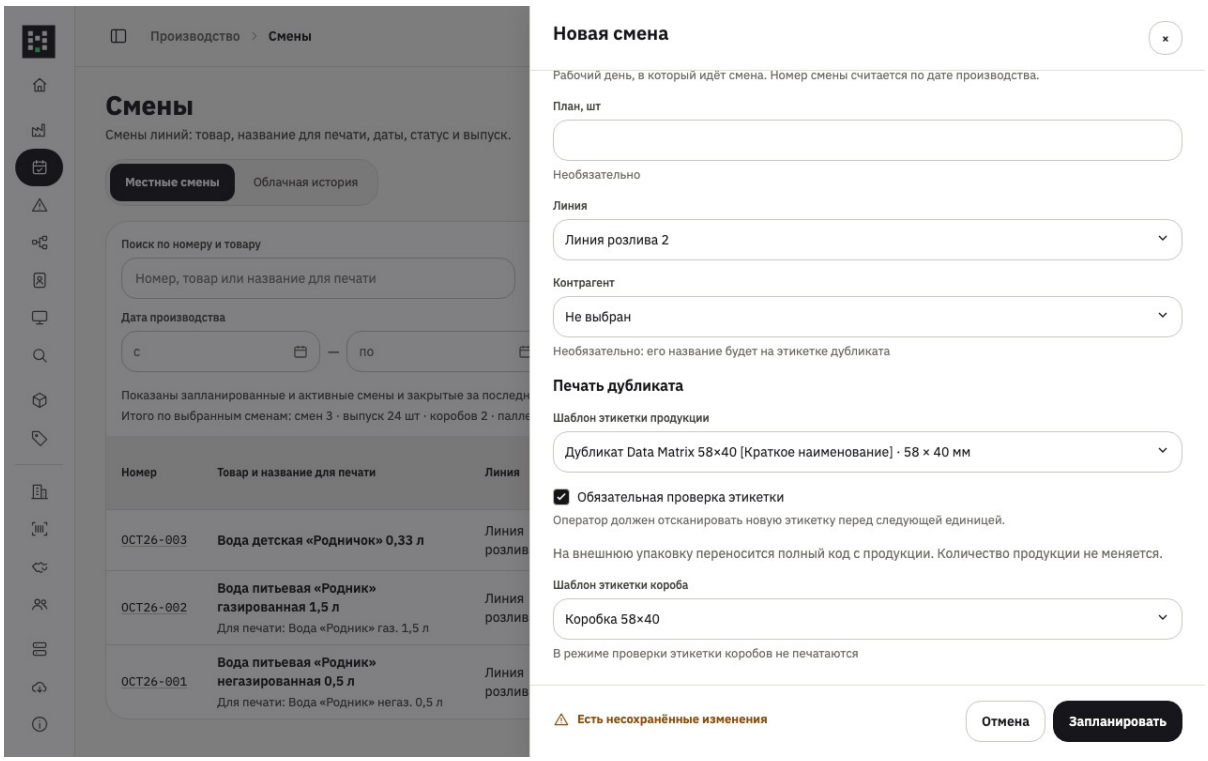

Validation with duplicate printing


Expected result: A template is chosen and the label check is set.

Note: A duplicate does not change the accounting: the full code from the product is carried over to the outer packaging, and the quantity of products does not change. If no suitable template exists, the office says so — add or enable a template in the «Шаблоны» (Templates) section.

8. Changing and deleting

Step 1. Open a planned shift


Click the eye in the shift's row. The «Смена …» (Shift …) panel shows the status, the shift date and the job's fields; at the top are «Изменить» (Edit) and «Бланк смены» (Shift sheet). «Бланк смены» prints the job for the line; if the product has a photo, it is printed on the sheet.

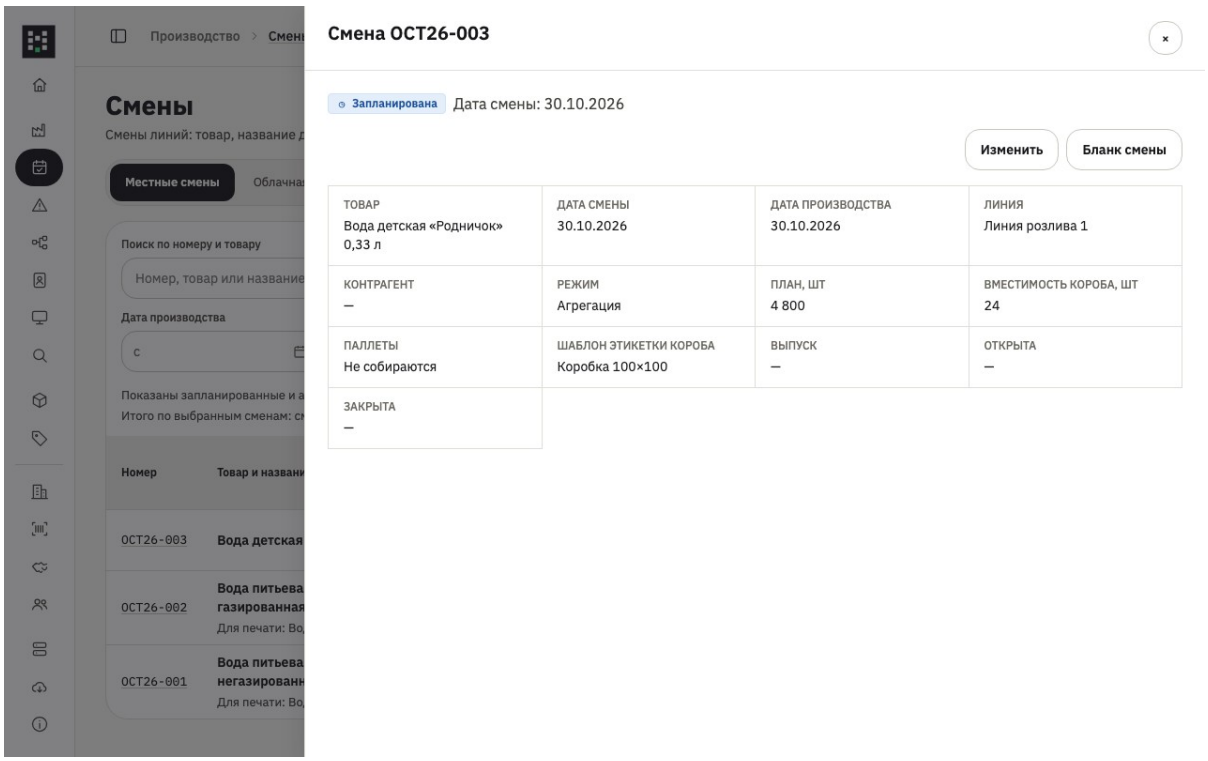

Card of a planned shift

Step 2. Change a planned shift

«Изменить» (Edit) turns the card into a form. The product does not change — the office writes «Товар: … Товар смены не меняется.» (Product: … The shift's product does not change.) You can change the mode, dates, lot number, plan, line, counterparty, templates and pallet settings. Click «Сохранить» (Save).

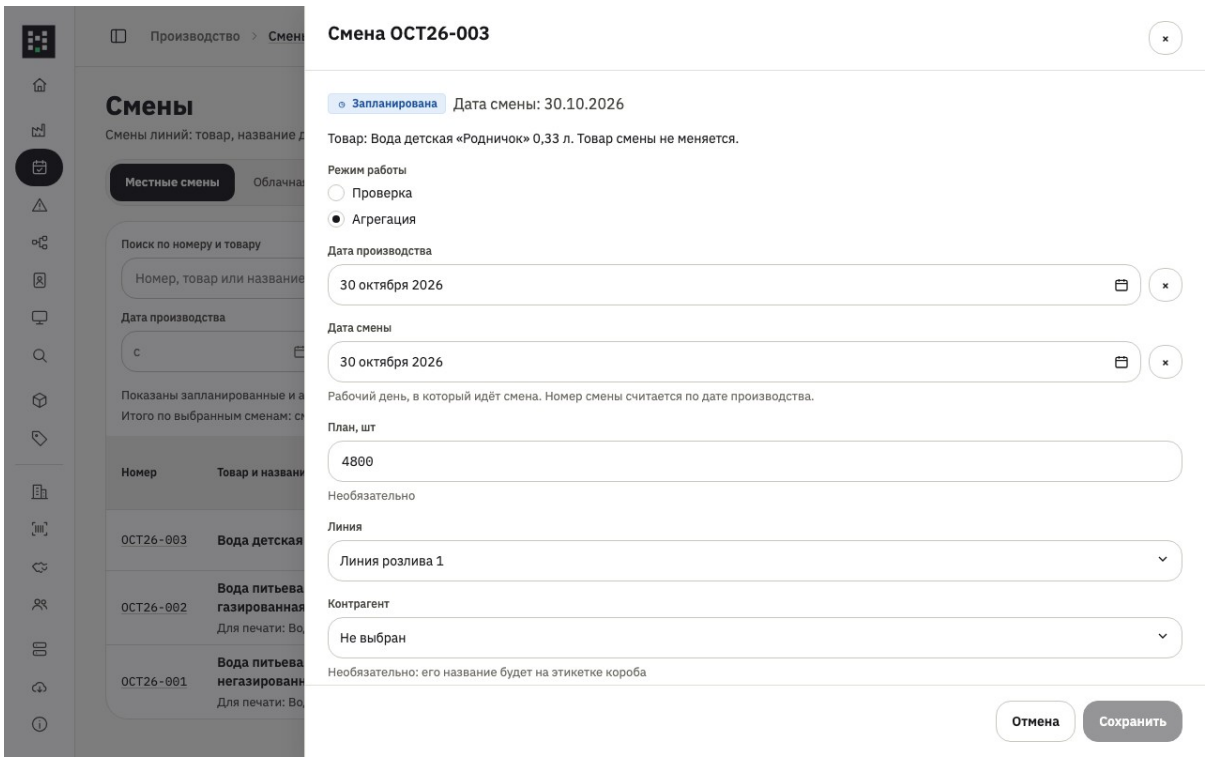


Changing a planned shift

Expected result: The office reports «Изменения сохранены.» (Changes saved.)

Step 3. Only the plan of an active shift changes


«...» menu in an active shift's row → «Изменить план» (Change the plan). The «План смены ...» (Plan of shift ...) window explains that the shift is already running at the station, so only its plan changes, and that the plan is not printed on labels. An empty field means no plan.

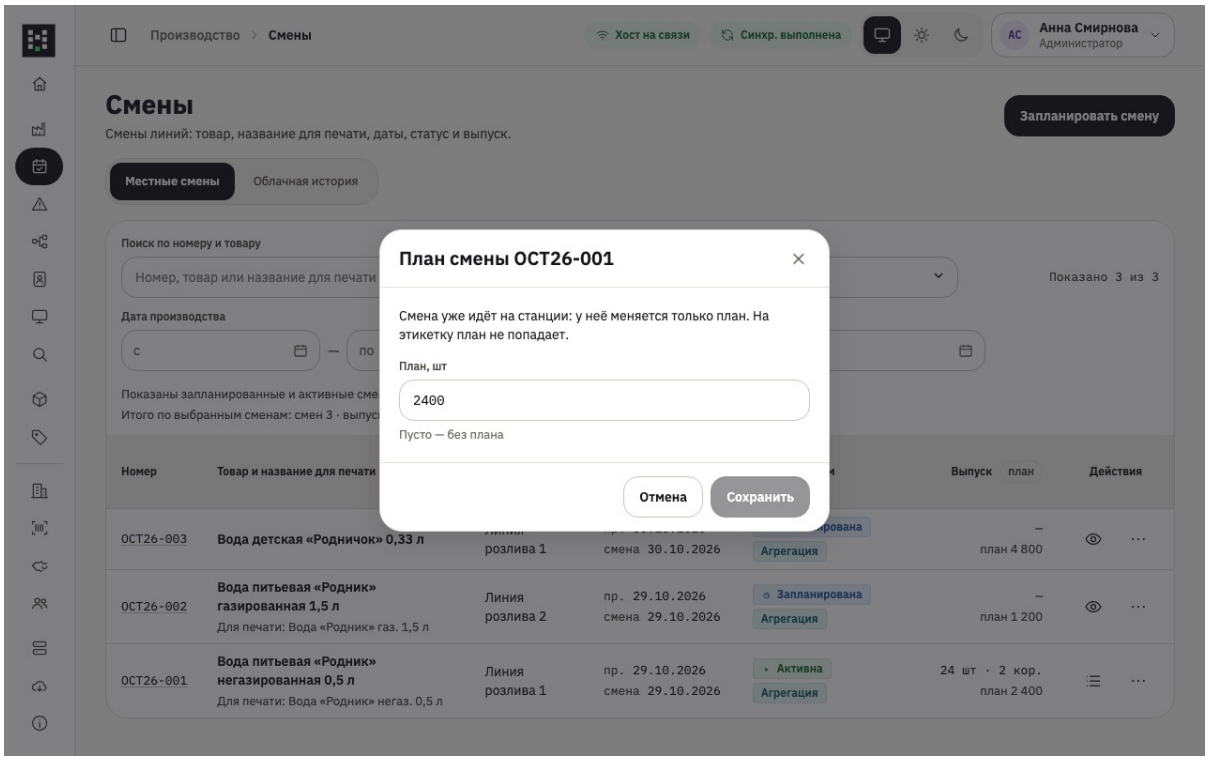

Plan of an active shift

Step 4. Delete a shift only before it is opened

«...» menu in a planned shift's row → «Удалить» (Delete). The office asks «Удалить смену ...?» (Delete shift ...?) and warns that the shift will be deleted permanently and its number will not be issued again. Active and closed shifts have no such action.

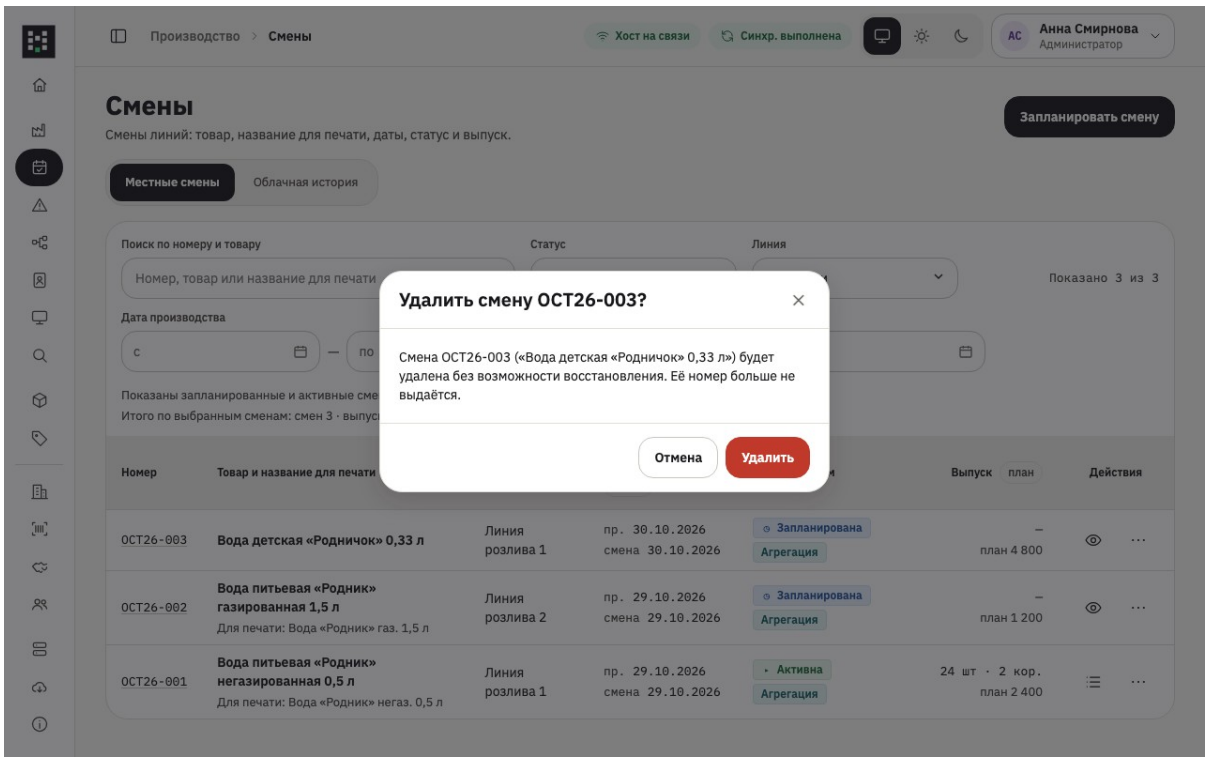

Confirming the deletion of a shift

A planned shift in the list may be marked «Не откроется: …» (Will not open: …) — for example, «Не откроется: товар — черновик» (Will not open: the product is a draft) or «Не откроется: шаблон выключен или не подходит товару» (Will not open: the template is disabled or does not fit the product). The station will not open such a shift: fix the product or choose another template.

Important: The office and the stations work at the same time. If the shift was opened at a station while the form was open, the office does not save the changes and reports that the shift is already open at the station, so only its plan can be changed now, and that the list was refreshed.

9. Frequently asked questions

The product is not in the list — Only active products are listed. Complete a draft until it is «Активен» (Active), restore an archived product (MKR-INS-10).

I do not see the capacity and pallets — They exist only in the Aggregation mode. The pallet fields appear after ticking «С паллетами» (With pallets).

The «С паллетами» checkbox is unavailable — The product has no boxes-per-pallet value. Set it in the product card and open the form again.

The station does not see the shift — Check the shift's line and the station's line in the «Устройства» (Devices) section, as well as the status: a station opens planned and active shifts of its own line.

A line cannot be deleted — Lines are archived, not deleted: «…» menu → «В архив» (Archive). Move stations already working on the line in the «Устройства» (Devices) section.

There is no «Устройства» section — It is available to the office administrator only. The technologist sees shifts, lines and products.

If your problem is not described above, contact Markiro support: hello@v-b.tech.