Administration: installation and first start

This is an informational translation. The matching Russian revision is authoritative. Guide for whoever installs Markiro Autonom on a site: computer roles, the network and the host's permanent address, installing the host service, the first-start wizard, signing in to the office, the trial period and the license file, pairing stations and office PCs, updating from a file, and what to do when something goes wrong.

Document code	MKR-INS-12
Revision	2026.11/01
Effective from	13 November 2026
Revision verification	https://markiro.app/d/MKR-INS-12/2026.11/01/13.11.2026
Language	EN
Operator	Богатырев Владислав Сергеевич
Contacts	https://markiro.app · hello@v-b.tech · +7 934 355-14-90

1. Purpose

This instruction covers how a system administrator or the site owner installs Markiro Autonom: chooses the computer for the main database, prepares the network, installs the program on each computer, runs the first-start wizard, loads the license and pairs stations and office PCs. Station work is covered in MKR-INS-01–04, office work in MKR-INS-08–10, backups in MKR-INS-13.

Note: The Markiro Autonom interface is in Russian only. Screen labels are quoted in Russian, with an English translation in brackets. The screenshots use demo data. The Windows installer, service and firewall steps have no screenshots: they are done with Windows tools and described in text.

Windows does not distinguish letter case in service names and paths, so the names in the commands below can be typed in lower case.

2. What you need

- Computers with 64-bit Windows 10 or 11 and a Windows administrator account on each.
- One local network for all computers on the site. The program does not need the internet.
- The Markiro Autonom installer of one version for all computers on the site.
- The organization's INN (taxpayer number) — the license is issued to it — and the organization's GLN: the SSCC number prefix comes from the GLN.
- A way to give the host computer a permanent IP address in the router.

3. Computer roles

A site has exactly one host — the computer with the main database. Usually it is the PC of one of the stations. The other computers connect to it over the local network. The role is chosen during installation: the installer asks two questions — whether the host will run on this computer and, if not, whether it is an office PC or a station.

Role	What is installed	What opens on start
Host and station	The host service with the main database, a firewall rule, the app with autostart. The app window is never locked.	The first-start wizard, then “Вход в офис” (Office sign-in). The “В цех” (To the floor) button opens this PC's station.
Station only	The app with autostart. Once set up, the station window fills the screen and cannot be minimized.	Pairing with the host and choosing the line, then operator sign-in.
Office only	The app without autostart; the window is never locked.	“Вход в офис” (Office sign-in). Such a PC has no floor and no operator sign-in.

Important: Do not install a second host on a site: two hosts hold two sets of data, and the site's stations will not agree. To change a computer's role, uninstall the program and install it again: data is kept on uninstall.

4. Site network

1. A permanent address for the host PC is mandatory. Best is an address reservation in the router by the network adapter's MAC address; otherwise a static address outside the DHCP pool. Stations, handhelds and office PCs store the host's address: if it changes, they lose the connection.
2. The network profile on the host PC is private (or a domain network). Windows often treats a new Wi-Fi network as public, and the host's port is closed on such a network. At the end of the host installation the installer checks the profiles and offers to switch a public network to private.
3. The host port is TCP 45710. The installer itself creates the inbound firewall rule: private and domain networks, local subnet addresses only. No ports need to be opened on stations and office PCs.
4. An Ethernet cable to the station PC is better: a Wi-Fi drop then does not stop the line.
5. Check from another computer, in PowerShell: Test-NetConnection <host PC address> -Port 45710 must answer TcpTestSucceeded : True.

5. Installing the program

Order: the host PC first, then the office PC, then the other stations. The steps of this section are done in Windows and have no screenshots.

Step 1. 5.1. Host PC

Run the installer as administrator. When asked whether the host will run on this computer, answer “Yes”. The installer copies the files, registers and starts the host service (waiting up to 30 seconds for it), opens port 45710 and checks the network profile. If the computer's address was obtained automatically, the installer reminds you to reserve it — installation continues anyway.

Expected result: The command sc query markirohost in an administrator console shows the RUNNING state.

The host service starts with Windows, without a user signing in, runs under a built-in account without administrator rights, and restarts by itself after a failure. The main database, logs and backups are in %ProgramData%\markiro\Host; ordinary users of the computer have no access to that folder.

Step 2. 5.2. Office PC

Run the installer. Answer “No” to the first question and “Yes” to the second — that this is an office PC. No service, firewall rule or autostart is created on such a PC.

Step 3. 5.3. Station

Run the installer and answer “No” to both questions: the computer becomes a station. The app will start when someone signs in to Windows.


Note: If the installer warned that the host service was installed but did not stay running, wait a minute and check its state. Most often this is an unfinished restore from a backup: see MKR-INS-13.

6. The host's first start

Open the app on the host PC from its shortcut. On the first start the “Первый запуск” (First start) wizard opens, six steps long. The “Восстановить из Яндекс Диска” (Restore from Yandex Disk) button above the wizard is only for restoring a site from a cloud backup (MKR-INS-13); for a new site, go through the wizard.

Step 1. 6.1. Administrator


Set the “Логин” (Login; 3–64 characters: Latin letters, digits, dot, hyphen, underscore), “Имя и фамилия” (Full name) and a “Пароль” (Password) of 8 to 128 characters, then “Повторите пароль” (Repeat password). The administrator manages the organization, SSCC numbers, lines, operators and office access. Press “Далее” (Next).

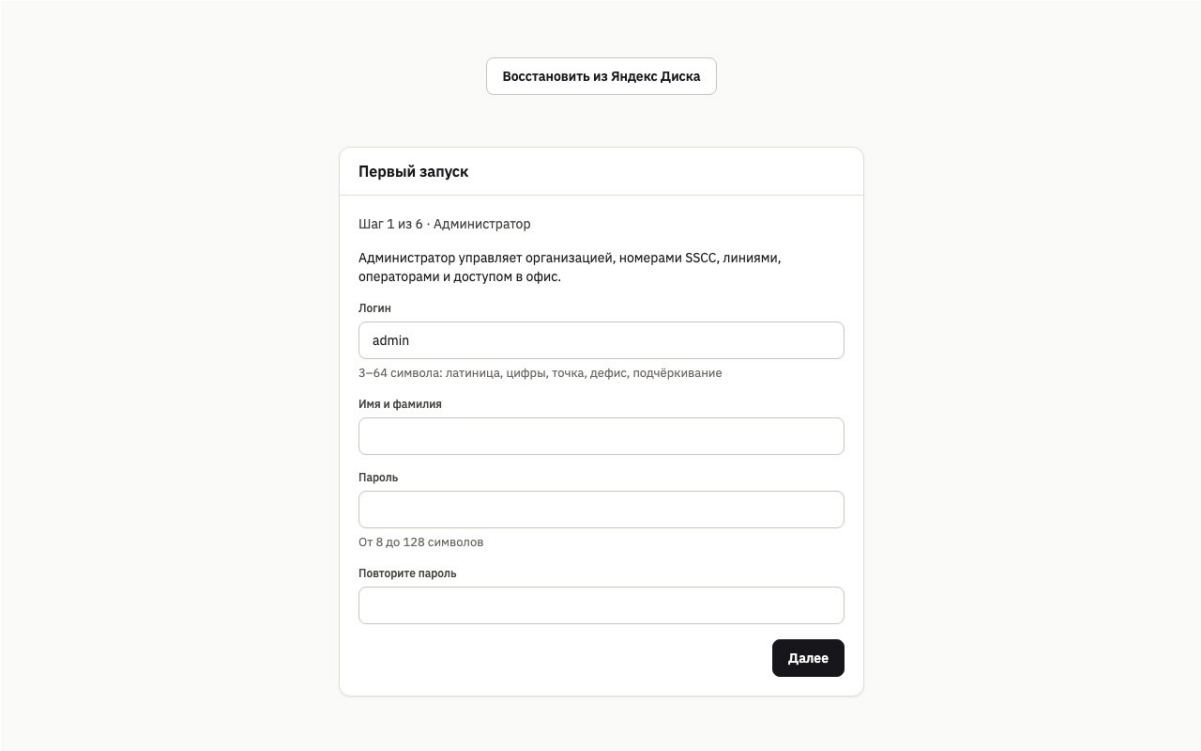

Step 1 of 6: administrator

Step 2. 6.2. Organization


Enter “Название организации” (Organization name), “ИНН” (INN; 10 or 12 digits — the license is issued to this INN) and “GLN организации” (Organization GLN; 13 digits, the first 9 become the SSCC prefix). “Префиксы GS1” (GS1 prefixes) may stay empty. Check the “Часовой пояс” (Time zone). This data is printed on labels and forms.

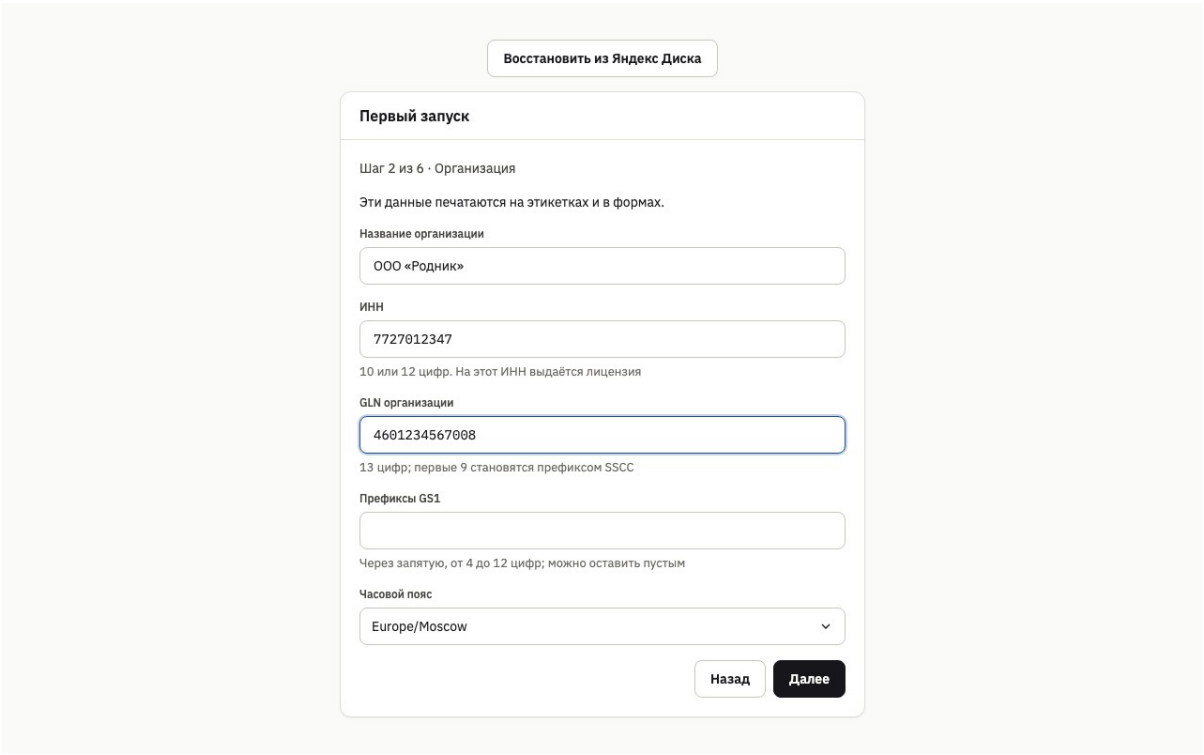

Step 2 of 6: organization

Step 3. 6.3. SSCC numbers


If SSCCs were already printed by another program, continue its numbering: enter “Следующий номер короба” (Next box number) and “Следующий номер паллеты” (Next pallet number). Otherwise leave them as they are.

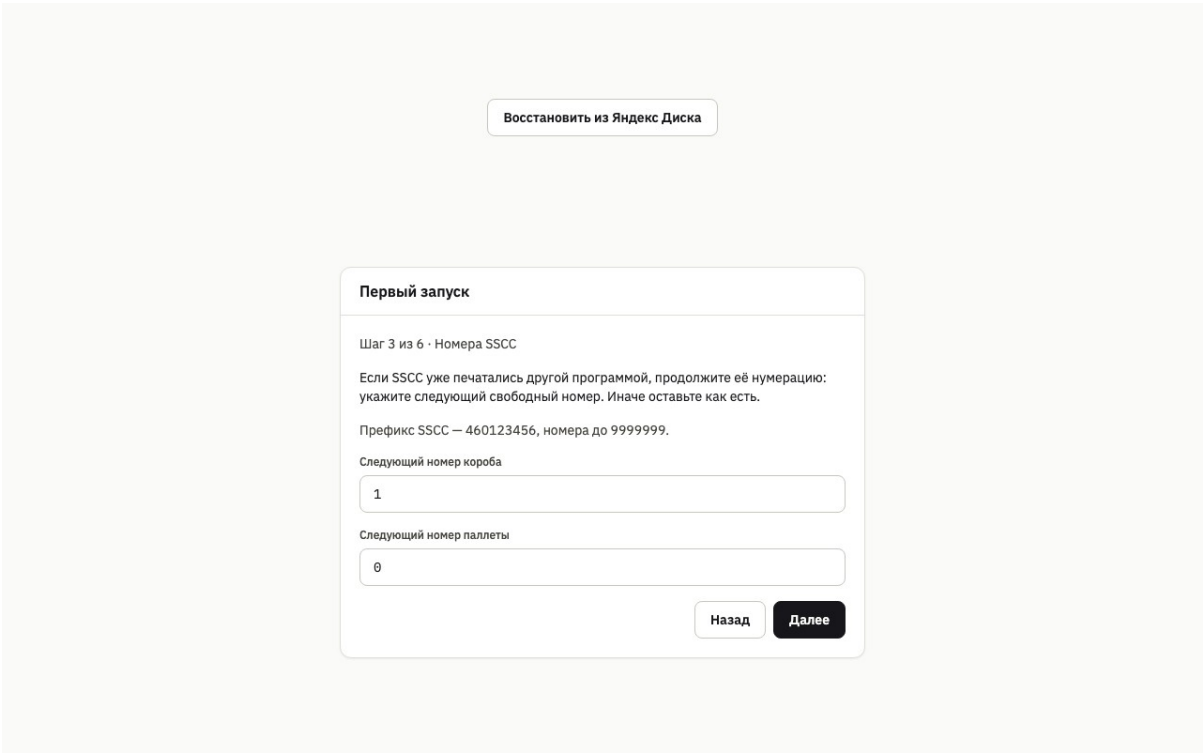

Step 3 of 6: SSCC numbers

Step 4. 6.4. Lines


List the lines the stations will work on; “Добавить линию” (Add line) adds one more. At least one line is needed, and no more than 20. The list can be changed later in the office.

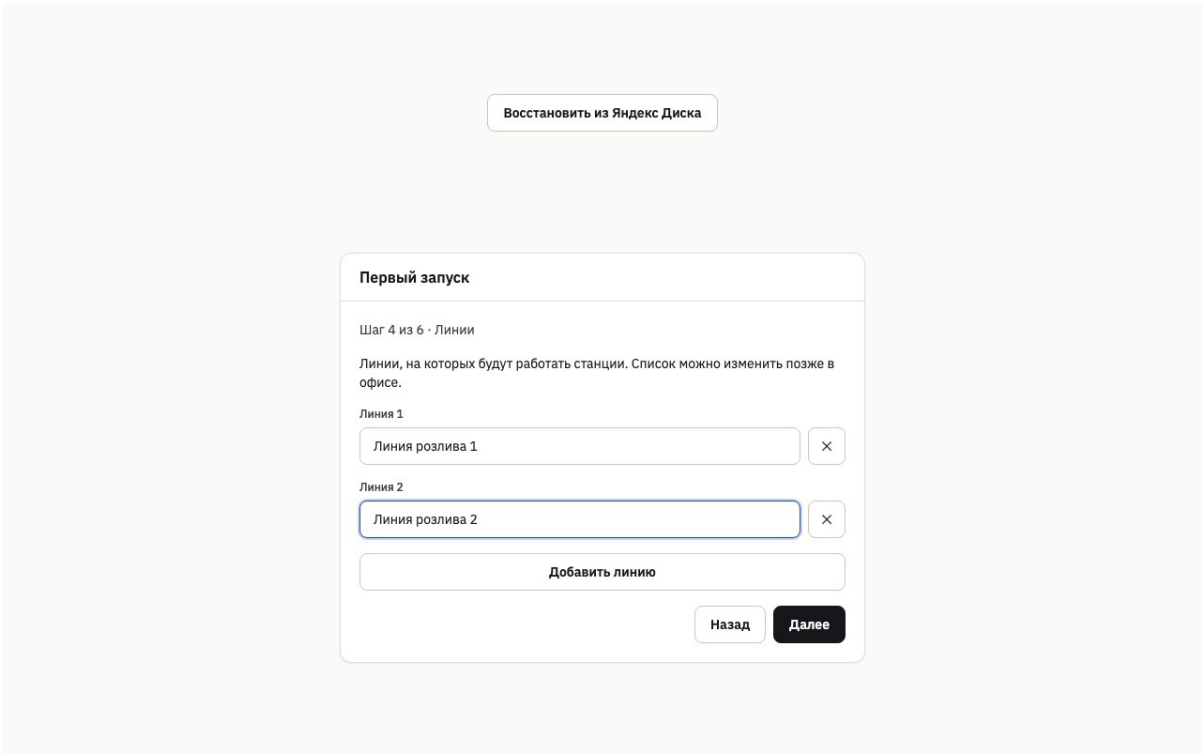

Step 4 of 6: lines

Step 5. 6.5. Host address


The wizard reminds you that handhelds, stations and office PCs find this computer by its IP address. If the address is already reserved in the router or set statically, tick “Я зарезервировал адрес (или задал статический)” (I reserved the address, or set a static one). This does not block installation: until it is ticked, the office reminds you with the “Адрес хоста может измениться” (The host address may change) notice and its “Я зарезервировал адрес” (I reserved the address) button.

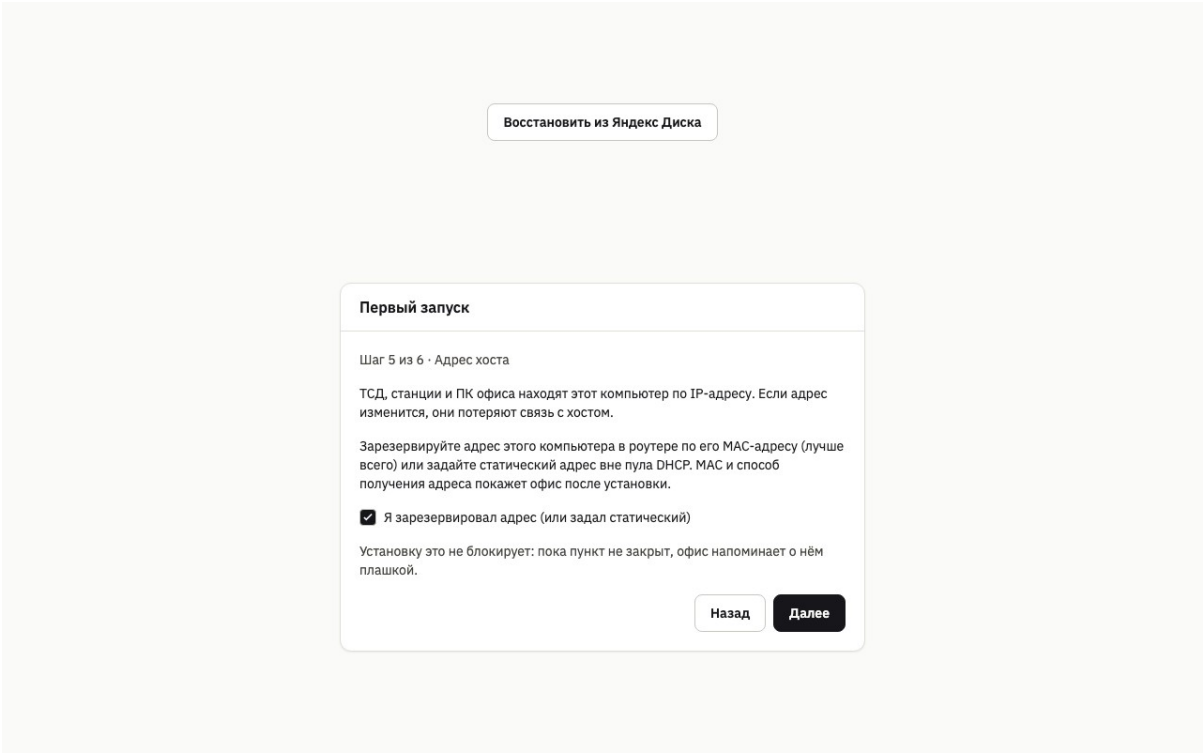

Step 5 of 6: host address

Step 6. 6.6. Review

Check the data. The wizard will create standard label templates for boxes, pallets and product duplicates. “Установить демо-данные” (Install demo data) adds a demo product, marking codes and a shift so you can try the program without a scanner or printer; on a working site untick it — demo data is later removed with the “Удалить демо-данные” (Delete demo data) button in the office. Press “Создать” (Create).

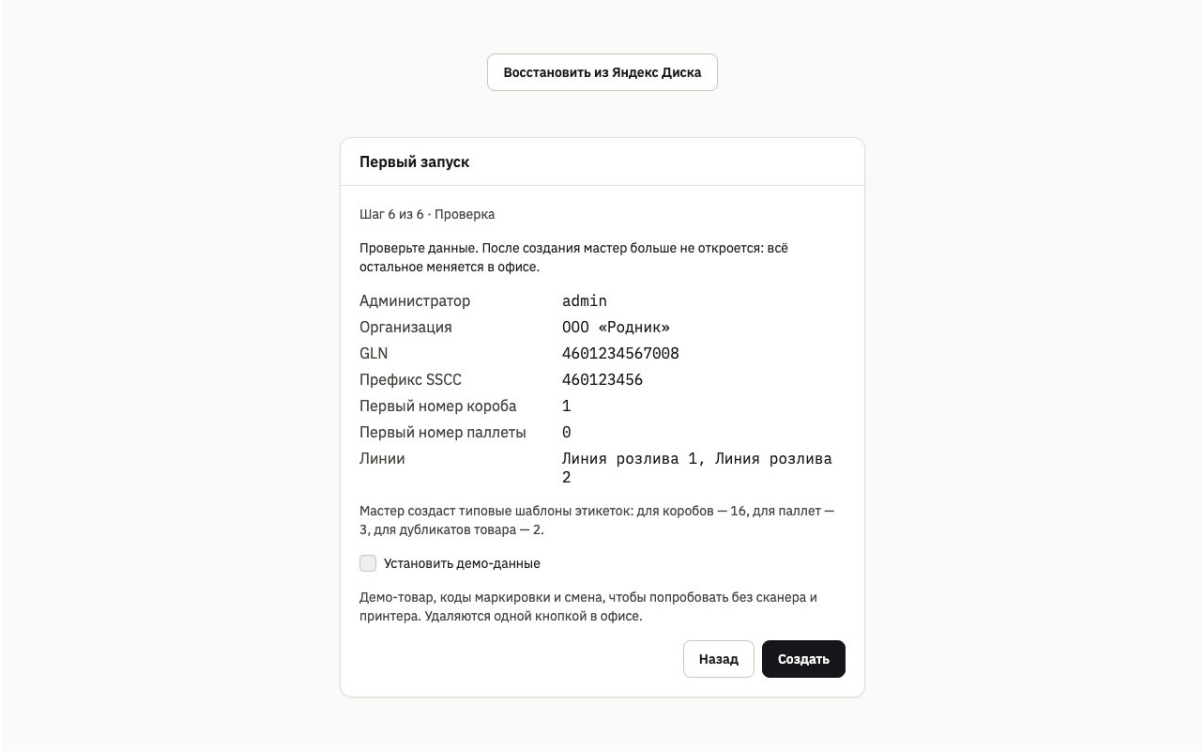


Step 6 of 6: review

Expected result: “Вход в офис” (Office sign-in) opens. After creation the wizard never opens again: everything else is changed in the office.

7. Signing in to the office

Step 1. Sign in as administrator


On the “Вход в офис” (Office sign-in) screen enter the administrator's “Логин” (Login) and “Пароль” (Password) from the wizard and press “Войти” (Sign in). “В цех” (To the floor) opens this PC's station. The “Недавние на этом ПК” (Recent on this PC) list is kept on this computer only and holds no passwords or roles.

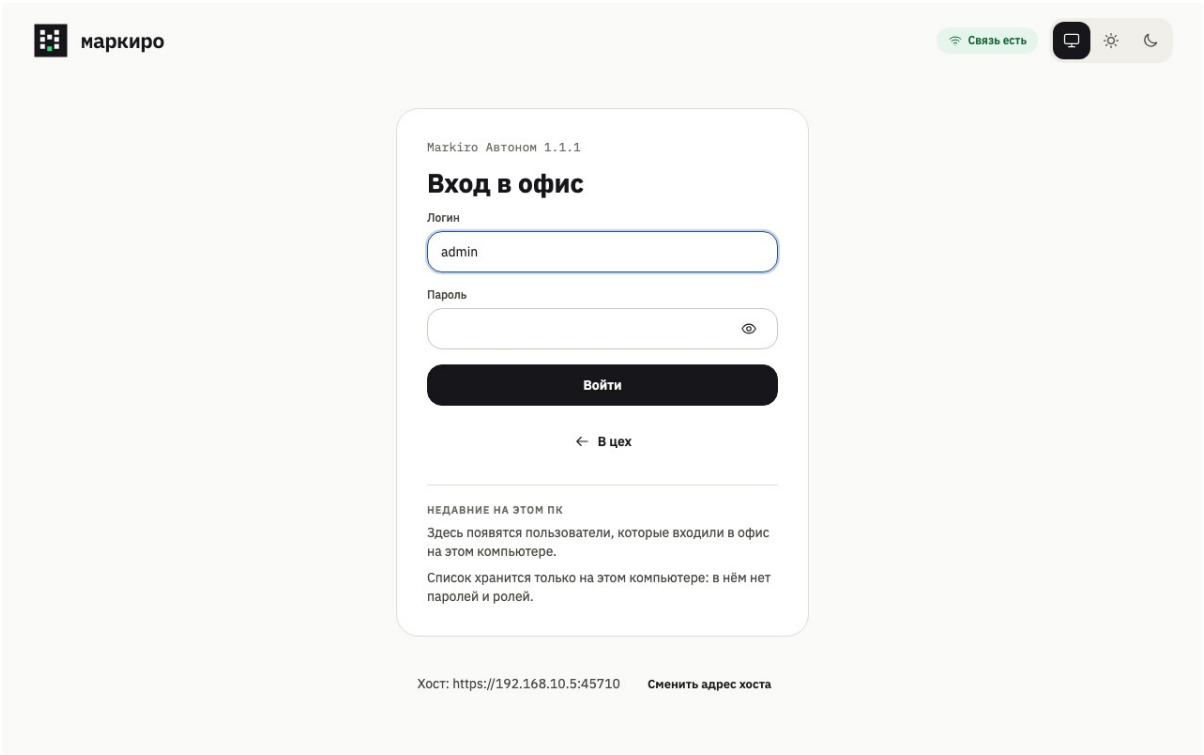

Office sign-in on the host PC

Step 2. Check the overview

The office opens on “Обзор” (Overview): the host connection, output, shifts, devices, backups and the license. Until the license is loaded, a trial-period notice is shown at the top.

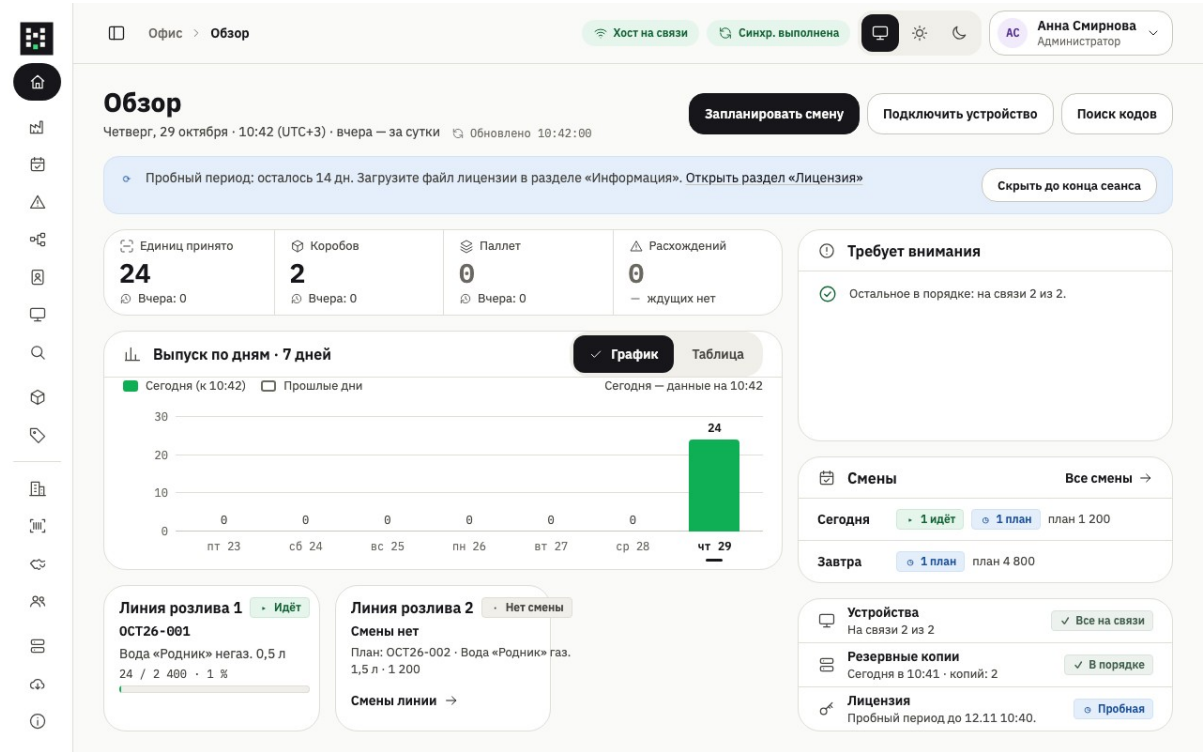

Office overview during the trial


The host PC's station connects to the host by itself. Assign it a line under “Устройства” (Devices) with “Изменить” (Edit), or choose the line on the station itself (MKR-INS-04).

8. Trial period and license

The trial period lasts 14 days after completing the first-start wizard. When it ends without a license file, new shifts stop opening; shifts already started can be continued and closed, and data and exports stay available. The license is issued to the host and the organization's INN and is checked without the internet.

Step 1. 8.1. Open the “Лицензия” (License) section

In the “Сервис” (Service) menu open “Информация” (Information), section “Лицензия” (License): the state, “Рабочие места” (Seats), “Возможности” (Features) and “Организация и привязка” (Organization and binding) — the INN and the “Идентификатор хоста” (Host ID).

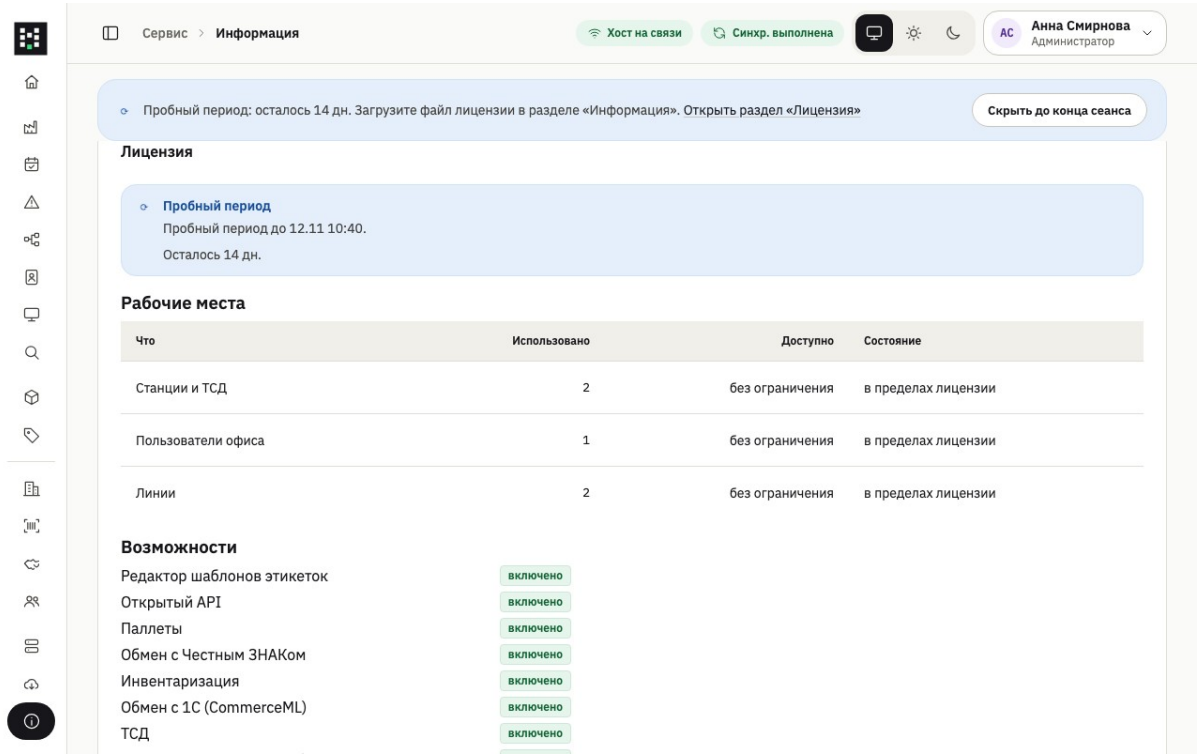


License during the trial

Step 2. 8.2. Send the activation request

Press “Сохранить запрос на активацию” (Save activation request): the program saves the request file to this PC's Documents folder. Send the file to Markiro. It contains no secrets. In return you receive a license file with the .mklic extension.

Step 3. 8.3. Load the license file


Press “Загрузить файл лицензии (.mklic)” (Load license file) and choose the file. The office shows “Было → станет” (Before → after): the license type, validity, grace period and seats. Press “Загрузить” (Load).

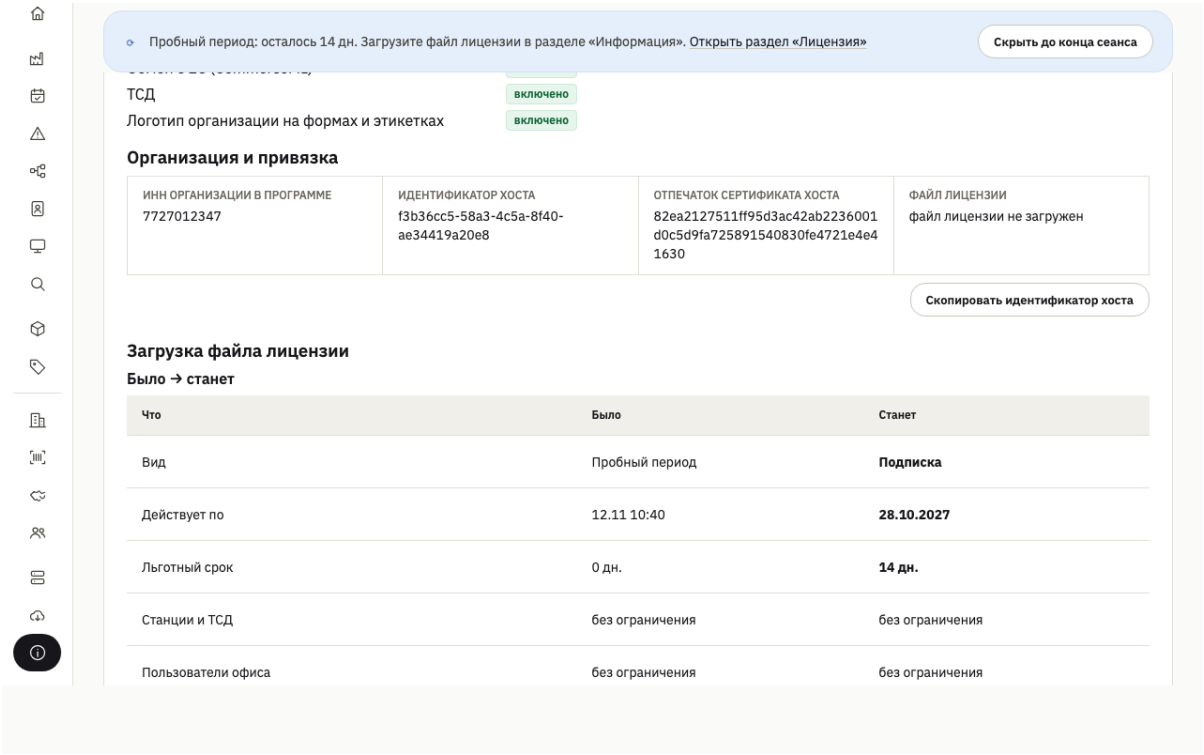

License file chosen: before → after

Step 4. 8.4. Check the state

The “Лицензия” (License) section shows “Действует” (Active) and the end date; the trial notice disappears. Keep the license file with the contract documents.

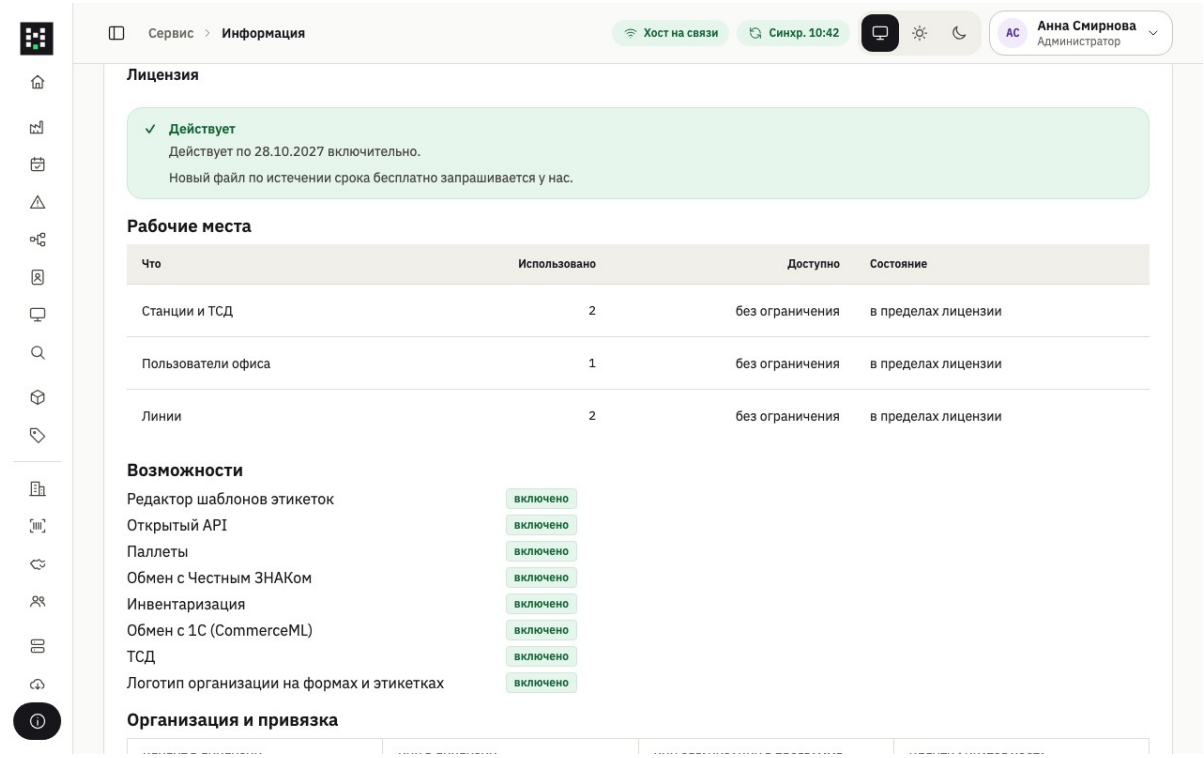

License loaded and active


Important: Only an administrator can load the license file, save the activation request and turn on the emergency extension. If the organization's INN is changed in “Профиль организации” (Organization profile), new shifts stop opening until the INN is restored or a license file for the new INN is loaded. If the

license has expired and the new file has not arrived yet, the “Открыть новые смены ещё 3 дня” (Open new shifts for 3 more days) button allows opening shifts for three more days — once per license.

9. Pairing stations and office PCs

Step 1. Create a pairing code

In the office open “Устройства” (Devices) and press “Подключить устройство” (Pair a device). The “Подключение устройства” (Device pairing) window shows a code for the scanner, the 10-character “Код подключения” (Pairing code), the “Отпечаток хоста” (Host fingerprint) and the “Адрес хоста” (Host address). The code is valid for a limited time, and “Новый код” (New code) creates another one; after five wrong attempts from any device the code stops working. The pairing card can be printed on A4 or A5 with “Печать” (Print) and “Скачать PDF” (Download PDF).

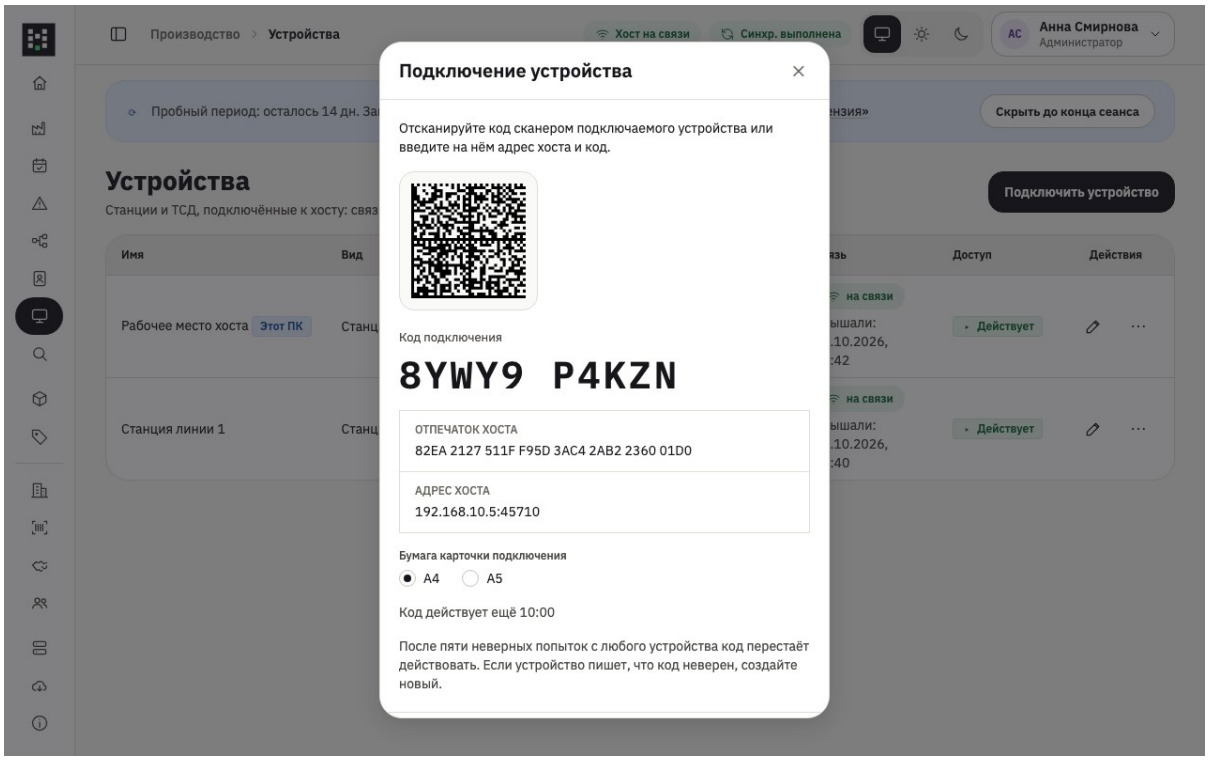

Device pairing: code, fingerprint and host address

Step 2. Pair the device

On a station or office PC the app shows “Служба хоста не отвечает” (The host service is not responding) — there is no host on that computer. Press “Подключиться к хосту в сети” (Connect to a host on the network), scan the code or type the host address and code by hand, and compare the host fingerprint with the office screen. The steps are described in detail in MKR-INS-04.

Expected result: The device appears in the “Устройства” (Devices) list; a station asks for its line, an office PC opens “Вход в офис” (Office sign-in).

Stations and handhelds take license seats; office PCs do not. When all seats are taken, pairing is refused. A common cause is an old record of the same station, reinstalled with a new database: press “Отозвать” (Revoke) on it and pair the station again. The license never disconnects stations that are working.


If the host's address did change after all, on each station and office PC press “Сменить адрес хоста” (Change host address) on the sign-in screen and enter the new address. The app accepts it only if the same host answers there; the pairing and unsent data are kept.

10. Updating

Update computers between shifts. Start with the host PC, then update the stations and office PCs. An update package contains an installer (.exe) and a signed manifest (.update.jws). Administrators can download the package in the app or obtain both files separately.

Step 1. 10.1. Download the package online


On the host PC, sign in to the office as administrator. Open “Информация” (Information) → “Обновление” (Update) → “Обновление через интернет” (Online update). Keep “Стабильные выпуски” (Stable releases) selected and click “Проверить обновления” (Check for updates). If the required version is available, click “Скачать обновление” (Download update). The app verifies the signature and checksum and transfers the package to the host. If the transfer fails, click “Повторить передачу на хост” (Retry transfer to host). Once verified, click “Установить обновление” (Install update) and confirm. Windows asks for administrator rights. The host is backed up before the update.

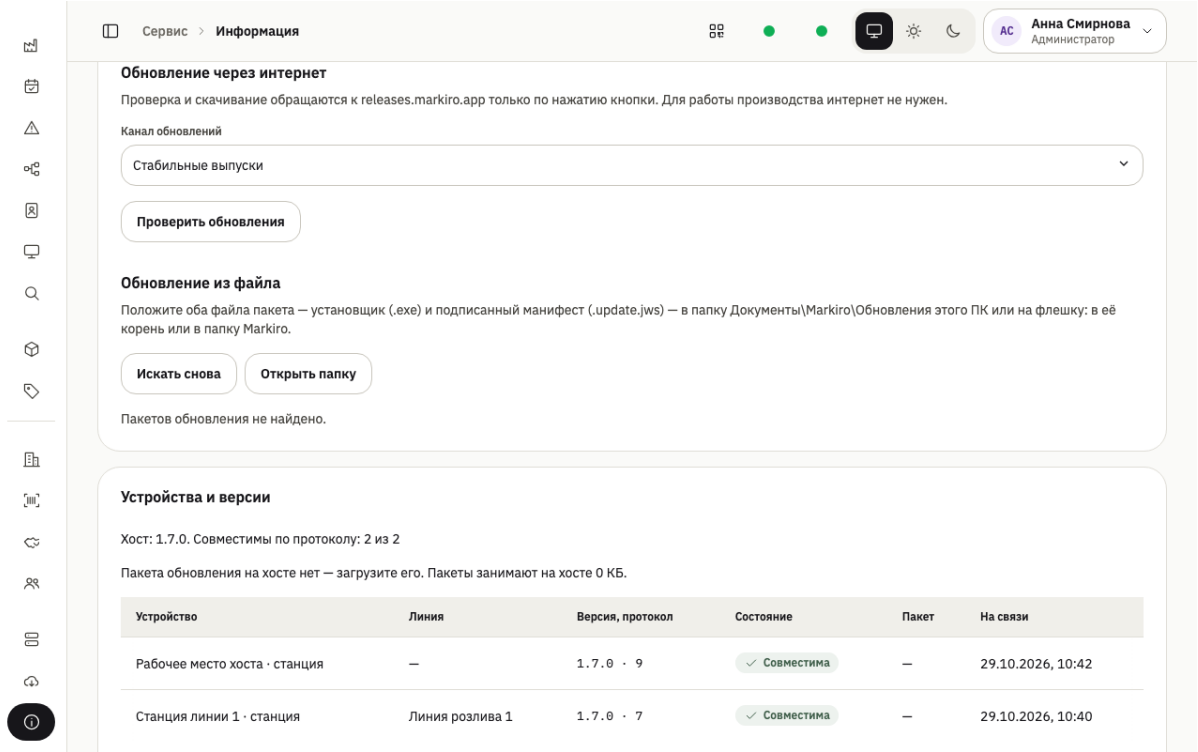

Checking for stable updates in the Autonom office

Step 2. 10.2. Install from files when internet access is unavailable

Sign in to the office as administrator and open “Информация” (Information), section “Обновление” (Update). “Открыть папку” (Open folder) creates and opens the packages folder in this PC's Documents; put both files there, or insert a USB stick with them, and press “Искать снова” (Search again). On the package found press “Проверить” (Check) — the program checks the signature and the installer — then “Установить обновление” (Install update). Windows asks for administrator rights; on the host PC a backup is made before installation.

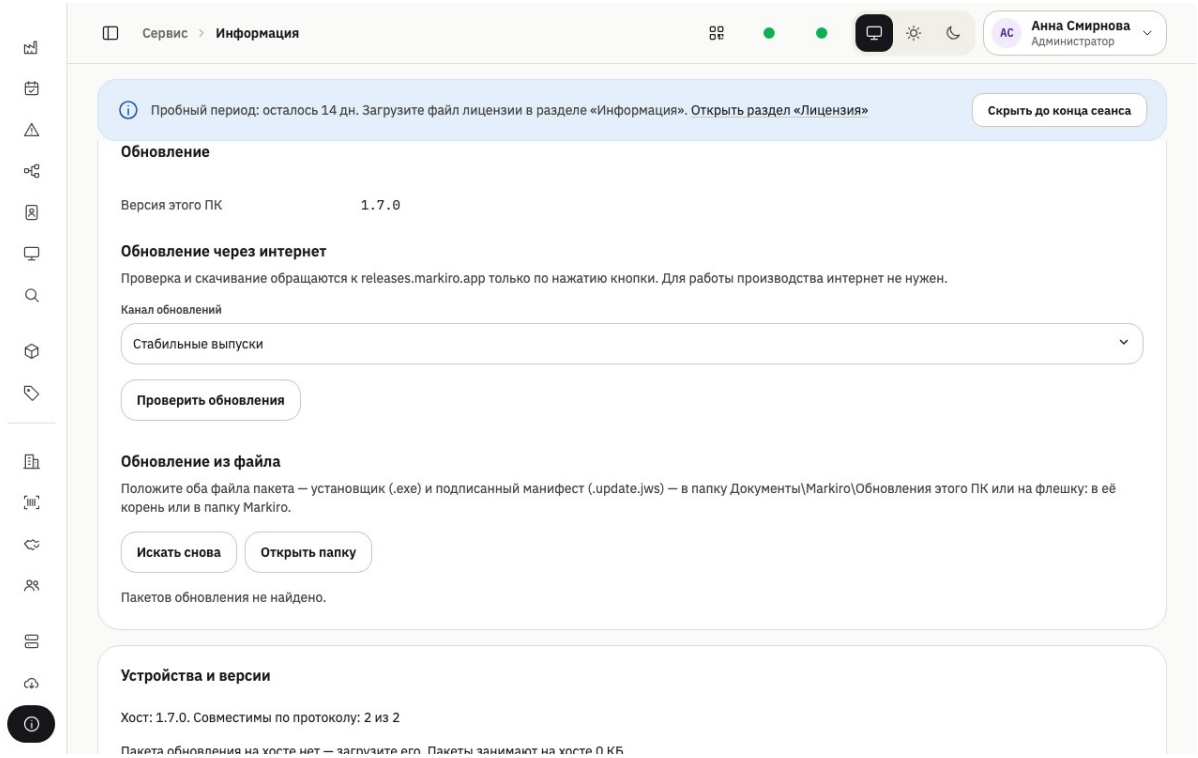

Updating from a file and device versions

Step 3. 10.3. Update the other computers from the host

For a package obtained as files, click “Загрузить пакет на хост” (Upload package to host). After the host update, on each station and office PC an administrator signs in to the office, opens “Информация” (Information) → “Обновление” (Update) and presses “Обновить с хоста” (Update from host), “Скачать с хоста” (Download from host) and “Установить обновление” (Install update). The “Устройства и версии” (Devices and versions) table shows which devices are already updated.

Note: The program does not install a version older than the installed one, and says so when the site's host must be updated first. If launching the installer from the program failed, “Установить вручную” (Install manually) shows the installer's path and its SHA-256 for a manual installation.

11. When something goes wrong

Stations and office PCs cannot find the host — Check that the host PC is on and its address has not changed, that its network is private, and run Test-NetConnection on port 45710 (section 4).

The host service is not running — In an administrator console: sc query markirohost shows the service state; logs are in %ProgramData%\markiro\Host\logs. The service can be registered again with markiro-host install from the installation folder.

The station window is locked and you need to leave it — Sign in to the office as administrator: the window becomes ordinary. If the host is unreachable, start markiro-standalone.exe from the installation folder with the --windowed switch.

An office PC was paired with the wrong role — Revoke the device under “Устройства” (Devices), uninstall the program, install it again with the office PC role and pair it again.

You need help from support — In “Информация” (Information) → “Сведения для поддержки” (Support details) press “Сформировать и скопировать” (Build and copy) and paste the details into an email. They contain no passwords, PINs, badges or keys.

If the problem is not described above, contact Markiro support: hello@v-b.tech.