Introduction to Chapter 9
Review Complex Numbers
Frequency Response of First Order Systems

Frequency Response - Lecture 1

ME3050 - Dynamics Modeling and Controls

April 19, 2020

Frequency Response of First Order Systems

Lecture 1- Frequency Response of First Order Systems

- Introduction to Chapter 9
- Review Complex Numbers
- Frequency Response of First Order Systems
- Graph of Frequency Response

Harmonic Input Function

The term **frequency response** is used to describe a system's response to a periodic input. Frequency response analysis focuses on a system's response to *harmonic* input such as sines and cosines. The input (forcing) function is written below.

$$f(t) = Asin(\omega t)$$
Amplitude of the Input, A

Frequency of Input,
$$\omega = \left(\frac{rad}{s}\right)$$

Why Study Frequency Response?

Why do we care about the way a system responds to harmonic excitation? Why is **frequency analysis** important?

•

•

What causes harmonic (or sinusoidal) excitation in the real world?

•

•


0

Frequency Response and the Transfer Function

A linear, time-invariant (LTI) system has a **transfer function** T(s) that describes the **input-output** relationship of the system. Under sinusoidal excitation (input) with frequency ω if the system is stable the transient affects in the response (output) will eventually disappear leaving the **steady state sinusoidal response** of the same frequency as the input but with a phase shift w.r.t. the input.

The Complex Plane

In an underdamped system the roots of the characteristic polynomial are complex. Before we proceed we need to review some rules of arithmetic and complex numbers.

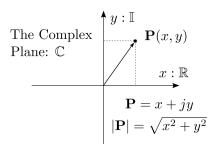

Cartesian Representation:

$$\mathbf{P} = x + jy$$

Polar Representation:

$$\mathbf{P} = |\mathbf{P}| \angle \theta$$

Exponential Representation:

$$\mathbf{P} = |\mathbf{P}|e^{j\theta} = |\mathbf{P}|\left(\cos\theta + j\sin\theta\right)$$

Complex Number Algebra

Consider two points P_1 and P_2 on the complex plane.

$$\mathbf{P_1} = x_1 + jy_1 \text{ and } \mathbf{P_2} = x_2 + jy_2$$

Addition:
$$P_1 + P_2 = (x_1 + x_2) + j(y_1 + y_2)$$

Multiplication:
$$P_1P_2 = |P_1P_2| \angle (\theta_1 + \theta_2)$$

Division:
$$\frac{P_1}{P_2} = (x_1 + x_2) + j(y_1 + y_2)$$

First Order Mass Damper



Consider our 1^{st} order mass damper system.

$$m\dot{v} + cv = f(t)$$
 with a **time constant** $\tau = \frac{m}{c}$

The system is commonly re-written as shown below.

$$m\dot{v} + cv = f(t) \rightarrow \tau \dot{y} + y = f(t)$$

First Order Transfer Function

$$\tau \dot{y} + y = f(t)$$

Take the Laplace transform of the ODE.

$$\mathcal{L}\{\tau\dot{y}+y\}=\mathcal{L}\{f(t)\}$$

$$\tau(sY(s) + y_0) + Y(s) = F(s)$$
 The initial conditions are zero.

$$T(s) = \frac{Y(s)}{F(s)} = \frac{1}{\tau s + 1}$$
 First Order Transfer Function

This considers a generalized input function f(t) and zero ICs.

Sinusoidal Input Function

Our model is now excited by a sinusoidal input (forcing) function.

$$\tau \dot{y} + y = f(t) = Asin(\omega t)$$

Take the Laplace transform. Then, solve for Y(s) and expand.

$$\tau s Y(s) + Y(s) = \frac{A\omega}{s^2 + \omega^2}$$

$$Y(s) = \frac{A\omega}{(s^2 + \omega^2)(\tau s + 1)} = \frac{C_1}{\tau s + 1} + \frac{C_2 s}{(s^2 + \omega^2)} + \frac{C_3 \omega}{(s^2 + \omega^2)}$$

Now solve for the coefficients.

$$C_1 = rac{A\omega au^2}{1 + \omega^2 au^2} ~~, ~~ C_2 = rac{-A\omega au}{1 + \omega^2 au^2} ~~, ~~ C_3 = rac{A}{1 + \omega^2 au^2}$$

Substituting and take the inverse Laplace transform.

$$y(t) = rac{A\omega au}{1+\omega^2 au^2}ig(e^{rac{-t}{ au}}-cos\omega t + rac{1}{\omega au}sin\omega tig)$$

Steady State Time Response

$$y(t) = rac{A\omega au}{1+\omega^2 au^2}ig(e^{rac{-t}{ au}}-cos\omega t + rac{1}{\omega au}sin\omega tig)$$

After some amount of time passes, the transient term will disappear leaving just the sinusoidal terms.

$$y(t) = \frac{A}{1+\omega^2 au^2} (\sin \omega t - \omega au \cos \omega t)$$

This is re-written as a single sine term with a phase shift.

Steady State Frequency Response of First Order System

$$y(t) = \frac{A}{\sqrt{1+\omega^2\tau^2}} sin(\omega t + \phi)$$
 , $\phi = -tan^{-1}\omega \tau$

Amplitude Ratio

$$y(t) = \frac{A}{\sqrt{1+\omega^2 au^2}} sin(\omega t + \phi)$$
 , $\phi = -tan^{-1}\omega au$

Notice that the system responds at the same frequency as the input but with a different amplitude and a phase shift. The ratio of the response amplitude to the input amplitude is called the **amplitude ratio**, **M**.

$$M = \frac{\frac{A}{\sqrt{1+\omega^2\tau^2}}}{A} = \frac{1}{\sqrt{1+\omega^2\tau^2}}$$

Fortunately we can find the **amplitude ratio** and **phase shift** directly from the transfer function. Recall the transfer function we derived.

$$T(s)=rac{1}{ au s+1} \quad ext{let } s=j\omega \quad \Longrightarrow \quad T(j\omega)=rac{1}{ au j\omega+1} \ |T(j\omega)|=rac{|1|}{| au j\omega+1|}=rac{1}{\sqrt{(au\omega)^2+1^2}}=rac{1}{\sqrt{1+ au^2\omega^2}} \qquad ext{Look familiar?}$$

Phase Angle

$$\begin{split} |T(j\omega)| &= \frac{1}{\sqrt{1+\tau^2\omega^2}} = \textit{M}(\omega) \\ & \angle T\left(j\omega\right) = \angle 1 - \angle \left(1+j\omega\tau\right) = \textit{tan}^{-1}\left(\frac{0}{1}\right) - \textit{tan}^{-1}\left(\frac{\omega\tau}{1}\right) = \\ & -\textit{tan}^{-1}\left(\omega\tau\right) = \phi(\omega) \end{split}$$


Substitute $s=j\omega$ into the transfer function and solve for the magnitude and phase angle of this complex number which represent the magnitude ratio and phase shift.


Therefore the steady state response is written as follows.

$$y_{ss}\left(t
ight)=A|T\left(j\omega
ight)|sin\left(\omega t+\angle T\left(j\omega
ight)
ight)=MAsin\left(\omega t+\phi
ight)$$

Wasn't that fun? Can you believe we used to do that on the board?!?!

Graph of Frequency Response

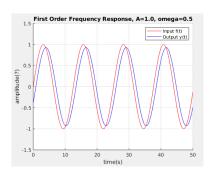

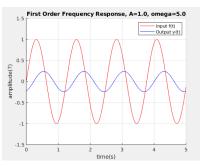

What determines the amplitude of the system response?

MATLAB code

```
% ME3050 - Spring 2020 Tennessee Technological Univ.
   clear variables; clc; close all
3
   % define the system parameters
5
   m=20; c=25;
   tau=m/c;
7
8
   % define the amplitude input frequency and
   A=1; omega=1/2;
10
11
   % calculate the magnitude ratio
12
   M=1/sqrt(1+omega^2*tau^2);
13
   phi=-tan(omega*tau);
```

MATLAB code

```
"consider a range of time values
   dt = 0.01; tstop = 50;
   time = 0: dt: tstop;
4
5
   %calculate the input and response curves
6
   fin=A*sin(omega*time);
   yout=M*A*sin(omega*time+phi);
8
   % show the results in a figure
10
   figure(1); hold on
11
   plot(time,fin,'r')
12
   plot(time, yout, 'b')
```

Introduction to Chapter 9
Review Complex Numbers
Frequency Response of First Order Systems

First Order Mass Damper First Order Transfer Function Sinusoidal Input Function Steady State Time Response Amplitude Ratio and Phase Angle Graph of Frequency Response

References

 System Dynamics, Palm III, Third Edition - Chapter 9 -System Response in the Frequency Domain