## Frequency Response - Lecture 1

ME3050 - Dynamics Modeling and Controls

April 19, 2020

Frequency Response of First Order Systems

#### Lecture 1- Frequency Response of First Order Systems

- Introduction to Chapter 9
- Review Complex Numbers
- Frequency Response of First Order Systems
- Graph of System Response

## Harmonic Input Function

The term **frequency response** is used to describe a system's response to a periodic input. Frequency response analysis focuses on a system's response to harmonic input such as sines and cosines. The input (forcing) function is written below.

$$f(t) = Asin(\omega t)$$

Amplitude of the Input,

Frequency of Input,  $\omega = (\frac{rad}{s})$ 

Harmonic Input Function Why Study Frequency Response? Frequency Response and the Transfer Functio

## Why Study Frequency Response?

Why do we care about the way a system responds to harmonic excitation? Why is **frequency analysis** important?

- 0
- •
- •

What causes harmonic (or sinusoidal) excitation in the real world?

- 0
- •
- 0


Harmonic Input Function
Why Study Frequency Response?
Frequency Response and the Transfer Function

## Frequency Response and the Transfer Function

A linear, time-invariant (LTI) system has a **transfer function**  $\mathcal{T}(s)$  that describes the **input-output** relationship of the system. Under sinusoidal excitation (input) with frequency  $\omega$  if the system is stable the transient affects in the response (output) will eventually disappear leaving the **steady state sinusoidal response** of the same frequency as the input but with a phase shift w.r.t. the input.

## The Complex Plane

In an underdamped system the roots of the characteristic polynomial are complex. Before we proceed we need to review some rules of arithmetic and complex numbers.

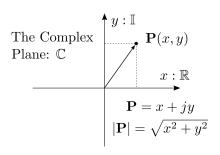

Cartesian Representation:

$$P = x + iy$$

Polar Representation:

$$\mathbf{P} = |\mathbf{P}| \angle \theta$$

Exponential Representation:

$$\mathbf{P} = |\mathbf{P}|e^{j\theta} = |\mathbf{P}|(\cos\theta + j\sin\theta)$$

## Complex Number Algebra

Consider two points  $P_1$  and  $P_2$  on the complex plane.

$$P_1 = x_1 + jy_1$$
 and  $P_2 = x_2 + jy_2$ 

Addition: 
$$P_1 + P_2 = (x_1 + x_2) + j(y_1 + y_2)$$

Multiplication: 
$$P_1P_2 = |P_1P_2| \angle (\theta_1 + \theta_2)$$

Division: 
$$\frac{P_1}{P_2} = (x_1 + x_2) + j(y_1 + y_2)$$

# Frequency Response of First Order Systems Obtain the Transfer Function Sinusoidal Input Function Steady State Time Response Amplitude Ratio Amplitude Ratio and Phase Angle Graph of Frequency Response MATLAR code

## Frequency Response of First Order Systems



Consider our  $1^{\underline{st}}$  order mass damper system.

$$m\dot{v} + cv = f(t)$$
 with a time constant  $\tau = \frac{m}{c}$ 

The system is commonly re-written as shown below.

$$m\dot{v} + cv = f(t) \rightarrow \tau \dot{y} + y = f(t)$$

Frequency Response of First Order Systems
Obtain the Transfer Function
Sinusoidal Input Function
Steady State Time Response
Amplitude Ratio
Amplitude Ratio and Phase Angle
Graph of Frequency Response
MATLAB code

#### Obtain the Transfer Function

$$\tau \dot{y} + y = f(t)$$

Take the Laplace transform of the ODE.

$$\mathcal{L}\{\tau\dot{y}+y\}=\mathcal{L}\{f(t)\}$$

$$\tau(sY(s) + y_0) + Y(s) = F(s)$$
 The initial conditions are zero.

$$T(s) = \frac{Y(s)}{F(s)} = \frac{1}{\tau s + 1}$$
 First Order Transfer Function

This considers a generalized input function f(t) and zero ICs.

Frequency Response of First Order Systems Obtain the Transfer Function Sinusoidal Input Function Steady State Time Response Amplitude Ratio Amplitude Ratio and Phase Angle Graph of Frequency Response MATLAB code

## Sinusoidal Input Function

Our model is now excited by a sinusoidal input (forcing) function.

$$\tau \dot{y} + y = f(t) = A \sin(\omega t)$$

Take the Laplace transform. Then, solve for Y(s) and expand.

$$\tau s Y(s) + Y(s) = \frac{A\omega}{s^2 + \omega^2}$$

$$Y(s) = \frac{A\omega}{(s^2 + \omega^2)(\tau s + 1)} = \frac{C_1}{\tau s + 1} + \frac{C_2 s}{(s^2 + \omega^2)} + \frac{C_3 \omega}{(s^2 + \omega^2)}$$

Now solve for the coefficients.

$$C_1 = \frac{A\omega\tau^2}{1+\omega^2\tau^2}$$
 ,  $C_2 = \frac{-A\omega\tau}{1+\omega^2\tau^2}$  ,  $C_3 = \frac{A}{1+\omega^2\tau^2}$ 

Substituting and take the inverse Laplace transform.

$$y(t) = rac{A\omega au}{1+\omega^2 au^2}ig(e^{rac{-t}{ au}}-cos\omega t + rac{1}{\omega au}sin\omega tig)$$

Frequency Response of First Order Systems
Obtain the Transfer Function
Sinusoidal Input Function
Steady State Time Response
Amplitude Ratio
Amplitude Ratio and Phase Angle
Graph of Frequency Response
MATI AB Code

## Steady State Time Response

$$y(t) = rac{A\omega au}{1+\omega^2 au^2}ig(e^{rac{-t}{ au}}-cos\omega t + rac{1}{\omega au}sin\omega tig)$$

After some amount of time passes, the transient term will disappear leaving just the sinusoidal terms.

$$y(t) = rac{A}{1+\omega^2 au^2}ig( ext{sin}\omega t - \omega au ext{cos}\omega tig)$$

This is re-written as a single sine term with a phase shift.

Steady State Frequency Response of First Order System

$$y(t) = \frac{A}{\sqrt{1+\omega^2\tau^2}} sin(\omega t + \phi)$$
 ,  $\phi = -tan^{-1}\omega \tau$ 

Frequency Response of First Order Systems
Obtain the Transfer Function
Sinusoidal Input Function
Steady State Time Response
Amplitude Ratio
Amplitude Ratio and Phase Angle
Graph of Frequency Response
MATI AB code

### Amplitude Ratio

$$y(t) = \frac{A}{\sqrt{1+\omega^2 au^2}} sin(\omega t + \phi)$$
 ,  $\phi = -tan^{-1}\omega au$ 

Notice that the system responds at the same frequency as the input but with a different amplitude and a phase shift. The ratio of the response amplitude to the input amplitude is called the **amplitude ratio**, **M**.

$$M = \frac{\frac{A}{\sqrt{1+\omega^2\tau^2}}}{A} = \frac{1}{\sqrt{1+\omega^2\tau^2}}$$

Fortunately we can find the **amplitude ratio** and **phase shift** directly from the transfer function. Recall the transfer function we derived.

$$T(s) = \frac{1}{\tau s + 1}$$
 let  $s = j\omega$   $\Longrightarrow$   $T(j\omega) = \frac{1}{\tau j\omega + 1}$   $|T(j\omega)| = \frac{|1|}{|\tau j\omega + 1|} = \frac{1}{\sqrt{(\tau \omega)^2 + 1^2}} = \frac{1}{\sqrt{1 + \tau^2 \omega^2}}$  Look familiar?

Frequency Response of First Order Systems
Obtain the Transfer Function
Sinusoidal Input Function
Steady State Time Response
Amplitude Ratio
Amplitude Ratio and Phase Angle
Graph of Frequency Response
MATI AB Code

## Amplitude Ratio and Phase Angle

$$\begin{split} |T(j\omega)| &= \frac{1}{\sqrt{1+\tau^2\omega^2}} = M(\omega) \\ & \angle T(j\omega) = \angle 1 - \angle (1+j\omega\tau) = \tan^{-1}\left(\frac{0}{1}\right) - \tan^{-1}\left(\frac{\omega\tau}{1}\right) = \\ & - \tan^{-1}\left(\omega\tau\right) = \phi(\omega) \end{split}$$

Substitute  $s=j\omega$  into the transfer function and solve for the magnitude and phase angle of this complex number which represent the magnitude ratio and phase shift.


Therefore the steady state response is written as follows.


$$y_{ss}(t) = A|T(j\omega)|sin(\omega t + \angle T(j\omega)) = MAsin(\omega t + \phi)$$

Wasn't that fun? Can you believe we used to do that on the board?!?!

Frequency Response of First Order Systems Obtain the Transfer Function Sinusoidal Input Function Steady State Time Response Amplitude Ratio Amplitude Ratio and Phase Angle Graph of Frequency Response MATLAB code

## Graph of Frequency Response

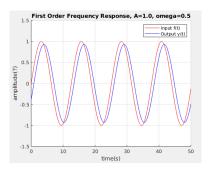

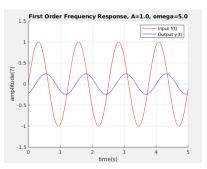

What determines the amplitude of the system response?

Frequency Response of First Order Systems Obtain the Transfer Function Sinusoidal Input Function Steady State Time Response Amplitude Ratio Amplitude Ratio and Phase Angle Graph of Frequency Response MATLAB code

#### MATLAB code

```
% ME3050 - Spring 2020 Tennessee Technological Univ.
   clear variables; clc; close all
3
   % define the system parameters
5
   m=20; c=25;
6
   tau=m/c;
7
   % define the amplitude input frequency and
   A=1; omega=1/2;
10
11
   % calculate the magnitude ratio
12
   M=1/sqrt(1+omega^2*tau^2);
13
   phi=-tan(omega*tau);
```

Frequency Response of First Order Systems Obtain the Transfer Function Sinusoidal Input Function Steady State Time Response Amplitude Ratio Amplitude Ratio and Phase Angle Graph of Frequency Response MATLAB code

#### MATLAB code

```
%consider a range of time values
   dt = 0.01; tstop = 50;
   time = 0: dt: tstop;
4
5
   %calculate the input and response curves
   fin=A*sin(omega*time);
   yout=M*A*sin(omega*time+phi);
8
   % show the results in a figure
10
   figure(1); hold on
11
   plot(time,fin,'r')
12
   plot(time, yout, 'b')
```

Frequency Response of First Order Systems Obtain the Transfer Function Sinusoidal Input Function Steady State Time Response Amplitude Ratio Amplitude Ratio and Phase Angle Graph of Frequency Response MATLAB code

#### References

 System Dynamics, Palm III, Third Edition - Chapter 9 -System Response in the Frequency Domain