Frequency Response - Lecture 2

ME3050 - Dynamics Modeling and Controls

April 19, 2020

The Bode Diagram

Lecture 2 - **The Bode Diagram**

- Review Frequency Response

- Amplitude ratio in Decibels

- The Bode Diagram

- Frequency Response in MATLAB

Review Frequency Response
The Bode Diagram
Frequency Response in MATLAB

Harmonic Input Function
First Order Frequency Response
Graph of Frequency Response

Harmonic Input Function

The term **frequency response** is used to describe a system's response to a periodic input. Frequency response analysis focuses on a system's response to *harmonic* input such as sines and cosines. The input (forcing) function is written below.

$$f(t) = A\sin(\omega t)$$

Amplitude of the Input, $\quad A \quad (N)$

Frequency of Input, $\quad \omega \quad (\frac{rad}{s})$

Review Frequency Response
The Bode Diagram
Frequency Response in MATLAB

Harmonic Input Function
First Order Frequency Response
Graph of Frequency Response

First Order Frequency Response

The steady state response we derived is shown. Remember, after some amount of time passes, the transient term will disappear leaving just the sinusoidal terms.
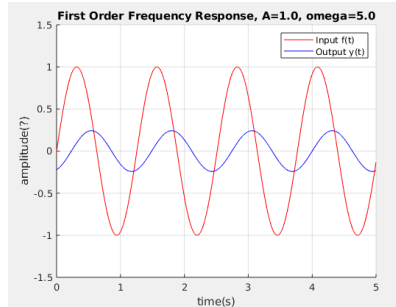
$$y_{ss}(t) = A|T(j\omega)|\sin(\omega t + \angle T(j\omega)) = MA\sin(\omega t + \phi)$$

The amplitude ratio and phase shift can be found from $T(j\omega)$.

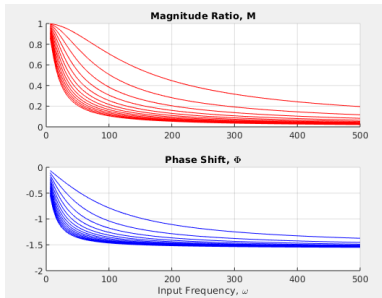$$M(\omega) = |T(j\omega)| = \frac{1}{\sqrt{1+\tau^2\omega^2}}$$

$$\phi(\omega) = \angle T(j\omega) = -\tan^{-1}(\omega\tau)$$

Review Frequency Response
The Bode Diagram
Frequency Response in MATLAB

Harmonic Input Function
First Order Frequency Response
Graph of Frequency Response

Graph of Frequency Response

The amplitude of the response is determined by the input frequency.

Review Frequency Response
The Bode Diagram
Frequency Response in MATLAB

Dependence on Input Frequency
Review Properties of Logarithms
Amplitude ratio on a Logarithmic Scale
Amplitude ratio on a Logarithmic Scale

Dependence on Input Frequency

You can see that the amplitude ratio decreases as the input frequency increases. The individual curves represent systems with different time constants.

Review Frequency Response
The Bode Diagram
Frequency Response in MATLAB

Dependence on Input Frequency
Review Properties of Logarithms
Amplitude ratio on a Logarithmic Scale
Amplitude ratio on a Logarithmic Scale

Review Properties of Logarithms

Basic Properties of Logarithms:

Multiplication $\quad log(pq) = log(p) + log(q)$

Division $\qquad log(\frac{x}{y}) = log(x) - log(y)$

Power $\qquad\qquad log(x^n) = nlog(x)$

Units of Decibels for Magnitude:

$m(dB) = 10log(M^2) = 20log(M) \qquad$ convert back: $\qquad M = 10^{\frac{m(dB)}{20}}$

Decibel (dB), unit for expressing the ratio between two physical quantities, usually amounts of acoustic or electric power, or for measuring the relative loudness of sounds. One decibel (0.1 bel) equals 10 times the common logarithm of the power ratio. - Britannica.com

Review Frequency Response
The Bode Diagram
Frequency Response in MATLAB

Dependence on Input Frequency
Review Properties of Logarithms
Amplitude ratio on a Logarithmic Scale
Amplitude ratio on a Logarithmic Scale

Amplitude ratio on a Logarithmic Scale

These relationships are more useful shown on a logarithmic scale.
We can make use of the properties of logarithms in our analysis.

$$m\left(dB\right) = 20log\left(\frac{1}{\sqrt{1+\omega^2\tau^2}}\right) = 20\left(log\left(1\right) - log\sqrt{1+\omega^2\tau^2}\right)$$

$$m\left(dB\right) = 20log\left(1\right) - 10log\left(1+\omega^2\tau^2\right) = -10log\left(1+\omega^2\tau^2\right)$$

$$m\left(dB\right) = -10log\left(1+\omega^2\tau^2\right)$$

amplitude ratio in decibels

Review Frequency Response
The Bode Diagram
Frequency Response in MATLAB

Dependence on Input Frequency
Review Properties of Logarithms
Amplitude ratio on a Logarithmic Scale
Amplitude ratio on a Logarithmic Scale

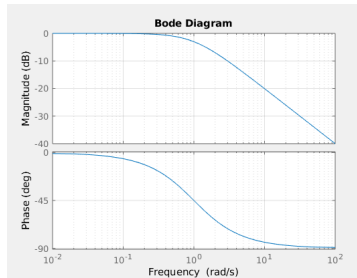# Amplitude ratio on a Logarithmic Scale
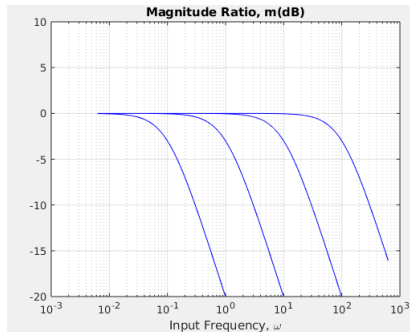
This is a Bode plot. It seems abstract but there is some very useful information shown.

Hendrik Bode (1905-1982)

Bode Plot in MATLAB

MATLAB has a built it tool for making Bode plots.


```
1  figure(1)
2  sys=tf(1,[tau(3) 1])
3  bode(sys);grid on
```

So what? What can you do with a Bode diagram?

References

- System Dynamics, Palm III, Third Edition - Chapter 9 - System Response in the Frequency Domain