#### Module 5 - Steady State Circuits

ME3023 - Measurements in Mechanical Systems

Mechanical Engineering
Tennessee Technological University

**Topic 1 - Components, Units, and Symbols** 

#### **Topic 1 - Components, Units, and Symbols**

- Common Passive Components
- Important Electrical Quantities
- Units and Symbols
- The Flow Analogy

#### Common Passive Components


Passive components affect the behavior of a circuit in different ways but they do not generate power and can only absorb energy or transform it into heat. Active components on the other hand...

- Resistor
- Capacitor
- Inductor

Most circuits require an active power source for operation. A voltage source is used in most applications however current sources are also available and are needed for specialized electrical applications.

## Common Passive Components


Components are identified by color codes and numbering systems. However it is always a good idea to measure for yourself because a marking can be incorrect or a component may be damaged.

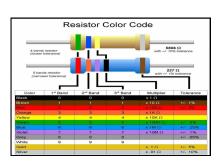

Codes of Ceramic Disc Capacitor  www.circuitspedia.com									
Picofarad	Nanofarad	Microfarad		Picofarad	Nanofarad	Microfarad			
pF	nF	μF	CODE	pF	nF	μF	CODE		
10	0.01	0.00001	100	4700	4.7	0.0047			
15	0.015	0.000015	150	5000	5.0	0.005	502		
22	0.022	0.000022		5600	5.6	0.056			
33	0.033	0.000033	330	6800	6.8	0.0068	682		
47	0.047	0.000047		10000	10	0.01			
100	0.1	0.0001		15000	15	0.015			
120	0.12	0.00012		22000	22	0.022			
130	0.13	0.00013		33000	33	0.033			
150	0.15	0.00015		47000	47	0.047			
180	0.18	0.00018		68000	68	0.068			
220	0.22	0.00022		100000	100	0.1	104		
330	0.33	0.00033		150000	150	0.15			
470	0.47	0.00047		200000	200	0.2	254		
560	0.56	0.00056		220000	220	0.22			
680	0.68	0.00068	681	330000	330	0.33			
750	0.75	0.00075		470000	470	0.47			
820	0.82	0.00082		680000	680	0.68	684		
1000	1.0	0.001		1000000	1000	1.0	105		
1500	1.5	0.0015		1500000	1500	1.5			
2000	2.0	0.002		2000000	2000	2.0	205		
2200	2.2	0.0022		2200000	2200	2.2			
3300	3.3	0.0033		3300000	3300	3.3			

#### Important Electrical Quantities


 Charge - the physical property of matter that causes it to experience a force when placed in an electromagnetic field.



- Voltage the difference in electric potential between two points ... can be caused by electric charge, by electric current through a magnetic field, by time-varying magnetic fields, or some combination of these three.
- Current the rate of flow of electric charge past a point or region. An electric current is said to exist when there is a net flow of electric charge through a region.

## Important Electrical Quantities

 Resistance - the physical property of matter that causes it to experience a force when placed in an electromagnetic field.



- Capacitance the difference in electric potential between two points ... can be caused by electric charge, by electric current through a magnetic field, by time-varying magnetic fields, or some combination of these three.
- Inductance the rate of flow of electric charge past a point or region. An electric current is said to exist when there is a net flow of electric charge through a region.

## Units and Symbols

Quantity	Symbol	Unit	Abbr.	
Charge	Q,q	Coulomb	С	
Voltage	V,v	Volt	V	
Current	l,i	Ampere	А	
Resistance	R	Ohm	Ω	
Capacitance	С	Farad	F	
Inductance	L	Henry	Н	

Question: When should you use upper case or lower case letters for electrical quantities?



# Units and Symbols

When working with a or building a circuit you need a diagram. Draw or find one before you begin. Here are some commonly used symbols.

#### The Flow Analogy

Traditionally engineers have used an analogy relating the *movement of electrons* to the flow of water through a pipe. While this may provided you with a comforting sense of intuition this comparison is not quite accurate.