## Module 7 - Time Varying Circuits

ME3023 - Measurements in Mechanical Systems

Mechanical Engineering
Tennessee Technological University

**Topic 2 - First Order Systems** 

#### **Topic 2 - First Order Systems**

General System Model

Mechanical-Electrical Analogies

• Example: RC Circuit

• Example: Bulb Thermometer


# General System Model

The behavior of a circuit is dependent on time, and many common circuits can be represented by a *linear ordinary differential equation* which can be written in the following standard form.

$$a_n \frac{d^n x}{dt^n} + a_{n-1} \frac{d^{n-1} x}{dt^{n-1}} + \dots + a_2 \frac{d^2 x}{dt^2} + a_1 \frac{dx}{dt} + a_0 x = f(t)$$

## Mechanical-Electrical Analogies


Many mechanical systems are also time dependent, or *dynamic* and a mechanical-electrical analog is often draw between the two.

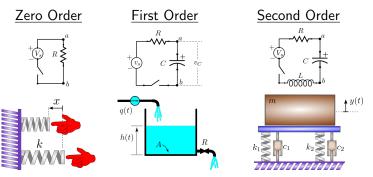

This concept was used for analysis and simulation.

## Example: RC Circuit

The RC circuit is a first order system. The response to a step input  $v_s$  is exponential which is described a single parameter the time constant  $\tau$ .

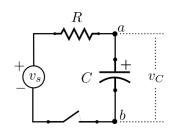

First Order Model


$$RC\dot{v}_C + v_C = v_S$$

Response Equation

$$v_{C}(t) = v_{s}\left(1 - e^{-\frac{t}{RC}}\right)$$

# Example: RC Circuit


time(s)	response(V)

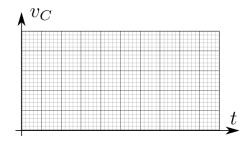

## Example: Bulb Thermometer

Consider the bulb thermometer shown which can be modeled as a first order system. Where does the *model* come from?

$$\frac{dE}{dt} = \dot{Q} \qquad \qquad \frac{dE}{dt} = mc_v \frac{T(t)}{dt} \qquad \qquad \dot{Q} = hA_s \Delta T$$

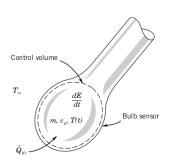

First Order Model


$$mc_{v}\frac{T(t)}{dt} + hA_{s}T(t) = hA_{s}T_{\infty}$$

Response Equation

$$T(t) = T_{\infty} + [T(0) - T_{\infty}] e^{-\frac{t}{\tau}}$$

# Example: Bulb Thermometer

time(s)	response(°C)

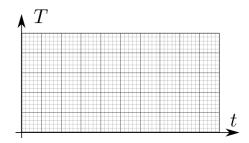

## Example: Bulb Thermometer

Think about the general system model.

What is the time constant of the bulb thermometer system?

 $\tau =$ 

What is the static sensitivity? What are the units?

K =