


NOMAD TORONTO

Complete System Wiring Diagram | 14 Loudspeakers | March 2026

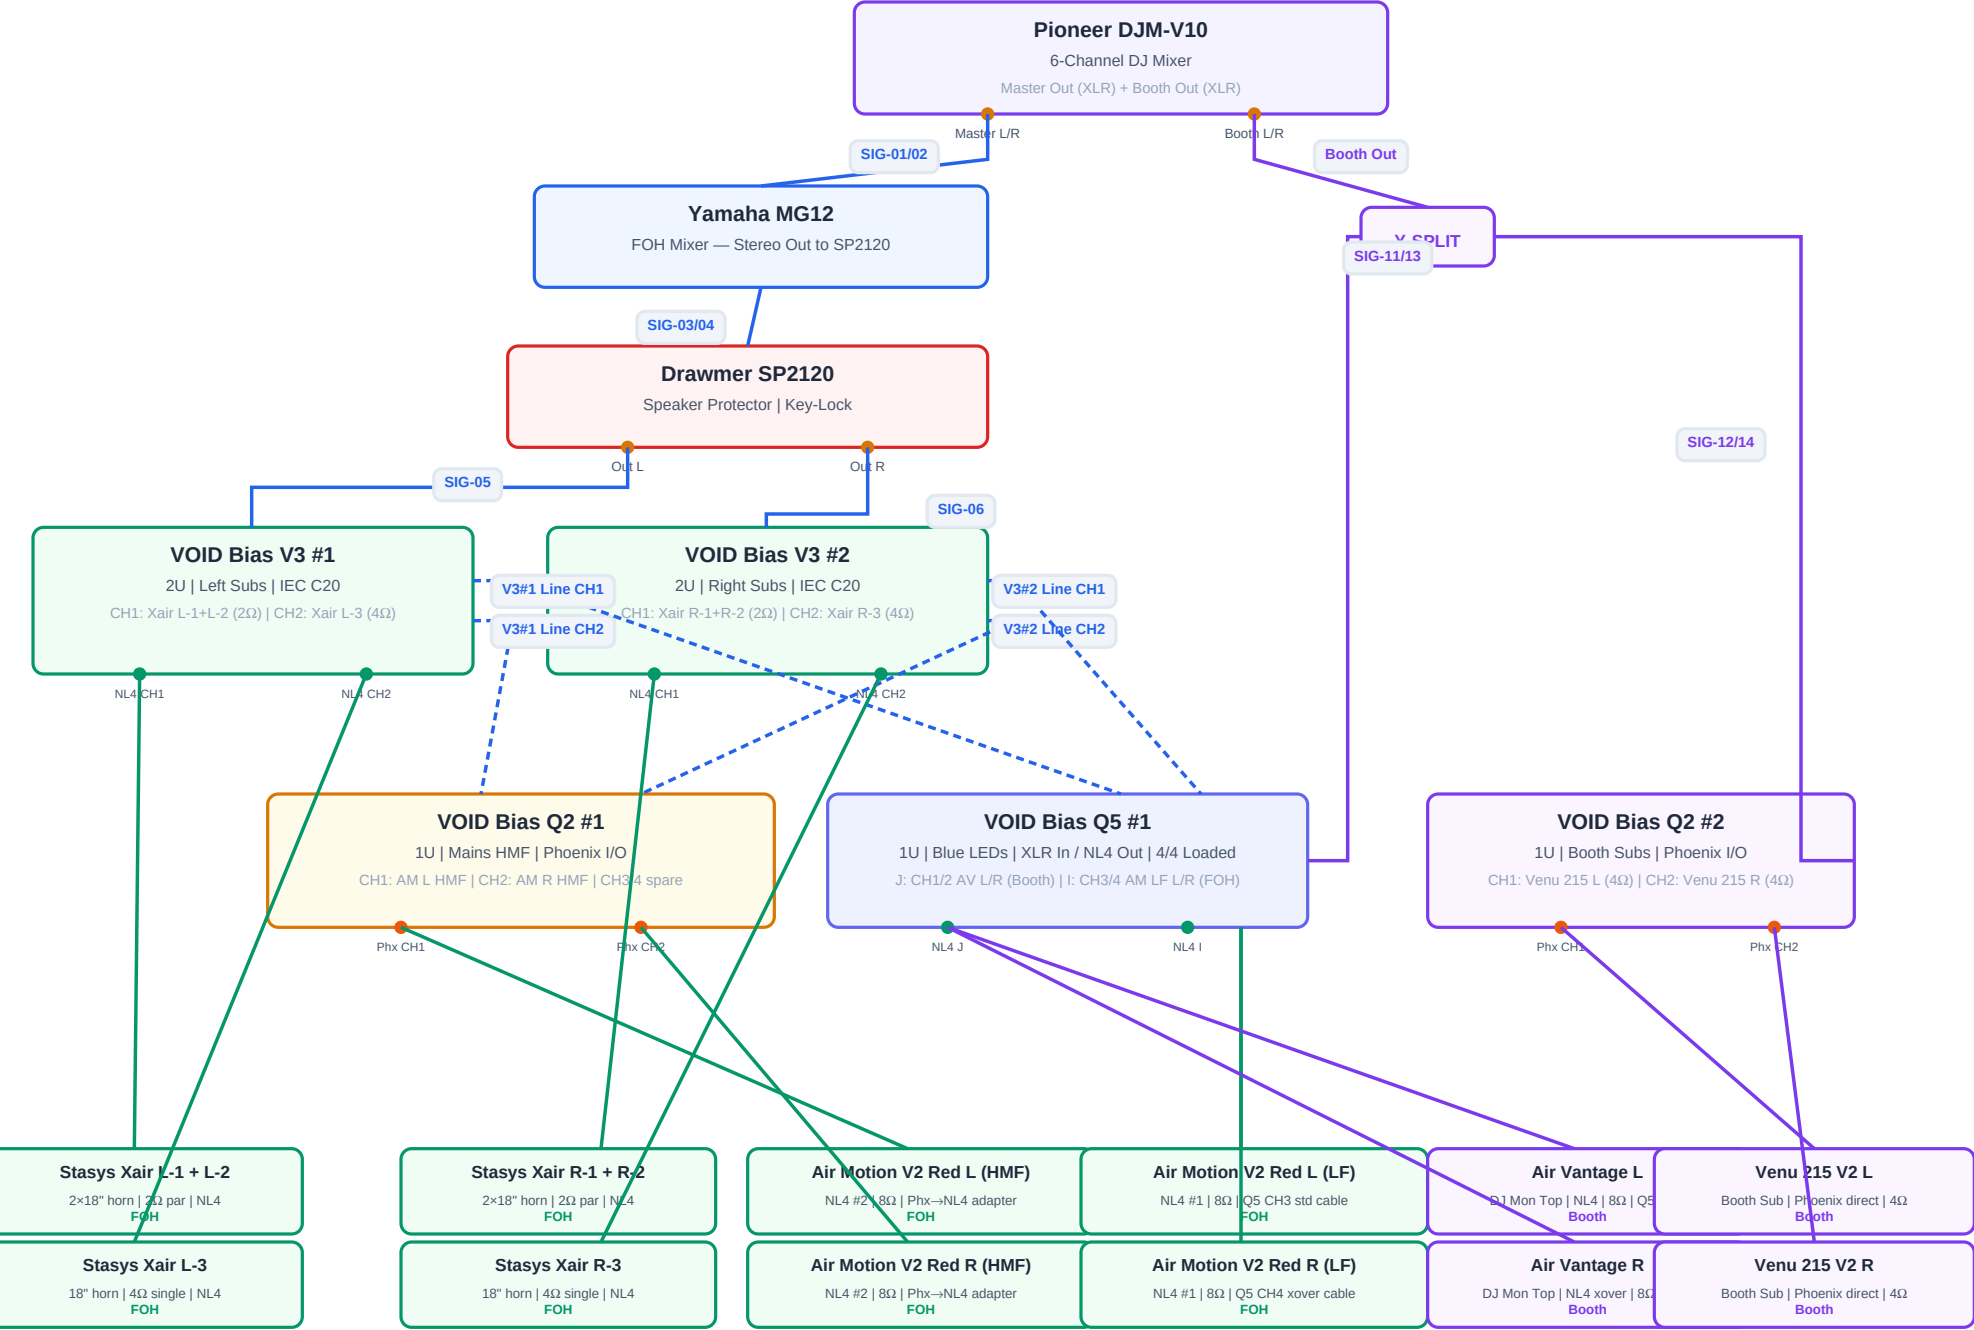

NOMAD TORONTO | Amplifier Rack Layout & Connection Summary

Physical rack order top-to-bottom | All I/O from manufacturer manuals | March 2026

Drawmer SP2120

1U | Speaker Protector

In: 2× XLR-F | Out: 2× XLR-M

Power: IEC inlet 115/230V, 9VA

VOID Bias V3 #1

2U | Left Sub Array

In: 2× XLR-F | Out: 2× NL4 | Line Out: 2× XLR-M

Power: IEC C20, 16A breaker

VOID Bias Q2 #1

1U | Mains HMF | Phoenix I/O

In: Phoenix 12-pin | Out: Phoenix 8-pin

Power: IEC C20, 16A breaker

VOID Bias V9 #1

2U | OFFLINE

All connections disconnected

Power: CPC 45A (breaker off)

VOID Bias Q2 #2

1U | DJ Booth Subs | Phoenix I/O

In: Phoenix 12-pin | Out: Phoenix 8-pin

Power: IEC C20, 16A breaker

VOID Bias V3 #2

2U | Right Sub Array

In: 2× XLR-F | Out: 2× NL4 | Line Out: 2× XLR-M

Power: IEC C20, 16A breaker

VOID Bias Q5 #1

1U | DJ Mon + Mains LF | XLR/NL4

In: 4× XLR-F | Out: 2× NL4 (2ch each)

Power: Phoenix 5-pin, 16A breaker

Channel Assignment Summary

Amplifier	CH1	CH2	CH3	CH4	Source	Zone
V3 #1	Xair L-1+L-2	Xair L-3	—	—	SP2120 Out L	FOH
Q2 #1	AM L HMF	AM R HMF	Spare	Spare	V3 Line Outs	FOH
V9 #1	—	—	—	—	Disconnected	OFF
Q2 #2	Venu 215 L	Venu 215 R	Spare	Spare	V10 Booth	Booth
V3 #2	Xair R-1+R-2	Xair R-3	—	—	SP2120 Out R	FOH
Q5 #1	AV L (Booth)	AV R (Booth)	AM L LF	AM R LF	Booth+V3	Both

Required Adapter & Special Cables

Type	Qty	Connection
XLR-to-Phoenix (signal)	2	V3 Line Out → Q2#1
XLR Y-split to Phoenix (booth subs)	2	V10 Booth → Q2#2
XLR Y-split (booth tops)	2	V10 Booth → Q5 CH1/2
Phoenix-to-NL4 (speaker adapter)	2	Q2#1 → Air Motion HMF
Crossover NL4 (speaker)	2	Q5 CH2 (AV R) + CH4 (AM R LF)
Phoenix-to-Phoenix (speaker)	2	Q2#2 → Venu 215 V2

Equipment PDF Manuals (18 documents)

- Bias V3/V9 User Guide V1.0
 - Bias Q2/Q1/D1 User Guide V1.0
 - Bias Q2 Spec Sheet
 - Bias Q5 User Guide V1.0
 - Bias Q5 Spec Sheet
 - Air Motion V2 User Guide V2.0
 - Air Motion V2 Spec Sheet
 - Stasys Xair User Guide V2.1
 - Stasys Xair Spec Sheet V1.1
- Venu V2 Series User Guide
 - Venu 215 V2 Spec Sheet V1.3
 - Air Vantage User Guide
 - Air Vantage Spec Sheet
 - Drawmer SP2120 Manual
 - SP2120 Tamper-Proof Bracket Manual
 - Pioneer DJM-V10 Specifications
 - Yamaha MG12 Owner's Manual
 - Armonia Pro Audio Suite