

As setup is prepared (PC/Laptop is connected to the gateway using Micro USB, COMport slot is on the slot of the SIM Card, TeraTerm is installed and running), please follow these steps:

- 1. Navigate to File → Click new connection
- 2. Choose Serial as Connection type.
- 3. Choose correct COM port and click on the OK button.

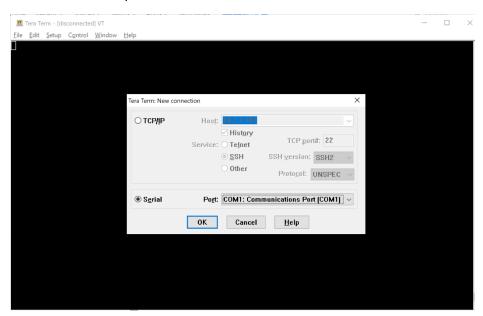

- 4. Navigate to Setup -> Serial port
- 5. Change COM port to the desired and set baud rate to "115200"

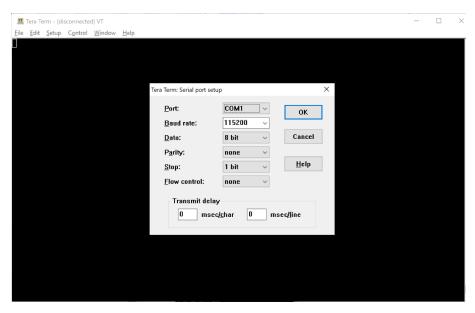

6. Click OK to apply the new setup.

## Procedure to delete gateway's password:

1. Power cycle the gateway by unplugging the power cable and plugging it back.

2.	Hit "Z" ('Shift+z' or turn on the Capslock and press 'z') when the " <b>Press 'Z' to stop autoboot</b> " message appears during bootup to stop the autoboot.
3.	Execute the below command to boot into recovery partition:
	run recoveryboot
4.	In recovery terminal run:
	recover
5.	Then select option 4.

7. Type:

exit

8. Run the command:

6. Type the command:

passwd -d root

reboot

At this moment, password is removed from the gateway.

To setup new password, use regular SSH connection via ssh <a href="mailto:root@ip.of.the.gateway">root@ip.of.the.gateway</a>

9. As connection with the gateway is established, execute the following command:

Passwd

Type new password. Confirm new password.