


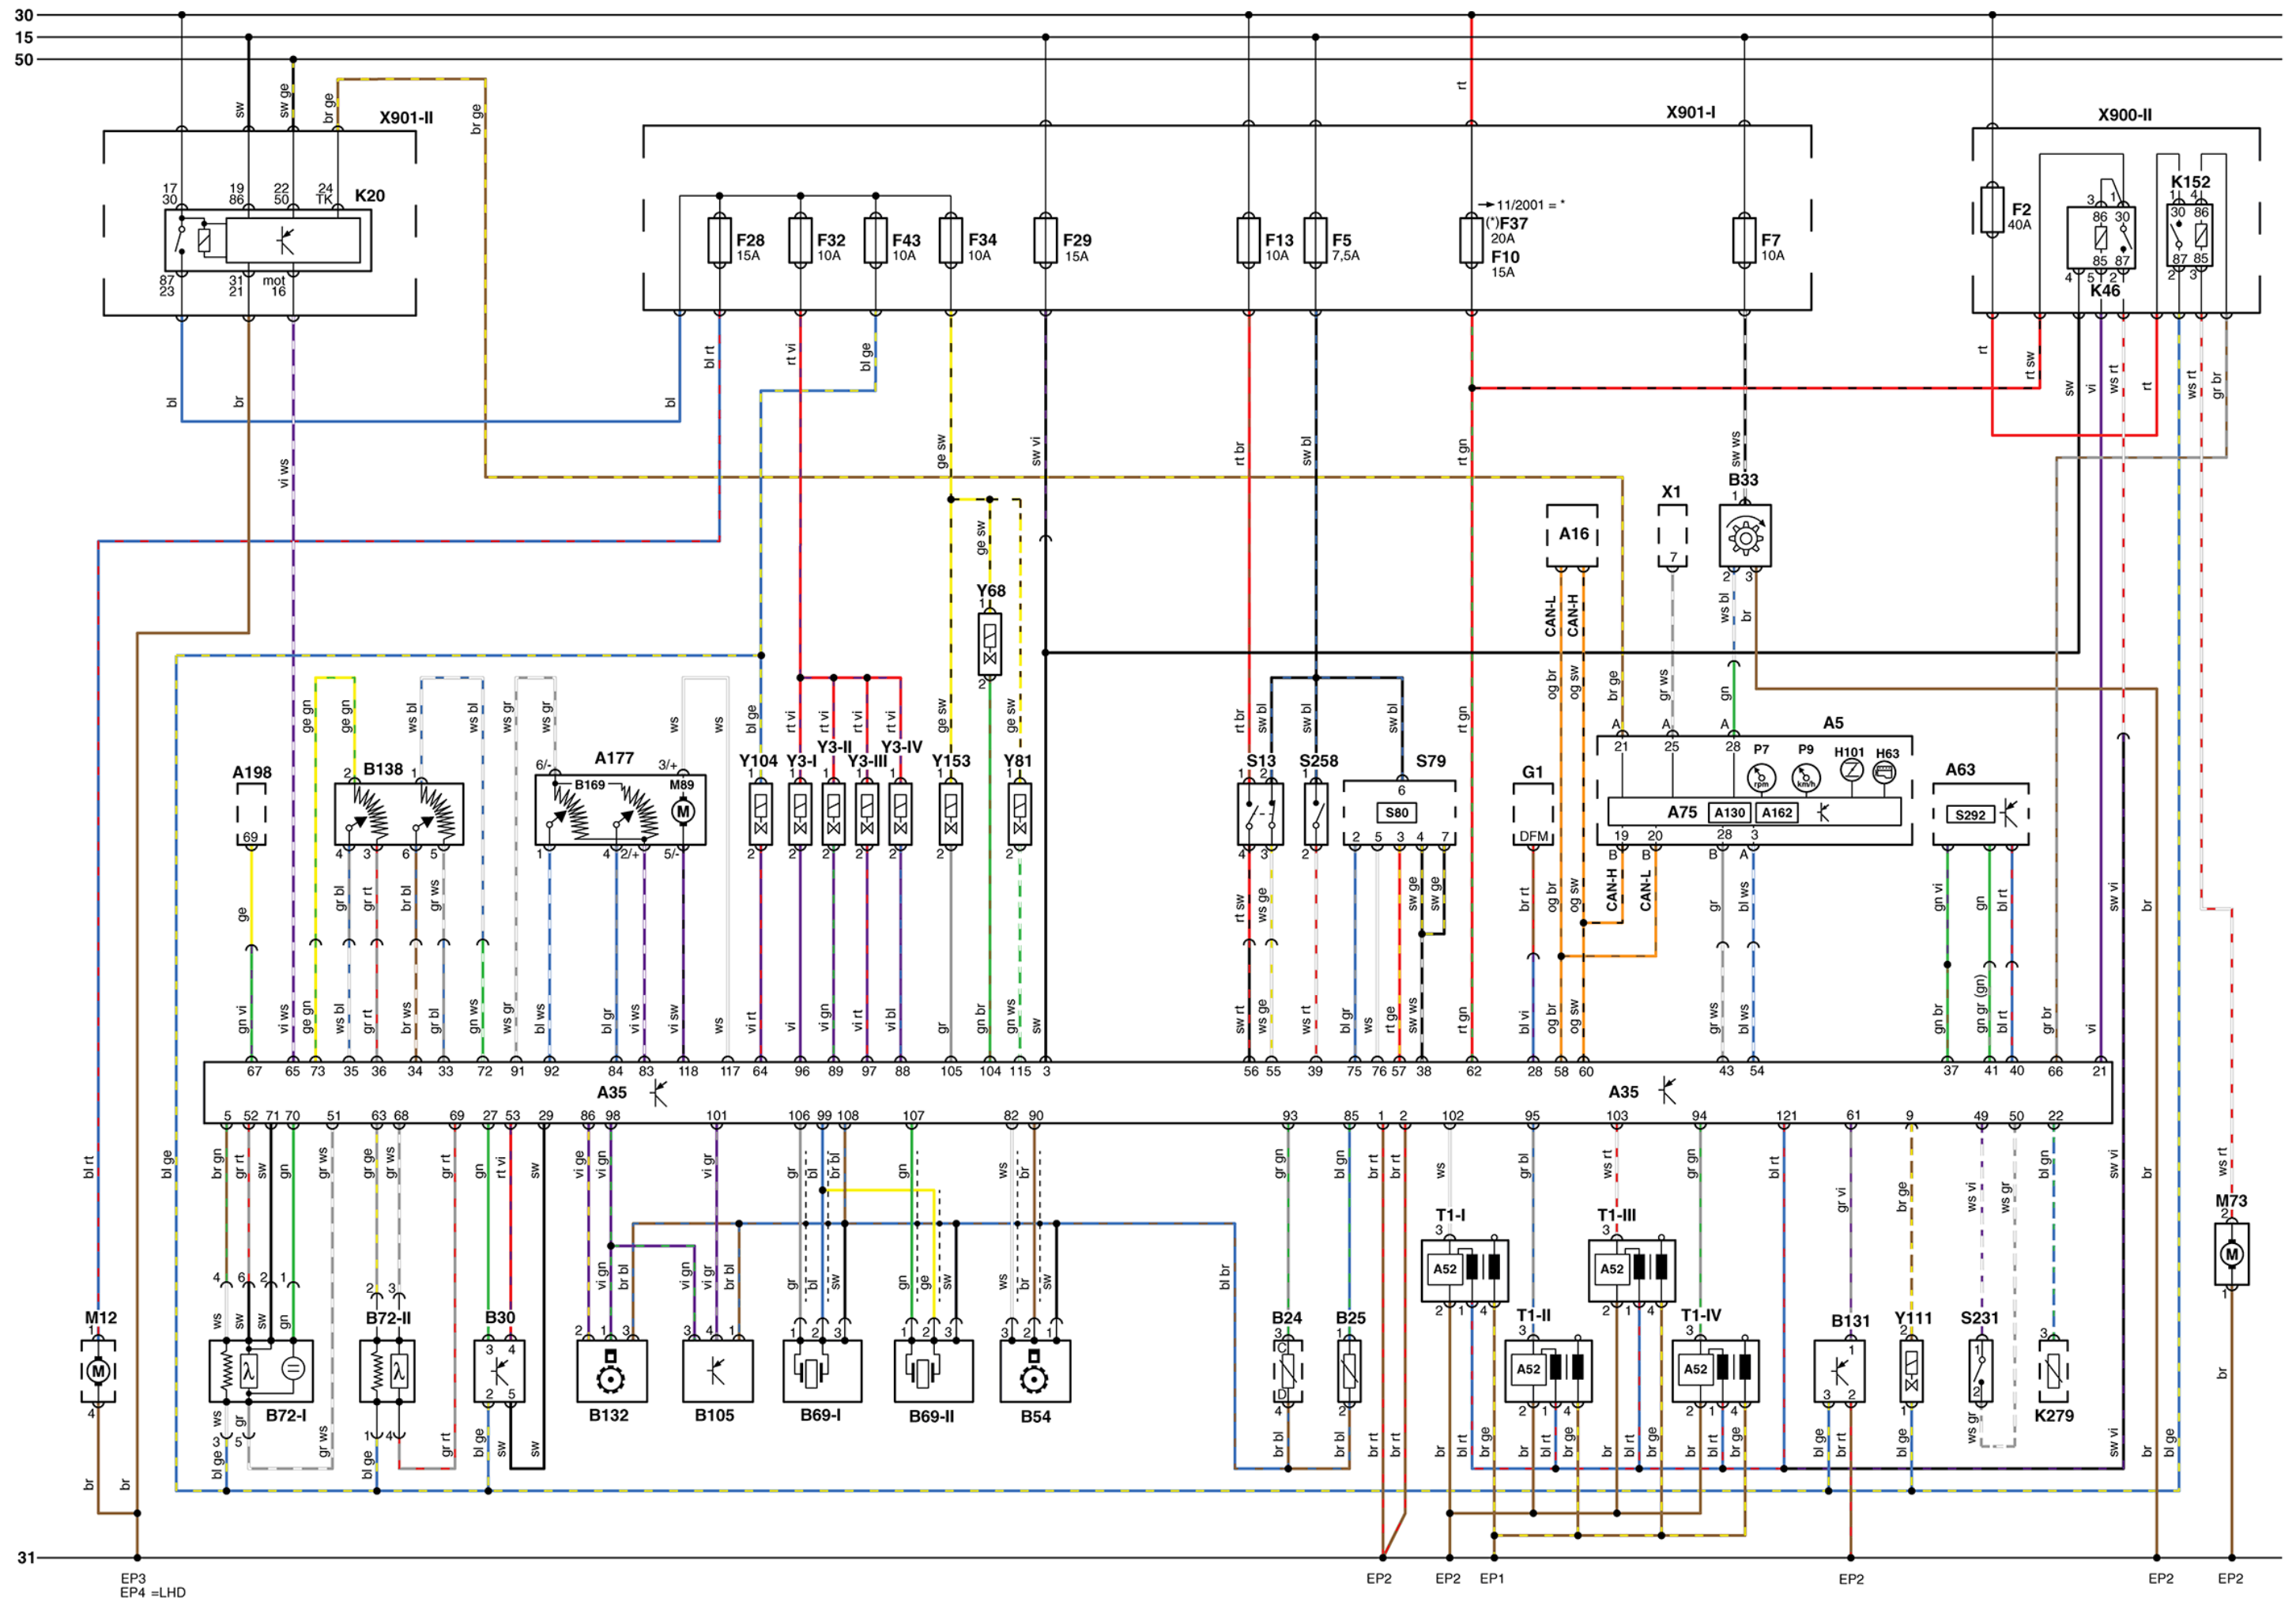

- A16 ABS control module
- S292 AC/heater function control panel
- A63 AC control module
- B138 Accelerator pedal position (APP) sensor
- G1 Alternator
- 30 Battery +
- 31 Battery -
- S13 Brake pedal position (BPP) switch
- K279 Brake servo vacuum pump relay
- Y81 Camshaft position (CMP) actuator
- B132 Camshaft position (CMP) sensor
- S258 Clutch pedal position (CPP) switch
- CAN-H Controller area network (data bus) high
- CAN-H Controller area network (data bus) high
- CAN-L Controller area network (data bus) low
- CAN-L Controller area network (data bus) low
- B54 Crankshaft position (CKP) sensor
- S79 Cruise control master switch
- S80 Cruise control selector switch
- X1 Data link connector (DLC)
- A130 Diagnostic module
- A35 Engine control module (ECM)
- K46 Engine control relay
- B24 Engine coolant temperature (ECT) sensor
- H63 Engine malfunction indicator lamp (MIL)
- Y104 Evaporative emission (EVAP) canister purge valve
- B131 Exhaust gas temperature sensor
- F2
- F5
- F7
- F10
- F13
- F28
- F29
- F32
- F34
- F43
- M12 Fuel pump
- K20 Fuel pump relay
- X900-II Fuse box/relay plate, engine bay 2
- X901-I Fuse box/relay plate, fascia 1
- X901-II Fuse box/relay plate, fascia 2
- B72-I Heated oxygen sensor (HO2S) 1
- B72-II Heated oxygen sensor (HO2S) 2
- A52 Ignition amplifier
- A52 Ignition amplifier
- A52 Ignition amplifier
- A52 Ignition amplifier
- T1-I Ignition coil 1
- T1-II Ignition coil 2
- T1-III Ignition coil 3
- T1-IV Ignition coil 4
- 15 Ignition switch - ignition ON
- 50 Ignition switch - start signal
- A162 Immobilizer control module
- Y3-I Injector 1

- Y3-II Injector 2
- Y3-III Injector 3
- Y3-IV Injector 4
- A75 Instrumentation control module
- A5 Instrument panel
- B25 Intake air temperature (IAT) sensor
- B69-I Knock sensor (KS) 1
- B69-II Knock sensor (KS) 2
- B30 Mass air flow (MAF) sensor
- S231 Power steering pressure (PSP) switch
- M73 Secondary air injection (AIR) pump
- K152 Secondary air injection (AIR) pump relay
- Y111 Secondary air injection (AIR) solenoid
- A198 Supplementary restraint system (SRS) control module
- P7 Tachometer
- H101 Throttle control system warning lamp
- A177 Throttle control unit
- M89 Throttle motor
- B169 Throttle motor position sensor
- B105 Turbocharger (TC) boost pressure sensor
- Y153 Turbocharger (TC) bypass valve
- Y68 Turbocharger (TC) wastegate regulating valve
- P9 Vehicle speedometer
- B33 Vehicle speed sensor (VSS)

	bl = blue		br = brown		dbl = dark blue
	dgn = dark green		el = beige		ge = yellow
	gn = green		gr = grey		nf = clear
	og = orange		rs = pink		rt = red
	sr = silver		sw = black		vi = violet
	ws = white		hbl = light blue		hgn = light green
	rbr = maroon		x = braided cable		y = high tension
	z = non-cable connection				