



ORANGE BC1	WHITE BC2
1 = Brown = Ground for OBD2 connector	1 = NC
2 = NC	2 = White/Black = Ground
3 = NC	3 = White/Lblue = Alternator sense line
4 = Red/Yellow = ?????	4 = Black = Aircon Clutch
5 = Black/red = feed from EFI_Relay 7.5a fused	5 = Black = feed from efi relay 15a fused
6 = Brown/Yellow = SMT ONLY fuse SMT-B 10a	6 = Green/White = SMT ONLY Stop light/brake pedal
7 = Red/lblue = Reverse light blubs	7 = Black = Starter Solenoid
8 = Black/red = feed from IG_ON2 relay	8 = White = SMT ONLY Power from relat
9 = Red/Black = Alternator & Rev switch 12v feed	9 = White/Red = Aircon clutch reed switch
10 = Black = SMT ONLY fuse SMT-IG 10a	10 = black/red = feed from IG_ON2 relay

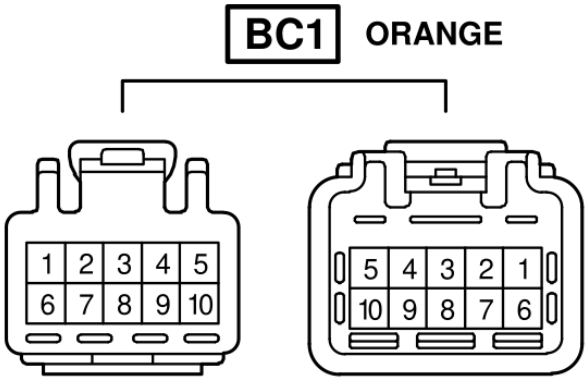

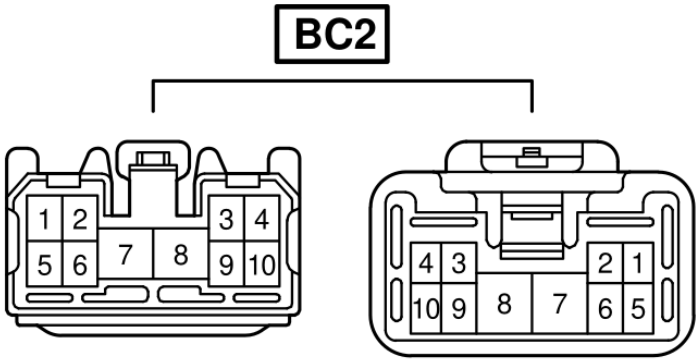

E2		E3	
A01	BATT Permanent 12v Feed from EFI1 15a Fuse	B03	CF (fan 1)
A03	FC (fuel pump relay)	B04	FAN (fan 2)
A06	MPX2 (bean cluster)	B06	STP (brake light switch)
A08	IGSW Ignition key switched 12v from IG2 Relay	B10	MPX1 (bean cluster)
A11	SIL (k line obd)	B19	PSCT EFI (ehps sleep)
A15	W (warning light)	B21	MREL (main relay needs 12v)
A16	B+ Feed from EFI Main Relay / EFI1 15a Fuse	B22	SPD (cluster)
		B27	TACH (cluster)

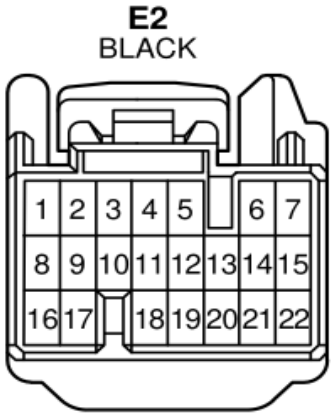

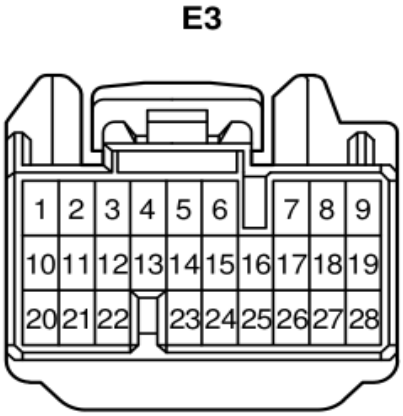

ThreepotMR2's super engine conversion wiring cheat sheet
All you need to know to connect any engine swap to a
Toyota Mk3 MR2 ZZW30 Roadster / Spyder