

On the Printer Port control panel, you may (very rarely) need to set Baud to something other than "9600" if you've hooked up a printer other than a standard Apple printer. The "Add LF after CR" checkbox is also one to keep an eye on—if your printer double-spaces everything, try turning it off. If your printer prints everything on one line, try turning it on.

The Modem Port control panel will hardly ever need to be changed, because most modem programs set these parameters for you automatically. You don't need to set the Baud to "2400" if you have a 2400 baud modem; your telecommunications package will handle this. (The exception is when you're using the built-in modem firmware to telecommunicate; hardly anyone ever does this, but if you do, you already know what all these settings do anyway.)

Note!

The America Online software requires nonstandard settings for both the Printer Port and the Modem Port. It's the only software we know of that does, and the manual for the software tells you how the ports need to be set.

If you plan to attach a modem to the Printer Port, or a printer to the Modem Port, you'll first need to use the Slots control panel to tell the IIGS that the appropriate slot should be connected as the right kind of port. Then open both the Modem and Printer Port control panels (as we've done in Figure 9F) so that you can easily set the parameters of one to match the other.

Monitor

The Monitor control panel (Figure 9G) tells the IIGS what kind of monitor is attached to your computer and the various attributes of that monitor. As usual, the default (or factory-normal) settings are displayed in italic type. The pop-up menus are:

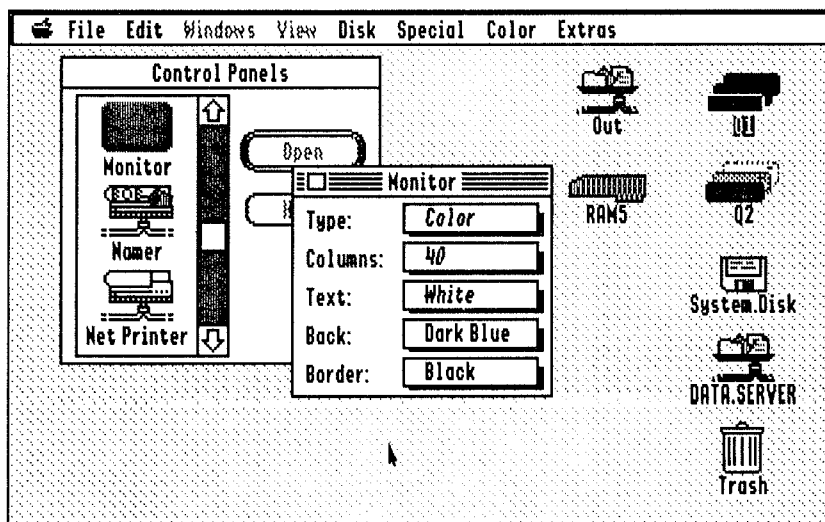


Figure 9G—Monitor Control Panel