

- *Type:* If you have an RGB monitor, leave this set to "Color." If you have a monochrome (green or amber) monitor, set it to "Monochrome." You may occasionally find it useful to switch this setting if the screen is unreadable in one mode or the other. (If you have an RGB monitor, this setting only makes a difference in one place—the double-hi-res graphics mode, used by Publish It! and a few other programs.)
- *Columns:* Controls the number of columns the computer reverts to after a reset (or at power-up). We strongly recommend leaving this item set to "40." This does not mean that 80-column programs (like AppleWorks) won't work—they will.
- *Text:* Selects the color of the text.
- *Back:* Selects the color of the background. Naturally, this can't be the same color as the Text color.
- *Border:* Selects the color of the border.

RAM

The RAM Control Panel (Figure 9G) allows you to set the size of your RAM Disk and cache. In addition, it displays the same kind of information on memory usage as the Finder's "About the Finder" window and the Memory Bar NDA included with the Bonus Pack.

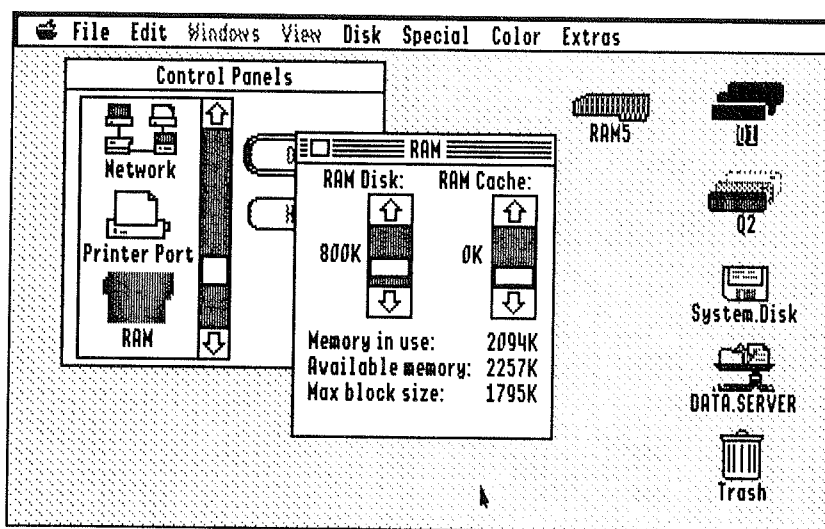


Figure 9H—RAM Control Panel

The RAM Disk is a IIGS feature that acts as a very fast, but volatile, disk drive. "Volatile" means that the contents of the RAM Disk vanish when the power is turned off. By setting the RAM Disk to 800K (if you have enough free memory to do so), you can perform a fast disk-to-disk copy of the System Disk (or any disk you use a lot) when you first start the system, then restart from the RAM Disk for accelerated access.