



Trial Version Manual

Release 2.0

TiberLAB srl

April 1, 2011

CONTENTS

I	Getting Started	1
1	Installation instructions	3
1.1	Prerequisites	3
1.2	Windows installation procedure	3
1.3	Linux installation procedure	4
1.4	Quick start guide	4
1.5	Bug reports / Feedback	5
2	Input for TiberCAD	7
2.1	Description of Input file structure	7
2.2	Device section	8
2.3	Modules	10
2.4	Simulation section	15
2.5	Output description	16
2.6	Example of Input file	17
3	Elasticity	23
3.1	Abstract	23
3.2	Mini theoretical intro	23
3.3	Example	23
4	Drift Diffusion	27
4.1	Step 1 - Modeling the device	27
4.2	Step 2 - Meshing the device	29
4.3	Step 3 - TiberCAD Input file	30
4.4	Step 4 - Run TiberCAD	33
4.5	Output	33
5	Thermal	35
5.1	Introduction	35
5.2	Boundary conditions	36
5.3	Heat sources	37

6	Quantum EFA calculations	39
6.1	Module efaschroedinger	39
6.2	Module quantumdispersion	41
6.3	Module quantumdensity	42
6.4	Module opticskp	43
6.5	Module opticalspectrum	44
7	Simulation Dye Solar Cells	47
7.1	Device	49
7.2	Physics	49
7.3	Solver	50
7.4	Output	51
II	Glossary	53
	Bibliography	109
	Index	111

Part I

Getting Started

INSTALLATION INSTRUCTIONS

In the following, VERSION denotes the version number of the TIBERCAD release you downloaded and INSTALLPATH denotes the directory where TIBERCAD gets installed. Version 2.3.0 of **GMSH** (<http://www.geuz.org/gmsh>) will be installed together with TIBERCAD. For the Linux version of GMSH you need OpenGL libraries installed on your system.

1.1 Prerequisites

Get the installer package for your OS/architecture from <http://www.tibercad.org> or by contacting support@tibercad.org. Table 1 lists the packages available for download. To run TIBERCAD you will also need a license file that you will have to copy into the installation directory of TIBERCAD.

In the Windows version, some graphical features such as graphical convergence monitors are only available if an X Window server is installed and running.

1.2 Windows installation procedure

To install TIBERCAD in Windows, run the setup program `tibercad-version_setup.exe`.

During the installation you can choose the installation directory. After finishing installation, copy your license file (*tibercad.lic*) into the

license subdirectory of the TIBERCAD

installation directory (INSTALLPATH/license), without changing its filename.

Installer	
installer package name	Target architecture
tibercad-version-setup.exe	Windows 32-bit
tibercad-version-installer.bin	Linux 32-bit self-extracting installer

Table 1.1: Installer Package

1.3 Linux installation procedure

To install TIBERCAD in Linux, download and run the self-extracting installer `tibercad-version_installer.bin` and follow the installation instructions.

After installation, copy your license file (*tibercad.lic*) into the “license” subdirectory of the TIBERCAD installation directory (INSTALLPATH/license) without changing the filename. You can also provide the license file during installation.

The standard method to launch TIBERCAD is by means of a shell script that is installed alongside the TiberCAD executable. It takes care of setting all necessary environment variables.

If for some reason you have to run the executable directly, remember to set TIBERCADROOT to the TiberCAD installation directory (INSTALLPATH).

1.4 Quick start guide

In the “examples” subdirectory you can find several examples ready to run. They are the same as the tutorials on <http://www.tibercad.org/documentation/tutorial/list>.

1.4.1 Windows

Open Windows Explorer and go to the TIBERCAD installation directory. If you have write permission in the installation directory, you can browse to an examples directory and start the simulation by double clicking the input file, e.g. `bulk.tib` in *Step 1 - Modeling the device*. If not, copy the whole directory to a location in your personal area and run the examples from there.

If you cannot run TIBERCAD by double clicking an input file (**.tib*), then the input files are probably not correctly associated with the TIBERCAD executable. In this case, try to establish the association by right-clicking the input file, choosing `open with...`

```
>> Choose Program... >> Browse... , browsing to the TIBERCAD installation directory
```

and choosing the TIBERCAD executable, `tibercad.exe`. A directory containing the simulation results will be created with the name provided in the input file.

1.4.2 Linux

After the correct installation of TIBERCAD you should be able to run TIBERCAD from the command line using the command `tibercad`. If not, you probably have to add the `bin` subdirectory of the TIBERCAD installation directory to your `PATH` environment variable or start the TIBERCAD executable using the absolute path (`INSTALLPATH/bin/tibercad`).

Copy the directory of the example you want to run, e.g. `bulk Si`, to your home directory or any place you have write permissions for. Change to the newly created directory and run TIBERCAD by (assuming *Step 1 - Modeling the device*)

```
$ tibercad bulk.tib
```

A directory containing the simulation results will be created with the name provided in the input file.

1.5 Bug reports / Feedback

Please send bug reports, feedback or suggestions to support@tibercad.org. When submitting bug reports, please always include the full version number of TIBERCAD you are running. The full version number appears in the first line of output when running the program:

```
$ tibercad  
TiberCAD version 1.0.0-961  
Usage: tibercad <inputfile>
```


INPUT FOR TIBERCAD

Input for TIBERCAD is composed by an input file e.g. “input.tib” and a mesh file generated by a mesher software: as for now, mesh files from GMSH (*.msh, v.1 and v.2.0) and from ISE-TCAD (*.grd) are supported. Be sure that the material files are in the correct directory . To run the program, type: **tibercad** *input_file_name*

2.1 Description of Input file structure

A valid input file for TIBERCAD is a text file with the structure described in the following. In the whole input file, everything following a “#” is considered as a comment and is disregarded; blank lines can be present anywhere and are disregarded too. Input file is composed by several **blocks** :

A block is enclosed between “{” and “}” brackets and may include one or more blocks. Each block has a header made of one or two keywords. Each block may contain zero or any number of **parameter assignments** in the form:

” *tagname* = *tagvalue*” , where

- “*tagname*” is a string
- “*tagvalue*” is a single numerical or string item or a list of items between “(” and “)”

parenthesis and separated by commas. e.g. (*cathode*, *anode*)

Format is free for the parameter assignments, provided that they are separated by spaces. Everything which follows a “#” is considered as a comment and is disregarded. For example:

```
electron_mobility field_dependent
{
  region = buffer
  # type = doping_dependent
  low_field_model = constant
}
```

Here and in the whole input file a string item can include a combination of characters, special characters and numbers, except spaces; if a space is found, the string item is taken as terminated.

The input file is composed by the following main classes of blocks:

Device, Module, Simulation

which will be described in the following.

2.2 Device section

```
Device hemt1
{
  meshfile = hemt_msh.grd
  Region buffer
  {
    .....
    Doping
    {
      .....
    }
  }
  Region barrier_1
  {
    .....
  }
  .....
}
```

Device section includes the geometrical description of the device to be simulated; an optional *device name* can be associated to the Device object, e.g. *Device hemt1* .

In Device section, two kinds of block can be present: the Region block and the Cluster

block. Outside of these blocks, general options common to all the device can be defined. The most important is the mesh file definition:

meshfile : name of mesh file. N.B.: the extension is mandatory! (*.grd* for ISE-TCAD, *.msh* for GMSH mesh file v.1 and v.2.0)

The definition of the mesh file associated to this simulation is compulsory:

```
meshfile = hemt_msh.grd
```

The **Region** blocks contain the description of the device in continuous media approach; the **Cluster** blocks define each a group of regions (mesh regions) even with different physical properties, but to be treated together somewhere in the simulation (e.g. quantum calculation). In this way it is possible to refer to the set of these regions simply by the **Cluster** name.

Each **Region** block must be preceded by the keyword “**Region**” , followed by the (single-word) name of the **TiberCAD Region** . The name of the **TiberCAD Region** can coincide with the name of a mesh region, as defined during the modeling of the device; in this case, if the keyword *mesh_regions* is absent, the **TiberCAD Region** will be associated to the mesh region identified by the name assigned to the **TiberCAD Region** . Otherwise, the **TiberCAD Region** will be associated to the mesh regions specified by the keyword *mesh_regions* .

```
Region QWell
{
  mesh_regions = (well1,well2)
  structure = wz
  y-growth-direction = (1,0,-1,0)
  z-growth-direction = (-1,2,-1,0)
  x-growth-direction = (0,0,0,1)
  material = GaN
  Doping
  {
    density = 1e17
    type = donor
    level = 0.025
  }
}
```

Here are the description of the available keywords for a **Region** block.

material (mandatory): name of the material associated to the present region, e.g Si;

it may be a ternary alloy, e.g AlGaAs, in this case keyword *x* described in the following has to be present.

x : alloy concentration, expressed as the molar fraction of the first component of the alloy; e.g. to express an alloy $Al_xGa_{1-x}As$ with molar fraction $x = 0.2$, that is $Al_{0.2}Ga_{0.8}As$, we select **AlGaAs** for the keyword material, and 0.2 for the keyword *x*, thus we write $x = 0.2$.

mesh_regions : (a list of) region physical name(s) as specified in the meshing program.

structure : crystal structure (wz = wurtzite, zb = zincblend)

x-growth-direction, **y-growth-direction**,
z-growth-direction : Bravais vectors with Miller

indexes for wurtzite crystal (4 element vectors) or zincblende crystal (3 element vectors).



A common crystal structure and growth directions definition may be applied to all the Regions of the Device, just by defining them everywhere in the Device block, but outside any specific Region block.

Subblock doping, with the keywords:

```
density : doping concentration [cm-3]
type : donor or acceptor
level : energy level of the dopant [eV]
```

```
Doping
{
  density = 1e21
  type = donor
  level = 0.026
}
```

Each **Cluster** block must be preceded by the keyword “**Cluster**” , followed by the (single-word) name of the **Cluster** .

```
Cluster Quantum_1
{
  regions = (well, barrier1, barrier2)
}
```

regions (mandatory): list of physical regions as specified in the meshing program, or TIBERCAD region names to be grouped in the cluster.

Regions and **Clusters** represent the macroscopical description of the device or structure

to be simulated in **TiberCAD** . In the rest of the input file, the physical regions associated to the **Modules** will be indicated by means of the **TiberCAD Region** and **Cluster** names.

2.3 Modules

```
Module driftdiffusion
{
  name = dd
}
```

```

#regions = all
statistics = FermiDirac
strain_simulation = macrostrain
plot = (Ec, Ev, Eg, eQFermi, hQFermi, eDensity, hDensity, Polarization,
eCurrentDensity, hCurrentDensity, CurrentDensity, ContactCurrents,
ElPotential, ElField, eMobility, hMobility, eConductivity, hConductivity)
.....
Solver
{
  nonlinear_solver = tiber
  nonlin_max_it = 15
  nonlin_rel_tol = 1e-12
  #nonlin_abs_tol = 1e-15
  nonlin_step_tol = 1e-5
}
Physics
{
  polarization (piezo, pyro) {}
  mobility
  {
    type = field_dependent
    low_field_model = doping_dependent
  }
}
Contact cathode
{
  voltage = $Vd
}
Contact anode
{
  voltage = 0.0
}
}

```

One or more module-blocks may be present: each module-block must be preceded by the keyword **“Module”**, followed by the (single-word) module name. This must be the name of one of the TIBERCAD modules. Here are the Modules implemented until now:

`driftdiffusion` : Poisson-driftdiffusion transport of electrons and holes

`thermal` : Heat balance simulation

`excitontransport` : Exciton transport model

`macrostrain` : Calculation of Elastic deformations in heterostructures

`efaschroedinger` : Envelop Function Approximation (EFA) solution of single particle

Schroedinger equation for electrons and holes

`quantumdensity` : Calculation of quantum density of electrons and holes.

`quantumdispersion` : Dispersion of quantized states in k space

`opticskp` : Optical properties (optical kp matrix elements)

`opticalspectrum` : Emission spectrum (with k-space integration)

`Sweep` : Parameterized execution of a module simulation (e.g. for the calculation of output current characteristics)

`Selfconsistent` : coupled calculations of different simulation modules.

`DSC` : Simulation of a DSC solar cell1.

Each module-block usually contains a list of general options, such as plot and others specific to each module. Then, two main blocks define the Physics and the Solver models and parameters for this module.

Solver contains the solver parameters; depending on the Module, it can contain a `LinearSolver` definition subblock.

Physics usually contains the definition of the physical models used in the simulation.

For example, for `driftdiffusion` module, recombination, electron mobility, trap, polarization and so on. A particular model is the Boundary model, which has an alias `Contact` for `driftdiffusion` module. The declaration of these models obey to the following syntax:

model_keyword type_specifier <block>

where *model_keyword* is the name of the physical model to be declared (e.g. trap model) and **type_specifier** is the name of a particular one among the available descriptions for that model. For example, for a trap model of **type** *acceptor*

```
trap acceptor
{
  region = buffer
  Nt = 7e16
  Et = 0.5
  reference = cb
}
```

An alternative multiple declaration is possible if no parameters, beyond default, are declared:

model_keyword (type specifier1, type specifier2,...)

```
recombination (srh, direct, auger) { }
```

In this example, several recombination models are defined (srh, auger, direct) each one with default parameters. For a detailed description of the models, please refer to the reference guide. Two special Modules are: the Sweep Module and the Selfconsistent Module

2.3.1 Module sweep

```
Module sweep
{
  name = sweep_drain
  solve = driftdiffusion
  variable = $Vd
  start = 0.0
  stop = 2.0
  steps = 20
  plot_data = true
}
Module sweep
{
  name = sweep_gate
  solve = sweep_drain
  variable = $Vg
  start = -0.1
  stop = 1.0
  steps = 11
}
```

Each sweep Module defines a set of calculations applied to a boundary region (e.g. a set of bias values to be assigned to a drain contact of a MOSFET for the calculation of an output drain IV

characteristic), in this Guide referred to as sweep calculation.

The following keywords are defined for this feature:

`variable` : name of the variable to which the sweep is applied:

E.g.: `variable = $Vg`

indicates that the values are applied to the variable `Vg`, which is a quantity defined in a **Contact** definition

`start, stop, steps` : sweep starts from start value, is repeated steps times and stops

in stop

`solve` : name of the simulation (module) associated to the sweep calculation; it may

be the name of another sweep defined in the same block.

`plotvariable` (obsolete): specify the integrated quantity to be calculated during the

sweep and that will be shown in the output file `sweep_modelname_sweepvariable.dat`, eg. `sweep driftdiffusion Vb.dat` for a sweep of current calculation on the variable `Vb` (typically a contact voltage).

`plot_data` : default is false; if it is set to true, then output data will be written for

each step of the sweep calculation, otherwise just the results for the final step will be present in the output.

Once a *sweep* calculation has been defined, it is treated as a special case of simulation and may be executed as an usual simulation: by adding it in the solve list, e.g. `solve = sweep_drain`.

2.3.2 Module selfconsistent

In this Module it is possible to define a self-consistent calculation based on two different simulation modules (e.g. driftdiffusion and excitontransport).

```
Module selfconsistent
{
  name = sc_all
  solve = (tb, dens_el, dens_hl, dd)
  max_iterations = 5
  abs_tolerance = 1e-3
  rel_tolerance = 1e-6
}
```

In **solve** the list of simulations to be performed self-consistently is specified. Now it is possible to execute the specified simulations in self consistent way, by using the **selfconsistent** keyword like a simulation name, in any **solve** assignment, e.g. `solve = selfconsistent` in **Simulation** section, or even in a **sweep** section.

2.4 Simulation section

In this block one can specify several general parameters and settings for the actual calculation to be run, such as the temperature, the process-flow of simulation, etc.

`searchpath` : path for material files

`mesh units` : units of measurements used in the meshing (relative to meters): e.g.,

10^{-6} for μm

`dimension` : dimension of simulation (1,2,3)

`temperature` : temperature of the system [K]

`solve` : list of simulations to be executed, in the order of execution; if the list contains

“sweep”, a sweep is performed as specified in sweep block in the Solver section.

`solve = (strain,driftdiffusion, quantum_electrons, quantum_holes)`

`resultpath` : path for output directory

`output format` : format of the output data: *gmw* for **GMV** , *ise* for **Tecplot** , *grace* for

xmgr (ascii data column type), *vtk* for **Paraview** .

`plot` : list of output variables which are calculated and available in output files. It

may be overridden by defining list specific to one or more modules.

2.5 Output description

At the end of the execution, the program will write the results of the simulation in the directory specified by `resultpath` , with the format specified by `output format`. The output variables are specified in a list `plot`, in each Module.

TiberCAD output is divided in two classes: **mesh-based** and **mesh-independent** quantities.

Mesh-based quantities are all the quantities associated with the nodes of the mesh, such as Fermi level, electron and hole density, conduction and valence band, etc., together with all the quantities associated with the elements of the mesh, such as current density.

The output values for these quantities are reported in the files `simname msh.ext`, where *simname* is the simulation module used for the calculations and `ext` is the extension of the chosen file format, e.g. `vtu` for paraview output.

`strain_msh.vtu`

In the case a sweep calculation is performed and the `plot data` keyword is set to true, the output files are of the kind `simname sweepvariable step value msh.ext`, where

`sweepvariable` is the variable with respect to which the sweep is performed (e.g. `gate`

voltage) and `step value` is the value of this variable at that step; e.g the result at the step *Vbias* = 1.1 will be found in the file:

```
dd_Vbias_1.1_msh.vtu
```

mesh-independent quantities are the quantities which are not associated to the

mesh, for example current at the contacts of a diode or quantized energy levels in a quantum well. These **mesh-independent** quantities are displayed in separated files, with the format `simname.ext`, e.g `quantum_electrons.dat`, where `simname` is the name of the model (simulation) associated to the results. If a sweep is performed, the output file gets the format `sweep_name simname.ext`, where *sweep_name* is the name of the sweep performed, for example

```
sweep_drain_driftdiffusion.dat
```

Inside the file, output values for all the steps of calculation are shown.

2.6 Example of Input file

Here is an example of the input file template:

```
Device hemt1
{
  meshfile = hemt_msh.grd
  mesh_units = 1e-6
  material = GaN
  y-growth-direction = (0,0,0,1)
  z-growth-direction = (1,0,-1,0)
  x-growth-direction = (-1,2,-1,0)
  Region barrier
  {
    material = AlGaN
    x = 0.14
  }
  Region barrier_doped
  {
    mesh_regions = (barrier_dop_s, barrier_dop_d)
    material = AlGaN
    x = 0.14
    Doping
    {
      density = 1e21
      type = donor
      level = 0.026
    }
  }
}
```

```
    }
  }
  Region buffer { }

  Region buffer_doped
  {
    mesh_regions = (buffer_dop_s, buffer_dop_d)
    Doping
    {
      density = 1e21
      type = donor
      level = 0.026
    }
  }
  Region cap
  {
    Doping
    {
      density = 5e18
      type = donor
      level = 0.026
    }
  }
  Region cap_doped
  {
    mesh_regions = (cap_dop_s, cap_dop_d)
    Doping
    {
      density = 1e21
      type = donor
      level = 0.026
    }
  }
  Region passivation
  {
    mesh_regions = (passiv1, passiv2, passiv3, passiv4)
    material = SiN
  }
  Cluster semiconductor
  {
    regions = -passivation
  }
}
Module driftdiffusion
{
  name = dd
  regions = all
}
```

```

coupling = electrons
save_state = true
#load_state = output_Nt7e16_out/dd_Vd_50.tsv
statistics = FermiDirac
strain_simulation = macrostrain
plot = (Ec, Ev, Eg, eQFermi, hQFermi, eDensity, hDensity, Polarization,
        eCurrentDensity, hCurrentDensity, CurrentDensity, ContactCurrents,
        ElPotential, ElField, eMobility, hMobility, eConductivity, hConductivity)

NonlinearSolver linesearch
{
  # type = ls
  relative_tolerance = 1e-15
  step_tolerance = 5e-3
  max_iterations = 15
  LinearSolver petsc
  {
    ksp_type = pconly
    preconditioner = lu
  }
}
Physics
{
  recombination (srh, direct, auger) { }
  electron_mobility field_dependent
  {
    region = buffer
    low_field_model = constant
  }
  electron_mobility doping_dependent
  {
    region = (barrier, barrier_doped, cap, cap_doped, buffer_doped)
  }
  trap fixed_charge
  {
    region = GaN/SiN
    Nt = 2.74e13
  }
  trap acceptor
  {
    region = buffer
    Nt = 7e16
    Et = 0.5
    reference = cb
  }
  polarization (piezo, pyro) { }
}

```

```
Contact drain
{
    voltage = @Vd
}
Contact source
{
    voltage = 0.0
}
Contact gate
{
    regions = (gate1, gate2)
    type = schottky
    work_function = 1.5272
    voltage = @Vg
}
}

Module macrostrain
{
    regions = -passivation # all the device except Region "passivation"
    plot = all
    LinearSolver # default
    {
        tolerance = 1e-7
        max_iterations = 10000
        #xmonitor = true
        pc = composite
    }
    Physics
    {
        Boundary substrate
        {
            regions = bottom
            material = GaN
            y-growth-direction = (0,0,0,1)
            z-growth-direction = (1,0,-1,0)
            x-growth-direction = (-1,2,-1,0)
        }

        Boundary extended_material
        {
            regions = side
        }
    }
}
```

Module sweep

```
{
  name = sweep_g
  variable = Vg
  solve = sweep_d
  start = -1
  stop = 1.0
  steps = 2
  max_step = 0.25
  min_step = 1e-4
  #plot_data = true
}
```

Module sweep

```
{
  name = sweep_d
  variable = Vd
  solve = driftddiffusion
  start = 0.0
  stop = 50.0
  steps = 200
  min_step = 1e-4
  plot_data = true
}
```

Module selfconsistent

```
{
  name = relaxation
  solve = (macrostrain, driftddiffusion)
  absolute_tolerance = 1e-3
  relative_tolerance = 1e-5
}
```

Simulation

```
{
  temperature = 300
  verbose = 3
  solve = (macrostrain, dd, sweep_g)
  logfile = output_Nt5e16_Al0.215_SiN/hemt.log
  # these parameters can be defined in modules, too
  resultpath = output_Nt5e16_Al0.215_SiN
  output_format = vtk
}
```

```
.. _ElasticityGetting:
```


ELASTICITY

3.1 Abstract

Elasticity is a Finite Elements solver for mechanical equilibrium problems. It brings features typically developed for structural stability solvers into device modeling. The coupled treatment of the electro-mechanical problem within a unique framework results very useful to explore for multidisciplinary ideas.

3.2 Mini theoretical intro

Assuming a small displacement, Elasticity elasticity computed the strain by solving the equation

$$\frac{\partial}{\partial x_j} C_{ijkl} \frac{\partial u_l}{\partial x_k} = f_i$$

where C is the stiffness constant and f is the total external body force. The latter may include several contribution such as the converse piezoelectric effect the thermal expansion and a lattice mismatch induced strain. The latter, described in the example below, occurs when an interface is created between two materials with different lattice constants. Let ϵ^{LM} be the lattice mismatch strain, then the effective body force reads as :

$$f_i = -\frac{\partial}{\partial x_j} C_{ijkl} \epsilon_{lk}^{LM}$$

3.3 Example

In the following we will compute the strain induced by the lattice mismatch in a system comprising a layer of GaN between two contacts of $Al_xGa_{1-x}N$. Once the mesh is created with gmsh (dis-

tributed along TiberCAD) we may start to build the input file. First, we have to insert the region section

```
Device
{
  dimension = 3
  meshfile = mesh.msh
  mesh_units = 1e-9
  material = AlGaN
  x = 0.2
  x-growth-direction = (-1,0,1,0)
  y-growth-direction = (-1,2,-1,0)
  z-growth-direction = (0,0,0,1)
  Region Well {material = GaN}
}
```



All the options included in this section, such as the material, axis growth and alloy concentration, apply for the whole structure. If we want to specify a region with different properties, we may use the keyword **Region** and refer to a region name, as specified in the mesh file.

The second part of the input file is devoted to the module declaration

```
Module elasticity
{
  Physics
  {
    BodyForceLattice_mismatch
    {
      x-growth-direction = (-1,0,1,0)
      y-growth-direction = (-1,2,-1,0)
      z-growth-direction = (0,0,0,1)
      reference_material = AlGaN
      x = 0.2
    }
    Contact Base {type = clamp}
  }
}
```

In physics we declare the physical models to be applied to our device. In our case, with **BodyForceLattice_mismatch** we are adding a body force into the system, induced by the lattice mismatch with the reference lattice which in this case is $Al_{0.2}Ga_{0.8}N$. In order to avoid a free standing device we may want to freeze a surface. With **Boundary Clamp** we fix, in this case, the region **Base**.

The third part is simply **Simulation {solve = elasticity}** where the default name *elasticity* is used. By default, files for 3D system are written in **vtu** which can be read from Paraview. Output data about strain are shown below.

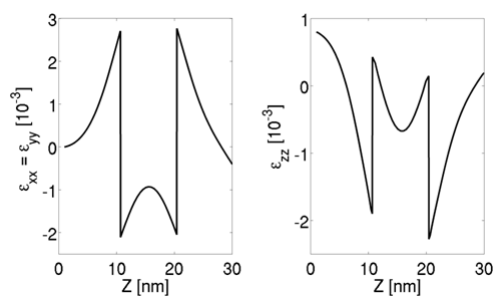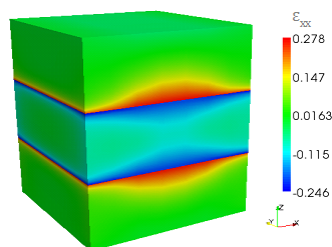

DRIFT DIFFUSION

In this example we will see a very simple TiberCAD simulation:

1D calculation of Poisson and drift-diffusion for a bulk Silicon sample.

The following files should be in your working directory:

`bulk.tib_` : **TiberCAD** input file

`bulk.msh_` : mesh file

The mesh file can be obtained from the following GMSH geo file : [bulk.geo](#)

This is the summary of the Sections of this Tutorial :

- *Step 1 - Modeling the device*
- *Step 2 - Meshing the device*
- *Step 3 - TiberCAD Input file*
- *Step 4 - Run TiberCAD*
- *Output*

4.1 Step 1 - Modeling the device

As a first step, we have to model the device. To do so, you can use DEVISE module of ISE-TCAD 9.5 software package or GMSH program.

Here we'll see in details the procedure for GMSH.

There are two possible ways to use GMSH:

Interactive, using the graphical interface Using a script file In the following we'll see how to write a basic GMSH script (bulk.geo); for any details please refer to GMSH manual GMSH (<http://geuz.org/gmsh/>).



: In a **1D** simulation it is assumed that the geometrical model is restricted to the **x axis** . In a **2D** simulation it is assumed that the geometrical model is restricted to the **xy-plane (z=0)** Any other geometrical orientation could give unpredictable results

In a GMSH script, several variables can be defined and given a value in this way:

```
L = 1  
d = 0.01
```

these are valid GMSH variables: L is just the length of the Si sample; d is the value of a *characteristic mesh length* (see below).

Definition of geometrical entities **Points**

```
Point(1) = {0, 0, 0, d}  
Point(2) = {L, 0, 0, d}
```

The first three expressions inside the braces on the right hand side give the three X, Y and Z **coordinates** of the point; the last expression (**d**) sets the **characteristic mesh length** at that point, that is the “*size*” of a mesh element, defined as the length of the segment for a line segment, the radius of the circumscribed circle for a triangle and the radius of the circumscribed sphere for a tetrahedron.

Thus, the smaller is the value of d, the greater is the mesh density close to that point.

The size of the mesh elements will then be computed in GMSH by linearly interpolating these characteristic lengths in the whole mesh.


Definition of a geometrical entity **Line**

```
Line(1) = {1, 2}
```

The two expressions inside the braces on the right hand side give the identification numbers of the start and end points of the line.

Definition of the physical entity **Physical Line bulk**

```
Physical Line("bulk") = {1}
```

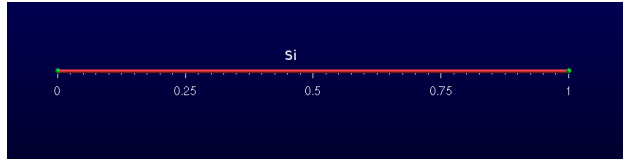

The expression(s) inside the braces on the right hand side give the identification numbers of all the **geometrical lines** that need to be grouped inside the *physical line* .

In this way, in general, physical regions are created which associate together geometrical regions, and then the related mesh elements, which share some common physical properties. It's only these physical regions which can be referred to outside GMSH. In TiberCAD, this is done by associating one or more physical regions to a **TiberCAD region** through the keyword *mesh_regions* (see in the following).

Definition of two physical entities Physical Point:

```
Physical Point ("anode2")    = {1}
Physical Point ("cathode")   = {2}
```



In general, in a nD simulation, **(n-1)D** physical regions (points in 1D, lines in 2D, surfaces in 3D) are used by TiberCAD to impose the required boundary conditions.

Each $(n-1)D$ physical region defined in this way in GMSH will be associated in TiberCAD to a boundary condition region, through the keyword **BC_reg_num** . Thus, in this case, Physical points Anode and Cathode will be associated respectively to two **Contact** regions (see in the following).

4.2 Step 2 - Meshing the device

The *.geo* script file with the geometrical description can be run in GMSH, to display the modelled device and to mesh it through the GMSH graphical interface. Alternatively, a *non-interactive* mode is also available in GMSH, without graphical user interface.

For example, to mesh this 1D tutorial in non-interactive mode, just type:



```
gmsht bulk.geo -1 -o bulk.msh
```

where **bulk.geo** is the geometrical description of the device with GMSH syntax:

-1 means *1D mesh generation*

some command line options are:

-1 , -2, -3 to perform *1D, 2D or 3D* mesh generation,

-o **mesh_file.msh** to specify the name of the mesh file to be generated

In this way, a .msh has been generated and is ready to be read in TiberCAD.

4.3 Step 3 - TiberCAD Input file

Now we have to write down the **TiberCAD input file** (**bulk.tib**). For a detailed reference see the user guide (Input file) and Getting started 1

4.3.1 Description of Device Regions

First, we have to list all the **TiberCAD Regions** present in our Device: a TiberCAD Region is usually a section of the device featuring the same material and possibly the same doping.

Device

```
{
  meshfile = bulk.msh

  Region bulk
  {
    material = Si

    Doping
    {
      Nd = 1e16
      type = donor
    }
  }
}
```

The TiberCAD Region bulk is made of Silicon and n-doped with a concentration $1 \times 10^{16} \text{cm}^{-3}$.

Through the keyword **Region** , one GMSH physical region (Physical Lines in 1D, Physical Surfaces in 2D, Physical Volumes in 3D) previously defined in the GMSH mesh ([Step 1 - Modeling the device](#)), can be associated to the present TiberCAD Region, in this way:

```
Region GMSH_physical_region_name
```

In this case, the Physical Line bulk is associated to the TiberCAD Region bulk.

Alternatively, through the optional keyword **mesh_regions** , one or more GMSH physical regions can be associated to a single TiberCAD Region .

4.3.2 Definition of Simulation

Now we define the **Simulation** `driftdiffusion_1`: it belongs to the class **driftdiffusion**

```
Module driftdiffusion
{
  name = driftdiffusion # this is the default name

  regions = all          # 'all' is the default

  # what we want to plot
  plot = (Ec, Ev, eQFermi, hQFermi, ContactCurrent)
  ....
```

The TiberCAD simulation *driftdiffusion_1* , belonging to the model `driftdiffusion`, will be applied to the whole device structure (`regions = all`)

4.3.3 Definition of Boundary Conditions

The anode and cathode contacts of our 1D Si sample are defined as **Boundary conditions regions** (`Contact anode`, `Contact cathode`) in the following way:

```
Module driftdiffusion
{
  name = driftdiffusion

  regions = all

  plot = (Ec, Ev, eQFermi, hQFermi, ContactCurrent)

  Contact anode { voltage = $Vb }
  Contact cathode { }

}
```

Through the keyword `Contact` , one (n-1) -dimension GMSH physical region (Physical Point in 1D, Physical Line in 2D, Physical Surface in 3D) previously defined in the GMSH mesh ([Step 1 - Modeling the device](#)), can be associated to the present TiberCAD Contact, in this way:

```
  Contact GMSH_physical_region_name
```

In this case, the *Physical Point* **anode** is associated to the TiberCAD Contact anode and the Physical Point cathode is associated to the TiberCAD Contact cathode.

Both contacts are defined as *ohmic* , cathode is assigned a fixed `voltage = 0.0` , while anode voltage is given by the value of the variable *Vb*

```
``voltage = @Vb``
```

4.3.4 Definition of Simulation parameters

Vb is specified in the sweep block, in the Solver section:

```
Module sweep
{
  solve = driftdiffusion
  variable = $Vb
  start = 0.0
  stop = 1
  steps = 10
  plot_data = true
}
```

In this way, the simulation `driftdiffusion_1` is performed for 10 (`steps = 10`) values of the anode voltage (variable = *Vb*), between 0 and 1.

For each step we want to plot the solution variables specified in the `driftdiffusion` module (`plot_data = true`).

4.3.5 Definition of Execution parameters

In the **Simulation** section , we decide *which* simulations to perform and in which *order*; set `solve = sweep` , to execute the sweep which run `driftdiffusion_1` simulation for the specified loop.

```
Simulation
{
  verbose = 2

  solve = sweep

  resultpath = output
  output_format = grace
}
```

Output files with conduction and valence band profiles (plot = *Ec,Ev..*) and all the calculated values of the current at the contacts (*ContactCurrents*) (the IV characteristic) are generated.

To increase the amount of information written to the screen we can vary the verbose level (verbose = 2).

4.4 Step 4 - Run TiberCAD

Now we can run TiberCAD

by double clicking on bulk.tib file (in Windows)

or by command line in linux: `tibercad bulk.tib`

4.5 Output

The generated Output files are:

- `driftdiffusion_materials.dat` : material (mesh) regions, in this case just region 1
- `driftdiffusion_nodal.dat` : nodal quantities (here conduction and valence band)
- `sweep_driftdiffusion_Vb.dat` : integrated current at the two contacts for each sweep step

Attachment Size

- `bulk.tib` 1.16 KB
- `bulk.geo` 181 bytes
- `bulk.msh` 4.49 KB

THERMAL

5.1 Introduction

The steady state heat flux, within the diffusive approach, is given by the Fourier's law, i. e. $J_i = -\kappa_{ij} \frac{\partial T}{\partial x_j}$ where κ is thermal conductivity second-rank tensor (which is assumed temperature independent).

The power balance is ensured by the continuity equation for the thermal flux $\frac{\partial J_i}{\partial x_i} = H$ where H is the total heat source.

Thermal module computes the balance between the heat generated and the heat dissipated. Here we get the temperature profile of a rectangular device with an hotspot in the center.

The device block specifies the material (Silicon) and the physical regions. In this case we have the HotSpot and the Base region

```
Device
{
  material = Si
  Region HotSpot{}
  Region Base{}
}
```

Let's now declare the thermal module. The temperature is fixed at the left and right side of the domain. The hotspot is included only in the HotSpot region

```
Module thermal
{
  Physics
  {
    Contact left
    {
      type = heat_reservoir
      temperature = 300
    }
  }
}
```

```
Contact right
{
  type = heat_reservoir
  temperature = 300
}
HeatSource constant
{
  regions = HotSpot
  H = 1e10
}
}
```

In the simulation region we write which modules should be solved.

```
``Simulation{solve = thermal}``
```

The temperature map is shown below

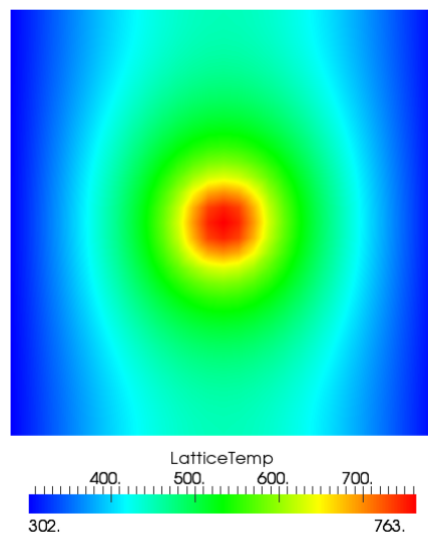


Figure 5.1: Lattice temperature

5.2 Boundary conditions

The boundaries of the thermal simulation domain are set to ideally thermal insulator by default.

Dirichlet boundary conditions can be imposed with the keyword `heat_reservoir`.

Example:

```
Contactheat_reservoir
{
    region = substrate
    temperature = 300
}
```

The surface resistance can be added with the keyword boundary `surface_resistance`. (`r_surf` is in $\text{cm}^2 \text{ W/K}$).

Example:

```
Contactsubstrate
{
    type = surface_resistance
    r_surf = 0.05
    temperature = 300
}
```

5.3 Heat sources

The constant value heat source can be included with `heat_source constant`. The heat source must be in W/cm^3 .

Example:

```
HeatSourceconstant
{
    region = qdot
    H = 1e10
}
```

Heat generated by the Joule's effect is included with `heat_source joule`. The name of the drift-diffusion simulation is given by `dd_simulation`.

Example:

```
HeatSourcejoule
{
    dd_simulation = dd
}
```

```
.. _EFAGetting:
```


QUANTUM EFA CALCULATIONS

In TiberCAD, it is possible to perform quantum calculations in the framework of Envelope Function Approximation (EFA): eigenstates and eigenfunctions of a given system, dispersion of quantum states and particle quantum density can be obtained respectively by means of the following Modules:

- Module `efaschroedinger`
- Module `quantumdispersion`
- Module `quantumdensity`

The optical properties are calculated by the following modules

- Module `opticskp`
- Module `opticalspectrum`

6.1 Module `efaschroedinger`

The EFA calculation of eigenstates and eigenfunctions are performed by the **Module** `efaschroedinger`. A typical example is the following:

```
Module efaschroedinger
{
  particle = el
  poisson_model_name = dd
  strain_model_name = strain # macrostrain
  name = quantum_el
  regions = quantum
  plot = (EigenFunctions, EigenEnergy, EnergyLevels)
  Solver
  {
    number_of_eigenstates = 10 # 30
  }
}
```

```
Physics
{
  model = conduction_band
}
}
```

6.1.1 Module options

The following options influence the behaviour of the Module `efaschroedinger`:

particle = string defines for which particle (electron or hole) Schroedinger equation is solved. Possible values are `el` and `hl`. A different Module `efaschroedinger` has to be defined for each particle to be solved.

poisson_model_name = string defines the name of the simulation (Module `driftdiffusion`) that can provide electric potential

strain_model_name = string defines the name of the simulation (Module `macrostrain`) that can provide elastic strain

regions = string defines the regions associated to this EFA simulation

6.1.2 Solver section

The Solver section of the Module `efaschroedinger` contains the following options:

number_of_eigenstates = integer defines the number of eigenvalues and eigenfunctions to be found.

Dirichlet_bc_everywhere = boolean : if true (default value), Dirichlet boundary

conditions are imposed over all the boundaries of the simulation region

solver = string : defines the solver for the eigenvalue problem, possible values are:

`arnoldi`, `lapack`, `krylovshur`. The default value is **krylovshur**. In the case of the `lapack` solver all the eigenvalues are computed. In the case of `arnoldi` or `krylovshur` solver it is necessary to specify which and how many eigenvalues have to be computed. The idea is that the iterative solver calculates several eigenvalues that are close to a specific number, referred to as the *spectral_shift*

max_iteration_number = integer : maximum number of iteration, used as a stop condition

eigen_solver_tolerance = double : numerical eigensolver tolerance used as a convergence criteria

`spectral_shift = double` :the closest eigenvalues to this value (eV) are found. If not

defined, then it will be calculated internally from the band edges.

`ksp_type = string` : Krylov subspace method type; bcgsl, gmres, cg

`pc_type = string` : preconditioner type: cholesky, jacobi, ilu , composite.

6.1.3 Physics section

`model = string` : possible values are : conduction band , for single conduction band

`model (  $\Gamma$  point ) ; kp for  $\mathbf{k} \cdot \mathbf{p}$  model`

`kp_model = string` : possible values are : 6?6 , 8?8.

6.1.4 Output

The available output variables, to be specified in the plot option, are the following:

- `EigenEnergy` : Eigen energy in eV
- `EigenFunctions` : $|\psi(\mathbf{r})|^2$ function of the eigenstate
- `Occupation probability` to find the state occupied. It is calculated assuming Fermi

distribution and mean electrochemical potential and temperature:

- `EnergyLevels` graphical output used for showing the energy level over the band

diagram.

6.2 Module quantumdispersion

With the Module quantumdispersion it is possible to calculate the dependence of quantum eigenstates on $\mathbf{k}$ -vector. Such dependence gives the *quantum state dispersion* . The simulation name is **quantumdispersion** .

```
Module quantumdispersion
{
  simulation_name = dispersion1D_el
  regions = all
  quantum_simulation = quantum_el
  min_eigenvalue_number = 0
  max_eigenvalue_number = 5
}
```

```
wedge = half
k_space_dimension = 1
k1 = (0, 0.1, 0)
number_of_nodes = (10)
output_format = grace
plot = k-space_dispersion
}
```

The dispersion of quantum states is calculated at k-points that are nodes of the mesh in k-space.

The main parameters are:

- `quantum_simulation`: name of the efascroedinger simulation.
- `min_eigenvalue_number`, **`max_eigenvalue_number`**: the dispersion is calculated

for the states number i , where

$$\text{max_eigenvalue_number} \geq i \geq \text{min_eigenvalue_number}$$

The rest of the parameters (`wedge`, k space dimension, etc...) define the k-space.

6.2.1 Output

The output variable name is **`k-space_dispersion`**. The output format for the dispersion can be controlled independently of the general specification in the `Simulation` section by redefining the `output_format` keyword.

6.3 Module quantumdensity

In Module `quantumdensity` you can define the calculation of particle (electron, hole) density, based on the result of a previous calculation of the system eigenstates (e.g. with `efascroedinger` module).

```
Module quantumdensity
{
  name = dens_el
  regions = quantum
  plot = quantum_density
  k-space_dimension = 0
  k-space_basis = true
  k1 = (0, 0, 0.1)
  #number_of_nodes = (4)
  #wedge = half
  quantum_simulation = quantum_el
  degeneracy = 2
}
```

```
refine_fraction = 0.20
relative_accuracy = 0.01
refine_k_space = true
output_density_in_k_space = true
uniform_refinement = false
mesh_order = FIRST
first_state = 3
initial_eigenstates_number = 10
analytic = true
}
```

The available options are:

- `quantum_simulation` : name of the efashroedinger simulation.
- `degeneracy` : degeneracy of the quantum state
- `initial_eigenstates_number` : initial number of eigenstates for the Schroedinger

equation

- `analytic = { true | false }` If true then the density is calculated analytically, otherwise numerically.

6.3.1 Output

The output parameter is **quantum_density**.

6.4 Module opticskp

By defining the Module **opticskp** , calculation of optical properties is enabled.

```
Module opticskp
{
  name = optics
  regions = quantum
  plot = (optical_spectrum_k_0 )
  initial_state_model = quantum_el
  final_state_model = quantum_hl
  initial_eigenstates = (0, 9)
  final_eigenstates = (0, 15)
  polarization = (0, 0, 1)
  Emin = 2.8
  Emax = 3.6
  dE = 0.001
}
```

Here, *initial_state_model* and *final_state_model* are, respectively, the quantum simulations (efaschroedinger module) associated respectively to the initial state of optical transition (e.g. electron), and to the final state of optical transition (e.g. hole). *initial_eigenstates* and *final_eigenstates* refer to the range of eigenstates to be taken in account for optical calculations.

By specifying a range of energy values in this way:

```
Emin = 3.0
Emax = 5.0
dE = 0.001
```

the emission optical spectrum for $\mathbf{k}=0$ is calculated.

6.4.1 Output

The output variables for optics calculations are:

- `optical_spectrum_k_0` : optical emission spectrum for $k=0$.

6.5 Module opticalspectrum

By defining the Module `opticalspectrum`, optical matrix elements are used to calculate the associated (emission) spectrum with a k-space integration.

```
Module opticalspectrum
{
  k_space_dimension = 2
  k-space_basis = true
  k1 = (0, 0, 0.1)
  k2 = (0, 0.1, 0)
  refine_fraction = 0.30
  relative_accuracy = 0.01
  refine_k_space = true
  number_of_nodes = (2, 2)
  wedge = quarter
  plot = (optical_spectrum)
  optical_matr_elem_model = opticskp
  polarization = (0, 0, 1)
  Emin = 3.0
  Emax = 5.0
  dE = 0.001
}
```

The parameters are the following:

`k_space_dimension = 1` for 2D simulations, `2` for 1D simulations. k-space basis is **true** if the k-space is defined by means of k-vectors; if **false** , vectors are expressed in

real space

If `refine_k_space = true` , that is adaptive k-mesh refinement is enabled, all the elements whose error is greater than the value $(1 - \text{refine_fraction}) * (\text{maximum error})$ are going to be refined. In this case, Error is just the integrated quantity. The refinement will end when the *relative_accuracy* is obtained.

`number_of_nodes = numb.` of elements in k mesh, along each direction

`wedge = half | quarter`, to reduce calculation time, by exploiting symmetry.

`optical_matr_elem_model = name` of the *opticskp* model associated

`polarization = light polarization (vector)`

`Emin, Emax, dE` : energy range and step of spectrum calculation.

6.5.1 Output

The output variables for optics calculations are:

- `optical_spectrum` : k-space integrated optical emission spectrum.

SIMULATION DYE SOLAR CELLS

The DSC model is tagged as `dssc`. In **options** subsection we indicate the simulation name:

```
model dssc
{
  options
  {
    simulation_name = <name_of_the_model>
    plot(Potential, Density, Current, ContactCurrents)
  }
  BC_regions
  {
    ...
  }
}
```

The boundary conditions are inserted in the **Model** section, the two contacts are the photoanode and the cathode. The photoanode must be the boundary of a region where TiO_2 is present, on the contrary the cathode must be the boundary of a region where the **electrolyte** is present.

```
BC_regions
{
  BC_region <name_of_the_anode>
  {
    type = ohmic
    bias = @V[0.0]
  }
  BC_region <name_of_the_cathode>
  {
    type = Pt
    load = @R[1e8]
  }
}
```

The anode is an ohmic contact, it contains only the sweep of the bias applied for the electrochemical potential of the electrons. The cathode must contain the initial external resistance (**load = R**).

If a simulation of the cell under illumination is made the initial value of *load* must be set to a high value, in the range of $10^8 \omega cm^2$ in order to have no current during the light intensity sweep. In case instead the simulation performed is under dark conditions where an external bias only is applied $load = 1.0$.

The generation term is related to the flux of photons which reaches the active TiO_2 regions and the dye present in the cell. We assume a simple Beer-Lambert exponential decay for charge generation of the form:

$$G(\mathbf{r}) = \int_{\lambda_1}^{\lambda_2} \alpha(\lambda) \Phi(\lambda) e^{-\alpha(\lambda) \hat{n} \cdot \mathbf{r}} d\lambda \quad (7.1)$$

where α is the absorption coefficient (in μ^{-1}) of the chosen Dye, $\Phi(\lambda)$ the intensity of the light power at that wavelength for the spectrum of the sun. The part of the input file for the generation model:

```
model dssc_generation
{
  options
  {
    regions = (<TiO2_region_name_1>, <TiO2_region_name_2>, ...)
    plot = (Distance, Generation)
    light_direction = <vector Indicating the direction of light>
    (example, illumination from x direction: light_direction = (1, 0, 0))
    light_intensity = @x
    dye = N719
  }
  BC_Regions
  {
    BC_Region <name_of_the_boundary>
    {
    }
  }
}
```

In the generation input file must be specified:

- *regions* : the regions where we want that there is generation (where the Dye is present);
- *plot* : if we want to plot the generation;
- *light_direction* : the vector which fixes the direction from where the light comes;
- *light_intensity* : the light intensity;
- *light_intensity* : the light intensity;
- *dye* : the dye used in the cell;

The light intensity is defined in a sweep (see section [Solver](#)). It can be set to reach 1 that means one Sun, or a larger or smaller illumination intensity (0.1, 2.0, etc.). There is another flag called

`illumination_spectrum` that can be used if we want to change the spectrum profile F with another illumination source (for example if we assume the cell under concentration of light). The file used by default for Φ is the standard 1.5 AM spectrum of the sun contained in the material database in the file `Sun1p5am`.

The last part of the generation is the definition of the boundary. This boundary says to the code which is the boundary region of the grid from where the light penetrates in the device. The information given by the boundary and the light direction vector defines the coming of light and direction of rays.

7.1 Device

Device section for a DSC simulation:

```
Device
{
  Region <name of the porous region>
  {
    mat = TiO2mes
    porosity = 0.5
  }
  Region <name of the electrolyte region>
  {
    mat = TiO2mes
    TiO2 = false
  }
}
```

For every region of the device it is specified the material file from the database (the `TiO2mes` contains standard parameters for both TiO_2 and electrolyte, so it can be used for both regions). For every region must be specified if it contains TiO_2 , or electrolyte or both.

This can be done setting two flags called `TiO2` and `electrolyte`. If set **true** the material is present in the region, if set **false** it is not present. By default they are assumed both **true** (porous region). In the second region of the example showed there is electrolyte only and `TiO2 = false` is explicitly specified. In case both materials are present (porous region) a porosity must be specified (in the range between 0, TiO_2 only, and 1, electrolyte only).

If one material is not present the porosity is automatically set to 0 or 1.

7.2 Physics

The set of parameters that can be defined for the entire device are enlisted in table 3.1. For the generation:

```

dssc
{
  generation = dssc_generation
}

```

7.3 Solver

Three sweeps are needed for the plot of the entire I-V under illumination. The first sweep is needed to make the transition from dark conditions to full open-circuit conditions under

Parameters		
	Poisson equation	
porosity	Porosity of porous material	
perm_oxide	Relative perm. of the TiO ₂	
perm_electrolyte	Relative perm. of the electrolyte	
k_3	Oxidized Dye regeneration rate constant	s ⁻¹
	Drift Diffusion equation	
ne	Dark electron density	cm ⁻³
nI	Dark iodide density	mol/l
nI3	Dark electron density	mol/l
mu_e	Electron mobility	cm ² /Vs
D_I	Iodide diffusion constant	cm ² /s
D_I3	Triiodide diffusion constant	cm ² /s
D_C	Cation diffusion constant	cm ² /s
	Recombination term	
k_e	Recombination constant rate	s ⁻¹
beta	Non-linearity exponent in the electron density recombination	

Table 7.1: Physical parameters that can be set for the model divided in subsets relative to different processes in the cell.

illumination. The high value of the load R maintains the current to zero. Then a second sweep is used to pass from open circuit condition to short circuit condition lowering the external load from a high external load to a small one ($R = 1$). Finally, the voltage sweep compute the I-V characteristics under illumination. In case of dark simulation (application of an external bias without illumination) the first and second sweep are not needed. The external load for the cathode can be set directly to $R = 1$.

```

Solver
{
  Sweep
  {
    sweep_gen

```

```
{
  simulation = (dssc_generation, dssc)
  variable = x
  values = (0, 1e-9, 1e-8, 1e-7, 1e-6, 1e-5, 1e-4, 1e-3, 1e-2, 0.1, 1)
  plot_data = true
}
sweep_R
{
  simulation = dssc
  variable = R
  values = ( 1000, 100, 1)
  plot_data = true
}
sweep_V
{
  simulation = dssc
  variable = V
  values = (0.0, 0.1, 0.2, 0.3, 0.4, 0.5, 0.6, 0.7, 0.8, 0.9, 1.0)
  plot_data = true
}
}
```

The intensity of illumination can be changed sweeping the value of x different to 1 (1 = 1 Sun of power).

7.4 Output

The output that want to be plotted are enlisted in section Model within option. See *Table nodal* , *Table elemental* and *Table scalar* .

Nodal quantities		
	Potential	
eQFermi	Electron electrochemical potential	$\text{eV } (-e\phi_n)$
IQFermi	Iodide electrochemical potential	$\text{eV } (-e\phi_{I^-})$
I3QFermi	Triiodide electrochemical potential	$\text{eV } (-e\phi_{I_3^-})$
CQFermi	Cation electrochemical potential	$\text{eV } (-e\phi_C)$
ElPotential	Electrostatic potential	eV
Eredox	Electrolyte electrochemical potential	$\text{eV } (-e\phi_{Red})$
	Density	
eDensity	Electron density	cm^{-3}
IDensity	Iodide density	cm^{-3}
I3Density	Triiodide density	cm^{-3}
CDensity	Cation density	cm^{-3}
Generation	The net electron generation rate	$\text{cm}^{-3}\text{s}^{-1}$
NetRecombination	The net recombination rate	$\text{cm}^{-3}\text{s}^{-1}$

Table 7.2: Nodal quantities. The flags Potential and Density allow to plot all the electrochemical potentials and all the densities, including generation and recombination.

Elemental quantities		
	Current	
ElField	Electric Field	Vcm^{-1}
CurrentDensity	Total current density	Acm^{-2}
eCurrentDensity	Electron current density	Acm^{-2}
ICurrentDensity	Iodide current density	Acm^{-2}
I3CurrentDensity	Triiodide current density	Acm^{-2}
CCurrentDensity	Cation current density	Acm^{-2}

Table 7.3: Elemental quantities. The flag Current allows to plot all of them in the x, y and z components.

Scalar quantities		
ContactCurrents	Contact currents	$*^a$

^adepends on dimension and symmetry

Table 7.4: Scalar quantities.

Part II

Glossary

meshfile

Level: Block

Description:

Example:

```
meshfile = bulk.msh
```

Doping

Level: sub-Block

Description:

Example:

```
Doping
{
    Nd = 1e16
    type = donor
}
```

Nd

Level: paragraph

Description:

Example:

```
Nd = 1e16
```

type

Level: paragraph

Description:

Example:

```
type = donor
type = acceptor
type = field_dependent
type = heat_reservoir
type = surface_resistance
type = surface_force
```

plot

Level: paragraph

Description:

Example:

```
plot = (Ec, Ev, Eg, ElField, ElPotential, eQFermi, hQFermi, eDensity, hDensity,
        NetRecombination, eCurrentDensity, hCurrentDensity, CurrentDensity,
        ContactCurrent, eMobility, hMobility, IonizedDonors, IonizedAcceptors)
plot = all
```

solve

Level: paragraph

Description:

Example:

```
solve = driftdiffusion
solve = sweep
```

variable

Level: paragraph

Description:

Example:

variable = \$Vb

start

Level: paragraph

Description:

Example:

start = 0.0

stop

Level: paragraph

Description:

Example:

stop = 1

steps

Level: paragraph

Description:

Example:

steps = 10

plot_data

Level: paragraph

Description:

Example:

`plot_data = true`

verbose

Level: paragraph

Description:

Example:

`verbose = 2`

resultpath

Level: paragraph

Description:

Example:

`resultpath = output`

output_format

Level: paragraph

Description:

Example:

`output_format = grace`

material

Level: paragraph

Description:

Example:

material = Si

name

Level: paragraph

Description:

Example:

name = dd

statistics

Level: paragraph

Description:

Example:

statistics = boltzmann

statistics = FermiDirac

low_field_model

Level: paragraph

Description:

Example:

low_field_model = doping_dependent

recombination

Level: paragraph

Description:

Example:

recombination (srh, auger) { }

structure

Level: paragraph

Description:

Example:

structure = wz

x-growth-direction

Level: paragraph

Description:

Example:

x-growth-direction = (0,0,0,1)

y-growth-direction

Level: paragraph

Description:

Example:

y-growth-direction = (1,0,-1,0)

z-growth-direction

Level: paragraph

Description:

Example:

z-growth-direction = (-1,2,-1,0)

density

Level: paragraph

Description: doping concentration [cm-3]

Example:

density = 1e17

level

Level: paragraph

Description: energy level of the dopant [eV]

Example:

level = 0.025

strain_simulation

Level: paragraph

Description:

Example:

strain_simulation = macrostrain

strain_simulation = elasticity

nonlinear_solver

Level: paragraph

Description:

Example:

`nonlinear_solver = tiber`

nonlin_max_it

Level: paragraph

Description:

Example:

`nonlin_max_it = 15`

nonlin_rel_tol

Level: paragraph

Description:

Example:

`nonlin_rel_tol = 1e-12`

nonlin_abs_tol

Level: paragraph

Description:

Example:

`nonlin_abs_tol = 1e-10`

nonlin_step_tol

Level: paragraph

Description:

Example:

`nonlin_step_tol = 1e-5`

polarization

Level: paragraph

Description:

Example:

`polarization (piezo, pyro) {}`

max_iterations

Level: paragraph

Description:

Example:

`max_iterations = 5`

abs_tolerance

Level: paragraph

Description:

Example:

`abs_tolerance = 1e-3`

rel_tolerance

Level: paragraph

Description:

Example:

`rel_tolerance = 1e-6`

mesh_units

Level: paragraph

Description:

Example:

`mesh_units = 1e-6`

x

Level: paragraph

Description: the elementum percentage in the alloy

Example:

`material = AlGaIn`

`x = 0.14`

H

Level: paragraph

Description:

Example:

`H = 1e10`

mesh_regions

Level: paragraph

Description:

Example:

```
mesh_regions = (barrier_dop_s, barrier_dop_d)
```

regions

Level: paragraph

Description:

Example:

```
regions = all #default to not specify
```

```
regions = -passivation #apply to all regions except passivation
```

coupling

Level: paragraph

Description:

Example:

```
coupling = electrons
```

save_state

Level: paragraph

Description:

Example:

```
save_state = true
```

relative_tolerance

Level: paragraph

Description:

Example:

`relative_tolerance = 1e-15`

step_tolerance

Level: paragraph

Description:

Example:

`step_tolerance = 5e-3`

ksp_type

Level: paragraph

Description:

Example:

`ksp_type = ponly #preconditioner only`

preconditioner

Level: paragraph

Description:

Example:

`preconditioner = lu`

region

Level: paragraph

Description:

Example:

region = GaN/SiN

region = buffer

reference

Level: paragraph

Description:

Example:

reference = cb

dimension

Level: paragraph

Description:

Example:

dimension = 3

reference_material

Level: paragraph

Description:

Example:

reference_material = AlGaN

temperature

Level: paragraph

Description:

Example:

temperature = 300

r_surf

Level: paragraph

Description:

Example:

r_surf = 0. 05

dd_simulation

Level: paragraph

Description: The name of the drift-diffusion simulation is given by dd_simulation.

Example:

dd_simulation = dd

particle

Level: paragraph

Description:

Example:

particle = el

poisson_model_name

Level: paragraph

Description:

Example:

```
poisson_model_name = dd
```

strain_model_name

Level: paragraph

Description:

Example:

```
strain_model_name = strain # macrostrain
```

number_of_eigenstates

Level: paragraph

Description: defines the number of eigenvalues and eigenfunctions to be found.

Example:

```
number_of_eigenstates = 10 # 30
```

model

Level: paragraph

Description:

Example:

```
model = conduction_band
```

simulation_name

Level: paragraph

Description:

Example:

```
simulation_name = dispersion1D_el
```

quantum_simulation

Level: paragraph

Description: name of the efascroedinger simulation.

Example:

```
quantum_simulation = quantum_el
```

min_eigenvalue_number

Level: paragraph

Description: the dispersion calculated for the states number i

Example:

```
min_eigenvalue_number = 0
```

max_eigenvalue_number

Level: paragraph

Description: the dispersion calculated for the states number i

Example:

```
max_eigenvalue_number = 5
```

wedge

Level: paragraph

Description: to reduce calculation time, by exploiting symmetry.

Example:

wedge = half
wedge = quarter

k1

Level: paragraph

Description:

Example:

k1 = (0, 0, 0.1)

k2

Level: paragraph

Description:

Example:

k2 = (0, 0.1, 0)

number_of_nodes

Level: paragraph

Description: number of elements in k mesh, along each direction.

Example:

number_of_nodes = (10)
number_of_nodes = (2, 2)

k-space_dimension

Level: paragraph

Description:

Example:

k-space_dimension = 0

k-space_basis

Level: paragraph

Description:

Example:

k-space_basis = true

degeneracy

Level: paragraph

Description: degeneracy of the quantum state

Example:

degeneracy = 2

refine_fraction

Level: paragraph

Description:

Example:

refine_fraction = 0.20

relative_accuracy

Level: paragraph

Description:

Example:

relative_accuracy = 0.01

refine_k_space

Level: paragraph

Description:

Example:

refine_k_space = true

output_density_in_k_space

Level: paragraph

Description:

Example:

output_density_in_k_space = true

uniform_refinement

Level: paragraph

Description:

Example:

uniform_refinement = false

mesh_order

Level: paragraph

Description:

Example:

`mesh_order = FIRST`

first_state

Level: paragraph

Description:

Example:

`first_state = 3`

initial_eigenstates_number

Level: paragraph

Description: initial number of eigenstates for the Schroedinger equation

Example:

`initial_eigenstates_number = 10`

analytic

Level: paragraph

Description: { true or false } If true then the density is calculated analytically, otherwise numerically.

Example:

`analytic = true`

initial_state_model

Level: paragraph

Description:

Example:

```
initial_state_model = quantum_el
```

final_state_model

Level: paragraph

Description:

Example:

```
final_state_model = quantum_hl
```

initial_eigenstates

Level: paragraph

Description: range of eigenstates to be taken in account for optical calculations.

Example:

```
initial_eigenstates = (0, 9)
```

final_eigenstates

Level: paragraph

Description: range of eigenstates to be taken in account for optical calculations.

Example:

```
final_eigenstates = (0, 15)
```

polarization

Level: paragraph

Description:

Example:

polarization = (0, 0, 1)

Emin

Level: paragraph

Description:

Example:

Emin = 2.8

Emax

Level: paragraph

Description:

Example:

Emax = 3.6

dE

Level: paragraph

Description:

Example:

dE = 0.001

optical_matr_elem_model

Level: paragraph

Description: name of the opticskp model associated

Example:

```
optical_matr_elem_model = opticskp
```

bias

Level: paragraph

Description:

Example:

```
bias = @V[0.0]
```

load

Level: paragraph

Description:

Example:

```
load = @R[1e8]
```

light_direction

Level: paragraph

Description:

Example:

```
light_direction = <vector_indicating_the_direction_of_light>
```

light_intensity

Level: paragraph

Description: the vector which fixes the direction from where the light comes.

Example:

light_intensity = @x

dye

Level: paragraph

Description: the kind of dye used in the cell

Example:

dye = N719

mat

Level: paragraph

Description:

Example:

mat = TiO2mes

porosity

Level: paragraph

Description:

Example:

porosity = 0.5

TiO2

Level: paragraph

Description:

Example:

TiO2 = false

generation

Level: paragraph

Description:

Example:

generation = dssc_generation

values

Level: paragraph

Description:

Example:

values = (1000, 100, 1)

poisson_simulation

Level: paragraph

Description:

Example:

poisson_simulation = dd

doping_type

Level: paragraph

Description:

Example:

doping_type = donors

doping_level

Level: paragraph

Description:

Example:

doping_level = 0.035

force

Level: paragraph

Description:

Example:

force = (0.0, 0.0625,0.0)

Young

Level: paragraph

Description:

Example:

Young = 129

Poisson

Level: paragraph

Description:

Example:

Poisson = 0.349

area_factor

Level: paragraph

Description:

Example:

area_factor = 0.1

barrier_height

Level: paragraph

Description:

Example:

barrier_height = 3.0

quadrature_rule

Level: paragraph

Description:

Example:

quadrature_rule = trapez

flavour

Level: paragraph

Description:

Example:

flavour = relaxation

monitor

Level: paragraph

Description:

Example:

monitor = true

symmetry

Level: paragraph

Description:

Example:

symmetry = cylindrical

ls_max_step

Level: paragraph

Description:

Example:

ls_max_step = 4

discretization

Level: paragraph

Description:

Example:

discretization = fem

integration_order

Level: paragraph

Description:

Example:

integration_order = 2

Dirichlet_bc_everywhere

Level: paragraph

Description:

Example:

Dirichlet_bc_everywhere = true

solution_method

Level: paragraph

Description:

Example:

solution_method = general

solver

Level: paragraph

Description:

Example:

solver = krylovshur

kp_model

Level: paragraph

Description:

Example:

kp_model = 8x8

beta

Level: paragraph

Description:

Example:

beta = 1.0

searchpath

Level: paragraph

Description:

Example:

searchpath = ../../materials

Modules/Device

Level: Super-Block

Description:

Example:

Device

```
{
    meshfile = bulk.msh
    Region bulk
    {
        material = Si
        Doping
        {
            Nd = 1e16
            type = donor
        }
    }
}
```

Modules/driftdiffusion

Level: Super-Block

Description:

Example:

```
Module driftdiffusion
{
    plot = (Ec, Ev, eQFermi, hQFermi, ContactCurrent)

    Contact anode { voltage = $Vb }
    Contact cathode { }
}
```

Modules/sweep

Level: Super-Block

Description:

Example:

```
Module sweep
{
  solve = driftdiffusion
  variable = $Vb
  start = 0.0
  stop = 1
  steps = 10
  plot_data = true
}
```

Modules/Physics

Level: Block

Description:

Example:

```
Physics
{
  particle_density
  {
    statistics = boltzmann
  }

  mobility field_dependent
  {
    low_field_model = doping_dependent
  }
  recombination (srh, auger) {}
}
```

Modules/particle_density

Level: Sub-Block

Description:

Example:

```
particle_density
{
    statistics = boltzmann
}
```

Modules/mobility

Level: Sub-Block

Description:

Example:

```
mobility field_dependent
{
    low_field_model = doping_dependent
}
```

Modules/Solver

Level: Super-Block

Description:

Example:

```
Solver
{
    nonlinear_solver = tiber
    nonlin_max_it = 15
    nonlin_rel_tol = 1e-12
    nonlin_step_tol = 1e-5
}
```

Modules/Cluster

Level: Block

Description:

Example:

```
Cluster semiconductor
{
    regions = -passivation
}
```

Modules/NonlinearSolver

Level: Block

Description:

Example:

```
NonlinearSolver linesearch
{
    relative_tolerance = 1e-15
    step_tolerance = 5e-3
    max_iterations = 15
}
```

Modules/LinearSolver

Level: Sub-Block

Description:

Example:

```
LinearSolver petsc
{
    tolerance = 1e-7
    max_iterations = 10000
    #xmonitor = true
    pc = composite
}
```

Modules/trap

Level: Sub-Block

Description:

Example:

```
trap fixed_charge
{
    region = GaN/SiN
    Nt = 2.74e13
}
```

Modules/Boundary

Level: Sub-Block

Description:

Example:

```
Boundary substrate
{
    regions = bottom
    material = GaN
    y-growth-direction = (0,0,0,1)
    z-growth-direction = (1,0,-1,0)
    x-growth-direction = (-1,2,-1,0)
}
```

Modules/BodyForcelattice_mismatch

Level: Sub-Block

Description:

Example:

```
BodyForcelattice_mismatch
{
    x-growth-direction = (-1,0,1,0)
    y-growth-direction = (-1,2,-1,0)
    z-growth-direction = (0,0,0,1)
    reference_material = AlGaN
    structure = wz
    x = 0.2
}
```

Modules/HeatSource

Level: Sub-Block

Description:

Example:

```
HeatSource constant
{
    regions = HotSpot
    H = 1e10
}
```

Modules/efaschroedinger

Level: Block

Description:

Example:

```
Module efaschroedinger
{
    particle = el
    poisson_model_name = dd
    strain_model_name = strain # macrostrain
    name = quantum_el
    regions = quantum
    plot = (EigenFunctions, EigenEnergy, EnergyLevels)
```

```
Solver
  { number_of_eigenstates = 10 # 30 }
Physics
  { model = conduction_band }
```

Modules/quantumdispersion

Level: Block

Description:

Example:

```
Module quantumdispersion
{
  simulation_name = dispersion1D_el
  regions = all
  quantum_simulation = quantum_el
  min_eigenvalue_number = 0
  max_eigenvalue_number = 5
  wedge = half
  k_space_dimension = 1
  k1 = (0, 0.1, 0)
  number_of_nodes = (10)
  output_format = grace
  plot = k-space_dispersion
}
```

Modules/quantumdensity

Level: Block

Description:

Example:

```
Module quantumdensity
{
  name = dens_el
  regions = quantum
```

```
    plot = quantum_density
    k-space_dimension = 0
    k-space_basis = true
    k1 = (0, 0, 0.1)
    quantum_simulation = quantum_el
    degeneracy = 2
    refine_fraction = 0.20
    relative_accuracy = 0.01
    refine_k_space = true
    output_density_in_k_space = true
    uniform_refinement = false
    mesh_order = FIRST
    first_state = 3
    initial_eigenstates_number = 10
    analytic = true
}
```

Modules/opticskp

Level: Block

Description:

Example:

```
Module opticskp
{
    name = optics
    regions = quantum
    plot = (optical_spectrum_k_0 )
    initial_state_model = quantum_el
    final_state_model = quantum_hl
    initial_eigenstates = (0, 9)
    final_eigenstates = (0, 15)
    polarization = (0, 0, 1)
    Emin = 2.8
    Emax = 3.6
    dE = 0.001
}
```

Modules/opticalspectrum

Level: Block

Description:

Example:

```
Module opticalspectrum
{
    k_space_dimension = 2
    k-space_basis = true
    k1 = (0, 0, 0.1)
    k2 = (0, 0.1, 0)
    refine_fraction = 0.30
    relative_accuracy = 0.01
    refine_k_space = true
    number_of_nodes = (2, 2)
    wedge = quarter
    plot = (optical_spectrum)
    optical_matr_elem_model = opticskp
    polarization = (0, 0, 1)
    Emin = 3.0
    Emax = 5.0
    dE = 0.001
}
```

Modules/dssc

Level: Block

Description:

Example:

```
model dssc
{
    options
    {
```

```
simulation_name = <name_of_the_model>
plot(Potential, Density, Current, ContactCurrents)
}
...
}
```

Modules/dssc_generation

Level: Block

Description:

Example:

```
model dssc_generation
{
    options
    {
        regions = (<TiO2_region_name_1>, <TiO2_region_name_2>, ...)
        plot = (Distance, Generation)
        light_direction = <vector Indicating the direction of light>
        (example, illumination from x direction: light_direction = (1, 0, 0))
        light_intensity = @x
        dye = N719
    }
    ...
}
```

Modules/sweep_gen

Level: Block

Description:

Example:

```
sweep_gen
{
    simulation = (dssc_generation, dssc)
    variable = x
    values = (0, 1e-9, 1e-8, 1e-7, 1e-6, 1e-5, 1e-4, 1e-3, 1e-2, 0.1, 1)
```

```
        plot_data = true
    }
```

Modules/BodyForceconverse_piezo

Level: Block

Description:

Example:

```
BodyForceconverse_piezo
{
    poisson_simulation = dd
}
```

Modules/elasticity

Level: Super-Block

Description:

Example:

```
Module elasticity
{
    Physics
    {
        Stiffness isotropic
        {
            Young = 129 Poisson = 0.349
        }
        Contact Base
        {
            type = clamp
        }
        Contact Top
        {
            type = surface_force force = (0.0, 0.0625,0.0)
        }
    }
}
```

```
    }  
  }
```

Modules/Stiffness

Level: Block

Description:

Example:

```
  Stiffness isotropic  
{  
    Young = 129  
    Poisson = 0.349  
}
```

Modules/Selfconsistent

Level: Block

Description:

Example:

```
  Module Selfconsistent  
{  
    flavour = relaxation  
    simulations = (dd,tt)  
    abs_tolerance = 1e-5  
    monitor = true  
}
```

Region/bulk

Level: Block

Description:

Example:

```
Region bulk
{
    material = Si

    Doping
    {
        Nd = 1e16
        type = donor
    }
}
```

Region/n_side

Level: Block

Description:

Example:

```
Region n_side
{
    Doping
    {
        Nd = 1e18
        type = donor
    }
}
```

Region/p_side

Level: Block

Description:

Example:

```
Region p_side
{
    Doping
```

```
    {  
        Nd = 1e18  
        type = acceptor  
    }  
}
```

Region/barrier

Level: Block

Description:

Example:

```
Region barrier  
{  
    material = AlGaIn  
    x = 0.14  
}
```

Region/barrier_doped

Level: Block

Description:

Example:

```
Region barrier_doped  
{  
    mesh_regions = (barrier_dop_s, barrier_dop_d)  
    material = AlGaIn  
    x = 0.14  
    Doping  
    {  
        density = 1e21  
        type = donor  
        level = 0.026  
    }  
}
```

Region/buffer_doped

Level: Block

Description:

Example:

```
Region buffer_doped
{
    mesh_regions = (buffer_dop_s, buffer_dop_d)
    Doping
    {
        density = 1e21
        type = donor
        level = 0.026
    }
}
```

Region/cap

Level: Block

Description:

Example:

```
Region cap
{
    Doping
    {
        density = 5e18
        type = donor
        level = 0.026
    }
}
```

Region/cap_doped

Level: Block

Description:

Example:

```
Region cap_doped
{
    mesh_regions = (cap_dop_s, cap_dop_d)
    Doping
    {
        density = 1e21
        type = donor
        level = 0.026
    }
}
```

Region/passivation

Level: Block

Description:

Example:

```
Region passivation
{
    mesh_regions = (passiv1, passiv2, passiv3, passiv4)
    material = SiN
}
```

Region/Well

Level: Block

Description:

Example:

```
Region Well
{
```

```
        material = GaN
    }
```

Region/porous

Level: Block

Description:

Example:

```
    Region <name of the porous region>
    {
        mat = TiO2mes
        porosity = 0.5
    }
```

Region/electrolyte

Level: Block

Description:

Example:

```
    Region <name of the electrolyte region>
    {
        mat = TiO2mes
        TiO2 = false
    }
```

Region/Nanowire

Level: Block

Description:

Example:

```
    Region Nanowire
```

```
{  
    doping_type = donors  
    doping_level = 0.035  
}
```

Region/Air

Level: Block

Description:

Example:

```
Region Air  
{  
    material = Air  
}
```

Region/oxide

Level: Block

Description:

Example:

```
Region oxide  
{  
    material = SiO2  
}
```

Region/collector

Level: Block

Description:

Example:

```
Region coll # the collector region
```

```
{  
    type = donor  
    Nd = 5e15  
}
```

Contact/anode

Level: Block

Description:

Example:

```
Contact anode  
{  
    type = ohmic  
    voltage = $Vb[0.0]  
}
```

Contact/cathode

Level: Block

Description:

Example:

```
Contact cathode  
{  
    type = ohmic  
    voltage = 0.0  
}
```

Contact/gate

Level: Block

Description:

Example:

```
Contact gate
{
    regions = (gate1, gate2)
    type = schottky
    work_function = 1.5272
    voltage = @Vg
}
```

Contact/Base

Level: Block

Description:

Example:

```
Contact Base
{
    type = clamp
}
```

Contact/left

Level: Block

Description:

Example:

```
Contact left
{
    type = heat_reservoir
    temperature = 300
}
```

Contact/right

Level: Block

Description:

Example:

```
Contact right
{
    type = heat_reservoir
    temperature = 300
}
```

Contact/heat_reservoir

Level: Block

Description:

Example:

```
Contact heat_reservoir
{
    region = substrate
    temperature = 300
}
```

Contact/substrate

Level: Block

Description:

Example:

```
Contact substrate
{
    type = surface_resistance
    r_surf = 0. 05
    temperature = 300
}
```

Contact/reservoir

Level: Block

Description:

Example:

```
Contact reservoir
{
    temperature = 300
}
```

Contact/surface_resistance

Level: Block

Description:

Example:

```
Contact surface_resistance
{
    r_surf = 0.01
    temperature = 300
}
```

Contact/Top

Level: Block

Description:

Example:

```
Contact Top
{
    type = surface_force
    force = (0.0, 0.0625,0.0)
}
```

Contact/backcontact

Level: Block

Description:

Example:

```
Contact backcontact
{
    voltage = 0.0
    area_factor = 0.1
}
```

Contact/dissipator

Level: Block

Description:

Example:

```
Contact dissipator
{
    r_surf = 0.5
    type = surface_resistance
    temperature = 300
}
```


BIBLIOGRAPHY

- [Kalyanasundaram] Kalyanasundaram Kuppaswamy, “Dye-Sensitized Solar Cells”, *Editor Crc Pr Inc.* , 2010.
- [Gagliardi] Alessio Gagliardi, Matthias Auf der Maur, Desiree Gentilini and Aldo Di Carlo, “Modeling of Dye sensitized solar cells using a finite element method”, *J. Computational Electronics* , vol. 8, pp. 12, 2009.
- [Wachutka] Wachutka, IEEE Trans CAD Cicui. Integr and Syst. (1990)].
- [Povolotskiy] Povolotskiy et al. JAP (2006).
- [Wang] Wang et al. Science (2006).
- [Gao] Gao et al NanoLetter (2009).
- [Selberherr] Siegfried Selberherr, Analysis and Simulation of Semiconductor Devices, SpringerVerlag Wien New York, 1st edition, 1984.
- [Wachutka] Gerhard K. Wachutka, Rigorous thermodynamic treatment of heat generation and conduction in semiconductor device modeling,” IEEE Transaction on Computer-aided Design., vol. 9, pp. 11, 1990.

INDEX

A

abs_tolerance, 63
analytic, 74
area_factor, 81

B

barrier_height, 81
beta, 84
bias, 77

C

Contact/anode, 103
Contact/backcontact, 107
Contact/Base, 104
Contact/cathode, 103
Contact/dissipator, 107
Contact/gate, 103
Contact/heat_reservoir, 105
Contact/left, 104
Contact/reservoir, 105
Contact/right, 104
Contact/substrate, 105
Contact/surface_resistance, 106
Contact/Top, 106
coupling, 65

D

dd_simulation, 68
dE, 76
degeneracy, 72
density, 61
dimension, 67
Dirichlet_bc_everywhere, 83
discretization, 82
Doping, 55

doping_level, 80
doping_type, 79
dye, 78

E

E_{max}, 76
E_{min}, 76

F

final_eigenstates, 75
final_state_model, 75
first_state, 74
flavour, 81
force, 80

G

generation, 79

H

H, 64

I

initial_eigenstates, 75
initial_eigenstates_number, 74
initial_state_model, 74
integration_order, 83

K

k-space_basis, 72
k-space_dimension, 71
k1, 71
k2, 71
kp_model, 84
ksp_type, 66

L

level, 61
light_direction, 77
light_intensity, 77
load, 77
low_field_model, 59
ls_max_step, 82

M

mat, 78
material, 58
max_eigenvalue_number, 70
max_iterations, 63
mesh_order, 73
mesh_regions, 64
mesh_units, 64
meshfile, 55
min_eigenvalue_number, 70
model, 69
Modules/BodyForceconverse_piezo, 95
Modules/BodyForcelattice_mismatch, 89
Modules/Boundary, 89
Modules/Cluster, 87
Modules/Device, 84
Modules/driftdiffusion, 85
Modules/dssc, 93
Modules/dssc_generation, 94
Modules/efaschroedinger, 90
Modules/elasticity, 95
Modules/HeatSource, 90
Modules/LinearSolver, 88
Modules/mobility, 87
Modules/NonlinearSolver, 88
Modules/opticalspectrum, 93
Modules/opticskp, 92
Modules/particle_density, 86
Modules/Physics, 86
Modules/quantumdensity, 91
Modules/quantumdispersion, 91
Modules/Selfconsistent, 96
Modules/Solver, 87
Modules/Stiffness, 96
Modules/sweep, 85
Modules/sweep_gen, 94

Modules/trap, 89
monitor, 82

N

name, 59
Nd, 55
nonlin_abs_tol, 62
nonlin_max_it, 62
nonlin_rel_tol, 62
nonlin_step_tol, 62
nonlinear_solver, 61
number_of_eigenstates, 69
number_of_nodes, 71

O

optical_matr_elem_model, 76
output_density_in_k_space, 73
output_format, 58

P

particle, 68
plot, 56
plot_data, 57
Poisson, 80
poisson_model_name, 68
poisson_simulation, 79
polarization, 63, 75
porosity, 78
preconditioner, 66

Q

quadrature_rule, 81
quantum_simulation, 70

R

r_surf, 68
recombination, 59
reference, 67
reference_material, 67
refine_fraction, 72
refine_k_space, 73
region, 66
Region/Air, 102
Region/barrier, 98
Region/barrier_doped, 98

Region/buffer_doped, 99
Region/bulk, 96
Region/cap, 99
Region/cap_doped, 99
Region/collector, 102
Region/electrolyte, 101
Region/n_side, 97
Region/Nanowire, 101
Region/oxide, 102
Region/p_side, 97
Region/passivation, 100
Region/porous, 101
Region/Well, 100
regions, 65
rel_tolerance, 63
relative_accuracy, 72
relative_tolerance, 65
resultpath, 58

S

save_state, 65
searchpath, 84
simulation_name, 69
solution_method, 83
solve, 56
solver, 83
start, 57
statistics, 59
step_tolerance, 66
steps, 57
stop, 57
strain_model_name, 69
strain_simulation, 61
structure, 60
symmetry, 82

T

temperature, 67
TiO₂, 78
type, 55

U

uniform_refinement, 73

V

values, 79
variable, 56
verbose, 58

W

wedge, 70

X

x, 64
x-growth-direction, 60

Y

y-growth-direction, 60
Young, 80

Z

z-growth-direction, 60