# Introduction to Digital Systems Part I (4 lectures) 2023/2024

Introduction

Number Systems and Codes

Combinational Logic Design Principles




### Lecture 1 contents

- About digital design
- Number systems
  - Positional number systems
  - Binary, octal, and hexadecimal numbers
  - General positional-number-system conversions

### Motivation

Electronics all around us: automotive, consumer products, communications, military and aerospace, medicine, etc.

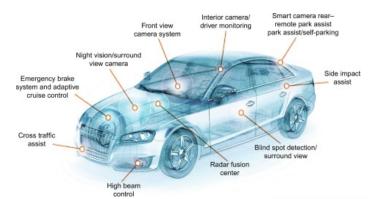









https://www.sciencedirect.com/topics/engineering/automotive-electronics
http://www.beadelectronics.com/military-and-aerospace-electronics-applications
https://electronicsforu.com/technology-trends/medical-electronics-key-concerns-opportunities
https://www.ittechnologynews24.com/tag/online-consumer-electronics-market-review/
http://www.indiaeducation.net/engineering/engineering-branch/electronics-engineering-versus-electronics-communication-engineering.html



## Question

• A lei de Moore


## **Exponential Growth**

## Moore's law (observed in 1965): the number of transistors on a computer chip doubles every 1.5-2 years

Moore's Law: The number of transistors on microchips doubles every two years

Moore's law describes the empirical regularity that the number of transistors on integrated circuits doubles approximately every two years.

Our World in Data

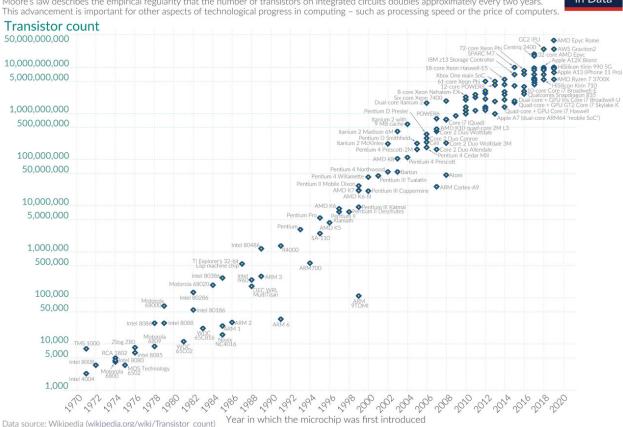


Licensed under CC-BY by the authors Hannah Ritchie and Max Roser.

Our Worldin Data.org - Research and data to make progress against the world's largest problems. Licensed under CC-BY by https://en.wikipedia.org/wiki/Moore%27s\_law#/media/File:Moore's\_Law\_Transistor\_Count\_1970-2020.png



## **Exponential Growth**

### Processing power increases at about the same rate (~40%)

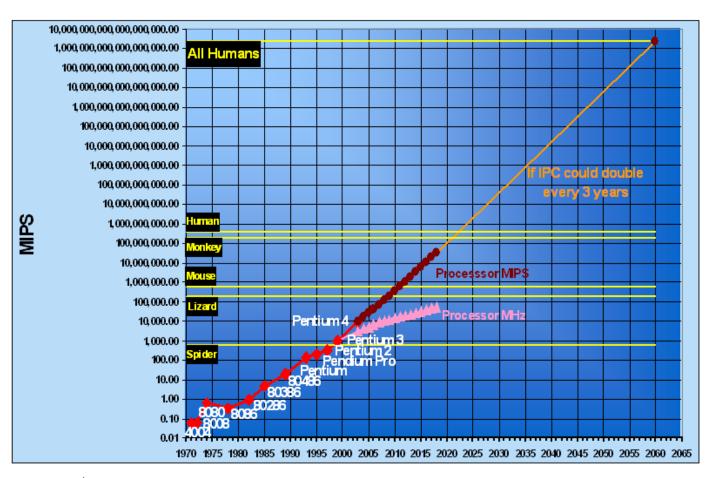

http://www.captec-group.com/



### Course content

Application software (programs)

Operating systems (device drivers)

Instruction Set Arch (instructions, registers)

Machine organization (datapaths, controllers)

Logic (adders, encoders)

Digital circuits (gates)

Analog circuits (amplifiers)

Devices (transistors)


Physics (electrons)

- Fundamentals of Boolean logic
- Encoding
- Combinational circuits
- Arithmetic units
- Synchronous circuits
- Finite state machines
- Timing and clocking
- Simulation




## Digital abstraction

Analog: values vary over a broad range continuously

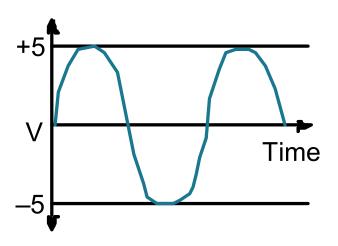

## Digital: only assumes discrete values

- reproducibility of results
- ease of design
- programmability
- speed

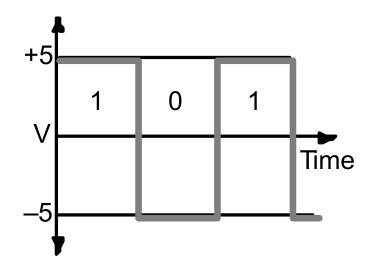


## Boolean Algebra


- Inputs and outputs can only have two discrete values:
  - physical domain (usually, voltages) (0V/5V)
  - mathematical domain : Boolean variables (true/ false, 0/1)
- Boolean algebra is used to analyze and describe the behavior of digital circuits
  - a symbolic variable, such as x, represents the condition of a logic signal
  - algebraic operators, such as AND, OR and NOT, represent logic gates
    - a gate is the most basic digital device and has one or more input and produces an output that is a function of the current input value(s)

## **Logic Gates**

- AND logical product
- OR logical sum
- NOT inversion

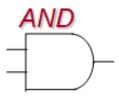

	У	x and y
X		xy
		x⋅y
		<i>x</i> ∧ <i>y</i>
0	0	0
0	1	0
1	0	0
1	1	1

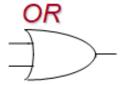

			x or y	
	X	У	x+y	
			<i>x</i> ∨ <i>y</i>	
-	0	0	0	
	0	1	1	
-	1	0	1	
-	1	1	1	



	not x
X	×
	<b>X</b> '
0	1
1	0

## **Number Systems**

- Digital systems are built from circuits that process binary digits
- Very few real-life problems are based on binary numbers or any numbers at all
- Some correspondence must be established between the binary digits processed by digital circuits and real-life numbers, events, and conditions
  - How to represent familiar numeric quantities?
    - number systems: binary, octal, and hexadecimal
  - How to represent nonnumeric data?

## Positional Number Systems

- In a positional number system, a number is represented by a string of digits, where each digit position has an associated weight.
- The value of a number is a weighted sum of the digits. For a decimal system with radix r = 10:
  - $-1734_{10} = 1 \cdot 1000 + 7 \cdot 100 + 3 \cdot 10 + 4 \cdot 1$   $-5185.68_{10} = 5 \cdot 1000 + 1 \cdot 100 + 8 \cdot 10 + 5 \cdot 1 + 6 \cdot 0.1 + 8 \cdot 0.01$
- In a general positional number system, the radix may be any integer  $r \ge 2$ , and a digit in position i has weight  $r^i$ .
- The general form of a number D in such a system is

$$D = d_{p-1}d_{p-2}...d_1d_0.d_{-1}d_{-2}...d_{-n} = \sum_{i=-n}^{p-1} d_i * r^i$$

, where there are p digits to the left of the point and n digits to the right of the point, called the **radix point**.

## Radices and Sets of Symbols

number system	radix	symbols
binary	2	0,1
octal	8	0, 1,, 7
decimal	10	0, 1,, 9
hexadecimal	16	0, 1,, 9, A, B, C, D, E, F

### Examples:

#### Decimal

$$2007_{10} = 2*1000 + 0*100 + 0*10 + 7*1$$

$$19.85_{10} = 1*10 + 9*1 + 8*0.1 + 5*0.01$$

## $D = \sum_{i=-n}^{p-1} d_i * 10^i$

$$D = \sum_{i=-n}^{p-1} d_i * 2^i$$

### Binary

$$1100110_2 = 1*2^6 + 1*2^5 + 1*2^2 + 1*2^1 = 64 + 32 + 4 + 2 = 102_{10}$$

$$101.0011_2 = 1*2^2 + 1*2^0 + 1*2^{-3} + 1*2^{-4} = 4 + 1 + 0.125 + 0.0625 = ..._{10}$$

Most significant bit

Least significant bit

## Number Systems Examples

### Examples:

#### Octal

$$D = \sum_{i=-n}^{p-1} d_i * 8^i$$

$$3577_8 = 3*8^3 + 5*8^2 + 7*8^1 + 7*8^0 = 1919_{10}$$
  
 $35.77_8 = 3*8^1 + 5*8^0 + 7*8^{-1} + 7*8^{-2}$ 

#### Hexadecimal

$$D = \sum_{i=-n}^{p-1} d_i * 16^i$$

$$2007_{16} = 2*16^3 + 7*16^0 = 8199_{10}$$
 $7D7_{16} = 7*16^2 + 13*16^1 + 7*16^0 = 2007_{10}$ 
 $A.2C_{16} = 10*16^0 + 2*16^{-1} + 12*16^{-2} = 10 + 0.125 + 0.046875 = ..._{10}$ 

# Conversion from any Positional Number System to Decimal

- Radix 10 is important because we use it in everyday life.
- Radix 2 is important because binary numbers can be processed directly by digital circuits.
- Numbers in other radices are not often processed directly but may be important for documentation or other purposes.
- In particular, the radices 8 and 16 provide convenient shorthand representations for multibit numbers in a digital system.
- The value of the number expressed in radix r can be found by converting each digit of the number to its radix-10 equivalent and expanding the formula (D=  $\sum_{i=-n}^{p-1} d_i \times r^i$ ) using radix-10 arithmetic.

## Binary, Decimal, Octal, and Hexadecimal Numbers

binary	decimal	octal	hexadecimal
0	0	0	0
1	1	1	1
10	2	2	2
11	3	3	3
100	4	4	4
101	5	5	5
110	6	6	6
111	7	7	7
1000	8	10	8
1001	9	11	9
1010	10	12	Α
1011	11	13	В
1100	12	14	С
1101	13	15	D
1110	14	16	E
1111	15	17	F

# Conversion from Decimal to any Positional Number System: Integral Part

• The **integral part** of a number D expressed in decimal can be converted to any radix  $r \ge 2$  by **successful division of D by r** (using radix-10 arithmetic, until the result is 0) with **reverse recording** (in radix r) of all the obtained **remainders**.

### Examples:

### Conversion to binary

#### Conversion to hexadecimal

# Conversion from Decimal to any Positional Number System: Fractional Part

• The **fractional part** of a number D expressed in decimal can be converted to any radix  $r \ge 2$  by **successful multiplication of** D by r (using radix-10 arithmetic, until the desired precision is reached) with **direct recording** (in radix r) of all the obtained **integral parts**.

### Examples:

### Conversion to binary

$$0.6875_{10} = ???_2$$

$$0.6875_{10} = 0.$$

#### Conversion to hexadecimal

$$0.25_{10} = ???_{16}$$

$$0.25_{10} = 0.$$
 <sub>16</sub>





## Rounding Error

- If the successive multiplication processes does not seem to be heading towards a final zero, the fractional number will have an infinite length. Try representing  $0.33_{10}$ in binary.
- So the number of multiplication steps should be limited depending on the degree of accuracy required.
- In order to keep the accuracy of the original presentation, the following formula is applied:

 $r_1$  – initial radix

 $n_2 = \lfloor n_1 * \log_{r_2} r_1 \rfloor$ 

 $r_2$  – final radix

 $n_1$  – number of fractional digits in the original number, expressed in radix  $r_1$ 

 $n_2$  – number of fractional digits in the converted number, expressed in radix  $r_2$ 

### Examples:

$$0.6875_{10} = ???_2$$

 $0.6875_{10} = ???_2$   $0.6875_{10} = 0.1011_2$   $0.6875_{10} = 0.1011000000000_2$ 

$$A.2C_{16} = 10*16^{0} + 2*16^{-1} + 12*16^{-2} = 10 + 0.125 + 0.046875 = 10.171875 = 10.17_{10}$$

$$101.0011_2 = 1*2^2 + 1*2^0 + 1*2^{-3} + 1*2^{-4} = 4 + 1 + 0.125 + 0.0625 = 5.1875 = 5.2_{10}$$

## **Special Conversion Cases**

- When a number is converted from radix  $r_1$  to radix  $r_2$  and  $r_1 = r_2^x$ , then each digit in radix  $r_1$  can be **substituted directly** with x radix  $r_2$  digits.
- The **octal** and **hexadecimal** number systems are useful for representing multibit numbers because their radices are powers of 2.
- Each octal digit is represented with 3 binary digits (8=2<sup>3</sup>). Each hexadecimal digit is represented with 4 binary digits (16=2<sup>4</sup>).

### Examples:

Conversion from octal to binary

$$r_1 = 8$$
,  $r_2 = 2$ ,  $8 = 2^3$ 

753.6<sub>8</sub> = 111 101 011 . 110<sub>2</sub>

Conversion from hexadecimal to binary

$$r_1 = 16$$
,  $r_2 = 2$ ,  $16 = 2^4$ 

 $A5.E_{16} = 1010\ 0101\ .\ 1110_{2}$ 

## Special Conversion Cases (cont.)

- When a number is converted from radix  $r_1$  to radix  $r_2$  and  $r_1^x = r_2$ , then a sequence of x digits in radix  $r_1$  can be **substituted directly** with one radix  $r_2$  digit.
- To convert a binary number to octal, start at the binary point and work left, separating the bits into groups of three and replacing each group with the corresponding octal digit; then work right. Freely add zeroes on the left or right to make the total number of bits a multiple of 3.
- To convert a **binary number to hexadecimal**, start at the binary point and work left, separating the bits into groups of four and replacing each group with the corresponding hexadecimal digit; then work right. Freely add zeroes on the left or right to make the total number of bits a multiple of 4.

### Examples:

Conversion from binary to octal

$$r_1 = 2$$
,  $r_2 = 8$ ,  $2^3 = 8$ 

Conversion from binary to hexadecimal

$$r_1 = 2$$
,  $r_2 = 16$ ,  $2^4 = 16$ 

 $1\ 101\ .\ 010_2 = 15\ .\ 2_8$ 

 $110\ 0101\ 1100_2 = 65C_{16}$ 



## Summary of Conversion Methods

From	То	Method
Binary	Octal	Substitution (replace each group of 3 bits with the corresponding octal digit)
	Decimal	Summation (D= $\sum_{i=-n}^{p-1} d_i \times 2^i$ )
	Hexadecimal	Substitution (replace each group of 4 bits with the corresponding hexadecimal digit)
Octal	Binary	Substitution (each octal digit is represented with 3 bits)
	Decimal	Summation (D= $\sum_{i=-n}^{p-1} d_i \times 8^i$ )
	Hexadecimal	Convert to binary, then to hexadecimal
Decimal	Binary	Division by 2 for integral part, multiplication by 2 for fractional part
	Octal	Division by 8 for integral part, multiplication by 8 for fractional part
	Hexadecimal	Division by 16 for integral part, multiplication by 16 for fractional part
Hexadecimal	Binary	Substitution (each hexadecimal digit is represented with 4 bits)
	Octal	Convert to binary, then to octal
	Decimal	Summation (D= $\sum_{i=-n}^{p-1} d_i \times 16^i$ )

### **Exercises**

Explain Moore's Law.

 What are the advantages of digital systems compared to analog systems?

When an OR gate output is 0?

When an AND gate output is 1?

## Exercises (cont.)

- How to convert an integer octal number into hexadecimal?
- Consider that expression  $1234_r < 1234_8$  is true. Is it possible to determine the value of r?
- Is it possible to convert the number 39<sub>8</sub> into decimal?
- What is the relationship (>, =, or <) between  $34_8$  and  $34_{16}$ ?
- Is the following affirmation true:  $20=14_{16}$ ?

## Exercises (cont.)

 Convert the following numbers into binary, octal, decimal, and hexadecimal:

```
10111011001_{2} = 2731_{8} = 5D9_{16} = 1497_{10}
1234_{8} = 001010011100_{2} = 29C_{16} = 668_{10}
CODE_{16} = 1100000011011110_{2} = 140336_{8} = 49374_{10}
108_{10} = 1101100_{2} = 154_{8} = 6C_{16}
15.46_{10} = 1111.011101_{2} = 17.35_{8} = F.7_{16}
```

