1. Connection

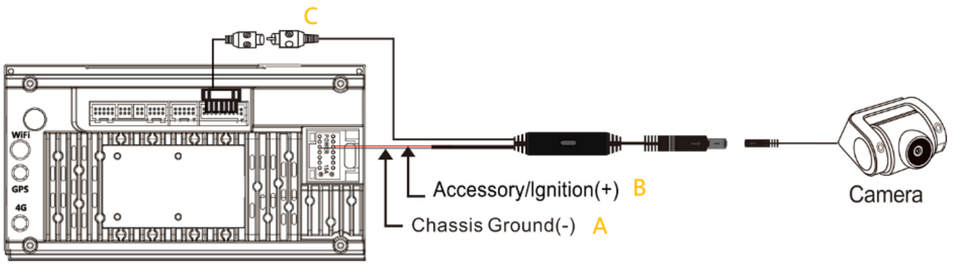

(1) . Connect the [**A**] black cable of extension cable to the black ground wire labeled “Chassis Ground (-) of the power harness of the car stereo.

(2) Connect the [**B**] red power wire of the extension cable to the Accessory/Ignition wire of the power harness of the car stereo.

(3) Connect the [**C**] FCR cable of the extension cable to the FCR adapter cable labeled “F_CAM_VID” (not included) which is connected to the car stereo.

Importance

1. Capability: The AC-FCR04W dash camera is compatible with our S8PN, S8UN, and S8MS series car stereos.

2. Use of External Storage USB: To save recorded footage and images, insert a USB 3.0 card reader with a TF card (Max. 128GB, not included) into the External Storage USB port.

2. Installation

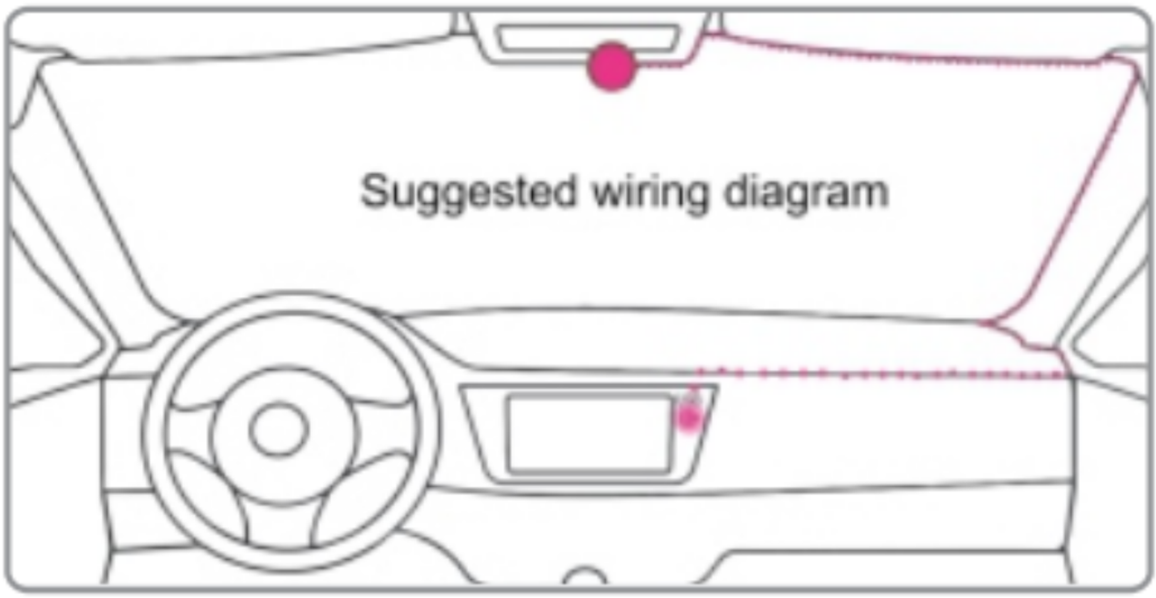

Selecting the Recording Device: Once the AC-FCR04W is connected, and the USB 3.0 card reader with the TF card (not included) is inserted, go to the DVR app.

Navigate to > Recording Settings > Select Recording Device, and choose the USB device to store footage and images.

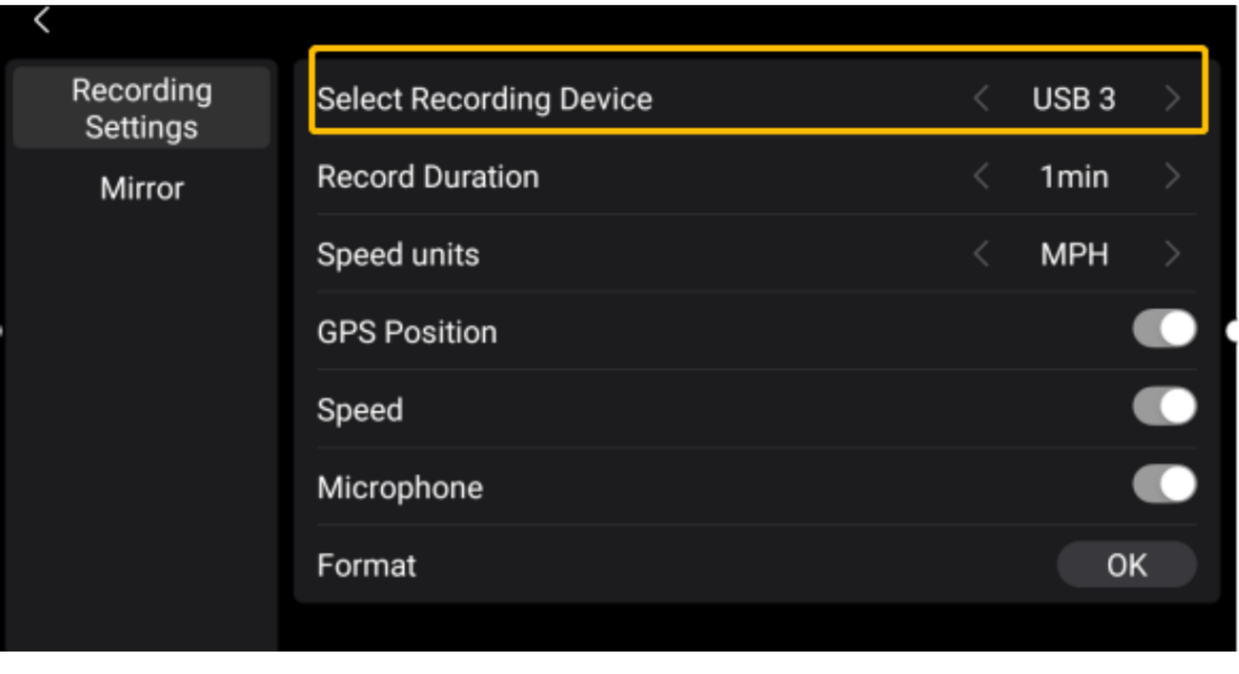

3. Operation

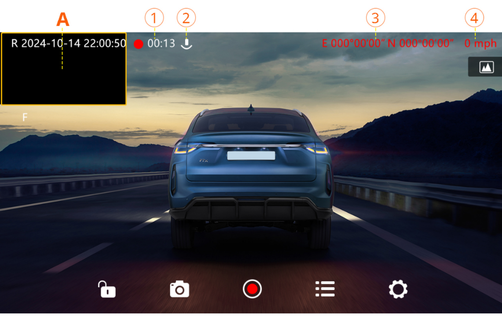

① Recording Status: Shows the duration of the ongoing recording. A red dot indicates active recording.

② Microphone: Audio recording is enabled.

③ GPS Coordinates: Shows the vehicle's current latitude (N) and longitude (E) as captured by the GPS.

④ Speed Indicator: Shows the vehicle's current speed.

R: Rear Recording Camera View

F: Front Recording Camera View

Area A: If the rear recording camera (AC-RCR04W, sold separately) is installed, Area A will display the rear view. Otherwise, this area will remain blank.

: Tap to enter display settings

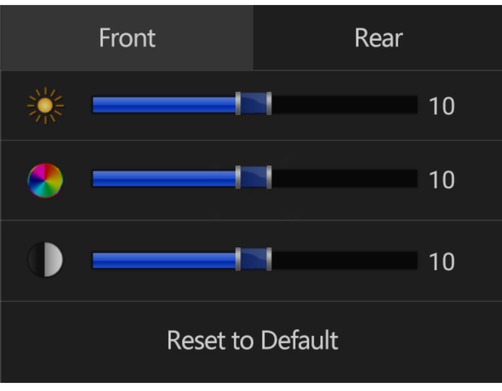

Tap to lock the current footage, preventing it from being overwritten.

Tap to take a picture.

Tap to stop recording. Tap it again to resume recording.

Tap to manage the saved footage and pictures.

Tap to enter settings:

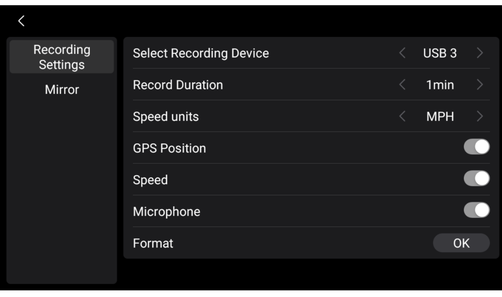

4. Notes

①Requires a USB 3.0 card reader with the TF card for use as a recording device (not included).

②Playback Limitation: You cannot play local audio or video files from the same device used for recording. Please use a separate device for playback.

③After formatting the USB recording drive, it is necessary to unplug and reinsert it before selecting it again in the settings to enable proper recording.

④Recommended Setup for External Storage: For optimal performance, use an external storage device connected via a dedicated USB cable for recording. The Phone Link USB port can be used for other tasks like playing media files, connecting wired CarPlay/Android Auto.

⑤AUX Application Interruption: If you switch to the AUX app during recording, the rear recording file won’t be saved. To resume proper file storage, re-enter the DVR application.

5. Specification

Specification	
Sensor Type	COMS
Image Sensor Size	1/2.9"
Effective Pixels	1936 (H) x 1096 (V)
Resolution	2 Megapixels
Automatic Gain Control (AGC)	Automatic
Backlight Compensation	Yes
Signal-to-Noise Ratio	39 dB (AGC OFF)
Video Format	AHD 25 fps
Operating Voltage	DC 3.3V to DC 5V
Video Output	AHD 1080P
Operating Temperature	-30°C to +75°C
Power Consumption	0.45W (U = 3.3V)
Dynamic Range	72 dB
Wide Dynamic Range Mode	TBD
Field of View	Horizontal 110°, Diagonal 150°, Vertical 60°
Lens	2G2P
Waterproof Rating	IP60
Focal Length	f = 2.0 mm
Aperture	1.8