

AT THE TOP OF THE MATS, THE ANCHOR SHOULD BE PLACED PARALLEL WITH THE TOED IN BLOCK

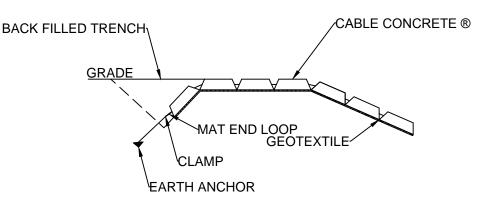

LEVEL GRADE APPLICATION

AT THE TOP OF THE MATS, THE ANCHOR SHOULD BE PLACED PARALLEL WITH THE TOED IN BLOCK

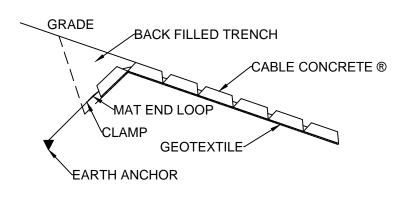

SLOPED APPLICATION



INTERNATIONAL EROSION CONTROL SYSTEMS

22253 Hoskins Line Rodney, ON, N0L 2C0 Phone: 800-821-7462 Fax:866-496-1990

www.iecs.com

ANCHOR PLACEMENT DETAIL

DRAWN BY: CHECKED BY:
D. JOHNSTON L

L. ARVAI

SCALE: N.T.S | DATE: 03/25/13 | SHEET 1 OF 1