


MAINS SIDE – 100–240 V AC. Keep ≥ 6 mm to everything on the low-voltage side.
F1 before everything; RV1 across L/N after the fuse, at the module input.

5 V from the certified, isolated HLK-PM01 (3 kV AC). D1 stops USB back-feeding it.



XIAO ESP32-C6. Pin map fixed by the firmware: D0–D5 = GPIO 0, 1, 2, 21, 22, 23.
D6–D10 unused. BOOT (GPIO9) and RESET are the buttons on the XIAO itself.

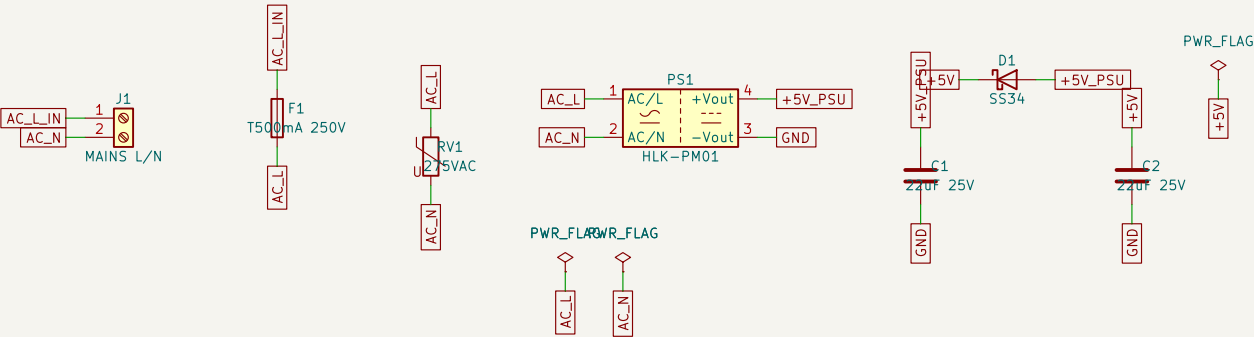