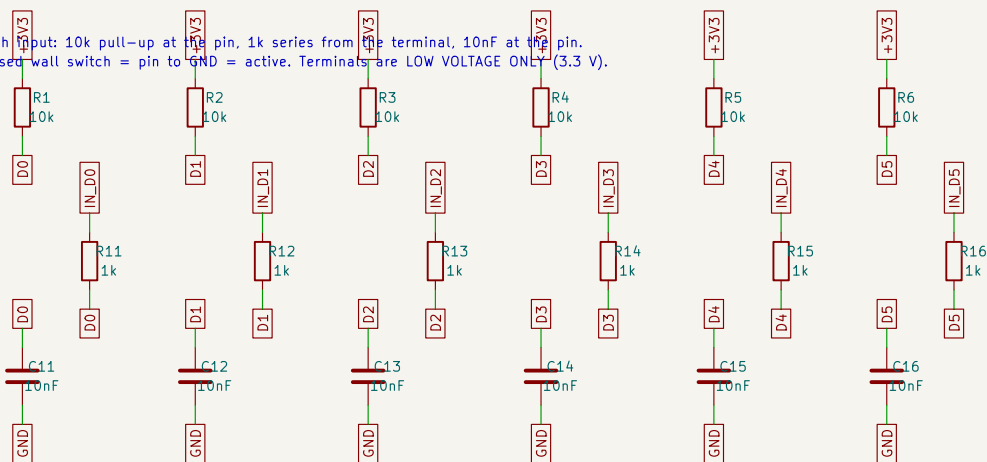




Sheet: /
File: hue-simple-switch-mains.kicad_sch

Id: 1/1

NEVER connect USB while the board is on mains. Uncertified design: installation by an electrician.