Bedroom trim — installation packet

1231 11th Ave, Unit 4 · Revision 2 · 8 November 2026 · English edition (a separate Spanish edition exists; English governs on conflict)

PLANNING DOCUMENT — NOT LOCKED FOR INSTALLATION. This is a working plan for review. Do not cut, buy or install from it until Tisa locks it.

What this revision is. This edition replaces the 12 October bedroom packet. It folds in **former Wall B Revision B**: Wall C now gets three tall upper frames and three lower frames instead of lower frames only. Wall lengths now come from the Magicplan MASTER plan (Wall A 122⅛", Wall C 120⅝"): frame sizes and 4" gaps stay the same and the end margins take up the difference. Materials, cut list, board map, crew steps and the renderings are updated to match.

Wall names: A = north / headboard wall · B = east / bay-window wall · C = south wall shared with the living room (the wall earlier papers called “Wall B”, Rev B) · D = west / entry wall with the door and the closet niche. The closet niche is handled in a separate closet packet. Outlet C3 = the earlier “B3”.

Living room: the living-room trim plan follows the same principles — find each wall’s centreline first, line everything up with the existing moldings as they are, draw in pencil then blue tape, one 4" spacer, frames built on a jig.

Contents

Part 1 — Concept	what the room will look like, design at a glance, closet niche note	2–3
Part 2 — Layout: guidelines, pencil and tape	the room and its walls, the two stages, the layout rule, lining up with the existing moldings, centreline, 4" spacer; then measure, draw in pencil, check, blue tape (can be done well before the molding)	4–8
Part 3 — Prep and installation	picture-frame molding: cut and build the frames, install, finish, final check; materials and purchase list last	9–17

Key numbers

- Wall A (north, headboard): **122⅛"** from the niche opening to the bay corner (Magicplan). Six frames 19 / 67 / 19, 4" gaps, **4 9/16"** at each end.
- Wall C (south, shared with living room): **120⅝"** from the bay corner to the entry corner (Magicplan). Six frames 31 / 43 / 31 wide (upper and lower), 4" gaps, **3 13/16"** at each end.
- Heights from finished floor: baseboard 9½ · lower frames 13½–31 · chair rail 35–37 · upper frames 41–99 (Wall A centre 55–99) · high trim underside 103.
- 12 frames · 48 mitred pieces · 21 eight-foot boards of House of Fara 719 (incl. 1 spare).


Ground rules

- Planning only: not locked for installation until Tisa locks it.
- Written dimensions govern. Do not scale drawings, photos or renderings.
- Check wall lengths and trim heights on site before cutting. If a measured condition conflicts, record it and get a corrected set-out first.
- This packet does not authorize purchases. Buying needs Tisa’s approval.
- Scope ends at the bedroom door. The closet niche on Wall D is in a separate closet packet.

PART 1 — CONCEPT

How the room will look

Picture-frame molding on the two long walls, a chair rail all the way along both, painted in one color with different sheens so the molding reads (exact color and sheens still to be decided; the pictures show the earlier Urbane Bronze proposal). The bay windows, the existing baseboard and the high horizontal trim stay.

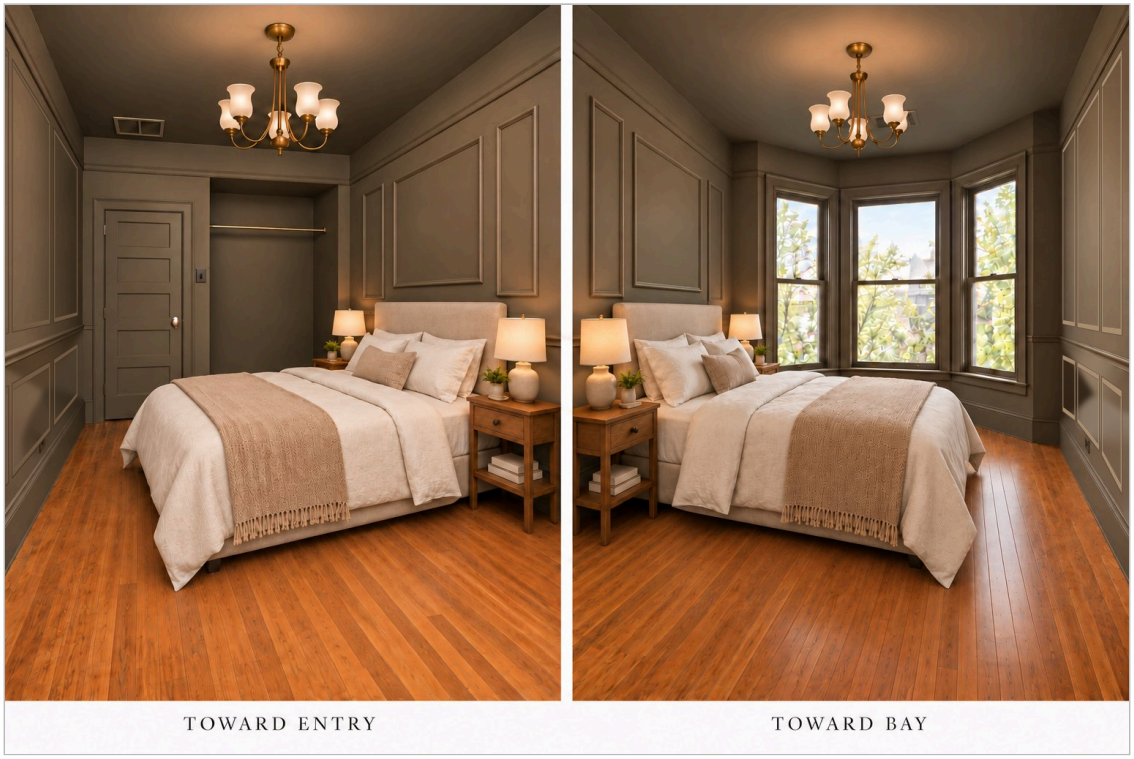

Top: furnished rendering looking toward the entry (Wall D) and toward the bay (Wall B) (Wall C is the side wall on the left, then on the right). Below: each wall straight on, painted onto the real photos. All illustrations only — not for measuring.



Wall A (headboard, north) — finished, on the real wall




Wall C (shared with living room, south) — finished to Revision B, on the real wall

PART 1 — CONCEPT

Design at a glance

Molding	House of Fara 719, 1¼" face. One outline per frame, same profile on both walls.
Chair rail	Simple paint-grade rail, 2" face: bottom 35", centre 36", top 37". Same level on both walls. Stops at the niche boundary.
Keep	9½" baseboard and the high horizontal trim (underside 103"). No ceiling crown.
Paint	**Not decided yet** — the exact color and sheens are still being chosen. Earlier proposal (for reference only): one color, Urbane Bronze — walls eggshell, trim satin, ceiling flat.
Outlets	In the wall above the baseboard, centre 11½" from the floor, dark horizontal covers. Placed by geometry from each wall's centreline: Wall A at ±47" (centred under the two side lower frames); Wall C (C3) on the centreline. No boxes in the baseboard.
Wall B (bay)	Bay windows: no frames, no chair rail; keep the windows, casings, baseboard and high trim; paint only.
Furniture	Planned for a queen bed and two side tables on Wall A. Frames are full size even where furniture hides them.

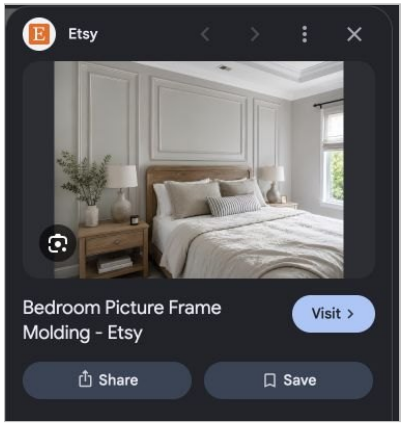


Style reference for Wall A (tall side frames, shorter wide centre). Copy the composition only, not its nested molding or crown.

PART 2 — LAYOUT: GUIDELINES, PENCIL AND TAPE

The room and its walls (A, B, C, D)

Stand at the bay windows (EAST) and face the bedroom door (WEST). **Wall A** is on your right — the NORTH wall, headboard wall, next to the closet niche. **Wall C** is on your left — the SOUTH wall, shared with the living room. **Wall B** is the bay-window wall behind you (EAST): no frames, paint only. **Wall D** is the entry wall (WEST) with the door and the closet niche; the niche is covered in a separate closet packet.

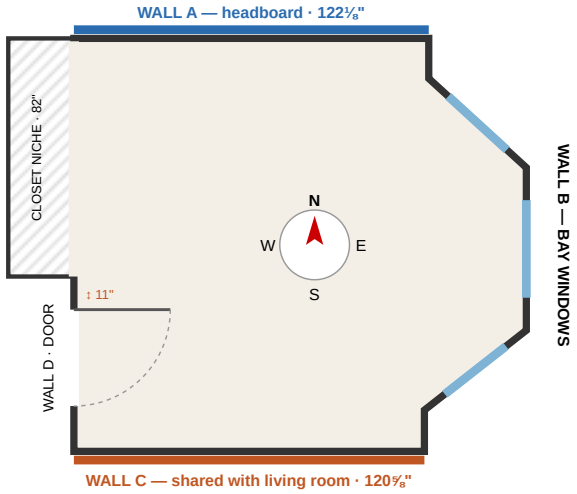

Drawn to scale from the Magicplan MASTER plan: room 155¾ × 142¼ in, niche opening 82⅛ in from the north corner, door about 33 in, about 11 in south of the niche opening, hinged on the niche side. North is up.

The closet niche (Wall D)

> **Separate closet packet.** The closet niche on Wall D is not built from this packet. It gets its own closet packet (coming separately). In short, it will cover:

- New framing across the top of the niche opening so it can be drywalled: the bottom of the new drop lines up with the bottom of the high trim (103"), as in the Part 1 pictures, so the high trim reads continuous across Wall D.
- Low-voltage cable on the left side of the niche for a future wall light switch: coiled at the bottom and run up the wall to the attic for a future junction box — before any drywall.
- Drywall in the niche; no picture-frame molding and no chair rail inside.
- The niche ceiling: today it is completely open to the attic as the temporary attic opening. It gets framed and closed with drywall much later, only after the low-voltage cable is in and the permanent attic hatch exists somewhere else (location still to come from NEXT). A small hatch opening may also be kept here in the niche ceiling (possibly — not decided).
- The closet rod.

Until that packet is issued, do not close up the niche. This bedroom packet covers Walls A and C (frames), Wall B (paint only) and the trim and paint everywhere else.

PART 2 — LAYOUT: GUIDELINES, PENCIL AND TAPE

Guidelines

The layout rule

1. **Find the centreline** of each wall.
2. **Draw everything in pencil** — chair rail, every frame, outlet marks.
3. **Step back and check.** Fix it in pencil until it looks right.
4. **Only then put up the blue tape.**

- **Two separate stages.** This part is the layout only: measure, centreline, pencil, check, blue tape. Prep and installation of the molding (Part 3) may come weeks later.
- **Measure first.** Magicplan shows Wall A 122⅛" (niche opening to bay corner) and Wall C 120⅝" (bay corner to entry corner). Tape both. If a wall is different, keep every frame size and every 4" gap and split the difference equally between the two end margins.
- **Line up with the existing moldings as they are.** The new chair rail and frames run parallel to the existing baseboard and high trim, even where those are not perfectly level, so nothing looks crooked next to them. Quickest way: set the Milwaukee level's line to match the existing molding (for example the top of the baseboard) and measure up or down from that line.
- **One 4" spacer block sets every gap:** 4" between frames; baseboard top 9½ + 4 = 13½ (bottom of lower frames); rail bottom 35 − 4 = 31; rail top 37 + 4 = 41 (bottom of upper frames); high trim 103 − 4 = 99.
- **Services.** Locate wires and pipes before marking outlet boxes or fastening anything — especially on Wall C, which is shared with the living room. The closet niche on Wall D is not part of this packet.
- **Stop and ask Tisa** if the baseboard and high trim are not parallel to each other, or if anything does not fit the layout.

Layout steps

Lay out: measure, draw it all in pencil, check it, THEN tape

1. **Identify the walls and measure.** Stand at the bay facing the door: Wall A right, Wall C left, Wall B (bay) behind you, Wall D (door and niche) in front. Tape Walls A and C. Note the baseboard top (about 9½") and the high-trim underside (about 103").
2. **Prepare the walls.** Protect the oak floor. Patch defects, remove loose paint and dust, let repairs dry. Outlet boxes and empty tubing coordinated before walls are closed.
3. **Find each wall's centreline.** Halve the measured length and mark a plumb line from floor to high trim with the Milwaukee level: Wall A 61 1/16" from the niche opening, Wall C 60 5/16" from the bay corner (or half of what you measured).
4. **Draw the chair-rail line in pencil.** Set the level's line to the top of the existing baseboard and measure up: rail bottom 35", centre 36", top 37" (that is 25½", 26½" and 27½" above a 9½" baseboard).
5. **Draw every frame in pencil.** From the centreline, using the frame schedule and the wall drawings on the next pages. Pencil the OUTSIDE edge of each frame; set heights with the 4" spacer. Mark the outlet centres too.
6. **Step back and check.** Look at each whole wall from across the room. Fix it in pencil until it looks right, then go through the layout check. Send Tisa a photo of each wall.
7. **Only when it looks good: blue tape.** Run blue painter's tape along the OUTSIDE of each pencilled outline and along the rail lines. Never tape before the pencil layout is checked.


Layout check — before calling the layout done

- ☐ Centreline marked, plumb, on Walls A and C.
- ☐ Chair-rail lines parallel to the existing baseboard; frames parallel to the baseboard, rail line and high trim.
- ☐ Every frame pencilled at its outside edge; gaps 4"; end margins equal on each wall.
- ☐ Outlet marks under the right frames (A ±47", C3 on the centreline).
- ☐ Stepped back and looked: it looks right. Then blue tape on the outside edges.
- ☐ Photo of each wall sent to Tisa.


PART 2 — LAYOUT: GUIDELINES, PENCIL AND TAPE

Wall A — headboard wall (NORTH)

Six frames on the 122⅛" wall (Magicplan). Station 0 is the niche opening (entry end). End margins 4 9/16", gaps 4". Upper sides 19 × 58 (41–99); upper centre 67 × 44 (55–99); lower row 19 / 67 / 19, all 17½ high (13½–31). Composition centre 61 1/16". Draw each outline in pencil first, check it, then mark it with blue tape. The tape marks the OUTSIDE edge of the molding, not its centre.

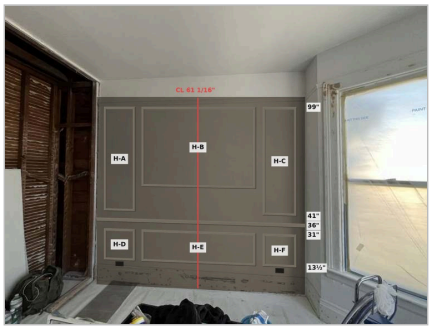


Rendering on the real wall with frame names, centreline (CL) and heights. Illustration — measure from the drawing below.

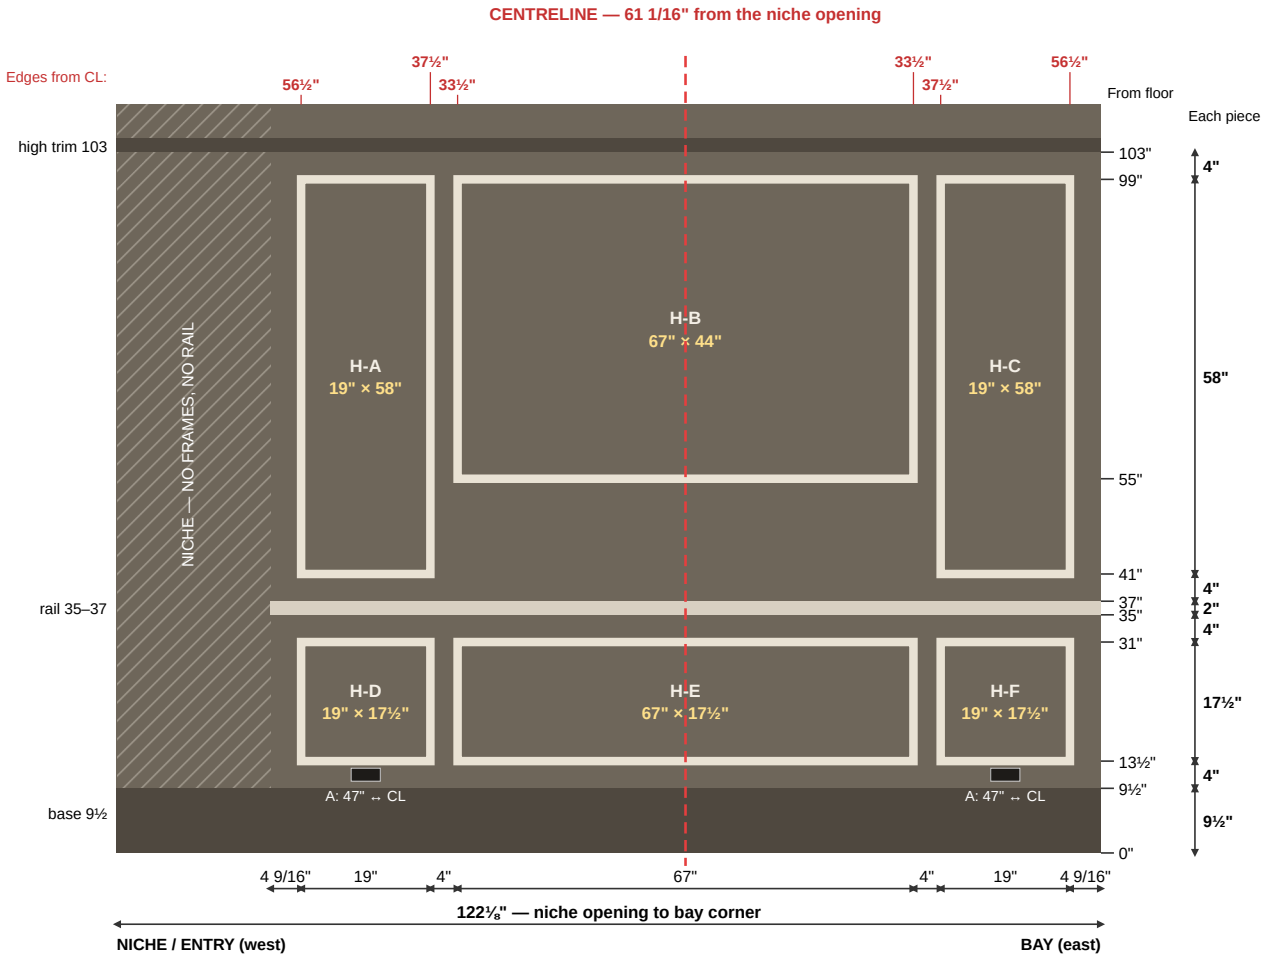


PART 2 — LAYOUT: GUIDELINES, PENCIL AND TAPE

Wall C — shared with living room (SOUTH) · former Wall B, Revision B

Six frames on 120⅝" (Magicplan). Station 0 is the BAY corner. Three tall uppers 31 / 43 / 31 × 58 (41–99) and three lowers 31 / 43 / 31 × 17½ (13½–31). Upper and lower frames share the same vertical edges. Check: 3 13/16 + 31 + 4 + 43 + 4 + 31 + 3 13/16 = 120⅝. Composition centre 60 5/16"; outlet C3 sits under the middle lower frame. Draw each outline in pencil first, check it, then mark it with blue tape. The tape marks the OUTSIDE edge of the molding, not its centre.

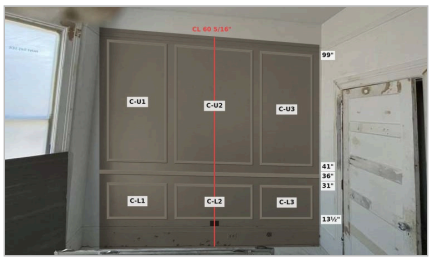

Rendering on the real wall with frame names, centreline (CL) and heights. Illustration — measure from the drawing below.

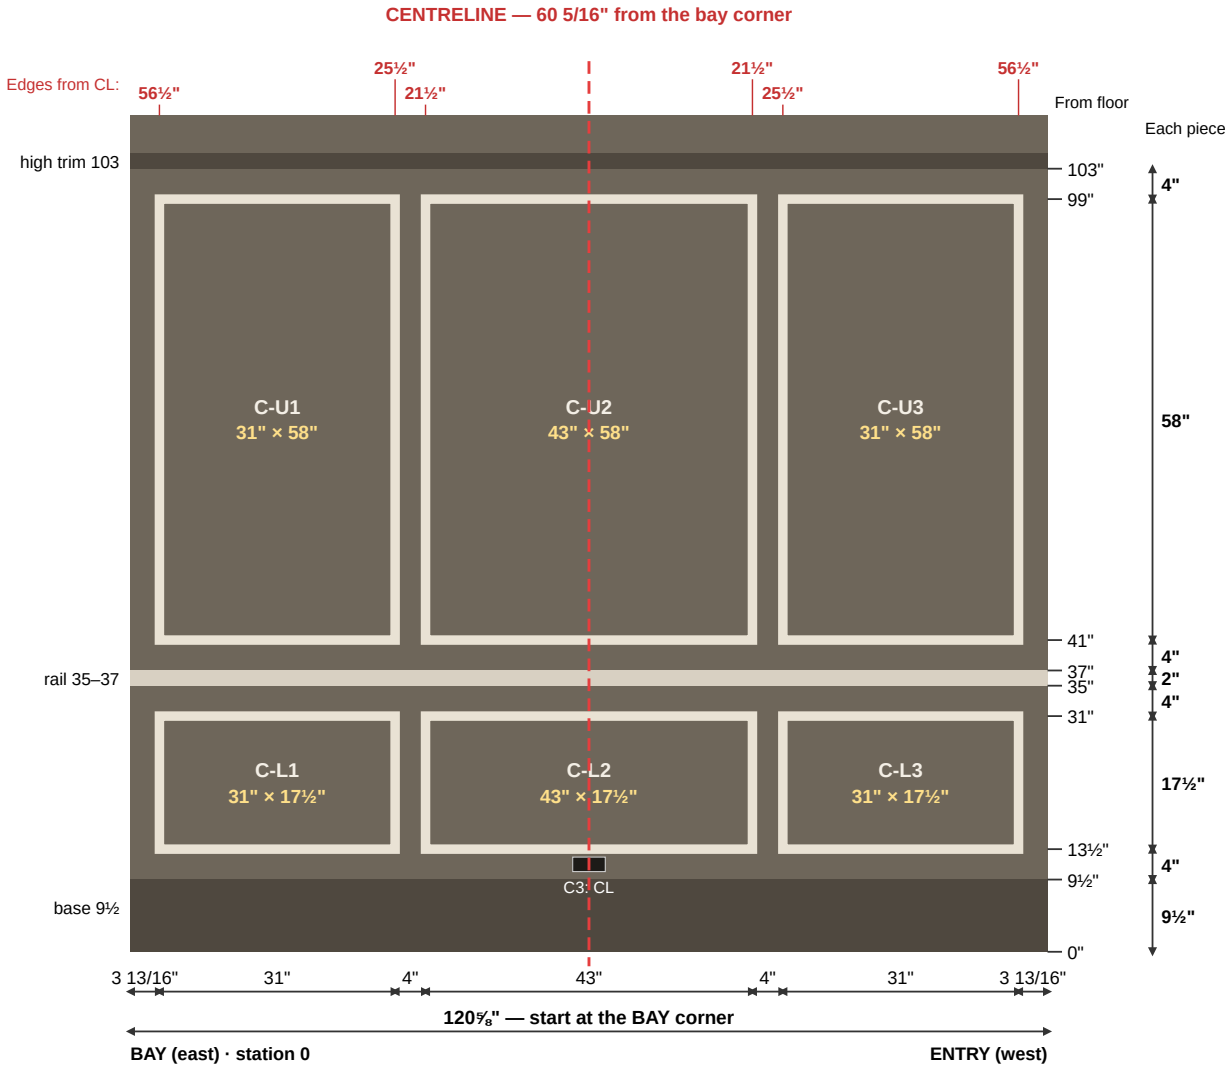

PART 2 — LAYOUT: GUIDELINES, PENCIL AND TAPE

The numbers, from the centreline

- **Wall A** (centreline 61 1/16" from the niche opening): centre frame −33½ to +33½; side frames ±37½ to ±56½; outlets at ±47 (under the side lower frames).
- **Wall C** (centreline 60 5/16" from the bay corner): centre frame −21½ to +21½; side frames ±25½ to ±56½; outlet C3 on the centreline (under the middle lower frame).
- **Heights** (all walls): lower frames 13½–31; chair rail 35–37; upper frames 41–99, except Wall A's upper centre frame 55–99. Outlet centres 11½" from the floor.

Frame schedule — both walls

Wall	Frame	Left → right (from wall start)	Bottom → top	From centreline	Outside W × H	Opening
A	**H-A**	4 9/16" → 23 9/16"	41" → 99"	−56½ → −37½	19" × 58"	16½" × 55½"
A	**H-B**	27 9/16" → 94 9/16"	55" → 99"	−33½ → +33½	67" × 44"	64½" × 41½"
A	**H-C**	98 9/16" → 117 9/16"	41" → 99"	+37½ → +56½	19" × 58"	16½" × 55½"
A	**H-D**	4 9/16" → 23 9/16"	13½" → 31"	−56½ → −37½	19" × 17½"	16½" × 15"
A	**H-E**	27 9/16" → 94 9/16"	13½" → 31"	−33½ → +33½	67" × 17½"	64½" × 15"
A	**H-F**	98 9/16" → 117 9/16"	13½" → 31"	+37½ → +56½	19" × 17½"	16½" × 15"
C	**C-U1**	3 13/16" → 34 13/16"	41" → 99"	−56½ → −25½	31" × 58"	28½" × 55½"
C	**C-U2**	38 13/16" → 81 13/16"	41" → 99"	−21½ → +21½	43" × 58"	40½" × 55½"
C	**C-U3**	85 13/16" → 116 13/16"	41" → 99"	+25½ → +56½	31" × 58"	28½" × 55½"
C	**C-L1**	3 13/16" → 34 13/16"	13½" → 31"	−56½ → −25½	31" × 17½"	28½" × 15"
C	**C-L2**	38 13/16" → 81 13/16"	13½" → 31"	−21½ → +21½	43" × 17½"	40½" × 15"
C	**C-L3**	85 13/16" → 116 13/16"	13½" → 31"	+25½ → +56½	31" × 17½"	28½" × 15"

All dimensions to the OUTSIDE edge of the molding; heights from finished floor. Wall A: measure from the niche boundary. Wall C: measure from the bay end. Opening = inside of a 1¼" face.

PART 3 — PREP AND INSTALLATION

Molding steps

Before starting the molding (this may be weeks after the layout)

1. **Check the layout is still good.** Walk both walls. Pencil lines and blue tape still there and still true? Re-measure a few points from the centreline and the existing moldings. Replace any tape that has lifted, and remove tape that has been up a long time before it leaves residue — the pencil lines stay as the record.
2. **Confirm the go-ahead.** Molding work starts only after Tisa has locked the plan (paint color, sheens and any open items).

Build the frames

3. **Make the first (sample) frame.** Prime the molding boards before cutting (any good wood primer, crew's choice). From board 18 cut two 19" and two 17½" pieces for frame H-D (Wall A, lower left). Dry-fit, compare diagonals, glue, and hold it up to its taped outline. Fix any site conflict before batch cutting.
4. **Cut and label.** Fine finish blade, 45° miters, long point to long point. Clamp a stop block to the saw fence for repeat lengths. Cut matching pairs together, keep the profile the same way round, label the back of every piece by frame and edge.
5. **Assemble on a jig.** Build each frame flat on a square jig (two square stops on plywood): glue the miters, clamp, pin each corner with two brads, check that both diagonals match, let dry and sand off glue.

PART 3 — PREP AND INSTALLATION

Cut list and board map

Length (long point)	Pieces	Use
67"	4	Wall A centre frames, horizontals
58"	10	Wall A upper sides (4) + Wall C uppers (6), verticals
44"	2	Wall A upper centre, verticals
43"	4	Wall C middle frames, horizontals
31"	8	Wall C side frames, horizontals
19"	8	Wall A side frames, horizontals
17½"	12	All lower-frame verticals (A 6 + C 6)

Lengths are OUTSIDE LONG POINT to OUTSIDE LONG POINT, opposing 45° miters. Start with board 18: its first four pieces (19, 19, 17½, 17½) make the sample frame H-D, which is installed on Wall A. Tightest board is 93", leaving 3" for kerf and trimming — check your actual stock and blade kerf. Label the back of every piece by frame and edge.

PART 3 — PREP AND INSTALLATION


Cut list and board map




These guides are from the 12 Oct packet. Where they mention wall lengths or end margins, use this packet: Wall A 122⅛" with 4 9/16" ends, Wall C 120⅝" with 3 13/16" ends. Paint colors and sheens shown in them are the earlier proposal — not decided.

3. Measure and cut the miters

First sample: 19" wide × 17½" high, outside edge to outside edge

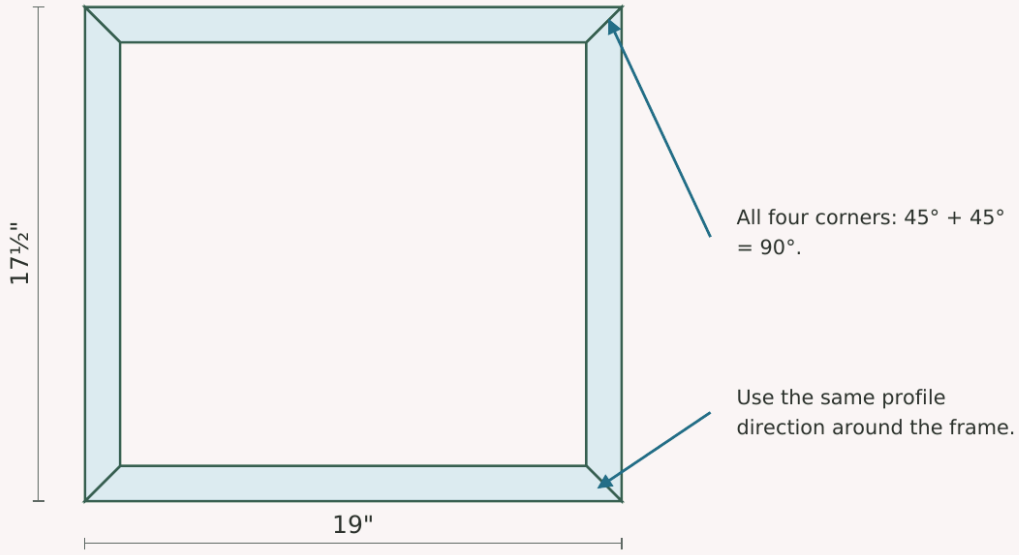

A horizontal piece, seen from its finished face

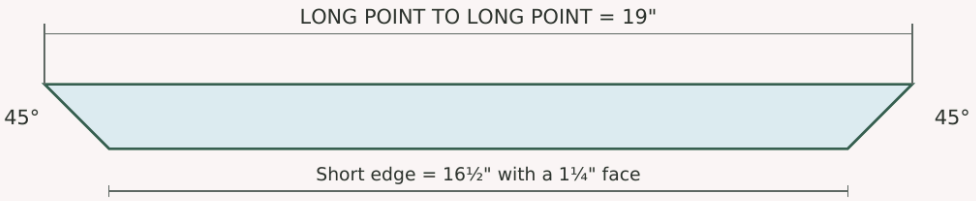

Cut two 19" pieces and two 17½" pieces. Keep the backs flat on the saw table; make opposing 45° miters. Set up and test the saw on scraps. Keep the finished molding face and its outside edge consistently identified.


Mark the cut on the waste side of the line. The saw kerf must not shorten the required long-point length. Label the back of each piece by frame and edge before cutting the next one.

The drawing exaggerates the profile for clarity; use House of Fara 719 with a 1¼" face. Wear eye/hearing protection and keep hands clear of the blade.

These guides are from the 12 Oct packet. Where they mention wall lengths or end margins, use this packet: Wall A 122⅛" with 4 9/16" ends, Wall C 120⅝" with 3 13/16" ends. Paint colors and sheens shown in them are the earlier proposal — not decided.

4. Square, glue and attach

Decorative frames can be attached to sound, properly prepared drywall

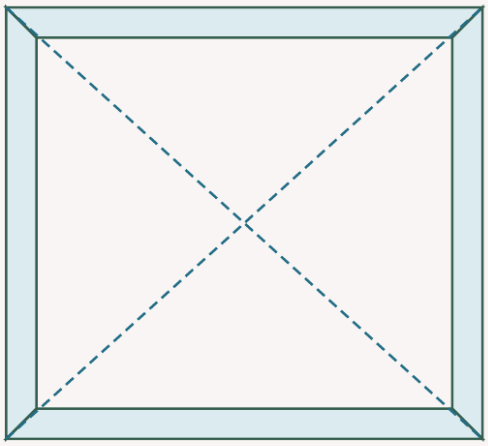

Equal diagonals

Dry-fit first. Width and height must match the schedule. Both diagonals must match; all four corners must close. Recut a bad miter.


Glue the bare wood miter faces and clamp the frame square. Leave the back bare where the water-based wall adhesive needs a porous surface.

BACK OF ONE PIECE



Apply the specified adhesive bead, kept back from visible edges. Follow the tube label; one surface must be porous.

WALL FACE

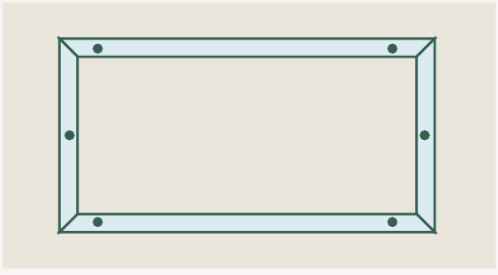

Press to the taped outline; recheck level and square. Test brad depth on a sample. Use appropriate temporary holding/brads while adhesive cures; mark concealed services before fastening.

Chair rail: fasten into suitable backing/studs. Dots illustrate holding points only; fastener locations depend on the actual wall.

PART 3 — PREP AND INSTALLATION

Molding steps

Install

6 **Chair rail.** Install the rail on its taped lines, fastened into backing or studs. Neat returns at exposed ends; stop at the niche opening.

7 **Frames.** Set each frame on its taped outline. Adhesive per the label on clean, sound wall; a dab of hot glue at each corner and brads (into studs where possible) to hold while it cures — test brad depth first. Remove the tape once the frames are on.

Finish and check


8 **Fill and caulk.** Fill holes, sand smooth. Recut open miters — filler does not fix a bad miter. Fine paintable caulk at the wall edges; keep the profile crisp.

9 **Paint.** Prime bare wood and patches. Paint in the color and sheens Tisa chooses (not decided yet). Never paint receptacle faces.

10 **Inspect and photograph.** See the final check page.

5. Finish without hiding the detail

Same Urbane Bronze color; different sheens make the molding legible

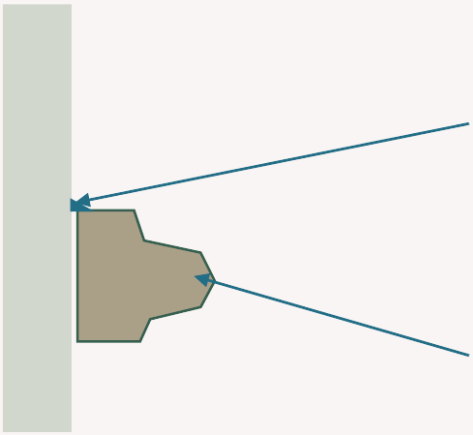

Fine paintable caulk at the wall edge. Wipe off excess; keep profile grooves clear.

Fill small nail holes and sand smooth. Keep the shaped face crisp. Glue and recut joints before filling; filler does not fix a bad miter.

Illustrative section

Surface	Finish
Picture frames, chair rail, baseboard, inside door face	Urbane Bronze · SATIN / SATINADO
Walls, including the flat fields inside the frames	Urbane Bronze · EGGSHELL
Flat ceiling; no ceiling crown	Urbane Bronze · FLAT / MATE

Prime bare wood and patches, then apply the specified paint. Follow the actual product’s dry, recoat and cure times. Keep the warm oak floor covered until the finish is safe from damage.

Final photo check: one straight-on photo of A and one of B, plus a view in each room direction. Check A end margins 5½", all gaps 4", B end margins 4", tight corners and smooth finish. No frames or chair rail inside the nook. Keep electrical covers low, dark and accessible.

PART 3 — PREP AND INSTALLATION

Final check and photos

- ☐ Wall A: 4 9/16" end margins, 4" gaps. Wall C: 3 13/16" end margins, 4" gaps; upper and lower frames line up on the same vertical edges.
- ☐ Lines straight and level; both diagonals equal on every frame; tight corners.
- ☐ Smooth paint in raking daylight; sheens as Tisa specified.
- ☐ Nothing inside the niche; baseboard and high trim intact.
- ☐ Outlet covers low, dark, accessible.
- ☐ Photos: Wall A straight on, Wall C straight on, one view toward the bay and one toward the entry. Note any dimension that changed on site.

Sources: Unit 4 Bedroom Complete English Packet, 12 Oct 2026 (Wall A, method, finishes, guide pages); Bedroom former Wall B Revision B, 2 Nov 2026. Renderings: 12 Oct renderings with Wall C redrawn to Rev B by Claude on 8 Nov 2026 — illustration only.

PART 3 — PREP AND INSTALLATION

Materials and purchase list

Item	Qty	Each	Extended	Notes
House of Fara 719 basswood molding, 8 ft	21	$10.28	$215.88	1¼" face; 20 boards for the cut plan + 1 spare
Loctite Power Grab Molding & Paneling, 9 oz	7	$5.06	$35.42	¼" bead; 143 ft frames + 20 ft rail
DAP ALEX FLEX 18542 caulk, white	3	$5.98	$17.94	fine beads only
DEWALT DBN18125-2 brads, 18 ga × 1¼"	1 box	$18.99	$18.99	check existing stock and nailer first
DAP Plastic Wood-X 00540, 5.5 oz	1	$8.48	$8.48	nail holes, small defects
Wood primer, 1 qt — any good primer for wood, crew's choice	1	~$17	~$17	priced at the earlier Zinsser 1-2-3 listing

Listed-price subtotal **$313.69** before tax and shipping. These are the bedroom's share. Molding will be bought together with the living room and the rest of the house, so spares come from that larger order. Prices are the 12 October 2026 web listings, not re-checked. No order placed; buying needs Tisa's approval. Check local stock and cart totals before paying.

Allowances and what to keep

Miter glue (Titebond Quick & Thick)	$7 allowance
Sanding, masking, brushes (crew stock first)	$20 allowance
Trim paint (color and sheen not decided), about 1 quart — may run short with 48% more molding; check before buying a second	$50 allowance
Chair rail, 2" face, about 20′ 5″ net (two 12-ft pieces)	$75 allowance; deduct if suitable stock is on hand
Baseboard and high trim	keep — no replacement
Tools: a 4" spacer block, a plywood assembly jig, a stop block, a hot-glue gun, pencils, blue painter's tape, the Milwaukee level already on site (plumb centrelines; for horizontal lines, set its line to match the existing molding and measure from it), miter saw with fine blade, tape, square, brad nailer, caulk gun, clamps, floor protection	crew equipment

Planning total with allowances **$390.69**; with the chair-rail allowance **$465.69**. Not a checkout quote.