
F-01 KEY PLAN, WHAT THIS IS, STATUS

KITCHEN DOORWAY INFILL + D04 SUBPANEL WALL — FRAMING PLAN

ENGLISH EDITION

KEY PLAN (owner north convention; model geometry, NTS)

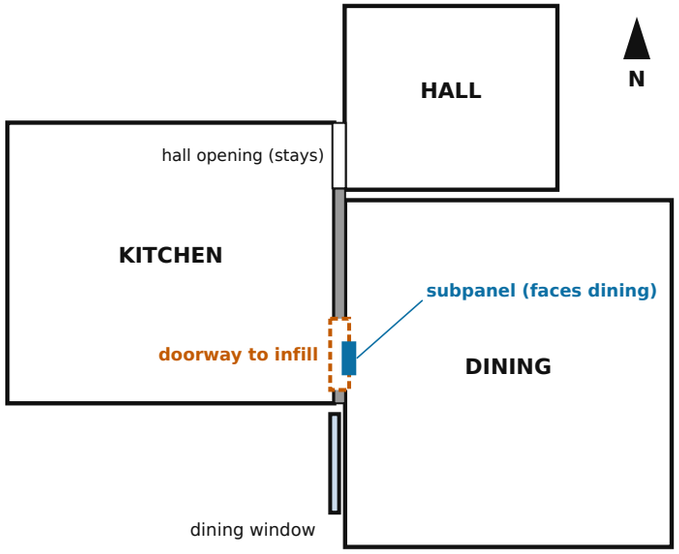

WHAT THIS IS

• One wall, two faces. The RIGHT opening in kitchen photo P02 and the D04 dining 'entry infill' are the SAME old doorway. Evidence: in the Magicplan model the kitchen east wall (126 1/4") is the only wall shared with the dining room; Electrical Rev A A-2 caption: 'right doorway closes (subpanel wall)'. Earlier notes kept them apart only because this was not yet checked.

• John frames the old doorway closed. The Eaton BRP20L125G subpanel (20 spaces, 125 A MLO) sits flush in that infill, door facing DINING (D04). Kitchen side gets plain drywall/backsplash behind it.

• Cabinet layout is unchanged: east run 36 corner + 24 drawer + 28 fridge = 88" from the SE corner (K002).

• Panel centre target from R2: x = W/4 + 1" from the outside edge of the rightmost window casing (dining side), 65" AFF. With the model width (92–96") that puts the panel about 20–23" north of the kitchen SE corner — inside the old doorway.

STATUS OF EACH PART

- Construction-ready (green): standard details that do not depend on open numbers — 14 1/2" can bay, full-height studs, fastening, dining wall build-up table, kitchen no-screw zone.
- Review (orange): anything whose position depends on W, the opening jambs or header height (checks C1–C3). The mark table on F-05 turns W straight into marks.
- Hold (red): sill/head blocks and setting the can wait for the actual can AND cover on site (C5) and electrician review. Panel purchase still needs current quote + Tisa's payment approval.

NOT IN THIS SET

Feeder size/route, breaker schedule, cable exits through the header, art cover hardware, D5 outlet position, pocket door (J-05). Electrical owner and interior lead keep those.

SHEETS

F-01 KEY PLAN, WHAT THIS IS, STATUS
F-02 DINING FACE (D04) — FINISHED ELEVATION
F-03 KITCHEN FACE (EAST / FRIDGE WALL) — ELEVATION
F-04 INFILL FRAMING ELEVATION + WALL SECTION
F-05 MARK SHEET + SITE CHECKS
F-06 MATERIALS, CUT LIST, WORK SEQUENCE

SOURCES

• Living/Dining Wall Treatments R2 (30 Oct) pp. 2–4, 11, 13 — D04 datum, x = W/4 + 1, 65 AFF, frame setout.

• Electrical Plan Package Rev A (26 Oct) E-4, E-8, E-11, A-2 — east wall 126 1/4, hall opening 29 3/8, ceiling 121 1/2, 'right doorway closes'. Its living-face, ≥40-space and 80 A items are superseded by E20-R1.


• E20-R1 + D04 independent review (1 Nov) — BRP20L125G, BRPX2A20L1F 15.3 × 22, X2 ≈21.10 × 14.30 × 3.80 (depth up to 3 7/8), 100 A Cu in conduit.

• Kitchen Rev B / K002, K306; Kitchen Framing Review R1 (1 Nov); photo P02; Magicplan export S01 (model geometry, not field).

F-02 DINING FACE (D04) — FINISHED ELEVATION

KITCHEN DOORWAY INFILL + D04 SUBPANEL WALL — FRAMING PLAN

ENGLISH EDITION

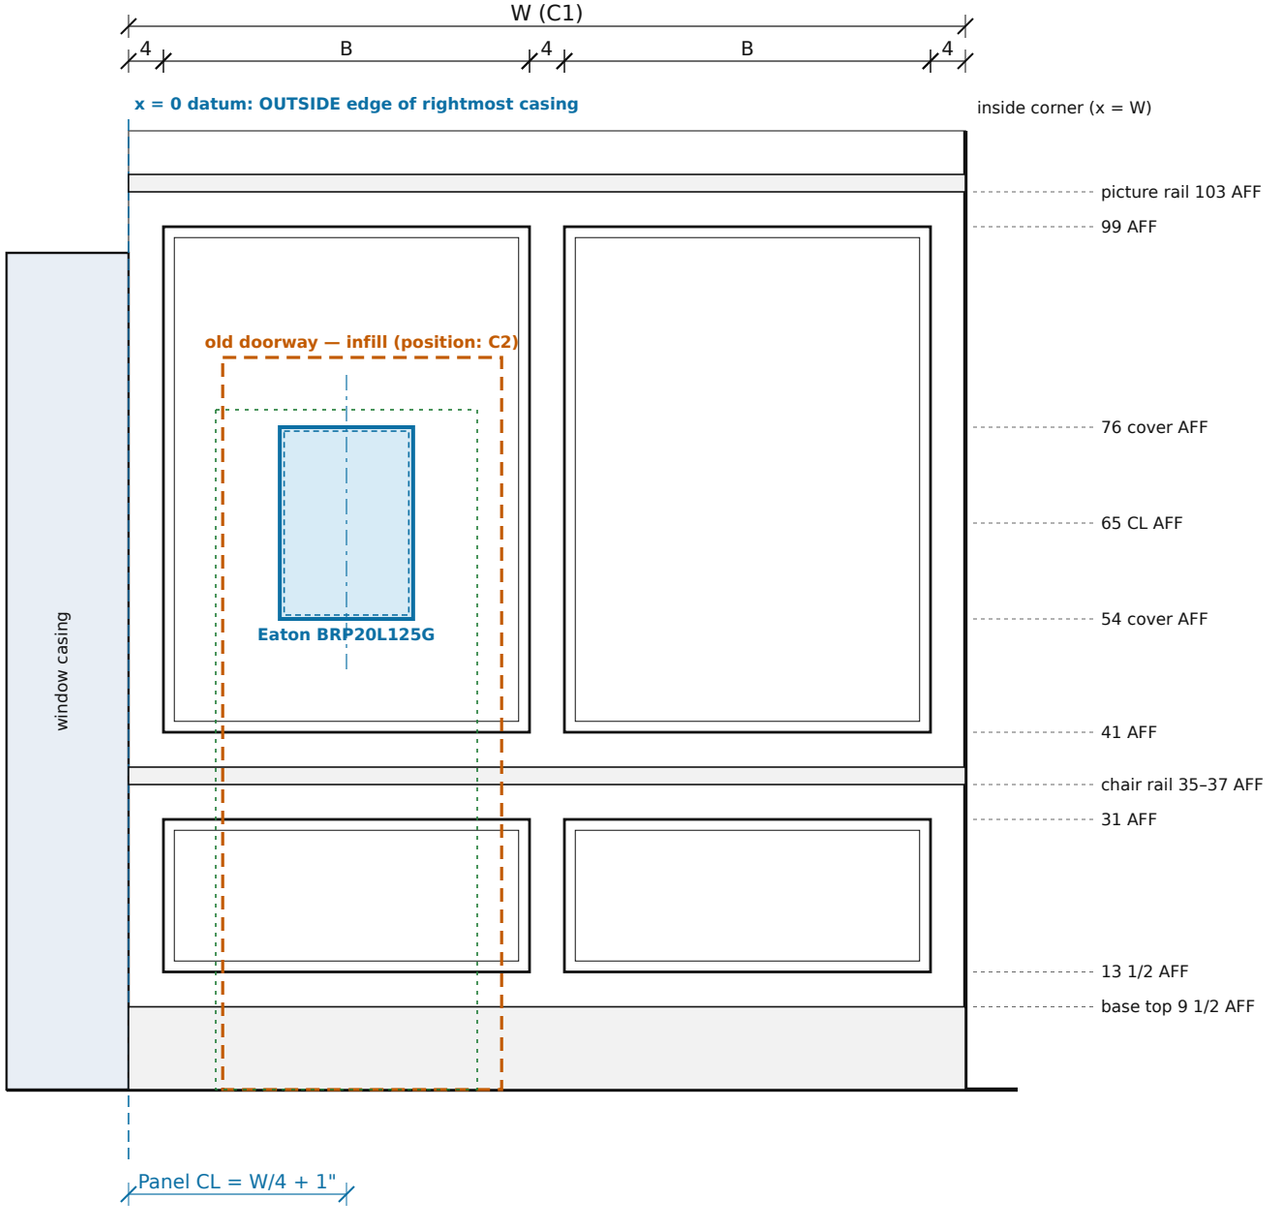

Seen from DINING, facing WEST. Left = south (window). Right = north (inside corner).

1:16 on tabloid. Drawn at model W = 96". Do not scale — dimensions govern.

W = window-casing outside edge → north inside corner (check C1). Model 92–96".

B = (W − 12) / 2

Panel CL = W/4 + 1" = 25" at model W = 96

cover 15 5/16 W × 22 H (published)

can ≈14 5/16 × 21 1/8 (verify in hand)

keep clear: 30" wide × 36" deep × 6'-6" high working space

Picture frames (R2): upper 41–99, lower 13 1/2–31 AFF; 4" gaps; panel centred in left upper bay.

- Heights are above the DINING finished floor (AFF). Confirm the dining floor stays as finished floor (C3).
- Cover 54–76" AFF; can ≈54 7/16–75 9/16" AFF. Highest breaker handle well under 6'-7".
- Panel is ~13" above the upper-frame bottom and 23" below its top: fits inside the 1 1/4" frame opening.
- No art-cover screws into or through the panel. Art cover needs electrician acceptance (R2).
- D5 outlet: keep out of the panel stud bay and the jamb studs; interior lead places it.

REVIEW — POSITION DEPENDS ON CHECKS

1231 11th Avenue, Unit 4 — San Francisco

Supersedes: nothing. Continues D04 Integrated Review R1 (interior), Kitchen Rev B K306, E20-R1.

Owner: Tisa Vo. Prepared for John (framing). Electrician governs electrical acceptance.


Separate Spanish edition: ... R1_ES.pdf. English governs.

REVIEW DRAWING — NOT A CUT RELEASE

F-03 KITCHEN FACE (EAST / FRIDGE WALL) — ELEVATION

KITCHEN DOORWAY INFILL + D04 SUBPANEL WALL — FRAMING PLAN

ENGLISH EDITION

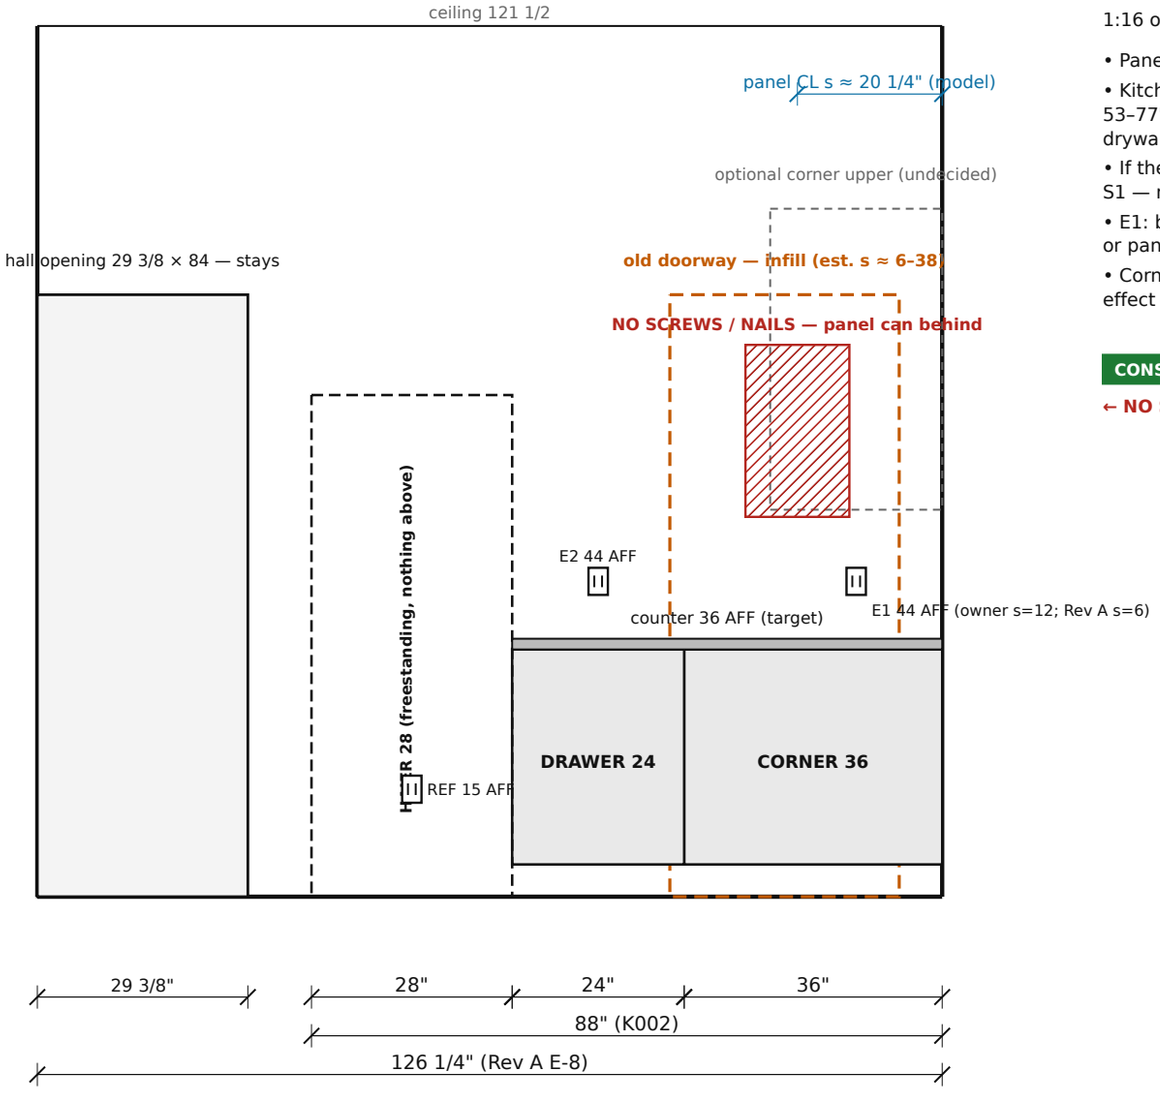

Seen from KITCHEN, facing EAST. Left = north (hall). Right = SE corner (sink wall).

1:16 on tabloid. Stations s measured NORTH from the SE finished corner (kitchen datum).

- Panel CL is about s = 20–23" (model). Exact = from the F-05 marks transferred through the open wall.
- Kitchen side: 1/2" drywall continuous over the can back. In the hatched zone (bay between S1 and S2, 53–77" AFF) no screws, nails, anchors or cabinet rails. The can back is only ~1/4–5/8" behind the drywall.
- If the optional corner upper is chosen: hang it only on the SE corner framing, the south jamb and stud S1 — never in the hatched zone.
- E1: box must sit in a bay, side-mounted to a stud — not on S1/S2. At s = 12 it lands in the south gap or panel bay below 53" — OK.
- Corner base, drawer base and fridge stations unchanged (K002). Backsplash/tile height still open — no effect on framing.

CONSTRUCTION-READY DETAIL

← NO SCREWS / NAILS — panel can behind = 53–77 AFF


F-04 INFILL FRAMING ELEVATION + WALL SECTION

KITCHEN DOORWAY INFILL + D04 SUBPANEL WALL — FRAMING PLAN

ENGLISH EDITION

Framing elevation seen from DINING side (matches F-05 marks). From the kitchen it is mirrored: south on the RIGHT.

1:10. Drawn at model estimate (opening 32" × 84"). Dimensions in boxes govern.

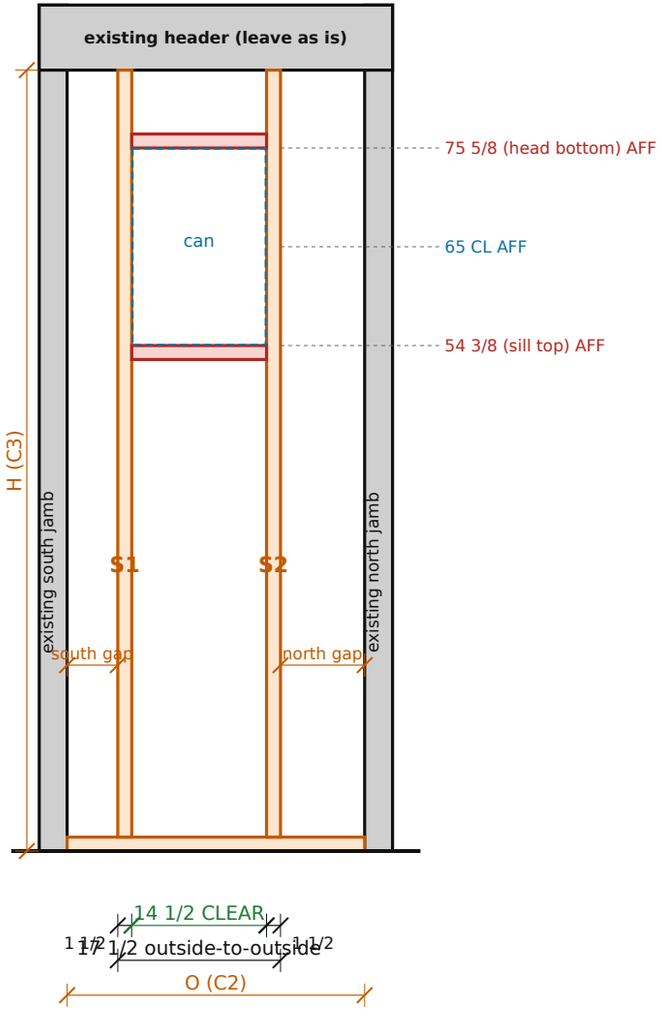

green = construction-ready: 14 1/2 bay, full-height studs, fastening, build-up

orange = review: S1/S2 position, plate and stud length (C1–C3)

red = hold: sill/head blocks and setting the can (C5 + electrician)

SECTION A — horizontal cut at 65" AFF (1:3)



DINING FACE BUILD-UP (match existing plaster plane) — 2×4 studs 3 1/2"

existing lath+plaster t (C4)	new dining layers	can back → kitchen stud face
1/2"	1/2 drywall	1/8 — tight, OK
5/8"	5/8 drywall	1/4
3/4"	5/8 drywall + 1/8 shim strips	3/8
7/8"	5/8 drywall + 1/4 lath strips	1/2
1"	5/8 drywall + 3/8 strips	5/8
1 1/8"	5/8 drywall + 1/2 strips	3/4

If existing studs are deeper than 3 5/8": rip 2×6 to the existing depth so both faces stay flush with the old wall.

CONSTRUCTION-READY DETAIL

- Studs S1 and S2 run full height, bottom plate to header, plumb, dining faces flush with the existing studs.
- Clear between S1 and S2 = 14 1/2" exactly (standard flush-can bay; can ≈14 5/16).
- Gaps under 1 1/2": fill solid with a ripped piece. Gaps 1 1/2" to 16": leave open (no extra stud).
- Plate: construction adhesive + (3) 3" structural screws into subfloor/joist, none within 2" of plate ends. Studs: (2) 3" screws each end, toe-screwed. Blocks: (2) 3" screws each end.
- Do not cut, notch or drill the header or jamb studs. Feeder and cable routes: electrician decides with the framing reviewer.

F-05 MARK SHEET + SITE CHECKS

KITCHEN DOORWAY INFILL + D04 SUBPANEL WALL — FRAMING PLAN

ENGLISH EDITION

MARK SHEET — read your marks, no math

Hook the tape on the OUTSIDE edge of the rightmost window casing (dining side, x = 0). Run it north along the dining wall plane, across the opening. Mark on the floor and on the header underside, then plumb between.

REVIEW — POSITION DEPENDS ON CHECKS

W measured (C1)	Panel CL	S1 south edge	S2 north edge
88"	23"	14 1/4"	31 3/4"
88 1/4"	23 1/16"	14 5/16"	31 13/16"
88 1/2"	23 1/8"	14 3/8"	31 7/8"
88 3/4"	23 3/16"	14 7/16"	31 15/16"
89"	23 1/4"	14 1/2"	32"
89 1/4"	23 5/16"	14 9/16"	32 1/16"
89 1/2"	23 3/8"	14 5/8"	32 1/8"
89 3/4"	23 7/16"	14 11/16"	32 3/16"
90"	23 1/2"	14 3/4"	32 1/4"
90 1/4"	23 9/16"	14 13/16"	32 5/16"
90 1/2"	23 5/8"	14 7/8"	32 3/8"
90 3/4"	23 11/16"	14 15/16"	32 7/16"
91"	23 3/4"	15"	32 1/2"
91 1/4"	23 13/16"	15 1/16"	32 9/16"
91 1/2"	23 7/8"	15 1/8"	32 5/8"
91 3/4"	23 15/16"	15 3/16"	32 11/16"
92"	24"	15 1/4"	32 3/4"
92 1/4"	24 1/16"	15 5/16"	32 13/16"
92 1/2"	24 1/8"	15 3/8"	32 7/8"
92 3/4"	24 3/16"	15 7/16"	32 15/16"
93"	24 1/4"	15 1/2"	33"
93 1/4"	24 5/16"	15 9/16"	33 1/16"
93 1/2"	24 3/8"	15 5/8"	33 1/8"
93 3/4"	24 7/16"	15 11/16"	33 3/16"
94"	24 1/2"	15 3/4"	33 1/4"

W measured (C1)	Panel CL	S1 south edge	S2 north edge
94 1/4"	24 9/16"	15 13/16"	33 5/16"
94 1/2"	24 5/8"	15 7/8"	33 3/8"
94 3/4"	24 11/16"	15 15/16"	33 7/16"
95"	24 3/4"	16"	33 1/2"
95 1/4"	24 13/16"	16 1/16"	33 9/16"
95 1/2"	24 7/8"	16 1/8"	33 5/8"
95 3/4"	24 15/16"	16 3/16"	33 11/16"
96"	25"	16 1/4"	33 3/4"
96 1/4"	25 1/16"	16 5/16"	33 13/16"
96 1/2"	25 1/8"	16 3/8"	33 7/8"
96 3/4"	25 3/16"	16 7/16"	33 15/16"
97"	25 1/4"	16 1/2"	34"
97 1/4"	25 5/16"	16 9/16"	34 1/16"
97 1/2"	25 3/8"	16 5/8"	34 1/8"
97 3/4"	25 7/16"	16 11/16"	34 3/16"
98"	25 1/2"	16 3/4"	34 1/4"
98 1/4"	25 9/16"	16 13/16"	34 5/16"
98 1/2"	25 5/8"	16 7/8"	34 3/8"
98 3/4"	25 11/16"	16 15/16"	34 7/16"
99"	25 3/4"	17"	34 1/2"
99 1/4"	25 13/16"	17 1/16"	34 9/16"
99 1/2"	25 7/8"	17 1/8"	34 5/8"
99 3/4"	25 15/16"	17 3/16"	34 11/16"
100"	26"	17 1/4"	34 3/4"

Between rows: use the row above (difference ≤ 1/16"). S1 north edge and S2 south edge are 14 1/2" apart (the bay).

FIT CHECK: S1 south edge must land at or north of the south jamb face; S2 north edge at or south of the north jamb face. If not — STOP, photo, send to Tisa. Do not shift the panel yourself.

HEIGHTS (from dining finished floor)

Sill block top	**54 3/8" AFF**	HOLD C5
Panel / cover CL	**65" AFF**	R2 target
Head block bottom	**75 5/8" AFF**	HOLD C5
No-screw zone (kitchen side)	**53" to 77" AFF**	construction-ready

SITE CHECKS — only what is not already recorded (≈20 minutes)

C1	W: outside edge of rightmost window casing → north inside corner of the dining west wall, at about 65" high. Photo both ends.	Not in Magicplan (model only: 92–96).
C2	Opening: from the same x = 0, distance to the south jamb face and to the north jamb face. (Width O = difference.)	Magicplan has only '31+'.
C3	Header underside height above the subfloor at the opening; step from dining finished floor to kitchen subfloor; is the dining floor staying as the finished floor?	No doorway height recorded.
C4	Existing dining lath + plaster thickness at the opening edge; existing stud depth at a jamb.	Old wall, not in drawings.
C5	Can AND cover in hand: H × W × D, flush-depth setting, cover overlap. Before sill/head blocks.	Purchase gated (quote + Tisa approval).

Send C1–C4 numbers + photos to Tisa's coordinator; marks are returned the same day. Do not re-measure the kitchen runs, hall opening or ceiling — already recorded.

F-06 MATERIALS, CUT LIST, WORK SEQUENCE

KITCHEN DOORWAY INFILL + D04 SUBPANEL WALL — FRAMING PLAN

ENGLISH EDITION

MATERIALS (for this infill only)

2×4 × 8' stud grade (or 2×6 × 8' if C4 stud depth > 3 5/8")	**4**	2 studs, plate + 2 blocks, 1 spare
3" structural wood screws	**1 box (≈30 used)**	plate, studs, blocks
Construction adhesive	**1 tube**	under bottom plate
5/8" drywall 4×8 (dining face)	**1 sheet**	plus shim strips per F-04 table
1/2" drywall (kitchen face)	**from kitchen drywall stock**	continuous over can back
Shims / ripped strips	**as needed**	plumb + plaster plane
Red/orange paint marker	**1**	mark no-screw zone before drywall

CUT LIST

Piece	Qty	Length	Status
Bottom plate	1	O (C2) — cut to fit between jambs	
Stud S1, S2	2	H − 1 1/2" (C3) — cut snug to header	
Sill block (flat)	1	14 1/2"	
Head block (flat)	1	14 1/2" — holes per electrician	
Gap filler (only if a gap < 1 1/2")	0–2	rip to gap × stud length	

CONSTRUCTION-READY DETAIL

REVIEW — POSITION DEPENDS ON CHECKS

HOLD — CAN + COVER IN HAND

WORK SEQUENCE FOR JOHN

G1 Tisa approves this framing plan. (Nothing is cut before that.)

1 Do checks C1–C4, photos. Send numbers.

2 Read marks from F-05 for your W. Do the fit check.

3 Prep the opening: remove threshold/strip in the opening only, clean jamb faces, look for wires or pipes in the jambs and header. Stop if found.

4 Install bottom plate (adhesive + screws).

5 Plumb up from the floor marks; install S1 and S2 (14 1/2" clear, faces flush with the old studs). Fill any gap < 1 1/2".

6 Paint-mark the no-screw zone on the kitchen faces of S1/S2 and on the plate. Photo the framing from both sides.

H HOLD: can + cover on site (C5) and electrician review of feeder entry and cable exits.

7 Dry-fit the can; install sill block under it, head block above it (drilled per electrician). Can set flush with the finished dining face per Eaton instructions.

8 Rough-in by the released crew/electrician. No drywall until inspection/trade release.

9 Close: dining 5/8 drywall + shims to plaster plane; kitchen 1/2 drywall. Cut cover opening tight to the can (≤1/8").

Tisa's target was today (Mon Nov 2). Steps 1–6 can be done as soon as she approves; steps 7–9 wait for the can and the electrician. Ervin and Joel are off today.