## LTX BALL / Network menu - Changing the default network credentials

If you want your prop to connect to other than default WiFi network, you can change it as follows:

## 1) Create hotspot from the prop itself

All props have a implemented WiFi chips that allow to create WiFi network on their own. This feature can be used for data upload and changing prop 's settings.

To create a hotspot, turn on the prop. Press and hold the button until you see light green colo, then release it.

The order of colors is:

1,5 s - WHITE - to "arm" for starting sequence

3s - YELLOW - to "arm" for starting next sequence

4,5s -RED - to turn it off

6s - **VIOLET** - the ball becomes "**starter**" - if you start {or stop} it, it will start {stop} all other connected balls

7,5s **-TURQUOISE** - "backup mode" - in this mode, prg sequences are starting at specified start time {this needs to be set in Mosaic} and prop does not react on wifi commands. This state is for Emergency - if the show was started in some wrong way

9s -GREEN - CREATE HOTSPOT

All leds of the ball will become light green and the ball will turn on it's hotspot.

## 2) Connect your computer or mobile device to created hotspot.


All props create hotspot named "LTX-xxxx" where "xxxx" are 3 different numbers varying for each prop. The names will be like "LTX-929", "LTX-786" etc - so look at your computer for available WiFi networks and connect to it.

All of them share the same password: "pix12345". So select the prop and connect ot it 's network using this password.

2) Prepare new set of credentials (the network name and password you want to use) Run the LTX Remote app - now you have access to the ball, so you can upload data, or change colors - even without having other hotspot.

Click on "File" and the select "Config" from the menu. This will bring up the setting window. There are 2 rows under "prepare new credentials", where you can enter new network name and password. Network name is first row and password second.


When you are done, click on "Ok"

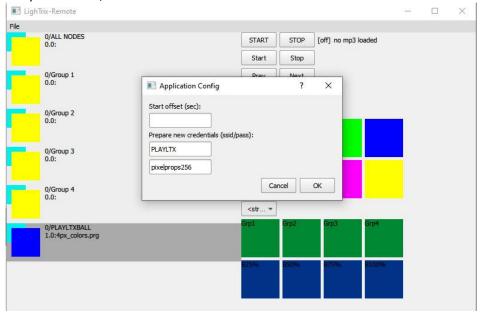

## 4) Send the new credentials to the prop

Once new credentials are defined, new button "Send new credentials" appears under playback

To send those credentials to your prop, just select the prop on the left side of the screen and click on "Send new credentials" button. Prop will restart and now it will connect to the network you specified.

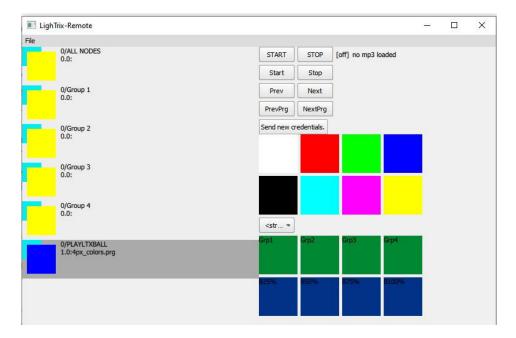

Thal is all. Prop will be always connecting to the network with newly specified credendtials.

To change it again, you can always use the above mentioned steps.