


MA600A RefWinch Encoder | v0.3

Top-side assembly - component view, cable exits right. All dimensions in mm.

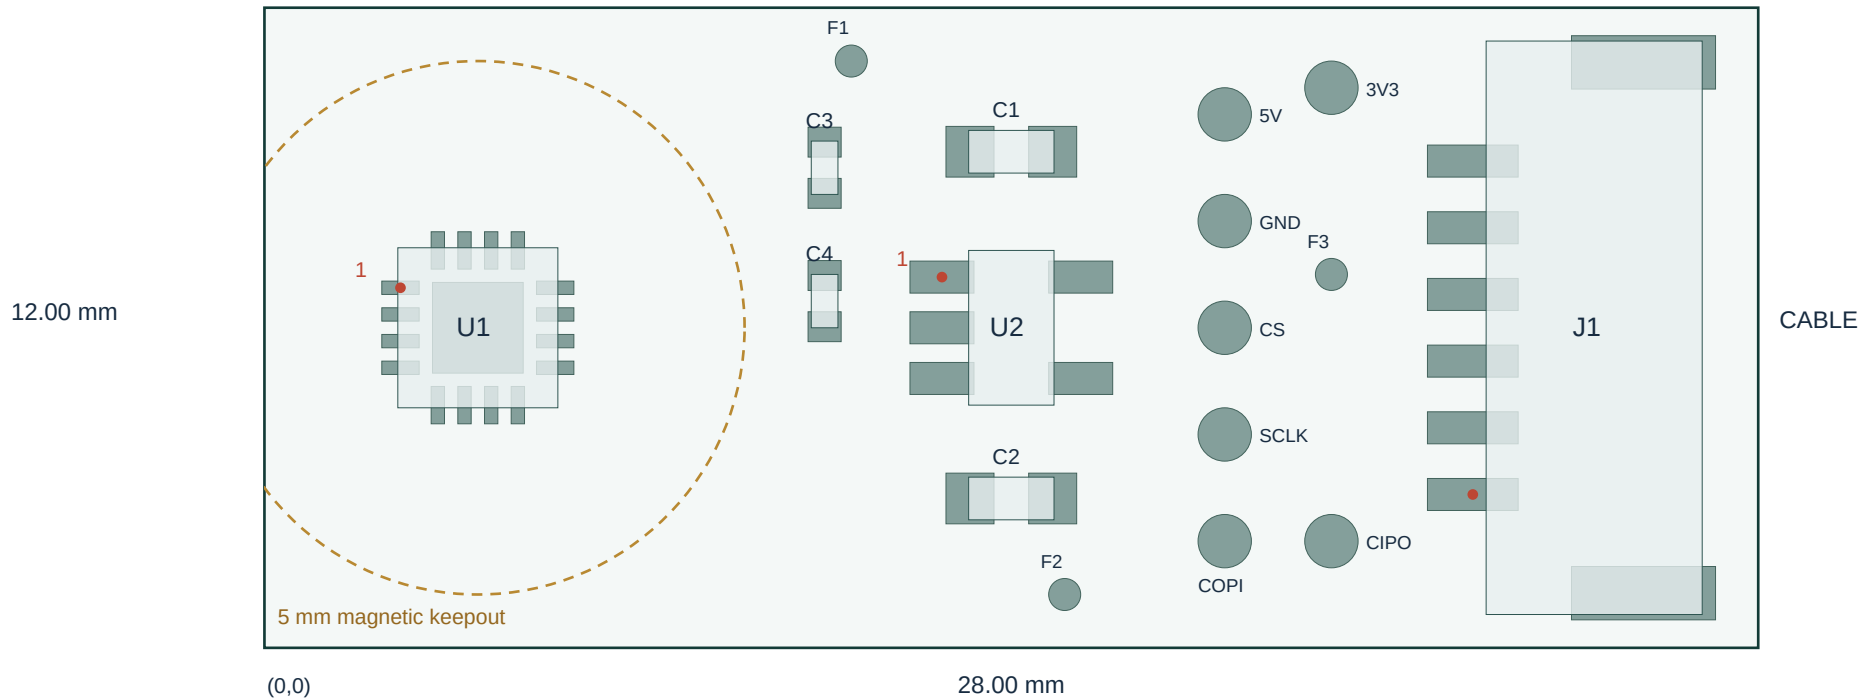

Assembly notes

7 fitted parts: U1, U2, J1 and C1-C4. Test pads and fiducials are bare PCB features.

U1 pad 17 is an isolated 1.7 x 1.7 mm solder land. Do not ground it or add thermal vias.

Four exposed-pad paste windows give 68% coverage. Start with a 0.10 mm stencil.

U1 and U2 orientation: pin 1 is the upper-left copper pad in this view (red dot).

J1 pin 1 is at the bottom of the six signal contacts. Pin 6 is reserved and unconnected.

Pick-and-place uses lower-left board origin, X right, Y up; native KiCad rotation angles.

Reconcile reel rotation with these pin-1 positions before running the assembly machine.

F1-F3: 0.6 mm copper / 1.1 mm mask opening. Add panel-rail fiducials if needed.

Pin-1 centers (same datum as pick-and-place)

U2: (12.700, 6.950) | U1: (2.550, 6.750) | J1: (22.650, 2.875)