
Introduction. Pulse Width Modulation, or PWM, is a technique for getting analog results with digital means. Digital control is used to create a square wave - a signal switched between on(HIGH = 3.3V) and off(LOW = 0V). This on-off pattern can simulate voltages by changing the portion of the time the signal spends on versus the time that the signal spends off. The duty cycle is proportional to the average (time_high/(time_high + time_low) * 100%) voltage on the selected PWM pin.

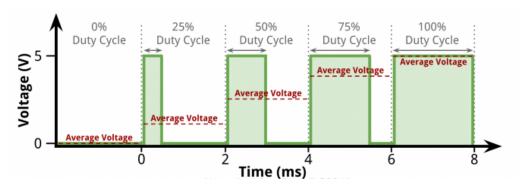


*robotic-controls.com

Raspberry Pi Pico has PWM capability on all GPIO pins. When a GPIO pin is set to PWM mode, the output of each pin varies with the frequency cycle. The lowest PWM frequency output is 10[Hz].

Task 1. Create a MicroPython script to control the SG90 servomechanism.

Pico board	Servo
Gnd	brown
VSYS	red
GP15	orange

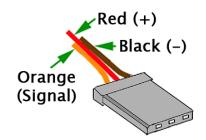

from machine import Pin,PWM
from utime import sleep

MIN POS = 2500


```
MAX_POS = 9000

servo = PWM(Pin(15))
servo.freq(50)

#angle from 0 to 180
def set_servo_pos(shaft_position):
    servo.duty_u16(shaft_position)
    sleep(0.2)

while True:
    for position in range(MIN_POS,MAX_POS,50):
        set_servo_pos(position)
    for position in range(MAX_POS,MIN_POS,-50):
        set servo pos(position)
```

Task 2. Connect an RGB module to the Raspberry Pi Pico board. You need to use 100R resistors to prevent LED burnout. Those resistors should be connected between Pico board GPIOs and the KY-009 board R, G, and B pins.

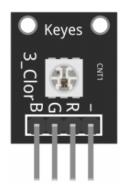

Arduino board	KY-009 board	
GP2	В	blue component
GP3	G	green component
GP4	R	red component
Gnd	-	cathode

from machine import Pin,PWM
from utime import sleep

```
#Pins
R_pin = PWM(Pin(2))
G_pin = PWM(Pin(3))
B_pin = PWM(Pin(4))

while True:
    for intensity in range(0, 65000,5000):
        R_pin.duty_u16(intensity)
        sleep(1)
```

Task 3. (1 point to the final score) Connect *Pico-LCD-0.96* module.



Open the Demo code from the Resources section on the website:

www.waveshare.com/wiki/Pico-LCD-0.96

Analyze the code. Create a MicroPython script to draw a shape on the display with the joystick. Use the SW button as a tool for changing the current pixel color.

Task 4. (1 point to the final score) Use the circuit from Task 1. Connect *Pico-LCD-0.96* module. The user should be able to set the desired servo shaft position on the LCD with the joystick. Pressing the joystick button should move the servo shaft.

Exercise no 3: Pulse Width Modulation

Task 5. (1 point to the final score) Create a simple HMI consisting of a

joystick and 3 buttons for controlling the color of light emitted from the RGB

module. The current R, G, and B values should be presented on the

Pico-LCD-0.96 module.

Task 6. (1 point to the final score) Use the A and B buttons to control the

servo shaft position The current shaft position should be presented on the

LCD (*Pico-LCD-0.96*).

Task 7. (2 points to the final score). Use either the A and B buttons or the

joystick module to control the servo shaft position. Create and display on the

Pico-LCD-0.96 module a visualization of the T-bar connected to the servo

shaft. The orientation of the T-bar image on the screen should correspond to

the current position of the servo shaft.

For those interested:

1. MicroPython web page:

micropython.org/download/rp2-pico/

2. Control a Servo Motor with Raspberry Pi Pico Using PWM in

MicroPython tutorial:

<u>circuitdigest.com/microcontroller-projects/control-a-servo-motor-with-</u>

raspberry-pi-pico-using-pwm-in-micropython