Wired 03 | Access Interface Configuration

Overview

In this lab, you'll create port profiles for your campus devices and assign them to switch interfaces. We'll also add a VLAN through Studios and explore how to roll back a change control.

What you'll learn:

- Create port profiles for wireless and wired access devices
- Assign port profiles to switch interfaces using quick actions
- Add a VLAN to a Campus Fabric through Studios
- Roll back a change control to restore previous configuration
- Verify configuration changes using device comparison tools

Open Launchpad | Login Help | Lab Topology

Workspace Auto-Creation

As you may have noticed, `Studios` auto-creates a workspace when you make changes. A new workspace is created automatically when no workspace is currently selected.

Learn More About Workspaces


Give me the quick explanation of a Workspace

Think of a workspace like a **staging environment for your network changes**. Imagine writing out every CLI change you'd make during a maintenance window, reviewing them with your team, and only applying them once everyone agrees — that's what a workspace does. Nothing touches the live network until you submit and execute a change control.

If you're familiar with EOS, it's the same concept as a **configuration session** — you stage changes, review the diff with `show session-config diffs`, and commit when ready. The key difference is that a CloudVision workspace can span **multiple devices at once**, so one workspace can stage changes across your entire fabric.

Creating Port Profiles

1. If you just completed the last lab, you should already be on the `Network Hierarchy` tab. If not, navigate there.
2. Select your new IDF in the hierarchy and navigate to `Front Panel` view. You should now see your switch on your IDF floor and your partner's switch on their IDF floor.
3. Select your Raspberry Pi ports on the front panel; they should be on `Ethernet 1`. Once selected (should have a blue outline around the port), you should see a new view open under `Interface Configuration` on the right-hand side. Select `Configure`. We can configure port profiles on the fly.

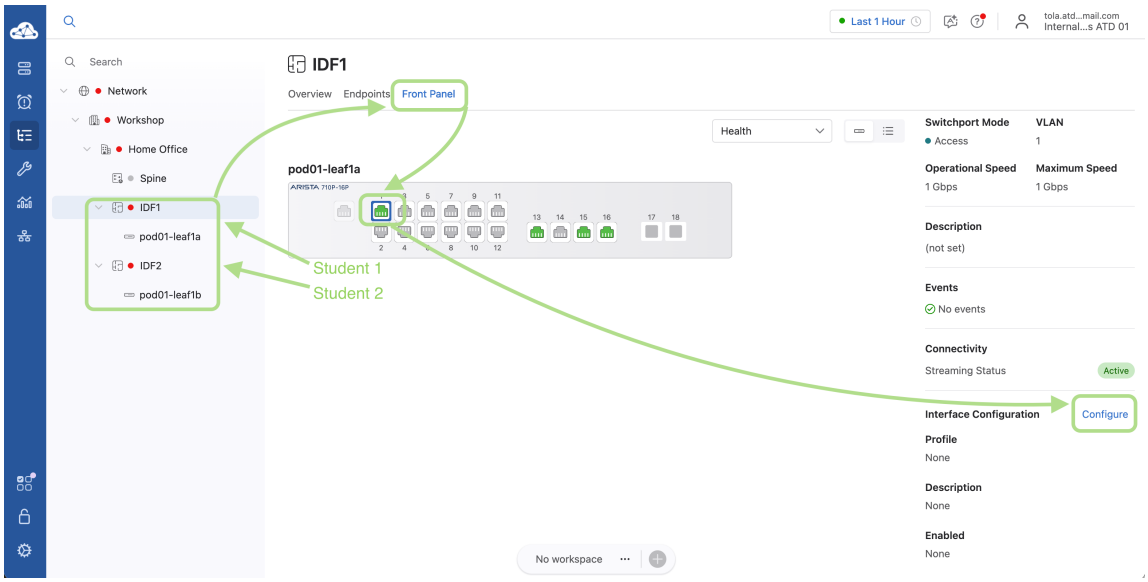


4. Select `+ Create New Profile` and use the table below to create the `Wired-RasPi` interface profile. pod##-leaf1a is Student 1 and pod##-leaf1b is Student 2. Only configure your leaf

switch and not your partner's.


Wired-RasPi

Section	Key	Value
General	(Student 1) Name	`Wired-RasPi-1`
	(Student 2) Name	`Wired-RasPi-2`
General	(Student 1) Description	`Wired-RasPi-1`
	(Student 2) Description	`Wired-RasPi-2`
General	Enable	Yes
Mode	Mode	Access
Mode	VLANS	`1##` where `##` is your 2-digit pod number
Spanning Tree	Portfast	Edge
Spanning Tree	BPDU Filter	Enabled
Spanning Tree	BPDU Guard	Enabled
PoE	POE Priority	Medium
PoE	POE Reboot Action	Maintain
PoE	POE Link Down Action	Maintain
PoE	POE Shutdown Action	Power-Off

5. Once your profile is configured, select `Create`. This creates a workspace since we are proposing new changes.

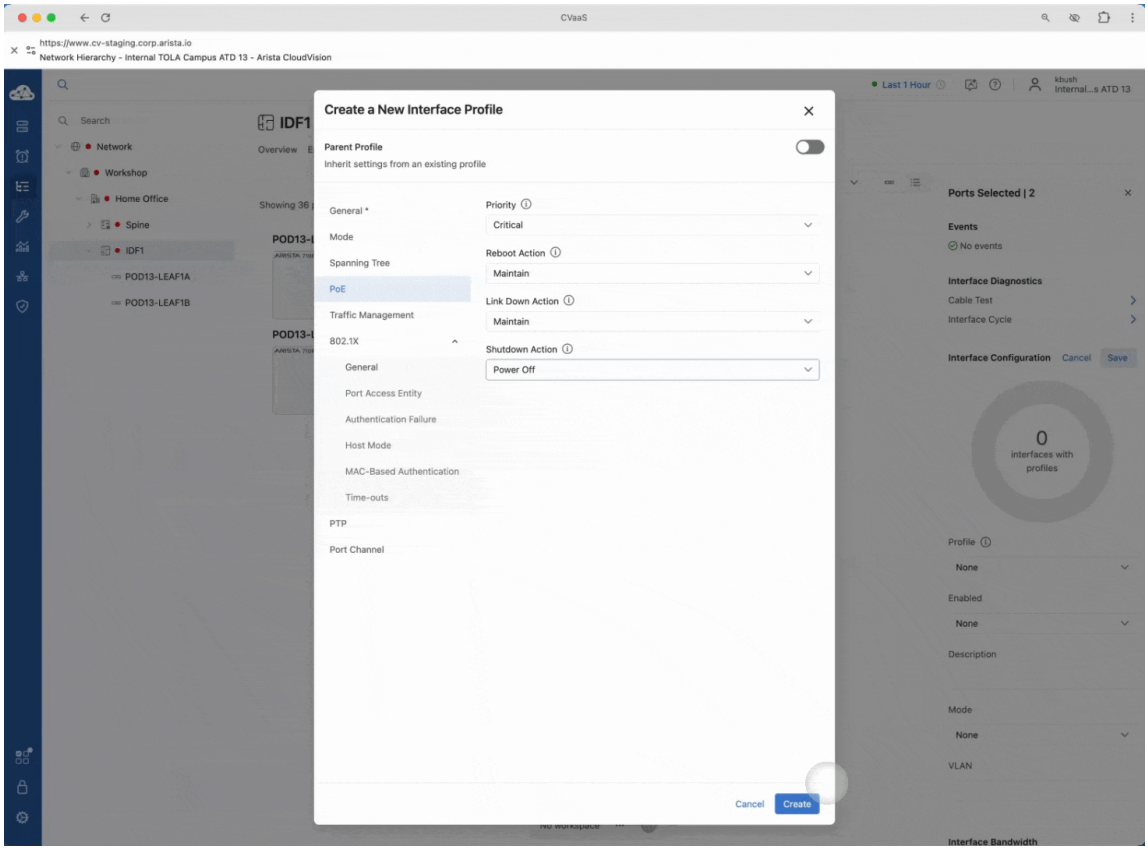


6. We can see our new profile is applied. All we need to do is select `Save`. We will see the workspace build kick off again, adding the profile configurations and visualizing what has changed.

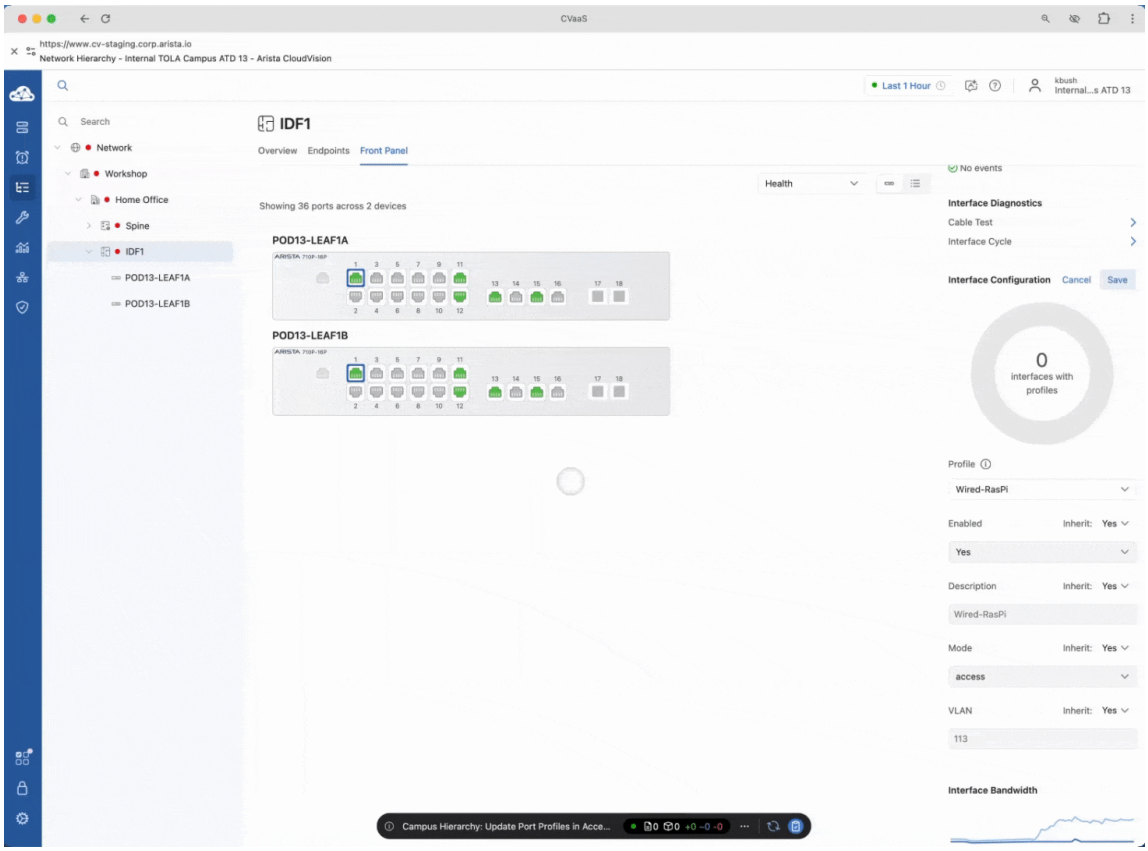


7. Let's create another profile for our Access Points. Deselect the Raspberry Pi ports and select the Access Points on `Ethernet 13`.

> **What if someone accidentally selected uplinks or MLAG interfaces?**
>
> Try it!

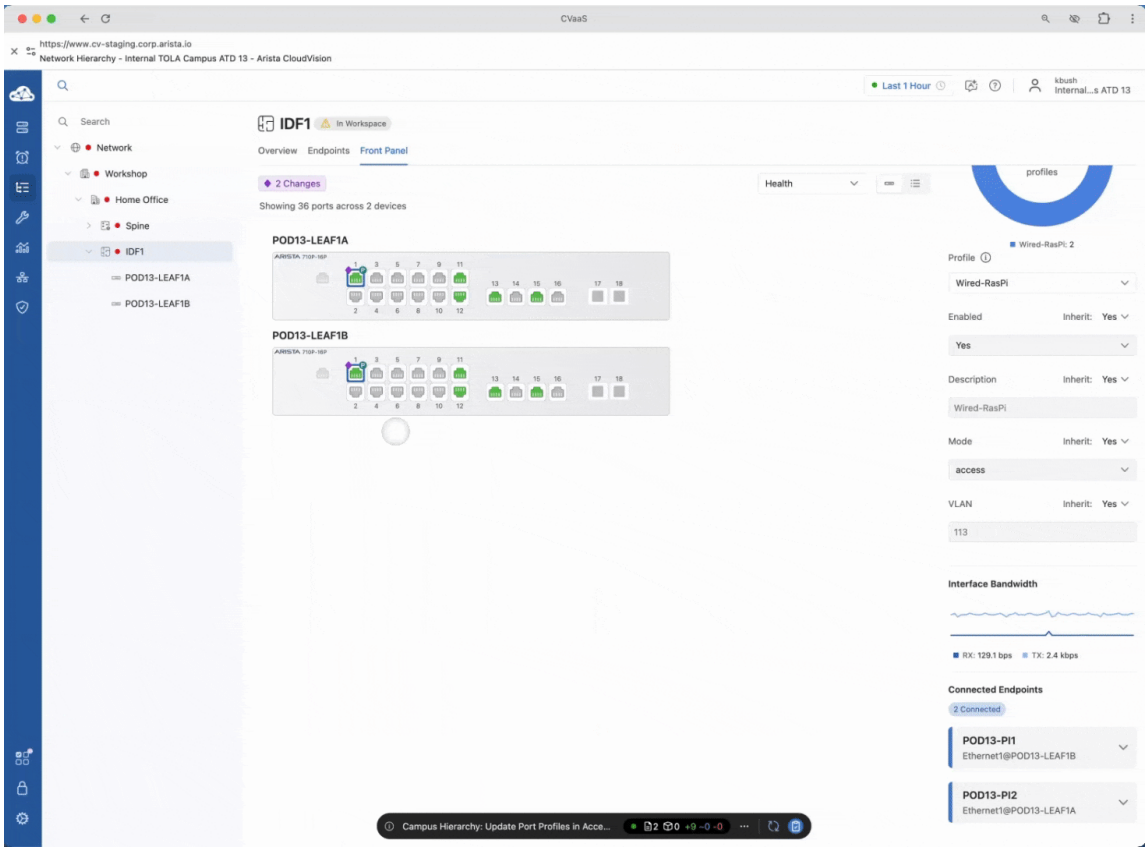

8. Let's now create another profile by selecting `+ Create New Profile` again. This time, create one for our access points.

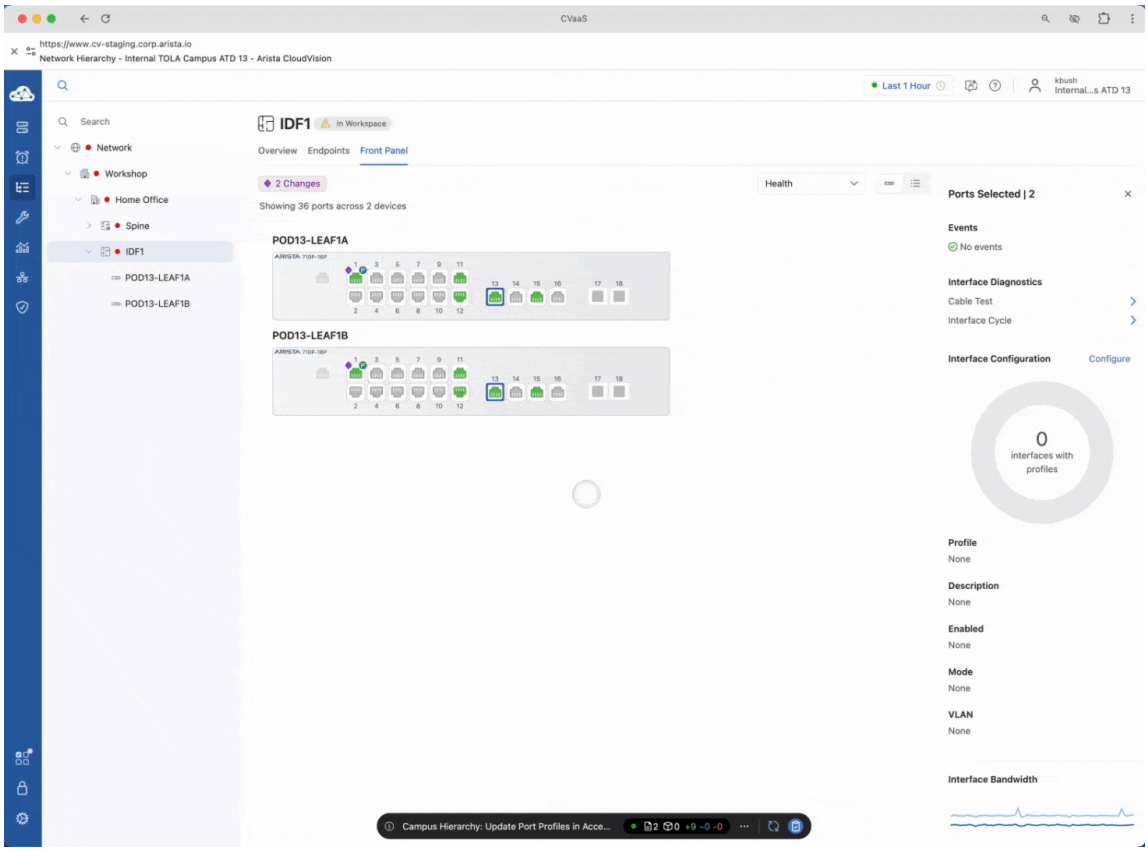


9. Use the table below to create the `Wireless-AP` interface profile.


Wireless-AP

Section	Key	Value
General	(Student 1) Name	`Wireless-AP-1`
	(Student 2) Name	`Wireless-AP-2`
General	(Student 1) Description	`Wireless-AP-1`
	(Student 2) Description	`Wireless-AP-2`
General	Enable	Yes
Mode	Mode	Access
Mode	VLANS	`1##` where `##` is your 2-digit pod number
Spanning Tree	Portfast	Edge
Spanning Tree	BPDU Filter	Enabled
Spanning Tree	BPDU Guard	Enabled
PoE	POE Priority	Critical
PoE	POE Reboot Action	Maintain
PoE	POE Link Down Action	Maintain
PoE	POE Shutdown Action	Power-Off

10. Once your profile is configured, select `Create` and make sure to select `Save` on the right. Again, updating the workspace, we should now see `4 Changes`.

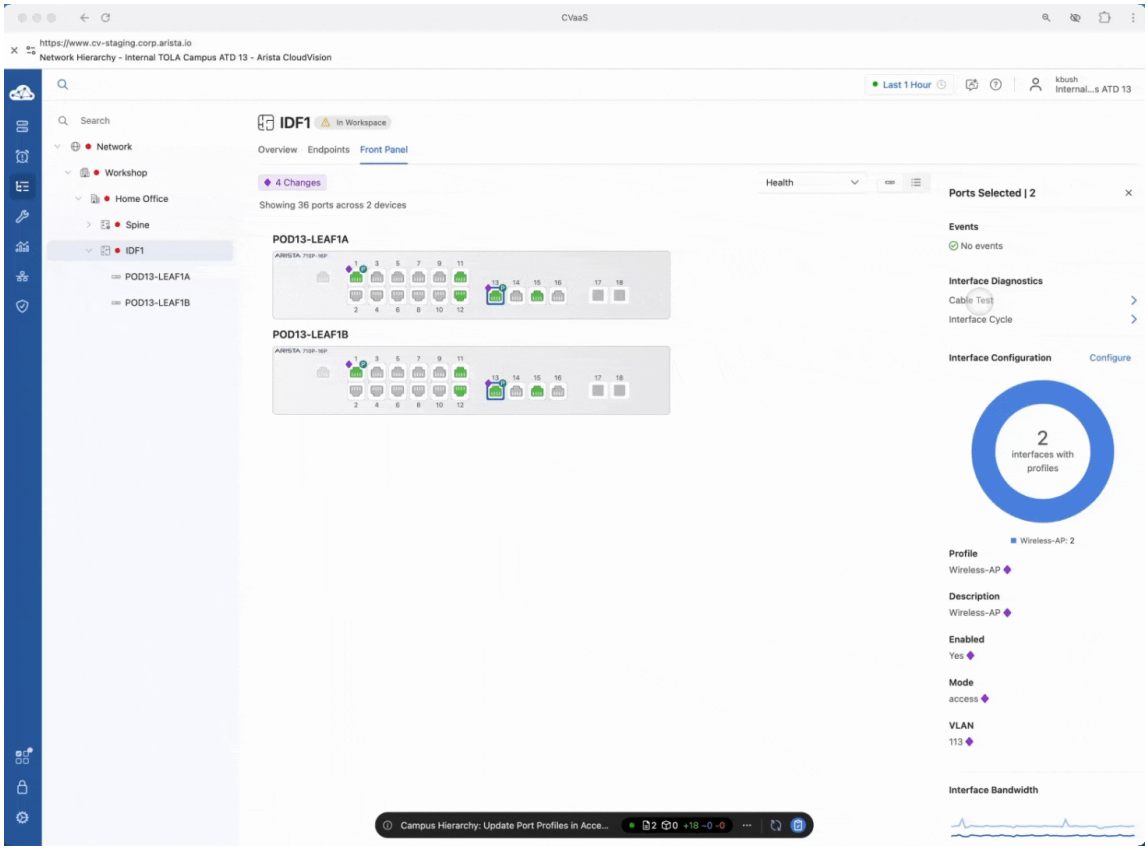

11. Let's create a profile for `Ethernet 2-12`, select all the ports by selecting `Ethernet 2`, hold `⇧ Shift`, and select `Ethernet 12`.

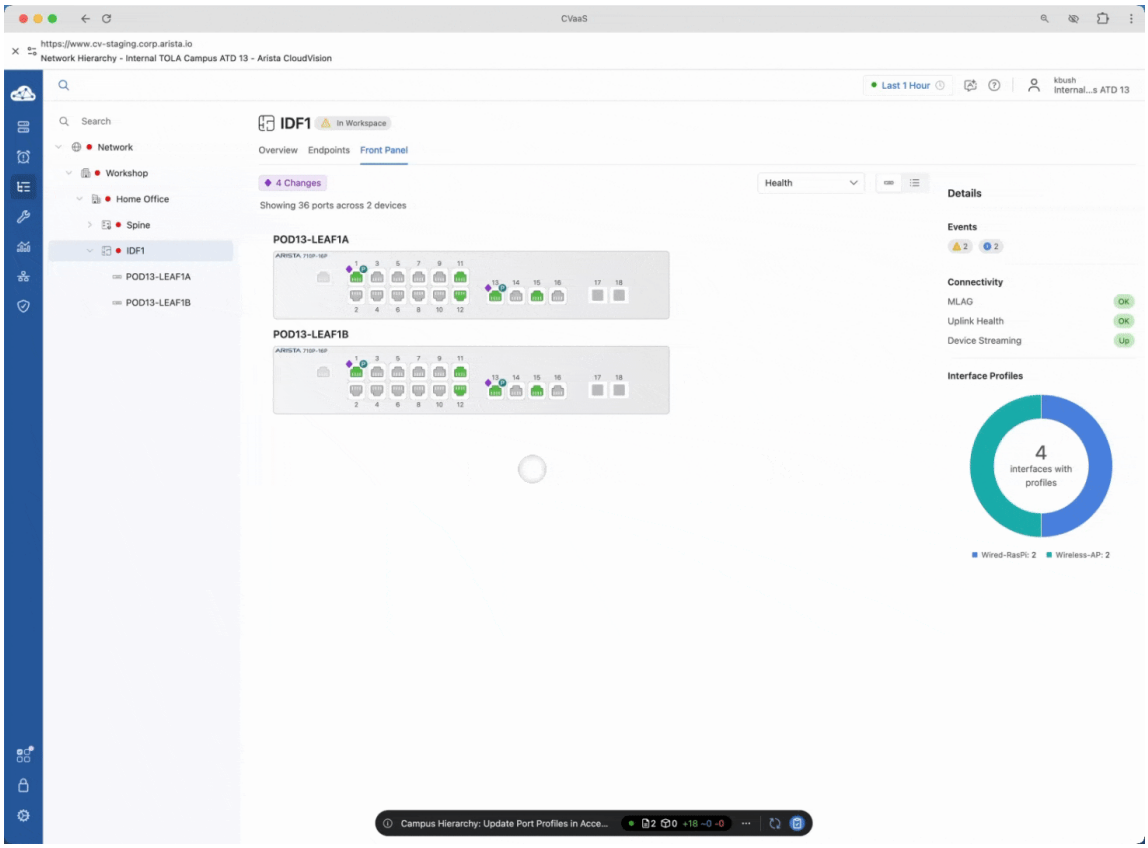


12. Let's create one last profile as a default shutdown state. Select `Create` when complete.


Default-Blackhole

Section	Key	Value
General	(Student 1) Name	`Default-Blackhole-1`
	(Student 2) Name	`Default-Blackhole-2`
General	(Student 1) Description	`Default-Blackhole-1`
	(Student 2) Description	`Default-Blackhole-2`
General	Enable	No


13. Select `Save` on the profile. The workspace will rebuild and we should now have `22 Changes`.

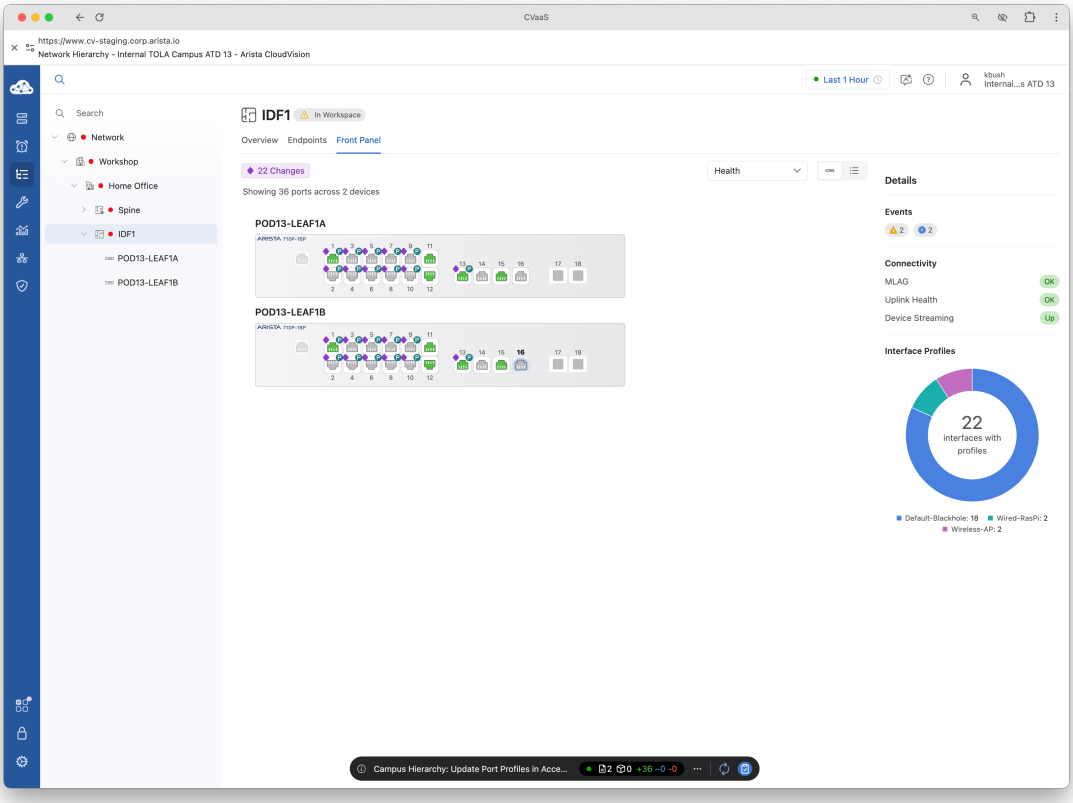

14. Select `Review` at the bottom and review the changes made. We get a view into all the interface changes. Both devices are identical, so they are grouped in a tab (in large changes, that cuts down review time!). When you're ready, select `Submit Workspace` and `View Change Control`.

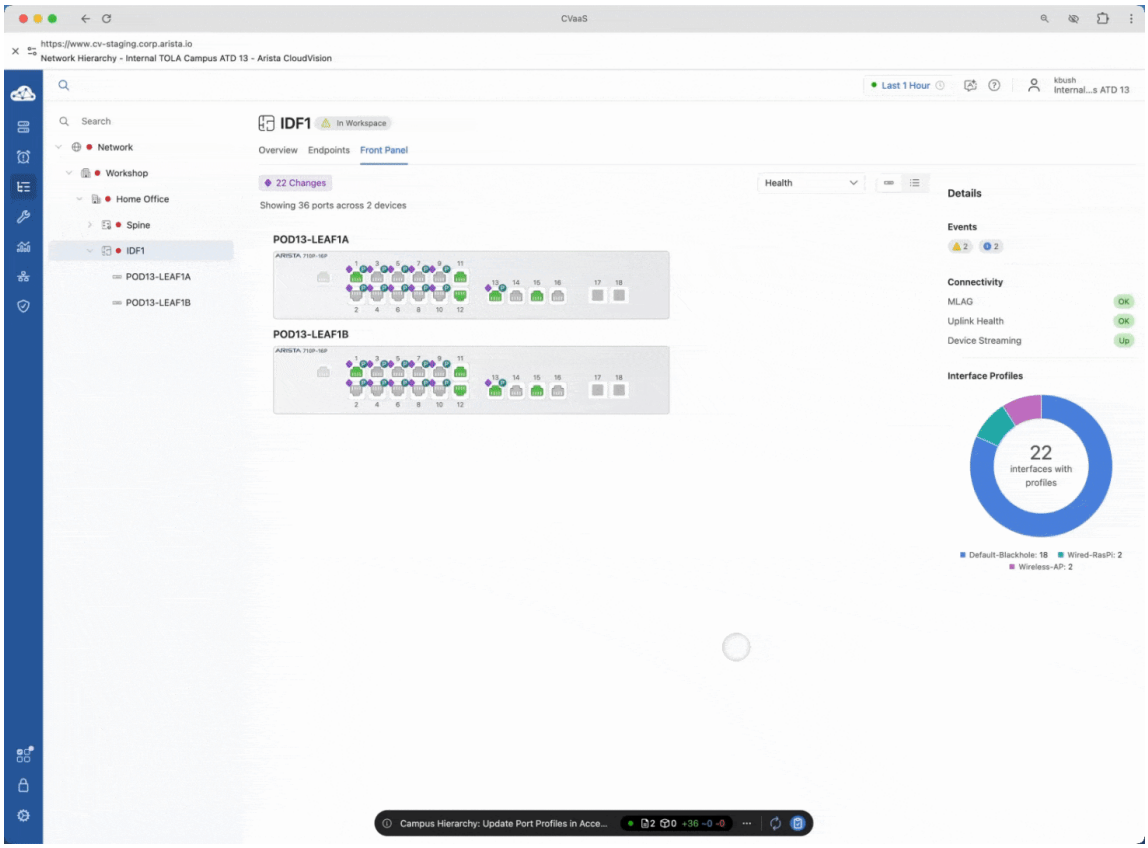


15. In our Change Control we can `Review and Approve`, select `Execute Immediately`, and `Approve and Execute`.
16. Now switches have some initial port configurations!

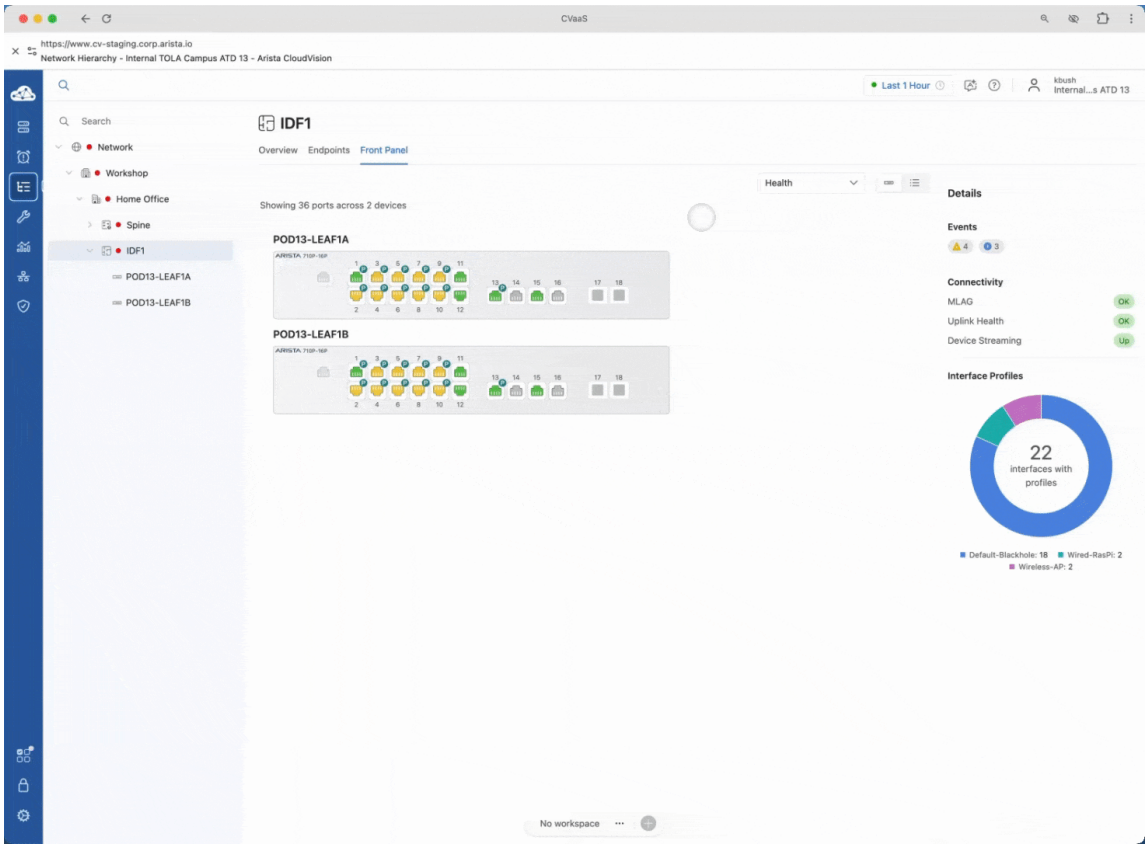

Adding a VLAN

Adding a VLAN is a common provisioning task. Let's use the existing Campus Fabric Studio to add an incremental configuration. This VLAN will be specific to your pod and not routable outside.


1. Enable the `Active Studios` toggle, then open the existing `Campus Fabric (L2/L3/EVPN)` studio.

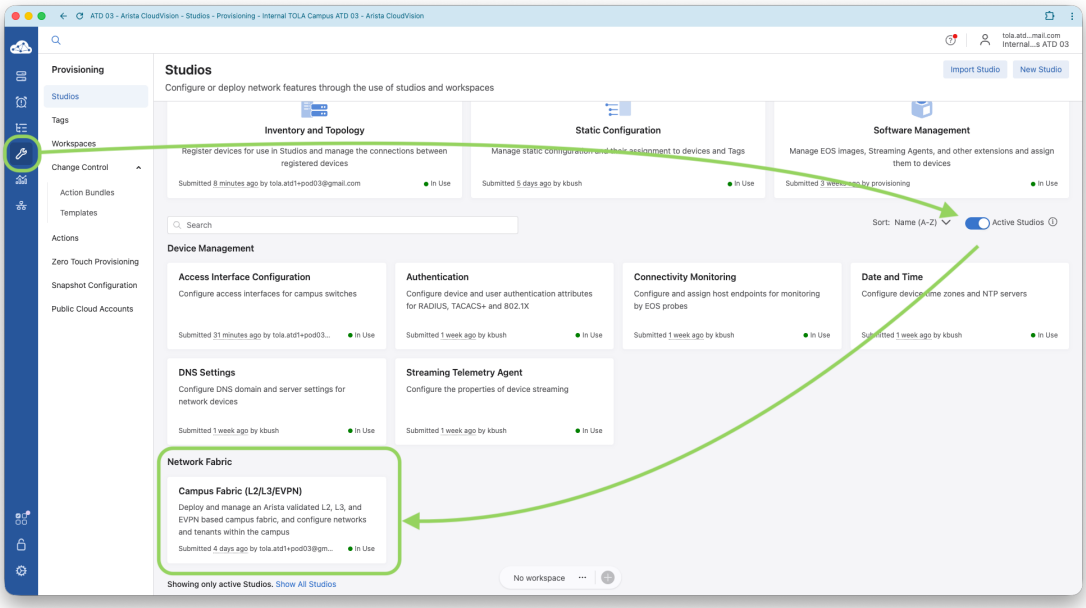


a. Validate that the `Device Selection` still applies to your device by selecting the down arrow.

b. Within `Campus Services (Non-VXLAN)`, navigate to `Campus: Workshop > Campus-Pod: Home Office` using the arrow > on the right.

Workshop

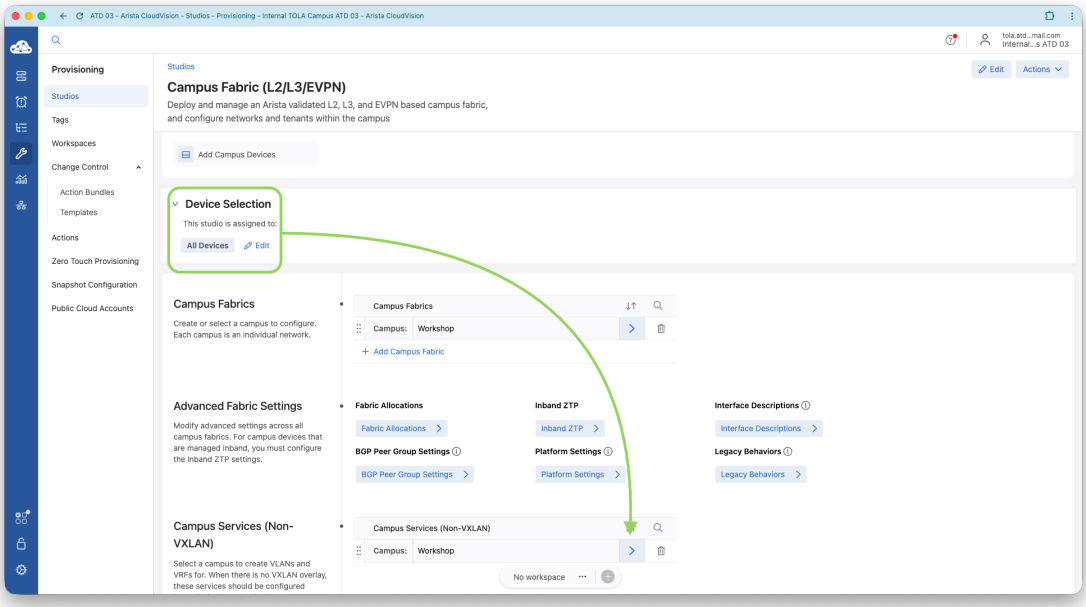


Home Office

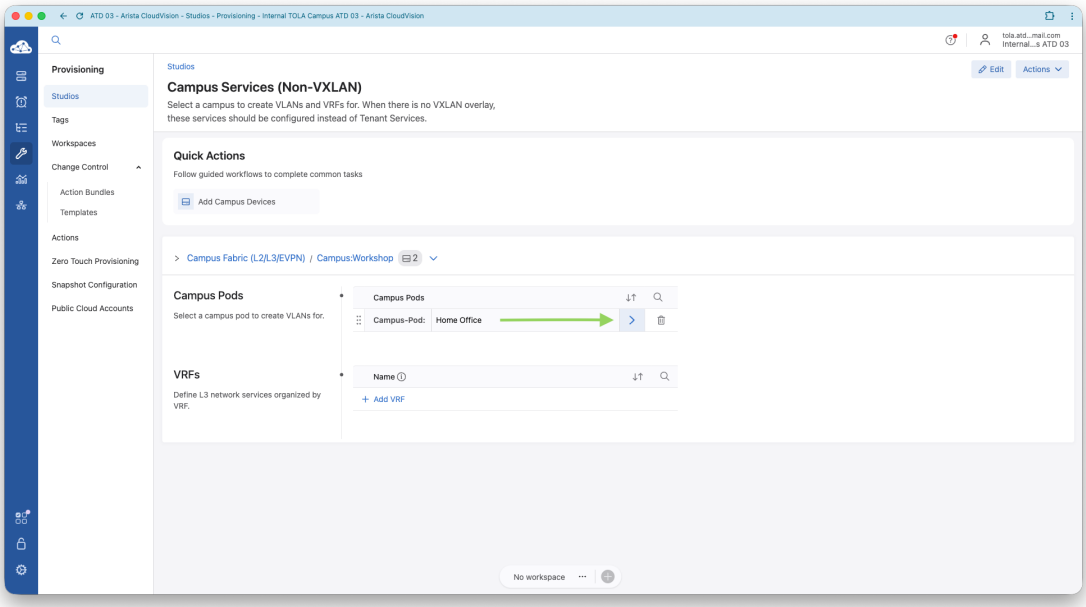

2. We are going to add a new VLAN to the `Home Office` Campus Pod.

   a. Make sure `Campus Type` is `L2`, then select `+ Add VLAN`.


   b. For Student 1, enter `VLAN 2##`, where `##` is your pod number. For Student 2, enter `VLAN 3##`, where `##` is your pod number. Both students should then select the VLAN you created by selecting the right arrow `>`.

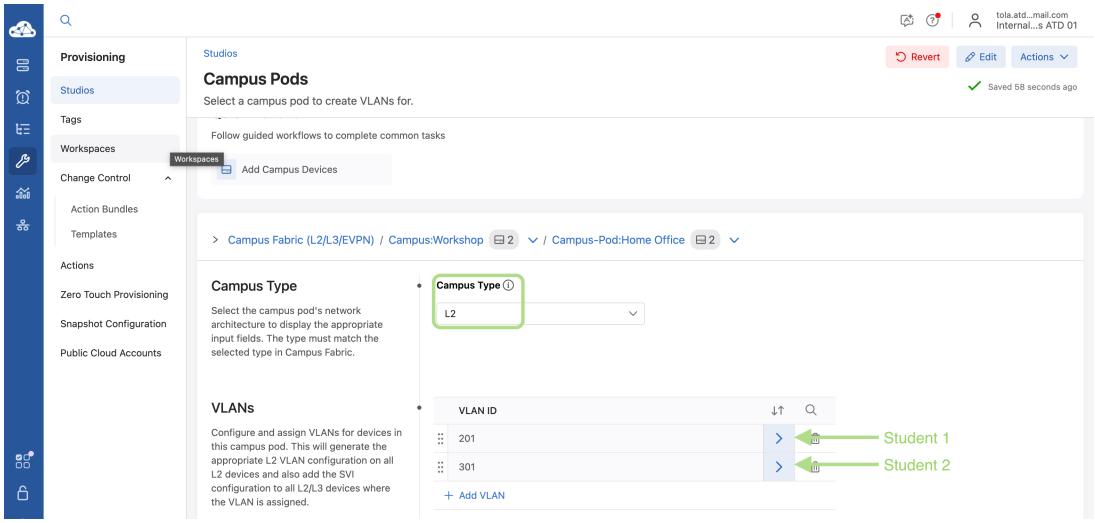


   c. Select `Routed VLAN` as `L2 Only` and customize the new VLAN by giving it a `Name`.

d. Add the VLAN to the Access Pod by selecting `+ Add Pod` and selecting `IDF1`.

Student 1

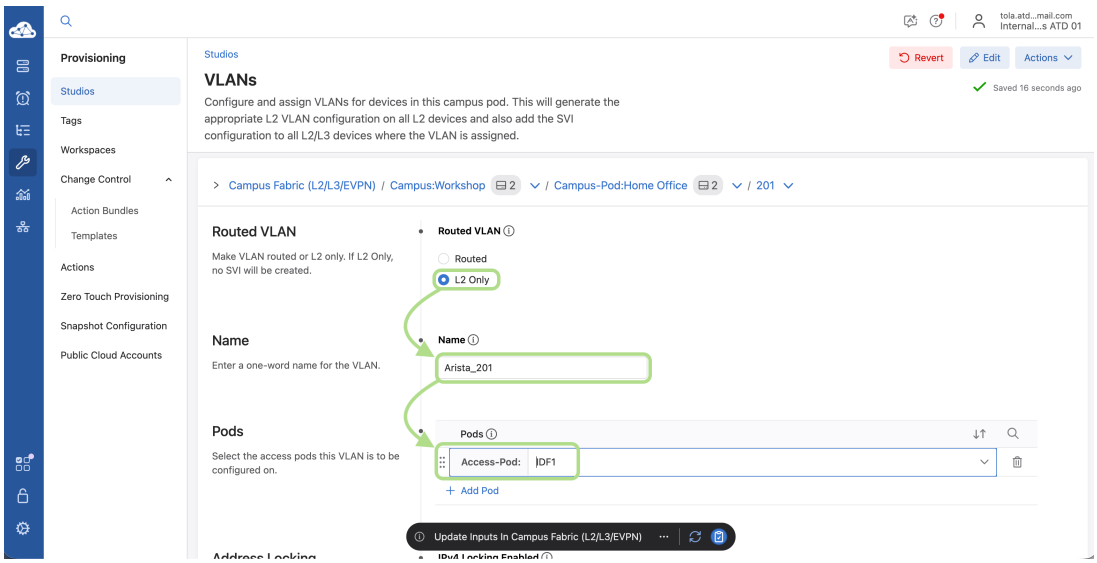

Student 2

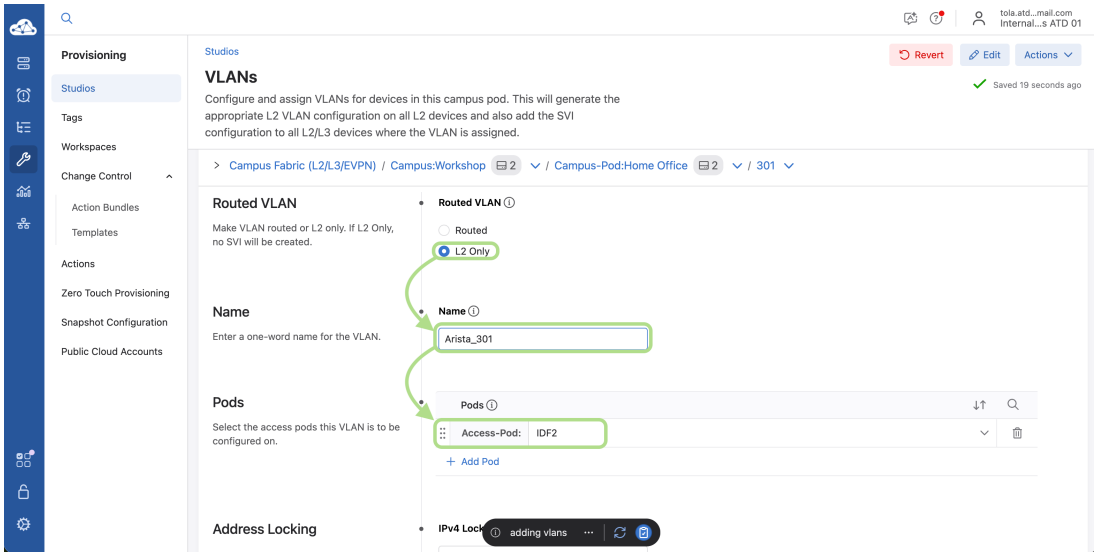

e. Select `Review Workspace` to submit the staged changes.



3. Review and submit the workspace.


a. Notice that the Studio is adding the VLAN to your device within the pod.

> **Pruning VLANs**
>
> Outside of this lab topology, when you add VLANs to a Layer 2 leaf like this, Studios will generate the necessary configuration to trunk the new VLAN to the spines or upstream MLAG pair when using LSS.


> **No changes?!**
>
> If you are not seeing any proposed changes, make sure you selected an `Access-Pod` within the VLAN configuration (see step 2.4).


b. Once you review the changes, select `Submit Workspace`.

Student 1

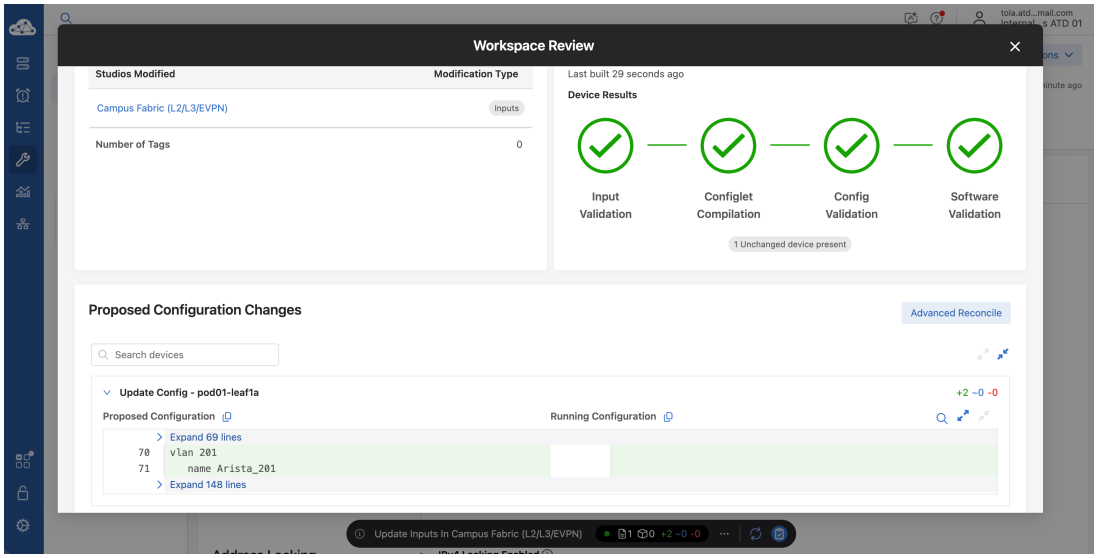


Student 2

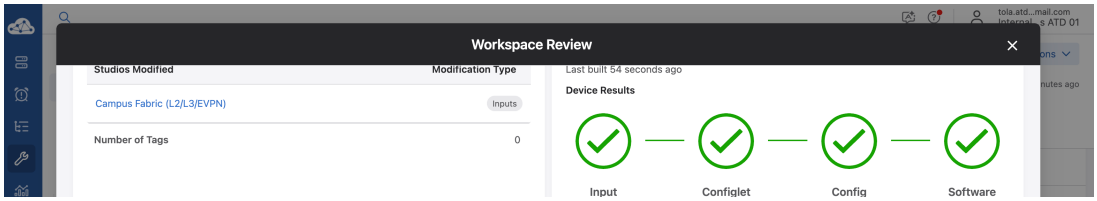


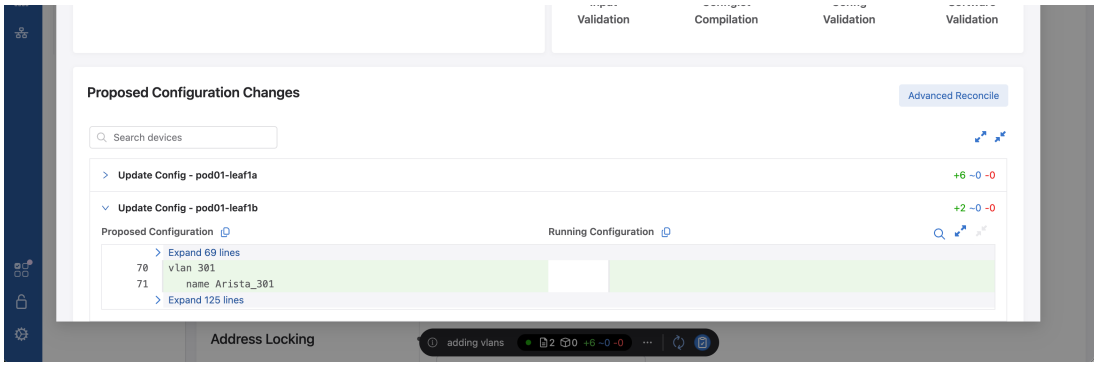


c. Select `View Change Control`.

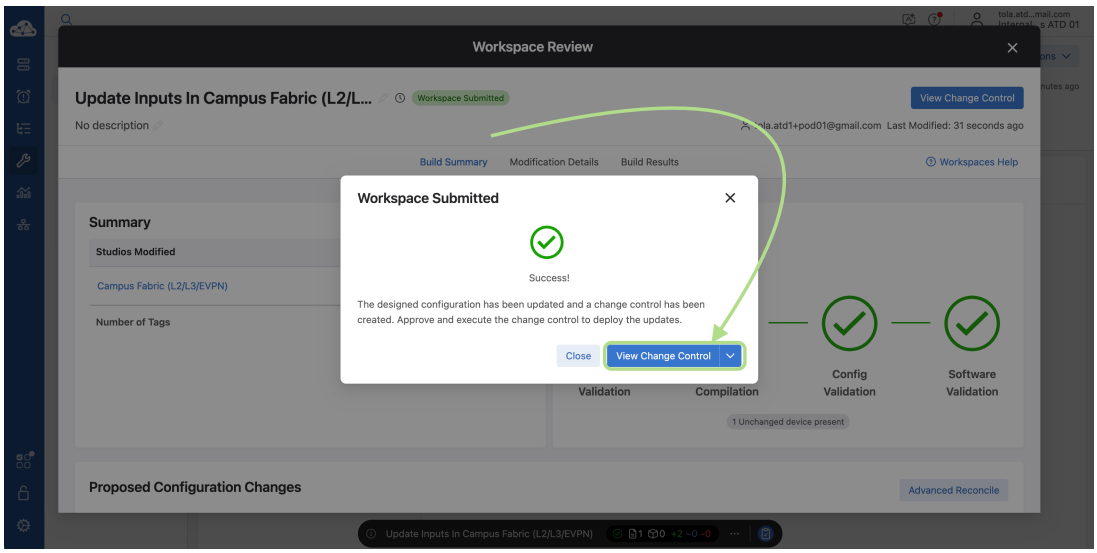


d. Review the Change Control and select `Review and Approve`.

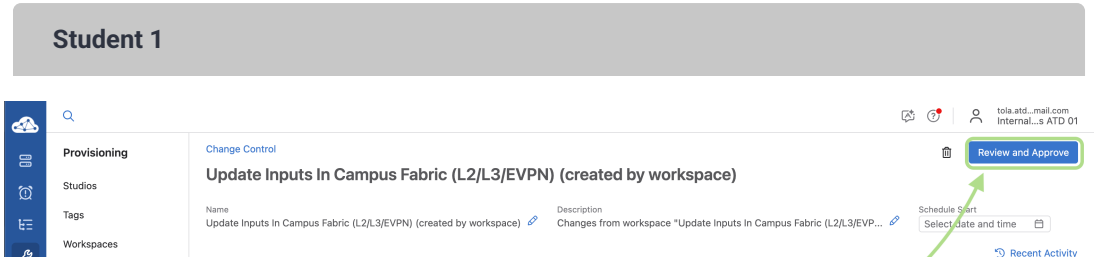

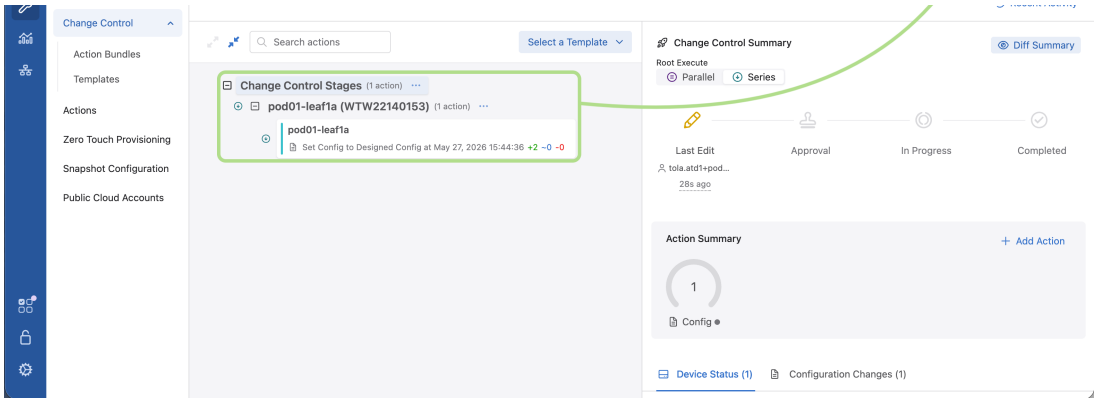



Student 2

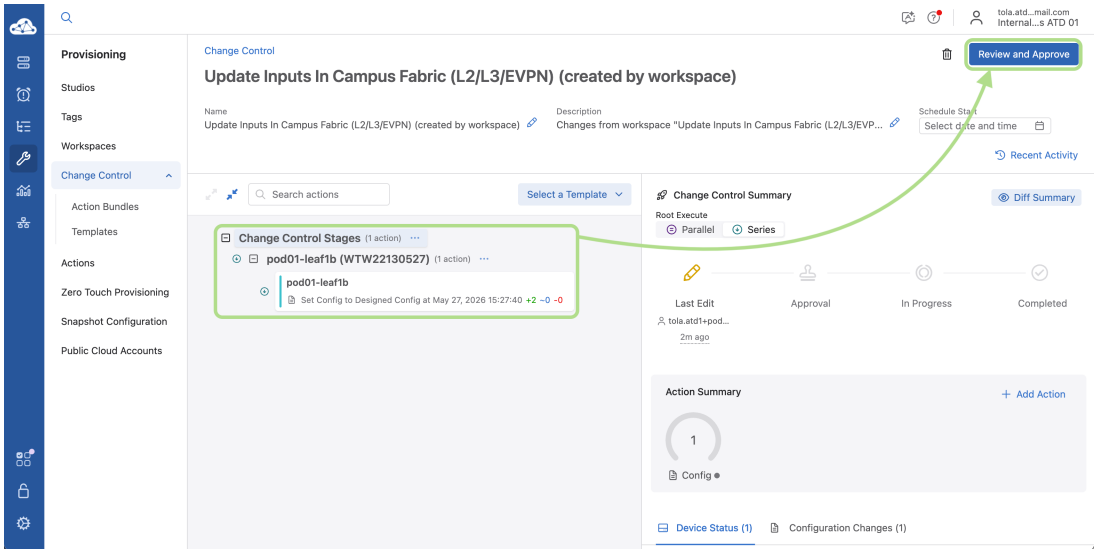


e. Toggle `Execute Immediately` and select `Approve and Execute`.

Student 1

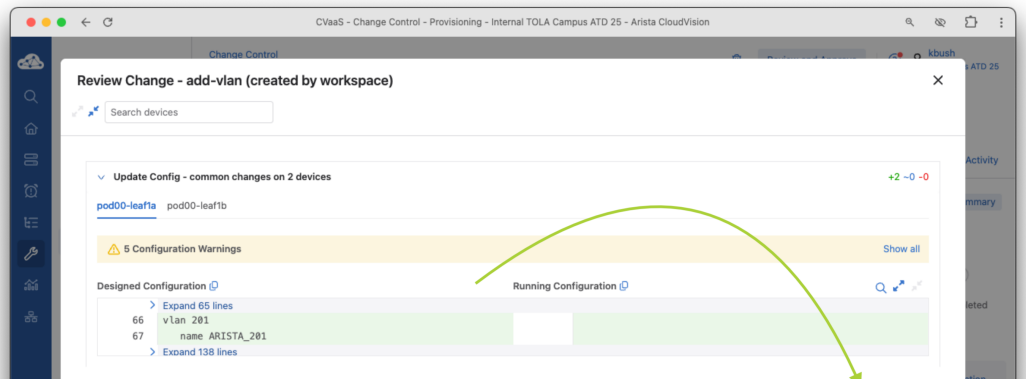

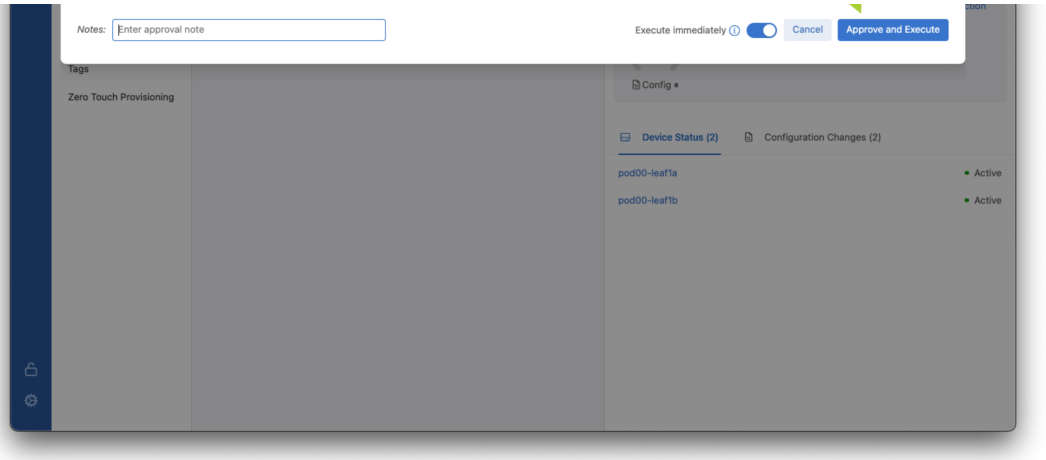


Student 2

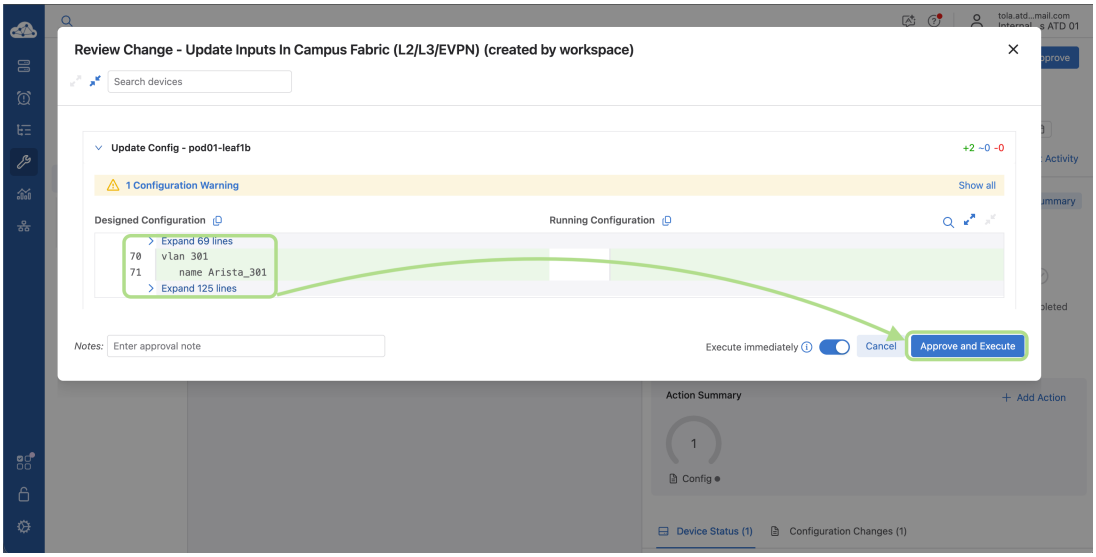

4. Verify the VLAN has been added to the device configuration using the Device `Comparison`


function.

a. Select `Devices`, then select `Comparison`, and select `Time Comparison`.

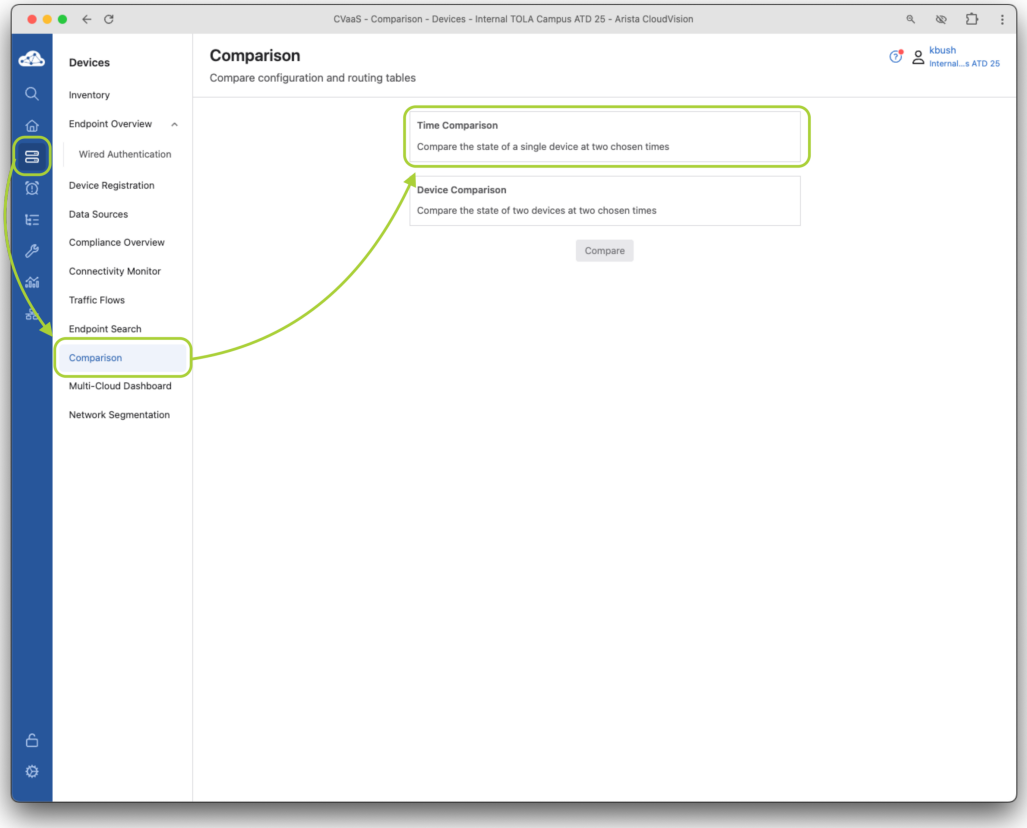


b. Choose a device from the list, such as `leaf1a` for Student 1 and `leaf1b` for Student 2.

c. Select a time period, for example `30 minutes ago`, and select `Compare`.

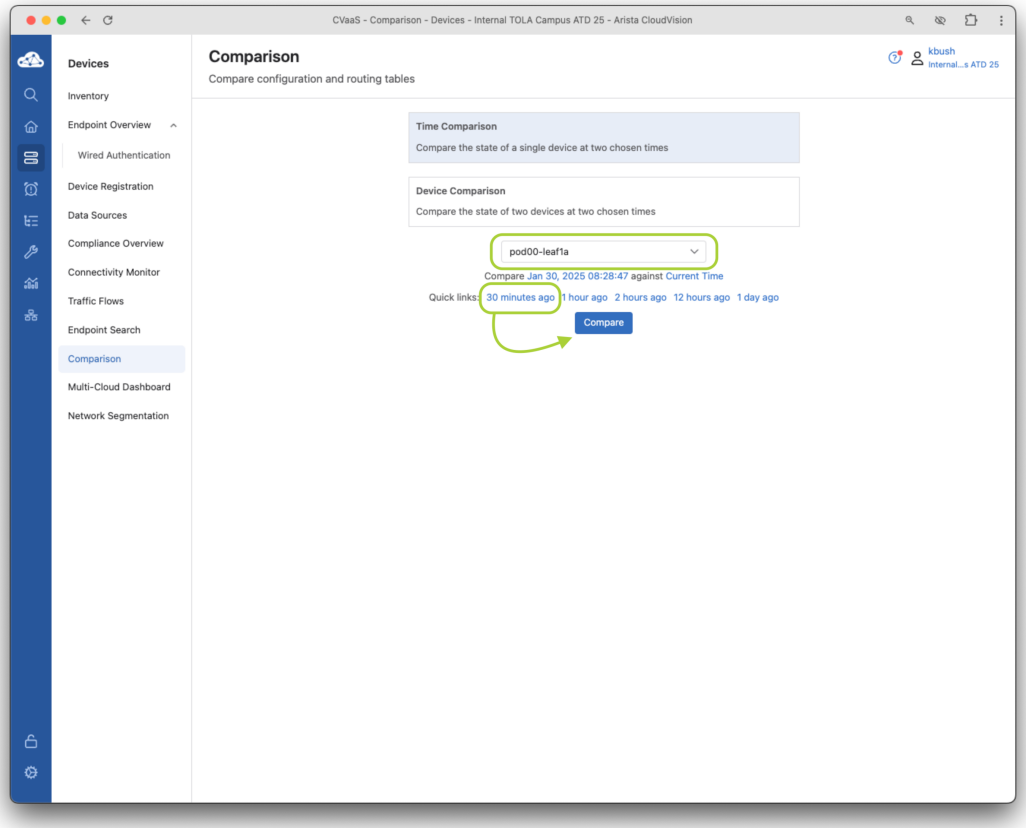


d. The first screen shows the overview. Navigate to the `Configuration` tab on the left.

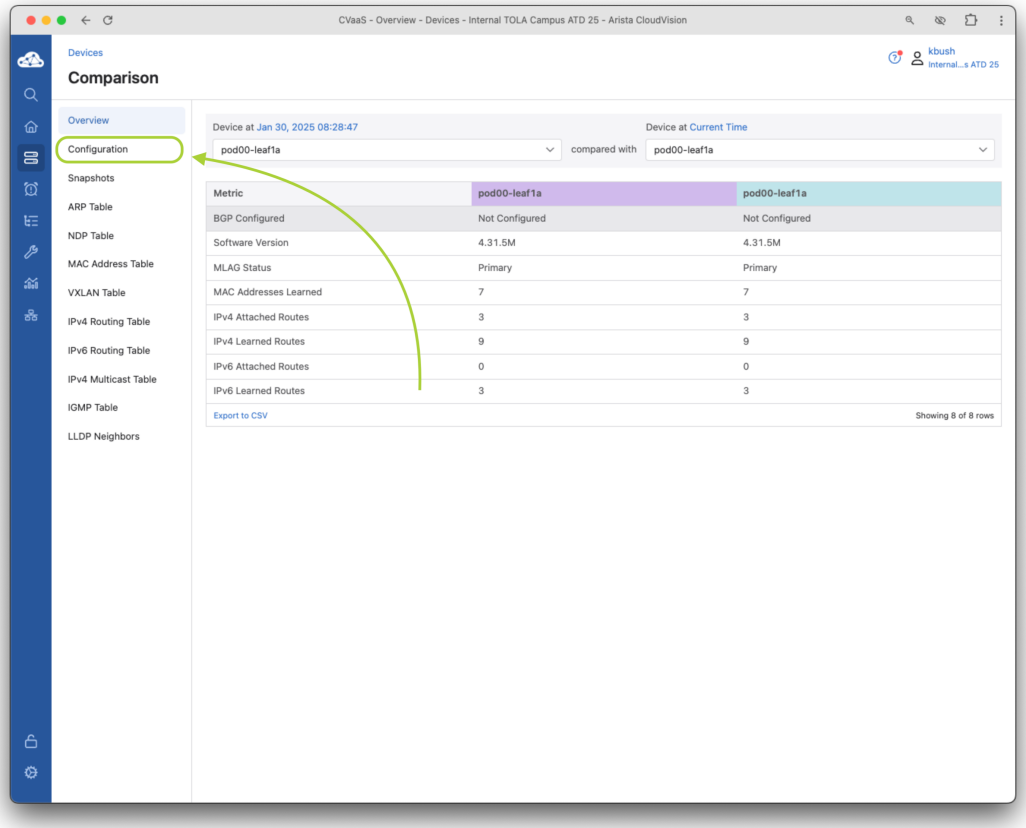

e. Select the `Configuration` section.

> **Timeseries in CloudVision**
>
> We expect the configuration changed within the last 30 minutes, but all streaming data from the switch (including configuration) is stored in a timeseries database. Anything from routing table, MAC, ARP, and more is accessible for historical review and comparisons like this!

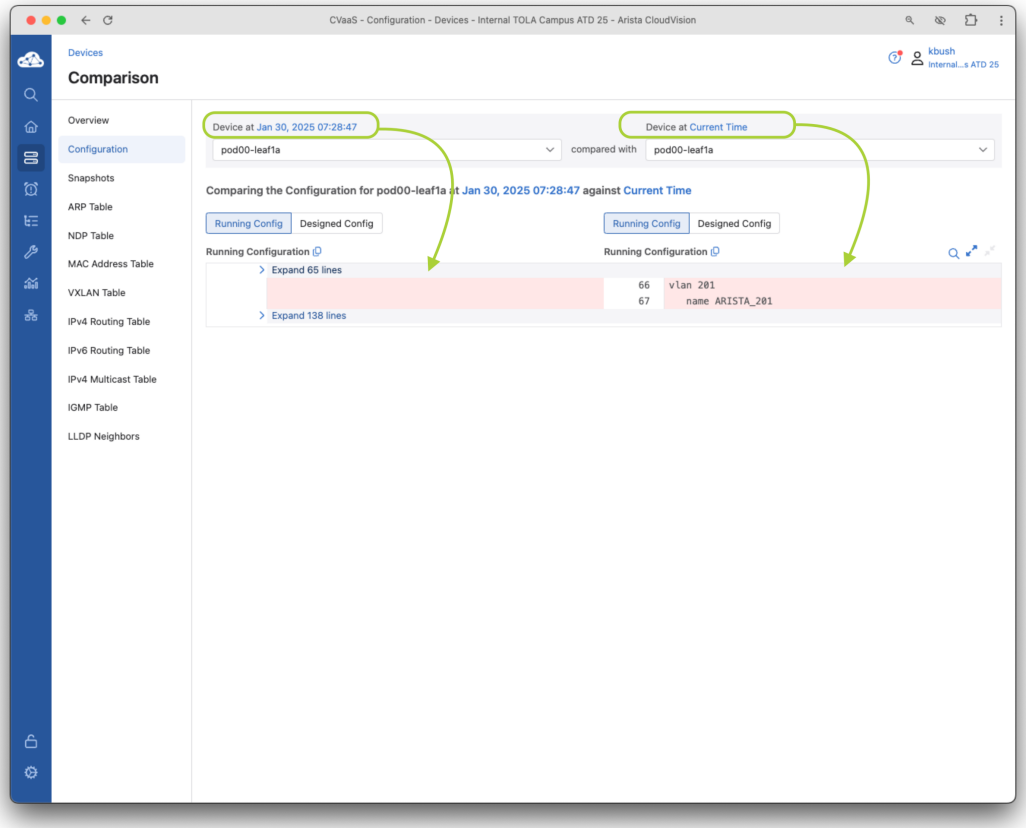


5. Lab section completed! In the next section, we'll roll back this change control.

Rollback a Change Control


At some point in your career, you'll be asked to roll back a configuration change and restore a previous state. You may need to do this for all devices affected by a change, or only a subset of devices under troubleshooting.

CloudVision Change Controls are built with this flexibility in mind — granular change management per device or fleet-wide. Specific actions or tasks can be identified and rolled back when needed.


1. Let's roll back the change control we used to add a VLAN via Studios.
2. Navigate to `Provisioning`, then `Change Control`. Select the change control corresponding to your VLAN addition.

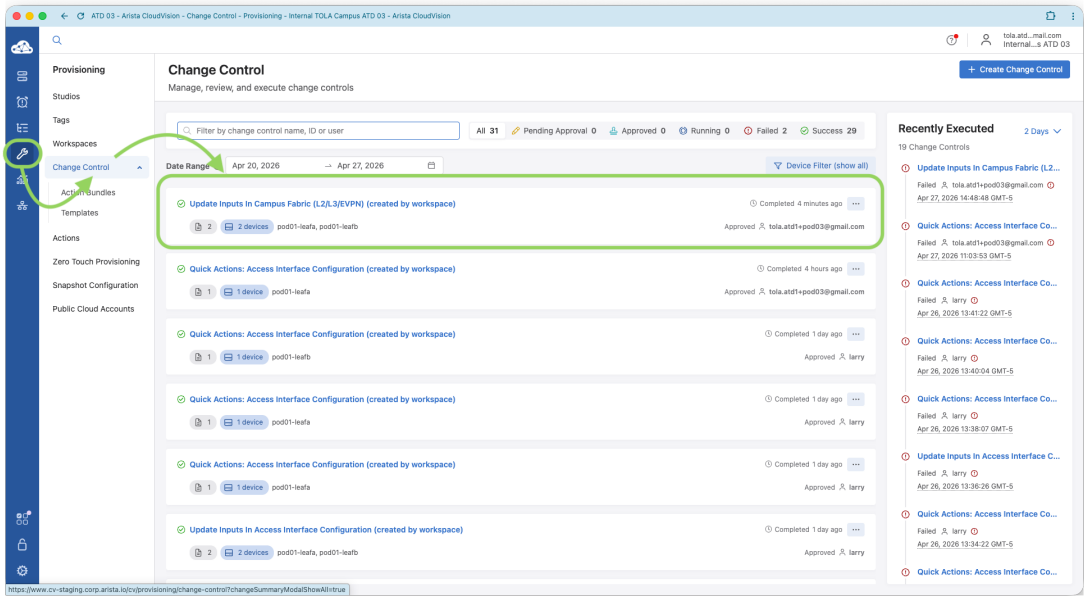


3. Select `Rollback`.

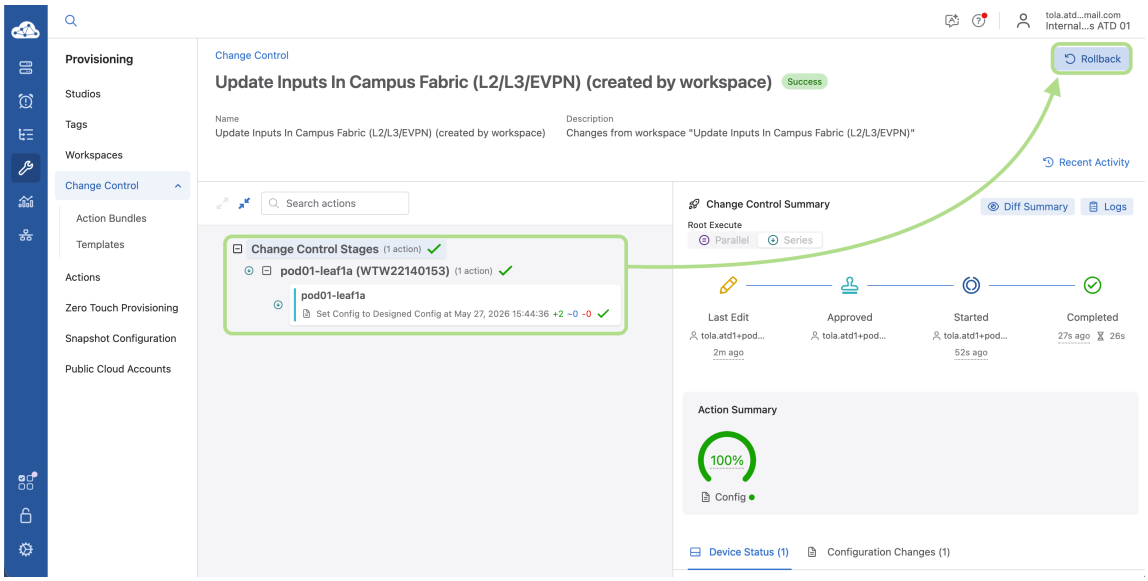

4. On the next screen, select the top checkbox to select all devices and select `Create Rollback Change Control`.

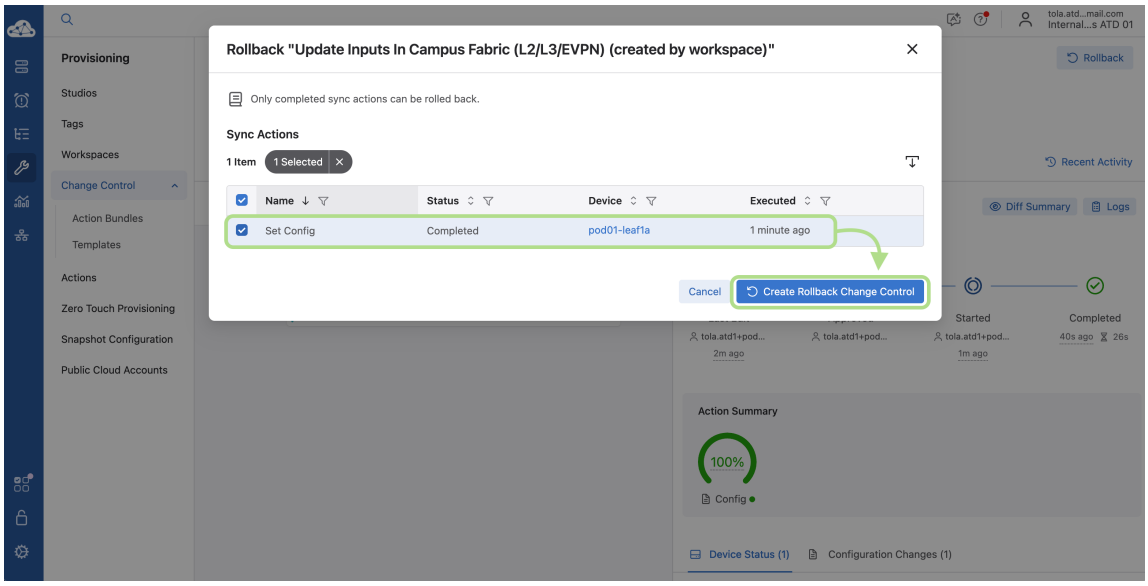



5. Verify the `Configuration Changes` section by selecting `Diff Summary`. Once you have reviewed the change, select `Review and Approve`.

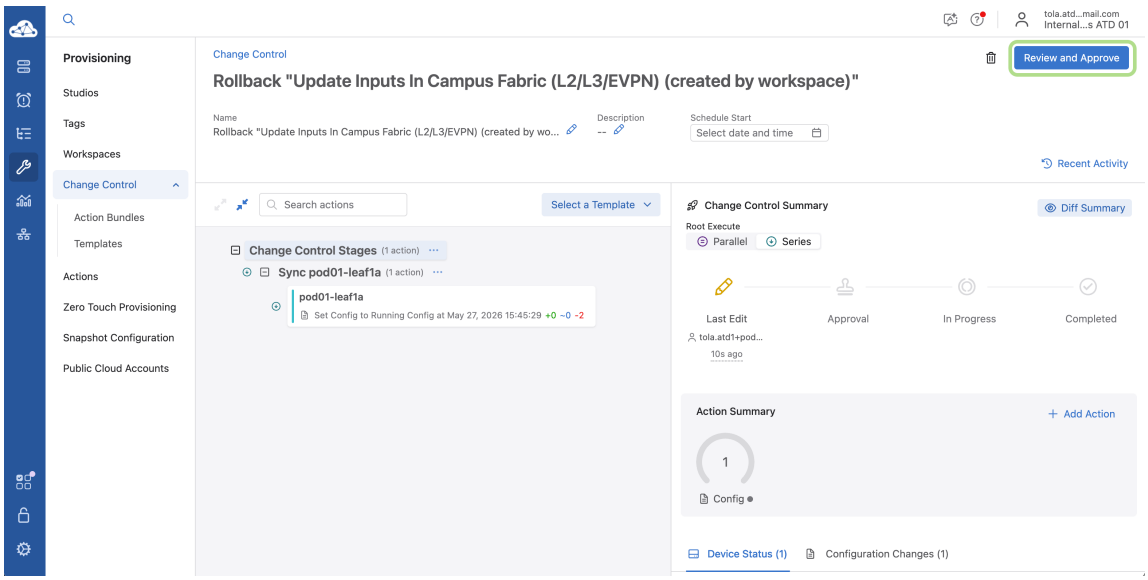


6. You'll be presented with one more opportunity to review the changes. Toggle `Execute Immediately` if not already on, and select `Approve and Execute`.

Student 1

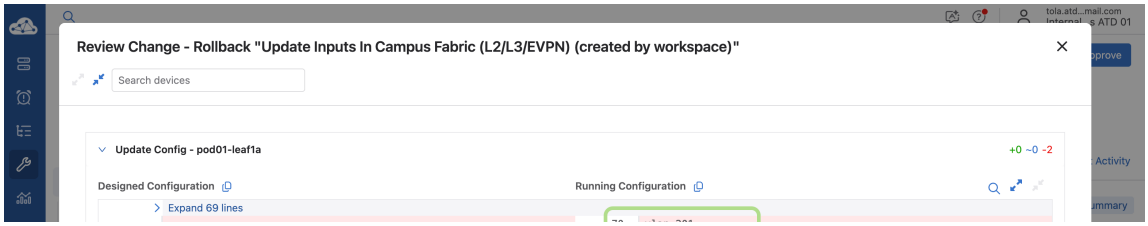

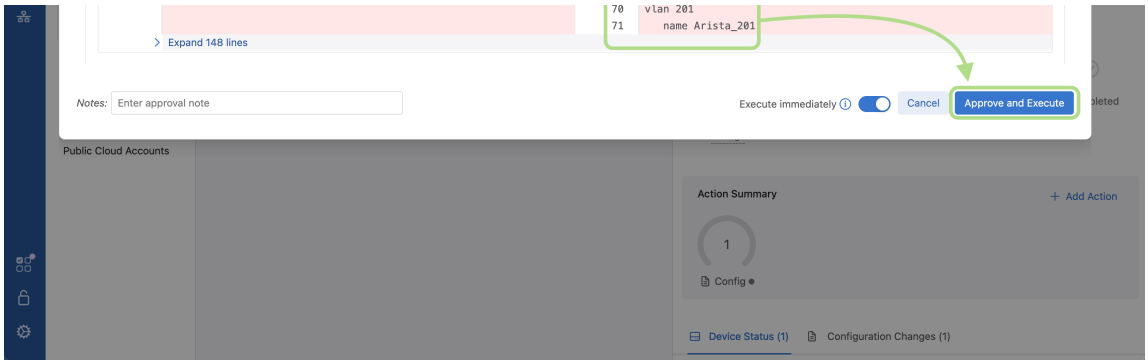


Student 2

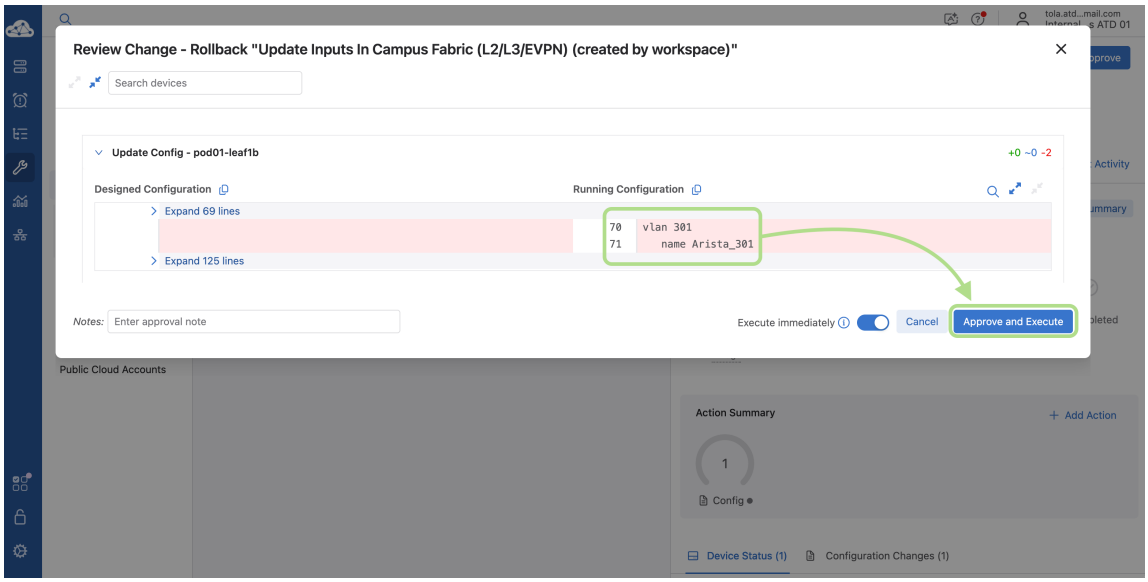


7. Monitor the change control for completion to ensure the added VLAN is cleaned up on all switches.

Change Started



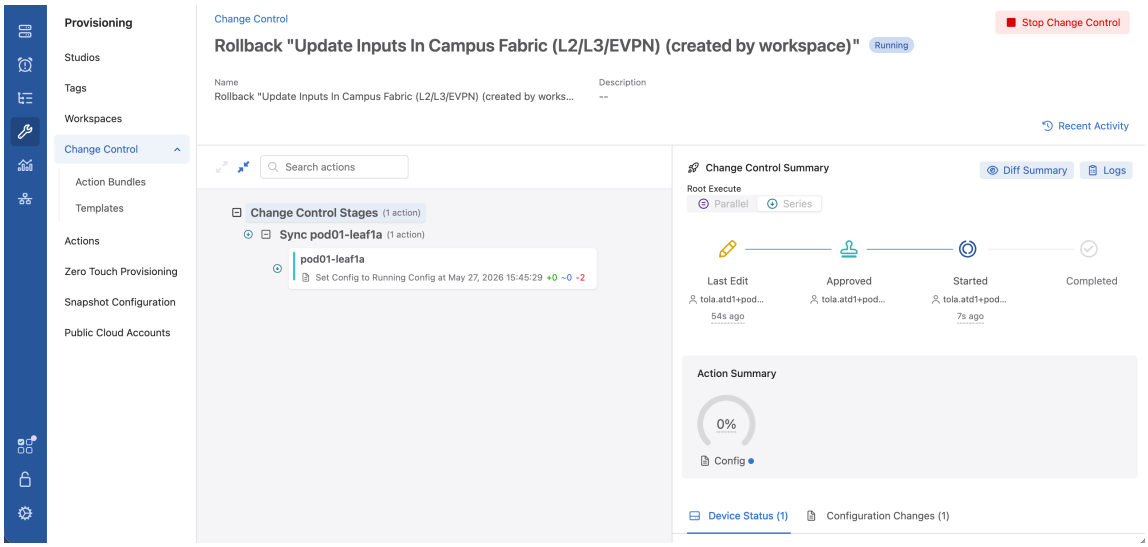

Change Completed

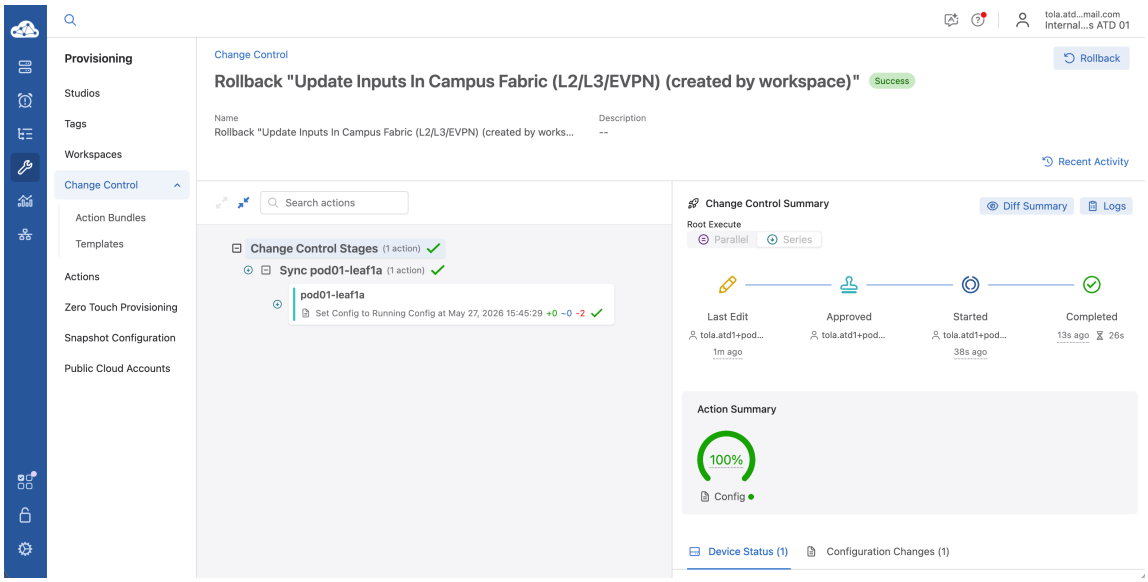

8. You have now successfully added a VLAN through Studios and then rolled back that change.

Additional References

- Interface Diagnostics

🎉 **CONGRATS! You have completed this lab!** 🎉

LET'S GO TO THE NEXT LAB!

2026-06-10