PARTNER
IN VENTILATION
2VV.CZ

AirGENIO
Modbus RTU/TCP guide



For units with COMFORT or SUPERIOR control

11-03-22 v1

1. BASIC INFORMATION

BEFORE CONNECTING THE DEVICE, IT IS NECESSARY TO CAREFULLY READ THE INSTRUCTIONS FOR ITS OPERATION AND INSTALLATION OF THE DEVICE.

PLEASE CONSULT MODBUS XLS SPREADSHEET FOR DETAILS ON ALL RELEVANT MODBUS ADDRESSES

Modbus RTU default setting (RS485)	
modbus baudrate	9600
modbus parity	ODD
modbus stopbit	1
modbus address of the unit	1
PLC Addresses - BASE1	

Modbus TCP default setting *	
IP address	192.168.0.100
Mask	255.255.255.0
Gateway	192.168.0.1
Modbus port	502

* Avalible only for SUPERIOR controls.

MODBUS RTU:
Every 8-bit byte of message contains two 4-bit hexadecimal characters. The transmission of a message must be continuous, the spaces between the characters must not be longer than 1.5 character. The beginning and end of the message is identified according to the bus rest longer than 3.5 character. The RTU frame format is shown in the picture.

General structure of telegram [hex]:

Beginning	Address	Function	Data	CRC	End
> 3.5 characters	8 bits	8 bits	N * 8 bits	16 bits	> 3.5 characters

Data block length
Size of **ADU on RS-485 =** 253 bytes PDU + address(1 byte) + CRC (2 bytes) = **256 bytes**

Address
Master has not any specific address, only slave units have to have an address unique in all MODBUS site.

CRC
Field with generating polynom x16 + x15 + x2 + 1.


2. WIRING

- Each device has a communication port with two terminals, which are indicated for the sake of convenience as A and B. In these two terminals the communication cable is connected so that all the devices that take part in the communication are connected in parallel.
- All the ‘A’ terminals must be connected together and all the ‘B’ terminals must be connected together respectively.
- In order to avoid errors when many devices are connected, cables of the same colour should be used for all the connections to the terminals A and cables of the same colour should be used for all the connections to the terminals B of the various devices (e.g. white for A and blue for B)
- Main boards (module-B, module-A) are already equipped with terminating resistor

Inverting the ‘A’ and ‘B’ connections of a device does not only prevent it from communicating but may also stop the entire communication system from working owing to incorrect direct (polarisation) voltage found on the terminals of the incorrectly connected device.


SUPERIOR/COMFORT controls main board (module-A)

- Modbus RTU/TCP

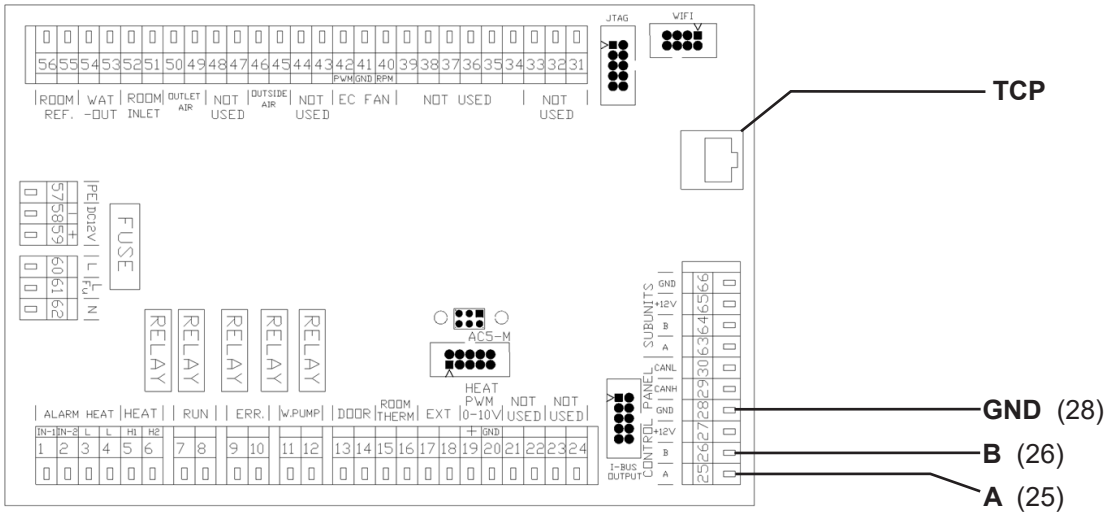

- The main cable should be no longer than 150m! (*In case of use high quality cables as Belden 3105A and adherence to all principles of proper installation of the Modbus network can be distance longer up to 700m*). This distance does not include the branches (which must nevertheless be short). The maximum number of devices that can be connected to a main cable is 32, including the Master.


- In order to increase the extent of the Modbus network, repeaters can be used; and signal amplifying and regenerating devices provided with two communication ports that transfer to each what they receive from the other.

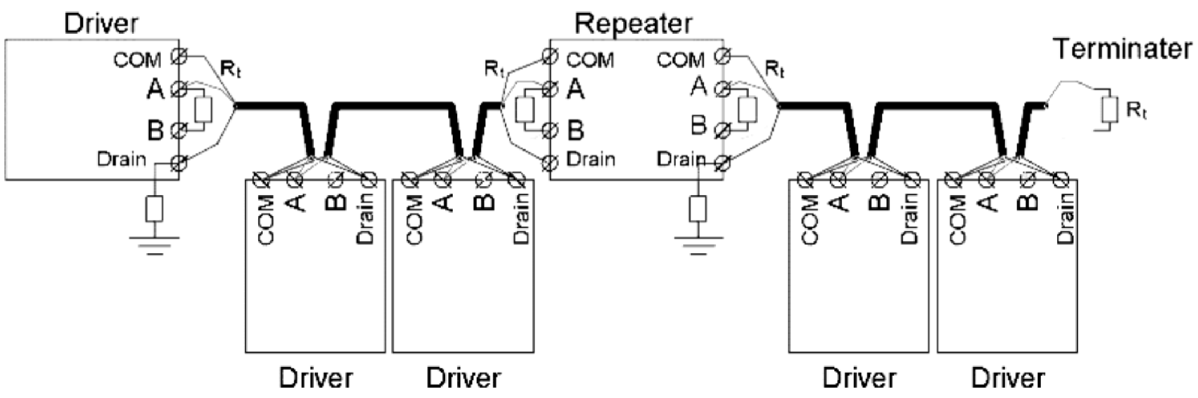


- Using a repeater, the main cable is divided into different segments, each of which can be up to 150 m in length and connect 32 devices (this number includes the repeaters). The maximum number of repeaters that should be serially connected is 3. A higher number introduces excessive delays in the communication system.

Recommended cables
Shielded twisted pair (telephone type). For example, Belden 3105A cable can be specified, but different types of cable with equivalent characteristics can be used. The twin consists of two conductors that are twisted together and ground GND must be connected.

The shielding may be braided (be formed by a mesh of thin conducting wires) or be a foil (consisting of a sheet of metal wound around the conductors): the two types are equivalent.

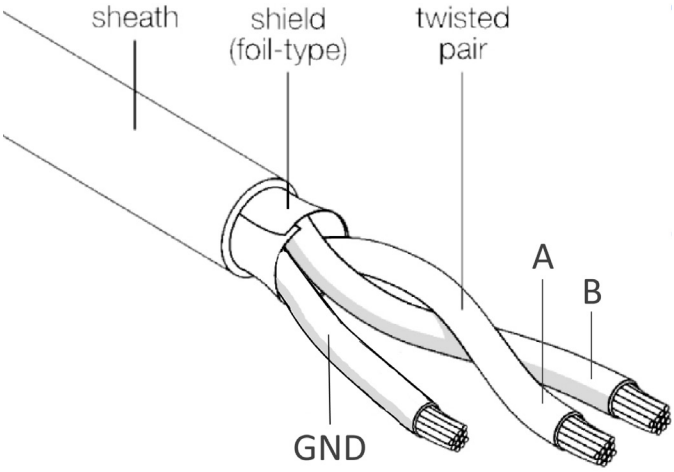


Earth connection of the shield
The cable shield must be earthed only in one point. Normally, this connection is made at one end of the main cable.

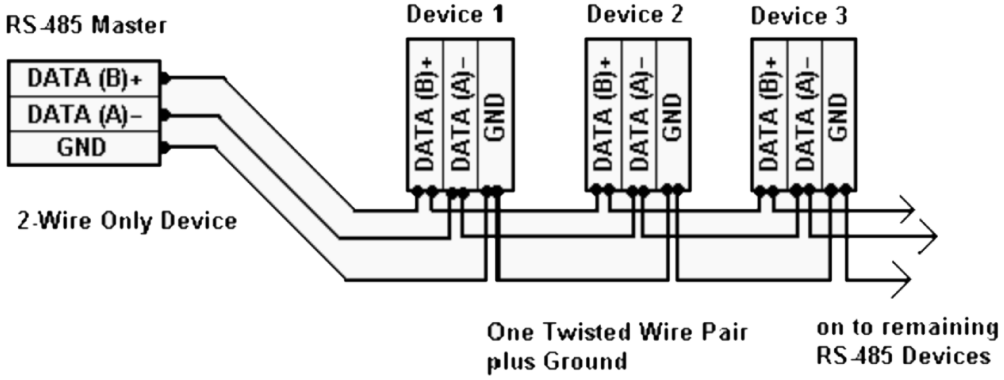


3. Modbus and Network setting

To set communication, you must enter to service settings (code 1616) or use default settings.


Modbus RTU settings

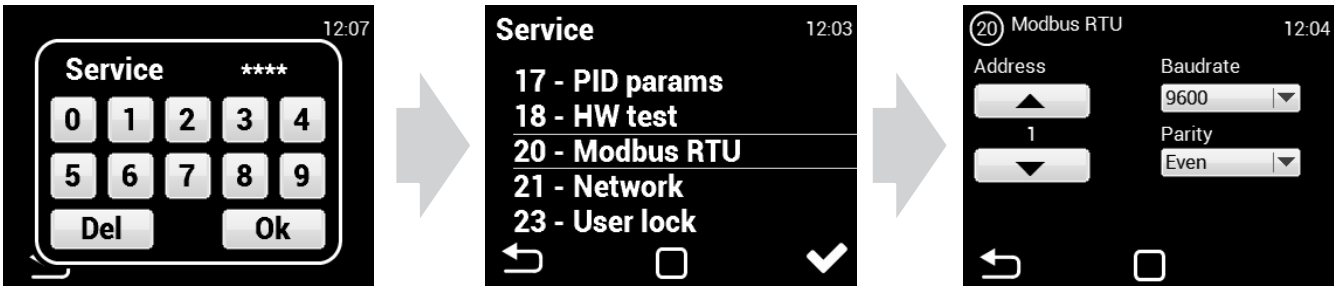

Network settings for Modbus TCP

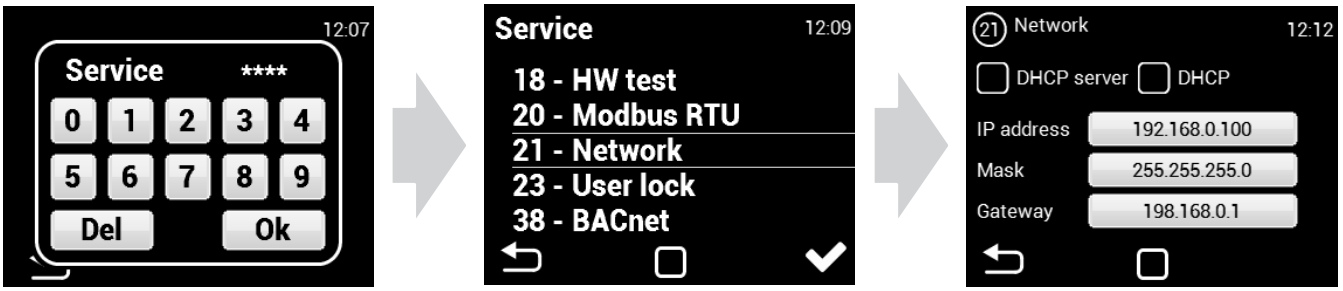

PLEASE AFTER OF ANY CHANGES IN MENU 20-MODBUS RTU OR 21-NETWORK IS NECESSARY PROVIDE SOFTWARE RESET

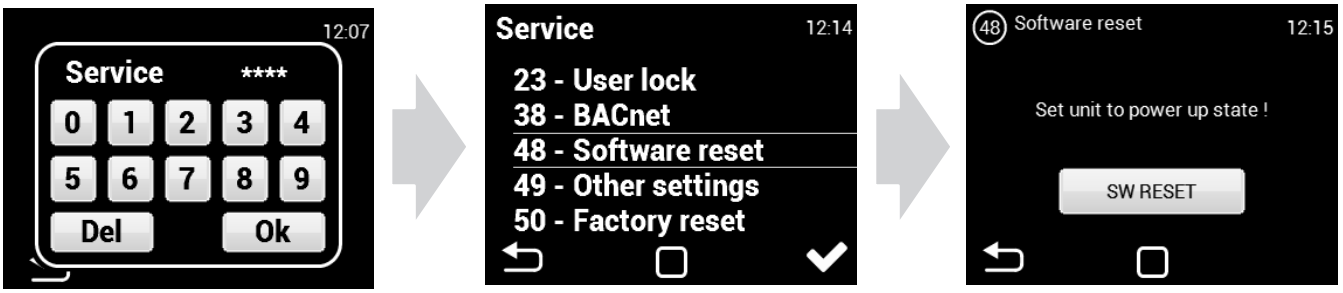

4. Modbus XLS spreadsheet information

Spredsheet is complete file for all 2VV pruducts with AirGENIO controls:

HOLDING REGISTERS	FUNC_CODE
FACTORY_DRIVER	0x03,0x06,0x10
FACTORY_SET	0x03,0x06,0x10
SERVICE	0x03,0x06,0x10
SERVICE_HARD	0x03,0x06,0x10
SHARE	0x03,0x06,0x10
TIME_DRIVER	0x03,0x06,0x10
TIME_SWITCH_WEEK	0x03,0x06,0x10
TIME_SWITCH_YEAR	0x03,0x06,0x10
ERROR_LOG_AHU	0x03,0x06,0x10
ERROR_LOG_AC	0x03,0x06,0x10
ERROR_LOG_DRIVER	0x03,0x06,0x10
NETWORK	0x03,0x06,0x10
CFG_UNIT	0x03,0x06,0x10
WIFI_SETTINGS	0x03,0x06,0x10
DIRECT_CONTROL	0x03,0x06,0x10
NORDIC_SERVICE	0x03,0x06,0x10

INPUT REGISTERS	FUNC_CODE
INFO	0x04
STATUS_AHU	0x04
TIME	0x04

Used for HRU and AHU -green

Used for Air curtains, IC controllers and SC controllers - orange

Used for all products - without color marking

	A	B	C	D	E	F	G	H
1	Address	Name	Structure	Info	Min. Value	Max. Value	Default	Enum
32	20030	PID_Postheater2_derivative constant		PID_xxD (min)	0	10	0	
33	20031	PID_Peheater_Proportional range		PID_Pxx °C (°F)	5(41)	60(140)	20(68)	
34	20032	PID_Preheater_Integration constant		PID_xIx (sec)	1	255	60	
35	20033	PID_Preheater_derivative constant		PID_xxD (min)	0	10	0	
36	20034	SupplyDuctTempMax		Maximal supply duct temperature °C (°F)	25(77)	45(113)	30(86)	
37	20035	SupplyDuctTempMin		Minimal supply duct temperature °C (°F)	15(59)	20(68)	15(59)	
38	20036	RequiredPressureVAV		Pa	0	1000	30	
39	20037	BypassTemperature		Minimal bypass temperature	0(32)	20(68)	15(59)	
40	20038	MaxFlowCalibration		Maximal flow after calibration	0	15000	dle adresy 10114 nebo 10111	
41	20039	MaxPressureCalibration		Maximal pressure after calibration	0	5000	30	
42	20040	FanCalibrationProcessed		FanCalibrationSucessfullyTerminated	0	1	0	FAN_CALIBRATION_NONE FAN_CALIBRATION_PROCESSED
43	20041	FilterCalibrationProcessed		FilterCalibrationSucessfullyTerminated	0	1	0	FILTER_CALIBRATION_NONE FILTER_CALIBRATION_PROCESSED
44	20042	reserva			0	0	0	
45	20043	reserva			0	0	0	
46	20044	OutsideTempSensorBMS		Outside temerature from BMS enable	0	1	0	OUT_TEMP-BMS_ENABLE OUT_TEMP_BMS_DISABLE
47	20045	FlowReductionUnderDuctMin		0 - disable 1 - enable	0	1	1	DUCT_MIN_FLOW_REDUCTION_DISABLE DUCT_MIN_FLOW_REDUCTION_ENABLE
48	20046	Rec_CO2Level1100		350 - 1100ppm	350	1100	1000	
49	20047	Rec_CO2Level2000		350 - 2000ppm	350	2000	1000	
50	20048	Rec_Temp_setpoint		°C (°F)	25(77)	40(104)	30(86)	
51	20049	Rec_Temp_setpoint_winter		°C (°F)	-20(-4)	-5(23)	-10(14)	
52	20050	Rec_PID_P		PID_Pxx %	5	70	20	
53	20051	Rec_PID_I		PID_xIx (sec)	1	255	60	
54	20052	Rec_PID_D		PID_xxD (min)	0	10	0	
55				AIR CURTAIN				
56	20053	SummerHeatEnable		Enable summer heat blocation	0	1	0	
57	20054	WinterMounthStart		Mounth when winter starts	1	12	10	
58	20055	WinterMounthStop		Mounth when winter ends	1	12	4	
59	20056	SummerTempHeaterEnable		Limit temperature to enable heat in summer	10	20	15	
60	20057	AutoSpeedControlEnable		Enable automatic speed control use 0 - disable 1 - enable	0	1	0	
61	20058	AutoSpeedControlDeltaT		Delta T for automatic speed control changes (setpoint vs outside temperature)	1	5	1	
62	20059	NightTempReductionEnable		NightTempReductionEnable	0	1	0	
63	20060	NightTempReductionSetpointShift		Temperature setpoint shift for night reductior	-1	-5	-3	
64	20061	NightStartHour		Definition when night time start (hour)	0	23	0	

FUNCTIONS | SERVICE | SERVICE HARD | INFO | STATUS_AHU | STATUS_AC | SLAVE_AC_STATUS | SHARE | TIME | TIME_DRIVER | TIME_SWITCH_WEE

5. Examples

5.1. Units with COMFORT control (HRV, HRDA, HRDF)

Manual mode control, error checking:
(PLC adresses BASE +1)

HOLDING REGISTERS

21001 - Turn unit OFF/ON - 0 for OFF / 1 for ON
25000 - Ventilation mode - 0 for MANUAL mode
21002 - Address for Changin flow - value in %
25009 - Temperature sensor selection - 0 for Supply duct / 1 - Extract duct / 2 - Room
21003 - Set point temperature - Supply duct from15 to 45°C / Extract duct from15 to 30°C / Room from15 to 30°C
21009 - Boos Mode - 1 - ON / 0 - OFF
21016 - Filter time reset

SETTING WHERE NEED MAKE SOFTWARE RESET

25008 - Select contact logic for FIRE or OCCUPANCY - 0 -FIRE/ 1 - OCCUPANCY (OCCUPANCY is only used in MANUAL mode)
25030 - Seting for FIRE ventilation: 0 - fans OFF; 1 - all fans ON; 2 - only supply fan ON; 3 - only exhaust fan ON
25031 - Setting the airflow for FIRE mode from 0 to 100%
20009 - Setting the time interval for OCCUPATION mode. Range 1 - 60 minutes.
20010 - Setting the required flow. Range of 20% to 50%

20011 - Enabling BOOST mode activation from Standby state of the unit. Activation can be achieved solely using an external button.
20012 - Setting the time interval for which the mode will be active for BOOST
20013 - Setting the required airflow for BOOST

20014 - Enabling NIGHT VENTILATION mode
20015 - Setting the required flow Range of 50% to 100% for NIGHT VENTILATION.
20016 - Setting temperature for NIGHT VENTILATION (measurement on Exhaust Channel sensor). Range of +12°C to +25°C.
20017 - Setting the Month (for evaluating the activation of NIGHT VENTILATION)
20018 - Setting the Day (for evaluating the activation of NIGHT VENTILATION)
20019 - Setting the Hour (for evaluating the activation of NIGHT VENTILATION)
20020 - Setting the Minuts (for evaluating the activation of NIGHT VENTILATION)
20021 - Setting the Month (for evaluating the deactivation of NIGHT VENTILATION)
20022 - Setting the Day (for evaluating the deactivation of NIGHT VENTILATION)
20023 - Setting the Hour (for evaluating the deactivation of NIGHT VENTILATION)
20024 - Setting the Minuts (for evaluating the activation of NIGHT VENTILATION)
20037 - Setting of minimum outdoor temperature from which the bypass opening is allowed (range 0-20°C). ***Does not apply to VENUS!***

25019 - Filter time activate - 0 - Non / 1 - aviable
25020 - Set maximal filter working hours (from 200 to 3000)

INPUT REGISTERS - PERIODIC CHECKING (READ ONLY)

15008 - bit0 - Flap inlet
15008 - bit1 - Flap outlet
15013 - actual air flow inlet fan % power
15014 - actual air flow outlet fan % power
15019 - actual temperature - Supply duct*10
15022 - actual temperature - Extract duct*10
15026 - actual temperature - Room*10
15049 - set point temperature
15044 - intel filter %
15045 - outlet filter %
15003 - bit 1 - Global error
15000 - bit 5 - Status FIRE mode
15000 - bit 7 - Status OCCUPANCY mode

DCV mode control, error checking:

(PLC adresses BASE +1)
HOLDING REGISTERS

21001 - Turn unit OFF/ON - 0 for OFF / 1 for ON
25000 - Ventilation mode - 1 for DCV mode
25003 - AQS sensor selection - 1 for select CO2 2000ppm
20003 - Set high CO2 Level 2000 - from 350 to 2000 ppm
20004 - Set low CO2 Level 2000 - from 350 to 2000 ppm
25009 - Temperature sensor selection - 0 for Supply duct, 1 - Extract duct, 2 - Room
21003 - Set point temperature - Supply duct from15 to 45°C / Extract duct from15 to 30°C / Room from15 to 30°C
21009 - Boos Mode - 1 - ON / 0 - OFF
21016 - Filter time reset

SETTING WHERE NEED MAKE SOFTWARE RESET

25008 - Select contact logic for FIRE mode
25030 - Seting for FIRE ventilation: 0 - fans OFF; 1 - all fans ON; 2 - only supply fan ON; 3 - only exhaust fan ON
25031 - Setting the airflow for FIRE mode from 0 to 100%

20011 - Enabling BOOST mode activation from Standby state of the unit. Activation can be achieved solely using an external button.
20012 - Setting the time interval for which the mode will be active for BOOST
20013 - Setting the required airflow for BOOST

20014 - Enabling NIGHT VENTILATION mode
20015 - Setting the required flow Range of 50% to 100% for NIGHT VENTILATION.
20016 - Setting temperature for NIGHT VENTILATION (measurement on Exhaust Channel sensor). Range of +12°C to +25°C.
20017 - Setting the Month (for evaluating the activation of NIGHT VENTILATION)
20018 - Setting the Day (for evaluating the activation of NIGHT VENTILATION)
20019 - Setting the Hour (for evaluating the activation of NIGHT VENTILATION)
20020 - Setting the Minuts (for evaluating the activation of NIGHT VENTILATION)
20021 - Setting the Month (for evaluating the deactivation of NIGHT VENTILATION)
20022 - Setting the Day (for evaluating the deactivation of NIGHT VENTILATION)
20023 - Setting the Hour (for evaluating the deactivation of NIGHT VENTILATION)
20024 - Setting the Minuts (for evaluating the activation of NIGHT VENTILATION)
20037 - Setting of minimum outdoor temperature from which the bypass opening is allowed (range 0-20°C). **Does not apply to VENUS!**

25019 - Filter time activate - 0 - Non / 1 - aviable
25020 - Set maximal filter working hours (from 200 to 3000)

INPUT REGISTERS - PERIODIC CHECKING (READ ONLY)

15008 - bit0 - Flap inlet
15008 - bit1 - Flap outlet
15013 - actual air flow inlet fan % power
15014 - actual air flow outlet fan % power
15019 - actual temperature - Supply duct*10
15022 - actual temperature - Extract duct*10
15023 - actual temperature INT2 (Management of frost protection mode of recuperator)
15026 - actual temperature - Room*10
15049 - set point temperature
15044 - intel filter %
15045 - outlet filter %
15000 - bit 5 - Status FIRE mode
15003 - bit 1 - Global error

2VV.Creating innovative solutions for you and your business since 1995.

5.2. Units with SUPERIOR control (HRFL, HR95, HR85)

CAV/VAV/DCV mode control, error checking:
(PLC adresses BASE +1)

HOLDING REGISTERS

21001 - Turn unit OFF/ON - 0 for OFF / 1 for ON
25000 - Setting ventilation mode - 1 - DCV; 2 - CAV; 3 - VAV
21012 - Start Fans calibration
21013 - Start Filters calibration
20038 - Setting max air flow after calibration for CAV mode
20039 - Setting max pressure after calibration for VAV mode
21002 - Changin air flow - CAV = m3/h (DCV, VAV - not available)
25003 - AQS sensor selection - 1 for select CO2 2000ppm for DCV mode
20003 - Set high CO2 Level 2000 - from 350 to 2000 ppm for DCV mode
20004 - Set low CO2 Level 2000 - from 350 to 2000 ppm for DCV mode
25009 - Temperature sensor selection - 0 for Supply duct / 1 - Extract duct / 2 - Room
21003 - Set point temperature - Supply duct from15 to 45°C / Extract duct from15 to 30°C / Room from15 to 30°C
21009 - Boos Mode - 1 - ON / 0 - OFF

SETTING WHERE NEED MAKE SOFTWARE RESET

20011 - Enabling BOOST mode activation from Standby state of the unit. Activation can be achieved solely using an external button.
20012 - Setting the time interval for which the mode will be active for BOOST
20013 - Setting the required airflow for BOOST
20014 - Enabling NIGHT VENTILATION mode
20015 - Setting the required flow Range of 50% to 100% fro NIGHT VENTILATION.
20016 - Setting temperature for NIGHT VENTILATION (measurement on Exhaust Channel sensor). Range of +12°C to +25°C.
20017 - Setting the Month (for evaluating the activation of NIGHT VENTILATION)
20018 - Setting the Day (for evaluating the activation of NIGHT VENTILATION)
20019 - Setting the Hour (for evaluating the activation of NIGHT VENTILATION)
20020 - Setting the Minuts (for evaluating the activation of NIGHT VENTILATION)
20021 - Setting the Month (for evaluating the deactivation of NIGHT VENTILATION)
20022 - Setting the Day (for evaluating the deactivation of NIGHT VENTILATION)
20023 - Setting the Hour (for evaluating the deactivation of NIGHT VENTILATION)
20024 - Setting the Minuts (for evaluating the activation of NIGHT VENTILATION)
20037 - Setting of minimum outdoor temperature from which the bypass opening is allowed (range 0-20°C).

25005 - Setting external exchangers EXCHANGERS - 0 - none (module B), 1 - electric, 2 - water, 3 - WCO, 4 - DX (ALWAYS ANANLOG

25030 - Seting for FIRE ventilation when changing the potential free contact: 0 - fans OFF; 1 - all fans ON; 2 - only supply fan ON; 3 - only exhaust fan ON
25031 - Setting the airflow for FIRE mode from 0 to 100%

20009 - Setting the time interval for OCCUPATION mode when changing the potential free contact. Range 1 - 60 minutes.
20010 - Setting the required flow. Range of 20% to 50%

INPUT REGISTERS - PERIODIC CHECKING (READ ONLY)

15008 - bit0 - Flap inlet
15008 - bit1 - Flap outlet
15011 - actual air flow inlet fan m3/h
15012 - actual air flow outlet fan m3/h
15019 - actual temperature - Supply duct*10
15022 - actual temperature - Extract duct*10
15023 - actual temperature INT2 (Management of frost protection mode of recuperator)
15026 - actual temperature - Room*10
15027 - actual inlet filter (Pa)
15028 - actual outlet filter (Pa)
15049 - set point temperature
15003 - bit 1 - Global error
15002 - bit 11 - rotary wheel error (HR85)

2VV.Creating innovative solutions for you and your business since 1995.

5.3. Decentralized unit with SUPERIOR control (HRWA2)

CAV mode control, error checking:

(PLC adresses BASE +1)
HOLDING REGISTERS

21001 - Turn unit OFF/ON - 0 for OFF / 1 for ON
25000 - Ventilation mode - 2 for CAV mode
21012 - Start Fans calibration
21013 - Start Filters calibration
20038 - Setting max air flow after calibration for CAV/DCV mode
21002 - Changin flow for CAV mode - m3/h
25009 - Temperature sensor selection - 0 for Supply duct / 1 - Extract duct / 2 - Room
21003 - Setting temperature - Supply duct from15 to 45°C / Extract duct from15 to 30°C / Room from15 to 30°C
21009 - Boos Mode - 1 - ON / 0 - OFF

SETTING WHERE NEED MAKE SOFTWARE RESET

25008 - Select contact logic for FIRE or OCCUPANCY - 0 -FIRE/ 1 - OCCUPANCY (OCCUPANCY is only used in CAV mode)
25030 - Seting for FIRE ventilation: 0 - fans OFF; 1 - all fans ON; 2 - only supply fan ON; 3 - only exhaust fan ON
25031 - Setting the airflow for FIRE mode from 0 to 100%

20009 - Setting the time interval for OCCUPATION mode. Range 1 - 60 minutes.
20010 - Setting the required flow. Range of 20% to 50%

20011 - Enabling BOOST mode activation from Standby state of the unit. Activation can be achieved solely using an external button.
20012 - Setting the time interval for which the mode will be active for BOOST
20013 - Setting the required airflow for BOOST

20014 - Enabling NIGHT VENTILATION mode.
20015 - Setting the required flow Range of 50% to 100% for NIGHT VENTILATION.
20016 - Setting temperature for NIGHT VENTILATION (measurement on Exhaust channel sensor). Range of +12°C to +25°C.
20017 - Setting the Month (for evaluating the activation of NIGHT VENTILATION)
20018 - Setting the Day (for evaluating the activation of NIGHT VENTILATION)
20019 - Setting the Hour (for evaluating the activation of NIGHT VENTILATION)
20020 - Setting the Minuts (for evaluating the activation of NIGHT VENTILATION)
20021 - Setting the Month (for evaluating the deactivation of NIGHT VENTILATION)
20022 - Setting the Day (for evaluating the deactivation of NIGHT VENTILATION)
20023 - Setting the Hour (for evaluating the deactivation of NIGHT VENTILATION)
20024 - Setting the Minuts (for evaluating the activation of NIGHT VENTILATION)
20037 - Setting of minimum outdoor temperature from which the bypass opening is allowed (range 0-20°C).

INPUT REGISTERS - PERIODIC CHECKING (READ ONLY)

15011 - Status air flow inlet fan m3/h
15012 - Status air flow outlet fan m3/h
15019 - Status temperature - Supply duct*10
15022 - Status temperature - Extract duct*10
15026 - Status temperature - Room*10
15027 - Status inlet filter (Pa)
15028 - Status outlet filter (Pa)
15049 - Status set point temperature
15000 - bit 5 - Status FIRE mode
15000 - bit 7 - Status OCCUPANCY mode
15003 - bit 1 - Global error
15009 - bit 9 - Inlet filter press error (C-module)
15009 - bit 10 - Outlet filter press error (C-module)
15009 - bit 14 - Status error AQS

DCV mode control, error checking:

(PLC adresses BASE +1)
HOLDING REGISTERS

21001 - Turn unit OFF/ON - 0 for OFF / 1 for ON
25000 - Ventilation mode - 1 for DCV mode
25003 - AQS sensor selection - 1 for select CO2 2000ppm
20003 - Set high CO2 Level 2000 - from 350 to 2000 ppm
20004 - Set low CO2 Level 2000 - from 350 to 2000 ppm
25009 - Temperature sensor selection - 0 for Supply duct, 1 - Extract duct, 2 - Room
21003 - Set point temperature - Supply duct from15 to 45°C / Extract duct from15 to 30°C / Room from15 to 30°C
21009 - Boos Mode - 1 - ON / 0 - OFF

SETTING WHERE NEED MAKE SOFTWARE RESET

25008 - Select contact logic for FIRE mode
25030 - Seting for FIRE ventilation: 0 - fans OFF; 1 - all fans ON; 2 - only supply fan ON; 3 - only exhaust fan ON
25031 - Setting the airflow for FIRE mode from 0 to 100%

25027 - Activation breathing for DCV mode
20011 - Enabling BOOST mode activation from Standby state of the unit. Activation can be achieved solely using an external button.
20012 - Setting the time interval for which the mode will be active for BOOST
20013 - Setting the required airflow for BOOST

20014 - Enabling NIGHT VENTILATION mode
20015 - Setting the required flow Range of 50% to 100%.
20016 - Setting temperature for NIGHT VENTILATION (measurement on Exhaust Channel sensor). Range of +12°C to +25°C.
20017 - Setting the Month (for evaluating the activation of NIGHT VENTILATION)
20018 - Setting the Day (for evaluating the activation of NIGHT VENTILATION)
20019 - Setting the Hour (for evaluating the activation of NIGHT VENTILATION)
20020 - Setting the Minuts (for evaluating the activation of NIGHT VENTILATION)
20021 - Setting the Month (for evaluating the deactivation of NIGHT VENTILATION)
20022 - Setting the Day (for evaluating the deactivation of NIGHT VENTILATION)
20023 - Setting the Hour (for evaluating the deactivation of NIGHT VENTILATION)
20024 - Setting the Minuts (for evaluating the activation of NIGHT VENTILATION)
20037 - Setting of minimum outdoor temperature from which the bypass opening is allowed (range 0-20°C).

INPUT REGISTERS - PERIODIC CHECKING (READ ONLY)

15013 - actual air flow inlet fan % power
15014 - actual air flow outlet fan % power
15019 - actual temperature - Supply duct*10
15022 - actual temperature - Extract duct*10
15026 - actual temperature - Room*10
15049 - set point temperature
15044 - intel filter %
15045 - outlet filter %
15000 - bit 5 - Status FIRE mode
15003 - bit 1 - Global error

6. AVALIBLE ADRESSES

SERVICE - Service register (Factory reset set to default)

SERVICE HARD - Service register (Factory reset no effect)

INFO register - read only (Factory reset no effect)

STATUS HRU - Status register - read only (Factory reset no effect)

SHARE - Share register (Factory reset to default)

TIME - Time register (Factory reset to default)

TIME DRIVER - Time driver register (Factory reset to default)

TIME SWITCH WEEK - Time switch register (Factory reset to default)

TIME SWITCH YEAR - Time switch register (Factory reset set to default)

ERROR LOG REGISTER (Factory reset no effect)

NETWORK - Network register (Factory reset no effect)

DIRECT CONTROL - (Factory reset no effect)

SERVICE - Service register (Factory reset set to default)

Address	Name	Structure	Info	Min. Value	Max. Value	Default	Enum
For Comfort and Superior							
20001	HighCO2Level1100		Set high parameter for CO2 level 1100	350	1100	1100	
20002	LowCO2Level1100		Set low parameter for CO2 level 1100	350	1100	1100	
20003	HighCO2Level2000		Set high parameter for CO2 level 2000	350	2000	2000	
20004	LowCO2Level2000		Set low parameter for CO2 level 2000	350	2000	2000	
20005	HighAQSLevelUni		Set high parameter [%]	0	100	100	
20006	LowAQSLevelUni		Set low parameter [%]	0	100	0	
20007	FlowOfset		Set ofset fans [%]	-100	50	0	
20009	NoBodyTimeOut		Setting the time interval after PIR sensor activation [min]	1	60	30	
20010	NobodyFlow		Setting the required flow range for PIR [%]	20	50	20	
20011	BoostFromOff		Enabling BOOST mode activation from Standby state of the unit. 0-NO/1-Yes	0	1	0	BOOST_FROM_RUN BOOST_FROM_OFF
20012	BoostTimer		Setting the time interval after the BOOST contact is activated [min]	1	60	3	
20013	BoostFlow		Setting the required airflow [%]	0	100	100	
20014	FreecoolingEnable		Enabling NIGHT VENTILATION mode 0 - disable 1 - enable	0	1	0	FREECOOL_DISABLE FREECOOL_ENABLE
20015	FreecoolingAirFlow		Setting the required flow Range [%]	50	100	100	
20016	FreecoolingTempEU		Setting desired temperature [°C]	12	25	20	
20017	FreecoolingOnMonth		Month for activation of NIGHT VENTILATION	1	12	9	
20018	FreecoolingOnDay		Day for activation of NIGHT VENTILATION	1	31	1	
20019	FreecoolingOnHour		Hour for activation of NIGHT VENTILATION	0	23	20	
20020	FreecoolingOnMin		Minutes for activation of NIGHT VENTILATION	0	59	0	
20021	FreecoolingOffMonth		Month for deactivation of NIGHT VENTILATION	1	12	9	
20022	FreecoolingOffDay		Day for deactivation of NIGHT VENTILATION	1	31	1	
20023	FreecoolingOffHour		Hour for deactivation of NIGHT VENTILATION	0	23	20	
20024	FreecoolingOffMin		Minutes for deactivation of NIGHT VENTILATION	0	59	0	
20025	PID_Postheater1_Proportional range		Control properties for integrated postheater [°C]	5	60	20	
20026	PID_Postheater1_Integration constant		Control properties for integrated postheater [sec]	1	255	60	
20027	PID_Postheater1_derivative constant		Control properties for integrated postheater [min]	0	10	0	
20028	PID_Postheater2_Proportional range		Control properties for external postheater [°C]	5	60	20	
20029	PID_Postheater2_Integration constant		Control properties for external postheater [sec]	1	255	60	
20030	PID_Postheater2_derivative constant		Control properties for external postheater (min)	0	10	0	
20031	PID_Peheater_Proportional range		Control properties for preheater °C [°F]	5	60	20	
20032	PID_Preheater_Integration constant		Control properties for preheater [sec]	1	255	60	
20033	PID_Preheater_derivative constant		Control properties for preheater [min]	0	10	0	
20034	SupplyDuctTempMax		Maximal supply duct temperature °C (°F)	25(77)	45(113)	30(86)	
20035	SupplyDuctTempMin		Minimal supply duct temperature °C (°F)	15(59)	20(68)	15(59)	

BACK TO PAGE 12

Address	Name	Structure	Info	Min. Value	Max. Value	Default	Enum
For Superior only							
20036	RequiredPressureVAV		Pa	0	1000	30	
For Comfort and Superior							
20037	BypassTemperature		Minimal bypass temperature °C (°F)	0(32)	20(68)	15(59)	
For Superior only							
20038	MaxFlowCalibration		Maximal flow after calibration	0	15000	according to adress 10114 or 10111	
20039	MaxPressureCalibration		Maximal pressure after calibration	0	5000	30	
20040	FanCalibrationProcessed		FanCalibrationSucessfullyTerminated	0	1	0	FAN_CALIBRATION_NONE FAN_CALIBRATION_PROCESSED
20041	FilterCalibrationProcessed		FilterCalibrationSucessfullyTerminated	0	1	0	FILTER_CALIBRATION_NONE FILTER_CALIBRATION_PROCESSED
For Comfort and Superior							
20044	OutsideTempSensorBMS		Outside temerature from BMS enable	0	1	0	"OUT_TEMP-BMS_ENABLE OUT_TEMP_BMS_DISABLE"
20045	FlowReductionUnderDuctMin		Enable or disable the ventilation level reduction if canal minimum 0 - disable 1 - enable"	0	1	1	DUCT_MIN_FLOW_REDUCTION_DISABLE DUCT_MIN_FLOW_REDUCTION_ENABLE
20046	Rec_CO2Level1100		Parameter for recirculaion module 350 - 1100ppm	350	1100	1000	
20047	Rec_CO2Level2000		Parameter for recirculaion module 350 - 2000ppm	350	2000	1000	
20048	Rec_Temp_setpoint		Parameter for recirculaion module °C (°F)	25(77)	40(104)	30(86)	
20049	Rec_Temp_setpoint_winter		Parameter for recirculaion module °C (°F)	-20(-4)	-5(23)	-10(14)	
20050	Rec_PID_P		PParameter for recirculaion module %	5	70	20	
20051	Rec_PID_I		Parameter for recirculaion module [sec]	1	255	60	
20052	Rec_PID_D		Parameter for recirculaion module [min]	0	10	0	

BACK TO PAGE 12

SERVICE HARD - Service register (Factory reset no effect)

Address	Name	Structure	Info	Min. Value	Max. Value	Default	Enum
25000	VentilationMode		Selection the ventilation mode 0 - Manual 1 - DCV 2 - CAV 3 - VAV 4 - VAVC4 5 - PCO	0	5	0	MANUAL DCV CAV VAV VAVC4
25001	Water_antifreeze_outlet_fan		0 - disable 1 - enable	0	1	0	WAOF_DISABLE WAOF_ENABLE
For Superior only							
25002	RecirculationMode		Accessories - for recirculation module 0 - Disable 1 - Air Quality Sensor 2000 2 - Air Quality Sensor 1100 3 - Temperature	0	3	0	RECIRC_AQS RECIRC_TEMP
For Comfort and Superior							
25003	AQS sensor selection		AQS sensor selection for mode DCV 0 - non 1 - CO2 2000ppm 2 - CO2 1100ppm 3 - RH 4 - VOC 5 - External control 0 - 10V	0	5	0	AQS_NON AQS_CO2_2000 AQS_CO2_1100 AQS_RH AQS_VOC AQS_UNI_0_10V
For Superior only							
25004	ADB_external		Accessories - ADB module 0 - disable 1 - enable	0	1	0	RECIRC_ENABLE RECIRC_DISABLE
25005	Postheat_2_external		Selection external post coil/heater (ALWAYS ANALOG) 0 - none (module B) 1 - electric 2 - water 3 - wco 4 - DX	0	4	0	NONE ELECTRIC WATER WCO DX
25006	Recirculation_external		Accessories - recirculation module 0 - disable 1 - enable	0	1	0	RECIRC_ENABLE RECIRC_DISABLE
25007	Preheater_2_external		Selection external preheater (ALWAYS ANALOG) 0 - none 1 - electric 2 - water	0	2	0	"PRE_NON PRE_ELECTRIC PRE_WATER"
For Comfort only							
25008	HwSettings		0 - DI-4.x = FIRE 1 - DI-4.x = NONOCCUPIED	0	1	1	DI_4_1_FIRE DI_4_1_NOBODY
For Comfort and Superior							
25009	TempSensorSelection		0 - Supply duct (15-45°C; 59-113F) 1 - Extract duct (15-30°C; 59-86F) 2 - Room (15-30°C; 59-86F) 3 - Thermostat 4 - Room BMS	0	2	0	T_SUPPLY_DUCT T_EXTRACT_DUCT T_ROOM
For Superior only							
25010	MinimalPowerDX		Min. power for switching the heat pump DX [%]	10	100	40	
25011	DeadBandDX		Upper output limit 0-10V of HEATER/ COOLER [mV]	100	2000	1000	
25012	MaxStartsPerHourDX		Max. number of activations of the condensing unit in ON/OFF mode per hour [x-times/hour]	3	60	6	
25013	HeatCoolTimeOut		HEAT/COOL delay in output switching [min]	1	20	3	
25014	DxControlSignal		Selection of control signal for DX 0 - 0-10V 1 - ON/OFF	0	1	0	DX_CTRL_SIGNAL_0_10V DX_CTRL_SIGNAL_ON_ OFF
25015	LogicDxErrorContact		Set Error Contact logic for DX 0 - connected = error 1 - connected = OK	0	1	1	DX_ERROR_CONNECTED DX_OK_ERROR_CO-NNECTED

BACK TO PAGE 12

Address	Name	Structure	Info	Min. Value	Max. Value	Default	Enum
25016	LogicDxDefrost		Set defrost logic DX 0 - connected = defrost 1 - connected = OK	0	1	1	DX_DEFROST_CONNEC-TED DX_OK_DEFROST_CO-NNECTED
25017	LogicDxHeatCoolSwitch		Set HEAT/COOL logic DX 0 - connected = cooling 1 - connected = heating	0	1	1	DX_HEAT_CONNECTED DX_COOL_CONNECTED
25018	LogicRunOutput		Set run output 0 - connected = stop 1 - connected = RUN	0	1	0	RUN_CONNECTED_STOP RUN_CONNECTED_RUN
For Comfort only							
25019	FilterWoringHours		Filter working hours	0	3000	0	
25020	FilterMaxHours		Maximal filter working hours	200	3000	1440	
For Comfort and Superior							
25021	modbus addres			1	247	1	
25022	modbus baudrate		4800 9600 14400 19200 38400	4800	38400	9600	
25023	modbus parity		NONE ODD EVEN	0	2	1	
25024	Not use for HRU		MASTER SLAVE	0	1	0	
25025	Not use for HRU		0 - non 1 - used	0	1	0	
25026	PCO_dpress			-250	250	0	
25027	DCV_breating		Activation of the mode BREATHING in AQS 0 - non 1 - used	0	1	0	
25028	HEPA_filter		0 - non 1 - used	0	1	0	
25029	Daylight_saving		The other settings: summer time 0 - NONE 1 - USED	0	1	1	
25030	FireMode		0 - FIRE_MODE_OFF 1 - FIRE_MODE_ALL_FAN 2 - FIRE_MODE_SUPPLY 3 - FIRE_MODE_RETURN	0	3	2	
25031	FireFlow		Setting the airflow when the FIRE contact opens	0	100		

BACK TO PAGE 12

INFO register - read only (Factory reset no effect)

Address	Name	Structure	Info	Min. Value	Max. Value	Default	Enum
16008	IP adress 0.x.x.x		IP adress part1 (0x00-0xFF)	0	255	192	
16009	IP adress x.0.x.x		IP adress part2 (0x00-0xFF)	0	255	168	
16010	IP adress x.x.0.x		IP adress part3 (0x00-0xFF)	0	255	0	
16011	IP adress x.x.x.0		IP adress part4 (0x00-0xFF)	0	255	100	
16012	Mask 0.x.x.x		Mask part1 (0x00-0xFF)	0	255	255	
16013	Mask x.0.x.x		Mask part2 (0x00-0xFF)	0	255	255	
16014	Mask x.x.0.x		Mask part3 (0x00-0xFF)	0	255	255	
16015	Mask x.x.x.0		Mask part4 (0x00-0xFF)	0	255	0	
16016	Gateway 0.x.x.x		Gateway part1 (0x00-0xFF)	0	255	192	
16017	Gateway x.0.x.x		Gateway part2 (0x00-0xFF)	0	255	168	
16018	Gateway x.x.0.x		Gateway part3 (0x00-0xFF)	0	255	0	
16019	Gateway x.x.x.0		Gateway part4 (0x00-0xFF)	0	255	1	
16020	DHCP		"0 - DHCP off 1 - DHCP on"	0	1	0	"DHCP_OFF DHCP_ON"
16021	ModbusPort		Port number 1 - 0xFFFF	1	0xFFFF	502	
16022	MAC adress 0.x.x.x.x.x		MAC adress part1	0	255	-	
16023	MAC adress x.0.x.x.x.x		MAC adress part2	0	255	-	
16024	MAC adress x.x.0.x.x.x		MAC adress part3	0	255	-	
16025	MAC adress x.x.x.0.x.x		MAC adress part4	0	255	-	
16026	MAC adress x.x.x.x.0.x		MAC adress part5	0	255	-	
16027	MAC adress x.x.x.x.x.0		MAC adress part6	0	255	-	
16028	HW version Module A			0	FFFF		
16029	FW Module A		Firmware version Module A	0	FFFF		
16030	FW Module B		Firmware version Module B	0	FFFF		
16044	BTCP_1		Firmware version bootloader CP	0	FFFF		
16045	FWCP_1		Firmware version CP	0	FFFF		
16046	BTCP_2		Firmware version bootloader CP	0	FFFF		
16047	FWCP_2		Firmware version CP	0	FFFF		
16048	BTCP_3		Firmware version bootloader CP	0	FFFF		
16049	FWCP_3		Firmware version CP	0	FFFF		
16050 ⋮ 16059	Not used for HRU						
16060	DHCP server		"0 - DHCP off 1 - DHCP on"	0	1	0	
16061	BACnet port			1	0xFFFF	0xBAC0	
16062	BACnet device ID MSB			0	0xFFFF	0	
16063	BACnet device ID LSB			0	0xFFFF	1	
16064	Local Broadcast 0.x.x.x		IP adress part1 (0x00-0xFF)	0	255	192	
16065	Local Broadcast x.0.x.x		IP adress part2 (0x00-0xFF)	0	255	168	
16066	Local Broadcast x.x.0.x		IP adress part3 (0x00-0xFF)	0	255	0	
16067	Local Broadcast x.x.x.0		IP adress part4 (0x00-0xFF)	0	255	255	
16068	Relay error extend			0	1	0	
16069	App pin			1000	9999		

BACK TO PAGE 12

STATUS HRU - Status register - read only (Factory reset no effect)

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
Unit global status1						
15000	bit0		ON/OFF	0	1	ON OFF
	bit1		MANUAL	0	1	MANUAL_NON MANUAL_MODE
	bit2		CAV	0	0	CAV_NON CAV_MODE
	bit3		VAV	0	0	VAV_NON VAV_MODE
	bit4		DCV	0	1	DCV_NON DCV_MODE
	bit5		Fire	0	1	FIRE_NON FIRE_MODE
	bit6		Boost	0	1	BOOST_NON BOOST_MODE
	bit7		Nobody (Nonoccupied)	0	1	NOBODY_NON NOBODY_MODE
	bit8		Freecooling	0	1	FRCOOL_NON FRCOOL_MODE
	bit9		Timeswitch	0	1	TIME_SW_NON TIME_SW_MODE
	bit10		Calibration	0	1	CALIBR_NON CALIBR_MODE
	bit11		Cooldown	0	1	COOLDWN_NON COOLDWN_MODE
	bit12		DirectControl	0	1	DIR_CTRL_NON DIR_CTRL_MODE
	bit13		FilterInfo	0	1	
	bit14		FW update error	0	1	
	bit15		FW update active	0	1	
Unit global status2						
15001	bit0		WaterHeater_antifreeze_protection	0	1	AT_FREEZE_OK AT_FREEZE
	bit1		WaterHeater waiting for hot water	0	1	HOT_WATER_NON HOT_WATER
	bit2		WaterHeater waiting for supply air temperature	0	1	AIR_TEMP_NO_OK AIR_TEMP_OK
	bit3		WCO searching inlet water temp (cold/hot)	0	1	WATER_CHECK_ON WATER_CHECK_OFF
	bit4		Recirculation	0	1	RECIRCULATION NO_RECIRCULATION
	bit5		Simulation	0	1	SIMULATION NO_SIMULATION
	bit6		Prefreecooling	0	1	PREFREECOOLING NO_PREFREECOOLING
	bit7		Temp Flow Reduction	0	1	
	bit8		PassiveHouseRestriction	0	1	
	bit9		AdbActive	0	1	
	bit10		VAVC4	0	1	
	bit11		PCO	0	1	

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
Software error1						
15002	bit0		Sw Fan Inlet Error	0	1	
	bit1		Sw Fan Outlet Error	0	1	
	bit2		Sw Filter Inlet Error	0	1	
	bit3		Sw Filter Outlet Error	0	1	
	bit4		Sw Filter Inlet Warning	0	1	
	bit5		Sw Filter Outlet Warning	0	1	
	bit6		Sw Preheater1 Error	0	1	
	bit7		Sw Postheater1 Error	0	1	
	bit8		Sw Postheater2 Error	0	1	
	bit9		Sw Preheater2 Error	0	1	
	bit10		Sw AQS Sensor Error	0	1	
	bit11		Sw Rotary Wheel Error	0	1	
	bit12		Sw ADB Error	0	1	
	bit13		Sw DX Error	0	1	
	bit14		Sw DX Defrost	0	1	
	bit15		Sw Condensate Drain	0	1	
Software error2						
15003	bit0		Sw G module Error	0	1	HEAT_CLOSED HEAT_OPEN
	bit1		Sw Global Error	0	1	HEAT_CLOSED HEAT_OPEN
	bit2		Sw K module Error	0	1	RUN_INDICATION NO_RUN
	bit3		Filter Info	0	1	ERROR_INDICATION NO_ERROR
	bit4		Cfg File Error	0	1	EXCHANGER_COOL EXCHANGER_HEAT
	bit5		Sw Filter Hepa Error	0	1	W_PUMP_A_OFF W_PUMP_A_ON
	bit6		Sw Filter Hepa Warning	0	1	
	bit7		IBUS Gateway Error	0	1	
Sensor status1						
15004	bit0		Temp. sensor EXT1 St (module A)	0	1	OK ERROR
	bit1		Temp. sensor EXT2 St (module A)	0	1	OK ERROR
	bit2		Temp. sensor EXT3 St (module A)	0	1	OK ERROR
	bit3		Temp. sensor EXT4 St (module B)	0	0	OK ERROR
	bit4		Temp. sensor INT0 St (module B)	0	0	OK ERROR
	bit5		Temp INT1 St (module A)	0	1	OK ERROR
	bit6		Temp INT2 St (module A)	0	1	OK ERROR
	bit7		Temp WIn St (module B)	0	0	OK ERROR
	bit8		Temp WOut St (module B)	0	0	OK ERROR
	bit9		Temp Room St	0	1	"OK ERROR"
	bit10		Sensor Filter In St	0	0	OK ERROR
	bit11		Sensor Filter Out St	0	0	OK ERROR
	bit12		Sensor Fan Inlet St	0	0	OK ERROR
	bit13		Sensor Fan Out St	0	0	OK ERROR
	bit14		Sensor Press St	0	0	OK ERROR
	bit15		Sensor Flow Alaram St	0	0	OK ERROR

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
Sensor status2						
15005	bit0		Aqs Sensor St	0	0	OK ERROR
	bit1		Sensor RH Rec St	0	0	OK ERROR
	bit2		Outside Temp. Sensor Bms St	0	0	OK ERROR
	bit3		Sensor RH St	0	0	OK ERROR
	bit4		Sensor Filter Hepa			
Input Status1						
15006	bit0		Status DI_1 Safety Therm1	0	0	OK ERROR
	bit1		Status DI_2 Safety Therm2	0	0	OK ERROR
	bit2		Status DI_3 Ext. Control	0	1	OK ERROR
	bit3		Status DI_4 Nobody (FIRE optional)	0	1	OK ERROR
	bit4		Status DI_5 Boost	0	1	OK ERROR
	bit5		Status DI TACHO_1	0	1	OK ERROR
	bit6		Status DI_TACHO_2 (Rotary wheel error)	0	1	OK ERROR
	bit7		Status DI_TACHO_3	0	1	OK ERROR
	bit8		Status DI_TACHO_4	0	1	OK ERROR
	bit9		Status DI_TACHO_5	0	1	OK ERROR
	bit10		Status DI_TACHO_6	0	1	OK ERROR
	bit11		Status DI_TACHO_7	0	1	OK ERROR
	bit12		Status DI_TACHO_8	0	1	OK ERROR
	bit13		Status DI_6 ADB/DX error (module B)	0	1	OK ERROR
	bit14		Status DI_7 Heat Pump Defrost (module B)	0	1	OK ERROR
	bit15		Status DI_8 Heat Pump Error (module B)	0	1	OK ERROR
Input Status2						
15007	bit0		Status DI_9 FIRE (module B)	0	1	OK ERROR
	bit1		Status DI_10 Condens Drain (module B)	0	1	OK ERROR
Output Status1						
15008	bit0		Status_DO_1_Flap_inlet	0	1	FLAP_CLOSED FLAP_OPEN
	bit1		Status_DO_2_Flap_outlet	0	1	FLAP_CLOSED FLAP_OPEN
	bit2		Status_DO_3_Run_indication	0	1	RUN_INDICATION NO_RUN
	bit3		Status_DO_4_Water_pump	0	1	W_PUMP_A_ON W_PUMP_A_OFF
	bit4		Status_DO_5_Heat_cool(module B)	0	1	EXCHANGER_COOL EXCHANGER_HEAT
	bit5		Status_DO_6_Error	0	1	ERROR_B_OK ERROR_B_ERROR
	bit6		Status_DO_7_ADB_on_off (module B)	0	1	ADB_ON ADB_OFF
	bit7		Status_DO_8_HeatPump_on_off (module B)	0	1	HEAT_PUMP_ON HEAT_PUMP_OFF
	bit8		Status_DO_9_WaterPump_on_off (module B)	0	1	W_PUMP_B_ON W_PUMP_B_OFF

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
Hardware Status1						
15009	bit0		FRAM	0	1	
	bit1		EEPROM	0	1	OK ERROR
	bit2		Ethernet	0	1	OK ERROR
	bit3		RTC Cell	0	1	OK ERROR
	bit4		Main Power	0	1	OK ERROR
	bit5		Control Panel	0	1	OK ERROR
	bit6		B module	0	1	OK ERROR
	bit7		C module In_Press	0	1	OK ERROR
	bit8		C module Out_Press	0	1	OK ERROR
	bit9		C module In_Filter Press	0	1	OK ERROR
	bit10		C module Out_Filter Press	0	1	OK ERROR
	bit11		C module Duct Press	0	1	OK ERROR
	bit12		C module C4_Duct Press	0	1	OK ERROR
	bit13		C module RH	0	1	OK ERROR
	bit14		AQS	0	1	OK ERROR
	bit15		USB over current	0	1	OK ERROR
Hardware Status2						
15010	bit0		Ethernet communication	0	1	OK ERROR
	bit1		C module Hepa Press	0	1	OK ERROR
15011	AirFlowInletFanDemand		Air flow Inlet fan demand m3/h (cfm)	0	0xffff	OK ERROR
15012	AirFlowOutletFanDemand		Air flow Outlet fan demand m3/h (cfm)	0	0xffff	OK ERROR
15013	AirFlowInletFanManual		Air flow Inlet fan manual ‰ of fan power	0	1000	OK ERROR
15014	AirFlowOutletFanManual		Air flow Outlet fan manual‰ of fan power	0	1000	OK ERROR
15015	AirFlowInletFan		Air flow Inlet fan m3/h (cfm)	0	0xffff	OK ERROR
15016	AirFlowOutletFan		Air flow Outlet fan m3/h (cfm)	0	0xffff	OK ERROR
15017	TempEXT1		Temp. sensor Ext1 °C (°F) x10	-40 (-40)	100 (212)	HEAT_CLOSED HEAT_OPEN
15018	TempEXT2		Temp. sensor Ext2 °C (°F) x10	-40 (-40)	100 (212)	HEAT_CLOSED HEAT_OPEN
15019	TempEXT3		Temp. sensor Ext3 °C (°F) x10	-40 (-40)	100 (212)	W_PUMP_A_OFF W_PUMP_A_ON
15020	TempEXT4		Temp. sensor Ext4 °C (°F) (module B) x10	-40 (-40)	100 (212)	
15021	TempINT0		Temp. sensor Int0 °C (°F) (module B) x10	-40 (-40)	100 (212)	‰ of fan power
15022	TempINT1		Temp. sensor Int1 °C (°F) x10	-40 (-40)	100 (212)	
15023	TempINT2		Temp. sensor Int2 °C (°F) x10	-40 (-40)	100 (212)	
15024	TempWIn		Temp. sensor water int. °C (°F) (module B) x10	-40 (-40)	100 (212)	
15025	TempWOut		Temp. sensor water out. °C (°F) (module B) x10	-40 (-40)	100 (212)	

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
15026	TempRoom		Room temperature sensor °C (°F) x10	-40 (-40)	100 (212)	
15027	SensorFilterIn		Inlet filter pressure sensor Pa (in H2O)	0 (0)	2000 (8,029)	
15028	SensorFilterOut		Outlet filter pressure sensor Pa (in H2O)	0 (0)	2000 (8,029)	
15029	SensorFanInlet		Inlet fan pressure sensor Pa (in H2O)	0 (0)	2000 (8,029)	
15030	SensorFanOut		Outlet fan pressure sensor Pa (in H2O)	0 (0)	2000 (8,029)	
15031	SensorPress		Pressure sensor Pa (in H2O)	0 (0)	2000 (8,029)	
15032	SensorFlowAlarm		Sensor Flow Alarm	0	1	
15033	AqsSensorValue		Air quality sensor %	0	100	
15034	SensorRHRec		Sensor quality RH %	0	100	
15035	SensorRH		Sensor quality RH % (module C)	0	100	
15036	PowerPreheater1		Power preheater_1 %	0	100	
15037	PowerPreheater2		Power preheater_2 % (module B)	0	100	
15038	PowerPostheater1		Power postheater_1 %	0	100	
15039	PowerPostheater2		Power postheater_2 % (module B)	0	100	
15040	PowerPostheater3		Power postheater_3 % (module B)	0	100	
15041	BypassPossition		Bypass possition %	0	100	
15042	Recirculation		Recirculation chamber % (module B)	0	100	
15043	TempOutsideBMS		Temperature sensor Outside BMS °C (°F) x10	-40 (-40)	100 (212)	
15044	InletFilterPercent		Evaluation of clogged inlet filter %	0	100	
15045	OutletFilterPercent		Evaluation of clogged outlet filter%	0	100	
15046	dummy			0	0xFFFF	
15047	SensorFilterhEPA		Sensor Filterh HEPA Pa (in H2O)	0 (0)	2000 (8,029)	
15048	HepaFilterPercent		Evaluation of clogged HEPA filter%	0	100	
15049	Temperature setpoint		Temperature setpoint °C (°F)	-40 (-40)	100 (212)	

BACK TO PAGE 12

SHARE - Share register (Factory reset to default)

Address	Name	Structure	Info	Min. Value	Max. Value	Enum	
21000	Language		Language selection	0	10	0	ENGLISH - 0 FRENCH - 1 GERMAN - 2 RUSSIAN - 3 CZECH - 4 SPANISH - 5 PORTUGUESE - 6 ITALIAN - 7 SVENSKA - 8 SUOMI - 9
21001	SwitchON		ON/OFF unit mode	0	1	0	OFF ON"
21002	AirFlowManual		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	-	
21003	Temperature		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE_HARD:25009): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-86F) Room (15-30°C; 59-86F)"	-	-	-	
21004	TimeSwGlobalEnable		TimeSwitchGlobal enable/disable	0	1	0	"TIMER_GLOBAL_DISABLE TIMER_GLOBAL_ENABLE"
21005	TimeSwMode		Active/Inactive timer mode (only read)	0	1	0	"TIMER_MODE_OFF TIMER_MODE_ON"
21006	TimeSwFlow		only read				
21007	TimeSwTemp		only read				
21008	TimeSwOnOFF			0	1	0	"TIMER_MODE_OFF TIMER_MODE_ON"
21009	BoostMode / DAY-NIGHT mode		Activation of Boost mode / Switching between DAY-NIGHT (SC controls)	0	1	0	"BOOST_OFF BOOST_ON"
21016	FilterClogedTimerReset		"0 - count 1 - timer reset"	0	1	0	"FILTER_TIMER_COUNT FILTER-TIMER_RESET"
21024	Not used for HRU						
21025	Not used for HRU						
21026	Not used for HRU						
21027	Not used for HRU						

BACK TO PAGE 12

TIME - Time register (Factory reset to default)

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
17000	ActualYear			2000	2100	
17001	ActualMonth			1	12	
17002	ActualDay			1	31	
17003	ActualDayOfWeek			1	7	
17004	ActualHour			0	23	
17005	ActualMin			0	59	
17006	ActualSec			0	59	

TIME DRIVER - Time driver register (Factory reset to default)

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
17000	SetYear			2000	2100	-
17001	SetMonth			1	12	-
17002	SetDay			1	31	-
17003	SetDayOfWeek			1	7	-
17004	SetHour			0	23	-
17005	SetMin			0	59	-
17006	SetSec			0	59	-
17007	SetFlag			0	1	0
17008	ErrorLogNum			1	20	1
17009	ErrorLogClearFlag			0	1	0

BACK TO PAGE 12

TIME SWITCH WEEK - Time switch register (Factory reset to default)

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
27000	TimeSw_Monday_1_OnHourMin			0:00	23:59	24:00
27001	TimeSw_Monday_1_OffHourMin			0:00	23:59	24:00
27002	TimeSw_Monday_1_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27003	TimeSw_Monday_1_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27004	TimerSw_Monday_1_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27005	Not used for HRU					
27006	TimeSw_Monday_2_OnHourMin			0:00	23:59	24:00
27007	TimeSw_Monday_2_OffHourMin			0:00	23:59	24:00
27008	TimeSw_Monday_2_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27009	TimeSw_Monday_2_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27010	TimerSw_Monday_2_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27011	Not used for HRU					
27012	TimeSw_Monday_3_OnHourMin			0:00	23:59	24:00
27013	TimeSw_Monday_3_OffHourMin			0:00	23:59	24:00
27014	TimeSw_Monday_3_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27015	TimeSw_Monday_3_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27016	TimerSw_Monday_3_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	**0**
27017	Not used for HRU					
27018	TimeSw_Monday_4_OnHourMin			0:00	23:59	24:00
27019	TimeSw_Monday_4_OffHourMin			0:00	23:59	24:00
27020	TimeSw_Monday_4_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
27021	TimeSw_Monday_4_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27022	TimerSw_Monday_4_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27023	Not used for HRU					
27024	TimeSw_Monday_5_OnHourMin			0:00	23:59	24:00
27025	TimeSw_Monday_5_OffHourMin			0:00	23:59	24:00
27026	TimeSw_Monday_5_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27027	TimeSw_Monday_5_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27028	TimerSw_Monday_5_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27029	Not used for HRU					
27030	TimeSw_Monday_6_OnHourMin			0:00	23:59	24:00
27031	TimeSw_Monday_6_OffHourMin			0:00	23:59	24:00
27032	TimeSw_Monday_6_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27033	TimeSw_Monday_6_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27034	TimerSw_Monday_6_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27035	Not used for HRU					
27036	TimeSw_Monday_7_OnHourMin			0:00	23:59	24:00
27037	TimeSw_Monday_7_OffHourMin			0:00	23:59	**24:00**
27038	TimeSw_Monday_7_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27039	TimeSw_Monday_7_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27040	TimerSw_Monday_7_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
27041	Not used for HRU					
27042	TimeSw_Monday_8_OnHourMin			0:00	23:59	24:00
27043	TimeSw_Monday_8_OffHourMin			0:00	23:59	24:00
27044	TimeSw_Monday_8_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27045	TimeSw_Monday_8_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27046	TimerSw_Monday_8_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27047	Not used for HRU					
27048	TimeSw_Tuesday_1_OnHourMin			0:00	23:59	24:00
27049	TimeSw_Tuesday_1_OffHourMin			0:00	23:59	24:00
27050	TimeSw_Tuesday_1_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27051	TimeSw_Tuesday_1_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27052	TimerSw_Tuesday_1_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27053	Not used for HRU					
27054	TimeSw_Tuesday_2_OnHourMin			0:00	23:59	24:00
27055	TimeSw_Tuesday_2_OffHourMin			0:00	23:59	24:00
27056	TimeSw_Tuesday_2_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27057	TimeSw_Tuesday_2_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27058	TimerSw_Tuesday_2_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27059	Not used for HRU					
27060	TimeSw_Tuesday_3_OnHourMin			0:00	23:59	24:00
27061	TimeSw_Tuesday_3_OffHourMin			0:00	23:59	24:00
27062	TimeSw_Tuesday_3_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
27063	TimeSw_Tuesday_3_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27064	TimerSw_Tuesday_3_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27065	Not used for HRU					
27066	TimeSw_Tuesday_4_OnHourMin			0:00	23:59	24:00
27067	TimeSw_Tuesday_4_OffHourMin			0:00	23:59	24:00
27068	TimeSw_Tuesday_4_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27069	TimeSw_Tuesday_4_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27070	TimerSw_Tuesday_4_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27071	Not used for HRU					
27072	TimeSw_Tuesday_5_OnHourMin			0:00	23:59	24:00
27073	TimeSw_Tuesday_5_OffHourMin			0:00	23:59	24:00
27074	TimeSw_Tuesday_5_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27075	TimeSw_Tuesday_5_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27076	TimerSw_Tuesday_5_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27077	Not used for HRU					
27078	TimeSw_Tuesday_6_OnHourMin			0:00	23:59	24:00
27079	TimeSw_Tuesday_6_OffHourMin			0:00	23:59	**24:00**
27080	TimeSw_Tuesday_6_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27081	TimeSw_Tuesday_6_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27082	TimerSw_Tuesday_6_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27083	TimerSw_Tuesday_6_Heat		Only for AC	0	100	0
27084	TimeSw_Tuesday_7_OnHourMin			0:00	23:59	24:00
27085	TimeSw_Tuesday_7_OffHourMin			0:00	23:59	24:00

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
27086	TimeSw_Tuesday_7_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27087	TimeSw_Tuesday_7_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27088	TimerSw_Tuesday_7_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27089	Not used for HRU					
27090	TimeSw_Tuesday_8_OnHourMin			0:00	23:59	24:00
27091	TimeSw_Tuesday_8_OffHourMin			0:00	23:59	24:00
27092	TimeSw_Tuesday_8_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27093	TimeSw_Tuesday_8_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27094	TimerSw_Tuesday_8_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27095	Not used for HRU					
27096	TimeSw_Wensday_1_OnHourMin			0:00	23:59	24:00
27097	TimeSw_Wensday_1_OffHourMin			0:00	23:59	24:00
27098	TimeSw_Wensday_1_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27099	TimeSw_Wensday_1_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27100	TimerSw_Wensday_1_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27101	Not used for HRU					
27102	TimeSw_Wensday_2_OnHourMin			0:00	23:59	**24:00**
27103	TimeSw_Wensday_2_OffHourMin			0:00	23:59	24:00
27104	TimeSw_Wensday_2_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27105	TimeSw_Wensday_2_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27106	TimerSw_Wensday_2_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
27107	Not used for HRU					
27108	TimeSw_Wensday_3_OnHourMin			0:00	23:59	24:00
27109	TimeSw_Wensday_3_OffHourMin			0:00	23:59	24:00
27110	TimeSw_Wensday_3_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27111	TimeSw_Wensday_3_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27112	TimerSw_Wensday_3_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27113	TimerSw_Wensday_3_Heat		Only for AC	0	100	0
27114	TimeSw_Wensday_4_OnHourMin			0:00	23:59	24:00
27115	TimeSw_Wensday_4_OffHourMin			0:00	23:59	24:00
27116	TimeSw_Wensday_4_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27117	TimeSw_Wensday_4_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27118	TimerSw_Wensday_4_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27119	Not used for HRU					
27120	TimeSw_Wensday_5_OnHourMin			0:00	23:59	24:00
27121	TimeSw_Wensday_5_OffHourMin			0:00	23:59	24:00
27122	TimeSw_Wensday_5_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27123	TimeSw_Wensday_5_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27124	TimerSw_Wensday_5_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27125	Not used for HRU					
27126	TimeSw_Wensday_6_OnHourMin			0:00	23:59	24:00
27127	TimeSw_Wensday_6_OffHourMin			0:00	23:59	24:00
27128	TimeSw_Wensday_6_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27129	TimeSw_Wensday_6_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
27130	TimerSw_Wensday_6_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27131	Not used for HRU					
27132	TimeSw_Wensday_7_OnHourMin			0:00	23:59	24:00
27133	TimeSw_Wensday_7_OffHourMin			0:00	23:59	24:00
27134	TimeSw_Wensday_7_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27135	TimeSw_Wensday_7_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27136	TimerSw_Wensday_7_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27137	Not used for HRU					
27138	TimeSw_Wensday_8_OnHourMin			0:00	23:59	24:00
27139	TimeSw_Wensday_8_OffHourMin			0:00	23:59	24:00
27140	TimeSw_Wensday_8_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27141	TimeSw_Wensday_8_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27142	TimerSw_Wensday_8_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27143	Not used for HRU					
27144	TimeSw_Thursday_1_OnHourMin			0:00	23:59	24:00
27145	TimeSw_Thursday_1_OffHourMin			0:00	23:59	24:00
27146	TimeSw_Thursday_1_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27147	TimeSw_Thursday_1_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27148	TimerSw_Thursday_1_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27149	Not used for HRU					
27150	TimeSw_Thursday_2_OnHourMin			0:00	23:59	24:00
27151	TimeSw_Thursday_2_OffHourMin			0:00	23:59	24:00
27152	TimeSw_Thursday_2_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
27153	TimeSw_Thursday_2_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27154	TimerSw_Thursday_2_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27155	Not used for HRU					
27156	TimeSw_Thursday_3_OnHourMin			0:00	23:59	24:00
27157	TimeSw_Thursday_3_OffHourMin			0:00	23:59	24:00
27158	TimeSw_Thursday_3_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27159	TimeSw_Thursday_3_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27160	TimerSw_Thursday_3_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27161	Not used for HRU					
27162	TimeSw_Thursday_4_OnHourMin			0:00	23:59	24:00
27163	TimeSw_Thursday_4_OffHourMin			0:00	23:59	24:00
27164	TimeSw_Thursday_4_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27165	TimeSw_Thursday_4_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27166	TimerSw_Thursday_4_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27167	Not used for HRU					
27168	TimeSw_Thursday_5_OnHourMin			0:00	23:59	24:00
27169	TimeSw_Thursday_5_OffHourMin			0:00	23:59	**24:00**
27170	TimeSw_Thursday_5_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27171	TimeSw_Thursday_5_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27172	TimerSw_Thursday_5_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27173	Not used for HRU					
27174	TimeSw_Thursday_6_OnHourMin			0:00	23:59	24:00
27175	TimeSw_Thursday_6_OffHourMin			0:00	23:59	24:00

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
27176	TimeSw_Thursday_6_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27177	TimeSw_Thursday_6_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27178	TimerSw_Thursday_6_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27179	Not used for HRU					
27180	TimeSw_Thursday_7_OnHourMin			0:00	23:59	24:00
27181	TimeSw_Thursday_7_OffHourMin			0:00	23:59	24:00
27182	TimeSw_Thursday_7_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27183	TimeSw_Thursday_7_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27184	TimerSw_Thursday_7_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27185	Not used for HRU					
27186	TimeSw_Thursday_8_OnHourMin			0:00	23:59	24:00
27187	TimeSw_Thursday_8_OffHourMin			0:00	23:59	24:00
27188	TimeSw_Thursday_8_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27189	TimeSw_Thursday_8_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27190	TimerSw_Thursday_8_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27191	Not used for HRU					
27192	TimeSw_Friday_1_OnHourMin			0:00	23:59	**24:00**
27193	TimeSw_Friday_1_OffHourMin			0:00	23:59	24:00
27194	TimeSw_Friday_1_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27195	TimeSw_Friday_1_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27196	TimerSw_Friday_1_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27197	Not used for HRU					

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
27198	TimeSw_Friday_2_OnHourMin			0:00	23:59	24:00
27199	TimeSw_Friday_2_OffHourMin			0:00	23:59	24:00
27200	TimeSw_Friday_2_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27201	TimeSw_Friday_2_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27202	TimerSw_Friday_2_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27203	Not used for HRU					
27204	TimeSw_Friday_3_OnHourMin			0:00	23:59	24:00
27205	TimeSw_Friday_3_OffHourMin			0:00	23:59	24:00
27206	TimeSw_Friday_3_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27207	TimeSw_Friday_3_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27208	TimerSw_Friday_3_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27209	Not used for HRU					
27210	TimeSw_Friday_4_OnHourMin			0:00	23:59	24:00
27211	TimeSw_Friday_4_OffHourMin			0:00	23:59	24:00
27212	TimeSw_Friday_4_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27213	TimeSw_Friday_4_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27214	TimerSw_Friday_4_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	**0**
27215	Not used for HRU					
27216	TimeSw_Friday_5_OnHourMin			0:00	23:59	24:00
27217	TimeSw_Friday_5_OffHourMin			0:00	23:59	24:00
27218	TimeSw_Friday_5_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27219	TimeSw_Friday_5_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
27220	TimerSw_Friday_5_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27221	Not used for HRU					
27222	TimeSw_Friday_6_OnHourMin			0:00	23:59	24:00
27223	TimeSw_Friday_6_OffHourMin			0:00	23:59	24:00
27224	TimeSw_Friday_6_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27225	TimeSw_Friday_6_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27226	TimerSw_Friday_6_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27227	Not used for HRU					
27228	TimeSw_Friday_7_OnHourMin			0:00	23:59	24:00
27229	TimeSw_Friday_7_OffHourMin			0:00	23:59	24:00
27230	TimeSw_Friday_7_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27231	TimeSw_Friday_7_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27232	TimerSw_Friday_7_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27233	Not used for HRU					
27234	TimeSw_Friday_8_OnHourMin			0:00	23:59	24:00
27235	TimeSw_Friday_8_OffHourMin			0:00	23:59	24:00
27236	TimeSw_Friday_8_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27237	TimeSw_Friday_8_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27238	TimerSw_Friday_8_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27239	Not used for HRU					
27240	TimeSw_Saturday_1_OnHourMin			0:00	23:59	24:00
27241	TimeSw_Saturday_1_OffHourMin			0:00	23:59	24:00
27242	TimeSw_Saturday_1_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
27243	TimeSw_Saturday_1_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27244	TimerSw_Saturday_1_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27245	Not used for HRU					
27246	TimeSw_Saturday_2_OnHourMin			0:00	23:59	24:00
27247	TimeSw_Saturday_2_OffHourMin			0:00	23:59	24:00
27248	TimeSw_Saturday_2_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27249	TimeSw_Saturday_2_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27250	TimerSw_Saturday_2_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27251	Not used for HRU					
27252	TimeSw_Saturday_3_OnHourMin			0:00	23:59	24:00
27253	TimeSw_Saturday_3_OffHourMin			0:00	23:59	24:00
27254	TimeSw_Saturday_3_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27255	TimeSw_Saturday_3_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27256	TimerSw_Saturday_3_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27257	Not used for HRU					
27258	TimeSw_Saturday_4_OnHourMin			0:00	23:59	24:00
27259	TimeSw_Saturday_4_OffHourMin			0:00	23:59	**24:00**
27260	TimeSw_Saturday_4_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27261	TimeSw_Saturday_4_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27262	TimerSw_Saturday_4_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27263	Not used for HRU					
27264	TimeSw_Saturday_5_OnHourMin			0:00	23:59	24:00
27265	TimeSw_Saturday_5_OffHourMin			0:00	23:59	24:00

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
27266	TimeSw_Saturday_5_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27267	TimeSw_Saturday_5_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27268	TimerSw_Saturday_5_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27269	Not used for HRU					
27270	TimeSw_Saturday_6_OnHourMin			0:00	23:59	24:00
27271	TimeSw_Saturday_6_OffHourMin			0:00	23:59	24:00
27272	TimeSw_Saturday_6_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27273	TimeSw_Saturday_6_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27274	TimerSw_Saturday_6_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27275	Not used for HRU					
27276	TimeSw_Saturday_7_OnHourMin			0:00	23:59	24:00
27277	TimeSw_Saturday_7_OffHourMin			0:00	23:59	24:00
27278	TimeSw_Saturday_7_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27279	TimeSw_Saturday_7_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27280	TimerSw_Saturday_7_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27281	Not used for HRU					
27282	TimeSw_Saturday_8_OnHourMin			0:00	23:59	**24:00**
27283	TimeSw_Saturday_8_OffHourMin			0:00	23:59	24:00
27284	TimeSw_Saturday_8_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27285	TimeSw_Saturday_8_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27286	TimerSw_Saturday_8_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
27287	Not used for HRU					
27288	TimeSw_Sunday_1_OnHourMin			0:00	23:59	24:00
27289	TimeSw_Sunday_1_OffHourMin			0:00	23:59	24:00
27290	TimeSw_Sunday_1_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27291	TimeSw_Sunday_1_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27292	TimerSw_Sunday_1_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27293	Not used for HRU					
27294	TimeSw_Sunday_2_OnHourMin			0:00	23:59	24:00
27295	TimeSw_Sunday_2_OffHourMin			0:00	23:59	24:00
27296	TimeSw_Sunday_2_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27297	TimeSw_Sunday_2_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27298	TimerSw_Sunday_2_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27299	Not used for HRU					
27300	TimeSw_Sunday_3_OnHourMin			0:00	23:59	24:00
27301	TimeSw_Sunday_3_OffHourMin			0:00	23:59	24:00
27302	TimeSw_Sunday_3_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27303	TimeSw_Sunday_3_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27304	TimerSw_Sunday_3_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27305	Not used for HRU					
27306	TimeSw_Sunday_4_OnHourMin			0:00	23:59	24:00
27307	TimeSw_Sunday_4_OffHourMin			0:00	23:59	24:00
27308	TimeSw_Sunday_4_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27309	TimeSw_Sunday_4_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	

Address	Name	Structure	Info	Min. Value	Max. Value	Enum
27310	TimerSw_Sunday_4_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27311	Not used for HRU					
27312	TimeSw_Sunday_5_OnHourMin			0:00	23:59	24:00
27313	TimeSw_Sunday_5_OffHourMin			0:00	23:59	24:00
27314	TimeSw_Sunday_5_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27315	TimeSw_Sunday_5_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27316	TimerSw_Sunday_5_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27317	Not used for HRU					
27318	TimeSw_Sunday_6_OnHourMin			0:00	23:59	24:00
27319	TimeSw_Sunday_6_OffHourMin			0:00	23:59	24:00
27320	TimeSw_Sunday_6_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27321	TimeSw_Sunday_6_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27322	TimerSw_Sunday_6_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0
27323	Not used for HRU					
27324	TimeSw_Sunday_7_OnHourMin			0:00	23:59	24:00
27325	TimeSw_Sunday_7_OffHourMin			0:00	23:59	24:00
27326	TimeSw_Sunday_7_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-	
27327	TimeSw_Sunday_7_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-	
27328	TimerSw_Sunday_7_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0

Address	Name	Structure	Info	Min. Value	Max. Value	Enum	
27329	Not used for HRU						
27330	TimeSw_Sunday_8_OnHourMin			0:00	23:59	24:00	
27331	TimeSw_Sunday_8_OffHourMin			0:00	23:59	24:00	
27332	TimeSw_Sunday_8_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-		
27333	TimeSw_Sunday_8_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-		
27334	TimerSw_Sunday_8_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0	
27335	Not used for HRU						

BACK TO PAGE 12

TIME SWITCH YEAR - Time switch register (Factory reset set to default)

Address	Name	Structure	Info	Min. Value	Max. Value	Default	Enum
28000	TimeSWYear_Enable		Time switch 1 Year enable	0	1	1	"DISABLE ENABLE"
28001	TimeSwY_1_OnDay			1	31	1	
28002	TimeSwY_1_OnMonth			1	12	1	
28003	TimeSwY_1_OffDay			1	31	1	
28004	TimeSwY_1_OffMonth			1	31	1	
28005	TimeSwY_1_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-		
28006	TimeSwY_1_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-		
28007	TimeSwY_1_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0	
28008	Not used for HRU						
28009	TimeSwY_2_OnDay			1	31	1	
28010	TimeSwY_2_OnMonth			1	12	1	
28011	TimeSwY_2_OffDay			1	31	1	
28012	TimeSwY_2_OffMonth			1	31	1	
28013	TimeSwY_2_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-		
28014	TimeSwY_2_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-		
28015	TimeSwY_2_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0	
28016	Not used for HRU						
28017	TimeSwY_3_OnDay			1	31	1	
28018	TimeSwY_3_OnMonth			1	12	1	
28019	TimeSwY_3_OffDay			1	31	1	
28020	TimeSwY_3_OffMonth			1	31	1	
28021	TimeSwY_3_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-		
28022	TimeSwY_3_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-		

Address	Name	Structure	Info	Min. Value	Max. Value	Default	Enum
28023	TimeSwY_3_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0	
28024	Not used for HRU						
28025	TimeSwY_4_OnDay			1	31	1	
28026	TimeSwY_4_OnMonth			1	12	1	
28027	TimeSwY_4_OffDay			1	31	1	
28028	TimeSwY_4_OffMonth			1	31	1	
28029	TimeSwY_4_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-		
28030	TimeSwY_4_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-		
28031	TimeSwY_4_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0	
28032	Not used for HRU						
28033	TimeSwY_5_OnDay			1	31	1	
28034	TimeSwY_5_OnMonth			1	12	1	
28035	TimeSwY_5_OffDay			1	31	1	
28036	TimeSwY_5_OffMonth			1	31	1	
28037	TimeSwY_5_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-		
28038	TimeSwY_5_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-		
28039	TimeSwY_5_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0	
28040	Not used for HRU						
28041	TimeSwY_6_OnDay			1	31	1	
28042	TimeSwY_6_OnMonth			1	12	1	
28043	TimeSwY_6_OffDay			1	31	1	
28044	TimeSwY_6_OffMonth			1	31	1	
28045	TimeSwY_6_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-		
28046	TimeSwY_6_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-		
28047	TimeSwY_6_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0	
28048	Not used for HRU						
28049	TimeSwY_7_OnDay			1	31	1	

Address	Name	Structure	Info	Min. Value	Max. Value	Default	Enum
28050	TimeSwY_7_OnMonth			1	12	1	
28051	TimeSwY_7_OffDay			1	31	1	
28052	TimeSwY_7_OffMonth			1	31	1	
28053	TimeSwY_7_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-		
28054	TimeSwY_7_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-		
28055	TimeSwY_7_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0	
28056	Not used for HRU						
28057	TimeSwY_8_OnDay			1	31	1	
28058	TimeSwY_8_OnMonth			1	12	1	
28059	TimeSwY_8_OffDay			1	31	1	
28060	TimeSwY_8_OffMonth			1	31	1	
28061	TimeSwY_8_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-		
28062	TimeSwY_8_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-		
28063	TimeSwY_8_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0	
28064	Not used for HRU						
28065	TimeSwY_9_OnDay			1	31	1	
28066	TimeSwY_9_OnMonth			1	12	1	
28067	TimeSwY_9_OffDay			1	31	1	
28068	TimeSwY_9_OffMonth			1	31	1	
28069	TimeSwY_9_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-		
28070	TimeSwY_9_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-		
28071	TimeSwY_9_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0	
28072	Not used for HRU						

Address	Name	Structure	Info	Min. Value	Max. Value	Default	Enum
28073	TimeSwY_10_OnDay			1	31	1	
28074	TimeSwY_10_OnMonth			1	12	1	
28075	TimeSwY_10_OffDay			1	31	1	
28076	TimeSwY_10_OffMonth			1	31	1	
28077	TimeSwY_10_AirFlow		"Range set according locality (FACTORY SET: 10102 and 10110 …10119) and Ventilation mode (SERVICE_HARD: 25000): MANUAL = ‰ of fan power CAV for EU = m3/h CAV - for USA = cfm DCV, VAV, VAV C4 - not available"	-	-		
28078	TimeSwY_10_Temp		"Range according locality (FACTORY SET: 10102): EU = °C USA = F and Setpoint sensor selection (SERVICE:20001): Supply duct (15-45°C; 59-113F) Extract duct (15-30°C; 59-95F) Room (15-30°C; 59-86F)"	-	-		
28079	TimeSwY_10_Mode		"0 - Manual 1 - Auto 2 - Pseudo OFF"	0	2	0	
28080	Not used for HRU						

BACK TO PAGE 12

ERROR LOG REGISTER (Factory reset no effect)

Address	Name	Structure	Info	Min. Value	Max. Value	Default	Enum
30000	year						
30001	month						
30002	day						
30003	hour						
30004	min						
30005	sec						
Unit global status							
30006	bit0		ON/OFF	0	1	0	
	bit1		MANUAL	0	1	1	
	bit2		CAV	0	0	0	
	bit3		VAV	0	0	0	
	bit4		DCV	0	1	0	
	bit5		Fire	0	1	0	
	bit6		Boost	0	1	0	
	bit7		Nobody (Nonoccupied)	0	1	0	
	bit8		Freecooling	0	1	0	
	bit9		Timeswitch	0	1	0	
	bit10		Calibration	0	1	0	
	bit11		Cooldown	0	1	0	
	bit12		DirectControl	0	1	0	
	bit13		FilterInfo	0	1	0	
	bit14		CfgFileError	0	1	0	
	bit15		Overheat	0	1	0	
Unit global status2							
30007	bit0		WaterHeater_antifreeze_protection	0	1	0	
	bit1		WaterHeater waiting for hot water	0	1	0	
	bit2		WaterHeater waiting for supply air temperature	0	1	0	
	bit3		WCO searching inlet water temp (cold/hot)	0	1	0	
	bit4		Recirculation	0	1	0	
	bit5		Simulation	0	1	0	
	bit6		Prefreecooling	0	1	0	
	bit7		Temp Flow Reduction				
	bit8		PassiveHouseRestriction				
	bit9		AdbActive				
Software error1							
30008	bit0		SwFanInletError	0	1		
	bit1		SwFanOutletError	0	1		
	bit2		SwFilterInletError	0	1		
	bit3		SwFilterOutletError	0	1		
	bit4		SwFilterInletWarning	0	1		
	bit5		SwFilterOutletWarning	0	1		
	bit6		SwPreheater1Error	0	1		
	bit7		SwPostheater1Error	0	1		
	bit8		SwPostheater2Error	0	1		
	bit9		SwPreheater2Error	0	1		
	bit10		SwAQS SensorError	0	1		
	bit11		SwRotaryWheelError	0	1		
	bit12		SwADBError	0	1		
	bit13		SwDXError	0	1		
	bit14		SwDXDefrost	0	1		
	bit15		SwCondensateDrain	0	1		

Address	Name	Structure	Info	Min. Value	Max. Value	Default	Enum
Software error2							
30009	bit0		SwGError				
	bit1		SwGlobalError				
	bit2		SwKError				
	bit3		FilterInfo				
	bit4		CfgFileError				
	bit5		SwFilterHepaError				
	bit6		SwFilterHepaWarning				
Sensor status1							
30010	bit0		TempEXT1St	0	1	0	
	bit1		TempEXT2St	0	1	0	
	bit2		TempEXT3St	0	1	0	
	bit3		TempEXT4St (module B)	0	0	0	
	bit4		TempINT0St (module B)	0	0	0	
	bit5		TempINT1St	0	1	0	
	bit6		TempINT2St	0	1	0	
	bit7		TempWInSt (module B)	0	0	0	
	bit8		TempWOutSt (module B)	0	0	0	
	bit9		TempRoomSt	0	1	0	
	bit10		SensorFilterInSt	0	0	0	
	bit11		SensorFilterOutSt	0	0	0	
	bit12		SensorFanInletSt	0	0	0	
	bit13		SensorFanOutSt	0	0	0	
	bit14		SensorPressSt	0	0	0	
	bit15		SensorFlowAlaramSt	0	0	0	
Sensor status2							
30011	bit0		AqsSensorSt	0	0	0	
	bit1		SensorRHRecSt	0	0	0	
	bit2		OutsideTempSensorBmsSt	0	0	0	
	bit3		SensorRHSt	0	0	0	
	bit4		Sensor Filter Hepa				
Input Status1							
30012	bit0		Status DI_1_SafetyTherm1	0	0	0	
	bit1		Status DI_2_SafetyTherm2	0	0	0	
	bit2		Status DI_3_Ext_Control	0	1	0	
	bit3		Status DI_4_Nobody (FIRE optional)	0	1	0	
	bit4		Status DI_5_Boost	0	1	0	
	bit5		Status_DI_TACHO_1	0	1	0	
	bit6		Status_DI_TACHO_2 (Rotary wheel error)	0	1	0	
	bit7		Status_DI_TACHO_3	0	1	0	
	bit8		Status_DI_TACHO_4	0	1	0	
	bit9		Status_DI_TACHO_5	0	1	0	
	bit10		Status_DI_TACHO_6	0	1	0	
	bit11		Status_DI_TACHO_7	0	1	0	
	bit12		Status_DI_TACHO_8	0	1	0	
	bit13		Status_DI_6_ADB_DX_error (module B)	0	1	0	
	bit14		Status_DI_7_HeatPumpDefrost (module B)	0	1	0	
	bit15		Status_DI_8_HeatPumpError (module B)	0	1	0	

Address	Name	Structure	Info	Min. Value	Max. Value	Default	Enum
Input Status2							
30013	bit0		Status_DI_9_FIRE (module B)	0	1	0	
	bit1		Status_DI_10_CondensDrain (module B)	0	1	0	
Output Status1							
30010	bit0		Status_DO_1_Flap_inlet	0	1	0	
	bit1		Status_DO_2_Flap_outlet	0	1	0	
	bit2		Status_DO_3_Run_indication	0	1	0	
	bit3		Status_DO_4_Water_pump (module A)	0	1	0	
	bit4		Status_DO_5_Heat_cool	0	1	0	
	bit5		Status_DO_6_Error (module B)	0	1	0	
	bit6		Status_DO_7_ADB_on_off (module B)	0	1	0	
	bit7		Status_DO_8_HeatPump_on_off (module B)	0	1	0	
	bit8		Status_DO_9_WaterPump_on_off (module B)	0	1	0	
Sensor status2							
30011	bit0		AqsSensorSt	0	0	0	
	bit1		SensorRHRecSt	0	0	0	
	bit2		OutsideTempSensorBmsSt	0	0	0	
	bit3		SensorRHSt	0	0	0	
	bit4		Sensor Filter Hepa				
Input Status1							
30012	bit0		Status DI_1_SafetyTherm1	0	0	0	
	bit1		Status DI_2_SafetyTherm2	0	0	0	
	bit2		Status DI_3_Ext_Control	0	1	0	
	bit3		Status DI_4_Nobody (FIRE optional)	0	1	0	
	bit4		Status DI_5_Boost	0	1	0	
	bit5		Status_DI_TACHO_1	0	1	0	
	bit6		Status_DI_TACHO_2 (Rotary wheel error)	0	1	0	
	bit7		Status_DI_TACHO_3	0	1	0	
	bit8		Status_DI_TACHO_4	0	1	0	
	bit9		Status_DI_TACHO_5	0	1	0	
	bit10		Status_DI_TACHO_6	0	1	0	
	bit11		Status_DI_TACHO_7	0	1	0	
	bit12		Status_DI_TACHO_8	0	1	0	
	bit13		Status_DI_6_ADB_DX_error (module B)	0	1	0	
	bit14		Status_DI_7_HeatPumpDefrost (module B)	0	1	0	
	bit15		Status_DI_8_HeatPumpError (module B)	0	1	0	
Input Status2							
30013	bit0		Status_DI_9_FIRE (module B)	0	1	0	
	bit1		Status_DI_10_CondensDrain (module B)	0	1	0	
Output Status1							
30014	bit0		Status_DO_1_Flap_inlet	0	1	0	
	bit1		Status_DO_2_Flap_outlet	0	1	0	
	bit2		Status_DO_3_Run_indication	0	1	0	
	bit3		Status_DO_4_Water_pump (module A)	0	1	0	
	bit4		Status_DO_5_Heat_cool	0	1	0	
	bit5		Status_DO_6_Error (module B)	0	1	0	
	bit6		Status_DO_7_ADB_on_off (module B)	0	1	0	
	bit7		Status_DO_8_HeatPump_on_off (module B)	0	1	0	
	bit8		Status_DO_9_WaterPump_on_off (module B)	0	1	0	

Address	Name	Structure	Info	Min. Value	Max. Value	Default	Enum
Hardware Status1							
30015	bit0		FRAM				
	bit1		EEPROM	0	1	0	
	bit2		Ethernet	0	1	0	
	bit3		RTC_Cell	0	1	0	
	bit4		MainPower	0	1	0	
	bit5		ControlPanel	0	1	0	
	bit6		B_module	0	1	0	
	bit7		C_module_In_Press	0	1	0	
	bit8		C_module_Out_Press	0	1	0	
	bit9		C_module_In_Filter_Press	0	1	0	
	bit10		C_module_Out_Filter_Press	0	1	0	
	bit11		C_module_Duct_Press	0	1	0	
	bit12		C_module_C4_Duct_Press	0	1	0	
	bit13		C_module_RH	0	1	0	
	bit14		AQS	0	1	0	
	bit15		USB_over_current	0	1	0	
Hardware Status2							
30016	bit0		Ethernet_communication	0	1	0	
	bit9		C_module_Hepa_Press	0	1	0	
	bit2			0	1	0	
	bit3			0	1	0	
	bit4			0	1	0	
	bit5			0	1	0	
	bit6			0	1	0	
	bit7			0	1	0	
	bit8			0	1	0	
	bit9			0	1	0	
	bit10			0	1	0	
	bit11			0	1	0	
	bit12			0	1	0	
	bit13			0	1	0	
	bit14			0	1	0	
	bit15			0	1	0	
30017	AirFlowInletFanDemand		m3/h (cfm)	0	0xffff	0	
30018	AirFlowOutletFanDemand		m3/h (cfm)	0	0xffff	0	
30019	AirFlowInletFanManual		‰ of fan power	0	1000	0	
30020	AirFlowOutletFanManual		‰ of fan power	0	1000	0	
30021	AirFlowInletFan		m3/h (cfm)	0	0xffff	0	
30022	AirFlowOutletFan		m3/h (cfm)	0	0xffff	0	
30023	TempEXT1		°C (°F)	-40 (-40)	100 (212)	0	
30024	TempEXT2		°C (°F)	-40 (-40)	100 (212)	3	
30025	TempEXT3		°C (°F)	-40 (-40)	100 (212)	4	
30026	TempEXT4		°C (°F) (module B)	-40 (-40)	100 (212)	5	

Address	Name	Structure	Info	Min. Value	Max. Value	Default	Enum
Input Status2							
30027	TempINT0		°C (°F) (module B)	-40 (-40)	100 (212)	20	
30028	TempINT1		°C (°F)	-40 (-40)	100 (212)	20	
30029	TempINT2		°C (°F)	-40 (-40)	100 (212)	4	
30030	TempWIn		°C (°F) (module B)	-40 (-40)	100 (212)	22	
30031	TempWOut		°C (°F) (module B)	-40 (-40)	100 (212)	4	
30032	TempRoom		°C (°F)	-40 (-40)	100 (212)	21	
30033	SensorFilterIn		Pa (in H2O)	0 (0)	2000 (8,029)	0	
30034	SensorFilterOut		Pa (in H2O)	0 (0)	2000 (8,029)	0	
30035	SensorFanInlet		Pa (in H2O)	0 (0)	2000 (8,029)	0	
30036	SensorFanOut		Pa (in H2O)	0 (0)	2000 (8,029)	0	
30037	SensorPress		Pa (in H2O)	0 (0)	2000 (8,029)	0	
30038	SensorFlowAlarm			0	0	0	
30039	AqsSensorValue		%	0	100	0	
30040	SensorRHRec		%	0	100	0	
30041	SensorRH		% (module C)	0	100	0	
30042	PowerPreheater1		%	0	100	0	
30043	PowerPreheater2		% (module B)	0	100	0	
30044	PowerPostheater1		%	0	100	0	
30045	PowerPostheater2		% (module B)	0	100	0	
30046	PowerPostheater3		% (module B)	0	100	0	
30047	BypassPossition		%	0	100	0	
30048	Recirculation		% (module B)	0	100	0	
30049	TempOutsideBMS		°C (°F)	-40 (-40)	100 (212)	0	
30050	InletFilterPercent		%	0	100	0	
30051	OutletFilterPercent		%	0	100	0	
30052	dummy			0	0xFFFF	0	
30053	SensorFilterhEPA		Pa (in H2O)	0 (0)	2000 (8,029)	0	
30054	HepaFilterPercent		%	0	100	0	

BACK TO PAGE 12

NETWORK - Network register (Factory reset no effect)

Address	Name	Structure	Info	Min. Value	Max. Value	Default	Enum
26000	IP adress 0.x.x.x		IP adress part1 (0x00-0xFF)	0	255	192	
26001	IP adress x.0.x.x		IP adress part2 (0x00-0xFF)	0	255	168	
26002	IP adress x.x.0.x		IP adress part3 (0x00-0xFF)	0	255	0	
26003	IP adress x.x.x.0		IP adress part4 (0x00-0xFF)	0	255	1	
26004	Mask 0.x.x.x		Mask part1 (0x00-0xFF)	0	255	255	
26005	Mask x.0.x.x		Mask part2 (0x00-0xFF)	0	255	255	
26006	Mask x.x.0.x		Mask part3 (0x00-0xFF)	0	255	255	
26007	Mask x.x.x.0		Mask part4 (0x00-0xFF)	0	255	0	
26008	Gateway 0.x.x.x		Gateway part1 (0x00-0xFF)	0	255	192	
26009	Gateway x.0.x.x		Gateway part2 (0x00-0xFF)	0	255	168	
26010	Gateway x.x.0.x		Gateway part3 (0x00-0xFF)	0	255	0	
26011	Gateway x.x.x.0		Gateway part4 (0x00-0xFF)	0	255	0	
26012	DHCP		"0 - DHCP off 1 - DHCP on"	0	1	0	
26013	ModbusPort		Port number 1 - 0xFFFF	1	0xFFFF	502	

BACK TO PAGE 12

DIRECT CONTROL - (Factory reset no effect)

Address	Name	Structure	Info	Min. Value	Max. Value	Default	Enum
35000	bit0		Dir_Ctrl_DO_1_Flap_inlet	0	1	0	"FLAP_CLOSED FLAP_OPEN"
	bit1		Dir_Ctrl_DO_2_Flap_outlet	0	1	0	"FLAP_CLOSED FLAP_OPEN"
	bit2		Dir_Ctrl_DO_3_Run_indication	0	1	0	"RUN_INDICA-TION NO_RUN"
	bit3		Dir_Ctrl_DO_4_Water_pump (module A)	0	1	0	"W_PUMP_A_ON W_PUMP_A_ OFF"
	bit4		Dir_Ctrl_DO_5_Heat_cool	0	1	0	"EXCHANGER_ COOL EXCHANGER_ HEAT"
	bit5		Dir_Ctrl_DO_6_Error (module B)	0	1	0	"ERROR_B_OK ERROR_B_ ERROR"
	bit6		Dir_Ctrl_DO_7_ADB_on_off (module B)	0	1	0	"ADB_ON ADB_OFF"
	bit7		Dir_Ctrl_DO_8_HeatPump_on_off (module B)	0	1	0	"HEAT_PUMP_ ON HEAT_PUMP_ OFF"
	bit8		Dir_Ctrl_DO_9_WaterPump_on_off (module B)	0	1	0	"W_PUMP_B_ON W_PUMP_B_ OFF"
35001	AirFlowInletFanManual		Dir_Ctrl_InletFanMan (‰ of fan power)	0	1000	0	
35002	AirFlowOutletFanManual		Dir_Ctrl_OutletFanMan (‰ of fan power)	0	1000	0	
35003	PowerPreheater1		%	0	100	0	
35004	PowerPreheater2		% (module B)	0	100	0	
35005	PowerPostheater1		%	0	100	0	
35006	PowerPostheater2		% (module B)	0	100	0	
35007	PowerPostheater3		% (module B)	0	100	0	
35008	Recirculation		% (module B)	0	100	0	
35009	Bypass/Rotary wheel exchanger		%	0	100	0	

BACK TO PAGE 12

CONTACT

Address:
2VV, s.r.o.,
Fáblovka 568,
533 52 Pardubice
Czech Republic

Internet:
http://www.2vv.cz/

