


## SEGN0 -- pedal BASE screw-hole gauge (issue #716)

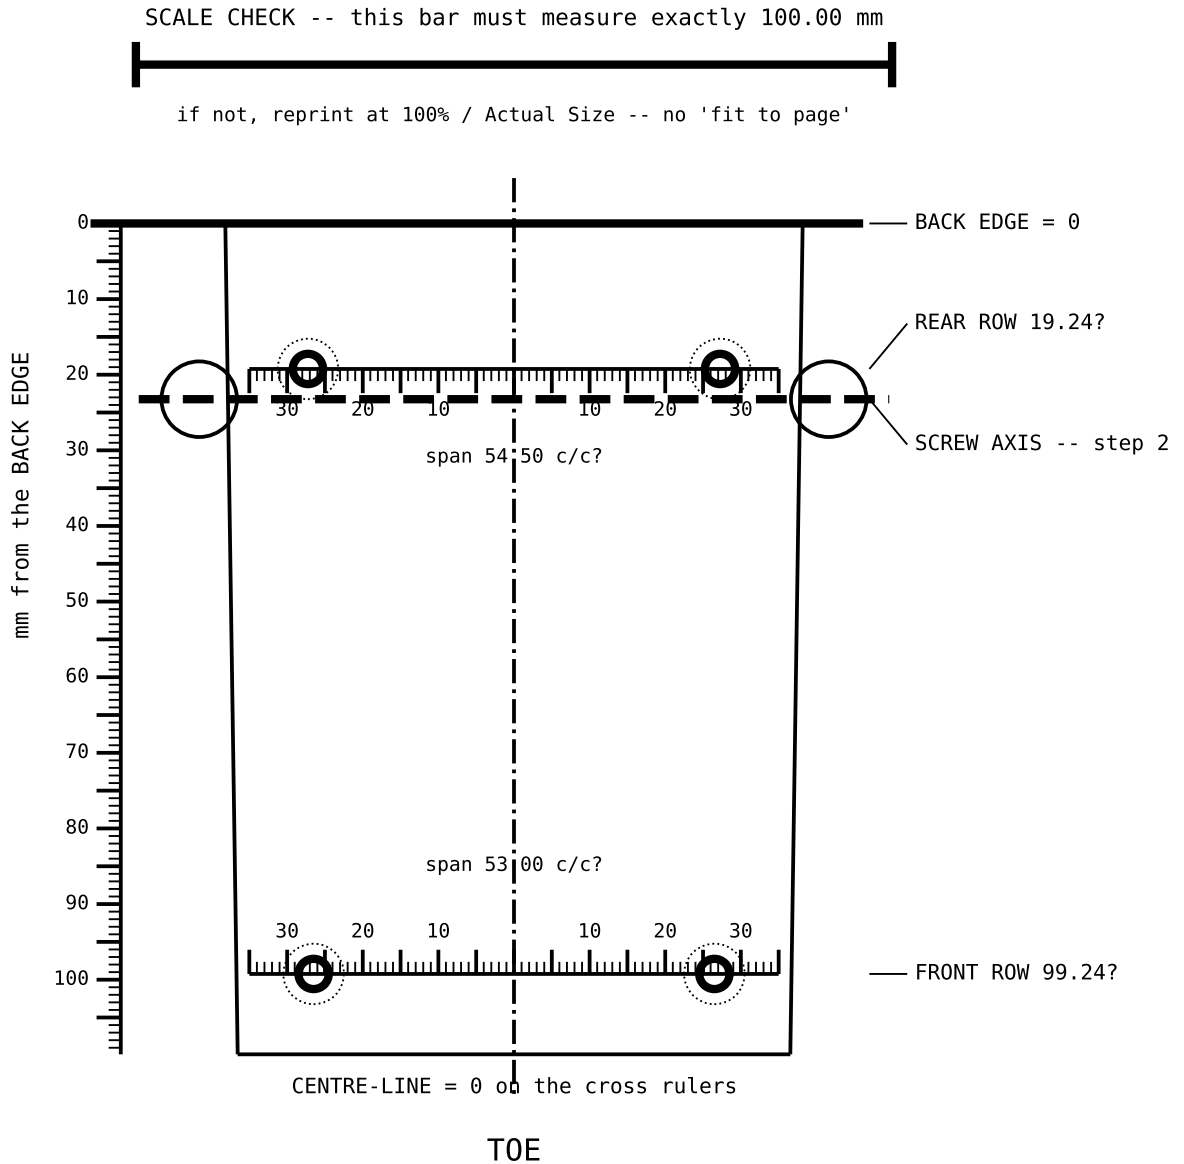

PEDAL BASE UP, PAD OFF. Case back edge on the BACK EDGE line, centred.

- 1 SCALE CHECK bar reads exactly 100.00 mm? If not, reprint at 100%.
- 2 With the back edge on its line, do BOTH screw bosses sit inside the drawn circles? If NOT, say so and by how much: the case depth and screw inset this repo carries do not describe your pedal, and every 'from the back edge' figure I have quoted is on the wrong datum.
- 3 LONG ruler: each hole row reads \_\_\_\_ mm from the back edge.  
(I believe 19.24 and 99.24.)
- 4 CROSS ruler: read EACH hole separately, LEFT and RIGHT, from the centre-line. Reading both sides settles whether the pattern is symmetric -- I assumed it is and never checked.  
(I believe 27.025 each side rear, 26.50 each side front.)
- 5 When you said '4 mm back from the screw line', was that line the screw AXIS / centre, or an EDGE of the  $\varnothing 10$  boss? An edge is 5 mm off axis, which would move the whole pattern by 5 mm and look exactly like this.

Report the readings as they read. Centre-to-centre vs edge-to-edge does not matter as long as you say which -- the rulers make it explicit.