


How to Extrude a Boss in Fusion

Standard operating procedure for the base flange

Author: Jordan Lee Date: 2026-06-24 Revision: 1.0 Department: Mechanical Design

IN AUTODESK FUSION

1. Click at the highlighted location in Autodesk Fusion.

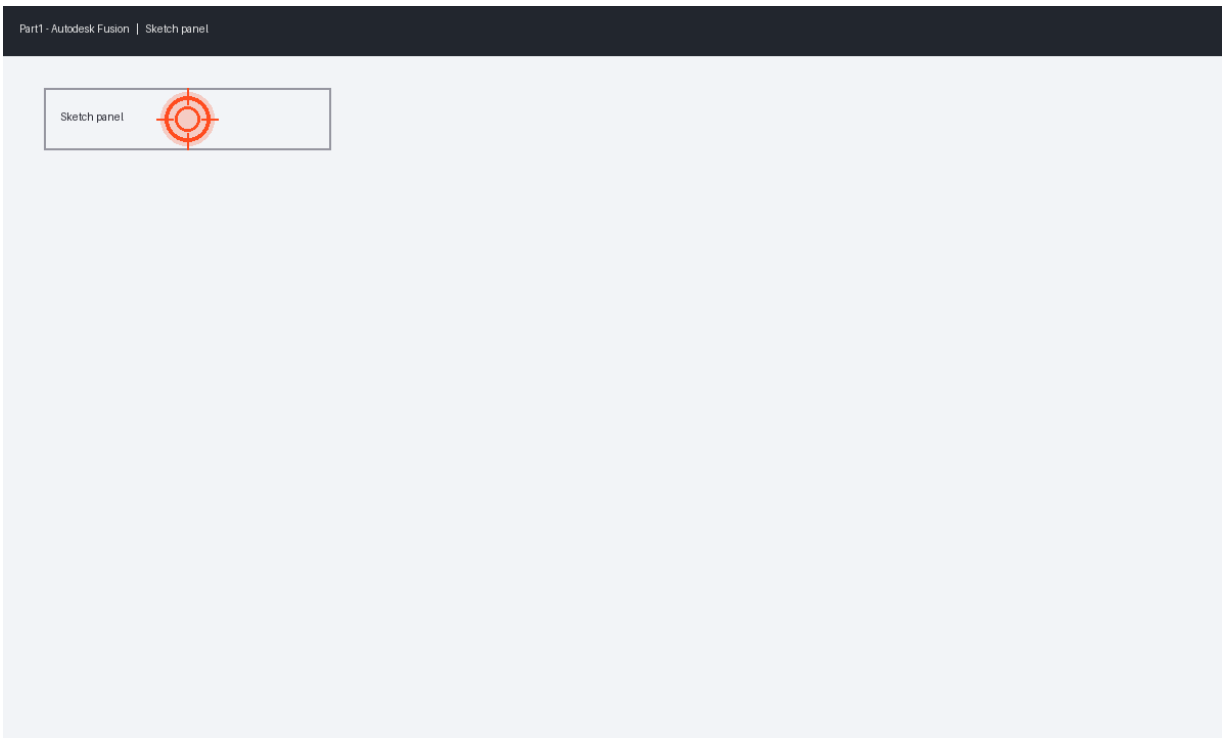

2. Click at the highlighted location in Autodesk Fusion.

Extrude dialog



3. Type 25 mm.
4. Press Enter.
5. Verify the body shows in the timeline.