Fence-end wall + windows: quick build guide

87 Prince St · one day with two people · all mm · cut everything first, then assemble in order · full drawings: “Wall and windows plans” PDF

TIMBER (70 × 35 H3 OUTDOOR FRAMING, BUNNINGS)

Buy	Cut into
6 × 3.0 m	S1 2 467 · S2 2 624 · S3 2 571 · S5 2 466 · S7 2 361 · S8 2 151 offcuts → stubs 184 + 79, noggings 548 × 2
3 × 4.8 m	bottom plate 3 650 (+ stub 1 130) · top plate ≈3 585 (+ stub 1 130) · sash A frame 1 165 × 2 + 1 056 × 2
2 × 6.0 m	noggings 1 165 × 4 + 565 × 2 · sash B frame 1 165 × 2 + 1 056 × 3
3 leftover decking boards	sill board 3 660 · ripped beads 1 165 × 4 + 1 112 × 5 · cover batten ≈1 280

Provisional: stud and top-plate lengths are from the 3D model. They get finalised from your site measurements (step 1), with 10 clearance at the top and 5 at each post.

SHEETS

FC 6 mm 2 400 × 1 200 × 2	A full · B cut to 1 250 · offcut → kick panel 1 180 × 327
Opal twinwall 1 200 × 2 400 × 2	1: fixed bay + 2 strip pieces · 2: sash A 1 180 × 1 149, sash B 1 180 × 822

HARDWARE

14g × 100 batten screws	≈50
75 galv nails / screws	≈60
Galv FC nails 40 × 2.8	500 g
Poly screws + EPDM washers	≈60
U-cap (3 × 2.1 m), alu tape, breather tape	1 set
Head flashing 2.4 m	1
100 mm SS butt hinges	6
Foam weatherseal	≈10 m
Whitco CYL4 chain winder (can wait)	2
PU glue, end-seal, FC sealer, plastic packers	1 each

TOOLS

Drop saw · circular saw (FC blade) · table saw (rip beads) · clout gun · nail gun · impact driver + drill · 3 mm and 10 mm bits · level · square · string line · tape · clamps · silicone gun


RUNNING ORDER

Method: build the whole wall flat on the deck (raked top plate included), clad the FC, stand it up and wedge it in under the rafter. No ladder work on the studs.

Morning: steps 1–7, the wall is up by lunch. **Afternoon:** steps 8–11. **Later:** step 12.


Before you start: text Ollie about the wind on the solid wall. Once built, open sash B (behind the wok) before you cook.

THE FINISHED WALL, FROM THE DECK

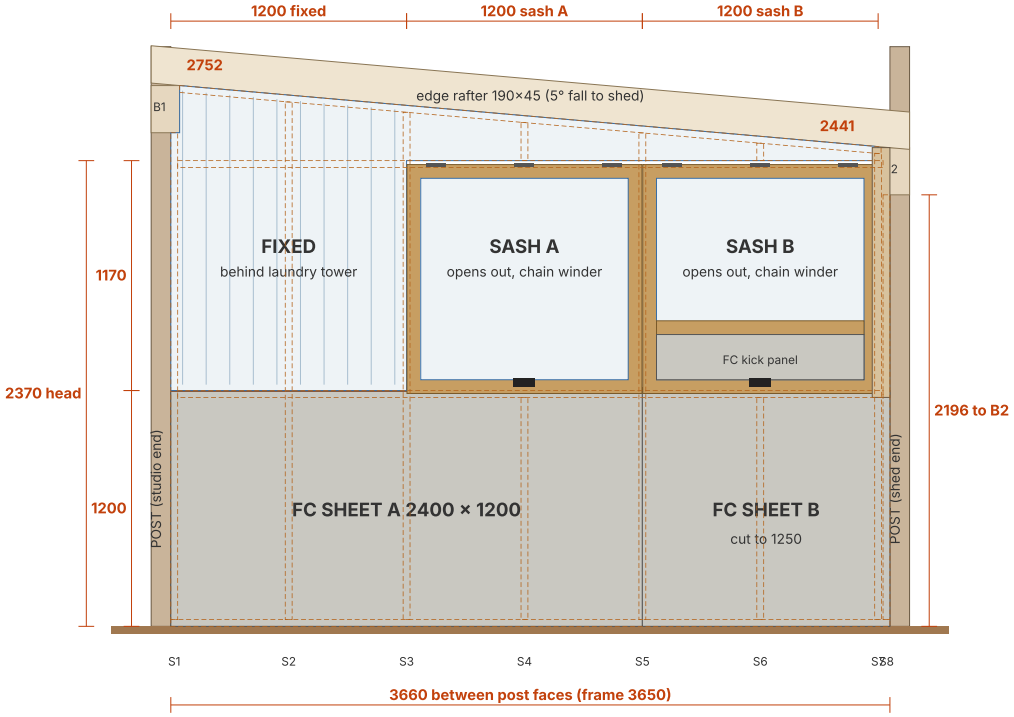

1 Measure everything


30 min

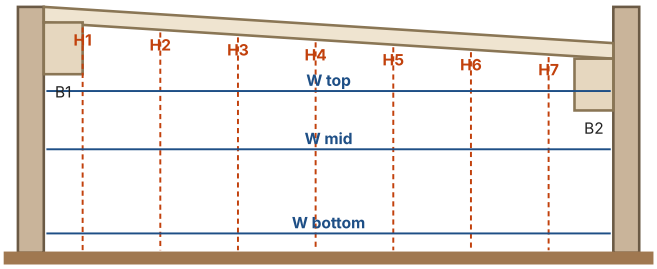

- Send the measurements (H1–H7 rafter heights, the three widths, ply depths, any bolt heads) so the cut list can be made exact.
- Rafter heights straight above the wall line, every 600.

2 Cut everything

60 min

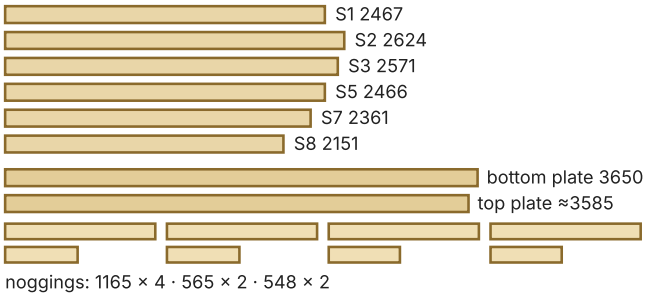


noggings: 1165 × 4 · 565 × 2 · 548 × 2

- Studs from the cut list (rafter height − 10 − 70), tops at 5°.
- Raked top plate ≈3 585, ends notched round the B1/B2 plies and any nuts.
- Mark every piece with its name. End-seal as you go.

3 Mark the plates together


10 min

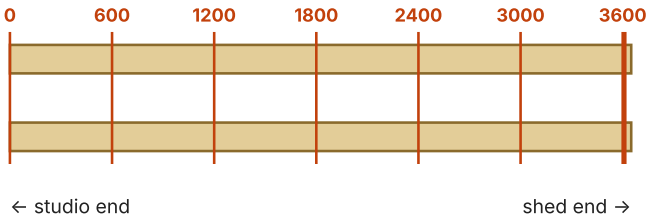

- Plates side by side, tape hooked on the studio end.
- Stud centres at 600, 1 200, 1 800, 2 400, 3 000, 3 600, plus an end stud flush each end.

4 Build the whole frame flat

60 min

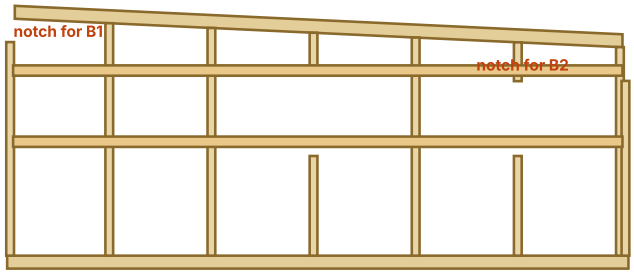


whole frame incl. raked top plate, built flat

- Bottom plate, studs and the raked top plate, 2 × 75 each end. Lay it top-towards-the-deck.
- S4 and S6 stop at the sill and restart above the head.
- Noggings on flat: sill 1 165–1 200, head 2 335–2 370. Check the diagonals.

5 Nail on the FC


40 min

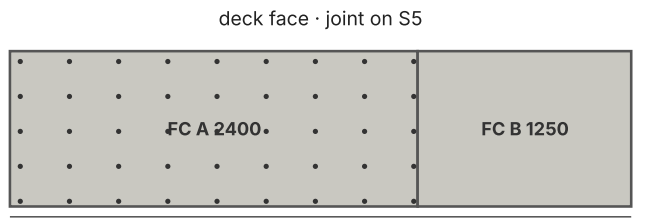

- Frame still flat, FC face up. Lower half only.
- Sheet A full from the studio end, B (1 250) after it: joint on S5.
- Nails 200 on edges, 300 in the middle, 12 in. Seal it now.

6 Stand it up and wedge it

30 min

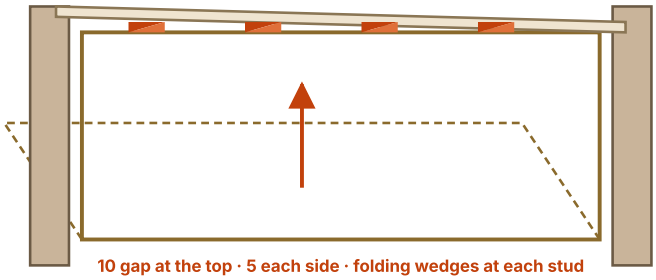


10 gap at the top · 5 each side · folding wedges at each stud

3 people (or 2 + a prop)


- Tip it up on the bottom plate between the posts.
- Tap folding wedges in over each stud until it's tight to the rafter. Plumb it.

7 Fix it in — 20 min

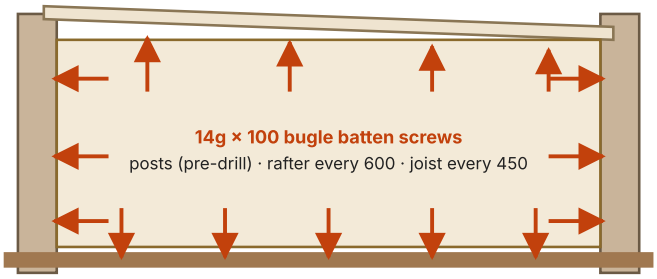


- End studs into the posts (pre-drill the ironbark).
- Up through the top plate and wedges into the rafter, every 600.
- Down through the bottom plate into the edge joist, every 450.

8 Sill board — 15 min

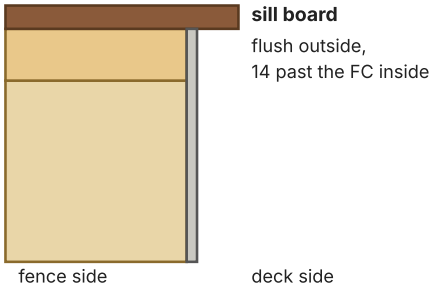

- Leftover decking board, 3 660, on the sill nogging.
- Flush with the fence face, 14 past the FC inside. Seal it.


9 Fixed twinwall + rake strip — 45 min

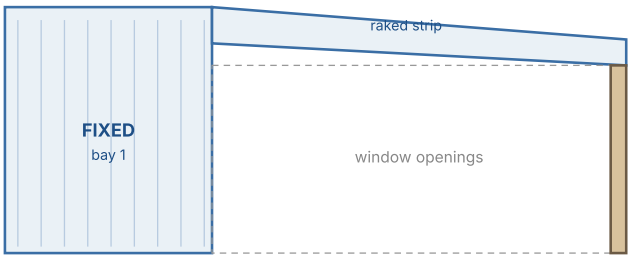

seen from the fence side

- From the fence side: bay 1 (behind the laundry tower) and the strip over the windows.
- Flutes vertical, tape + U-cap edges, oversize holes, screws snug only.
- Cover batten over the last 60 at the shed end.


10 Build the two sashes — 90 min

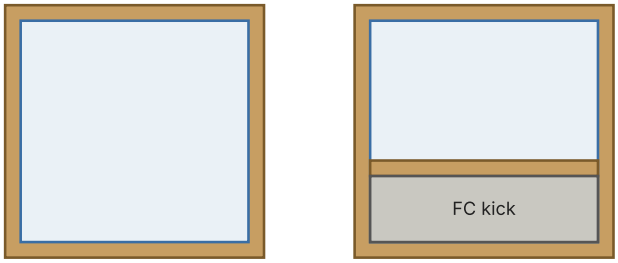

Sash A 1196 × 1165 **Sash B (wok side)**

- 70×35 frame on flat: stiles 1 165, rails 1 056, glue + 2 × 100 screws per corner.
- Twinwall on the outside face, held with the decking beads every 300.
- Sash B: extra mid rail 370 up, FC kick panel below it.


11 Hang the sashes — 40 min

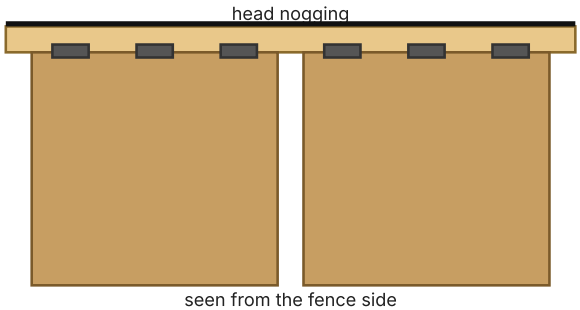

seen from the fence side

- 3 × 100 SS butt hinges each, on the head nogging.
- Sash laps 15 onto the studs, sill and head. Foam seal on the frame faces.
- Head flashing over the hinge line, tucked up behind the rake strip.

12 Winders + flyscreens — 30 min

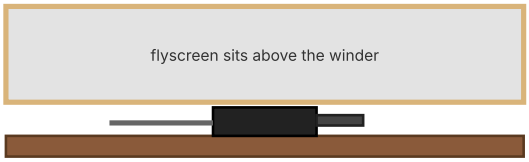

chain winder on the sill board

- Whitco CYL4 winder centred on the sill board, chain to the middle of the bottom rail.
- No winders yet? Screw the sashes shut through the frame for now.
- Flyscreens inside, above the winders, with turn buttons.