
Fence-end wall: build plans

87 Prince St, Mullumbimby · between the two fence-end posts · clad on the deck side only · FC to 1 600, opal twinwall above · all mm · P28, 5 Nov 2026

ELEVATION FROM THE DECK

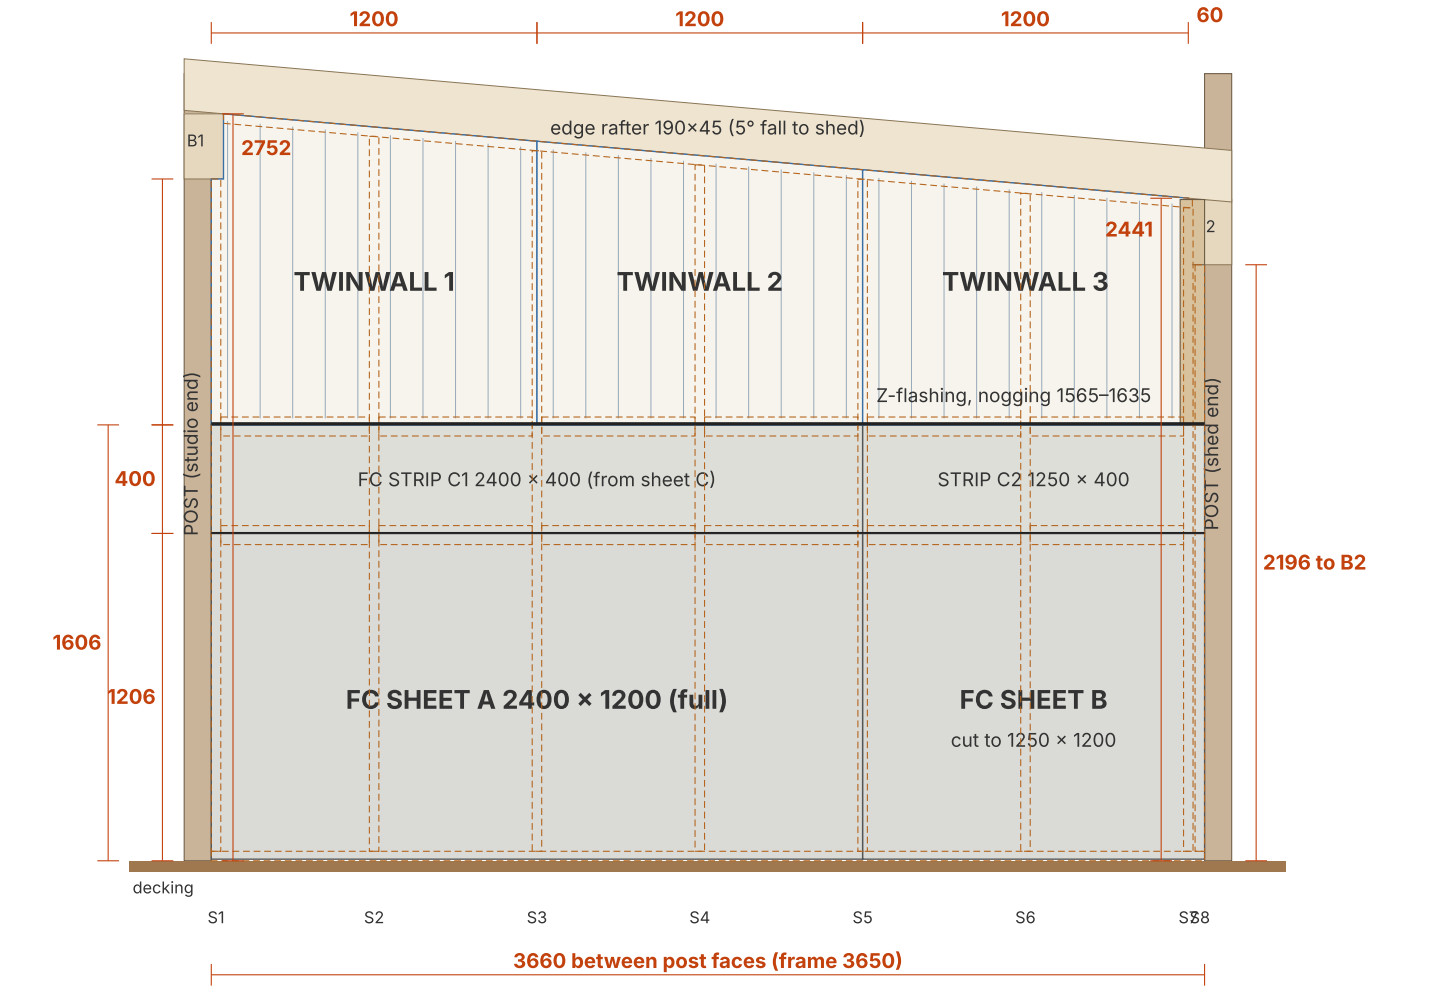


6 mm FC, clear sealed · Opal twinwall, flutes vertical · 70×35 H3 frame behind · 90×19 H3 cover batten

SET-OUT

- **Studs at 600 centres from the studio-end post face:** 0 (end stud), 600, 1200, 1800, 2400, 3000, 3600, and an end stud on the shed-end post. The FC joint (2 400) and the twinwall joints (1 200, 2 400, 3 600) all land on a stud.
- **FC, two rows:** bottom row is sheet A full from the studio end and sheet B cut to 1 250, 6 mm up off the decking, top at 1 206. Top row is two 400 strips ripped from sheet C (2 400 and 1 250), top at 1 606. Both vertical joints on stud S5; the row joint sits on the lower nogging row with a slim Z-flashing.
- **Twinwall:** three 1 200-wide pieces from the studio end, cut from two sheets, H-joiners on S3 and S5. The last 60 at the shed end is covered by the 90×19 cover batten on S7 / S8.
- **Top:** top plate under the edge rafter. The end studs run up to the underside of the inner B1 and B2 plies, so twinwall 1 has a 45 × 240 notch at the studio end.

FC / TWINWALL JOIN

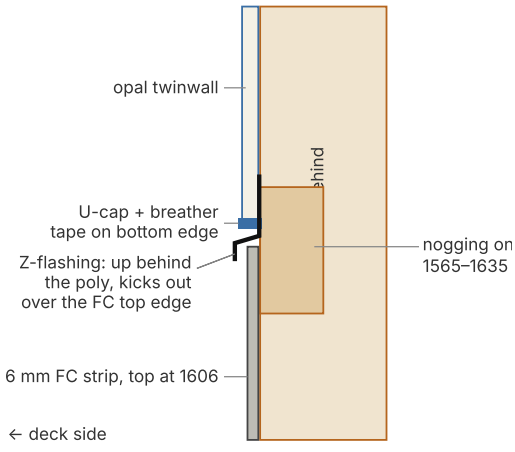

Text Ollie before building. A solid wall catches more wind than the batten screen he checked. Ask him about the wall and how it ties to the posts, beams and rafter.

Fence-end wall: materials and build

Buy 1 200-wide twinwall: 1 220-wide sheets won't land their joints on the studs. Ring Old Mill to confirm lengths.

MATERIAL LIST

Item	Qty
70×35 H3 (MGP10 or F7) × 2.7 m: studs	6
70×35 H3 × 2.4 m: studs S7, S8	2
70×35 H3 × 3.6 m: noggings (2 rows)	2
70×35 H3 × 4.2 m: bottom and top plates	2
90×19 H3 (or 90 alum. flat) × 0.9 m: cover batten	1
6 mm fibre cement 2 400 × 1 200 (HardieFlex or similar)	3
Opal twinwall polycarbonate 1 200 × 2 400	2
Polycarb H-joiner to suit sheet thickness, ≈1.2 m	3
Polycarb U-cap to suit, 2.1 m (top + bottom edges)	4
Solid aluminium tape (top edge) + breather tape (bottom)	1 each
Z-flashing 2.4 m (Zincalume or Colorbond), 2 runs	4
Poly screws with EPDM sealing washers, 12g × 45	≈50
Galv FC nails 40 × 2.8	1 kg
Clear exterior FC sealer	1–2 L
14g × 100 batten screws (plates, end studs to posts)	≈30
75 galv framing nails or 75 timber screws (frame)	≈60
Plastic packers (stud tops, FC off deck), end-seal, neutral-cure sealant	1 each

TIMBER CUT LIST

Piece	Length	From
Bottom plate	3 650	4.2 m
Top plate (raked, under rafter)	≈3 585	4.2 m
S1 studio end stud (to B1, square top)	2 467	2.7 m
S2 · S3 · S4 (5° top)	2 624 · 2 571 · 2 519	2.7 m each
S5 · S6 (5° top)	2 466 · 2 414	2.7 m each
S7 (5° top)	2 361	2.4 m
S8 shed end stud (to B2, square top)	2 151	2.4 m
Noggings on edge, 2 rows	548 + 5 × 565 each row	3.6 m each
Cover batten	≈840	0.9 m offcut

Stud lengths are long-point, already 10 short for standing the frame up. Measure each one on site from bottom plate to top plate before cutting.

SHEET CUT LIST

Sheet	Cut
FC A	Full 2 400 × 1 200
FC B	1 250 × 1 200 (offcut ≈1 150 spare)
FC C	Rip into three 400 strips: C1 2 400 × 400, C2 cut to 1 250 × 400, one spare strip
Twinwall sheet A	Piece 1: 1 200 wide, 1 146 at the studio end falling to 1 045, 45 × 240 notch at the top studio corner. Piece 2: 1 045 falling to 940. Both come out of the one 2 400 sheet.
Twinwall sheet B	Piece 3: 940 falling to 835 (≈1 450 spare)

Twinwall heights are measured from the 1 606 line up to the rafter. Scribe each top to the rafter on site, as rafters are never dead straight.

BUILD ORDER

1. End-seal every cut. Fix the top plate to the underside of the edge rafter, between the B1 and B2 plies: 14g × 100 at 600, staggered.
2. On the deck, build the frame lying flat: bottom plate 3 650, studs at the set-out, two nogging rows on edge at 1 165–1 235 and 1 565–1 635, flush to the deck face. Square it by the diagonals.
3. Clad the FC with the frame still flat: bottom row 6 above the plate underside, slim Z-flashing on the 1 206 line, then the 400 strip row, nail 200 at edges and 300 in the field, 12 in from the edges. Seal the face and edges before standing it.
4. Stand it up, a few mm back from its line, and tap it across into position. Plumb it, then fix it down: bottom plate through the decking into the edge joist, 14g × 100 at 450. End studs S1 and S8 to the posts, 14g × 100 at 600, pre-drilled.
5. Pack each stud top to the top plate and skew-screw it.
6. Z-flashing along the 1 606 line, lapped 100 at the join and screwed high into the upper nogging row.
7. Twinwall, UV side out, flutes vertical: aluminium tape and U-cap on top, breather tape and U-cap on the bottom. Sheet 1 first, from the studio end, with H-joiners on S3 and S5. Drill 3 mm oversize, screw at ≈500 into studs, nogging and top plate, snug but not tight.
8. Fix the cover batten over S7 / S8 to hide the last 60.

Heat: the twinwall now starts about 670 above the bench. Keep the wok stove at the front edge, and check its manual for clearance to combustibles. If the poly gets warm when you cook, fit an aluminium splashback 25 off the wall.