Fence-end wall + windows: quick build guide

87 Prince St · one day with two people · all mm · cut everything first, then assemble in order · full drawings: “Wall and windows plans” PDF

TIMBER (70 × 35 H3 OUTDOOR FRAMING, BUNNINGS)

Buy	Cut into
6 × 3.0 m	S1 2 467 · S2 2 624 · S3 2 571 · S5 2 466 · S7 2 361 · S8 2 151 offcuts → stubs 184 + 79, noggings 548 × 2
3 × 4.8 m	bottom plate 3 650 (+ stub 1 130) · top plate ≈3 585 (+ stub 1 130) · sash A frame 1 165 × 2 + 1 056 × 2
2 × 6.0 m	noggings 1 165 × 4 + 565 × 2 · sash B frame 1 165 × 2 + 1 056 × 3
3 leftover decking boards	sill board 3 660 · ripped beads 1 165 × 4 + 1 112 × 5 · cover batten ≈1 280

Stud lengths are a check only: once the top plate is up, measure each one and cut 10 short.

SHEETS

FC 6 mm 2 400 × 1 200 × 2	A full · B cut to 1 250 · offcut → kick panel 1 180 × 327
Opal twinwall 1 200 × 2 400 × 2	1: fixed bay + 2 strip pieces · 2: sash A 1 180 × 1 149, sash B 1 180 × 822

HARDWARE

14g × 100 batten screws	≈50
75 galv nails / screws	≈60
Galv FC nails 40 × 2.8	500 g
Poly screws + EPDM washers	≈60
U-cap (3 × 2.1 m), alu tape, breather tape	1 set
Head flashing 2.4 m	1
100 mm SS butt hinges	6
Foam weatherseal	≈10 m
Whitco CYL4 chain winder (can wait)	2
PU glue, end-seal, FC sealer, plastic packers	1 each

TOOLS


Drop saw · circular saw (FC blade) · table saw (rip beads) · clout gun · nail gun · impact driver + drill · 3 mm and 10 mm bits · level · square · string line · tape · clamps · silicone gun

RUNNING ORDER

Morning: steps 1–6, the wall is up by lunch. **Afternoon:** steps 7–10. **Later:** step 11.


Before you start: text Ollie about the wind on the solid wall. Once built, open sash B (behind the wok) before you cook.

THE FINISHED WALL, FROM THE DECK

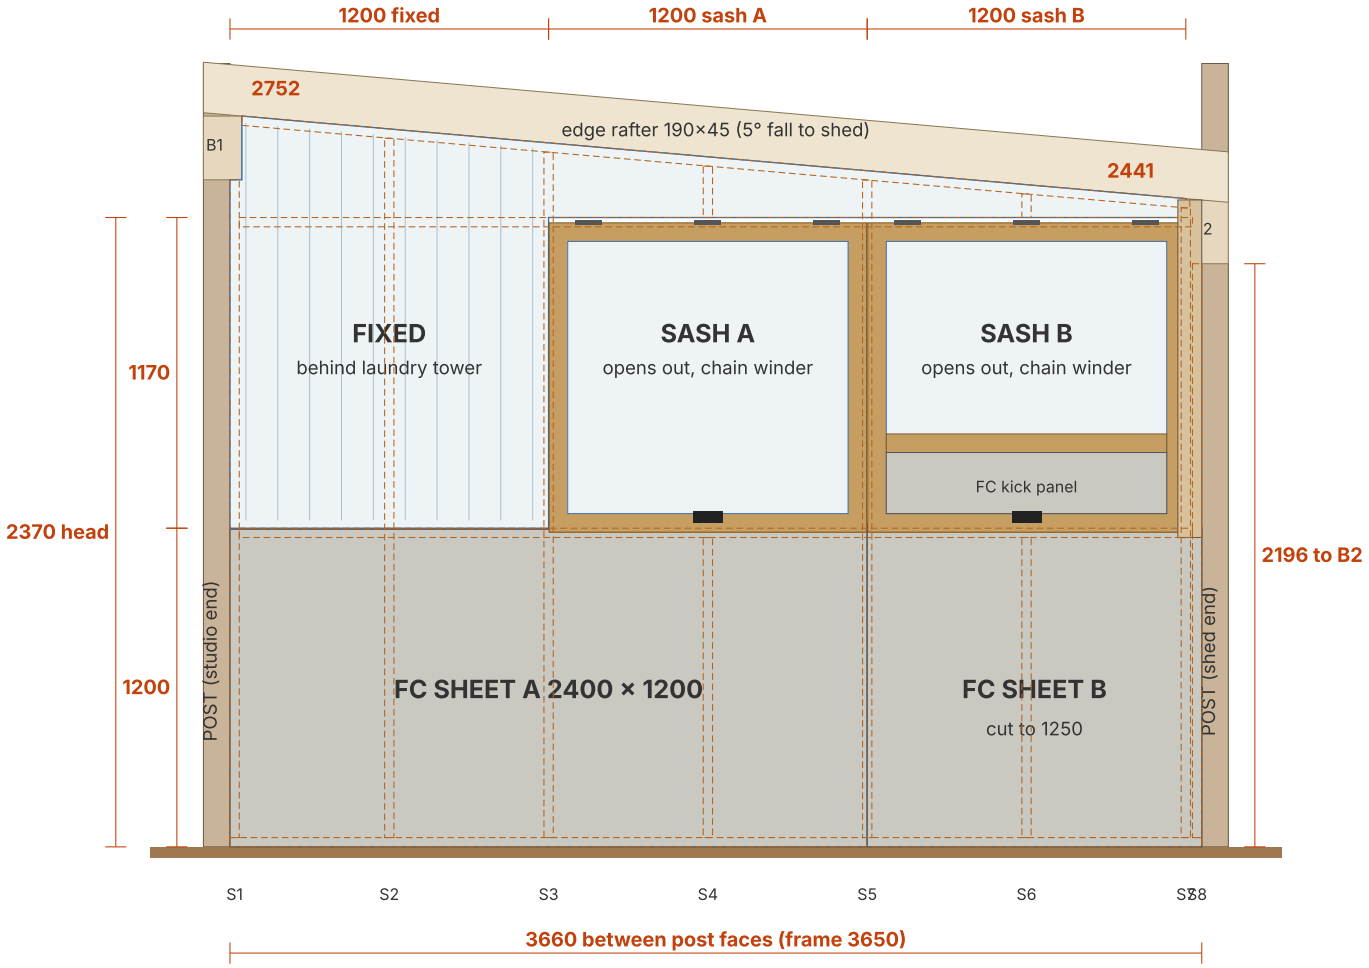

1 Cut everything first


45 min

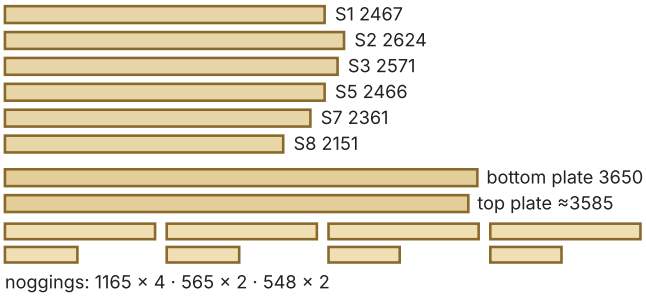

- Plates, noggings, sash frames, sill board now. Studs straight after step 2.
- Rip one leftover decking board in half for the window beads.
- Mark every piece with its name in pencil. End-seal every cut as you go.

2 Top plate under the rafter


20 min

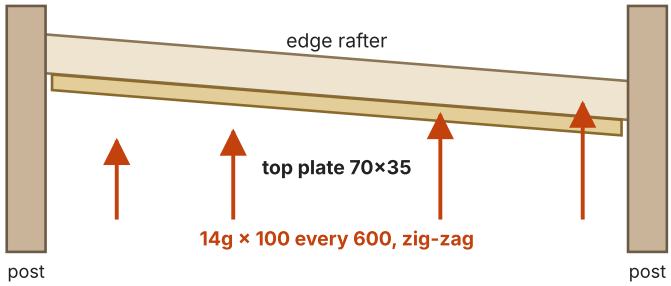

- 3 585 long, between the beam plies, tight up under the rafter.
- 14g × 100 screws every 600, zig-zag.
- Now cut the studs: measure deck → underside of the plate at each stud spot, minus 45 (35 plate + 10 to tilt up). Tops at 5°, S1 and S8 square.

3 Mark the plates together


10 min

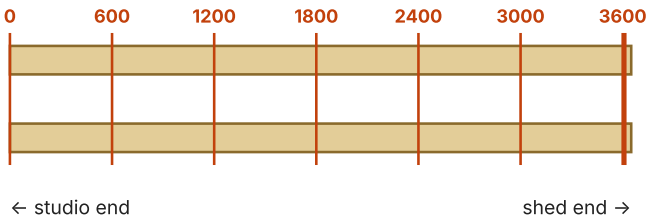

- Plates side by side, tape hooked on the studio end.
- Square a line across both at 600, 1 200, 1 800, 2 400, 3 000, 3 600: stud centres.
- Plus an end stud flush at each end (S1, S8).

4 Build the frame flat


60 min

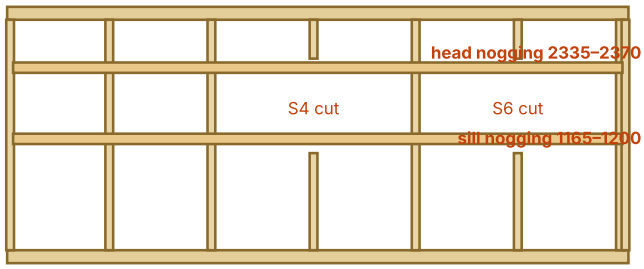

- Nail plates to studs (2 × 75 each end).
- S4 and S6 are short stubs: 1 130 below the sill, short piece above the head.
- Noggings on flat, full 70 depth: sill 1 165–1 200, head 2 335–2 370.
- Check both diagonals are equal before step 5.

5 Nail on the FC


40 min

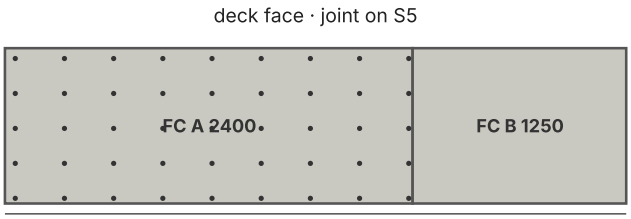

- Frame still flat. Deck face, lower half only.
- Sheet A full from the studio end, B (1 250) after it: joint on S5.
- 6 up from the plate bottom. Nails 200 on edges, 300 in the middle, 12 in.
- Seal the FC face and edges now while it's flat.

6 Stand it up


30 min

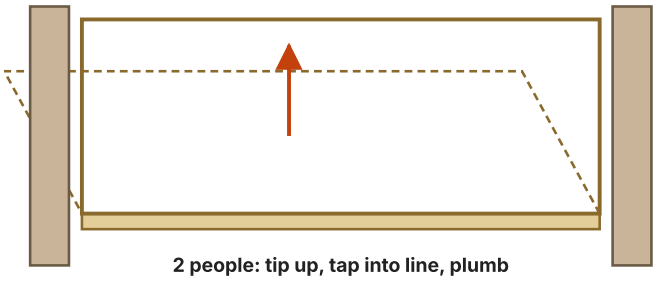

- Frame is 3 650, leaving 5 each side so it swings up between the posts.
- Bottom plate → edge joist: 14g × 100 every 450.
- S1 and S8 → posts (pre-drill). Pack each stud top and skew-screw.

7 Sill board


15 min

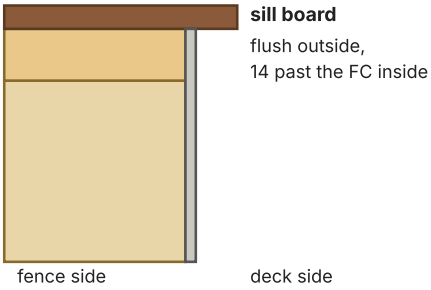

- Leftover decking board, 3 660, on the sill nogging.
- Flush with the fence face, 14 past the FC inside. Seal it.

8 Fixed twinwall + rake strip

45 min

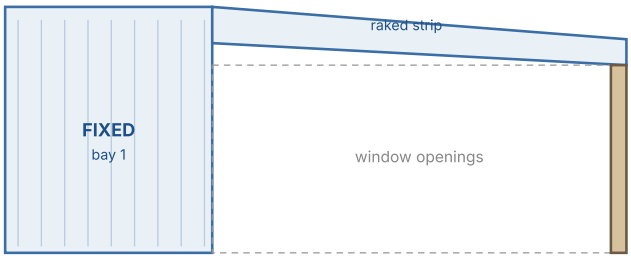


seen from the fence side

- Bay 1 (behind the laundry tower) and the strip over the windows.
- Notch 45 × 240 at the studio corner for B1.
- Flutes vertical. Alu tape on top edges, breather tape on bottom, U-cap.
- 3 mm oversize holes, screws snug only. Cover batten over the last 60 at the shed end.

9 Build the two sashes

90 min

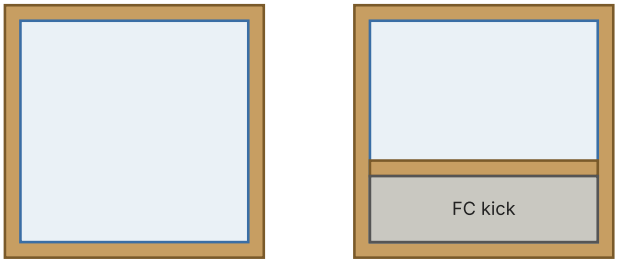


Sash A 1196 × 1165 **Sash B (wok side)**

- 70×35 frame on flat: stiles 1 165, rails 1 056, glue + 2 × 100 screws per corner.
- Twinwall on the outside face, held with the decking beads every 300.
- Sash B: extra mid rail 370 up, FC kick panel below it.

10 Hang the sashes

40 min

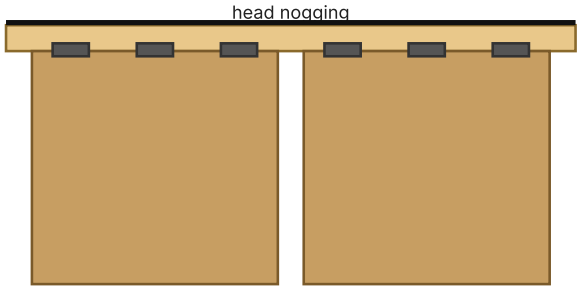

seen from the fence side

- 3 × 100 SS butt hinges each, on the head nogging.
- Sash laps 15 onto the studs, sill and head. Foam seal on the frame faces.
- Head flashing over the hinge line, tucked up behind the rake strip.

11 Winders + flyscreens

30 min



chain winder on the sill board

- Whitco CYL4 winder centred on the sill board, chain to the middle of the bottom rail.
- No winders yet? Screw the sashes shut through the frame for now.
- Flyscreens inside, above the winders, with turn buttons.