Chair travel case

ceremonial chairs · build plans · Rev H (CNC-cut kit, ASA printed fittings)


Case outside	1018 W × 1008 D × 1761 H mm on castors
Inside	1000 × 990 × 1605 mm, lined 20 mm EPE, 20 mm EVA floor
Chair	927 × 920 × 1547 (maker's STEP, 9 Nov), 15–18 mm air gap all round
Build	9 mm black hexa ply walls, top and lid on a 17 mm formply base; CNC-cut panels, glued + pinned, 30 mm single angle, 210 mm deep slide-off lid on a hybrid joiner split; ASA printed handles, foot rails and brackets
Access	5 butterfly latches; pull the lid straight off forward; chair rolls out forward
Mobility	100 mm castors (100 kg each, 2 braked) bolted to the base at the corners, 6 handles
Weight	about 79 kg empty, 132 kg packed (calculated: weigh the first one)


Before the final CNC files go: confirm the real ply thickness, and mate the hybrid joiner on two offcuts to check its 4 mm gap. Set the foot rails on the first finished chair. Print and test one handle first. Chair geometry is maker's STEP model. Badge needs the client' official vector logo.






Elevations

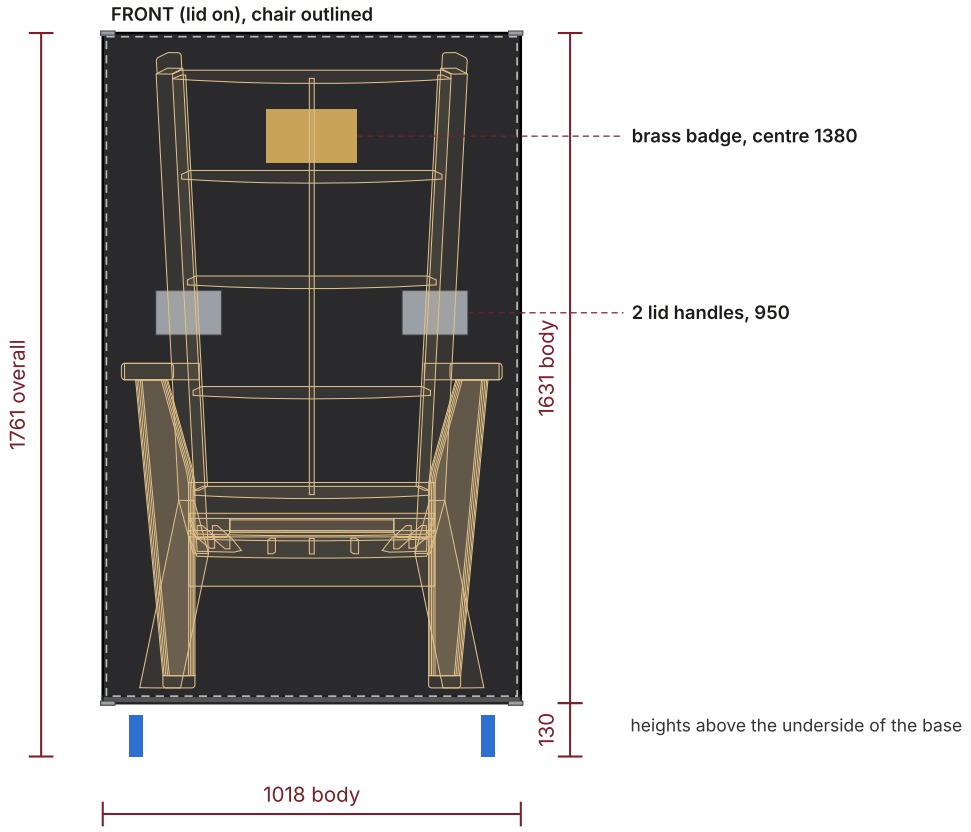
FRONT (lid on), chair outlined
brass badge, centre 1380
2 lid handles, 950
1761 overall
1631 body
130
heights above the underside of the base
1018 body

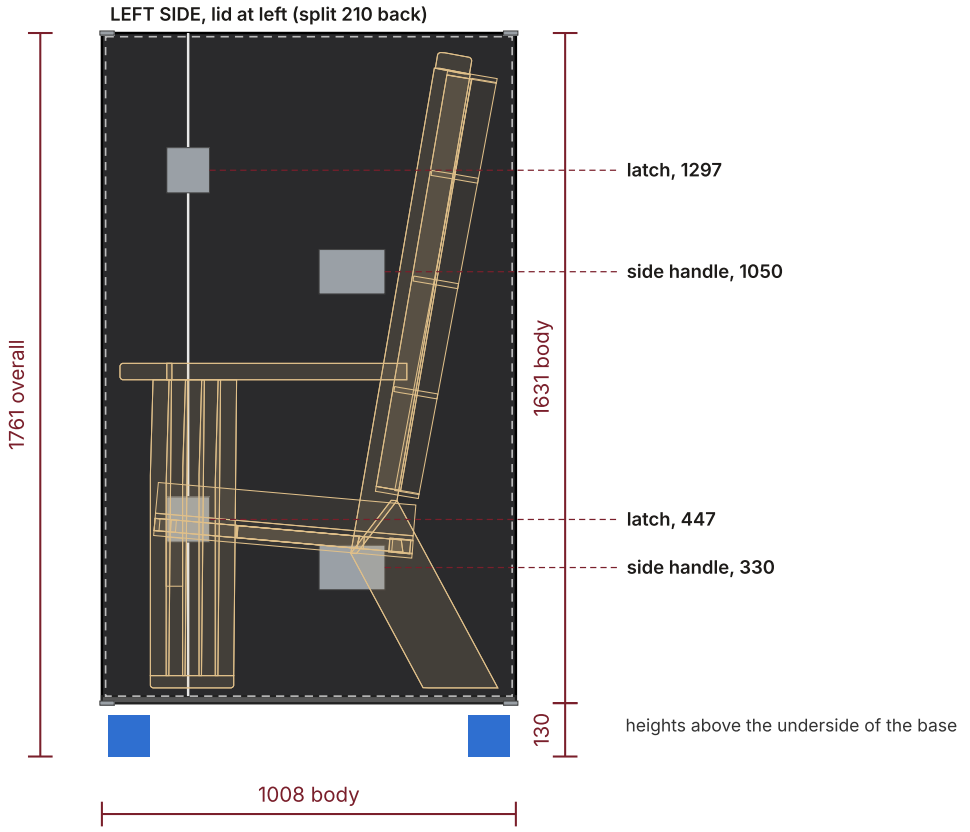

LEFT SIDE, lid at left (split 210 back)
latch, 1297
side handle, 1050
latch, 447
side handle, 330
1761 overall
1631 body
130
heights above the underside of the base
1008 body

Plan and details


PLAN at floor, lid at top

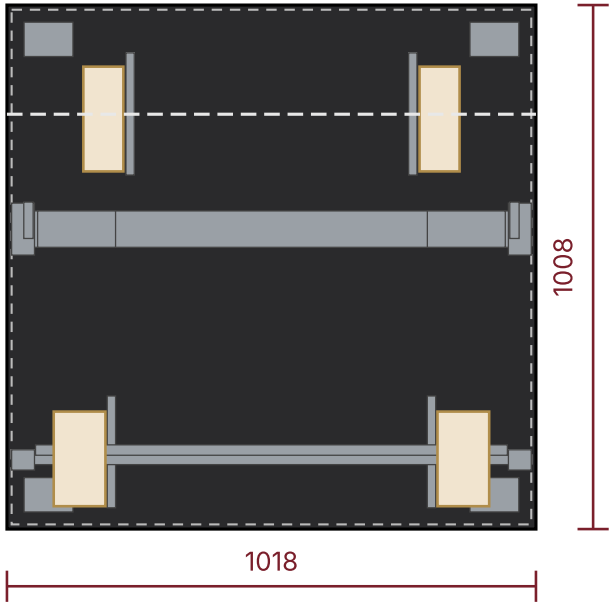


A Lid and split (plan section through a side wall)

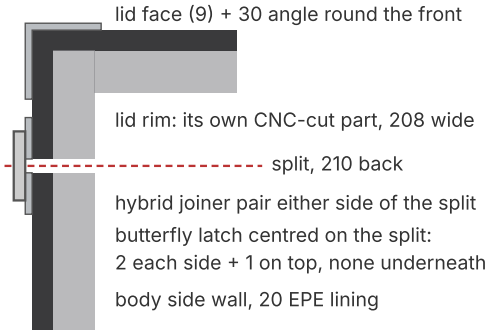

B Rear corner (plan section)

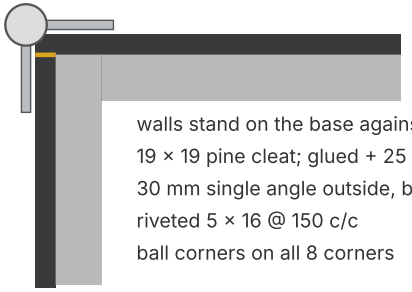


C Lid skirt over the base (section at the front)

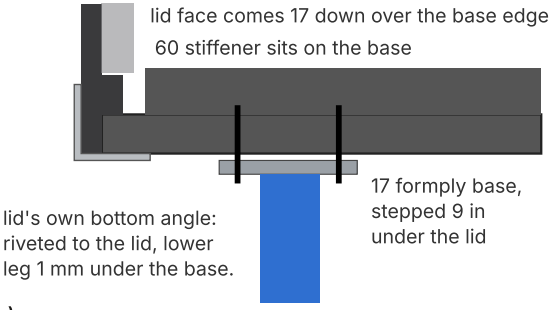

Lid off = flat base. Lid pulls straight off.


D Foot rail, ASA print (plan)

back rib stops the chair, not these

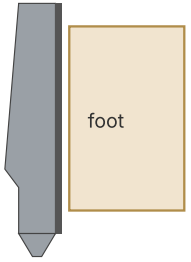


flared end towards the lid

E Brass badge

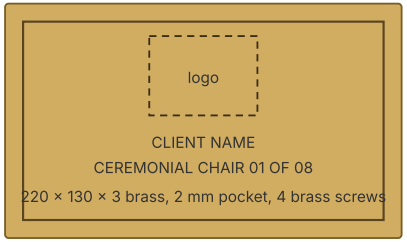


F Hold-down bar (section across case)

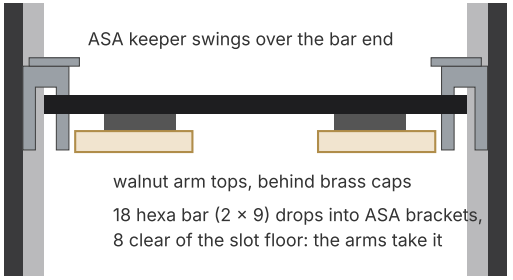

Cut list · hexa ply, 4 sheets per case

Sheet 1

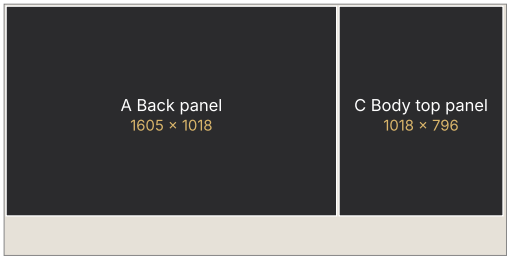

Sheet 2



Sheet 3



Sheet 4



CNC parts, one case

Part	Name	Size	Qty
A	Back panel	1018 × 1605	1
B-L	Body side panel LEFT (mirror of B-R)	787 × 1605	1
B-R	Body side panel RIGHT	787 × 1605	1
C	Body top panel	1018 × 796	1
D	Lid face	1000 × 1622	1
E-L	Lid rim side LEFT (mirror of E-R)	208 × 1622	1
E-R	Lid rim side RIGHT	208 × 1622	1
F	Lid rim top	1018 × 208	1
G	Lid bottom stiffener	1000 × 60	1
H	Back rib strip	976 × 80	2
J	Hold-down bar strip	976 × 70	2
M	Base	1018 × 999	1

Panels are CNC cut by the supplier from the Rev H DXF pack, with handle openings, bracket bolt holes, latch notches, the badge pocket and castor marks. Left and right are mirror images. Confirm the real sheet thickness and the 4 mm hybrid joiner gap before the final files go. Extrusion runs: 30 mm single angle 958, 766, 178, 1571, 743, 1571, 155, 766, 178, 1571, 743, 1571, 155, 958, 958, 958; hybrid joiner 1575, 1575, 968, 1575, 1575, 968.

Build order

1. **Order and collect.** Panels: order the Rev H CNC-cut kits from the chosen panel supplier. Before the final files go, confirm the real sheet thickness and buy one pair of hybrid joiner lengths and one latch from Titan so the split gap and latch notches can be checked. Extrusion, latches, ball corners, rivets and foam: Titan AV (ask for uncut 3 m extrusion lengths: five verticals are over 1.5 m). Bolts, screws, glue, contact spray and paint from Bunnings. Start the ASA prints (list on the ASA prints tab) while the panels are being cut.
2. **Print the ASA parts.** Print one set per case in black ASA on the Bambu printers, enclosure closed: 6 recessed handles (face down, 6 walls, 60% infill), 2 front and 2 rear foot rails, 2 rib brackets, 2 bar brackets, 2 bar keepers, 1 label holder. Plus one rivet drill guide for the workshop. All parts fit a 256 mm bed. Check a handle in a cut-out before printing the rest.
3. **Check the kit.** Lay out one case's parts against the parts list (A to M). Check the hexa face is on the outside of both side panels and both lid rims: left and right are mirror images. The lid face and rims are 17 mm taller than the body walls: that extra comes down over the edge of the base. Offer a handle into its cut-out and a latch up to its notches. Mate two hybrid joiner halves on offcuts and check the 4 mm gap.
4. **Prep the parts.** Paint the cut edges of the base black, including the stepped-in front edge that the lid covers. Glue the two back-rib strips (H) together and the two bar strips (J) together (18 mm each); round over the edges. Glue 20 mm EVA to the front face of the rib and two EVA pads under the bar where it sits on the arms. Cut the three 19 × 19 pine cleats.
5. **Glue up the body and the lid.** Body: glue and screw the pine cleats to the base, 9 mm in from the back and side edges. Stand the back (A) and the two sides (B-L, B-R, notched edges to the front) on the base against the cleats; glue (PU) and pin with 25 mm brads, then screw through each wall into its cleat every 200 mm. Glue and pin the top (C) on, notch to the front. Lid: glue and pin the rims (E-L, E-R) to the edges of the face (D), the top strip (F) over all three, and the 60 mm stiffener (G) inside the face, 17 mm up from its bottom edge (that is the base thickness: the stiffener is what sits on the base). Offer the lid to the body and check it slides on square before the glue goes off.
6. **Fit the split frame.** Fit the hybrid joiner pair up both sides and across the top of the split, lid half on the lid and body half on the body, mitred at the two top corners, starting 31 mm above the underside of the case. Cut the joiner away at each latch notch to match. Rivet at 150 mm. Slide the lid on and check it seats all round with the latch notches lined up.
7. **Edges and corners.** 30 mm single angle: body = base back and base sides (from the split back, screwed into the base with 8g x 16 wafer-head screws), rear verticals, top back and top sides. Lid = bottom front and bottom sides, front verticals, top front and top sides. The lid's bottom angles are riveted to the lid only; their lower leg runs 1 mm under the base so the lid can't lift or kick out at the bottom, but slides straight off forward. Rivet into the 9 mm ply at 150 mm (5 × 16 rivets with washers, use the printed drill guide). Ball corners on all eight corners: four on the body's rear corners, four on the lid. No flat corners or brace plates. With the lid off, nothing stands up above the base.
8. **Latches and handles.** Five butterfly latches into the pre-cut notches on the split: two each side and one on top, dish half on the body, catch half on the lid. Six ASA recessed handles into the 130 × 75 cut-outs (two each side, two on the lid face): drop in from outside, 6 x M5 × 20 black button-head bolts with washers and nylocs inside. Rivet the label holder to the back.
9. **Castors.** The base has the four castor plate centres marked. Centre each plate on its mark, drill through its holes, and bolt with M8 × 40 cup-head bolts, heads inside (they end up under the floor mat), nylocs under the plate. Braked pair at the lid end.
10. **Brackets for the rib and bar.** The side walls come with the bracket bolt holes pre-drilled. Bolt the two ASA rib brackets (low, near the back) and the two ASA bar brackets (high, near the front) to the walls with 4 x M5 × 30 button-head bolts each, heads outside. Fit each keeper on an M5 × 30 bolt through the front jaw with a washer either side and a nyloc, snug enough that it clicks into its detent.
11. **Line it.** Cut the foam to the built box. Spray-contact 20 mm EPE on the back, sides and top of the body and on the lid face and rims, cutting round the brackets, latch pans and handle pockets. Then the 20 mm EVA floor mat between the linings.
12. **First-chair fit.** Drop the rib into its brackets. Roll the first chair in from the front until its rear legs touch the rib foam, centred side to side. Mark the inside edge of each foot. Screw the four ASA foot rails 4 mm inside each foot, flared end towards the lid, felt on the foot side, through the mat into the base (3 × 8g x 45 each). Lay the bar into its brackets on the arm tops behind the brass caps and swing both keepers over it. Nothing touches leather or brass.
13. **Badge.** Fit the engraved brass plate into its pre-cut 2 mm pocket on the lid face with four brass countersunk screws.
14. **Test and record.** Roll it, brake it, push it from the high side handle and tilt it 10 degrees. Lid off and on a few times: undo the five latches, hold both lid handles and pull straight towards you; to close, slide it straight back on and do the latches up. Load and unload the chair twice: keepers back, bar out, roll the chair in until it stops on the rib, bar in, keepers over. Weigh it packed and note it for freight. Photograph it for the handover.

Handling: about 132 kg packed. Tailgate truck or forklift, two people. Brake the castors and strap to the pallet for freight. Not stackable: mark the top. Needs about 1.05 m clear width.