



Step 1 – Sides, bottom skin, shelf

Stand both side panels up, corner slots facing UP. Fit the bottom-skin and shelf tabs into their mortises in one panel, then bring the other panel in over the far tabs.

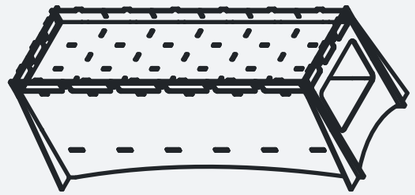


Step 2 – Drop in the end panels

Lower each end panel, corner slots facing DOWN, over the side panels until the tops line up. The frame now stands on its own. Check it is square before the glue grabs.

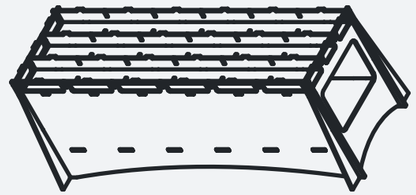


Step 3 – Inner long ribs

Drop each inner long rib into the slots at the top of the end panels, half-lap slots facing UP, until its bottom tabs seat in the bottom skin.

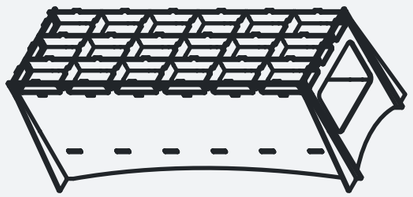

Step 4 – Inner cross ribs

Lower each cross rib, slots facing DOWN, over the long ribs and into the slots at the top of the side panels, until its tabs seat in the bottom skin.

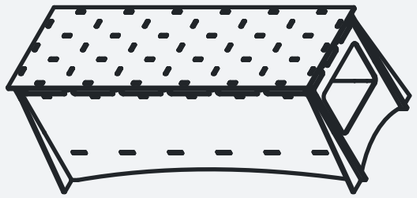

Step 5 – Close with the top skin

Glue every top edge and press the top skin down over all the tabs. Weight it evenly and let it cure with the bench on a level floor: the top takes its flatness from the frame.

GLUE-UP

Dry-fit every joint first.
Use PVA wood glue on all tabs, half-laps and mortises.
MDF swells with glue: work one stage at a time.

Drawn:	
Checked:	
Approved:	
Approved:	

Tab & Slot Torsion Box Workbench
Assembly instructions
Parametric - see Design spreadsheet

B		TSW-4	A
AS NOTED		4 of 4	