



FAST TRACK, TRACK START, EZ SET II STARTING PLATFORMS

Maintenance & Care Stainless-Steel Equipment

STARTING PLATFORMS

Features and Benefits with Options – Refer to Drawing(s)

Paddock manufactures several types of stainless-steel starting platforms that all feature a sturdy dual post frame with a solid slip-resistant top, quickly and easily removable. Built to meet FINA, NCAA, USMS, NFSHSA AND USA Swimming rules.

Our Starting Platforms are created for all levels of swimming, from elite competitors to those just learning the sport of competitive swimming. All models, i.e., FastTrack, Track Start and EZ Set II use the same anchorage, making upgrading the platforms simple.

Paddock's starting platforms are fabricated from type 304L or 316L stainless steel frame where the front edge of the platform is flush with the backstroke starting bar.

The platforms have a slip-resistant/non-skid black surface on top of the platforms, step(s) and kick wedge (if applicable). The Lane line numbers are visible from each side of the platform.

Options:

Exposed surfaces shall be polished to a Paddock buff finish (standard).

Powder Coating is available by request.

Custom colors & logos are available for non-skid, platform tops, and (if applicable) on sidestep & kick plate wedge.

Anchor assemblies with 19" (inches spacing) channel for easy installation. Or loose anchors for retro installation.

Safety & Hazard

Starting Platforms are intended for the use of one person at a time; they are not designed for handstands or other gymnastic stunts, and they should not be used for this purpose.

The Platforms should be inspected regularly, if any part becomes loose or damaged, including the non-skid surfaces, they should be taken out of service until repairs are made or replaced.

There is a Warning Label on back of all platforms, if they start to peel or come off, they must be replaced.

Paddock's Starting Platform Types:

Fast Track 4912

- Sturdy side rails and grips welded to platform for “15” adjustable locations of kick wedge as needed for swimmer’s preferences.
- Kick wedge easily adjusts with single-hand operation and is removable. The adjustable spring-loaded locking nut secures kick wedge to side rails.
- Platform is made of stainless-steel, 24” (inches) wide by 32” (inches) long with a non-skid black surface.
- **When mounting the platform use sidestep, and over the side rail, watch-out for the kick wedge.**
- The Lane line numbers are visible from all four side of the platform.

Track Start 4911S

- Platform is made of stainless-steel, 24” (inches) wide by 32” (inches) long with a non-skid black surface.
- **When mounting the platform using sidestep, watch out overstepping the top of platform.**
- The Lane line numbers are visible from three sides (both sides and front of step plate) of the platform.
- **Long reach available: 24”, 30” or 36” setback** – these would be use for a wider gutter application and require a 10” anchor assemblies with or without channel.

EZ Set II 4909S

- Platform is made of stainless-steel, 21 1/4” (inches) wide by 20” (inches) long with a non-skid black surface.
- A mounting tread shall be positioned off the rear legs. Tread shall have a deeply formed integral non-slip surface firmly attached to the legs by welded stainless steel gussets.
- **Long reach available: 24”, 30” or 36” setback** – these would be use for a wider gutter application and require a 10” anchor assemblies with or without channel.

For questions concerning the usage of our equipment, please contact Paddock Pool Equipment Co., customer service.

STARTING PLATFORMS

Refer to Drawing(s) – if applicable.

INSTALLATION & REMOVAL WITH CARE & MAINTENANCE

Paddock starting platforms are manufactured using 304L and/or 316L material and will require general maintenance over time. Please refer to and utilize Paddock's Care and Maintenance for Stainless Steel provided to you in your Operations Manual. For installation and removal, please follow the instructions listed below:

Installation

1. Remove each cover plate (**DO NOT DISCARD!**) and check anchors for debris.
2. Locate the brass compression collars, loosen the set screw on the side to prevent scratching and place one per platform leg.
3. Inspect the starting platform legs for debris and clean if required
 - a. If cleaning is required, use a green 3M® Scotch-Brite Pad to clean area.
4. Use of a non-water-soluble grease to lubricate anchor is suggested for ease of placement.
 - a. Lubrication suggestions include marine bearing grease and/or white lithium grease.
5. Using two people, one on each side, lift the starting platform into position over the anchors. Slowly lower the platform continuing alignment until completely set in anchors.
6. Brass compression collars should be hand started to prevent cross threading. Once started by hand tighten with an 18" smooth faced adjustable wrench making sure **not to over tighten** and strip the brass compression collars.
7. Tighten set screw on brass compression collars to complete installation.

Removal

1. Remove all components from starting platforms including any timing and speakers.
2. Loosen the set screw on brass compression collars. Make sure to loosen set screw enough to prevent from damaging finish on starting platform legs while loosening brass compression collars.
3. Using an 18" smooth faced adjustable wrench loosens the brass compression collars. Use caution while loosening collars to prevent injury from slippage.
4. Using two people, one on each side, lift in a vertical direction, gently rocking back and forth to dislodge platforms from anchors. Continue rocking and lifting until platform is removed.
 - a. Ease of removal will vary based on frequency of the removal process.
5. Inspect the starting platform legs and anchors for debris and clean if required.
 - a. If cleaning is required, use a green 3M® Scotch-Brite Pad to clean area.
6. **Replace the cover plates on anchors while not in use.**

Care and Maintenance

These materials require little if any maintenance. The following tips are intended as a guide to help you maintain your Paddock starting platforms.

1. Wash down the starting platforms including the tops weekly and / or as needed with fresh water to remove dirt and debris. After the final rinse using clean water, dry wipe will complete the process this will eliminate possibility of water stains. The longer the stain(s) is on the surface of stainless equipment, the higher chance of permanent discoloration or damage.
2. All starting platforms have warning labels, **if your starting platforms do not have warning labels, contact our customer service immediately.**
3. Follow general stainless steel cleaning procedures for cleaning - see the section on Maintenance & Product Information in the manual – Stainless Steel Products Care & Maintenance for cleaning.

Safety & Hazard

Starting Platforms should only be used by trained competitive swimmers or under the direct supervision of an instructor. Swimmers should execute shallow racing dives only, the Impact with the pool bottom can cause severe injury.

Starting Platforms are intended for the use of one person at a time; they are not designed for handstands or other gymnastic stunts, and they should not be used for this purpose.

The Platforms should be inspected regularly, if any part becomes loose or damaged, including the non-skid surfaces, they should be taken out of service until repairs are made or replaced.



The **Warning Label** is located on back of all platforms, if they start to peel or come off, they must be replaced, please contact the manufacturer immediately.

Paddock Fast Track Starting Platforms are equipped with kick (wedge) plate.



1. For Fast Track Starting Platform Operation and Maintenance Manual (if applicable).



SLIDE RAILS FOR KICKWEDGE MUST BE CLEANED AND LUBRICATED WEEKLY TO ENSURE EASE OF OPERATION.

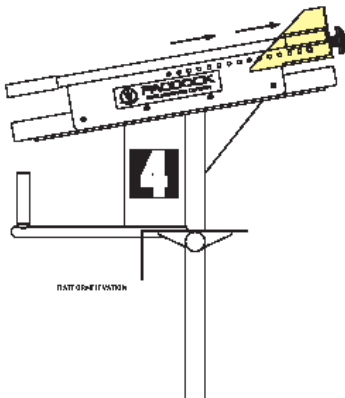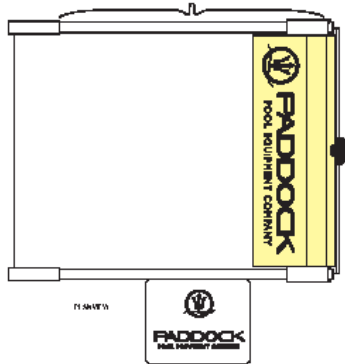

KICKWEDGE IN REAR POSITION WITH LOCKING PINS ENGAGED IN THE LAST LOCKING POSITION.

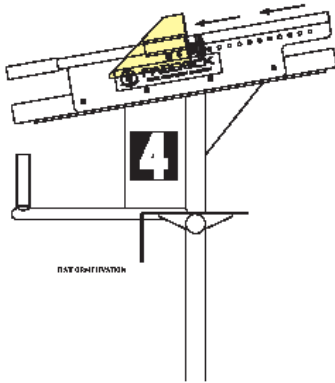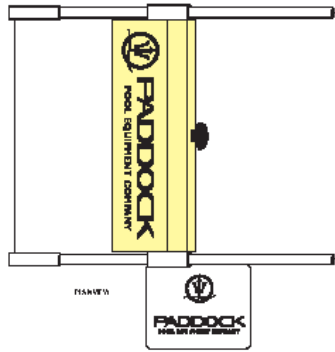

KICKWEDGE IN FORWARD POSITION WITH LOCKING PINS ENGAGED IN THE FIRST LOCKING POSITION.

GENERAL OPERATION AND MAINTENANCE:

KICK WEDGE OPERATION:

1. TURN ADJUSTMENT KNOB AND HOLD TO UNLOCK PINS
2. SLIDE KICKWEDGE TO DESIRED POSITION
3. RELEASE LOCKING PINS TO SECURE KICKWEDGE IN PLACE


MAKE SURE BOTH LOCKING PINS HAVE ENGAGED . FAILURE TO LOCK PINS COULD RESULT IN BODILY HARM AND EQUIPMENT DAMAGE.

MAINTENANCE FOR STARTING BLOCKS:

1. WASH DOWN BLOCKS ROUTINELY TO REMOVE DIRT AND DEBRIS
2. FOLLOW GENERAL STAINLESS STEEL CLEANING PROCEDURES FOR CLEANING NON MOVING PARTS.
3. CLEANING THE SLIDE RAILS (CLEAN WEEKLY OR AS NEEDED)
PREVENT INJURY OR DAMAGE TO EQUIPMENT.
 - A. USE "ZUD" TO CLEAN ANY HARD WATER MARKS. DO NOT USE AN ABRASIVE PAD AND/OR STEEL WOOL FOR CLEANING BLOCKS
 - B. USE "SHEILA SHINE" FOR PROTECTION AND LUBRICATION FOR SLIDE RAILS
4. LOCKING PINS MUST BE LUBRICATED MONTHLY OR AS NEEDED TO ENSURE PROPER OPERATION (SEE LOCKING PIN FIG.)

Paddock Pool Equipment Co., Inc.
555 Paddock Parkway
Rock Hill, SC 29730
Ph: 803-324-1111

LOCKING PIN MAINTENANCE

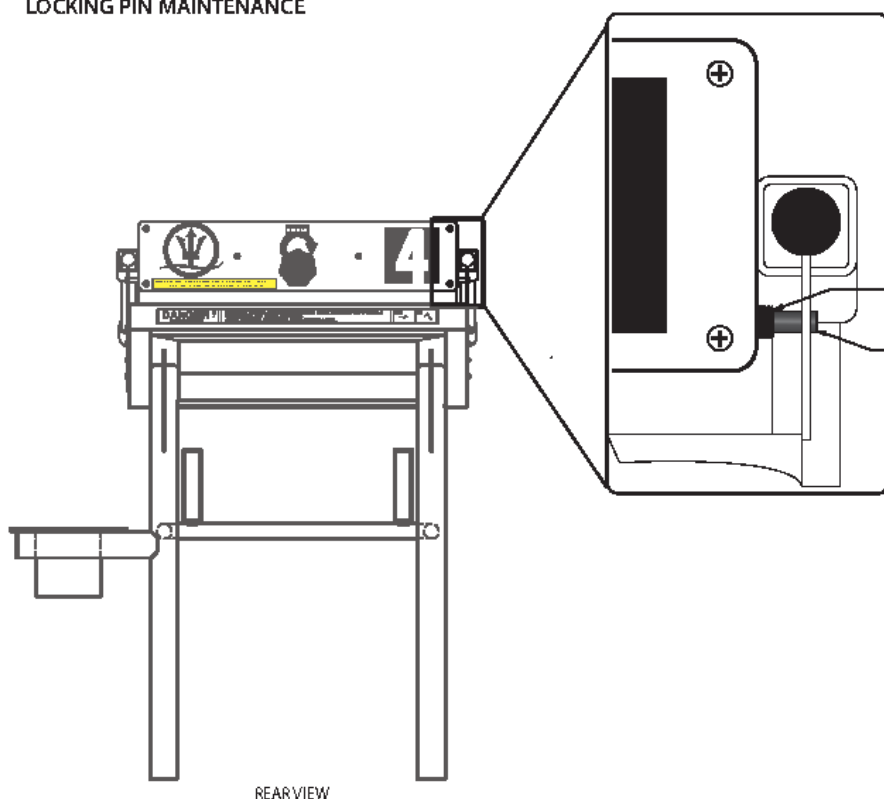


LOCKING PINS MUST BE LUBRICATED IN DENOTED AREA MONTHLY OR AS NEEDED TO INSURE PROPER OPERATION. LUBRICATE WITH A WATER RESISTANT OIL OR GREASE.

LOCKING PINS - WHEN ADJUSTMENT KNOB ON BACK IS TURNED PIN WILL DISENGAGE ALLOWING KICK WEDGE TO BE MOVED INTO A NEW POSITION. ONCE KICK WEDGE IS PLACED INTO DESIRED LOCATION, RELEASE THE ADJUSTMENT KNOB TO LOCK PINS IN PLACE.

WARNING- MAKE SURE LOCKING PINS ARE PROPERLY ENGAGED TO PREVENT INJURY OR DAMAGE TO EQUIPMENT.

KICK WEDGE ADJUSTMENT MAY REQUIRE TWO HANDS TO MOVE, IF THE SLIDE RAILS HAVE NOT BEEN CLEANED AND LUBRICATED.

Paddock Pool Equipment Co., Inc.
555 Paddock Parkway
Rock Hill, SC 29730
Ph: 803-324-1111

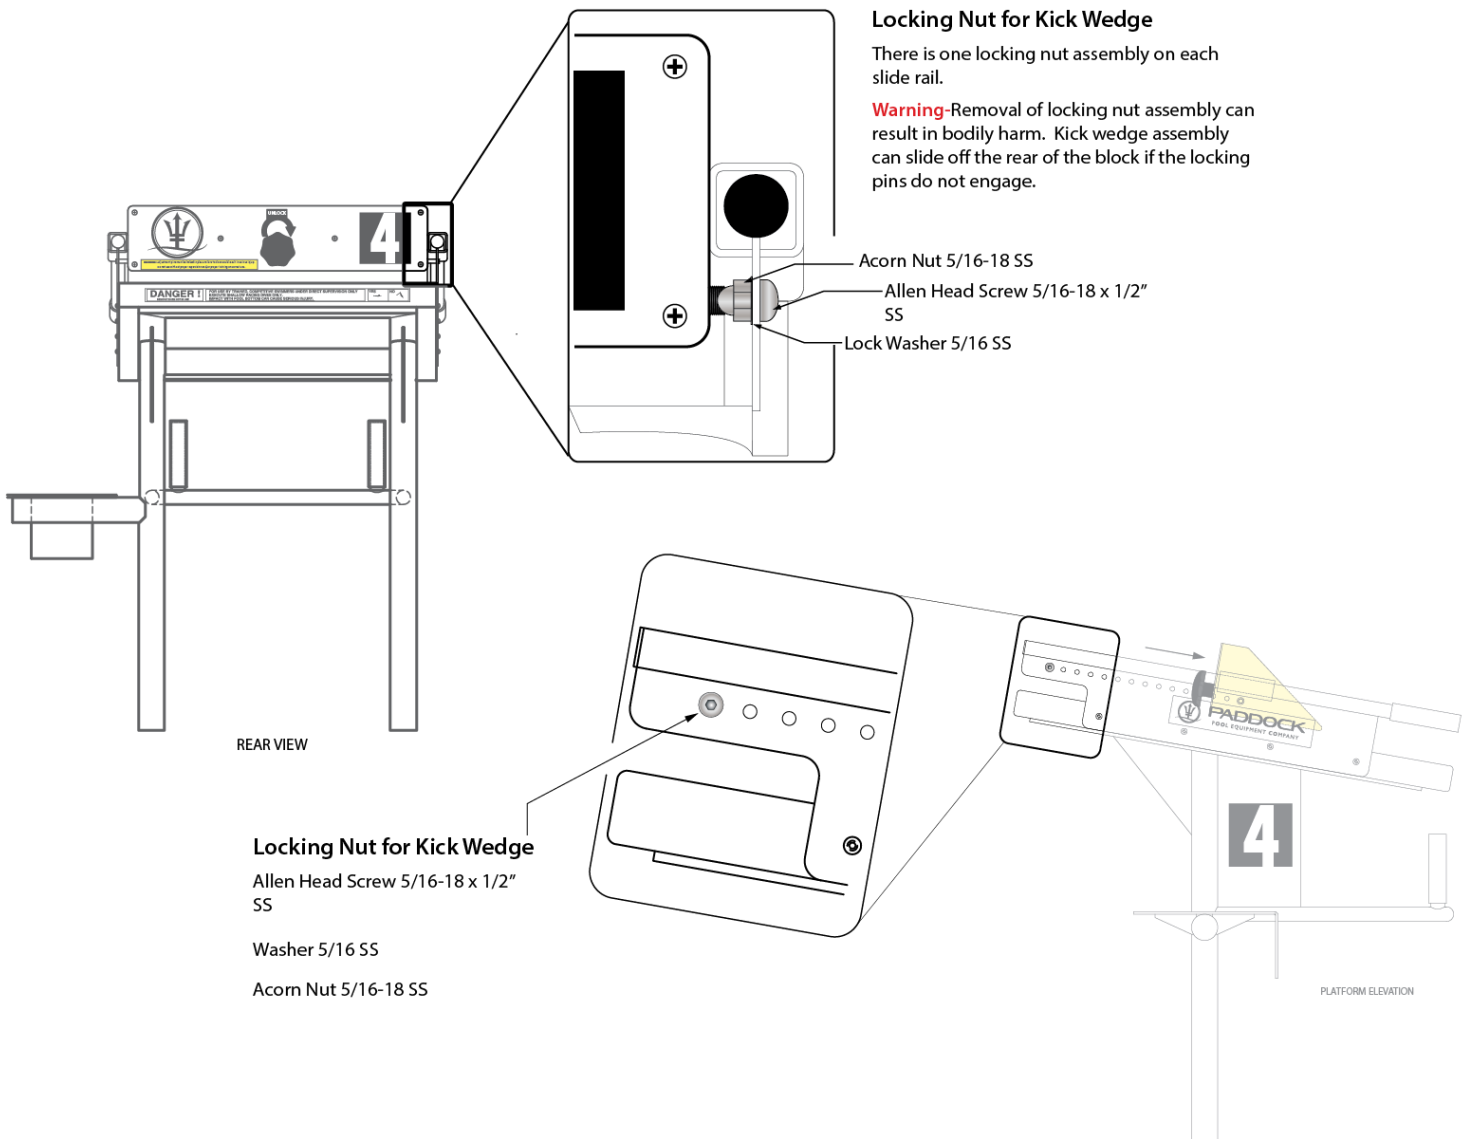

For questions concerning the usage of our equipment, please contact Paddock Pool Equipment Co., customer service.