

1 Hybrid mold ready

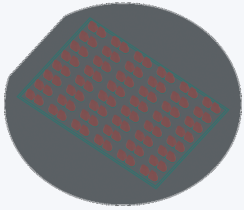


Parylene-coated mold

2 Pour PDMS

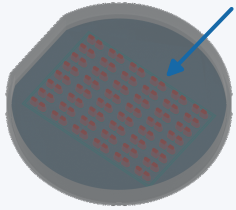


Fill below insert tops

3 Degas in rack

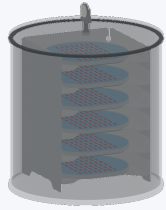


Until bubbles clear

4 Cure in rack

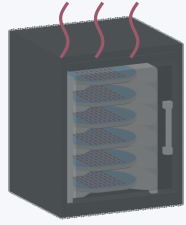

100 °C for 1 h


5 Demold cast

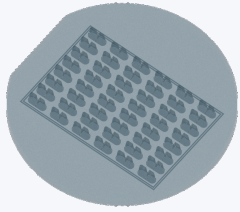

Peel from the corners


6 Tape and trim

Masking tape Cutter

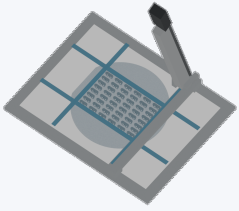

108 × 72 mm

7 Bond and autoclave

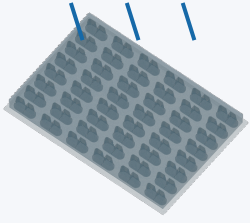

121 °C for 15 min


8 Frame assembly

Adhesive



Seat glass-side up

9 Cure and prepare

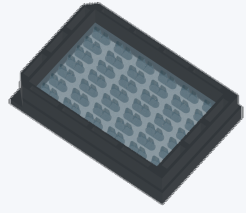

3 d cure; then plasma