

1 Hybrid mold ready

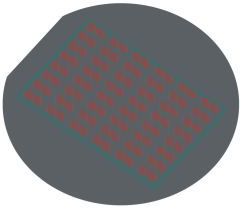


Parylene-coated mold

2 Pour PDMS

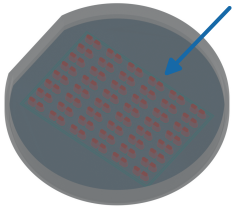


Fill below insert tops

3 Degas in rack

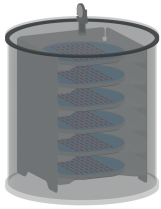


Until bubbles clear

4 Cure in rack

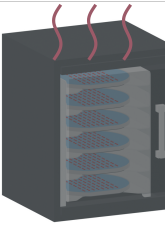


100 °C for 1 h

5 Demold cast

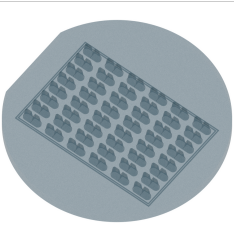


Peel from the corners

6 Tape and trim

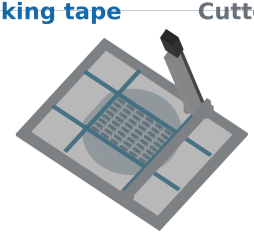


108 × 72 mm

7 Bond and autoclave

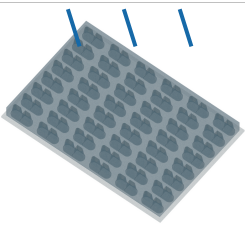


121 °C for 15 min

8 Frame assembly

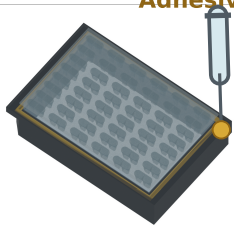

Seat glass-side up

9 Cure and prepare

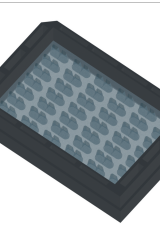

3 d cure; then plasma