





FASTag

Installation Process / Steps










GENERAL INSTRUCTIONS

- FASTag to be pasted on Glass Windshield from Inside of the Vehicle on Left side of IRVM while sitting at co-driver seat.
- FASTag once pasted should be clearly visible from outside and inside of the car from edge to edge
- FASTag adhering surface must be smooth and be free from oil and dust
- Never use working gloves for pasting
- Once pasted, removal of FASTag can lead to breakage of Tag from inside and it may not function.

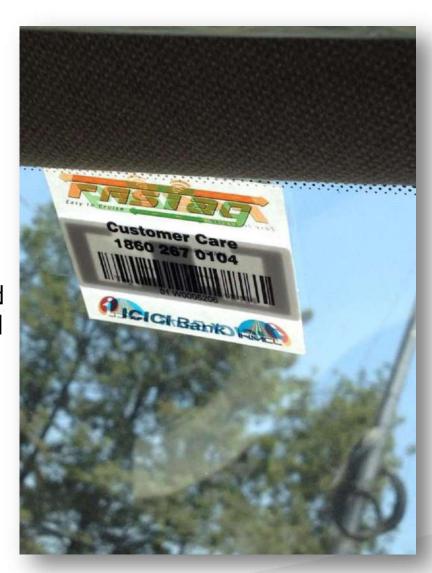



INSTALLATION PROCESS

- Clean Glass inside surface area to be dust free
- Remove protective Sheet (Release paper) from FASTag
- Put IRVM in straight position i.e. 90 degree with ground level and both sides of IRVM should be equidistant to windshield glass.
- Fix FASTag on the windshield (codriver side) from inside of vehicle taking reference from IRVM.
- The detailed process of installation of FASTag on vehicle windshield is explained in subsequent slides





IN STALLATION AREA OF FASTag

- For the Purpose of Identifying the Installation Area of FASTag, all MSIL models can be classified in 2 categories
 - 1. Vehicles having Windshield with Straight Ceramic Line
 - 0 Ignis, Celerio, Ertiga, Swih, Tour, Gypsy, EECO, Omni and Super Carry
 - 2. Vehicles having Windshield with V-Shape Ceramic Line
 - 0 Brezza, S-Cross, CIAZ, Wagon R, Alto, K10, Dzire, Baleno













WINDSHIELD TYPE -1 Straight Ceramic Line

















WINDSHIELD TYPE -2 V Shaped Ceramic Line







Identification of Installation Area of FASTag on Type 1 Vehicles




INSTALLATION AREAOF FASTag

To be placed towards the Centre of Windshield on the Top side but slightly away from the edge of IRVM





INSTALLATION AREA OF FASTag: WPE-1

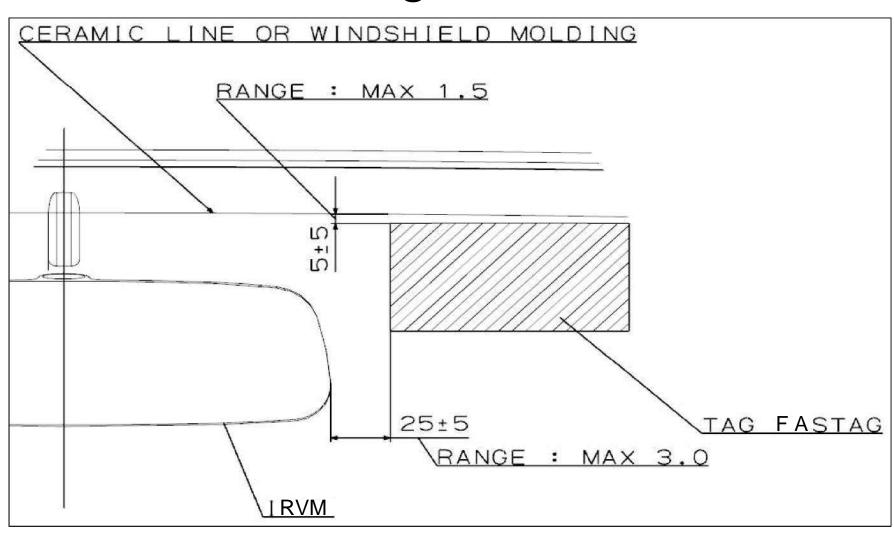




INSTALLATION AREA OF FASTag: WPE -1

 Model wise "Ideal Gap" of FASTag from Edges of IRVM and Top side of Windshield Molding or Ceramic Trim

S. No.	Models	From IRVM Edge	From Ceramic Trim
1	Ignis, Celerio, Tour, Ertiga, Super Carry, Swift	25	5
2	Gypsy, EECO, Omni	40	5

* In Millimeters



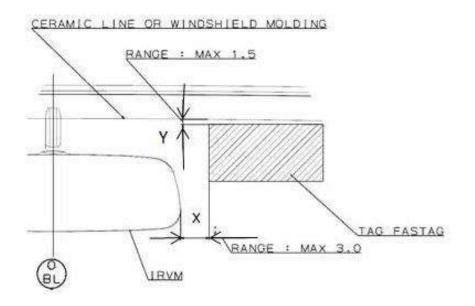

S.No.	Models	X (dist from IRVM edge)	Y (From Ceramic Trim line)	
1	DzireTour	30	5	
2	Swift	30	5	
3	NewSwift	40	5	
4	Gypsy	40	5	
5	Eeco	45	5	
6	Omni	40	5	
7	SuperCarry	25	5	
8	Ignis	25	5	
9	Celerio	25	5	
10	Ertiga	25	5	
Tolerance on dim. (X & Y) +5mm				

Note:In Case of Type 1 It is recommended to maintain distance "X" & "Y" as much as possible as per table mentioned.



INSTALLATION AREA OF FASTag: WPE -1

Actual View from Outside of Vehicle





INSTALLATION AREA OF FASTag: WPE -1

Actual View from Inside of Vehicle

(sitting at Codriver seat)






Identification of Installation Area of FASTag on Type 2 Vehicles




INSTALLATION AREA OF FASTag

To be placed towards the Centre of Windshield on the Top side but slightly away from the edge of IRVM and "NOT COVERED" behind the V Shaped Ceramic Line

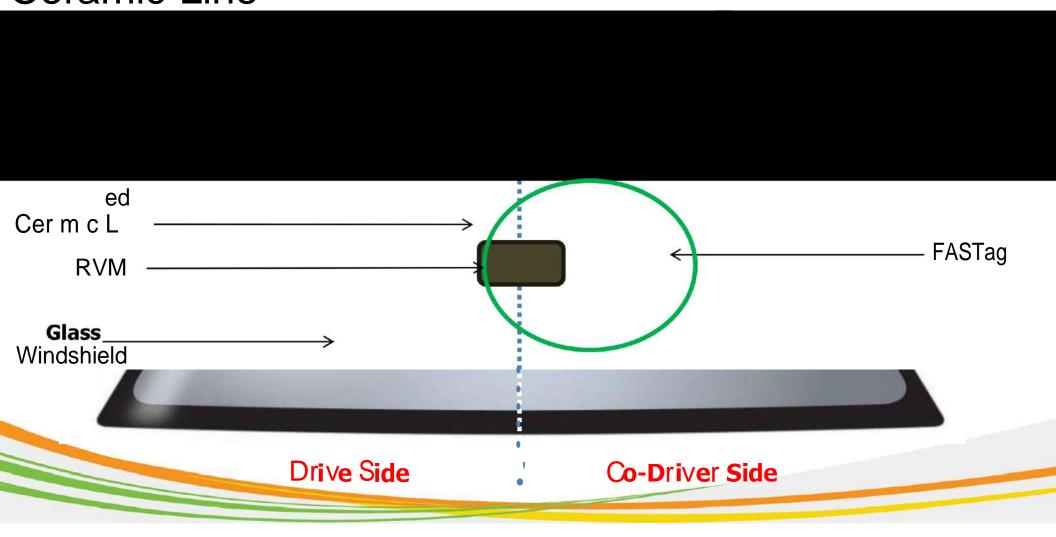



IN STALLATION AREA OF FASTag: WPE **-2**

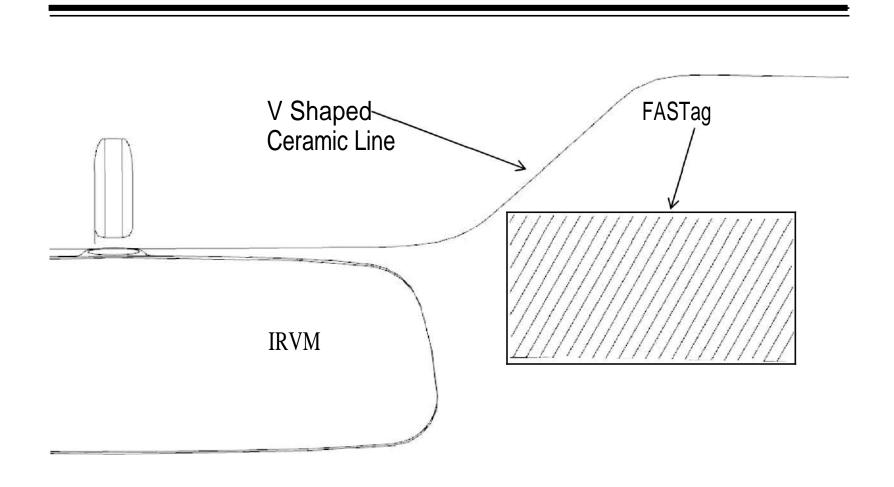




IN STALLATION AREA OF FASTag: WPE -2

Model wise Ideal Gap of FASTag from Edge of IRVM and "NOTCOVERED" behind the V-Shaped Ceramic Line

S. No.	I*lodels	From IRVM Edge (a)
1	Alto 800, K-10, WagonR	25
2	Ciaz, S-Cross, Brezza, Baleno, Dzire	40

Note In Case of Type 2 vehicles also, FASTag should place as close as possible to Ceramic Line. (Maintaining distance "a" & avoiding pasting tag behind ceramic lining) - (it is recommended to maintain distance "a" & "b" as much as possible as per table mentioned in below slide.

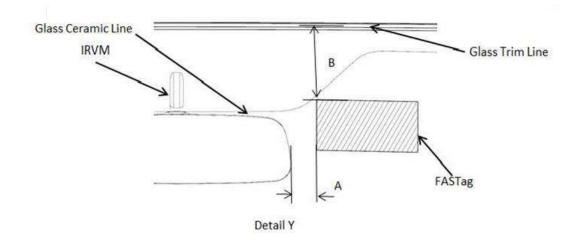


S.No.	Models	A (dist from RVMedge)	B (From Glass TrimLine)
1	Alto 800/K-10	25	79
2	WagonR	25	83
3	Ciaz	35	107
4	S Cross	40	152
5	Vitara Brezza	40	100
6	Baleno	40	94
7	New Dzire	40	120


Tolerance on dim. (A & B):5mm



INSTALLATION AREA OF FASTag: TYPE-2

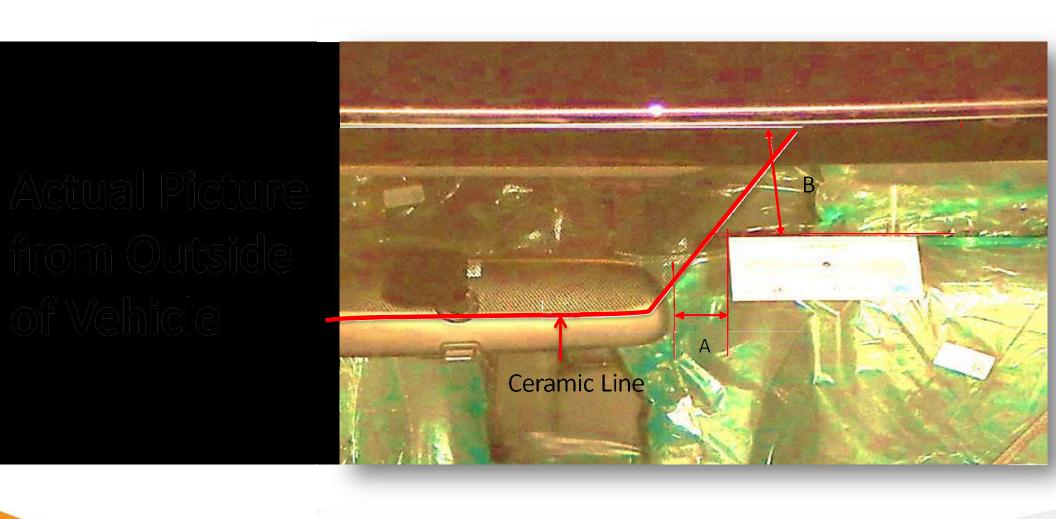

Installation Area of FASTag: TYPE2

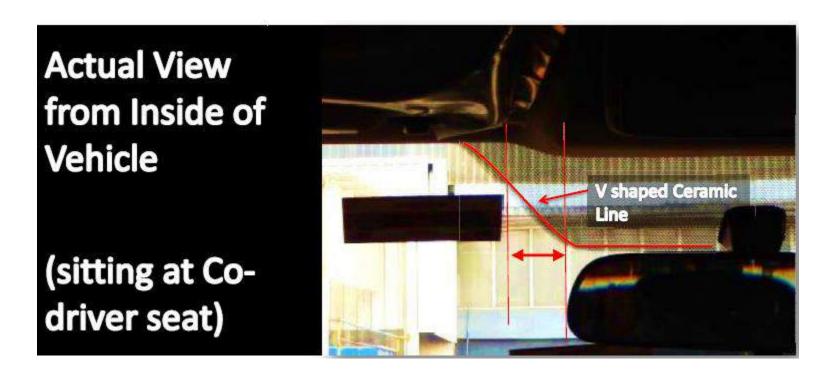



INSTALLATION AREA OF FASTag: WPE **-2**





Note:

- 1. Once pasted, removal of FASTag can lead to breakage of Tag from inside And it may not function as per requirement. This May then have to be replaced by a NEW Tag resulting in Additional cost for the Dealer
- 2. FASTag should NOT BE COVERED Behind the Ceramic Line as it may lead to non-detection of Tag at Toll-plaza





DRIVE THROUGH TOLL PLAZAS LIKE A VIP.

Get your FASTag today

