
Linde Service Guide

Special equipment sheet 01 - voltage transformer/heating system

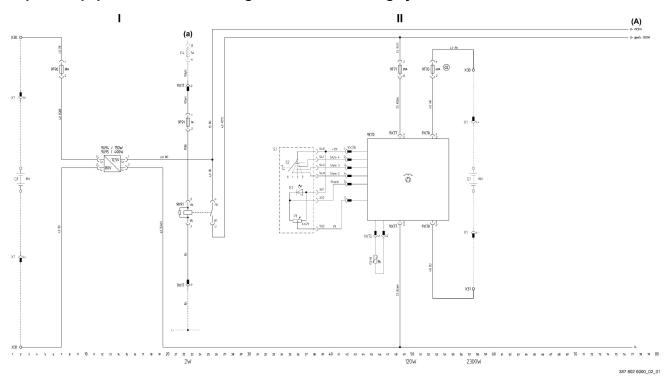

Arrangement

Voltage transformer, position 3

II 80-V heating system

Legend	
9E70	80-V heating system, 44-54
9F70	40-A fuse for 80-V heating system heating element, 53
9F71	20-A fuse for heating system blower, 50
9F90	30-A fuse for 80-V voltage transformer, position 3, 7
9F91	1-A fuse for 70-A relay coil for relay (voltage transformer, position 3), 23
9K91	70-A relay (U+ switched/voltage transformer, position 3), 23-26
9U94	150-W 80-V/12.5-V voltage transformer, 10-15
9U95	400-W 80-V/12.5-V voltage transformer, 10-15
X30	Central positive point, 2
X31	Central negative point, 2
9X17	15-pin connection assembly, transfer from basic equipment to special equipment, 23
9X70	2-pin connection assembly, heating system heating element, 53

2-pin connection assembly, heating system blower, 48-50

9X77

Wire colours

BK Black BN Brown BU Blue GN Green GΥ Grey Orange OG RD Red VTViolet WH White YΕ Yellow

The number in front of the wire colour refers to the wire cross-section

Wires with unspecified cross-section = 0.5 mm^2

Notes

(A) Voltage transformer, position 3

(a) 13-V voltage transformer, basic equipment