# EEC133 - Radiation Fundamentals and Basic Antennas

## Tao Wang

# December 12, 2024

# Contents

1	Coo	ordinates and Units	3
	1.1	Spherical Coordinate	3
	1.2	Radian and Steradian	3
2	Way	ve Radiation	3
	2.1	Power Carried By the Wave	4
	2.2	Isotropic Radiator	5
	2.3	Directivity	5
	2.4	Beamwidth	6
3	Ant	enna	6
	3.1	What Makes a Good Antenna?	6
	3.2	Antenna Parameters	7
	3.3		7
	3.4	Power Dissipated by the Antenna	7
	3.5	Optimize Power Dissipation	8
	3.6	Optimize Power Received	9
	3.7		10
	3.8	Antenna Links	11
4	Max	xwell's Equation 1	11
	4.1	Inhomogeneous Wave Equation	12
	4.2	Vector Potential and Gauges	13
	4.3	Interesting Property	14
5	Ret	arded Potential	L4
6	The	e Hertzian Dipole	۱5
	6.1	Derivation	15
	6.2		16
7	Sma	all Dipole Antenna 1	18
8	Fini	ite Dipole Antenna 1	18

	Loop Antenna 9.1 Small Loop Antenna	<b>18</b> 19
10	Antenna Array	19
11	Phase Array Antennas	19
	11.1 N-Element Array	19

### 1 Coordinates and Units

### 1.1 Spherical Coordinate

A position in spherical coordinate is characterized by  $R, \theta, \phi$ . An infinitesimal surface area patch, dA, is  $dA = R^2 \sin(\theta) d\theta d\phi$ .

 $d\Omega = \sin(\theta)d\theta d\phi$  is defined as the **solid angle**. Therefore,  $R^2 d\Omega$  is the infinitesimal surface area patch.

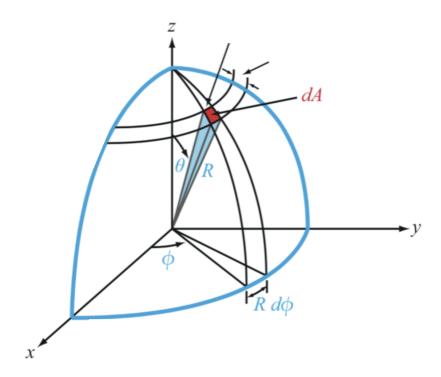


Figure 1: Spherical Coordinate

#### 1.2 Radian and Steradian

- Radian: measure of angle.  $s = r\theta$ , where s is the arc length, r is the radius, and  $\theta$  is the angle in radian.
- Steradian: measure of *solid angle*.  $A = r^2 \Omega$ , where A is the surface area patch, r is the radius, and  $\Omega$  is the solid angle.

#### 2 Wave Radiation

The wave propagates spherically according to the Maxwell's Equations. Moreover, we could approximate the radiated wave to be a plain wave because the wavefront looks flat and field is approximately constant.

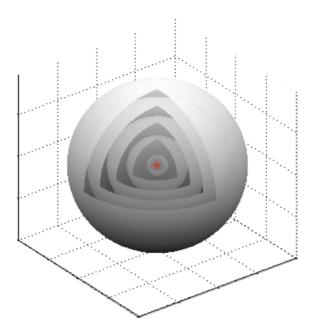


Figure 2: Spherical Electromagnetic Disturbances

### 2.1 Power Carried By the Wave

The Poynting vector associated with the wave traveling in a lossless medium:

$$\vec{S}_{av} = \hat{r}S(r, \theta, \phi) = \hat{r}f(r)U(\theta, \phi)$$

where  $U(\theta, \phi)$  is the **Radiation Intensity**. We can find the total power by integrating the Poynting Vector over the surface area.

$$\begin{split} P(r) &= \int_{\mathrm{Sphere}} \vec{S}_{av} \cdot d\vec{A} \\ &= \int_{0}^{2\pi} \int_{0}^{\pi} \hat{r} f(r) U(\theta, \phi) \cdot \hat{r} r^{2} \sin(\theta) d\theta d\phi \end{split}$$

We don't need to integrate the Poynting Vector over the radius because the wave can only be at one radial distance away from the center at a given time.

Since the integral doesn't depend on r, we have

$$P(r) = f(r)r^{2} \int_{0}^{2\pi} \int_{0}^{\pi} U(\theta, \phi) \sin(\theta) d\theta d\phi$$

for simplicity, assume  $f(r) = \frac{1}{r^2}$ , then

$$P(r) = \int U(\theta, \phi) d\Omega$$

Therefore, the total radiated power is constant with r due to the conservation of energy.

Also, since total power = sum of Radiation Intensity  $\times$  solid angle, the **Radiation Intensity is in Power per Steradian**.

### 2.2 Isotropic Radiator

The Isotropic Radiator is an antenna that radiates equally in all directions; The radiation intensity is the same for all direction. Then,

$$U(\theta, \phi) = U_0$$

Note,

$$P_{rad} = \int U(\theta, \phi) d\Omega = U_0 \int d\Omega = U_0 4\pi$$

Therefore,

$$U_0 = \frac{P_{rad}}{4\pi}$$

We can see that the unit of  $U_0$  is  $\frac{\text{Watts}}{\text{Steradian}}$ .

#### 2.3 Directivity

Since the radiation intensity,  $U(\phi, \theta)$ , is dependent of the total radiated power, we want to define another quantity that is independent of the radiated power.

The **directivity pattern** of an antenna is the radiation intensity normalized by the radiation intensity of an isotropic radiator, which is

$$D(\theta,\phi) = \frac{U(\phi,\theta)}{U_0} = 4\pi \frac{U(\theta,\phi)}{P_{rad}}$$

Notice that

$$\int_{\text{sphere}} D(\theta, \phi) d\Omega = 4\pi$$

Since  $D(\theta, \phi) = U(\theta, \phi)(\frac{4\pi}{P_{rad}})$  and the sum of  $D(\theta, \phi)$  is constant in one spherical shell, we know that **more radiation intensity in one direction means less in another** since they sum to a number.

We'll define another quantity, the **Directivity**, as

$$D_0 = \max\{D_{\theta,\phi}(\theta,\phi)\}\$$

The directivity can also be written in terms of the normalized radiation intensity.

$$D_0 = \frac{4\pi}{\Omega_p} = \frac{4\pi}{\int_{\text{Sphere}} F(\theta, \phi) d\Omega}$$

where  $\Omega_p$  is the **pattern solid angle**. The smaller it is, the greater the directivity.

The integral integrates the normalized radiation intensity,  $F(\theta, \phi)$  over all direction from the sphere's center.

#### 2.4 Beamwidth

Beamwidth tells us how much the opening is for a lobe. A lobe is a region where radiation intensity is the highest.

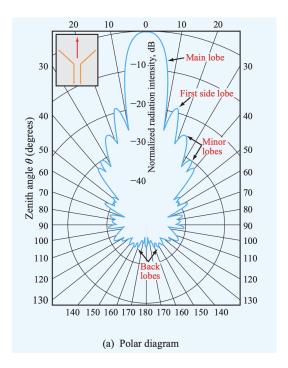


Figure 3: Polar Plot of Radiation Intensity

The half power beamwidth is

$$\theta_2 - \theta_1$$

where  $\theta_2$  is the angle where the normalized radiation intensity is  $\frac{1}{2}$ . It occurs at  $\theta = \frac{\pi}{4}$  and  $\theta = \frac{3\pi}{4}$ .

## 3 Antenna

#### 3.1 What Makes a Good Antenna?

- Good Radiation Pattern
- Good matching (nice circuit properties)
- Good size

#### 3.2 Antenna Parameters

• Radiation Intensity ( $\frac{\text{Watts}}{\text{Steradian}}$ ): the amount of power radiated by the antenna to different directions.

$$U(\theta, \phi)$$

• Normalized Radiation Intensity (Unitless)

$$F(\theta, \phi) = \frac{U(\theta, \phi)}{U_{max}}$$

• Directivity Pattern  $(\frac{1}{\text{Steradian}})$ : the radiation intensity to different directions but normalized by a constant.

$$D(\theta, \phi) = \frac{U(\theta, \phi)}{U_0} = 4\pi \frac{U(\theta, \phi)}{P_{rad}}$$

• Directivity  $(\frac{1}{\text{Steradian}})$ :

$$D_0 = \max\{D(\theta, \phi)\}\$$

• Beamwidth (Steradian): the amount of opening where radiation intensity is the highest. Note that high directivity gives small beamwidth and vice versa.

$$\Omega_A \approx \frac{4\pi}{D_0}$$

• Gain

$$G_0 = \text{Efficiency} \times D_0$$

where efficiency is  $\frac{P_{rad}}{P_{in}}$ 

### 3.3 Circuit Model of an Antenna

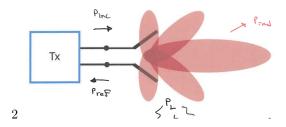


Figure 4: Circuit Model of an Antenna

#### 3.4 Power Dissipated by the Antenna

Since the antenna dissipates power, radiate power, and reflects the transmitted power, we can model it as a load impedance that has resistance and reactance.

$$Z_A = R_L + R_{rad} + jX_A$$

We know that

$$P_{in} = \frac{1}{2}|\tilde{I}|^2(R_{rad} + R_L)$$

Therefore,

$$e = \frac{P_{rad}}{P_{in}} = \frac{\frac{1}{2}|\tilde{I}|^2(R_{rad})}{P_{in} = \frac{1}{2}|\tilde{I}|^2(R_{rad} + R_L)} = \frac{R_{rad}}{R_{rad} + R_L}$$

### 3.5 Optimize Power Dissipation

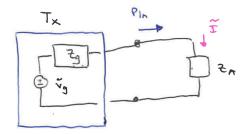


Figure 5: Thevenin Equivalent of Transmitter with Antenna as Load

We can model the antenna as an impedance,  $Z_A$ , and the transmitted signal as a thevenin equivalent.

Using some calculus, we will find that the maximum power is transferred to  $\mathbb{Z}_A$  when

$$Z_g = Z_A^*$$

When power is maximally transferred,  $P_{in}$  is

$$P_{in} = \frac{1}{2}|\tilde{I}|^2 R_A = \frac{1}{2} \left(\frac{|\tilde{V}_{TH}|}{2R_A}\right)^2 R_A = \frac{|\tilde{V}_{TH}|^2}{8R_A}$$

## 3.6 Optimize Power Received

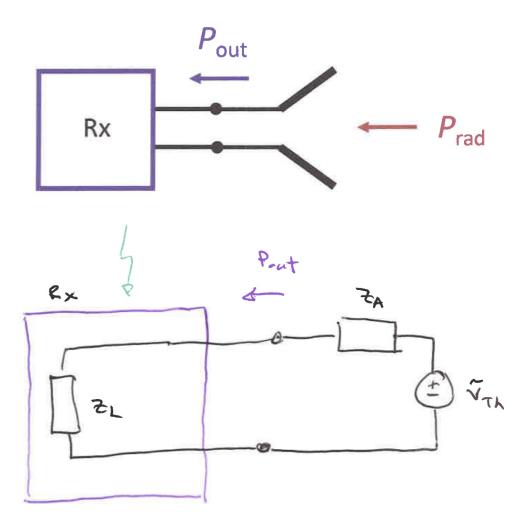


Figure 6: Thevenin Equivalent of Receiver with Antenna as Transmitter

Our goal is to have the antenna's power fully dissipated by  $Z_L$ . This is an identical problem as optimizing  $P_{in}$ . Therefore,

$$Z_g = Z_A^*$$

In this case,  $P_{out}$  is

$$P_{out} = \frac{1}{2} |\tilde{I}|^2 R_A = \frac{1}{2} \left( \frac{|\tilde{V}_{TH}|}{2R_A} \right)^2 R_A = \frac{|\tilde{V}_{TH}|^2}{8R_A}$$

## 3.7 Thevenin Voltage of the Antenna

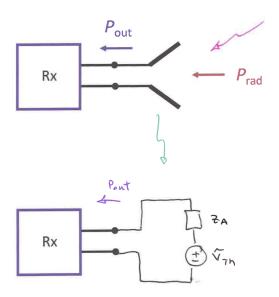


Figure 7: Thevenin Voltage of Antenna

Power delivered to a matched load with a lossless antenna

$$P_{out} = A_e S_i$$

$$\frac{|\tilde{V}_{TH}|^2}{8R_A} = A_e S_i$$

$$|\tilde{V}_{TH}| = \sqrt{8R_A A_e S_i}$$

#### 3.8 Antenna Links

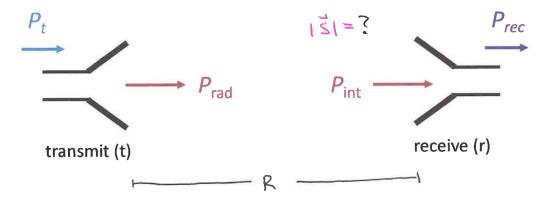


Figure 8: Antenna Link

When one antenna transmits a signal to the other antenna, the power ratio between the transmitter and the receiver could be modeled by the **Friis Transmission Equation**.

$$\frac{P_{rec}}{P_t} = e_r e_t \left(\frac{\lambda}{4\pi R}\right)^2 D_r D_t$$
$$= \frac{e_r e_t A_r A_t}{\lambda^2 R^2}$$

where  $A_r$ ,  $A_t$  are the effective area of the antenna,  $e_r$ ,  $e_t$  are the efficiency of the antenna,  $\lambda$  is the wavelength of the transmitted wave, and  $D_r$ ,  $D_t$  are the directivity of the antennas.

Moreover, we could write the time average power transmitted by the antenna as:

$$|\vec{S}_{avg}| = \frac{e_t P_t}{4\pi r^2} D_t$$

Using this formula and  $\vec{S}_{av}=\hat{z}\frac{|\tilde{E}|^2}{2\eta}$ , we can find the electric field magnitude carried by the wave.

The signal to noise ratio:  $10 \log \left( \frac{P_{\text{receive}}}{P_{\text{noise}}} \right)$ 

## 4 Maxwell's Equation

The divergence of E field is proportional to enclosed charge because more charges produces more E field.

$$\nabla \cdot \vec{E} = \frac{\rho}{\epsilon}$$

$$\oint \vec{E} \cdot d\vec{A} = \frac{Q_{enclosed}}{\epsilon_0}$$

The divergence of H field is zero because there's no magnetic monopole. H field will enter and leave at every point.

$$\nabla \cdot \vec{H} = 0$$

$$\oint \vec{B} \cdot d\vec{A} = 0$$

The curl of the E field is zero in static case, just like Kirchhoff's Voltage law that sums the voltage to 0. The dynamic case shows that the curl is proportional to the change in magnetic flux through the loop.

$$\nabla \times \vec{E} = -\mu \frac{\partial \vec{H}}{\partial t}$$

$$\oint \vec{E} \cdot d\vec{l} = -\frac{d\phi_B}{dt}$$

The curl of the H field is proportional to the current density plus the change in E flux through the loop.

$$\nabla \times \vec{H} = \epsilon \frac{\partial \vec{E}}{\partial t}$$

$$\oint \vec{B} \cdot d\vec{l} = \mu_0 i + \mu_0 \epsilon_0 \frac{d\phi_E}{dt}$$

#### 4.1 Inhomogeneous Wave Equation

When we construct the wave equation with Maxwell's Equation with source, we get

$$\nabla^2 \vec{E} - \mu_0 \epsilon_0 \frac{\partial^2}{\partial t^2} \vec{E} = \nabla \left( \frac{\rho}{\epsilon_0} \right) + \mu_0 \frac{\partial}{\partial t} \vec{J}$$

We can think of the left hand side of the equation as a system created by physical laws, and the right hand side as the input to the system. After the input (charges and currents) is applied, the system will output some E field.

It's similar to the motion of a spring and mass system.

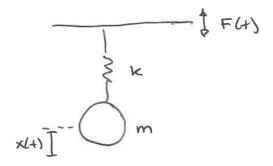


Figure 9: Spring-Mass System

$$m\frac{d^2x}{dt^2} = -kx - bv + F(t)$$

By rearranging the terms, we get

$$m\frac{d^2x}{dt^2} + b\frac{dx}{dt} + kx = F(t)$$

Notice that the left hand side is a system that spits out the position of the mass, and the right hand side is the applied input force.

### 4.2 Vector Potential and Gauges

We define the **vector potential**,  $\vec{A}$ , as

$$\vec{B} = \nabla \times \vec{A}$$

Since  $\nabla \times \vec{E} = -\frac{\partial \vec{B}}{\partial t}$ 

$$\vec{E} = -\nabla \phi - \frac{\partial \vec{A}}{\partial t}$$

where  $\phi$  is the electrostatic potential.

As a result, the H and E field can be written in terms of the Vector Potential

$$\vec{H} = \frac{1}{\mu_0} \nabla \times \vec{A}$$

$$\vec{E} = -\nabla\phi - \frac{\partial\vec{A}}{\partial t}$$

#### 4.3 Interesting Property

$$\vec{A}_{new} = \vec{A} + \nabla \psi$$

Curl both sides

$$\frac{1}{\mu_0} \nabla \times \vec{A}_{new} = \frac{1}{\mu_0} \nabla \times \vec{A} + \frac{1}{\mu_0} \nabla \times \nabla \psi$$

Notice

$$\vec{H}_{new} = \vec{H}$$

In the case of an E field,

If 
$$\phi_{new} = \phi - \frac{\partial \psi}{\partial t}$$
, then  $\vec{E}_{new} = \vec{E}$ 

In summary,

$$\phi_{new} = \phi - \frac{\partial \psi}{\partial t}$$

and

$$\vec{A}_{new} = \vec{A} + \nabla \psi$$

implies

E and H field produced by  $\phi_{new}$  and  $\vec{A}_{new}$  are same as those made by  $\phi$  and  $\vec{A}$ 

### 5 Retarded Potential

The vector potential at a point r produced by a time varying current source,  $\widetilde{J}(\vec{r})$ .

$$\widetilde{A}(\vec{r}) = \int \frac{\mu_0 \widetilde{J}(\vec{r}) e^{-jkr}}{4\pi R} dV'$$

The key insight is that the wave will update the potential at the point r after some phase delay  $kr \propto \frac{r}{\lambda}$  because it takes times for the EM wave to travel to that location; that is, the potential cannot change instantaneously.

The retarded potential will allow us to calculate the fields radiated by the antenna because the antenna is driven by time varying current source.

## 6 The Hertzian Dipole

A very short  $(l \leq \frac{\lambda}{50})$  infinitesimally thin, wire carrying a uniform current:

$$\vec{J}(\vec{r'}) = I_0 \delta(x) \delta(y)$$

Recall that we are in sinusoidal steady state.

$$\rho(\vec{r},t) = \Re{\{\tilde{\rho}(\vec{r})e^{j\omega t}\}}$$

$$\vec{J}(\vec{r},t) = \Re{\{\tilde{J}(\vec{r})e^{j\omega t}\}}$$

#### 6.1 Derivation

Procedure to find the Antenna Parameters of the Hertzian Dipole.

1. Calculate  $\tilde{A}(\vec{r})$  using retarded potentials.

$$\tilde{A} = \frac{\mu_0}{4\pi} \int \frac{\vec{J}(\vec{r'})}{R} e^{-jkR} dV'$$

Since R = r and is approximately constant every point on the wire,

$$= \frac{\mu_0}{4\pi} \frac{e^{-jkr}}{r} \int \vec{J}(\vec{r'}) dV'$$

$$= \frac{\mu_0}{4\pi} \frac{e^{-jkr}}{r} \int \int \vec{J}(\vec{r'}) I_0 \delta(x) \delta(y) \cdot d\vec{A} dz$$

$$\frac{\mu_0}{4\pi} \frac{e^{-jkr}}{r} \int_{\frac{-l}{2}}^{\frac{l}{2}} I_0 \vec{z} dz$$

$$= \frac{\mu_0 I_0 l}{4\pi} \frac{e^{-jkr}}{r} \vec{z}$$

$$= \frac{\mu_0 I_0 l}{4\pi} \frac{e^{-jkr}}{r} (\cos(\theta) \hat{r} - \sin(\theta) \hat{\theta})$$

2. Find H and E fields from  $\tilde{A}(\vec{r})$ .

Taking the curl in spherical coordinate

$$\tilde{H} = \frac{1}{\mu_0} \frac{\mu_0 I_0 l e^{-jkr}}{4\pi} \left( \frac{j}{kr} + \frac{1}{(kr)^2} \right) \sin(\theta) \hat{\phi}$$

$$\tilde{E} = \frac{I_0 l k^2}{4\pi} \eta_0 e^{-jkr} \left( \left( \frac{1}{kr} - \frac{j}{(kr)^3} \right) 2 \cos(\theta) \hat{\phi} \right)$$

### 3. Break the H and E field into Near and Far Fields.

E field looks very complicated, so we will define two regions of kr that simplifies the expression

Near Field:  $kr << 1 \implies \frac{2\pi}{\lambda} r << 1$ 

$$\tilde{H}_{nF} = \frac{I_0 l}{4\pi r^2} \sin(\theta) \hat{\phi}$$

$$\tilde{E}_{nF} = \frac{ql}{4\pi\epsilon_0 r^3} (2\cos(\theta)\hat{r} + \sin(\theta)\hat{\theta})$$

Notice that it looks like an electrostatic dipole

Far Field: kr >> 1 (generally what we care about)

$$\tilde{H}_{FF} = \frac{\tilde{E}_{FF}}{\eta_0} \hat{\phi}$$

$$\tilde{E}_{FF} = j\eta_0 \frac{I_0 l k^2}{4\pi} e^{-jkr} \sin(\theta) \hat{\theta}$$

4. Find  $\vec{S}_{avg}$  and antenna parameters.

$$\vec{S}_{avg} = \frac{1}{2} \Re \{ \tilde{E} \times \tilde{H} \}$$

$$=\frac{1}{2\eta_0}|\tilde{E}_{FF}|^2\hat{r}$$

Therefore,

$$|\vec{S}_{avg}| = \frac{1}{2\eta_0} \left( \eta_0 \frac{Ilk}{4\pi r} \sin(\theta) \right)^2 = \frac{15\pi I_0^2}{r^2} \left( \frac{l}{\lambda} \right)^2 \sin^2(\theta)$$

#### 6.2 Antenna Parameter

A Hertzian Dipole is a type of dipole antenna with

$$l < \frac{\lambda}{50}$$

We knew that the power radiated would be  $\frac{1}{r^2}U(\theta,\phi)$ . Therefore, the **radiation** intensity of a Hertzian Dipole is

$$15\pi I_0^2 \left(\frac{l}{\lambda}\right)^2 \sin^2(\theta)$$

and the normalized radiation intensity is

$$F(\theta, \phi) = \sin^2(\theta)$$

The total radiated power is

$$P_{rad} = \int U(\theta, \phi) d\Omega = \frac{8\pi}{3}$$

The directivity pattern is

$$D(\theta, \phi) = \frac{U(\theta, \phi)}{\frac{P_{rad}}{4\pi}} = 1.5 \sin^2(\theta)$$

The **directivity** is  $D_0 = 1.5$ .

When the circuit model of a Hertzian Dipole Antenna is lossless, the radiation loss equals the  $R_{rad}$  of the antenna's equivalent resistance, which isotropic

$$R_{rad} = 80\pi^2 \left(\frac{l}{\lambda}\right)^2$$

Since  $l<\frac{\lambda}{50}$  for the Hertzian Dipole Antenna,

$$R_{rad} < 80\pi^2 \left(\frac{1}{50}\right)^2 = 0.32\Omega$$

We can see that the radiation resistance is very small, which could make it hard to match the resistance because the characteristic impedance of a transmission line is much larger.

Effective area of the antenna is

$$A_e = \frac{P_{int}}{S_i}$$

When the antenna receives signal, the lossless condition implies that all intercepted power

$$A_e = \frac{P_{int}}{S_i} = \frac{1}{8} \frac{|\tilde{V}_{oc}|^2}{R_{rad}} \frac{2\eta_0}{|\tilde{E}_i|^2}$$

Since,

$$|\tilde{V}_{oc}| \approx |\tilde{E}_i|$$

, we have

$$A_e = \frac{3}{8\pi}\lambda^2$$

## 7 Small Dipole Antenna

The short dipole antenna has no current at the ends of the antenna, unlike the Hertzian Dipole Antenna (HD Antenna) with constant current everywhere.

If we follow the steps of calculating vector potential of the HD Antenna, we will find that  $\tilde{A}$  is half of that of the HD Antenna. Thus, the small dipole antenna gives half of the E and H fields compared to the HD Antenna.

$$l \leq \frac{\lambda}{10}$$

$$\tilde{A} = \left(\frac{1}{2}\right) \frac{\mu_0 I_0 l}{4\pi} \frac{e^{-jkr}}{r} (\cos(\theta)\hat{r} - \sin(\theta)\hat{\theta})$$

$$U(\theta, \phi) = \frac{15\pi I_0^2 \left(\frac{l}{\lambda}\right)^2}{4} \sin^2(\theta)$$

$$P_{rad} = 10\pi^2 I_0^2 \left(\frac{l}{\lambda}\right)^2$$

$$D(\theta, \phi) = 1.5 \sin^2(\theta)$$

$$R_{rad} = 20\pi^2 \left(\frac{l}{\lambda}\right)^2$$

$$A_e = \frac{3\lambda^2}{8\pi}$$

## 8 Finite Dipole Antenna

Current goes to 0 at the end of the pole. There's a standing wave current pattern on the poles.

$$R_{in} = \frac{P_{rad}}{I_0^2 \sin^2\left(\frac{kl}{2}\right)}$$
$$R_{in} = \frac{R_{rad}}{\sin^2\left(\frac{kl}{2}\right)}$$

## 9 Loop Antenna

Loop antenna is the dual of the dipole antenna. Just like inductor and capacitor. Here, we'll examine the small loop antenna.

### 9.1 Small Loop Antenna

The small loop antenna has a radius,  $a << \frac{\lambda}{6\pi}$ .

At Far Fields  $(r >> \lambda)$ 

$$\widetilde{H}_{ff,\theta} = \frac{Ik^2(\pi a^2)}{4\pi r} e^{-jkr} \sin(\theta)$$

$$\widetilde{E}_{ff,\phi} = -\widetilde{H}_{\theta} \eta_0$$

$$D(\theta,\phi) = 1.5 \sin^2(\theta)$$

$$R_{rad} = 320\pi^6 \left(\frac{a}{\lambda}\right)^4 N^2$$

## 10 Antenna Array

Element Factor: common radiation property

Array Factor: interference property

Constructive interference

$$\Delta \phi = \alpha - kl \cos(\phi) = + -2\pi n$$

## 11 Phase Array Antennas

## 11.1 N-Element Array

- All element are identical (loops or dipole)
- All oriented in the same way
- Current in element m is  $I_m$
- Position of element m is  $\vec{h}_m$