O KIEM TRA TY LE 1:1

50 x 50 mm (5.0 x 5.0 cm)

Vintage Pattern Se

Stirrup Bag Pattern



This small size drawstring bag is easy to make.
The stirrup-shaped bag is designed to use a tooling leather strip on the outside edge and suede for the sides.
Pattern includes three tooling designs.
Finished size approx. 2-3/4"x6"x6-1/2".


tandy® Leather Factory
tandyleatherfactory.com

LeathercraftLibrary.com
DIGITAL MEDIA FOR LEATHERCRAFTERS


This premium has been published by Tandy Leather Factory, 1900 SE Loop 820, Ft. Worth, TX 76140. Copyright © 2012 by Tandy Leather Factory, all rights reserved.
The contents of this publication may not be reproduced either in whole or in part without the consent of the copyright owner.
Please respect the copyright by not forwarding or distributing this document.

Digital Downloads

This PDF package has been put together to give you options when it comes to printing. Some PDF file downloads may contain some documents larger than an 8-1/2" x 11" image. Pages and patterns that are larger than 8½x11 have been provided in two formats:

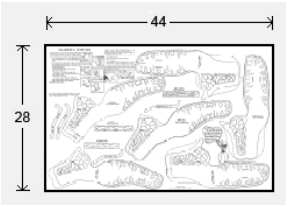

Full Size: If you would like to have a full size print out, take the full size pages to your local print shop and they can print it for you.
Tiled: The tiled pages give you the option of printing the larger patterns at home. You print the tiled pages and then assemble them to make the larger patterns.

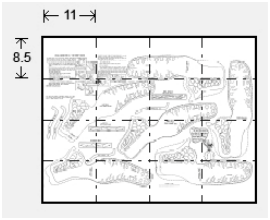

Pattern PDF files are typically laid out as follows: Cover (if applicable), instructions sheets (if applicable), pattern 1 – full sized, pattern 1 – tiled, pattern 2 – full sized, pattern 2 – tiled, pattern 3 – full sized, pattern 3 – tiled. …Etc.


Doodle Page PDF files are typically laid out as follows: Front – full sized, front – tiled, back – full sized, back – tiled (Some Doodle Pages do not have backs).

eBook PDF files contain 1 (one) full eBook. All pages in the PDF are full sized. This means that you may have to take the PDF to a print shop for certain oversized books if your home printer cannot print the larger pages.

Craftaid PDF files contain 1 (one) full Craftaid pattern or Craftaid pattern pack that has been converted into a tracing pattern. All pages in the PDF are full sized. This means that you may have to take the PDF to a print shop for certain oversized Craftaid patterns if your home printer cannot print the larger pages. ***NOTE: These digitized patterns do not include any of the physical plastic templates (Craftaids) that may be mentioned, nor does the purchase of this PDF file imply a promise to receive any physical plastic templates (Craftaids).***

NOTE: Digital kit patterns do not include any kit parts that they may reference.

Please note: When printing on a home printer, use the settings seen on the image to the right in the Page Handling area of the Adobe Reader print dialogue box. If your printer is cutting edges off, set "Page Scaling" to "Shrink to Printable Area". This will, however, decrease the size of the pattern a very small amount.

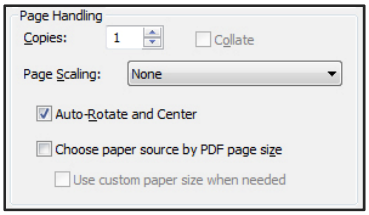

NOTE: Some patterns may reference tools, and other items no longer available.

NOTE: You may take this PDF file to your local print shop to have the full-size pages printed for your own personal use.

This premium has been published by Tandy Leather Factory, 1900 South East Loop 820, Ft. Worth, TX 76140. Copyright © 2011 by Tandy Leather Factory, all rights reserved. The contents of this publication may not be reproduced either in whole or in part without the consent of the copyright owner.
Please respect the copyright by not forwarding or distributing this document.

www.leathercraftlibrary.com

Stirrup Bag Kit

STOCK NO. 4372



KIT CONTAINS:

Pre-Cut, Pre-Punched
Leather Parts
Leather Lace
and Needle
Grommets
Drawstrings


YOU WILL NEED:

Grommet Setter-
Stock No. 7052
Anvil-
Stock No. 1808


Tandy LEATHER COMPANY®
AN EMPLOYEE
OWNERSHIP COMPANY


Distributed by Tandy Leather Co.
Fort Worth, Texas
A Division of Tandycrafts, Inc.

©Copyright 1989 by Tandy Leather Company, Fort Worth, TX 76101

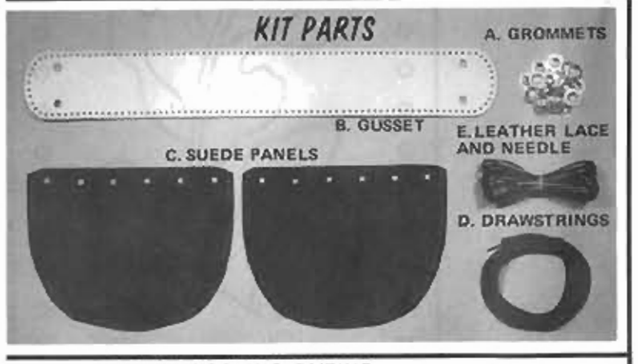


NOTE: DO ALL TOOLING, DYEING AND FINISHING BEFORE ASSEMBLY.

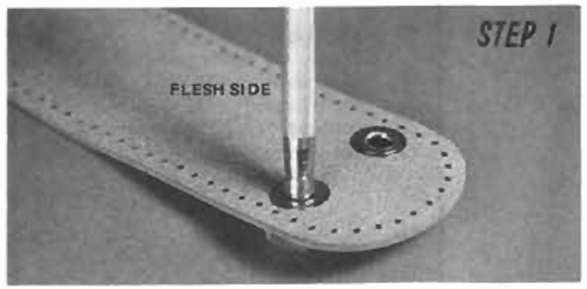

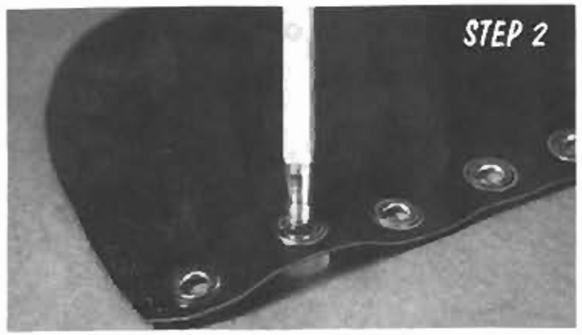


STEP 2: Set 6 grommets in 6 holes in one suede panel (C). Eyelet parts of grommets should be on front (good) side of panel. Repeat on other suede panel with 6 remaining grommets.

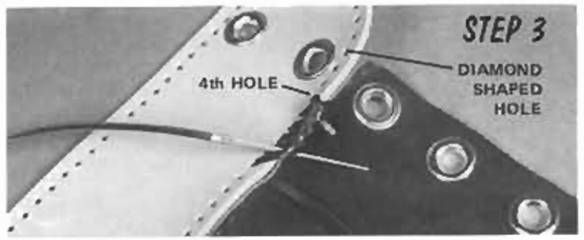

STEP 3: Line up diamond shaped hole in one end of gusset (B) over corner hole on left side of one suede panel (C), flesh (rough) side of gusset to back (rough) side of panel. Starting 4 holes down from diamond hole, double loop lace gusset to panel following double loop lacing instructions given on this sheet. Stop lacing when you reach second diamond shaped hole in gusset.




STEP 4: Line up second diamond shaped hole in gusset (B) over corner hole in left side of second suede panel (C), flesh (rough) side of gusset to back (rough) side of panel. Continue lacing around bag to starting point. Tie off lace as explained in double loop lacing instructions.

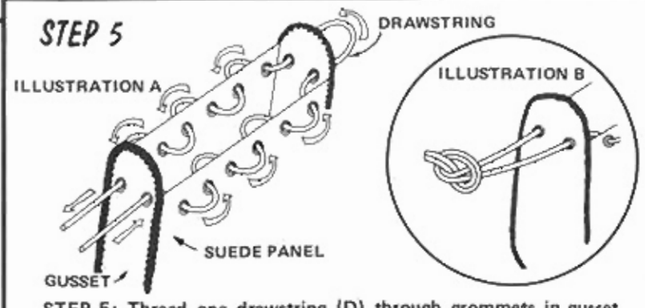


STEP 5: Thread one drawstring (D) through grommets in gusset and panels (see illustration A). Tie ends of drawstring together

Grommet Setting Instructions

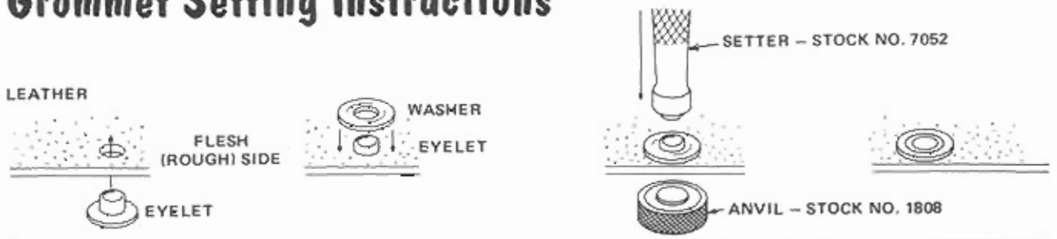

HOW TO LACE & SPLICE THE DOUBLE LOOP STITCH

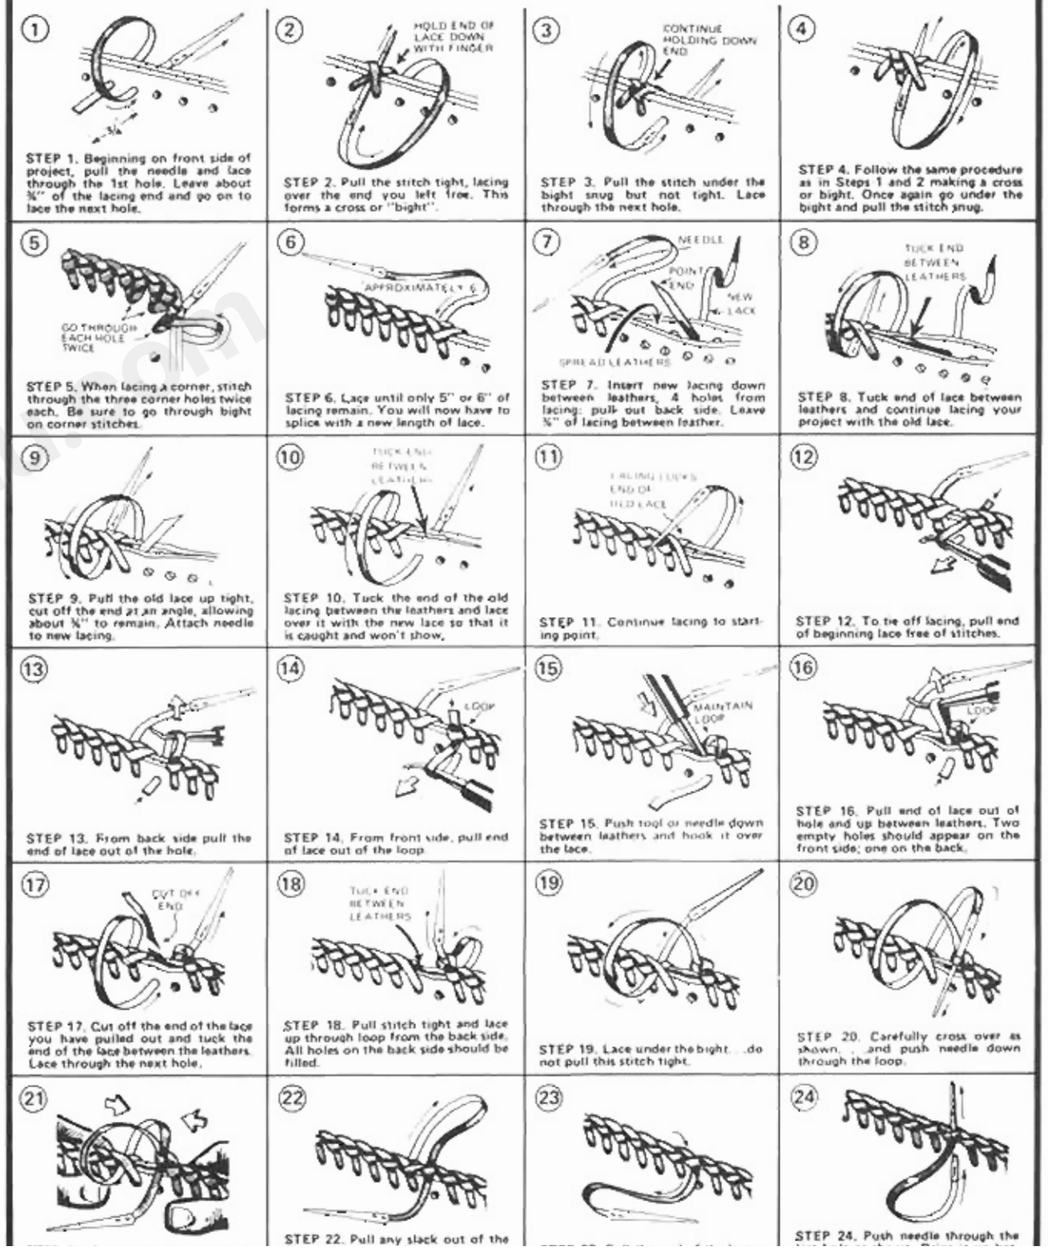

STEP 1. Beginning on front side of project, pull the needle and lace through the 1st hole. Leave about ¾" of the lacing end and go on to lace the next hole.

STEP 2. Pull the stitch tight, lacing over the end you left free. This forms a cross or "bight".

STEP 3. Pull the stitch under the bight snug but not tight. Lace through the next hole.

STEP 4. Follow the same procedure as in Steps 1 and 2 making a cross or bight. Once again go under the bight and pull the stitch snug.

STEP 5. When lacing a corner, stitch through the three corner holes twice each. Be sure to go through bight on corner stitches.

STEP 6. Lace until only 5" or 6" of lacing remain. You will now have to splice with a new length of lace.

STEP 7. Insert new lacing down between leathers, 4 holes from lacing; pull out back side. Leave ¾" of lacing between feather.

STEP 8. Tuck end of lace between leathers and continue lacing your project with the old lace.

STEP 9. Pull the old lace up tight, cut off the end at an angle, allowing about ¼" to remain. Attach needle to new lacing.

STEP 10. Tuck the end of the old lacing between the leathers and lace over it with the new lace so that it is caught and won't show.

STEP 11. Continue lacing to starting point.

STEP 12. To tie off lacing, pull end of beginning lace free of stitches.

STEP 13. From back side pull the end of lace out of the hole.

STEP 14. From front side, pull end of lace out of the loop.

STEP 15. Push tool or needle down between leathers and hook it over the lace.

STEP 16. Pull end of lace out of hole and up between leathers. Two empty holes should appear on the front side; one on the back.

STEP 17. Cut off the end of the lace you have pulled out and tuck the end of the lace between the leathers. Lace through the next hole.

STEP 18. Pull stitch tight and lace up through loop from the back side. All holes on the back side should be filled.

STEP 19. Lace under the bight. ..do not pull this stitch tight.

STEP 20. Carefully cross over as shown. . . and push needle down through the loop.

STEP 22. Pull any slack out of the

STEP 24. Push needle through the

No part of this or any other page may be reprinted without written permission.
...d in U.S.A.

Stirrup Bag Kit

STOCK NO. 4372

KIT CONTAINS:

Pre-Cut, Pre-Punched
Leather Parts
Leather Lace
and Needle
Grommets
Drawstrings

YOU WILL NEED:


Grommet Setter-
Stock No. 7052
Anvil-
Stock No. 1808




Tandy LEATHER COMPANY
AN EMPLOYEE
OWNERSHIP COMPANY

Distributed by Tandy Leather Co.
Fort Worth, Texas
A Division of Tandycrafts, Inc.

©Copyright 1989 by Tandy Leather Company, Fort Worth, TX 76101

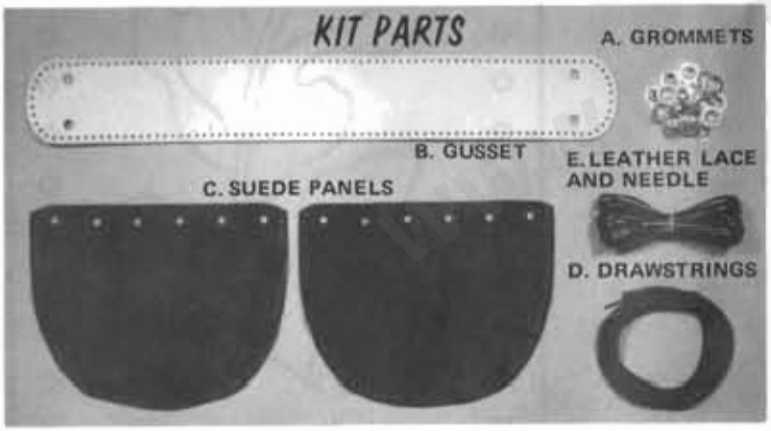


NOTE: DO ALL TOOLING, DYEING AND FINISHING BEFORE ASSEMBLY.

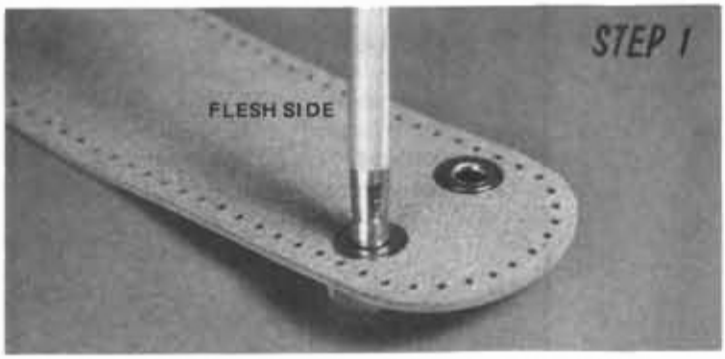

STEP 1: Set 4 grommets (A) in 4 holes in gusset (B) following




STEP 2: Set 6 grommets in 6 holes in one suede panel (C). Eyelet parts of grommets should be on front (good) side of panel. Repeat on other suede panel with 6 remaining grommets.

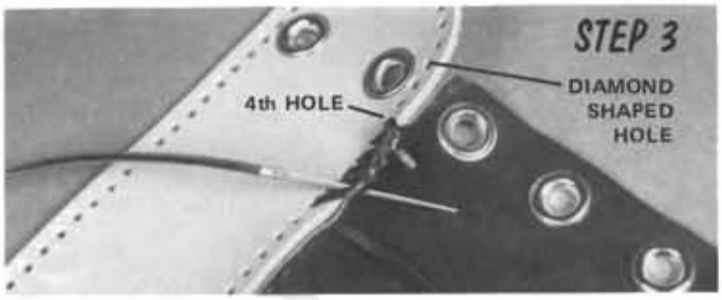

STEP 3: Line up diamond shaped hole in one end of gusset (B) over corner hole on left side of one suede panel (C), flesh (rough) side of gusset to back (rough) side of panel. Starting 4 holes down from diamond hole, double loop lace gusset to panel following double loop lacing instructions given on this sheet. Stop lacing when you reach second diamond shaped hole in gusset.




STEP 4: Line up second diamond shaped hole in gusset (B) over corner hole in left side of second suede panel (C), flesh (rough) side of gusset to back (rough) side of panel. Continue lacing around bag to starting point. Tie off lace as explained in double loop lacing instructions.

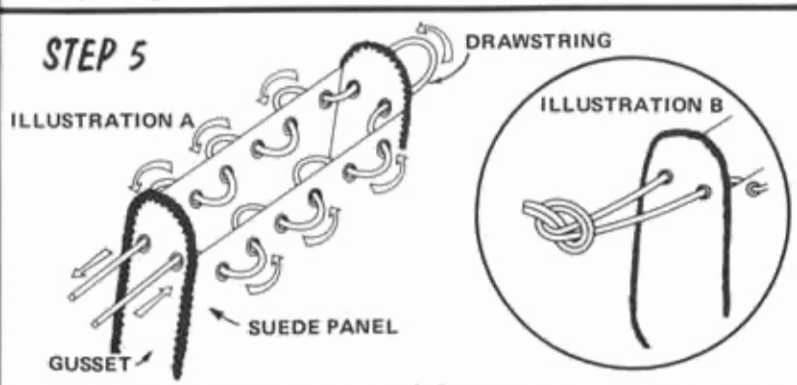


STEP 5: Thread one drawstring (D) through grommets in gusset and panels (see illustration A). Tie ends of drawstring together in a knot (see illustration B). Thread second drawstring through


Grommet Setting Instructions

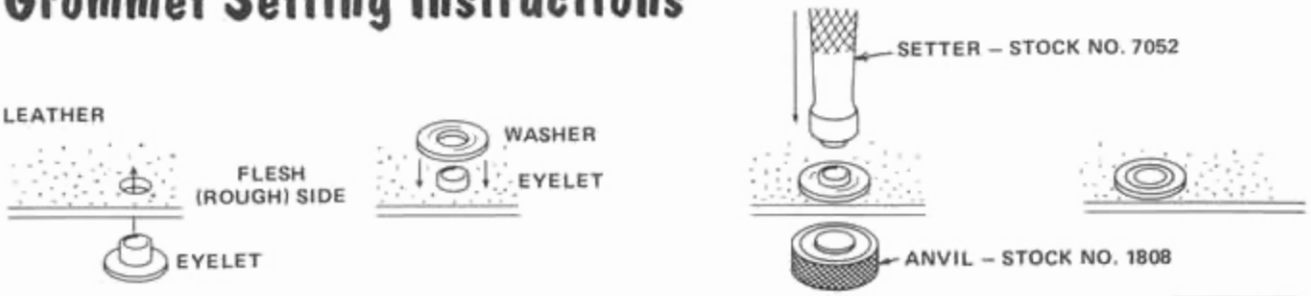


HOW TO LACE & SPLICE THE DOUBLE LOOP STITCH

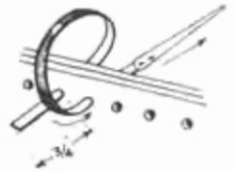

STEP 1. Beginning on front side of project, pull the needle and lace through the 1st hole. Leave about ¾" of the lacing end and go on to lace the next hole.

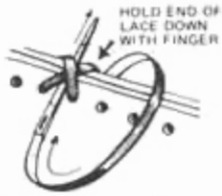

STEP 2. Pull the stitch tight, lacing over the end you left free. This forms a cross or "bight".

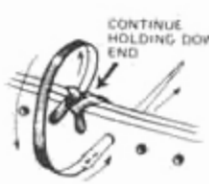


STEP 3. Pull the stitch under the bight snug but not tight. Lace through the next hole.



STEP 4. Follow the same procedure as in Steps 1 and 2 making a cross or bight. Once again go under the bight and pull the stitch snug.



STEP 5. When lacing a corner, stitch through the three corner holes twice each. Be sure to go through bight on corner stitches.

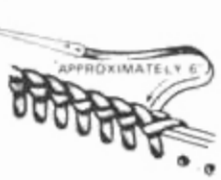

STEP 6. Lace until only 5" or 6" of lacing remain. You will now have to splice with a new length of lace.



STEP 7. Insert new lacing down between leathers, 4 holes from lacing; pull out back side. Leave ¾" of lacing between leather.




STEP 8. Tuck end of lace between leathers and continue lacing your project with the old lace.




STEP 9. Pull the old lace up tight, cut off the end at an angle, allowing about ¼" to remain. Attach needle to new lacing.



STEP 10. Tuck the end of the old lacing between the leathers and lace over it with the new lace so that it is caught and won't show.

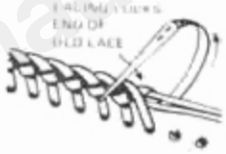


STEP 11. Continue lacing to starting point.

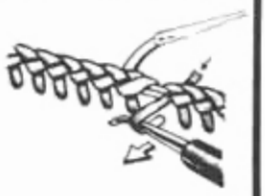

STEP 12. To tie off lacing, pull end of beginning lace free of stitches.



STEP 13. From back side pull the end of lace out of the hole.

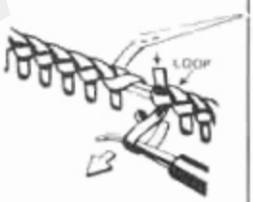


STEP 14. From front side, pull end of lace out of the loop.




STEP 15. Push tool or needle down between leathers and hook it over the lace.



STEP 16. Pull end of lace out of hole and up between leathers. Two empty holes should appear on the front side; one on the back.

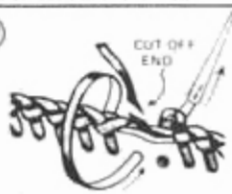

STEP 17. Cut off the end of the lace you have pulled out and tuck the end of the lace between the leathers. Lace through the next hole.

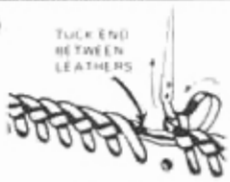

STEP 18. Pull stitch tight and lace up through loop from the back side. All holes on the back side should be filled.




STEP 19. Lace under the bight. . .do not pull this stitch tight.



STEP 20. Carefully cross over as shown. . .and push needle down through the loop.




STEP 21. Pull needle through. Push

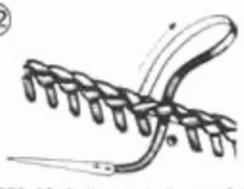

STEP 22. Pull any slack out of the first loop and adjust lacing with




STEP 23. Pull the end of the lacing

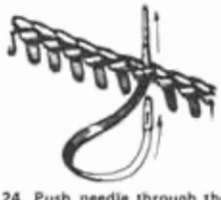



STEP 24. Push needle through the last hole as shown. Bring it up between the leathers and out between


No part of this or any other page may be reprinted without written permission.
Printed in U.S.A.

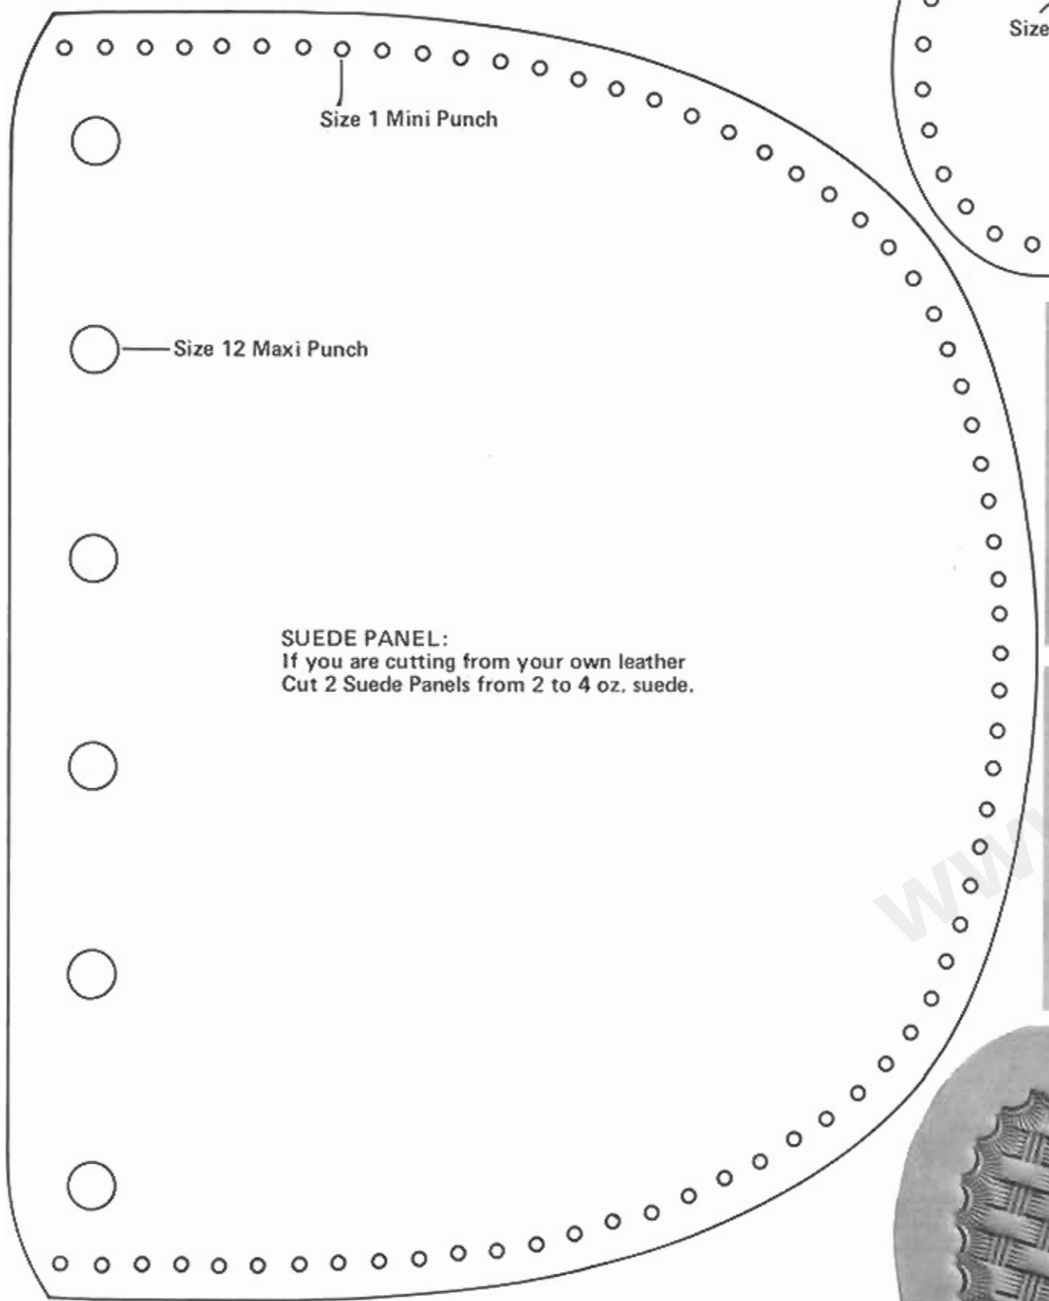



SUEDE PANEL:
If you are cutting from your own leather
Cut 2 Suede Panels from 2 to 4 oz. suede.

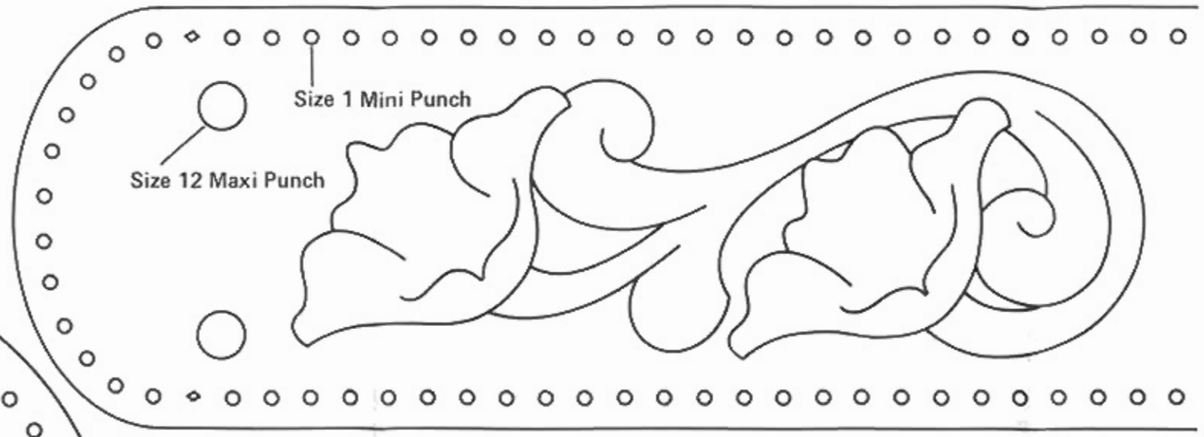

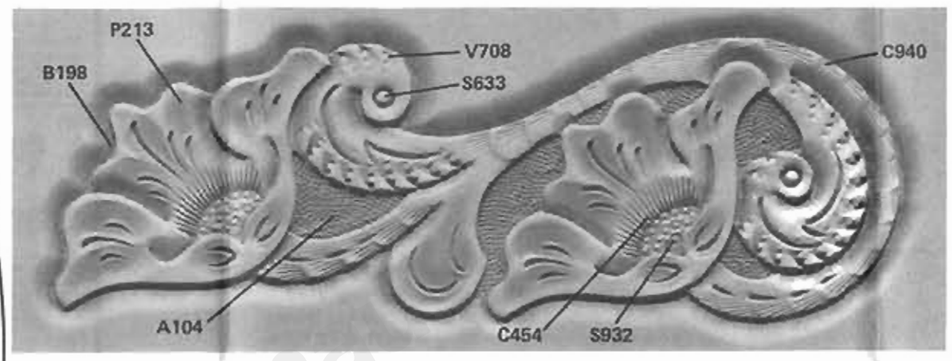

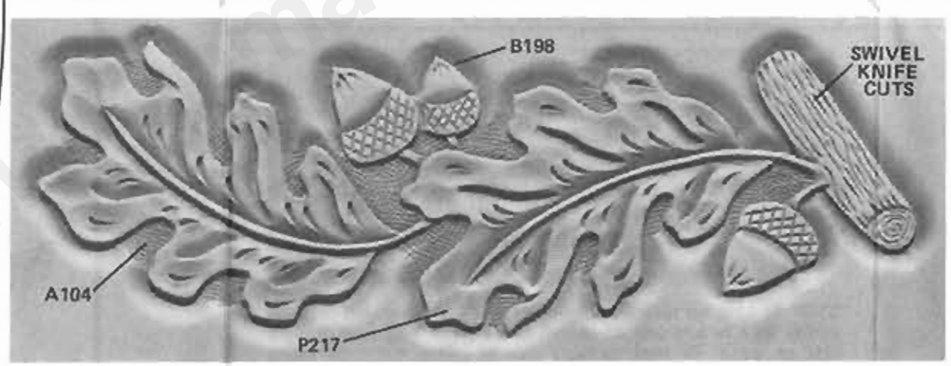

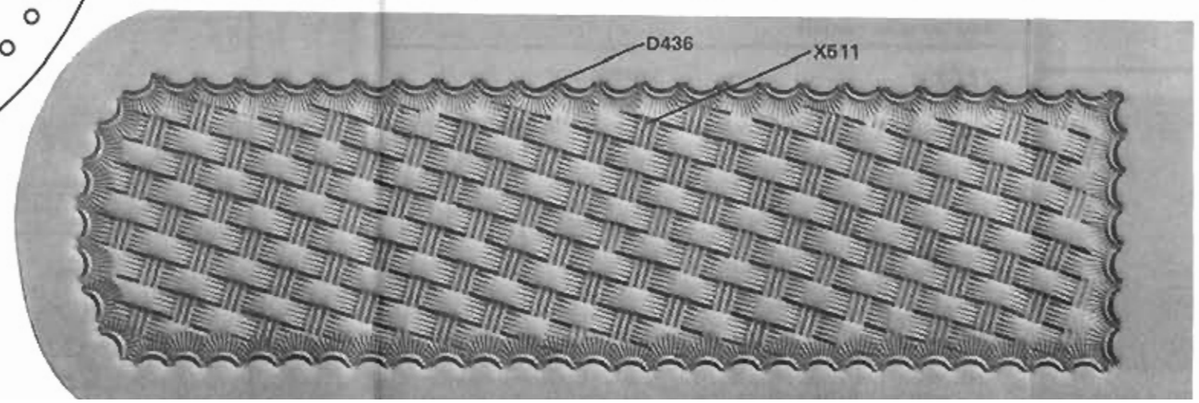


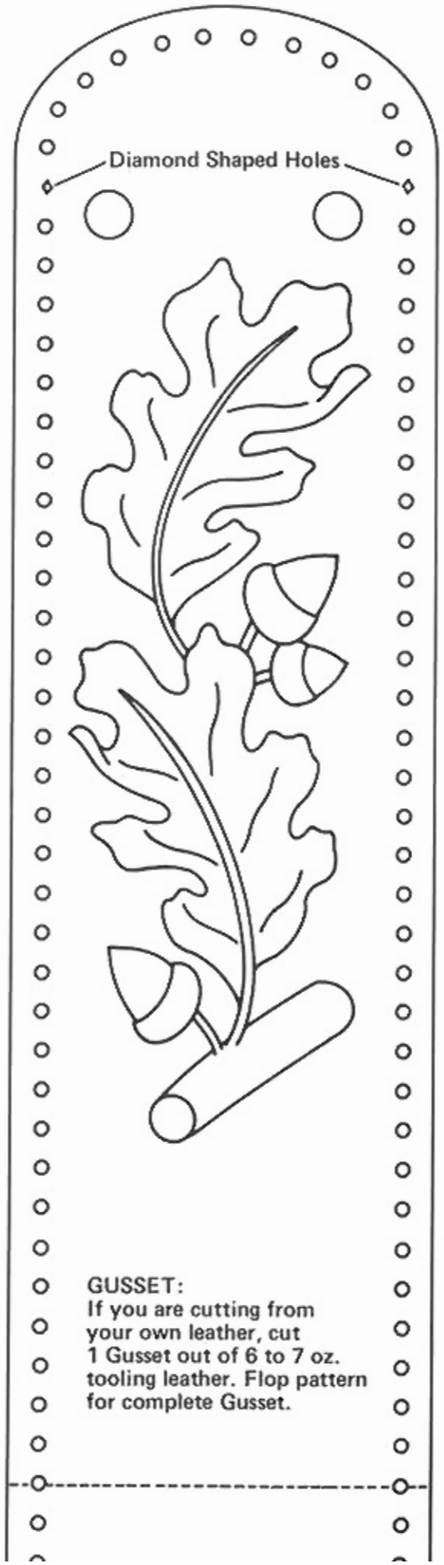



GUSSET:
If you are cutting from your own leather, cut 1 Gusset out of 6 to 7 oz. tooling leather. Flop pattern for complete Gusset.


www.rapmau.com | Ma: RM-SPK-004 | Trang 7/10 | In ty le 1:1 (Actual Size 100%)

www.rapmau.com

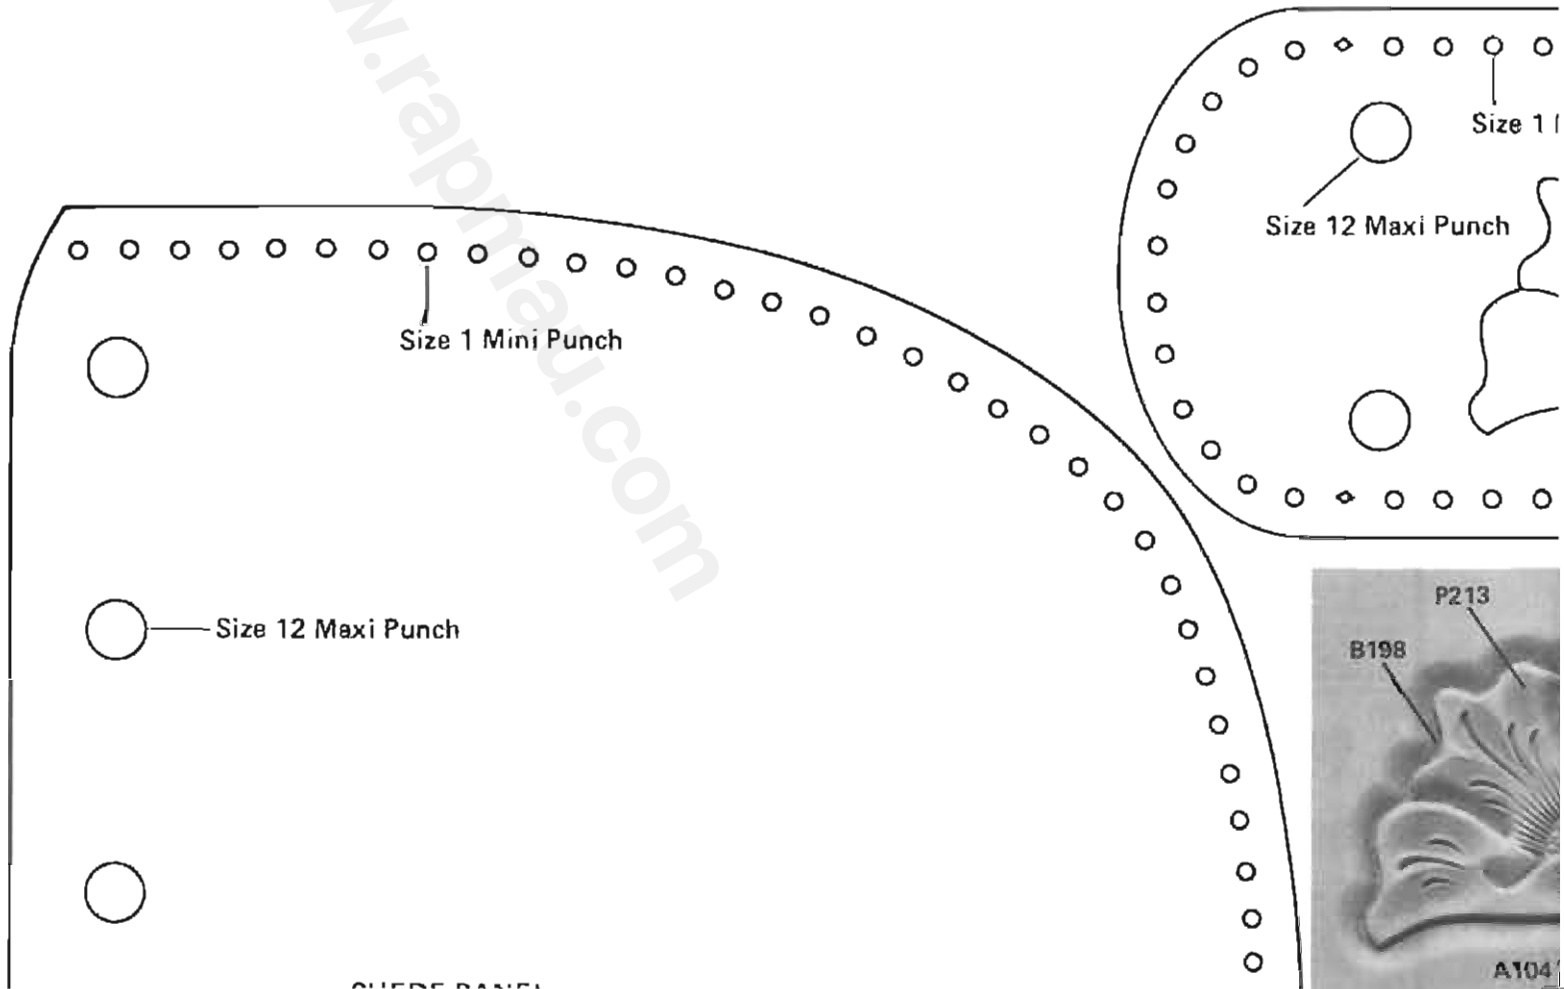

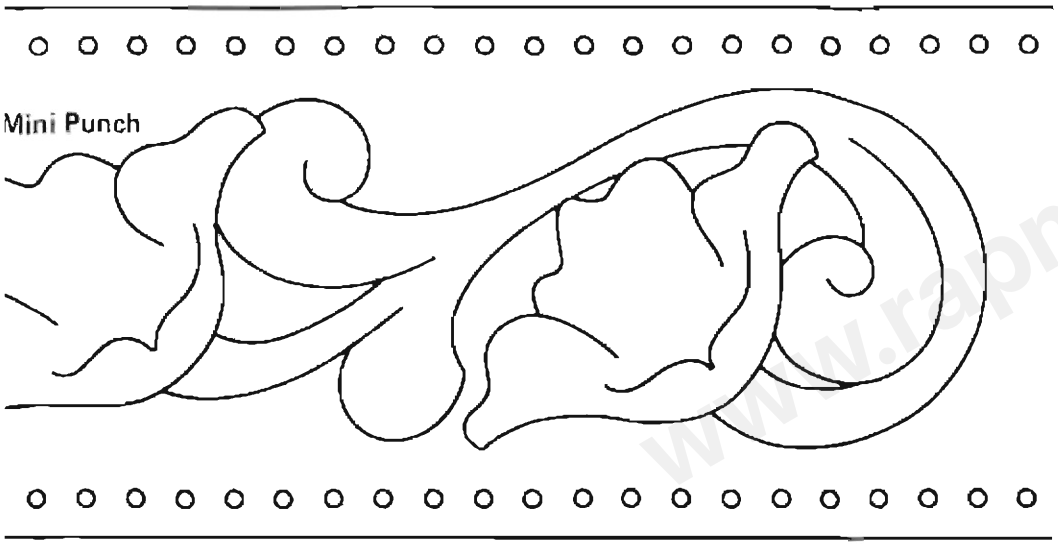


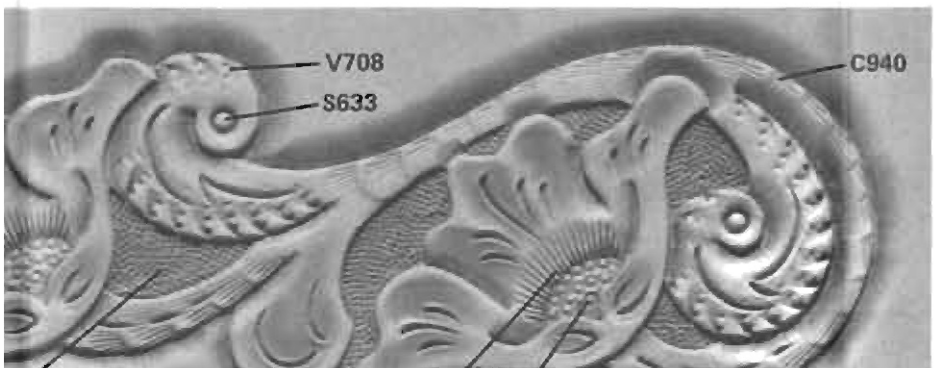


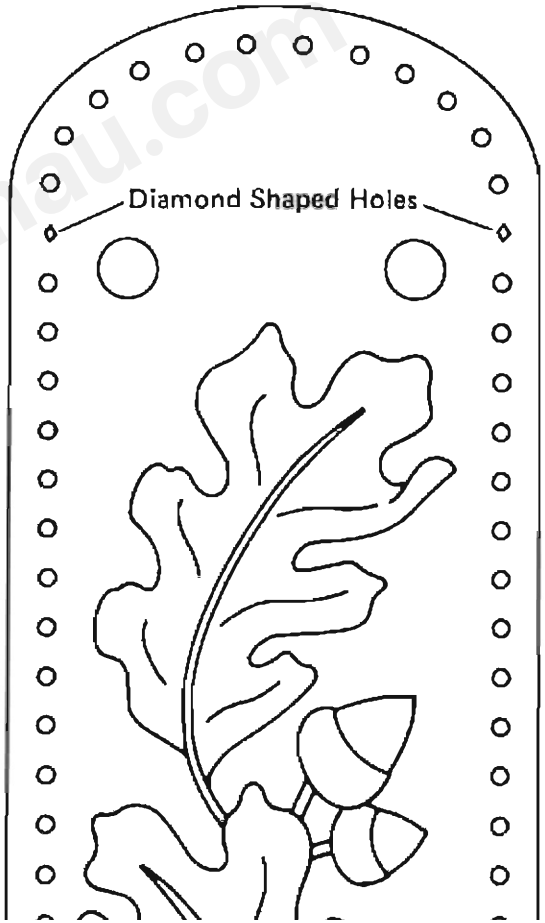


www.rapmau.com


SUEDE PANEL:
If you are cutting from your own leather
Cut 2 Suede Panels from 2 to 4 oz. suede.

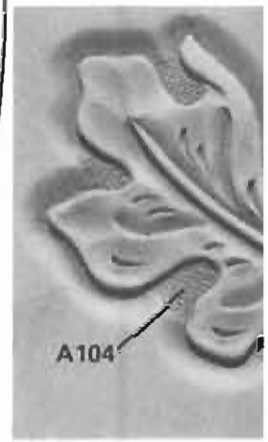


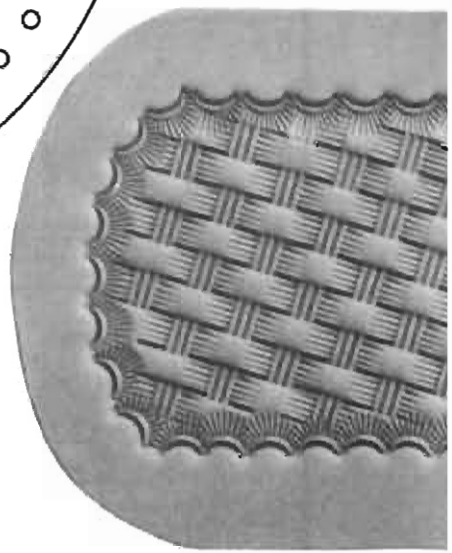

www.rapmau.com

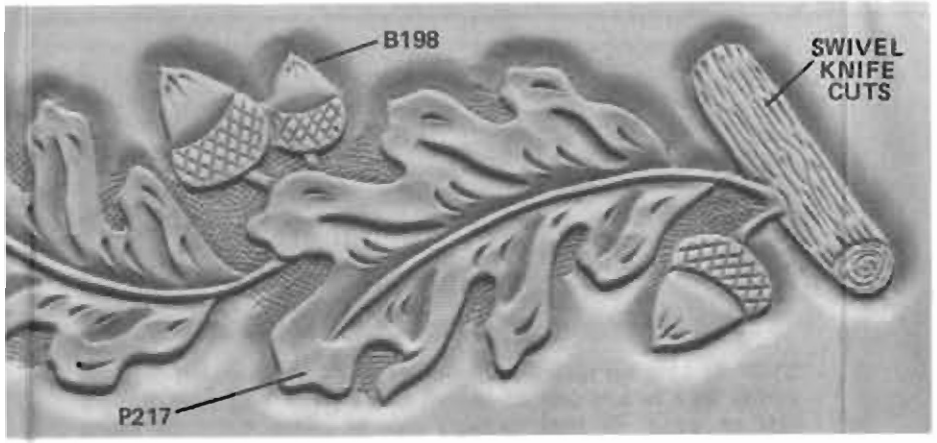
B198
SWIVEL KNIFE CUTS
P217

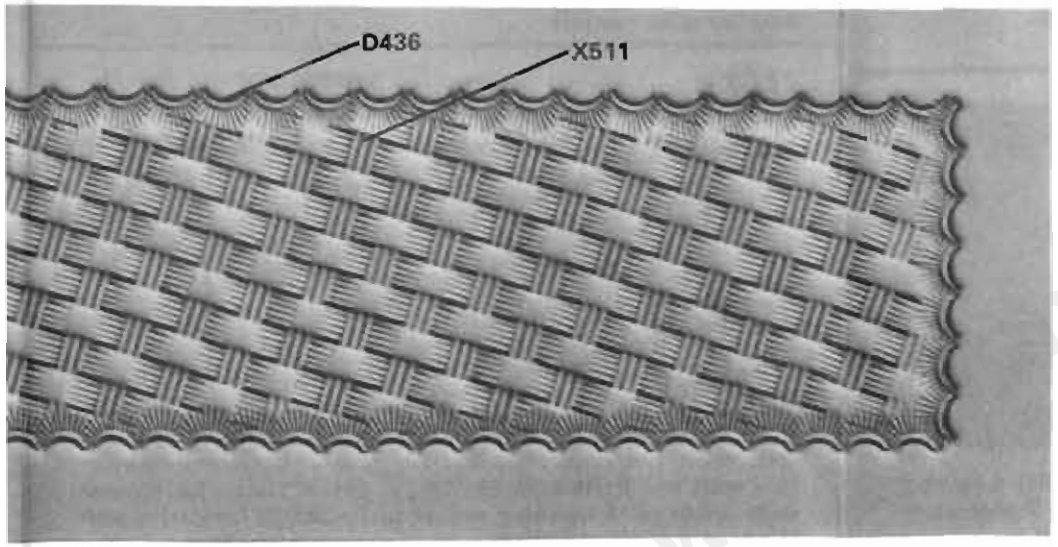
D436
X511

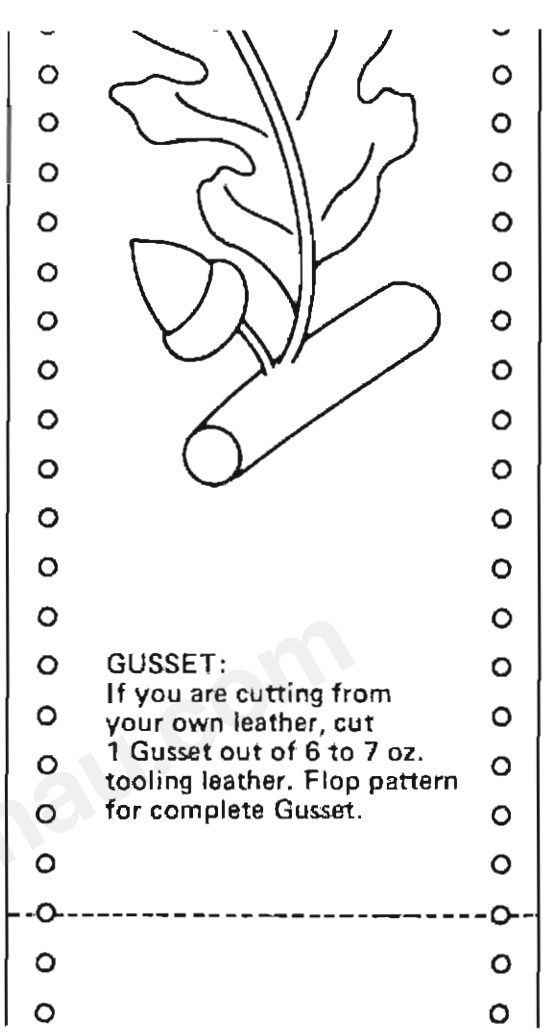
GUSSET:
If you are cutting from your own leather, cut 1 Gusset out of 6 to 7 oz. tooling leather. Flop pattern for complete Gusset.