
RM-VI-030 instruction

Note: Cut all pieces, this wallet is a little complex: You MUST find right side of the leather when you make it, so please DO read the instruction carefully before making.


Step 1: Paste A02 on A01 according to orienting line flesh side to flesh side. Glue whole piece. After do that, shoot snap's cap and socket parts together on A07, fold A07 and sew it on A01, do notice the snap's place----it is on the inner side of A01.After then, Shoot snap's eyelet and stud parts together on A01.

www.rapmau.com

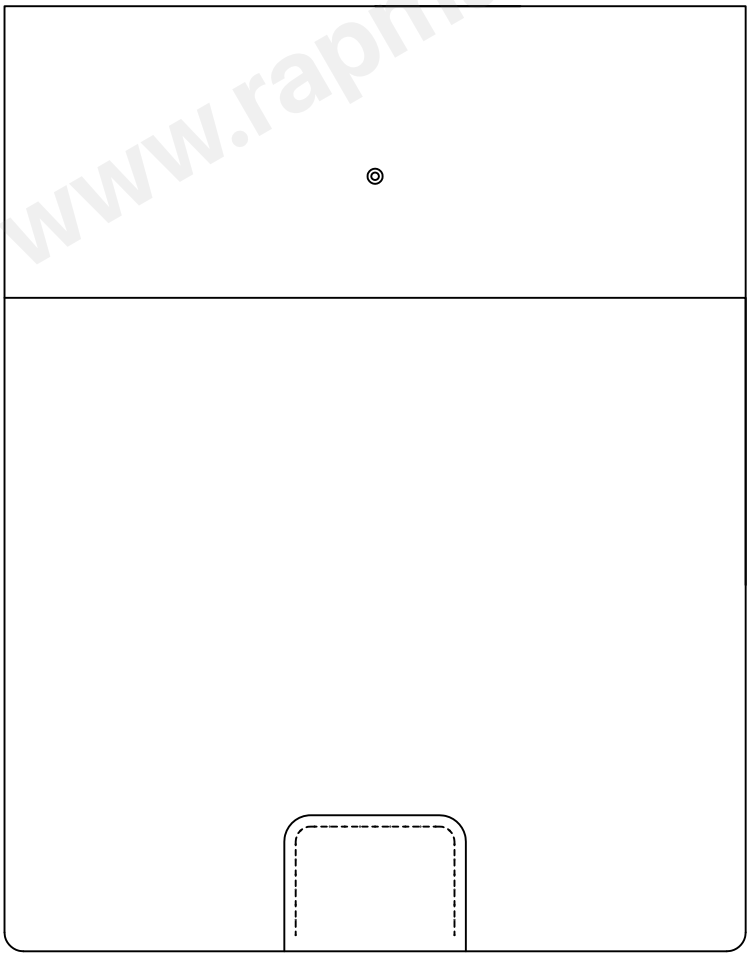


Step 2: Sew the zipper on A03

www.rapmau.com

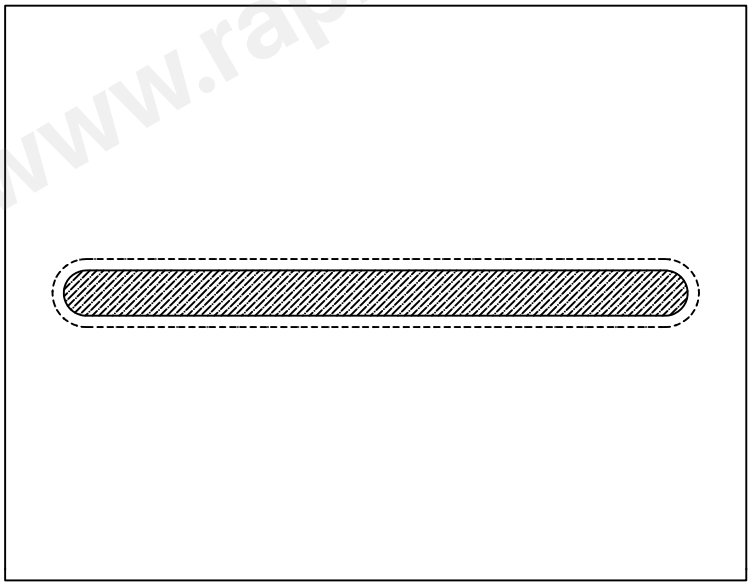


Step 3: Cut A04 from flesh side, and just GLUE the edges of 2 A06 on right place by orienting line flesh side to flesh side, DON'T sew A06 on, just GLUE. Keep A04 flesh side above all the time.

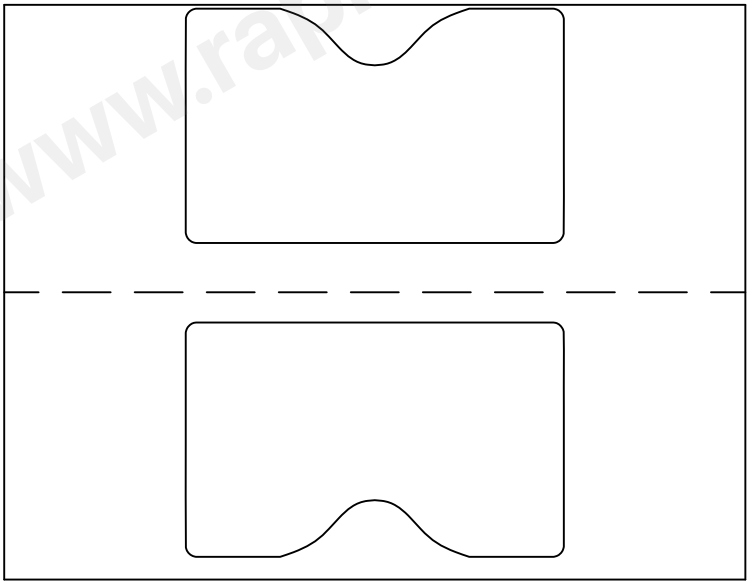


www.rapmau.com

Step 4: Now let's do some stitch work!
Sew A01 with A03. ONLY sew the 3 stitching lines as sketch shows

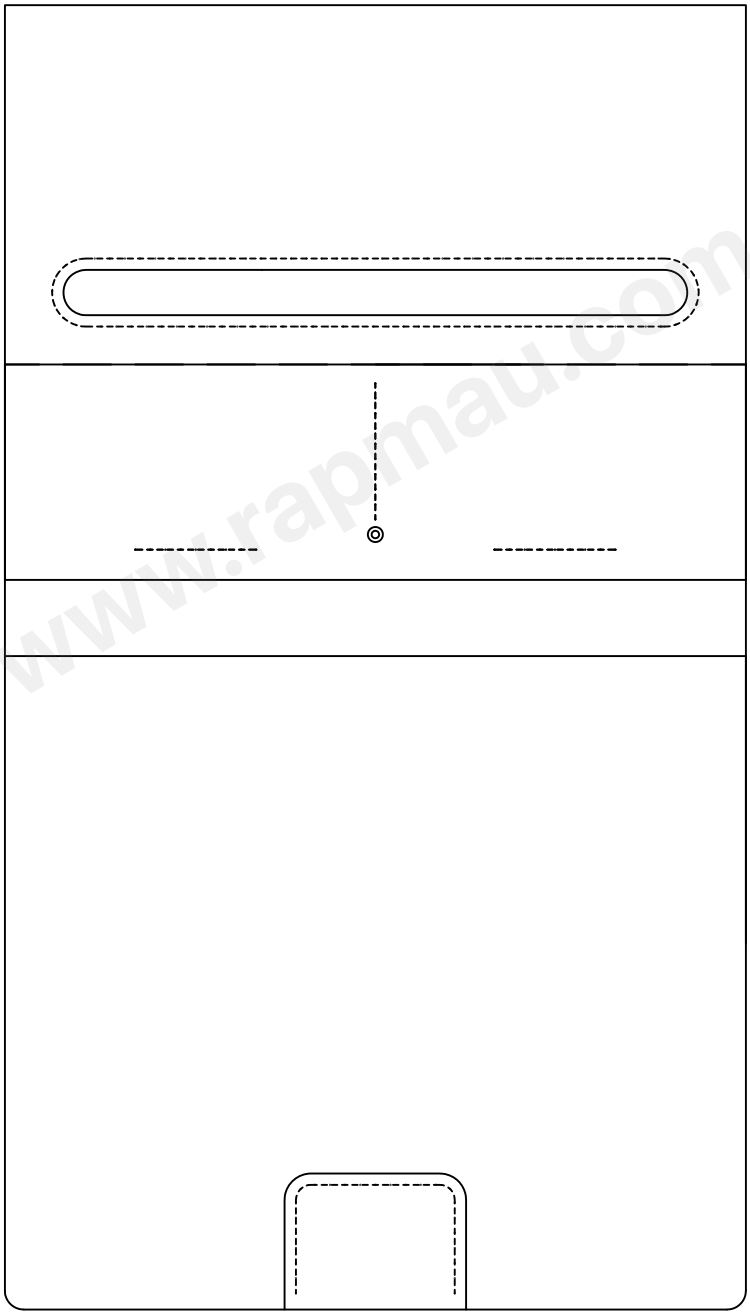


www.rapmau.com

Step 5: Sew A04 with A03, as the sketch shows, you sew A04, A03 and a piece of 06 together.

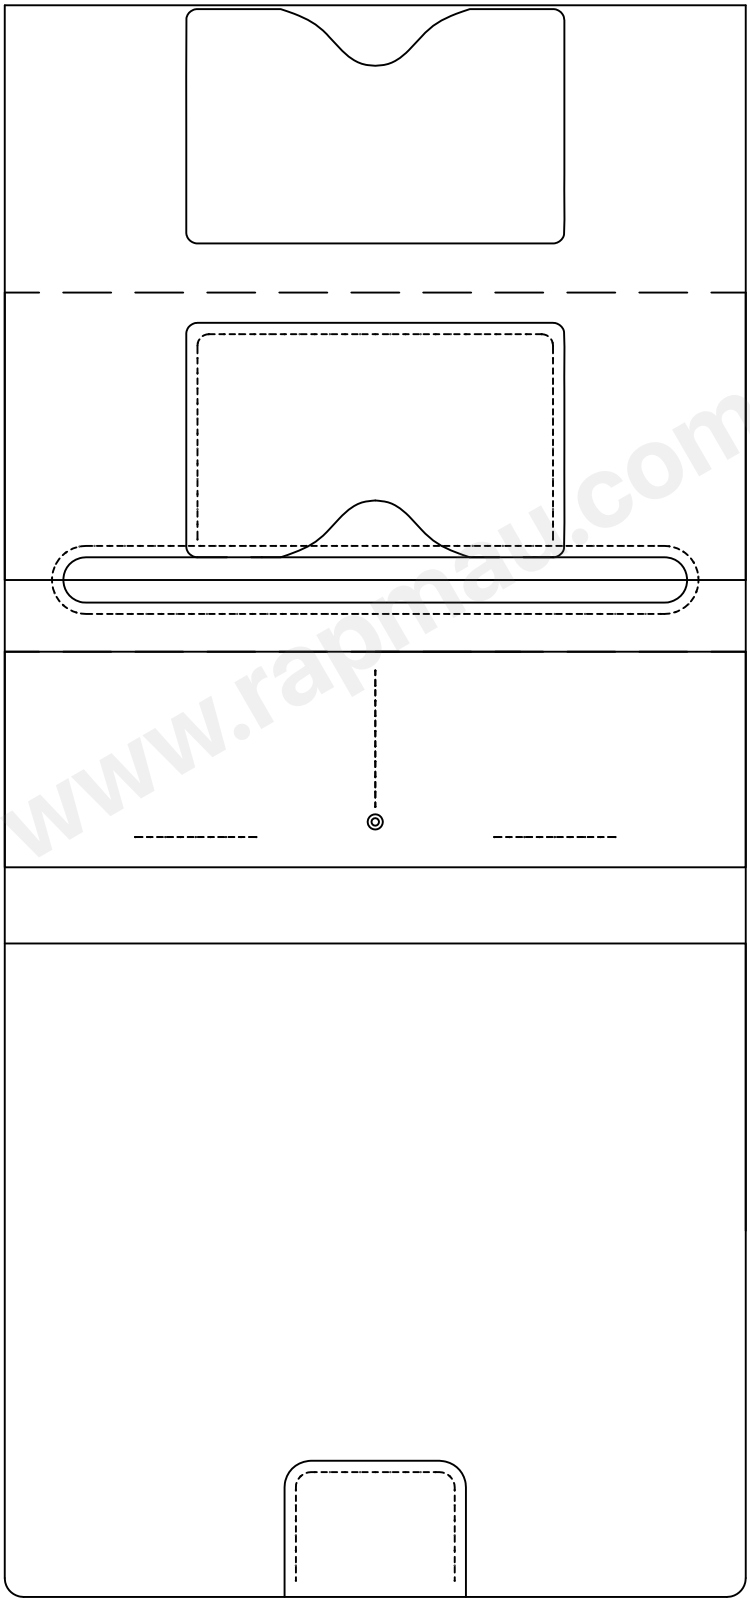

www.rapmau.com

Step 6: Sew A04 with A05 grain side to grain side. you sew A04, A05 and the other piece of A06 together.

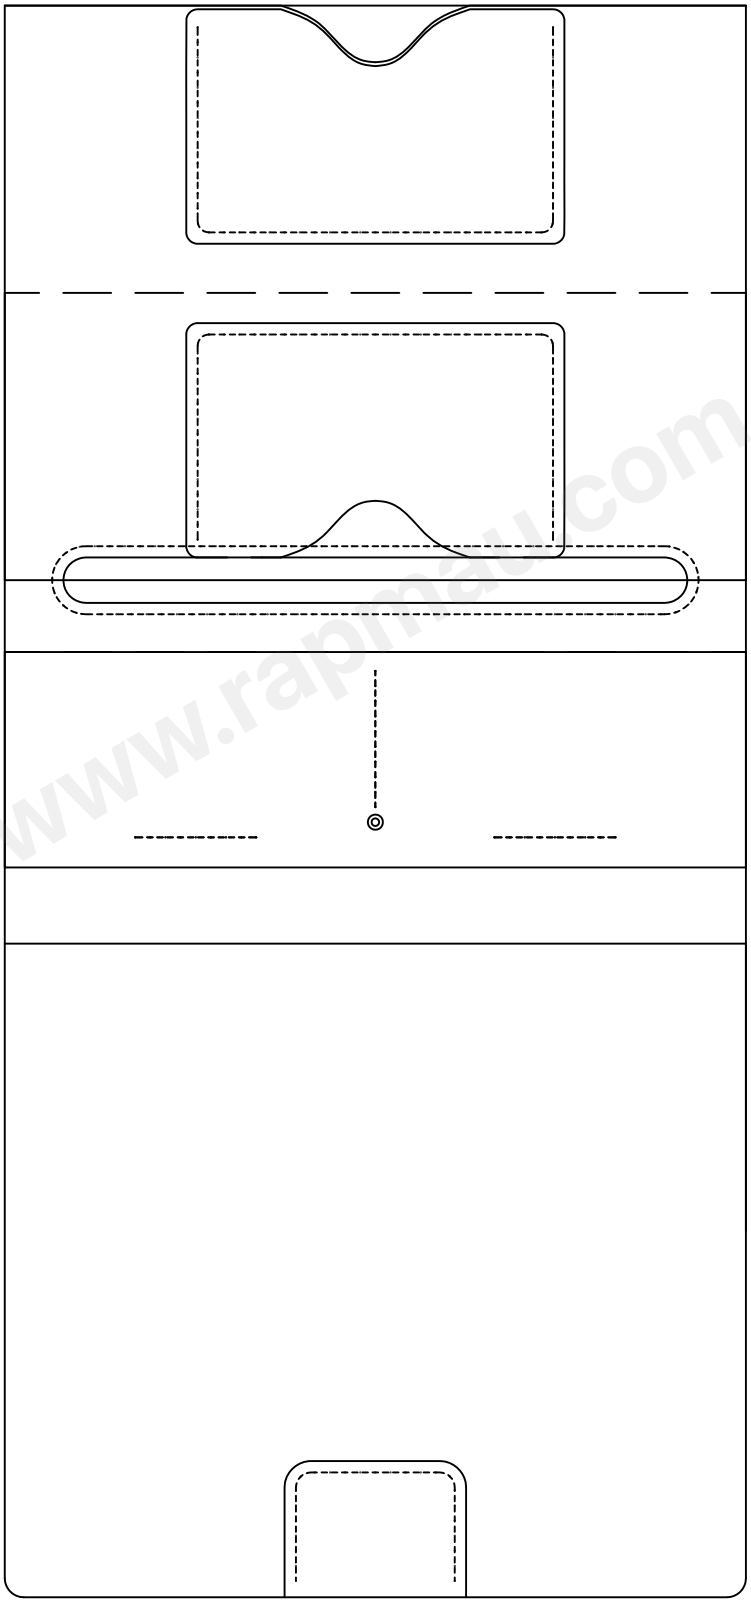

www.rapmau.com

Step 7: Things become clear. Now we sew 2 edges of A04 to form the card pouch. sew bottom of A03, just sew bottom. Then we sew the A01 stitching lines, in the sewing, A03's 2 edges was sewn to form a zipper pouch, A05 was sewn on A01 according to orienting line to form a bill pouch. The wallet is done.

www.rapmau.com

