
Picomenu 2.6.0 User Guide

A big thanks to Brian Apps for creating the Picoface proof of concept, without this Picomenu would not have been possible.

[brianapps/picoface_poc: Proof of concept for picoFace.]

What's New in 2.6.0 ..... **3**
Setting up Picomenu **3**
The NMI Button **3**
Get Started **4**
The Main Menu **4**
Main Menu Functions 4
Navigation 5
B-Browse Games **5**
File Types 6
Browse Games Functions 6
V-View Screen **7**
View Screen Functions 8
Instructions.txt and Game Notes 8
Look up Game Information on ZXDB (Pico W) 9
S-Save Snapshot **9**
R-Reload: **11**
E-Recently played **11**
C-Change ROM **11**
P-Poke **11**
Look up .Pok files on ZXDB (Pico W) 12
4-Reset to 48k **12**
1-Reset to 128k **12**
O-Options **12**
Screen Grab Display Order (N-Order) 14
Wifi and Bluetooth (Pico W only) 14
Diagnostic screen 14
I-Game Instructions **14**
V-Virtual Tape Player **14**
A-Autosave **15**
Autosave Functions 16
T-Tools **16**
T-Test ROM 16
D-Set up SD card 16
U-Update 16
W-Waste Bin 17
C-Batch Convert 17
F-File transfer (Pico W) 17

B-Bluetooth tape (Pico W)....17
E-Erase all Assets....17
Z-Search ZXDB (Pico W)....18
Screen Grabs....19
High Score Saving (Pico W)....20
Other system file types and extensions....21
Multiload Games....22
48K multi-load games....22
128K multi-load games....22
Games with their own level loader....23
Multiload Settings....23
Level_loaders....23
Lock_48k....23
Appendix A - Worked example of multiload: Out Run....25
Multiload Troubleshooting....25

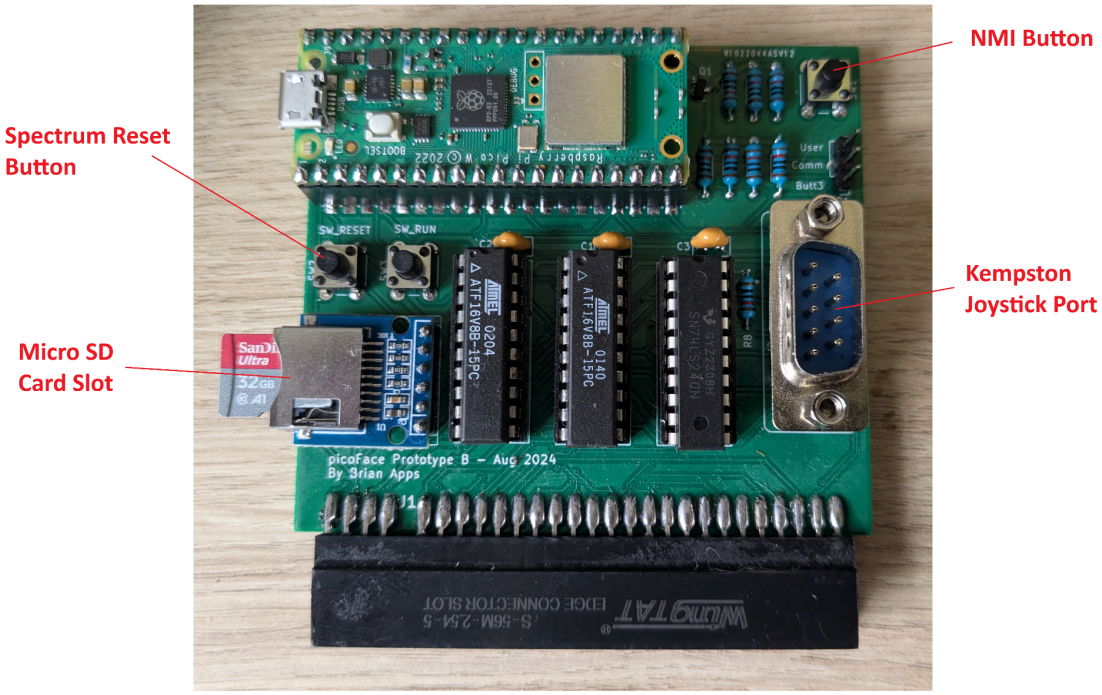

What's New in 2.6.0

As the feature set in Picomenu has developed, so has the move away from using the 2mb onboard flash memory. Most features require access to, and some actively need access to, the SD card. Utilisation of the onboard flash on the PIco/Pico W is gradually being phased out for the storage of games and other assets, as more of the flash memory is required for storage of the firmware.

A full changelog is provided on the github - Picomenu/CHANGELOG.md at master · tukicat/Picomenu

Here is a quick summary of the main new features in the 2.6.0 release.

- Introduction of Hotkeys. You can choose between keeping the NMI button as original mode, or a mode that allows you to hold it and press a Hotkey to enter a menu. See sections on O-Options.
- Faster Autosaves and saves. 128k saves are nearly 50% faster.
- High Score saving (Pico W). See Section High Score Saving.

Setting up Picomenu

You need the following to to setup and use Picomenu

- A Picoface (with a pico or pico w)
- And SD card (formatted to exFAT or FAT32)
- The latest release in .uf2 format.
- 48.rom and 128.rom (or 128-0.rom and 128-1.rom). Don't ask me for these - I cannot provide them.

You need to flash the Raspberry Pi Pico with the .uf2 (there are lots of guides on the internet on how to do this) and insert the SD card into the Piceface SD card slot.

Plug it into your Spectrum expansion port and switch on the spectrum.

The NMI Button

The NMI button (top right of the Picoface) has four functions:

1) A short press takes you into the NMI menu.

2) Holding it for three seconds resets the Spectrum.

3.) Holding it down for one second takes you to the Save snapshot screen

3) A double press takes a quick screen grab and takes you to the screen grabs category Screen.

Some of the above settings can be changed in the options menu.

You can also now switch the function of the NMI button (see O-Options).

Get Started

Before doing anything you can ask Picomenu to set up your SD card.

Choose T-Tools, and then D-Set up the SD card. It will list the things it will create on your SD card. Press D and it will confirm it has written those files. If you ever delete a file or folder and need it re-created, the Set up SD card can do this. It will only write what it cannot find, so it will not overwrite any of your existing files or folders that you previously used SD card setup to create.

The Main Menu

If you are on the latest release when you press the NMI button you will see this menu.



Main Menu Functions


B- Browse games	Takes you to the game and file browser
S - save snapshot	Takes to the save snapshot menu
R - Reload:	A quick reload of the last game played
E - Recently played	A rolling list of the last ten games played

C- Change Rom	Takes you to the ROM change menu
P - Poke	Takes you to the Pokes menu
4 - Reset to 48k	Resets to 48k
1 - Reset to 128k	Resets to 128k
O - Options	The options screen.
I - Game Instructions	Takes you to the V-Screen (see further information below)
V - Virtual Tape Player	Takes you to the virtual tape player screen
A - Autosave	Take you to the autosave menu
T - Tools	A selection of helpful tools and options
Z - Search ZXDB	Search for and download a game via ZXDB
X/Break - Exit	Takes you back to the Spectrum

Navigation

“Break” and “X” are both used to go back and exit menus (although only “X” is displayed on screen to save space). The only time “X” is not used is when you are on a screen that requires you to type text. A standard 48k machine has no dedicated “BREAK” key - Break is “CAPS SHIFT + SPACE” so to keep things streamlined “X” is used, with “BREAK” as a backup.

B-Browse Games

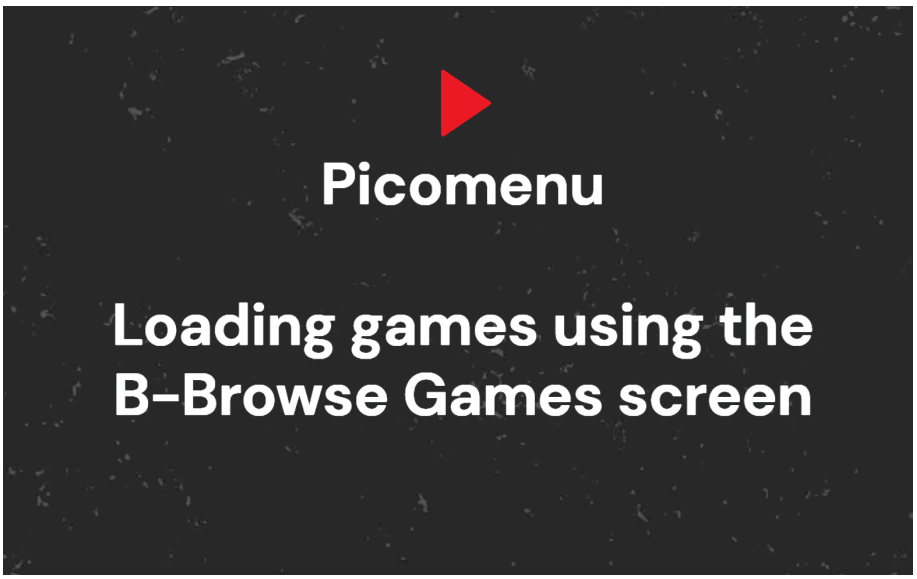

This is the main game/file browser and the functions are all listed at the bottom of the screen.

Here you can navigate folders, copy, move, delete files and folders and load games.

File Types

The file formats that can loaded are
.tap
.tzx
.szx
.z80
.sna




Browse Games Functions

L-All	This will hide or unhide hidden files and folders. You can set the default setting in the option menu.
S-Card and I-Internal Flash	The Disk section will highlight in blue what is currently selected - press S-SD Card or I-Internal Flash to select which you want to use (note the internal flash is only 2mb, so functions are limited on the internal flash).
O-Info	Will show additional file information - Type, size and mode. You can set the default setting in the option menu.
T-Tape	Insert a .tap or .tzx into the Virtual Tape Player
V-View	View Game information (see below)
A-Fav	This adds a game to the Favourities folder

F-Find	Search for a file or folder. Press F again to clear the search.

V-View Screen

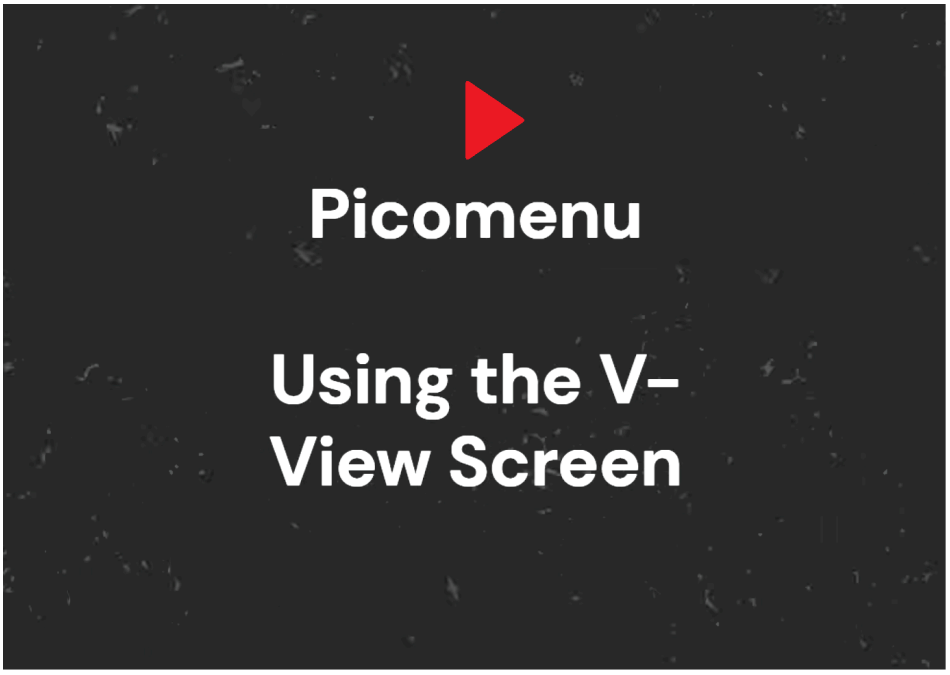

If you press V and then choose a game you will be taken to the View Screen



View Screen Functions

Enter	Load the game
F-Full	Show the screen grab in full screen (you can press Enter on the full screen to load the game)
D-Del	Delete any screen grabs associated with this game (that have the same file name)
M-Edit	Here you add game details, like Software House, Year, etc. (You can also manually edit the instructions.txt file from a PC). You can also add your own notes and your own score out of 10 for the game.
X-Bk	Takes you back to the Browse games screen.
N or P	Cycles through screens

If you are viewing a .tap or .tzx file then on the second page of the V-Screen you will be given an option to press C to convert the tape to a .z80.

If you press C you will be given three options:

A-Auto (will try a 128k conversion first and fall back to 48k if that fails
4-48k (a 48k .z80)
1-128k (a 128k .z80)

After you choose an option the conversion will start. As part of the conversion it will take a screen grab of the loading screen (see G-Screen Grab). Once complete it will place the .z80 in the same file as the .tap or .tzx it was created from.

Instructions.txt and Game Notes

The following files contain game information, which can be entered via a PC or via the V-View screen.

Instructions.txt holds the master details for all your games - this file is usually edited on a PC and placed in /Scraper on the SD card. Files found in /Game Notes relate to information for individual games - the format is “<game>.info.txt”. These files are created when you enter text on the V-View screen for the game you are viewing only.

If “instructions.txt” and “<game>.info.txt” both hold on information on a game, then the information contained in “<game>.info.txt” is shown for that category.

You do not need a “instructions.txt” file, you can simply use the “<game>.info.txt” instead. “instructions.txt” was included so that information could be provided in one file rather than editing multiple “<game>.info.txt” files for those who prefer to do things that way.


Look up Game Information on ZXDB (Pico W)

If you have connected Picomenu to your wifi network then you can use it to look up details about a game and save them to Picomenu.

On the M-Edit screen, press Z-Look it up in ZXDB. This will connect to ZXDB and give you a list of games matching the game you are viewing. You can then choose to download the instructions.txt and the loading screen, as well as the Publisher, Year Released and the Genre.

These details are saved on the SD card for future use via the V-View screen.


S-Save Snapshot

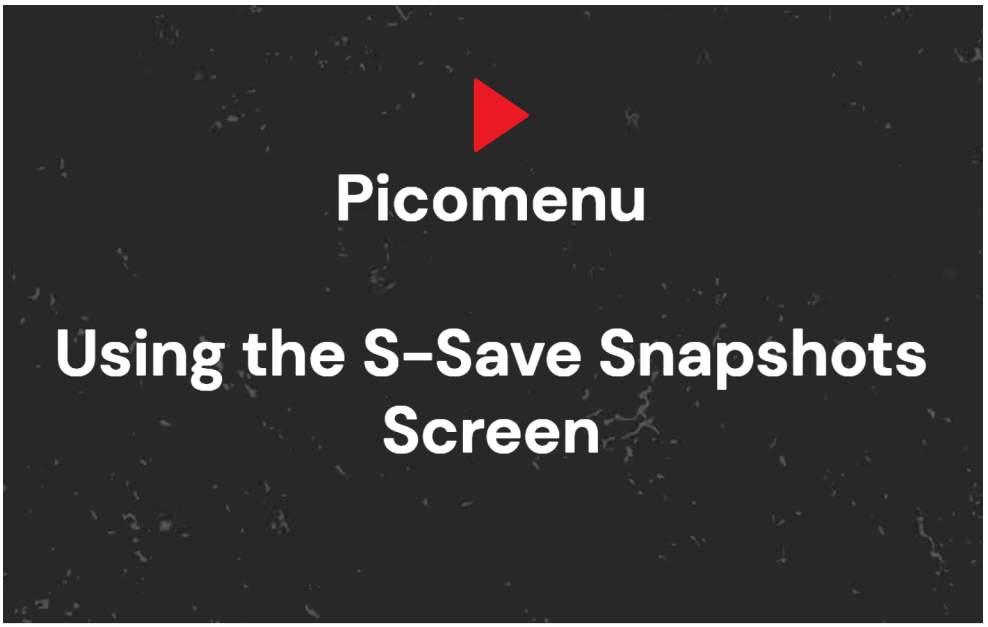

If you are running a game and you enter the S-Save Snapshot menu you will see this screen.


Here you can create a snapshot to be used as a save game, ten for each game, these are stored in /Saved Games/<Game name>.

You can use L-Label to give your save game a label, for example you can label the slot as second screen, or level one, etc and V-View will view the screen you saved on..

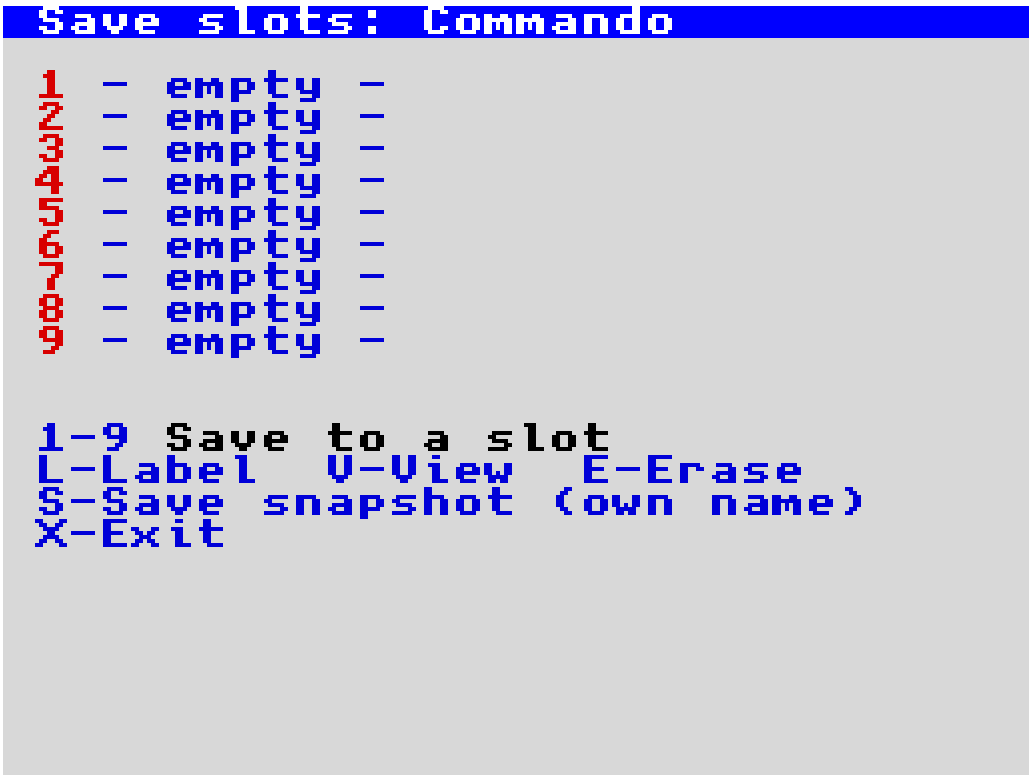

If you load a game and one or more of the save slots is populated then you see this screen and will be asked if you want to carry on from a slot or start the game. You can also view each screen from the snap shot and it will say last to the last file that was saved.

If you press S-Save snapshot (own name). You will be greeted with this screen where you can take a manual snap shot.

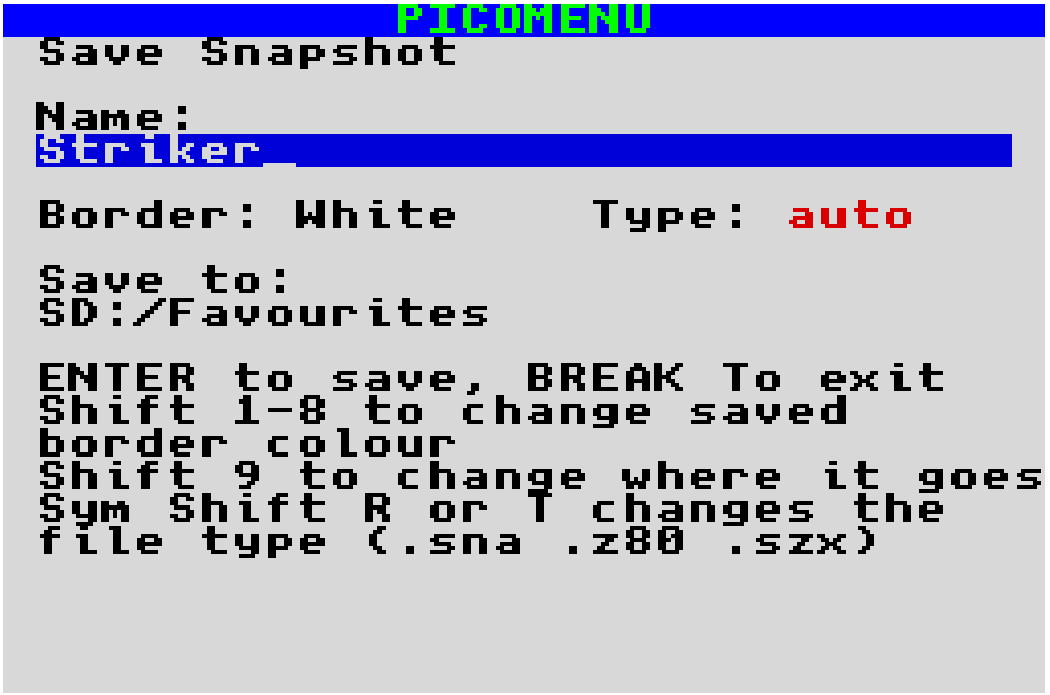

R-Reload:

This is a quick reload of the last game you played

E-Recently played

A rolling list of the last ten games you have played.

C-Change ROM

If you place .rom files in the following locations then you can browse them from here.

- Root of the SD Card
- /ROMS on the SD Card
- Root of the internal flash

1 - Internal ROM is the machine's own internal ROM. You may need to switch back this after you have run a test rom.

W-Writable on this screen makes the ROM area above address 63 writable, for programs that patch it.

P-Poke



You can enter pokes manually from this screen. Alternatively, if you place a ,pok file in the /Poke List directory Picomenu can then list the pokes using the L-Poke list screen.

For example, if you have Commando.tap as the game you load then Commando.pok needs to be in the /Poke list folder for it to recognise it.

Look up .Pok files on ZXDB (Pico W)

If you have connected Picomenu to your wifi network then you can use it to fetch .pok files.

After loading a game press the NMI button and choose P-Poke screen. Next press Z-Look it up in ZXDB. This will connect to ZXDB and give you a list of games matching the game you have loaded. Choose the game that matches the one you are playing - if a .pok file is available you will be asked if you want to download it. A downloaded .pok is put in /Poke List and Picomenu changes filename so it matches the game you are playing. For example if you have “Commando.z80” loaded it will make sure the .pok file downloaded is named “Commando.pok”. You can then view the pokes you have downloaded by choosing L-Poke List.

4-Reset to 48k

Resets the machine to 48k basic screen

1-Reset to 128k

Resets the machine to 128k menu screen

O-Options

The options screen allows you to customise several features of Picomenu.If you wish you can also edit the picomenu.ini file found in the root of the SD card

Theme	Choose between light or dark
Show_all	This relates to the default choice for the Browse Games screen. On shows all files/folders including hidden ones, off only shows viewable ones. Last uses the setting you last used.
Details	This relates to the additional file details O-Info. It uses the same setting as Show_all.
Sort	How you want to sort files.
Folders	How you want to sort folders.
Start_drive	Choose whether to start with the SD or Flash as the viewable drive.
Start Folder	Choose which folder to start in when you power on. / is root. If you browse to a folder in the Browse game screen and then press x to exit, you can then choose this folder from here as the default one to use.
Save_type	Choose the default save type, or leave on auto
Quick_save	When you use quick save what do you want picomenu to do if a file

	already exists - ask you, overwrite or create a new file.
Save_screen	Choose what happens when you press S-Save Snapshot. Does it go to the save slots screen or the screen where you can take a manual snap shot.
Slots_on_load	If you load a game and a save is in a save slot, do you want it to ask you about loading it or just enter the game
Grab-format	Screen grabs can be taken in .scr or .png or both. If you use both the V-View screen will only read one of each type to stop it repeating screens.
Autosave	Set autosave to Off, 20, 40 or 60 seconds. See A-Autosave section.
Long-press	Outside of the NMI menu you can press the NMI button for 1 second and the spectrum will reset. Use this setting to duration of the press or switch it off.
Double-press	You can double press the NMI button during a game to take a quick screen grab. You can turn this off here.
NMI_Button	You can set the NMI button to have different functions. Original mode keeps the standard NMI button presses (see NMI Button on page 2). Hotkey mode allows you to press and hold the NMI button and then a spectrum key - this will then take you to a specific function. If you hold the NMI button and press SPACE you will be shown a list of available hotkeys.This only works when in game, not in Picomenu. When you enter a Picomenu screen via a hotkey, you will be taken back to the game on exit.
Loading-grab	The C-Conver tool (see V-View Screen) will take a loading screenshot grab when converting a .tap or .tzx to a .z80. You can switch this off here.
Waste-bin	Any file or folder you delete goes to a waste bin. If you want to permanently delete the files without using the wastebin you can switch it off there.
Level_loaders	Choose patch or off. See section on Multiload games
Lock_48k	Some tapes hold a 48K version and a 128K version of the same game. When the game starts, the Spectrum checks whether the extra 128K memory is there. Use this setting if you want a 128k Spectrum to load a 48k version of a game. Most 48K games never check for 128K memory, so the lock only matters for the ones that do - you may need to experiment to find out what games use the lock. Settings are: ● tapes (the default): lock while a 48K tape is being played, if you are trying to run a 48k multiload on a 128k spectrum you would need this setting on. ● always: lock for every 48K games, tapes and snapshot ● off: never lock.

Screen Grab Display Order (N-Order)

The next screen is the N-Grab order and relates to the screen grabs in the V-View screen. Here you can choose the order the screen grabs are displayed and turn off some categories. “From file” are screen grabs that may already be contained in a .z80, .sna or .szx. The rest of the categories are explained in G-Screen Grab.

Wifi and Bluetooth (Pico W only)

Here is where you input your network name and password and bluetooth settings.The operation of Wifi file transfer and bluetooth tape playing is explained in the T-Tools section.

Diagnostic screen

There is also a diagnostic screen (press D) this shows some basic information about the firmware and storage space.

I-Game Instructions

The same screen as the V-View screen in the Browse Games menu, but here it displays information for the game currently running.

V-Virtual Tape Player



To insert a .tap or .tzx use T-Tape on the Browse screen and then Press T-Trap.

If you insert a .tap or .txz in using T-Tape/T-Trap in the Browse Games screen then you can view the blocks of that tape here. You can skip backwards and forwards to different parts of the tape.


This is helpful for some multiload games.

When you insert a .tap or .txz in using T-Tape/T-Trap the picomenu will reset back the basic or 128k menu screen. However, the tape remains inserted and you can load from here in the traditional way by typing load”” on a 48k Spectrum or starting the tape loader on a 128k model.

You can add a label to any of the blocks by pressing L-Label. Here you can type a short description. For example “start of multiload levels”. If you delete the label the original tape block information will be displayed.

You can also record to a tape, so you can save any programmes you have written on your spectrum.

A-Autosave

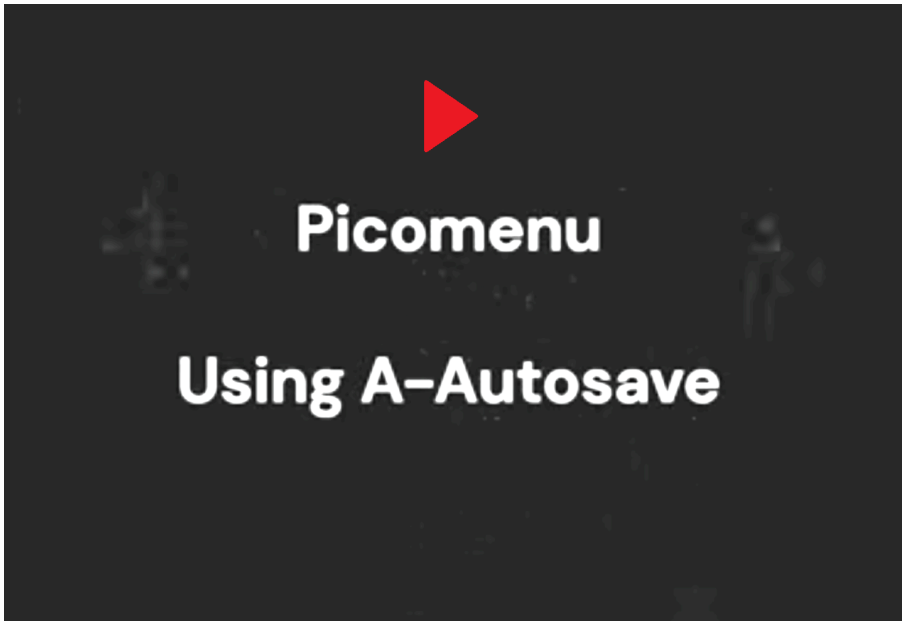

You can turn on or set the Autosave to off, or 20, 40 or 60 seconds in the options screen. Autosave will take a save game automatically using the duration set.

When the save is taken there will be a short pause during the game.

When you start a game you will also be asked if you want to play with autosaves on or off.

You can access the Autosave using the A-Autosaves screen.

Autosave Functions

1-5	Select autosave to load
V	View an autosaves save screen
M	Move an autosave to a save game slot
C	Clear the autosaves
O	Turn off autosaves

If you start a game with autosave turned off, then you can go to the A-Autosaves screen and use O to turn them on.

Picomenu treats Autosaves like rewinding time: When you load an Autosave you carry on from that Autosave, and any newer ones are dropped from the list. For example: -

- Pick Autosave 1 (the newest) and nothing goes. Pick Autosave 3 and autosaves 1 and 2 disappear.
- New autosaves then carry on from the Autosave you loaded.
- If you re-load a game Picomenu treats this as starting the game afresh, so the Autosave list empties.
- It is only the list of Autosaves that is kept in the Picoface flash memory, it is not read from the SD card, so the list empties after a reset or power off.
- Actual Autosave files are kept on the SD card in /Autosave/<game>. Six in total are kept so the seventh Autosave will overwrite the first and then carry on in a loop.
- If you want to clear the autosaves you can use T-Tools, E-Erase all Assets (see next section).

T-Tools

There are a few tools on the Picomenu.

T-Test ROM	If you place the files below in the location indicated you can use them to test your spectrum. Testrom.rom and/or DiagROM.rom must be in one of the following locations: - - Root of the flash - Root of the SD card - /ROMS
D-Set up SD card	This is covered at the start of the user guide. This tool sets up the SD card with the correct folders and files.
U-Update	Use this to update the Picomenu firmware. Place a valid .uf2 file on the roof of the SD card and use this tool to update. You are advised to delete the old picomenu.ini file and use D-Set up SD card to create a

	new one where a release includes new features.
W-Waste Bin	This is where you can retrieve any accidentally deleted files from. You can also empty the waste bin from here.
C-Batch Convert	If you have a lot of .tap or .tzx files you want to convert you can put them all in a folder and ask the batch converter to convert them all automatically. It will place the created .z80 in a folder inside the folder you pointed it at called “converted” It will also provide a summary of what it has converted. You can also convert your .z80 files back to .taps from here.
F-File transfer (Pico W)	You first need to add your wifi network name and password (see options). Once Picomenu has connected, you can use your PC or phone browser to transfer files, rename and erase them. You can also edit .ini and .txt files. There are three addresses you can use which are listed on the File Transfer screen.
B-Bluetooth tape (Pico W)	If you have a bluetooth mod on your spectrum then you can pair Picomenu with the bluetooth mod and load .tap and .tzx files in realtime as you would using a cassette. The first time you use this feature you will need to pair a Bluetooth device. You can use T-Tape on the Browse game screen to insert a tape. Use T-Tape, select a .tap or .tzx and then press B-Bluetooth. You will then exit back to either the 48k basic screen or the 128k menu. From this point loading is automatic. The Bluetooth will connect and as soon as you either type LOAD”” in the 48k basic screen or start the tape loader from the 128k menu - loading will then begin. Once the .tap or .tzx has finished the Bluetooth will automatically disconnect. You can change the bluetooth settings in the O-Options menu. This is an experimental feature at this stage.
E-Erase all Assets	This allows you to search for and erase all of some of the assets you have collected for a game. You will be first asked to search for a game. Once you have typed in a game and completed the search, you will be presented with a screen that lists the assets you can delete. Assets that can be deleted are: - ● Autosaves ● Filled game save slots ● Game notes (kept in /Game Notes <game name>.info.txt) ● Pokes (.pok files) ● Tape files (kept in /Tape Files <game name>.tape) ● Screen grabs ● High Scores (Pico W)



Z-Search ZXDB (Pico W)


Pressing Z-Search ZXDB (Spectrum Computing) for a Game will bring up a prompt to search for a title. Type a name of part of a name and you will be presented with a list of matches. If there are more than 10 matches, you can use N or P to cycle through the list. Choosing a game will then take you to a list of available games to download.

Choosing one will download it to a folder called /Downloads - Piocmenu will create this folder if it is not present when you first download a file. Picomenu also handles unzipping automatically, so if you download a file that has a .zip extension then it will be unzipped and placed in /Downloads ready to use.

You can also ask for the game's loading screen in .scr format by pressing L.


If a game is listed as distribution denied, then that will be stated.

When you download a game or loading screen you will be asked if you want to “Match search selection? This will make sure the downloaded .tap or .tzx filenames match the names of the downloading loading screen. The search selection name will be displayed in brackets.

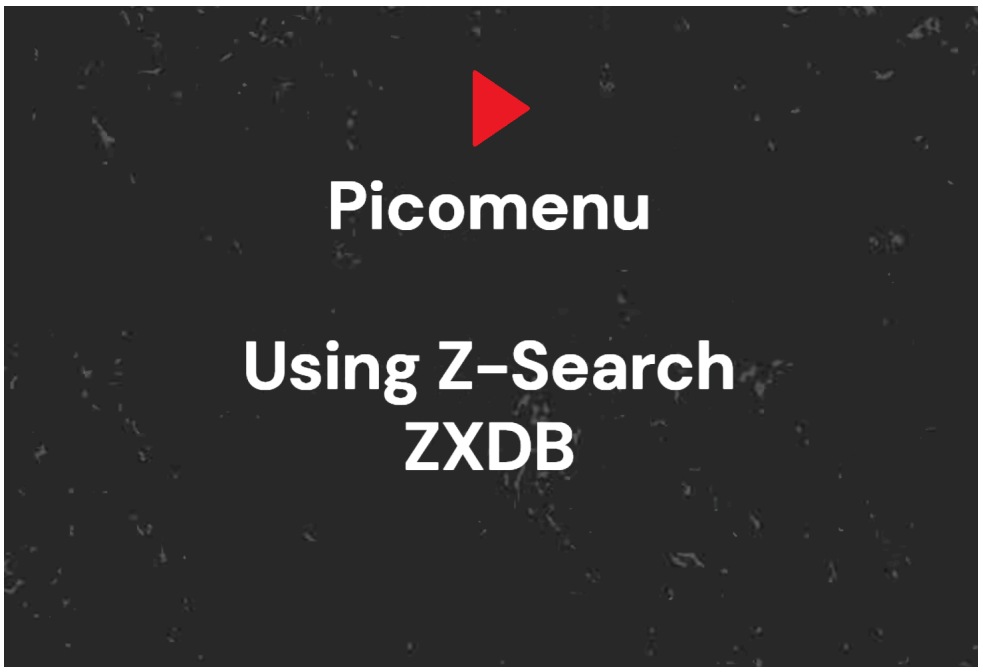


Screen Grabs

To take screen grab double press the NMI button in game and you will see this screen.

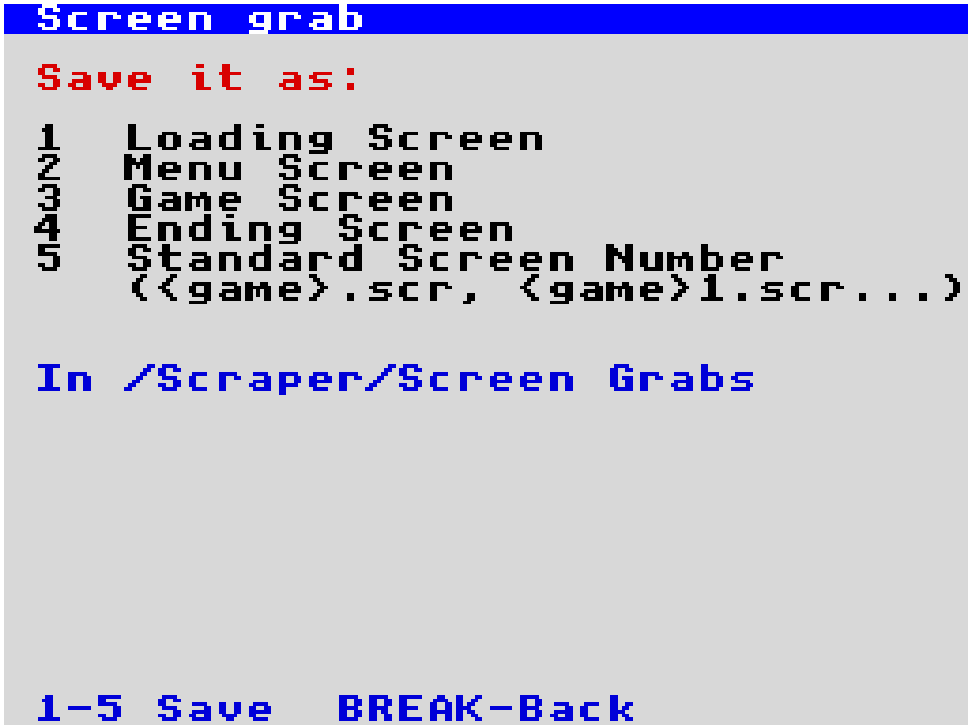


When you press this button you will see the screen above. You can then choose a category for your screen. It will then save a screen grab to /Scraper/Screen grabs using your games file name and the category you choose. These screens are then displayed in the V-View screen in the order you choose.

You can create multiple screens in the same category, as Picomenu will simply use a numbering system to avoid overwriting files.

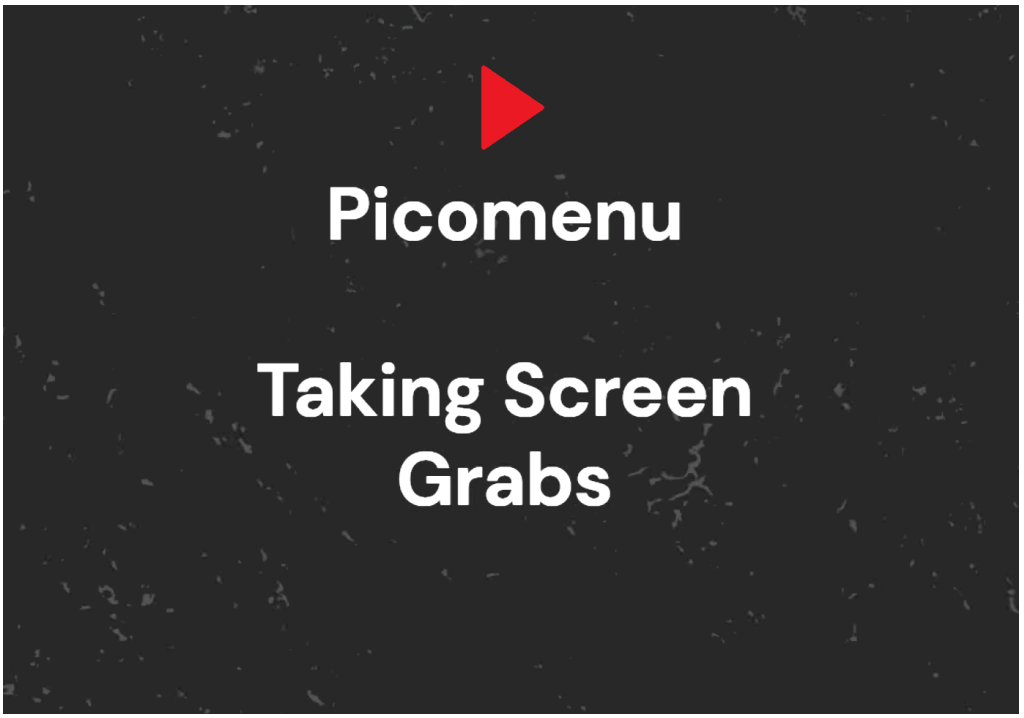

High Score Saving (Pico W)

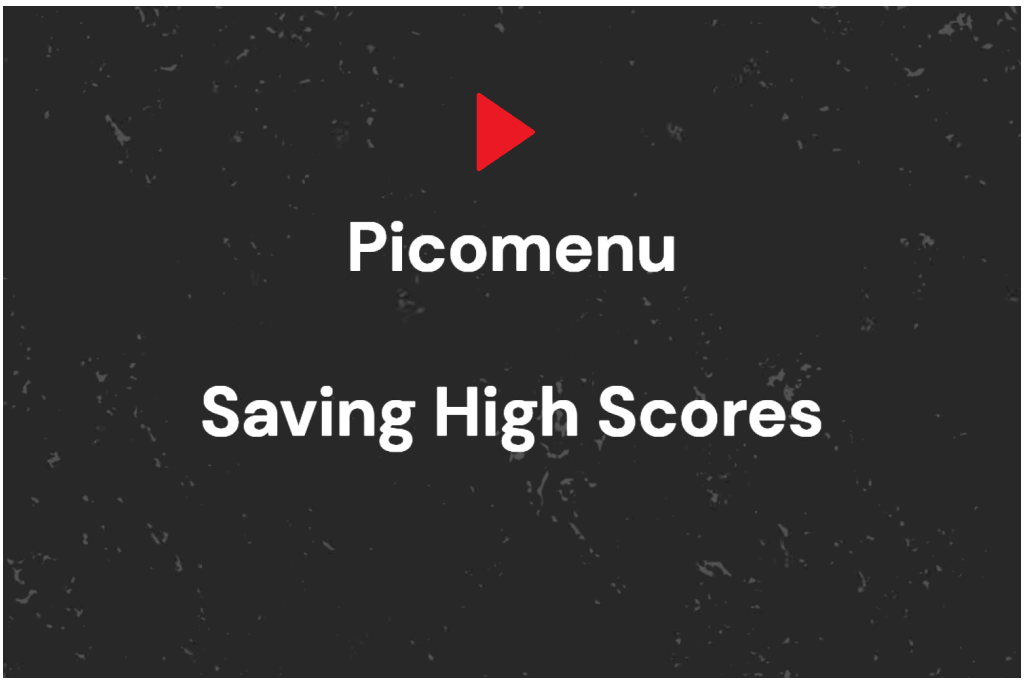

You can now save your highscores, these will then be re-loaded when you start a game.

First you need to have the NMI button set to hotkeys in the O-Options screen.

Load a game and play it. When you enter a high score either remember what name you entered or your score - then press and hold the NMI button and press T.

This will take you to the High Scores Screen. Press F-Find the table. It will then ask you to enter either the name you entered or your score. Type in one of these in and press enter and it will search for the high score table in the Spectrum's memory and display a list of matches. If you see an entry that looks like a match then choose it using the number keys. You will be asked to confirm the match - press "S-Save it as the game's table". You only need to do this once per game, as it will remember these settings for the future

You will exit back at the high scores screen. It is here where you can save the high scores manually. If you try to load another game or reset the spectrum through Picomenu then it will prompt you to save any high scores (if there are new high scores to save).

If you simply power off the Spectrum, or use the Spectrum's own reset button then high scores will not be saved, so make sure you manually save them using "S-Save it as the game's table" this is accessed by pressing and holding the NMI button and pressing T in game.

It is important to remember that high score saves are file name specific. If you have a version of a game in .z80, .sna, .szx, .tap and .tap the high score table will load on all these formats, as long as the names are all the same.

For example.

If you have a filename called Exolon.tap/.tzx/.z80/.sna/.szx then the files in /High Scores need to be named Exolon.bin/.txt. The high score save feature will capture the name of the file name when saving the high score.

Other system file types and extensions

.ini	Kept in the root of the SD card. Used for Picomenu.ini and stores the settings saved from the options screen.
.tape	Kept in /Tape Files on the SD card. Used to store tape position information and locations of .tap and .tzx files. Useful for multiload. Format is <Game Name><Extension>.tape
.info.txt	Kept in /Game Notes on the SD card. Used to game notes that are edited or downloaded from ZXDB. Format is <Game Name>.info.txt
.pok	Kept in /Poke List on the SD card. Used to load Pokes for games.
.scr and .png	Kept in /Scraper/Screen grabs. Format is <Game Name>.src/.png
.bin and txt	Kept in /High Scores. Format is <Game Name>.txt/.bin. .txt files contain the memory location of the high score table, .bin files are the high scores themselves.

.rom	You need to provide any ROMs yourself. Kept in /ROMS. Used for tape loading functionality and diagnostics.
.uf2	Picomenu firmware file. Must be kept on the root of the SD card to enable an update. Only keep one file on the root when updating, as a second may confuse Picomenu.

Multiload Games

Picomenu has the ability to hand each part over from the tape file at once, as the game asks for it, so you never wait for a cassette.

48K multi-load games

Loading the tape directly. In B - Browse Games, choose the .tap or .tzx. The Spectrum resets into 48 BASIC and types LOAD "" automatically. From then on, each time the game asks for a level, Picomenu finds it on the tape (by name or in order) and hands it over at once.

- At the end of the tape it starts again from the beginning, as if rewound, so a game that searches for a level by name always finds it.
- This works for games whose levels load with the ROM's tape loader (Gauntlet, Gauntlet II, etc), and for games with their own copy of it (see below).

Converting first. If the main game uses a turbo or protected loader, convert it using B - Browse Games.

- The converter notes where the .tap or .tzx had got to when the game stopped loading.
- You can then load the .z80 and Picomenu remembers the tape position in the .tap or .tzx and can then load the next multiload level.
- Make sure you use 4:48k not A (Auto). On a 128K Spectrum Auto makes a 128K .z80, which plays the 128K version and so will not work.

Save Snapshot. A save snapshot will also remember the tape position from the .tap or .tzx

This means you can load the save later and it picks up the same point in the .tap or .tzx at the same tape block. This note on tape positions follows the save, and the .tap or .tzx so the position is still remembered even if you rename or move either.

On a 128K Spectrum. A 48K multi-load game runs with the 128 locked in 48K mode (as 48 BASIC does), so it behaves exactly as on a 48K machine. While locked, a long press of the NMI button resets into 48 BASIC; use the Spectrum's own reset button or a power off to get back to the 128 menu.

128K multi-load games

128K games load through the Spectrum's own ROMs, so the tape goes in without a reset.

1. Load the game: by placing a .tap or .tzx in the Virtual Tape Player and using the 128's Tape Loader. Alternatively use the converter (convert with C and **1 - 128K**, or A on a 128K) to create a .z80.
2. Insert the tape with the levels on using the T-Tape command.
3. If that tape has 48K levels first, wind it to the 128K ones using the Virtual Tape Player,
4. Carry on playing. Each level loads at once when the game asks for it.

Save Snapshot. A 128K .z80 made by the converter does not remember the tape, so after loading a .z80 you need to insert a .tap or .tzx into the virtual tape player. To skip that, save with **Q** (or S) once the tape is in and wound: the save remembers the tape and block, so when you load the .z80 in the future it it will automatically insert the .tap or .tzx

Games with their own level loader

Some games load their levels with their own copy of the ROM's tape loader, kept in memory (Out Run's Speedlock releases do). The Picoface only sees the ROM, so these used to wait at PRESS PLAY. Picomenu now finds that copy and makes it load from the tape file.

- It looks when you put in a .tap or .tzx in with T-Tape, when a snapshot indicates there is more tape data than just the main game and in each block that the .tap or .tzx loads.
- Nothing changes for games that don't have such a loader.
- If you eject the tape, the game's loader uses the Spectrum's own ROM loader, so a real cassette would load at the normal speed rather than the game's faster one.
- Loaders that work differently (for example ones that decrypt as they load) are not recognised; convert those games instead.

Multiload Settings

Found in O - Options on the NMI menu.

Level_loaders	Finds a game's own copy of the tape loader and makes it load from the .tap or .tzx file. Off leaves every game as is.
Lock_48k	Some tapes hold a 48K version and a 128K version of the same game. When the game starts, the Spectrum checks whether the extra 128K memory is there. Use this setting if you want a 128k Spectrum to load a 48k version of a game. Most 48K games never check for 128K memory, so the lock only matters for the ones that do - you may need to experiment to find out what games use the lock. Settings are: ● tapes (the default): lock while a 48K tape is being played, if you are trying to run a 48k multiload on a

	128k spectrum you would need this setting on. ● always: lock for every 48K games, tapes and snapshot ● off: never lock.

Appendix A - Worked example of multiload: Out Run

Out Run loads a new stage at each fork in the road. Different releases need slightly different steps.

48K, Speedlock 3 tape (on a 48K or a 128K Spectrum)

1. Press B - Browse Games, and then V-View on the .tzx for Outrun, go to the tape page, press C, then 4 - 48K to convert it into a 48k .z80.
2. When it says Saved, load the new .z80.
3. Press 1 to start. Stage 1 loads from the tape at once, and later stages follow as you drive.

128K, Speedlock 4 two-tape release (on a 128K Spectrum)

1. Convert Tape 1 Side A in a 128K .z80, then load the .z80.
2. Press B - Browse Games, The T-Tape and choose, Tape 2 Side B (the stages). Every stage on it is 128K, so there is nothing to wind.
3. Press 1. Stage 1 loads and the race starts.
4. Optional: press Q before step 3 make a quick save and load that save next time; the stages tape goes back in by itself.

128K, the full Speedlock 3 tape (48K and 128K stages on one tape)

1. Convert the .tzx to a 128k .z80, then load the .z80.
2. Press B - Browse Games, then T-tape, and then choose the same .tzx.
3. Go into the Virtual Tape Player, go to page 2 and select the first 11kb block (this should be 5). Press X twice to exit.
4. Press 1. Stage 1 loads and the race starts.

Without step 3 the game takes the 48K stage 1 on the .tzx, which comes first on the tape and has the same stage number, and causes a crash.

Multiload Troubleshooting

Problem	Fix
The game waits at PRESS PLAY	Put the tape in with T (128K), or load the tape with its number (48K). Check level_loaders = patch.
A 48K game plays as the 128K version on a 128	Convert with 4 - 48K, not A, and keep lock_48k = tapes.

The game crashes as a level loads	The tape is at the wrong set of levels: wind it in V to the levels for your version (48K or 128K).
Loading the save doesn't put the tape back	The tape was moved outside PicoMenu (on a PC) or erased. Diagnostics (O - Options, D) says "Tape not found". Put it back, or put the tape in again with T and save once more.
The tape keeps going round	The game is searching for a level that isn't on the tape. Check you have the right tape (some releases put the levels on a second tape).
A long press goes to 48 BASIC, not the 128 menu	The 128 is locked in 48K mode for the game. Use the Spectrum's own reset button.