## ETSI TS 128 658 V12.0.0 (2014-10)



Universal Mobile Telecommunications System (UMTS); LTE;

Telecommunication management;
Evolved Universal Terrestrial
Radio Access Network (E-UTRAN)
Network Resource Model (NRM)
Integration Reference Point (IRP);
Information Service (IS)
(3GPP TS 28.658 version 12.0.0 Release 12)



# Reference RTS/TSGS-0528658vc00 Keywords LTE.UMTS

#### **ETSI**

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

#### Important notice

The present document can be downloaded from: http://www.etsi.org

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the only prevailing document is the print of the Portable Document Format (PDF) version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

<a href="http://portal.etsi.org/tb/status/status.asp">http://portal.etsi.org/tb/status/status.asp</a></a>

If you find errors in the present document, please send your comment to one of the following services: <u>http://portal.etsi.org/chaircor/ETSI\_support.asp</u>

#### **Copyright Notification**

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2014.
All rights reserved.

**DECT**<sup>TM</sup>, **PLUGTESTS**<sup>TM</sup>, **UMTS**<sup>TM</sup> and the ETSI logo are Trade Marks of ETSI registered for the benefit of its Members. **3GPP**<sup>TM</sup> and **LTE**<sup>TM</sup> are Trade Marks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

GSM® and the GSM logo are Trade Marks registered and owned by the GSM Association.

## Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://ipr.etsi.org).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

#### **Foreword**

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under http://webapp.etsi.org/key/queryform.asp.

## Modal verbs terminology

In the present document "shall", "shall not", "should", "should not", "may", "may not", "need", "need not", "will", "will not", "can" and "cannot" are to be interpreted as described in clause 3.2 of the <a href="ETSI Drafting Rules">ETSI Drafting Rules</a> (Verbal forms for the expression of provisions).

"must" and "must not" are NOT allowed in ETSI deliverables except when used in direct citation.

## Contents

Intell	lectual Property Rights	2
Forev	word	2
Moda	al verbs terminology	2
Forev	word	6
Introd	duction	6
1	Scope	7
2	References	7
3	Definitions and abbreviations	
3.1	Definitions	
3.2	Abbreviations	9
4	Model	
4.1	Imported information entities and local labels	
4.2	Class diagram	
4.2.1	Relationships	
4.2.2		
4.3	Class definitions	
4.3.1		
4.3.1.		
4.3.1.	- 110110 000	
4.3.1.		
4.3.1.		
4.3.2		
4.3.2.	.1 Definition	15
4.3.2.		16
4.3.2.		
4.3.2.	.4 Notifications	16
4.3.3	EUtranGenericCell	16
4.3.3.	.1 Definition	16
4.3.3.	.2 Attributes	17
4.3.3.	.3 Attribute constraints	17
4.3.3.4	.4 Notifications	17
4.3.4	ExternalEUtranGenericCell	18
4.3.4.	.1 Definition	18
4.3.4.		
4.3.4.	.3 Attribute constraints	18
4.3.4.	.4 Notifications	18
4.3.5	EUtranCellFDD	18
4.3.5.		
4.3.5.		
4.3.5.		
4.3.5.		
4.3.6		
4.3.6.		
4.3.6.		
4.3.6.		
4.3.6.		
4.3.7		
4.3.7.		
4.3.7.		
4.3.7 4.3.7		
۰.3.7 ۲.3.7.		

4.3.8	ExternalEUtranCellTDD	19
4.3.8.1	Definition	19
4.3.8.3	Attribute constraints	19
4.3.8.4	Notifications	19
4.3.9	EUtranRelation	20
4.3.9.1	Definition	20
4.3.9.2	Attributes	
4.3.9.3	Attribute constraints	20
4.3.9.4	Notifications	
4.3.10	Link ENB ENB	
4.3.10.1	Definition	
4.3.10.2	Attributes	
4.3.10.3	Attribute constraints	
4.3.10.4	Notifications	
4.3.11	Cdma2000Relation	
4.3.11.1	Definition	
4.3.11.2	Attributes	
4.3.11.3	Attributes Constraints	
4.3.11.4	Notifications	
4.3.12	MCEFunction	
4.3.12.1	Definition	
4.3.12.2	Attributes	
4.3.12.3	Attribute constraints	
4.3.12.4	Notifications	
4.3.13	MBSFNArea	
4.3.13.1	Definition	
4.3.13.2	Attributes	
4.3.13.3	Attribute constraints	
4.3.13.4	Notifications	
4.3.14	Link_MCE_ENB	
4.3.14.1	Definition	
4.3.14.2	Attributes	
4.3.14.3	Attribute constraints	
4.3.14.4	Notifications	
4.3.15	Link_MCE_MME	
4.3.15.1	Definition	
4.3.15.2	Attributes	
4.3.15.3	Attribute constraints	
4.3.15.4	Notifications	23
4.3.16	RNFunction	23
4.3.16.1	Definition	23
4.3.16.2	Attributes	23
4.3.16.3	Attribute constraints	23
4.3.16.4	Notifications	23
4.3.17	ExternalRNFunction	23
4.3.17.1	Definition	
4.3.17.2	Attributes	
4.3.17.3	Attribute constraints	23
4.3.17.4	Notifications	
4.3.18	DeNBCapability	
4.3.18.1	Definition	
4.3.18.2	Attributes	
4.3.18.3	Attribute constraints	
4.3.18.4	Notifications	
4.3.19	CellOutageCompensationInformation	
4.3.19.1	Definition	
4.3.19.1	Attributes	
4.3.19.2	Attributes	
4.3.19.3 4.3.19.4	Notifications	
4.3.19.4	QciDscpMapping	
4.3.20 4.3.20 1	QCIDSCPMapping	

History		50
Annex B	B (informative): Change history	49
Annex A	A (informative): Notifications during a Cell Outage Compensation	n45
4.5.2	Configuration notifications	44
4.5.1	Alarm notifications	
4.5	Common notifications	
4.4.2	Constraints	
4.4.1	Attribute properties	
4.4	Attribute definitions	28
4.3.21.4	Notifications	27
4.3.21.3	Attribute constraints	27
4.3.21.2	Attributes	26
4.3.21.1	Definition	
4.3.21	EUtranCellNMCentralizedSON	25
4.3.20.4	Notifications	25
4.3.20.3	Attribute constraints	25
4.3.20.2	Attributes	25

#### **Foreword**

This Technical Specification has been produced by the 3<sup>rd</sup> Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

#### where:

- x the first digit:
  - 1 presented to TSG for information;
  - 2 presented to TSG for approval;
  - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

#### Introduction

The present document is part of a TS-family covering the 3<sup>rd</sup> Generation Partnership Project; Technical Specification Group Services and System Aspects; Telecommunication management; as identified below:

- 28.657 Evolved Universal Terrestrial Radio Access Network (E-UTRAN) Network Resource Model (NRM) Integration Reference Point (IRP); Requirements
- 28.658 Evolved Universal Terrestrial Radio Access Network (E-UTRAN) Network Resource Model (NRM) Integration Reference Point (IRP); Information Service (IS)
- 28.659 Evolved Universal Terrestrial Radio Access Network (E-UTRAN) Network Resource Model (NRM) Integration Reference Point (IRP); Solution Set (SS) definitions

## 1 Scope

The present document specifies the E-UTRAN network resource information that can be communicated between an IRPAgent and an IRPManager for telecommunication network management purposes, including management of converged networks.

This document specifies the semantics and behaviour of information object class attributes and relations visible across the reference point in a protocol and technology neutral way. It does not define their syntax and encoding.

The E-UTRAN NRM IRP comprises a set of specifications defining Requirements, a protocol neutral Information Service and one or more Solution Set(s).

The present document specifies the protocol neutral E-UTRAN NRM IRP: Information Service (IS). It reuses relevant parts of the Generic NRM IRP: IS in 3GPP TS 28.622 [6], either by direct reuse or sub-classing, and in addition to that defines E-UTRAN specific Information Object Classes.

In order to access the information defined by this NRM, an Interface IRP such as the "Basic CM IRP" is needed (3GPP TS 32.602 [7]). However, which Interface IRP is applicable is outside the scope of the present document.

## 2 References

[10]

[11]

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

Keteuse us tr	e present document.
[1]	3GPP TS 32.101: "Telecommunication management; Principles and high level requirements".
[2]	3GPP TS 32.102: "Telecommunication management; Architecture".
[3]	3GPP TS 23.003: "Numbering, addressing and identification".
[4]	3GPP TS 32.300: "Telecommunication management; Configuration Management (CM); Name convention for Managed Objects".
[5]	3GPP TS 28.628: "Self-Organizing Networks (SON) Policy Network Resource Model (NRM) Integration Reference Point (IRP); Information Service (IS)".
[6]	3GPP TS 28.622: "Telecommunication management; Generic Network Resource Model (NRM) Integration Reference Point (IRP); Information Service (IS)".
[7]	3GPP TS 32.602: "Telecommunication management; Configuration Management (CM); Basic CM Integration Reference Point (IRP) Information Service (IS)".
[8]	3GPP TS 36.321: "Universal Terrestrial Access Network (UTRAN); Medium Access Control (MAC) protocol specification".
[9]	3GPP TS 23.401: "General Packet Radio Service (GPRS) enhancements for Evolved Universal Terrestrial Radio Access Network (E-UTRAN) access".

Terrestrial Radio Access Network (E-UTRAN); Overall description; Stage 2 ".

Control (RRC); Protocol specification".

3GPP TS 36.331: "Evolved Universal Terrestrial Radio Access (E-UTRA) Radio Resource

3GPP TS 36.300: "Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Universal

[12]	3GPP TS 36.211: "Evolved Universal Terrestrial Radio Access (E-UTRA); Physical Channels and Modulation"
[13]	3GPP TS 36.101: "Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) radio transmission and reception"
[14]	3GPP TS 36.104: "Evolved Universal Terrestrial Radio Access (E_UTRA); Base Station (BS) radio transmission and reception"
[15]	3GPP TS 32.500: "Telecommunication Management; Self-Organizing Networks (SON); Concepts and requirements"
[16]	3GPP TS 32.150: "Telecommunication management; Integration Reference Point (IRP) Concept and definitions"
[17]	3GPP TS 21.905: "Vocabulary for 3GPP Specifications"
[18]	3GPP TS 32.111-2: "Telecommunication management; Fault Management; Part 2: Alarm Integration Reference Point (IRP): Information Service (IS)"
[19]	3GPP TS 23.002: "Network Architecture"
[20]	3GPP TS 32.652: "Telecommunication management; Configuration Management (CM); GERAN network resources Integration Reference Point (IRP); Network Resource Model (NRM)"
[21]	3GPP TS 28.652: "Telecommunication management;Universal Terrestrial Radio Access Network (UTRAN) Network Resource Model (NRM) Integration Reference Point (IRP);Information Service (IS) "
[22]	3GPP2 S.S0028-D "OAM&P for cdma2000 (Overview, 3GPP R7 Delta Specification, 3GPP2 Network Resource Model IRP)"
[23]	3GPP TS 28.708: "Telecommunication management; Evolved Packet Core (EPC) Network Resource Model (NRM) Integration Reference Point (IRP): Information Service (IS)"
[24]	3GPP TS 36.423: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); X2 application protocol (X2AP)".
[25]	3GPP TS 36.213: "Evolved Universal Terrestrial Radio Access (E-UTRA); Physical layer procedures".
[26]	3GPP TS 28.625: "Telecommunication management; State Management Data Definition Integration Reference Point (IRP); Information Service (IS) ".
[27]	3GPP TS 36.413: "Evolved Universal Terrestrial Access Network (E-UTRAN); S1 Application Protocol (S1AP)".
[28]	3GPP TS 36.443: "Evolved Universal Terrestrial Access Network (E-UTRAN);M2 Application Protocol (M2AP)".
[29]	3GPP TS 22.011: "Service accessibility".
[30]	3GPP TS 32.422: "Telecommunication management; Subscriber and equipment trace; Trace control and configuration management".
[31]	3GPP TS 28.662: "Telecommunication management; Generic Radio Access Network (RAN) Network Resource Model (NRM) Integration Reference Point (IRP); Information Service (IS) ".
[32]	3GPP TS 32.662: "Telecommunication management; Configuration Management (CM); Kernel CM; Information service (IS)".
[33]	3GPP TS 23.203: "Policy and charging control architecture".
[34]	3GPP TS 23.207: "End-to-end Quality of Service (QoS) concept and architecture".
[35]	RFC 2474: "Definition of the Differentiated Services Field (DS Field) in the IPv4 and IPv6 Headers".

[36]	3GPP TS 45.008: "Technical Specification Group GSM/EDGE Radio Access Network; Radio subsystem link control".
[37]	3GPP TS 32.302: "Telecommunication management; Configuration Management (CM); Notification Integration Reference Point (IRP): Information Service (IS)".
[38]	3GPP TS 36.133: "Universal Terrestrial Access Network (UTRAN); Requirements for support of radio resource management"

## 3 Definitions and abbreviations

#### 3.1 Definitions

For the purposes of the present document, the terms and definitions given in TS 32.150 [16], TS 32.101 [1], TS 32.102 [2] and TS 21.905 [17] and the following apply.

Association: See definition in TS 28.622 [6].

Network Resource Model (NRM): See definition in TS 28.622 [6].

**eNodeB:** A logical node responsible for radio transmission/reception in one or more cells to/from the User Equipment. It terminates the S1 interface towards the EPC.

#### 3.2 Abbreviations

For the purposes of the present document, the abbreviations given in TS 32.150 [16], TS 32.101 [1], TS 32.102 [2] and TS 21.905 [17] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in TS 32.150 [16], TS 32.101 [1], TS 32.102 [2] and TS 21.905 [17], in that order.

DeNB Donor eNodeB

DN Distinguished Name (see 3GPP TS 32.300 [4]) E-UTRA Evolved Universal Terrestrial Radio Access

E-UTRAN Evolved Universal Terrestrial Radio Access Network

MBSFN Multimedia Broadcast multicast service Single Frequency Network

NR Neighbour cell Relation PM Performance Management

RDN Relative Distinguished Name (see 3GPP TS 32.300 [4])

RN Relay Node

## 4 Model

## 4.1 Imported information entities and local labels

Label reference	Local label
3GPP TS 28.625 [26], attribute, administrativeState	administrativeState
3GPP TS 28.625 [26], attribute, availabilityStatus	availabilityStatus
3GPP TS 28.625 [26], attribute, operationalState	operationalState
3GPP TS 28.622 [6], IOC, Top	Тор
3GPP TS 28.622 [6], IOC, ManagedElement	ManagedElement
3GPP TS 28.622 [6], IOC, SubNetwork	SubNetwork

3GPP TS 28.622 [6], IOC, ManagedFunction	ManagedFunction
3GPP TS 28.622 [6], IOC, Link	Link
3GPP TS 28.708 [23], IOC, MMEFunction	MMEFunction
3GPP TS 28.708 [23], IOC, ExternalMMEFunction	ExternalMMEFunction
3GPP TS 28.652 [21], IOC, UtranRelation	UtranRelation
3GPP TS 28.662 [31], IOC, AntennaFunction	AntennaFunction
3GPP TS 28.662 [31], IOC, TmaFunction	TmaFunction
3GPP TS 32.652 [20], IOC, GsmRelation	GsmRelation
3GPP2 TS S.S0028 [22], IOC, ExternalSector	ExternalSector
3GPP TS 28.708 [23], IOC, EP_RP_EPS	EP_RP_EPS
3GPP TS 28.708 [23], IOC, QCISet	QCISet
3GPP TS 28.662 [31], IOC, SectorEquipmentFunction	SectorEquipmentFunction
3GPP TS 28.628 [5], IOC, EnergySavingProperties	EnergySavingProperties

## 4.2 Class diagram

#### 4.2.1 Relationships

This clause depicts the set of classes (e.g. IOCs) that encapsulates the information relevant for this IRP. This clause provides the overview of the relationships of relevant classes in UML. Subsequent clauses provide more detailed specification of various aspects of these classes.


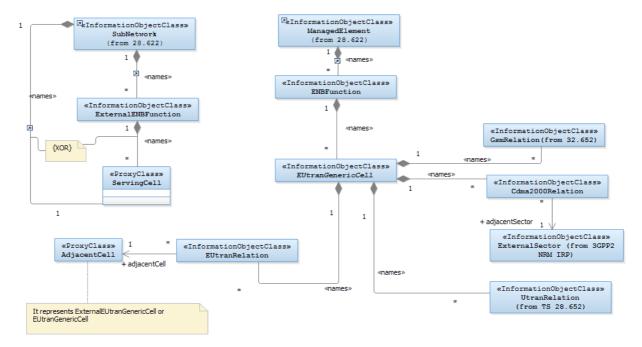


Figure 4.2.1-1: Cell view of E-UTRAN NRM

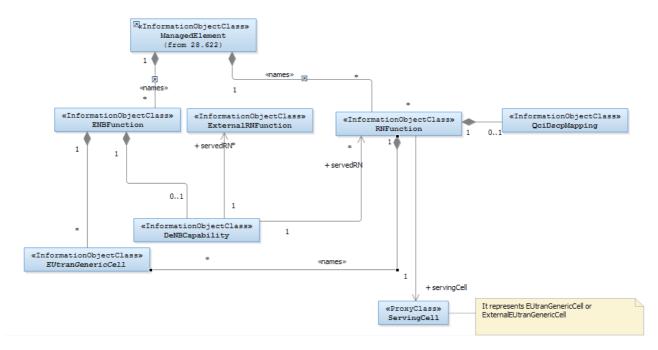

NOTE 1: If an instance of the ServesRN association is present, then a corresponding instance of ServedByEGC must be present. In this case, the ENBFunction and RNFunction instances are under the management scope of the same IRPAgent.

If an instance of the ServesExtRN association is present, then a corresponding instance of ServedByExtEGC must be present. In this case, the ENBFunction and RNFunction instances are under the management scope of two different IRPAgents.

NOTE 2: The modelling of the DeNB capability as a separate IOC or as attributes of ENBFunction is FFS

Figure 4.2.1-2: E-UTRAN relaying view of E-UTRAN NRM

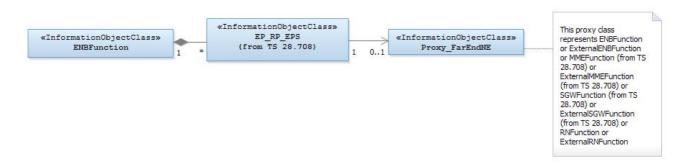


Figure 4.2.1-3: Transport view of E-UTRAN NRM

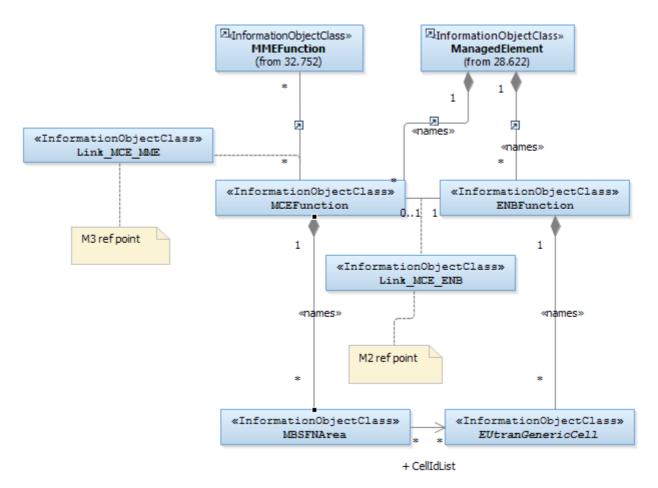


Figure 4.2.1-4: MBMS view of E-UTRAN NRM 1

NOTE 1: This is E-UTRAN NRM containment/relationship Figure form view of MBMS when MCE and ENB belong to one Network Element.

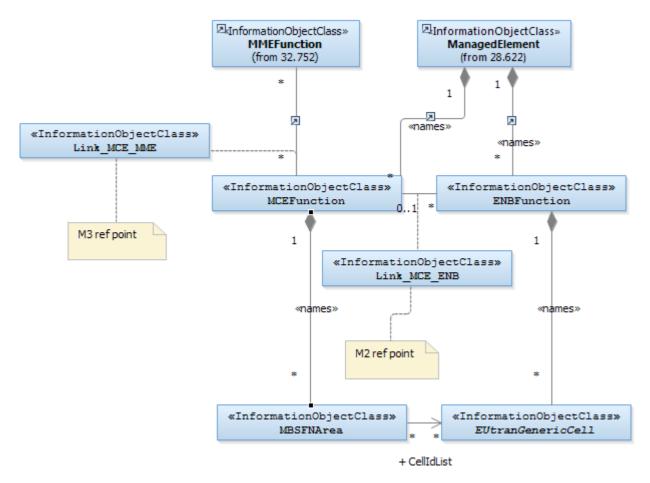


Figure 4.2.1-5: MBMS view of E-UTRAN NRM 2

NOTE 2: This is E-UTRAN NRM containment/relationship Figure form view of MBMS when MCE and ENB belong to different Network Elements.

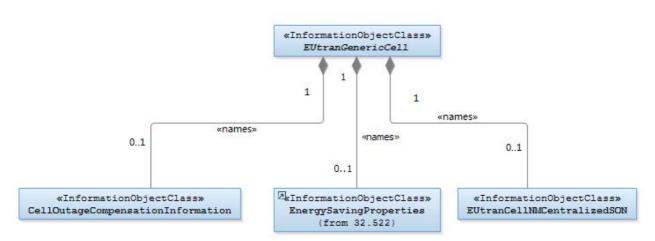
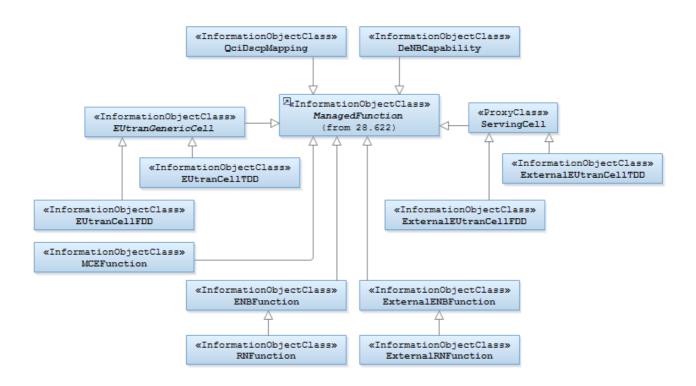


Figure 4.2.1-6: SON related Attributes NRM IOCs (Containment Relationship)

#### 4.2.2 Inheritance



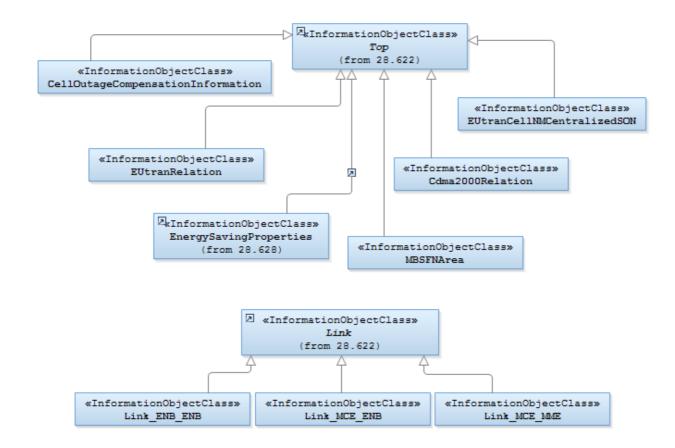


Figure 4.2.2-1: E-UTRAN NRM Inheritance Hierarchy

#### 4.3 Class definitions

#### 4.3.1 ENBFunction

#### 4.3.1.1 Definition

This IOC represents eNB functionality. For more information about the eNB, see 3GPP TS 23.002 [19].

#### 4.3.1.2 Attributes

Attribute name	Support Qualifier	isReadable	isWritable	isInvariant	isNotifyable
intraANRSwitch	CM	М	M	-	M
iRATANRSwitch	CM	М	M	-	M
eNBId	M	М	-	-	M
x2BlackList	CM	M	M	-	M
x2WhiteList	CM	М	М	-	M
x2HOBlackList	CM	М	M	-	M
x2IpAddressList	0	М	-	-	M
tceIDMappingInfoList	CM	M	M	-	M
sharNetTceMappingInfoList	CM	M	М	-	M

#### 4.3.1.3 Attribute constraints

Name	Definition
intraANRSwitch Support Qualifier	The condition is "ANR function is supported".
iRATANRSwitch Support Qualifier	The condition is "ANR function is supported".
x2BlackList Support Qualifier	The condition is "ANR function is supported".
x2WhiteList Support Qualifier	The condition is "ANR function is supported".
x2HOBlackList Support Qualifier	The condition is "ANR function is supported".
tceIDMappingInfoList Support Qualifier	The condition is "MDT function is supported" and only one PLMN is supported
sharNetTceMappingInfoList Support Qualifier	The condition is "MDT function and several PLMNs are supported".

#### 4.3.1.4 Notifications

The common notifications defined in subclause 4.5 are valid for this IOC, without exceptions or additions.

#### 4.3.2 ExternalENBFunction

#### 4.3.2.1 Definition

This IOC represents an external eNB functionality. For more information about the eNB, see 3GPP TS 23.002 [19].

#### 4.3.2.2 Attributes

Attribute name	Support Qualifier	isReadable	isWritable	isInvariant	isNotifyable
eNBId	М	M	M	-	M

#### 4.3.2.3 Attribute constraints

None.

#### 4.3.2.4 Notifications

The common notifications defined in subclause 4.5 are valid for this IOC, without exceptions or additions.

#### 4.3.3 EUtranGenericCell

#### 4.3.3.1 Definition

This abstract IOC represents the common properties of an E-UTRAN generic cell. For more information about cells, see 3GPP TS 23.401 [9].

#### 4.3.3.2 Attributes

Attribute name	Support Qualifier	isReadable	isWritable	isInvariant	isNotifyable
cellLocalId	M	М	M	-	M
cellSize	M	М	M	-	М
plmnIdList	M	М	M	-	М
tac	M	М	M	-	М
pci	M	М	CM	-	М
pciList	CM	М	M	-	М
maximumTransmissionPo wer	М	М	СМ	-	М
referenceSignalPowe r	М	М	M	-	М
pb	M	М	M	-	M
partOfSectorPower	CM	М	M	-	М
relatedTmaList	CO	М	-	-	М
relatedAntennaList	CO	М	-	-	М
relatedSector	CM	М	-	-	М
cellResvInfo	CM	М	M	-	M
allowedAccessClasses	M	М	M	-	M
isChangeForEnergySavi ngAllowed	СМ	М	М	-	М
operationalState (see Note 1)	СМ	М	-	-	M (see Note 2)
administrativeState (see Note 1)	СМ	М	-	-	M (see Note 2)
availabilityStatus (see Note 1)	СМ	М	-	-	M (see Note 2)
Note 1: No state propagation shall be implied.  Note 2: The attribute value change is conveyed by the notifyStateChange notification.					

## 4.3.3.3 Attribute constraints

Name	Definition
pci CM Write Qualifier	NM-Centralized PCI assignment (see TS 32.500, ref [15]
	subclause 6.1.6) is supported.
pciList CM Support Qualifier	Either EM-Centralized or Distributed PCI assignment (see TS
	32.500, ref [15] subclause 6.1.6) is supported.
partOfSectorPower CM support qualifier	The IOC SectorEquipmentFunction is used.
maximumTransmissionPower CM Write Qualifier	The IOC SectorEquipmentFunction is not used.
relatedTmaList CO Support Qualifier	The IOC SectorEquipmentFunction is not used.
relatedAntennaList CO Support Qualifier	The IOC SectorEquipmentFunction is not used.
relatedSector CM Support Qualifier	The IOC SectorEquipmentFunction is used.
cellResvInfo CM Support Qualifier	The MBSFN Transmission (see TS 36.300, ref[11] subclause
	15.3.3) is supported.
isChangeForEnergySavingAllowed CM Support	The energy saving functionality is supported and uses
Qualifier	distributed architecture.

#### 4.3.3.4 Notifications

The common notifications defined in subclause 4.5 are valid for this IOC In addition, the following set of notification, defined in 3GPP TS 32.662 [32], is also valid.

Name	Qualifier	Notes
notifyStateChange	0	

.

#### 4.3.4 ExternalEUtranGenericCell

#### 4.3.4.1 Definition

This abstract IOC represents the properties of an E-UTRAN generic cell controlled by another IRPAgent. This IOC contains necessary attributes for inter-system and intra-system handover. It also contains a subset of the attributes of related IOCs controlled by another IRPAgent. The way to maintain consistency between the attribute values of these IOCs is outside the scope of the present document.

#### 4.3.4.2 Attributes

Attribute name	Support Qualifier	isReadable	isWritable	isInvariant	isNotifyable
Ppci	M	М	M	-	M
plmnIdList	M	M	M	=	M
cellLocalId	M	M	M	=	M
eNBId	CM	M	M	=	M

#### 4.3.4.3 Attribute constraints

Name	Definition
eNBId CM Support Qualifier	This instance of ExternalEutranGenericCell IOC is directly
	contained by SubNetwork.

#### 4.3.4.4 Notifications

The common notifications defined in subclause 4.5 are valid for this IOC, without exceptions or additions.

#### 4.3.5 EUtranCellFDD

#### 4.3.5.1 Definition

This IOC represents the properties of E-UTRAN FDD cell.

#### 4.3.5.2 Attributes

Attribute name	Support Qualifier	isReadable	isWritable	isInvariant	isNotifyable
earfcnDl	M	M	M	-	М
earfcnUl	M	M	M	-	М

#### 4.3.5.3 Attribute constraints

None.

#### 4.3.5.4 Notifications

#### 4.3.6 ExternalEUtranCellFDD

#### 4.3.6.1 Definition

This IOC represents the common properties of external E-UTRAN FDD cell.

#### 4.3.6.2 Attributes

Attribute name	Support Qualifier	isReadable	isReadable isWritable		isNotifyable
earfcnDl	M	M	M	-	M
earfcnUl	M	M	M	-	M

#### 4.3.6.3 Attribute constraints

None.

#### 4.3.6.4 Notifications

The common notifications defined in subclause 4.5 are valid for this IOC, without exceptions or additions.

#### 4.3.7 EUtranCellTDD

#### 4.3.7.1 Definition

This IOC represents the properties of E-UTRAN cell TDD.

#### 4.3.7.2 Attributes

Attribute name	Support Qualifier	isReadable	isWritable	isInvariant	isNotifyable
earfcn	M	M	M	-	M
sfAssignment	M	M	M	-	M
specialSfPatterns	M	M	M	-	M

#### 4.3.7.3 Attribute constraints

None.

#### 4.3.7.4 Notifications

The common notifications defined in subclause 4.5 are valid for this IOC, without exceptions or additions.

#### 4.3.8 ExternalEUtranCellTDD

#### 4.3.8.1 Definition

This IOC represents the common properties of external E-UTRAN cell TDD.

4.3.8.2 Attributes Attribute name	Support Qualifier	isReadable	isWritable	isInvariant	isNotifyable	
earfcn	M	M	M	-	M	

#### 4.3.8.3 Attribute constraints

None.

#### 4.3.8.4 Notifications

#### 4.3.9 EUtranRelation

#### 4.3.9.1 Definition

This IOC represents a NR from a source cell to a target cell, where the target cell is a EUtranGenericCell or ExternalEUtranGenericCell instance.

The source cell can be an EUtranGenericCell instance. This is the case for an Intra-E-UTRAN NR.

The source cell can be a UtranGenericCell instance. This is the case for Inter-RAT NR from UTRAN to E-UTRAN. See 3GPP TS 28.652 [21].

The source cell can be a GsmCell instance. This is the case for Inter-RAT NR from GERAN to E-UTRAN. See 3GPP TS 32.652 [20].

NRs are unidirectional.

#### 4.3.9.2 Attributes

Attribute name	Support Qualifier	isReadable	isWritable	isInvariant	isNotifyable
tCI	0	M	M	-	M
isRemoveAllowed	CM	M	M	-	M
isHOAllowed	CM	M	M	-	M
isICICInformationSendAllowed	СМ	М	М	-	М
isLBAllowed	CM	М	M	-	M
isESCoveredBy	CM	М	M	-	M
qOffset	CM	M	M	-	M
cellIndividualOffset	CM	М	-	-	M
Attribute related to role					
adjacentCell	М	М	M	-	М

#### 4.3.9.3 Attribute constraints

Name	Definition
isRemoveAllowed Support Qualifier	The condition is "ANR function is supported in the
	source cell, and the source cell is an
	EUtranGenericCell or a UtranGenericCell".
isHOAllowed Support Qualifier	The condition is "ANR function is supported in the
	source cell, and the source cell is an
	EUtranGenericCell or a UtranGenericCell".
isICICInformationSendAllowed	The condition is "ICIC function is supported".
Support Qualifier	
isLBAllowed Support Qualifier	The condition is "LB function is supported".
isESCoveredBy Support Qualifier	The condition is "Energy Saving function is
	supported".
qOffset Support Qualifier	The condition is "Neither an EM-centralized nor a
	distributed SON function support the SON use cases
	for which this attribute is relevant (see §6.5.1)".
cellIndividualOffset Support Qualifier	The condition is "HOO function is supported" or "Load
	Balancing Optimization function is supported".

#### 4.3.9.4 Notifications

#### 4.3.10 Link\_ENB\_ENB

#### 4.3.10.1 Definition

This IOC represents the link between two ENBFunction.

#### 4.3.10.2 Attributes

None.

#### 4.3.10.3 Attribute constraints

None.

#### 4.3.10.4 Notifications

The common notifications defined in subclause 4.5 are valid for this IOC, without exceptions or additions.

#### 4.3.11 Cdma2000Relation

#### 4.3.11.1 Definition

This IOC represents a NR from one EUtranGenericCell to a CDMA2000 sector. NRs are directional.

See 3GPP2 TS S.S0028 [22]

#### 4.3.11.2 Attributes

Attribute name	Support Qualifier	isReadable	isWritable	isInvariant	isNotifyable
Attribute related to role					
adjacentSector	М	M	-	-	M

#### 4.3.11.3 Attribute constraints

None.

#### 4.3.11.4 Notifications

The common notifications defined in subclause 4.5 are valid for this IOC, without exceptions or additions.

#### 4.3.12 MCEFunction

#### 4.3.12.1 Definition

This IOC represents MCE functionality. For more information about the MCE, see 3GPP TS 36.300 [11].

#### 4.3.12.2 Attributes

None.

#### 4.3.12.3 Attribute constraints

None.

#### 4.3.12.4 Notifications

The common notifications defined in subclause 4.5 are valid for this IOC, without exceptions or additions.

#### 4.3.13 MBSFNArea

#### 4.3.13.1 Definition

This IOC represents MBSFN Area. For more information about MBSFN Area, see 3GPP TS 36.300 [11].

#### 4.3.13.2 Attributes

Attribute name	Support Qualifier	isReadable	isWritable	isInvariant	isNotifyable
mbsfnAreaId	M	M	М	-	M
Attribute related to role					
cellIdList	M	М	М	-	М

#### 4.3.13.3 Attribute constraints

None.

#### 4.3.13.4 Notifications

Name	Qualifier	Notes
notifyAttributeValueChange	See Kernel CM IRP (3GPP TS 32.662 [32])	
notifyObjectCreation	See Kernel CM IRP (3GPP TS 32.662 [32])	
notifyObjectDeletion	See Kernel CM IRP (3GPP TS 32.662 [32])	

#### 4.3.14 Link MCE ENB

#### 4.3.14.1 Definition

This IOC models the M2 reference point as defined in TS 36.300 [11].

#### 4.3.14.2 Attributes

None.

#### 4.3.14.3 Attribute constraints

None.

#### 4.3.14.4 Notifications

The common notifications defined in subclause 4.5 are valid for this IOC, without exceptions or additions.

#### 4.3.15 Link MCE MME

#### 4.3.15.1 Definition

This IOC models the M3 reference point as defined in TS 36.300 [11].

#### 4.3.15.2 Attributes

None.

#### 4.3.15.3 Attribute constraints

None.

#### 4.3.15.4 Notifications

The common notifications defined in subclause 4.5 are valid for this IOC, without exceptions or additions.

#### 4.3.16 RNFunction

#### 4.3.16.1 Definition

This IOC represents Relay Node (RN) functionality. For more information about RN, see 3GPP TS 36.300 [11].

#### 4.3.16.2 Attributes

Attribute name	Support Qualifier	isReadable	isWritable	isInvariant	isNotifyable
candidateDeNBCells	М	M	M	=	M
Attribute related to role					
servingCell	М	M	M	-	M

Editor's note: the need of attribute candidateDeNBCells is for FFS.

#### 4.3.16.3 Attribute constraints

None.

#### 4.3.16.4 Notifications

The common notifications defined in subclause 4.5 are valid for this IOC, without exceptions or additions.

#### 4.3.17 ExternalRNFunction

#### 4.3.17.1 Definition

This IOC represents the properties of a Relay Node (RN) controlled by another IRPAgent. For more information about RN, see 3GPP TS 36.300 [11].

#### 4.3.17.2 Attributes

None.

#### 4.3.17.3 Attribute constraints

None.

#### 4.3.17.4 Notifications

#### 4.3.18 DeNBCapability

#### 4.3.18.1 Definition

This IOC represents the capability for an eNodeB to act as a Donor eNodeB (DeNB) functionality. For more information about the DeNB, see 3GPP TS 36.300 [11].

#### 4.3.18.2 Attributes

Attribute name	Support Qualifier	isReadable	isWritable	isInvariant	isNotifyable
maxNbrRNAllowed	M	M	M	-	М
Attribute related to role					
servedRN	M	M	M	-	M

#### 4.3.18.3 Attribute constraints

None.

#### 4.3.18.4 Notifications

The common notifications defined in subclause 4.5 are valid for this IOC, without exceptions or additions.

#### 4.3.19 CellOutageCompensationInformation

#### 4.3.19.1 Definition

This IOC represents information relevant in case of a Cell Outage Compensation taking place.

#### 4.3.19.2 Attributes

Attribute name	Support Qualifier	isReadable	isWritable	isInvariant	isNotifyable
cOCStatus	М	M	-	-	M
isCOCAllowed	M	M	M	-	М

#### 4.3.19.3 Attribute constraints

None.

#### 4.3.19.4 Notifications

The common notifications defined in subclause 4.5 are valid for this IOC, with the addition that notifyAttributeValueChange shall be supported (Support Qualifier M).

## 4.3.20 QciDscpMapping

#### 4.3.20.1 Definition

This IOC represents a set of mapping between QCI and DSCP.

#### 4.3.20.2 Attributes

Attribute Name	Support Qualifier	isReadable	isWritable	isInvariant	isNotifyable
qciDscpMappingList	M	М	М	-	M

#### 4.3.20.3 Attribute constraints

N one.

#### 4.3.20.4 Notifications

Name	Qualifier	Notes
notifyAttributeValueChange	See Kernel CM IRP (3GPP TS 32.662 [32])	
notifyObjectCreation	See Kernel CM IRP (3GPP TS 32.662 [32])	
notifyObjectDeletion	See Kernel CM IRP (3GPP TS 32.662 [32])	

#### 4.3.21 EUtranCellNMCentralizedSON

#### 4.3.21.1 Definition

This abstract IOC represents the properties of an E-UTRAN generic cell which relate to SON functions. Its purpose is to enable configuration and tuning of the cell behaviour by the operator for SON functions which are not (yet) implemented in the eNodeB. NMS level SON should consider when configuring and tuning the cell the correlation of different attributes to optimise the eNodeB and network performance. For more information about cells, see 3GPP TS 23.401 [9].

#### 4.3.21.2 Attributes

Attaileute memo	Support	isReada	isWritabl	isInvaria	isNotifya
Attribute name	Qualifier	ble	е	nt	ble
alThresholdRsrp	CM	М	М	-	М
alThresholdRsrq	CM	М	М	-	М
a2ThresholdRsrp	CM	М	М	-	М
a2ThresholdRsrq	CM	М	M	-	M
a30ffset	CM	М	М	-	M
a4ThresholdRsrp	CM	М	М	-	М
a4ThresholdRsrq	CM	М	М	-	M
a5Threshold1Rsrp	CM	М	М	-	M
a5Threshold1Rsrq	CM	М	М	-	M
blThresholdUtraRscp	CM	М	М	-	M
blThresholdUtraEcN0	CM	М	М	-	M
blThresholdGeran	CM	М	M	-	M
blThresholdCdma2000	CM	М	M	-	M
b2Threshold1Rsrp	CM	М	M	-	M
b2Threshold1Rsrq	CM	М	M	-	M
b2Threshold2UtraRscp	CM	М	M	-	M
b2Threshold2UtraEcN0	CM	М	M	-	M
b2Threshold2Geran	CM	М	M	-	M
b2Threshold2Cdma2000	CM	М	М	-	М
commonChannelPowerOffset	CM	М	M	-	M
configurationIndex	CM	М	M	-	M
contentionResolutionTimer	CM	М	M	-	M
hysteresisEutraA1	CM	М	M	-	M
hysteresisEutraA2	CM	М	M	-	M
hysteresisEutraA3	CM	М	M	-	M
hysteresisEutraA4	CM	М	M	-	M
hysteresisEutraA5	CM	М	М	-	M
hysteresisIratB1	CM	М	M	-	M
hysteresisIratB2	CM	М	M	-	M
numberOfRaPreambles	CM	М	M	-	M
preambleInitialReceivedTargetPower	CM	М	M	-	M
preambleTransMax	CM	М	M	-	M
pMax	CM	М	M	-	M
powerRampingStep	CM	М	M	-	M
qHyst	CM	М	M	-	M
qOffsetUtra	CM	М	M	-	M
qOffsetGeran	CM	М	M	-	M
qOffsetCdma2000	CM	M	М	-	M
qQualMinUtra	CM	М	M	-	M
qRxLevMinEUtraSib1	CM	М	M	-	M
qRxLevMinEUtraSib3	CM	М	M	-	M
qRxLevMinGeran	CM	М	M	-	M
qRxLevMinUtra	CM	M	M	-	M
responseWindowSize	СМ	М	М	-	M
rootSequenceIndex	CM	М	М	-	М
sIntraSearch	CM	М	М	-	М
sizeOfRAPreamblesGroupA	CM	М	М	-	М
timeToTriggerEutraA1	CM	М	M	-	М
timeToTriggerEutraA2	CM	М	М	-	М
timeToTriggerEutraA3	CM	М	М	-	М
timeToTriggerEutraA4	CM	М	М	-	М
timeToTriggerEutraA5	CM	M	M	-	М
timeToTriggerIratB1	CM	М	М	-	М
timeToTriggerIratB2	CM	M	M	-	М
tReselectionCdma2000	CM	M	М	-	M
tReselectionEUtra	CM	М	M	-	М
tReselectionGeran	CM	M	M	-	М
tReselectionUtra	CM	M	M	-	M
tStoreUeContext	CM	М	M	-	M

#### 4.3.21.3 Attribute constraints

Name	Definition
All Support Qualifiers	The condition is "Neither an EM-centralized nor a distributed SON function support the SON use cases for which this
	attribute is relevant (see §6.5.1)".

#### 4.3.21.4 Notifications

## 4.4 Attribute definitions

## 4.4.1 Attribute properties

a1ThresholdRsr p RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a1. Actual value is IE value -140 dBm. Corresponds to parameter a1-Threshold-Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowed/alues: 0: 97 RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a1. Actual value is (IE value -40)/2 dB. Corresponds to parameter a1-Threshold-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowed/Values: 0: 34 RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a1. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold-Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowed/Values: 0: 34 RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is IE value -140 dBm. Corresponds to parameter a2-Threshold-Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowed/Values: 0: 97  a2ThresholdRsr q  a2ThresholdRsr q  a3Offset  Offset to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowed/Values: 0: 34  Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in 68 is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowed/Values: -30: 30: 30  RSRP Threshold to be used in evaluation of EUTRA measurement repor
measurement report triggering condition for event a1. Actual value is IE value -140 dBm. Corresponds to parameter a1-Threshold. Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  a1ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a1. Actual value is (IE value -40)/2 dB. Corresponds to parameter a1-Threshold. Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a2ThresholdRsr PSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is IE value -140 dBm. Corresponds to parameter a2-Threshold. Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  a2ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold. Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  a3Offset Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a3Offset Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  RSRP Threshold to be used in evaluation of EUTRA is increase.
Corresponds to parameter a1-Threshold-Inteshold defaultValue: None isNullable: True  a1ThresholdRsr RSRP hreshold to be used in evaluation of EUTRA measurement report triggering condition for event a1. Actual value is (IE value -40)/2 dB. Corresponds to parameter a1-Threshold. Threshold RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a2ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is IE value -140 dBm. Corresponds to parameter a2-Threshold. Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 94  a2ThresholdRsr RSRP hreshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is IE value -40/2 dB. Corresponds to parameter a2-Threshold. Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a3Offset Offset to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is IE value -40/2 dB. Corresponds to parameter a2-Threshold. Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a3Offset Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA is in isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  alThresholdRsr RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a1. Actual value is (IE value -40)/2 dB. Corresponds to parameter a1-Threshold-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a2ThresholdRsr PRSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is IE value -140 dBm. Corresponds to parameter a2-Threshold. Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  a2ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a3Offset Offset to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a3Offset Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRss RSRP Threshold to be used in evaluation of EUTRA tellowedValues: None isNullable: True
This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  alThresholdRsr q  alThresholdRsr RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event at . Actual value is (IE value -40)/2 dB. Corresponds to parameter al-Threshold-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  althresholdRsr RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event alteribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  althresholdRsr RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event alteribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  althresholdRsr RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event alteribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  althresholdRsr Offset to be used in evaluation of EUTRA measurement report triggering condition for event alteribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  althresholdRsr Offset to be used in evaluation of EUTRA measurement report triggering condition for event alteribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  althresholdRsr RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event alteribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  althresholdRsr RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event alteribute may be used for Mobility Robustness Optimization. allowedValues: 30 : 30  althresholdRsr RSRP Threshold to be used in evaluation of EUTRA is Unique: N/A defaultValue: None is Nullable: True is Nu
allowedValues: 0 : 97  alThresholdRsr RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a1. Actual value is (IE value -40)/2 dB. Corresponds to parameter a1-Threshold. Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a2ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is IE value -140 dBm. Corresponds to parameter a2-Threshold. Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  a2ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold. Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a3Offset Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a3Offset Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA type: Integer multiplicity: 1 isordered: N/A isUnique: N/A defaultValue: None isNullable: True
alThresholdRsr q RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a1. Actual value is (IE value -40)/2 dB. Corresponds to parameter a1-Threshold.Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowed/Values: 0 : 34  a 2ThresholdRsr p RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is IE value -140 dBm. Corresponds to parameter a2-Threshold.Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowed/Values: 0 : 97  a 2ThresholdRsr q RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is [IE value -140/2 dB. Corresponds to parameter a2-Threshold.Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowed/Values: 0 : 34  a 30ffset Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowed/Values: 0 : 34  a 30ffset Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in [38]. Corresponds to parameter as-Offset specified in [38]. Corresponds
a1ThresholdRsr measurement report triggering condition for event a1. Actual value is (IE value -40)/2 dB. Corresponds to parameter a1-Threshold-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a2ThresholdRsr P  RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is IE value -140 dBm. Corresponds to parameter a2-Threshold-Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  a2ThresholdRsr Q  a2ThresholdR
measurement report triggering condition for event a1. Actual value is (IE value -40)/2 dB. Corresponds to parameter a1-Threshold-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a2ThresholdRsr p  RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is IE value -140 dBm. Corresponds to parameter a2-Threshold-Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  a2ThresholdRsr q  RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a3Offset  Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a3Offset  RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr  RSRP Threshold to be used in evaluation of EUTRA type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
a1. Actual value is (IE value -40)/2 dB. Corresponds to parameter a1-Threshold-Intreshold RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a2ThresholdRsr  RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is IE value -140 dBm. Corresponds to parameter a2-Threshold-Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  a2ThresholdRsr  RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a3Offset  Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in [38]. Corresponds to para
Corresponds to parameter a1-Threshold. Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a2ThresholdRsr p  RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is IE value -140 dBm. Corresponds to parameter a2-Threshold-Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  a2ThresholdRsr q  RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a30ffset  Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a30ffset  RSRP Threshold RSR (10). This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr  RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr  RSRP Threshold to be used in evaluation of EUTRA type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
RSRQ specified in ReportConfigEUTRA   E in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a 2ThresholdRsr P RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a 2. Actual value is   E value -140 dBm. Corresponds to parameter a2-Threshold. Threshold-RSRP specified in ReportConfigEUTRA   E in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  a 2ThresholdRsr Q RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a 2. Actual value is ( E value -40)/2 dB. Corresponds to parameter a2-Threshold. Threshold-RSRQ specified in ReportConfigEUTRA   E in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a 30ffset Offset to be used in evaluation of EUTRA measurement report triggering condition for event a 3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA   E in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a 44ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA RSRP Threshold to be used in evaluation of EUTRA to defaultValue: None is Nullable: True
This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a2ThresholdRsr P RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is IE value -140 dBm. Corresponds to parameter a2-Threshold. Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  a2ThresholdRsr Q RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold. Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a3Offset Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a3Offset ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 30 : 30  a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA tripe in the form of EUTRA defaultValue: None is Nullable: True sinvullable: True  isNullable: True  isNullable: True  isNullable: True  with picture is Nullable: True  isNullable: True
Optimization. allowedValues: 0 : 34  RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is IE value -140 dBm. Corresponds to parameter a2-Threshold. Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  a2ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold. Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a30ffset Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
a 2ThresholdRsr p  RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a 2. Actual value is IE value -140 dBm. Corresponds to parameter a2-Threshold-Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  a 2ThresholdRsr q  RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a 2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a 30ffset  Offset to be used in evaluation of EUTRA measurement report triggering condition for event a 3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a 4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
measurement report triggering condition for event a2. Actual value is IE value -140 dBm. Corresponds to parameter a2-Threshold-Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  a2ThresholdRsr q  RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a30ffset  Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in ReportConfigEUTRA IE in [10]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 30 : 30  a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA type: Integer multiplicity: 1 isordered: N/A isUnique: N/A defaultValue: None isNullable: True  ### Type: Integer multiplicity: 1 isordered: N/A isUnique: N/A defaultValue: None isNullable: True  ### Type: Integer multiplicity: 1 isordered: N/A isUnique: N/A defaultValue: None isNullable: True
a2. Actual value is IE value -140 dBm. Corresponds to parameter a2-Threshold-Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  a2ThresholdRsr  RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a30ffset  Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr  a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold Threshold-Intreshold-In
Corresponds to parameter a2-Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0:97  a2ThresholdRsr q  RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0:34  a3Offset  Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30:30  a4ThresholdRsr  RSRP Threshold to be used in evaluation of EUTRA type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  synchronic isNullable: True  synchronic isNullable: True  allowedValues: -30:30  a4ThresholdRsr  RSRP Threshold to be used in evaluation of EUTRA type: Integer  multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue:
RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0: 97  RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold.Threshold- RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0: 34  a30ffset  Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30: 30  a4ThresholdRsr  RSRP Threshold to be used in evaluation of EUTRA type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 97  a 2ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a 2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a 30ffset Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a 4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  a synchronic isNullable: True  True
Optimization. allowedValues: 0 : 97  RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a30ffset  Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in ReportConfigEUTRA IE in [10]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr  RSRP Threshold to be used in evaluation of EUTRA type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
allowedValues: 0 : 97  a 2ThresholdRsr q RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a 30ffset Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a 4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
a2ThresholdRsr q RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold.Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a30ffset Offset to be used in evaluation of EUTRA measurement report triggering condition for event measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
measurement report triggering condition for event a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold.Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a30ffset  Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr  RSRP Threshold to be used in evaluation of EUTRA type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
a2. Actual value is (IE value -40)/2 dB. Corresponds to parameter a2-Threshold-Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a30ffset  Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr  RSRP Threshold to be used in evaluation of EUTRA type: Integer multiplicity: 1 is Ordered: N/A is Unique: N/A defaultValue: None is Nullable: True
Corresponds to parameter a2-Threshold. Threshold-RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34   a30ffset  Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr  RSRP Threshold to be used in evaluation of EUTRA  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
RSRQ specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a30ffset Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA  defaultValue: None isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 : 34  a30ffset Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
allowedValues: 0 : 34  Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA type: Integer
a30ffset  Offset to be used in evaluation of EUTRA measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30: 30  a4ThresholdRsr  Offset to be used in evaluation of EUTRA type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
measurement report triggering condition for event a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30: 30  a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
a3. Mapping to values in dB is specified in [38]. Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA type: Integer
Corresponds to parameter a3-Offset specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA type: Integer
ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: -30 : 30  a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA type: Integer
This attribute may be used for Mobility Robustness optimization.  allowedValues: -30: 30  a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA type: Integer
Optimization. allowedValues: -30 : 30  a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA type: Integer
allowedValues: -30 : 30  a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA type: Integer
a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA type: Integer
The first through to be deed in evaluation of 20 that type integer
p measurement report triggering condition for event multiplicity: 1
a4. Actual value is IE value -140 dBm. isOrdered: N/A
Corresponds to parameter a4-Threshold. Threshold- isUnique: N/A
RSRP specified in ReportConfigEUTRA IE in [10]. defaultValue: None
This attribute may be used for Mobility Robustness isNullable: True
Optimization.
allowedValues: 0 : 97
a4ThresholdRsr RSRP Threshold to be used in evaluation of EUTRA type: Integer
measurement report triggering condition for event multiplicity: 1
a4. Actual value is (IE value -40)/2 dB. isOrdered: N/A
Corresponds to parameter a4-Threshold. Threshold-lisUnique: N/A RSRQ specified in ReportConfigEUTRA IE in [10]. defaultValue: None
This attribute may be used for Mobility Robustness is Nullable: True
Optimization.
allowedValues: 0 : 34

a5Threshold1Rs rp	RSRP Threshold1 to be used in evaluation of EUTRA measurement report triggering condition for event a5. Actual value is IE value -140 dBm. Corresponds to parameter a5-Threshold1.Threshold-RSRP specified in ReportConfigEUTRA IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0:97	type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
a5Threshold1Rs	RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event a5. Actual value is (IE value -40)/2 dB. Corresponds to parameter a5-Threshold1.Threshold-RSRQ specified in ReportConfigEUTRA IE in [10].  This attribute may be used for Mobility Robustness Optimization.  allowedValues: 0 : 34	type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
adjacentCell	This attribute contains the DN of a EUtranGenericCell or ExternalEUtranGenericCell. allowedValues: N/A	type: DN multiplicity: 1 isOrdered: N/A isUnique: True defaultValue: None isNullable: True
adjacentSector	This attribute contains the DN of an ExternalSector. allowedValues: N/A	type: DN multiplicity: 1 isOrdered: N/A isUnique: True defaultValue: None isNullable: True
allowedAccessC lasses	This holds information for access classes (10-15) – [3GPP TS 22.011] that are allowed for the eUTRANCell .  The access classes are: Class 10 – emergency call Class 11 - For PLMN Use. Class 12 - Security Services; Class 13 - Public Utilities (e.g. water/gas suppliers); Class 14 - Emergency Services; Class 15 - PLMN Staff; allowedValues: See TS 22.011 [29] and 36.331 [10] for more details on the definition and SIB2 broadcast message definition	type: < <enumeration>&gt; multiplicity: 1 isOrdered: N/A isUnique: True defaultValue: "all access classes are allowed" isNullable: True</enumeration>
b1ThresholdCdm a2000	Threshold to be used in CDMA2000 triggering condition for event b1. Mapping to actual dBm values is specified in 3GPP TS 45.008.  Corresponds to parameter b1-ThresholdCDMA2000 specified in ReportConfigInterRAT IE in [10].  This attribute may be used for Mobility Robustness Optimization. allowedValues: 0:63	type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
b1ThresholdGer an	Threshold to be used in GERAN triggering condition for event b1. Mapping to actual dBm values is specified in 3GPP TS 45.008. Corresponds to parameter b1-ThresholdGERAN specified in ReportConfigInterRAT IE in [10]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0:63	type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True

b1ThresholdUtr	EcN0 threshold to be used in UTRA triggering	type: Integer
aEcN0	condition for event b1. Mapping to actual dBm	multiplicity: 1
	values is specified in 3GPP TS 25.133.	isOrdered: N/A
	Corresponds to parameter b1-ThresholdULTA:utra- EcN0 specified in ReportConfigInterRAT IE in [10].	isUnique: N/A defaultValue: None
	This attribute may be used for Mobility Robustness	isNullable: True
	Optimization.	ioranabio. Trae
	allowedValues: 0:49	
blThresholdUtr	RSCP threshold to be used in UTRA triggering	type: Integer
aRscp	condition for event b1. Mapping to actual dBm values is specified in 3GPP TS 25.133.	multiplicity: 1 isOrdered: N/A
	Corresponds to parameter b1-ThresholdULTA:utra-	isUnique: N/A
	RSCP specified in ReportConfigInterRAT IE in [10].	defaultValue: None
	This attribute may be used for Mobility Robustness	isNullable: True
	Optimization. allowedValues: -5:91	
b2Threshold1Rs	RSRP Threshold to be used in evaluation of EUTRA	type: Integer
rp	measurement report triggering condition for event	multiplicity: 1
	b2. Actual value is IE value -140 dBm.	isOrdered: N/A
	Corresponds to parameter b2-	isUnique: N/A
	Threshold1.Threshold-RSRP specified in ReportConfigInterRAT IE in [10].	defaultValue: None isNullable: True
	This attribute may be used for Mobility Robustness	isivaliable. True
	Optimization.	
1.00	allowedValues: 0 : 97	
b2Threshold1Rs rq	RSRP Threshold to be used in evaluation of EUTRA measurement report triggering condition for event	type: Integer multiplicity: 1
14	b2. Actual value is (IE value -40)/2 dB.	isOrdered: N/A
	Corresponds to parameter b2-	isUnique: N/A
	Threshold1.Threshold-RSRQ specified in	defaultValue: None
	ReportConfigInterRAT IE in [10].	isNullable: True
	This attribute may be used for Mobility Robustness Optimization.	
	allowedValues: 0 : 34	
b2Threshold2Cd	Threshold to be used in CDMA2000 measurement	type: Integer
ma2000	report triggering condition for event b2. Mapping to	multiplicity: 1
	actual dBm values is specified in [36]. Corresponds to parameter b2-Threshold2CDMA2000 specified in	isOrdered: N/A isUnique: N/A
	ReportConfigInterRAT IE in [10].	defaultValue: None
	This attribute may be used for Mobility Robustness	isNullable: True
	Optimization.	
b2Threshold2Ge	allowedValues: 0 : 63 Threshold to be used in GERAN measurement	type: Integer
ran	report triggering condition for event b2. Mapping to	multiplicity: 1
	actual dBm values is specified in [36]. Corresponds	isOrdered: N/A
	to parameter b2-Threshold2GERAN specified in	isUnique: N/A
	ReportConfigInterRAT IE in [10].	defaultValue: None
	This attribute may be used for Mobility Robustness Optimization.	isNullable: True
	allowedValues: 0 : 63	
b2Threshold2Ut	EcN0 threshold to be used in UTRA measurement	type: Integer
raEcN0	report triggering condition for event b2. Mapping to	multiplicity: 1
	actual dBm values is specified in 3GPP TS 25.133. Corresponds to parameter b2-	isOrdered: N/A isUnique: N/A
	Threshold2ULTRA:utra-EcN0 specified in	defaultValue: None
	ReportConfigInterRAT IE in [10].	isNullable: True
	This attribute may be used for Mobility Robustness	
	Optimization. allowedValues: 0 : 49	
b2Threshold2Ut	RSCP threshold to be used in UTRA measurement	type: Integer
raRscp	report triggering condition for event b2. Mapping to	multiplicity: 1
	actual dBm values is specified in 3GPP TS 25.133.	isOrdered: N/A
	Corresponds to parameter b2- Threshold2ULTRA:utra-RSCP specified in	isUnique: N/A defaultValue: None
	ReportConfigInterRAT IE in [10].	isNullable: True
	This attribute may be used for Mobility Robustness	
	Optimization.	
	allowedValues: -5 : 91	

candidateDeNBC ells	A list of ECGIs of the candidates DeNB cells for the subject Relay Node in Attach for RN operation (phase 2), see 36.300[4].  allowedValues: See 3GPP TS 36.413[27], 36.300[4]	type: < <datatype>&gt; multiplicity: 1* isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True</datatype>
Cellidhist	This holds a list of DN ofEutranGenericCell. These cells all belong to one MBSFN Area. allowedValues: N/A	type: DN multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
cellIndividual Offset	Offset applicable to a neighbouring cell. It is used for evaluating the neighbouring cell for handover in connected mode. This attribute corresponds to parameter cellIndividualOffset in MeasObjectEUTRA IE in [10].  This attribute is used by the HandOver parameter Optimization (HOO) function or Load Balancing Optimization (LBO) function.  allowedValues: dB-24, dB-22, dB-20, dB-18, dB-16, dB-14, dB-12, dB-10, dB-08, dB-06, dB-05, dB-04, dB-03, dB-02, dB-01, dB+00, dB+01, dB+02, dB+03, dB+04, dB+05, dB+06, dB+08, dB+10, dB+12, dB+14, dB+16, dB+18, dB+20, dB+22, dB+24	type: < <enumeration>&gt; multiplicity: 1 isOrdered: N/A isUnique: True defaultValue: None isNullable: True</enumeration>
cellLocalId	Unambiguously identify a cell within an eNodeB. allowedValues: 0 : 255.	type: Integer multiplicity: 1 isOrdered: N/A isUnique: True defaultValue: None isNullable: True
cellResvInfo	This attribute represents whether the cell is MBSFN Area Reserved Cell or not. See TS 36.300[11] for MBSFN Area Reserved Cell. allowedValues: See 3GPP TS 36.443 [28] for Cell Reservation Info.	type:< <enumeration>&gt; multiplicity: 1 isOrdered: N/A isUnique: True defaultValue: None isNullable: True</enumeration>
cellSize	See cell-Size in TS 36.423 [24]. allowedValues: See cell-Size in TS 36.423 [24].	type:< <enumeration>&gt; multiplicity: 1 isOrdered: N/A isUnique: True defaultValue: None isNullable: True</enumeration>

cocstatus	This attribute holds the information about cell outage compensation (COC) activities for the cell which name contains the CelloutageCompensationInformation IOC instance.  The initial state is cOCDeactive.  When a cell outage is detected and its compensation starts, then the state is coCActivating.  When COC function decides that all activities to acitvate the compensation are done, the state changes to coCActive.  When outage of cell is ended and activities to remove the compensation are ongoing, the state changes to coCDeactivating.  When outage of cell ends and all activities to remove the compensation are done, the state changes back to coCDeactive.  In case of errors during activation or deactivation, this attribute also contains a list of elements which could not been reconfigured by the COC function.  If there are no errors during activation or deactivation, the list of elements shall be empty.  For an example how notifyAttributeValueChange notifications related to this attribute are used to inform an IRPManager about COC activities see Annex A.  allowedValues: This element contains 2 parts, state and errorList state = enumerated {     COCActivating, coCActive, coCDeactivetion, coCDeactivetion to DNs     errorList = list of DNs	type: < <datatype>&gt; multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True</datatype>
commonChannelP owerOffset	Power offset of the Primary Synchronization Channel, Secondary Synchronization Channel and Physical Broadcast Channel with respect to the referenceSignalPower. Value in dB is the actual value divided by 10. For example, value -30 represents -3dB; value 120 represent 12dB etc. This attribute may be used for Coverage and Capacity Optimization and ICIC. allowedValues: -350:150.	type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
configurationI ndex	Provides index into the table defining PRACH resources within the frame. Corresponds to PRACH-Configuration-Index parameter defined in [10] and [12].  This attribute may be used for RACH Optimization. allowedValues: 0:63.	type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True

zantanti anDaga	Contantian resolution times. Corresponde to	tura a companyatiana
contentionReso	Contention resolution timer. Corresponds to	type: < <enumeration>&gt;</enumeration>
lutionTimer	parameter mac-ContentionResolutionTimer	multiplicity: 1
	specified in [10] and in [8]. Value sfn corresponds to	isOrdered: N/A
	n subframes.	isUnique: N/A
	This attribute may be used for RACH Optimization.	defaultValue: None
	allowedValues:{sf8, sf16, sf24, sf32, sf40, sf48,sf56,	isNullable: True
	sf64}	
earfcn	It is the frequency number for the central frequency.	type: Integer
	See 3GPP TS 36.104[14].	multiplicity: 1
		isOrdered: N/A
	allowedValues: See 3GPP TS 36.104[14].	isUnique: N/A
		defaultValue: None
		isNullable: True
earfcnDl	Specifies the channel number for the central DL	type: Integer
Carrendi	frequency. The mapping from channel number to	multiplicity: 1
	physical frequency is described in 3GPP	isOrdered: N/A
	specification TS 36.101 [13] subclause 5.7.3.	
	specification 15 36.101 [13] subclause 5.7.3.	isUnique: N/A
		defaultValue: None
	allowedValues: See EARFCN in TS 36.101 [13]	isNullable: True
	subclause 5.7.3	
earfcnUl	Specifies the channel number for the central UL	type: Integer
	frequency. The mapping from channel number to	multiplicity: 1
	physical frequency is described in 3GPP	isOrdered: N/A
	specification TS 36.101 [13] subclause 5.7.3.	isUnique: N/A
	-	defaultValue: None
	allowedValues: See EARFCN in TS 36.101 [13]	isNullable: True
	subclause 5.7.3	
eNBId	Unambiguously identifies an eNodeB within a PLMN	type: Integer
	2	multiplicity: 1
	allowedValues: See 3GPP TS 36.413[27], 36.300[4]	isOrdered: N/A
	allowed values. See 3011 10 30.413[21], 30.300[4]	isUnique: N/A
		defaultValue: None
land the second at Parker	Therefore is a marked to a set of the second	isNullable: True
hysteresisEutr	Hysteresis applied to entry and leave condition of a	type: Integer
aA1	report triggering event A1. Maps to the instance of	multiplicity: 1
	the hysteresis IE specified in ReportConfigEUTRA	isOrdered: N/A
	IE in [10] corresponding to event A1.	isUnique: N/A
	This attribute may be used for Mobility	defaultValue: None
	Robustness Optimization.	isNullable: True
	allowedValues: 0:30.	
hysteresisEutr	Hysteresis applied to entry and leave condition of a	type: Integer
aA2	report triggering event A2. Maps to the instance of	multiplicity: 1
	the hysteresis IE specified in ReportConfigEUTRA	isOrdered: N/A
	IE in [10] corresponding to event A2.	isUnique: N/A
	This attribute may be used for Mobility	defaultValue: None
	Robustness Optimization.	isNullable: True
	allowedValues: 0:30.	
hysteresisEutr	Hysteresis applied to entry and leave condition of a	type: Integer
aA3	report triggering event A3. Maps to the instance of	multiplicity: 1
4115	the hysteresis IE specified in ReportConfigEUTRA	isOrdered: N/A
	IE in [10] corresponding to event A3.	isUnique: N/A
	This attribute may be used for Mobility	defaultValue: None
	Robustness Optimization.	isNullable: True
	allowedValues: 0:30.	
hysteresisEutr	Hysteresis applied to entry and leave condition of a	type: Integer
aA4	report triggering event A4. Maps to the instance of	multiplicity: 1
	the hysteresis IE specified in ReportConfigEUTRA	isOrdered: N/A
	IE in [10] corresponding to event A4.	isUnique: N/A
	This attribute may be used for Mobility	defaultValue: None
	Robustness Optimization.	isNullable: True
	allowedValues: 0:30.	
hysteresisEutr	Hysteresis applied to entry and leave condition of a	type: Integer
aA5	report triggering event A5. Maps to the instance of	multiplicity: 1
	the hysteresis IE specified in ReportConfigEUTRA	isOrdered: N/A
	IE in [10] corresponding to event A5.	isUnique: N/A
	This attribute may be used for Mobility	defaultValue: None
		isNullable: True
	Robustness Optimization.	isivuliable. Tide
Ĺ	allowedValues: 0:30.	

hysteresisIrat B1	Hysteresis applied to entry and leave condition of the IRAT report triggering event B1. Maps to hysteresis IE specified in ReportConfigInterRAT IE in [10] corresponding to event B1. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0:30.	type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
hysteresisIrat B2	Hysteresis applied to entry and leave condition of the IRAT report triggering event B2. Maps to hysteresis IE specified in ReportConfigInterRAT IE in [10] corresponding to event B2. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0:30.	type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
intraANRSwitch	This attribute determines whether the intra E-UTRAN ANR function is activated or deactivated.  If "on", the intra E-UTRAN ANR function may add or remove intra E-UTRAN Neighbour Relations, i.e. add or remove EUtranRelation instances fromEUtranGenericCells of this ENBFunction. If "off", the intra E-UTRAN ANR Function must not add or remove Neighbour Relations, i.e. add or remove EUtranRelation instances fromEUtranGenericCells of thisENBFunction.  allowedValues: on, off	type: < <enumeration>&gt; multiplicity: 1 isOrdered: N/A isUnique: True defaultValue: on isNullable: True</enumeration>
iRATANRSwitch	This attribute determines whether the IRAT ANR function is activated or deactivated.  If "on", the IRAT ANR function may add or remove IRAT Neighbour Relations, i.e. add or remove UtranRelation or GsmRelation instances from EUtranGenericCells of this ENBFunction.  If "off", the IRAT ANR Function must not add or remove IRAT Neighbour Relations, i.e. add or remove UtranRelation or GsmRelation instances from EUtranGenericCells of this ENBFunction.  allowedValues: on, off	type: < <enumeration>&gt; multiplicity: 1 isOrdered: N/A isUnique: True defaultValue: on isNullable: True</enumeration>
isChangeForEne rgySavingAllow ed	This attribute allows to IRPManager to prohibit or allow configuration changes of the cell for ESM purposes by the IRPAgent. This restriction also applies to instances name contained in such cells. Their attribute values can not be changed by the IRPAgent.	type: < <enumeration>&gt; multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True</enumeration>
isCOCAllowed	allowedValues: yes,no This attribute allows to IRPManager to prohibit or allow configuration changes of the cell for cell outage compensation purposes by the IRPAgent. This restriction also applies to instances name contained in such cells. Their attribute values can not be changed by the IRPAgent.  allowedValues: yes,no	type: < <enumeration>&gt; multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True</enumeration>

isESCoveredBy	The value of the attribute is configured by the IRPmanager and is not changed by the IRPAgent. It indicates whether the adjacentCell according to this planning provides no, partial or full coverage for the cell which name-contains the EUtranRelation instance.  Adjacent cells with this attribute equal to "yes" are recommended to be considered as candidate cells to take over the coverage when the original cell is about to be transferred to energySaving state. The entirety of adjacent cells with this property equal to "partial" are recommended to be considered as entirety of candidate cells to take over the coverage when the original cell is about to be transferred to energySaving state.  allowedValues: no, partial, yes	type: < <enumeration>&gt; multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True</enumeration>
isHOAllowed	This indicates if HO is allowed or prohibited.	type: < <enumeration>&gt;</enumeration>
	If 'yes', handover is allowed from source cell to target cell. The source cell is identified by the name-containing EUtranGenericCell or UtranGenericCell of the EUtranRelation that has the isHOAllowed. The target cell is referenced by the EUtranRelation that has this isHOAllowed.	multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
	If 'no', handover shall not be allowed.	
	allowedValues: yes,no	
isICICInformat ionSendAllowed	This indicates if ICIC (Inter Cell Interference Coordination) load information message (see TS 36.423 [24] Section 9.1.2.1 LOAD INFORMATION) sending is allowed or prohibited.	type: < <enumeration>&gt; multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None</enumeration>
	If 'yes', ICIC load information message sending is allowed from source cell to target cell. The source cell is identified by the name-containing EUtranGenericCell of the EUtranRelation that has the isICICInformationSendAllowed. The target cell is referenced by the EUtranRelation that has this isICICInformationSendAllowed.  If 'no', ICIC load information message sending shall	isNullable: True
	not be allowed.	
	allowedValues: yes,no	
isLBAllowed	This indicates if load balancing is allowed or prohibited from source cell to target cell.  If 'yes', load balancing is allowed from source cell to	type: < <enumeration>&gt; multiplicity: 1 isOrdered: N/A isUnique: N/A</enumeration>
	target cell. The source cell is identified by the name-containing EUtranGenericCell of the EUtranRelation that has the isLBAllowed. The target cell is referenced by the EUtranRelation that has this isLBAllowed.	defaultValue: None isNullable: True
	If 'no', load balancing shall be prohibited from source cell to target cell.	
	allowedValues: yes,no	

	T	
isRemoveAllowe	This indicates if the subject EUtranRelation can	type: < <enumeration>&gt;</enumeration>
d	be removed (deleted) or not.	multiplicity: 1
		isOrdered: N/A
	If 'yes', the subject EUtranRelation instance can	isUnique: N/A
	be removed (deleted).	defaultValue: None
		isNullable: True
	If 'no', the subject EutranRelation instance shall	isivullable. True
	not be removed (deleted) by any entity but an	
	IRPManager.	
	allowedValues: yes,no	
	allowed values. yes, no	
maximumTransmi	This is the maximum possible for all downlink	type: Integer
ssionPower	channels, used simultaneously in a cell, added	multiplicity: 1
	together.	isOrdered: N/A
	ŭ	isUnique: N/A
		defaultValue: None
		isNullable: True
maxNbrRNAllowe	This is an integer indicating the maximum number of	type: Integer
d	RNs allowed to be connected. It is a number which can be configured by the operator to control the	multiplicity: 1
	node/network load.	isOrdered: N/A
		isUnique: N/A
		defaultValue: None
		isNullable: True
mbsfnAreaId	This is the identifier of MBSFN Area.	type: Integer
IIIDSTITATEATU	See TS 36.300[11] for MBSFN Area.	multiplicity: 1
	See 10 30.300[11] for MDSI N Area.	isOrdered: N/A
	allowedValues: See 3GPP TS 36.443 [28] for	isUnique: N/A
	mbsfnAreaId	defaultValue: None
		isNullable: True
numberOfRaPrea	Number of non-dedicated random access	type: < <enumeration>&gt;</enumeration>
mbles		I manufation the state of A
IIIDIES	preambles. Corresponds to parameter	multiplicity: 1
IIIDIES	numberOfRA-Preambles specified in [10] and in [8].	isOrdered: N/A
IIIDIES	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and	isOrdered: N/A isUnique: N/A
libres	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on.	isOrdered: N/A
mores	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization.	isOrdered: N/A isUnique: N/A defaultValue: None
mores	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues:	isOrdered: N/A isUnique: N/A
mores	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n	isOrdered: N/A isUnique: N/A defaultValue: None
	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n 52,n56,n60,n64	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
partOfSectorPo wer	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer
partOfSectorPo	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n52,n56,n60,n64 This is the requested part (i.e. %) of the total radio power available to the	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
partOfSectorPo	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n52,n56,n60,n64 This is the requested part (i.e. %) of the total radio	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1
partOfSectorPo	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n52,n56,n60,n64 This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested % power should be allocated to the cell.	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A
partOfSectorPo	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n52,n56,n60,n64 This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested %	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None
partOfSectorPo wer	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n 52,n56,n60,n64 This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested % power should be allocated to the cell. allowedValues: 1:100	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
partOfSectorPo	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n52,n56,n60,n64 This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested % power should be allocated to the cell.	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer
partOfSectorPo wer	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n 52,n56,n60,n64 This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested % power should be allocated to the cell. allowedValues: 1:100	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True type: Integer multiplicity: 1
partOfSectorPo wer	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on.  This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n 52,n56,n60,n64  This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested % power should be allocated to the cell.  allowedValues: 1:100  P <sub>B</sub> , which is described in Section 5.2 of TS 36.213 [25]	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A
partOfSectorPo wer	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n 52,n56,n60,n64  This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested % power should be allocated to the cell. allowedValues: 1:100  P <sub>B</sub> , which is described in Section 5.2 of TS 36.213	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A
partOfSectorPo wer	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on.  This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n 52,n56,n60,n64  This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested % power should be allocated to the cell.  allowedValues: 1:100  P <sub>B</sub> , which is described in Section 5.2 of TS 36.213 [25]	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A
partOfSectorPo wer	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on.  This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n 52,n56,n60,n64  This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested % power should be allocated to the cell.  allowedValues: 1:100  P <sub>B</sub> , which is described in Section 5.2 of TS 36.213 [25]	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None
partOfSectorPo wer	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n 52,n56,n60,n64   This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested % power should be allocated to the cell. allowedValues: 1:100 $P_{B} \text{ , which is described in Section 5.2 of TS 36.213} [25]$ allowedValues: See 3GPP TS 36.213[25]	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
partOfSectorPo wer	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on.  This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n 52,n56,n60,n64  This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested % power should be allocated to the cell.  allowedValues: 1:100  P <sub>B</sub> , which is described in Section 5.2 of TS 36.213 [25]	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None
partOfSectorPo wer	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n 52,n56,n60,n64  This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested % power should be allocated to the cell. allowedValues: 1:100  P <sub>B</sub> , which is described in Section 5.2 of TS 36.213 [25]  allowedValues: See 3GPP TS 36.213[25]	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True type: Integer
partOfSectorPo wer	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n 52,n56,n60,n64  This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested % power should be allocated to the cell. allowedValues: 1:100  P <sub>B</sub> , which is described in Section 5.2 of TS 36.213 [25]  This holds the Physical Cell Identity (PCI) of the cell (for NM-Centralized, EM-Centralized and Distributed)	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A
partOfSectorPo wer	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n 52,n56,n60,n64  This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested % power should be allocated to the cell. allowedValues: 1:100  P <sub>B</sub> , which is described in Section 5.2 of TS 36.213 [25]  allowedValues: See 3GPP TS 36.213[25]  This holds the Physical Cell Identity (PCI) of the cell (for NM-Centralized, EM-Centralized and Distributed PCI assignment cases).  In the case of NM-Centralized PCI assignment, see	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A
partOfSectorPo wer	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n 52,n56,n60,n64  This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested % power should be allocated to the cell. allowedValues: 1:100  P <sub>B</sub> , which is described in Section 5.2 of TS 36.213 [25]  allowedValues: See 3GPP TS 36.213[25]  This holds the Physical Cell Identity (PCI) of the cell (for NM-Centralized, EM-Centralized and Distributed PCI assignment cases).  In the case of NM-Centralized PCI assignment, see TS 36.300, [11] subclause 22.3.5, IRPManager	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None
partOfSectorPo wer	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n 52,n56,n60,n64  This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested % power should be allocated to the cell. allowedValues: 1:100  P <sub>B</sub> , which is described in Section 5.2 of TS 36.213 [25]  allowedValues: See 3GPP TS 36.213[25]  This holds the Physical Cell Identity (PCI) of the cell (for NM-Centralized, EM-Centralized and Distributed PCI assignment cases).  In the case of NM-Centralized PCI assignment, see	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A
partOfSectorPo wer	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n 52,n56,n60,n64  This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested % power should be allocated to the cell. allowedValues: 1:100  P <sub>B</sub> , which is described in Section 5.2 of TS 36.213 [25]  allowedValues: See 3GPP TS 36.213[25]  This holds the Physical Cell Identity (PCI) of the cell (for NM-Centralized, EM-Centralized and Distributed PCI assignment cases).  In the case of NM-Centralized PCI assignment, see TS 36.300, [11] subclause 22.3.5, IRPManager signals a specific value by writing this attribute.	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None
partOfSectorPo wer	numberOfRA-Preambles specified in [10] and in [8]. Value n4 corresponds to 4, n8 corresponds to 8 and so on. This attribute may be used for RACH Optimization. allowedValues: n4,n8,n12,n16,n20,n24,n28,n32,n36,n40,n44,n48,n 52,n56,n60,n64  This is the requested part (i.e. %) of the total radio power available to the SectorEquipmentFunction. The requested % power should be allocated to the cell. allowedValues: 1:100  P <sub>B</sub> , which is described in Section 5.2 of TS 36.213 [25]  allowedValues: See 3GPP TS 36.213[25]  This holds the Physical Cell Identity (PCI) of the cell (for NM-Centralized, EM-Centralized and Distributed PCI assignment cases).  In the case of NM-Centralized PCI assignment, see TS 36.300, [11] subclause 22.3.5, IRPManager	isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None  isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None

pciList	This holds a list of physical cell identities that can be assigned to the pci attribute by eNB. The assignment algorithm is not specified.  This attribute shall be supported if and only if the EM-Centralized or Distributed PCI Assignment is supported. See TS 32.500, ref [15] subclause 6.1.6.  allowedValues: See TS 36.211 [12] subclause 6.11 for legal values of pci. The number of pci in the list is 1 to 504.	type: Integer multiplicity: 1* isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
plmnIdList	List of unique identities for PLMN.  Note: A cell can broadcast up to 6 PLMN-id's. This is to support the case that one cell can be used by up to 6 operators' core networks.  One member of plmnldList is the primary PLMN Id. See TS 36.331 [10] section 6.2.2:  SystemInformationBlockType1/cellAccessRelatedInf ormation/plmn-IdentityList is a SEQUENCE (SIZE (16))  allowedValues: A list of at most six entries of PLMN Identifiers, but at least one (the primary PLMN Id). The PLMN Identifier is composed of a Mobile Country Code (MCC) and a Mobile Network Code (MNC).  See TS 23.003 [3] subclause 2.2 and 12.1.	type: Integer multiplicity: 1* isOrdered: N/A isUnique: N/A defaultValue: None isNullable: False
pMax	This parameter is used to limit the allowed UE uplink transmission power on the serving EUTRA frequency. Value in dBm. Corresponds to parameter p-Max specified in SIB1 and SIB3 in [10]. This attribute may be used for RACH Optimization. allowedValues: -30: 33	type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
powerRampingSt ep	Power increase factor between subsequent random access preamble transmissions. Value in dB. Value dB2 corresponds to 2 dB and so on. Corresponds to parameter powerRampingStep specified in [10] and in [8].  This attribute may be used for RACH Optimization. allowedValues: dB0, dB2,dB4, dB6	type: < <enumeration>&gt; multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True</enumeration>
preambleInitia lReceivedTarge tPower	This parameter denotes the baseline for computation of the transmit power for random access power transmission. Corresponds to parameter preambleInitialReceivedTargetPower specified in [10] and in [8]. Value dBm-120 corresponds to -120 dBm and so on.  This attribute may be used for RACH Optimization. allowedValues: dBm-120, dBm-118, dBm-116, dBm-114, dBm-112,dBm-110,dBm-108,dBm-106,dBm-104,dBm-102,dBm-100,dBm-98,dBm-96,dBm-94, dBm-92,dBm-90	type: < <enumeration>&gt; multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True</enumeration>
preambleTransM ax	Maximum number of random access preamble transmissions. Corresponds to parameter preambleTransMax specified in [10] and in [8]. This attribute may be used for RACH Optimization. allowedValues: n3, n4, n5, n6, n7, n8, n10, n20, n50, n100, n200	type: < <enumeration>&gt; multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True</enumeration>

	1	
qciDscpMapping List	It is a list of mapping between QCI and DSCP, each mapping is a structure including the element QCI	
	and DSCP;	type: < <datatype>&gt;</datatype>
	Wherein	multiplicity: 1*
	- QCI represents the number of the QCI (Ref. 3GPP TS 23.203[33]);	isOrdered: N/A
	- DSCP represents the DiffServ codepoint (Ref.	isUnique: N/A
	3GPP TS 23.207[34] and RFC 2474[35]).	defaultValue: None
		isNullable: True
	allowedValues: For QCI, Ref. 3GPP TS 23.203[33]; For DSCP, Ref. RFC 2474[35]	
qHyst	Hysteresis value applied to serving cell for	type: < <enumeration>&gt;</enumeration>
	evaluating cell ranking criteria. Value in dB.	multiplicity: 1
	Corresponds to parameter q-Hyst specified in SIB3 in [10] and in [34].	isOrdered: N/A isUnique: N/A
	This attribute may be used for Mobility Robustness	defaultValue: None
	Optimization.	
	allowedValues: dB0, dB1, dB2, dB3, dB4, dB5, dB6,	isNullable: True
	dB8, dB10, dB12, dB14, dB16, dB18, dB20, dB22,	
0.5.5	dB24	
qOffset	Offset applicable to a specific neighbouring cell	type: < <enumeration>&gt;</enumeration>
	used for evaluating the cell as a candidate for cell re-selection. Corresponds to parameter q-OffsetCell	multiplicity: 1 isOrdered: N/A
	broadcast in SIB4 for intra-frequency cells and in	isUnique: N/A
	SIB5 for inter-frequency cells, specified in [10].	defaultValue: None
	This attribute may be used for Mobility Robustness	
	Optimization.	isNullable: True
	allowedValues: dB-24, dB-22, dB-20, dB-18, dB-16,	
	dB-14, dB-12, dB-10, dB-8, dB-6, dB-5, dB-4, dB-3,	
	dB-2, dB-1, dB0, dB1, dB2, dB3, dB4, dB5, dB6, dB8, dB10, dB12, dB14, dB16, dB18, dB20, dB22,	
	dB0, dB10, dB12, dB14, dB10, dB10, dB20, dB22,	
qOffsetCdma200	Indicates a CDMA2000-specific offset to be applied	type: Integer
0	when evaluating triggering conditions for	multiplicity: 1
	measurement reporting in connected mode.	isOrdered: N/A
	Corresponds to parameter offsetFreq included in the	isUnique: N/A
	IE MeasObjectCDMA2000 specified in 3GPP TS 36.331. This value will apply to all CDMA2000	defaultValue: None
	frequencies.	isNullable: True
	This attribute may be used for Mobility Robustness	10.14.14.0
	Optimization.	
	allowedValues: -1515	
qOffsetGeran	Indicates a GERAN-specific offset to be applied	type: Integer
	when evaluating triggering conditions for	multiplicity: 1
	measurement reporting in connected mode.  Corresponds to parameter offsetFreq included in the	isOrdered: N/A isUnique: N/A
	IE MeasObjectGERAN specified in 3GPP TS	defaultValue: None
	36.331. This value will apply to all GERAN	
	frequencies.	isNullable: True
	This attribute may be used for Mobility Robustness	
	Optimization.	
qOffsetUtra	allowedValues: -1515 Indicates a UTRA-specific offset to be applied when	type: Integer
dorraerorra	evaluating triggering conditions for measurement	type: Integer multiplicity: 1
	reporting in connected mode. Corresponds to	isOrdered: N/A
	parameter offsetFreq included in the IE	isUnique: N/A
	MeasObjectUTRA specified in 3GPP TS 36.331.	defaultValue: None
	This value will apply to all UTRA frequencies.	
	This attribute may be used for Mobility Robustness	isNullable: True
	Optimization. allowedValues: -1515	
qQualMinUtra	Minimum required received Eclo level on this UTRA	type: Integer
12	FDD carrier. Value in dB. Corresponds to parameter	multiplicity: 1
	q-QualMin in SIB6 in [10] and in [30]. This attribute	isOrdered: N/A
	applies to all UTRA frequencies.	isUnique: N/A
	This attribute may be used for Coverage and	defaultValue: None
	Capacity Optimization and ICIC allowedValues: -24:0	isNullable: True
	alloweuvalues24 .U	isNullable: True

qRxLevMinEUtra	Minimum required received RSRP level of a E-	type: Integer
Sib1	UTRA cell for cell selection. Actual value in dBm is	multiplicity: 1
	obtained by multiplying by 2. Corresponds to	isOrdered: N/A
	parameter q-rxLevMin in SIB1 in [10] and in [34].	isUnique: N/A
	This attribute may be used for Coverage and	defaultValue: None
	Capacity Optimization and ICIC. allowedValues: -70 :-22	isNullable: True
qRxLevMinEUtra	Minimum required received RSRP level for intra-	type: Integer
Sib3	frequency E-UTRA cell re-selection. Actual value in	multiplicity: 1
	dBm is obtained by multiplying by 2. Corresponds to	isOrdered: N/A
	parameter q-rxLevMin in SIB3 in [10] and in [34].	isUnique: N/A
	This attribute may be used for Coverage and	defaultValue: None
	Capacity Optimization and ICIC.	
	allowedValues: -70 :-22	isNullable: True
qRxLevMinGeran	Minimum required received RSSI level on a GERAN	type: Integer
	frequency carrier for re-selection to a GERAN	multiplicity: 1
	carrier. Actual value in dBm is value * 2 - 115.	isOrdered: N/A
	Corresponds to parameter q-rxLevMin in SIB7 in	isUnique: N/A
	[10] and to RXLEV_ACCESS_MIN in [31]. This	defaultValue: None
	attribute applies to all GERAN frequencies.	ioNullable, True
	This attribute may be used for Coverage and Capacity Optimization and ICIC.	isNullable: True
	allowedValues: 0 : 63	
gRxLevMinUtra	Minimum required received RSCP level on a UTRA	type: Integer
qranzoviizno ora	frequency carrier. Actual value in dBm is obtained	multiplicity: 1
	by multiplying by 2 plus 1. Corresponds to	isOrdered: N/A
	parameter q-rxLevMin in SIB6 in [10] and in [30].	isUnique: N/A
	This attribute applies to all UTRA frequencies.	defaultValue: None
	This attribute may be used for Coverage and	
	Capacity Optimization and ICIC.	isNullable: True
	allowedValues: -60 :-13	
referenceSigna	This defines the cell specific downlink reference	type: Integer
lPower	signal transmit power, which is described in 3GPP	multiplicity: 1
	TS 36.213[25]	isOrdered: N/A
		isUnique: N/A
	allowedValues: See 3GPP TS 36.331[10]	defaultValue: None
		isNullable: True
relatedAntenna	This is an attribute to list the DNs of	type: DN
List	AntennaFunction(s)(see TS 28.662[31]) that	multiplicity: 1*
	support the EutranGenericCell.	isOrdered: N/A
		isUnique: N/A
	allowedValues: See 'relatedAntennaList' in	defaultValue: None
	Ref. 3GPP TS 28.662 [31]	
		isNullable: True
relatedSector	This is an attribute to the DN of	type: DN
	SectorEquipmentFunction (see TS 28.662[31])	multiplicity: 1
	that support the EUtranGenericCell.	isOrdered: N/A
		isUnique: N/A
	allowedValues: See	defaultValue: None
	'SectorEquipmentFunction'in	Santallata To
	Ref. 3GPP TS 28.662 [31].	isNullable: True
relatedTmaList	This is an attribute to list the DNs of	type: DN
	TmaFunction(s) (see TS 28.662[31]) that support	multiplicity: 1*
	the EUtranGenericCell.	isOrdered: N/A
		isUnique: N/A
	allowedValues: See 'relatedTmaList' in	defaultValue: None
	Ref. 3GPP TS 28.662 [31].	ioNullable, Trus
		isNullable: True

responseWindow Size	Denotes the duration of the random access response window. Corresponds to parameter ra-ResponseWindowSize specified in 3GPP TS 36.331 section 6.3.2 and in 3GPP TS 36.321 section 5.1.4. Value sfn corresponds to n subframes.  This attribute may be used for RACH Optimization. allowedValues: sf2, sf3, sf4, sf5, sf6, sf7, sf8,sf10	type: < <enumeration>&gt; multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True</enumeration>
rootSequenceIn dex	Logical root sequence index used to determine 64 physical RACH preamble sequences available in the cell. Corresponds to RACH_ROOT_SEQUENCE parameter defined in [10] and [12].  This attribute may be used for RACH Optimization. allowedValues: 0:837	type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
servedRN	This attribute contains the DNs of one or more associated instances of RNFunction and ExternalRNFunction.	type: DN multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
servingCell	This attribute contains the DN of one associated instance of EutranGenericCell or ExternalEutranGenericCell.	type: DN multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None
sfAssignment	This is the uplink-downlink subframe configuration number of a TDD E-UTRAN cell. allowedValues: See 3GPP TS 36.211[12].	isNullable: True type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
sharNetTceMapp ingInfoList	This attribute includes a list of elements. Each element is a tuple of shared PLMN Id (called "PLMN Target"), TCE ID and the corresponding TCE IP address.  In case when several PLMNs and Logged MDT are supported, this attribute is used to translate from the TCE IP Address to TCE ID when a Logged MDT is ordered to the UE and to translate the TCE ID to TCE IP address when the UE has sent the log to the network.  allowedValues: See "Trace Collection Entity Address" and "Trace Collection Entity Id" in 3GPP TS 32.422 [25]. The "PLMN Target" shall be one of the PLMNs listed in plmnIdList.	type: < <datatype>&gt; multiplicity: 1* isOrdered: N/A isUnique: N/A defaultValue: None isNullable: False</datatype>
sIntraSearch	Threshold for intra-frequency measurements. Actual value in dB is obtained by multiplying by 2. Corresponds to parameter s-IntraSearch specified in SIB3 in [10] and in [34]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0: 31	type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True

sizeOfRAPreamb lesGroupA	Size of the random access preamble group A. Corresponds to parameter sizeOfRA- PreamblesGroup specified in [10] and [8]. This attribute may be used for RACH Optimization. allowedValues: n4, n8, n12, n16, n20, n24, n28,	type: < <enumeration>&gt; multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None</enumeration>
	n32, n36, n40, n44, n48, n52, n56, n60	isNullable: True
specialSfPatte rns	This is the special subframe configuration number of a TDD E-UTRAN cell.	type: Integer multiplicity: 1
	allowedValues: See 3GPP TS 36.211[12].	isOrdered: N/A isUnique: N/A defaultValue: None
		isNullable: True
tac	Common Tracking Area Code for the PLMNs. The identity used to identify tracking areas.  allowedValues:	type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A
	a) It is the Tracking Area Code (TAC).	defaultValue: None
	b) A cell can only broadcast one TAC. See TS 36.300 [11], section 10.1.7 (PLMNID and TAC relation).	isNullable: True
	c) TAC is defined in TS 23.003 [3], section 19.4.2.3.	
tceIDMappingIn foList	This attribute includes a list of TCE ID and the corresponding TCE IP address. It is used in Logged MDT case to provide the information to the eNodeB to get the corresponding TCE IP address when there is an MDT log received from the UE.	type: < <datatype>&gt; multiplicity: 1* isOrdered: N/A isUnique: N/A defaultValue: None</datatype>
	This attribute is used if only one PLMN is supported.  allowedValues: See "Trace Collection Entity Address" and "Trace Collection Entity Id" in 3GPP TS 32.422 [30].	isNullable: False
tCI	This is the Target Cell Identifier. It consists of E-UTRAN Cell Global Identifier (ECGI) and Physical Cell Identifier (PCI) of the target cell.	type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A
	The EUtranRelation.tCl identifies the target cell from the perspective of the EUtranGenericCell, the name-containing instance of the subject EUtranRelation instance.	defaultValue: None isNullable: True
	allowedValues: The Target Cell Identifier is defined in TS 36.300 [11]. See TS 36.211 [12] subclause 6.11 for legal values of the PCI.	
timeToTriggerE utraA1	Time during which measurement report triggering condition needs to be met in order to trigger a measurement report for event A1. Maps to the timeToTrigger IE specified in ReportConfigEUTRA IE in [10] corresponding to event A1. Value ms0 corresponds to 0 miliseconds etc.  This attribute may be used for Mobility Robustness Optimization. allowedValues: ms0, ms40, ms64, ms80, ms100, ms128, ms160, ms256, ms320, ms480, ms512,	type: < <enumeration>&gt; multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True</enumeration>
	ms640, ms1024, ms1280, ms2560, ms5120	

timeToTriggerE	Time during which measurement report triggering	type: < <enumeration>&gt;</enumeration>
utraA2	condition needs to be met in order to trigger a	multiplicity: 1
4314112	measurement report for event A2. Maps to the	isOrdered: N/A
	timeToTrigger IE specified in ReportConfigEUTRA	isUnique: N/A
	IE in [10] corresponding to event A2. Value ms0	defaultValue: None
	corresponds to 0 miliseconds etc.	
	This attribute may be used for Mobility Robustness	isNullable: True
	Optimization.	
	allowedValues: ms0, ms40, ms64, ms80, ms100,	
	ms128, ms160, ms256, ms320, ms480, ms512,	
	ms640, ms1024, ms1280, ms2560, ms5120	
timeToTriggerE	Time during which measurement report triggering	type: < <enumeration>&gt;</enumeration>
utraA3	condition needs to be met in order to trigger a	multiplicity: 1
	measurement report for event A3. Maps to the	isOrdered: N/A
	timeToTrigger IE specified in ReportConfigEUTRA	isUnique: N/A
	IE in [10] corresponding to event A3. Value ms0	defaultValue: None
	corresponds to 0 miliseconds etc.	
	•	isNullable: True
	This attribute may be used for Mobility Robustness	ISINUIIADIE. TTUE
	Optimization.	
	allowedValues: ms0, ms40, ms64, ms80, ms100,	
	ms128, ms160, ms256, ms320, ms480, ms512,	
	ms640, ms1024, ms1280, ms2560, ms5120	
timeToTriggerE	Time during which measurement report triggering	type: < <enumeration>&gt;</enumeration>
utraA4	condition needs to be met in order to trigger a	multiplicity: 1
	measurement report for event A4. Maps to the	isOrdered: N/A
	timeToTrigger IE specified in ReportConfigEUTRA	isUnique: N/A
	IE in [10] corresponding to event A4. Value ms0	defaultValue: None
		delault value. Notie
	corresponds to 0 miliseconds etc.	· N. H. I
	This attribute may be used for Mobility	isNullable: True
	Robustness Optimization.	
	allowedValues: ms0, ms40, ms64, ms80, ms100,	
	ms128, ms160, ms256, ms320, ms480, ms512,	
	ms640, ms1024, ms1280, ms2560, ms5120	
timeToTriggerE	Time during which measurement report triggering	type: < <enumeration>&gt;</enumeration>
utraA5	condition needs to be met in order to trigger a	multiplicity: 1
	measurement report for event A5. Maps to the	isOrdered: N/A
	timeToTrigger IE specified in ReportConfigEUTRA	isUnique: N/A
		defaultValue: None
	IE in [10] corresponding to event A5. Value ms0	default value. None
	corresponds to 0 miliseconds etc.	<u>_</u>
	This attribute may be used for Mobility	isNullable: True
	Robustness Optimization.	
	allowedValues: ms0, ms40, ms64, ms80, ms100,	
	ms128, ms160, ms256, ms320, ms480, ms512,	
	ms640, ms1024, ms1280, ms2560, ms5120	
timeToTriggerI	Time during which IRAT measurement report	type: < <enumeration>&gt;</enumeration>
ratB1	triggering condition needs to be met in order to	multiplicity: 1
	trigger IRAT measurement report for event B1.	isOrdered: N/A
	Maps to timeToTrigger IE specified in	isUnique: N/A
	ReportConfigInterRAT IE in [10] corresponding to	defaultValue: None
		doladit value. NOHE
	event B1. Value ms0 corresponds to 0 milliseconds	ioNulloble, Trus
	etc.	isNullable: True
	This attribute may be used for Mobility	
	Robustness Optimization.	
	allowedValues: ms0, ms40, ms64, ms80, ms100,	
	ms128, ms160, ms256, ms320, ms480, ms512,	
	ms640, ms1024, ms1280, ms2560, ms5120	
timeToTriggerI	Time during which IRAT measurement report	type: < <enumeration>&gt;</enumeration>
ratB2	triggering condition needs to be met in order to	multiplicity: 1
	trigger IRAT measurement report for event B2.	isOrdered: N/A
	Maps to <i>timeToTrigger</i> IE specified in	isUnique: N/A
	ReportConfigInterRAT IE in [10] corresponding to	defaultValue: None
	event B2. Value ms0 corresponds to 0 milliseconds	Sabbullation Torre
	etc.	isNullable: True
	This attribute may be used for Mobility Robustness	
	Optimization.	
	allowedValues: ms0, ms40, ms64, ms80, ms100,	
	ms128, ms160, ms256, ms320, ms480, ms512,	
	ms640, ms1024, ms1280, ms2560, ms5120	

tReselectionCd ma2000	Cell reselection timer for reselection to a CDMA2000 band. Value in seconds. Corresponds to parameter t-ReselectionCDMA2000 specified in SIB8 in [10] and to TreselectionCDMA_HRPD or TreselectionCDMA_1xRTT in [34] This attribute may be used for Mobility Robustness Optimization. allowedValues: 0:7  Cell reselection timer for intra frequency E-UTRA	type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True  type: Integer
tra	cell reselection. Value in seconds. Corresponds to parameter t-ReselectionEUTRA specified in SIB3 in [10] and in [34]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0:7	multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
tReselectionGe ran	Cell reselection timer for reselection to a GERAN frequency carrier. Value in seconds. Corresponds to parameter t-ReselectionGERAN specified in SIB7 in [10] and to TreselectionGERA in [34]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0:7	type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
tReselectionUt ra	Cell reselection timer for reselection to a UTRA frequency carrier. Value in seconds. Corresponds to parameter t-ReselectionUTRA specified in SIB6 in [10] and in [34]. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0:7	type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
tStoreUeContex t	The timer used for detection of too early HO. Corresponds to Tstore_UE_cntxt timer described in [11]. Value in 100 milliseconds. This attribute may be used for Mobility Robustness Optimization. allowedValues: 0 :1023	type: Integer multiplicity: 1 isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
x2BlackList	This is a list of DNs of ENBFunction and ExternalENBFunction. If the target node DN is a member of the source node's ENBFunction.x2BlackList, the source node is:  1 Prohibited from sending X2 connection request to target node; 2 Forced to tear down established X2 connection to target node 3 Not allowed to accept incoming X2 connection request from target node.  The same DN may appear here and in ENBFunction.x2WhiteList. In such case, the DN in x2WhiteList shall be treated as if it is absent.	type: DN multiplicity: 1* isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
x2HOBlackList	This is a list of DNs of ENBFunction and ExternalENBFunction. The ENBFunction.x2HOBlackList identifies a list of neighbour ENBFunction and ExternalENBFunction with whom the subject ENBFunction is prohibited to use X2 interface for HOs even if the X2 interface exists between them.	type: DN multiplicity: 1* isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
x2IpAddressLis t	Represents one or more IP addresses used by ENBFunction for this ENBFunction's X2 Interface allowedValues: One or more IPv4 or IPv6 addresses	type: String multiplicity: 1* isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True

x2WhiteList	This is a list of DNs of ENBFunction and  ExternalENBFunction. If the target node DN is a member of the source node's  ENBFunction.x2WhiteList, the source node:  - Is allowed to request the establishment of X2 connection with the target node;  - Is not allowed to initiate the tear down of established X2 connection to target node  The same DN may appear here and in ENBFunction.x2BlackList. In such case, the DN here shall be treated as if it is absent.	type: String multiplicity: 1* isOrdered: N/A isUnique: N/A defaultValue: None isNullable: True
-------------	--	--

#### 4.4.2 Constraints

None.

### 4.5 Common notifications

#### 4.5.1 Alarm notifications

This subclause presents a list of notifications, defined in [18], that IRPManager can receive. The notification header attribute objectClass/objectInstance, defined in [37], would capture the DN of an instance of an IOC defined in this IRP specification.

Name	Qualifier	Notes
notifyAckStateChanged	See Alarm IRP (3GPP TS 32.111-2 [18])	
notifyChangedAlarm	See Alarm IRP (3GPP TS 32.111-2 [18])	
notifyClearedAlarm	See Alarm IRP (3GPP TS 32.111-2 [18])	
notifyNewAlarm	See Alarm IRP (3GPP TS 32.111-2 [18])	
notifyComments	See Alarm IRP (3GPP TS 32.111-2 [18])	
notifyAlarmListRebuilt	See Alarm IRP (3GPP TS 32.111-2 [18])	
notifyPotentialFaultyAlarmList	See Alarm IRP (3GPP TS 32.111-2 [18])	

## 4.5.2 Configuration notifications

This subclause presents a list of notifications, defined in [32], that IRPManager can receive. The notification header attribute objectClass/objectInstance, defined in [37], would capture the DN of an instance of an IOC defined in this IRP specification.

Name	Qualifier	Notes
notifyAttributeValueChange	0	
notifyObjectCreation	0	
notifyObjectDeletion	0	

## Annex A (informative): Notifications during a Cell Outage Compensation

The following sequence diagrams and table show an example how notifications of IOC CellOutageCompensationInformation and other notifications are used to inform an IRPManager about the COC activities.

The sequence diagrams show the basic event flow, the table gives more details on selected, most relevant, content of the notifications.

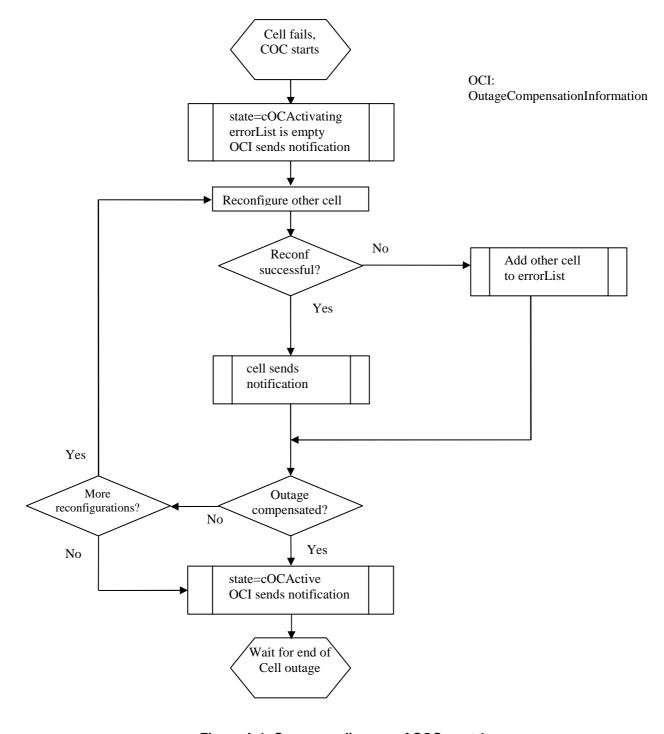


Figure A-1: Sequence diagram of COC, part 1

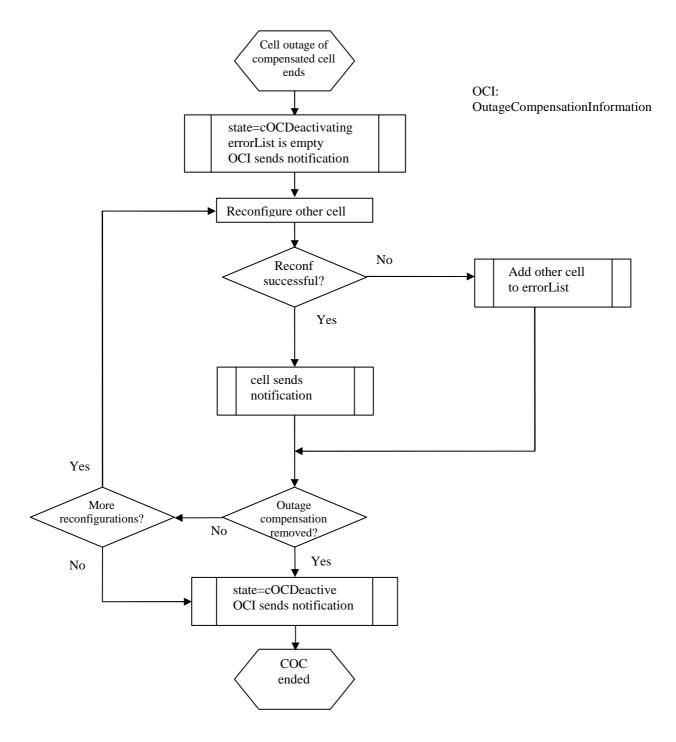


Figure A-2: Sequence diagram of COC, part 2

Legend for the table:

Notifications in *italic font* are not directly triggered by COC activities, but help to give a full picture.: Notification content in **bold font** indicates a changed attribute value.

Time	Event	Notification	Selected notification content *)
T1	Outage of cell 1. COC is done for this cell.	notifyNewAlarm, originated by EUtranGenericCell instance representing cell 1	notificationId=notiAlCell1 correlatedNotifications={ }
		notifyAttributeValueChan	notificationId=COC1

Time	Event	Notification	Selected notification content *)
		ge of CellOutageCompensationIn formation instance name contained in EUtranGenericCell instance representing cell 1.	<pre>correlatedNotifications={ notiAlCell1}; cOCStatus.state = cOCActivating cOCStatus.errorList={}</pre>
T2	COC reconfigures cell 2	notifyAttributeValueChan ge of EUtranGenericCell instance representing cell 2	notificationId=avcCell2comp correlatedNotifications={COC1}
Т3	COC reconfigures cell 3	notifyAttributeValueChan ge of EUtranGenericCell instance representing cell 3	notificationId= avcCell3comp correlatedNotifications={ COC1}
T4	COC tries to reconfigure cell 4 without success	notifyAttributeValueChan ge of CellOutageCompensationIn formation instance name contained in EUtranGenericCell instance representing cell 1	notificationId=COC2 correlatedNotifications={COC1} cOCStatus.state =
Case:	COC successful		1
T5a	COC function decides, that no further actions are necessary.	notifyAttributeValueChan ge of CellOutageCompensationIn formation instance contained in EUtranGenericCell instance representing cell 1	notificationId=COC5a correlatedNotifications={COC1} cOCStatus.state = <b>cOCActive</b> cOCStatus.errorList={cell4}
Тба	Outage of cell 1 ends	notifyClearedAlarm, originated by EUtranGenericCell instance representing cell 1	notification Id= clearAlCell1 correlatedNotifications={ notiAlCell1, COC1}
		notifyAttributeValueChan ge of CellOutageCompensationIn formation instance name contained in EUtranGenericCell instance representing cell 1	Notification Id=COC6a correlatedNotifications={COC1, COC5a, clearAlCell1} cOCStatus.state = <b>cOCDeactivating</b> cOCStatus.errorList={}
T7a	COC tries to reconfigure cell 2 without success	In case of unsuccessful reconfiguration: notifyAttributeValueChan ge of CellOutageCompensationIn formation instance name contained in EUtranGenericCell instance representing cell 1	Notification Id=COC7a correlatedNotifications={COC1, COC5a, COC6a, clearAlCell1} cOCStatus.state= cOCDeactivating; cOCStatus.errorList ={cell2}
T8a	COC reconfigures cell 3	notifyAttributeValueChan ge of EUtranGenericCell instance representing cell 3	notification Id= avcCell3decomp correlatedNotifications={ COC1, COC5a, avcCell3comp }
		notifyAttributeValueChan ge of	Notification Id=COC8a correlatedNotifications={COC1,

Time	Event	Notification	Selected notification content *)				
		CellOutageCompensationIn formation instance name contained in EUtranGenericCell instance representing cell 1.	clearAlCell1} cOCStatus.state= cOCDeactive cOCStatus.errorList={cell2}				
Case:	Case: COC not successful						
T5b	COC function decides, that compensation was not successful	notifyAttributeValueChan ge of CellOutageCompensationIn formation instance name contained in EUtranGenericCell instance representing cell 1	Notification Id=COC5b correlatedNotifications={COC1} cOCStatus.state= <b>cOCActive</b> cOCStatus.errorList={cell4}				
T6b	Outage of cell 1 ends	notifyClearedAlarm, originated by EUtranGenericCell instance representing cell 1  notifyAttributeValueChan ge of CellOutageCompensationIn formation instance name contained in EUtranGenericCell instance	notification Id= clearAlCell1 correlatedNotifications={ notiAlCell1, COC1}  Notification Id=COC6b correlatedNotifications={COC1, clearAlCell1} cOCStatus.state= cOCDeactivating cOCStatus.errorList={}				
T7b	COC reconfigures cell 2	representing cell 1  notifyAttributeValueChan ge of EUtranGenericCell instance representing cell 2	notification Id= avcCell2decomp correlatedNotifications={COC1, COC5b, avcCell2comp }				
T8b	COC reconfigures cell 3	notifyAttributeValueChan ge of EUtranGenericCell instance representing cell 3 notifyAttributeValueChan ge of CellOutageCompensationIn formation instance name contained in EUtranGenericCell instance representing cell 1.	notification Id= avcCell3decomp correlatedNotifications={ COC1, COC5b, avcCell3comp } Notification Id=COC8b correlatedNotifications={COC1, clearAlCell1} cOCStatus.state= cOCDeactive cOCStatus.errorList={}				

<sup>\*)</sup> Remarks:

There may be some content of the correlatedNotifications and/or additionalInformation field, which is not related to COC. This additional content is not shown for better readability and must be kept unchanged by COC. NotificationId's are only examples.

# Annex B (informative): Change history

Change history							
Date	TSG #	TSG Doc.	CR	Rev	Subject/Comment	Old	New
2012-11					First draft		0.1.0
2012-12	SA#58				Presented for information and approval	0.1.0	1.0.0
2012-12					New version after approval	1.0.0	11.0.0
2013-03	SA#59	SP-130048	001	1	Rel 11 CR 28658 - Correction of attribute name relatedSector	11.0.0	11.1.0
		SP-130057	002	1	CR R11 28.658 Addition of missing Network Sharing support for MDT		
2013-06	C V #CO	SP-130304	003	1	Energy saving synchronization with 32.762	11 1 0	11 2 0
2013-00	3A#60		004	2	Align the link inheritance with 28.622	11.1.0 11	11.2.0
2013-12	SA#62	SP-130614	006	1	Add blacklist member	11.2.0	11.3.0
2014-06	SA#64	SP-140359	800	-	remove the feature support statements	11.3.0	11.4.0
2014-09	SA#65	SP-140558	009	-	Align operationalState and other state attribute definitions	11.4.0	11.5.0
2014-10					Automatic upgrade (MCC)	11.5.0	12.0.0

# History

Document history			
V12.0.0	October 2014	Publication	