
ETSITS 102 362-3 V1.3.1 (2007-06)

Technical Specification

Electromagnetic compatibility and Radio spectrum Matters (ERM); Conformance testing for the Digital Mobile Radio (DMR); Part 3: Abstract Test Suite (ATS)

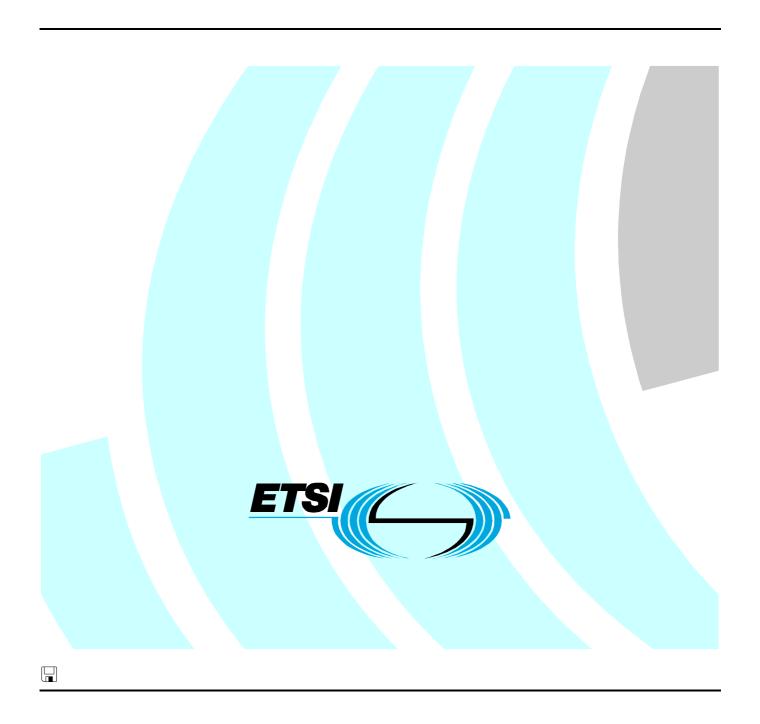

Reference

RTS/ERM-TGDMR-063-3

Keywords
ATS, digital, PMR, radio, testing

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

Individual copies of the present document can be downloaded from: <u>http://www.etsi.org</u>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

http://portal.etsi.org/tb/status/status.asp

Copyright Notification

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2007. All rights reserved.

DECTTM, **PLUGTESTS**TM and **UMTS**TM are Trade Marks of ETSI registered for the benefit of its Members. **TIPHON**TM and the **TIPHON logo** are Trade Marks currently being registered by ETSI for the benefit of its Members. **3GPP**TM is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

Contents

Intell	ectual Property Rights	5
Forev	word	5
1	Scope	£
2	References	
3 3.1	Definitions and abbreviations	
3.2	Abbreviations	
4	CCL test configuration	
4 4.1	CCL BS/MS test configuration	
4.1.1	CCL BS/MS test configuration	
4.1.2	CCL Test Adapter Requirements	
4.2	CCL TS/MS Trunked System Test Configuration	
4.2.1	Trunking System Control Channel (TSCC)	12
4.2.1.		
4.2.1.	1 1	
4.2.2	Trunking System Payload Channel	
4.2.2.		
4.2.2.	2 TSCC Test Adapter Requirements	15
5	DLL Test Configurations	15
5.1	DLL BS Test Configuration	
5.2	DLL MS Repeater Mode Test Configuration	
5.3	DLL MS Direct Mode Test Configuration	18
5.4	DLL Test Adapter Requirements	19
6	ATS conventions	21
6.1	Naming conventions	
6.2	Implementation conventions	
6.2.1	Templates	
6.2.2	Functions	
6.2.3	Synchronization functions	23
6.3	Test Case (TC) identifier	23
6.3.1	CCL TP naming conventions	
6.3.2	TSCC TP naming conventions	
6.3.3	TSPC TP naming conventions	
6.3.4	DLL TP naming conventions	26
Anne	ex A (informative): Upper Tester, In-house Testing, TDMA bursts, and Test case	
	simulation	27
A.1	Specifying an Upper Tester	27
A.1.1		
A.2	Using the ATS for In-house Testing	
	•	
A.3	Sending and Receiving DLL TDMA bursts	
A.4	Test case simulation	30
Anno	ex B (normative): Abstract Test Suite (ATS)	31
B.1	The ATS in TTCN-3 core (text) format	31
B.2	The html documentation of the TTCN-3 code	31
Anna	ex C (normative): Partial PIXIT proforma for DMR	32
	•	
C.1	Identification summary	32

C.2	ATS summary	32
C.3	Test laboratory	32
C.4	Client identification	33
C.5	SUT	33
C.6	Protocol layer information	33
C.6.1	Protocol identification	
C.6.2	IUT information	34
C.6.2.	.1 Timers	34
C.6.2.	.2 Common Configuration	34
Anne	ex D (normative): PCTR proforma for DMR	35
D.1	Identification summary	35
D.1.1		35
D.1.2		
D.1.3		
D.1.4	Limits and reservation	36
D.1.5	Comments	36
D.2	IUT Conformance status	36
D.3	Static conformance summary	37
D.4	Dynamic conformance summary	37
D.5	Static conformance review report	37
D.6	Test campaign report	38
D.7	Observations	43
Anne	ex E (informative): Bibliography	4 4
Histo	ory	45

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://webapp.etsi.org/IPR/home.asp).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by ETSI Technical Committee Electromagnetic compatibility and Radio spectrum Matters (ERM).

The present document is part 3 of a multi-part deliverable covering the Electromagnetic compatibility and Radio spectrum Matters (ERM); Conformance testing for the Digital Mobile Radio (DMR), as identified below:

Part 1: "Protocol Implementation Conformance Statement (PICS) proforma";

Part 2: "Test Suite Structure and Test Purposes (TSS&TP) specification";

Part 3: "Abstract Test Suite (ATS)".

1 Scope

The present document contains the Abstract Test Suite (ATS) to test the ERM DMR Call Control (CCL) and Data Link Layer (DLL).

The objective of the present document is to provide a basis for conformance tests for ERM DMR equipment giving a high probability of air interface inter-operability between different manufacturer's ERM DMR equipment.

The ISO standard for the methodology of conformance testing (ISO/IEC 9646-1 [5]) and the ETSI rules for conformance testing (ETS 300 406 [8]) are used as a basis for the test methodology.

- Clause 4 describes the Test Configuration used to test the DMR Call Control Layer (CCL) at the MS side and at the BS side.
- Clause 5 describes the Test Configurations used to test the DMR Data Link Layer (DLL) at the MS side and at the BS side.
- Clause 6 describes the ATS conventions, which are intended to give a better understanding of the ATS.
- Annex A provides a guideline for Upper Tester implementation, In-house Testing and Send/Receive of DLL TDMA bursts.
- Annex B provides the Tree and Tabular Combined Notation (TTCN-3) part of the ATS.
- Annex C provides the Partial Protocol Implementation Extra Information for Testing (PIXIT) Proforma of DMR.
- Annex D provides the Protocol Conformance Test Report (PCTR) Proforma of DMR.

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication and/or edition number or version number) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies.

Referenced documents which are not found to be publicly available in the expected location might be found at http://docbox.etsi.org/Reference.

NOTE: While any hyperlinks included in this clause were valid at the time of publication ETSI cannot guarantee their long term validity.

- [1] ETSI TS 102 361-1 (V1.4.1): "Electromagnetic compatibility and Radio spectrum Matters (ERM); Digital Mobile Radio (DMR) Systems; Part 1: DMR Air Interface (AI) protocol".
- [2] ETSI TS 102 361-2 (V.1.2.3): "Electromagnetic compatibility and Radio spectrum Matters (ERM); Digital Mobile Radio (DMR) Systems; Part 2: DMR voice and generic services and facilities".
- [3] ETSI TS 102 361-3 (V.1.1.3): "Electromagnetic compatibility and Radio spectrum Matters (ERM); Digital Mobile Radio (DMR) Systems; Part 3: DMR data protocol".
- [4] ETSI TS 102 361-4 (V.1.2.1): "Electromagnetic compatibility and Radio spectrum Matters (ERM); Digital Mobile Radio (DMR) Systems; Part 4: DMR trunking protocol".

[5]	ISO/IEC 9646-1: "Information technology - Open Systems Interconnection - Conformance testing methodology and framework - Part 1: General concepts".
[6]	ISO/IEC 9646-6: "Information technology - Open Systems Interconnection - Conformance testing methodology and framework - Part 6: Protocol profile test specification".
[7]	ISO/IEC 9646-7: "Information technology - Open Systems Interconnection - Conformance testing methodology and framework - Part 7: Implementation Conformance Statements".
[8]	ETSI ETS 300 406: "Methods for testing and Specification (MTS); Protocol and profile conformance testing specifications; Standardization methodology".
[9]	ETSI ES 201 873-1: "Methods for Testing and Specification (MTS); The Testing and Test Control Notation version 3; Part 1: TTCN-3 Core Language".

3 Definitions and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in ISO/IEC 9646-7 [7], TS 102 361-1 [1], TS 102 361-2 [2] and the following apply:

Lower DLL: all functions which are not part of upper DLL functions, like framing, interleaving and bit ordering

Upper DLL: DLL functions for DLL PDU management and DLL signalling

DMR Air Interface

Abstract Test Suite

3.2 Abbreviations

ΑI

ATS

TSPC

For the purposes of the present document, the abbreviations given in ISO/IEC 9646-1 [5], ISO/IEC 9646-7 [7], TS 102 361-1 [1], TS 102 361-2 [2] and the following apply:

BS Downlink Activation BA **BER** Bit Error Rate BS **Base Station** Call Control Layer CCL Data Link Layer DLL Digital Mobile Radio **DMR IUT** Implementation Under Test **IVC** Individual Voice Call MS Mobile Station MTC Main Test Component **OVCM** Open Voice Channel Mode **PCTR** Protocol Conformance Test Report Protocol Data Unit PDU PHY PHysical laYer **PICS** Protocol Implementation Conformance Statement Partial Protocol Implementation Extra Information for Testing **PIXIT PTC** Parallel Test Component PTT Push To Talk **SUT** System Under Test Test Case TC **TDMA** Time Division Multiple Access Test Purpose TP TTCN-3 Runtime Interface TRI TS Trunked Station **TSCC** Trunking System Control Channel

Trunking System Payload Channel

TSS Test Suite Structure

TTCN Testing and Test Control Notation

TTCN-3 Testing and Test Control Notation edition 3

UT Upper Tester

UTA Upper Tester Application

4 CCL test configuration

This clause describes the Test Configurations used to test the DMR Call Control Layer (CCL) and the DMR Data Link Layer (DLL) at the MS side and at the BS side.

Figure 1 shows the DMR protocol stack used to define the Test Configurations.

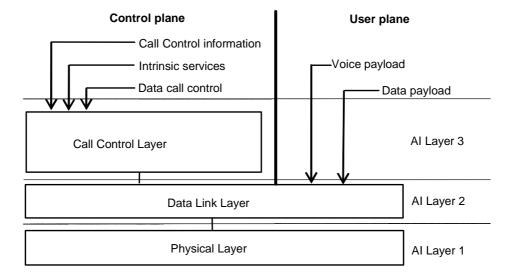


Figure 1: DMR protocol stack

4.1 CCL BS/MS test configuration

4.1.1 CCL BS/MS test configuration

Figure 2 describes the CCL BS/MS Test Configuration for testing the CCL of a real product implementing the DMR base standard. More information for this architecture is provided below.

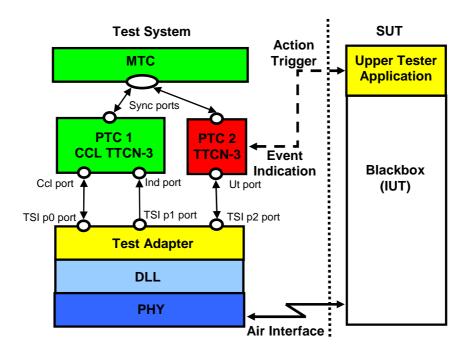


Figure 2: CCL MS/BS Test Configuration

The CCL MS/BS Test Configuration provides 3 test components:

• MTC:

- Creating, synchronizing and terminating PTCs and setting the final test case verdict.

• PTC 1 - CclSimu:

- CCL TTCN-3 uses Ccl port to send and receive CCL PDUs. Preliminary verdicts are set on the receive statements (MTC sets final verdict). The CCL PDUs that the Test Adapter shall support are listed in table 1.
- CCL TTCN-3 uses Ind port to receive internal indications from DLL. Preliminary verdicts are set on the receive statements (MTC sets final verdict). The Indication message TaIndMsg that the Test Adapter shall support is listed in table 2.
- PTC 1 controls via external functions the configuration of the Test System. Table 3 shows the list of Configuration Messages that the Test Adapter shall process.
- For testing the BS (=IUT) by making two calls, another PTC of type CclSimu shall be added.

• PTC 2 - UpperTester:

- TTCN-3 uses UT port to control the Upper Tester Application.
- The Upper Tester Application allows to observe IUT events. Preliminary verdicts are set on the receive statements of Indication Messages. The Indication message IutIndMsg that the Test Adapter shall support is listed in table 2.
- The Upper Tester Application allows to configure the IUT. The Configuration messages that the Test Adapter shall support are listed in table 3.

- The Upper Tester Application allows to trigger IUT actions such as initiating a PTT request. The IUT actions are observed on the Ccl port of PTC 1. The IUT Action messages that the Test Adapter shall support are listed in table 4.
- In the case where no Upper Tester is needed, the PTC becomes the MTC.
- MTC, PTC 1 and its Test Adapter with DLL and PHY form the Lower Tester.
- MTC, PTC 2 and its Test Adapter with Upper Tester Application form the Upper Tester.

4.1.2 CCL Test Adapter Requirements

- The Test Adapter implementation is outside the scope of the present document and is not part of the ATS development.
- Table 1 shows the CCL PDUs to be processed by the Test Adapter.

Table 1: CCL PDUs to be processed by the Test Adapter

CCL PDU	Port	Reference
BsDwnAct	Ccl port	clause 7.1 of TS 102 361-2 [2]
GrpVChUsr	Ccl port	clause 7.1 of TS 102 361-2 [2]
NackRsp	Ccl port	clause 7.1 of TS 102 361-2 [2]
UuAnsRsp	Ccl port	clause 7.1 of TS 102 361-2 [2]
UuVChUsr	Ccl port	clause 7.1 of TS 102 361-2 [2]
UuVReq	Ccl port	clause 7.1 of TS 102 361-2 [2]

- Table 2 shows the Indication Messages to be processed by the Test Adapter:
 - TA Indications refer to the slot on which the Ccl port is sending.

EXAMPLE 1: The TaIndMsg "eSlotIdle" refers to the slot on which Ccl port sent the preceding message.

The Upper Tester Application reports the IUT events to the Test Adapter. Then the Test Adapter shall send the relevant IutIndMsg to PTC 2 where they are observed on the UT port.

Table 2: Indication Messages to be processed by the Test Adapter

Indication message	Port	Reference
lutIndMsg	Ind port	DMR_Templates.ttcn
TalndMsg	UT port	DMR_Templates.ttcn

- Table 3 shows the Configuration Messages to be processed by the Test Adapter. The Configuration Messages describe the wanted configuration (for example parameters such as polite/impolite):
 - PTC 1 uses external functions (for example fx_taBsInit) to configure the Test System. The external functions are parameterized with Configuration Messages, and return FncRetCode.
 - PTC 2 sends Configuration Messages to the Test Adapter (and Upper Tester Application). (Upper Tester Application and) Test Adapter shall send FncRetCode to UT port of PTC 2.

Table 3: Configuration Messages to be processed by the Test Adapter

Configuration message	Port	Reference
BsCfgParams	UT port/ext fct	DMRTypes.asn
MsCfgParams	UT port/ext fct	DMRTypes.asn
FncRetCode	UT port/ext fct	DMRTypes.asn

- Table 4 shows the Action Messages to be processed by the Test Adapter.
 - PTC 1 uses external functions (for example fx_taMsAction) to trigger the Test System. The external functions are parameterized with Action Messages, and return FncRetCode.
 - PTC 2 sends an Action Message to the IUT. PTC 1 observes the IUT action.

Table 4: Action Messages to be processed by the Test Adapter

Action message	Port	Reference
BsActParams	UT port	DMRTypes.asn
MsActParams	UT port	DMRTypes.asn

• Table 5 shows the external functions to be processed by the Test Adapter.

EXAMPLE 2: The external function fx_taMsAction shall implement the sending of a voice burst with all related CCL PDUs.

Table 5: External functions to be processed by the Test Adapter

External function	Reference	
Configuration functions		
fx_taBsInit	DMR_ExtFunctions.ttcn	
fx_taMsInit	DMR_ExtFunctions.ttcn	
Action functions		
fx_taMsAction	DMR_ExtFunctions.ttcn	

4.2 CCL TS/MS Trunked System Test Configuration

4.2.1 Trunking System Control Channel (TSCC)

4.2.1.1 Test Configuration

Figure 3 describes the CCL TS/MS Trunked System Test Configuration for control channel testing of a real product implementing the DMR base standard [4].

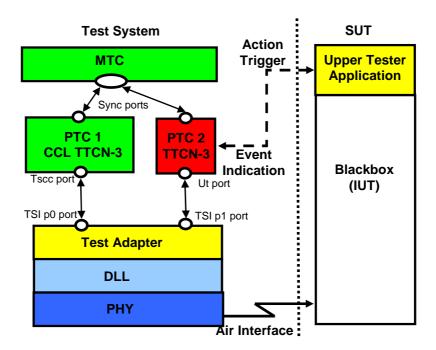


Figure 3: CCL MS/TS Trunking System Control Channel Test Configuration

The CCL MS/TS Trunking System Test Configuration provides 3 test components:

- MTC:
 - Creating, synchronizing and terminating PTCs and setting the final test case verdict.
- PTC 1 TsccSimu:
 - CCL TTCN-3 uses Tscc port to send and receive TSCC PDUs in the Call Control Layer (CCL).
 Preliminary verdicts are set on the receive statements (MTC sets final verdict). The TSCC PDUs that the Test Adapter shall support are listed in table 6.
- PTC 2 UpperTester:
 - TTCN-3 uses UT port to control the Upper Tester Application.
 - The Upper Tester Application allows to configure the IUT. The Configuration messages that the Test Adapter shall support are listed in table 7.
 - The Upper Tester Application allows to trigger IUT actions such as initiating a PTT request. The IUT actions are observed on the Tscc port of PTC 1. The IUT Action messages that the Test Adapter shall support are listed in table 8.
- NOTE 1: In the case where no Upper Tester is needed, the PTC becomes the MTC.
- NOTE 2: MTC, PTC 1 and its Test Adapter with DLL and PHY form the Lower Tester.
- NOTE 3: MTC, PTC 2 and its Test Adapter with Upper Tester Application form the Upper Tester.

For the individual calls(voice call, packet data call, short data call, etc) between calling MS and called MS, another PTC is used to simulate the called MS. Figure 4 describes the test configuration for this type of testing.

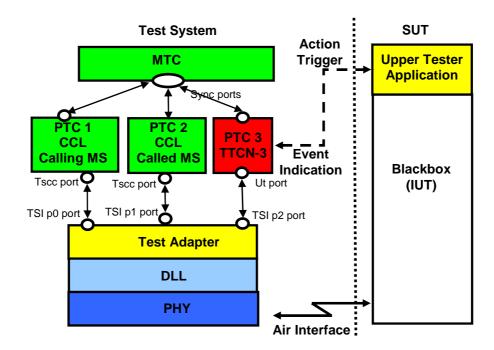


Figure 4: MS/TS Trunking System Control Channel Test Configuration For Individual Calls

The definition of each component in figure 4 is same as figure 3, PTC1 and PTC2 are TsccSimus, and PTC3 is an Upper Tester.

4.2.1.2 TSCC Test Adapter Requirements

The Test Adapter implementation is outside the scope of the present document and is not part of the ATS development.

Table 6 shows the TSCC PDUs for Trunking System Control Channel to be processed by the Test Adapter.

Table 6: TSCC PDUs to be processed by the Test Adapter

TSCC PDU	Port	Reference
CAloha	Tscc port	clause 7.1.1.1.4 of TS 102 361-4 [4]
CRandForReg	Tscc port	clause 7.1.1.2.1 of TS 102 361-4 [4]
CRandForVoice	Tscc port	clause 7.1.1.2.1 of TS 102 361-4 [4]
CRandForShort	Tscc port	clause 7.1.1.2.1 of TS 102 361-4 [4]
CRandForPoll	Tscc port	clause 7.1.1.2.1 of TS 102 361-4 [4]
CRandForStatus	Tscc port	clause 7.1.1.2.1 of TS 102 361-4 [4]
CRandForDivert	Tscc port	clause 7.1.1.2.1 of TS 102 361-4 [4]
CAcku	Tscc port	clause 7.1.1.2.3 of TS 102 361-4 [4]
CAckd	Tscc port	clause 7.1.1.1.7 of TS 102 361-4 [4]
CAhoy	Tscc port	clause 7.1.1.1.6 of TS 102 361-4 [4]
CBcast	Tscc port	clause 7.1.1.1.5 of TS 102 361-4 [4]
PvGrant	Tscc port	clause 7.1.1.1.1 of TS 102 361-4 [4]
TvGrant	Tscc port	clause 7.1.1.1.2 of TS 102 361-4 [4]
BtvGrant	Tscc port	clause 7.1.1.1.3 of TS 102 361-4 [4]
PdGrant	Tscc port	clause 7.1.1.1.4 of TS 102 361-4 [4]
TdGrant	Tscc port	clause 7.1.1.1.5 of TS 102 361-4 [4]
CUdthd	Tscc port	clause 7.1.1.1.8 of TS 102 361-4 [4]
CUdthu	Tscc port	clause 7.1.1.2.4 of TS 102 361-4 [4]
CAckvit	Tscc port	clause 7.1.1.1.2 of TS 102 361-4 [4]

Table 7 shows the Configuration Messages to be processed by the Test Adapter. The Configuration Messages describe the wanted configuration (for example parameters such as polite/impolite).

Configuration Messages are sent out to the Upper Tester Application of the IUT by the Upper Tester PTC. FncRetCode need to be send to UT port by the IUT.

Table 7: Configuration Messages to be processed by the Test Adapter

Configuration message	Port	Reference
TsCfgParams	UT port	DMRTypes.asn
MsTsCfgParams	UT port	DMRTypes.asn
FncRetCode	UT port	DMRTypes.asn

Table 8 shows the Action Messages to be processed by the Test Adapter.

Action Message is send out to the IUT by the PTC using UT port. PTC 1 observes the IUT action.

Table 8: Action Messages to be processed by the Test Adapter

Action message	Port	Reference
TsActParams	UT port	DMRTypes.asn
MsTsActParams	UT port	DMRTypes.asn

4.2.2 Trunking System Payload Channel

4.2.2.1 Test Configuration

Figure 5 describes the CCL TS/MS Trunked System Test Configuration for Payload Channel testing of a real product implementing the DMR base standard [4].

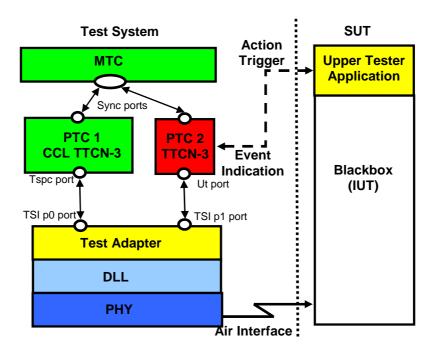


Figure 5: MS/TS Trunking System Payload Channel Test Configuration

The definition of each component is same as clause 4.2.1 except Tspc port is used instead of TSCC port:

PTC 1- TspcSimu:

• CCL TTCN-3 uses Tspc port to send and receive TSPC PDUs. Preliminary verdicts are set on the receive statements (MTC sets final verdict). TSPC PDUs that the Test Adapter shall support are listed in table 9.

4.2.2.2 TSCC Test Adapter Requirements

The Test Adapter implementation is outside the scope of the present document and is not part of the ATS development.

Table 9 shows the TSPC PDUs for Trunking System Payload Channel to be processed by the Test Adapter.

Table 9: TSPC PDUs to be processed by the Test Adapter

TSCC PDU	Port	Reference
PAhoy	Tscc port	clause 7.1.1.3.4 of TS 102 361-4 [4]
PAckd	Tscc port	clause 7.1.1.3.5 of TS 102 361-4 [4]
PAcku	Tscc port	clause 7.1.1.4.2 of TS 102 361-4 [4]
UHead	Tscc port	clause 9.2.6 of TS 102 361-1 [1]
PProtect	Tscc port	clause 7.1.1.3.3 of TS 102 361-4 [4]
PGrant	Tscc port	clause 7.1.1.3.1 of TS 102 361-4 [4]
PClear	Tscc port	clause 7.1.1.3.2 of TS 102 361-4 [4]
GrpVChUsr	Tscc port	clause 7.1 of TS 102 361-2 [2]
UuVChUsr	Tscc port	clause 7.1 of TS 102 361-2 [2]

NOTE: Configuration Messages and Action Messages that the Test Adapter need to process are the same as TSCC part.

5 DLL Test Configurations

The Testing Concept for DLL procedures is described in the text below.

TTCN-3 implements all Test Purposes defined in part 2 of this test specification. The Test Purposes cover DLL procedures like:

- CACH signalling.
- Channel Access Procedures.
- Channel Timing.
- DLL PDU management.
- Embedded Signalling.
- Voice signalling and voice transport.
- Data bearer services.

The Test Adapter communicates with TTCN-3 and shall ensure sending and receiving of TDMA frames. Therefore the Test Adapter shall implement or provide access to DLL procedures like:

- Bit Ordering.
- Framing.
- Interleaving, De-Interleaving.
- Synchronization.

This concept of splitting the DLL procedures into a TTCN-3 part and a test adapter part is reflected in the naming of the test components and applies strictly only to the test system (and not to the IUT):

- TTCN-3 part is called "Upper DLL TTCN-3".
- Test Adapter part responsible for send/receive is called "Lower DLL".

5.1 DLL BS Test Configuration

Figure 6 describes the DLL BS Test Configuration for testing the DLL of a real product implementing the DMR base standard.

More information for this architecture is provided below.

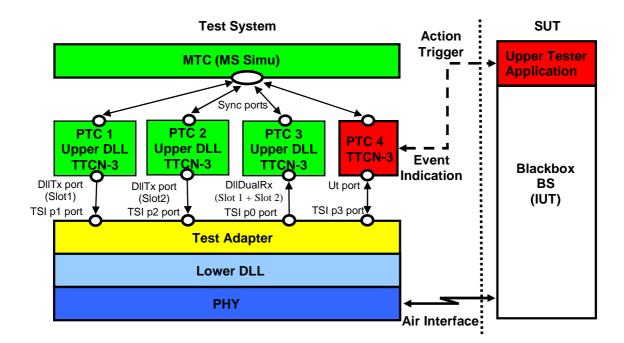


Figure 6: DLL BS Test Configuration

The DLL BS Test Configuration provides 4 test components:

- MTC:
 - Creating, synchronizing and terminating PTCs and setting the final test case verdict.
- PTC 1 DllSlotTx:
 - Upper DLL TTCN-3 uses dllTx port to send a MsBurst. The MsBurst from PTC 1 shall be send in slot 1. The Test Adapter shall support the MsBursts, see table 10.
 - PTC 1 controls via external functions the configuration of the Test System. Table 12 shows the list of Configuration Messages that the Test Adapter shall process.
- PTC 2 DllSlotTx:
 - The MsBursts from PTC 2 shall be send in slot 2. Otherwise same rules as for PTC 1 apply.
- PTC 3 Dll2SlotRx:
 - Upper DLL TTCN-3 uses dllDualRx port to receive BsBursts. Preliminary verdicts are set on the receive statements (MTC sets final verdict). The Test Adapter shall support the BsBurst, see table 10.

• PTC 4 - UpperTester:

- TTCN-3 uses UT port to control the Upper Tester Application.
- The Upper Tester Application allows to observe IUT events. Preliminary verdicts are set on the receive statements of Indication Messages. The Indication message IutIndMsg that the Test Adapter shall support is listed in table 11.
- The Upper Tester Application allows to configure the IUT. The Configuration messages that the Test Adapter shall support are listed in table 12.
- The Upper Tester Application allows to trigger IUT actions such as initiating a PTT request. The IUT actions are observed on the dllDualRx port of PTC 3. The IUT Action messages that the Test Adapter shall support are listed in table 13.

NOTE 1: MTC, PTC 1, PTC 2, PTC 3 and its Test Adapter with Lower DLL and PHY form the Lower Tester.

NOTE 2: MTC, PTC 4 and its Test Adapter with Upper Tester Application form the Upper Tester.

5.2 DLL MS Repeater Mode Test Configuration

Figure 7 describes the DLL MS Repeater Mode Test Configuration for testing the DLL of a real product implementing the DMR base standard.

More information for this architecture is provided below.

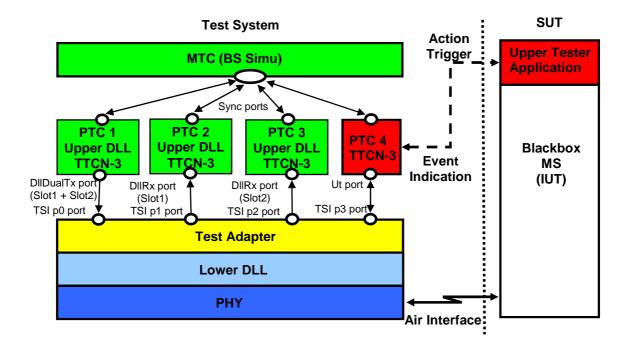


Figure 7: DLL MS Repeater Mode Test Configuration

The DLL MS Repeater Mode Test Configuration provides 4 test components:

• MTC:

- Creating, synchronizing and terminating PTCs and setting the final test case verdict.

• PTC 1 - Dll2SlotTx:

- Upper DLL TTCN-3 uses dllDualTx port to send a BsBurst. The Test Adapter shall support the BsBursts, see table 10.
- PTC 1 controls via external functions the configuration of the Test System. Table 12 shows the list of Configuration Messages that the Test Adapter shall process.

PTC 2 - DllSlotRx:

- Upper DLL TTCN-3 uses dllRx port to receive MsBurst. The MsBurst shall relate to slot 1. Preliminary verdicts are set on the receive statements (MTC sets final verdict). The Test Adapter shall support the MsBurst, see table 10.

PTC 3 - DllSlotRx:

The MsBurst shall relate to slot 2. Otherwise same rules as PTC 2 apply.

• PTC 4 - UpperTester:

- Same rules as in DLL BS Test Configuration apply.

NOTE 1: MTC, PTC 1, PTC 2, PTC 3 and its Test Adapter with Lower DLL and PHY form the Lower Tester.

NOTE 2: MTC, PTC 4 and its Test Adapter with Upper Tester Application form the Upper Tester.

5.3 DLL MS Direct Mode Test Configuration

Figure 8 describes the DLL MS Direct Mode Test Configuration for testing the DLL of a real product implementing the DMR base standard.

More information for this architecture is provided below.

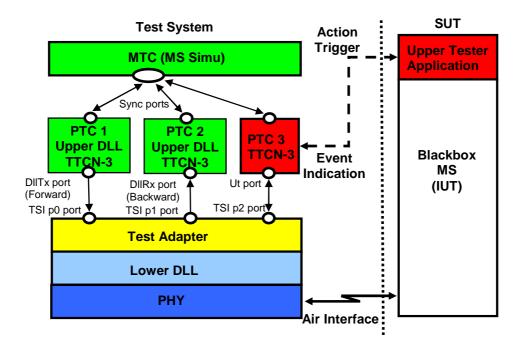


Figure 8: DLL MS Direct Mode Test Configuration

The DLL MS Direct Mode Test Configuration provides 3 test components:

- MTC:
 - Creating, synchronizing and terminating PTCs and setting the final test case verdict.
- PTC 1 DllSlotTx:
 - Upper DLL TTCN-3 uses dllTx port to send a MsBurst. The MsBurst from PTC 1 shall be send in slot 1 or slot 2. The Test Adapter shall support the MsBursts, see table 10.
 - PTC 1 controls via external functions the configuration of the Test System. Table 12 shows the list of Configuration Messages that the Test Adapter shall process.
- PTC 2 DllSlotRx:
 - Upper DLL TTCN-3 uses dllRx port to receive MsBurst. The MsBurst shall be received in slot 1 or slot 2. Preliminary verdicts are set on the receive statements (MTC sets final verdict). The Test Adapter shall support the MsBurst, see table 10.
- PTC 3 UpperTester:
 - Same rules as in DLL BS Test Configuration apply.

NOTE 1: MTC, PTC 1, PTC 2 and its Test Adapter with Lower DLL and PHY form the Lower Tester.

NOTE 2: MTC, PTC 3 and its Test Adapter with Upper Tester Application form the Upper Tester.

5.4 DLL Test Adapter Requirements

The Test Adapter implementation is outside the scope of the present document and is not part of the ATS development.

Two TTCN-3 messages are defined:

• The BsBurst contains all DLL PDUs to be sent/received in CACH 1 - Timeslot 1 and CACH 2 Timeslot 2.

EXAMPLE 1: {Cach, Sync, SlotType, Idle}+{Cach, Sync, SlotType, Idle} PDUs.

• The MsBurst all DLL PDUs to be sent/received in either Timeslot 1 or Timeslot 2. Therefore in each case a mapping to a specific slot will be given.

EXAMPLE 2: {Sync, SlotType, Idle} PDUs.

When receiving a TTCN-3 message from TRI, the Test Adapter shall de-assemble the TTCN-3 message into the DMR burst format and send it to the air interface.

When receiving a DMR burst format from the air interface, the Test Adapter shall assemble the DMR burst format into a TTCN-3 message and send it to TRI.

Table 10 shows the TTCN-3 messages to be processed by the Test Adapter. Further information can be found in clause A.3.

Table 10: TTCN-3 messages to be processed by the Test Adapter

TTCN-3 msg	Port	Reference
BsBurst	dllDualRx port	DMRTypes.asn
	dllDualTx port	
MsBurst	dllRx port	DMRTypes.asn
	dIITx port	

Table 11 shows the Indication Messages to be processed by the Test Adapter.

• The Upper Tester Application reports the IUT events to the Test Adapter. Then the Test Adapter shall send the relevant IutIndMsg to PTC 4 where they are observed on the UT port.

Table 11: Indication Messages to be processed by the Test Adapter

Indication message	Port	Reference
lutIndMsg	Ind port	DMR_Templates.ttcn

Table 12 shows the Configuration Messages to be processed by the Test Adapter. The Configuration Messages describe the wanted configuration (for example parameters such as polite/impolite):

- non-UT test components use external functions (for example fx_taBsInit) to configure the Test System. The external functions are parameterized with Configuration Messages, and return FncRetCode;
- UT test component sends Configuration Messages to the Test Adapter (and Upper Tester Application). (Upper Tester Application and) Test Adapter shall send FncRetCode to UT port of PTC 4.

Table 12: Configuration Messages to be processed by the Test Adapter

Configuration message	Port	Reference
BsCfgParams	UT port/ext fct	DMRTypes.asn
MsCfgParams	UT port/ext fct	DMRTypes.asn
FncRetCode	UT port/ext fct	DMRTypes.asn

Table 13 shows the Action Messages to be processed by the Test Adapter:

- non-UT test components use external functions (for example fx_taMsAction) to trigger the Test System. The external functions are parameterized with Action Messages, and return FncRetCode;
- UT test component sends an Action Message to the IUT. PTC 3 observes the IUT action.

Table 13: Action Messages to be processed by the Test Adapter

Action message	Port	Reference
BsActParams	UT port	DMRTypes.asn
MsActParams	UT port	DMRTypes.asn

Table 14 shows the external functions to be processed by the Test Adapter.

Table 14: External functions to be processed by the Test Adapter

External function	Reference			
Configuration	Configuration Functions			
fx_taBsInit	DMR_ExtFunctions.ttcn			
fx_taMsInit	DMR_ExtFunctions.ttcn			
Action F	unctions			
fx_taMsAction	DMR_ExtFunctions.ttcn			
Calculatio	n Functions			
fx_taCalTactParity	DMR_ExtFunctions.ttcn			
fx_taCalSlotTypeParity	DMR_ExtFunctions.ttcn			
fx_taCalEmbParity	DMR_ExtFunctions.ttcn			
fx_taCalFlc24BitsCrc	DMR_ExtFunctions.ttcn			
fx_taCalFlc5BitsCrc	DMR_ExtFunctions.ttcn			
fx_taCalCsbkCrc	DMR_ExtFunctions.ttcn			
fx_taCalDataHeaderCrc	DMR_ExtFunctions.ttcn			
fx_taCalConfDataBlkSNCrc	DMR_ExtFunctions.ttcn			
fx_taCalPacketDataCrc	DMR_ExtFunctions.ttcn			

6 ATS conventions

The ATS conventions are intended to give a better understanding of the ATS but they also describe the conventions made for the development of the ATS. These conventions shall be considered during any later maintenance or further development of the ATS.

The ATS conventions contain two clauses, the naming conventions and the implementation conventions. The naming conventions describe the structure of the naming of all ATS elements. The implementation conventions describe the functional structure of the ATS.

To define the ATS, the guidelines of the document ETS 300 406 [8] are considered.

6.1 Naming conventions

The naming convention is based on the following underlying principles:

- in most cases, identifiers should be prefixed with a short alphabetic string (specified in table 15) indicating the type of TTCN-3 element it represents;
- suffixes should not be used except in those specific cases identified in table 15;
- prefixes and suffixes should be separated from the body of the identifier with an underscore ("_").

```
EXAMPLE 1: c_sixteen, t_waitMax_g;
```

- only module names, data type names and module parameters should begin with an upper-case letter. All other names (i.e. the part of the identifier following the prefix) should begin with a lower-case letter;
- the start of second and subsequent words in an identifier should be indicated by capitalizing the first character. Underscores should not be used for this purpose.

```
EXAMPLE 2: f_authenticateUser().
```

Table 15 specifies the naming guidelines for each element of the TTCN-3 language indicating the recommended prefix, suffixes (if any) and capitalization.

Table 15: TTCN-3 naming convention

Language element	Naming convention	Prefix	Example	Notes
Module	Use upper-case initial letter	none	DMR_TypesAndValues	
Item group within a	Use lower-case initial letter	none	messageGroup	
module				
Data type	Use upper-case initial letter	none	SetupContents	
Message template	Use lower-case initial letter	m_	m_setupInit	Note 1
			m_setupBasic	
Message template	Use lower-case initial letters	mw_	mw_anyUserReply	Note 2
with wildcard or				
matching expression				
Port instance	Use lower-case initial letter	none	signallingPort	
Test component ref	Use lower-case initial letter	none	userTerminal	
Constant	Use lower-case initial letter	C_	c_maxRetransmission	
External constant	Use lower-case initial letter	CX_	cx_macld	
Function	Use lower-case initial letter	f_	f_authentication()	
External function	Use lower-case initial letter	fx_	fx_calculateLength()	
Altstep (incl. Default)	Use lower-case initial letter	a_	a_receiveSetup()	
Test case	Use all upper-case letters	TC_	TC_BS_DLL_TACT_BV_001	
Variable (local)	Use lower-case initial letter	v_	v_macld	
Variable (defined	Use lower-case initial letters	VC_	vc_systemName	
within a component)				
Timer (local)	Use lower-case initial letter	t	t_wait	
Timer (defined within	Use lower-case initial letters	tc_	tc_authMin	
a component)				
Module parameter	Use all upper-case letters	none	PX_MAC_ID	
Parameterization	Use lower-case initial letter	p_	p_macld	
Enumerated Value	Use lower-case initial letter	e_	e_syncOk	

NOTE 1: This prefix must be used for all template definitions which do *not* assign or refer to templates with wildcards or matching expressions, e.g. templates specifying a constant value, parameterized templates without matching expressions, etc.

NOTE 2: This prefix must be used in identifiers for templates which either assign a wildcard or matching expression (e.g. ?, *, value list, if present, pattern, etc) or reference another template which assigns a wildcard or matching expression.

6.2 Implementation conventions

6.2.1 Templates

- Templates should be identified with names rather than numbers.
- Templates should not modify other modified templates. Base templates which are modified must be identified
 in their naming.
- Templates should be specified separately for use in sending and receiving operations. The Prefixes as described above must be used in identifiers for templates which either assign a wildcard or matching expression (e.g. ?, *, value list, if present, pattern, etc) or reference another template which assigns a wildcard or matching expression.
- Template definitions should avoid using matching attributes such as "*" or "?" for complete structured values, e.g. record or set of values.
- PIXIT parameter values should be passed as parameters into templates.

6.2.2 Functions

The DMR ATS differentiates between synchronization functions, verdict handling functions and other functions. Each type of function is implemented in a separate module, although there may be multiple modules for each function type. The following general rules apply:

- Functions should use the *runs on* statement wherever this is possible.
- Each function should provide a return value. It is recommended to use the return value enumeration defined in the DMRTypes.asn file.

EXAMPLE: DMRAts.FncRetCode.

- If a PIXIT parameter is used as condition of an *if* statement, then its body should contain only a function call.
- The stop statement should be used with care in functions (controlled test component shutdown should be always insured).

6.2.3 Synchronization functions

The following guidelines apply to functions handling the synchronization of multiple, parallel test components:

- Synchronization should be invoked by the MTC at least after the preamble and before the postamble. The MTC may also invoke synchronization at other appropriate times.
- A PTC should synchronize after setting a verdict. This is to ensure that the verdict is always set prior to a PTC shutdown.
- Synchronization should use "named" synchronization as implemented in CommonLib_SyncLib.ttcn:
 - Named synchronization uses a different synchronization message for each synchronization in order to avoid confusion where multiple synchronizations are required.
- Synchronization of test termination should use the stop message which is the character string "STOP".
- To terminate test execution a PTC should send the stop message to the MTC and wait for the corresponding STOP-notification from the MTC.
- If an MTC receives the stop message then it should send stop messages to all PTCs.
- To terminate test execution an MTC should send the stop message to all PTCs and wait for them to cease
 execution.
- If a PTC receives the stop message then it should execute the appropriate postamble. This could be implemented as default behaviour. As this notification may occur at any point of the PTC execution, the postamble should take its current state into account.

6.3 Test Case (TC) identifier

The identifier of the test case is built in the same way as for the test purpose described in part 2 of the present document, with the exception that "TP" is replaced by "TC".

6.3.1 CCL TP naming conventions

The identifier of the TP is built according to table 16.

Table 16: TC naming convention for CCL

Identifier	TC/ <st>/<sl>/<sg>/<fm>/<x>-<nnn></nnn></x></fm></sg></sl></st>		
	<st> = side type</st>	BS	Base Station
		MS	Mobile Station
	<sl> = stack layer</sl>	CCL	Call Control Layer
		DLL	Data Link Layer
	<sg> = service group</sg>	BA	BS Downlink Activation
		VCR	Voice Call Repeating
		CHT	Voice Call Hangtime
		CR	CSBK Repeating
		BDA	BS Downlink Deactivation
		FNS	Feature Not Supported
		IC	Individual Call
		GC	Group Call
		UC	Unaddressed Voice Call
		AC	All Call Voice
		BC	Broadcast Call Voice
		OVCM	Open Voice Channel Mode
	<fm> = functional module</fm>	MS_INI	MS Initiating
		MS_TER	MS Terminating
	x = type of testing	BV	Valid Behaviour Tests
		TI	Timer and Constraints Tests
	<nnn> = sequential number</nnn>	(000 etc.)	

EXAMPLE: TC_BS_CCL_BA_MS_INI_BV_000 is the first test case for the valid behaviour testing of the MS_INItiated BS activation procedure of the Call Control layer at the BS side.

6.3.2 TSCC TP naming conventions

The identifier of the TP is built according to table 17.

Table 17: naming convention for TSCC

Identifier:	TP/ <st>/<ct>/<sg>/<fm>/<x>-<nnn></nnn></x></fm></sg></ct></st>		
	<st> = side type</st>	BS	Base Station
		MS	Mobile Station
	<ct> = channel type</ct>	TSCC	Trunking System Control Channel
		TSPC	Trunking System Payload Channel
	<sg> = service group</sg>	ACQUI	TSCC Acquisition Authorization
		RA	Rand Access
		REG	MS Registration
		AUTH	MS Authentication
		STUN	MS Stun
		PS	Power Save
		IVC	Individual Voice Call
		TVC	Talkgroup Voice Call
		IPDC	Individual Packet Data Call
		TPDC	TalkgroupPacket Data Call
		ISDM	Individual Short Data Message
		TSDM	Talkgroup Short Data Message
		SDP	Short Data Polling
		STAT	Status Service
		DIV	Call Diversion
		MKI	MS Kill
		IPCA	IP Connection Advice
	<fm> = functional module</fm>	MS_INI	MS Initiating
		MS_TER	MS Terminating
	x = type of testing	BV	Valid Behaviour Tests
	<nnn> = sequential number</nnn>	(000 etc.)	

EXAMPLE: TP/MS/TSCC/RA/ MS_INI/BV-001 is the second test purpose for the valid behaviour testing of MS_INItiated random access procedure in the Control Channel at the MS side.

6.3.3 TSPC TP naming conventions

The identifier of the TP is built according to table 18.

Table 18: naming convention for TSPC

Identifier:	TP/ <st>/<ct>/<sg>/<fm>/<x>-<nnn></nnn></x></fm></sg></ct></st>		
	<st> = side type</st>	BS	Base Station
		MS	Mobile Station
	<ct> = channel type</ct>	TSCC	Trunking System Control Channel
		TSPC	Trunking System Payload Channel
	<sg> = service group</sg>	MRC	MS Radio Check
		AUTHC	Authentication Check
		DEP	Disable/Enabling users PTT
		IMC	Illegal MS Check
		CG	Channel Grant
		CC	Call Cancel
	<fm> = functional module</fm>	MS_INI	MS Initiating
		MS_TER	MS Terminating
	x = type of testing	BV	Valid Behaviour Tests
		TI	Timer Tests
	<nnn> = sequential number</nnn>	(000 etc.)	

EXAMPLE: TP/BS/TSPC/CC/ MS_INI/BV-001 is the second test purpose for the valid behaviour testing of MS_INItiated call cancel procedure in the Payload Channel at the BS side.

6.3.4 DLL TP naming conventions

The identifier of the TC is built according to table 19.

Table 19: TC naming convention for DLL

Identifier:	TC/ <st>/<sl>/<sg>/<fm>/<x>-<nnn></nnn></x></fm></sg></sl></st>		
	<st> = side type</st>	BS	Base Station
		MS	Mobile Station
	<sl> = stack layer</sl>	CCL	Call Control Layer
		DLL	Data Link Layer
	<sg> = service group</sg>	CA	Channel Access
		SYNC	Synchronization
		ST	Slot Type
		EMB	Embedded Signalling
		TACT	TDMA Access Channel Type
		TT	Traffic Timing
		DHT	Data Hang Time
		IPCPD	IP Confirmed Data Packet
		IPUPD	IP Unconfirmed Data Packet
		IPRPD	IP Response Packet Data
		SDCPD	Short Data Confirmed Packet Data
		SDUPD	Short Data Unconfirmed Packet Data
		SDRPD	Short Data Response Packet Data
	<fm> = functional module</fm>	DM	Direct Mode(Peer to Peer Mode)
		RM	Repeater Mode
	x = type of testing	BV	Valid Behaviour Tests
		TI	Timer Tests
	<nnn> = sequential number</nnn>	(000 etc.)	

EXAMPLE: TP_MS_DLL_CA_DM_BV_001 is the second test case for the valid behaviour testing of the channel accessing procedure in direct mode of the Data Link layer at the MS side.

Annex A (informative): Upper Tester, In-house Testing, TDMA bursts, and Test case simulation

A.1 Specifying an Upper Tester

In order to completely automate conformance and interoperability testing, the upper interface of the IUT needs to be accessible to TTCN-3 test cases. The specification of this upper interface is not standardized by DMR and so there are no primitives defined for requesting the DMR stack to send a specific burst or to check if one has been received. Consequently, implementations of this interface are vendor specific and may even vary between different IUTs.

In conformance testing methodology the tight integration problem can be resolved by implementing an Upper Tester Application (UTA) in the SUT, i.e., outside of the test system. The purpose of the UTA is to play the role of a (dummy) DMR application which interacts with the DMR stack. It is, however, controlled by the test system with the Upper Tester Component via a message channel. Therefore, another task of the UT is to convert the messages sent by TTCN-3 into concrete DMR interface calls and vice versa. This allows a fairly generic design and encoding of a protocol between the UT and TTCN-3.

Table A.1 shows a test purpose which requires an Upper Tester.

Table A.1: Test Purpose which requires an Upper Tester

TP/M	S/VT/BV-xxx	Reference: TS 102 361-2 [2], clauses 6.3.2.1 and 6.2.3.2.3
		Initial condition: The IUT is in synchronization with the TS and the channel is idle.
		Check, that when the IUT initiates a PTT_Request and is granted the right to transmit,
		the IUT initially sends a Voice_LC_Header message

A.1.1 The UT in the DMR test system

In the test system the UT is assigned in each test case an own UT port. During the execution of a test case commands are sent to the UTA in the SUT via the UT port. The commands:

- indicate the reception of an DMR burst;
- configure the SUT.

Further on the commands could:

- indicate the start and end of a test case;
- reset the UT in case of test case errors.

The UT commands that are used are listed in table A.2. The UT commands are non-standardized, but it could be considered to use AT commands instead.

UT command Port Reference **BsActParams** UT port DMRTypes.asn **TsActParams** UT port DMRTypes.asn MsActParams DMRTypes.asn UT port MsTsActParams UT port DMRTypes.asn DMRTypes.asn **BsCfgParams UT** port TsCfgParmas DMRTypes.asn UT port MsCfgParams UT port DMRTypes.asn MsTsCfgParams UT port DMRTypes.asn lutIndMsg UT port DMRTypes.asn DMRTypes.asn

UT port

Table A.2: UT commands

Using the ATS for In-house Testing A.2

The delivered CCL and DLL test systems can be extended for In-house Testing. One example is the early prototype testing where:

- IUT is a software application (ETSI validates its TTCN-3 against Mirror TTCN-3 software application).
- The air interface is replaced with a TCP/IP interface.

FncRetCode

- TTCN-3 is not changed, because it is independent from the Test Adapter.
- External functions and Upper Tester Application are modified to fit the new SUT.
- TCP/IP connection between Upper Tester and Upper Tester Application (a serial port interface could be used as well).

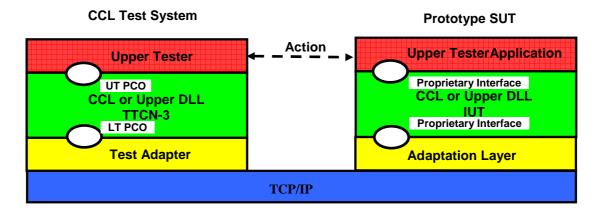


Figure A.1: Software Implementation Testing with TCP/IP

A.3 Sending and Receiving DLL TDMA bursts

Send and receive process is handled separately on different test components. This split allows to run in parallel the:

- sending of TTCN-3 messages faster then the DMR system clock;
- receiving, queuing of TTCN-3 messages and discharging the queue uncoupled to the DMR system clock.

When sending e.g. Voice Superframes, a TTCN-3 message is sent for each burst of the superframe ("A" through "F"). TTCN-3 messages shall be sent fast enough so that TA can de-assemble the TTCN-3 message into the DMR burst format and send it to the air interface.

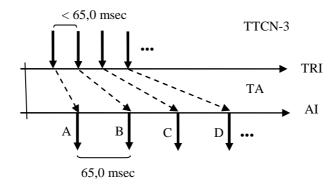


Figure A.2: Sending DLL TDMA bursts

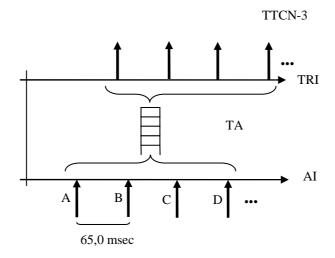


Figure A.3: Receiving DLL TDMA bursts

A.4 Test case simulation

All test cases in the DMR test suite has been simulated, by execution of the compiled test case against a System Under Test (SUT) implementation.

The simulation is based on the "TAU/Tester TRI (TTCN-3 Runtime Interface) Integration" system configuration defined in the "Telelogic TAU 2.4 Tau/Tester Tutorial". The TTCN-3 simulation executes a selected TTCN-3 test case (ETS) against a System Under Test (SUT) executable that simulates the expected behaviour of a conforming IUT. The two executable programs connect via a socket connection and exchange BER encoded data messages. Figure A.4 illustrates the simulation configuration.




Figure A.4: TTCN test case simulation configuration

The SUT executable is also a generated from a TTCN-3 specification using the same ASN.1 data type and PDU type definitions as the DMR test suite specification. The SUT specification also may need to be modified to match the test case selected for simulation.

Simulation of the test cases has improved the quality of the DMR TTCN-3 test suite detecting a number of errors not detected by static analysis. The types of errors detected include:

- Synchronization errors between parallel test components, e.g. causing that the test case execution never terminates.
- Program flow errors in test components, e.g. loops with incorrect termination conditions or missing "repeat" statements causing the premature termination of the test case execution.
- Use of incorrect test configuration, e.g. using a test configuration for DLL repeater mode for a test case checking a DLL direct mode requirement. This type of error is in some cases detected only when dynamically mapping the components ports on to the test configuration.
- Incorrect or missing handling of messages from the SUT, causing the test case to fail the IUT even if the IUT satisfies the conformance requirement.
- Missing verdict assignments.

It should be noted that the simulation performed for each test case has been done only to validate that the test case when testing a conforming IUT will result in a "pass" verdict. This means no validation has been performed to check the test case execution result when executing against a non-conforming IUT.

Annex B (normative): Abstract Test Suite (ATS)

B.1 The ATS in TTCN-3 core (text) format

This ATS has been produced using the Testing and Test Control Notation (TTCN) according to ES 201 873-1 [9].

The TTCN-3 core (text) representation corresponding to this ATS is contained in ASCII files (DMR_TTCN3_v003.zip contained in the archive ts_10236203v010301p0.zip) which accompanies the present document.

NOTE: Where an ETSI Abstract Test Suite (in TTCN-3) is published in both core and tabular format these two forms shall be considered equivalent. In the event that there appears to be syntactical or semantic differences between the two then the problem shall be resolved and the erroneous format (whichever it is) shall be corrected.

B.2 The html documentation of the TTCN-3 code

The documentation of the TTCN-3 code is in the html files (DMR_T3DOC_v003.zip contained in the archive ts_10236203v010301p0.zip) which accompanies the present document.

Annex C (normative): Partial PIXIT proforma for DMR

Notwithstanding the provisions of the copyright clause related to the text of the present document, ETSI grants that users of the present document may freely reproduce the partial PIXIT proforma in this annex so that it can be used for its intended purposes and may further publish the completed partial PIXIT.

The PIXIT Proforma is based on ISO/IEC 9646-6 [6]. Any needed additional information can be found in the present document.

C.1 Identification summary

Table C.1

PIXIT Number:	
Test Laboratory Name:	
Date of Issue:	
Issued to:	

C.2 ATS summary

Table C.2

Protocol Specification:	TS 102 361-1 [1], TS 102 361-2 [2], TS 102 361-3 [3], TS 102 361-4 [4]
Protocol to be tested:	
ATS Specification:	TS 102 362-3
Test Configuration:	TS 102 362-3 clauses 4 and 5

C.3 Test laboratory

Table C.3

Test Laboratory Identification:	
Test Laboratory Manager:	
Means of Testing:	
SAP Address:	

C.4 Client identification

Table C.4

Client Identification:	
Client Test manager:	
Test Facilities required:	

C.5 SUT

Table C.5

Name:	
Version:	
SCS Number:	
Machine configuration:	
Operating System Identification:	
IUT Identification:	
PICS Reference for IUT:	
Limitations of the SUT:	
Environmental Conditions:	

C.6 Protocol layer information

C.6.1 Protocol identification

Table C.6

Name:	TS 102 361-1 [1],
	TS 102 361-2 [2],
	TS 102 361-3 [3],
	TS 102 361-4 [4]
Version:	
PICS References:	

C.6.2 IUT information

C.6.2.1 Timers

Table C.7: Timers

Name	Туре	Comment
PXT_MAX_CASE_EXEC_PERIOD	float	Time of Max Case Execution
PXT_MAX_BS_REPEATING_DELAY	float	Time of Max Bs Repeating Delay
PXT_MAX_TIME_RECV_NEXT_FRM	float	Timer for receiving next TDMA frame
		(it should be greater than 60E-3 sec)
PXT_MAX_TIME_CFG_ACT_RLY	float	Max Time of IUT sending back
		response of configuration/action's
		func/msg
PXT_GUARD_TIME	float	General Guard Timer
PXT_MS_HOLD_TRANSMISSION_TIME	float	Timer for MS holding transmission
PXT_GUARD_TIME_CALL_HT	float	Guard Time when testing Call HT
PXT_GUARD_TIME_MS_INACTIV	float	Guard Time of Ms inactive
PXT_GUARD_TIME_TRANSMITTING	float	Guard Time of Ms transmitting

C.6.2.2 Common Configuration

Table C.8: Common Configuration

Name	Туре	Comment
PXT_VALIDATION_MODE	Boolean	Debug flag
PXT_BS_ADDR	BsAddr	Value of BS Address
PXT_MS_SIMU_SRC_ADDR	SrcAddr	Value of MS Simu Source Address
PXT_MS_ADDR	SrcAddr	Value of MS Address
PXT_CALLED_MS_ADDR	TargetAddr	Value of Called MS Address
PXT_GRP_ADDR	GrpAddr	Value of Group Address
PXT_WRONG_TARGET_ADDR	TargetAddr	Wrong Value of Target Address
PXT_TARGET_ADDR	TargetAddr	Value of Target Address
PXT_UNADDR_V_CALL_ADDR	TargetAddr	Value of Unaddress Idn Address from FFFFE0 to FFFFEF
PXT_ALL_UNIT_V_CALL_ADDR	TargetAddr	Value of All Unit Idn Address from FFFFF0 to FFFFFF
PXT_ADDI_INFO	Additionalnfo	Value of Additonal Information used in NackRsp PDU
PXT_MY_SYSTEM_CC	Cc	Value of My System Color Code
PXT_OTHER_SYSTEM_CC	Cc	Value of Other System Color Code
PXT_DIRECT_MODE	Boolean	Indicate if Direct Mode supported
PXT_REPEATER_MODE	Boolean	Indicate if Repeater Mode supported
PXT_SYSCODE	CsysCode	Syscode in the CAhoy PDU or four CACH PDUs.
PXT_LOG_CHANNEL	LogicalChannel	Value of the Logical channel to swap to in a P_GRANT
		message
PXT_CONTROL_CHANNEL	LogicalChannel	Value of the control channel to use after a P_CLEAR or P_PROTECT
PXT_WINDOW_SIZE	Integer	Value of the window size in the sliding window protocol in
		confirmed data packet transmission. This value defines
		the max number of packets sent until the next packet will
		contain a request for confirmation

Annex D (normative): PCTR proforma for DMR

Notwithstanding the provisions of the copyright clause related to the text of the present document, ETSI grants that users of the present document may freely reproduce the PCTR proforma in this annex so that it can be used for its intended purposes and may further publish the completed PCTR.

The PCTR proforma is based on ISO/IEC 9646-6 [6]. Any needed additional information can be found in the present document.

D.1 Identification summary

D.1.1 Protocol conformance test report

Table D.1

PCTR Number:	
PCTR Date:	
Corresponding SCTR Number:	
Corresponding SCTR Date:	
Test Laboratory Identification:	
Test Laboratory Manager:	
Signature:	

D.1.2 IUT identification

Table D.2

Name:	
Version:	
Protocol specification:	
PICS:	
Previous PCTR if any:	

D.1.3 Testing environment

Table D.3

PIXIT Number:	
ATS Specification:	
Test Configuration:	
Means of Testing identification:	
Date of testing:	
Conformance Log reference(s):	
Retention Date for Log reference(s):	
D.1.4 Limits and reservat	
	contents or further use of the test report, or the rights and obligations of here. Such information may include restriction on the publication of the
D.1.5 Comments	
Additional comments may be given by either the example, to note disagreement between the two	e client or the test laboratory on any of the contents of the PCTR, for parties.

D.2 IUT Conformance status

This IUT has or has not been shown by conformance assessment to be non-conforming to the specified protocol specification.

Strike the appropriate words in this sentence. If the PICS for this IUT is consistent with the static conformance requirements (as specified in clause D.3 in the present document) and there are no "FAIL" verdicts to be recorded (in clause D.6 in the present document) strike the words "has or", otherwise strike the words "or has not".

D.3 Static conformance summary

The PICS for this IUT is or is not consistent with the static conformance requirements in the specified protocol.

Strike the appropriate words in this sentence.

D.4	Dynamic conformance summary

The test campaign did or did not reveal errors in the IUT.
Strike the appropriate words in this sentence. If there are no "FAIL" verdicts to be recorded (in clause D.6 of the present document) strike the words "did or" otherwise strike the words "or did not".
Summary of the results of groups of test:
D.5 Static conformance review report
D.5 Static conformance review report If clause D.3 indicates non-conformance, this clause itemizes the mismatches between the PICS and the static conformance requirements of the specified protocol specification.
If clause D.3 indicates non-conformance, this clause itemizes the mismatches between the PICS and the static
If clause D.3 indicates non-conformance, this clause itemizes the mismatches between the PICS and the static
If clause D.3 indicates non-conformance, this clause itemizes the mismatches between the PICS and the static
If clause D.3 indicates non-conformance, this clause itemizes the mismatches between the PICS and the static
If clause D.3 indicates non-conformance, this clause itemizes the mismatches between the PICS and the static
If clause D.3 indicates non-conformance, this clause itemizes the mismatches between the PICS and the static
If clause D.3 indicates non-conformance, this clause itemizes the mismatches between the PICS and the static

D.6 Test campaign report

Table D.4

ATS Reference	Selected?	Run?	Verdict	Observations (Reference to any observations made in clause D.7)
MS DLL				,
TC_MS_DLL_SYNC_BV_000	yes/no	yes/no		
TC_MS_DLL_SYNC_BV_001	yes/no	yes/no		
TC_MS_DLL_SYNC_BV_002	yes/no	yes/no		
TC_MS_DLL_ST_BV_000	yes/no	yes/no		
TC_MS_DLL_ST_BV_001	yes/no	yes/no		
TC_MS_DLL_ST_BV_002	yes/no	yes/no		
TC_MS_DLL_EMB_DM_BV_000	yes/no	yes/no		
TC_MS_DLL_EMB_RM_BV_000	yes/no	yes/no		
TC_MS_DLL_CA_DM_BV_000	yes/no	yes/no		
TC_MS_DLL_CA_DM_BV_001	yes/no	yes/no		
TC MS DLL CA DM BV 002	yes/no	yes/no		
TC MS DLL CA DM BV 003	yes/no	yes/no		
TC MS DLL CA DM BV 004	ves/no	yes/no		
TC MS DLL CA DM BV 005	yes/no	yes/no		
TC_MS_DLL_CA_DM_BV_006	yes/no	ves/no		
TC_MS_DLL_CA_DM_BV_007	yes/no	yes/no		
TC MS DLL CA DM TI 000	yes/no	yes/no		
TC_MS_DLL_CA_DM_TI_001	yes/no	yes/no		
TC MS DLL CA DM TI 002	yes/no	yes/no		
TC_MS_DLL_CA_RM_BV_000	yes/no	yes/no		
TC MS DLL CA RM BV 001	yes/no	yes/no		
TC MS DLL CA RM BV 002	ves/no	yes/no		
TC MS DLL CA RM BV 003	yes/no	yes/no		
TC_MS_DLL_CA_RM_BV_004	yes/no	yes/no		
TC MS DLL CA RM BV 005	yes/no	yes/no		
TC MS DLL CA RM BV 006	yes/no	yes/no		
TC MS DLL CA RM BV 007	yes/no	yes/no		
TC MS DLL CA RM BV 008	yes/no	yes/no		
TC_MS_DLL_CA_RM_BV_009	yes/no	yes/no		
TC MS DLL CA RM BV 010	ves/no	yes/no		
TC MS DLL CA RM TI 000	yes/no	yes/no		
TC_MS_DLL_CA_RM_TI_001	yes/no	yes/no		
TC MS DLL CA RM TI 002	yes/no	yes/no		
TC_MS_DLL_CRC_BV_000	ves/no	yes/no		
TC_MS_DLL_CRC_BV_001	yes/no	yes/no		
TC_MS_DLL_CRC_BV_002	yes/no	yes/no		
TC MS DLL CRC BV 003	ves/no	yes/no		
TC_MS_DLL_CRC_BV_004	yes/no	yes/no		
TC_MS_DLL_CRC_BV_005	yes/no	ves/no		
TC_MS_DLL_CRC_BV_006	yes/no	yes/no		
	Packet Dat			
TC_MS_DLL_IPUPD_MS_INI_BV_000	yes/no	ves/no		
TC MS DLL IPUPD MS INI BV 001	yes/no	ves/no		
TC_MS_DLL_IPUPD_MS_INI_BV_002	yes/no	yes/no		
TC_MS_DLL_IPUPD_MS_INI_BV_003	yes/no	yes/no		
TC_MS_DLL_IPUPD_MS_INI_BV_004	yes/no	yes/no		
TC_MS_DLL_IPUPD_MS_INI_BV_005	yes/no	ves/no		
TC MS DLL IPCPD MS INI BV 000	yes/no	yes/no		
TC_MS_DLL_IPCPD_MS_INI_BV_000	yes/no	yes/no		
TC_MS_DLL_IPCPD_DM_MS_INI_BV_001	yes/no	ves/no		
TC_MS_DLL_IPCPD_DMI_MS_INI_BV_001 TC_MS_DLL_IPCPD_MS_INI_BV_002	yes/no	yes/no		
TC_MS_DLL_IPCPD_MS_INI_BV_002	yes/no	yes/no		
TC_MS_DLL_IPCPD_MS_INI_BV_003				
TC_MS_DLL_IPCPD_MS_INI_BV_004 TC_MS_DLL_IPCPD_MS_INI_BV_005	yes/no	yes/no		
TC_MS_DLL_IPCPD_MS_INI_BV_005	yes/no	yes/no		
10 MO DFF 14040 MO MI RA 000	yes/no	yes/no	l	

ATS Reference	Selected?	Run?	Verdict	Observations (Reference to any observations made in clause D.7)
TC_MS_DLL_IPCPD_DM_MS_INI_BV_000	yes/no	yes/no		,
TC_MS_DLL_IPCPD_DM_MS_INI_BV_001	yes/no	yes/no		
TC_MS_DLL_IPRPD_MS_TER_BV_000	yes/no	yes/no		
TC_MS_DLL_IPRPD_MS_TER_BV_001	yes/no	yes/no		
TC_MS_DLL_SDUPD_MS_INI_BV_000	yes/no	yes/no		
TC_MS_DLL_SDUPD_MS_INI_BV_001	yes/no	yes/no		
TC_MS_DLL_SDUPD_MS_INI_BV_002	yes/no	yes/no		
TC_MS_DLL_SDCPD_MS_INI_BV_000	yes/no	yes/no		
TC_MS_DLL_SDCPD_MS_INI_BV_001	yes/no	yes/no		
TC_MS_DLL_SDCPD_MS_INI_BV_002	yes/no	yes/no		
TC_MS_DLL_SDRPD_MS_INI_BV_000	yes/no	yes/no		
BS DLL	,	,		
TC_BS_DLL_TACT_BV_000	yes/no	yes/no		
TC_BS_DLL_TACT_BV_001	yes/no	yes/no		
TC_BS_DLL_TACT_BV_002	yes/no	yes/no		
TC_BS_DLL_TACT_BV_003	yes/no	yes/no		
TC_BS_DLL_SYNC_BV_000	yes/no	yes/no		
TC_BS_DLL_SYNC_BV_001	yes/no	yes/no		
TC_BS_DLL_ST_BV_000	yes/no	yes/no		
TC_BS_DLL_TT_BV_000	yes/no	yes/no		
TC_BS_DLL_TT_BV_001	yes/no	yes/no		
TC_BS_DLL_CRC_BV_000	yes/no	yes/no		
TO DO DIL DDD LIDD DV 000	Packet Data			T
TC_BS_DLL_PDP_UPD_BV_000 TC BS_DLL_PDP_CPD_BV_000	yes/no yes/no	yes/no yes/no		
TC_BS_DLL_PDP_DHT_TI_000	•	,		
MS CCL	yes/no	yes/no		
TC MS CCL BA MS INI BV 000	yes/no	yes/no		
TC_MS_CCL_BA_MS_INI_TI_000	ves/no	ves/no		
TC_MS_CCL_BA_MS_INI_TI_000	yes/no	yes/no		
TC_MS_CCL_BA_MS_INI_TI_002	yes/no	yes/no		
TC MS CCL FNS MS TER BV 000	yes/no	yes/no		
TC MS CCL GC MS INI BV 000	ves/no	yes/no		
TC_MS_CCL_GC_MS_INI_BV_001	yes/no	yes/no		
TC_MS_CCL_GC_MS_INI_BV_002	yes/no	yes/no		
TC MS CCL GC MS TER BV 000	yes/no	yes/no		
TC_MS_CCL_GC_MS_TER_BV_001	ves/no	ves/no		
TC_MS_CCL_GC_MS_TER_BV_002	yes/no	yes/no		
TC_MS_CCL_GC_MS_TER_BV_003	yes/no	yes/no		
TC_MS_CCL_GC_MS_TER_BV_004	yes/no	yes/no		
TC_MS_CCL_IC_MS_INI_BV_000	yes/no	yes/no		
TC_MS_CCL_IC_MS_INI_BV_001	yes/no	yes/no		
TC_MS_CCL_IC_MS_INI_BV_002	yes/no	yes/no		
TC_MS_CCL_IC_MS_INI_BV_003	yes/no	yes/no		
TC_MS_CCL_IC_MS_INI_BV_004	yes/no	yes/no		
TC_MS_CCL_IC_MS_INI_BV_005	yes/no	yes/no		
TC_MS_CCL_IC_MS_INI_TI_000	yes/no	yes/no		
TC_MS_CCL_IC_MS_INI_TI_001	yes/no	yes/no		
TC_MS_CCL_IC_MS_INI_TI_002	yes/no	yes/no		
TC_MS_CCL_IC_MS_TER_BV_000	yes/no	yes/no		
TC_MS_CCL_IC_MS_TER_BV_001	yes/no	yes/no		
TC_MS_CCL_IC_MS_TER_BV_002	yes/no	yes/no		
TC_MS_CCL_IC_MS_TER_BV_003	yes/no	yes/no		
TC_MS_CCL_IC_MS_TER_BV_004	yes/no	yes/no		
TC_MS_CCL_IC_MS_TER_BV_005	yes/no	yes/no		
TC_MS_CCL_UC_MS_INI_BV_000	yes/no	yes/no		
TC_MS_CCL_AC_MS_INI_BV_000	yes/no	yes/no		
TC_MS_CCL_BC_MS_INI_BV_000	yes/no	yes/no		
TC_MS_CCL_OVCM_MS_INI_BV_000	yes/no	yes/no		
TC_MS_CCL_OVCM_MS_INI_BV_001	yes/no	yes/no		
TC_MS_CCL_TI_MS_INI_BV_000	yes/no	yes/no		
TC_MS_CCL_TI_MS_INI_BV_001	yes/no	yes/no		

ATS Reference	Selected?	Run?	Verdict	Observations (Reference to any observations made in clause D.7)
MS CCL	Trunking S	ystem Cor	ntrol Channel	
TC_MS_TSCC_ACQUI_MS_INI_BV_000	yes/no	yes/no		
TC_MS_TSCC_ACQUI_MS_INI_BV_001	yes/no	yes/no		
TC_MS_TSCC_ACQUI_MS_INI_BV_002	yes/no	yes/no		
TC_MS_TSCC_RA_MS_INI_BV_000	yes/no	yes/no		
TC_MS_TSCC_RA_MS_INI_BV_001	yes/no	yes/no		
TC_MS_TSCC_RA_MS_INI_BV_002	yes/no	yes/no		
TC_MS_TSCC_RA_MS_INI_BV_003	yes/no	yes/no		
TC_MS_TSCC_RA_MS_INI_BV_004	yes/no	yes/no		
TC_MS_TSCC_REG_MS_INI_BV_000	yes/no	yes/no		
TC_MS_TSCC_AUTH_MS_INI_BV_000	yes/no	yes/no		
TC_MS_TSCC_STUN_MS_INI_BV_000 TC MS TSCC STUN MS INI BV 001	yes/no	yes/no		
TC_MS_TSCC_STUN_MS_INI_BV_001 TC_MS_TSCC_STUN_MS_INI_BV_002	yes/no	yes/no		
TC_MS_TSCC_STUN_MS_INI_BV_002 TC_MS_TSCC_STUN_MS_INI_BV_003	yes/no yes/no	yes/no yes/no		
TC_MS_TSCC_STUN_MS_INI_BV_003 TC_MS_TSCC_STUN_MS_INI_BV_004	yes/no	yes/no		
TC_MS_TSCC_IVC_MS_INI_BV_000	ves/no	ves/no		
TC_MS_TSCC_IVC_MS_INI_BV_000	yes/no	yes/no		
TC_MS_TSCC_IVC_MS_INI_BV_001 TC_MS_TSCC_IVC_MS_INI_BV_002	yes/no	yes/no		
TC_MS_TSCC_IVC_MS_INI_BV_002	yes/no	yes/no		
TC_MS_TSCC_IVC_MS_INI_BV_004	yes/no	yes/no		
TC_MS_TSCC_IVC_MS_INI_BV_005	ves/no	ves/no		
TC_MS_TSCC_IVC_MS_TER_BV_000	yes/no	yes/no		
TC_MS_TSCC_IVC_MS_TER_BV_001	yes/no	yes/no		
TC_MS_TSCC_TVC_MS_INI_BV_000	yes/no	yes/no		
TC MS TSCC TVC MS INI BV 001	yes/no	yes/no		
TC_MS_TSCC_TVC_MS_INI_BV_002	yes/no	yes/no		
TC_MS_TSCC_TVC_MS_INI_BV_003	yes/no	yes/no		
TC_MS_TSCC_IPDC_MS_INI_BV_000	yes/no	yes/no		
TC_MS_TSCC_IPDC_MS_INI_BV_001	yes/no	yes/no		
TC_MS_TSCC_IPDC_MS_INI_BV_002	yes/no	yes/no		
TC_MS_TSCC_IPDC_MS_INI_BV_003	yes/no	yes/no		
TC_MS_TSCC_IPDC_MS_INI_BV_004	yes/no	yes/no		
TC_MS_TSCC_IPDC_MS_TER_BV_000	yes/no	yes/no		
TC_MS_TSCC_TPDC_MS_INI_BV_000	yes/no	yes/no		
TC_MS_TSCC_TPDC_MS_INI_BV_001	yes/no	yes/no		
TC_MS_TSCC_TPDC_MS_INI_BV_002	yes/no	yes/no		
TC_MS_TSCC_TPDC_MS_INI_BV_003	yes/no	yes/no		
TC_MS_TSCC_ISDM_MS_INI_BV_000	yes/no	yes/no		
TC_MS_TSCC_ISDM_MS_INI_BV_001	yes/no	yes/no		
TC_MS_TSCC_ISDM_MS_INI_BV_002	yes/no	yes/no		
TC_MS_TSCC_ISDM_MS_INI_BV_003	yes/no	yes/no		
TC_MS_TSCC_ISDM_MS_TER_BV_000 TC_MS_TSCC_TSDM_MS_INI_BV_000	yes/no	yes/no		
TC_MS_TSCC_TSDM_MS_INI_BV_000 TC_MS_TSCC_TSDM_MS_INI_BV_001	yes/no	yes/no		
TC_MS_TSCC_TSDM_MS_INI_BV_001 TC_MS_TSCC_TSDM_MS_INI_BV_002	yes/no yes/no	yes/no ves/no		
TC_MS_TSCC_TSDM_MS_INI_BV_002 TC_MS_TSCC_TSDM_MS_INI_BV_003	yes/no	yes/no		
TC_MS_TSCC_TSDM_MS_INI_BV_003 TC_MS_TSCC_SDP_MS_INI_BV_000	yes/no	ves/no		
TC_MS_TSCC_SDP_MS_INI_BV_000	yes/no	yes/no		
TC_MS_TSCC_SDP_MS_INI_BV_002	yes/no	yes/no		
TC_MS_TSCC_SDP_MS_TRT_BV_002 TC_MS_TSCC_SDP_MS_TER_BV_000	ves/no	ves/no		
TC_MS_TSCC_SDP_MS_TER_BV_001	yes/no	yes/no		
TC_MS_TSCC_STAT_MS_INI_BV_000	yes/no	yes/no		
TC_MS_TSCC_STAT_MS_INI_BV_001	yes/no	ves/no		
TC_MS_TSCC_STAT_MS_INI_BV_002	yes/no	yes/no		
TC_MS_TSCC_STAT_MS_TER_BV_000	yes/no	yes/no		
TC_MS_TSCC_CD_MS_INI_BV_000	yes/no	yes/no		
TC_MS_TSCC_MKI_BV_000	yes/no	yes/no		
TC_MS_TSCC_MKI_BV_001	yes/no	yes/no		
TC_MS_TSCC_MKI_BV_002	yes/no	yes/no		
TC_MS_TSCC_IPCA_BV_000	yes/no	yes/no		
TC_MS_TSCC_IPCA_BV_001	yes/no	yes/no		

ATS Reference	Selected?	Run?	Verdict	Observations (Reference to any observations made in clause D.7)
MS CCL	Trunking Sy	stem Pay	load Channel	made in cidade 2117
TC_MS_TSPC_MRC_MS_TER_BV_000	yes/no	yes/no		
TC_MS_TSPC_MRC_MS_TER_BV_001	yes/no	yes/no		
TC_MS_TSPC_MRC_MS_TER_BV_002	yes/no	yes/no		
TC_MS_TSPC_MRC_MS_TER_BV_003	yes/no	yes/no		
TC_MS_TSPC_AUTHC_MS_INI_BV_000	yes/no	yes/no		
TC_MS_TSPC_AUTHC_MS_INI_BV_001	yes/no	yes/no		
TC_MS_TSPC_DEP_MS_INI_BV_000	yes/no	yes/no		
TC_MS_TSPC_DEP_MS_INI_BV_001	yes/no	yes/no		
TC_MS_TSPC_DEP_MS_INI_BV_002	yes/no	yes/no		
TC_MS_TSPC_DEP_MS_INI_BV_003	yes/no	yes/no		
TC_MS_TSPC_CG_MS_INI_BV_000	yes/no	yes/no		
TC_MS_TSPC_CG_MS_INI_BV_001	yes/no	yes/no		
TC_MS_TSPC_IMC_MS_INI_BV_000	yes/no	yes/no		
TC_MS_TSPC_IMC_MS_INI_BV_001	yes/no	yes/no		
TC_MS_TSPC_CC_MS_INI_BV_000	yes/no	yes/no		
TC_MS_TSPC_CC_MS_INI_BV_001	yes/no	yes/no		
BS CCL	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	voo/===		
TC_BS_CCL_BA_MS_INI_BV_000 TC BS CCL VCR MS INI BV 000	yes/no	yes/no		
TC_BS_CCL_VCR_MS_INI_BV_000 TC_BS_CCL_VCR_MS_INI_BV_001	yes/no yes/no	yes/no yes/no		
TC_BS_CCL_VCR_MS_INI_BV_001 TC_BS_CCL_CHT_MS_INI_TI_000	yes/no yes/no	yes/no		
TC_BS_CCL_CHT_MS_INI_TI_000 TC_BS_CCL_CHT_MS_INI_TI_001	yes/no	yes/no		
TC_BS_CCL_CHT_MS_INI_TI_001 TC_BS_CCL_CHT_MS_INI_TI_002	yes/no	yes/no		
TC_BS_CCL_CHT_MS_INI_TI_002 TC_BS_CCL_CHT_MS_INI_TI_003	yes/no	yes/no		
TC_BS_CCL_CHT_MS_INI_TI_004	yes/no	yes/no		
TC_BS_CCL_CHT_MS_INI_TI_005	yes/no	yes/no		
TC_BS_CCL_CR_MS_INI_BV_000	yes/no	yes/no		
TC BS CCL CR MS INI BV 001	yes/no	yes/no		
TC BS CCL CR MS INI BV 002	yes/no	yes/no		
TC BS CCL BDA MS INI TI 000	yes/no	yes/no		
TC_BS_CCL_BDA_MS_INI_TI_001	yes/no	yes/no		
TC_BS_CCL_AC_MS_INI_BV_000	ves/no	ves/no		
TC_BS_CCL_BC_MS_INI_BV_000	yes/no	yes/no		
BS CCL Trunking System Control Channel				
TC_BS_TSCC_ACQUI_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSCC_REG_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSCC_REG_MS_INI_BV_001	yes/no	yes/no		
TC_BS_TSCC_REG_MS_INI_BV_002	yes/no	yes/no		
TC_BS_TSCC_REG_MS_INI_BV_003	yes/no	yes/no		
TC_BS_TSCC_PS_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSCC_PS_MS_INI_BV_001	yes/no	yes/no		
TC_BS_TSCC_AUTH_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSCC_STUN_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSCC_STUN_MS_INI_BV_001	yes/no	yes/no		
TC_BS_TSCC_STUN_MS_INI_BV_002	yes/no	yes/no		
TC_BS_TSCC_IVC_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSCC_IVC_MS_INI_BV_001	yes/no	yes/no		
TC_BS_TSCC_IVC_MS_INI_BV_002	yes/no	yes/no		
TC_BS_TSCC_IVC_MS_INI_BV_003	yes/no	yes/no		
TC_BS_TSCC_IVC_MS_INI_BV_004	yes/no	yes/no		
TC_BS_TSCC_IVC_MS_INI_BV_005	yes/no	yes/no		
TC_BS_TSCC_IVC_MS_INI_BV_006	yes/no	yes/no		
TC_BS_TSCC_IVC_MS_INI_BV_007	yes/no	yes/no		
TC_BS_TSCC_TVC_MS_INI_BV_000 TC_BS_TSCC_TVC_MS_INI_BV_001	yes/no	yes/no		
TC_BS_TSCC_TVC_MS_INI_BV_001 TC_BS_TSCC_TVC_MS_INI_BV_002	yes/no	yes/no		
TC_BS_TSCC_TVC_MS_INI_BV_002 TC_BS_TSCC_TVC_MS_INI_BV_003	yes/no yes/no	yes/no		
TC_BS_TSCC_TVC_MS_INI_BV_003 TC_BS_TSCC_TVC_MS_INI_BV_004	yes/no yes/no	yes/no ves/no		
TC_BS_TSCC_TVC_MS_INI_BV_005	yes/no	yes/no		
TC_BS_TSCC_IPDC_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSCC_IPDC_MS_INI_BV_000	yes/no	yes/no		
	1,00,110	7 00,110	ı	

ATS Reference	Selected?	Run?	Verdict	Observations
A13 Reference	Selected:	Kuiii	verdict	(Reference to any observations
				made in clause D.7)
TC_BS_TSCC_IPDC_MS_INI_BV_002	ves/no	ves/no		,
TC BS TSCC IPDC MS INI BV 003	ves/no	ves/no		
TC_BS_TSCC_IPDC_MS_INI_BV_004	ves/no	yes/no		
TC_BS_TSCC_IPDC_MS_INI_BV_005	yes/no	yes/no		
TC_BS_TSCC_IPDC_MS_INI_BV_006	yes/no	yes/no		
TC_BS_TSCC_TPDC_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSCC_TPDC_MS_INI_BV_001	yes/no	yes/no		
TC_BS_TSCC_TPDC_MS_INI_BV_002	yes/no	yes/no		
TC_BS_TSCC_TPDC_MS_INI_BV_003	yes/no	yes/no		
TC_BS_TSCC_TPDC_MS_INI_BV_004	yes/no	yes/no		
TC_BS_TSCC_ISDM_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSCC_ISDM_MS_INI_BV_001	yes/no	yes/no		
TC_BS_TSCC_ISDM_MS_INI_BV_002	yes/no	yes/no		
TC_BS_TSCC_ISDM_MS_INI_BV_003	yes/no	yes/no		
TC_BS_TSCC_ISDM_MS_INI_BV_004	yes/no	yes/no		
TC_BS_TSCC_ISDM_MS_INI_BV_005	yes/no	yes/no		
TC_BS_TSCC_TSDM_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSCC_TSDM_MS_INI_BV_001	yes/no	yes/no		
TC_BS_TSCC_TSDM_MS_INI_BV_002	yes/no	yes/no		
TC_BS_TSCC_TSDM_MS_INI_BV_003	yes/no	yes/no		
TC_BS_TSCC_SDP_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSCC_SDP_MS_INI_BV_001	yes/no	yes/no		
TC_BS_TSCC_SDP_MS_INI_BV_002	yes/no	yes/no		
TC_BS_TSCC_STAT_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSCC_STAT_MS_INI_BV_001	yes/no	yes/no		
TC_BS_TSCC_STAT_MS_INI_BV_002	yes/no	yes/no		
TC_BS_TSCC_STAT_MS_INI_BV_003	yes/no	yes/no		
TC_BS_TSCC_CD_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSCC_CD_MS_INI_BV_001 TC BS_TSCC_CD_MS_INI_BV_002	yes/no yes/no	yes/no yes/no		
TC_BS_TSCC_CD_MS_INLBV_002	ves/no	yes/no		
TC_BS_TSCC_CD_MS_INI_BV_003	ves/no	ves/no		
TC_BS_TSCC_CD_MS_INI_BV_004	ves/no	ves/no		
TC_BS_TSCC_CD_MS_INI_BV_006	ves/no	ves/no		
TC_BS_TSCC_CB_MS_MI_BV_000	ves/no	ves/no		
TP_BS_TSCC_MKI_BV_001	yes/no	yes/no		
TP_BS_TSCC_IPCA_BV_000	yes/no	ves/no		
TP_BS_TSCC_IPCA_BV_001	ves/no	ves/no		
	- Trunking Sy	<i>J</i>	nad Channel	
TC_BS_TSPC_MRC_MS_TER_BV_000	yes/no	yes/no	The state of the s	
TC BS TSPC MRC MS TER BV 001	yes/no	yes/no		
TC_BS_TSPC_MRC_MS_TER_BV_002	yes/no	yes/no		
TC_BS_TSPC_MRC_MS_TER_BV_003	yes/no	yes/no		
TC_BS_TSPC_AUTHC_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSPC_AUTHC_MS_INI_BV_001	yes/no	yes/no		
TC_BS_TSPC_DEP_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSPC_DEP_MS_INI_BV_001	yes/no	yes/no		
TC_BS_TSPC_DEP_MS_INI_BV_002	yes/no	yes/no		
TC_BS_TSPC_DEP_MS_INI_BV_003	yes/no	yes/no		
TC_BS_TSPC_CG_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSPC_CG_MS_INI_BV_001	yes/no	yes/no		
TC_BS_TSPC_IMC_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSPC_IMC_MS_INI_BV_001	yes/no	yes/no		
TC_BS_TSPC_CC_MS_INI_BV_000	yes/no	yes/no		
TC_BS_TSPC_CC_MS_INI_BV_001	yes/no	yes/no		

D.7 Observations	
Additional information relevant to the technical content of the PCTR is given here.	
	•••••

Annex E (informative): Bibliography

• ETSI ES 201 873-2: "Methods for Testing and Specification (MTS); The Testing and Test Control Notation version 3; Part 2: TTCN-3 Tabular presentation Format (TFT)".

History

Document history				
V1.1.1	June 2005	Publication		
V1.2.1	June 2006	Publication		
V1.3.1	June 2007	Publication		