ETSITS 136 423 V15.11.0 (2020-11)



LTE;

Evolved Universal Terrestrial Radio Access Network (E-UTRAN); X2 Application Protocol (X2AP) (3GPP TS 36.423 version 15.11.0 Release 15)



Reference RTS/TSGR-0336423vfb0 Keywords LTE

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

The present document can be downloaded from: <u>http://www.etsi.org/standards-search</u>

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the prevailing version of an ETSI deliverable is the one made publicly available in PDF format at www.etsi.org/deliver.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

https://portal.etsi.org/TB/ETSIDeliverableStatus.aspx

If you find errors in the present document, please send your comment to one of the following services: https://portal.etsi.org/People/CommitteeSupportStaff.aspx

Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© ETSI 2020. All rights reserved.

DECT™, **PLUGTESTS™**, **UMTS™** and the ETSI logo are trademarks of ETSI registered for the benefit of its Members. **3GPP™** and **LTE™** are trademarks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

oneM2M[™] logo is a trademark of ETSI registered for the benefit of its Members and of the oneM2M Partners.

GSM® and the GSM logo are trademarks registered and owned by the GSM Association.

Intellectual Property Rights

Essential patents

IPRs essential or potentially essential to normative deliverables may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (https://ipr.etsi.org/).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Trademarks

The present document may include trademarks and/or tradenames which are asserted and/or registered by their owners. ETSI claims no ownership of these except for any which are indicated as being the property of ETSI, and conveys no right to use or reproduce any trademark and/or tradename. Mention of those trademarks in the present document does not constitute an endorsement by ETSI of products, services or organizations associated with those trademarks.

Legal Notice

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities. These shall be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between 3GPP and ETSI identities can be found under http://webapp.etsi.org/key/queryform.asp.

Modal verbs terminology

In the present document "shall", "shall not", "should", "should not", "may", "need not", "will", "will not", "can" and "cannot" are to be interpreted as described in clause 3.2 of the <u>ETSI Drafting Rules</u> (Verbal forms for the expression of provisions).

"must" and "must not" are NOT allowed in ETSI deliverables except when used in direct citation.

Contents

Intelle	lectual Property Rights	2
Legal	l Notice	2
Moda	al verbs terminology	2
Forev	word	12
1	Scope	13
2	References	
3	Definitions, symbols and abbreviations	
3.1	Definitions	
3.2	Symbols	
3.3	Abbreviations	
4	General	
4.1	Procedure specification principles	
4.2	Forwards and backwards compatibility	
4.3	Specification notations	
5 5.1	X2AP services	
5.1	Parallel transactions.	
6	Services expected from signalling transport	
7	Functions of X2AP	
8	X2AP procedures	
8.1	Elementary procedures	
8.2	Basic mobility procedures	
8.2.1	Handover Preparation	
8.2.1.1		
8.2.1.2 8.2.1.3		
8.2.1.2 8.2.1.4		
8.2.1. ²		
8.2.2.1		
8.2.2.2		
8.2.2.3	1	
8.2.3	UE Context Release	
8.2.3.1		
8.2.3.2		
8.2.3.3	3 Unsuccessful Operation	31
8.2.3.4	4 Abnormal Conditions	31
8.2.4		
8.2.4.1		
8.2.4.2	1	
8.2.4.3	1	
8.2.4.4		
8.3	Global Procedures	
8.3.1	Load Indication	
8.3.1.1		
8.3.1.2	1	
8.3.1.3		
8.3.1. ⁴ 8.3.2		
8.3.2 8.3.2.1		
8.3.2.1 8.3.2.2		
8.3.2.2 8.3.2.3	1	

8.3.2.4	Abnormal Conditions	35
8.3.3	X2 Setup	
8.3.3.1	General	
8.3.3.2	Successful Operation	
8.3.3.3	Unsuccessful Operation	
8.3.3.4	Abnormal Conditions	
8.3.4	Reset	
8.3.4.1	General	
8.3.4.2	Successful Operation	
8.3.4.3	Unsuccessful Operation	
8.3.4.4	Abnormal Conditions	
8.3.5	eNB Configuration Update	
8.3.5.1	General	
8.3.5.2	Successful Operation	
8.3.5.3	Unsuccessful Operation	
8.3.5.4	Abnormal Conditions	
8.3.6	Resource Status Reporting Initiation	
8.3.6.1	General	
8.3.6.2	Successful Operation	
8.3.6.3	Unsuccessful Operation	
8.3.6.4	Abnormal Conditions	
8.3.7	Resource Status Reporting	
8.3.7.1	General	
8.3.7.2	Successful Operation	
8.3.7.3	Unsuccessful Operation	
8.3.7.4	Abnormal Conditions	
8.3.8	Mobility Settings Change	
8.3.8.1	General	
8.3.8.2	Successful Operation	
8.3.8.3	Unsuccessful Operation	
8.3.8.4	Abnormal Conditions	
8.3.9	Radio Link Failure Indication	
8.3.9.1	General	
8.3.9.2	Successful Operation	
8.3.9.3	Unsuccessful Operation	
8.3.9.4	Abnormal Conditions	
8.3.10	Handover Report	
8.3.10.1	General	
8.3.10.2	Successful Operation	
8.3.10.3	Unsuccessful Operation	
8.3.10.4	Abnormal Conditions	
8.3.11	Cell Activation	
8.3.11.1	General	47
8.3.11.2	Successful Operation	47
8.3.11.3	Unsuccessful Operation	
8.3.11.4	Abnormal Conditions	
8.3.12	X2 Removal	48
8.3.12.1	General	48
8.3.12.2	Successful Operation	48
8.3.12.3	Unsuccessful Operation	
8.3.12.4	Abnormal Conditions	
8.3.13	Retrieve UE Context	
8.3.13.1	General	
8.3.13.2	Successful Operation	
8.3.13.3	Unsuccessful Operation	
8.3.13.4	Abnormal Conditions	
8.3.14	EN-DC X2 Removal	
8.3.14.1	General	51
8.3.14.2	Successful Operation	51
8.3.14.3	Unsuccessful Operation	52
8.3.14.4	Abnormal Conditions	
8.3.15	Data Forwarding Address Indication	52

8.3.15.1	General	
8.3.15.2	Successful Operation	
8.3.15.3	Unsuccessful Operation	
8.3.15.4	Abnormal Conditions	
8.4	X2 Release	
8.4.1	General	
8.4.2	Successful Operation	
8.4.3 8.4.4	Unsuccessful Operation	
	Abnormal Condition	
8.5 8.5.1	X2AP Message Transfer	
8.5.2	Successful Operation	
8.5.3	Unsuccessful Operation	
8.5.4	Abnormal Condition	
8.6	Procedures for Dual Connectivity	
8.6.1	SeNB Addition Preparation	
8.6.1.1	General	
8.6.1.2	Successful Operation	
8.6.1.3	Unsuccessful Operation	
8.6.1.4	Abnormal Conditions	
8.6.2	SeNB Reconfiguration Completion	
8.6.2.1	General	
8.6.2.2	Successful Operation	
8.6.2.3	Abnormal Conditions	58
8.6.3	MeNB initiated SeNB Modification Preparation	
8.6.3.1	General	
8.6.3.2	Successful Operation	
8.6.3.3	Unsuccessful Operation	
8.6.3.4	Abnormal Conditions	
8.6.4	SeNB initiated SeNB Modification	
8.6.4.1	General	
8.6.4.2	Successful Operation	
8.6.4.3	Unsuccessful Operation	
8.6.4.4	Abnormal Conditions	
8.6.5	MeNB initiated SeNB Release	
8.6.5.1	General Suppossful Operation	
8.6.5.2	Successful Operation	
8.6.5.3 8.6.5.4	Abnormal Conditions	
8.6.5.4 8.6.6	SeNB initiated SeNB Release	
8.6.6.1	General	
8.6.6.2	Successful Operation	
8.6.6.3	Unsuccessful Operation	
8.6.6.4	Abnormal Conditions	
8.6.7	SeNB Counter Check	
8.6.7.1	General	
8.6.7.2	Successful Operation	
8.6.7.3	Unsuccessful Operation	
8.6.7.4	Abnormal Conditions	
8.7	Procedures for E-UTRAN-NR Dual Connectivity	
8.7.1	EN-DC X2 Setup	
8.7.1.1	General	65
8.7.1.2	Successful Operation	
8.7.1.3	Unsuccessful Operation	
8.7.1.4	Abnormal Conditions	
8.7.2	EN-DC Configuration Update	
8.7.2.1	General	
8.7.2.2	Successful Operation	
8.7.2.3	Unsuccessful Operation	
8.7.2.4	Abnormal Conditions	
8.7.3 8.7.3.1	EN-DC Cell Activation	70
x / 4 l	General	.71

8.7.3.2	Successful Operation	71
8.7.3.3	Unsuccessful Operation	
8.7.3.4	Abnormal Conditions	
8.7.4	SgNB Addition Preparation	
8.7.4.1	General	
8.7.4.2	Successful Operation	
8.7.4.3	Unsuccessful Operation	
8.7.4.4	Abnormal Conditions	
8.7.5	SgNB Reconfiguration Completion	
8.7.5.1	General	
8.7.5.2	Successful Operation	
8.7.5.3	Abnormal Conditions	
8.7.6	MeNB initiated SgNB Modification Preparation	
8.7.6.1	General	
8.7.6.2	Successful Operation	
8.7.6.3	Unsuccessful Operation	
8.7.6.4	Abnormal Conditions	
8.7.7	SgNB initiated SgNB Modification	
8.7.7.1	General	
8.7.7.2	Successful Operation	
8.7.7.3	Unsuccessful Operation	
8.7.7.4	Abnormal Conditions	
8.7.8	SgNB Change	
8.7.8.1	General	
8.7.8.2	Successful Operation	
8.7.8.3	Unsuccessful Operation	
8.7.8.4	Abnormal Conditions	
8.7.9	MeNB initiated SgNB Release	
8.7.9.1	General	
8.7.9.2	Successful Operation	
8.7.9.3	Unsuccessful Operation	
8.7.9.4	Abnormal Conditions	
8.7.10	SgNB initiated SgNB Release	
8.7.10.1	General	
8.7.10.2	Successful Operation	
8.7.10.3	Unsuccessful Operation	
8.7.10.4	Abnormal Conditions	
8.7.11	SgNB Counter Check	
8.7.11.1	General	
8.7.11.2	Successful Operation	
8.7.11.3	Unsuccessful Operation	
8.7.11.4	Abnormal Conditions	
8.7.12	RRC Transfer	
8.7.12.1	General	
8.7.12.1	Successful Operation	
8.7.12.2	Abnormal Conditions	
8.7.12.3	Secondary RAT Data Usage Report	
8.7.13.1	General	
8.7.13.1	Successful Operation	
8.7.13.2	Unsuccessful Operation	
8.7.13.4	Abnormal Conditions	
8.7.14	Partial reset of EN-DC	
8.7.14.1	General	
8.7.14.1	Successful Operation	
8.7.14.2	Unsuccessful Operation	
8.7.14.4	Abnormal Conditions	
8.7.15	E-UTRA – NR Cell Resource Coordination	
8.7.15.1	General	
8.7.15.1	Successful Operation	
8.7.16	SgNB Activity Notification	
8.7.16.1	General	
8.7.10.1 8.7.16.2	Successful Operation	03

8.7.16.		
8.7.17	gNB Status Indication	
8.7.17.	1 General	94
8.7.17.	2 Successful Operation	94
8.7.17.	3 Abnormal Conditions	94
8.7.18	EN-DC Configuration Transfer	94
8.7.18.	1 General	94
8.7.18.2	2 Successful Operation	94
8.7.18.3	3 Abnormal Conditions	95
8.7.19	Trace Start	96
8.7.19.	1 General	96
8.7.19.	2 Successful Operation	96
8.7.19.3	3 Abnormal Conditions	96
8.7.20	Deactivate Trace	96
8.7.20.	1 General	96
8.7.20.2	2 Successful Operation	96
8.7.20.3	1	
		0.7
	Elements for X2AP Communication	
9.0	General	
9.1	Message Functional Definition and Content	
9.1.1	Messages for Basic Mobility Procedures	
9.1.1.1	111 1 2 0 1 21 1 1 2 Q 0 2 0 1	
9.1.1.2		
9.1.1.3		
9.1.1.4	~-·~	
9.1.1.5		
9.1.1.6		
9.1.2	Messages for global procedures	
9.1.2.1		
9.1.2.2		
9.1.2.3		
9.1.2.4		
9.1.2.5		
9.1.2.6		
9.1.2.7		
9.1.2.8		
9.1.2.9		
9.1.2.10		
9.1.2.1		
9.1.2.12		
9.1.2.13		
9.1.2.14		
9.1.2.1		
9.1.2.10		
9.1.2.1		
9.1.2.18		
9.1.2.19		
9.1.2.20	· · · · · · · · · · · · · · · · · · ·	
9.1.2.2		
9.1.2.22		
9.1.2.23		
9.1.2.24		
9.1.2.2		
9.1.2.20		
9.1.2.2		
9.1.2.28		
9.1.2.29		
9.1.2.30		
9.1.2.3		
9.1.2.32		
9.1.2.33	3 EN-DC X2 SETUP FAILURE	127

9.1.2.34	EN-DC CONFIGURATION UPDATE	
9.1.2.35	EN-DC CONFIGURATION UPDATE ACKNOWLEDGE	129
9.1.2.36	EN-DC CONFIGURATION UPDATE FAILURE	129
9.1.2.37	EN-DC CELL ACTIVATION REQUEST	130
9.1.2.38	EN-DC CELL ACTIVATION RESPONSE	130
9.1.2.39	EN-DC CELL ACTIVATION FAILURE	
9.1.2.40	EN-DC X2 REMOVAL REQUEST	
9.1.2.41	EN-DC X2 REMOVAL RESPONSE	
9.1.2.42	EN-DC X2 REMOVAL FAILURE	
9.1.2.42	DATA FORWARDING ADDRESS INDICATION	
9.1.2.43	EN-DC CONFIGURATION TRANSFER	
9.1.3	Messages for Dual Connectivity Procedures	
9.1.3.1	SENB ADDITION REQUEST	
9.1.3.2	SENB ADDITION REQUEST ACKNOWLEDGE	
9.1.3.3	SENB ADDITION REQUEST REJECT	
9.1.3.4	SENB RECONFIGURATION COMPLETE	
9.1.3.5	SENB MODIFICATION REQUEST	138
9.1.3.6	SENB MODIFICATION REQUEST ACKNOWLEDGE	
9.1.3.7	SENB MODIFICATION REQUEST REJECT	
9.1.3.8	SENB MODIFICATION REQUIRED	143
9.1.3.9	SENB MODIFICATION CONFIRM	143
9.1.3.10	SENB MODIFICATION REFUSE	144
9.1.3.11	SENB RELEASE REQUEST	
9.1.3.12	SENB RELEASE REQUIRED	
9.1.3.13	SENB RELEASE CONFIRM	
9.1.3.14	SENB COUNTER CHECK REQUEST	
9.1.4	Messages for E-UTRAN-NR Dual Connectivity Procedures	
9.1. 4 9.1.4.1	SGNB ADDITION REQUEST	
	SGNB ADDITION REQUESTSGNB ADDITION REQUEST ACKNOWLEDGE	
9.1.4.2		
9.1.4.3	SGNB ADDITION REQUEST REJECT	
9.1.4.4	SGNB RECONFIGURATION COMPLETE	
9.1.4.5	SGNB MODIFICATION REQUEST	
9.1.4.6	SGNB MODIFICATION REQUEST ACKNOWLEDGE	
9.1.4.7	SGNB MODIFICATION REQUEST REJECT	
9.1.4.8	SGNB MODIFICATION REQUIRED	
9.1.4.9	SGNB MODIFICATION CONFIRM	
9.1.4.10	SGNB MODIFICATION REFUSE	
9.1.4.11	SGNB RELEASE REQUEST	
9.1.4.12	SGNB RELEASE REQUEST ACKNOWLEDGE	170
9.1.4.13	SGNB RELEASE REQUEST REJECT	170
9.1.4.14	SGNB RELEASE REQUIRED	171
9.1.4.15	SGNB RELEASE CONFIRM	171
9.1.4.16	SGNB COUNTER CHECK REQUEST	173
9.1.4.17	SGNB CHANGE REQUIRED	173
9.1.4.18	SGNB CHANGE CONFIRM	
9.1.4.19	SGNB CHANGE REFUSE	
9.1.4.20	SECONDARY RAT DATA USAGE REPORT	
9.1.4.21	RRC TRANSFER	
9.1.4.21	PARTIAL RESET REQUIRED	
9.1.4.22	PARTIAL RESET REQUIREDPARTIAL RESET CONFIRM	
9.1.4.24	E-UTRA – NR CELL RESOURCE COORDINATION REQUEST	
9.1.4.25	E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE	
9.1.4.26	SGNB ACTIVITY NOTIFICATION	
9.1.4.27	GNB STATUS INDICATION	
9.1.4.28	TRACE START	
9.1.4.29	DEACTIVATE TRACE	
9.2	Information Element definitions	
9.2.0	General	
9.2.1	GTP Tunnel Endpoint	182
9.2.2	Trace Activation	182
9.2.3	Handover Restriction List	183
024	PI MN Identity	195

9.2.5	DL Forwarding	185
9.2.6	Cause	
9.2.7	Criticality Diagnostics	191
9.2.8	Served Cell Information	192
9.2.9	E-RAB Level QoS Parameters	197
9.2.10	GBR QoS Information	197
9.2.11	Bit Rate	199
9.2.12	UE Aggregate Maximum Bit Rate	199
9.2.13	Message Type	
9.2.14	ECGI	
9.2.15	COUNT Value	
9.2.16	GUMMEI	
9.2.17	UL Interference Overload Indication	
9.2.18	UL High Interference Indication	
9.2.19	Relative Narrowband Tx Power (RNTP)	
9.2.20	GU Group Id	
9.2.21	Location Reporting Information	
9.2.22	Global eNB ID	
9.2.23	E-RAB ID	
9.2.24	eNB UE X2AP ID	
9.2.25	Subscriber Profile ID for RAT/Frequency priority	
9.2.26 9.2.27	EARFCN Transmission Bandwidth	
9.2.27	E-RAB List	
9.2.28	UE Security Capabilities	
9.2.29	AS Security Capabilities	
9.2.31	Allocation and Retention Priority	
9.2.32	Time To Wait	
9.2.33	SRVCC Operation Possible	
9.2.34	Hardware Load Indicator	
9.2.35	S1 TNL Load Indicator	
9.2.36	Load Indicator	
9.2.37	Radio Resource Status	
9.2.38	UE History Information	
9.2.39	Last Visited Cell Information	210
9.2.40	Last Visited E-UTRAN Cell Information	210
9.2.41	Last Visited GERAN Cell Information	
9.2.42	Cell Type	
9.2.43	Number of Antenna Ports	
9.2.44	Composite Available Capacity Group	
9.2.45	Composite Available Capacity	
9.2.46	Cell Capacity Class Value	
9.2.47	Capacity Value	
9.2.48	Mobility Parameters Information	
9.2.49	Mobility Parameters Modification Range	
9.2.50	PRACH Configuration	
9.2.51	Subframe Allocation	
9.2.52 9.2.53	CSG ID	
9.2.33 9.2.54	CSG IDABS Information	
9.2.55	Invoke Indication	
9.2.56	MDT Configuration	
9.2.57	Void	
9.2.58	ABS Status	
9.2.59	Management Based MDT Allowed	
9.2.60	MultibandInfoList	
9.2.61	M3 Configuration	
9.2.62	M4 Configuration	
9.2.63	M5 Configuration	
9.2.64	MDT PLMN List	
9.2.65	EARFCN Extension	222
0 2 66	COLINT Value Extended	222

9.2.67	Extended UL Interference Overload Info	
9.2.68	RNL Header	
9.2.69	Masked IMEISV	
9.2.70	Expected UE Behaviour	
9.2.71	Expected UE Activity Behaviour	
9.2.72	SeNB Security Key	
9.2.73	SCG Change Indication	
9.2.74	CoMP Information	
9.2.75	CoMP Hypothesis Set	
9.2.76	RSRP Measurement Report List	
9.2.77	Dynamic DL transmission information	
9.2.78	ProSe Authorized	
9.2.79	CSI Report	
9.2.80	Wideband CQI	
9.2.81	Subband CQI	
9.2.82	COUNT Value for PDCP SN Length 18	
9.2.83	LHN ID	
9.2.84	Correlation ID	
9.2.85	UE Context Kept Indicator	
9.2.86	eNB UE X2AP ID Extension	
9.2.87	M6 Configuration	
9.2.88	M7 Configuration	
9.2.89	Tunnel Information	
9.2.90	X2 Benefit Value	
9.2.91	Resume ID	
9.2.92	Bearer Type	
9.2.93	V2X Services Authorized	
9.2.94	Offset of NB-IoT Channel Number to EARFCN	
9.2.95	WT ID	
9.2.96	WT UE XwAP ID	
9.2.97	UE Sidelink Aggregate Maximum Bit Rate	
9.2.98	NR Neighbour Information	
9.2.99	Extended Bit Rate	
9.2.100	en-gNB UE X2AP ID	
9.2.101	SgNB Security Key	
9.2.102	Target SgNB ID Information	
9.2.103 9.2.104	SCG Configuration Query	
9.2.104	Delivery Status	
	Void NR Frequency Info	
9.2.106 9.2.107	NR UE Security Capabilities	
9.2.107		
9.2.108	EN-DC Resource Configuration	
9.2.109	PDCP Change Indication	
9.2.110	NR CGI	
9.2.111	Global en-gNB ID.	
9.2.112	Void	
9.2.114	NR Transmission Bandwidth	
9.2.115	Cell Assistance Information.	
9.2.116	MeNB Resource Coordination Information	
9.2.117	SgNB Resource Coordination Information	
9.2.117	UL Configuration	
9.2.119	RLC Mode	
9.2.120	Secondary RAT Usage Report List	
9.2.121	UE Application layer measurement configuration	
9.2.122	DRB ID	
9.2.123	SUL Information.	
9.2.124	Packet Loss Rate	
9.2.125	Protected E-UTRA Resource Indication	
9.2.126	Data Traffic Resource Indication	
9.2.127	Data Traffic Resources	
9.2.128	Reserved Subframe Pattern	

9.2.129	Aerial UE subscription information	
9.2.130	User plane traffic activity report	
9.2.131	RLC Status	
9.2.132	RRC config indication	
9.2.133	PDCP SN Length	
9.2.134	Bluetooth Measurement Configuration	
9.2.135	WLAN Measurement Configuration	
9.2.136	Subscription Based UE Differentiation Information	
9.2.137	Duplication activation	
9.2.138	LCID	
9.2.139	MeNB Coordination Assistance Information	
9.2.140	SgNB Coordination Assistance Information	
9.2.141	Desired Activity Notification Level	
9.2.142	Location Information at SgNB	
9.2.143	Interface Instance Indication	
9.2.144	NB-IoT UL DL Alignment Offset	
	- 9.2.152 Void	
9.2.153	EPC Handover Restriction List Container	
9.3	Message and Information Element Abstract Syntax (with ASN.1)	
9.3.1	General	
9.3.2	Usage of Private Message Mechanism for Non-standard Use	
9.3.3	Elementary Procedure Definitions	
9.3.4	PDU Definitions	
9.3.5	Information Element definitions	
9.3.6	Common definitions	
9.3.7	Constant definitions	
9.3.8	Container definitions	
9.4	Message transfer syntax	
9.5	Timers	419
10 H	Iandling of unknown, unforeseen and erroneous protocol data	419
Annex A	A (informative): Change history	420
History		427

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

[16]

The present document specifies the radio network layer signalling procedures of the control plane between eNBs in E-UTRAN. X2AP supports the functions of X2 interface by signalling procedures defined in this document. X2AP is developed in accordance to the general principles stated in TS 36.401 [2] and TS 36.420 [3].

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

	·
[1]	3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
[2]	3GPP TS 36.401: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Architecture Description".
[3]	3GPP TS 36.420: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); X2 General Aspects and Principles".
[4]	3GPP TS 36.413: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); S1 Application Protocol (S1AP)".
[5]	ITU-T Recommendation X.691 (2002-07): "Information technology - ASN.1 encoding rules - Specification of Packed Encoding Rules (PER) ".
[6]	3GPP TS 32.422: "Telecommunication Management; Subscriber and Equipment Trace; Trace Control and Configuration Management".
[7]	3GPP TS 32.421: "Telecommunication Management; Subscriber and Equipment Trace; Trace concepts and requirements".
[8]	3GPP TS 36.424: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); X2 data transport".
[9]	3GPP TS 36.331: "Evolved Universal Terrestrial Radio Access (E-UTRAN); Radio Resource Control (RRC) Protocol Specification".
[10]	3GPP TS 36.211: "Evolved Universal Terrestrial Radio Access (E-UTRA); Physical Channels and Modulation".
[11]	3GPP TS 36.213: "Evolved Universal Terrestrial Radio Access (E-UTRA); Physical layer procedures ".
[12]	3GPP TS 23.401: "General Packet Radio Service (GPRS) enhancements for Evolved Universal Terrestrial Radio Access Network (E-UTRAN) access".
[13]	3GPP TS 23.203: "Policy and charging control architecture".
[14]	3GPP TS 24.301: "Non-Access-Stratum (NAS) protocol for Evolved Packet System; Stage 3".
[15]	3GPP TS 36.300: "Evolved Universal Terrestrial Radio Access (E-UTRA), Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Overall description; stage 2".

3GPP TS 36.104: "Base Station (BS) radio transmission and reception ".

[17]	Void.
[18]	3GPP TS 33.401: "Security architecture".
[19]	3GPP TS 36.414: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); S1 data transport".
[20]	3GPP TS 23.216: "Single Radio Voice Call Continuity (SRVCC)".
[21]	3GPP TS 36.422: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); X2 signaling transport".
[22]	3GPP TS 36.314: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Layer 2 - Measurements".
[23]	Void.
[24]	3GPP TS 25.413: "UTRAN Iu interface RANAP signalling"
[25]	3GPP TS 37.320: "Universal Terrestrial Radio Access (UTRA) and Evolved Universal Terrestrial Radio Access (E-UTRA); Radio measurement collection for Minimization of Drive Tests (MDT); Overall description; Stage 2".
[26]	3GPP TS 29.281: "General Packet Radio Service (GPRS); Tunnelling Protocol User Plane (GTPv1-U)".
[27]	ITU-T Recommendation X.680 (2002-07): "Information technology – Abstract Syntax Notation One (ASN.1): Specification of basic notation".
[28]	ITU-T Recommendation X.681 (2002-07): "Information technology – Abstract Syntax Notation One (ASN.1): Information object specification".
[29]	3GPP TS 23.003: "Technical Specification Group Core Network and Terminals; Numbering, addressing and identification".
[30]	3GPP TR 25.921 (version.7.0.0): "Guidelines and principles for protocol description and error handling".
[31]	3GPP TS 38.331: "NR; Radio Resource Control (RRC); Protocol Specification".
[32]	3GPP TS 37.340: "Evolved Universal Terrestrial Radio Access (E-UTRA) and NR; Multiconnectivity; Stage 2".
[33]	3GPP TS 38.323: "NR; Packet Data Convergence Protocol (PDCP) specification".
[34]	3GPP TS 38.401: "NG-RAN; Architecture description".
[35]	IETF RFC 5905: "Network Time Protocol Version 4: Protocol and Algorithms Specification".
[36]	3GPP TS 26.247: "Transparent end-to-end Packet-switched Streaming Service (PSS); Progressive Download and Dynamic Adaptive Streaming over HTTP (3GP-DASH)".
[37]	3GPP TS 38.104: "NR; Base Station (BS) radio transmission and reception".
[38]	3GPP TS 23.501: "System Architecture for the 5G System"
[39]	3GPP TS 38.413: "NG Radio Access Network (NG-RAN); NG Application Protocol (NGAP)".
[40]	3GPP TS 36.322: "Evolved Universal Terrestrial Radio Access (E-UTRA); Radio Link Control (RLC) protocol specification".

3 Definitions, symbols and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in TR 21.905 [1].

ACL functionality: A functionality controlling the access to network nodes. In case of Access Control Lists (ACL) functionality is applied in a network node the network node may only accept connections from other peer network nodes once the source addresses of the sending network node is already known in the target node.

Elementary Procedure: X2AP protocol consists of Elementary Procedures (EPs). An X2AP Elementary Procedure is a unit of interaction between two eNBs. An EP consists of an initiating message and possibly a response message. Two kinds of EPs are used:

- Class 1: Elementary Procedures with response (success or failure),

- Class 2: Elementary Procedures without response.

E-RAB: Defined in TS 36.401 [2].

CSG Cell: as defined in TS 36.300 [15].

Dual Connectivity: as defined in TS 36.300 [15].

E-UTRA-NR Dual Connectivity: as defined in TS 37.340 [32].

Hybrid cell: as defined in TS 36.300 [15].

Master eNB: as defined in TS 36.300 [15].

Secondary Cell Group: as defined in TS 36.300 [15].

Secondary eNB: as defined in TS 36.300 [15].

en-gNB: as defined in TS 37.340 [32].

3.2 Symbols

For the purposes of the present document, the following symbols apply:

<symbol> <Explanation>

3.3 Abbreviations

For the purposes of the present document, the abbreviations given in TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in TR 21.905 [1].

ABS Almost Blank Subframe
ACL Access Control List
BBF Broadband Forum

BL Bandwidth reduced Low complexity

CCO Cell Change Order
CE Coverage Enhancement
CoMP Coordinated Multi Point
DC Dual Connectivity

DL Downlink

EARFCN E-UTRA Absolute Radio Frequency Channel Number

E-CID Enhanced Cell-ID (positioning method)

eNB E-UTRAN NodeB

EN-DC E-UTRA-NR Dual Connectivity

EP Elementary Procedure EPC Evolved Packet Core

E-RAB E-UTRAN Radio Access Bearer

E-UTRAN Evolved UTRAN

GNSS Global Navigation Satellite System
GUMMEI Globally Unique MME Identifier

HFN Hyper Frame Number IE Information Element L-GW Local GateWay

LWA LTE-WLAN Aggregation MCG Master Cell Group

MDT Minimization of Drive Tests

MeNB Master eNB

MME Mobility Management Entity

MTSI Multimedia Telephony Service for IMS

NAICS Network-Assisted Interference Cancellation and Suppression

NR New Radio

PDCP Packet Data Convergence Protocol
PLMN Public Land Mobile Network

ProSe Proximity Service

QMC QoE Measurement Collection
QoE Quality of Experience
SCG Secondary Cell Group
S-GW Serving Gateway

S-GW Serving Gateway SeNB Secondary eNB SgNB Secondary gNB

SIPTO Selected IP Traffic Offload

SIPTO@LN Selected IP Traffic Offload at the Local Network

SN Sequence Number
SSID Service Set Identifier
TAC Tracking Area Code
UE User Equipment

UL Uplink

V2X Vehicle-to-Everything WLAN Wireless Local Area Network

WT WLAN Termination

4 General

4.1 Procedure specification principles

The principle for specifying the procedure logic is to specify the functional behaviour of the terminating eNB exactly and completely. Any rule that specifies the behaviour of the originating eNB shall be possible to be verified with information that is visible within the system.

The following specification principles have been applied for the procedure text in clause 8:

- The procedure text discriminates between:
 - 1) Functionality which "shall" be executed

The procedure text indicates that the receiving node "shall" perform a certain function Y under a certain condition. If the receiving node supports procedure X but cannot perform functionality Y requested in the initiating message of a Class 1 EP, the receiving node shall respond with the message used to report unsuccessful outcome for this procedure, containing an appropriate cause value.

2) Functionality which "shall, if supported" be executed

The procedure text indicates that the receiving node "shall, if supported," perform a certain function Y under a certain condition. If the receiving node supports procedure X, but does not support functionality Y, the receiving node shall proceed with the execution of the EP, possibly informing the requesting node about the not supported functionality.

- Any required inclusion of an optional IE in a response message is explicitly indicated in the procedure text. If the procedure text does not explicitly indicate that an optional IE shall be included in a response message, the optional IE shall not be included. For requirements on including *Criticality Diagnostics* IE, see section 10.

4.2 Forwards and backwards compatibility

The forwards and backwards compatibility of the protocol is assured by a mechanism where all current and future messages, and IEs or groups of related IEs, include ID and criticality fields that are coded in a standard format that will not be changed in the future. These parts can always be decoded regardless of the standard version.

4.3 Specification notations

For the purposes of the present document, the following notations apply:

Procedure When referring to an elementary procedure in the specification the Procedure Name is written with

the first letters in each word in upper case characters followed by the word "procedure", e.g.

Handover Preparation procedure.

Message When referring to a message in the specification the MESSAGE NAME is written with all letters

in upper case characters followed by the word "message", e.g. HANDOVER REQUEST message.

IE When referring to an information element (IE) in the specification the *Information Element Name*

is written with the first letters in each word in upper case characters and all letters in Italic font

followed by the abbreviation "IE", e.g. E-RAB ID IE.

Value of an IE When referring to the value of an information element (IE) in the specification the "Value" is

written as it is specified in sub clause 9.2 enclosed by quotation marks, e.g. "Value".

5 X2AP services

The present clause describes the services an eNB offers to its neighbours.

5.1 X2AP procedure modules

The X2 interface X2AP procedures are divided into two modules as follows:

- 1. X2AP Basic Mobility Procedures;
- 2. X2AP Global Procedures:

The X2AP Basic Mobility Procedures module contains procedures used to handle the UE mobility within E-UTRAN.

The Global Procedures module contains procedures that are not related to a specific UE. The procedures in this module are in contrast to the above module involving two peer eNBs.

5.2 Parallel transactions

Unless explicitly indicated in the procedure specification, at any instance in time one protocol peer shall have a maximum of one ongoing X2AP procedure related to a certain UE.

6 Services expected from signalling transport

The signalling connection shall provide in sequence delivery of X2AP messages. X2AP shall be notified if the signalling connection breaks.

X2 signalling transport is described in TS 36.422 [21].

7 Functions of X2AP

The X2AP protocol provides the following functions:

- Mobility Management. This function allows the eNB to move the responsibility of a certain UE to another eNB.
 Forwarding of user plane data, Status Transfer and UE Context Release function are parts of the mobility management.
- Dual Connectivity. This function allows the eNB to request another eNB to provide radio resources for a certain UE while keeping responsibility for that UE.
- E-UTRA-NR Dual Connectivity. This function allows the eNB to request another en-gNB to provide radio resources for a certain UE while keeping responsibility for that UE.
- Load Management. This function is used by eNBs to indicate resource status, overload and traffic load to each other.
- Reporting of General Error Situations. This function allows reporting of general error situations, for which function specific error messages have not been defined.
- Resetting the X2. This function is used to reset the X2 interface.
- Setting up the X2. This function is used to exchange necessary data for the eNB or en-gNB for setup the X2 interface and implicitly perform an X2 Reset.
- eNB Configuration Update. This function allows updating of application level data needed for two eNBs to interoperate correctly over the X2 interface.
- Mobility Parameters Management. This function allows the eNB to coordinate adaptation of mobility parameter settings with a peer eNB.
- Mobility Robustness Optimisation. This function allows reporting of information related to mobility failure events.
- Energy Saving. This function allows decreasing energy consumption by enabling indication of cell activation/deactivation over the X2 interface.
- X2 Release. This function allows an eNB to be aware that the signalling connection to a peer eNB is unavailable.
- Message Transfer. This function allows indirect transport of X2AP messages to a peer eNB.
- Registration. This function allows registration of eNB in case indirect transport of X2AP messages is supported.
- Removing the X2. This function allows removing the signalling connection between two eNBs or between eNB and en-gNB in a controlled manner.
- Inter-eNB UE Context Retrieval. This function allows retrieval of a UE context in case of resumption or reestablishment of an RRC connection.
- Secondary RAT Data Usage Report. This function allows eNB to get the uplink and downlink data volumes for the Secondary RAT on a per E-RAB basis.
- E-UTRA NR Spectrum Sharing. This function allows uplink and downlink spectrum sharing between a number of E UTRA and a number of NR cells with overlapping coverage.
- EN-DC Configuration Transfer. This function supports en-gNB X2 TNL address discovery.

The mapping between the above functions and X2 EPs is shown in the table below.

Table 7-1: Mapping between X2AP functions and X2AP EPs

Function	Elementary Procedure(s)
Mobility Management	a) Handover Preparation
meanity management	b) SN Status Transfer
	c) UE Context Release
	d) Handover Cancel
Dual Connectivity	a) SeNB Addition Preparation
Juan Commodariny	b) SeNB Reconfiguration Completion
	c) MeNB initiated SeNB Modification
	Preparation
	d) SeNB initiated SeNB Modification
	e) MeNB initiated SeNB Release
	f) SeNB initiated SeNB Release
	g) SeNB Counter Check
E-UTRA-NR Dual Connectivity	a) SgNB Addition Preparation
•	b) SgNB Reconfiguration Completion
	c) MeNB initiated SgNB Modification
	Preparation
	d) SgNB initiated SgNB Modification
	e) SgNB change
	f) MeNB initiated SgNB Release
	g) SgNB initiated SgNB Release
	h) SgNB Counter Check
	i) RRC transfer
	j) EN-DC X2 Setup
	k) EN-DC Configuration Update
	I) EN-DC Cell Activation
	m) SgNB Activity Notification
	n) EN-DC X2 Removal
	o) gNB Status Indication
Load Management	a) Load Indication
	b) Resource Status Reporting Initiation
	c) Resource Status Reporting
Reporting of General Error Situations	Error Indication
Resetting the X2	Reset
Setting up the X2	X2 Setup
eNB Configuration Update	a) eNB Configuration Update
	b) Cell Activation
Mobility Parameters Management	Mobility Settings Change
Mobility Robustness Optimisation	a) Radio Link Failure Indication
	b) Handover Report
Energy Saving	a) eNB Configuration Update
	b) Cell Activation
X2 Release	X2 Release
Message Transfer Registration	X2AP Message Transfer
Removing the X2	X2 Removal
Inter-eNB UE Context Retrieval	a) Retrieve UE Context
	b) Data Forwarding Address Indication
Secondary RAT Data Usage Report	Secondary RAT Data Usage Report
E-UTRA – NR Spectrum Sharing	E-UTRA - NR Cell Resource Coordination
EN-DC Configuration Transfer	EN-DC Configuration Transfer

8 X2AP procedures

8.1 Elementary procedures

In the following tables, all EPs are divided into Class 1 and Class 2 EPs.

Table 8.1-1: Class 1 Elementary Procedures

Elementary	Initiating Message	Successful Outcome	Unsuccessful Outcome
Procedure		Response message	Response message
Handover Preparation	HANDOVER REQUEST	HANDOVER REQUEST ACKNOWLEDGE	HANDOVER PREPARATION FAILURE
Reset X2 Setup	RESET REQUEST X2 SETUP REQUEST	RESET RESPONSE X2 SETUP RESPONSE	X2 SETUP FAILURE
eNB Configuration Update	ENB CONFIGURATION UPDATE	ENB CONFIGURATION UPDATE ACKNOWLEDGE	ENB CONFIGURATION UPDATE FAILURE
Resource Status Reporting Initiation	RESOURCE STATUS REQUEST	RESOURCE STATUS RESPONSE	RESOURCE STATUS FAILURE
Mobility Settings Change	MOBILITY CHANGE REQUEST	MOBILITY CHANGE ACKNOWLEDGE	MOBILITY CHANGE FAILURE
Cell Activation	CELL ACTIVATION REQUEST	CELL ACTIVATION RESPONSE	CELL ACTIVATION FAILURE
SeNB Addition Preparation	SENB ADDITION REQUEST	SENB ADDITION REQUEST ACKNOWLEDGE	SENB ADDITION REQUEST REJECT
MeNB initiated SeNB Modification Preparation	SENB MODIFICATION REQUEST	SENB MODIFICATION REQUEST ACKNOWLEDGE	SENB MODIFICATION REQUEST REJECT
SeNB initiated SeNB Modification	SENB MODIFICATION REQUIRED	SENB MODIFICATION CONFIRM	SENB MODIFICATION REFUSE
SeNB initiated	SENB RELEASE	SENB RELEASE	
SeNB Release X2 Removal	REQUIRED X2 REMOVAL REQUEST	X2 REMOVAL RESPONSE	X2 REMOVAL FAILURE
Retrieve UE Context	RETRIEVE UE CONTEXT REQUEST	RETRIEVE UE CONTEXT RESPONSE	RETRIEVE UE CONTEXT FAILURE
SgNB Addition Preparation	SGNB ADDITION REQUEST	SGNB ADDITION REQUEST ACKNOWLEDGE	SGNB ADDITION REQUEST REJECT
MeNB initiated SgNB Modification Preparation	SGNB MODIFICATION REQUEST	SGNB MODIFICATION REQUEST ACKNOWLEDGE	SGNB MODIFICATION REQUEST REJECT
SgNB initiated SgNB Modification	SGNB MODIFICATION REQUIRED	SGNB MODIFICATION CONFIRM	SGNB MODIFICATION REFUSE
SgNB change	SGNB CHANGE REQUIRED	SGNB CHANGE CONFIRM	SGNB CHANGE REFUSE
MeNB initiated SgNB Release	SGNB RELEASE REQUEST	SGNB RELEASE REQUEST ACKNOWLEDGE	SGNB RELEASE REQUEST REJECT
SgNB initiated SgNB Release EN-DC X2 Setup	SGNB RELEASE REQUIRED EN-DC X2 SETUP	SGNB RELEASE CONFIRM EN-DC X2 SETUP	EN-DC X2 SETUP
•	REQUEST	RESPONSE	FAILURE
EN-DC Configuration Update	EN-DC CONFIGURATION UPDATE	EN-DC CONFIGURATION UPDATE ACKNOWLEDGE	EN-DC CONFIGURATION UPDATE FAILURE
EN-DC Cell Activation	EN-DC CELL ACTIVATION REQUEST	EN-DC CELL ACTIVATION RESPONSE	EN-DC CELL ACTIVATION FAILURE
E-UTRA - NR Cell Resource Coordination	E-UTRA - NR CELL RESOURCE COORDINATION REQUEST	E-UTRA - NR CELL RESOURCE COORDINATION RESPONSE	

Elementary	Initiating Message	Successful Outcome	Unsuccessful Outcome
Procedure		Response message	Response message
EN-DC X2	EN-DC X2 REMOVAL	EN-DC X2 REMOVAL	EN-DC X2 REMOVAL
Removal	REQUEST	RESPONSE	FAILURE

Table 8.1-2: Class 2 Elementary Procedures

Elementary Procedure	Initiating Message	
Load Indication	LOAD INFORMATION	
Handover Cancel	HANDOVER CANCEL	
SN Status Transfer	SN STATUS TRANSFER	
UE Context Release	UE CONTEXT RELEASE	
Resource Status Reporting	RESOURCE STATUS UPDATE	
Error Indication	ERROR INDICATION	
Radio Link Failure Indication	RLF INDICATION	
Handover Report	HANDOVER REPORT	
X2 Release	X2 RELEASE	
X2AP Message Transfer	X2AP MESSAGE TRANSFER	
SeNB Reconfiguration Completion	SENB RECONFIGURATION	
	COMPLETE	
MeNB initiated SeNB Release	SENB RELEASE REQUEST	
SeNB Counter Check	SENB COUNTER CHECK REQUEST	
SgNB Reconfiguration Completion	SGNB RECONFIGURATION	
	COMPLETE	
SgNB Counter Check	SGNB COUNTER CHECK	
	REQUEST	
RRC Transfer	RRC TRANSFER	
Secondary RAT Data Usage Report	SECONDARY RAT DATA USAGE	
	REPORT	
SgNB Activity Notification	SGNB ACTIVITY NOTIFICATION	
Data Forwarding Address Indication	DATA FORWARDING ADDRESS	
	INDICATION	
gNB Status Indication	GNB STATUS INDICATION	
EN-DC Configuration Transfer	EN-DC CONFIGURATION	
	TRANSFER	
Trace Start	TRACE START	
Deactivate Trace	DEACTIVATE TRACE	

8.2 Basic mobility procedures

8.2.1 Handover Preparation

8.2.1.1 General

This procedure is used to establish necessary resources in an eNB for an incoming handover.

The procedure uses UE-associated signalling.

8.2.1.2 Successful Operation

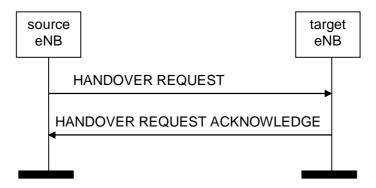


Figure 8.2.1.2-1: Handover Preparation, successful operation

The source eNB initiates the procedure by sending the HANDOVER REQUEST message to the target eNB. When the source eNB sends the HANDOVER REQUEST message, it shall start the timer $T_{RELOCprep.}$

The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

The source eNB may include in the GUMMEI IE any GUMMEI corresponding to the source MME node.

If at least one of the requested non-GBR E-RABs is admitted to the cell indicated by the *Target Cell ID* IE, the target eNB shall reserve necessary resources, and send the HANDOVER REQUEST ACKNOWLEDGE message back to the source eNB. The target eNB shall include the E-RABs for which resources have been prepared at the target cell in the *E-RABs Admitted List* IE. The target eNB shall include the E-RABs that have not been admitted in the *E-RABs Not Admitted List* IE with an appropriate cause value.

At reception of the HANDOVER REQUEST message the target eNB shall:

- prepare the configuration of the AS security relation between the UE and the target eNB by using the information in the *UE Security Capabilities* IE and the *AS Security Information* IE in the *UE Context Information* IE.

For each E-RAB for which the source eNB proposes to do forwarding of downlink data, the source eNB shall include the *DL Forwarding* IE within the *E-RABs To be Setup Item* IE of the HANDOVER REQUEST message. For each E-RAB that it has decided to admit, the target eNB may include the *DL GTP Tunnel Endpoint* IE within the *E-RABs Admitted Item* IE of the HANDOVER REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this bearer. This GTP tunnel endpoint may be different from the corresponding GTP tunnel endpoint, i.e. the information contained in the *Transport Layer address* IE and *GTP TEID* IE in the *E-RAB To Be Switched in Downlink List* IE of the PATH SWITCH REQUEST message (see TS 36.413 [4]) depending on implementation choice.

For each bearer in the *E-RABs Admitted List* IE, the target eNB may include the *UL GTP Tunnel Endpoint* IE to indicate that it requests data forwarding of uplink packets to be performed for that bearer.

Upon reception of the HANDOVER REQUEST ACKNOWLEDGE message the source eNB shall stop the timer $T_{RELOC_{prep}}$, start the timer $TX2_{RELOC_{overall}}$ and terminate the Handover Preparation procedure. The source eNB is then defined to have a Prepared Handover for that X2 UE-associated signalling.

If the *Trace Activation* IE is included in the HANDOVER REQUEST message then the target eNB shall, if supported, initiate the requested trace function as described in TS 32.422 [6]. In particular, the target eNB shall, if supported:

- if the *Trace Activation* IE does not include the *MDT Configuration* IE, initiate the requested trace session as described in TS 32.422 [6];
- if the *Trace Activation* IE includes the *MDT Activation* IE, within the *MDT Configuration* IE, set to "Immediate MDT and Trace" initiate the requested trace session and MDT session as described in TS 32.422 [6];
- if the *Trace Activation* IE includes the *MDT Activation* IE, within the *MDT Configuration* IE, set to "Immediate MDT Only" initiate the requested MDT session as described in TS 32.422 [6] and the target eNB shall ignore *Interfaces To Trace* IE, and *Trace Depth* IE;

- if the *Trace Activation* IE includes the *MDT Location Information* IE, within the *MDT Configuration* IE, store this information and take it into account in the requested MDT session;
- if the *Trace Activation* IE includes the *Signalling based MDT PLMN List* IE, within the *MDT Configuration* IE, the eNB may use it to propagate the MDT Configuration as described in TS 37.320 [31];
- if the *Trace Activation* IE includes the *UE Application layer measurement configuration* IE, initiate the requested trace session and QoE Measurement Collection function as described in TS 36.300 [15].
- if the *Trace Activation* IE includes the *Bluetooth Measurement Configuration* IE, within the *MDT Configuration* IE, take it into account for MDT Configuration as described in TS 37.320 [31].
- if the *Trace Activation* IE includes the *WLAN Measurement Configuration* IE, within the *MDT Configuration* IE, take it into account for MDT Configuration as described in TS 37.320 [31].

If the *Management Based MDT Allowed* IE only or the *Management Based MDT Allowed* IE and the *Management Based MDT PLMN List* IE is contained in the HANDOVER REQUEST message, the target eNB shall, if supported, store the received information in the UE context, and use this information to allow subsequent selection of the UE for management based MDT defined in TS 32.422 [6].

If the *Masked IMEISV* IE is contained in the HANDOVER REQUEST message the target eNB shall, if supported, use it to determine the characteristics of the UE for subsequent handling.

The source eNB shall, if supported and available in the UE context, include the *Management Based MDT Allowed* IE and the *Management Based MDT PLMN List* IE in the HANDOVER REQUEST message, except if the source eNB selects a serving PLMN in the target eNB which is not included in the Management Based MDT PLMN List. If the *Management Based MDT PLMN List* IE is not present, the source eNB shall, if supported, include the *Management Based MDT Allowed* IE, if this information is available in the UE context, in the HANDOVER REQUEST message, except if the source eNB selects a serving PLMN in the target eNB different from the serving PLMN in the source eNB.

If the Handover Restriction List IE is

- contained in the HANDOVER REQUEST message, the target eNB shall
 - store the information received in the Handover Restriction List IE in the UE context;
 - use this information to determine a target for the UE during subsequent mobility action for which the eNB provides information about the target of the mobility action towards the UE, except when one of the E-RABs has a particular ARP value (TS 23.401 [12]) in which case the information shall not apply;
 - use this information to select a proper SCG during dual connectivity operation.
- not contained in the HANDOVER REQUEST message, the target eNB shall consider that no roaming and no access restriction apply to the UE.

If the *Location Reporting Information* IE is included in the HANDOVER REQUEST message then the target eNB should initiate the requested location reporting functionality as defined in TS 36.413 [4].

If the *SRVCC Operation Possible* IE is included in the HANDOVER REQUEST message, the target eNB shall store the content of such IE in the UE context and use it as defined in TS 23.216 [20].

If the *UE Security Capabilities* IE included in the HANDOVER REQUEST message only contains the EIA0 algorithm as defined in TS 33.401 [18] and if this EIA0 algorithm is defined in the configured list of allowed integrity protection algorithms in the eNB (TS 33.401 [18]), the eNB shall take it into use and ignore the keys received in the *AS Security Information* IE.

The HANDOVER REQUEST message shall contain the Subscriber Profile ID for RAT/Frequency priority IE, if available.

If the *Subscriber Profile ID for RAT/Frequency priority* IE is contained in the HANDOVER REQUEST message, the target eNB shall store this information and the target eNB should use the information as defined in TS 36.300 [15].

Upon reception of *UE History Information* IE in the HANDOVER REQUEST message, the target eNB shall collect the information defined as mandatory in the *UE History Information* IE and shall, if supported, collect the information defined as optional in the *UE History Information* IE, for as long as the UE stays in one of its cells, and store the collected information to be used for future handover preparations.

Upon reception of the *UE History Information from the UE* IE in the HANDOVER REQUEST message, the target eNB shall, if supported, store the collected information to be used for future handover preparations.

If the *Mobility Information* IE is provided in the HANDOVER REQUEST message, the target eNB shall, if supported, store this information and use it as defined in TS 36.300 [15]. The target eNB shall, if supported, store the C-RNTI of the source cell received in the HANDOVER REQUEST message.

If the *Expected UE Behaviour* IE is provided in the HANDOVER REQUEST message, the target eNB shall, if supported, store this information and may use it to determine the RRC connection time.

If the *ProSe Authorized* IE is contained in the HANDOVER REQUEST message and it contains one or more IEs set to "authorized", the eNB shall, if supported, consider that the UE is authorized for the relevant ProSe service(s).

If the *V2X Services Authorized* IE is contained in the HANDOVER REQUEST message and it contains one or more IEs set to "authorized", the eNB shall, if supported, consider that the UE is authorized for the relevant service(s).

If the *UE Context Reference at the SeNB* IE is contained in the HANDOVER REQUEST message the target eNB may use it as specified in TS 36.300 [15]. In this case, the source eNB may expect the target eNB to include the *UE Context Kept Indicator* IE set to "True" in the HANDOVER REQUEST ACKNOWLEDGE message, which shall use this information as specified in TS 36.300 [15]. If the *UE Context Reference at the WT* IE is contained in the HANDOVER REQUEST message, the target eNB may use it as specified in TS 36.300 [15]. In this case, the source eNB may expect the target eNB to include the *WT UE Context Kept Indicator* IE set to "True" in the HANDOVER REQUEST ACKNOWLEDGE message; the source eNB shall use this information as specified in TS 36.300 [15].

If the *UE Context Reference at the SgNB* IE is contained in the HANDOVER REQUEST message the target eNB may use it as specified in TS 37.340 [32]. In this case, the source eNB may expect the target eNB to include the *UE Context Kept Indicator* IE set to "True" in the HANDOVER REQUEST ACKNOWLEDGE message, which shall use this information as specified in TS 37.340 [32].

If the *Bearer Type* IE is included in the HANDOVER REQUEST message and is set to "non IP", then the target eNB shall not perform header compression for the concerned E-RAB. If the *UE Sidelink Aggregate Maximum Bit Rate* IE is contained in the HANDOVER REQUEST message, the target eNB shall, if supported, use it for the concerned UE's sidelink communication in network scheduled mode for V2X services.

If the NR UE Security Capabilities IE is included in the HANDOVER REQUEST message, the target eNB shall, if supported, store this information in the UE context and send it to the respective peer node during subsequent handover preparations and/or EN-DC operations for the UE as defined in TS 33.401 [15].

If the *Aerial UE subscription information* IE is included in the HANDOVER REQUEST message, the target eNB shall, if supported, store this information in the UE context and use it as defined in TS 36.300 [15].

If the *Subscription Based UE Differentiation Information* IE is included in the HANDOVER REQUEST message, the eNB shall, if supported, store this information in the UE context for further use according to TS 23.401 [12].

If the *EPC Handover Restriction List Container* IE is included in the HANDOVER REQUEST message, the target eNB shall, if supported, store this information in the UE context and use it as specified in TS 36.300 [15].

Interaction with SN Status Transfer procedure:

If the *UE Context Kept Indicator* IE set to "True" and the *E-RABs transferred to MeNB* IE are included in the HANDOVER REQUEST ACKNOWLEDGE message, then the source eNB shall, if supported, include the uplink/downlink PDCP SN and HFN status received from the SgNB in the SN Status Transfer procedure towards the target eNB, as specified in TS 37.340 [32].

8.2.1.3 Unsuccessful Operation

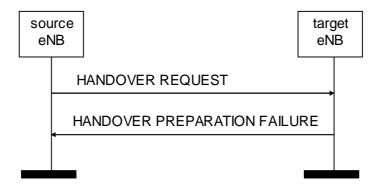


Figure 8.2.1.3-1: Handover Preparation, unsuccessful operation

If the target eNB does not admit at least one non-GBR E-RAB, or a failure occurs during the Handover Preparation, the target eNB shall send the HANDOVER PREPARATION FAILURE message to the source eNB. The message shall contain the *Cause* IE with an appropriate value.

If the target eNB receives a HANDOVER REQUEST message containing *RRC Context* IE that does not include required information as specified in TS 36.331 [9], the target eNB shall send the HANDOVER PREPARATION FAILURE message to the source eNB.

Interactions with Handover Cancel procedure:

If there is no response from the target eNB to the HANDOVER REQUEST message before timer T_{RELOCprep} expires in the source eNB, the source eNB should cancel the Handover Preparation procedure towards the target eNB by initiating the Handover Cancel procedure with the appropriate value for the *Cause* IE. The source eNB shall ignore any HANDOVER REQUEST ACKNOWLEDGE or HANDOVER PREPARATION FAILURE message received after the initiation of the Handover Cancel procedure and remove any reference and release any resources related to the concerned X2 UE-associated signalling.

8.2.1.4 Abnormal Conditions

If the target eNB receives a HANDOVER REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RABs To Be Setup List* IE) set to the same value, the target eNB shall not admit the corresponding E-RABs.

If the target eNB receives a HANDOVER REQUEST message containing a *E-RAB Level QoS Parameters* IE which contains a *QCI* IE indicating a GBR bearer (as defined in TS 23.203 [13]), and which does not contain the *GBR QoS Information* IE, the target eNB shall not admit the corresponding E-RAB.

If the supported algorithms for encryption defined in the *Encryption Algorithms* IE in the *UE Security Capabilities* IE in the *UE Context Information* IE, plus the mandated support of EEA0 in all UEs (TS 33.401 [18]), do not match any algorithms defined in the configured list of allowed encryption algorithms in the target eNB (TS 33.401 [18]), the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the supported algorithms for integrity defined in the *Integrity Protection Algorithms* IE in the *UE Security Capabilities* IE in the *UE Context Information* IE, plus the mandated support of the EIA0 algorithm in all UEs (TS 33.401 [18]), do not match any algorithms defined in the configured list of allowed integrity protection algorithms in the eNB (TS 33.401 [18]), the eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the target eNB receives a HANDOVER REQUEST message which does not contain the *Handover Restriction List* IE, and the PLMN to be used cannot be determined otherwise, the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the target eNB receives a HANDOVER REQUEST message containing the *Handover Restriction List* IE, and the serving PLMN is not supported by the target cell, the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the target eNB receives a HANDOVER REQUEST message which does not contain the *CSG Membership Status* IE, and the target cell is a hybrid cell, the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the target cell is a CSG cell and the target eNB has not received any CSG ID of the source cell, the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the target cell is a CSG cell with a different CSG from the source cell, the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

8.2.2 SN Status Transfer

8.2.2.1 General

The purpose of the SN Status Transfer procedure is to transfer the uplink PDCP SN and HFN receiver status and the downlink PDCP SN and HFN transmitter status either, from the source to the target eNB during an X2 handover, between the eNBs involved in dual connectivity and/or LWA, or between MeNB and en-gNB involved in EN-DC, for each respective E-RAB for which PDCP SN and HFN status preservation applies.

If the SN Status Transfer procedure is applied in the course of dual connectivity, LWA, RRC connection reestablishment or EN-DC, in the subsequent specification text

- the behaviour of the eNB from which the E-RAB context is transferred, i.e., the eNB involved in dual connectivity, LWA, RRC connection re-establishment from which data forwarding, is specified by the behaviour of the "source eNB",
- the behaviour of the eNB to which the E-RAB context is transferred, i.e., the eNB involved in dual connectivity, LWA, RRC connection re-establishment to which data is forwarded, is specified by the behaviour of the "target eNB".
- in case of EN-DC, the behaviour of the node from which the E-RAB context is transferred, i.e., either the engNB or the MeNB from which data is forwarded, is specified by the behaviour of the "source eNB",
- in case of EN-DC, the behaviour of the node to which the E-RAB context is transferred, i.e., either the en-gNB or the MeNB to which data is forwarded, is specified by the behaviour of the "target eNB".

The procedure uses UE-associated signalling.

8.2.2.2 Successful Operation



Figure 8.2.2.2-1: SN Status Transfer, successful operation

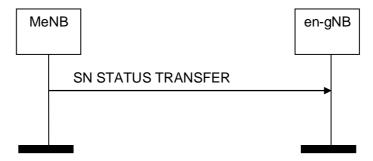


Figure 8.2.2.2-2: MeNB initiated SN Status Transfer for EN-DC, successful operation



Figure 8.2.2.2-3: en-gNB initiated SN Status Transfer for EN-DC, successful operation

The source eNB initiates the procedure by stop assigning PDCP SNs to downlink SDUs and stop delivering UL SDUs towards the EPC and sending the SN STATUS TRANSFER message to the target eNB at the time point when it considers the transmitter/receiver status to be frozen. The target eNB using Full Configuration for this handover as per TS 36.300 [15] or for the EN-DC operations as per TS 37.340 [32] shall ignore the information received in this message. In case of EN-DC, if the target eNB performs PDCP version change or PDCP SN length change or RLC mode change for an E-RAB as specified in TS 37.340 [32], it shall ignore the information received for that E-RAB in this message.

The *E-RABs Subject To Status Transfer List* IE included in the SN STATUS TRANSFER message contains the E-RAB ID(s) corresponding to the E-RAB(s) for which PDCP SN and HFN status preservation shall be applied.

If the source eNB includes in the SN STATUS TRANSFER message, the information on the missing and received uplink SDUs in the *Receive Status Of UL PDCP SDUs* IE or *Receive Status Of UL PDCP SDUs Extended* IE or *Receive Status Of UL PDCP SDUs for PDCP SN Length 18* IE for each E-RAB for which the source eNB has accepted the request from the target eNB for uplink forwarding, then the target eNB may use it in a Status Report message sent to the UE over the radio.

For each E-RAB for which the *DL COUNT Value* IE is received in the SN STATUS TRANSFER message, the target eNB shall use it to mark with the value contained in the *PDCP-SN* IE of this IE the first downlink packet for which there is no PDCP SN yet assigned. If the *DL COUNT Value Extended* IE or *DL COUNT Value for PDCP SN Length 18* IE is included in the *E-RABs Subject To Status Transfer Item* IE, the target eNB shall, if supported, use the value contained in the *PDCP-SN Extended* IE of the *DL COUNT Value Extended* IE or *PDCP-SN Length 18* IE instead of the value contained in the *PDCP-SN* IE of the *DL COUNT Value* IE.

For each E-RAB for which the *UL COUNT Value* IE is received in the SN STATUS TRANSFER message, the target eNB shall not deliver any uplink packet which has a PDCP SN lower than the value contained in the *PDCP-SN* IE of this IE. If the *UL COUNT Value Extended* IE or *UL COUNT Value for PDCP SN Length 18* IE is included in the *E-RABs Subject To Status Transfer Item* IE, the target eNB shall, if supported, use the value contained in the *PDCP-SN Extended* IE of the *UL COUNT Value Extended* IE or *PDCP-SN Length 18* IE of the *UL COUNT Value for PDCP SN Length 18* IE instead of the value contained in the *PDCP-SN* IE of the *UL COUNT Value* IE.

EN-DC

If the en-gNB sends the message to the MeNB, then the *SgNB UE X2AP ID* IE shall be included in the SN STATUS TRANSFER message, while the *Old eNB UE X2AP ID* IE is ignored. The *SgNB UE X2AP ID* IE is used as the old UE ID.

If the MeNB sends the message to the en-gNB, then the *SgNB UE X2AP ID* IE shall be included in the SN STATUS TRANSFER message, while the *New eNB UE X2AP ID* IE is ignored. The *SgNB UE X2AP ID* IE is used as the new UE ID.

8.2.2.3 Abnormal Conditions

If the target eNB receives this message for a UE for which no prepared handover exists at the target eNB, the target eNB shall ignore the message.

8.2.3 UE Context Release

8.2.3.1 General

For handover, the UE Context Release procedure is initiated by the target eNB to indicate to the source eNB that radio and control plane resources for the associated UE context are allowed to be released.

For dual connectivity, UE Context Release procedure is initiated by the MeNB to finally release the UE context at the SeNB. For dual connectivity specific mobility scenarios specified in TS 36.300 [15] only resources related to the UE-associated signalling connection between the MeNB and the SeNB are released. For EN-DC, the UE Context Release procedure is initiated by the MeNB to finally release the UE context at the en-gNB. For EN-DC specific mobility scenarios specified in TS 37.340 [32] where SCG radio resources in the en-gNB are kept, only resources related to the UE-associated signalling connection between the MeNB and the en-gNB are released.

The procedure uses UE-associated signalling.

8.2.3.2 Successful Operation



Figure 8.2.3.2-1: UE Context Release, successful operation for handover



Figure 8.2.3.2-2: UE Context Release, successful operation for dual connectivity



Figure 8.2.3.2-3: UE Context Release, successful operation for EN-DC

Handover

The UE Context Release procedure is initiated by the target eNB. By sending the UE CONTEXT RELEASE message the target eNB informs the source eNB of Handover success and triggers the release of resources.

Upon reception of the UE CONTEXT RELEASE message, the source eNB may release radio and control plane related resources associated to the UE context. For E-RABs for which data forwarding has been performed, the source eNB should continue forwarding of U-plane data as long as packets are received at the source eNB from the EPC or the source eNB buffer has not been emptied (an implementation dependent mechanism decides that data forwarding can be stopped). When the eNB supporting L-GW function for SIPTO@LN operation releases radio and control plane related resources associated to the UE context, it shall also request using intra-node signalling the collocated L-GW to release the SIPTO@LN PDN connection as defined in TS 23.401 [12].

Dual Connectivity

The UE Context Release procedure is initiated by the MeNB. By sending the UE CONTEXT RELEASE message the MeNB informs the SeNB that the UE Context can be removed.

Upon reception of the UE CONTEXT RELEASE message, the SeNB may release radio and control plane related resources associated to the UE context. For E-RABs for which data forwarding has been performed, the SeNB should continue forwarding of U-plane data as long as packets are received at the SeNB from the EPC or the SeNB buffer has not been emptied (an implementation dependent mechanism decides that data forwarding can be stopped). The SeNB supporting L-GW function for LIPA operation shall also request using intra-node signalling the collocated L-GW to release the LIPA PDN connection as defined in TS 23.401 [12]. If the SIPTO Bearer Deactivation Indication IE is received in the UE CONTEXT RELEASE message, the SeNB supporting L-GW function for SIPTO@LN operation shall also request using intra-node signalling the collocated L-GW to release the SIPTO@LN PDN connection as defined in TS 23.401 [12].

EN-DC

The UE Context Release procedure is initiated by the MeNB. By sending the UE CONTEXT RELEASE message the MeNB informs the en-gNB that the UE Context can be removed.

Upon reception of the UE CONTEXT RELEASE message, the en-gNB may release radio and control plane related resources associated to the UE context. For E-RABs for which data forwarding has been performed, the en-gNB should continue forwarding of U-plane data as long as packets are received at the en-gNB from the EPC or the en-gNB buffer has not been emptied (an implementation dependent mechanism decides that data forwarding can be stopped).

In the course of signalling for EN-DC, the *SgNB UE X2AP ID* IE shall be included in the UE CONTEXT RELEASE message, while the *Old eNB UE X2AP ID* IE is ignored. The *SgNB UE X2AP ID* IE is used as the new UE ID.

Interaction with the MeNB initiated SeNB Release procedure:

The SeNB may receive the SENB RELEASE REQUEST message including the *UE Context Kept Indicator* IE set to "True", upon which the SeNB shall, if supported, only release the resources related to the UE-associated signalling connection between the MeNB and the SeNB, as specified in TS 36.300 [15].

Interaction with the MeNB initiated SgNB Release procedure:

The en-gNB may receive the SGNB RELEASE REQUEST message including the *UE Context Kept Indicator* IE set to "True", upon which the en-gNB shall, if supported, only release the resources related to the UE-associated signalling connection between the MeNB and the en-gNB, as specified in TS 37.340 [32].

8.2.3.3 Unsuccessful Operation

Not applicable.

8.2.3.4 Abnormal Conditions

If the UE Context Release procedure is not initiated towards the source eNB from any prepared eNB before the expiry of the timer $TX2_{RELOCoverall}$, the source eNB shall request the MME to release the UE context.

If the UE returns to source eNB before the reception of the UE CONTEXT RELEASE message or the expiry of the timer $TX2_{RELOCoverall}$, the source eNB shall stop the $TX2_{RELOCoverall}$ and continue to serve the UE.

8.2.4 Handover Cancel

8.2.4.1 General

The Handover Cancel procedure is used to enable a source eNB to cancel an ongoing handover preparation or an already prepared handover.

The procedure uses UE-associated signalling.

8.2.4.2 Successful Operation



Figure 8.2.4.2-1: Handover Cancel, successful operation

The source eNB initiates the procedure by sending the HANDOVER CANCEL message to the target eNB. The source eNB shall indicate the reason for cancelling the handover by means of an appropriate cause value.

At the reception of the HANDOVER CANCEL message, the target eNB shall remove any reference to, and release any resources previously reserved to the concerned UE context.

The New eNB UE X2AP ID IE and, if available, the New eNB UE X2AP ID Extension IE shall be included if it has been obtained from the target eNB.

8.2.4.3 Unsuccessful Operation

Not applicable.

8.2.4.4 Abnormal Conditions

Should the HANDOVER CANCEL message refer to a context that does not exist, the target eNB shall ignore the message.

8.3 Global Procedures

8.3.1 Load Indication

8.3.1.1 General

The purpose of the Load Indication procedure is to transfer load and interference co-ordination information between eNBs controlling intra-frequency neighboring cells, and additionally between eNBs controlling inter-frequency neighboring cells for TDD.

The procedure uses non UE-associated signalling.

8.3.1.2 Successful Operation

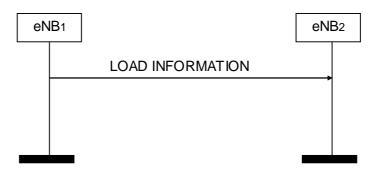


Figure 8.3.1.2-1: Load Indication, successful operation

An eNB₁ initiates the procedure by sending LOAD INFORMATION message to a peer eNB₂.

If the *UL Interference Overload Indication* IE is received in the LOAD INFORMATION message, it indicates the interference level experienced by the indicated cell on all resource blocks, per PRB. If the *Extended UL Interference Overload Info* IE is received in the LOAD INFORMATION message, the *UL Interference Overload Indication* IE indicates the interference level experienced by the indicated cell ignoring the UL subframe(s) represented as value "1" in the *Associated Subframes* IE. The receiving eNB may take such information into account when setting its scheduling policy and shall consider the received *UL Interference Overload Indication* IE value valid until reception of a new LOAD INFORMATION message carrying an update of the same IE.

If the *UL High Interference Indication* IE is received in the LOAD INFORMATION message, it indicates, per PRB, the occurrence of high interference sensitivity, as seen from the sending eNB. The receiving eNB should try to avoid scheduling cell edge UEs in its cells for the concerned PRBs. The *Target Cell ID* IE received within the *UL High Interference Information* IE group in the LOAD INFORMATION message indicates the cell for which the corresponding UL High Interference Indication is meant. The receiving eNB shall consider the value of the *UL High Interference Information* IE group valid until reception of a new LOAD INFORMATION message carrying an update.

If the *Relative Narrowband Tx Power (RNTP)* IE is received in the LOAD INFORMATION message, it indicates, per PRB or per subframe per PRB (Enhanced RNTP), whether downlink transmission power is lower than the value indicated by the *RNTP Threshold* IE. If the *Enhanced RNTP* IE is included in the *Relative Narrowband Tx Power (RNTP)* IE, it additionally indicates whether the downlink transmission power is lower than the value specified by the *RNTP High Power Threshold* IE. The receiving eNB may take such information into account when setting its scheduling policy and shall consider the received *Relative Narrowband Tx Power (RNTP)* IE value valid until reception of a new LOAD INFORMATION message carrying an update. If the *Enhanced RNTP* IE included in the *Relative Narrowband Tx Power (RNTP)* IE is present, the receiving eNB shall consider the received *Enhanced RNTP* IE value valid starting from the subframe indicated by the *Start SFN* IE and *Start Subframe Number* IE, if present.

If the *ABS Information* IE is included in the LOAD INFORMATION message, the *ABS Pattern Info* IE indicates the subframes designated as almost blank subframes by the sending eNB for the purpose of interference coordination. The receiving eNB may take such information into consideration when scheduling UEs.

The receiving eNB may use the *Measurement Subset* IE received in the LOAD INFORMATION message, for the configuration of specific measurements towards the UE.

The receiving eNB shall consider the received information as immediately applicable. The receiving eNB shall consider the value of the *ABS Information* IE valid until reception of a new LOAD INFORMATION message carrying an update.

If an ABS indicated in the ABS pattern info IE coincides with a MBSFN subframe, the receiving eNB shall consider that the subframe is designated as almost blank subframe by the sending eNB.

If the *Invoke Indication* IE is included in the LOAD INFORMATION message, it indicates which type of information the sending eNB would like the receiving eNB to send back. The receiving eNB may take such request into account.

If the *Invoke Indication* IE is set to "ABS Information", it indicates the sending eNB would like the receiving eNB to initiate the Load Indication procedure, with the LOAD INFORMATION message containing the *ABS Information* IE indicating non-zero ABS patterns in the relevant cells. If the *Invoke Indication* IE is set to "Start NAICS Information", it indicates the sending eNB would like the receiving eNB to initiate the Load Indication procedure with the LOAD INFORMATION message containing the *Dynamic DL transmission information* IE. The first time the *Dynamic DL transmission information* IE is signalled after receiving the *Invoke Indication* IE set to "Start NAICS Information", all the NAICS parameters in the *NAICS Information* IE shall be included. If the *Invoke Indication* IE is set to "Stop NAICS Information", it indicates the sending eNB does not need NAICS information and therefore the receiving eNB should stop signalling NAICS parameters for the concerned cell.

If the *NAICS Information* IE is set to "NAICS Active", the receiving eNB may use it for the configuration of DL interference mitigation assistance information towards the UE. Information included in the *NAICS Information* IE shall replace corresponding NAICS information existing at the receiver. If the *NAICS Information* IE is set to "NAICS Inactive", the receiving eNB shall consider the existing NAICS information as invalid.

If the *Intended UL-DL Configuration* IE is included in the LOAD INFORMATION message, it indicates the UL-DL configuration intended to be used by the indicated cell. The receiving eNB may take such information into account when setting its scheduling policy and shall consider the received *Intended UL-DL Configuration* IE value valid until reception of a new LOAD INFORMATION message carrying an update of the same IE.

If the Extended UL Interference Overload Info IE is received in the LOAD INFORMATION message, the Extended UL Interference Overload Indication IE indicates the interference level experienced by the indicated cell on all resource blocks, per PRB, in the UL subframe(s) which is represented as value "1" in the Associated Subframes IE. The receiving eNB may take such information into account when setting its scheduling policy and shall consider the received Extended UL Interference Overload Info IE value valid until reception of a new LOAD INFORMATION message carrying an update of the same IE.

If the *CoMP Information* IE is received in the LOAD INFORMATION message, the receiving eNB may take the IE into account for RRM. The receiving eNB shall consider the *CoMP Information* IE valid starting in the subframe indicated by the *Start SFN* IE and *Start Subframe Number* IE, if present. If the *Start SFN* IE and *Start Subframe Number* IE are not present, then the receiving eNB shall consider the *CoMP Information* IE as immediately valid. The receiving eNB shall consider the *CoMP Information* IE valid until an update of the same IE, received in a new LOAD INFORMATION message, is considered valid.

8.3.1.3 Unsuccessful Operation

Not applicable.

8.3.1.4 Abnormal Conditions

Void.

8.3.2 Error Indication

8.3.2.1 General

The Error Indication procedure is initiated by an eNB to report detected errors in one incoming message, provided they cannot be reported by an appropriate failure message.

If the error situation arises due to reception of a message utilising UE associated signalling, then the Error Indication procedure uses UE-associated signalling. Otherwise the procedure uses non UE-associated signalling.

8.3.2.2 Successful Operation



Figure 8.3.2.2-1: Error Indication, successful operation.

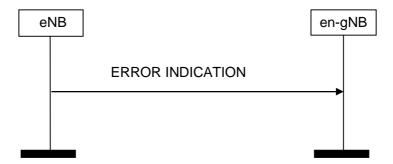


Figure 8.3.2.2-2: eNB initiated Error Indication for EN-DC, successful operation.

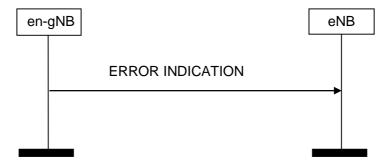


Figure 8.3.2.2-3: en-gNB initiated Error Indication for EN-DC, successful operation.

When the conditions defined in clause 10 are fulfilled, the Error Indication procedure is initiated by an ERROR INDICATION message sent from the node detecting the error situation.

The ERROR INDICATION message shall contain at least either the Cause IE or the Criticality Diagnostics IE.

In case the Error Indication procedure is triggered by UE associated signalling, in the course of handover signalling and signalling for dual connectivity, the *Old eNB UE X2AP ID* IE and the *New eNB UE X2AP ID* IE shall be included in the ERROR INDICATION message. In case the Error Indication procedure is triggered by UE associated signalling, in the course of signalling for EN-DC, the *Old en-gNB UE X2AP ID* IE and the *New eNB UE X2AP ID* IE shall be included in the ERROR INDICATION message. If any of *Old eNB UE X2AP ID* IE, *Old en-gNB UE X2AP ID* IE and *New eNB UE X2AP ID* IE is not correct, the cause shall be set to appropriate value e.g. "unknown Old eNB UE X2AP ID", "unknown Old en-gNB UE X2AP ID", "unknown New eNB UE X2AP ID" or "unknown pair of UE X2AP ID".

If the UE-associated signalling connection is identified by extended eNB UE X2AP IDs the specification text above is applicable for the UE X2AP ID Extension accordingly.

In case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], if the Error Indication procedure is triggered by non UE-associated signalling, the ERROR INDICATION message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

8.3.2.3 Unsuccessful Operation

Not applicable.

8.3.2.4 Abnormal Conditions

Not applicable.

8.3.3 X2 Setup

8.3.3.1 General

The purpose of the X2 Setup procedure is to exchange application level configuration data needed for two eNBs to interoperate correctly over the X2 interface. This procedure erases any existing application level configuration data in the two nodes and replaces it by the one received. This procedure also resets the X2 interface like a Reset procedure would do.

NOTE: Exchange of application level configuration data also applies between two eNBs in case the SN (i.e. the en-gNB) does not broadcast system information other than for radio frame timing and SFN, as specified in the TS 37.340 [32]. How to use this information when this option is used is not explicitly specified.

The procedure uses non UE-associated signalling.

8.3.3.2 Successful Operation

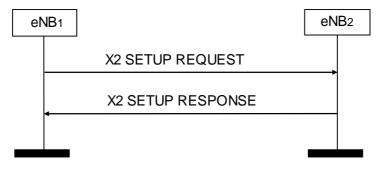


Figure 8.3.3.2-1: X2 Setup, successful operation

An eNB₁ initiates the procedure by sending the X2 SETUP REQUEST message to a candidate eNB₂. The candidate eNB₂ replies with the X2 SETUP RESPONSE message. The initiating eNB₁ shall transfer the complete list of its served cells and, if available, a list of supported GU Group Ids to the candidate eNB₂. The candidate eNB₂ shall reply with the complete list of its served cells and shall include, if available, a list of supported GU Group Ids in the reply.

If a cell is switched off for energy savings reasons, it should be activated before initiating or responding to the X2 Setup procedure and shall still be included in the list of served cells.

The initiating eNB₁ may include the *Neighbour Information* IE in the X2 SETUP REQUEST message. The candidate eNB₂ may also include the *Neighbour Information* IE in the X2 SETUP RESPONSE message. The *Neighbour Information* IE shall only include E-UTRAN cells that are direct neighbours of cells in the reporting eNB. A direct neighbour of one cell of a given eNB may be any cell belonging to an eNB that is a neighbour of that given eNB cell e.g. even if the cell has not been reported by a UE. The initiating eNB₁ may include the *TAC* IE with the *Neighbour Information* IE in the X2 SETUP REQUEST message. The candidate eNB₂ may also include the *TAC* IE with the *Neighbour Information* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it according to TS 36.300 [15].

The initiating eNB₁ may include the *NR Neighbour Information* IE in the X2 SETUP REQUEST message. The candidate eNB₂ may also include the *NR Neighbour Information* IE in the X2 SETUP RESPONSE message. The *NR Neighbour Information* IE shall only include NR cells capable of performing EN-DC with the corresponding served E-UTRA cell. The eNB receiving the *NR Neighbour Information* IE may use it according to TS 36.300 [15].

The initiating eNB₁ may include the *Number of Antenna Ports* IE in the X2 SETUP REQUEST message. The candidate eNB₂ may also include the *Number of Antenna Ports* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it according to TS 36.331 [9].

The initiating eNB₁ may include the *PRACH Configuration* IE in the X2 SETUP REQUEST message. The candidate eNB₂ may also include the *PRACH Configuration* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use this information for RACH optimisation.

The initiating eNB₁ may include the *MBSFN Subframe Info* IE in the X2 SETUP REQUEST message. The candidate eNB₂ may also include the *MBSFN Subframe Info* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it according to TS 36.331 [9].

For each CSG cell or hybrid cell served by the initiating eNB₁ the X2 SETUP REQUEST message shall contain the *CSG ID* IE. For each CSG cell or hybrid cell served by the candidate eNB₂ the X2 SETUP RESPONSE message shall contain the *CSG ID* IE. The eNB receiving the IE shall take this information into account when further deciding whether X2 handover between the source cell and the target cell may be performed.

The initiating eNB₁ may include the *MBMS Service Area Identity List* IE in the X2 SETUP REQUEST message. The candidate eNB₂ may also include the *MBMS Service Area Identity List* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it according to TS 36.300 [15].

For each cell served by the initiating eNB₁ the X2 SETUP REQUEST message may contain the *MultibandInfoList* IE and may also contain the *FreqBandIndicatorPriority* IE. For each cell served by the candidate eNB₂ the X2 SETUP RESPONSE message may contain the *MultibandInfoList* IE and may also contain the *FreqBandIndicatorPriority* IE. The eNB receiving the *MultibandInfoList* IE shall, if supported, take this information into account when further deciding whether subsequent mobility actions between the source cell and the target cell may be performed, and use this IE and the *FreqBandIndicatorPriority* IE, if received, as specified in TS 36.331 [9].

The initiating eNB₁ may include the *LHN ID* IE in the X2 SETUP REQUEST message. The candidate eNB₂ may also include *LHN ID* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it according to TS 36.300 [15].

The initiating eNB₁ may include the *BandwidthReducedSI* IE in the X2 SETUP REQUEST message. The candidate eNB₂ may also include *BandwidthReducedSI* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it to determine a suitable target in case of subsequent outgoing mobility involving BL UEs or UEs requiring CE.

8.3.3.3 Unsuccessful Operation

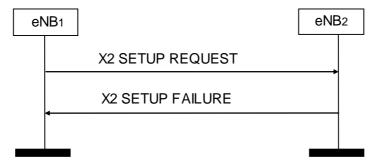


Figure 8.3.3.3-1: X2 Setup, unsuccessful operation

If the candidate eNB_2 cannot accept the setup it shall respond with an X2 SETUP FAILURE message with appropriate cause value.

If the X2 SETUP FAILURE message includes the *Time To Wait* IE the initiating eNB₁ shall wait at least for the indicated time before reinitiating the X2 Setup procedure towards the same eNB₂.

8.3.3.4 Abnormal Conditions

If the first message received for a specific TNL association is not an X2 SETUP REQUEST, X2 SETUP RESPONSE, or X2 SETUP FAILURE message then this shall be treated as a logical error.

If the initiating eNB₁ does not receive either X2 SETUP RESPONSE message or X2 SETUP FAILURE message, the eNB₁ may reinitiate the X2 Setup procedure towards the same eNB, provided that the content of the new X2 SETUP REQUEST message is identical to the content of the previously unacknowledged X2 SETUP REQUEST message.

If the initiating eNB₁ receives an X2 SETUP REQUEST message from the peer entity on the same X2 interface:

- In case the eNB₁ answers with an X2 SETUP RESPONSE message and receives a subsequent X2 SETUP FAILURE message, the eNB₁ shall consider the X2 interface as non operational and the procedure as unsuccessfully terminated according to sub clause 8.3.3.3.
- In case the eNB₁ answers with an X2 SETUP FAILURE message and receives a subsequent X2 SETUP RESPONSE message, the eNB₁ shall ignore the X2 SETUP RESPONSE message and consider the X2 interface as non operational.

8.3.4 Reset

8.3.4.1 General

The purpose of the Reset procedure is to align the resources in eNB_1 and eNB_2 , or the resources in eNB and en-gNB involved in the EN-DC in the event of an abnormal failure. The procedure resets the X2 interface. This procedure doesn't affect the application level configuration data exchanged during, e.g., the X2 Setup procedure, EN-DC X2 Setup procedure.

The procedure uses non UE-associated signalling.

8.3.4.2 Successful Operation

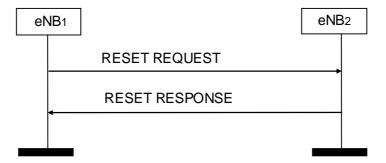


Figure 8.3.4.2-1: Reset, successful operation

The procedure is initiated with a RESET REQUEST message sent from the eNB₁ to the eNB₂. Upon receipt of this message, eNB₂ shall abort any other ongoing procedures over X2 between eNB₁ and eNB₂. The eNB₂ shall delete all the context information related to the eNB₁, except the application level configuration data exchanged during the X2 Setup or eNB Configuration Update procedures, and release the corresponding resources. After completion of release of the resources, the eNB₂ shall respond with a RESET RESPONSE message.

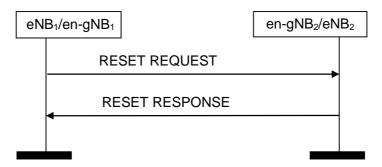


Figure 8.3.4.2-2: Reset, successful operation for EN-DC.

The procedure is initiated with a RESET REQUEST message sent from the $eNB_1/en-gNB_1$ to $en-gNB_2/eNB_2$. Upon receipt of this message, $eNB_2/en-gNB_2$ shall abort any other ongoing procedures over X2 between both nodes. $eNB_2/en-gNB_2$ shall delete all the context information related to $eNB_1/en-gNB_1$, except the application level configuration data

exchanged during the EN-DC X2 Setup or EN-DC Configuration Update procedures, and release the corresponding resources. After completion of release of the resources, eNB₂/en-gNB₂ shall respond with a RESET RESPONSE message.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the RESET REQUEST and the RESET RESPONSE messages shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

8.3.4.3 Unsuccessful Operation

Void.

8.3.4.4 Abnormal Conditions

If the RESET REQUEST message is received, any other ongoing procedure (except another Reset procedure) on the same X2 interface shall be aborted.

If Reset procedure is ongoing and the responding node receives the RESET REQUEST message from the peer entity on the same X2 interface, it shall respond with the RESET RESPONSE message as described in 8.3.4.2.

If the initiating node does not receive RESET RESPONSE message, the initiating node may reinitiate the Reset procedure towards the same eNB/en-gNB, provided that the content of the new RESET REQUEST message is identical to the content of the previously unacknowledged RESET REQUEST message.

8.3.5 eNB Configuration Update

8.3.5.1 General

The purpose of the eNB Configuration Update procedure is to update application level configuration data needed for two eNBs to interoperate correctly over the X2 interface.

NOTE: Update of application level configuration data also applies between two eNBs in case the SN (i.e. the engNB) does not broadcast system information other than for radio frame timing and SFN, as specified in the TS 37.340 [32]. How to use this information when this option is used is not explicitly specified.

The procedure uses non UE-associated signalling.

8.3.5.2 Successful Operation

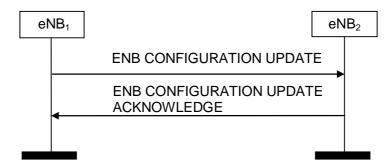


Figure 8.3.5.2-1: eNB Configuration Update, successful operation

An eNB_1 initiates the procedure by sending an ENB CONFIGURATION UPDATE message to a peer eNB_2 . Such message shall include an appropriate set of up-to-date configuration data, including, but not limited to, the complete lists of added, modified and deleted served cells, that eNB_1 has just taken into operational use.

Upon reception of an ENB CONFIGURATION UPDATE message, eNB_2 shall update the information for eNB_1 as follows:

Update of Served Cell Information:

- If Served Cells To Add IE is contained in the ENB CONFIGURATION UPDATE message, eNB₂ shall add cell information according to the information in the Served Cell Information IE.
- If *Number of Antenna Ports* IE is contained in the *Served Cell Information* IE in the ENB CONFIGURATION UPDATE message, eNB₂ may use this information according to TS 36.331 [9].
- If the *PRACH Configuration* IE is contained in the *Served Cell Information* IE in the ENB CONFIGURATION UPDATE message, the eNB receiving the IE may use this information for RACH optimisation.
- If *Served Cells To Modify* IE is contained in the ENB CONFIGURATION UPDATE message, eNB₂ shall modify information of cell indicated by *Old ECGI* IE according to the information in the *Served Cell Information* IE.
- If MBSFN Subframe Info IE is contained in the Served Cell Information IE in the ENB CONFIGURATION UPDATE message, eNB₂ may use this information according to TS 36.331 [9]. If a MBSFN subframe indicated in the MBSFN Subframe Info IE coincides with an ABS, the eNB₂ shall consider that the subframe is designated as ABS by the sending eNB.
- If *BandwidthReducedSI* IE is contained in the *Served Cell Information* IE in the ENB CONFIGURATION UPDATE message, eNB₂ may use this information to determine a suitable target in case of subsequent outgoing mobility involving BL UEs or UEs requiring CE.

When either served cell information or neighbour information of an existing served cell in eNB_1 need to be updated, the whole list of neighbouring cells, if any, shall be contained in the *Neighbour Information* IE.

If the *Deactivation Indication* IE is contained in *Served Cells To Modify* IE, it indicates that the concerned cell was switched off to lower energy consumption.

The eNB₂ shall overwrite the served cell information and the whole list of neighbour cell information for the affected served cell.

- If *Served Cells To Delete* IE is contained in the ENB CONFIGURATION UPDATE message, eNB₂ shall delete information of cell indicated by *Old ECGI* IE.
- If *MBMS Service Area Identity List* IE is contained in the *Served Cell Information* IE in the ENB CONFIGURATION UPDATE message, the eNB receiving the IE may use it according to TS 36.300 [15].

When the MBMS Service Area Identities of a cell in eNB_1 need to be updated, the whole list of MBMS Service Area Identities of the affected cell shall be contained in the Served Cell Information IE.

Update of GU Group Id List:

- If GU Group Id To Add List IE is contained in the ENB CONFIGURATION UPDATE message, eNB₂ shall add the GU Group Id to its GU Group Id List.
- If GU Group Id To Delete List IE is contained in the ENB CONFIGURATION UPDATE message, eNB₂ shall remove the GU Group Id from its GU Group Id List.

If *Neighbour Information* IE is contained in the ENB CONFIGURATION UPDATE message, eNB₂ may use this information to update its neighbour cell relations, or use it for other functions, like PCI selection. The *Neighbour Information* IE shall only include E-UTRAN cells that are direct neighbours of cells in the reporting eNB. A direct neighbour of one cell of a given eNB may be any cell belonging to an eNB that is a neighbour of that given eNB cell e.g. even if that cell has not been reported by a UE. The *Neighbour Information* IE may contain the *TAC* IE of the included cells. The receiving eNB may use *TAC* IE, as described in TS 36.300 [15].

If the *NR Neighbour Information* IE is contained in the ENB CONFIGURATION UPDATE message, eNB₂ may use this information to update its neighbour cell relations or use it for other functions. The *NR Neighbour Information* IE shall only include NR cells capable of performing EN-DC with the corresponding served E-UTRA cell. The eNB receiving the *NR Neighbour Information* IE may use it according to TS 36.300 [15].

After successful update of requested information, eNB₂ shall reply with the ENB CONFIGURATION UPDATE ACKNOWLEDGE message to inform the initiating eNB₁ that the requested update of application data was performed successfully. In case the peer eNB₂ receives an ENB CONFIGURATION UPDATE without any IE except for *Message Type* IE it shall reply with ENB CONFIGURATION UPDATE ACKNOWLEDGE message without performing any updates to the existing configuration.

The eNB₁ may initiate a further eNB Configuration Update procedure only after a previous eNB Configuration Update procedure has been completed.

For each cell served by the initiating eNB₁ the ENB CONFIGURATION UPDATE message may contain the *MultibandInfoList* IE and may also contain the *FreqBandIndicatorPriority* IE. The eNB receiving the *MultibandInfoList* IE shall, if supported, take this information into account when further deciding whether subsequent mobility actions between the source cell and the target cell may be performed, and use this IE and the *FreqBandIndicatorPriority* IE, if received, as specified in TS 36.331 [9].

If the Coverage Modification List IE is present, eNB₂ may use the information in the Cell Coverage State IE to identify the cell deployment configuration enabled by eNB₁ and for configuring the mobility towards the cell(s) indicated by the ECGI IE, as described in TS 36.300 [15]. If the Cell Deployment Status Indicator IE is present in the Coverage Modification List IE, the eNB₂ shall consider the cell deployment configuration of the cell to be modified as the next planned configuration and shall remove any planned configuration stored for this cell. If the Cell Deployment Status Indicator IE is present and the Cell Replacing Info IE contains non-empty cell list, the eNB₂ may use this list to avoid connection or re-establishment failures during the reconfiguration, e.g. consider the cells in the list as possible alternative handover targets. If the Cell Deployment Status Indicator IE is not present, the eNB₂ shall consider the cell deployment configuration of cell to be modified as activated and replace any previous configuration for the cells indicated in the Coverage Modification List IE.

Interaction with the eNB Configuration Update procedure:

If an eNB₂ which has not stored a *FreqBandIndicatorPriority* IE received from eNB₁, but has signaled a *FreqBandIndicatorPriority* IE to eNB₁ after the TNL association has become available, receives an ENB CONFIGURATION UPDATE message from eNB₁ containing the *FreqBandIndicatorPriority* IE, the eNB₂ shall initiate the eNB Configuration Update procedure towards eNB₁ including the *FreqBandIndicatorPriority* IE.

8.3.5.3 Unsuccessful Operation

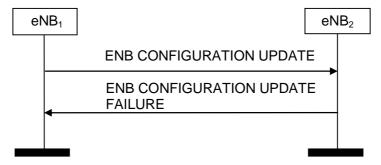


Figure 8.3.5.3-1: eNB Configuration Update, unsuccessful operation

If the eNB₂ can not accept the update it shall respond with an ENB CONFIGURATION UPDATE FAILURE message and appropriate cause value.

If the ENB CONFIGURATION UPDATE FAILURE message includes the *Time To Wait* IE the eNB₁ shall wait at least for the indicated time before reinitiating the eNB Configuration Update procedure towards the same eNB₂. Both nodes shall continue to operate the X2 with their existing configuration data.

8.3.5.4 Abnormal Conditions

If the eNB₁ after initiating eNB Configuration Update procedure receives neither ENB CONFIGURATION UPDATE ACKNOWLEDGE message nor ENB CONFIGURATION UPDATE FAILURE message, the eNB₁ may reinitiate the eNB Configuration Update procedure towards the same eNB₂, provided that the content of the new ENB CONFIGURATION UPDATE message is identical to the content of the previously unacknowledged ENB CONFIGURATION UPDATE message.

8.3.6 Resource Status Reporting Initiation

8.3.6.1 General

This procedure is used by an eNB to request the reporting of load measurements to another eNB.

The procedure uses non UE-associated signalling.

8.3.6.2 Successful Operation

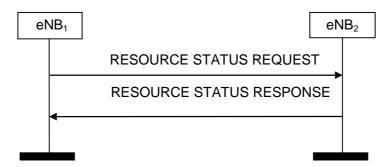


Figure 8.3.6.2-1: Resource Status Reporting Initiation, successful operation

The procedure is initiated with a RESOURCE STATUS REQUEST message sent from eNB₁ to eNB₂. Upon receipt, eNB₂:

- shall initiate the requested measurement according to the parameters given in the request in case the *Registration Request* IE set to "start"; or
- shall stop all cells measurements and terminate the reporting in case the *Registration Request* IE is set to "stop"; or
- if supported, stop cell measurements and terminate the reporting for cells indicated in the *Cell To Report* IE list, in case the *Registration Request* IE is set to "partial stop"; or
- if supported, add cells indicated in the *Cell To Report* IE list to the measurements initiated before for the given measurement IDs, in case the *Registration Request* IE is set to "add".

If the eNB₂ received a RESOURCE STATUS REQUEST message, which includes the *Registration Request* IE set to "stop", the *Cell To Report* IE list shall be ignored.

If the *Registration Request* IE is set to "start" then the *Report Characteristics* IE shall be included in RESOURCE STATUS REQUEST message. The eNB₂ shall ignore the *Report Characteristics* IE, if the *Registration Request* IE is not set to "start".

The Report Characteristics IE indicates the type of objects eNB₂ shall perform measurements on. For each cell, the eNB₂ shall include in the RESOURCE STATUS UPDATE message:

- the *Radio Resource Status* IE, if the first bit, "PRB Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1;
- the *S1 TNL Load Indicator* IE, if the second bit, "TNL Load Ind Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1;
- the *Hardware Load Indicator* IE, if the third bit, "HW Load Ind Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1;
- the *Composite Available Capacity Group* IE, if the fourth bit, "Composite Available Capacity Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1. If *Cell Capacity Class Value* IE is included within the *Composite Available Capacity Group* IE, this IE is used to assign weights to the available capacity indicated in the *Capacity Value* IE;
- the *ABS Status* IE, if the fifth bit, "ABS Status Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1 and eNB₁ had indicated the ABS pattern to eNB₂;

- the *RSRP Measurement Report List* IE, if the sixth bit, "RSRP Measurement Report Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1;
- the *CSI Report* IE, if the seventh bit, "CSI Report Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1.

If the *Reporting Periodicity* IE is included in the RESOURCE STATUS REQUEST message, eNB₂ shall use its value as the time interval between two subsequent RESOURCE STATUS UPDATE messages that include the *Radio Resource Status* IE, *S1 TNL Load Indicator* IE, *Hardware Load Indicator* IE, *Composite Available Capacity Group* IE, or *ABS Status* IE.

If the *Reporting Periodicity of RSRP Measurement Report* IE is included in the RESOURCE STATUS REQUEST message, eNB₂ shall use its value as the minimum time interval between two subsequent RESOURCE STATUS UPDATE messages that include the *RSRP Measurement Report List* IE.

If the *Reporting Periodicity of CSI Report* IE is included in the RESOURCE STATUS REQUEST message, eNB₂ shall use its value as the minimum time interval between two subsequent RESOURCE STATUS UPDATE messages that include the *CSI Report* IE.

If eNB₂ is capable to provide all requested resource status information, it shall initiate the measurement as requested by eNB₁, and respond with the RESOURCE STATUS RESPONSE message.

If eNB₂ is capable to provide some but not all of the requested resource status information and the *Partial Success Indicator* IE is present in the RESOURCE STATUS REQUEST message, it shall initiate the measurement for the admitted measurement objects and include the *Measurement Initiation Result* IE in the RESOURCE STATUS RESPONSE message.

8.3.6.3 Unsuccessful Operation

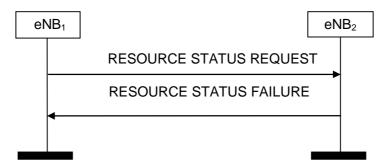


Figure 8.3.6.3-1: Resource Status Reporting Initiation, unsuccessful operation

If none of the requested measurements can be initiated, eNB₂ shall send a RESOURCE STATUS FAILURE message. The *Cause* IE shall be set to an appropriate value e.g. "Measurement Temporarily not Available" or "Measurement not Supported For The Object" for each requested measurement object. The eNB may use the *Complete Failure Cause Information* IE to enhance the failure cause information per measurement in the RESOURCE STATUS FAILURE message.

8.3.6.4 Abnormal Conditions

If the initiating eNB₁ does not receive either RESOURCE STATUS RESPONSE message or RESOURCE STATUS FAILURE message, the eNB₁ may reinitiate the Resource Status Reporting Initiation procedure towards the same eNB, provided that the content of the new RESOURCE STATUS REQUEST message is identical to the content of the previously unacknowledged RESOURCE STATUS REQUEST message.

If the initiating eNB_1 receives the RESOURCE STATUS RESPONSE message including the *Measurement Initiation Result* IE containing no admitted measurements, the eNB_1 shall consider the procedure as failed.

If the *Report Characteristics* IE bitmap is set to "0" (all bits are set to "0") in the RESOURCE STATUS REQUEST message then eNB₂ shall initiate a RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "ReportCharacteristicsEmpty".

If the *Reporting Periodicity* IE value is not specified when at least one of the bits of the *Report Characteristics* IE, for which semantics is specified, other than the sixth or seventh bit, is set to 1 then eNB₂ shall initiate a RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "NoReportPeriodicity".

If the *Reporting Periodicity of RSRP Measurement Report* IE value is not specified when the sixth bit of the *Report Characteristics* IE is set to 1, then eNB₂ shall initiate the RESOURCE STATUS FAILURE message and the cause shall be set to appropriate value e.g. "NoReportPeriodicity".

If the *Reporting Periodicity of CSI Report* IE value is not specified when the seventh bit of the *Report Characteristics* IE is set to 1, then eNB₂ shall initiate the RESOURCE STATUS FAILURE message and the cause shall be set to appropriate value e.g. "NoReportPeriodicity".

If the eNB₂ received a RESOURCE STATUS REQUEST message which includes the *Registration Request* IE set to "start" and the *eNB1Measurement ID* IE corresponding to an existing on-going load measurement reporting, then eNB₂ shall initiate a RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "ExistingMeasurementID".

If the *Registration Request* IE is set to "stop", "partial stop" or "add" and the RESOURCE STATUS REQUEST message does not contain *eNB2 Measurement ID* IE, eNB₂ shall consider the procedure as failed and respond with the RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "Unknown eNB Measurement ID".

If the *Registration Request* IE is set to "partial stop" and the *Cell To Report* IE contains cells that have not been initiated for the reporting before, eNB₂ shall consider the procedure as failed and respond with the RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "Cell not Available". If the *Registration Request* IE is set to "add" and the *Cell To Report* IE contains cells that have been initiated for the reporting before, eNB₂ shall consider the procedure as failed and respond with the RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "Cell not Available".

8.3.7 Resource Status Reporting

8.3.7.1 General

This procedure is initiated by eNB₂ to report the result of measurements admitted by eNB₂ following a successful Resource Status Reporting Initiation procedure.

The procedure uses non UE-associated signalling.

8.3.7.2 Successful Operation



Figure 8.3.7.2-1: Resource Status Reporting, successful operation

The eNB₂ shall report the results of the admitted measurements in RESOURCE STATUS UPDATE message. The admitted measurements are the measurements that were successfully initiated during the preceding Resource Status Reporting Initiation procedure, and thus not reported in the *Measurement Failed Report Characteristics* IE for the concerned cell in the RESOURCE STATUS RESPONSE message.

If the eNB₁ receives the RESOURCE STATUS UPDATE message which includes the *UE ID* IE in the *RSRP Measurement Report List* IE, the eNB₁ may use the *UE ID* IE to link the associated RSRP measurement report with other measurement results (e.g. CSI reports, RSRP measurement reports) of the same UE.

If the *CSI Report* IE including the *CSI Process Configuration Index* IE is received, eNB₁ shall interpret this IE as an index identifying one of the CSI process configurations that can be configured for all UEs within the cell where the CSI measurements were collected. For all UEs within the cell, the maximum number of CSI process configurations is given by the maximum value of the *CSI Process Configuration Index* IE.

If the eNB₁ receives the RESOURCE STATUS UPDATE message, which includes the *Cell Reporting Indicator* IE set to "stop request" in one or more items of the *Cell Measurement Result* IE, the eNB₁ should initialise the Resource Status Reporting Initiation procedure to remove all or some of the corresponding cells from the measurement.

8.3.7.3 Unsuccessful Operation

Not applicable.

8.3.7.4 Abnormal Conditions

If the eNB₁ receives a RESOURCE STATUS UPDATE message which includes the *ABS Status* IE, and all bits in the *Usable ABS Pattern Info* IE are set to '0', the eNB1 shall ignore the *DL ABS Status* IE.

8.3.8 Mobility Settings Change

8.3.8.1 General

This procedure enables an eNB to negotiate the handover trigger settings with a peer eNB controlling neighbouring cells.

The procedure uses non UE-associated signalling.

8.3.8.2 Successful Operation

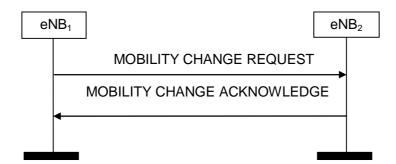


Figure 8.3.8.2-1: Mobility Settings Change, successful operation

The procedure is initiated with a MOBILITY CHANGE REQUEST message sent from eNB₁ to eNB₂.

Upon receipt, eNB_2 shall evaluate if the proposed eNB_2 handover trigger modification may be accepted. If eNB_2 is able to successfully complete the request it shall reply with MOBILITY CHANGE ACKNOWLEDGE.

8.3.8.3 Unsuccessful Operation

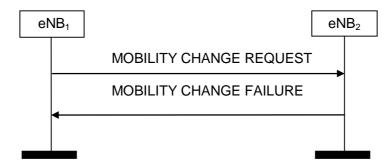


Figure 8.3.8.3-1: Mobility Settings Change, unsuccessful operation

If the requested parameter modification is refused by the eNB₂, or if the eNB₂ is not able to complete the procedure, the eNB₂ shall send a MOBILITY CHANGE FAILURE message with the *Cause* IE set to an appropriate value. The eNB₂ may include *eNB2 Mobility Parameters Modification Range* IE in MOBILITY CHANGE FAILURE message, for example in cases when the proposed change is out of permitted range.

8.3.8.4 Abnormal Conditions

Void.

8.3.9 Radio Link Failure Indication

8.3.9.1 General

The purpose of the Radio Link Failure Indication procedure is to transfer information regarding RRC re-establishment attempts, or received RLF Reports, between eNBs. The signalling takes place from the eNB at which a re-establishment attempt is made, or an RLF Report is received, to an eNB to which the UE concerned may have previously been attached prior to the connection failure. This may aid the detection of radio link failure and handover failure cases (TS 36.300 [15]).

The procedure uses non UE-associated signalling.

8.3.9.2 Successful Operation

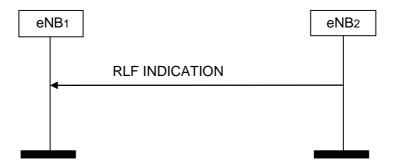


Figure 8.3.9.2-1: Radio Link Failure Indication, successful operation

 eNB_2 initiates the procedure by sending the RLF INDICATION message to eNB_1 following a re-establishment attempt or an RLF Report reception from a UE at eNB_2 , when eNB_2 considers that the UE may have previously suffered a connection failure at a cell controlled by eNB_1 .

eNB₂ may include the *ShortMAC-I* IE in the RLF INDICATION message, e.g., in order to aid the eNB₁ to resolve a potential PCI confusion situation or to aid the eNB₁ to identify the UE.

eNB₂ may include the *UE RLF Report Container* IE and optionally also the *UE RLF Report Container for extended* bands IE in the RLF INDICATION message, which may be used by the eNB₁ to determine the nature of the failure. If the *UE RLF Report Container* IE is included in the RLF INDICATION message sent after successful re-establishment,

the eNB₂ shall use the *Re-establishment Cell ECGI* IE in the RLF INDICATION message to indicate the ECGI of the cell where the re-establishment was successful.

eNB₂ may include the *RRC Conn Setup Indicator* IE in the RLF INDICATION message, which indicates that the RLF Report is retrieved after an RRC connection setup or an incoming successful handover.

If the *RRC Conn Setup Indicator* IE is present in the RLF INDICATION message, the eNB₁ shall ignore the values in the *Failure cell PCI* IE, *Re-establishment cell ECGI* IE, *C-RNTI* IE and *ShortMAC-I* IE.

eNB₂ may include the RRC Conn Reestab Indicator IE in the RLF INDICATION message, which may be used by the eNB₁ to determine where the failure occurred.

8.3.9.3 Unsuccessful Operation

Not applicable.

8.3.9.4 Abnormal Conditions

Void.

8.3.10 Handover Report

8.3.10.1 General

The purpose of the Handover Report procedure is to transfer mobility related information between eNBs.

The procedure uses non UE-associated signalling.

8.3.10.2 Successful Operation



Figure 8.3.10.2-1: Handover Report, successful operation

An eNB initiates the procedure by sending an HANDOVER REPORT message to another eNB. By sending the message eNB_1 indicates to eNB_2 that a mobility-related problem was detected.

If the $Handover\ Report\ Type\ IE$ is set to "HO too early" or "HO to wrong cell", then the eNB_1 indicates to eNB_2 that, following a successful handover from a cell of eNB_2 to a cell of eNB_1 , a radio link failure occurred and the UE attempted RRC Re-establishment either at the original cell of eNB_2 (Handover Too Early), or at another cell (Handover to Wrong Cell). The detection of Handover Too Early and Handover to Wrong Cell events is made according to TS 36.300 [15].

If the UE-related information is available in eNB₁, the eNB₁ should include in HANDOVER REPORT message:

- the Mobility Information IE, if the Mobility Information IE was sent for this handover from eNB₂;
- the Source cell C-RNTI IE.

If received, the eNB₂ uses the above information according to TS 36.300 [15].

If the UE RLF Report received from the eNB sending the RLF INDICATION message, as described in TS 36.300 [15], is available, the eNB₁ may also include it in the HANDOVER REPORT as *UE RLF Report Container* IE and optionally also *UE RLF Report Container for extended bands* IE.

If the *Handover Report Type* IE is set to "InterRAT ping-pong", then the eNB₁ indicates to eNB₂ that a completed handover from a cell of eNB₂ to a cell in other RAT might have resulted in an inter-RAT ping-pong and the UE was successfully handed over to a cell of eNB₁ (indicated with *Failure cell ECGI* IE).

The report contains the source and target cells, and cause of the handover. If the *Handover Report Type* IE is set to "HO to wrong cell", then the *Re-establishment cell ECGI* IE shall be included in the HANDOVER REPORT message. If the *Handover Report Type* IE is set to "InterRAT ping-pong", then the *Target cell in UTRAN* IE shall be included in the HANDOVER REPORT message.

8.3.10.3 Unsuccessful Operation

Not applicable.

8.3.10.4 Abnormal Conditions

Void.

8.3.11 Cell Activation

8.3.11.1 General

The purpose of the Cell Activation procedure is to request to a neighbouring eNB to switch on one or more cells, previously reported as inactive due to energy saving reasons.

The procedure uses non UE-associated signalling.

8.3.11.2 Successful Operation

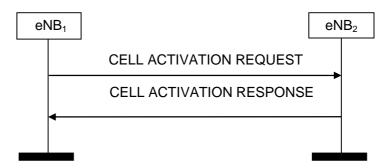


Figure 8.3.11.2-1: Cell Activation, successful operation

An eNB1 initiates the procedure by sending a CELL ACTIVATION REQUEST message to a peer eNB2.

Upon receipt of this message, eNB₂ should activate the cell(s) indicated in the CELL ACTIVATION REQUEST message and shall indicate in the CELL ACTIVATION RESPONSE message for which cells the request was fulfilled.

Interactions with eNB Configuration Update procedure:

 eNB_2 shall not send an ENB CONFIGURATION UPDATE message to eNB_1 just for the reason of the cell(s) indicated in the CELL ACTIVATION REQUEST message changing state, as the receipt of the CELL ACTIVATION RESPONSE message by eNB_1 is used to update the information about cell activation state of eNB_2 cells in eNB_1 .

8.3.11.3 Unsuccessful Operation

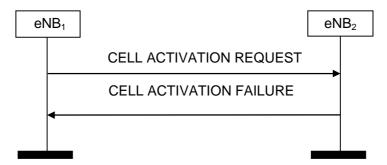


Figure 8.3.11.3-1: Cell Activation, unsuccessful operation

If the eNB₂ cannot activate any of the cells indicated in the CELL ACTIVATION REQUEST message, it shall respond with a CELL ACTIVATION FAILURE message with an appropriate cause value.

8.3.11.4 Abnormal Conditions

Not applicable.

8.3.12 X2 Removal

8.3.12.1 General

The purpose of the X2 Removal procedure is to remove the signaling connection between two eNBs in a controlled manner. If successful, this procedure erases any existing application level configuration data in the two nodes.

The procedure uses non UE-associated signaling.

8.3.12.2 Successful Operation

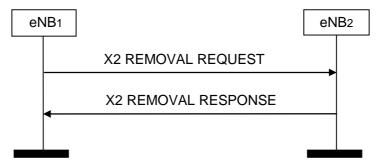


Figure 8.3.12.2-1: X2 Removal, successful operation

An eNB_1 initiates the procedure by sending the X2 REMOVAL REQUEST message to a candidate eNB_2 . Upon reception of the X2 REMOVAL REQUEST message the candidate eNB_2 shall reply with the X2 REMOVAL RESPONSE message. After receiving the X2 REMOVAL RESPONSE message, the initiating eNB_1 shall initiate removal of the TNL association towards eNB_2 and may remove all resources associated with that signaling connection. The candidate eNB_2 may then remove all resources associated with that signaling connection.

If the X2 Removal Threshold IE is included in the X2 REMOVAL REQUEST message, the candidate eNB₂ shall, if supported, accept to remove the signalling connection with eNB₁ if the X2 Benefit Value of the signalling connection determined at the candidate eNB₂ is lower than the value of the X2 Removal Threshold IE.

8.3.12.3 Unsuccessful Operation

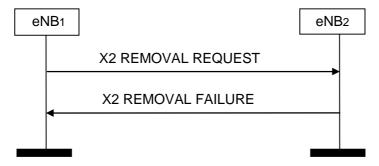


Figure 8.3.12.3-1: X2 Removal, unsuccessful operation

If the candidate eNB₂ cannot accept to remove the signaling connection with eNB₁ it shall respond with an X2 REMOVAL FAILURE message with an appropriate cause value.

8.3.12.4 Abnormal Conditions

Void.

8.3.13 Retrieve UE Context

8.3.13.1 General

The purpose of the Retrieve UE Context procedure is to retrieve the UE context from the eNB where the RRC connection has been suspended (old eNB) and transfer it to the eNB where the RRC Connection has been requested to be resumed (new eNB) or to retrieve the UE context for a UE which attempts to re-establish its RRC connection in an eNB (the new eNB) different from the eNB (the old eNB) where the RRC connection failed, e.g. due to RLF.

The procedure uses UE-associated signalling.

8.3.13.2 Successful Operation

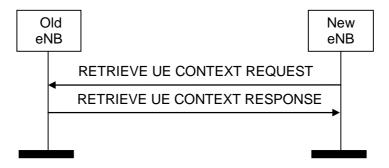


Figure 8.3.13.2-1: Retrieve UE Context, successful operation

The new eNB initiates the procedure by sending the RETRIEVE UE CONTEXT REQUEST message to the old eNB.

If the old eNB is able to identify the UE context and to successfully verify the UE by means of the Resume ID, the ShortMAC-I, optionally the C-RNTI, the failure cell PCI and the E-UTRAN Cell Identifier of the new cell contained in the RETRIEVE UE CONTEXT REQUEST message, it shall respond with the RETRIEVE UE CONTEXT RESPONSE message. The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

If the C-RNTI IE is present in the RETRIEVE UE CONTEXT REQUEST, the old eNB shall ignore the Resume ID IE.

The old eNB may include in the GUMMEI IE any GUMMEI corresponding to the source MME node.

If the PLMN of the new cell is not the Serving PLMN stored in the UE Context the old eNB shall replace the Serving PLMN with the PLMN of the new cell and move the Serving PLMN to the equivalent PLMN list, before propagating the roaming and access restriction information to the new eNB. The new eNB shall act upon reception of the

- UE Security Capabilities IE,
- AS Security Information IE,
- Subscriber Profile ID for RAT/Frequency priority IE,
- Handover Restriction List IE,
- Location Reporting Information IE,
- Management Based MDT Allowed IE
- Management Based MDT PLMN List IE
- Trace Activation IE,
- SRVCC Operation Possible IE,
- Masked IMEISV IE
- Expected UE Behaviour IE,
- ProSe Authorized IE,
- V2X Services Authorized IE,
- Aerial UE subscription information IE,
- Subscription Based UE Differentiation Information IE,
- EPC Handover Restriction List Container IE,

within the RETRIEVE UE CONTEXT RESPONSE message as specified for the target eNB upon reception of the HANDOVER REQUEST message for the Handover Preparation procedure.

If the *UE Sidelink Aggregate Maximum Bit Rate* IE is contained in the RETRIEVE UE CONTEXT RESPONSE message, the new eNB shall, if supported, use it for the concerned UE's sidelink communication in network scheduled mode for V2X services.

If the *Aerial UE subscription information* IE is included in the RETRIEVE UE CONTEXT RESPONSE message, the target eNB shall, if supported, store this information in the UE context and use it as defined in TS 36.300 [15].

For each E-RAB for which the old eNB proposes to do forwarding of downlink data, the old eNB shall include the *DL Forwarding* IE within the *E-RABs To Be Setup Item* IE of the RETRIEVE UE CONTEXT RESPONSE message.

8.3.13.3 Unsuccessful Operation

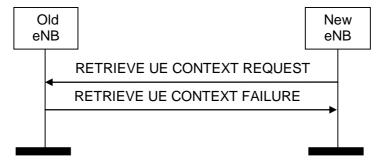


Figure 8.3.13.3-1: Retrieve UE Context, unsuccessful operation

If the old eNB is not able to identify the UE context by means of the Resume ID, or with the ShortMAC-I, C-RNTI, failed cell PCI and new E-UTRAN Cell Identifier contained in the RETRIEVE UE CONTEXT REQUEST message, it shall respond to the new eNB with the RETRIEVE UE CONTEXT FAILURE message.

8.3.13.4 Abnormal Conditions

Void.

8.3.14 EN-DC X2 Removal

8.3.14.1 General

The purpose of the EN-DC X2 Removal procedure is to remove the signaling connection between eNB and en-gNB in a controlled manner. If successful, this procedure erases any existing application level configuration data in the two nodes.

NOTE: In case the signalling transport is shared among several X2-C interface instances, and the TNL association is still used by one or more X2-C interface instances, the initiating node should not initiate the removal of the TNL association.

The procedure uses non UE-associated signaling.

8.3.14.2 Successful Operation

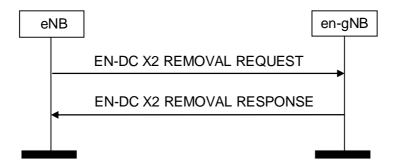


Figure 8.3.14.2-1: eNB Initiated EN-DC X2 Removal, successful operation

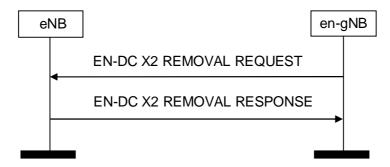


Figure 8.3.14.2-2: en-gNB Initiated EN-DC X2 Removal, successful operation

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC X2 REMOVAL REQUEST message and the EN-DC X2 REMOVAL RESPONSE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

eNB initiated EN-DC X2 Removal:

An eNB initiates the procedure by sending the EN-DC X2 REMOVAL REQUEST message to a candidate en-gNB. Upon reception of the EN-DC X2 REMOVAL REQUEST message the candidate en-gNB shall reply with the EN-DC X2 REMOVAL RESPONSE message. After receiving the EN-DC X2 REMOVAL RESPONSE message, the initiating eNB shall initiate removal of the TNL association towards en-gNB and may remove all resources associated with that signaling connection. The candidate eNB may then remove all resources associated with that signaling connection.

If the X2 Removal Threshold IE is included in the EN-DC X2 REMOVAL REQUEST message, the candidate en-gNB shall, if supported, accept to remove the signalling connection with eNB if the X2 Benefit Value of the signalling connection determined at the candidate en-gNB is lower than the value of the X2 Removal Threshold IE.

en-gNB initiated EN-DC X2 Removal:

An en-gNB initiates the procedure by sending the EN-DC X2 REMOVAL REQUEST message to a candidate eNB. Upon reception of the EN-DC X2 REMOVAL REQUEST message the candidate eNB shall reply with the EN-DC X2 REMOVAL RESPONSE message. After receiving the EN-DC X2 REMOVAL RESPONSE message, the initiating engNB shall initiate removal of the TNL association towards eNB and may remove all resources associated with that signaling connection. The candidate eNB may then remove all resources associated with that signaling connection.

If the X2 Removal Threshold IE is included in the EN-DC X2 REMOVAL REQUEST message, the candidate eNB shall, if supported, accept to remove the signalling connection with en-gNB if the X2 Benefit Value of the signalling connection determined at the candidate eNB is lower than the value of the X2 Removal Threshold IE.

8.3.14.3 Unsuccessful Operation

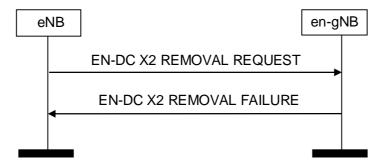


Figure 8.3.14.3-1: eNB Initiated EN-DC X2 Removal, unsuccessful operation

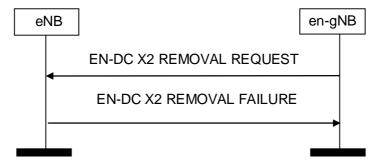


Figure 8.3.14.3-2: en-gNB Initiated EN-DC X2 Removal, unsuccessful operation

If the candidate receiving node cannot accept to remove the signaling connection with initiating node it shall respond with an EN-DC X2 REMOVAL FAILURE message with an appropriate cause value.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC X2 REMOVAL REQUEST message and the EN-DC X2 REMOVAL FAILURE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

8.3.14.4 Abnormal Conditions

Void.

8.3.15 Data Forwarding Address Indication

8.3.15.1 General

The purpose of the Data Forwarding Address Indication procedure is to allow the new eNB to provide data forwarding addresses to the old eNB in case the RRC connection has been re-established, as specified in TS 36.300 [15].

The procedure uses UE-associated signalling.

8.3.15.2 Successful Operation



Figure 8.3.15.2-1: Data Forwarding Address Indication, successful operation

The new eNB initiates the procedure by sending a DATA FORWARDING ADDRESS INDICATION message to the old eNB.

For each E-RAB included in *E-RABs Data Forwarding Address List* IE, the new eNB indicates that it requests data forwarding of downlink packets to the GTP TEID indicated in the *DL GTP Tunnel Endpoint* IE.

8.3.15.3 Unsuccessful Operation

Not applicable.

8.3.15.4 Abnormal Conditions

Void.

8.4 X2 Release

8.4.1 General

The purpose of the X2 Release procedure is to inform an eNB that the signalling (i.e. SCTP) connection to a peer eNB is unavailable.

8.4.2 Successful Operation



Figure 8.4.2-1: X2AP Release, successful operation

eNB₁ initiates the procedure by sending the X2 RELEASE message to eNB₂. Upon the reception of X2 RELEASE message, eNB₂ shall consider that the signalling connection to an eNB indicated by the *eNB ID* IE is unavailable. eNB₂ may delete all the context information related to the indicated eNB.

8.4.3 Unsuccessful Operation

Not Applicable

8.4.4 Abnormal Condition

Not Applicable.

8.5 X2AP Message Transfer

8.5.1 General

The purpose of the X2AP Message Transfer procedure is to allow indirect transport of an X2AP message (except the X2AP MESSAGE TRANSFER message) between two eNBs and to allow an eNB to perform registration.

8.5.2 Successful Operation



Figure 8.5.2-1: X2AP Message Transfer, successful operation

eNB₁ initiates the procedure by sending the X2AP MESSAGE TRANSFER message to eNB₂.

Upon the reception of X2 MESSAGE TRANSFER message the target eNB may:

- Retrieve the X2AP message included in the X2AP Message IE;
- Consider the target eNB ID contained in the *Target eNB ID* IE, included in the *RNL Header* IE, as the destination for the X2AP message signaled in the *X2AP Message* IE;
- Consider the source eNB ID contained in the *Source eNB ID* IE, included in the *RNL Header* IE, as the source of the X2AP message signaled in the *X2AP Message* IE.

In case the included *RNL Header* IE does not contain the *Target eNB ID* IE, the receiving eNB shall consider the eNB ID included in the *Source eNB ID* IE as the eNB ID corresponding to the TNL address(es) of the sender and update its internal information.

8.5.3 Unsuccessful Operation

Not Applicable.

8.5.4 Abnormal Condition

Not Applicable.

8.6 Procedures for Dual Connectivity

8.6.1 SeNB Addition Preparation

8.6.1.1 General

The purpose of the SeNB Addition Preparation procedure is to request the SeNB to allocate resources for dual connectivity operation for a specific UE.

The procedure uses UE-associated signalling.

8.6.1.2 Successful Operation

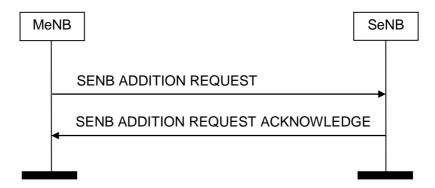


Figure 8.6.1.2-1: SeNB Addition Preparation, successful operation

The MeNB initiates the procedure by sending the SENB ADDITION REQUEST message to the SeNB. When the MeNB sends the SENB ADDITION REQUEST message, it shall start the timer T_{DCprep} .

The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

If the SENB ADDITION REQUEST message contains the Serving PLMN IE, the SeNB may use it for RRM purposes.

If the SENB ADDITION REQUEST message contains the *Expected UE Behaviour* IE, the SeNB shall, if supported, store this information and may use it to optimize resource allocation.

The SeNB shall report to the MeNB, in the SENB ADDITION REQUEST ACKNOWLEDGE message, the result for all the requested E-RABs in the following way:

- A list of E-RABs which are successfully established shall be included in the *E-RABs Admitted To Be Added List* IE.
- A list of E-RABs which failed to be established shall be included in the E-RABs Not Admitted List IE.

NOTE: The MeNB may trigger the SeNB Addition Preparation procedure in the course of the Inter-MeNB handover without SeNB change procedure as described in 36.300 [15]. The deleted E-RABs are not included in the *E-RABs To Be Added List* IE in the SENB ADDITION REQUEST message, from MeNB point of view. If the SeNB reports a certain E-RAB to be successfully established, respective SCG resources, from an SeNB point of view, may be actually successfully established or modified or kept; if a certain E-RAB is reported to be failed to be established, respective SCG resources, from an SeNB point of view, may be actually failed to be established or modified or kept.

For each E-RAB configured with the SCG bearer option

- the SeNB shall choose the ciphering algorithm based on the information in the *UE Security Capabilities* IE and locally configured priority list of AS encryption algorithms and apply the key indicated in the *SeNB Security Key* IE as specified in the TS 33.401 [18].
- the MeNB may propose to apply forwarding of downlink data by including the *DL Forwarding* IE within the *E-RABs To be Added Item* IE of the SENB ADDITION REQUEST message. For each E-RAB that it has decided

to admit, the SeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs Admitted To Be Added Item* IE of the SENB ADDITION REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this bearer. This GTP tunnel endpoint may be different from the corresponding GTP tunnel endpoint, i.e the information contained in the *Transport Layer Address* IE and the *DL GTP TEID* IE in the *E-RAB To Be Modified List* IE of the E-RAB MODIFICATION INDICATION message (see TS 36.413 [4]) depending on implementation choice.

- the SeNB may include for each bearer in the *E-RABs Admitted To Be Added List* IE the *UL Forwarding GTP Tunnel Endpoint* IE to indicate that it requests data forwarding of uplink packets to be performed for that bearer.
- If the *Correlation ID* IE for the concerned E-RAB is received by the SeNB, the SeNB shall use this information for LIPA operation for the concerned E-RAB.
- If the *SIPTO Correlation ID* IE for the concerned E-RAB is received by the SeNB, the SeNB shall use this information for SIPTO@LN operation for the concerned E-RAB.
- If the *Bearer Type* IE for the concerned E-RAB is received by the SeNB and is set to "non IP", the SeNB shall, if supported, not perform header compression for the concerned E-RAB.

If the CSG Membership Status IE is included in the SENB ADDITION REQUEST message, the SeNB shall act as specified in TS 36.300 [15].

Upon reception of the SENB ADDITION REQUEST ACKNOWLEDGE message the MeNB shall stop the timer T_{DCprep} .

If the *GW Transport Layer Address* IE is received in the SENB ADDITION REQUEST ACKNOWLEDGE message, the MeNB stores this information and use it according to TS 36.300 [15].

If the SIPTO L-GW Transport Layer Address IE is received in the SENB ADDITION REQUEST ACKNOWLEDGE message, the MeNB stores this information and use it according to TS 36.300 [15].

If the SeNB UE X2AP ID IE and/or SeNB UE X2AP ID Extension IE are contained in the SENB ADDITION REQUEST message, the SeNB shall, if supported, store this information and use it as defined in TS 36.300 [15].

If the *Tunnel Information for BBF* IE is received in the SENB ADDITION REQUEST ACKNOWLEDGE message, the MeNB shall, if supported, transfer the tunnel information for BBF to the core network.

Interactions with the SeNB Reconfiguration Completion procedure:

If the SeNB admits at least one E-RAB, the SeNB shall start the timer $T_{DCoverall}$ when sending the SENB ADDITION REQUEST ACKNOWLEDGE message to the MeNB. The reception of the SENB RECONFIGURATION COMPLETE message shall stop the timer $T_{DCoverall}$.

8.6.1.3 Unsuccessful Operation

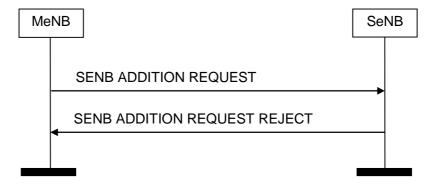


Figure 8.6.1.3-1: SeNB Addition Preparation, unsuccessful operation

If the SeNB is not able to accept any of the bearers or a failure occurs during the SeNB Addition Preparation, the SeNB sends the SENB ADDITION REQUEST REJECT message with an appropriate cause value to the MeNB.

8.6.1.4 Abnormal Conditions

If the SeNB receives a SENB ADDITION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RABs To Be Added List* IE) set to the same value, the SeNB shall consider the establishment of the corresponding E-RAB as failed.

If the SeNB receives a SENB ADDITION REQUEST message containing a *E-RAB Level QoS Parameters* IE which contains a *QCI* IE indicating a GBR bearer (as defined in TS 23.203 [13]), and which does not contain the *GBR QoS Information* IE, the SeNB shall consider the establishment of the corresponding E-RAB as failed.

If the supported algorithms for encryption defined in the *Encryption Algorithms* IE in the *UE Security Capabilities* IE, plus the mandated support of EEA0 in all UEs (TS 33.401 [18]), do not match any algorithms defined in the configured list of allowed encryption algorithms in the SeNB (TS 33.401 [18]), the SeNB shall reject the procedure using the SENB ADDITION REQUEST REJECT message.

If the SeNB receives a SENB ADDITION REQUEST message which does not contain the *CSG Membership Status* IE, and the SCell served by the SeNB is a hybrid cell, the SeNB shall reject the procedure using the SENB ADDITION REQUEST REJECT message.

If the SeNB receives a SENB ADDITION REQUEST message containing a *SeNB UE X2AP ID* IE that does not match any existing UE Context that has such ID, the SeNB shall reject the procedure using the SENB ADDITION REQUEST REJECT message.

If the SeNB receives a SENB ADDITION REQUEST message containing both the *Correlation ID* and the *SIPTO Correlation ID* IEs for the same E-RAB, the SeNB shall consider the establishment of the corresponding E-RAB as failed.

Interactions with the SeNB Reconfiguration Completion and SeNB initiated SeNB Release procedure:

If the timer $T_{DCoverall}$ expires before the SeNB has received the SENB RECONFIGURATION COMPLETE or the SENB RELEASE REQUEST message, the SeNB shall regard the requested RRC connection reconfiguration as being not applied by the UE and shall trigger the SeNB initiated SeNB Release procedure.

Interactions with the MeNB initiated SeNB Release procedure:

If the timer T_{DCprep} expires before the MeNB has received the SENB ADDITION REQUEST ACKNOWLEDGE message, the MeNB shall regard the SeNB Addition Preparation procedure as being failed and shall trigger the MeNB initiated SeNB Release procedure.

8.6.2 SeNB Reconfiguration Completion

8.6.2.1 General

The purpose of the SeNB Reconfiguration Completion procedure is to provide information to the SeNB whether the requested configuration was successfully applied by the UE.

The procedure uses UE-associated signalling.

8.6.2.2 Successful Operation



Figure 8.6.2.2-1: SeNB Reconfiguration Complete procedure, successful operation.

The MeNB initiates the procedure by sending the SENB RECONFIGURATION COMPLETE message to the SeNB.

The SENB RECONFIGURATION COMPLETE message may contain information that

- either the UE has successfully applied the configuration requested by the SeNB. The MeNB may also provide configuration information in the *MeNB to SeNB Container* IE.
- or the MeNB has not triggered configuration requested by the SeNB. The MeNB shall provide information with sufficient precision in the included *Cause* IE to enable the SeNB to know the reason for an unsuccessful reconfiguration. The MeNB may also provide configuration information in the *MeNB to SeNB Container* IE.

Upon reception of the SENB RECONFIGURATION COMPLETE message the SeNB shall stop the timer T_{DCoverall}.

8.6.2.3 Abnormal Conditions

Void.

8.6.3 MeNB initiated SeNB Modification Preparation

8.6.3.1 General

This procedure is used to enable an MeNB to request an SeNB to modify the UE context at the SeNB.

The procedure uses UE-associated signalling.

8.6.3.2 Successful Operation

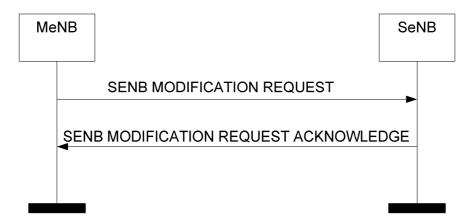


Figure 8.6.3.2-1: MeNB initiated SeNB Modification Preparation, successful operation

The MeNB initiates the procedure by sending the SENB MODIFICATION REQUEST message to the SeNB. When the MeNB sends the SENB MODIFICATION REQUEST message, it shall start the timer $T_{DC_{DPED}}$.

The SENB MODIFICATION REQUEST message may contain

- within the UE Context Information IE;
 - E-RABs to be added within the *E-RABs To Be Added Item* IE;
 - E-RABs to be modified within the *E-RABs To Be Modified Item* IE;
 - E-RABs to be released within the *E-RABs To Be Released Item* IE;
 - the SeNB UE Aggregate Maximum Bit Rate IE;
- the MeNB to SeNB Container IE;
- the SCG Change Indication IE;
- the CSG Membership Status IE.

If the SENB MODIFICATION REQUEST message contains the *Serving PLMN* IE, the SeNB may use it for RRM purposes.

If the SeNB UE Aggregate Maximum Bit Rate IE is included in the SENB MODIFICATION REQUEST message, the SeNB shall:

- replace the previously provided SeNB UE Aggregate Maximum Bit Rate by the received SeNB UE Aggregate Maximum Bit Rate in the UE context;
- use the received SeNB UE Aggregate Maximum Bit Rate for non-GBR Bearers for the concerned UE as defined in TS 36.300 [15].

The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

If at least one of the requested modifications is admitted by the SeNB, the SeNB shall modify the related part of the UE context accordingly and send the SENB MODIFICATION REQUEST ACKNOWLEDGE message back to the MeNB.

The SeNB shall include the E-RABs for which resources have been either added or modified or released at the SeNB either in the *E-RABs Admitted To Be Added List* IE or the *E-RABs Admitted To Be Modified List* IE or the *E-RABs Admitted To Be Released List* IE. The SeNB shall include the E-RABs that have not been admitted in the *E-RABs Not Admitted List* IE with an appropriate cause value.

For each E-RAB configured with the SCG bearer option

- the SeNB shall, if included, choose the ciphering algorithm based on the information in the *UE Security Capabilities* IE and locally configured priority list of AS encryption algorithms and apply the key indicated in the *SeNB Security Key* IE as specified in the TS 33.401 [18].
- if applicable, the MeNB may propose to apply forwarding of downlink data by including the *DL Forwarding* IE within the *E-RABs To Be Added Item* IE of the SENB MODIFICATION REQUEST message. For each E-RAB that it has decided to admit, the SeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs Admitted To Be Added Item* IE of the SENB MODIFICATION REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this bearer. The MeNB may also provide for an applicable E-RAB to be released the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SENB MODIFICATION REQUEST message.
- if applicable, the SeNB may include for each bearer in the *E-RABs Admitted To Be Added List* IE in the SENB MODIFICATION REQUEST ACKNOWLEDGE message the *UL Forwarding GTP Tunnel Endpoint* IE to indicate that it requests data forwarding of uplink packets to be performed for that bearer.
- If the *Correlation ID* IE for the concerned E-RAB is received by the SeNB, the SeNB shall use this information for LIPA operation for the concerned E-RAB.
- If the *SIPTO Correlation ID* IE for the concerned E-RAB is received by the SeNB, the SeNB shall use this information for SIPTO@LN operation for the concerned E-RAB.
- If the *Bearer Type* IE for the concerned E-RAB is received by the SeNB and is set to "non IP", the SeNB shall, if supported, not perform header compression for the concerned E-RAB.

For each E-RAB configured with the split bearer option to be modified, if the SENB MODIFICATION REQUEST message includes the *SCG Change Indication* IE and the *MeNB GTP Tunnel Endpoint* IE in the *E-RABs To Be Modified Item* IE, the SeNB shall act as specified in TS 36.300 [15].

For each E-RAB configured with the split bearer option to be modified (released)

- if applicable, the MeNB may provide for an applicable E-RAB to be released the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SENB MODIFICATION REQUEST message.

If the *E-RAB level QoS parameter* IE is included in the SENB MODIFICATION REQUEST message for an E-RAB to be modified the SeNB shall allocate respective resources and provide corresponding radio configuration information within the *SeNB to MeNB Container* IE as described in TS 36.300 [15].

If the SENB MODIFICATION REQUEST message contains for an E-RAB to be modified which is configured with the SCG bearer option the *S1 UL GTP Tunnel Endpoint* IE the SeNB shall use it as the new UL S1-U address.

If the SENB MODIFICATION REQUEST message contains for an E-RAB to be modified which is configured with the split bearer option the *MeNB GTP Tunnel Endpoint* IE the SeNB shall use it as the new UL X2-U address.

For an E-RAB to be modified which is configured with the SCG bearer option the SeNB may include in the SENB MODIFICATION REQUEST ACKNOWLEDGE message the S1 DL GTP Tunnel Endpoint IE.

For an E-RAB to be modified which is configured with the split bearer option the SeNB may include in the SENB MODIFICATION REQUEST ACKNOWLEDGE message the *SeNB GTP Tunnel Endpoint* IE.

If the SCG Change Indication IE is included in the SENB MODIFICATION REQUEST message, the SeNB shall act as specified in TS 36.300 [15].

If the CSG Membership Status IE is included in the SENB MODIFICAITON REQUEST message, the SeNB shall act as specified in TS 36.300 [15].

Upon reception of the SENB MODIFICATION REQUEST ACKNOWLEDGE message the MeNB shall stop the timer T_{DCprep}. If the SENB MODIFICATION REQUEST ACKNOWLEDGE message has included the *SeNB to MeNB Container* IE the MeNB is then defined to have a Prepared SeNB Modification for that X2 UE-associated signalling.

When the SeNB supporting L-GW function for LIPA operation releases radio and control plane related resources associated to the LIPA bearer, it shall also request using intra-node signalling the collocated L-GW to release the LIPA PDN connection as defined in TS 23.401 [12].

Interactions with the SeNB Reconfiguration Completion procedure:

If the SeNB admits a modification of the UE context requiring the MeNB to report about the success of the RRC connection reconfiguration procedure, the SeNB shall start the timer $T_{DCoverall}$ when sending the SENB MODIFICATION REQUEST ACKNOWLEDGE message to the MeNB. The reception of the SeNB RECONFIGURATION COMPLETE message shall stop the timer $T_{DCoverall}$.

8.6.3.3 Unsuccessful Operation

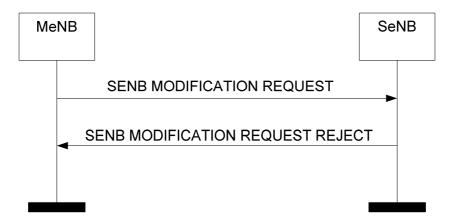


Figure 8.6.3.3-1: MeNB initiated SeNB Modification Preparation, unsuccessful operation

If the SeNB does not admit any modification requested by the MeNB, or a failure occurs during the MeNB initiated SeNB Modification Preparation, the SeNB shall send the SENB MODIFICATION REQUEST REJECT message to the MeNB. The message shall contain the *Cause* IE with an appropriate value.

If the SeNB receives a SENB MODIFICATION REQUEST message containing the *MeNB to SeNB Container* IE that does not include required information as specified in TS 36.331 [9], the SeNB shall send the SENB MODIFICATION REQUEST REJECT message to the MeNB.

8.6.3.4 Abnormal Conditions

If the SeNB receives a SENB MODIFICATION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RABs To Be Added List* IE and/or the *E-RABs To Be Modified List* IE) set to the same value, the SeNB shall not admit the action requested for the corresponding E-RABs.

If the SeNB receives an SENB MODIFICATION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RAB To Be Released List* IE) set to the same value, the SeNB shall initiate the release of one corresponding E-RAB and ignore the duplication of the instances of the selected corresponding E-RABs.

If the SeNB receives a SENB MODIFICATION REQUEST message containing a *E-RAB Level QoS Parameters* IE which contains a *QCI* IE indicating a GBR bearer (as defined in TS 23.203 [13]), and which does not contain the *GBR QoS Information* IE, the SeNB shall not admit the corresponding E-RAB.

If the supported algorithms for encryption defined in the *Encryption Algorithms* IE in the *UE Security Capabilities* IE in the *UE Context Information* IE, plus the mandated support of EEA0 in all UEs (TS 33.401 [18]), do not match any algorithms defined in the configured list of allowed encryption algorithms in the SeNB (TS 33.401 [18]), the SeNB shall reject the procedure using the SENB MODIFICATION REQUEST REJECT message.

If the timer T_{DCprep} expires before the MeNB has received the SENB MODIFICATION REQUEST ACKNOWLEDGE message, the MeNB shall regard the MeNB initiated SeNB Modification Preparation procedure as being failed and shall release the UE Context at the SeNB.

If the SeNB receives a SENB MODIFICATION REQUEST message containing both the *Correlation ID* and the *SIPTO Correlation ID* IEs for the same E-RAB, the SeNB shall consider the establishment of the corresponding E-RAB as failed.

Interactions with the SeNB Reconfiguration Completion and SeNB initiated SeNB Release procedure:

If the timer T_{DCoverall} expires before the SeNB has received the SENB RECONFIGURATION COMPLETE or the SENB RELEASE REQUEST message, the SeNB shall regard the requested modification RRC connection reconfiguration as being not applied by the UE and shall trigger the SeNB initiated SeNB Release procedure.

Interaction with the SeNB initiated SeNB Modification Preparation procedure:

If the MeNB, after having initiated the MeNB initiated SeNB Modification procedure, receives the SENB MODIFICATION REQUIRED message, the MeNB shall refuse the SeNB initiated SeNB Modification procedure with an appropriate cause value in the *Cause* IE.

If the MeNB has a Prepared SeNB Modification and receives the SENB MODIFICATION REQUIRED message, the MeNB shall respond with the SENB MODIFICATION REFUSE message to the SeNB with an appropriate cause value in the *Cause* IE.

8.6.4 SeNB initiated SeNB Modification

8.6.4.1 General

This procedure is used by the SeNB to modify the UE context in the SeNB.

The procedure uses UE-associated signalling.

8.6.4.2 Successful Operation

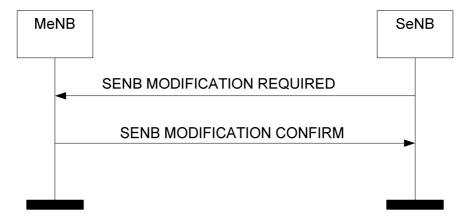


Figure 8.6.4.2-1: SeNB initiated SeNB Modification, successful operation.

The SeNB initiates the procedure by sending the SENB MODIFICATION REQUIRED message to the MeNB. When the SeNB sends the SENB MODIFICATION REQUIRED message, it shall start the timer $T_{DCoverall}$.

The SENB MODIFICATION REQUIRED message may contain

- the SeNB to MeNB Container IE.
- E-RABs to be released within the *E-RABs To Be Released Item* IE:
- the SCG Change Indication IE.

If the MeNB receives a SENB MODIFICATION REQUIRED message containing the *SCG Change Indication* IE, the MeNB shall act as specified in TS 36.300 [15].

If the MeNB is able to perform the modifications requested by the SeNB, the MeNB shall send the SENB MODIFICATION CONFIRM message to the SeNB. The SENB MODIFICATION CONFIRM message may contain the *MeNB to SeNB Container* IE.

Upon reception of the SENB MODIFICATION CONFIRM message the SeNB shall stop the timer T_{DCoverall}.

Interaction with the MeNB initiated SeNB Modification Preparation procedure:

If applicable, as specified in TS 36.300 [15], the SeNB may receive, after having initiated the SeNB initiated SeNB Modification procedure, the SENB MODIFICATION REQUEST message including the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released List* IE.

If applicable, as specified in TS 36.300 [15], the SeNB may receive, after having initiated the SeNB initiated SeNB Modification procedure, the SENB MODIFICATION REQUEST message including the *SeNB Security Key* IE within the *UE Context Information* IE.

If the SeNB has initiated the SeNB initiated SeNB Modification procedure with the SENB MODIFICATION REQUIRED message including the *E-RABs To Be Released Item* IE, it may receive the SENB MODIFICATION REQUEST message including the *SCG Change Indication* IE, upon which the SeNB shall provide respective information in the *SeNB to MeNB Container* IE within the SENB MODIFICATION REQUEST ACKNOWLEDGMENT message, as specified in TS 36.300 [15].

8.6.4.3 Unsuccessful Operation

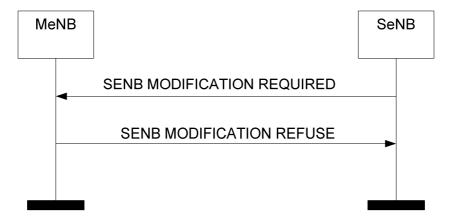


Figure 8.6.4.3-1: SeNB initiated SeNB Modification, unsuccessful operation.

In case the request modification cannot be performed successfully the MeNB shall respond with the SENB MODIFICATION REFUSE message to the SeNB with an appropriate cause value in the *Cause* IE.

The MeNB may also provide configuration information in the MeNB to SeNB Container IE.

8.6.4.4 Abnormal Conditions

If the timer T_{DCoverall} expires before the SeNB has received the SENB MODIFICATION CONFIRM or the SENB MODIFICATION REFUSE message, the SeNB shall regard the requested modification as failed and may take further actions like triggering the SeNB initiated SeNB Release procedure to release all SeNB resources allocated for the UE.

If the MeNB is aware that the SeNB didn't receive the latest configuration information concerning the MCG, the MeNB may respond with the SENB MODIFICATION REFUSE message to the SeNB with an appropriate cause value in the *Cause* IE.

If the value received in the *E-RAB ID* IE of any of the *E-RABs To Be Released Items* IE is not known at the MeNB, the MeNB shall regard the procedure as failed and may take appropriate actions like triggering the MeNB initiated SeNB Release procedure.

Interaction with the MeNB initiated SeNB Modification Preparation procedure:

If the SeNB, after having initiated the SeNB initiated SeNB Modification procedure, receives the SENB MODIFICATION REQUEST message including other IEs than an applicable *SeNB Security Key* IE and/or applicable forwarding addresses and/or the *SCG Change Indication* IE the SeNB shall

- regard the SeNB initiated SeNB Modification Procedure as being failed,
- stop the T_{DCoverall}, which was started to supervise the SeNB initiated SeNB Modification procedure,
- be prepared to receive the SENB MODIFICATION REFUSE message from the MeNB and
- continue with the MeNB initiated SeNB Modification Preparation procedure as specified in section 8.6.3.

8.6.5 MeNB initiated SeNB Release

8.6.5.1 General

The MeNB initiated SeNB Release procedure is triggered by the MeNB to initiate the release of the resources for a specific UE.

The procedure uses UE-associated signalling.

8.6.5.2 Successful Operation



Figure 8.6.5.2-1: MeNB initiated SeNB Release, successful operation

The MeNB initiates the procedure by sending the SENB RELEASE REQUEST message. Upon reception of the SENB RELEASE REQUEST message the SeNB shall stop providing user data to the UE. The SeNB UE X2AP ID IE and, if available, the SeNB UE X2AP ID Extension IE shall be included if it has been obtained from the SeNB. The MeNB may provide appropriate information within the Cause IE.

If the bearer context in the SeNB was configured with the SCG bearer option, for each SCG bearer for which the MeNB requests forwarding of uplink/downlink data, the MeNB includes the *UL Forwarding GTP Tunnel Endpoint/ DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SENB RELEASE REQUEST message to indicate that the SeNB should perform data forwarding of uplink/downlink packets for that SCG bearer.

If the bearer context in the SeNB was configured with the split bearer option, for each Split bearer for which the MeNB requests forwarding of downlink data, the MeNB includes the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SENB RELEASE REQUEST message to indicate that the SeNB should perform data forwarding of downlink packets for that split bearer.

Upon reception of the SENB RELEASE REQUEST message containing *UE Context Kept Indicator* IE set to "True", the SeNB shall, if supported, only initiate the release of the resources related to the UE-associated signalling connection between the MeNB and the SeNB.

Upon reception of the SENB RELEASE REQUEST message containing *MakeBeforeBreak Indicator* IE set to "True", the SeNB shall, if supported, perform Make-Before-Break SeNB change as specified in TS 36.300 [15].

8.6.5.3 Unsuccessful Operation

Not applicable.

8.6.5.4 Abnormal Conditions

Should the SENB RELEASE REQUEST message refer to a context that does not exist, the SeNB shall ignore the message.

When the MeNB has initiated the procedure and did not include the *SeNB UE X2AP ID* IE the MeNB shall regard the resources for the UE at the SeNB as being fully released.

8.6.6 SeNB initiated SeNB Release

8.6.6.1 General

This procedure is triggered by the SeNB to initiate the release of the resources for a specific UE.

The procedure uses UE-associated signalling.

8.6.6.2 Successful Operation

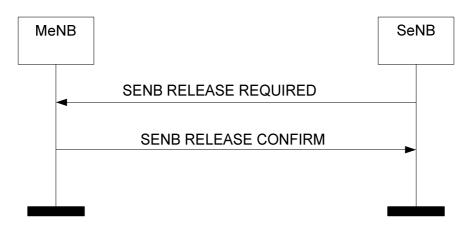


Figure 8.6.6.2-1: SeNB initiated SeNB Release, successful operation.

The SeNB initiates the procedure by sending the SENB RELEASE REQUIRED message to the MeNB.

Upon reception of the SENB RELEASE REQUIRED message, the MeNB replies with the SENB RELEASE CONFIRM message. For each E-RAB configured with the SCG bearer option, the MeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE to indicate that it requests data forwarding of uplink and downlink packets to be performed for that bearer. For each E-RAB configured with the split bearer option, the MeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE to indicate that it requests data forwarding of downlink packets to be performed for that bearer.

The SeNB may start data forwarding and stop providing user data to the UE upon reception of the SENB RELEASE CONFIRM message,

8.6.6.3 Unsuccessful Operation

Not applicable.

8.6.6.4 Abnormal Conditions

Void.

8.6.7 SeNB Counter Check

8.6.7.1 General

This procedure is initiated by the SeNB to request the MeNB to execute a counter check procedure to verify the value of the PDCP COUNTs associated with SCG bearers established in the SeNB.

The procedure uses UE-associated signalling.

8.6.7.2 Successful Operation

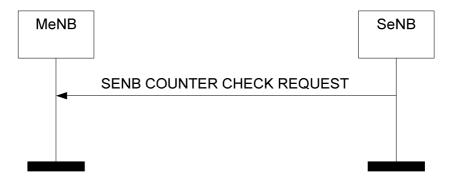


Figure 8.6.7.2-1: SeNB Counter Check procedure, successful operation.

The SeNB initiates the procedure by sending the SENB COUNTER CHECK REQUEST message to the MeNB.

Upon reception of the SENB COUNTER CHECK REQUEST message, the MeNB may perform the RRC counter check procedure as defined in TS 33.401 [18].

8.6.7.3 Unsuccessful Operation

Not applicable.

8.6.7.4 Abnormal Conditions

Not applicable.

8.7 Procedures for E-UTRAN-NR Dual Connectivity

8.7.1 EN-DC X2 Setup

8.7.1.1 General

The purpose of the EN-DC X2 Setup procedure is to exchange application level configuration data needed for eNB and en-gNB to interoperate correctly over the X2 interface. This procedure erases any existing application level

configuration data in the two nodes and replaces it by the one received. This procedure also resets the X2 interface like a Reset procedure would do.

- NOTE 1: If X2-C signalling transport is shared among multiple X2-C interface instances, one EN-DC X2 Setup procedure is issued per X2-C interface instance to be setup, i.e. several X2 Setup procedures may be issued via the same TNL association after that TNL association has become operational.
- NOTE 2: Exchange of application level configuration data also applies between eNB and en-gNB in case the SN (i.e. the en-gNB) does not broadcast system information other than for radio frame timing and SFN, as specified in the TS 37.340 [32]. How to use this information when this option is used is not explicitly specified.

The procedure uses non UE-associated signalling.

8.7.1.2 Successful Operation

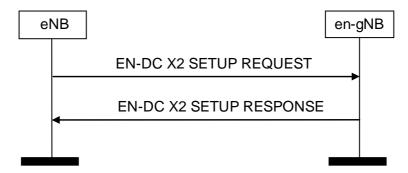


Figure 8.7.1.2-1: eNB Initiated EN-DC X2 Setup, successful operation

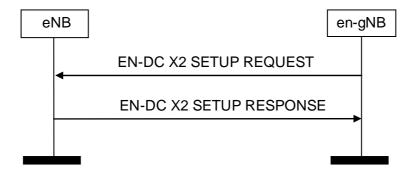


Figure 8.7.1.2-2: en-gNB Initiated EN-DC X2 Setup, successful operation

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC X2 SETUP REQUEST message and the EN-DC X2 SETUP RESPONSE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance. In the current version of this specification an eNB shall not include the *Interface Instance Indication* IE in the *Initiating NodeType* IE in the EN-DC X2 SETUP REQUEST message.

eNB initiated EN-DC X2 Setup:

An eNB initiates the procedure by sending the EN-DC X2 SETUP REQUEST message to a candidate en-gNB. The candidate en-gNB replies with the EN-DC X2 SETUP RESPONSE message. The initiating eNB shall transfer the complete list of its served cells to the candidate en-gNB. The candidate en-gNB shall reply with the complete list of its served cells. If Supplementary Uplink is configured at the candidate en-gNB, the candidate en-gNB shall include in the EN-DC X2 SETUP RESPONSE message the *SUL Information* IE and the *Supported SUL band List* IE for each served cell where supplementary uplink is configured.

If the EN-DC X2 SETUP REQUEST message contains the *Protected E-UTRA Resource Indication* IE, the receiving en-gNB should take this into account for cell-level resource coordination with the eNB. The en-gNB shall consider the received *Protected E-UTRA Resource Indication* IE content valid until reception of a new update of the IE for the same eNB.

The protected resource pattern indicated in the *Protected E-UTRA Resource Indication* IE is not valid in subframes indicated by the *Reserved Subframes* IE, as well as in the non-control region of the MBSFN subframes i.e. it is valid only in the control region therein. The size of the control region of MBSFN subframes is indicated in the *Protected E-UTRA Resource Indication* IE.

en-gNB initiated EN-DC X2 Setup:

An en-gNB initiates the procedure by sending the EN-DC X2 SETUP REQUEST message to a candidate eNB. The candidate eNB replies with the EN-DC X2 SETUP RESPONSE message. The initiating en-gNB shall transfer the complete list of its served cells to the candidate eNB. The candidate eNB shall reply with the complete list of its served cells.

If Supplementary Uplink is configured at the en-gNB, the en-gNB shall include in the EN-DC X2 SETUP REQUEST message the *SUL Information* IE and the *Supported SUL band List* IE for each served cell where supplementary uplink is configured.

If the EN-DC X2 SETUP RESPONSE message contains the *Protected E-UTRA Resource Indication* IE, the receiving en-gNB should take this into account for cell-level resource coordination with the eNB. The en-gNB shall consider the received *Protected E-UTRA Resource Indication* IE content valid until reception of a new update of the IE for the same eNB.

8.7.1.3 Unsuccessful Operation

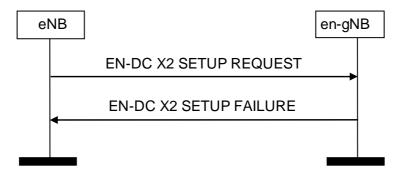


Figure 8.7.1.3-1: eNB Initiated EN-DC X2 Setup, unsuccessful operation

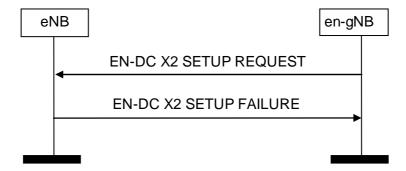


Figure 8.7.1.3-2: en-gNB Initiated EN-DC X2 Setup, unsuccessful operation

If the candidate receving node cannot accept the setup it shall respond with an EN-DC X2 SETUP FAILURE message with appropriate cause value.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC X2 SETUP REQUEST message and the EN-DC X2 SETUP FAILURE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

8.7.1.4 Abnormal Conditions

If the first message received for a specific TNL association is not an EN-DC X2 SETUP REQUEST, EN-DC X2 SETUP RESPONSE, or EN-DC X2 SETUP FAILURE message then this shall be treated as a logical error.

If the initiating node does not receive either EN-DC X2 SETUP RESPONSE message or EN-DC X2 SETUP FAILURE message, the initiating node may reinitiate the EN-DC X2 Setup procedure towards the same candidate node, provided that the content of the EN-DC X2 SETUP REQUEST message is identical to the content of the previously unacknowledged EN-DC X2 SETUP REQUEST message.

If the EN-DC X2 SETUP FAILURE message includes the *Time To Wait* IE the initiating node shall wait at least for the indicated time before reinitiating the EN-DC X2 Setup procedure towards the same peer node.

If the initiating node receives an EN-DC X2 SETUP REQUEST message from the peer entity on the same X2 interface:

- In case the initiating node answers with an EN-DC X2 SETUP RESPONSE message and receives a subsequent EN-DC X2 SETUP FAILURE message, the initiating node shall consider the X2 interface as non operational and the procedure as unsuccessfully terminated according to sub clause 8.7.1.3.
- In case the initiating node answers with an EN-DC X2 SETUP FAILURE message and receives a subsequent EN-DC X2 SETUP RESPONSE message, the initiating node shall ignore the EN-DC X2 SETUP RESPONSE message and consider the X2 interface as non operational.

8.7.2 EN-DC Configuration Update

8.7.2.1 General

The purpose of the EN-DC Configuration Update procedure is to update application level configuration data needed for eNB and en-gNB to interoperate correctly over the X2 interface.

NOTE: Update of application level configuration data also applies between eNB and en-gNB in case the SN (i.e. the en-gNB) does not broadcast system information other than for radio frame timing and SFN, as specified in the TS 37.340 [32]. How to use this information when this option is used is not explicitly specified.

The procedure uses non UE-associated signalling.

8.7.2.2 Successful Operation

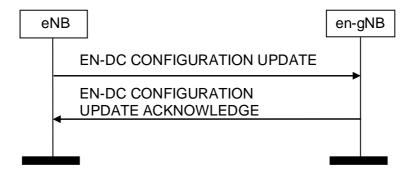


Figure 8.7.2.2-1: eNB Initiated EN-DC Configuration Update, successful operation

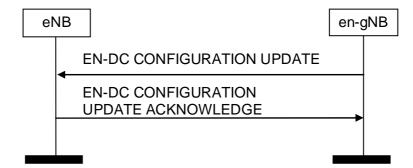


Figure 8.7.2.2-2: en-gNB Initiated EN-DC Configuration Update, successful operation

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC CONFIGURATION UPDATE message and the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

eNB initiated EN-DC Configuration Update:

An eNB initiates the procedure by sending an EN-DC CONFIGURATION UPDATE message to a peer en-gNB.

After successful update of requested information, en-gNB shall reply with the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message to inform the initiating eNB that the requested update of application data was performed successfully.

If the *Cell Assistance Information* IE is present, the en-gNB may use it to generate the *List of Served NR Cells* IE and include the list in the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message.

If the EN-DC CONFIGURATION UPDATE REQUEST message contains the Protected E-UTRA Resource Indication IE, the receiving en-gNB should take this into account for cell-level resource coordination with the eNB. The en-gNB shall consider the received Protected E-UTRA Resource Indication IE content valid until reception of a new update of the IE for the same eNB. The protected resource pattern indicated in the Protected E-UTRA Resource Indication IE is not valid in subframes indicated by the Reserved Subframes IE, as well as in the non-control region of the MBSFN subframes i.e. it is valid only in the control region therein. The size of the control region of MBSFN subframes is indicated in the Protected E-UTRA Resource Indication IE.

The eNB may initiate a further EN-DC Configuration Update procedure only after a previous EN-DC Configuration Update procedure has been completed.

If Supplementary Uplink is configured at the en-gNB, the en-gNB shall include in the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message the *SUL Information* IE and the *Supported SUL band List* IE for each cell added in the Served NR Cells To Add IE and in the Served NR Cells To Modify IE.

en-gNB initiated EN-DC Configuration Update:

An en-gNB initiates the procedure by sending an EN-DC CONFIGURATION UPDATE message to an eNB.

If Supplementary Uplink is configured at the en-gNB, the en-gNB shall include in the EN-DC CONFIGURATION UPDATE message the *SUL Information* IE and the *Supported SUL band List* IE for each served cell added in the Served NR Cells To Add IE and in the Served NR Cells To Modify IE.

If the Deactivation Indication IE is contained in the *Served NR Cells To Modify* IE, it indicates that the concerned NR cell was switched off to lower energy consumption, and is available for activation on request from the eNB, as described in TS 36.300 [15].

After successful update of requested information, eNB shall reply with the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message to inform the initiating en-gNB that the requested update of application data was performed successfully. In case the eNB receives an EN-DC CONFIGURATION UPDATE without any IE except for *Message Type* IE it shall reply with EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message without performing any updates to the existing configuration.

Upon reception of an EN-DC CONFIGURATION UPDATE message, eNB shall update the information for en-gNB as follows:

Update of Served NR Cell Information:

- If Served NR Cells To Add IE is contained in the EN-DC CONFIGURATION UPDATE message, eNB shall add cell information according to the information in the Served NR Cell Information IE.
- If Served NR Cells To Modify IE is contained in the EN-DC CONFIGURATION UPDATE message, eNB shall modify information of cell indicated by Old NR-CGI IE according to the information in the Served NR Cell Information IE.
- If *Served NR Cells To Delete* IE is contained in the EN-DC CONFIGURATION UPDATE message, eNB shall delete information of cell indicated by *Old NR-CGI* IE.

The en-gNB may initiate a further EN-DC Configuration Update procedure only after a previous EN-DC Configuration Update procedure has been completed.

8.7.2.3 Unsuccessful Operation

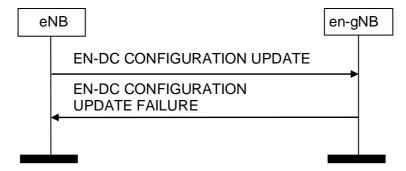


Figure 8.7.2.3-1: eNB Initiated EN-DC Configuration Update, unsuccessful operation

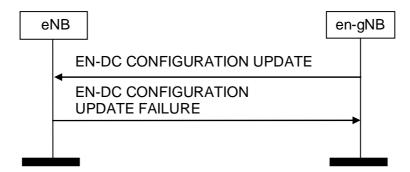


Figure 8.7.2.3-2: en-gNB Initiated EN-DC Configuration Update, unsuccessful operation

If the candidate receving node can not accept the update it shall respond with an EN-DC CONFIGURATION UPDATE FAILURE message and appropriate cause value.

If the EN-DC CONFIGURATION UPDATE FAILURE message includes the *Time To Wait* IE the initiating node shall wait at least for the indicated time before reinitiating the EN-DC Configuration Update procedure towards the same peer node. Both nodes shall continue to operate the X2 with their existing configuration data.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC CONFIGURATION UPDATE message and the EN-DC CONFIGURATION UPDATE FAILURE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

8.7.2.4 Abnormal Conditions

If the initiating node after initiating EN-DC Configuration Update procedure receives neither EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message nor EN-DC CONFIGURATION UPDATE FAILURE message, the initiating node may reinitiate the EN-DC Configuration Update procedure towards the same candidate receiving node, provided that the content of the EN-DC CONFIGURATION UPDATE message is identical to the content of the previously unacknowledged EN-DC CONFIGURATION UPDATE message.

8.7.3 EN-DC Cell Activation

8.7.3.1 General

The purpose of the EN-DC Cell Activation procedure is to enable an eNB to request a neighbouring en-gNB to switch on one or more cells, previously reported as inactive due to energy saving reasons.

The procedure uses non UE-associated signalling.

8.7.3.2 Successful Operation

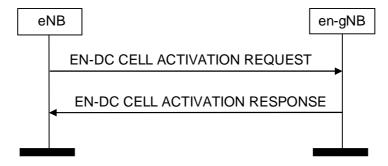


Figure 8.7.3.2-1: EN-DC Cell Activation, successful operation

An eNB initiates the procedure by sending a EN-DC CELL ACTIVATION REQUEST message to a peer en-gNB.

Upon receipt of this message, the en-gNB should activate the cell(s) indicated in the EN-DC CELL ACTIVATION REQUEST message and shall indicate in the EN-DC CELL ACTIVATION RESPONSE message for which cells the request was fulfilled.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC CELL ACTIVATION REQUEST message and the EN-DC CELL ACTIVATION RESPONSE message shall contain the *Interface Instance Indication* IE to identify the corresponding interface instance.

Interactions with EN-DC Configuration Update procedure:

The en-gNB shall not send an EN-DC CONFIGURATION UPDATE message to the eNB just for the reason of the cell(s) indicated in the EN-DC CELL ACTIVATION REQUEST message changing cell activation state, as the receipt of the EN-DC CELL ACTIVATION RESPONSE message by the eNB is used to update the information about the activation state of en-gNB cells in the eNB.

8.7.3.3 Unsuccessful Operation

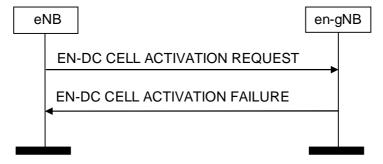


Figure 8.7.3.3-1: EN-DC Cell Activation, unsuccessful operation

If the en-gNB cannot activate any of the cells indicated in the EN-DC CELL ACTIVATION REQUEST message, it shall respond with a EN-DC CELL ACTIVATION FAILURE message with an appropriate cause value.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC CELL ACTIVATION REQUEST message and the EN-DC CELL ACTIVATION FAILURE message shall contain the *Interface Instance Indication* IE to identify the corresponding interface instance.

8.7.3.4 Abnormal Conditions

Not applicable.

8.7.4 SgNB Addition Preparation

8.7.4.1 General

The purpose of the SgNB Addition Preparation procedure is to request the en-gNB to allocate resources for EN-DC connectivity operation for a specific UE.

The procedure uses UE-associated signalling.

8.7.4.2 Successful Operation

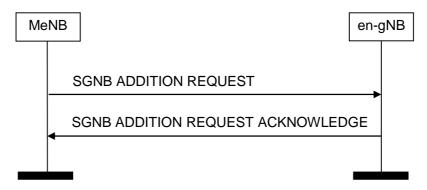


Figure 8.7.4.2-1: SgNB Addition Preparation, successful operation

The MeNB initiates the procedure by sending the SGNB ADDITION REQUEST message to the en-gNB. When the MeNB sends the SGNB ADDITION REQUEST message, it shall start the timer T_{DCprep} .

The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *Full E-RAB Level QoS Parameters* IE or in the *Requested MCG E-RAB Level QoS Parameters IE* or in the *Requested SCG E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

If the SGNB ADDITION REQUEST message contains the *Serving PLMN* IE, the en-gNB may use it for RRM purposes.

If the SGNB ADDITION REQUEST message contains the *Expected UE Behaviour* IE, the en-gNB shall, if supported, store this information and may use it to optimize resource allocation.

If the SGNB ADDITION REQUEST message contains the *Handover Restriction List* IE, the en-gNB node, if supported, shall store this information and use it to select an appropriate NR cell.

If the SGNB ADDITION REQUEST message contains the *MeNB Resource Coordination Information* IE, the en-gNB should forward it to lower layers and it may use it for the purpose of resource coordination with the MeNB. The engNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The en-gNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. If the *MeNB Coordination Assistance Information* IE is contained in the *MeNB Resource Coordination Information* IE, the en-gNB shall, if supported, use the information to determine further coordination of resource utilisation between the en-gNB and the MeNB.

The en-gNB shall choose the ciphering algorithm based on the information in the *NR UE Security Capabilities* IE and locally configured priority list of AS encryption algorithms and apply the key indicated in the *SgNB Security Key* IE as specified in the TS 33.401 [18].

If the SGNB ADDITION REQUEST message contains the *Subscriber Profile ID for RAT/Frequency Priority* IE, the en-gNB may use it for RRM purposes.

The en-gNB shall search for the target NR cell among the NR neighbour cells of the E-UTRAN cell indicated in *MeNB Cell ID* IE, as specified in the TS 37.340 [32].

If the *Masked IMEISV* IE is contained in the SGNB ADDITION REQUEST message the en-gNB shall, if supported, use it to determine the characteristics of the UE for subsequent handling.

The en-gNB shall report to the MeNB, in the SGNB ADDITION REQUEST ACKNOWLEDGE message, the result for all the requested E-RABs in the following way:

- a list of E-RABs which are successfully established shall be included in the *E-RABs Admitted To Be Added List* IE:
- a list of E-RABs which failed to be established shall be included in the E-RABs Not Admitted List IE.

NOTE: The MeNB may trigger the SgNB Addition Preparation procedure in the course of the Inter-MeNB handover without SgNB change procedure as described in TS 37.340 [32]. The deleted E-RABs are not included in the *E-RABs To Be Added List* IE in the SGNB ADDITION REQUEST message, from MeNB point of view. If the en-gNB reports a certain E-RAB to be successfully established, respective SCG resources, from an en-gNB point of view, may be actually successfully established or modified or kept; if a certain E-RAB is reported to be failed to be established, respective SCG resources, from an en-gNB point of view, may be actually failed to be established or modified or kept.

For each E-RAB successfully established in the en-gNB, the en-gNB shall report to the MeNB, in the SGNB ADDITION REQUEST ACKNOWLEDGE message, the same value in the *EN-DC Resource Configuration* IE as received in the SGNB ADDITION REQUEST message.

For each E-RAB for which allocation of the PDCP entity is requested at the en-gNB:

- the MeNB may propose to apply forwarding of downlink data by including the *DL Forwarding* IE within the *E-RABs To be Added Item* IE of the SGNB ADDITION REQUEST message. For each E-RAB that it has decided to admit, the en-gNB may include the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs Admitted To Be Added Item* IE of the SGNB ADDITION REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this bearer. This GTP tunnel endpoint may be different from the corresponding GTP tunnel endpoint, i.e the information contained in the *Transport Layer Address* IE and the *DL GTP TEID* IE in the *E-RAB To Be Modified List* IE of the E-RAB MODIFICATION INDICATION message (see TS 36.413 [4]) depending on implementation choice;
- the en-gNB may include for each bearer in the *E-RABs Admitted To Be Added List* IE the *UL Forwarding GTP Tunnel Endpoint* IE to indicate that it requests data forwarding of uplink packets to be performed for that bearer.
- the en-gNB shall use the *S1 UL GTP Tunnel Endpoint* IE of the SGNB ADDITION REQUEST message as the UL S1-U address.
- the MeNB shall use the *SgNB UL GTP Tunnel Endpoint at PDCP* IE of the SGNB ADDITION REQUEST ACKNOWLEDGE message as the UL X2-U address.
- if the SGNB ADDITION REQUEST message contains for an E-RAB to be added which is requested to be configured with MCG resources the *MeNB DL GTP Tunnel Endpoint at MCG* IE the en-gNB shall use it as the DL X2-U address for delivery of DL PDCP PDUs.
- the en-gNB shall include in the SGNB ADDITION REQUEST ACKNOWLEDGE message the S1 DL GTP Tunnel Endpoint at the SgNB IE.
- the en-gNB shall include in the SGNB ADDITION REQUEST ACKNOWLEDGE message the *RLC Mode* IE.
- the en-gNB may include for each bearer in the *E-RABs Admitted To Be Added List* IE in the SGNB ADDITION REQUEST ACKNOWLEDGE the *PDCP SN Length* IE to indicate the PDCP SN length for that bearer.
- If the *RLC Mode* IE is included for an E-RAB within the *E-RABs To be Added List* IE in the SGNB ADDITION REQUEST message, it indicates the mode that the MeNB used for the E-RAB when it was hosted at the MeNB.
- If the *Bearer Type* IE for the concerned E-RAB is received by the en-gNB and is set to "non IP", the en-gNB shall, if supported, not perform header compression for the concerned E-RAB.

Upon reception of the SGNB ADDITION REQUEST ACKNOWLEDGE message the MeNB shall stop the timer T_{DCprep} .

If the SGNB ADDITION ACKNOWLEDGE message contains the *SgNB Resource Coordination Information* IE, the MeNB may use it for the purpose of resource coordination with the en-gNB. The MeNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The MeNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same

UE. If the *SgNB Coordination Assistance Information* IE is contained in the *SgNB Resource Coordination Information* IE, the MeNB shall, if supported, use the information to determine further coordination of resource utilisation between the en-gNB and the MeNB.

If the *SgNB UE X2AP ID* IE is contained in the SGNB ADDITION REQUEST message, the en-gNB shall, if supported, store this information and use it as defined in TS 37.340 [32].

If the SGNB ADDITION REQUEST message contains the *SGNB Addition Trigger Indication*, the en-gNB shall include the *RRC config indication* IE in the SGNB ADDITION REQUEST ACKNOWLEDGE message to inform the MeNB if the en-gNB applied full or delta configuration, as specified in TS 37.340 [32].

If the en-gNB receives for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE and the *Duplication Activation* IE in the SGNB ADDITION REQUEST message, it may provide the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE and the *LCID* IE to the MeNB in the SGNB ADDITION REQUEST ACKNOWLEDGE message if PDCP duplication is configured at the en-gNB.

If the SGNB ADDITION REQUEST message contains the *UL PDCP SN Length* IE and the *DL PDCP SN Length* IE, the en-gNB shall, if supported, store this information and use it for lower layer configuration of the concerned MN terminated bearer.

The SgNB may include the *Location Information at SgNB* IE in the SGNB ADDITION REQUEST ACKNOWLEDGE message, if respective information is available at the SgNB.

If the *Location Information at SgNB Reporting* IE set to "pscell" is included in the SGNB ADDITION REQUEST, the SgNB shall start providing information about the current location of the UE. If the *Location Information at SgNB* IE is included in the SGNB ADDITION REQUEST ACKNOWLEDGE, the MeNB shall store the included information so that it may be transferred towards the MME.

If *Trace Activation* IE has previously been received for this UE, it shall be included in the SGNB ADDITION REQUEST message. If the *Trace Activation* IE is included in the SGNB ADDITION REQUEST message, the en-gNB shall, if supported, initiate the requested trace function as described in TS 32.422 [6].

Interactions with the MeNB initiated SgNB Modification procedure:

If the en-gNB provides for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE to the MeNB in the SGNB ADDITION REQUEST ACKNOWLEDGE message and the MeNB has not provided the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE in the SGNB ADDITION REQUEST message, the MeNB shall trigger the MeNB initiated SgNB Modification procedure to provide the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE to the SgNB.

Interactions with the SgNB Reconfiguration Completion procedure:

If the en-gNB admits at least one E-RAB, the en-gNB shall start the timer $T_{DCoverall}$ when sending the SGNB ADDITION REQUEST ACKNOWLEDGE message to the MeNB. The reception of the SGNB RECONFIGURATION COMPLETE message shall stop the timer $T_{DCoverall}$.

Interaction with the Activity Notification procedure

Upon receiving an SGNB ADDITION REQUEST message containing the *Desired Activity Notification Level* IE, the en-gNB shall, if supported, use this information to decide whether to trigger subsequent SgNB Activitity Notification procedures according to the requested notification level.

8.7.4.3 Unsuccessful Operation

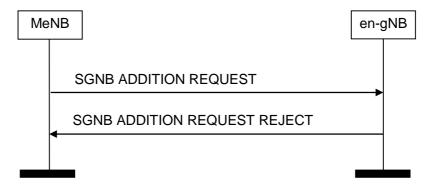


Figure 8.7.4.3-1: SgNB Addition Preparation, unsuccessful operation

If the en-gNB is not able to accept any of the bearers or a failure occurs during the SgNB Addition Preparation, the en-gNB sends the SGNB ADDITION REQUEST REJECT message with an appropriate cause value to the MeNB.

8.7.4.4 Abnormal Conditions

If the en-gNB receives a SGNB ADDITION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RABs To Be Added List* IE) set to the same value, the en-gNB shall consider the establishment of the corresponding E-RAB as failed.

If the en-gNB receives a SGNB ADDITION REQUEST message containing a *E-RAB Level QoS Parameters* IE which contains a *QCI* IE indicating a GBR bearer (as defined in TS 23.203 [13]), and which does not contain the *GBR QoS Information* IE, the en-gNB shall consider the establishment of the corresponding E-RAB as failed.

If the supported algorithms for encryption defined in the *NR Encryption Algorithms* IE in the *NR UE Security Capabilities* IE, plus the mandated support of NEA0 in all UEs (TS 33.401 [18]), do not match any algorithms defined in the configured list of allowed encryption algorithms in the en-gNB (TS 33.401 [18]), the en-gNB shall reject the procedure using the SGNB ADDITION REQUEST REJECT message.

If the supported algorithms for integrity defined in the *NR Integrity Protection Algorithms* IE in the *NR UE Security Capabilities* IE do not match any algorithms defined in the configured list of allowed integrity protection algorithms in the en-gNB (TS 33.401 [18]), the en-gNB shall reject the procedure using the SGNB ADDITION REQUEST REJECT message.

If the en-gNB receives a SGNB ADDITION REQUEST message containing a *SgNB UE X2AP ID* IE that does not match any existing UE Context that has such ID, the en-gNB shall reject the procedure using the SGNB ADDITION REQUEST REJECT message.

If the MeNB has provided the en-gNB for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE and the *Duplication Activation* IE in the SGNB ADDITION REQUEST message, and the en-gNB does not provide the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE and the *LCID* IE to the MeNB in the SGNB ADDITION REQUEST ACKNOWLEDGE message, the MeNB shall assume that PDCP duplication was not configured at the en-gNB and releases duplication resources.

If the en-gNB provides for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE and the *LCID* IE to the MeNB in the SGNB ADDITION REQUEST ACKNOWLEDGE message and the MeNB has not provided the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE and the *Duplication Activation* IE in the SGNB ADDITION REQUEST message, and the MeNB does not trigger the MeNB initiated SgNB Modification procedure to provide the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE and the *Duplication Activation* IE to the SgNB the en-gNB before the SgNB Reconfigurationi Completion procedure was triggered, the en-gNB shall trigger the release of the concerned E-RAB.

Interactions with the SgNB Reconfiguration Completion and SgNB initiated SgNB Release procedure:

If the timer $T_{DCoverall}$ expires before the en-gNB has received the SGNB RECONFIGURATION COMPLETE or the SGNB RELEASE REQUEST message, the en-gNB shall regard the requested RRC connection reconfiguration as being not applied by the UE and shall trigger the SgNB initiated SgNB Release procedure.

Interactions with the MeNB initiated SgNB Release procedure:

If the timer T_{DCprep} expires before the MeNB has received the SGNB ADDITION REQUEST ACKNOWLEDGE message, the MeNB shall regard the SgNB Addition Preparation procedure as being failed and shall trigger the MeNB initiated SgNB Release procedure.

8.7.5 SgNB Reconfiguration Completion

8.7.5.1 General

The purpose of the SgNB Reconfiguration Completion procedure is to provide information to the en-gNB whether the requested configuration was successfully applied by the UE.

The procedure uses UE-associated signalling.

8.7.5.2 Successful Operation



Figure 8.7.5.2-1: SgNB Reconfiguration Complete procedure, successful operation.

The MeNB initiates the procedure by sending the SGNB RECONFIGURATION COMPLETE message to the en-gNB.

The SGNB RECONFIGURATION COMPLETE message may contain information that

- either the UE has successfully applied the configuration requested by the en-gNB. The MeNB may also provide NR *RRCReconfigurationComplete* message in the *MeNB to SgNB Container* IE.
- or the configuration requested by the en-gNB has been rejected. The MeNB shall provide information with sufficient precision in the included *Cause* IE to enable the en-gNB to know the reason for an unsuccessful reconfiguration.

Upon reception of the SGNB RECONFIGURATION COMPLETE message the en-gNB shall stop the timer T_{DCoverall}.

8.7.5.3 Abnormal Conditions

Void.

8.7.6 MeNB initiated SgNB Modification Preparation

8.7.6.1 General

This procedure is used to enable an MeNB to request an en-gNB to modify the UE context at the en-gNB, or to query the current SCG configuration for supporting delta signalling in MeNB initiated SgNB change, or to provide the S-RLF-related information to the en-gNB.

The procedure uses UE-associated signalling.

8.7.6.2 Successful Operation

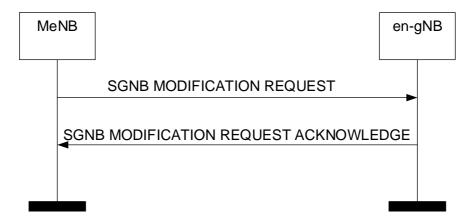


Figure 8.7.6.2-1: MeNB initiated SgNB Modification Preparation, successful operation

The MeNB initiates the procedure by sending the SGNB MODIFICATION REQUEST message to the en-gNB. When the MeNB sends the SGNB MODIFICATION REQUEST message, it shall start the timer T_{DCprep} .

The SGNB MODIFICATION REQUEST message may contain:

- within the UE Context Information IE (if the modification of the UE context at the en-gNB is requested);
 - E-RABs to be added within the *E-RABs To Be Added Item* IE;
 - E-RABs to be modified within the *E-RABs To Be Modified Item* IE;
 - E-RABs to be released within the *E-RABs To Be Released Item* IE;
 - the SgNB UE Aggregate Maximum Bit Rate IE;
- the MeNB to SgNB Container IE;
- the SCG Configuration Query IE;
- the MeNB Resource Coordination Information IE;
- the Requested split SRBs IE;
- the Requested split SRBs release IE.

If the SGNB MODIFICATION REQUEST message contains the *Serving PLMN* IE, the en-gNB may use it for RRM purposes.

If the SGNB MODIFICATION REQUEST message contains the Handover Restriction List IE, the en-gNB shall

- replace the previously provided Handover Restriction List by the received Handover Restriction List in the UE context;
- use this information to select an appropriate NR cell.

If the SgNB UE Aggregate Maximum Bit Rate IE is included in the SGNB MODIFICATION REQUEST message, the en-gNB shall:

- replace the previously provided SgNB UE Aggregate Maximum Bit Rate by the received SgNB UE Aggregate Maximum Bit Rate in the UE context;
- use the received SgNB UE Aggregate Maximum Bit Rate for non-GBR Bearers for the concerned UE as defined in TS 37.340 [32].

The allocation of resources according to the values of the *QCI* IE, *Allocation and Retention Priority* IE or *GBR QoS Information* IE included in the *Full E-RAB Level QoS Parameters* IE or in the *Requested SCG E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

If the SGNB MODIFICATION REQUEST message contains the *MeNB Resource Coordination Information* IE, the engNB should forward it to lower layers and it may use it for the purpose of resource coordination with the MeNB. The en-gNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The en-gNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. If the *MeNB Coordination Assistance Information* IE is contained in the *MeNB Resource Coordination Information* IE, the en-gNB shall, if supported, use the information to determine further coordination of resource utilisation between the en-gNB and the MeNB.

If at least one of the requested modifications is admitted by the en-gNB, the en-gNB shall modify the related part of the UE context accordingly and send the SGNB MODIFICATION REQUEST ACKNOWLEDGE message back to the MeNB.

The en-gNB shall include the E-RABs for which resources have been either added or modified or released at the en-gNB either in the *E-RABs Admitted To Be Added List* IE or the *E-RABs Admitted To Be Modified List* IE or the *E-RABs Admitted To Be Released List* IE. The en-gNB shall include the E-RABs that have not been admitted in the *E-RABs Not Admitted List* IE with an appropriate cause value.

For each E-RAB successfully established or modified or released in the en-gNB, the en-gNB shall report to the MeNB, in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message, the same value in the *EN-DC Resource Configuration* IE as received in the SGNB MODIFICATION REQUEST message.

The en-gNB shall, if included, choose the ciphering algorithm based on the information in the *NR UE Security Capabilities* IE and locally configured priority list of AS encryption algorithms and apply the key indicated in the *SgNB Security Key* IE as specified in the TS 33.401 [18].

For each E-RAB for which allocation of the PDCP entity is requested at the en-gNB:

- if applicable, the MeNB may propose to apply forwarding of downlink data by including the *DL Forwarding* IE within the *E-RABs To Be Added Item* IE of the SGNB MODIFICATION REQUEST message. For each E-RAB that it has decided to admit, the en-gNB may include the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs Admitted To Be Added Item* IE of the SGNB MODIFICATION REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this bearer. The MeNB may also provide for an applicable E-RAB to be released the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SGNB MODIFICATION REQUEST message.
- if applicable, the en-gNB may include for each bearer in the *E-RABs Admitted To Be Added List* IE in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message the *UL Forwarding GTP Tunnel Endpoint* IE to indicate that it requests data forwarding of uplink packets to be performed for that bearer.
- if applicable, the en-gNB may include for each bearer in the *E-RABs Admitted To Be Modified* List IE which is configured with the SN terminated split bearer option in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message the *UL Configuration* IE to indicate that the MCG UL configuration of the UE has changed.
- if applicable, the en-gNB may include for each bearer in the *E-RABs Admitted To Be Added List* IE in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message the *UL PDCP SN Length* IE and the *DL PDCP SN Length* IE to indicate the PDCP SN length for that bearer.
- If the *Bearer Type* IE for the concerned E-RAB is received by the en-gNB and is set to"non IP", then the en-gNB shall, if supported, not perform header compression for the concerned E-RAB.

For each E-RAB configured with SCG resources and the PDCP entity is hosted by the MeNB and

- requested to be modified,
 - if the SGNB MODIFICATION REQUEST message includes the *MeNB UL GTP Tunnel Endpoint at PDCP* IE in the *E-RABs To Be Modified Item* IE, the en-gNB shall act as specified in TS 37.340 [32].
 - if the SGNB MODIFICATION REQUEST message contains the *MeNB UL GTP Tunnel Endpoint at PDCP* IE the en-gNB shall use it as the new UL X2-U address.
 - the en-gNB may include in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message the *SgNB DL GTP Tunnel Endpoint at SCG* IE.

If, dependent on the configured bearer type, the *Full E-RAB Level QoS Parameters* IE or the *Maximum MCG admittable E-RAB Level QoS Parameters* IE or the *Requested SCG E-RAB level QoS Parameters* IE are included in the SGNB MODIFICATION REQUEST message for an E-RAB to be modified the en-gNB shall allocate respective resources and provide corresponding radio configuration information within the *SgNB to MeNB Container* IE as described in TS 37.340 [32].

If the SGNB MODIFICATION REQUEST message contains, for an E-RAB to be modified which is configured with the PDCP entity in the en-gNB, the *S1 UL GTP Tunnel Endpoint* IE, the en-gNB shall use it as the new UL S1-U address.

If the SGNB MODIFICATION REQUEST message contains an E-RAB to be modified which is configured with the MN terminated split bearer option, the MeNB may include the *UL Configuration* IE to indicate that the SCG UL configuration of the UE has changed.

If the SGNB MODIFICATION REQUEST message contains for an E-RAB to be modified which is configured with the PDCP enition in the en-gNB and MCG resources the *MeNB DL GTP Tunnel Endpoint at MCG* IE the en-gNB shall use it as the DL X2-U address.

If the SGNB MODIFICATION REQUEST message contains the *Subscriber Profile ID for RAT/Frequency Priority* IE, the en-gNB may use it for RRM purposes.

For an E-RAB to be modified which is configured with the PDCP entity in the en-gNB the en-gNB may include in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message the *S1 DL GTP Tunnel Endpoint at the SgNB* IE.

If the SGNB MODIFICATION REQUEST ACKNOWLEDGE message contains the *SgNB Resource Coordination Information* IE, the MeNB may use it for the purpose of resource coordination with the en-gNB. The MeNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The MeNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. If the *SgNB Coordination Assistance Information* IE is contained in the *SgNB Resource Coordination Information* IE, the MeNB shall, if supported, use the information to determine further coordination of resource utilisation between the en-gNB and the MeNB.

Upon reception of the SGNB MODIFICATION REQUEST ACKNOWLEDGE message the MeNB shall stop the timer T_{DCprep}. If the SGNB MODIFICATION REQUEST ACKNOWLEDGE message has included the *SgNB to MeNB Container* IE the MeNB is then defined to have a Prepared SgNB Modification for that X2 UE-associated signalling.

If the *SCG Configuration Query* IE is included in the SGNB MODIFICATION REQUEST message, the en-gNB shall provide corresponding radio configuration information within the *SgNB to MeNB Container* IE as described in TS 37.340 [32].

If the SGNB MODIFICATION REQUEST message contains the *Requested split SRBs* IE, the en-gNB may use it to add split SRBs. If the SGNB MODIFICATION REQUEST message contains the *Requested split SRBs release* IE, the en-gNB may use it to release split SRBs.

If the en-gNB receives for an E-RAB to be setup for which the PDCP entity is allocated at the MeNB the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE and the *Duplication Activation* IE in the SGNB MODIFICATION REQUEST message, it may provide the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE and the *LCID* IE to the MeNB in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message if PDCP duplication is configured at the en-gNB.

If the SGNB MODIFICATION REQUEST message contains the *RLC Status* IE, the en-gNB shall assume that RLC has been reestablished at the MeNB and may trigger PDCP data recovery.

If the en-gNB applied a full configuration or delta configuration, e.g. as part of a mobility procedure involving a change of DU, the en-gNB shall inform the MeNB by including the *RRC config indication* IE in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message.

If SGNB MODIFICATION REQUEST message contains the *UL PDCP SN Length* IE and the *DL PDCP SN Length* IE, the en-gNB shall, if supported, store this information and use it for lower layer configuration of the concerned MN terminated bearer.

If the *RLC Mode* IE is included for an E-RAB within the *E-RABs To be Added List* IE in the SGNB MODIFICATION REQUEST message, it indicates the mode that the MeNB used for the E-RAB when it was hosted at the MeNB.

If the SGNB MODIFICATION REQUEST message contains the *MeNB Cell ID* IE, the en-gNB may search for the target NR cell among the NR neighbour cells of the E-UTRAN cell indicated in *MeNB Cell ID* IE, as specified in the TS 37.340 [32].

If the SGNB MODIFICATION REQUEST ACKNOWLEDGE message contains the *RLC Status* IE, the MeNB shall assume that RLC has been reestablished at the en-gNB and may trigger PDCP data recovery.

The SgNB may include the *Location Information at SgNB* IE in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message, if respective information is available at the SgNB.

If the *Location Information at SgNB Reporting* IE set to "pscell" is included in the SGNB MODIFICATION REQUEST, the SgNB shall start providing information about the current location of the UE. If the *Location Information at SgNB* IE is included in the SGNB MODIFICATION REQUEST ACKNOWLEDGE, the MeNB shall store the included information so that it may be transferred towards the MME.

Interactions with the MeNB initiated SgNB Modification procedure:

If the en-gNB provides for an E-RAB to be setup for which the PDCP entity is allocated at the MeNB the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE and the *LCID* IE to the MeNB in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message and the MeNB has not provided the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE and the *Duplication Activation* IE in the SGNB MODIFICATION REQUEST message, the MeNB shall trigger the MeNB initiated SgNB Modification procedure to provide the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE and the *Duplication Activation* IE to the SgNB.

Interactions with the SgNB Reconfiguration Completion procedure:

If the en-gNB admits a modification of the UE context requiring the MeNB to report about the success of the RRC connection reconfiguration procedure, the en-gNB shall start the timer T_{DCoverall} when sending the SGNB MODIFICATION REQUEST ACKNOWLEDGE message to the MeNB. The reception of the SGNB RECONFIGURATION COMPLETE message shall stop the timer T_{DCoverall}.

Interaction with the Activity Notification procedure

Upon receiving an SGNB MODIFICATION REQUEST message containing the *Desired Activity Notification Level* IE, the en-gNB shall, if supported, use this information to decide whether to trigger subsequent SgNB Activity Notification procedures, or stop or modify ongoing triggering of these procedures due to a previous request.

8.7.6.3 Unsuccessful Operation



Figure 8.7.6.3-1: MeNB initiated SgNB Modification Preparation, unsuccessful operation

If the en-gNB does not admit any modification requested by the MeNB, or a failure occurs during the MeNB initiated SgNB Modification Preparation, the en-gNB shall send the SGNB MODIFICATION REQUEST REJECT message to the MeNB. The message shall contain the *Cause* IE with an appropriate value.

If the en-gNB receives a SGNB MODIFICATION REQUEST message containing the *MeNB to SgNB Container* IE that does not include required information as specified in TS 38.331 [31], the en-gNB shall send the SGNB MODIFICATION REQUEST REJECT message to the MeNB.

8.7.6.4 Abnormal Conditions

If the en-gNB receives a SGNB MODIFICATION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RABs To Be Added List* IE and/or the *E-RABs To Be Modified List* IE) set to the same value, the en-gNB shall not admit the action requested for the corresponding E-RABs.

If the en-gNB receives an SGNB MODIFICATION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RAB To Be Released List* IE) set to the same value, the en-gNB shall initiate the release of one corresponding E-RAB and ignore the duplication of the instances of the selected corresponding E-RABs.

If the en-gNB receives a SGNB MODIFICATION REQUEST message containing, dependent on the configured bearer type, the *Full E-RAB Level QoS Parameters* IE or the *Requested SCG E-RAB Level QoS Parameters* IE which contains a *QCI* IE indicating a GBR bearer (as defined in TS 23.203 [13]), and which does not contain the *GBR QoS Information* IE, the en-gNB shall not admit the corresponding E-RAB.

If the supported algorithms for encryption defined in the *NR Encryption Algorithms* IE in the *NR UE Security Capabilities* IE in the *UE Context Information* IE, plus the mandated support of NEA0 in all UEs (TS 33.401 [18]), do not match any algorithms defined in the configured list of allowed encryption algorithms in the en-gNB (TS 33.401 [18]), the en-gNB shall reject the procedure using the SGNB MODIFICATION REQUEST REJECT message.

If the supported algorithms for integrity defined in the *NR Integrity Protection Algorithms* IE in the *NR UE Security Capabilities* IE in the *UE Context Information* IE do not match any algorithms defined in the configured list of allowed integrity protection algorithms in the en-gNB (TS 33.401 [18]), the en-gNB shall reject the procedure using the SGNB MODIFICATION REQUEST REJECT message.

If the timer T_{DCprep} expires before the MeNB has received the SGNB MODIFICATION REQUEST ACKNOWLEDGE message, the MeNB shall regard the MeNB initiated SgNB Modification Preparation procedure as being failed and shall release the UE Context at the en-gNB.

If the MeNB has provided the en-gNB for an E-RAB to be setupr which the PDCP entity is allocated at the MeNB the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE in the SGNB MODIFICATION REQUEST message, and the en-gNB does not provide the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE to the MeNB in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message, the MeNB shall assume that PDCP duplication was not configured at the en-gNB and releases duplication resources.

If the en-gNB provides for an E-RAB to be setup for which the PDCP entity is allocated at the MeNB the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE to the MeNB in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message and the MeNB has not provided the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE in the SGNB MODIFICATION REQUEST message, and the MeNB does not trigger the MeNB initiated SgNB Modification procedure to provide the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE to the SgNB the engNB before the SgNB Reconfigurationi Completion procedure was triggered, the en-gNB shall trigger the release of the concerned E-RAB.

Interactions with the SgNB Reconfiguration Completion and SgNB initiated SgNB Release procedure:

If the timer T_{DCoverall} expires before the en-gNB has received the SGNB RECONFIGURATION COMPLETE or the SGNB RELEASE REQUEST message, the en-gNB shall regard the requested modification RRC connection reconfiguration as being not applied by the UE and shall trigger the SgNB initiated SgNB Release procedure.

Interaction with the SgNB initiated SgNB Modification Preparation procedure:

If the MeNB, after having initiated the MeNB initiated SgNB Modification procedure, receives the SGNB MODIFICATION REQUIRED message, the MeNB shall refuse the SgNB initiated SgNB Modification procedure with an appropriate cause value in the *Cause* IE.

If the MeNB has a Prepared SgNB Modification and receives the SGNB MODIFICATION REQUIRED message, the MeNB shall respond with the SGNB MODIFICATION REFUSE message to the en-gNB with an appropriate cause value in the *Cause* IE.

Interactions with the MeNB initiated SgNB Release procedure:

If the timer T_{DCprep} expires before the MeNB has received the SGNB MODIFICATION REQUEST ACKNOWLEDGE message, the MeNB shall regard the SgNB Modification Preparation procedure as being failed and may trigger the MeNB initiated SgNB Release procedure.

8.7.7 SgNB initiated SgNB Modification

8.7.7.1 General

This procedure is used by the en-gNB to modify the UE context in the en-gNB.

The procedure uses UE-associated signalling.

8.7.7.2 Successful Operation

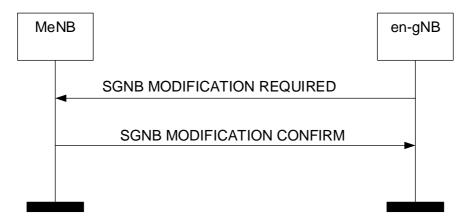


Figure 8.7.7.2-1: SgNB initiated SgNB Modification, successful operation.

The en-gNB initiates the procedure by sending the SGNB MODIFICATION REQUIRED message to the MeNB. When the en-gNB sends the SGNB MODIFICATION REQUIRED message, it shall start the timer T_{DCoverall}.

The SGNB MODIFICATION REQUIRED message may contain

- the PDCP Change Indication IE;
- the SgNB to MeNB Container IE.
- E-RABs to be modified within the *E-RABs To Be Modified Item* IE;
- E-RABs to be released within the *E-RABs To Be Released Item* IE;
- the SgNB Resource Coordination Information IE.

For the SN terminated split bearers, the en-gNB may include in the SGNB MODIFICATION REQUIRED message the *UL Configuration* IE to indicate that the MCG UL configuration of the UE has changed.

The en-gNB may include for each bearer in the *E-RABs to Be Modified List* IE in the SGNB MODIFICATION REQUIRED message the *New DRB ID Request* IE to request the MeNB to assign a new DRB ID for that bearer.

If the MeNB is able to perform the change requested by the en-gNB, the MeNB shall send the SGNB MODIFICATION CONFIRM message to the en-gNB. The SGNB MODIFICATION CONFIRM message may contain the *MeNB to SgNB Container* IE.

If the SGNB MODIFICATION REQUIRED message contains the *SgNB Resource Coordination Information* IE, the MeNB may use it for the purpose of resource coordination with the en-gNB. The MeNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The MeNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. If the *SgNB Coordination Assistance Information* IE is contained in the *SgNB Resource Coordination Information* IE, the MeNB shall, if supported, use the information to determine further coordination of resource utilisation between the en-gNB and the MeNB.

If the en-gNB applied a full configuration or delta configuration, e.g. as part of a mobility procedure involving a change of DU, the en-gNB shall inform the MeNB by including the *RRC config indication* IE in the SGNB MODIFICATION REQUIRED message.

For each E-RAB successfully modified or released as requested by the en-gNB, the MeNB shall inform the en-gNB, in the SGNB MODIFICATION CONFIRM message, the same value in the *EN-DC Resource Configuration* IE as received in the SGNB MODIFICATION REQUIRED message.

Upon reception of the SGNB MODIFICATION CONFIRM message the en-gNB shall stop the timer T_{DCoverall}.

If the SGNB MODIFICATION CONFIRM message contains the *MeNB Resource Coordination Information* IE, the engNB should forward it to lower layers and it may use it for the purpose of resource coordination with the MeNB. The en-gNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The en-gNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. If the *MeNB Coordination Assistance Information* IE is contained in the *MeNB Resource Coordination Information* IE, the en-gNB shall, if supported, use the information to determine further coordination of resource utilisation between the en-gNB and the MeNB.

If the MeNB receives for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE in the SGNB MODIFICATION REQUIRED message, it shall provide the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE to the en-gNB in the SGNB MODIFICATION CONFIRM message. If the *LCID* IE is included in the SGNB MODIFICATION REQUIRED message, the MeNB should take it into account.

If the SGNB MODIFICATION REQUIRED message contains the *RLC Status* IE, the MeNB shall assume that RLC has been reestablished at the en-gNB and may trigger PDCP data recovery.

If the *RLC Mode* IE is included for an E-RAB within the *E-RABs To Be Released List* IE (for E-RABs hosted at the engNB) in the SGNB MODIFICATION REQUIRED message, it indicates the mode that the en-gNB used for the E-RAB when it was hosted at the en-gNB.

The MeNB shall include only E-RABs with the following IE in E-RABs Admitted To Be Modified List IE:

- the Secondary MeNB UL GTP Tunnel Endpoint at PDCP IE.

If the *Location Information at SgNB* IE is included in the SGNB MODIFICATION REQUIRED, the MeNB shall store the included information so that it may be transferred towards the MME.

Interaction with the MeNB initiated SgNB Modification Preparation procedure:

If applicable, as specified in TS 37.340 [32], the en-gNB may receive, after having initiated the SgNB initiated SgNB Modification procedure, the SGNB MODIFICATION REQUEST message including the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released List* IE.

If applicable, as specified in TS 37.340 [32], the en-gNB may receive, after having initiated the SgNB initiated SgNB Modification procedure, the SGNB MODIFICATION REQUEST message including the *SgNB Security Key* IE within the *UE Context Information* IE.

If applicable, as specified in TS 37.340 [32], the en-gNB may receive, after having initiated the SgNB initiated SgNB Modification procedure, the SGNB MODIFICATION REQUEST message including the *measGapConfig* IE as defined in TS 38.331 [31] within the *MeNB to SgNB Container* IE.

The en-gNB may receive, after having initiated the SgNB initiated SgNB modification procedure including the *New DRB ID Request* IE for an SN terminated bearer within the *E-RABs To Be Modified List* IE, the SGNB MODIFICATION REQUEST message to release and add the same bearer with a new DRB ID or with the same DRB ID but together with the *SgNB Security Key* IE within the *UE Context Information* IE.

8.7.7.3 Unsuccessful Operation

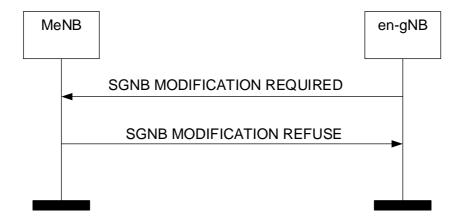


Figure 8.7.7.3-1: SgNB initiated SgNB Modification, unsuccessful operation.

In case the requested modification cannot be performed successfully the MeNB shall respond with the SGNB MODIFICATION REFUSE message to the en-gNB with an appropriate cause value in the *Cause* IE.

The MeNB may also provide configuration information in the MeNB to SgNB Container IE.

8.7.7.4 Abnormal Conditions

If the timer T_{DCoverall} expires before the en-gNB has received the SGNB MODIFICATION CONFIRM or the SGNB MODIFICATION REFUSE message, the en-gNB shall regard the requested modification as failed and may take further actions like triggering the SgNB initiated SgNB Release procedure to release all en-gNB resources allocated for the UE.

If the value received in the *E-RAB ID* IE of any of the *E-RABs To Be Released Items* IE is not known at the MeNB, the MeNB shall regard the procedure as failed and may take appropriate actions like triggering the MeNB initiated SgNB Release procedure.

If the en-gNB does not receives for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE to the en-gNB in the SGNB MODIFICATION CONFIRM message although the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE was provided to the MeNB in the SGNB MODIFICATION REQUIRED message, it shall assume the setup of the secondary X2-U bearer as being failed.

Interaction with the MeNB initiated SgNB Modification Preparation procedure:

If the en-gNB, after having initiated the SgNB initiated SgNB Modification procedure, receives the SGNB MODIFICATION REQUEST message including other IEs than an applicable *SgNB Security Key* IE and/or applicable forwarding addresses or applicable measurement gap pattern or information applicable to release and add the same bearer with different DRB ID, the en-gNB shall

- regard the SgNB initiated SgNB Modification Procedure as being failed;
- stop the T_{DCoverall}, which was started to supervise the SgNB initiated SgNB Modification procedure;
- be prepared to receive the SGNB MODIFICATION REFUSE message from the MeNB and;
- continue with the MeNB initiated SgNB Modification Preparation procedure as specified in section 8.7.6.

Interaction with the MeNB initiated handover procedure:

If the MeNB, after having initiated the handover procedure, receives the SGNB MODIFICATION REQUIRED message, the MeNB shall refuse the SgNB modification procedure with an appropriate cause value in the *Cause* IE.

8.7.8 SgNB Change

8.7.8.1 General

This procedure is used by the en-gNB to change to another en-gNB.

The procedure uses UE-associated signalling.

8.7.8.2 Successful Operation



Figure 8.7.8.2-1: SgNB Change, successful operation.

The en-gNB initiates the procedure by sending the SGNB CHANGE REQUIRED message to the MeNB including the *Target SgNB ID Information IE*. When the en-gNB sends the SGNB CHANGE REQUIRED message, it shall start the timer T_{DCoverall}.

The SGNB CHANGE REQUIRED message may contain

- the SgNB to MeNB Container IE.

If the MeNB is able to perform the change requested by the en-gNB, the MeNB shall send the SGNB CHANGE CONFIRM message to the en-gNB. For each E-RAB configured with the PDCP entity in the en-gNB, the MeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE to indicate that it requests data forwarding of uplink and downlink packets to be performed for that bearer.

The en-gNB may start data forwarding and stop providing user data to the UE and shall stop the timer $T_{DCoverall}$ upon reception of the SGNB CHANGE CONFIRM message.

8.7.8.3 Unsuccessful Operation

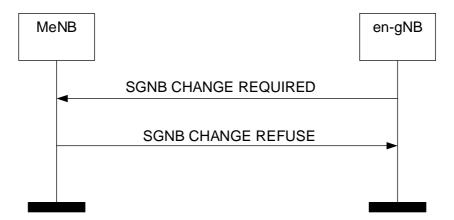


Figure 8.7.8.3-1: SgNB Change, unsuccessful operation.

In case the request change cannot be performed successfully the MeNB shall respond with the SGNB CHANGE REFUSE message to the en-gNB with an appropriate cause value in the *Cause* IE.

8.7.8.4 Abnormal Conditions

If the timer $T_{DCoverall}$ expires before the en-gNB has received the SGNB CHANGE CONFIRM or the SGNB CHANGE REFUSE message, the en-gNB shall regard the requested change as failed and may take further actions like triggering the SgNB initiated SgNB Release procedure to release all en-gNB resources allocated for the UE.

Interaction with the MeNB initiated handover procedure:

If the MeNB, after having initiated the handover procedure, receives the SGNB CHANGE REQUIRED message, the MeNB shall refuse the SgNB change procedure with an appropriate cause value in the Cause IE.

8.7.9 MeNB initiated SgNB Release

8.7.9.1 General

The MeNB initiated SgNB Release procedure is triggered by the MeNB to initiate the release of the resources for a specific UE.

The procedure uses UE-associated signalling.

8.7.9.2 Successful Operation

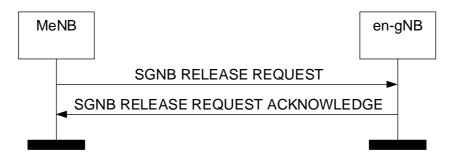


Figure 8.7.9.2-1: MeNB initiated SgNB Release, successful operation

The MeNB initiates the procedure by sending the SGNB RELEASE REQUEST message. Upon reception of the SGNB RELEASE REQUEST message the en-gNB shall stop providing user data to the UE. The *SgNB UE X2AP ID* IE shall be included if it has been obtained from the en-gNB.

If the bearer context in the en-gNB was configured with the PDCP entity in the en-gNB, for E-RAB for which the MeNB requests forwarding of uplink/downlink data, the MeNB includes the *UL Forwarding GTP Tunnel Endpoint/ DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SGNB RELEASE REQUEST message to indicate that the en-gNB should perform data forwarding of uplink/downlink packets for that E-RAB.

Upon reception of the SGNB RELEASE REQUEST message containing *UE Context Kept Indicator* IE set to "True", the en-gNB shall, if supported, only initiate the release of the resources related to the UE-associated signalling connection between the MeNB and the en-gNB.

If the en-gNB confirms the request to release en-gNB resources it shall send the SGNB RELEASE REQUEST ACKNOWLEDGE message to the MeNB.

If the *RLC Mode* IE is included for an E-RAB within the *E-RABs Admitted To Be Released List* IE (for E-RABs hosted at the en-gNB) in the SGNB RELEASE REQUEST ACKNOWLEDGE message, it indicates the mode that the en-gNB used for the E-RAB when it was hosted at the en-gNB.

If the MeNB did not include the *SgNB UE X2AP ID* IE in the SGNB RELEASE REQUEST message, the MeNB shall ignore the *SgNB UE X2AP ID* IE in the SGNB RELEASE REQUEST ACKNOWLEDGE message.

Upon successful completion of the procedure, the MeNB shall start counting time, so that information regarding time since Secondary Node Release may be transferred towards the MME as specified in TS 36.413 [4].

Interaction with SN Status Transfer procedure:

If the *UE Context Kept Indicator* IE set to "True" and the *E-RABs transferred to MeNB* IE are included in the SGNB RELEASE REQUEST message, then the en-gNB shall, if supported, include the uplink/downlink PDCP SN and HFN status for the listed E-RABs, as specified in TS 37.340 [32].

8.7.9.3 Unsuccessful Operation

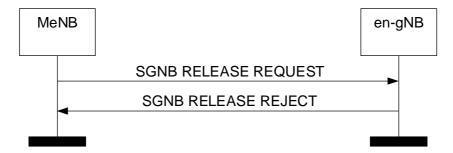


Figure 8.7.9.3-1: MeNB initiated SgNB Release, unsuccessful operation

If the en-gNB cannot confirm the request to release en-gNB resources it shall send the SGNB RELEASE REQUEST REJECT message to the MeNB with an appropriate cause indicated in the *Cause* IE.

If the MeNB did not include the *SgNB UE X2AP ID* IE in the SGNB RELEASE REQUEST message, the MeNB shall ignore the *SgNB UE X2AP ID* IE in the SGNB RELEASE REQUEST REJECT message.

8.7.9.4 Abnormal Conditions

If the SGNB RELEASE REQUEST message refer to a context that does not exist, the en-gNB shall ignore the message.

When the MeNB has initiated the procedure and did not include the *SgNB UE X2AP ID* IE the MeNB shall regard the resources for the UE at the en-gNB as being fully released.

Interactions with the UE Context Release procedure:

If the MeNB does not receive the reply from the en-gNB before it has to relase the EN-DC connection, or it receives SGNB RELEASE REQUEST REJECT, it may trigger the UE Context Release procedure. If the en-gNB received the UE CONTEXT RELEASE right after receiving the SGNB RELEASE REQUEST (and before or after responding to it), the en-gNB shall consider the related MeNB initiated SgNB Release procedure as being the resolution of abnormal conditions and release the related UE context immediately.

8.7.10 SgNB initiated SgNB Release

8.7.10.1 General

This procedure is triggered by the en-gNB to initiate the release of the resources for a specific UE.

The procedure uses UE-associated signalling.

8.7.10.2 Successful Operation



Figure 8.7.10.2-1: SgNB initiated SgNB Release, successful operation.

The en-gNB initiates the procedure by sending the SGNB RELEASE REQUIRED message to the MeNB.

Upon reception of the SGNB RELEASE REQUIRED message, the MeNB replies with the SGNB RELEASE CONFIRM message. For each E-RAB configured with the PDCP entity in the en-gNB, the MeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE to indicate that it requests data forwarding of uplink and downlink packets to be performed for that bearer.

If the *RLC Mode* IE is included for an E-RAB within the *E-RABs To Be Released List* IE (for E-RABs hosted at the engNB) in the SGNB RELEASE REQUIRED message, it indicates the mode that the en-gNB used for the E-RAB when it was hosted at the en-gNB.

If the *SgNB to MeNB Container* IE is included in the SGNB RELEASE REQUIRED message, the MeNB may use the contained information to apply delta configuration.

The en-gNB may start data forwarding and stop providing user data to the UE upon reception of the SGNB RELEASE CONFIRM message.

Upon successful completion of the procedure, the MeNB shall start counting time, so that information regarding time since Secondary Node Release may be transferred towards the MME as specified in TS 36.413 [4].

8.7.10.3 Unsuccessful Operation

Not applicable.

8.7.10.4 Abnormal Conditions

Void.

8.7.11 SgNB Counter Check

8.7.11.1 General

This procedure is initiated by the en-gNB to request the MeNB to execute a counter check procedure to verify the value of the PDCP COUNTs associated with SN terminated bearers.

The procedure uses UE-associated signalling.

8.7.11.2 Successful Operation



Figure 8.7.11.2-1: SgNB Counter Check procedure, successful operation.

The en-gNB initiates the procedure by sending the SGNB COUNTER CHECK REQUEST message to the MeNB.

Upon reception of the SGNB COUNTER CHECK REQUEST message, the MeNB may perform the RRC counter check procedure as defined in TS 33.401 [18].

8.7.11.3 Unsuccessful Operation

Not applicable.

8.7.11.4 Abnormal Conditions

Not applicable.

8.7.12 RRC Transfer

8.7.12.1 General

The purpose of the RRC Transfer procedure is to deliver a PDCP-C PDU encapsulating an LTE RRC message to the en-gNB so that it may then be forwarded to the UE, or from the en-gNB, if it was received from the UE. Delivery status may also be provided from the en-gNB to the MeNB using the RRC Transfer.

The procedure is also to enable transfer of the NR RRC message container with the NR measurements from the MeNB to the en-gNB, when received from the UE.

The procedure is also to enable transfer of the NR RRC message container with the NR failure information from the MeNB to the en-gNB, when received from the UE.

The procedure uses UE-associated signalling.

8.7.12.2 Successful Operation



Figure 8.7.12.2-1: RRC Transfer procedure, successful operation.

Either the MeNB initiates the procedure by sending the RRC TRANSFER message to the en-gNB or the en-gNB initiates the procedure by sending the RRC TRANSFER message to the MeNB.

If the en-gNB receives an RRC TRANSFER message which includes neither the *RRC Container* IE in the *Split SRB* IE nor the *RRC container* IE in *NR UE Report* IE, it shall ignore the message. If the en-gNB receives an RRC TRANSFER message with the Delivery Status IE, it shall ignore the message. If the en-gNB receives the *RRC Container* IE in the *Split SRB* IE, it shall deliver the contained PDCP-C PDU encapsulating an RRC message to the UE.

If the MeNB receives the *Delivery Status* IE in the *split SRB* IE the MeNB shall consider RRC messages up to the indicated NR PDCP SN as having been successfully delivered (as defined in TS 36.322 [40]) to the UE by the en-gNB.

8.7.12.3 Abnormal Conditions

In case of the split SRBs, the receiving node may ignore the message, if the MeNB has not indicated possibility of RRC transfer at the bearer setup.

8.7.13 Secondary RAT Data Usage Report

8.7.13.1 General

This procedure is initiated by the en-gNB to report secondary RAT data volume.

The procedure uses UE-associated signalling.

8.7.13.2 Successful Operation



Figure 8.7.13.2-1: Secondary RAT Data Usage Report procedure, successful operation.

The en-gNB initiates the procedure by sending the SECONDARY RAT DATA USAGE REPORT message to the MeNB.

8.7.13.3 Unsuccessful Operation

Not applicable.

8.7.13.4 Abnormal Conditions

Not applicable.

8.7.14 Partial reset of EN-DC

8.7.14.1 General

This procedure is triggered by the en-gNB or the MeNB to initiate the reset of the resources for selected UEs.

The procedure uses non UE-associated signalling.

8.7.14.2 Successful Operation

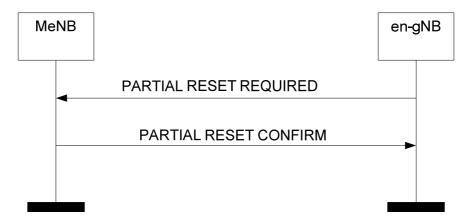


Figure 8.7.14.2-1: en-gNB initiated Partial Reset of EN-DC, successful operation.

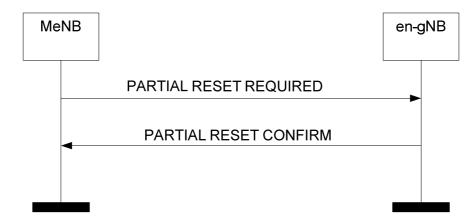


Figure 8.7.14.2-2: eNB initiated Partial Reset of EN-DC, successful operation.

The en-gNB or MeNB initiates the procedure by sending the PARTIAL RESET REQUIRED message to the MeNB or the en-gNB.

In case of the eNB-initiated Partial Reset, at reception of the PARTIAL RESET REQUIRED message, the en-gNB node shall release all allocated resources on X2 and Uu related to the UE association(s) indicated in the PARTIAL RESET REQUIRED message and remove the indicated UE contexts including X2AP ID.

In case of the en-gNB-initiated Partial Reset, at reception of the PARTIAL RESET REQUIRED message, the MeNB may decide to release all allocated resources on X2 and Uu related to the UE association(s) indicated in the PARTIAL RESET REQUIRED message and remove the indicated UE contexts including X2AP ID, or to reconfigure the UEs for MN-terminated MCG bearers.

After the receiving node has released or reconfigured all assigned X2 resources and the UE X2AP IDs for all indicated UE associations which can be used for new UE-associated logical X2-connections over the X2 interface, the receiving node shall respond with the PARTIAL RESET CONFIRM message. The node receiving the request does not need to wait for the release or reconfiguration of radio resources to be completed before returning the PARTIAL RESET CONFIRM message.

The node initiating the procedure shall include the *SgNB UE X2AP ID* IE in the PARTIAL RESET REQUIRED message if it has already been allocated for the UE. The node receiving the request shall use the *SgNB UE X2AP ID* IE (if included) and/or the *MeNB UE S1AP ID* IE (and the *MeNB UE S1AP ID Extension* IE, if included) to identify the UE association(s) to be released. If the *SgNB UE X2AP ID* IE was included in the PARTIAL RESET REQUIRED message, the receiving node shall include it also in the PARTIAL RESET CONFIRM message.

The node receiving the request shall include in the PARTIAL RESET CONFIRM message, for each UE association to be released, the same list of UE-associated logical X2-connections over X2. The list shall be in the same order as received in the PARTIAL RESET REQUIRED message and shall include also unknown UE-associated logical X2-connections.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the PARTIAL RESET REQUIRED message and the PARTIAL RESET CONFIRM message shall contain the *Interface Instance Indication* IE to identify the corresponding interface instance.

Interactions with other procedures:

If the PARTIAL RESET REQUIRED message is received, any other ongoing procedure (except for a Reset or another Partial Reset of EN-DC procedures) on the same X2 interface related to a UE association, indicated in the PARTIAL RESET REQUIRED message, shall be aborted.

8.7.14.3 Unsuccessful Operation

Not applicable.

8.7.14.4 Abnormal Conditions

Void.

8.7.15 E-UTRA – NR Cell Resource Coordination

8.7.15.1 General

The purpose of the E-UTRA – NR Cell Resource Coordination procedure is to enable coordination of radio resource allocation between an eNB and an en-gNB that are sharing spectrum and whose coverage areas are fully or partially overlapping. During the procedure, the eNB and en-gNB shall exchange their intended resource allocations for data traffic, and, if possible, converge to a shared resource. The procedure is only to be used for the purpose of E-UTRA – NR spectrum sharing.

The procedure uses non-UE-associated signalling.

8.7.15.2 Successful Operation

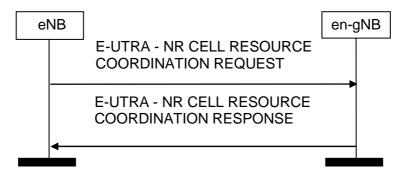


Figure 8.7.15.2-1: eNB-initiated E-UTRA – NR Cell Resource Coordination request, successful operation

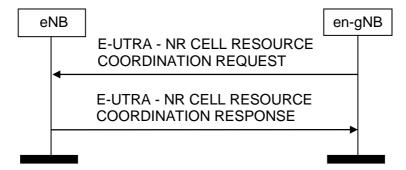


Figure 8.7.15.2-2: en-gNB-initiated E-UTRA – NR Cell Resource Coordination request, successful operation

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the E-UTRA – NR CELL RESOURCES COORDINATION REQUEST message and the E-UTRA – NR CELL RESOURCES COORDINATION RESPONSE message shall contain the *Interface Instance Indication* IE to identify the corresponding interface instance.

eNB initiated E-UTRA - NR Cell Resource Coordination:

An eNB initiates the procedure by sending the E-UTRA – NR CELL RESOURCE COORDINATION REQUEST message to an en-gNB over the X2 interface. The en-gNB extracts the *Data Traffic Resource Indication* IE and it replies by sending the E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE message. The en-gNB shall calculate the full eNB resource allocation by combining the *Data Traffic Resource Indication* IE and the *Protected E-UTRA Resource Indication* IE that were most recently received from the eNB.

In case of conflict between the most recently received *Data Traffic Resource Indication* IE and the most recently received *Protected E-UTRA Resource Indication* IE, the en-gNB shall give priority to the *Protected E-UTRA Resource Indication* IE.

If the *Initiating Node Type* is eNB, then the E-UTRA – NR CELL RESOURCE COORDINATION REQUEST message shall contain at least one *EUTRA Cell ID* in the List of E-UTRA Cells in NR Coordination Request. If the *Initiating Node Type* is en-gNB, then the E-UTRA – NR CELL RESOURCE COORDINATION REQUEST message shall contain at least one NR-Cell ID in the List of NR Cells in NR Coordination Request.

en-gNB initiated E-UTRA - NR Cell Resource Coordination:

An en-gNB initiates the procedure by sending the E-UTRA – NR CELL RESOURCE COORDINATION REQUEST message to an eNB. The eNB replies with the E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE message. The en-gNB shall calculate the full eNB resource allocation by combining the *Data Traffic Resource Indication* IE and the *Protected E-UTRA Resource Indication* IE that were most recently received from the eNB.

In case of conflict between the most recently received *Data Traffic Resource Indication* IE and the most recently received *Protected E-UTRA Resource Indication* IE, the en-gNB shall give priority to the *Protected E-UTRA Resource Indication* IE.

8.7.16 SgNB Activity Notification

8.7.16.1 General

The purpose of the SgNB Activity Notification procedure is to allow an en-gNB to send a notification to an eNB concerning user data traffic activity of already established E-RABs. The procedure uses UE-associated signalling.

8.7.16.2 Successful Operation



Figure 8.7.16.2-1: Activity Notification procedure, successful operation

The en-gNB initiates the procedure by sending an SGNB ACTIVITY NOTIFICATION message to the MeNB.

The SGNB ACTIVITY NOTIFICATION message may contain notification for UE context level user plane activity in the *UE Context level user plane activity report* IE.

The SGNB ACTIVITY NOTIFICATION message may contain notification for activity of E-RABs.

8.7.16.3 Abnormal Conditions

Void.

8.7.17 gNB Status Indication

8.7.17.1 General

The purpose of the gNB Status Indication procedure is to inform the eNB that the en-gNB is overloaded so that overload reduction actions can be applied. The procedure uses non-UE associated signalling.

8.7.17.2 Successful Operation



Figure 8.7.17.2-1: gNB Status Indiciation procedure, successful operation

If the *gNB Overload Information* IE in the GNB STATUS INDICATION message is set to "overloaded", the eNB shall apply overload reduction actions until it receives a subsequent GNB STATUS INDICATION message with *gNB Overload Information* IE set to "not-overloaded".

The detailed overload reduction policy is up to eNB implementation.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the GNB STATUS INDICATION message shall contain the *Interface Instance Indication* IE to identify the corresponding interface instance.

8.7.17.3 Abnormal Conditions

Void.

8.7.18 EN-DC Configuration Transfer

8.7.18.1 General

The purpose of the EN-DC Configuration Transfer procedure is to transfer the EN-DC SON Configuration container, either from the eNB to the en-gNB or from the en-gNB to the eNB, in the context of en-gNB X2 TNL address discovery as described in TS 36.300 [15].

The procedure uses non UE-associated signalling.

8.7.18.2 Successful Operation

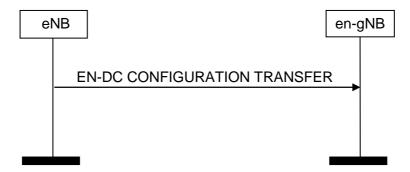


Figure 8.7.18.2-1: eNB initiated EN-DC Configuration Transfer, successful operation



Figure 8.7.18.2-2: en-gNB initiated EN-DC Configuration Transfer, successful operation

The eNB initiates the procedure by sending the EN-DC CONFIGURATION TRANSFER message to an en-gNB.

If the en-gNB receives, in the *EN-DC SON Configuration Transfer* IE, the *SON Information* IE containing the *SON Information Request* IE, it may transfer back the requested information towards the eNB indicated in the *Source eNB-ID* IE of the *EN-DC SON Configuration Transfer* IE by initiating the EN-DC Configuration Transfer procedure.

If the en-gNB receives, in the *EN-DC SON Configuration Transfer* IE, the *X2 TNL Configuration Info* IE containing the *eNB X2 Extended Transport Layer Addresses* IE, it may use it as part of its ACL functionality configuration actions, if such ACL functionality is deployed.

In case the *IP-Sec Transport Layer Address* IE is present and the *GTP Transport Layer Addresses* IE within the *eNB X2 Extended Transport Layer Addresses* IE is not empty, GTP traffic is conveyed within an IP-Sec tunnel terminated at the IP-Sec tunnel end point given in by the *IP-Sec Transport Layer Address* IE.

In case the *IP-Sec Transport Layer Addresss* IE is not present, GTP traffic is terminated at the end points given by the list of addresses in *eNB GTP Transport Layer Addresses* IE within the *eNB X2 Extended Transport Layer Addresses* IE.

In case the *eNB GTP Transport Layer Addresses* IE is empty and the *IP-Sec Transport Layer Address* IE is present, SCTP traffic is conveyed within an IP-Sec tunnel terminated at the IP-Sec tunnel end point given in the *IP-Sec Transport Layer Address* IE, within the *eNB X2 Extended Transport Layer Addresses* IE.

If the en-gNB is configured to use one IPsec tunnel for EN-DC X2 traffic (IPsec star topology) then the traffic to the peer eNB shall be routed through this IPsec tunnel and the *IP-Sec Transport Layer Address* IE shall be ignored.

The en-gNB initiates the procedure by sending the EN-DC CONFIGURATION TRANSFER message to an eNB.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC CONFIGURATION TRANSFER message shall contain the *Interface Instance Indication* IE to identify the corresponding interface instance.

8.7.18.3 Abnormal Conditions

Void.

8.7.19 Trace Start

8.7.19.1 General

The purpose of the Trace Start procedure is to allow the MeNB to request the en-gNB to initiate a trace session for a UE. The procedure uses UE-associated signalling.

8.7.19.2 Successful Operation



Figure 8.7.19.2-1: Trace Start, successful operation

The Trace Start procedure is initiated by the MeNB sending the TRACE START message to the en-gNB for that specific UE. Upon reception of the TRACE START message, the en-gNB shall initiate the requested trace session as described in TS 32.422 [6].

8.7.19.3 Abnormal Conditions

Void.

8.7.20 Deactivate Trace

8.7.20.1 General

The purpose of the Deactivate Trace procedure is to allow the MeNB to request the en-gNB to stop the trace session for the indicated trace reference. The procedure uses UE-associated signalling.

8.7.20.2 Successful Operation



Figure 8.7.20.2-1: Deactivate Trace, successful opration

The Deactivate Trace procedure is initiated by the MeNB by sending the DEACTIVATE TRACE to the en-gNB for that specific UE. Upon reception of the DEACTIVATE TRACE message, the en-gNB shall stop the trace session for the indicated trace reference in the *E-UTRAN Trace ID* IE.

8.7.20.3 Abnormal Conditions

Void.

9 Elements for X2AP Communication

9.0 General

Sub clauses 9.1 and 9.2 describe the structure of the messages and information elements required for the X2AP protocol in tabular format. Sub clause 9.3 provides the corresponding ASN.1 definition.

The following attributes are used for the tabular description of the messages and information elements: Presence, Range Criticality and Assigned Criticality. Their definition and use can be found in TS 36.413 [4].

NOTE: The messages have been defined in accordance to the guidelines specified in TR 25.921 [30].

9.1 Message Functional Definition and Content

9.1.1 Messages for Basic Mobility Procedures

9.1.1.1 HANDOVER REQUEST

This message is sent by the source eNB to the target eNB to request the preparation of resources for a handover.

Direction: source eNB \rightarrow target eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Old eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the source eNB	YES	reject
Cause	М		9.2.6		YES	ignore
Target Cell ID	М		ECGI 9.2.14		YES	reject
GUMMEI	M		9.2.16		YES	reject
UE Context Information		1			YES	reject
>MME UE S1AP ID	M		INTEGER (02 ³² -1)	MME UE S1AP ID allocated at the MME	-	•
>UE Security Capabilities	M		9.2.29		_	
>AS Security Information	M		9.2.30		_	
>UE Aggregate Maximum Bit Rate	M		9.2.12		_	
>Subscriber Profile ID for RAT/Frequency priority	0		9.2.25		_	
>E-RABs To Be Setup List		1			_	
>>E-RABs To Be Setup Item		1 <maxnoofbeare rs></maxnoofbeare 			EACH	ignore
>>>E-RAB ID	М	102	9.2.23			
>>>E-RAB Level QoS Parameters	M		9.2.9	Includes necessary QoS parameters	_	
>>>DL Forwarding	0		9.2.5		_	
>>>UL GTP Tunnel Endpoint	М		GTP Tunnel Endpoint 9.2.1	SGW endpoint of the S1 transport bearer. For delivery of UL PDUs.	-	
>>>Bearer Type	0		9.2.92		YES	reject
>RRC Context	М		OCTET STRING	Includes the RRC HandoverPreparati onInformation message as defined in subclause 10.2.2 of TS 36.331 [9], or the RRC HandoverPreparati onInformation-NB message as defined in 10.6.2 of TS 36.331 [9].	_	
>Handover Restriction List	0				_	
>Location Reporting Information	0		9.2.21	Includes the necessary parameters for location reporting	_	
>Management Based MDT Allowed	0		9.2.59		YES	ignore
>Management Based MDT PLMN List	0		MDT PLMN List 9.2.64		YES	ignore
>UE Sidelink Aggregate Maximum Bit Rate	0		9.2.97	This IE applies only if the UE is authorized for V2X services.	YES	Ignore
>EPC Handover Restriction List Container	0		9.2.153		YES	ignore
UE History Information	М		9.2.38	Same definition as in TS 36.413 [4]	YES	ignore
Trace Activation	0		9.2.2		YES	ignore
SRVCC Operation Possible	0		9.2.33		YES	ignore

CSG Membership Status	0	9.2.52		YES	reject
Mobility Information	0	BIT STRING (SIZE (32))	Information related to the handover; the source eNB provides it in order to enable later analysis of the conditions that led to a wrong HO.	YES	ignore
Masked IMEISV	0	9.2.69		YES	ignore
UE History Information from the UE	0	OCTET STRING	VisitedCellInfoList contained in the UEInformationResp onse message (TS 36.331 [9])	YES	ignore
Expected UE Behaviour	0	9.2.70		YES	ignore
ProSe Authorized	0	9.2.78		YES	ignore
UE Context Reference at the SeNB	0			YES	ignore
>Global SeNB ID	M	Global eNB ID 9.2.22			
>SeNB UE X2AP ID	М	eNB UE X2AP ID 9.2.24	Allocated at the SeNB		
>SeNB UE X2AP ID Extension	0	Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB		
Old eNB UE X2AP ID Extension	0	Extended eNB UE X2AP ID 9.2.86	Allocated at the source eNB	YES	reject
V2X Services Authorized	0	9.2.93		YES	ignore
UE Context Reference at the WT	0			YES	ignore
>WT ID	M	9.2.95			
>WT UE XwAP ID	M	9.2.96			
UE Context Reference at the SgNB	0			YES	ignore
>Global en-gNB ID	M	9.2.112	All the state		
>SgNB UE X2AP ID	M	en-gNB UE X2AP ID 9.2.100	Allocated at the SgNB.	_	
NR UE Security Capabilities	0	9.2.107		YES	ignore
Aerial UE subscription information	0	9.2.129		YES	ignore
Subscription Based UE Differentiation Information	0	9.2.136		YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256
maxnoofMDTPLMNs	PLMNs in the Management Based MDT PLMN list. Value is 16.

9.1.1.2 HANDOVER REQUEST ACKNOWLEDGE

This message is sent by the target eNB to inform the source eNB about the prepared resources at the target.

Direction: target eNB \rightarrow source eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Old eNB UE X2AP ID	M		eNB UE	Allocated at	YES	ignore
			X2AP ID	the source		
			9.2.24	eNB		
New eNB UE X2AP ID	M		eNB UE	Allocated at	YES	ignore
			X2AP ID	the target		
			9.2.24	eNB		
E-RABs Admitted List		1			YES	ignore
>E-RABs Admitted Item		1			EACH	ignore
		<maxnoofbearers< td=""><td></td><td></td><td></td><td></td></maxnoofbearers<>				
>>E-RAB ID	M	>	9.2.23		_	
>>UL GTP Tunnel	0		GTP Tunnel	Identifies the	_	
Endpoint			Endpoint	X2 transport		
			9.2.1	bearer used		
				for		
				forwarding of		
				UL PDUs		
>>DL GTP Tunnel	0		GTP Tunnel	Identifies the	_	
Endpoint			Endpoint	X2 transport		
			9.2.1	bearer. used		
				for		
				forwarding of		
				DL PDUs		
E-RABs Not Admitted List	0		E-RAB List	A value for	YES	ignore
			9.2.28	E-RAB ID		, and the second
				shall only be		
				present once		
				in <i>E-RAB</i> s		
				Admitted List		
				IE and in E-		
				RABs Not		
				Admitted List		
				IE.		
Target eNB To Source eNB	M		OCTET	Includes the	YES	ignore
Transparent Container			STRING	RRC E-		
				UTRA		
				Handover		
				Command		
				message as		
				defined in		
				subclause		
				10.2.2 in TS		
Criticality Diagnostics	0		9.2.7	36.331 [9]	YES	ignore
UE Context Kept Indicator	0		9.2.7		YES	ignore
Old eNB UE X2AP ID	0	†	Extended	Allocated at	YES	ignore
Extension			eNB UE	the source	0	.90.0
			X2AP ID	eNB		
			9.2.86			
New eNB UE X2AP ID	0		Extended	Allocated at	YES	reject
Extension	-		eNB UE	the target	· 	
			X2AP ID	eNB		
			9.2.86	-		
WT UE Context Kept	0		UE Context	Indicates	YES	ignore
Indicator			Kept	that the WT	0	.5.10.0
mulcator	1	I				
maicator			Indicator	nas		
maicator			Indicator 9.2.85	has acknowledge		
maicator				acknowledge d to keep the		

E-RABs transferred to MeNB	0	E-RAB List	In case of	YES	ignore
		9.2.28	EN-DC,		
			indicates		
			that SN		
			Status is		
			needed for		
			the listed E-		
			RABs from		
			the SgNB		

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.1.3 HANDOVER PREPARATION FAILURE

This message is sent by the target eNB to inform the source eNB that the Handover Preparation has failed.

Direction: target eNB \rightarrow source eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Old eNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the source eNB	YES	ignore
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
Old eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the source eNB	YES	ignore

9.1.1.4 SN STATUS TRANSFER

This message is sent by the source eNB to the target eNB to transfer the uplink/downlink PDCP SN and HFN status during a handover or for EN-DC.

Direction: source eNB \rightarrow target eNB (handover), eNB from which the E-RAB context is transferred \rightarrow eNB to which the E-RAB context is transferred (RRC connection re-establishment or dual connectivity), MeNB/en-gNB from which the E-RAB context is transferred \rightarrow en-gNB/MeNB to which the E-RAB context is transferred (EN-DC).

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
Old eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated for handover at the source eNB and for dual connectivity/EN-DC at the eNB from which the E-RAB context is transferred	YES	reject
New eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated for handover at the target eNB and for dual connectivity/EN-DC at the eNB to which the E- RAB context is transferred	YES	reject
E-RABs Subject To Status Transfer List		1			YES	ignore
>E-RABs Subject To Status Transfer Item		1 <maxnoofb earers></maxnoofb 			EACH	ignore
>>E-RAB ID	М		9.2.23		_	
>>Receive Status Of UL PDCP SDUs	0		BIT STRING (4096)	PDCP Sequence Number = (First Missing SDU Number + bit position) modulo 4096 0: PDCP SDU has not been received. 1: PDCP SDU has	-	
All COLINERY			0011117	been received correctly.		
>>UL COUNT Value	M		COUNT Value 9.2.15	PDCP-SN and Hyper Frame Number of the first missing UL SDU in case of 12 bit long PDCP-SN	_	
>>DL COUNT Value	М		COUNT Value 9.2.15	PDCP-SN and Hyper frame number that the target eNB/en-gNB should assign for the next DL SDU not having an SN yet in case of 12 bit long PDCP-SN	_	
>>Receive Status Of UL PDCP SDUs Extended	0		BIT STRING (116384)	The IE is used in case of 15 bit long PDCP-SN in this release. The first bit indicates the status of the SDU after the First Missing UL PDCP SDU. The N th bit indicates the status of the UL PDCP SDU in position (N + First Missing SDU Number) modulo (1 + the maximum value of the PDCP-SN). 0: PDCP SDU has not been received. 1: PDCP SDU has been received correctly.	YES	ignore

>>UL COUNT Value Extended	0	COUNT Value Extended 9.2.66	PDCP-SN and Hyper Frame Number of the first missing UL SDU in case of 15 bit long PDCP-SN	YES	ignore
>>DL COUNT Value Extended	0	COUNT Value Extended 9.2.66	PDCP-SN and Hyper Frame Number that the target eNB/en-gNB should assign for the next DL SDU not having an SN yet in case of 15 bit long PDCP-SN	YES	ignore
>>Receive Status Of UL PDCP SDUs for PDCP SN Length 18	0	BIT STRING (1131072)	The IE is used in case of 18 bit long PDCP-SN. The first bit indicates the status of the SDU after the First Missing UL PDCP SDU. The Nth bit indicates the status of the UL PDCP SDU in position (N + First Missing SDU Number) modulo (1 + the maximum value of the PDCP-SN). 0: PDCP SDU has not been received. 1: PDCP SDU has been received correctly.	YES	ignore
>>UL COUNT Value for PDCP SN Length 18	0	COUNT Value for PDCP SN Length 18 9.2.82	PDCP-SN and Hyper Frame Number of the first missing UL SDU in case of 18 bit long PDCP-SN	YES	ignore
>>DL COUNT Value for PDCP SN Length 18	0	COUNT Value for PDCP SN Length 18 9.2.82	PDCP-SN and Hyper Frame Number that the target eNB/en-gNB should assign for the next DL SDU not having an SN yet in case of 18 bit long PDCP-SN	YES	ignore
Old eNB UE X2AP ID Extension	0	Extended eNB UE X2AP ID 9.2.86	Allocated for handover at the source eNB and for dual connectivity/EN-DC at the eNB from which the E-RAB context is transferred.	YES	reject
New eNB UE X2AP ID Extension	0	Extended eNB UE X2AP ID 9.2.86	Allocated for handover at the target eNB and for dual connectivity/EN-DC at the eNB to which the E-RAB context is transferred.	YES	reject
SgNB UE X2AP ID	0	en-gNB UE X2AP ID 9.2.100	Allocated for EN-DC at the SgNB.	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256.

9.1.1.5 UE CONTEXT RELEASE

This message is sent by the target eNB to the source eNB to indicate that resources can be released.

Direction: target eNB \rightarrow source eNB (handover), MeNB \rightarrow SeNB (dual connectivity), MeNB \rightarrow en-gNB (EN-DC).

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	•	YES	ignore
Old eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated for handover at the source eNB and for dual connectivity at the SeNB.	YES	reject
New eNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated for handover at the target eNB and for dual connectivity/EN-DC at the MeNB.	YES	reject
Old eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated for handover at the source eNB and for dual connectivity at the SeNB.	YES	reject
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated for handover at the source eNB and for dual connectivity/EN-DC at the MeNB.	YES	reject
SIPTO Bearer Deactivation Indication	0		ENUMERATED (True,,)	Indicates that SIPTO@LN PDN connection deactivation is needed.	YES	ignore
SgNB UE X2AP ID	0		en-gNB UE X2AP ID 9.2.100	Allocated for EN-DC at the SgNB.	YES	ignore

9.1.1.6 HANDOVER CANCEL

This message is sent by the source eNB to the target eNB to cancel an ongoing handover.

Direction: source eNB \rightarrow target eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
Old eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the source eNB	YES	reject
New eNB UE X2AP ID	0		eNB UE X2AP ID 9.2.24	Allocated at the target eNB	YES	ignore
Cause	M		9.2.6		YES	ignore
Old eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the source eNB	YES	reject
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the target eNB	YES	ignore

9.1.2 Messages for global procedures

9.1.2.1 LOAD INFORMATION

This message is sent by an eNB to neighbouring eNBs to transfer load and interference co-ordination information.

Direction: $eNB_1 \rightarrow eNB_2$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
Cell Information	M				YES	ignore
>Cell Information Item		1 <maxcellinenb></maxcellinenb>			EACH	ignore
>>Cell ID	M		ECGI 9.2.14	Id of the source cell	_	
>>UL Interference Overload Indication	0		9.2.17		_	
>>UL High Interference Information		0 <maxcellinenb></maxcellinenb>			-	
>>>Target Cell ID	M		ECGI 9.2.14	Id of the cell for which the HII is meant	-	
>>>UL High Interference Indication	M		9.2.18		_	
>>Relative Narrowband Tx Power (RNTP)	0		9.2.19		-	
>>ABS Information	0		9.2.54		YES	ignore
>>Invoke Indication	0		9.2.55		YES	ignore
>>Intended UL-DL Configuration	0		ENUMERAT ED(sa0, sa1, sa2, sa3, sa4, sa5, sa6,)	One of the UL-DL configuration s defined in TS 36.211 [10]. The UL subframe(s) in the indicated configuration is subset of those in SIB1 UL-DL configuration . This IE applies to TDD only.	YES	ignore
>>Extended UL Interference Overload Info	0		9.2.67	This IE applies to TDD only.	YES	ignore
>>CoMP Information	0		9.2.74		YES	ignore
>>Dynamic DL transmission information	0		9.2.77		YES	ignore

Range bound	Explanation				
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.				

9.1.2.2 ERROR INDICATION

This message is used to indicate that some error has been detected in the eNB/en-gNB.

Direction: $eNB_1 \rightarrow eNB_2$ or $eNB \rightarrow en\text{-}gNB$ or $en\text{-}gNB \rightarrow eNB$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13	•	YES	ignore
Old eNB UE X2AP ID	0		eNB UE X2AP ID 9.2.24	Allocated for handover at the source eNB and for dual connectivity at the SeNB or the eNB from which the E-RAB context is transferred.	YES	ignore
New eNB UE X2AP ID	0		eNB UE X2AP ID 9.2.24	Allocated for handover at the target eNB and for dual connectivity/EN-DC at the MeNB or the eNB to which the E-RAB context is transferred.	YES	ignore
Cause	0		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
Old eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated for handover at the source eNB and for dual connectivity at the SeNB or the eNB from which the E-RAB context is transferred.	YES	ignore
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated for handover at the target eNB and for dual connectivity at the MeNB or the eNB to which the E-RAB context is transferred.	YES	ignore
Old en-gNB UE X2AP ID	0		en-gNB UE X2AP ID 9.2.100	Allocated for EN-DC at the en-gNB.	YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

9.1.2.3 X2 SETUP REQUEST

This message is sent by an eNB to a neighbouring eNB to transfer the initialization information for a TNL association.

Direction: $eNB_1 \rightarrow eNB_2$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	•	YES	reject
Global eNB ID	М		9.2.22		YES	reject
Served Cells		1 <maxcellinenb></maxcellinenb>		Complete list of cells served by the eNB	YES	reject
>Served Cell Information	M		9.2.8		_	
>Neighbour Information		0 <maxnoofneighb ours></maxnoofneighb 			_	
>>ECGI	М		ECGI 9.2.14	E-UTRAN Cell Global Identifier of the neighbour cell	-	
>>PCI	М		INTEGER (0503,)	Physical Cell Identifier of the neighbour cell	-	
>>EARFCN	М		9.2.26	DL EARFCN for FDD or EARFCN for TDD	-	
>>TAC	0		OCTET STRING (2)	Tracking Area Code	YES	ignore
>>EARFCN Extension	0		9.2.65	DL EARFCN for FDD or EARFCN for TDD. If this IE is present, the value signalled in the <i>EARFCN</i> IE is ignored.	YES	reject
>NR Neighbour Information	0		9.2.98	NR neighbour, capable of performing EN- DC with the served E-UTRA cell	YES	ignore
GU Group ld List		0 <maxfpools></maxfpools>		List of all the pools to which the eNB belongs	GLOBAL	reject
>GU Group Id	М		9.2.20		-	
LHN ID	0		9.2.83		YES	ignore

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.
maxnoofNeighbours	Maximum no. of neighbour cells associated to a given served cell. Value is 512.
maxPools	Maximum no. of pools an eNB can belong to. Value is 16.

9.1.2.4 X2 SETUP RESPONSE

This message is sent by an eNB to a neighbouring eNB to transfer the initialization information for a TNL association. Direction: $eNB_2 \rightarrow eNB_1$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Global eNB ID	M		9.2.22		YES	reject
Served Cells		1 <maxcellinenb></maxcellinenb>		Complete list of cells served by the eNB	GLOBAL	reject
>Served Cell Information	M		9.2.8		_	
>Neighbour Information		0 <maxnoofneighb ours></maxnoofneighb 			-	
>>ECGI	M		ECGI 9.2.14	E-UTRAN Cell Global Identifier of the neighbour cell	-	
>>PCI	М		INTEGER (0503,)	Physical Cell Identifier of the neighbour cell	1	
>>EARFCN	M		9.2.26	DL EARFCN for FDD or EARFCN for TDD	-	
>>TAC	0		OCTET STRING (2)	Tracking Area Code	YES	ignore
>>EARFCN Extension	0		9.2.65	DL EARFCN for FDD or EARFCN for TDD. If this IE is present, the value signalled in the <i>EARFCN</i> IE is ignored.	YES	reject
>NR Neighbour Information	0		9.2.98	NR neighbour, capable of performing EN- DC with the served E-UTRA cell	YES	ignore
GU Group Id List		0 <maxpools></maxpools>		List of all the pools to which the eNB belongs	GLOBAL	reject
>GU Group Id	M		9.2.20		-	
Criticality Diagnostics	0		9.2.7		YES	ignore
LHN ID	0		9.2.83		YES	ignore

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.
maxnoofNeighbours	Maximum no. of neighbour cells associated to a given served cell.
	Value is 512.
maxPools	Maximum no. of pools an eNB can belong to. Value is 16.

9.1.2.5 X2 SETUP FAILURE

This message is sent by the eNB to indicate X2 Setup failure.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Cause	M		9.2.6		YES	ignore
Time To Wait	0		9.2.32		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore

9.1.2.6 RESET REQUEST

This message is sent from one eNB to another eNB/en-gNB or from en-gNB to an eNB and is used to request the X2 interface between the two eNB or between an eNB and an en-gNB to be reset.

Direction: $eNB_1 \rightarrow eNB_2$, $eNB \rightarrow en\text{-}gNB$, $en\text{-}gNB \rightarrow eNB$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Cause	M		9.2.6		YES	ignore
Interface Instance	0		9.2.143		YES	reject
Indication						

9.1.2.7 RESET RESPONSE

This message is sent by a eNB/en-gNB as a response to a RESET REQUEST message.

Direction: $eNB_2 \rightarrow eNB_1$, $eNB \rightarrow en-gNB$, $en-gNB \rightarrow eNB$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Criticality Diagnostics	0		9.2.7		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

9.1.2.8 ENB CONFIGURATION UPDATE

This message is sent by an eNB to a peer eNB to transfer updated information for a TNL association.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
Served Cells To Add		0 <maxcellinenb></maxcellinenb>		Complete list of added cells served by the	GLOBAL	reject
>Served Cell Information	M		0.2.0	eNB		
>Neighbour Information	IVI	0	9.2.8		_	
_		<pre><maxnoofneighb ours=""></maxnoofneighb></pre>			_	
>>ECGI	М		ECGI 9.2.14	E-UTRAN Cell Global Identifier of the neighbour cell	_	
>>PCI	М		INTEGER (0503,)	Physical Cell Identifier of the neighbour cell	-	
>>EARFCN	M		9.2.26	DL EARFCN for FDD or EARFCN for TDD	_	
>>TAC	0		OCTET STRING (2)	Tracking Area Code	YES	ignore
>>EARFCN Extension	0		9.2.65	DL EARFCN for FDD or EARFCN for TDD. If this IE is present, the value signalled in the <i>EARFCN</i> IE is ignored.	YES	reject
>NR Neighbour Information	0		9.2.98	NR neighbour, capable of performing EN- DC with the served E-UTRA cell	YES	ignore
Served Cells To Modify		0 <maxcellinenb></maxcellinenb>		Complete list of modified cells served by the eNB	GLOBAL	reject
>Old ECGI	М		ECGI 9.2.14	Old E-UTRAN Cell Global Identifier	-	
>Served Cell Information	М		9.2.8			
>Neighbour Information		0 <maxnoofneighb ours></maxnoofneighb 			_	
>>ECGI	M		ECGI 9.2.14	E-UTRAN Cell Global Identifier of the neighbour cell	-	
>>PCI	М		INTEGER (0503,)	Physical Cell Identifier of the neighbour cell	_	
>>EARFCN	M		9.2.26	DL EARFCN for FDD or EARFCN for TDD	-	
>>TAC	0		OCTET STRING (2)	Tracking Area Code	YES	ignore

>> EADECN Extension	0		0.2.65	DI EADECNIfor	YES	roinat
>>EARFCN Extension	0		9.2.65	DL EARFCN for FDD or EARFCN for TDD. If this IE is	YES	reject
				present, the		
				value signalled in the EARFCN		
				IE is ignored.		
>NR Neighbour	0		9.2.98	NR neighbour,	YES	ignore
Information				capable of		
				performing EN- DC with the		
				served E-UTRA		
			ENUMERAT	cell	\/F0	
>Deactivation Indication	0		ENUMERAT ED(deactivat	Indicates that the concerned	YES	ignore
			ed,	cell is switched		
)	off for energy		
Served Cells To Delete		0		saving reasons Complete list of	GLOBAL	reject
Served Cells 10 Delete		<pre><maxcellinenb></maxcellinenb></pre>		deleted cells	GLOBAL	Тејест
				served by the		
>Old ECGI	M		ECGI	eNB Old E-UTRAN		
>Old ECGI	IVI		9.2.14	Cell Global	-	
			0.2	Identifier of the		
				cell to be		
GU Group Id To Add List		0 <maxpools></maxpools>		deleted	GLOBAL	reject
>GU Group Id	M	0	9.2.20		-	Tojoot
GU Group Id To Delete		0 <maxpools></maxpools>			GLOBAL	reject
List >GU Group Id	M		9.2.20			
Coverage Modification List	IVI	0	9.2.20	List of cells with	GLOBAL	reject
		<maxcellinenb></maxcellinenb>		modified coverage		•
>ECGI	М		ECGI	E-UTRAN Cell	-	
			9.2.14	Global Identifier of the cell to be		
				modified		
>Cell Coverage State	М		INTEGER	Value '0'	-	
			(015,)	indicates that the cell is		
				line cen is		
				inactive. Other		
				inactive. Other values Indicates		
i I				values Indicates that the cell is		
				values Indicates that the cell is active and also		
				values Indicates that the cell is active and also indicates the coverage		
				values Indicates that the cell is active and also indicates the coverage configuration of		
				values Indicates that the cell is active and also indicates the coverage configuration of the concerned		
>Cell Deployment Status	0		ENUMERAT	values Indicates that the cell is active and also indicates the coverage configuration of the concerned cell Indicates the		
>Cell Deployment Status Indicator	0		ED(pre-	values Indicates that the cell is active and also indicates the coverage configuration of the concerned cell Indicates the Cell Coverage		
	0		ED(pre- change-	values Indicates that the cell is active and also indicates the coverage configuration of the concerned cell Indicates the Cell Coverage State is planned		
	0		ED(pre-	values Indicates that the cell is active and also indicates the coverage configuration of the concerned cell Indicates the Cell Coverage State is planned to be used at the next		
Indicator			ED(pre- change- notification, .	values Indicates that the cell is active and also indicates the coverage configuration of the concerned cell Indicates the Cell Coverage State is planned to be used at		
	C-		ED(pre- change- notification, .	values Indicates that the cell is active and also indicates the coverage configuration of the concerned cell Indicates the Cell Coverage State is planned to be used at the next		
Indicator	C- ifCellDeplo ymentStat		ED(pre- change- notification, .	values Indicates that the cell is active and also indicates the coverage configuration of the concerned cell Indicates the Cell Coverage State is planned to be used at the next		
Indicator	C- ifCellDeplo ymentStat usIndicator		ED(pre- change- notification, .	values Indicates that the cell is active and also indicates the coverage configuration of the concerned cell Indicates the Cell Coverage State is planned to be used at the next		
Indicator	C- ifCellDeplo ymentStat	0	ED(pre- change- notification, .	values Indicates that the cell is active and also indicates the coverage configuration of the concerned cell Indicates the Cell Coverage State is planned to be used at the next		

>>>ECGI	ECGI	E-UTRAN Cell	
	9.2.14	Global Identifier	
		of a cell that	
		may replace all	
		or part of the	
		coverage of the	
		cell to be	
		modified	

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.
maxnoofNeighbours	Maximum no. of neighbour cells associated to a given served cell.
	Value is 512.
maxPools	Maximum no. of pools an eNB can belong to. Value is 16.

Condition	Explanation
ifCellDeploymentStatusIndicatorPresent	This IE shall be present if the Cell Deployment Status Indicator IE is
	present.

9.1.2.9 ENB CONFIGURATION UPDATE ACKNOWLEDGE

This message is sent by an eNB to a peer eNB to acknowledge update of information for a TNL association.

Direction: $eNB_2 \rightarrow eNB_1$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Criticality Diagnostics	0	_	9.2.7		YES	ignore

9.1.2.10 ENB CONFIGURATION UPDATE FAILURE

This message is sent by an eNB to a peer eNB to indicate eNB Configuration Update Failure.

Direction: $eNB_2 \rightarrow eNB_1$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Cause	M		9.2.6		YES	ignore
Time To Wait	0		9.2.32		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore

9.1.2.11 RESOURCE STATUS REQUEST

This message is sent by an eNB_1 to neighbouring eNB_2 to initiate the requested measurement according to the parameters given in the message.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
eNB1 Measurement ID	М		INTEGER (14095,)	Allocated by eNB ₁	YES	reject
eNB2 Measurement ID	C- ifRegistrati onRequest StoporPart ialStoporA dd		INTEGER (14095,)	Allocated by eNB ₂	YES	ignore
Registration Request	M		ENUMERAT ED(start, stop, , partial stop, add)	Type of request for which the resource status is required.	YES	reject
Report Characteristics	0		BITSTRING (SIZE(32))	Each position in the bitmap indicates measurement object the eNB ₂ is requested to report. First Bit = PRB Periodic, Second Bit = TNL load Ind Periodic, Third Bit = HW Load Ind Periodic, Fourth Bit = Composite Available Capacity Periodic, this bit should be set to 1 if at least one of the First, Second or Third bits is set to 1, Fifth Bit = ABS Status Periodic, Sixth Bit = RSRP Measurement Report Periodic, Seventh Bit = CSI Report Periodic. Other bits shall be ignored by the eNB ₂ .	YES	reject
Cell To Report		1		Cell ID list to which the request applies.	YES	ignore
>Cell To Report Item		1 <maxcel lineNB></maxcel 			EACH	ignore
>>Cell ID	M		ECGI 9.2.14		-	
Reporting Periodicity	0		ENUMERAT ED(1000ms, 2000ms, 5000ms,100 00ms,)	Periodicity that can be used for reporting of PRB Periodic, TNL Load Ind Periodic, HW Load Ind Periodic, Composite Available Capacity Periodic or ABS Status Periodic.	YES	ignore
Partial Success Indicator	0		ENUMERAT ED(partial success allowed,)	Included if partial success is allowed	YES	ignore
Reporting Periodicity of RSRP Measurement Report	0		ENUMERAT ED(120ms, 240ms, 480ms, 640ms,)	Periodicity that can be used for the reporting of RSRP Measurement Report Periodic.	YES	ignore

Reporting Periodicity of CSI	0		ENUMERAT	Periodicity that can be	YES	ignore
Report			ED(5ms,	used for the reporting of		-
			10ms, 20ms,	CSI Report Periodic.		
			40ms,			
			80ms,)			

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.

Condition	Explanation
ifRegistrationRequestStoporPartialStoporA	This IE shall be present if the Registration Request IE is set to the
dd	value "stop", "partial stop" or "add".

9.1.2.12 RESOURCE STATUS RESPONSE

This message is sent by the eNB_2 to indicate that the requested measurement, for all or for a subset of the measurement objects included in the measurement is successfully initiated.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
eNB1 Measurement ID	M		INTEGER (14095,)	Allocated by eNB₁	YES	reject
eNB2 Measurement ID	М		INTEGER (14095,)	Allocated by eNB ₂	YES	reject
Criticality Diagnostics	0		9.2.7		YES	ignore
Measurement Initiation Result		01		List of all cells in which measurement objects were requested, included when indicating partial success	YES	ignore
>Measurement Initiation Result Item		1 <maxce IlineNB></maxce 			EACH	ignore
>>Cell ID	М		ECGI 9.2.14		_	
>>Measurement Failure Cause List		01		Indicates that eNB ₂ could not initiate the measurement for at least one of the requested measurement objects in the cell	-	
>>>Measurement Failure Cause Item		1 <maxfa iledMea sObject s></maxfa 			EACH	ignore
>>>Measurement Failed Report Characteristics	M		BITSTRING (SIZE(32))	Each position in the bitmap indicates measurement object that failed to be initiated in the eNB ₂ . First Bit = PRB Periodic, Second Bit = TNL load Ind Periodic, Third Bit = HW Load Ind Periodic, Fourth Bit = Composite Available Capacity Periodic, Fifth Bit = ABS Status Periodic, Sixth Bit = RSRP Measurement Report Periodic, Seventh Bit = CSI Report Periodic. Other bits shall be ignored by the eNB ₁ .		
>>>Cause	M		9.2.6	Failure cause for measurement objects for which the measurement cannot be initiated	-	

Range bound	Explanation
maxFailedMeasObjects	Maximum number of measurement objects that can fail per
	measurement. Value is 32.
maxCellineNB	Maximum no, cells that can be served by an eNB. Value is 256.

9.1.2.13 RESOURCE STATUS FAILURE

This message is sent by the eNB_2 to indicate that for none of the requested measurement objects the measurement can be initiated.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
eNB1 Measurement ID	М		INTEGER (14095,)	Allocated by eNB ₁	YES	reject
eNB2 Measurement ID	М		INTEGER (14095,)	Allocated by eNB ₂	YES	reject
Cause	M		9.2.6	Ignored by the receiver when the Complete Failure Cause Information IE is included	YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
Complete Failure Cause Information		01		Complete list of failure causes for all requested cells	YES	ignore
>Complete Failure Cause Information Item		1 <maxce IlineNB></maxce 			EACH	ignore
>>Cell ID	М		ECGI 9.2.14		_	
>>Measurement Failure Cause List		1			_	
>>>Measurement Failure Cause Item		1 <maxfa iledMea sObject s></maxfa 			EACH	ignore
>>>>Measuremen t Failed Report Characteristics	M		BITSTRING (SIZE(32))	Each position in the bitmap indicates measurement object that failed to be initiated in the eNB2. First Bit = PRB Periodic, Second Bit = TNL load Ind Periodic, Third Bit = HW Load Ind Periodic, Fourth Bit = Composite Available Capacity Periodic, Fifth Bit = ABS Status Periodic, Sixth Bit = RSRP Measurement Report Periodic, Seventh Bit = CSI Report Periodic. Other bits shall be ignored by the eNB1.	_	
>>>Cause	М		9.2.6	Failure cause for measurements that cannot be initiated	_	

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.
maxFailedMeasObjects	Max number of measurement objects that can fail per measurement. Value is 32.

9.1.2.14 RESOURCE STATUS UPDATE

This message is sent by eNB₂ to neighbouring eNB₁ to report the results of the requested measurements.

Direction: $eNB_2 \rightarrow eNB_1$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	•	YES	ignore
eNB1 Measurement ID	М		INTEGER (14095,)	Allocated by eNB ₁	YES	reject
eNB2 Measurement ID	М		INTEGER (14095,)	Allocated by eNB ₂	YES	reject
Cell Measurement Result		1			YES	ignore
>Cell Measurement Result Item		1 <maxcellinenb></maxcellinenb>			EACH	ignore
>>Cell ID	М		ECGI 9.2.14			
>>Hardware Load Indicator	0		9.2.34			
>>S1 TNL Load Indicator	0		9.2.35			
>>Radio Resource Status	0		9.2.37			
>>Composite Available Capacity Group	0		9.2.44		YES	ignore
>>ABS Status	0		9.2.58		YES	ignore
>>RSRP Measurement Report List	0		9.2.76		YES	ignore
>>CSI Report	0		9.2.79		YES	ignore
>>Cell Reporting Indicator	0		ENUMERAT ED(stop request,)		YES	ignore

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.

9.1.2.15 MOBILITY CHANGE REQUEST

This message is sent by an eNB_1 to neighbouring eNB_2 to initiate adaptation of mobility parameters.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
eNB1 Cell ID	М		ECGI 9.2.14		YES	reject
eNB2 Cell ID	М		ECGI 9.2.14		YES	reject
eNB1 Mobility Parameters	0		Mobility Parameters Information 9.2.48	Configuration change in eNB ₁ cell	YES	ignore
eNB2 Proposed Mobility Parameters	М		Mobility Parameters Information 9.2.48	Proposed configuration change in eNB ₂ cell	YES	reject
Cause	M		9.2.6		YES	reject

9.1.2.16 MOBILITY CHANGE ACKNOWLEDGE

This message is sent by the eNB_2 to indicate that the eNB_2 Proposed Mobility Parameter proposed by eNB_1 was accepted.

Direction: $eNB_2 \rightarrow eNB_1$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
eNB1 Cell ID	M		ECGI		YES	reject
			9.2.14			
eNB2 Cell ID	М		ECGI		YES	reject
			9.2.14			
Criticality Diagnostics	0		9.2.7		YES	ignore

9.1.2.17 MOBILITY CHANGE FAILURE

This message is sent by the eNB_2 to indicate that the eNB_2 Proposed Mobility Parameter proposed by eNB_1 was refused.

Direction: $eNB_2 \rightarrow eNB_1$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
eNB1 Cell ID	М		ECGI 9.2.14		YES	ignore
eNB2 Cell ID	M		ECGI 9.2.14		YES	ignore
Cause	M		9.2.6		YES	ignore
Mobility Parameters Modification Range	0		9.2.49		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore

9.1.2.18 RLF INDICATION

This message is sent by the eNB_2 to indicate an RRC re-establishment attempt or a reception of an RLF Report from a UE that suffered a connection failure at eNB_1 .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13	•	YES	ignore
Failure cell PCI	M		INTEGER (0503,)	Physical Cell Identifier	YES	ignore
Re-establishment cell ECGI	M		ECGI 9.2.14		YES	ignore
C-RNTI	М		BIT STRING (SIZE (16))	C-RNTI contained in the RRC Re- establishment Request message (TS 36.331 [9])	YES	ignore
ShortMAC-I	0		BIT STRING (SIZE (16))	ShortMAC-I contained in the RRC Re- establishment Request message (TS 36.331 [9])	YES	ignore
UE RLF Report Container	0		OCTET STRING	RLF -Report-r9 IE contained in the UEInformationRe sponse message (TS 36.331 [9])	YES	ignore
RRC Conn Setup Indicator	0		ENUMERATED(RR C Conn Setup,)	Included if the RLF Report within the UE RLF Report Container IE is retrieved after an RRC connection setup or an incoming successful handover	YES	reject
RRC Conn Reestab Indicator	0		ENUMERATED(rec onfigurationFailure, handoverFailure, otherFailure,)	The Reestablishment Cause in RRCConnection Reestablishment Request message(TS 36.331 [9])	YES	ignore
UE RLF Report Container for extended bands	0		OCTET STRING	RLF-Report-v9e0 IE contained in the UEInformationRe sponse message (TS 36.331 [9])	YES	ignore

9.1.2.19 HANDOVER REPORT

This message is sent by the eNB₁ to report a handover failure event or other critical mobility problem.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	•	YES	ignore
Handover Report Type	М		ENUMERATED (HO too early, HO to wrong cell, , InterRAT ping-pong)		YES	ignore
Handover Cause	M		Cause 9.2.6	Indicates handover cause employed for handover from eNB ₂	YES	ignore
Source cell ECGI	M		ECGI 9.2.14	ECGI of source cell for handover procedure (in eNB ₂)	YES	ignore
Failure cell ECGI	M		ECGI 9.2.14	ECGI of target cell for handover procedure (in eNB ₁)	YES	ignore
Re-establishment cell ECGI	C- ifHandoverR eportType HoToWrong Cell		ECGI 9.2.14	ECGI of cell where UE attempted re- establishment	YES	ignore
Target cell in UTRAN	C- ifHandoverR eportType InterRATpin gpong		OCTET STRING	Encoded according to UTRAN Cell ID in the Last Visited UTRAN Cell Information IE, as defined in in TS 25.413 [24]	YES	ignore
Source cell C-RNTI	0		BIT STRING (SIZE (16))	C-RNTI allocated at the source eNB (in eNB ₂) contained in the AS-config (TS 36.331 [9]).	YES	ignore
Mobility Information	0		BIT STRING (SIZE (32))	Information provided in the HANDOVER REQUEST message from eNB ₂ .	YES	ignore
UE RLF Report Container	0		OCTET STRING	The UE RLF Report Container IE received in the RLF INDICATION message.	YES	ignore
UE RLF Report Container for extended bands	0		OCTET STRING	The UE RLF Report Container for extended bands IE received in the RLF INDICATION message.	YES	ignore

Condition	Explanation
ifHandoverReportType HoToWrongCell	This IE shall be present if the Handover Report Type IE is set to the
	value "HO to wrong cell"
ifHandoverReportType InterRATpingpong	This IE shall be present if the Handover Report Type IE is set to the
	value "InterRAT ping-pong"

9.1.2.20 CELL ACTIVATION REQUEST

This message is sent by an eNB to a peer eNB to request a previously switched-off cell(s) to be re-activated.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Served Cells To Activate		1 <maxcellinenb></maxcellinenb>			GLOBAL	reject
>ECGI	M		9.2.14		-	

Range bound	Explanation			
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.			

9.1.2.21 CELL ACTIVATION RESPONSE

This message is sent by an eNB to a peer eNB to indicate that one or more cell(s) previously switched-off has(have) been activated.

Direction: $eNB_2 \rightarrow eNB_1$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Activated Cell List		1 <maxcellinenb></maxcellinenb>			GLOBAL	ignore
>ECGI	М		9.2.14		-	
Criticality Diagnostics	0		9.2.7		YES	ignore

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.

9.1.2.22 CELL ACTIVATION FAILURE

This message is sent by an eNB to a peer eNB to indicate cell activation failure.

Direction: $eNB_2 \rightarrow eNB_1$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore

9.1.2.23 X2 RELEASE

This message is used to indicate that the signalling connection to an eNB is unavailable.

Direction: $eNB_1 \rightarrow eNB_2$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Global eNB ID	M		9.2.22		YES	reject

9.1.2.24 X2AP MESSAGE TRANSFER

This message is used for indirect transport of an X2AP message (except the X2AP MESSAGE TRANSFER message) between two eNBs, and to allow an eNB to perform registration.

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
			reference	description		Criticality
Message Type	М		9.2.13		YES	reject
RNL Header	M		9.2.68		YES	reject
X2AP Message	0		OCTET STRING	Includes any X2AP message except the X2AP MESSAGE TRANSFER message	YES	reject

9.1.2.25 X2 REMOVAL REQUEST

This message is sent by an eNB to a neighbouring eNB to initiate the removal of the signaling connection.

Direction: $eNB_1 \rightarrow eNB_2$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
Global eNB ID	М		9.2.22		YES	reject
X2 Removal Threshold	0		X2 Benefit Value 9.2.90		YES	reject

9.1.2.26 X2 REMOVAL RESPONSE

This message is sent by an eNB to a neighbouring eNB to acknowledge the initiation of removal of the signaling connection.

Direction: $eNB_2 \rightarrow eNB_1$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Global eNB ID	M		9.2.22		YES	reject
Criticality Diagnostics	0		9.2.7		YES	ignore

9.1.2.27 X2 REMOVAL FAILURE

This message is sent by the eNB to indicate that removing the signaling connection cannot be accepted.

Direction: $eNB_2 \rightarrow eNB_1$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore

9.1.2.28 RETRIEVE UE CONTEXT REQUEST

This message is sent by the new eNB to request the old eNB to transfer the UE Context to the new eNB.

Direction: new eNB \rightarrow old eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	ignore
New eNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the new eNB	YES	reject
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the new eNB	YES	reject
Resume ID	М		9.2.91		YES	reject
ShortMAC-I	М		BIT STRING (SIZE (16))	RRC Resume: Corresponds to the ShortResumeMAC-I in the RRCConnection ResumeRequest message as defined in TS 36.331 [9]	YES	reject
				RRC Reestablishment: Corresponds to the ShortMAC-I in the RRCConnectionRe establishmentRequ estmessage as defined in TS 36.331 [9].		
New E-UTRAN Cell Identifier	M		BIT STRING (SIZE (28))	RRC Resume: Corresponds to the cellIdentity within the VarShortResumeM AC-Input as specified in TS 36.331 [9]. RRC Reestablishment: Corresponds to the cellIdentity within the VarShortMAC-Input as specified in TS 36.331 [9].	YES	reject
C-RNTI	0		BIT STRING (SIZE (16))	C-RNTI contained in the RRC Reestablishment Request message (TS 36.331 [9]). If this IE is present, the Resume ID IE is ignored	YES	reject
Failure cell PCI	0		INTEGER (0503,)	Physical Cell Identifier	YES	reject

9.1.2.29 RETRIEVE UE CONTEXT RESPONSE

This message is sent by the old eNB to transfer the UE context to the new eNB.

Direction: old eNB \rightarrow new eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	ignore
New eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the new eNB	YES	ignore
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the new eNB	YES	ignore
Old eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the old eNB	YES	ignore
Old eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the old eNB	YES	ignore
GUMMEI	М		9.2.16		YES	reject
UE Context Information		1			YES	reject
>MME UE S1AP ID	M		INTEGER (02 ³² - 1)	MME UE S1AP ID allocated at the MME	_	
>UE Security Capabilities	М		9.2.29		_	
>AS Security Information	М		9.2.30		_	
>UE Aggregate Maximum Bit Rate	М		9.2.12		_	
>Subscriber Profile ID for RAT/Frequency priority	0		9.2.25		-	
>E-RABs To Be Setup List		1			_	
>>E-RABs To Be Setup Item		1 <maxno ofBeare rs></maxno 			EACH	ignore
>>>E-RAB ID	M		9.2.23		_	
>>>E-RAB Level QoS Parameters	M		9.2.9	Includes necessary QoS parameters	_	
>>>Bearer Type	0		9.2.92		_	
>>>UL GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	SGW endpoint of the S1 transport bearer. For delivery of UL PDUs.	YES	reject
>>>DL Forwarding	0		9.2.5		YES	ignore
>RRC Context	М		OCTET STRING	Includes either the RRC Handover Preparation Information message as defined in subclause 10.2.2 of TS 36.331 [9], or the HandoverPrepar ationInformation-NB message as defined in subclause 10.6.2 of TS 36.331 [9].	_	
>Handover Restriction List	0		9.2.3		_	
>Location Reporting Information	0		9.2.21	Includes the necessary parameters for location reporting	_	

>Management Based MDT Allowed	0	9.2.59		_	
>Management Based MDT PLMN List	0	MDT PLMN List 9.2.64		_	
>UE Sidelink Aggregate Maximum Bit Rate	0	9.2.97	This IE applies only if the UE is authorized for V2X services.	YES	ignore
>EPC Handover Restriction List Container	0	9.2.153		YES	ignore
Trace Activation	0	9.2.2		YES	ignore
SRVCC Operation Possible	0	9.2.33		YES	ignore
Masked IMEISV	0	9.2.69		YES	ignore
Expected UE Behaviour	0	9.2.70		YES	ignore
ProSe Authorized	0	9.2.78		YES	ignore
Criticality Diagnostics	0	9.2.7		YES	ignore
V2X Services Authorized	0	9.2.93		YES	ignore
Aerial UE subscription information	0	9.2.129		YES	ignore
Subscription Based UE Differentiation Information	0	9.2.136		YES	ignore

Range bound	Explanation		
maxnoofBearers	Maximum no. of E-RABs. Value is 256		

9.1.2.30 RETRIEVE UE CONTEXT FAILURE

This message is sent by the old eNB to inform the new eNB that the Retrieve UE Context procedure has failed.

Direction: old eNB \rightarrow new eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
New eNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the new eNB	YES	ignore
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the new eNB	YES	ignore
Cause	М	•	9.2.6		YES	ignore
Criticality Diagnostics	0	•	9.2.7		YES	ignore

9.1.2.31 EN-DC X2 SETUP REQUEST

This message is sent by an initiating node to a neighbouring node, both nodes able to interact for EN-DC, to transfer the initialization information for a TNL association.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
CHOICE Initiating	M				YES	reject
NodeType						
>eNB						
>>Global eNB ID	M		9.2.22		YES	reject
>>List of Served E- UTRA Cells		1 <maxcellinenb></maxcellinenb>		Complete list of cells served by the eNB	YES	reject
>>>Served E-UTRA Cell Information	M		Served Cell Information 9.2.8		_	
>>>NR Neighbour Information	0		9.2.98	NR neighbours	_	
>>Interface Instance Indication	0		9.2.143	NOTE: In the current version of this specification this IE is not included in the <i>Initiating Node Type</i> IE.	YES	reject
>en-gNB						
>>Global en-gNB ID	M		9.2.112		YES	reject
>>List of Served NR Cells		1 <maxcellinengn B></maxcellinengn 		Complete list of cells served by the engNB.	YES	reject
>>>Served NR Cell Information	М		9.2.110		_	
>>>NR Neighbour Information	0		9.2.98	NR neighbours.	_	
Interface Instance Indication	0		9.2.143		YES	reject

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.
maxCellinengNB	Maximum no. cells that can be served by an en-gNB. Value is 16384.

9.1.2.32 EN-DC X2 SETUP RESPONSE

This message is sent by a neighbouring node to an initiating node, both nodes able to interact for EN-DC, to transfer the initialization information for a TNL association.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
CHOICE Responding NodeType	M				YES	reject
>eNB						
>>Global eNB ID	M		9.2.22		YES	reject
>>List of Served E- UTRA Cells		1 <maxcellinenb></maxcellinenb>		Complete list of cells served by the eNB	YES	reject
>>>Served E-UTRA Cell Information	M		Served Cell Information 9.2.8			
>>>NR Neighbour Information	0		9.2.98	NR neighbours	_	
>en-gNB						
>>Global en-gNB ID	M		9.2.112		YES	reject
>>List of Served NR Cells		1 <maxcellinengn B></maxcellinengn 		Complete list of cells served by the en-gNB	YES	reject
>>>Served NR Cell Information	М		9.2.110		1	
>>>NR Neighbour Information	0		9.2.98	NR neighbours	_	
Interface Instance Indication	0		9.2.143		YES	reject

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.
maxCellinengNB	Maximum no. cells that can be served by an en-gNB. Value is 16384.

9.1.2.33 EN-DC X2 SETUP FAILURE

This message is sent by the neighbouring node to indicate EN-DC X2 Setup failure.

Direction: $eNB \rightarrow en-gNB$, $en-gNB \rightarrow eNB$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
Time To Wait	0		9.2.32		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

9.1.2.34 EN-DC CONFIGURATION UPDATE

This message is sent by an initiating node to a peer neighbouring node, both nodes able to interact for EN-DC, to transfer updated information for a TNL association.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
CHOICE Initiating NodeType	М				YES	reject
>eNB						
>>Cell Assistance Information	0		9.2.115		YES	reject
>>Served E-UTRA Cells To Add		0 <maxcellinenb></maxcellinenb>			GLOBAL	reject
>>>Served E-UTRA Cell Information	М		Served Cell Information 9.2.8		_	
>>>NR Neighbour Information	0		9.2.98	NR neighbours	-	
>>Served E-UTRA Cells To Modify		0 <maxcellinenb></maxcellinenb>		Complete list of modified cells served by the eNB	GLOBAL	reject
>>>Old ECGI	M		ECGI 9.2.14	Old E-UTRAN Cell Global Identifier	ı	
>>>Served E-UTRA Cell Information	M		Served Cell Information 9.2.8		1	
>>>NR Neighbour Information	0		9.2.98	NR neighbours	-	
>>Served E-UTRA Cells To Delete		0 <maxcellinenb></maxcellinenb>		Complete list of deleted cells served by the eNB	GLOBAL	reject
>>>Old ECGI	M		ECGI 9.2.14	Old E-UTRAN Cell Global Identifier of the cell to be deleted	-	
>en-gNB						
>>Served NR Cells To Add		0 <maxcellinen- gNB></maxcellinen- 			GLOBAL	reject
>>>Served NR Cell Information	М		9.2.110		_	
>>>NR Neighbour Information	0		9.2.98	NR neighbours	_	
>>Served NR Cells To Modify		0 <maxcellinen- gNB></maxcellinen- 			GLOBAL	reject
>>>Old NR-CGI	М		NR CGI 9.2.111		-	
>>>Served NR Cell Information	М		9.2.110		_	
>>>NR Neighbour Information	0		9.2.98	NR neighbours	_	
>>>NR Deactivation Indication	0		ENUMERAT ED(deactivat ed,)	Indicates that the concerned NR cell is switched off for energy saving reasons. If this IE is not included, indicates that the concerned cell is activated.	YES	ignore
>>Served NR Cells To Delete		0 <maxcellinen- gNB></maxcellinen- 			GLOBAL	reject

>>>Old NR-CGI	М	1	NR CGI	-	
		9	9.2.111		
Interface Instance	0	(9.2.143	YES	reject
Indication					

Range bound	Explanation				
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.				
maxCellinengNB	Maximum no. cells that can be served by an en-gNB. Value is 16384.				

9.1.2.35 EN-DC CONFIGURATION UPDATE ACKNOWLEDGE

This message is sent by a neighbouring node to a peer node, both nodes able to interact for EN-DC, to acknowledge update of information for a TNL association.

Direction: en-gNB \rightarrow eNB, eNB \rightarrow en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
CHOICE Responding NodeType	M				YES	reject
>eNB						
>en-gNB						
>>List of Served NR Cells		0 <maxcellinengn B></maxcellinengn 		Complete or limited list of cells served by the engNB, if requested by the eNB.		
>>>Served NR Cell Information	M		9.2.110			
>>>NR Neighbour Information	0		9.2.98	NR neighbours.	1	
Interface Instance Indication	0		9.2.143		YES	reject
Criticality Diagnostics	0		9.2.7		YES	ignore

Range bound	Explanation
maxCellinengNB	Maximum no. cells that can be served by an en-gNB. Value is
	16384.

9.1.2.36 EN-DC CONFIGURATION UPDATE FAILURE

This message is sent by a neighbouring node to a peer node to indicate EN-DC eNB Configuration Update Failure.

Direction: en-gNB \rightarrow eNB, eNB \rightarrow en-gNB.

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
			reference	description		Criticality
Message Type	M		9.2.13		YES	reject
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
Time To Wait	0		9.2.32		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

9.1.2.37 EN-DC CELL ACTIVATION REQUEST

This message is sent by an eNB to a peer en-gNB to request a previously switched-off cell(s) to be re-activated.

Direction: eNB \rightarrow en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Served NR Cells To Activate		1			GLOBAL	reject
>Served NR Cells To Activate Item		1 < maxCellinengNB >				
>>NR CGI	M		9.2.111		-	
Activation ID	М		INTEGER (0255)	Allocated by the eNB	YES	reject
Interface Instance Indication	0		9.2.143		YES	reject

Range bound	Explanation				
maxCellinengNB	Maximum no. cells that can be served by an en-gNB. Value is				
	16384.				

9.1.2.38 EN-DC CELL ACTIVATION RESPONSE

This message is sent by an en-gNB to a peer eNB to indicate that one or more cell(s) previously switched-off has (have) been activated.

Direction: en-gNB \rightarrow eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Activated NR Cell List		1			GLOBAL	ignore
>Activated NR Cell Item		1 < maxCellinengNB >				
>>NR CGI	M		9.2.111		-	
Activation ID	М		INTEGER (0255)	Allocated by the eNB	YES	reject
Criticality Diagnostics	0		9.2.7		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

Range bound	Explanation
maxCellinengNB	Maximum no. cells that can be served by an en-gNB. Value is
	16384.

9.1.2.39 EN-DC CELL ACTIVATION FAILURE

This message is sent by an en-gNB to a peer eNB to indicate cell activation failure.

Direction: en-gNB \rightarrow eNB.

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
			reference	description		Criticality
Message Type	M		9.2.13		YES	reject
Activation ID	M		INTEGER	Allocated by	YES	reject
			(0255)	the eNB		
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

9.1.2.40 EN-DC X2 REMOVAL REQUEST

This message is sent by an initiating node to a neighbouring node to initiate the removal of the signaling connection.

Direction: $eNB \rightarrow en-gNB$, $en-gNB \rightarrow eNB$.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
CHOICE Initiating Node Type	M					
>eNB						
>>Global eNB ID	M		9.2.22		YES	reject
>en-gNB						
>>Global en-gNB ID	M		9.2.112			
X2 Removal Threshold	0		X2 Benefit Value 9.2.90		YES	reject
Interface Instance Indication	0		9.2.143		YES	reject

9.1.2.41 EN-DC X2 REMOVAL RESPONSE

This message is sent by an initiating node to a neighbouring node to acknowledge the initiation of removal of the signaling connection.

Direction: eNB \rightarrow en-gNB, en-gNB \rightarrow eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
CHOICE Initiating Node	M					
Type						
>eNB						
>>Global eNB ID	M		9.2.22		YES	reject
>en-gNB						
>>Global en-gNB ID	M		9.2.112		YES	reject
Criticality Diagnostics	0		9.2.7		YES	ignore
Interface Instance	0		9.2.143		YES	reject
Indication						

9.1.2.42 EN-DC X2 REMOVAL FAILURE

This message is sent by the initiating node to indicate that removing the signaling connection cannot be accepted.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

9.1.2.43 DATA FORWARDING ADDRESS INDICATION

This message is sent by the new eNB to indicate to the old eNB forwarding addresses for each E-RAB for which it admits data forwarding.

Direction: new eNB \rightarrow old eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	description	YES	ignore
New eNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the new eNB	YES	ignore
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the new eNB	YES	ignore
Old eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the old eNB	YES	ignore
Old eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the old eNB	YES	ignore
E-RABs Data Forwarding Address List		1			YES	ignore
> E-RABs Data Forwarding Address Item		1 <maxnoofbearers ></maxnoofbearers 			EACH	ignore
>>E-RAB ID	M		9.2.23		-	
>>DL GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.2.44 EN-DC CONFIGURATION TRANSFER

This message is sent by an eNB in order to transfer the EN-DC SON Configuration container to an en-gNB, or it is sent by an en-gNB in order to transfer the EN-DC SON Configuration container to an eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	ignore
EN-DC SON Configuration Transfer	0		OCTET STRING	Contains the EN-DC SON Configuration Transfer IE as defined in TS 36.413 [4].	YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

9.1.3 Messages for Dual Connectivity Procedures

9.1.3.1 SENB ADDITION REQUEST

This message is sent by the MeNB to the SeNB to request the preparation of resources for dual connectivity operation for a specific UE

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
UE Security Capabilities	C- ifSCGBear erOption		9.2.29		YES	reject
SeNB Security Key	C- ifSCGBear erOption		9.2.72	The S-KeNB which is provided by the MeNB, see TS 33.401 [18].	YES	reject
SeNB UE Aggregate Maximum Bit Rate	M		UE Aggregate Maximum Bit Rate 9.2.12	The UE Aggregate Maximum Bit Rate is split into MeNB UE Aggregate Maximum Bit Rate and SeNB UE Aggregate Maximum Bit Rate which are enforced by MeNB and SeNB respectively.	YES	reject
Serving PLMN	0		PLMN Identity 9.2.4	The serving PLMN of the SCG in the SeNB.	YES	ignore
E-RABs To Be Added List		1			YES	reject
>E-RABs To Be Added Item		1 <maxnoofbeare rs></maxnoofbeare 			EACH	reject
>>CHOICE Bearer Option	M					
>>>SCG Bearer	N.4		0.000			
>>>E-RAB ID >>>>E-RAB Level QoS Parameters	M		9.2.23	Includes necessary QoS parameters	_	
>>>DL Forwarding	0		9.2.5		_	
>>>>S1 UL GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	SGW endpoint of the S1 transport bearer. For delivery of UL PDUs.	_	
>>>Correlation ID	0		Correlation ID 9.2.84		_	
>>>SIPTO Correlation ID	0		Correlation ID 9.2.84		-	
>>>Bearer Type	0		9.2.92		YES	ignore
>>>Split Bearer						
>>>E-RAB ID	M		9.2.23		_	
>>>E-RAB Level QoS Parameters	M		9.2.9	Includes necessary QoS parameters	_	
>>>>MeNB GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	MeNB endpoint of the X2 transport bearer. For delivery of UL PDUs.	-	
MeNB to SeNB Container	М		OCTET STRING	Includes the SCG- ConfigInfo message as defined in TS 36.331 [9]	YES	reject
CSG Membership Status	0		9.2.52		YES	reject
SeNB UE X2AP ID	0		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	reject

SeNB UE X2AP ID Extension	0	Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	reject
Expected UE Behaviour	0	9.2.70		YES	ignore
MeNB UE X2AP ID Extension	0	Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject

Range bound	Explanation		
maxnoofBearers	Maximum no. of E-RABs. Value is 256		

Condition	Explanation
ifSCGBearerOption	This IE shall be present if the Bearer Option IE is set to the value
	"SCG bearer".

9.1.3.2 SENB ADDITION REQUEST ACKNOWLEDGE

This message is sent by the SeNB to confirm the MeNB about the SeNB addition preparation.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	reject
E-RABs Admitted To Be Added List		1			YES	ignore
>E-RABs Admitted To Be Added Item		1 <maxnoofbe arers></maxnoofbe 			EACH	ignore
>>CHOICE Bearer Option	М					
>>>SCG Bearer						
>>>E-RAB ID	M		9.2.23		_	
>>>S1 DL GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	SeNB endpoint of the S1 transport bearer. For delivery of DL PDUs.	_	
>>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	_	
>>>Split Bearer						
>>>E-RAB ID	M		9.2.23		_	
>>>>SeNB GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	Endpoint of the X2 transport bearer at the SeNB.	-	
E-RABs Not Admitted List	0		E-RAB List 9.2.28	A value for E-RAB ID shall only be present once in E- RABs Admitted List IE and in E-RABs Not Admitted List IE.	YES	ignore
SeNB to MeNB Container	M		OCTET STRING	Includes the SCG- Config message as defined in TS 36.331 [9]	YES	reject
Criticality Diagnostics	0		9.2.7		YES	ignore
GW Transport Layer Address	0		BIT STRING (1160,)	Indicating GW Transport Layer Address.	YES	ignore
SIPTO L-GW Transport Layer Address	0		BIT STRING (1160,)	Indicating SIPTO L- GW Transport Layer Address.	YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	reject
Tunnel Information for BBF	0		Tunnel Information 9.2.89	Indicating eNB's Local IP Address assigned by the broadband access provider, UDP port Number.	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.3.3 SENB ADDITION REQUEST REJECT

This message is sent by the SeNB to inform the MeNB that the SeNB Addition Preparation has failed.

Direction: SeNB \rightarrow MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	reject
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	reject

9.1.3.4 SENB RECONFIGURATION COMPLETE

This message is sent by the MeNB to the SeNB to indicate whether the configuration requested by the SeNB was applied by the UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	reject
Response Information	M				YES	ignore
>CHOICE Response Type	M					
>>Configuration successfully applied						
>>>MeNB to SeNB Container	0		OCTET STRING	Includes the SCG- ConfigInfo message as defined in TS 36.331 [9]	-	
>>Configuration rejected by the MeNB						
>>>Cause	M		9.2.6		ı	
>>>MeNB to SeNB Container	0		OCTET STRING	Includes the SCG- ConfigInfo message as defined in TS 36.331 [9]	1	
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	reject

9.1.3.5 SENB MODIFICATION REQUEST

This message is sent by the MeNB to the SeNB to request the preparation to modify SeNB resources for a specific UE. Direction: $MeNB \rightarrow SeNB$.

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
-		9	reference	description		Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE	Allocated at the	YES	reject
			X2AP ID	MeNB		
			9.2.24			
SeNB UE X2AP ID	M		eNB UE	Allocated at the	YES	reject
			X2AP ID	SeNB		-
			9.2.24			
Cause	M		9.2.6		YES	ignore
SCG Change Indication	0		9.2.73		YES	ignore
Serving PLMN	0		PLMN	The serving PLMN	YES	ignore
			Identity	of the SCG in the		
			9.2.4	SeNB.		
UE Context Information		01			YES	reject
>UE Security Capabilities	0		9.2.29		_	
>SeNB Security Key	0		9.2.72		_	
>SeNB UE Aggregate	0		UE		_	
Maximum Bit Rate			Aggregate			
			Maximum Bit			
			Rate			
			9.2.12			
>E-RABs To Be Added List		01			_	
>>E-RABs To Be Added		1			EACH	ignore
Item		<maxnoofbeare< td=""><td></td><td></td><td></td><td>3</td></maxnoofbeare<>				3
		rs>				
>>>CHOICE Bearer	M					
Option						
>>>SCG Bearer						
>>>>E-RAB ID	M		9.2.23		_	
>>>>E-RAB Level	М		9.2.9	Includes necessary	_	
QoS Parameters				QoS parameters		
>>>>DL	0		9.2.5		_	
Forwarding						
>>>>S1 UL GTP	М		GTP Tunnel	SGW endpoint of	_	
Tunnel Endpoint			Endpoint	the S1 transport		
			9.2.1	bearer. For delivery		
				of UL PDUs.		
>>>>Correlation ID	0		Correlation		_	
			ID			
			9.2.84			
>>>>SIPTO	0		Correlation		_	
Correlation ID			ID			
			9.2.84			
>>>>Bearer Type	0		9.2.92		YES	ignore
>>>Split Bearer						<u> </u>
>>>>E-RAB ID	М		9.2.23		_	
>>>>E-RAB Level	M		9.2.9	Includes necessary	_	
QoS Parameters				QoS parameters		
>>>>MeNB GTP	М		GTP Tunnel	MeNB endpoint of	_	
Tunnel Endpoint			Endpoint	the X2 transport		
			9.2.1	bearer. For delivery		
				of UL PDUs.		
>E-RABs To Be Modified		01			_	
List						
>>E-RABs To Be		1			EACH	ignore
Modified Item		<maxnoofbeare< td=""><td></td><td></td><td></td><td>3</td></maxnoofbeare<>				3
		rs>				
>>>CHOICE Bearer	М					
Option						
>>>SCG Bearer						
>>>>E-RAB ID	М		9.2.23		_	
>>>>E-RAB Level	0		9.2.9	Includes QoS	_	
QoS Parameters				parameters to be		
				modified		
	L	ļ	ļ	mounieu	ļ	

>>>>S1 UL GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	SGW endpoint of the S1 transport bearer. For delivery of UL PDUs.	-	
>>>Split Bearer						
>>>>E-RAB ID	M		9.2.23		_	
>>>>E-RAB Level QoS Parameters	0		9.2.9	Includes QoS parameters to be modified	-	
>>>>MeNB GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	MeNB endpoint of the X2 transport bearer. For delivery of UL PDUs.	-	
>E-RABs To Be Released List		01			_	
>>E-RABs To Be Released Item		1 <maxnoofbeare rs></maxnoofbeare 			EACH	ignore
>>>CHOICE Bearer Option	М					
>>>SCG Bearer						
>>>>E-RAB ID	M		9.2.23		_	
>>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer. used for forwarding of UL PDUs	-	
>>>Split Bearer						
>>>>E-RAB ID	М		9.2.23		_	
>>>>DL Forwarding GTP Tunnel Endpoint	Ö		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	
MeNB to SeNB Container	0		OCTET STRING	Includes the SCG- ConfigInfo message as defined in TS 36.331 [9]	YES	ignore
CSG Membership Status	0		9.2.52		YES	reject
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	reject

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.3.6 SENB MODIFICATION REQUEST ACKNOWLEDGE

This message is sent by the SeNB to confirm the MeNB's request to modify the SeNB resources for a specific UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	ignore
E-RABs Admitted List		01			YES	ignore
>E-RABs Admitted To Be		1			_	<u> </u>
Added List						
>>E-RABs Admitted To Be Added Item		1 <maxnoofbearers ></maxnoofbearers 			EACH	ignore
>>>CHOICE Bearer Option	M					
>>>SCG Bearer						
>>>>E-RAB ID	M		9.2.23		-	
>>>>S1 DL GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	SeNB endpoint of the S1 transport bearer. For delivery of DL PDUs.	_	
>>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	-	
>>>Split Bearer						
>>>>E-RAB ID	М		9.2.23		-	
>>>>SeNB GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	Endpoint of the X2 transport bearer at the SeNB.	_	
>E-RABs Admitted To Be Modified List		01			I	
>>E-RABs Admitted To Be Modified Item		1 <maxnoofbearers ></maxnoofbearers 			EACH	ignore
>>>CHOICE Bearer Option	М					
>>>SCG Bearer						
>>>>E-RAB ID	M		9.2.23		ı	
>>>>S1 DL GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	SeNB endpoint of the S1 transport bearer. For delivery of DL PDUs.	_	
>>>Split Bearer	ļ					
>>>>E-RAB ID	M		9.2.23		_	

	T _		T	T		
>>>>SeNB GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Endpoint of the X2 transport bearer at the SeNB.	_	
>E-RABs Admitted To Be Released List		01			_	
>>E-RABs Admitted To Be Released Item		1 <maxnoofbearers< td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxnoofbearers<>			EACH	ignore
>>>CHOICE Bearer Option	М					
>>>SCG Bearer						
>>>>E-RAB ID	M		9.2.23		_	
>>>Split Bearer						
>>>>E-RAB ID	M		9.2.23		_	
E-RABs Not Admitted List	0		E-RAB List 9.2.28	A value for E-RAB ID shall only be present once in E-RABs Admitted List IE and in E- RABs Not Admitted List IE.	YES	ignore
SeNB to MeNB Container	0		OCTET STRING	Includes the SCG-Config message as defined in TS 36.331	YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	Ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.3.7 SENB MODIFICATION REQUEST REJECT

This message is sent by the SeNB to inform the MeNB that the MeNB initiated SeNB Modification Preparation has failed.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	ignore
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	ignore

9.1.3.8 SENB MODIFICATION REQUIRED

This message is sent by the SeNB to the MeNB to request the modification of SeNB resources for a specific UE.

Direction: SeNB \rightarrow MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	reject
Cause	M		9.2.6		YES	ignore
SCG Change Indication	0		9.2.73		YES	ignore
E-RABs To Be Released List		01			YES	ignore
>E-RABs To Be Released Item		1 <maxnoofbeare rs></maxnoofbeare 			EACH	ignore
>>E-RAB ID	M		9.2.23		_	
>>Cause	M		9.2.6		_	
SeNB to MeNB Container	0		OCTET STRING	Includes the SCG- Config message as defined in TS 36.331 [9]	YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	reject

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.3.9 SENB MODIFICATION CONFIRM

This message is sent by the MeNB to inform the SeNB about the successful modification.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	ignore
MeNB to SeNB Container	0		OCTET STRING	Includes the SCG-ConfigInfo message as defined in TS 36.331	YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	ignore

9.1.3.10 SENB MODIFICATION REFUSE

This message is sent by the MeNB to inform the SeNB that the SeNB initiated SeNB Modification has failed.

Direction: MeNB \rightarrow SeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	ignore
Cause	M		9.2.6		YES	ignore
MeNB to SeNB Container	0		OCTET STRING	Includes the SCG-ConfigInfo message as defined in TS 36.331	YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	ignore

9.1.3.11 SENB RELEASE REQUEST

This message is sent by the MeNB to the SeNB to request the release of resources.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	•	YES	ignore
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID	0		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	reject
Cause	0		9.2.6		YES	ignore
E-RABs To Be Released List		01			YES	ignore
> E-RABs To Be Released Item		1 <maxnoofbearers ></maxnoofbearers 			EACH	ignore
>>CHOICE Bearer Option	М					
>>>SCG Bearer						
>>>E-RAB ID	M		9.2.23		_	
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	-	
>>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer. used for forwarding of DL PDUs	-	
>>>Split Bearer						
>>>E-RAB ID	М		9.2.23		_	
>>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer. used for forwarding of DL PDUs	-	
UE Context Kept Indicator	0		9.2.85		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	reject
MakeBeforeBreak Indicator	0		ENUMERAT ED (True, ,)		YES	ignore

Range hound	Evolunation
Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.3.12 SENB RELEASE REQUIRED

This message is sent by the SeNB to request the release of all resources for a specific UE at the SeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	reject
Cause	M		9.2.6		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	reject

9.1.3.13 SENB RELEASE CONFIRM

This message is sent by the MeNB to confirm the release of all resources for a specific UE at the SeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	ignore
E-RABs to be Released List		01			YES	ignore
>E-RABs To Be Released Item		1 <maxnoofbearers ></maxnoofbearers 			-	
>>CHOICE Bearer Option	М					
>>>SCG Bearer			0.000			
>>>E-RAB ID	M		9.2.23	11 66 0	_	
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	-	
>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	
>>>Split Bearer						
>>>E-RAB ID	М		9.2.23		_	
>>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.3.14 SENB COUNTER CHECK REQUEST

This message is sent by the SeNB to request the verification of the value of the PDCP COUNTs associated with SCG bearers established in the SeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	ignore
E-RABs Subject to Counter Check List		1			YES	ignore
>E-RABs Subject to Counter Check Item		1 <maxnoofbearers ></maxnoofbearers 			EACH	ignore
>>E-RAB ID	M		9.2.23		-	
>>UL COUNT	M	INTEGER(0 4294967295)		Indicates the value of uplink COUNT associated to this E-RAB.	-	
>>DL COUNT	М	INTEGER(0 4294967295)		Indicates the value of downlink COUNT associated to this E-RAB.	-	
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.4 Messages for E-UTRAN-NR Dual Connectivity Procedures

9.1.4.1 SGNB ADDITION REQUEST

This message is sent by the MeNB to the en-gNB to request the preparation of resources for EN-DC operation for a specific UE

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	•	YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
NR UE Security Capabilities	М		9.2.107		YES	reject
SgNB Security Key	М		9.2.101	The S-KgNB which is provided by the MeNB, see TS 33.401 [18].	YES	reject
SgNB UE Aggregate Maximum Bit Rate	М		UE Aggregate Maximum Bit Rate 9.2.12	The UE Aggregate Maximum Bit Rate is split into MeNB UE Aggregate Maximum Bit Rate and SgNB UE Aggregate Maximum Bit Rate which are enforced by MeNB and en- gNB respectively.	YES	reject
Selected PLMN	0		PLMN Identity 9.2.4	The selected PLMN of the SCG in the en-gNB.	YES	ignore
Handover Restriction List	0		9.2.3		YES	ignore
E-RABs To Be Added List		1			YES	reject
>E-RABs To Be Added Item		1 <maxnoofbeare rs></maxnoofbeare 			EACH	reject
>>E-RAB ID	M		9.2.23		_	
>>DRB ID	М		9.2.122		_	
>>EN-DC Resource Configuration	М		EN-DC Resource Configuratio n 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration.	_	
>>CHOICE Resource Configuration	М					
>>>PDCP present in SN				This choice tag is used if the PDCP at SgNB IE in the ENDCP at SgNB IE in the ENDCP Resource Configuration IE is set to the value "present".		
>>>>Full E-RAB Level QoS Parameters	М		E-RAB Level QoS Parameters 9.2.9	Includes the E-RAB level QoS parameters as received on S1- MME.	-	
>>>>Maximum MCG admittable E-RAB Level QoS Parameters	C- ifMCGand SCGprese nt_GBR		GBR QoS Information 9.2.10	Includes the GBR QoS Information admittable by the MCG.	-	
>>>DL Forwarding	0		9.2.5		_	
>>>>MeNB DL GTP Tunnel Endpoint at MCG	C- ifMCGpres ent		GTP Tunnel Endpoint 9.2.1	MeNB endpoint of the X2-U transport bearer at MCG. For delivery of DL PDCP PDUs.	-	
>>>S1 UL GTP Tunnel Endpoint	М		GTP Tunnel Endpoint 9.2.1	SGW endpoint of the S1-U transport bearer. For delivery of UL PDUs from the en-gNB.	_	

			T		
>>>RLC Mode	0	RLC Mode	Indicates the RLC	YES	ignore
		9.2.119	mode at the MeNB		
			for PDCP transfer		
D		0.000	to en-gNB.	\/F0	
>>>Bearer Type	0	9.2.92	This shairs to als	YES	ignore
>>>PDCP not present			This choice tag is		
in SN			used if the PDCP at		
			SgNB IE in the EN-		
			DC Resource		
			Configuration IE is set to the value		
			"not present".		
>>>>Requested SCG	M	E-RAB Level	Includes E-RAB		
E-RAB Level QoS	IVI	QoS	level QoS	_	
Parameters		Parameters	parameters		
1 arameters		9.2.9	requested to be		
		9.2.9	provided by the		
			SCG.		
>>>MeNB UL GTP	М	GTP Tunnel	MeNB endpoint of	_	
Tunnel Endpoint at	IVI	Endpoint	the X2-U transport		
PDCP		9.2.1	bearer. For delivery		
1 201		0.2.1	of UL PDCP PDUs.		
>>>Secondary	0	GTP Tunnel	MeNB endpoint of	_	
MeNB UL GTP		Endpoint	the X2-U transport		
Tunnel Endpoint at		9.2.1	bearer. For delivery		
PDCP		0.2.1	of UL PDCP PDUs		
1 20.			in case of PDCP		
			duplication.		
>>>RLC Mode	М	RLC Mode	Indicates the RLC	_	
PPPINEO Modo	""	9.2.119	mode to be used in		
		0.2.110	the assisting node.		
>>>>UL Configuration	C-	9.2.118	Information about	_	
2275 GE Gormgaration	ifMCGand	0.2.110	UL usage in the en-		
	SCGprese		gNB.		
	nt		9.1-1		
>>>UL PDCP SN	0	PDCP SN	Indicates the PDCP	YES	ignore
Length		Length	SN length of the		
3		9.2.133	bearer for the UL.		
>>>DL PDCP SN	0	PDCP SN	Indicates the PDCP	YES	ignore
Length		Length	SN length of the		
3		9.2.133	bearer for the DL.		
>>>>Duplication	0	9.2.137	Indicated the initial	YES	ignore
activation			staus of PDCP		
			duplication.		
MeNB to SgNB Container	М	OCTET	Includes the CG-	YES	reject
		STRING	ConfigInfo		'
			message as		
			defined in TS		
			38.331 [31].		
SgNB UE X2AP ID	0	en-gNB UE	Allocated at the en-	YES	reject
		X2AP ID	gNB.		
		9.2.100			<u> </u>
Expected UE Behaviour	0	9.2.70		YES	ignore
MeNB UE X2AP ID	0	Extended	Allocated at the	YES	reject
Extension		eNB UE	MeNB.		
		X2AP ID			
		9.2.86			
Requested split SRBs	0	ENUMERAT	Indicates that	YES	reject
		ED (srb1,	resources for Split		
		srb2,	SRB are requested.		
		srb1&2,)			
MeNB Resource	0	9.2.116	Information used to	YES	ignore
Coordination Information			coordinate		
			resources		
			utilisation between		
			MeNB and en-gNB.		

SGNB Addition Trigger Indication	0	ENUMERAT ED (SN change, inter-eNB HO, intra- eNB HO,)	This IE indicates the trigger for SGNB Addition procedure.	YES	reject
Subscriber Profile ID for RAT/Frequency priority	0	9.2.25		YES	ignore
MeNB Cell ID	М	ECGI 9.2.14	Indicates the cell ID for PCell in MeNB.	YES	reject
Desired Activity Notification Level	0	9.2.141		YES	ignore
Trace Activation	0	9.2.2		YES	ignore
Location Information at SgNB reporting	0	ENUMERAT ED (pscell,)	Indicates that the user's location information is to be provided.	YES	ignore
Masked IMEISV	0	9.2.69		YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256.

Condition	Explanation
ifMCGandSCGpresent	This IE shall be present if, for the E-RAB requested to be added, the MCG resources and SCG resources IEs in the EN-DC Resource
ifMCGpresent	Configuration IE are set to the value "present". This IE shall be present if, for the E-RAB requested to be added, the MCG resources IE in the EN-DC Resource Configuration IE is set to the value "present".
C-ifMCGandSCGpresent_GBR	This IE shall be present if, for the E-RAB requested to be added, the MCG resources and SCG resources IEs in the EN-DC Resource Configuration IE are set to the value "present", and GBR QoS Information IE is present in Full E-RAB Level QoS Parameters IE.

9.1.4.2 SGNB ADDITION REQUEST ACKNOWLEDGE

This message is sent by the en-gNB to confirm the MeNB about the SgNB addition preparation.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	uoconpuon	YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	М		en-gNB UE X2AP ID 9.2.100	Allocated at the engnB.	YES	reject
E-RABs Admitted To Be Added List		1			YES	ignore
>E-RABs Admitted To Be Added Item		1 <maxnoofbe arers></maxnoofbe 			EACH	ignore
>>E-RAB ID	M		9.2.23		_	
>>EN-DC Resource Configuration	M		EN-DC Resource Configuration 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration.	-	
>>CHOICE Resource Configuration	M					
>>>PDCP present in SN				This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present".		
>>>S1 DL GTP Tunnel Endpoint at the SgNB	M		GTP Tunnel Endpoint 9.2.1	en-gNB endpoint of the S1 transport bearer. For delivery of DL PDUs.	-	
>>>>SgNB UL GTP Tunnel Endpoint at PDCP	C- ifMCGpres ent		GTP Tunnel Endpoint 9.2.1	en-gNB endpoint of the X2-U transport bearer at PDCP. For delivery of UL PDCP PDUs.	_	
>>>RLC Mode	C- ifMCGpres ent		RLC Mode 9.2.119	Indicates the RLC mode.	_	
>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	_	
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	-	
>>>>Requested MCG E-RAB Level QoS Parameters	C- ifMCGand SCGprese nt_GBRpr esent		E-RAB Level QoS Parameters 9.2.9	Includes E-RAB level QoS parameters requested to be provided by the MCG.	-	
>>>UL Configuration	C- ifMCGand SCGprese nt		9.2.118	Information about UL usage in the MeNB.	-	
>>>UL PDCP SN Length	0		PDCP SN Length 9.2.133	Indicates the PDCP SN length of the bearer for the UL.	YES	ignore
>>>DL PDCP SN Length	0		PDCP SN Length 9.2.133	Indicates the PDCP SN length of the bearer for the DL.	YES	ignore

					,
>>>PDCP not present in SN			This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "not present".		
>>>>SgNB DL GTP Tunnel Endpoint at SCG	M	GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs.	1	
>>>Secondary SgNB DL GTP Tunnel Endpoint at SCG	0	GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs in case of PDCP duplication	_	
>>>>LCID	0	9.2.138	LCID for the primary path in case of PDCP duplication	YES	ignore
E-RABs Not Admitted List	0	E-RAB List 9.2.28	A value for E-RAB ID shall only be present once in E- RABs Admitted List IE and in E-RABs Not Admitted List IE.	YES	ignore
SgNB to MeNB Container	М	OCTET STRING	Includes the CG- Config message as defined in TS 38.331[31].	YES	reject
Criticality Diagnostics	0	9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0	Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
Admitted split SRBs	0	ENUMERATE D (srb1, srb2, srb1&2,)	Indicates admitted SRBs	YES	reject
SgNB Resource Coordination Information	0	9.2.117	Information used to coordinate resources utilisation between en-gNB and MeNB.	YES	ignore
RRC config indication	0	9.2.132	Indicates the type of RRC configuration used at the en-gNB.	YES	reject
Location Information at SgNB	0	9.2.142	Contains information to support localisation of the UE	YES	ignore

Range bound	Explanation		
maxnoofBearers	Maximum no. of E-RABs. Value is 256		

Condition	Explanation
ifMCGpresent	This IE shall be present if, for the E-RAB admitted to be added, the
	MCG resources IE in the EN-DC Resource Configuration IE is set to
	the value "present".
ifMCGandSCGpresent	This IE shall be present if, for the E-RAB admitted to be added, the
·	MCG resources and SCG resources IEs in the EN-DC Resource
	Configuration IE are set to the value "present".

C-ifMCGandSCGpresent_GBRpresent	This IE shall be present if, for the E-RAB admitted to be added, the MCG resources and SCG resources IEs in the EN-DC Resource
	Configuration IE are set to the value "present", and the GBR QoS Information IE is present in the Requested MCG E-RAB Level QoS
	Parameters IE.

9.1.4.3 SGNB ADDITION REQUEST REJECT

This message is sent by the en-gNB to inform the MeNB that the SgNB Addition Preparation has failed.

Direction: en-gNB \rightarrow MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	0		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	reject
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

9.1.4.4 SGNB RECONFIGURATION COMPLETE

This message is sent by the MeNB to the en-gNB to indicate whether the configuration requested by the en-gNB was applied by the UE.

Direction: MeNB \rightarrow en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the engns.	YES	reject
Response Information	М				YES	ignore
>CHOICE Response Type	М					
>>Configuration successfully applied						
>>>MeNB to SgNB Container	0		OCTET STRING	Includes the NR RRCReconfiguration Complete message as defined in TS 38.331 [31].	-	
>>Configuration rejected						
>>>Cause	M		9.2.6		-	
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject

9.1.4.5 SGNB MODIFICATION REQUEST

This message is sent by the MeNB to the en-gNB to request the preparation to modify en-gNB resources for a specific UE, to query for the current SCG configuration, or to provide the S-RLF-related information to the en-gNB.

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
-			reference	description		Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE	Allocated at the	YES	reject
			X2AP ID	MeNB.		
			9.2.24			
SgNB UE X2AP ID	M		en-gNB UE	Allocated at the en-	YES	reject
			X2AP ID	gNB.		
			9.2.100			
Cause	M		9.2.6		YES	ignore
Selected PLMN	0		PLMN	The selected PLMN	YES	ignore
			Identity	of the SCG in the		
			9.2.4	en-gNB.		
Handover Restriction List	0		9.2.3		YES	ignore
SCG Configuration Query	0		9.2.103		YES	ignore
UE Context Information		01			YES	reject
>NR UE Security	0		9.2.107		_	•
Capabilities						
>SgNB Security Key	0		9.2.101		_	
>SgNB UE Aggregate	0		UE		_	
Maximum Bit Rate			Aggregate			
maximum 211 tate			Maximum Bit			
			Rate			
			9.2.12			
>E-RABs To Be Added		01	0.2.12		_	
List		01				
>>E-RABs To Be Added		1			EACH	ignore
Item		<maxnoofbeare< td=""><td></td><td></td><td>LACIT</td><td>ignore</td></maxnoofbeare<>			LACIT	ignore
item		rs>				
>>>E-RAB ID	М	102	9.2.23		_	
>>>DRB ID	M		9.2.122		_	
>>>EN-DC Resource	M		EN-DC	Indicates the PDCP	_	
	IVI		Resource		_	
Configuration				and Lower Layer MCG/SCG		
			Configuratio			
			n 9.2.108	configuration.		
>>>CHOICE Resource	M		9.2.100			
Configuration	IVI					
				This choice tog is		
>>>PDCP present in SN				This choice tag is used if the PDCP at	_	
3/1						
				SgNB IE in the EN-		
				DC Resource		
				Configuration IE is		
				set to the value		
- UE 545			E 5 4 5 1	"present".		
>>>>Full E-RAB	М		E-RAB Level	Includes E-RAB	_	
Level QoS			QoS	level QoS		
Parameters			Parameters	parameters as		
			9.2.9	received on S1-		
			00000	MME.		
>>>>Maximum	C-		GBR QoS	Includes the GBR	_	
MCG admittable E-	ifMCGand		Information	QoS Information		
RAB Level QoS	SCGprese		9.2.10	admittable by the		
Parameters	nt_GBR		0.05	MCG.		
>>>>DL 	0		9.2.5		_	
Forwarding			0===			
>>>>MeNB DL	C-		GTP Tunnel	MeNB endpoint of	_	
GTP Tunnel	ifMCGpres		Endpoint	the X2-U transport		
Endpoint at MCG	ent		9.2.1	bearer at MCG. For		
				delivery of DL		
				PDCP PDUs.		
>>>>S1 UL GTP	M		GTP Tunnel	SGW endpoint of	_	
Tunnel Endpoint			Endpoint	the S1-U transport		
			9.2.1	bearer. For delivery		
				of UL PDUs from		
				the en-gNB.		

>>>>RLC Mode	0		RLC Mode	Indicates the RLC	YES	ignore
			9.2.119	mode at the MeNB		
				for PDCP transfer		
				to en-gNB.		
>>>>Bearer Type	0		9.2.92	3	YES	ignore
>>>PDCP not			0.2.02	This choice tag is		.9
present in SN				used if the PDCP at		
present in Siv				SgNB IE in the EN-		
				DC Resource		
				Configuration IE is		
				set to the value		
				"present".		
>>>>Requested	M		E-RAB Level	Includes necessary	_	
SCG E-RAB Level			QoS	E-RAB level QoS		
QoS Parameters			Parameters	parameters		
			9.2.9	requested to be		
				provided by the		
				SCG.		
>>>>MeNB UL	М		GTP Tunnel	MeNB endpoint of	_	
GTP Tunnel			Endpoint	the X2-U transport		
Endpoint at PDCP			9.2.1	bearer. For delivery		
Enapoint at 1 Boi			J.Z. 1	of UL PDCP PDUs.		
	0		GTP Tunnel	MeNB endpoint of		
>>>>Secondary	O				_	
MeNB UL GTP			Endpoint	the X2-U transport		
Tunnel Endpoint at			9.2.1	bearer. For delivery		
PDCP				of UL PDCP PDUs		
				in case of PDCP		
				duplication.		
>>>>RLC Mode	М		RLC Mode	Indicates the RLC	_	
			9.2.119	mode to be used in		
			0.20	the assisting node.		
>>>>UL	C-		9.2.118	Information about	_	
Configuration	ifMCGand		0.2.110	UL usage in the en-		
Configuration	SCGprese			gNB.		
	nt			gNB.		
>>>>UL PDCP SN	0		PDCP SN	Indicates the PDCP	YES	ianoro
	U				TES	ignore
Length			Length	SN length of the		
			9.2.133	bearer for the UL.		
>>>>DL PDCP SN	0		PDCP SN	Indicates the PDCP	YES	ignore
Length			Length	SN length of the		
			9.2.133	bearer for the DL.		
>>>> Duplication	0		9.2.137	Indicated the initial	YES	ignore
activation				staus of PDCP		Ü
				duplication.		
>E-RABs To Be Modified	1	01			_	
List		J 1				
>>E-RABs To Be	1	1			EACH	ignoro
Modified Item					EACH	ignore
woanea item		<maxnoofbeare< td=""><td></td><td></td><td></td><td></td></maxnoofbeare<>				
	 	rs>	0.0.00			
>>>E-RAB ID	M		9.2.23		_	
>>>EN-DC Resource	M		EN-DC	Indicates the PDCP	_	
Configuration			Resource	and Lower Layer		
_			Configuratio	MCG/SCG		
			n	configuration.		
			9.2.108			
>>>CHOICE Resource	М					
Configuration	1					
>>>PDCP present in				This choice tag is		
SN						
SIV				used if the PDCP at		
				SgNB IE in the EN-		
				DC Resource		
				Configuration IE is		
				set to the value		
				"present".		

>>>>Full E-RAB Level QoS Parameters	0		E-RAB Level QoS Parameters 9.2.9	Includes E-RAB level QoS parameters to be modified as received on S1- MME	-	
>>>>Maximum MCG admittable E- RAB Level QoS Parameters	0		GBR QoS Information 9.2.10	Includes the GBR QoS information admittable by the MCG	-	
>>>>MeNB GTP Tunnel Endpoint at MCG	0		GTP Tunnel Endpoint 9.2.1	MeNB endpoint of the X2-U transport bearer at MCG. For delivery of DL PDCP PDUs.	-	
>>>>S1 UL GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	SGW endpoint of the S1-U transport bearer. For delivery of UL PDUs from the en-gNB.	-	
>>>>RLC Status	0		9.2.131	Indicates the RLC has been re- established		
>>>>PDCP not present in SN				This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "not present".		
>>>>Requested SCG E-RAB Level QoS Parameters	0		E-RAB Level QoS Parameters 9.2.9	Includes E-RAB level QoS parameters requested to be provided by the SCG.	-	
>>>>MeNB UL GTP Tunnel Endpoint at PDCP	0		GTP Tunnel Endpoint 9.2.1	MeNB endpoint of the X2-U transport bearer. For delivery of UL PDCP PDUs.	ı	
>>>>UL Configuration	0		9.2.118	Information about UL usage in the engneral gnb.	-	
>>>>UL PDCP SN Length	0		PDCP SN Length 9.2.133	Shall be ignored by the en-gNB if received.	YES	ignore
>>>>DL PDCP SN Length	0		PDCP SN Length 9.2.133	Shall be ignored by the en-gNB if received.	YES	ignore
>>>>Secondary MeNB UL GTP Tunnel Endpoint at PDCP	0		GTP Tunnel Endpoint 9.2.1	MeNB endpoint of the X2-U transport bearer. For delivery of UL PDCP PDUs in case of PDCP duplication.	YES	ignore
>E-RABs To Be Released List		01				
>>E-RABs To Be Released Item		1 <maxnoofbeare rs></maxnoofbeare 			EACH	ignore
>>E-RAB ID >>>EN-DC Resource Configuration	M		9.2.23 EN-DC Resource Configuratio n 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration.	-	
>>>CHOICE Resource Configuration	М					

>>>PDCP present in SN			This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present".		
>>>>DL Forwarding GTP Tunnel Endpoint	0	GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	
>>>>UL Forwarding GTP Tunnel Endpoint	0	GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer. used for forwarding of UL PDUs	-	
>>>>PDCP not present in SN			This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "not present".		
>Subscriber Profile ID for RAT/Frequency priority	0	9.2.25		-	
MeNB to SgNB Container	0	OCTET STRING	Includes the CG- ConfigInfo message as defined in TS 38.331 [31].	YES	reject
MeNB UE X2AP ID Extension	0	Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
MeNB Resource Coordination Information	0	9.2.116	Information used to coordinate resources utilisation between MeNB and en-gNB.	YES	ignore
Requested split SRBs	0	ENUMERAT ED (srb1, srb2, srb1&2,)	Indicates that resources for Split SRB are requested.	YES	ignore
Requested split SRBs release	0	ENUMERAT ED (srb1, srb2, srb1&2,)	Indicates that resources for Split SRB are requested to be released.	YES	ignore
Desired Activity Notification Level	0	9.2.141		YES	ignore
Location Information at SgNB reporting	0	ENUMERAT ED (pscell,)	Indicates that the user's location information is to be provided.	YES	ignore
MeNB Cell ID	0	ECGI 9.2.14	Indicates the cell ID for PCell in MeNB.	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

Condition	Explanation
ifMCGandSCGpresent	This IE shall be present if, for the E-RAB requested to be added, the
	MCG resources and SCG resources IEs in the EN-DC Resource
	Configuration IE are set to the value "present".

ifMCGpresent	This IE shall be present if, for the E-RAB requested to be added, the MCG resources IE in the EN-DC Resource Configuration IE is set to the value "present".
C-ifMCGandSCGpresent_GBR	This IE shall be present if, for the E-RAB requested to be added, the MCG resources and SCG resources IEs in the EN-DC Resource Configuration IE are set to the value "present", and GBR QoS Information IE is present in Full E-RAB Level QoS Parameters IE.

9.1.4.6 SGNB MODIFICATION REQUEST ACKNOWLEDGE

This message is sent by the en-gNB to confirm the MeNB's request to modify the en-gNB resources for a specific UE. Direction: en-gNB \rightarrow MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13	-	YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.	YES	ignore
E-RABs Admitted To Be Added List		01			YES	ignore
>E-RABs Admitted To Be Added Item		1 <maxnoofb earers></maxnoofb 			EACH	ignore
>>E-RAB ID	M		9.2.23		_	
>>EN-DC Resource Configuration	М		EN-DC Resource Configuration 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration.	-	
>>CHOICE Resource Configuration	М			-		
>>>PDCP present in SN				This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present".		
>>>S1 DL GTP Tunnel Endpoint at the SgNB	M		GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the S1 transport bearer. For delivery of DL PDUs.	-	
>>>>SgNB UL GTP Tunnel Endpoint at PDCP	C- ifMCGpres ent		GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the X2-U transport bearer at PDCP. For delivery of UL PDCP PDUs.	-	
>>>>RLC Mode	C- ifMCGpres ent		RLC Mode 9.2.119	Indicates the RLC mode to be used at the assisting node.	_	
>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	_	
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	_	
>>>>Requested MCG E-RAB Level QoS Parameters	C- ifMCGand SCGprese nt_GBRpr esent		E-RAB Level QoS Parameters 9.2.9	Includes E-RAB level QoS parameters requested to be provided by the MCG.	-	
>>>UL Configuration	C- ifMCGand SCGprese nt		9.2.118	Information about UL usage in the MeNB.	-	
>>>>UL PDCP SN Length	0		PDCP SN Length 9.2.133	Indicates the PDCP SN length of the bearer for the UL.	YES	ignore
>>>>DL PDCP SN Length	0		PDCP SN Length 9.2.133	Indicates the PDCP SN length of the bearer for the DL.	YES	ignore
>>>PDCP not present in SN				This choice tag is used if the PDCP at SgNB IE in the ENDCP Resource Configuration IE is set to the value "not present".		

>>>>SgNB DL GTP Tunnel Endpoint at SCG	М		GTP Tunnel Endpoint 9.2.1	Endpoint of the X2-U transport bearer at the SCG. For delivery	-	
>>>Secondary SgNB DL GTP Tunnel Endpoint at SCG	0		GTP Tunnel Endpoint 9.2.1	of DL PDCP PDUs. Endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs in case of PDCP duplication.	-	
>>>LCID	0		9.2.138	LCID for the primary path in case of PDCP duplication configured.	YES	ignore
E-RABs Admitted To Be Modified List		01			YES	ignore
>E-RABs Admitted To Be Modified Item		1 <maxnoofb earers></maxnoofb 			EACH	ignore
>>E-RAB ID	M		9.2.23		_	
>>EN-DC Resource Configuration	M		EN-DC Resource Configuration 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration.	-	
>>CHOICE Resource Configuration	М					
>>>PDCP present in SN				This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present".		
>>>S1 DL GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the S1 transport bearer. For delivery of DL PDUs.	-	
>>>>SgNB UL GTP Tunnel Endpoint at PDCP	0		GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the X2-U transport bearer at PDCP. For delivery of UL PDCP PDUs.	-	
>>>Requested MCG E-RAB Level QoS Parameters	0		E-RAB Level QoS Parameters 9.2.9	Includes E-RAB level QoS parameters requested to be provided by the MCG.	-	
>>>UL Configuration	0		9.2.118	Information about UL usage in the MeNB.	_	
>>>>UL PDCP SN Length	0		PDCP SN Length 9.2.133	Shall be ignored by the MeNB if received.	YES	ignore
>>>DL PDCP SN Length	0		PDCP SN Length 9.2.133	Shall be ignored by the MeNB if received.	YES	ignore
>>>PDCP not present in SN				This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "not present".		
>>>>SgNB DL GTP Tunnel Endpoint at SCG	0		GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs.	-	

>>>Secondary SgNB DL GTP Tunnel Endpoint at SCG	Ο		GTP Tunnel Endpoint 9.2.1	Endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs in case of PDCP duplication.	YES	ignore
>>>>RLC Status	0		9.2.131	Indicates the RLC has been re-established.	YES	ignore
E-RABs Admitted To Be Released List		01			YES	ignore
>E-RABs Admitted To Be Released Item		1 <maxnoofb earers></maxnoofb 			EACH	ignore
>>E-RAB ID	М		9.2.23		_	
>>EN-DC Resource Configuration	M		EN-DC Resource Configuration 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration.	-	
>>CHOICE Resource Configuration	М			Note: no further information contained in the IE container		
E-RABs Not Admitted List	0		E-RAB List 9.2.28	A value for E-RAB ID shall only be present once in E-RABs Admitted List IE and in E-RABs Not Admitted List IE.	YES	ignore
SgNB to MeNB Container	0		OCTET STRING	Includes the NR CG- Config message as defined in TS 38.331 [31].	YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore
SgNB Resource Coordination Information	0		9.2.117	Information used to coordinate resources utilisation between en-gNB and MeNB.	YES	ignore
Admitted split SRBs	0		ENUMERATE D (srb1, srb2, srb1&2,)	Indicates admitted SRBs	YES	ignore
Admitted split SRBs release	0		ENUMERATE D (srb1, srb2, srb1&2,)	Indicates admitted SRBs release	YES	ignore
RRC config indication	0		9.2.132	Indicates the type of RRC configuration used at the en-gNB.	YES	reject
Location Information at SgNB	0		9.2.142	Contains information to support localisation of the UE	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

Condition	Explanation
ifMCGandSCGpresent	This IE shall be present if, for the E-RAB admitted to be added, the MCG resources and SCG resources IEs in the EN-DC Resource Configuration IE are set to the value "present".
ifMCGpresent	This IE shall be present if, for the E-RAB admitted to be added, the MCG resources IE in the EN-DC Resource Configuration IE is set to the value "present".

C-ifMCGandSCGpresent_GBRpresent	This IE shall be present if, for the E-RAB admitted to be added, the MCG resources and SCG resources IEs in the EN-DC Resource Configuration IE are set to the value "present", and the GBR QoS
	Information IE is present in the Requested MCG E-RAB Level QoS
	Parameters IE.

9.1.4.7 SGNB MODIFICATION REQUEST REJECT

This message is sent by the en-gNB to inform the MeNB that the MeNB initiated SgNB Modification Preparation has failed.

Direction: en-gNB \rightarrow MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	М		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	ignore
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	ignore

9.1.4.8 SGNB MODIFICATION REQUIRED

This message is sent by the en-gNB to the MeNB to request the modification of en-gNB resources for a specific UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	•	YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.	YES	reject
Cause	M		9.2.6		YES	ignore
PDCP Change Indication	0		9.2.109		YES	ignore
E-RABs To Be Released List		01			YES	ignore
>E-RABs To Be Released Item		1 <maxnoofbeare rs></maxnoofbeare 			EACH	ignore
>>E-RAB ID	M		9.2.23		_	
>>Cause	M		9.2.6		-	
>>RLC Mode	0		RLC Mode 9.2.119	Indicates the RLC mode at the en- gNB for PDCP transfer to MeNB.	YES	ignore
SgNB to MeNB Container	0		OCTET STRING	Includes the NR CG-Config message as defined in TS 38.331 [31].	YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
E-RABs To Be Modified List		01			YES	ignore
>E-RABs To Be Modified Item		1 <maxnoofbeare rs></maxnoofbeare 			EACH	ignore
>>E-RAB ID	М		9.2.23		_	
>>EN-DC Resource Configuration	М		EN-DC Resource Configuratio n 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration.	-	
>>CHOICE Resource Configuration	М					
>>>PDCP present in SN				This choice tag is used if the PDCP at SgNB IE in the ENDCP at SgNB IE in the ENDCP Resource Configuration IE is set to the value "present".		
>>>>Requested MCG E-RAB Level QoS Parameters	0		E-RAB Level QoS Parameters 9.2.9	Includes E-RAB level QoS parameters requested to be provided by the MCG.	-	
>>>>UL Configuration	0		9.2.118	Information about UL usage in the MeNB.	_	
>>>>UL PDCP SN Length	0		PDCP SN Length 9.2.133	Shall be ignored by the MeNB if received.	YES	ignore
>>>>DL PDCP SN Length	0		PDCP SN Length 9.2.133	Shall be ignored by the MeNB if received.	YES	ignore

	T	1			
>>>>SgNB UL GTP Tunnel Endpoint at PDCP	0	GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the X2-U transport bearer at PDCP. For delivery of UL PDCP PDUs.	-	
>>>>S1 DL GTP Tunnel Endpoint at the SgNB	0	GTP Tunnel Endpoint 9.2.1	en-gNB endpoint of the S1 transport bearer. For delivery of DL PDUs.	I	
>>>>New DRB ID Request	0	ENUMERAT ED (True, ,)		YES	ignore
>>>PDCP not present in SN			This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "not present".		
>>>>SgNB DL GTP Tunnel Endpoint at SCG	0	GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs.	ı	
>>>>Secondary SgNB DL GTP Tunnel Endpoint at SCG	0	GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs for PDCP duplication.	ı	
>>>>RLC Status	0	9.2.131	Indicates the RLC has been re-established		
>>>>LCID	0	9.2.138	Indicate the LCID of the primary path in case of PDCP duplication	YES	ignore
SgNB Resource Coordination Information	0	9.2.117	Information used to coordinate resources utilisation between the en-gNB and the MeNB.	YES	ignore
RRC config indication	0	9.2.132	Indicates the type of RRC configuration used at the en-gNB.	YES	reject
Location Information at SgNB	0	9.2.142	Contains information to support localisation of the UE	YES	ignore

Range bound	Explanation			
maxnoofBearers	Maximum no. of F-RABs. Value is 256			

9.1.4.9 SGNB MODIFICATION CONFIRM

This message is sent by the MeNB to inform the en-gNB about the successful modification.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M	1	9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	ignore
E-RABs Admitted To Be Modified List		01			YES	ignore
>E-RABs Admitted To Be Modified Item		1 <maxnoofbe arers></maxnoofbe 			EACH	ignore
>>E-RAB ID	M		9.2.23		_	
>>EN-DC Resource Configuration	M		EN-DC Resource Configuratio n 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration.	_	
>>CHOICE Resource Configuration	M					
>>>PDCP not present in SN				This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuration IE is set to the value "not present".		
>>>Secondary MeNB UL GTP Tunnel Endpoint at PDCP	0		GTP Tunnel Endpoint 9.2.1	MeNB endpoint of the X2-U transport bearer at the PDCP. For delivery of UL PDCP PDUs for PDCP duplication.	-	
>>>UL PDCP SN Length	0		PDCP SN Length 9.2.133	Shall be ignored by the en-gNB if received.	YES	ignore
>>>DL PDCP SN Length	0		PDCP SN Length 9.2.133	Shall be ignored by the en-gNB if received.	YES	ignore
MeNB to SgNB Container	0		OCTET STRING	Includes the NR RRCReconfigurati onComplete message as defined in TS 38.331 [31].	YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	ignore
MeNB Resource Coordination Information	0		9.2.116	Information used to coordinate resources utilisation between the MeNB and the en-gNB.	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.4.10 SGNB MODIFICATION REFUSE

This message is sent by the MeNB to inform the en-gNB that the SgNB initiated SgNB Modification has failed.

Direction: MeNB \rightarrow en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	ignore
Cause	M		9.2.6		YES	ignore
MeNB to SgNB Container	0		OCTET STRING	Includes the CG-ConfigInfo message as defined in TS 38.331 [31].	YES	ignore
Criticality Diagnostics	0	·	9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	ignore

9.1.4.11 SGNB RELEASE REQUEST

This message is sent by the MeNB to the en-gNB to request the release of resources.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	0		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	reject
Cause	М		9.2.6		YES	ignore
E-RABs To Be Released List		01			YES	ignore
>E-RABs To Be Released Item		1 <maxnoofbearers ></maxnoofbearers 			EACH	ignore
>>E-RAB ID	M		9.2.23		_	
>>EN-DC Resource Configuration	M		EN-DC Resource Configuratio n 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration	-	
>>CHOICE Resource Configuration	М					
>>>PDCP present in SN				This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "present".		
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	-	
>>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer. used for forwarding of DL PDUs	-	
>>>PDCP not present in SN				This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "not present".		
UE Context Kept Indicator	0		9.2.85		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject

MeNB to SgNB Container	0	OCT STR		YES	reject
E-RABs transferred to MeNB	0	E-RA 9.2.2	AB List Indicates the target MeNB reconfigured the listed E-RABs as MN-terminated bearers.	YES	ignore

Range bound	Explanation		
maxnoofBearers	Maximum no. of E-RABs. Value is 256		

9.1.4.12 SGNB RELEASE REQUEST ACKNOWLEDGE

This message is sent by the en-gNB to the MeNB to confirme the request to release en-gNB resources.

Direction: en-gNB \rightarrow MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	М		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject
E-RABs Admitted To Be Released List		01			YES	ignore
>E-RABs Admitted To Be Released Item		1 <maxnoofbearers ></maxnoofbearers 			EACH	ignore
>>E-RAB ID	M		9.2.23		_	
>>RLC Mode	М		RLC Mode 9.2.119	Indicates the RLC mode at the en- gNB for PDCP transfer to MeNB.	-	

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.4.13 SGNB RELEASE REQUEST REJECT

This message is sent by the en-gNB to the MeNB to reject the request to release en-gNB resources.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	ignore
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

9.1.4.14 SGNB RELEASE REQUIRED

This message is sent by the en-gNB to request the release of all resources for a specific UE at the en-gNB.

Direction: en-gNB \rightarrow MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13	•	YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.	YES	reject
Cause	M		9.2.6		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject
E-RABs To Be Released List		01			YES	ignore
>E-RABs To Be Released Item		1 <maxnoo fBearers</maxnoo 			EACH	ignore
>>E-RAB ID	M		9.2.23		_	
>>RLC Mode	М		RLC Mode 9.2.119	Indicates the RLC mode at the en-gNB for PDCP transfer to MeNB.	-	
SgNB to MeNB Container	0		OCTET STRING	Includes the NR CG-Config message as defined in TS 38.331 [31].	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.4.15 SGNB RELEASE CONFIRM

This message is sent by the MeNB to confirm the release of all resources for a specific UE at the en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	ignore
E-RABs to be Released List		01			YES	ignore
>E-RABs To Be Released Item		1 <maxnoofbearers ></maxnoofbearers 			-	
>>E-RAB ID	М		9.2.23		_	
>>EN-DC Resource Configuration	M		EN-DC Resource Configuratio n 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration	-	
>>CHOICE Resource Configuration	М					
>>>PDCP present in SN				This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "present".		
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	-	
>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	
>>>PDCP not present in SN				This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "not present".		
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore

Range bound	Explanation			
maxnoofBearers	Maximum no. of E-RABs. Value is 256			

9.1.4.16 SGNB COUNTER CHECK REQUEST

This message is sent by the en-gNB to request the verification of the value of the PDCP COUNTs associated with the bearers established in the en-gNB.

Direction: en-gNB \rightarrow MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	reject
E-RABs Subject to Counter Check List		1			YES	ignore
>E-RABs Subject to Counter Check Item		1 <maxnoofbearers< td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxnoofbearers<>			EACH	ignore
>>E-RAB ID	M		9.2.23		-	
>>UL COUNT	M	INTEGER(0 4294967295)		Indicates the value of uplink COUNT associated to this E-RAB.	-	
>>DL COUNT	M	INTEGER(0 4294967295)		Indicates the value of downlink COUNT associated to this E-RAB.	-	
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore

Range bound	Explanation		
maxnoofBearers	Maximum no. of E-RABs. Value is 256		

9.1.4.17 SGNB CHANGE REQUIRED

This message is sent by the en-gNB to the MeNB to request the change of en-gNB for a specific UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.	YES	reject
Target SgNB ID Information	M		9.2.102		YES	reject
Cause	M		9.2.6		YES	ignore
SgNB to MeNB Container	0		OCTET STRING	Includes the <i>CG-Config</i> message as defined in TS 38.331 [31].	YES	reject
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

9.1.4.18 SGNB CHANGE CONFIRM

This message is sent by the MeNB to inform the en-gNB about the successful change.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	М		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	ignore
E-RABs to be Released List		01			YES	ignore
>E-RABs To Be Released Item		1 <maxnoofbearers ></maxnoofbearers 			-	
>>E-RAB ID	M		9.2.23		_	
>>EN-DC Resource Configuration	M		EN-DC Resource Configuratio n 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration	-	
>>CHOICE Resource Configuration	М					
>>>PDCP present in SN				This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "present".		
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	-	
>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	
>>>PDCP not present in SN				This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "not present".		
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore

Range bound	Explanation			
maxnoofBearers	Maximum no. of E-RABs. Value is 256			

9.1.4.19 SGNB CHANGE REFUSE

This message is sent by the MeNB to inform the en-gNB that the SgNB initiated SgNB Change has failed.

Direction: MeNB \rightarrow en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	ignore
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

9.1.4.20 SECONDARY RAT DATA USAGE REPORT

This message is sent by the en-gNB to report data volumes for secondary RAT.

Direction: en-gNB \rightarrow MeNB

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	reject
Secondary RAT Usage Report List	М		9.2.120		YES	reject
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

9.1.4.21 RRC TRANSFER

This message is sent by the MeNB to the en-gNB or by the en-gNB to the MeNB to transfer an RRC message.

Direction: MeNB \rightarrow en-gNB or en-gNB \rightarrow MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	•	YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.	YES	reject
Split SRB		01			YES	reject
>RRC Container	O		OCTET STRING	Contains a PDCP-C PDU encapsulating an RRC message as defined in subclause 6.2.1 of TS 36.331 [9] and ciphered with the key of the MeNB	_	
>SRB Type	M		ENUMERAT ED (srb1, srb2,)	The SRB type	_	
>Delivery Status	0		9.2.104	DL RRC delivery status of split SRB	_	
NR UE Report		01			YES	reject
>RRC Container	M		OCTET STRING	Includes the UL-DCCH-Message as defined in subclause 6.2.1 of TS 38.331 [31] containing the MeasurementRepo rt message or FailureInformation message.	_	
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

9.1.4.22 PARTIAL RESET REQUIRED

This message is sent by an initiating node to a neighbouring node, both nodes able to interact for EN-DC, to release all the resources for selected UEs.

Direction: en-gNB \rightarrow MeNB, MeNB \rightarrow en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigne Criticalit
Message Type	M		9.2.13		YES	reject
UEs to be Reset List		1			YES	reject
>UEs To Be Reset Item		1 <maxnoof UEs></maxnoof 				
>>MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.		
>>SgNB UE X2AP ID	0		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.		
>>MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.		
Cause	M		9.2.6		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

Range bound	Explanation
maxnoofUEs	Maximum no. of UEs. Value is 8192.

9.1.4.23 PARTIAL RESET CONFIRM

This message is sent by an initiating node to a neighbouring node, both nodes able to interact for EN-DC, to confirm the release all the resources for selected UEs.

Direction: en-gNB \rightarrow MeNB, MeNB \rightarrow en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
UEs Admitted to be Reset List		1			YES	reject
>UEs Admitted To Be Reset Item		1 <maxnoof UEsineng NBDU></maxnoof 				
>>MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.		
>>SgNB UE X2AP ID	0		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.		
>>MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.		
Interface Instance Indication	0		9.2.143		YES	reject

Range bound	Explanation
maxnoofUEsinengNBDU	Maximum no. of UEs. Value is 8192.

9.1.4.24 E-UTRA – NR CELL RESOURCE COORDINATION REQUEST

Direction: eNB \rightarrow en-gNB, en-gNB \rightarrow eNB.

This message is sent by a neighbouring eNB to a peer en-gNB or by a neighbouring en-gNB to a peer eNB, both nodes able to interact for EN-DC, to express the desired resource allocation for data traffic, for the sake of E-UTRA - NR Cell Resource Coordination.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
CHOICE Initiating Node Type	М				-	•
>eNB						
>>Data Traffic Resource Indication	M		9.2.126	Indicates resource allocations for data traffic.	YES	reject
>>Spectrum Sharing Group ID	М		INTEGER (1 maxCellineN B)	Indicates the E- UTRA cells involved in resource coordination with the NR cells affiliated with the same Spectrum Sharing Group ID .	YES	reject
>>List of E-UTRA Cells in E-UTRA Coordination Request		0 <maxcellinenb ></maxcellinenb 		List of applicable E- UTRA cells.	YES	reject
>>>EUTRA Cell ID	M		ECGI 9.2.14		-	
>en-gNB						
>>Data Traffic Resource Indication	M		9.2.126	Indicates resource allocations for data traffic.	YES	reject
>>List of E-UTRA Cells in NR Coordination Request		1 <maxcellinenb ></maxcellinenb 		List of applicable E- UTRA cells	YES	reject
>>>EUTRA Cell ID	M		ECGI 9.2.14		_	
>>Spectrum Sharing Group ID	M		INTEGER (1 maxCellineN B)	Indicates the NR cells involved in resource coordination with the E-UTRA cells affiliated with the same Spectrum Sharing Group ID.	YES	reject
>>List of NR Cells in NR Coordination Request		0 < maxnoNRcellsS pectrumSharing withE-UTRA >		List of applicable NR cells	YES	reject
>>>NR-Cell ID	М		NR-CGI 9.2.105		-	
Interface Instance Indication	0		9.2.143		YES	reject

Range bound	Explanation
maxCellineNB	Maximum no. of E-UTRA cells in eNB. Value is 256.
maxnoNRcellsSpectrumSharingwithE- UTRA	Maximum no. of NR cells affiliated to a Spectrum Sharing Group ID involved in cell resource coordination with a number of E-UTRA cells affiliated with the same Spectrum Sharing Group ID. Value is 64.

9.1.4.25 E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE

This message is sent by a neighbouring eNB to a peer en-gNB or by a neighbouring en-gNB to a peer eNB, both nodes able to interact for EN-DC, as a response to the E-UTRA – NR CELL RESOURCE COORDINATION REQUEST.

Direction: eNB \rightarrow en-gNB, en-gNB \rightarrow eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
CHOICE Responding NodeType >eNB	М				-	•
>>Data Traffic Resource Indication	M		9.2.126	Indicates resource allocations for data traffic.	YES	reject
>>Spectrum Sharing Group ID	M		INTEGER (1 maxCellineN B)	Indicates the E- UTRA cells involved in resource coordination with the NR cells affiliated with the same Spectrum Sharing Group ID.	YES	reject
>>List of E-UTRA Cells in E-UTRA Coordination Response		0 <maxcellinenb< td=""><td></td><td>List of applicable E- UTRA cells</td><td>YES</td><td>reject</td></maxcellinenb<>		List of applicable E- UTRA cells	YES	reject
>>>EUTRA Cell ID	М		ECGI 9.2.14		_	
>en-gNB	141		20010.2.11			
>>Data Traffic Resource Indication	М		9.2.126	Indicates resource allocations for data traffic.	YES	reject
>>Spectrum Sharing Group ID	M		INTEGER (1 maxCellineN B)	Indicates the NR cells involved in resource coordination with the E-UTRA cells affiliated with the same Spectrum Sharing Group ID.	YES	reject
>>List of NR Cells in NR Coordination Response		0 < maxnoNRcellsS pectrumSharing withE-UTRA >		List of applicable NR cells	YES	reject
>>>NR Cell ID	М		NR-CGI 9.2.105		-	
Interface Instance Indication	0		9.2.143		YES	reject

Range bound	Explanation
maxCellineNB	Maximum no. of E-UTRA cells in eNB. Value is 256.
maxnoNRcellsSpectrumSharingwithE- UTRA	Maximum no. of NR cells affiliated to a Spectrum Sharing Group ID involved in cell resource coordination with a number of E-UTRA cells affiliated with the same Spectrum Sharing Group ID. Value is 64.

9.1.4.26 SGNB ACTIVITY NOTIFICATION

This message is sent by the en-gNB to inform the MeNB that resources for E-RABs controlled by the en-gNB have not been used or are in use again.

Direction: en-gNB \rightarrow MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	reject
UE Context level user plane activity report	0		User plane traffic activity report 9.2.130		YES	ignore
E-RAB Activity Notify Item List		0 <maxnoofbeare rs=""></maxnoofbeare>			EACH	ignore
>E-RAB ID	М		9.2.23		_	
>User plane traffic activity report	М		9.2.130		1	
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

9.1.4.27 GNB STATUS INDICATION

This message is sent by the en-gNB to indicate to the eNB its status of overload.

Direction: en-gNB \rightarrow eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
gNB Overload Information	M		ENUMERATED (overloaded, not- overloaded,)		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

9.1.4.28 TRACE START

This message is sent by the MeNB to initiate a trace session for a UE.

Direction: MeNB \rightarrow en-gNB

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	reject
Trace Activation	M		9.2.2		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

9.1.4.29 DEACTIVATE TRACE

This message is sent by the MeNB to deactivate a trace session.

Direction: MeNB \rightarrow en-gNB

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	reject
E-UTRAN Trace ID	M		OCTET STRING (SIZE(8))	As per E-UTRAN Trace ID in <i>Trace</i> Activation IE	YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

9.2 Information Element definitions

9.2.0 General

When specifying information elements which are to be represented by bit strings, if not otherwise specifically stated in the semantics description of the concerned IE or elsewhere, the following principle applies with regards to the ordering of bits:

- The first bit (leftmost bit) contains the most significant bit (MSB);
- The last bit (rightmost bit) contains the least significant bit (LSB);
- When importing bit strings from other specifications, the first bit of the bit string contains the first bit of the concerned information.

9.2.1 GTP Tunnel Endpoint

The *GTP Tunnel Endpoint* IE identifies an X2 transport bearer or the S-GW endpoint of the S1 transport bearer associated to an E-RAB. It contains a Transport Layer Address and a GTP Tunnel Endpoint Identifier. The Transport Layer Address is an IP address to be used for the X2 user plane transport (see TS 36.424 [8]) or for the S1 user plane transport (see TS 36.414 [19]). The GTP Tunnel Endpoint Identifier is to be used for the user plane transport.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Transport Layer Address	M		BIT STRING (1160,)	For details on the Transport Layer Address, see TS 36.424 [8], TS 36.414 [19]	-	
GTP TEID	M		OCTET STRING (4)	For details and range, see TS 29.281 [26]	_	

9.2.2 Trace Activation

Defines parameters related to trace activation.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
E-UTRAN Trace ID	M		OCTET STRING (8)	The E-UTRAN Trace ID IE is composed of the following: Trace Reference defined in TS 32.422 [6] (leftmost 6 octets, with PLMN information coded as in 9.2.4), and Trace Recording Session Reference defined in TS 32.422 [6] (last 2 octets)	-	
Interfaces To Trace	M		BIT STRING (8)	Each position in the bitmap represents a eNB interface: first bit =S1-MME, second bit =X2, third bit =Uu, fourth bit = F1-C, fifth bit = E1. Other bits reserved for future use. Value '1' indicates 'should be traced'. Value '0' indicates 'should not be traced'.	-	
Trace Depth	М		ENUMERATED(minimum, medium, maximum, MinimumWithoutVend orSpecificExtension, MediumWithoutVend orSpecificExtension, MaximumWithoutVen dorSpecificExtension,)	Defined in TS 32.421 [7]	-	
Trace Collection Entity IP Address	М		BIT STRING (1160,)	For details on the Transport Layer Address, see TS 36.424 [8], TS 36.414 [19]	-	
MDT Configuration	0		9.2.56		YES	ignore
UE Application layer measurement configuration	0		9.2.121		YES	ignore

9.2.3 Handover Restriction List

This IE defines roaming or access restrictions for subsequent mobility action for which the eNB provides information about the target of the mobility action towards the UE, e.g., handover and CCO, or for SCG selection during dual connectivity operation.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Serving PLMN	М		PLMN Identity 9.2.4		_	
Equivalent PLMNs		0 <maxnoof EPLMNs></maxnoof 	J.L.T	Allowed PLMNs in addition to Serving PLMN. This list corresponds to the list of "equivalent PLMNs list" as defined in TS 24.301 [14]. This list is part of the roaming restriction information. Roaming restrictions apply to PLMNs other than the serving PLMN and Equivalent PLMNs.	_	
>PLMN Identity	М		9.2.4	I LIVII VO.	_	
Forbidden TAs		0 <maxnoof EPLMNsPlu sOne></maxnoof 	0.2.1	intra E-UTRAN roaming restrictions	_	
>PLMN Identity	M		9.2.4	The PLMN of forbidden TACs	_	
>Forbidden TACs		1 <maxnoof ForbTACs></maxnoof 			_	
>>TAC	M		OCTET STRING(2)	The forbidden TAC	_	
Forbidden LAs		0 <maxnoof EPLMNsPlu sOne></maxnoof 		inter-3GPP RAT roaming restrictions	_	
>PLMN Identity	М		9.2.4		_	
>Forbidden LACs		1 <maxnoof ForbLACs></maxnoof 			-	
>>LAC	M		OCTET STRING(2)		_	
Forbidden inter RATs	0		ENUMERATED(ALL, GERAN, UTRAN, CDMA2000,,GERAN and UTRAN, CDMA2000 and UTRAN)	inter-3GPP and 3GPP2 RAT access restrictions. "ALL" means that all RATs mentioned in the enumeration of this IE are restricted.	_	
NR restriction in EPS as secondary RAT	0		ENUMERATED(NRr estrictedinEPSasSec ondaryRAT,)	Restriction to use NR when the NR is used as secondary RAT in EN-DC.	YES	ignore

Core Network Type Restrictions		0 <maxnoof EPLMNsPlu sOne></maxnoof 		Includes any of the Serving PLMN or any PLMN of the Equivalent PLMNs listed in the Mobility Restriction List IE for which core network type restriction applies as specified in TS 23.501 [38].	YES	ignore
>PLMN Identity	М		9.2.4			
>Core Network Type	M		ENUMERATED (5GCForbidden,, EPCForbidden)	The indication indicates whether the UE is restricted to connect to 5GC or to EPC for this PLMN.		
NR Restriction in 5GS	0		ENUMERATED(NRr estrictedin5GS,)	Restriction to use NR when the NR connects to 5GS.	YES	ignore
Last NG-RAN PLMN Identity	O		9.2.4	Indicates the NG- RAN PLMN from where the UE formerly handed over to EPS and which is preferred in case of subsequent mobility to 5GS.	YES	ignore

Range bound	Explanation
maxnoofEPLMNs	Maximum no. of equivalent PLMN lds. Value is 15.
maxnoofEPLMNsPlusOne	Maximum no. of equivalent PLMN lds plus one. Value is 16.
maxnoofForbTACs	Maximum no. of forbidden Tracking Area Codes. Value is 4096.
maxnoofForbLACs	Maximum no. of forbidden Location Area Codes. Value is 4096.

9.2.4 PLMN Identity

This information element indicates the PLMN Identity.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	М		OCTET STRING (3)	- digits 0 to 9, encoded 0000 to 1001, - 1111 used as filler digit, two digits per octet, - bits 4 to 1 of octet n encoding digit 2n- 1 - bits 8 to 5 of octet n encoding digit 2n -The PLMN identity consists of 3 digits from MCC followed by either -a filler digit plus 2 digits from MNC (in case of 2 digit MNC) or -3 digits from MNC (in case of a 3 digit MNC).

9.2.5 DL Forwarding

This element indicates that the E-RAB is proposed for forwarding of downlink packets.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
DL Forwarding	M		ENUMERATED	
_			(DL forwarding	
			proposed,)	

9.2.6 Cause

The purpose of the cause information element is to indicate the reason for a particular event for the whole protocol.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Cause Group	М			•
>Radio Network Layer			ENUMED ATER	
>>Radio Network Layer Cause	M		ENUMERATED (Handover Desirable for Radio Reasons, Time Critical Handover, Resource Optimisation Handover, Reduce Load in Serving Cell, Partial Handover, Unknown New eNB UE X2AP ID, Unknown Old eNB UE X2AP ID, Unknown Pair of UE X2AP ID, HO Target not Allowed, TX2RELOCOVERIE Expiry, TRELOCPRED Expiry, Cell not Available, No Radio Resources Available in Target Cell, Invalid MME Group ID, Unknown MME Code, Encryption And/Or Integrity Protection Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement ID, Measurement Temporarily not Available, Unspecified,,Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported QCI value, Measurement not supported for the object,TDCoverall Expiry, TDCprep Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID,	
>Transport Layer			PDCP Overload)	
>>Transport Layer	М		ENUMERATED	
Cause			(Transport Resource Unavailable, Unspecified,)	
>Protocol				

>>Protocol Cause	M	ENUMERATED (Transfer Syntax Error, Abstract Syntax Error (Reject), Abstract Syntax Error (Ignore and Notify), Message not Compatible with Receiver State, Semantic Error, Unspecified, Abstract Syntax Error (Falsely Constructed Message),)	
>Misc			
>>Miscellaneous Cause	M	ENUMERATED (Control Processing Overload, Hardware Failure,O&M Intervention,Not enough User Plane Processing Resources,Unspecified,)	

The meaning of the different cause values is described in the following table. In general, "not supported" cause values indicate that the concerned capability is missing. On the other hand, "not available" cause values indicate that the concerned capability is present, but insufficient resources were available to perform the requested action.

Radio Network Layer cause	Meaning
Cell not Available	The concerned cell is not available.
Handover Desirable for Radio Reasons	The reason for requesting handover is radio related.
Handover Target not Allowed	Handover to the indicated target cell is not allowed for the UE in question
Invalid MME Group ID	The target eNB doesn't belong to the same pool area of the source eNB
	i.e. S1 handovers should be attempted instead.
No Radio Resources Available in Target Cell	The target cell doesn't have sufficient radio resources available.
Partial Handover	Provides a reason for the handover cancellation. The target eNB did not
	admit all E-RABs included in the HANDOVER REQUEST and the source
	eNB estimated service continuity for the UE would be better by not
D	proceeding with handover towards this particular target eNB.
Reduce Load in Serving Cell	Load in serving cell needs to be reduced. When applied to handover
Resource Optimisation Handover	preparation, it indicates the handover is triggered due to load balancing. The reason for requesting handover is to improve the load distribution
Resource Optimisation Handover	with the neighbour cells.
Time Critical Handover	Handover is requested for time critical reason i.e. this cause value is
Time emiliar handever	reserved to represent all critical cases where the connection is likely to be
	dropped if handover is not performed.
TX2 _{RELOCoverall} Expiry	The reason for the action is expiry of timer TX2 _{RELOCoverall} .
T _{RELOCprep} Expiry	Handover Preparation procedure is cancelled when timer T _{RELOCprep}
	expires.
Unknown MME Code	The target eNB belongs to the same pool area of the source eNB and
	recognizes the MME Group ID. However, the MME Code is unknown to
Unknown New eNB UE X2AP ID	the target eNB. The action failed because the New eNB UE X2AP ID or the MeNB UE
Unknown New eNB UE XZAP ID	X2AP ID is unknown.
Unknown Old eNB UE X2AP ID	The action failed because the Old eNB UE X2AP ID or the SeNB UE
CHANGWI GIG GIVE GE XEXT IE	X2AP ID is unknown.
Unknown Pair of UE X2AP ID	The action failed because the pair of UE X2 AP IDs is unknown.
Encryption And/Or Integrity	The target eNB is unable to support any of the encryption and/or integrity
Protection Algorithms Not	protection algorithms supported by the UE, or the en-gNB is unable to
Supported	support any of the NR encryption and/or integrity protection algorithms
Donos de Olosos de distina Franchi	supported by the UE for EN-DC operation.
ReportCharacteristicsEmpty NoReportPeriodicity	The action failed because there is no characteristic reported. The action failed because the periodicity is not defined.
ExistingMeasurementID	The action failed because the periodicity is not defined. The action failed because measurement-ID is already used.
Unknown eNB Measurement ID	The action failed because some eNB Measurement-ID is unknown.
Measurement Temporarily not	The eNB can temporarily not provide the requested measurement object.
Available	
Load Balancing	The reason for mobility settings change is load balancing.
Handover Optimisation	The reason for mobility settings change is handover optimisation.
Value out of allowed range	The action failed because the proposed Handover Trigger parameter
	change in the eNB ₂ Proposed Mobility Parameters IE is too low or too high.
Multiple E-RAB ID Instances	The action failed because multiple instances of the same E-RAB had
Manage 2 To 12 Inclanded	been provided to the eNB.
Switch Off Ongoing	The reason for the action is an ongoing switch off i.e. the concerned cell
	will be switched off after offloading and not be available. It aides the
	receiving eNB in taking subsequent actions, e.g. selecting the target cell
Not some onto 1001	for subsequent handovers.
Not supported QCI value	The action failed because the requested QCI is not supported.
Unspecified	Sent when none of the above cause values applies but still the cause is Radio Network Layer related.
Measurement not Supported For	At least one of the concerned cell(s) does not support the requested
The Object	measurement.
T _{DCoverall} Expiry	The reason for the action is expiry of timer T _{DCoveral} l.
T _{DCprep} Expiry	The reason for the action is expiry of timer T _{DCprep} .
Action Desirable for Radio	The reason for requesting the action is radio related.
Reasons	In the current version of this specification applicable for Dual Connectivity
Dadwaalaad	and EN-DC only.
Reduce Load	Load in the cell(group) served by the requesting node needs to be
	reduced. In the current version of this specification applicable for Dual Connectivity
	and EN-DC only.
	and Lit DO Only.

Resource Optimisation	The reason for requesting this action is to improve the load distribution
	with the neighbour cells. In the current version of this specification applicable for Dual Connectivity and EN-DC only.
Time Critical action	The action is requested for time critical reason i.e. this cause value is reserved to represent all critical cases where radio resources are likely to be dropped if the requested action is not performed. In the current version of this specification applicable for Dual Connectivity and EN-DC only.
Target not Allowed	Requested action towards the indicated target cell is not allowed for the UE in question.
	In the current version of this specification applicable for Dual Connectivity and EN-DC only.
No Radio Resources Available	The cell(s) in the requested node don't have sufficient radio resources available.
	In the current version of this specification applicable for Dual Connectivity and EN-DC only.
Invalid QoS combination	The action was failed because of invalid QoS combination. In the current version of this specification applicable for Dual Connectivity and EN-DC only.
Encryption Algorithms Not Supported	The requested eNB is unable to support any of the encryption algorithms supported by the UE. In the current version of this specification applicable for Dual Connectivity
Procedure cancelled	and EN-DC only. The sending node cancelled the procedure due to other urgent actions to
Procedure cancelled	be performed. In the current version of this specification applicable for Dual Connectivity and EN-DC only.
RRM purpose	The procedure is initiated due to node internal RRM purposes. In the current version of this specification applicable for Dual Connectivity and EN-DC only.
Improve User Bit Rate	The reason for requesting this action is to improve the user bit rate. In the current version of this specification applicable for Dual Connectivity and EN-DC only.
User Inactivity	The action is requested due to user inactivity on all E-RABs, e.g., S1 is requested to be released in order to optimise the radio resources; or SeNB/en-gNB didn't see activity on the DRB recently. In the current version of this specification applicable for Dual Connectivity and EN-DC only.
Radio Connection With UE Lost	The action is requested due to losing the radio connection to the UE. In the current version of this specification applicable for Dual Connectivity and EN-DC only.
Failure in the Radio Interface Procedure	Radio interface procedure has failed. In the current version of this specification applicable for Dual Connectivity and EN-DC only.
Bearer Option not Supported	The requested bearer option is not supported by the sending node. In the current version of this specification applicable for Dual Connectivity and EN-DC only.
MCG Mobility	The procedure is initiated due to mobility related at MCG radio resource.
SCG Mobility	The procedure is initiated due to mobility related at SCG radio resource.
Count reaches max value	Indicates the PDCP COUNT for UL or DL reached the max value and the bearer may be released.
Unknown Old en-gNB UE X2AP ID	The action failed because the Old en-gNB UE X2AP ID or the SeNB UE X2AP ID is unknown.
PDCP Overload	The procedure is initiated due to PDCP resource limitation.

Transport Network Layer cause	Meaning	
Transport resource unavailable	The required transport resources are not available.	
Unspecified	Sent when none of the above cause values applies but still the cause is	
	Transport Network Layer related	

Protocol cause	Meaning
Abstract Syntax Error (Reject)	The received message included an abstract syntax error and the concerned criticality indicated "reject" (see sub clause 10.3 of TS 36.413 [4]).
Abstract Syntax Error (Ignore and Notify)	The received message included an abstract syntax error and the concerned criticality indicated "ignore and notify" (see sub clause 10.3 of TS 36.413 [4]).
Abstract syntax error (falsely constructed message)	The received message contained IEs or IE groups in wrong order or with too many occurrences (see sub clause 10.3 of TS 36.413 [4]).
Message not Compatible with Receiver State	The received message was not compatible with the receiver state (see sub clause 10.4 of TS 36.413 [4]).
Semantic Error	The received message included a semantic error (see sub clause 10.4 of TS 36.413 [4]).
Transfer Syntax Error	The received message included a transfer syntax error (see sub clause 10.2 of TS 36.413 [4]).
Unspecified	Sent when none of the above cause values applies but still the cause is Protocol related

Miscellaneous cause	Meaning			
Control Processing Overload	eNB control processing overload			
Hardware Failure	eNB hardware failure			
Not enough User Plane Processing Resources	eNB has insufficient user plane processing resources available.			
O&M Intervention	Operation and Maintenance intervention related to eNB equipment			
Unspecified	Sent when none of the above cause values applies and the cause is not related to any of the categories Radio Network Layer, Transport Network Layer or Protocol			

9.2.7 Criticality Diagnostics

The *Criticality Diagnostics* IE is sent by the eNB/en-gNB when parts of a received message have not been comprehended or were missing, or if the message contained logical errors. When applicable, it contains information about which IEs were not comprehended or were missing.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Procedure Code	0		INTEGER (0255)	Procedure Code is to be used if Criticality Diagnostics is part of Error Indication procedure, and not within the response message of the same procedure that caused the error.
Triggering Message	0		ENUMERATED(initiatin g message, successful outcome, unsuccessful outcome)	The Triggering Message is used only if the Criticality Diagnostics is part of Error Indication procedure.
Procedure Criticality	0		ENUMERATED(reject, ignore, notify)	This Procedure Criticality is used for reporting the Criticality of the Triggering message (Procedure).
Information Element Criticality Diagnostics		0 <maxnroferror s></maxnroferror 		
>IE Criticality	М		ENUMERATED(reject, ignore, notify)	The IE Criticality is used for reporting the criticality of the triggering IE. The value "ignore" shall not be used.
>IE ID	M		INTEGER (065535)	The IE ID of the not understood or missing IE
>Type Of Error	М		ENUMERATED(not understood, missing,)	, and the second

Range bound	Explanation		
maxNrOfErrors	Maximum no. of IE errors allowed to be reported with a single		
	message. The value for maxnooferrors is 256.		

9.2.8 Served Cell Information

This IE contains cell configuration information of a cell that a neighbour eNB may need for the X2 AP interface.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PCI	М		INTEGER (0503,)	Physical Cell ID	_	
Cell ID	М		ECGI 9.2.14		_	
TAC	М		OCTET STRING(2)	Tracking Area Code	_	
Broadcast PLMNs		1 <maxnoof BPLMNs></maxnoof 		Broadcast PLMNs in SIB1 associated to the E-UTRA Cell Identity in the Cell ID IE.	-	
>PLMN Identity	M		9.2.4		_	
CHOICE EUTRA-Mode- Info	М				_	
>FDD L (4				
>>FDD Info >>>UL EARFCN	M	1	EARFCN	Correction	_	
			9.2.26	Corresponds to N _{UL} in TS 36.104 [16] for E-UTRA operating bands for which it is defined; ignored for E-UTRA operating bands for which N _{UL} is not defined		
>>>DL EARFCN	M		EARFCN 9.2.26	Corresponds to N _{DL} in TS 36.104 [16]	_	
>>>UL Transmission Bandwidth	М		Transmission Bandwidth 9.2.27	Same as DL Transmission Bandwidth in this release; ignored in case UL EARFCN value is ignored	-	
>>>DL Transmission Bandwidth	М		Transmission Bandwidth 9.2.27		_	
>>>UL EARFCN Extension	0		EARFCN Extension 9.2.65	If this IE is present, the value signalled in the <i>UL EARFCN</i> IE is ignored.	YES	reject
>>>DL EARFCN Extension	0		EARFCN Extension 9.2.65	If this IE is present, the value signalled in the <i>DL EARFCN</i> IE is ignored.	YES	reject
>>>Offset of NB-IoT Channel Number to DL EARFCN	0		Offset of NB-IoT Channel Number to EARFCN 9.2.94	Corresponds to M _{DL} in TS 36.104 [16]	YES	reject
>>>Offset of NB-IoT Channel Number to UL EARFCN	0		Offset of NB-IoT Channel Number to EARFCN 9.2.94	Corresponds to M _{UL} in TS 36.104 [16]	YES	reject

				T		
>>>NRS-NSSS-	0		ENUMERATED	NRS to NSSS	YES	Ignore
PowerOffset			(-3, 0, 3,)	power ratio,		
				as defined in		
				TS6.213 [11].		
>>>NSSS-	0		ENUMERATED	The number of	YES	ignore
NumOccasionDifferen			(2, 4, 8,)	consecutive		
tPrecoder				NSSS		
				occasions that		
				use different		
				precoders for		
				NSSS		
				transmission, as		
				defined in		
				TS6.213 [11].		
>TDD					_	
>>TDD Info		1			_	
>>>EARFCN	M		9.2.26	Corresponds to	_	
				N _{DL} /N _{UL} in TS		
				36.104 [16]		
>>>Transmission	М		Transmission		_	
Bandwidth			Bandwidth			
			9.2.27			
>>>Subframe	М		ENUMERATED	Uplink-downlink	_	
Assignment			(sa0, sa1, sa2,	subframe		
			sa3, sa4, sa5,	configuration		
			sa6,)	information		
			, ,	defined in TS		
				36.211 [10].		
				In NB-IOT, sa0		
				and sa6 are not		
				applicable.		
>>>Special		1		Special	_	
Subframe Info		'		subframe		
				configuration		
				information		
				defined in TS		
				36.211 [10]		
>>>Special	М		ENUMERATED	00.211[10]	_	
Subframe Patterns	141		(ssp0, ssp1,			
Submame Fatterno			ssp2, ssp3,			
			ssp4, ssp5,			
			ssp6, ssp7,			
			ssp8,)			
>>>Cyclic Prefix	M		ENUMERATED			
DL	IVI		(Normal,		_	
"			Extended,)			
>>>>Cyclic Prefix	M	+	ENUMERATED		_	
UL	IVI		(Normal,		_	
			Extended,)			
>>>Additional	0	1	LAIGHUGU,)	Special	YES	ignore
Special Subframe				subframe	IES	ignore
Info				configuration		
IIIIO				information		
				defined in TS		
				36.211 [10].		
				Only for newly defined		
				configuration of		
				special subframe from		
				Release 11.		
>>>>Additional	M	+	ENUMERATED	17616426 11.		
	IVI				_	
Special Subframe Patterns			(ssp0, ssp1,			
ratterns			ssp2, ssp3,			
			ssp4, ssp5, ssp6, ssp7,			
			ssp8, ssp9,)			

>>>Cyclic Prefix DL	М		ENUMERATED (Normal, Extended,)		-	
>>>Cyclic Prefix UL	М		ENUMERATED (Normal, Extended,)		-	
>>>EARFCN Extension	0		9.2.65	If this IE is present, the value signalled in the <i>EARFCN</i> IE is ignored.	YES	reject
>>>Additional Special Subframe Extension Info	0			Special subframe configuration information defined in TS 36.211 [10]. Only for newly defined configuration of special subframe from Release 14.	YES	ignore
>>>>Additional Special Subframe Patterns Extension	М		ENUMERATED (ssp10,)		-	
>>>Cyclic Prefix DL	М		ENUMERATED (Normal, Extended,)		-	
>>>>Cyclic Prefix UL	М		ENUMERATED (Normal, Extended,)		-	
>>>Offset of NB-IoT Channel Number to DL EARFCN	0		Offset of NB-IoT Channel Number to EARFCN 9.2.94	Corresponds to M _{DL} in TS 36.104 [16]	YES	reject
>>>NB-IoT UL DL Alignment Offset	0		NB-IoT UL DL Alignment Offset 9.2.144	Corresponds to the TDD-UL-DL- AlignmentOffset -NB in TS 36.331 [9].	YES	reject
Number of Antenna Ports	0		9.2.43		YES	ignore
PRACH Configuration	0		PRACH Configuration 9.2.50		YES	ignore
MBSFN Subframe Info		0 <maxnoof MBSFN></maxnoof 		MBSFN subframe defined in TS 36.331 [9]	GLOBAL	ignore
>Radioframe Allocation Period	M		ENUMERATED (n1, n2, n4, n8, n16, n32,)		-	
>Radioframe Allocation Offset	M		INTEGER (07,)		-	
>Subframe Allocation CSG ID	M O		9.2.51 9.2.53		YES	ianoro
MBMS Service Area Identity List		0 <maxnoof MBMSServic eArealdentiti es ></maxnoof 		Supported MBMS Service Area Identities in the cell	GLOBAL	ignore ignore
>MBMS Service Area Identity			OCTET STRING(2)	MBMS Service Area Identities as defined in TS 23.003 [29]		
MultibandInfoList	0		9.2.60		YES	ignore

FreqBandIndicatorPriority BandwidthReducedSI	0		ENUMERATED (not-broadcasted, broadcasted,)	This IE indicates that the eNodeB supports FreqBandIndica tionPriority, and whether FreqBandIndica torPriority is broadcasted in SIB 1 (see TS 36.331 [9]) This IE	YES	ignore
			(scheduled,)	indicates that the SystemInformati onBlockType1- BR is scheduled in the cell (see TS 36.331 [9])		Ū
Protected E-UTRA Resource Indication	0		9.2.125	This IE indicates which E-UTRA control/referenc e signal resources are protected and are not subject to E-UTRA - NR Cell Resource Coordination.	YES	ignore
Broadcast PLMN Identity Info List E-UTRA		0 <maxnoof BPLMNs></maxnoof 		This IE corresponds to the cellAccessRelat edInfo IE in SIB1 as specified in TS 36.331 [9]. All PLMN Identities and associated information contained in the cellAccessRelat edInfo IE are included and provided in the same order as broadcast in SIB1.	YES	ignore
>Broadcast PLMNs		1 <maxnoof BPLMNs></maxnoof 		Broadcast PLMN IDs in SIB1 associated to the E-UTRA Cell Identity IE	-	
>>PLMN Identity	M		9.2.4		1	
>TAC	M		OCTET STRING(2)		_	
>E-UTRA Cell Identity	М		BIT STRING (28)		-	

Range bound	Explanation
maxnoofBPLMNs	Maximum no. of Broadcast PLMN lds. Value is 6.
maxnoofMBSFN	Maximum no. of MBSFN frame allocation with different offset. Value is 8.
maxnoofMBMSServiceArealdentities	Maximum no. of MBMS Service Area Identities. Value is 256.

9.2.9 E-RAB Level QoS Parameters

This IE defines the QoS to be applied to an E-RAB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
QCI	М		INTEGER (0255)	QoS Class Identifier defined in TS 23.401 [12]. Logical range and coding specified in TS 23.203 [13].	-	
Allocation and Retention Priority	М		9.2.31		-	
GBR QoS Information	0		9.2.10	This IE applies to GBR bearers only and shall be ignored otherwise.	_	
Downlink Maximum Packet Loss Rate	0		Packet Loss Rate 9.2.124	This IE applies only to bearers with specific QCI (see TS 23.401 [12]) and indicates the maximum allowed packet loss rate for downlink as specified in TS 23.401 [12].	YES	ignore
Uplink Maximum Packet Loss Rate	0		Packet Loss Rate 9.2.124	This IE applies only to bearers with specific QCI (see TS 23.401 [12]) and indicates the maximum allowed packet loss rate for uplink as specified in TS 23.401 [12].	YES	ignore

9.2.10 GBR QoS Information

This IE indicates the maximum and guaranteed bit rates of a GBR E-RAB for downlink and uplink.

NOTE: For LTE DC, the SeNB regards the *GBR QoS Information* IE as an E-RAB level parameter also for E-RABs configured with the split bearer option, although for the split bearer option the bitrates signalled by the Menb are typically not equal to the bitrates signalled by the MME for that E-RAB (see TS 36.300 [15]).

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
E-RAB Maximum Bit Rate	M		reference Bit Rate	description Maximum Bit Rate in	_	Criticality
Downlink			9.2.11	DL (i.e. from EPC to E-UTRAN) for the		
				bearer.		
				Details in TS 23.401 [12].		
				If the Extended E-		
				RAB Maximum Bit Rate Downlink IE is		
				included, the E-RAB		
				Maximum Bit Rate Downlink IE shall be		
				ignored.		
E-RAB Maximum Bit Rate Uplink	М		Bit Rate 9.2.11	Maximum Bit Rate in UL (i.e. from E-	_	
Орши				UTRAN to EPC) for		
				the bearer. Details in TS 23.401		
				[12].		
				If the Extended E- RAB Maximum Bit		
				Rate Uplink IE is		
				included, the E-RAB Maximum Bit Rate		
				Uplink IE shall be		
E-RAB Guaranteed Bit	M		Bit Rate 9.2.11	ignored. Guaranteed Bit Rate	_	
Rate Downlink	141		Bit reato 5.2.11	(provided that there is		
				data to deliver) in DL (i.e. from EPC to E-		
				UTRAN) for the		
				bearer. Details in TS 23.401		
				[12].		
				If the Extended E- RAB Guaranteed Bit		
				Rate Downlink IE is		
				included, the E-RAB Guaranteed Bit Rate		
				Downlink IE shall be		
E-RAB Guaranteed Bit	M		Bit Rate 9.2.11	ignored. Guaranteed Bit Rate	_	
Rate Uplink				(provided that there is		
				data to deliver) in UL (i.e. from E-UTRAN to		
				EPC) for the bearer.		
				Details in TS 23.401 [12].		
				If the Extended E-		
				RAB Guaranteed Bit Rate Uplink IE is		
				included, the E-RAB		
				Guaranteed Bit Rate Uplink IE shall be		
Extended E.DAD Marriero			Extended Dit	ignored.		
Extended E-RAB Maximum Bit Rate Downlink	0		Extended Bit Rate 9.2.99	Maximum Bit Rate in DL (i.e. from EPC to	_	
				E-UTRAN) for the		
				bearer. Details in TS 23.401		
				[12].		

Extended E-RAB Maximum Bit Rate Uplink	0	Extended Bit Rate 9.2.99	Maximum Bit Rate in UL (i.e. from E-UTRAN to EPC) for the bearer. Details in TS 23.401 [12].	-	
Extended E-RAB Guaranteed Bit Rate Downlink	0	Extended Bit Rate 9.2.99	Guaranteed Bit Rate (provided that there is data to deliver) in DL (i.e. from EPC to E-UTRAN) for the bearer. Details in TS 23.401 [12].	ľ	
Extended E-RAB Guaranteed Bit Rate Uplink	0	Extended Bit Rate 9.2.99	Guaranteed Bit Rate (provided that there is data to deliver) in UL (i.e. from E-UTRAN to EPC) for the bearer. Details in TS 23.401 [12].	-	

9.2.11 Bit Rate

This IE indicates the number of bits delivered by E-UTRAN in UL or to E-UTRAN in DL or by UE in sidelink within a period of time, divided by the duration of the period. It is used, for example, to indicate the maximum or guaranteed bit rate for a GBR E-RAB, or an aggregated maximum bit rate.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Bit Rate	М		INTEGER (010,000,000,000)	The unit is: bit/s

9.2.12 UE Aggregate Maximum Bit Rate

On Handover Aggregate Maximum Bitrate is transferred to the target eNB. In Dual Connectivity, UE Aggregate Maximum Bit Rate is split into MeNB UE Aggregate Maximum Bit Rate and SeNB UE Aggregate Maximum Bit Rate which are enforced by MeNB and SeNB respectively as specified in TS 36.300 [15]. The UE Aggregate Maximum Bitrate is applicable for all Non-GBR bearers per UE which is defined for the Downlink and the Uplink direction and provided by the MME to the eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
UE Aggregate Maximum Bit Rate Downlink	М		Bit Rate 9.2.11	If the Extended UE Aggregate Maximum Bit Rate Downlink IE is included, the UE Aggregate Maximum Bit Rate Downlink IE shall be ignored.	-	
UE Aggregate Maximum Bit Rate Uplink	М		Bit Rate 9.2.11	If the Extended UE Aggregate Maximum Bit Rate Uplink IE is included, the UE Aggregate Maximum Bit Rate Uplink IE shall be ignored.	-	
Extended UE Aggregate Maximum Bit Rate Downlink	0		Extended Bit Rate 9.2.99	UE Aggregate Maximum Bit Rate in DL. Details in TS 23.401 [12].	-	
Extended UE Aggregate Maximum Bit Rate Uplink	0		Extended Bit Rate 9.2.99	UE Aggregate Maximum Bit Rate in UL. Details in TS 23.401 [12].	_	

9.2.13 Message Type

The Message Type IE uniquely identifies the message being sent. It is mandatory for all messages.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Procedure Code	M		INTEGER (0255)	
Type of Message	М		CHOICE (Initiating Message, Successful Outcome, Unsuccessful Outcome,)	

9.2.14 ECGI

The E-UTRAN Cell Global Identifier (ECGI) is used to globally identify a cell (see TS 36.401 [2]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PLMN Identity	M		9.2.4		-	
E-UTRAN Cell Identifier	M		BIT STRING (28)	The leftmost bits of the E-UTRAN Cell Identifier IE value correspond to the value of the eNB ID IE contained in the Global eNB ID IE (defined in section 9.2.22) identifying the eNB that controls the cell.	-	

9.2.15 COUNT Value

This information element indicates the 12 bit PDCP sequence number and the corresponding 20 bit Hyper frame number.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PDCP-SN	М		INTEGER (04095)		_	
HFN	М		INTEGER (01048575)		-	

9.2.16 GUMMEI

This information element indicates the globally unique MME identity.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
GU Group Id	M		9.2.20		_	
MME code	M		OCTET		_	
			STRING (1)			

9.2.17 UL Interference Overload Indication

This IE provides, per PRB, a report on interference overload. The interaction between the indication of UL Interference Overload and UL High Interference is implementation specific.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UL Interference Overload Indication List		1 <maxnoofprbs ></maxnoofprbs 		
>UL Interference Overload Indication	М		ENUMERATED (high interference, medium interference, low interference,)	Each PRB is identified by its position in the list: the first element in the list corresponds to PRB 0, the second to PRB 1, etc.

Range bound	Explanation
maxnoofPRBs	Maximum no. Physical Resource Blocks. Value is 110.

9.2.18 UL High Interference Indication

This IE provides, per PRB, a 2 level report on interference sensitivity. The interaction between the indication of UL Overload and UL High Interference is implementation specific.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
HII	M		BIT STRING (1110,)	Each position in the bitmap represents a PRB (first bit=PRB 0 and so on), for which value "1" indicates 'high interference sensitivity' and value "0" indicates 'low interference sensitivity'. The maximum number of Physical Resource Blocks is 110.

9.2.19 Relative Narrowband Tx Power (RNTP)

This IE provides an indication on DL power restriction per PRB or per subframe per PRB (Enhanced RNTP) in a cell and other information needed by a neighbour eNB for interference aware scheduling.

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
RNTP Per PRB	M		reference BIT STRING (6110,)	description Each position in the bitmap represents a npreb value (i.e. first bit=PRB 0 and so on), for which the bit value represents RNTP (npreb), defined in TS 36.213 [11]. Value 0 indicates "Tx not exceeding RNTP threshold". Value 1 indicates "no promise on the Tx power is given". The IE is ignored if the Enhanced RNTP IE is included.	_	Criticality
RNTP Threshold	М		ENUMERATE D (-∞, -11, -10, -9, -8, -7, -6, - 5, -4, -3, -2, -1, 0, 1, 2, 3,)	RNTP _{threshold} is defined in TS 36.213 [11].	-	
Number Of Cell-specific Antenna Ports	М		ENUMERATE D (1, 2, 4,)	P (number of antenna ports for cell-specific reference signals) defined in TS 36.211 [10]	-	
P_B	М		INTEGER (03,)	P _B is defined in TS 36.213 [11].	_	
PDCCH Interference Impact	М		INTEGER (04,)	Measured by Predicted Number Of Occupied PDCCH OFDM Symbols (see TS 36.211 [10]). Value 0 means "no prediction is	-	
Enhanced RNTP	0			available".	YES	ignore

>Enhanced RNTP Bitmap	M		BIT STRING	Each position in the	
			(128800,)	bitmap represents a	
				PRB in a subframe;	
				value "00" indicates	
				"Tx not exceeding	
				RNTP Threshold",	
				value "01" indicates	
				"Tx not exceeding	
				RNTP High Power	
				Threshold", value	
				"11" indicates that "no	
				promise on the Tx	
				power is given".	
				Value "10" is ignored	
				by the receiver".	
				Each position is	
				applicable only in	
				positions	
				corresponding to DL	
				subframes.	
				The first 2 bits	
				correspond to PRB 0	
				of the first subframe	
				for which the IE is	
				valid, the following 2	
				bits correspond to	
				PRB 1 of the first	
				subframe for which	
				the IE is valid, and so	
				on.	
				The bit string may	
				span across multiple	
				contiguous subframes	
				(maximum 40).	
				The length of the bit	
				string is an integer	
				multiple of $2 \times N_{\rm RB}^{\rm DL}$.	
				$N_{\rm RB}^{\rm DL}$ is defined in TS	
				is defined in 1S	
				30.2 i i [i 0].	
				The Enhanced RNTP	
				pattern is	
				continuously	
				repeated.	
>RNTP High Power	M		ENUMERATE	Defined as the	
	IVI				
Threshold			D (-∞, -11, -10,	RNTP _{threshold} in TS	
			-9, -8, -7, -6, -	36.213 [11].	
			5, -4, -3, -2, -1,		
			0, 1, 2, 3,)		
>Enhanced RNTP Start		01			
Time					
>>Start SFN	М		INTEGER	SFN of the radio	
77 01011 0111	***		(01023,)	frame containing the	
			(01023,)	first subframe when	
				the Enhanced RNTP	
				IE is valid.	
>>Start Subframe Number	M		INTEGER	Subframe number,	
			(09,)	within the radio frame	
			' '	indicated by the Start	
				SFN IE, of the first	
				subframe when the	
				Enhanced RNTP IE is	
	1	1	1	valid.	

9.2.20 GU Group Id

The GU Group Id IE is the globally unique group id corresponding to a pool area.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PLMN Id	М		PLMN Identity 9.2.4		-	
MME Group Id	М		OCTET STRING(2)		-	

9.2.21 Location Reporting Information

This information element indicates how the location information should be reported.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Event	M		ENUMERATED		_	
			(Change of serving			
			cell,)			
Report Area	M		ENUMERATED		_	
			(ECGI,)			

9.2.22 Global eNB ID

This IE is used to globally identify an eNB (see TS 36.401 [2]).

IE/Group Name	Presenc e	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PLMN Identity	М		9.2.4		_	
CHOICE eNB ID	М				_	
>Macro eNB ID	М		BIT STRING (20)	Equal to the 20 leftmost bits of the value of the <i>E-UTRAN Cell Identifier</i> IE contained in the <i>ECGI</i> IE (see section 9.2.14) identifying each cell controlled by the eNB	-	
>Home eNB ID	M		BIT STRING (28)	Equal to the value of the <i>E-UTRAN Cell Identifier</i> IE contained in the <i>ECGI</i> IE (see section 9.2.14) identifying the cell controlled by the eNB	_	
>Short Macro eNB ID	М		BIT STRING (SIZE(18))	Equal to the 18 leftmost bits of the value of the <i>E-UTRAN Cell Identifier</i> IE contained in the <i>ECGI</i> IE (see section 9.2.14) identifying each cell controlled by the eNB.	-	
>Long Macro eNB ID	М		BIT STRING (SIZE(21))	Equal to the 21 leftmost bits of the value of the <i>E-UTRAN Cell Identifier</i> IE contained in the <i>ECGI</i> IE (see section 9.2.14) identifying each cell controlled by the eNB.	_	

9.2.23 E-RAB ID

This IE uniquely identifies an E-RAB for a UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
E-RAB ID	М		INTEGER (015,)	

9.2.24 eNB UE X2AP ID

This information element, combined with the eNB UE X2AP ID Extension when present regardless its value, uniquely identifies an UE over the X2 interface within an eNB.

The usage of this IE is defined in TS 36.401 [2].

NOTE: If X2-C signalling transport is shared among multiple interface instances, the value of the eNB UE X2AP ID, combined with the eNB UE X2AP ID Extension, if applicable, is allocated so that it can be associated with an X2-C interface instance.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
eNB UE X2AP ID	М		INTEGER (04095)	

9.2.25 Subscriber Profile ID for RAT/Frequency priority

The *Subscriber Profile ID* IE for RAT/Frequency Selection Priority is used to define camp priorities in Idle mode and to control inter-RAT/inter-frequency handover in Active mode (TS 36.300 [15]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Subscriber Profile ID for	M		INTEGER	
RAT/Frequency Priority			(1256)	

9.2.26 EARFCN

The E-UTRA Absolute Radio Frequency Channel Number defines the carrier frequency used in a cell for a given direction (UL or DL) in FDD or for both UL and DL directions in TDD.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
EARFCN	M		INTEGER	The relation between EARFCN
			(0maxEARFCN)	and carrier frequency (in MHz)
				are defined in TS 36.104 [16].

Range bound	Explanation
maxEARFCN	Maximum value of EARFCNs. Value is 65535.

9.2.27 Transmission Bandwidth

The *Transmission Bandwidth* IE is used to indicate the UL or DL transmission bandwidth expressed in units of resource blocks " N_{RB} " (TS 36.104 [16]). The values bw1, bw6, bw15, bw25, bw50, bw75, bw100 correspond to the number of resource blocks " N_{RB} " 6, 15, 25, 50, 75, 100.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
_		_	Reference	-
Transmission Bandwidth	М		ENUMERATED (bw6,	
			bw15, bw25, bw50,	
			bw75, bw100,, bw1)	

9.2.28 E-RAB List

The IE contains a list of E-RAB identities with a cause value. It is used for example to indicate not admitted bearers.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
E-RAB List Item		1 <maxnoofbeare rs=""></maxnoofbeare>			EACH	ignore
>E-RAB ID	M		9.2.23		-	
>Cause	M		9.2.6			

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256.

9.2.29 UE Security Capabilities

The UE Security Capabilities IE defines the supported algorithms for encryption and integrity protection in the UE.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Encryption Algorithms	М		BIT STRING (16,)	Each position in the bitmap represents an encryption algorithm: "all bits equal to 0" - UE supports no other algorithm than EEA0 "first bit" - 128-EEA1, "second bit" - 128-EEA2, "third bit" - 128-EEA3, other bits reserved for future use. Value '1' indicates support and value "0" indicates no support of the algorithm. Algorithms are defined in TS 33.401 [18].
Integrity Protection Algorithms	M		BIT STRING (16,)	Each position in the bitmap represents an integrity protection algorithm: all bits equal to 0" - UE supports no other algorithm than EIA0 (TS 33.401 [18]) "first bit" - 128-EIA1, "second bit" - 128-EIA2, "third bit" - 128-EIA3, other bits reserved for future use. Value '1' indicates support and value "0" indicates no support of the algorithm. Algorithms are defined in TS 33.401 [18].

9.2.30 AS Security Information

The AS Security Information IE is used to generate the key material to be used for AS security with the UE.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Key eNodeB Star	М		BIT STRING (256)	KeNB* defined in TS 33.401 [18]. If the target cell belongs to multiple frequency bands, the source eNB selects the DL- EARFCN for KeNB* calculation as specified in section 10.3 of TS 36.331 [9].
Next Hop Chaining Count	M		INTEGER (07)	Next Hop Chaining Count (NCC) defined in TS 33.401 [18]

9.2.31 Allocation and Retention Priority

This IE specifies the relative importance compared to other E-RABs for allocation and retention of the E-UTRAN Radio Access Bearer.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Priority Level	M		INTEGER (015)	Desc.: This IE should be understood as "priority of allocation and retention" (see TS 23.401 [12]). Usage: Value 15 means "no priority". Values between 1 and 14 are ordered in decreasing order of priority, i.e. 1 is the highest and 14 the lowest. Value 0 shall be treated as a logical error if received.
Pre-emption Capability	M		ENUMERATED(sh all not trigger pre- emption, may trigger pre-emption)	Descr.: This IE indicates the preemption capability of the request on other E-RABs Usage: The E-RAB shall not pre-empt other E-RABs or, the E-RAB may pre-empt other E-RABs The Pre-emption Capability indicator applies to the allocation of resources for an E-RAB and as such it provides the trigger to the pre-emption procedures/processes of the eNB.
Pre-emption Vulnerability	M		ENUMERATED(not pre-emptable, pre-emptable)	Desc.: This IE indicates the vulnerability of the E-RAB to preemption of other E-RABs. Usage: The E-RAB shall not be pre-empted by other E-RABs or the E-RAB may be pre-empted by other RABs. Pre-emption Vulnerability indicator applies for the entire duration of the E-RAB, unless modified, and as such indicates whether the E-RAB is a target of the pre-emption procedures/processes of the eNB.

9.2.32 Time To Wait

This IE defines the minimum allowed waiting times.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Time To Wait	M		ENUMERATED(1s,	
			2s, 5s, 10s, 20s,	
			60s,)	

9.2.33 SRVCC Operation Possible

The IE indicates that both the UE and the MME are SRVCC-capable. E-UTRAN behaviour on reception of this is specified in TS 23.216 [20].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
SRVCC Operation Possible	М		ENUMERATED(Po ssible,)	

9.2.34 Hardware Load Indicator

The Hardware Load Indicator IE indicates the status of the Hardware Load experienced by the cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DL Hardware Load Indicator	M		Load Indicator	
			9.2.36	
UL Hardware Load Indicator	M		Load Indicator	
			9.2.36	

9.2.35 S1 TNL Load Indicator

The S1 TNL Load Indicator IE indicates the status of the S1 Transport Network Load experienced by the cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DL S1TNL Load Indicator	M		Load Indicator	
			9.2.36	
UL S1TNL Load Indicator	M		Load Indicator	
			9.2.36	

9.2.36 Load Indicator

The Load Indicator IE indicates the status of Load.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Load Indicator	M		ENUMERATED (LowLoad,	
			MediumLoad, HighLoad, Overload,)	

9.2.37 Radio Resource Status

The *Radio Resource Status* IE indicates the usage of the PRBs for all traffic in Downlink and Uplink (TS 36.314 [22], TS 23.203 [13]) and the usage of PDCCH CCEs for Downlink and Uplink scheduling.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DL GBR PRB usage	M		INTEGER (0100)	
UL GBR PRB usage	M		INTEGER (0100)	
DL non-GBR PRB usage	M		INTEGER (0100)	
UL non-GBR PRB usage	M		INTEGER (0100)	
DL Total PRB usage	M		INTEGER (0100)	
UL Total PRB usage	M		INTEGER (0100)	
DL scheduling PDCCH CCE usage	0		INTEGER (0100)	
UL scheduling PDCCH CCE usage	0		INTEGER (0100)	

9.2.38 UE History Information

The *UE History Information* IE contains information about cells that a UE has been served by in active state prior to the target cell. The overall mechanism is described in TS 36.300 [15].

NOTE: The definition of this IE is aligned with the definition of the *UE History Information* IE in TS 36.413 [4].

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Last Visited Cell List		1 <maxnoofcells ></maxnoofcells 		Most recent information is added to the top of this list	_	_
>Last Visited Cell Information	М		9.2.39		_	

Range bound	Explanation
maxnoofCells	Maximum number of last visited cell information records that can be
	reported in the IE. Value is 16.

9.2.39 Last Visited Cell Information

The Last Visited Cell Information may contain cell specific information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE Last Visited Cell Information	М				-	
>E-UTRAN Cell					-	
>>Last Visited E-UTRAN Cell Information	М		9.2.40		-	
>UTRAN Cell					-	
>>Last Visited UTRAN Cell Information	М		OCTET STRING	Defined in TS 25.413 [24]		
>GERAN Cell					-	
>>Last Visited GERAN Cell Information	М		9.2.41		-	
>NG-RAN Cell						
>>Last Visited NG-RAN Cell Information	М		OCTET STRING	Defined in TS 38.413 [39]. (see subclause 9.3.1.97).		

9.2.40 Last Visited E-UTRAN Cell Information

The Last Visited E-UTRAN Cell Information contains information about a cell that is to be used for RRM purposes.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Global Cell ID	М		ECGI 9.2.14		-	
Cell Type	M		9.2.42		-	
Time UE stayed in Cell	M		INTEGER (04095)	The duration of the time the UE stayed in the cell in seconds. If the UE stays in a cell more than 4095s, this IE is set to 4095.	-	
Time UE stayed in Cell Enhanced Granularity	0		INTEGER (040950)	The duration of the time the UE stayed in the cell in 1/10 seconds. If the UE stays in a cell more than 4095s, this IE is set to 40950.	YES	ignore
HO Cause Value	0		Cause 9.2.6	The cause for the handover from the E-UTRAN cell.	YES	ignore

9.2.41 Last Visited GERAN Cell Information

The Last Visited Cell Information for GERAN is currently undefined.

NOTE: If in later Releases this is defined, the choice type may be extended with the actual GERAN specific information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE Last Visited GERAN Cell Information	М				-	
>Undefined	M		NULL		-	

9.2.42 Cell Type

The cell type provides the cell coverage area.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Cell Size	M		ENUMERATED		-	
			(verysmall, small,			
			medium, large,)			

9.2.43 Number of Antenna Ports

The Number of Antenna Ports IE is used to indicate the number of cell specific antenna ports.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
Number of Antenna Ports			ENUMERATED (an1,	an1 = One antenna port
			an2, an4,)	an2 = Two antenna ports
				an4 = Four antenna ports

9.2.44 Composite Available Capacity Group

The *Composite Available Capacity Group* IE indicates the overall available resource level in the cell in Downlink and Uplink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Composite Available Capacity Downlink	M		Composite Available Capacity 9.2.45	For the Downlink	-	
Composite Available Capacity Uplink	M		Composite Available Capacity 9.2.45	For the Uplink	-	

9.2.45 Composite Available Capacity

The *Composite Available Capacity* IE indicates the overall available resource level in the cell in either Downlink or Uplink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Cell Capacity Class Value	0		9.2.46		-	
Capacity Value	M		9.2.47	'0' indicates no resource is available, Measured on a linear scale.	-	

9.2.46 Cell Capacity Class Value

The *Cell Capacity Class Value* IE indicates the value that classifies the cell capacity with regards to the other cells. The *Cell Capacity Class Value* IE only indicates resources that are configured for traffic purposes.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Cell Capacity Class Value	M		INTEGER (1100,)	Value 1 shall indicate the minimum cell capacity, and 100 shall indicate the maximum cell capacity. There should be a linear relation between cell capacity and Cell Capacity Class Value.	-	

9.2.47 Capacity Value

The Capacity Value IE indicates the amount of resources that are available relative to the total E-UTRAN resources. The capacity value should be measured and reported so that the minimum E-UTRAN resource usage of existing services is reserved according to implementation. The Capacity Value IE can be weighted according to the ratio of cell capacity class values, if available.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Capacity Value	М		INTEGER (0100)	Value 0 shall indicate no available capacity, and 100 shall indicate maximum available capacity . Capacity Value should be measured on a linear scale.	-	

9.2.48 Mobility Parameters Information

The *Mobility Parameters Information* IE contains the change of the Handover Trigger as compared to its current value. The Handover Trigger corresponds to the threshold at which a cell initialises the handover preparation procedure towards a specific neighbour cell. Positive value of the change means the handover is proposed to take place later.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Handover Trigger Change	М		INTEGER (- 2020)	The actual value is IE value * 0.5 dB.

9.2.49 Mobility Parameters Modification Range

The Mobility Parameters Modification Range IE contains the range of Handover Trigger Change values permitted by the eNB₂ at the moment the MOBILITY CHANGE FAILURE message is sent.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Handover Trigger Change Lower Limit	М		INTEGER (- 2020)	The actual value is IE value * 0.5 dB.
Handover Trigger Change Upper Limit	М		INTEGER (- 2020)	The actual value is IE value * 0.5 dB.

9.2.50 PRACH Configuration

This IE indicates the PRACH resources used in neighbor cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
RootSequenceIndex	М		INTEGER (0837)	See section 5.7.2. in TS 36.211 [10]	_	
ZeroCorrelationZoneConfigur ation	М		INTEGER (015)	See section 5.7.2. in TS 36.211 [10]	_	
HighSpeedFlag	М		BOOLEAN	TRUE corresponds to Restricted set and FALSE to Unrestricted set. See section 5.7.2 in TS 36.211 [10]	-	
PRACH-FrequencyOffset	М		INTEGER (094)	See section 5.7.1 of TS 36.211 [10]	_	
PRACH-ConfigurationIndex	0		INTEGER (063)	Mandatory for TDD, shall not be present for FDD. See section 5.7.1. in TS 36.211 [10]	_	

9.2.51 Subframe Allocation

The *Subframe Allocation* IE is used to indicate the subframes that are allocated for MBSFN within the radio frame allocation period as defined in TS 36.331 [9].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Subframe	M			
Allocation				
>Oneframe	М		BITSTRING (SIZE(6))	
>Fourframes	М		BITSTRING (SIZE(24))	

9.2.52 CSG Membership Status

This element indicates the membership status of the UE to a particular CSG.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CSG Membership Status	M		ENUMERATED (member, not- member)		-	

9.2.53 CSG ID

This element indicates the identifier of the Closed Subscriber Group.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CSG ID	M		BIT STRING		-	
			(SIZE (27))			

9.2.54 ABS Information

This IE provides information about which sub frames the sending eNB is configuring as almost blank subframes and which subset of almost blank subframes are recommended for configuring measurements towards the UE. Almost blank subframes are subframes with reduced power on some physical channels and/or reduced activity.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE ABS Information	M			
>FDD				
>>ABS Pattern Info	M		BIT STRING (SIZE(40))	Each position in the bitmap represents a DL subframe, for which value "1" indicates 'ABS' and value "0" indicates 'non ABS'. The first position of the ABS pattern corresponds to subframe 0 in a radio frame where SFN = 0. The ABS pattern is continuously repeated in all radio frames. The maximum number of subframes is 40.
>>Number Of Cell- specific Antenna Ports	M		ENUMERATED (1, 2, 4,)	P (number of antenna ports for cell-specific reference signals) defined in TS 36.211 [10]
>>Measurement Subset	M		BIT STRING (SIZE(40))	Indicates a subset of the ABS Pattern Info above, and is used to configure specific measurements towards the UE.
>TDD				
>>ABS Pattern Info	M		BIT STRING (170,)	Each position in the bitmap represents a subframe. Value "1" indicates 'ABS' and value "0" indicates 'non ABS' which is applicable only in positions corresponding to the DL direction. The maximum number of subframes depends on UL/DL subframe configuration. The maximum number of subframes is 20 for UL/DL subframe configuration 1~5; 60 for UL/DL subframe configuration 0. UL/DL subframe configuration 0. UL/DL subframe configuration 0. UL/DL subframe configuration 0. UL/DL subframe configuration of the ABS pattern corresponds to subframe 0 in a radio frame where SFN = 0. The ABS pattern is continuously repeated in all radio frames, and restarted each time SFN = 0.
>>Number Of Cell- specific Antenna Ports	M		ENUMERATED (1, 2, 4,)	P (number of antenna ports for cell-specific reference signals) defined in TS 36.211 [10]
>>Measurement Subset	M		BIT STRING (170,)	Indicates a subset of the ABS Pattern Info above, and is used to configure specific measurements towards the UE

>ABS Inactive	M	NULL	Indicates that interference
			coordination by means of
			almost blank sub frames is
			not active

9.2.55 Invoke Indication

This IE provides an indication about which type of information the sending eNB would like the receiving eNB to send back.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
Invoke Indication	M		ENUMERATED	
			(ABS	
			Information,,	
			Start NAICS	
			Information,	
			Stop NAICS	
			Information)	

9.2.56 MDT Configuration

The IE defines the MDT configuration parameters.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
MDT Activation	M		ENUMERATED(Imme diate MDT only, Immediate MDT and Trace,)		-	
CHOICE Area Scope of MDT	М				_	
>Cell Based					_	
>>Cell ID List for MDT		1 <maxno ofCellIDfor MDT></maxno 			_	
>>>ECGI	М		9.2.14		_	
>TA Based					_	
>>TA List for MDT		1 <maxno ofTAforM DT></maxno 			_	
>>>TAC	M		OCTET STRING (2)	Tracking Area Code. The TAI is derived using the current serving PLMN.	_	
>PLMN Wide			NULL		_	
>TAI based						
>>TAI List for MDT		1 <maxno ofTAforM DT></maxno 				
>>>TAC	М		OCTET STRING (2)	Tracking Area Code		
>>>PLMN Identity	М		9.2.4			
Measurements to Activate M1 Reporting Trigger	M		BITSTRING (SIZE(8))	Each position in the bitmap indicates a MDT measurement, as defined in TS 37.320 [25]. First Bit = M1, Second Bit = M2, Third Bit = M3, Fourth Bit = M4, Fifth Bit = M5, Sixth Bit = logging of M1 from event triggered measurement reports according to existing RRM configuration. Seventh Bit = M6, Eighth Bit = M7. Value "1" indicates "activate" and value "0" indicates "do not activate".		
M1 Reporting Trigger	M		ENUMERATED (periodic, A2event- triggered,, A2event-triggered periodic)	This IE shall be ignored if the <i>Measurements to</i> Activate IE has the first bit set to "0".	_	
M1 Threshold Event A2	C- ifM1A2trig ger			Included in case of event- triggered or event- triggered periodic reporting for measurement M1	-	
>CHOICE Threshold	М				_	
>>RSRP					-	
>>>Threshold RSRP	M		INTEGER (097)	This IE is defined in TS 36.331 [9].	_	
>>RSRQ >>>Threshold	M		INTEGER (034)	This IE is defined in TS	_	
RSRQ				36.331 [9].		

M1 Periodic reporting	C- ifperiodic MDT		Included in case of periodic or event-triggered periodic reporting for measurement M1	-	
>Report interval	M	ENUMERATED (ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, min1, min6, min12, min30, min60)	This IE is defined in TS 36.331 [9].	-	
>Report amount	M	ENUMERATED (1, 2, 4, 8, 16, 32, 64, infinity)	Number of reports	-	
M3 Configuration	C-ifM3	9.2.61		YES	ignore
M4 Configuration	C-ifM4	9.2.62		YES	ignore
M5 Configuration	C-ifM5	9.2.63		YES	ignore
MDT Location Information	0	BITSTRING(SIZE(8))	Each position in the bitmap represents requested location information as defined in TS 37.320 [31]. First Bit = GNSS Second Bit = E-CID information. Other bits are reserved for future use and are ignored if received. Value "1" indicates "activate" and value "0" indicates "do not activate". The eNB shall ignore the first bit unless the Measurements to Activate IE has the first bit or the sixth bit set to "1".	YES	ignore
Signalling based MDT PLMN List	0	MDT PLMN List 9.2.64		YES	ignore
M6 Configuration	C-ifM6	9.2.87		YES	ignore
M7 Configuration	C-ifM7	9.2.88		YES	ignore
Bluetooth Measurement Configuration	0	9.2.134		YES	ignore
WLAN Measurement Configuration	0	9.2.135		YES	ignore

Range bound	Explanation	
maxnoofCellIDforMDT	Maximum no. of Cell ID subject for MDT scope. Value is 32.	
maxnoofTAforMDT	Maximum no. of TA subject for MDT scope. Value is 8.	

Condition	Explanation
ifM1A2trigger	This IE shall be present if the Measurements to Activate IE has the
	first bit set to "1" and the M1 Reporting Trigger IE is set to "A2event-
	triggered" or to "A2event-triggered periodic".
ifperiodicMDT	This IE shall be present if the M1 Reporting Trigger IE is set to
	"periodic" or to "A2event-triggered periodic".
ifM3	This IE shall be present if the Measurements to Activate IE has the
	third bit set to "1".
ifM4	This IE shall be present if the Measurements to Activate IE has the
	fourth bit set to "1".
ifM5	This IE shall be present if the Measurements to Activate IE has the
	fifth bit set to "1".
ifM6	This IE shall be present if the Measurements to Activate IE has the
	seventh bit set to "1".
ifM7	This IE shall be present if the Measurements to Activate IE has the
	eighth bit set to "1".

9.2.57 Void

9.2.58 ABS Status

The ABS Status IE is used to aid the eNB designating ABS to evaluate the need for modification of the ABS pattern.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DL ABS status	M		INTEGER (0100)	Percentage of used ABS resources. The numerator of the percentage calculation consists of resource blocks within the ABS indicated in the Usable ABS Pattern Info IE allocated by the eNB2 for DL traffic needing protection by ABS from inter-cell interference for DL scheduling, or allocated by the eNB2 for other reasons (e.g. some control channels). The denominator of the percentage calculation is the total quantity of resource blocks within the ABS indicated in the Usable ABS Pattern Info IE.
CHOICE Usable ABS Information	М		_	-
>FDD			_	_
>>Usable ABS Pattern Info	M		BIT STRING (SIZE(40))	Each position in the bitmap represents a subframe, for which value "1" indicates 'ABS that has been designated as protected from inter-cell interference by the eNB ₁ , and available to serve this purpose for DL scheduling in the eNB ₂ ' and value "0" is used for all other subframes. The pattern represented by the bitmap is a subset of, or the same as, the corresponding ABS Pattern Info IE conveyed in the LOAD INFORMATION message from the eNB ₁ .
>TDD			_	_
>>Usable ABS Pattern Info	M		BIT STRING (170)	Each position in the bitmap represents a subframe, for which value "1" indicates 'ABS that has been designated as protected from inter-cell interference by the eNB ₁ , and available to serve this purpose for DL scheduling in the eNB ₂ ' and value "0" is used for all other subframes. The pattern represented by the bitmap is a subset of, or the same as, the corresponding ABS Pattern Info IE conveyed in the LOAD INFORMATION message from the eNB ₁ .

9.2.59 Management Based MDT Allowed

This information element is used by the eNB to allow selection of the UE for management based MDT as described in TS 32.422 [6].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Management Based MDT Allowed	М		ENUMERATED (Allowed,)	
Allowed			(Allowed,)	

9.2.60 MultibandInfoList

The *MultibandInfoList* IE contains the additional frequency band indicators that a cell belongs to listed in decreasing order of preference, see TS 36.331 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
BandInfo		1 <maxnoofband< td=""><td></td><td>•</td><td>_</td><td>,</td></maxnoofband<>		•	_	,
		s>				
>FrequencyBandIndicator	M		INTEGER	E-UTRA	_	
			(1 256,)	operating band		
				as defined in TS		
				36.101 [42, table		
				5.5-1]		

Range bound	Explanation
maxnoofBands	Maximum number of frequency bands that a cell belongs to. The
	value is 16.

9.2.61 M3 Configuration

This IE defines the parameters for M3 measurement collection.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
M3 Collection Period	M		ENUMERATED	
			(ms100, ms1000,	
			ms10000,)	

9.2.62 M4 Configuration

This IE defines the parameters for M4 measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
M4 Collection Period	M		ENUMERATED (ms1024, ms2048, ms5120, ms10240, min1,)	
M4 Links to log	M		ENUMERATED(uplin k, downlink, both-uplink-and-downlink,)	

9.2.63 M5 Configuration

This IE defines the parameters for M5 measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
M5 Collection Period	M		ENUMERATED (ms1024, ms2048, ms5120, ms10240, min1,)	
M5 Links to log	M		ENUMERATED(uplin k, downlink, both-uplink-and-downlink,)	

9.2.64 MDT PLMN List

The purpose of the MDT PLMN List IE is to provide the list of PLMNs allowed for MDT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MDT PLMN List		1 <maxnoof MDTPLMNs ></maxnoof 		
>PLMN Identity	M		9.2.4	

Range bound	Explanation
maxnoofMDTPLMNs	Maximum no. of PLMNs in the MDT PLMN list. Value is 16.

9.2.65 EARFCN Extension

The E-UTRA Absolute Radio Frequency Channel Number Extension defines the carrier frequency used in a cell for a given direction (UL or DL) in FDD or for both UL and DL directions in TDD.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
EARFCN Extension	M		INTEGER (maxEARFCN+1 newmaxEARFCN,)	The relation between EARFCN and carrier frequency (in MHz) are defined in TS 36.104 [16].

Range bound	Explanation
maxEARFCN	Maximum value of EARFCNs. Value is 65535.
newmaxEARFCN	New maximum value of EARFCNs. Value is 262143.

9.2.66 COUNT Value Extended

This information element indicates the 15 bit long PDCP SN and the corresponding 17 bit long Hyper Frame Number.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PDCP-SN Extended	М		INTEGER (032767)		-	
HFN Modified	М		INTEGER (0131071)		-	

9.2.67 Extended UL Interference Overload Info

This IE provides report on interference overload for the set of subframes that are subject to UL-DL subframe reconfiguration. This IE applies to TDD only.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Associated Subframes	M		BITSTRING (SIZE(5))	The set of subframe(s) to which the Extended UL interference overload indication is applicable. The bitmap from the least significant bit position to the most significant bit position represents subframes #{3, 4, 7, 8, 9} in a radio frame. Value "1" in a bit position indicates that the Extended UL interference overload indication is applicable to the corresponding subframe; and value "0" indicates otherwise.
Extended UL Interference Overload Indication	M		UL Interference Overload Indication 9.2.17	

9.2.68 RNL Header

The RNL Header IE indicates the target eNB ID and source eNB ID.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Source eNB ID	M		Global eNB ID 9.2.22		-	
Target eNB ID	0		Global eNB ID 9.2.22		-	

9.2.69 Masked IMEISV

This information element contains the IMEISV value with a mask, to identify a terminal model without identifying an individual Mobile Equipment.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Masked IMEISV	M		BIT STRING (SIZE(64))	Coded as the International Mobile station Equipment Identity and Software Version Number (IMEISV) defined in TS 23.003 [29] with the last 4 digits of the SNR masked by setting the corresponding bits to 1.

9.2.70 Expected UE Behaviour

This IE defines the behaviour of a UE with predictable activity and/or mobility behaviour, to assist the eNB/en-gNB in determining the optimum RRC connection time.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Expected UE Activity Behaviour	M		9.2.71	
Expected HO Interval	0		ENUMERATED (sec15, sec30, sec60, sec90, sec120, sec180, long-time,)	Indicates the expected time interval between inter-eNB handovers. If "long-time" is included, the interval between inter-eNB handovers is expected to be longer than 180 seconds.

9.2.71 Expected UE Activity Behaviour

Indicates information about the expected "UE activity behaviour" as defined in TS 23.401 [12].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Expected Activity Period	0		INTEGER (130 40 50 60 80 100 120 150 180 181,)	If this IE is set to "181" the expected activity time is longer than 180 seconds. The remaining values indicate the expected activity time in [seconds].
Expected Idle Period	0		INTEGER (130 40 50 60 80 100 120 150 180 181,)	If this IE is set to "181" the expected idle time is longer than 180 seconds. The remaining values indicate the expected idle time in [seconds].
Source of UE Activity Behaviour Information	0		ENUMERATED (subscription information, statistics,)	If "subscription information" is indicated, the information contained in the Expected Activity Period IE and the Expected Idle Period IE, if present, is derived from subscription information. If "statistics" is indicated, the information contained in the Expected Activity Period IE and the Expected Idle Period IE, if present, is derived from statistical information.

9.2.72 SeNB Security Key

The SeNB Security Key IE is used to apply security in the SeNB as defined in TS 33.401 [18].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SeNB Security	M		BIT STRING	The S-KeNB which is provided by the MeNB,
Key			(SIZE(256))	see TS 33.401 [18].

9.2.73 SCG Change Indication

The SCG Change Indication IE is either used to request the SeNB to prepare the SCG Change in the SeNB or to request the MeNB to initiate the SCG Change towards the UE (see TS 36.300 [15]).

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SCG Change	M		ENUMERATED	
Indication			(PDCPCountWrapAround,	
			PSCellChange, other,)	

9.2.74 CoMP Information

This IE provides the list of CoMP hypothesis sets, where each CoMP hypothesis set is the collection of CoMP hypothesis(es) of one or multiple cells and each CoMP hypothesis set is associated with a benefit metric.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CoMP Information Item		1 <maxnoofcomph ypothesisSet></maxnoofcomph 		
>CoMP Hypothesis Set	М		9.2.75	
>Benefit Metric	М		INTEGER (- 101100,)	Value -100 indicates the maximum cost, and 100 indicates the maximum benefit. Value -101 indicates unknown benefit. Values from -100 to 100 should be calculated on a linear scale.
CoMP Information Start Time		01		
>Start SFN	M		INTEGER (01023,)	SFN of the radio frame containing the first subframe when the CoMP Information IE is valid.
>Start Subframe Number	M		INTEGER (09,)	Subframe number, within the radio frame indicated by the <i>Start SFN</i> IE, of the first subframe when the <i>CoMP Information</i> IE is valid.

Range bound	Explanation
maxnoofCoMPHypothesisSet	Maximum number of CoMP Hypothesis sets. The value is 256.

9.2.75 CoMP Hypothesis Set

This IE provides a set of CoMP hypotheses. A CoMP hypothesis is hypothetical PRB-specific resource allocation information for a cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CoMP Hypothesis Set Item		1 <maxnoofcom PCells></maxnoofcom 		
>Cell ID	M		ECGI 9.2.14	ID of the cell for which the CoMP Hypothesis IE is applied.
>CoMP Hypothesis	M		BIT STRING (64400,)	Each position in the bitmap represents a PRB in a subframe, for which value "1" indicates 'interference protected resource' and value "0" indicates 'resource with no utilization constraints,' which is applicable only in positions corresponding to the DL direction. The first bit corresponds to PRB 0 of the first subframe for which the IE is valid, the second bit corresponds to PRB 1 of the first subframe for which the IE is valid, and so on. The bit string may span across multiple contiguous subframes. The length of the bit string is an integer (maximum 40) multiple of $N_{\rm RB}^{\rm DL}$. $N_{\rm RB}^{\rm DL}$ is defined in TS 36.211 [10]. The CoMP hypothesis pattern is continuously repeated.

Range bound	Explanation
maxnoofCoMPCells	Maximum number of cells in a CoMP hypothesis set. Value is 32.

9.2.76 RSRP Measurement Report List

This IE provides RSRP measurement reports of UEs served by the sending eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RSRP Measurement Report		1		
Item		<maxuereport></maxuereport>		
>RSRP Measurement		1		
Result		<maxcellreport></maxcellreport>		
>>RSRP Cell ID	M		ECGI	ID of the cell on which the
			9.2.14	RSRP is measured.
>>RSRP Measured	M		INTEGER	Measured RSRP.
			(097,)	Defined in TS 36.331 [9].
>UE ID	0		BIT STRING	ID assigned by eNB ₂ for
			(SIZE(16))	the UE.

Range bound	Explanation
maxUEReport	Maximum number of UE measurement reports. Value is 128.
maxCellReport	Maximum number of reported cells. The value is 9.

9.2.77 Dynamic DL transmission information

This IE contains assistance information for DL interference mitigation.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE NAICS Information	M			
>NAICS Active				
>>Transmission Modes	0		BIT STRING (SIZE(8))	The set bits indicate some or all transmission modes: 1, 2, 3, 4, 6, 8, 9, 10, as defined in TS 36.213 [23, 7.1]. The first/ leftmost bit is for transmission mode 1, the second bit is for transmission mode 2, and so on.
>>P_B	0		INTEGER (03)	See TS 36.213 [23, Table 5.2-1]
>>P_A_list		0 <maxnoofpa></maxnoofpa>		
>>>P_A	M		ENUMERATED (dB-6, dB- 4dot77, dB-3, dB-1dot77, dB0, dB1, dB2, dB3,)	See P _A TS 36.213 [23, 5.2]. Value dB-6 corresponds to -6 dB, dB- 4dot77 corresponds to - 4.77 dB etc.
>NAICS Inactive			NULL	

Range bound	Explanation
maxnoofPA	Maximum no of P _A values that can be configured. Value is 3.

9.2.78 ProSe Authorized

This IE provides information on the authorization status of the UE for ProSe service(s).

IE/Group Name	Presence	Range	IE type and	Semantics description	Criticality	Assigned
			reference			Criticality
ProSe Direct	0		ENUMERATED	Indicates whether the UE	-	
Discovery			(authorized, not	is authorized for ProSe		
			authorized,)	Direct Discovery		
ProSe Direct	0		ENUMERATED	Indicates whether the UE	-	
Communication			(authorized, not	is authorized for ProSe		
			authorized,)	Direct Communication		
ProSe UE-to-	0		ENUMERATED	Indicates whether the UE	YES	ignore
Network			(authorized, not	is authorized to act as		
Relaying			authorized,)	ProSe UE-to-Network		
			•	Relay		

9.2.79 CSI Report

This IE provides CSI reports of UEs served by the cell for which the information is provided.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CSI Report per Cell		1 <maxuereport></maxuereport>		
>UE ID	M		BIT STRING (SIZE(16))	ID assigned by eNB ₂ for the UE.
>CSI Report per CSI Process		1 <maxcsiprocess></maxcsiprocess>		
>>CSI Process Configuration Index	M		INTEGER (17,)	Indicates one of the possible CSI Process configurations in the serving cell.
>>CSI Report per CSI Process Item		1 <maxcsireport></maxcsireport>		
>>>RI	М		INTEGER (18,)	The RI corresponding to the CQI being reported for this CSI process item. Value defined in TS 36.213 [11].
>>>Wideband CQI	M		9.2.80	
>>>Subband Size	M		ENUMERATED (2, 3, 4, 6, 8,)	Corresponds to a value of subband size k defined in TS 36.213 [11] for the system bandwidth $N_{\rm RB}^{\rm DL}$.
>>>Subband CQI List		0 <maxsubband></maxsubband>		, KB
>>>Subband CQI	М		9.2.81	
>>>Subband Index	М		INTEGER (027,)	

Range bound	Explanation
maxUEReport	Maximum number of UE. Value is 128.
maxCSIProcess	Maximum number of CSI processes per UE. The value is 4.
maxCSIReport	Maximum number of CSI Reports per CSI Process. The value is 2.
maxSubband	Maximum number of subbands. The value is 14.

9.2.80 Wideband CQI

This IE indicates the Wideband CQI as defined in TS 36.213 [11].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Wideband CQI Codeword	M		INTEGER (015,)	Value defined in TS 36.213
0				[11].
CHOICE Wideband CQI	0			
Codeword 1				
>4-bit CQI	M		INTEGER (015,)	Value defined in TS 36.213
				[11].
>3-bit spatial differential	M		INTEGER (07,)	Value defined in TS 36.213
CQI			, ,	[11].

9.2.81 Subband CQI

This IE indicates the Subband CQI as defined in TS 36.213 [11].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Subband CQI	М			
Codeword 0				
>4-bit CQI	M		INTEGER (015,)	Value defined in TS 36.213 [11].
>2-bit Subband differential CQI	M		INTEGER (03,)	Value defined in TS 36.213 [11].
>2-bit differential CQI	M		INTEGER (03,)	Value defined in TS 36.213 [11].
CHOICE Subband CQI Codeword 1	0			
>4-bit CQI	M		INTEGER (015,)	Value defined in TS 36.213 [11].
>3-bit spatial differential CQI	М		INTEGER (07,)	Value defined in TS 36.213 [11].
>2-bit Subband differential CQI	М		INTEGER (03,)	Value defined in TS 36.213 [11].
>2-bit differential CQI	М		INTEGER (03,)	Value defined in TS 36.213 [11].

9.2.82 COUNT Value for PDCP SN Length 18

This information element indicates the 18 bit long PDCP SN and the corresponding 14 bit long Hyper Frame Number.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PDCP-SN Length 18	М		INTEGER		_	
			(0262143)			
HFN for PDCP-SN	M		INTEGER		_	
Length 18			(016383)			

9.2.83 LHN ID

The LHN ID IE is used to indicate the LHN ID of the eNB, as defined in TS 23.003 [21].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Local Home Network ID	M		OCTET STRING (SIZE (32256))	Identifies the Local
				Home Network.

9.2.84 Correlation ID

This information element is the GTP Tunnel Endpoint Identifier or GRE key to be used for the user plane transport between eNB and the L-GW described in TS 23.401 [12].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Correlation ID	M		OCTET STRING	
			(SIZE(4))	

9.2.85 UE Context Kept Indicator

This IE indicates that the UE Context at the SeNB is kept in case of inter-MeNB handover without SeNB/SgNB Change procedure, as specified in TS 36.300 [15] or TS37.340 [32].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Context Kept Indicator	M		ENUMERATED (True,)	

9.2.86 eNB UE X2AP ID Extension

This information element combined with the eNB UE X2AP ID uniquely identifies an UE over the X2 interface within an eNB. If the setup of an UE associated signalling connection was initiated including the eNB UE X2AP ID Extension, the eNB UE X2AP ID Extension shall be used by both peers for the life-time of the respective UE-associated signalling connection.

The usage of this IE is defined in TS 36.401 [2].

NOTE: If X2-C signalling transport is shared among multiple interface instances, the value of the eNB UE X2AP ID, combined with the eNB UE X2AP ID Extension, is allocated so that it can be associated with an X2-C interface instance.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
eNB UE X2AP ID Extension	M		INTEGER	
			(04095)	

9.2.87 M6 Configuration

This IE defines the parameters for M6 measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
M6 Report Interval	M		ENUMERATED (ms1024, ms2048, ms5120, ms10240,)	
M6 Delay Threshold	C-ifUL		ENUMERATED (ms30, ms40, ms50, ms60, ms70, ms80, ms90, ms100, ms150, ms300, ms500, ms750,)	
M6 Links to log	М		ENUMERATED(uplin k, downlink, both-uplink-and-downlink,)	

Condition	Explanation
ifUL	This IE shall be present if the M6 Links to log IE is set to "uplink" or to
	"both-uplink-and-downlink".

9.2.88 M7 Configuration

This IE defines the parameters for M7 measurement collection.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
M7 Collection Period	М		INTEGER (160,)	Unit: minutes
M7 Links to log	M		ENUMERATED(uplin	
			k, downlink, both-	
			uplink-and-downlink,	
)	

9.2.89 Tunnel Information

The *Tunnel Information* IE indicates the transport layer address and UDP port number.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
Transport Layer Address	M		BIT STRING	eNB's Transport Layer
			(1160,)	Address.
UDP Port Numbers	0		OCTET	UDP Port Numbers if
			STRING	NAT/NAPT is deployed in the
			(SIZE(2))	BBF access network.

9.2.90 X2 Benefit Value

The X2 Benefit Value IE indicates the quantified benefit of the signalling connection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
X2 Benefit Value	M		INTEGER (18,)	Value 1 indicates low benefit,
				and 8 indicates high benefit.

9.2.91 Resume ID

The Resume ID IE is used to address a suspended UE Context within an eNB.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Resume ID	М			
>Resume ID not truncated				
>>Resume ID not truncated	M		BIT STRING (SIZE (40))	40 bit Resume Resume Identity contained in the RRCConnection ResumeRequest message (TS 36.331 [9]). The 20 most significant bits refer to the eNB ID of the eNB that allocated the Resume ID, the 20 least significant bits identify the UE Context stored at the eNB that allocated the Resume ID.
>Resume ID truncated				
>>Resume ID truncated	М		BIT STRING (SIZE (24))	24 bit Resume Identity contained in the RRCConnection ResumeRequest message (TS 36.331 [9]). The 12 most significant bits refer to the 12 least significant bits of the eNB ID of the eNB that allocated the Resume ID. The 12 least significant bits refer to the 12 least significant bits refer to the 12 least significant bits that identify the UE Context stored at the eNB that allocated the Resume ID.

9.2.92 Bearer Type

This IE is used to support Non-IP data as specified in TS 23.401 [11].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Bearer Type	М		ENUMERATED (non IP,)	

9.2.93 V2X Services Authorized

This IE provides information on the authorization status of the UE to use the sidelink for V2X services.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Vehicle UE	0		ENUMERATED	Indicates whether the	-	
			(authorized, not	UE is authorized as		
			authorized,)	Vehicle UE		
Pedestrian UE	0		ENUMERATED	Indicates whether the	-	
			(authorized, not	UE is authorized as		
			authorized,)	Pedestrian UE		

9.2.94 Offset of NB-IoT Channel Number to EARFCN

This IE is used to indicate the offset of the NB-IoT Channel Number to the EARFCN (TS 36.104 [16]).

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
Offset of NB-IoT Channel	М		ENUMERATED (-10,-	
Number to EARFCN			9,-8,-7,-6,-5,-4,-3,-2,-1,-	
			0.5,0,1,2,3,4,5,6,7,8,9,	
			. , -8.5, -4.5, 3.5, 7.5)	

9.2.95 WT ID

This IE is used to identify a WT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE WT ID Type	M			
>WT ID Type 1				
>>PLMN ID	M		PLMN Identity	
			9.2.4	
>>Short WT ID	M		BIT STRING (24)	
>WT ID Type 2				
>>Long WT ID	M		BIT STRING (48)	

9.2.96 WT UE XwAP ID

The WT UE XwAP ID is allocated by the WT and uniquely identifies a UE over the Xw interface.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
WT UE XWAP ID	М		OCTET STRING (SIZE(3))	

9.2.97 UE Sidelink Aggregate Maximum Bit Rate

This IE indicates the aggregate maximum bit rate for all radio bearers per UE in the sidelink for V2X services.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Sidelink Aggregate Maximum Bit Rate	M		Bit Rate 9.2.11	Value 0 shall be considered as a logical error by the receiving eNB.

9.2.98 NR Neighbour Information

This IE contains cell configuration information of NR cells that a neighbour node may need for the X2 AP interface.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
NR Neighbour Information		1 <maxnoofnr Neighbours></maxnoofnr 			-	j
>NR Neighbour						
Information >>NRPCI	M		INTEGER (01007)	NR Physical Cell ID	_	
>>NR CGI	М		9.2.111		_	
>>5GS-TAC	0		OCTET STRING (3)	Broadcast 5GS Tracking Area Code	-	
>>Configured TAC	0		OCTET STRING (2)	This is the TAC configured in the en-gNB, different from the 5GS TAC broadcast in the NR cell and enables application of Roaming and Access Restrictions for EN-DC as specified in TS 37.340 [32].	_	
>>Measurement Timing Configuration	М		OCTET STRING	Contains the MeasurementTi mingConfigurati on inter-node message for the neighbour cell, as defined in TS 38.331 [31].	-	
>>CHOICE NR- Neighbour-Mode-Info	М				_	
>>>FDD						
>>>FDD Info		1			_	
>>>>UL ARFCNFreqInfo	М		NR ARFCN Frequency Info 9.2.106		-	
>>>>DL ARFCNFreqInfo	М		NR ARFCN Frequency Info 9.2.106		-	
>>>TDD						
>>>TDD Info		1			_	
>>>>ARFCNNRF reqInfo	M		NR ARFCN Frequency Info 9.2.106		_	

Range bound	Explanation
maxnoofNRNeighbours	Maximum no. of neighbour NR cells associated to a given served
	cell. Value is 1024.

9.2.99 Extended Bit Rate

This IE indicates the number of bits delivered by E-UTRAN in UL or to E-UTRAN in DL within a period of time, divided by the duration of the period. It is used, for example, to indicate the maximum or guaranteed bit rate for a GBR bearer, or an aggregated maximum bit rate.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
Extended Bit Rate			INTEGER (10,000,000,0014,00	The unit is: bit/s
			0,000,000,000,)	

9.2.100 en-gNB UE X2AP ID

This information element uniquely identifies an UE over the X2 interface within an en-gNB.

The usage of this IE is defined in TS 36.401 [2].

NOTE: If X2-C signalling transport is shared among multiple interface instances, the value of the en-gNB UE X2AP ID is allocated so that it can be associated with an X2-C interface instance.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
en-gNB UE X2AP ID	M		INTEGER (0 2 ³² -1)	

9.2.101 SgNB Security Key

The SgNB Security Key IE is used to apply security in the en-gNB as defined in TS 33.401 [18].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SgNB Security Key	М		BIT STRING (SIZE(256))	The S-KgNB which is provided by the MeNB, see TS 33.401 [18].

9.2.102 Target SgNB ID Information

This IE contains the target SgNB ID used by MeNB to find the target en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Target SgNB ID	M		Global en-			
			gNB ID			
			9.2.112			

9.2.103 SCG Configuration Query

The SCG Configuration Query IE is used to request the en-gNB to provide current SCG configuration.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SCG Configuration Query	М		ENUMERATED (True,)	

9.2.104 Delivery Status

This IE defines the Delivery Status IE of RRC Transfer message.

IE/Group Name	Presence	Range	IE type and	Semantics description	Criticality	Assigned
			reference			Criticality
Highest successfully	M	02 ¹² -1	INTEGER	Highest successfully	-	
delivered NR PDCP			(02 ¹² -1)	delivered NR PDCP SN, as		
Sequence Number				defined in 38.323 [33].		

9.2.105 Void

Void

9.2.106 NR Frequency Info

The NR Frequency Info defines the carrier frequency and bands used in a cell for a given direction (UL or DL) in FDD or for both UL and DL directions in TDD.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
NRARFCN	M		INTEGER (0maxNRARFCN)	RF Reference Frequency as defined in TS 38.104 [37] section 5.4.2.1. The frequency provided in this IE identifies the absolute frequency position of the reference resource block (Common RB 0) of the carrier. Its lowest subcarrier is also known as Point A.
Frequency Band List		1		
>Frequency Band Item		1 <ma xnoofNr CellBan ds></ma 		
>>NR Frequency Band	М		INTEGER (1 1024,)	Primary NR Operating Band as defined in TS38.104 [37] section 5.4.2.3. The value 1 corresponds e n1, value 2 corresponds to NR operating band n2, etc.
>>Supported SUL band List		0 <ma xnoofNr CellBan ds></ma 		
>>>Supported SUL band Item	M		INTEGER (1 1024,)	Supplementary NR Operating Band as defined in TS 38.104 [37] section 5.4.2.3 that can be used for SUL duplex mode as per TS 38.101-1 table 5.21. The value 80 corresponds to NR operating band n80, value 81 corresponds to NR operating band n81, etc.
SUL Information	0		9.2.123	

Range bound	Explanation
maxNRARFCN	Maximum value of NRARFCNs. Value is 3279165.
maxnoofNrCellBands	Maximum no. of frequency bands supported for a NR cell. Value is 32.

9.2.107 NR UE Security Capabilities

This IE defines the supported algorithms for encryption and integrity protection in NR as defined in TS 33.401 [18].

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
NR Encryption	M		BIT STRING	Each position in the bitmap represents an
Algorithms			(SIZE(16,))	encryption algorithm:
				"all bits equal to 0" – UE supports no other
				NR algorithm than NEA0,
				"first bit" – 128-NEA1,
				"second bit" – 128-NEA2,
				"third bit" – 128-NEA3,
				other bits reserved for future use. Value '1'
				indicates support and value '0' indicates no
				support of the algorithm.
ND L			DIT OTDING	Algorithms are defined in TS 33.401 [18].
NR Integrity	M		BIT STRING	Each position in the bitmap represents an
Protection			(SIZE(16,))	integrity protection algorithm:
Algorithms				"all bits equal to 0" – UE supports no other
				NR algorithm than NIAO,
				"first bit" – 128-NIA1,
				"second bit" – 128-NIA2,
				"third bit" – 128-NIA3, other bits reserved for future use.
				Value '1' indicates support and value '0'
				indicates no support of the algorithm.
				Algorithms are defined in TS 33.401 [18].
				Algorithms are defined in 13 33.401 [10].

9.2.108 EN-DC Resource Configuration

This IE contains the EN-DC resource configuration for an E-RAB, indicating the presence of PDCP at the en-gNB and Lower Layers at MCG and SCG.

IE/Group Name	Presence	Range	IE type and	Semantics description	Criticality	Assigned
			reference			Criticality
PDCP at SgNB	M		ENUMERAT		_	
-			ED (present,			
			not present)			
MCG resources	M		ENUMERAT		_	
			ED (present,			
			not present)			
SCG resources	M		ENUMERAT		_	
			ED (present,			
			not present)			

9.2.109 PDCP Change Indication

The *PDCP Change Indication* IE is used to require the MeNB to either initiate the security key update or to perform PDCP data recovery towards the UE (see TS 37.340 [15]).

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PDCP Change	М		ENUMERATED	The value of S-KgNB update
Indication			(S-KgNB update required,	required indicates that the security
			PDCP data recovery required,	key in en-gNB needs to be
)	updated.
				The value of PDCP data recovery
				required indicates that MeNB
				needs to perform PDCP data
				recovery.

9.2.110 Served NR Cell Information

This IE contains cell configuration information of an NR cell that a neighbour eNB may need for the X2 AP interface.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
NR-PCI	М		INTEGER (01007)	NR Physical Cell ID	_	•
Cell ID	M		NR CGI 9.2.111		_	
5GS-TAC	0		OCTET STRING (3)	Broadcast 5GS Tracking Area Code. If this IE is included, the receiving node may assume that the NR cell provides 5GS service and is eligible as intersystem HO target candidate.	ŀ	
Configured TAC	0		OCTET STRING (2)	This is the TAC configured in the engNB, different from the 5GS TAC broadcast in the NR cell and enables application of Roaming and Access Restrictions for EN-DC as specified in TS 37.340 [32].	ľ	
Served PLMNs		1 <max noofBP LMNs></max 		Broadcast PLMNs in SIB1 associated to the NR Cell Identity in the Cell ID IE. If more than maxnoofBPLMNs are needed for NR, they are provided by the Additional PLMNs IE.	-	
>PLMN Identity	М		9.2.4	7.66.16.7.6.7	_	
CHOICE NR-Mode- Info	M				-	
>FDD						
>>FDD Info		1			_	
>>>UL FreqInfo	М		NR Frequency Info 9.2.106		_	
>>>DL FreqInfo	М		NR Frequency Info 9.2.106		I	
>>>UL Transmission Bandwidth	М		NR Transmission Bandwidth 9.2.114		-	
>>>DL Transmission Bandwidth	M		NR Transmission Bandwidth 9.2.114		-	
>TDD >>TDD Info		1				
>>NRFreqInfo	М	1	NR Frequency Info 9.2.106			
>>>Transmissi on Bandwidth	M		NR Transmission Bandwidth 9.2.114		-	
Measurement Timing Configuration	M		OCTET STRING	Contains the MeasurementTimingCo nfiguration inter-node message for the served cell, as defined in TS 38.331 [31].	-	
Additional PLMNs		0 <max noofAdd itionalP LMNs></max 		Additional PLMNs in addition to the Served PLMNs	YES	reject
>PLMN Identity	М		9.2.4		_	

Broadcast PLMN Identity Info List NR		0 <max noofext BPLMN s></max 		This IE corresponds to the <i>PLMN-IdentityInfoList</i> IE in <i>SIB1</i> as specified in TS 38.331 [31]. All PLMN Identities and associated information contained in the <i>PLMN-IdentityInfoList</i> IE are included and provided in the same order as broadcast in SIB1.	YES	ignore
>Broadcast PLMNs		1 <max noofext BPLMN s></max 		Broadcast PLMN IDs in SIB1 associated to the NR Cell Identity IE.	-	
>>PLMN Identity	M		9.2.4		_	
>5GS-TAC	0		OCTET STRING (3)		-	
>NR Cell Identity	M		BIT STRING (SIZE(36))		1	

Range bound	Explanation		
maxnoofBPLMNs	Maximum no. of broadcast PLMN lds. Value is 6.		
maxnoofAdditionalPLMNs	Maximum no. additional PLMN lds. Value is 6.		
maxnoofextBPLMNs	Maximum no. of extended broadcast PLMN lds. Value is 12.		

9.2.111 NR CGI

The NR Cell Global Identifier (NR CGI) is used to globally identify an NR cell (see TS 38.401 [34]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.2.4	
NR Cell Identity	М		BIT STRING (36)	The leftmost bits of the NR Cell Identity IE value correspond to the value of the en-gNB ID IE contained in the Global en-gNB ID IE (defined in section 9.2.112) identifying the en-gNB that controls the cell.

9.2.112 Global en-gNB ID

This IE is used to globally identify an en-gNB (see TS 37.340 [32]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.2.4	
CHOICE en-gNB ID	M			
>en-gNB ID				
>>en-gNB ID	М		BIT STRING (SIZE(2232))	Equal to the leftmost bits of the NR Cell Identity IE contained in the NR CGI IE of each cell served by the en-qNB.

9.2.113 Void

9.2.114 NR Transmission Bandwidth

The NR Transmission Bandwidth IE is used to indicate the UL or DL transmission bandwidth.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
NR SCS	M		ENUMERATED (scs15, scs30, scs60, scs120,)	The values scs15, scs30, scs60 and scs120 corresponds to the sub carrier spacing in TS 38.104 [37].
NR NRB	M		ENUMERATED (nrb11, nrb18, nrb24, nrb25, nrb31, nrb32, nrb38, nrb51, nrb52, nrb65, nrb66, nrb78, nrb79, nrb93, nrb106, nrb107, nrb121, nrb132, nrb133, nrb135, nrb160, nrb162, nrb189, nrb216, nrb217, nrb245, nrb264, nrb270, nrb273,)	This IE is used to indicate the UL or DL transmission bandwidth expressed in units of resource blocks "N _{RB} " (TS 38.104 [37]). The values nrb11, nrb18, etc. correspond to the number of resource blocks "N _{RB} " 11, 18, etc.

9.2.115 Cell Assistance Information

The Cell Assistance Information IE is used by the eNB to request information about NR cells.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Cell Assistance Type	М			This IE may be refined.
>Limited List				
>>List of Requested NR Cells		1 < maxCel linengN B >		Included when the eNB requests a limited list of served NR cells.
>>>NR CGI	М		9.2.111	NR cell for which served NR cell information is requested.
>Full List				
>>Complete Information Request Indicator	М		ENUMERATED (allServedNRCells,)	Included when the eNB requests the complete list of served NR cells.

Range bound	Explanation
maxCellinengNB	Maximum no. cells that can be served by an en-gNB. Value is
	16384.

9.2.116 MeNB Resource Coordination Information

The *MeNB Resource Coordination Information* IE is LTE resource allocation at MeNB and used at the en-gNB to coordinate resource utilisation between the MeNB and the en-gNB.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
EUTRA Cell ID	М		ECGI 9.2.14	This IE indicates the PCell.	_	
UL Coordination Information	M		BIT STRING (64400,)	Each position in the bitmap represents a PRB pair in a subframe; value "0" indicates "PCell resource not intended to be used for transmission by the sending node", value "1" indicates "PCell resource intended to be used for transmission by the sending node". The bit string spans from the first PRB pair of the first represented subframe to the last PRB pair of the same subframe and then moves to the following PRBs in the following subframes in the same order. Each position is applicable only in positions corresponding to UL subframes. The bit string may span across multiple contiguous subframes (maximum 40). The first position of the <i>UL Coordination Information</i> corresponds to subframe 0 in a radio frame where <i>SFN</i> = 0. The length of the bit string is an integer multiple of $N_{\rm RB}^{\rm UL}$ is defined in TS 36.211 [10]. The UL Coordination Information information is continuously repeated.		

DL Coordination Information	0	BIT STRING (64400,)	Each position in the bitmap represents a PRB pair in a subframe; value "0" indicates "PCell resource not intended to be used for transmission by the sending node", value "1" indicates "PCell resource intended to be used for transmission by the sending node". The bit string spans from the first PRB pair of the first represented subframe to the last PRB pair of the same subframe and then moves to the following PRBs in the following subframes in the same order. Each position is applicable only in positions corresponding to DL subframes. The bit string may span across multiple contiguous subframes (maximum 40). The first position of the <i>DL Coordination Information</i> corresponds to the receiving node's subframe 0 in a receiving node's radio frame where <i>SFN</i> = 0. The length of the bit string is an integer multiple of NIL an integer multiple of NIL in the DL Coordination Information is continuously		
NR CGI	0	9.2.111	This IE indicates the assumed PSCell.	YES	ignore
MeNB Coordination Assistance Information	0	9.2.139		YES	reject

9.2.117 SgNB Resource Coordination Information

The *SgNB Resource Coordination Information* IE indicates resources within the bandwidth of the PCell which are not available for use by the MeNB and is used at the MeNB to coordinate resource utilisation between the en-gNB and the MeNB.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
NR CGI	M		9.2.111	This IE indicates the PSCell.	_	<u> </u>
NR CGI UL Coordination Information	M		9.2.111 BIT STRING (64400,)	This IE indicates the PSCell. Each position in the bitmap represents a PRB pair in a subframe; value "0" indicates "PCell resource not intended to be used for transmission by the sending node", value "1" indicates "PCell resource intended to be used for transmission by the sending node". The bit string spans from the first PRB pair of the first represented subframe to the last PRB pair of the same subframe and then moves to the following PRBs in the following subframes in the same order. Each position is applicable only in positions corresponding to UL subframes. The bit string may span across multiple contiguous subframes (maximum 40). The first position of the UL $Coordination$ $Information$ corresponds to the receiving node's subframe 0 in a receiving node's radio frame where $SFN = 0$. The length of the bit string is an integer multiple of N_{RB}^{UL} is defined in TS 36.211 [10]. The UL Coordination Information Information is continuously repeated.		

DL Coordination Information	0	BIT STRING (64400,)	Each position in the bitmap represents a PRB pair in a subframe; value "0" indicates "PCell resource not intended to be used for transmission by the sending node", value "1" indicates "PCell resource intended to be used for transmission by the sending node". The bit string spans from the first PRB pair of the first represented subframe to the last PRB pair of the same subframe and then moves to the following PRBs in the following subframes in the same order. Each position is applicable only in positions corresponding to DL subframes. The bit string may span across multiple contiguous subframes (maximum 40). The first position of the <i>DL Coordination Information</i> corresponds to the receiving	-	
			The bit string may span across multiple contiguous subframes (maximum 40). The first position of the <i>DL</i>		
			The DL Coordination Information is continuously repeated.		
EUTRA Cell ID	0	ECGI 9.2.14	Reference cell for UL Coordination Information IE and DL Coordination Information IE.	YES	ignore
SgNB Coordination Assistance Information	0	9.2.140		YES	reject

9.2.118 UL Configuration

This IE indicates how the UL PDCP is configured for the assisting node.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
UL UE Configuration	M		ENUMERATED (no- data, shared, only,)	Indicates how the UE uses the UL at the assisting node.

9.2.119 RLC Mode

The RLC Mode IE indicates the RLC Mode used for an E-RAB.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
RLC Mode	M		ENUMERATED (
			RLC-AM, RLC-UM-	
			Bidirectional, RLC-	
			UM-Unidirectional-	
			UL, RLC-UM-	
			Unidirectionall-DL,	
)	

9.2.120 Secondary RAT Usage Report List

This IE provides information on the NR resources used with EN-DC as specified in TS 37.340 [32].

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Secondary RAT usage report Item		1 < maxno ofbeare rs >			EACH	reject
>E-RAB ID	М		9.2.23		-	
>Secondary RAT Type	М		ENUMERATED (nR,)		-	
>E-RAB Usage Report List		1			-	
>>E-RAB Usage Report Item		1 <maxn ooftime="" periods<="" td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxn>			EACH	ignore
>>>Start timestamp	M		OCTET STRING (SIZE(4))	UTC time encoded in the same format as the first four octets of the 64-bit timestamp format as defined in section 6 of IETF RFC 5905 [35]. It indicates the start time of the collecting period of the included Usage Count UL IE and Usage Count DL IE.	-	
>>>End timestamp	М		OCTET STRING (SIZE(4))	UTC time encoded in the same format as the first four octets of the 64-bit timestamp format as defined in section 6 of IETF RFC 5905 [35]. It indicates the end time of the collecting period of the included Usage Count UL IE and Usage Count DL IE.	-	
>>>Usage count UL	М		INTEGER (02 ⁶⁴ -1)	The unit is: octets.	-	
>>>Usage count DL	М		INTEGER (02 ⁶⁴ - 1)	The unit is: octets.	-	

Range bound	Explanation
maxnoofbearers	Maximum no. of E-RABs. Value is 256.
maxnooftimeperiods	Maximum no. of time reporting periods. Value is 2.

9.2.121 UE Application layer measurement configuration

The IE defines configuration information for the QoE Measurement Collection (QMC) function.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigne Criticali
Container for application layer measurement configuration	M		Octet string (11000)	Indicates application layer measurement configuration, see Annex L in [36].	-	
CHOICE Area Scope of QMC	М				-	
>Cell based						
>>Cell ID List for QMC		1 <maxno ofCellID forQMC</maxno 				
>>>E-CGI	М		9.2.1.38		-	
>TA based	101		3.2.1.00			
>>TA List for QMC		1 <maxno ofTAfor QMC></maxno 				
>>>TAC	М		9.2.3.7	The TAI is derived using the current serving PLMN.	-	
>TAI based					-	
>>TAI List for QMC		1 <maxno ofTAfor QMC></maxno 			-	
>>>TAI	М		9.2.3.16		-	
>PLMN area based						
>>PLMN List for QMC		1 <maxno ofPLMN forQMC</maxno 				
>>>PLMN Identity	M		9.2.3.8		-	
Service Type	M		ENUMERATED (QMC for streaming service, QMC for MTSI service,)	This IE indicates the service type of UE application layer measurements.	-	

Range bound	Explanation			
maxnoofCellIDforQMC	Maximum no. of Cell ID subject for QMC scope. Value is 32.			
maxnoofTAforQMC	Maximum no. of TA subject for QMC scope. Value is 8.			
maxnoofPLMNforQMC	Maximum no. of PLMNs in the PLMN list for QMC scope. Value is 16.			

9.2.122 DRB ID

This information element uniquely identifies a DRB over the X2 interface within an en-gNB.

The usage of this IE is defined in TS 36.331 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DRB ID	М		INTEGER (1 32)	

9.2.123 SUL Information

This IE provides information about the SUL carrier.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
SUL ARFCN	М		INTEGER (0maxNRARF CN)	RF Reference Frequency as defined in TS 38.104 [37] section 5.4.2.1. The frequency provided in this IE identifies the absolute frequency position of the reference resource block (Common RB 0) of the SUL carrier. Its lowest subcarrier is also known as Point A.
SUL Transmission Bandwidth	M		NR Transmission Bandwidth 9.2.114	

Range bound	Explanation		
maxNRARFCN	Maximum value of NRARFCNs. Value is 3279165.		

9.2.124 Packet Loss Rate

This IE indicates the packet loss rate.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Packet Loss Rate	М		INTEGER(01000)	Ratio of lost packets per number of packets sent, expressed in tenth of percent.	-	•

9.2.125 Protected E-UTRA Resource Indication

This IE indicates the resources allocated for E-UTRA DL and UL reference and control signals (hereby referred to as protected resources). This information is used in the process of E-UTRA – NR Cell Resource Coordination.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Activation SFN	М		INTEGER (01023)	Indicates from which SFN of the receiving node the resource allocation is valid.		
Protected Resource List		1		The protected resource pattern is continuously repeated, and it is valid until stated otherwise or until replaced by a new pattern. The pattern does not apply in reserved subframes.	YES	ignore
>Protected Resource List Item		1 <maxnoofprot ectedResourceP atterns></maxnoofprot 		Each item describes one transmission pattern. A pattern may comprise several control signals.	-	
>>Resource Type	M		ENUMERAT ED (downlinkno nCRS,CRS, uplink)	Indicates whether the protected resource is E- UTRA DL non- CRS, E-UTRA CRS or E-UTRA UL.	-	

L		T I	DIT OTONIC	TI 120 /	ı	1
>>Intra-PRB Protected	M		BIT STRING	The bitmap of		
Resource Footprint			(84,)	REs occupied		
				by the protected		
				signal within		
				one PRB. Each		
				position in the		
				bitmap		
				represents an		
				RE in one PRB;		
				value "0"		
				indicates		
				"resource not		
				protected",		
	1			value "1"		
				indicates		
	1			"resource		
	1			protected ". The		
				first bit of the		
				string		
				corresponds to		
				the RE with the		
				smallest time		
				and frequency		
				index in the		
				PRB, where the		
				indexing first		
				goes into the		
				frequency		
				domain. The		
				length of the bit		
	1			string equals		
				the product of		
				N_{RB}^{SC} and the		
	1			length of PRB in		
	1			time dimension,		
	1			measured in		
				REs. N_{RB}^{SC} is		
				defined in TS		
	1					
	1			36.211 [10]. The		
				intra-PRB		
	1			pattern		
				consisting of all		
				"1"s is		
	1			equivalent to		
	1			PRB-level		
	<u> </u>		<u> </u>	granularity.		<u> </u>

	1	1			1	1
>>Protected Footprint	M		BIT	The bit string	-	
Frequency Pattern			STRING(6	indicates in		
			110,)	which PRBs		
			110,)			
				inside carrier		
				bandwidth the		
				Intra-PRB		
				Protected		
				Resource		
				Footprint		
				applies. How		
				often in time		
				dimension this		
				frequency		
				pattern applies,		
				depends on		
				time periodicity		
				of Intra-PRB		
				Protected		
				Resource		
				Footprint. The		
				first bit of the bit		
				string		
				corresponds to		
				the PRB		
				occupying the		
				lowest		
				subcarrier		
				frequencies of		
				the carrier		
				bandwidth,		
				where the		
				indexing first		
				goes into the		
				frequency		
				domain. Each		
				position in the		
				string		
				represents a		
				PRB; value "0"		
				indicates " Intra-		
				PRB Protected		
				Resource		
				Footprint does		
				not appear in		
				PRB", value "1"		
				r No , value I		
				indicates "Intra-		
				PRB Protected		
				Resource		
				Footprint		
				appears in		
				PRB". The		
				length of the bit		
				string equals		
				the number of		
				PRBs in the		
				carrier		
				bandwidth.		
<u> </u>	1					
>>Protected Footprint	М			The description		
Time Pattern				of time		
				periodicity of the		
				Intra-PRB		
				Protected		
				Resource		
				Footprint.		

	1	1		1	1
>>>Protected Footprint Time- periodicity	M	INTEGER(1320,)	which the periodic Intra-PRB Protected Resource Footprint repeats in time-dimension (1= every PRB (i.e. slot), 2=every other PRB (i.e. slot) etc.	-	
>>>Protected Footprint Start Time	M	INTEGER(120,)	The time- position of the PRB inside the frame in which the periodic Intra-PRB Protected Resource Footprint appears for the first time. The value "1" corresponds to the receiving node's slot 0 in subframe 0 in the receiving node's radio frame where SFN = Activation SFN.	-	
MBSFN Control Region Length	0	INTEGER(0.	Length of control region in MBSFN subframes. Expressed in REs, in the time dimension.		
PDCCH Region Length	M	INTEGER(1.	Length of PDCCH region in regular subframes. Expressed in REs, in the time dimension.		

Range bound	Explanation		
maxnoofProtectedResourcePatterns	Maximum no. protected resource patterns. Value is 16.		

9.2.126 Data Traffic Resource Indication

This IE indicates the intended data traffic resource allocation for E-UTRA - NR Cell Resource Coordination.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Activation SFN	М		INTEGER (01023)	Indicates from which SFN of the receiving node the agreement is valid.		
CHOICE Shared Resource Type	М				-	
>UL Only Sharing						
>>UL Resource Bitmap	M		Data Traffic Resources 9.2.127		-	
>UL and DL Sharing						
>>CHOICE UL Resources	М					
>>>Unchanged			NULL			
>>>Changed						
>>>UL Resource Bitmap	M		Data Traffic Resources 9.2.127			
>>CHOICE <i>DL</i> Resources	М					
>>>Unchanged			NULL			
>>>Changed						
>>>>DL Resource Bitmap	M		Data Traffic Resources 9.2.127			
Reserved Subframe Pattern	0		9.2.128	Indicates subframes in which the resource allocation does not hold.		

9.2.127 Data Traffic Resources

The *Data Traffic Resources* IE indicates the intended data traffic resource allocation for E-UTRA - NR Cell Resource Coordination.

9.2.128 Reserved Subframe Pattern

The Reserved Subframe Pattern IE indicates the pattern of subframes in which the Protected E-UTRA Resource Indication and Data Traffic Resource Indication do not hold.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Subframe Type	M		ENUMERATED(MBSFN,non- MBSFN,)	Indicates what type of non-regular subframes the Reserved Subframe Pattern refers to (e.g. MBSFN).
Reserved Subframe Pattern	M		BIT STRING (10160)	Each position in the bitmap represents a subframe. Value '0' indicates "regular subframe". Value '1' indicates "reserved subframe". For MBSFN subframes, the exception refers only to the noncontrol region of the subframe. The bit string may span across multiple contiguous subframes. The first position of the Subframe Configuration IE corresponds to the receiving node's subframe 0 in a receiving node's radio frame where SFN = Activation SFN. The IE is ignored if received by the eNB.
MBSFN Control Region Length	0		INTEGER(03)	Length of control region in MBSFN subframes. Expressed in REs, in the time dimension.

9.2.129 Aerial UE subscription information

This information element is used by the eNB to know if the UE is allowed to use aerial UE function, refer to TS 23.401[12].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Aerial UE subscription information	М		ENUMERATED (allowed, not	
IIIIOIIIIalioii			allowed,)	

9.2.130 User plane traffic activity report

This IE is used to indicate user plane traffic activity.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
User plane traffic activity report	M		ENUMERATED (inactive, re-activated,)	"re-activated" shall be only set after "inactive" has been reported for the concerned reporting object

9.2.131 RLC Status

This IE indicates about the RLC configuration change included in the container towards the UE.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
Reestablishment Indication	0		ENUMERATED (reestablished,)	Indicates that following the change of the radio status, the RLC has been reestablished.

9.2.132 RRC config indication

This IE is used to indicate the type of RRC configuration used at the en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RRC config indication	M		ENUMERATED	
			(full config,	
			delta config,)	

9.2.133 PDCP SN Length

The PDCP SN Length IE is used to indicate the PDCP SN length configuration of the bearer.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PDCP SN Length	М		ENUMERATED (12bits,	This IE indicates the PDCP
			18bits,)	sequence number size.

9.2.134 Bluetooth Measurement Configuration

This IE defines the parameters for Bluetooth measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Bluetooth Measurement Configuration	М		ENUMERATED (Setup,)	
Bluetooth Measurement Configuration Name List		01		
>Bluetooth Measurement Configuration Name Item IEs		1 <maxnoofblu etoothName ></maxnoofblu 		
>>Bluetooth Measurement Configuration Name	М		OCTET STRING (SIZE (1248))	
BT RSSI	0		ENUMERATED (True,)	In case of Immediate MDT, it corresponds to M8 measurement as defined in 37.320 [31].

Range bound	Explanation
maxnoofBluetoothname	Maximum no. of Bluetooth local name used for Bluetooth
	measurement collection, the maximum value is 4.

9.2.135 WLAN Measurement Configuration

This IE defines the parameters for WLAN measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
WLAN Measurement Configuration	М		ENUMERATED (Setup,)	
WLAN Measurement Configuration Name List		01		
>WLAN Measurement Configuration Name Item IEs		1 <maxnoofw LANName></maxnoofw 		
>>WLAN Measurement Configuration Name	М		OCTET STRING (SIZE (132))	
WLAN RSSI	0		ENUMERATED (True,)	In case of Immediate MDT, it corresponds to M8 as defined in 37.320 [31].
WLAN RTT	0		ENUMERATED (True,)	For Immediate MDT, it corresponds to M9 as defined in 37.320 [31].

Range bound	Explanation		
maxnoofWLANname	Maximum no. of WLAN SSID used for WLAN measurement		
	collection, the maximum value is 4.		

9.2.136 Subscription Based UE Differentiation Information

This IE is generated by the MME based on the UE subscription information, it provides the Subscription Based UE differentiation Information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Periodic Communication Indicator	0		ENUMERATED(peri odically, on demand,)	This IE indicates whether the UE communicates periodically or not, e.g. only on demand.
Periodic Time	0		INTEGER (13600,)	This IE indicates the interval time of periodic communication, the unit is: second
Scheduled Communication Time		01		This IE indicates the time zone and day of the week when the UE is available for communication.
>>Day of Week	0		BIT STRING (SIZE(7))	If Day-Of-Week is not provided this shall be interpreted as every day of the week. Each position in the bitmap represents a day of the week: first bit = Mon, second bit =Tue, third bit =Wed, and so on. Value '1' indicates 'scheduled. Value '0' indicates 'not scheduled'.
>>Time of Day Start	0		INTEGER (086399,)	This IE indicates the time to start of the day, each value represent the corresponding second since 00:00 of the day. If Time-Of-Day-Start is not provided, starting time shall be set to start of the day(s) indicated by Day-Of-Week.
>>Time of Day End	0		INTEGER (086399,)	This IE indicates the time to start of the day, each value represent the corresponding second since 00:00 of the day. The value of this IE should be bigger than the value of <i>Time of Day Start</i> IE. If Time-Of-Day-End is not provided, ending time is end of the day(s) indicated by Day-Of-Week.
Stationary Indication	0		ENUMERATED(stat ionary, mobile,)	wook.
Traffic Profile	0		ENUMERATED(sin gle packet, dual packets, multiple packets,)	"single packet" indicates single packet transmission (UL or DL), "dual packets" indicates dual packet transmission (UL with subsequent DL, or DL with subsequent UL), "multiple packets" indicates multiple packets transmission.
Battery Indication	0		ENUMERATED(batt ery powered, battery powered not rechargeable or replaceable, not battery powered,)	"battery powered" indicates that the UE is battery powered and the battery is rechargeable/replaceable, "battery powered not rechargeable or replaceable" indicates that the UE is battery powered but the battery is not rechargeable/replaceable, "not battery powered" indicates that the UE is not battery powered.

9.2.137 Duplication activation

The *Duplication Activation* IE indicates whether UL PDCP Duplication is activated or not.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Duplication Activation	M		ENUMERATED (
			Active, Inactive,)	

9.2.138 LCID

This IE uniquely identifies a LCID for the associated DRB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
LCID	М		INTEGER	Corresponds to the
			(132,)	LogicalChannelIdentity
				defined in TS 38.331 [8].

9.2.139 MeNB Coordination Assistance Information

The MeNB Coordination Assistance Information IE is provided by the MeNB and used by the SgNB to determine further coordination of resource utilisation between the en-gNB and the MeNB.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
MeNB Coordination	M		ENUMERATED(Coordi	The absence of this IE
Assistance Information			nation Not Required,	indicates that the resource
)	coordination is required.

9.2.140 SgNB Coordination Assistance Information

The *SgNB Coordination Assistance Information* IE is provided by the SgNB and used by the MeNB to determine further coordination of resource utilisation between the en-gNB and the MeNB.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SgNB Coordination	M		ENUMERATED(Coordi	The absence of this IE
Assistance Information			nation Not Required,)	indicates that the resource coordination is required.

9.2.141 Desired Activity Notification Level

This IE contains information on which level activity notification shall be performed.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
Desired Activity Notification	0		ENUMERATED	
Level			(None, E-RAB,	
			UE-level,)	

9.2.142 Location Information at SgNB

The Location Information at SgNB IE enables the SgNB to provide the MeNB with information that supports localisation of the UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PSCell ID	M		NR CGI	PSCell of the UE	_	
			9.2.111			

9.2.143 Interface Instance Indication

The Interface Instance Indication identifies the interface instance the X2AP message is destined for.

NOTE: The Interface Instance Indication is allocated so that it can be associated with an X2-C interface instance. The Interface Instance Indication may identify more than one interface instance.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Interface Instance Indication	M		INTEGER (0255,)	

9.2.144 NB-IoT UL DL Alignment Offset

This IE is used to indicate the offset between the UL carrier frequency center with respect to DL carrier frequency center.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
NB-IoT UL DL Alignment Offset	M		ENUMERATED (-7.5, 0, 7.5,)	Unit: kHz

9.2.145 - 9.2.152 Void

9.2.153 EPC Handover Restriction List Container

This IE contains the *Handover Restriction List* IE specified in TS 36.413 [4] as received by the E-UTRAN from the EPC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
EPC Handover Restriction List Container	М		OCTET STRING	The octets of the OCTET STRING are encoded according to the specifications of the Handover Restriction List IE specified in TS 36.413 [4].

9.3 Message and Information Element Abstract Syntax (with ASN.1)

9.3.1 General

X2AP ASN.1 definition conforms to ITU-T Rec. X.680 [27] and ITU-T Rec. X.681 [28].

Sub clause 9.3 presents the Abstract Syntax of the X2AP protocol with ASN.1. In case there is contradiction between the ASN.1 definition in this sub clause and the tabular format in sub clause 9.1 and 9.2, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional elements, in which the tabular format shall take precedence.

The ASN.1 definition specifies the structure and content of X2AP messages. X2AP messages can contain any IEs specified in the object set definitions for that message without the order or number of occurrence being restricted by ASN.1. However, for this version of the standard, a sending entity shall construct an X2AP message according to the PDU definitions module and with the following additional rules:

- IEs shall be ordered (in an IE container) in the order they appear in object set definitions.
- Object set definitions specify how many times IEs may appear. An IE shall appear exactly once if the presence field in an object has value "mandatory". An IE may appear at most once if the presence field in an object has value "optional" or "conditional". If in a tabular format there is multiplicity specified for an IE (i.e. an IE list) then in the corresponding ASN.1 definition the list definition is separated into two parts. The first part defines an IE container list in which the list elements reside. The second part defines list elements. The IE container list appears as an IE of its own. For this version of the standard an IE container list may contain only one kind of list elements.

NOTE: In the above, "IE" means an IE in the object set with an explicit ID. If one IE needs to appear more than once in one object set, then the different occurrences have different IE IDs.

If an X2AP message that is not constructed as defined above is received, this shall be considered as Abstract Syntax Error, and the message shall be handled as defined for Abstract Syntax Error in clause 10.

9.3.2 Usage of Private Message Mechanism for Non-standard Use

The private message mechanism for non-standard use may be used:

- for special operator (and/or vendor) specific features considered not to be part of the basic functionality, i.e. the functionality required for a complete and high-quality specification in order to guarantee multivendor inter-operability.
- by vendors for research purposes, e.g. to implement and evaluate new algorithms/features before such features are proposed for standardisation.

The private message mechanism shall not be used for basic functionality. Such functionality shall be standardised.

9.3.3 Elementary Procedure Definitions

-- ASN1START

```
__ *********************
-- Elementary Procedure definitions
__ ********************
X2AP-PDU-Descriptions {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) x2ap (2) version1 (1) x2ap-PDU-Descriptions (0) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
__ *********************
-- IE parameter types from other modules.
__ ***********************
IMPORTS
   Criticality,
   ProcedureCode
FROM X2AP-CommonDataTypes
   CellActivationRequest,
   CellActivationResponse,
   CellActivationFailure,
   ENBConfigurationUpdate,
   ENBConfigurationUpdateAcknowledge,
   ENBConfigurationUpdateFailure,
   ErrorIndication,
   HandoverCancel,
   HandoverReport,
   HandoverPreparationFailure,
   HandoverRequest,
   HandoverRequestAcknowledge,
   LoadInformation,
   PrivateMessage,
   ResetRequest,
   ResetResponse,
   ResourceStatusFailure,
   ResourceStatusRequest,
   ResourceStatusResponse,
   ResourceStatusUpdate,
   RLFIndication,
   SNStatusTransfer,
   UEContextRelease,
   X2SetupFailure,
   X2SetupRequest,
   X2SetupResponse,
   MobilityChangeRequest,
   MobilityChangeAcknowledge,
```

```
MobilityChangeFailure,
X2Release.
X2APMessageTransfer,
SeNBAdditionRequest,
SeNBAdditionRequestAcknowledge,
SeNBAdditionRequestReject,
SeNBReconfigurationComplete,
SeNBModificationRequest,
SeNBModificationRequestAcknowledge,
SeNBModificationRequestReject,
SeNBModificationRequired,
SeNBModificationConfirm,
SeNBModificationRefuse,
SeNBReleaseRequest,
SeNBReleaseRequired,
SeNBReleaseConfirm,
SeNBCounterCheckRequest,
X2RemovalFailure,
X2RemovalRequest,
X2RemovalResponse,
RetrieveUEContextRequest,
RetrieveUEContextResponse,
RetrieveUEContextFailure,
SgNBAdditionRequest,
SgNBAdditionRequestAcknowledge,
SgNBAdditionRequestReject,
SqNBReconfigurationComplete,
SqNBModificationRequest,
SqNBModificationRequestAcknowledge,
SgNBModificationRequestReject,
SgNBModificationRequired,
SgNBModificationConfirm,
SgNBModificationRefuse,
SgNBReleaseRequest,
SgNBReleaseRequestAcknowledge,
SgNBReleaseRequestReject,
SgNBReleaseRequired,
SqNBReleaseConfirm,
SgNBCounterCheckRequest,
SqNBChangeRequired,
SgNBChangeConfirm,
SgNBChangeRefuse,
RRCTransfer,
ENDCX2SetupRequest,
ENDCX2SetupResponse,
ENDCX2SetupFailure,
ENDCConfigurationUpdate,
ENDCConfigurationUpdateAcknowledge,
ENDCConfigurationUpdateFailure,
SecondaryRATDataUsageReport,
ENDCCellActivationRequest,
ENDCCellActivationResponse,
ENDCCellActivationFailure,
ENDCPartialResetRequired,
```

```
ENDCPartialResetConfirm,
    EUTRANRCellResourceCoordinationRequest,
    EUTRANRCellResourceCoordinationResponse,
    SgNBActivityNotification,
    ENDCX2RemovalRequest,
    ENDCX2RemovalResponse,
    ENDCX2RemovalFailure,
    DataForwardingAddressIndication.
    GNBStatusIndication,
    ENDCConfigurationTransfer,
    DeactivateTrace,
   TraceStart
FROM X2AP-PDU-Contents
    id-cellActivation,
    id-eNBConfigurationUpdate,
    id-errorIndication,
    id-handoverCancel,
    id-handoverReport,
    id-handoverPreparation,
    id-loadIndication.
    id-privateMessage,
    id-reset,
    id-resourceStatusReporting,
    id-resourceStatusReportingInitiation,
    id-rLFIndication,
    id-snStatusTransfer,
    id-uEContextRelease,
    id-x2Setup,
    id-mobilitySettingsChange,
    id-x2Release,
    id-x2APMessageTransfer,
    id-seNBAdditionPreparation,
    id-seNBReconfigurationCompletion,
    id-meNBinitiatedSeNBModificationPreparation,
    id-seNBinitiatedSeNBModification,
    id-meNBinitiatedSeNBRelease,
    id-seNBinitiatedSeNBRelease,
    id-seNBCounterCheck,
    id-x2Removal.
    id-retrieveUEContext,
    id-sgNBAdditionPreparation,
    id-sgNBReconfigurationCompletion,
    id-meNBinitiatedSqNBModificationPreparation,
    id-sgNBinitiatedSgNBModification,
    id-meNBinitiatedSqNBRelease,
    id-sgNBinitiatedSgNBRelease,
    id-sgNBChange,
    id-sgNBCounterCheck,
    id-rRCTransfer,
```

```
id-endcX2Setup,
    id-endcConfigurationUpdate,
    id-secondaryRATDataUsageReport,
    id-endcCellActivation,
    id-endcPartialReset.
    id-eUTRANRCellResourceCoordination,
    id-SgNBActivityNotification,
    id-endcX2Removal,
    id-dataForwardingAddressIndication,
    id-gNBStatusIndication,
    id-endcConfigurationTransfer,
    id-deactivateTrace,
    id-traceStart
FROM X2AP-Constants;
-- Interface Elementary Procedure Class
X2AP-ELEMENTARY-PROCEDURE ::= CLASS {
    &InitiatingMessage
    &SuccessfulOutcome
                                    OPTIONAL,
    &UnsuccessfulOutcome
                                        OPTIONAL,
    &procedureCode
                            ProcedureCode UNIQUE,
    &criticality
                            Criticality
                                            DEFAULT ignore
WITH SYNTAX {
    INITIATING MESSAGE
                            &InitiatingMessage
                            &SuccessfulOutcome]
    [SUCCESSFUL OUTCOME
    [UNSUCCESSFUL OUTCOME
                                &UnsuccessfulOutcomel
                            &procedureCode
    PROCEDURE CODE
    [CRITICALITY
                            &criticality]
-- Interface PDU Definition
X2AP-PDU ::= CHOICE {
    initiatingMessage
                       InitiatingMessage,
    successfulOutcome SuccessfulOutcome,
    unsuccessfulOutcome UnsuccessfulOutcome,
    . . .
InitiatingMessage ::= SEQUENCE {
                                                                     ({X2AP-ELEMENTARY-PROCEDURES}),
    procedureCode X2AP-ELEMENTARY-PROCEDURE.&procedureCode
```

264

```
({X2AP-ELEMENTARY-PROCEDURES}{@procedureCode}),
    criticality
                   X2AP-ELEMENTARY-PROCEDURE.&criticality
   value
                   X2AP-ELEMENTARY-PROCEDURE.&InitiatingMessage
                                                                  ({X2AP-ELEMENTARY-PROCEDURES}{@procedureCode})
SuccessfulOutcome ::= SEOUENCE {
   procedureCode X2AP-ELEMENTARY-PROCEDURE.&procedureCode
                                                                  ({X2AP-ELEMENTARY-PROCEDURES}),
   criticality
                   X2AP-ELEMENTARY-PROCEDURE.&criticality
                                                                  ({X2AP-ELEMENTARY-PROCEDURES} {@procedureCode}),
                                                                  ({X2AP-ELEMENTARY-PROCEDURES}{@procedureCode})
   value
                   X2AP-ELEMENTARY-PROCEDURE.&SuccessfulOutcome
UnsuccessfulOutcome ::= SEQUENCE {
   procedureCode X2AP-ELEMENTARY-PROCEDURE.&procedureCode
                                                                  ({X2AP-ELEMENTARY-PROCEDURES}),
                                                                  ({X2AP-ELEMENTARY-PROCEDURES}{@procedureCode}),
                   X2AP-ELEMENTARY-PROCEDURE.&criticality
   criticality
   value
                   X2AP-ELEMENTARY-PROCEDURE.&UnsuccessfulOutcome
                                                                  ({X2AP-ELEMENTARY-PROCEDURES}{@procedureCode})
     Interface Elementary Procedure List
X2AP-ELEMENTARY-PROCEDURES X2AP-ELEMENTARY-PROCEDURE ::= {
   X2AP-ELEMENTARY-PROCEDURES-CLASS-1
   X2AP-ELEMENTARY-PROCEDURES-CLASS-2
X2AP-ELEMENTARY-PROCEDURES-CLASS-1 X2AP-ELEMENTARY-PROCEDURE ::=
   handoverPreparation
   reset
   x2Setup
   resourceStatusReportingInitiation
    eNBConfigurationUpdate
   mobilitySettingsChange
   cellActivation
    seNBAdditionPreparation
   meNBinitiatedSeNBModificationPreparation
    seNBinitiatedSeNBModification
    seNBinitiatedSeNBRelease
   x2Removal
   retrieveUEContext
    sgNBAdditionPreparation
   meNBinitiatedSgNBModificationPreparation
    sqNBinitiatedSqNBModification
   meNBinitiatedSgNBRelease
    sgNBinitiatedSgNBRelease
    sgNBChange
    endcX2Setup
    endcConfigurationUpdate
    endcCellActivation
    endcPartialReset
    eUTRANRCellResourceCoordination
    endcX2Removal
```

```
X2AP-ELEMENTARY-PROCEDURES-CLASS-2 X2AP-ELEMENTARY-PROCEDURE ::=
    snStatusTransfer
    uEContextRelease
   handoverCancel
    errorIndication
    resourceStatusReporting
    loadIndication
    privateMessage
    rLFIndication
    handoverReport
    x2Release
    x2APMessageTransfer
    seNBReconfigurationCompletion
    meNBinitiatedSeNBRelease
    seNBCounterCheck
    sgNBReconfigurationCompletion
    sgNBCounterCheck
    rRCTransfer
    secondaryRATDataUsageReport
    sgNBActivityNotification
    dataForwardingAddressIndication
    gNBStatusIndication
    endcConfigurationTransfer
    deactivateTrace
    traceStart
    . . .
   ****************
-- Interface Elementary Procedures
handoverPreparation X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                           HandoverRequest
                           HandoverRequestAcknowledge
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                           HandoverPreparationFailure
                           id-handoverPreparation
    PROCEDURE CODE
    CRITICALITY
                           reject
snStatusTransfer X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                           SNStatusTransfer
    PROCEDURE CODE
                           id-snStatusTransfer
    CRITICALITY
                           ignore
uEContextRelease X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                           UEContextRelease
```

266

```
id-uEContextRelease
    PROCEDURE CODE
    CRITICALITY
                            ignore
handoverCancel X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            HandoverCancel
    PROCEDURE CODE
                            id-handoverCancel
    CRITICALITY
                            ignore
handoverReport X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            HandoverReport
    PROCEDURE CODE
                            id-handoverReport
    CRITICALITY
                            ignore
errorIndication X2AP-ELEMENTARY-PROCEDURE ::= {
                            ErrorIndication
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-errorIndication
    CRITICALITY
                            ignore
       X2AP-ELEMENTARY-PROCEDURE ::= {
                            ResetRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            ResetResponse
                            id-reset
    PROCEDURE CODE
    CRITICALITY
                            reject
x2Setup X2AP-ELEMENTARY-PROCEDURE ::= {
                            X2SetupRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            X2SetupResponse
                            X2SetupFailure
    UNSUCCESSFUL OUTCOME
                            id-x2Setup
    PROCEDURE CODE
    CRITICALITY
                            reject
loadIndication X2AP-ELEMENTARY-PROCEDURE ::= {
                            LoadInformation
    INITIATING MESSAGE
                            id-loadIndication
    PROCEDURE CODE
    CRITICALITY
                            ignore
                            X2AP-ELEMENTARY-PROCEDURE ::= {
eNBConfigurationUpdate
    INITIATING MESSAGE
                            ENBConfigurationUpdate
                            {\tt ENBConfigurationUpdateAcknowledge}
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            ENBConfigurationUpdateFailure
                            id-eNBConfigurationUpdate
    PROCEDURE CODE
    CRITICALITY
                            reject
resourceStatusReportingInitiation
                                    X2AP-ELEMENTARY-PROCEDURE ::= {
```

```
ResourceStatusRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                                    ResourceStatusResponse
    UNSUCCESSFUL OUTCOME
                                    ResourceStatusFailure
    PROCEDURE CODE
                                    id-resourceStatusReportingInitiation
    CRITICALITY
                                    reject
resourceStatusReporting X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ResourceStatusUpdate
    PROCEDURE CODE
                            id-resourceStatusReporting
    CRITICALITY
                            ignore
rLFIndication X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            RLFIndication
    PROCEDURE CODE
                            id-rLFIndication
                            ignore
    CRITICALITY
privateMessage
                        X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            PrivateMessage
    PROCEDURE CODE
                            id-privateMessage
    CRITICALITY
                            ignore
mobilitySettingsChange
                       X2AP-ELEMENTARY-PROCEDURE ::= {
                            MobilityChangeRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            MobilityChangeAcknowledge
                            MobilityChangeFailure
    UNSUCCESSFUL OUTCOME
                            id-mobilitySettingsChange
    PROCEDURE CODE
    CRITICALITY
                            reject
cellActivation X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            CellActivationRequest
    SUCCESSFUL OUTCOME
                            CellActivationResponse
                            CellActivationFailure
    UNSUCCESSFUL OUTCOME
                            id-cellActivation
    PROCEDURE CODE
    CRITICALITY
                            reject
x2Release X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            X2Release
    PROCEDURE CODE
                            id-x2Release
    CRITICALITY
                            reject
x2APMessageTransfer X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            X2APMessageTransfer
    PROCEDURE CODE
                            id-x2APMessageTransfer
    CRITICALITY
                            reject
```

seNBAdditionPreparation X2AP-ELEMENTARY-PROCEDURE ::=

```
SeNBAdditionRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            SeNBAdditionRequestAcknowledge
    UNSUCCESSFUL OUTCOME
                            SeNBAdditionRequestReject
    PROCEDURE CODE
                            id-seNBAdditionPreparation
    CRITICALITY
                            reject
seNBReconfigurationCompletion
                                X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SeNBReconfigurationComplete
    PROCEDURE CODE
                            id-seNBReconfigurationCompletion
    CRITICALITY
                            ignore
{\tt meNBinitiatedSeNBModificationPreparation}
                                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SeNBModificationRequest
    SUCCESSFUL OUTCOME
                            SeNBModificationRequestAcknowledge
                            SeNBModificationRequestReject
    UNSUCCESSFUL OUTCOME
                            id-meNBinitiatedSeNBModificationPreparation
    PROCEDURE CODE
    CRITICALITY
                            reject
senBinitiatedSenBModification X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SeNBModificationRequired
                            SeNBModificationConfirm
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            SeNBModificationRefuse
    PROCEDURE CODE
                            id-seNBinitiatedSeNBModification
    CRITICALITY
                            reject
meNBinitiatedSeNBRelease
                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SeNBReleaseRequest
    PROCEDURE CODE
                            id-meNBinitiatedSeNBRelease
    CRITICALITY
                            ignore
seNBinitiatedSeNBRelease
                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SeNBReleaseRequired
                            SeNBReleaseConfirm
    SUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-seNBinitiatedSeNBRelease
    CRITICALITY
                            reject
seNBCounterCheck
                    X2AP-ELEMENTARY-PROCEDURE ::= {
                            SeNBCounterCheckRequest
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-seNBCounterCheck
    CRITICALITY
                            reject
x2Removal X2AP-ELEMENTARY-PROCEDURE ::= {
                            X2RemovalRequest
    INITIATING MESSAGE
                            X2RemovalResponse
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            X2RemovalFailure
    PROCEDURE CODE
                            id-x2Removal
    CRITICALITY
                            reject
```

```
retrieveUEContext X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            RetrieveUEContextRequest
    SUCCESSFUL OUTCOME
                            RetrieveUEContextResponse
                            RetrieveUEContextFailure
    UNSUCCESSFUL OUTCOME
                            id-retrieveUEContext
    PROCEDURE CODE
    CRITICALITY
                            reject
sgNBAdditionPreparation
                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SgNBAdditionRequest
                            SgNBAdditionRequestAcknowledge
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            SgNBAdditionRequestReject
                            id-sqNBAdditionPreparation
    PROCEDURE CODE
    CRITICALITY
                            reject
                                X2AP-ELEMENTARY-PROCEDURE ::= {
sqNBReconfigurationCompletion
    INITIATING MESSAGE
                            SgNBReconfigurationComplete
    PROCEDURE CODE
                            id-sgNBReconfigurationCompletion
    CRITICALITY
                            ignore
meNBinitiatedSgNBModificationPreparation
                                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SgNBModificationRequest
                            SqNBModificationRequestAcknowledge
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            SqNBModificationRequestReject
                            id-meNBinitiatedSqNBModificationPreparation
    PROCEDURE CODE
    CRITICALITY
                            reject
sgNBinitiatedSgNBModification
                                    X2AP-ELEMENTARY-PROCEDURE ::= {
                            SgNBModificationRequired
    INITIATING MESSAGE
                            SqNBModificationConfirm
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            SgNBModificationRefuse
    PROCEDURE CODE
                            id-sgNBinitiatedSgNBModification
    CRITICALITY
                            reject
                            X2AP-ELEMENTARY-PROCEDURE ::= {
meNBinitiatedSgNBRelease
    INITIATING MESSAGE
                            SgNBReleaseRequest
                            SgNBReleaseRequestAcknowledge
    SUCCESSFUL OUTCOME
                            SgNBReleaseRequestReject
    UNSUCCESSFUL OUTCOME
                            id-meNBinitiatedSgNBRelease
    PROCEDURE CODE
    CRITICALITY
                            ignore
sgNBinitiatedSgNBRelease
                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SqNBReleaseRequired
                            SqNBReleaseConfirm
    SUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-sqNBinitiatedSqNBRelease
    CRITICALITY
                            reject
```

269

```
sqNBCounterCheck
                    X2AP-ELEMENTARY-PROCEDURE ::= {
                            SqNBCounterCheckRequest
    INITIATING MESSAGE
                            id-sqNBCounterCheck
    PROCEDURE CODE
    CRITICALITY
                            reject
sqNBChange X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SgNBChangeRequired
                            SgNBChangeConfirm
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            SgNBChangeRefuse
                            id-sgNBChange
    PROCEDURE CODE
    CRITICALITY
                            reject
rRCTransfer X2AP-ELEMENTARY-PROCEDURE ::= {
                            RRCTransfer
    INITIATING MESSAGE
                            id-rRCTransfer
    PROCEDURE CODE
    CRITICALITY
                            reject
endcX2Setup X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ENDCX2SetupRequest
                            ENDCX2SetupResponse
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            ENDCX2SetupFailure
    PROCEDURE CODE
                            id-endcX2Setup
    CRITICALITY
                            reject
endcConfigurationUpdate
                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ENDCConfigurationUpdate
    SUCCESSFUL OUTCOME
                            ENDCConfigurationUpdateAcknowledge
    UNSUCCESSFUL OUTCOME
                            ENDCConfigurationUpdateFailure
                            id-endcConfigurationUpdate
    PROCEDURE CODE
    CRITICALITY
                            reject
secondaryRATDataUsageReport X2AP-ELEMENTARY-PROCEDURE ::=
    INITIATING MESSAGE
                            SecondaryRATDataUsageReport
    PROCEDURE CODE
                            id-secondaryRATDataUsageReport
    CRITICALITY
                            reject
endcCellActivation X2AP-ELEMENTARY-PROCEDURE ::= {
                            ENDCCellActivationRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            ENDCCellActivationResponse
    UNSUCCESSFUL OUTCOME
                            ENDCCellActivationFailure
    PROCEDURE CODE
                            id-endcCellActivation
                            reject
    CRITICALITY
endcPartialReset
                    X2AP-ELEMENTARY-PROCEDURE ::= {
                            ENDCPartialResetRequired
    INITIATING MESSAGE
```

```
ENDCPartialResetConfirm
    SUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-endcPartialReset
    CRITICALITY
                            reject
eUTRANRCellResourceCoordination X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            EUTRANRCellResourceCoordinationRequest
                            EUTRANRCellResourceCoordinationResponse
    SUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-eUTRANRCellResourceCoordination
    CRITICALITY
                            reject
sgNBActivityNotification
                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SqNBActivityNotification
                            id-SgNBActivityNotification
    PROCEDURE CODE
    CRITICALITY
                            reject
endcX2Removal X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ENDCX2RemovalRequest
                            ENDCX2RemovalResponse
    SUCCESSFUL OUTCOME
                            ENDCX2RemovalFailure
    UNSUCCESSFUL OUTCOME
                            id-endcX2Removal
    PROCEDURE CODE
    CRITICALITY
                            reject
dataForwardingAddressIndication X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            DataForwardingAddressIndication
    PROCEDURE CODE
                            id-dataForwardingAddressIndication
    CRITICALITY
                            ignore
                        X2AP-ELEMENTARY-PROCEDURE ::= {
gNBStatusIndication
                            GNBStatusIndication
    INITIATING MESSAGE
                            id-gNBStatusIndication
    PROCEDURE CODE
    CRITICALITY
                            ignore
endcConfigurationTransfer
                            X2AP-ELEMENTARY-PROCEDURE ::=
    INITIATING MESSAGE
                            ENDCConfigurationTransfer
                            id-endcConfigurationTransfer
    PROCEDURE CODE
    CRITICALITY
                            ignore
deactivateTrace X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            DeactivateTrace
    PROCEDURE CODE
                            id-deactivateTrace
    CRITICALITY
                            ignore
traceStart X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            TraceStart
    PROCEDURE CODE
                            id-traceStart
```

```
CRITICALITY ignore
}
END
-- ASN1STOP
```

9.3.4 PDU Definitions

```
-- ASN1START
__ *********************
-- PDU definitions for X2AP.
__ ********************
X2AP-PDU-Contents {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) x2ap (2) version1 (1) x2ap-PDU-Contents (1) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
  ****************
-- IE parameter types from other modules.
__ ***********************************
IMPORTS
   ABSInformation,
   ABS-Status,
   AS-SecurityInformation,
   BearerType,
   Cause,
   CompositeAvailableCapacityGroup,
   Correlation-ID,
   COUNTvalue,
   CellReportingIndicator,
   AerialUEsubscriptionInformation,
   CriticalityDiagnostics,
   CRNTI,
   CSGMembershipStatus,
   CSG-Id,
   DeactivationIndication,
   DL-Forwarding,
   DynamicDLTransmissionInformation,
   ECGI,
   E-RAB-ID,
   E-RAB-Level-QoS-Parameters,
   E-RAB-List,
   EUTRANTraceID,
   GlobalENB-ID,
```

```
GTPtunnelEndpoint,
GUGroupIDList,
GUMMEI,
HandoverReportType,
HandoverRestrictionList,
Masked-IMEISV,
InvokeIndication,
LocationReportingInformation,
MDT-Configuration,
ManagementBasedMDTallowed,
MDTPLMNList,
Neighbour-Information,
PCI,
PDCP-SN,
PLMN-Identity,
ReceiveStatusofULPDCPSDUs,
Registration-Reguest,
RelativeNarrowbandTxPower,
RadioResourceStatus,
RLC-Status,
RRCConnReestabIndicator,
RRCConnSetupIndicator,
UE-RLF-Report-Container,
UEAppLayerMeasConfig,
RRC-Context,
ServedCell-Information,
ServedCells,
ShortMAC-I,
SRVCCOperationPossible,
SubscriberProfileIDforRFP,
TargetCellInUTRAN,
TargeteNBtoSource-eNBTransparentContainer,
TimeToWait,
TraceActivation,
TraceDepth.
TransportLayerAddress,
UEAggregateMaximumBitRate,
UE-HistoryInformation,
UE-HistoryInformationFromTheUE,
UE-S1AP-ID,
UESecurityCapabilities,
UEsToBeResetList,
UE-X2AP-ID,
UL-HighInterferenceIndicationInfo,
UL-InterferenceOverloadIndication,
HWLoadIndicator,
S1TNLLoadIndicator,
Measurement-ID,
ReportCharacteristics,
MobilityParametersInformation,
MobilityParametersModificationRange,
ReceiveStatusOfULPDCPSDUsExtended,
COUNTValueExtended,
SubframeAssignment,
```

```
ExtendedULInterferenceOverloadInfo,
ExpectedUEBehaviour,
SeNBSecurityKey,
MeNBtoSeNBContainer,
SeNBtoMeNBContainer,
SCGChangeIndication,
CoMPInformation,
ReportingPeriodicityRSRPMR,
RSRPMRList,
UE-RLF-Report-Container-for-extended-bands,
ProSeAuthorized,
CoverageModificationList,
ReportingPeriodicityCSIR,
CSIReportList,
ReceiveStatusOfULPDCPSDUsPDCP-SNlength18,
COUNTvaluePDCP-SNlength18,
LHN-ID,
UE-ContextKeptIndicator,
UE-X2AP-ID-Extension,
SIPTOBearerDeactivationIndication,
TunnelInformation,
V2XServicesAuthorized,
X2BenefitValue,
ResumeID,
EUTRANCellIdentifier,
MakeBeforeBreakIndicator,
WTID,
WT-UE-XwAP-ID,
UESidelinkAggregateMaximumBitRate,
SgNBSecurityKey,
MeNBtoSgNBContainer,
SgNBtoMeNBContainer,
SplitSRBs,
RRCContainer,
SRBType,
GlobalGNB-ID,
GNB-ID,
SCGConfigurationOuery,
SplitSRB,
NRUeReport,
EN-DC-ResourceConfiguration,
TAC,
NRFreqInfo,
NRCGI,
NRPCI,
NRUESecurityCapabilities,
PDCPChangeIndication,
ULConfiguration,
SqNB-UE-X2AP-ID,
SecondaryRATUsageReportList,
ActivationID,
MeNBResourceCoordinationInformation,
SgNBResourceCoordinationInformation,
NR-TxBW,
```

```
BroadcastPLMNs-Item,
    Additional PLMNs-Item.
    RLCMode.
    GBR-OosInformation,
    DRB-ID,
    FiveGS-TAC,
    SULInformation,
    Packet-LossRate,
    ResourceType,
    DataTrafficResourceIndication,
    SpectrumSharingGroupID,
    RRC-Config-Ind,
    SGNB-Addition-Trigger-Ind,
    UserPlaneTrafficActivityReport,
    ERABActivityNotifyItemList,
    PDCPSnLength,
    Subscription-Based-UE-DifferentiationInfo,
    DuplicationActivation,
    GNBOverloadInformation,
    NewDRBIDrequest,
    DesiredActNotificationLevel,
    LocationInformationSqNB,
    LocationInformationSgNBReporting,
    EndcSONConfigurationTransfer,
    NRNeighbour-Information,
    InterfaceInstanceIndication,
    BPLMN-ID-Info-NR,
    EPCHandoverRestrictionListContainer
FROM X2AP-IEs
    PrivateIE-Container{},
    ProtocolExtensionContainer{}.
    ProtocolIE-Container{},
    ProtocolIE-ContainerList{},
    ProtocolIE-ContainerPair(),
    ProtocolIE-ContainerPairList{},
    ProtocolIE-Single-Container{},
    X2AP-PRIVATE-IES,
    X2AP-PROTOCOL-EXTENSION,
    X2AP-PROTOCOL-IES,
    X2AP-PROTOCOL-IES-PAIR
FROM X2AP-Containers
    id-ABSInformation,
    id-ActivatedCellList,
    id-BearerType,
    id-Cause,
    id-CellInformation,
    id-CellInformation-Item,
    id-CellMeasurementResult,
    id-CellMeasurementResult-Item,
```

```
id-CellToReport,
id-CellToReport-Item,
id-CompositeAvailableCapacityGroup,
id-AerialUEsubscriptionInformation,
id-CriticalityDiagnostics,
id-DeactivationIndication,
id-DynamicDLTransmissionInformation,
id-E-RABs-Admitted-Item,
id-E-RABs-Admitted-List.
id-E-RABs-NotAdmitted-List,
id-E-RABs-SubjectToStatusTransfer-List,
id-E-RABs-SubjectToStatusTransfer-Item,
id-E-RABs-ToBeSetup-Item,
id-GlobalENB-ID.
id-GUGroupIDList,
id-GUGroupIDToAddList,
id-GUGroupIDToDeleteList,
id-GUMMEI-ID,
id-Masked-IMEISV,
id-InvokeIndication,
id-New-eNB-UE-X2AP-ID,
id-Old-eNB-UE-X2AP-ID,
id-Registration-Request,
id-ReportingPeriodicity,
id-RLC-Status,
id-ServedCells.
id-ServedCellsToActivate,
id-ServedCellsToAdd,
id-ServedCellsToModify,
id-ServedCellsToDelete,
id-SRVCCOperationPossible,
id-TargetCell-ID,
id-TargeteNBtoSource-eNBTransparentContainer,
id-TimeToWait,
id-TraceActivation.
id-UE-ContextInformation,
id-UE-HistoryInformation,
id-UE-X2AP-ID,
id-Measurement-ID,
id-ReportCharacteristics,
id-ENB1-Measurement-ID,
id-ENB2-Measurement-ID,
id-ENB1-Cell-ID,
id-ENB2-Cell-ID,
id-ENB2-Proposed-Mobility-Parameters,
id-ENB1-Mobility-Parameters,
id-ENB2-Mobility-Parameters-Modification-Range,
id-FailureCellPCI,
id-Re-establishmentCellECGI,
id-FailureCellCRNTI,
id-ShortMAC-I,
id-SourceCellECGI,
id-FailureCellECGI,
id-HandoverReportType,
```

```
id-UE-RLF-Report-Container,
id-PartialSuccessIndicator.
id-MeasurementInitiationResult-List.
id-MeasurementInitiationResult-Item.
id-MeasurementFailureCause-Item.
id-CompleteFailureCauseInformation-List,
id-CompleteFailureCauseInformation-Item,
id-CSGMembershipStatus,
id-CSG-Id,
id-MDTConfiguration,
id-ManagementBasedMDTallowed,
id-ABS-Status,
id-RRCConnSetupIndicator,
id-RRCConnReestabIndicator.
id-TargetCellInUTRAN,
id-MobilityInformation,
id-SourceCellCRNTI,
id-ManagementBasedMDTPLMNList,
id-ReceiveStatusOfULPDCPSDUsExtended,
id-ULCOUNTValueExtended,
id-DLCOUNTValueExtended,
id-IntendedULDLConfiguration,
id-ExtendedULInterferenceOverloadInfo,
id-RNL-Header,
id-x2APMessage,
id-UE-HistoryInformationFromTheUE,
id-ExpectedUEBehaviour,
id-MeNB-UE-X2AP-ID,
id-SeNB-UE-X2AP-ID,
id-UE-SecurityCapabilities,
id-SeNBSecurityKey,
id-SeNBUEAggregateMaximumBitRate,
id-ServingPLMN,
id-E-RABs-ToBeAdded-List,
id-E-RABs-ToBeAdded-Item,
id-MeNBtoSeNBContainer,
id-E-RABs-Admitted-ToBeAdded-List,
id-E-RABs-Admitted-ToBeAdded-Item,
id-SeNBtoMeNBContainer,
id-ResponseInformationSeNBReconfComp,
id-UE-ContextInformationSeNBModReg,
id-E-RABs-ToBeAdded-ModRegItem,
id-E-RABs-ToBeModified-ModReqItem,
id-E-RABs-ToBeReleased-ModRegItem,
id-E-RABs-Admitted-ToBeAdded-ModAckList,
id-E-RABs-Admitted-ToBeModified-ModAckList,
id-E-RABs-Admitted-ToBeReleased-ModAckList,
id-E-RABs-Admitted-ToBeAdded-ModAckItem,
id-E-RABs-Admitted-ToBeModified-ModAckItem,
id-E-RABs-Admitted-ToBeReleased-ModAckItem,
id-SCGChangeIndication,
id-E-RABs-ToBeReleased-ModRegd,
id-E-RABs-ToBeReleased-ModReqdItem,
id-E-RABs-ToBeReleased-List-RelReg,
```

```
id-E-RABs-ToBeReleased-RelRegItem,
id-E-RABs-ToBeReleased-List-RelConf.
id-E-RABs-ToBeReleased-RelConfItem.
id-E-RABs-SubjectToCounterCheck-List,
id-E-RABs-SubjectToCounterCheckItem,
id-CoMPInformation,
id-ReportingPeriodicityRSRPMR.
id-RSRPMRList,
id-UE-RLF-Report-Container-for-extended-bands,
id-ProSeAuthorized.
id-CoverageModificationList,
id-ReportingPeriodicityCSIR,
id-CSIReportList,
id-ReceiveStatusOfULPDCPSDUsPDCP-SNlength18,
id-ULCOUNTValuePDCP-SNlength18,
id-DLCOUNTValuePDCP-SNlength18,
id-LHN-ID,
id-Correlation-ID,
id-SIPTO-Correlation-ID,
id-UE-ContextReferenceAtSeNB,
id-UE-ContextReferenceAtWT,
id-UE-ContextKeptIndicator,
id-UEs-ToBeReset,
id-UEs-Admitted-ToBeReset,
id-WT-UE-ContextKeptIndicator,
id-New-eNB-UE-X2AP-ID-Extension,
id-Old-eNB-UE-X2AP-ID-Extension,
id-MeNB-UE-X2AP-ID-Extension,
id-SeNB-UE-X2AP-ID-Extension,
id-SIPTO-BearerDeactivationIndication,
id-Tunnel-Information-for-BBF,
id-SIPTO-L-GW-TransportLayerAddress,
id-GW-TransportLayerAddress,
id-X2RemovalThreshold,
id-CellReportingIndicator,
id-V2XServicesAuthorized,
id-resumeID.
id-UE-ContextInformationRetrieve,
id-E-RABs-ToBeSetupRetrieve-Item,
id-NewEUTRANCellIdentifier,
id-MakeBeforeBreakIndicator,
id-UESidelinkAggregateMaximumBitRate,
id-uL-GTPtunnelEndpoint,
id-SgNBSecurityKey,
id-SqNBUEAggregateMaximumBitRate,
id-E-RABs-ToBeAdded-SqNBAddReqList,
id-MeNBtoSqNBContainer,
id-SqNB-UE-X2AP-ID,
id-RequestedSplitSRBs,
id-E-RABs-ToBeAdded-SqNBAddReg-Item,
id-E-RABs-Admitted-ToBeAdded-SqNBAddRegAckList,
id-SqNBtoMeNBContainer,
id-AdmittedSplitSRBs,
id-E-RABs-Admitted-ToBeAdded-SgNBAddReqAck-Item,
```

```
id-ResponseInformationSqNBReconfComp,
id-UE-ContextInformation-SqNBModReq,
id-E-RABs-ToBeAdded-SaNBModReg-Item.
id-E-RABs-ToBeModified-SqNBModReg-Item,
id-E-RABs-ToBeReleased-SqNBModReg-Item,
id-E-RABs-Admitted-ToBeAdded-SqNBModAckList,
id-E-RABs-Admitted-ToBeModified-SqNBModAckList,
id-E-RABs-Admitted-ToBeReleased-SqNBModAckList,
id-E-RABs-Admitted-ToBeAdded-SgNBModAck-Item,
id-E-RABs-Admitted-ToBeModified-SqNBModAck-Item,
id-E-RABs-Admitted-ToBeReleased-SgNBModAck-Item,
id-E-RABs-Admitted-ToBeReleased-SqNBRelReqAckList,
id-E-RABs-Admitted-ToBeReleased-SqNBRelRegAck-Item.
id-E-RABs-ToBeReleased-SqNBModRegdList,
id-E-RABs-ToBeModified-SqNBModReqdList,
id-E-RABs-ToBeReleased-SqNBModRegd-Item,
id-E-RABs-ToBeModified-SqNBModRegd-Item,
id-E-RABs-ToBeReleased-SqNBChaConfList,
id-E-RABs-ToBeReleased-SqNBChaConf-Item,
id-E-RABs-ToBeReleased-SgNBRelRegList,
id-E-RABs-ToBeReleased-SgNBRelReg-Item,
id-E-RABs-ToBeReleased-SgNBRelConfList,
id-E-RABs-ToBeReleased-SgNBRelConf-Item,
id-E-RABs-ToBeReleased-SqNBRelReadList.
id-E-RABs-ToBeReleased-SqNBRelRegd-Item,
id-E-RABs-SubjectToSqNBCounterCheck-List,
id-E-RABs-SubjectToSqNBCounterCheck-Item,
id-Target-SqNB-ID,
id-RRCContainer,
id-SRBType,
id-HandoverRestrictionList,
id-SCGConfigurationQuery,
id-SplitSRB,
id-NRUeReport,
id-InitiatingNodeType-EndcX2Setup,
id-InitiatingNodeType-EndcConfigUpdate,
id-RespondingNodeType-EndcX2Setup,
id-RespondingNodeType-EndcConfigUpdate,
id-NRUESecurityCapabilities,
id-PDCPChangeIndication,
id-ServedEUTRAcellsENDCX2ManagementList,
id-ServedEUTRAcellsToModifyListENDCConfUpd,
id-ServedEUTRAcellsToDeleteListENDCConfUpd,
id-ServedNRcellsToModifyListENDCConfUpd,
id-ServedNRcellsToDeleteListENDCConfUpd,
id-CellAssistanceInformation,
id-Globalen-qNB-ID,
id-ServedNRcellsENDCX2ManagementList,
id-Old-SgNB-UE-X2AP-ID,
id-UE-ContextReferenceAtSgNB,
id-SecondaryRATUsageReportList,
id-ActivationID,
id-ServedNRCellsToActivate,
id-ActivatedNRCellList,
```

```
id-MeNBResourceCoordinationInformation,
id-SqNBResourceCoordinationInformation,
id-UEAppLayerMeasConfig,
id-SelectedPLMN,
id-SubscriberProfileIDforRFP.
id-InitiatingNodeType-EutranrCellResourceCoordination,
id-RespondingNodeType-EutranrCellResourceCoordination,
id-DataTrafficResourceIndication,
id-SpectrumSharingGroupID,
id-ListofEUTRACellsinEUTRACoordinationReg,
id-ListofEUTRACellsinEUTRACoordinationResp,
id-ListofEUTRACellsinNRCoordinationReg,
id-ListofNRCellsinNRCoordinationReg,
id-ListofNRCellsinNRCoordinationResp,
id-RRCConfigIndication,
id-SGNB-Addition-Trigger-Ind,
id-RequestedSplitSRBsrelease,
id-AdmittedSplitSRBsrelease,
id-E-RABs-AdmittedToBeModified-SqNBModConfList,
id-E-RABs-AdmittedToBeModified-SgNBModConf-Item,
id-UEContextLevelUserPlaneActivity,
id-ERABActivityNotifyItemList,
id-MeNBCell-ID,
id-InitiatingNodeType-EndcX2Removal,
id-RespondingNodeType-EndcX2Removal,
id-uLpDCPSnLength,
id-dL-Forwarding,
id-E-RABs-DataForwardingAddress-List,
id-E-RABs-DataForwardingAddress-Item,
id-Subscription-Based-UE-DifferentiationInfo,
id-RLCMode-transferred,
id-dLPDCPSnLength,
id-secondarysgNBDLGTPTEIDatPDCP,
id-secondarymeNBULGTPTEIDatPDCP,
id-lCID,
id-duplicationActivation,
id-GNBOverloadInformation,
id-new-drb-ID-reg,
id-NRNeighbourInfoToModify,
id-DesiredActNotificationLevel,
id-LocationInformationSqNB,
id-LocationInformationSqNBReporting,
id-endcSONConfigurationTransfer,
id-EUTRANTraceID.
id-additionalPLMNs-Item,
id-InterfaceInstanceIndication,
id-BPLMN-ID-Info-NR,
id-ERABs-transferred-to-MeNB,
id-EPCHandoverRestrictionListContainer.
maxCellineNB.
maxnoofBearers,
maxnoofPDCP-SN,
maxFailedMeasObjects,
```

```
maxnoofCellIDforMDT,
    maxnoofTAforMDT.
    maxCellinengNB.
    maxnoofCellIDforOMC,
    maxnoofTAforOMC.
    maxnoofPLMNforOMC,
    maxnoofProtectedResourcePatterns,
    maxnoNRcellsSpectrumSharingWithE-UTRA,
    maxnoofNrCellBands
FROM X2AP-Constants;
   -- HANDOVER REQUEST
HandoverRequest ::= SEQUENCE {
    protocolIEs
                       ProtocolIE-Container
                                               {{HandoverRequest-IEs}},
    . . .
HandoverRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                                       CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                           PRESENCE mandatory }
     ID id-Cause
                                                       CRITICALITY ignore TYPE Cause
                                                                                                                           PRESENCE mandatory
     ID id-TargetCell-ID
                                                                                                                           PRESENCE mandatory
                                                       CRITICALITY reject TYPE ECGI
     ID id-GUMMEI-ID
                                                       CRITICALITY reject TYPE GUMMEI
                                                                                                                           PRESENCE mandatory
     ID id-UE-ContextInformation
                                                                                                                           PRESENCE mandatory }
                                                       CRITICALITY reject TYPE UE-ContextInformation
                                                                                                                           PRESENCE mandatory }
     ID id-UE-HistoryInformation
                                                       CRITICALITY ignore TYPE UE-HistoryInformation
     ID id-TraceActivation
                                                       CRITICALITY ignore TYPE TraceActivation
                                                                                                                           PRESENCE optional }
     ID id-SRVCCOperationPossible
                                                       CRITICALITY ignore TYPE SRVCCOperationPossible
                                                                                                                           PRESENCE optional }
     ID id-CSGMembershipStatus
                                                       CRITICALITY reject TYPE CSGMembershipStatus
                                                                                                                           PRESENCE optional }
     ID id-MobilityInformation
                                                       CRITICALITY ignore TYPE MobilityInformation
                                                                                                                           PRESENCE optional }
                                                       CRITICALITY ignore TYPE Masked-IMEISV
     ID id-Masked-IMEISV
                                                                                                                           PRESENCE optional }
                                                                                                                           PRESENCE optional }
     ID id-UE-HistoryInformationFromTheUE
                                                       CRITICALITY ignore TYPE UE-HistoryInformationFromTheUE
                                                                                                                           PRESENCE optional }
     ID id-ExpectedUEBehaviour
                                                       CRITICALITY ignore TYPE ExpectedUEBehaviour
     ID id-ProSeAuthorized
                                                       CRITICALITY ignore TYPE ProSeAuthorized
                                                                                                                           PRESENCE optional }
     ID id-UE-ContextReferenceAtSeNB
                                                       CRITICALITY ignore TYPE UE-ContextReferenceAtSeNB
                                                                                                                           PRESENCE optional }
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                                       CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                           PRESENCE optional }
     ID id-V2XServicesAuthorized
                                                       CRITICALITY ignore TYPE V2XServicesAuthorized
                                                                                                                           PRESENCE optional }
     ID id-UE-ContextReferenceAtWT
                                                       CRITICALITY ignore TYPE UE-ContextReferenceAtWT
                                                                                                                           PRESENCE optional}
     ID id-NRUESecurityCapabilities
                                                           CRITICALITY ignore TYPE NRUESecurityCapabilities
                                                                                                                              PRESENCE optional |
     ID id-UE-ContextReferenceAtSgNB
                                                       CRITICALITY ignore TYPE UE-ContextReferenceAtSgNB
                                                                                                                           PRESENCE optional }
     ID id-AerialUEsubscriptionInformation
                                                       CRITICALITY ignore TYPE AerialUEsubscriptionInformation
                                                                                                                           PRESENCE optional}
     ID id-Subscription-Based-UE-DifferentiationInfo
                                                       CRITICALITY ignore TYPE Subscription-Based-UE-DifferentiationInfo PRESENCE optional }.
UE-ContextInformation ::= SEQUENCE {
    mME-UE-S1AP-ID
                                       UE-S1AP-ID,
    uESecurityCapabilities
                                       UESecurityCapabilities,
    aS-SecurityInformation
                                       AS-SecurityInformation,
    uEaggregateMaximumBitRate
                                       UEAggregateMaximumBitRate,
```

```
SubscriberProfileIDforRFP
    subscriberProfileIDforRFP
                                                                     OPTIONAL,
   e-RABs-ToBeSetup-List
                                      E-RABs-ToBeSetup-List,
   rRC-Context
                                      RRC-Context.
   handoverRestrictionList
                                      HandoverRestrictionList
                                                                 OPTIONAL,
    locationReportingInformation
                                      LocationReportingInformation
                                                                     OPTIONAL,
                                      ProtocolExtensionContainer { {UE-ContextInformation-ExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
UE-ContextInformation-ExtIES X2AP-PROTOCOL-EXTENSION ::= {
 ID id-ManagementBasedMDTallowed
                                         CRITICALITY ignore EXTENSION ManagementBasedMDTallowed
                                                                                                           PRESENCE optional }
 ID id-ManagementBasedMDTPLMNList
                                          CRITICALITY ignore EXTENSION MDTPLMNList
                                                                                                           PRESENCE optional
                                                                                                           PRESENCE optional }
 { ID id-EPCHandoverRestrictionListContainer CRITICALITY ignore EXTENSION EPCHandoverRestrictionListContainer
                                                                                                           PRESENCE optional },
E-RABs-ToBeSetup-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeSetup-ItemIEs} }
E-RABs-ToBeSetup-ItemIEs
                          X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeSetup-Item
                                   CRITICALITY ignore
                                                         TYPE E-RABs-ToBeSetup-Item PRESENCE mandatory },
    . . .
E-RABs-ToBeSetup-Item ::= SEOUENCE
    e-RAB-ID
                              E-RAB-ID
   e-RAB-Level-OoS-Parameters
                                  E-RAB-Level-OoS-Parameters,
   dL-Forwarding
                                  DL-Forwarding
                                                                                             OPTIONAL,
   uL-GTPtunnelEndpoint
                                  GTPtunnelEndpoint,
                                  ProtocolExtensionContainer { {E-RABs-ToBeSetup-ItemExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-ToBeSetup-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
   { ID id-BearerType
                          CRITICALITY reject EXTENSION BearerType
                                                                        PRESENCE optional },
    . . .
MobilityInformation ::= BIT STRING (SIZE(32))
UE-ContextReferenceAtSeNB ::= SEQUENCE {
    source-GlobalSeNB-ID
                              GlobalENB-ID,
    seNB-UE-X2AP-ID
                              UE-X2AP-ID,
    seNB-UE-X2AP-ID-Extension UE-X2AP-ID-Extension,
                              ProtocolExtensionContainer { {UE-ContextReferenceAtSeNB-ItemExtIEs} } OPTIONAL.
   iE-Extensions
UE-ContextReferenceAtSeNB-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UE-ContextReferenceAtWT ::= SEQUENCE {
    WTID
                          WTID,
```

```
wT-UE-XwAP-ID
   iE-Extensions
                         ProtocolExtensionContainer { {UE-ContextReferenceAtWT-ItemExtIEs} } OPTIONAL,
UE-ContextReferenceAtWT-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UE-ContextReferenceAtSqNB ::= SEOUENCE {
   source-GlobalSqNB-ID
                                GlobalGNB-ID,
   sgNB-UE-X2AP-ID
                             SaNB-UE-X2AP-ID,
                             ProtocolExtensionContainer { {UE-ContextReferenceAtSqNB-ItemExtIEs} } OPTIONAL.
   iE-Extensions
UE-ContextReferenceAtSqNB-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
   -- HANDOVER REQUEST ACKNOWLEDGE
__ **********************
HandoverRequestAcknowledge ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        {{HandoverRequestAcknowledge-IEs}},
HandoverRequestAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                                   CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                   PRESENCE mandatory }
     ID id-New-eNB-UE-X2AP-ID
                                                                                                                   PRESENCE mandatory
                                                   CRITICALITY ignore TYPE UE-X2AP-ID
     ID id-E-RABs-Admitted-List
                                                   CRITICALITY ignore TYPE E-RABs-Admitted-List
                                                                                                                   PRESENCE mandatory}
     ID id-E-RABs-NotAdmitted-List
                                                   CRITICALITY ignore TYPE E-RAB-List
                                                                                                                   PRESENCE optional }
     ID id-TargeteNBtoSource-eNBTransparentContainer
                                                   CRITICALITY ignore TYPE TargeteNBtoSource-eNBTransparentContainer
                                                                                                                   PRESENCE mandatory }
                                                                                                                   PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                   CRITICALITY ignore TYPE CriticalityDiagnostics
     ID id-UE-ContextKeptIndicator
                                                                                                                   PRESENCE optional}
                                                   CRITICALITY ignore TYPE UE-ContextKeptIndicator
     ID id-SeNB-UE-X2AP-ID-Extension
                                                   CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                   PRESENCE optional} --
The id-SeNB-UE-X2AP-ID-Extension shall not be sent shall not be sent and shall be ignored, if received .--
                                                   CRITICALITY ignore TYPE UE-X2AP-ID-Extension
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                                                                                                   PRESENCE optional}
     ID id-New-eNB-UE-X2AP-ID-Extension
                                                   CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                   PRESENCE optional}
     ID id-WT-UE-ContextKeptIndicator
                                                                                                                   PRESENCE optional }
                                                   CRITICALITY ignore TYPE UE-ContextKeptIndicator
     ID id-ERABs-transferred-to-MeNB
                                                   CRITICALITY ignore TYPE E-RAB-List
                                                                                                                   PRESENCE optional },
E-RABs-Admitted-List
                         ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ItemIEs} }
E-RABs-Admitted-ItemIEs X2AP-PROTOCOL-IES ::= {
```

```
E-RABs-Admitted-Item ::= SEQUENCE {
   e-RAB-ID
                              E-RAB-ID.
   uL-GTP-TunnelEndpoint
                                  GTPtunnelEndpoint
                                                                                               OPTIONAL.
   dL-GTP-TunnelEndpoint
                                  GTPtunnelEndpoint
                                                                                               OPTIONAL,
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-Admitted-Item-ExtIEs} }
                                                                                               OPTIONAL,
E-RABs-Admitted-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     *****************
-- HANDOVER PREPARATION FAILURE
HandoverPreparationFailure ::= SEQUENCE {
   protocolIEs
                   ProtocolIE-Container
                                          {{HandoverPreparationFailure-IEs}},
   . . .
HandoverPreparationFailure-IES X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                                                                            PRESENCE mandatory}
                                          CRITICALITY ignore TYPE UE-X2AP-ID
     ID id-Cause
                                                                                            PRESENCE mandatory}
                                          CRITICALITY ignore TYPE Cause
     ID id-CriticalityDiagnostics
                                                                                            PRESENCE optional } |
                                          CRITICALITY ignore TYPE CriticalityDiagnostics
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                          CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                            PRESENCE optional },
  *****************
-- HANDOVER REPORT
HandoverReport ::= SEQUENCE {
   protocolIEs
                   ProtocolIE-Container
                                          {{HandoverReport-IEs}},
   . . .
HandoverReport-IEs X2AP-PROTOCOL-IES ::= {
     ID id-HandoverReportType
                                                                                                                        PRESENCE mandatory }
                                                      CRITICALITY ignore TYPE HandoverReportType
     ID id-Cause
                                                      CRITICALITY ignore TYPE Cause
                                                                                                                       PRESENCE mandatory }
     ID id-SourceCellECGI
                                                      CRITICALITY ignore TYPE ECGI
                                                                                                                       PRESENCE mandatory }
     ID id-FailureCellECGI
                                                      CRITICALITY ignore TYPE ECGI
                                                                                                                       PRESENCE mandatory}
     ID id-Re-establishmentCellECGI
                                                      CRITICALITY ignore TYPE ECGI
                                                                                                                       PRESENCE conditional } -
- The IE shall be present if the Handover Report Type IE is set to "HO to Wrong Cell" -- |
                                                                                                                       PRESENCE conditional } -
    { ID id-TargetCellInUTRAN
                                                      CRITICALITY ignore TYPE TargetCellInUTRAN
- The IE shall be present if the Handover Report Type IE is set to "InterRAT ping-pong" --
     ID id-SourceCellCRNTI
                                                     CRITICALITY ignore TYPE CRNTI
                                                                                                                       PRESENCE optional }
                                                                                                                        PRESENCE optional }
    { ID id-MobilityInformation
                                                     CRITICALITY ignore TYPE MobilityInformation
```

```
ID id-UE-RLF-Report-Container
                                                    CRITICALITY ignore TYPE UE-RLF-Report-Container
                                                                                                                     PRESENCE optional } |
     ID id-UE-RLF-Report-Container-for-extended-bands CRITICALITY ignore TYPE UE-RLF-Report-Container-for-extended-bands PRESENCE optional},
  -- SN STATUS TRANSFER
*****************
SNStatusTransfer ::= SEOUENCE {
                                         {{SNStatusTransfer-IEs}},
   protocolIEs
                  ProtocolIE-Container
SNStatusTransfer-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                                 CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                             PRESENCE mandatory }
     ID id-New-eNB-UE-X2AP-ID
                                                 CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                             PRESENCE mandatory }
     ID id-E-RABs-SubjectToStatusTransfer-List
                                                 CRITICALITY ignore TYPE E-RABs-SubjectToStatusTransfer-List
                                                                                                             PRESENCE mandatory}
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                                 CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                             PRESENCE optional }
                                                                                                             PRESENCE optional
     ID id-New-eNB-UE-X2AP-ID-Extension
                                                 CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                PRESENCE optional },
    { ID id-SqNB-UE-X2AP-ID
                                                 CRITICALITY ignore TYPE SgNB-UE-X2AP-ID
    . . .
E-RABs-SubjectToStatusTransfer-List ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-SubjectToStatusTransfer-
ItemIEs} }
E-RABs-SubjectToStatusTransfer-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-SubjectToStatusTransfer-Item CRITICALITY ignore TYPE E-RABs-SubjectToStatusTransfer-Item PRESENCE mandatory
E-RABs-SubjectToStatusTransfer-Item ::= SEQUENCE {
   e-RAB-ID
                                         E-RAB-ID,
   receiveStatusofULPDCPSDUs
                                         ReceiveStatusofULPDCPSDUs
                                                                           OPTIONAL,
   uL-COUNTvalue
                                  COUNTvalue,
   dL-COUNTvalue
                                  COUNTvalue,
   iE-Extensions
                                         ProtocolExtensionContainer { {E-RABs-SubjectToStatusTransfer-ItemExtIEs} } OPTIONAL,
E-RABs-SubjectToStatusTransfer-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-ReceiveStatusOfULPDCPSDUsExtended
                                                     CRITICALITY ignore EXTENSION ReceiveStatusOfULPDCPSDUsExtended
                                                                                                                        PRESENCE optional }
                                                     CRITICALITY ignore EXTENSION COUNTValueExtended
     ID id-ULCOUNTValueExtended
                                                                                                                        PRESENCE optional}
     ID id-DLCOUNTValueExtended
                                                     CRITICALITY ignore EXTENSION COUNTValueExtended
                                                                                                                        PRESENCE optional}
     ID id-ReceiveStatusOfULPDCPSDUsPDCP-SNlength18
                                                    CRITICALITY ignore EXTENSION ReceiveStatusOfULPDCPSDUsPDCP-SNlength18 PRESENCE optional}
     ID id-ULCOUNTValuePDCP-SNlength18
                                                     CRITICALITY ignore EXTENSION COUNTvaluePDCP-SNlength18
                                                                                                                        PRESENCE optional }
    { ID id-DLCOUNTValuePDCP-SNlength18
                                                    CRITICALITY ignore EXTENSION COUNTvaluePDCP-SNlength18
                                                                                                                        PRESENCE optional },
__ ***********************
```

```
-- UE CONTEXT RELEASE
UEContextRelease ::= SEOUENCE {
                    ProtocolIE-Container
                                            {{UEContextRelease-IEs}},
    protocolIEs
UEContextRelease-IES X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                                CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                              PRESENCE mandatory }
     ID id-New-eNB-UE-X2AP-ID
                                                CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                              PRESENCE mandatory }
      ID id-Old-eNB-UE-X2AP-ID-Extension
                                                CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                              PRESENCE optional}
                                                                                                              PRESENCE optional}
      ID id-New-eNB-UE-X2AP-ID-Extension
                                                CRITICALITY reject TYPE UE-X2AP-ID-Extension
     ID id-SIPTO-BearerDeactivationIndication CRITICALITY ignore TYPE SIPTOBearerDeactivationIndication
                                                                                                              PRESENCE optional }
                                                                                                              PRESENCE optional }
     ID id-SqNB-UE-X2AP-ID
                                                CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
-- HANDOVER CANCEL
HandoverCancel ::= SEQUENCE {
   protocolIEs
                                            {{HandoverCancel-IEs}},
                    ProtocolIE-Container
HandoverCancel-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                                CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                  PRESENCE mandatory } |
      ID id-New-eNB-UE-X2AP-ID
                                                CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                  PRESENCE optional }
     ID id-Cause
                                                CRITICALITY ignore TYPE Cause
                                                                                                  PRESENCE mandatory } |
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                                                                                  PRESENCE optional } |
                                                CRITICALITY reject TYPE UE-X2AP-ID-Extension
     ID id-New-eNB-UE-X2AP-ID-Extension
                                                CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                  PRESENCE optional },
-- ERROR INDICATION
ErrorIndication ::= SEQUENCE {
    protocolIEs
                    ProtocolIE-Container
                                            {{ErrorIndication-IEs}},
    . . .
ErrorIndication-IES X2AP-PROTOCOL-IES ::= {
    { ID id-Old-eNB-UE-X2AP-ID
                                                                                                        PRESENCE optional }
                                                CRITICALITY ignore TYPE UE-X2AP-ID
```

```
ID id-New-eNB-UE-X2AP-ID
                                                                                               PRESENCE optional }
                                            CRITICALITY ignore TYPE UE-X2AP-ID
     ID id-Cause
                                            CRITICALITY ignore TYPE Cause
                                                                                               PRESENCE optional }
     ID id-CriticalityDiagnostics
                                            CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                               PRESENCE optional }
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                            CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                               PRESENCE optional }
     ID id-New-eNB-UE-X2AP-ID-Extension
                                            CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                               PRESENCE optional }
     ID id-Old-SqNB-UE-X2AP-ID
                                                                                               PRESENCE optional)
                                            CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
     ID id-InterfaceInstanceIndication
                                            CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                               PRESENCE optional },
       -- RESET REOUEST
__ ********************
ResetRequest ::= SEOUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        {{ResetRequest-IEs}},
   . . .
ResetRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Cause
                                        CRITICALITY ignore TYPE Cause
                                                                                          PRESENCE mandatory } |
     ID id-InterfaceInstanceIndication
                                        CRITICALITY reject TYPE InterfaceInstanceIndication PRESENCE optional },
-- RESET RESPONSE
__ ********************
ResetResponse ::= SEQUENCE {
                                        {{ResetResponse-IEs}},
   protocolIEs
                  ProtocolIE-Container
    . . .
ResetResponse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-CriticalityDiagnostics
                                        CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                          PRESENCE optional }
    { ID id-InterfaceInstanceIndication
                                        CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                            PRESENCE optional },
-- X2 SETUP REOUEST
X2SetupRequest ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        {{X2SetupRequest-IEs}},
```

```
X2SetupRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-GlobalENB-ID CRITICALITY reject TYPE GlobalENB-ID
                                                                            PRESENCE mandatory}
     ID id-ServedCells
                                CRITICALITY reject TYPE ServedCells
                                                                            PRESENCE mandatory}
                                                                            PRESENCE optional}
     ID id-GUGroupIDList
                                CRITICALITY reject TYPE GUGroupIDList
     ID id-LHN-ID
                                CRITICALITY ignore TYPE LHN-ID
                                                                            PRESENCE optional },
*****************
-- X2 SETUP RESPONSE
X2SetupResponse ::= SEQUENCE {
                                        {{X2SetupResponse-IEs}},
   protocolIEs
                  ProtocolIE-Container
X2SetupResponse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-GlobalENB-ID
                                    CRITICALITY reject TYPE GlobalENB-ID
                                                                                PRESENCE mandatory
     ID id-ServedCells
                                    CRITICALITY reject TYPE ServedCells
                                                                                PRESENCE mandatory }
     ID id-GUGroupIDList
                                    CRITICALITY reject TYPE GUGroupIDList
                                                                                PRESENCE optional}
     ID id-CriticalityDiagnostics
                                    CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional }
     ID id-LHN-ID
                                    CRITICALITY ignore TYPE LHN-ID
                                                                                PRESENCE optional },
  ****************
-- X2 SETUP FAILURE
X2SetupFailure ::= SEQUENCE {
                                        {{X2SetupFailure-IEs}},
   protocolIEs
                ProtocolIE-Container
X2SetupFailure-IEs X2AP-PROTOCOL-IES ::= {
                                CRITICALITY ignore
     ID id-Cause
                                                      TYPE Cause
                                                                                         PRESENCE mandatory}
     ID id-TimeToWait
                                CRITICALITY ignore
                                                      TYPE TimeToWait
                                                                                         PRESENCE optional |
    ID id-CriticalityDiagnostics CRITICALITY ignore
                                                      TYPE CriticalityDiagnostics
                                                                                         PRESENCE optional },
```

```
-- LOAD INFORMATION
LoadInformation ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        {{LoadInformation-IEs}},
LoadInformation-IEs X2AP-PROTOCOL-IES ::=
   { ID id-CellInformation
                                    CRITICALITY ignore TYPE CellInformation-List
                                                                                     PRESENCE mandatory } ,
CellInformation-List ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ProtocolIE-Single-Container { {CellInformation-ItemIEs} }
CellInformation-ItemIEs X2AP-PROTOCOL-IES ::= {
   CellInformation-Item ::= SEQUENCE {
   cell-ID
                                 ECGI,
   ul-InterferenceOverloadIndication
                                        UL-InterferenceOverloadIndication
                                                                                                   OPTIONAL,
   ul-HighInterferenceIndicationInfo
                                        UL-HighInterferenceIndicationInfo
                                                                                                  OPTIONAL,
   relativeNarrowbandTxPower
                                        RelativeNarrowbandTxPower
                                                                                                   OPTIONAL,
   iE-Extensions
                                        ProtocolExtensionContainer { {CellInformation-Item-ExtIEs} }
                                                                                                  OPTIONAL,
CellInformation-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::=
 ID id-ABSInformation
                                        CRITICALITY ignore EXTENSION ABSInformation
                                                                                                     PRESENCE optional
                                                                                                     PRESENCE optional
 ID id-InvokeIndication
                                        CRITICALITY ignore EXTENSION InvokeIndication
 ID id-IntendedULDLConfiguration
                                        CRITICALITY ignore EXTENSION SubframeAssignment
                                                                                                     PRESENCE optional
 ID id-ExtendedULInterferenceOverloadInfo CRITICALITY ignore EXTENSION ExtendedULInterferenceOverloadInfo PRESENCE optional
 ID id-CoMPInformation
                                        CRITICALITY ignore EXTENSION CoMPInformation
                                                                                                     PRESENCE optional }
 ID id-DynamicDLTransmissionInformation
                                        CRITICALITY ignore EXTENSION DynamicDLTransmissionInformation
                                                                                                     PRESENCE optional },
-- ENB CONFIGURATION UPDATE
__ *********************
ENBConfigurationUpdate ::= SEQUENCE
   protocolIEs
                  ProtocolIE-Container
                                        {{ENBConfigurationUpdate-IEs}},
   . . .
ENBConfigurationUpdate-IEs X2AP-PROTOCOL-IES ::= {
    { ID id-ServedCellsToAdd
                                                                                        PRESENCE optional }
                                    CRITICALITY reject TYPE ServedCells
```

```
ID id-ServedCellsToModify
                                                                                            PRESENCE optional }
                                      CRITICALITY reject TYPE ServedCellsToModify
     ID id-ServedCellsToDelete
                                      CRITICALITY reject TYPE Old-ECGIS
                                                                                            PRESENCE optional }
     ID id-GUGroupIDToAddList
                                      CRITICALITY reject TYPE GUGroupIDList
                                                                                            PRESENCE optional }
     ID id-GUGroupIDToDeleteList
                                      CRITICALITY reject TYPE GUGroupIDList
                                                                                            PRESENCE optional }
     ID id-CoverageModificationList
                                      CRITICALITY reject TYPE CoverageModificationList
                                                                                            PRESENCE optional }
ServedCellsToModify::= SEQUENCE (SIZE (1..maxCellineNB)) OF ServedCellsToModify-Item
ServedCellsToModify-Item::= SEQUENCE
   old-ecgi
                                  ECGI,
                                  ServedCell-Information.
   servedCellInfo
   neighbour-Info
                                  Neighbour-Information
                                                                 OPTIONAL.
   iE-Extensions
                                  ProtocolExtensionContainer { {ServedCellsToModify-Item-ExtIEs} } OPTIONAL,
ServedCellsToModify-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-DeactivationIndication
                                          CRITICALITY ignore EXTENSION DeactivationIndication
                                                                                                      PRESENCE optional } |
    ID id-NRNeighbourInfoToModify
                                          CRITICALITY ignore EXTENSION NRNeighbour-Information
                                                                                                      PRESENCE optional },
    . . .
Old-ECGIs::= SEQUENCE (SIZE (1..maxCellineNB)) OF ECGI
-- ENB CONFIGURATION UPDATE ACKNOWLEDGE
__ ********************
ENBConfigurationUpdateAcknowledge ::= SEQUENCE {
   protocolIEs
                   ProtocolIE-Container
                                          {{ENBConfigurationUpdateAcknowledge-IEs}},
    . . .
ENBConfigurationUpdateAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
    { ID id-CriticalityDiagnostics
                                      CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                            PRESENCE optional },
-- ENB CONFIGURATION UPDATE FAIURE
  *****************
ENBConfigurationUpdateFailure ::= SEQUENCE {
                                          {{ENBConfigurationUpdateFailure-IEs}},
   protocolIEs
                   ProtocolIE-Container
    . . .
```

```
ENBConfigurationUpdateFailure-IES X2AP-PROTOCOL-IES ::= {
     ID id-Cause
                                    CRITICALITY ignore TYPE Cause
                                                                                   PRESENCE mandatory}
     ID id-TimeToWait
                                    CRITICALITY ignore TYPE TimeToWait.
                                                                                   PRESENCE optional } |
     ID id-CriticalityDiagnostics
                                    CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                   PRESENCE optional },
  ****************
-- RESOURCE STATUS REQUEST
     ResourceStatusRequest ::= SEQUENCE {
                 ProtocolIE-Container
                                        {{ResourceStatusRequest-IEs}},
   protocolIEs
ResourceStatusRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ENB1-Measurement-ID
                                    CRITICALITY reject TYPE Measurement-ID
                                                                                       PRESENCE mandatory}
     ID id-ENB2-Measurement-ID
                                    CRITICALITY ignore TYPE Measurement-ID
                                                                                       PRESENCE conditional \ | -- The IE shall be present if
the Registration Request IE is set to "Stop", "Partial stop" or to "Add"--
     ID id-Registration-Request
                                    CRITICALITY reject TYPE Registration-Request
                                                                                       PRESENCE mandatory}
     ID id-ReportCharacteristics
                                    CRITICALITY reject TYPE ReportCharacteristics
                                                                                       PRESENCE optional } |
     ID id-CellToReport
                                    CRITICALITY ignore TYPE CellToReport-List
                                                                                       PRESENCE mandatory |
     ID id-ReportingPeriodicity
                                    CRITICALITY ignore TYPE ReportingPeriodicity
                                                                                       PRESENCE optional }
     ID id-PartialSuccessIndicator
                                    CRITICALITY ignore TYPE PartialSuccessIndicator
                                                                                       PRESENCE optional }
     ID id-ReportingPeriodicityRSRPMR CRITICALITY ignore TYPE ReportingPeriodicityRSRPMR
                                                                                       PRESENCE optional }
     ID id-ReportingPeriodicityCSIR
                                    CRITICALITY ignore TYPE ReportingPeriodicityCSIR
                                                                                       PRESENCE optional },
CellToReport-List
                     ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ProtocolIE-Single-Container { {CellToReport-ItemIEs} }
CellToReport-ItemIEs X2AP-PROTOCOL-IES ::= {
   CellToReport-Item ::= SEQUENCE
   cell-ID
                                       ECGI,
   iE-Extensions
                                       ProtocolExtensionContainer { {CellToReport-Item-ExtIEs} } OPTIONAL,
   . . .
CellToReport-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ReportingPeriodicity ::= ENUMERATED {
   one-thousand-ms,
```

```
two-thousand-ms,
   five-thousand-ms.
   ten-thousand-ms.
PartialSuccessIndicator ::= ENUMERATED {
   partial-success-allowed,
  *****************
-- RESOURCE STATUS RESPONSE
ResourceStatusResponse ::= SEOUENCE
   protocolIEs
               ProtocolIE-Container
                                  {{ResourceStatusResponse-IEs}},
ResourceStatusResponse-IEs X2AP-PROTOCOL-IES ::= {
    ID id-ENB1-Measurement-ID
                                     CRITICALITY reject TYPE Measurement-ID
                                                                                   PRESENCE mandatory
                                                                                   PRESENCE mandatory}
    ID id-ENB2-Measurement-ID
                                     CRITICALITY reject TYPE Measurement-ID
    ID id-CriticalityDiagnostics
                                     CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                   PRESENCE optional } |
    MeasurementInitiationResult-List ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ProtocolIE-Single-Container { {MeasurementInitiationResult-ItemIEs} }
MeasurementInitiationResult-ItemIEs X2AP-PROTOCOL-IES ::= {
   MeasurementInitiationResult-Item ::= SEOUENCE {
   cell-ID
                                        ECGI,
   measurementFailureCause-List
                                        MeasurementFailureCause-List
                                                                 OPTIONAL,
                                        ProtocolExtensionContainer { {MeasurementInitiationResult-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
MeasurementInitiationResult-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
MeasurementFailureCause-List ::= SEQUENCE (SIZE (1..maxFailedMeasObjects)) OF ProtocolIE-Single-Container { {MeasurementFailureCause-ItemIEs} }
MeasurementFailureCause-ItemIEs X2AP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
```

```
MeasurementFailureCause-Item ::= SEQUENCE {
   measurementFailedReportCharacteristics
                                            ReportCharacteristics,
   cause
                                            Cause.
   iE-Extensions
                                            ProtocolExtensionContainer { {MeasurementFailureCause-Item-ExtIEs} } OPTIONAL,
MeasurementFailureCause-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  *****************
-- RESOURCE STATUS FAILURE
         ResourceStatusFailure ::= SEOUENCE {
   protocolIEs
                ProtocolIE-Container
                                     {{ResourceStatusFailure-IEs}},
ResourceStatusFailure-IEs X2AP-PROTOCOL-IES ::= {
    ID id-ENB1-Measurement-ID
                                            CRITICALITY reject TYPE Measurement-ID
                                                                                                   PRESENCE mandatory}
     ID id-ENB2-Measurement-ID
                                            CRITICALITY reject TYPE Measurement-ID
                                                                                                   PRESENCE mandatory }
    ID id-Cause
                                                                                                   PRESENCE mandatory}
                                            CRITICALITY ignore TYPE Cause
    ID id-CriticalityDiagnostics
                                            CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                   PRESENCE optional }
   { ID id-CompleteFailureCauseInformation-List
                                            CRITICALITY ignore TYPE CompleteFailureCauseInformation-List PRESENCE optional },
   . . .
CompleteFailureCauseInformation-List ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ProtocolIE-Single-Container { {CompleteFailureCauseInformation-
ItemIEs} }
CompleteFailureCauseInformation-ItemIEs X2AP-PROTOCOL-IES ::= {
   CompleteFailureCauseInformation-Item ::= SEOUENCE {
   cell-ID
                                            ECGI,
   measurementFailureCause-List
                                            MeasurementFailureCause-List,
                                            ProtocolExtensionContainer { {CompleteFailureCauseInformation-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
CompleteFailureCauseInformation-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- RESOURCE STATUS UPDATE
__ **********************
```

```
ResourceStatusUpdate ::= SEOUENCE {
   protocolIEs ProtocolIE-Container
                                         {{ResourceStatusUpdate-IEs}},
ResourceStatusUpdate-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ENB1-Measurement-ID
                                 CRITICALITY reject TYPE Measurement-ID
                                                                                     PRESENCE mandatory}
     ID id-ENB2-Measurement-ID
                                 CRITICALITY reject TYPE Measurement-ID
                                                                                     PRESENCE mandatory }
                                                                                     PRESENCE mandatory },
     CellMeasurementResult-List ::= SEOUENCE (SIZE (1..maxCellineNB)) OF ProtocolIE-Single-Container { {CellMeasurementResult-ItemIEs} }
CellMeasurementResult-ItemIEs X2AP-PROTOCOL-IES ::= {
   { ID id-CellMeasurementResult-Item CRITICALITY ignore TYPE CellMeasurementResult-Item PRESENCE mandatory}
CellMeasurementResult-Item ::= SEQUENCE {
   cell-ID
   hWLoadIndicator
                             HWLoadIndicator
                                                OPTIONAL,
   slTNLLoadIndicator
                             S1TNLLoadIndicator OPTIONAL,
   radioResourceStatus
                             RadioResourceStatus OPTIONAL,
   iE-Extensions
                             ProtocolExtensionContainer { {CellMeasurementResult-Item-ExtIEs} }
                                                                                                 OPTIONAL,
CellMeasurementResult-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-CompositeAvailableCapacityGroup CRITICALITY ignore EXTENSION CompositeAvailableCapacityGroup
                                                                                                     PRESENCE optional }
     ID id-ABS-Status
                                        CRITICALITY ignore EXTENSION ABS-Status
                                                                                                     PRESENCE optional}
     ID id-RSRPMRList
                                        CRITICALITY ignore EXTENSION RSRPMRList
                                                                                                     PRESENCE optional
     ID id-CSIReportList
                                        CRITICALITY ignore EXTENSION CSIReportList
                                                                                                     PRESENCE optional }
    ID id-CellReportingIndicator
                                        CRITICALITY ignore EXTENSION CellReportingIndicator
                                                                                                     PRESENCE optional },
-- PRIVATE MESSAGE
PrivateMessage ::= SEOUENCE {
                  PrivateIE-Container {{PrivateMessage-IEs}},
   privateIEs
   . . .
PrivateMessage-IEs X2AP-PRIVATE-IES ::= {
__ ***********************
```

```
-- MOBILITY CHANGE REQUEST
__ **********************
MobilityChangeRequest ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                       {{MobilityChangeRequest-IEs}},
MobilityChangeRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ENB1-Cell-ID
                                           CRITICALITY reject TYPE ECGI
                                                                                                     PRESENCE mandatory}
     ID id-ENB2-Cell-ID
                                                                                                     PRESENCE mandatory }
                                           CRITICALITY reject TYPE ECGI
     ID id-ENB1-Mobility-Parameters CRITICALITY ignore TYPE MobilityParametersInformation
                                                                                                     PRESENCE optional } |
     PRESENCE mandatory |
   { ID id-Cause
                                           CRITICALITY reject TYPE Cause
                                                                                                     PRESENCE mandatory },
-- MOBILITY CHANGE ACKNOWLEDGE
MobilityChangeAcknowledge ::= SEQUENCE {
               ProtocolIE-Container
                                       {{MobilityChangeAcknowledge-IEs}},
   protocolIEs
MobilityChangeAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ENB1-Cell-ID CRITICALITY reject TYPE ECGI
                                                                                  PRESENCE mandatory }
     ID id-ENB2-Cell-ID CRITICALITY reject TYPE ECGI
                                                                                  PRESENCE mandatory }
   { ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                  PRESENCE optional },
-- MOBILITY CHANGE FAILURE
MobilityChangeFailure ::= SEQUENCE {
   protocolIEs ProtocolIE-Container
                                       {{MobilityChangeFailure-IEs}},
   . . .
MobilityChangeFailure-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ENB1-Cell-ID
                                                     CRITICALITY ignore TYPE ECGI
                                                                                                               PRESENCE mandatory
     ID id-ENB2-Cell-ID
                                                     CRITICALITY ignore TYPE ECGI
                                                                                                               PRESENCE mandatory
     ID id-Cause
                                                     CRITICALITY ignore TYPE Cause
                                                                                                               PRESENCE mandatory }
     ID id-ENB2-Mobility-Parameters-Modification-Range
                                                                                                               PRESENCE optional }
                                                     CRITICALITY ignore TYPE MobilityParametersModificationRange
```

```
CRITICALITY ignore TYPE CriticalityDiagnostics
   { ID id-CriticalityDiagnostics
                                                                                                         PRESENCE optional },
  *****************
-- RADIO LINK FAILURE INDICATION
  *****************
RLFIndication ::= SEQUENCE {
                                     {{RLFIndication-IEs}},
   protocolIEs
                ProtocolIE-Container
RLFIndication-IEs X2AP-PROTOCOL-IES ::= {
    ID id-FailureCellPCI
                                               CRITICALITY ignore TYPE PCI
                                                                                                            PRESENCE mandatory
     ID id-Re-establishmentCellECGI
                                               CRITICALITY ignore TYPE ECGI
                                                                                                            PRESENCE mandatory }
     ID id-FailureCellCRNTI
                                               CRITICALITY ignore TYPE CRNTI
                                                                                                            PRESENCE mandatory
    ID id-ShortMAC-I
                                               CRITICALITY ignore TYPE ShortMAC-I
                                                                                                            PRESENCE optional}
     ID id-UE-RLF-Report-Container
                                               CRITICALITY ignore TYPE UE-RLF-Report-Container
                                                                                                            PRESENCE optional}
    ID id-RRCConnSetupIndicator
                                               CRITICALITY reject TYPE RRCConnSetupIndicator
                                                                                                            PRESENCE optional }
    ID id-RRCConnReestabIndicator
                                               CRITICALITY ignore TYPE RRCConnReestabIndicator
                                                                                                            PRESENCE optional |
   PRESENCE optional },
__ ********************************
-- CELL ACTIVATION REQUEST
  ****************
CellActivationRequest ::= SEOUENCE {
   protocolIEs
                ProtocolIE-Container
                                     {{CellActivationRequest-IEs}},
CellActivationRequest-IEs X2AP-PROTOCOL-IES ::= {
   { ID id-ServedCellsToActivate CRITICALITY reject TYPE ServedCellsToActivate
                                                                          PRESENCE mandatory },
   . . .
ServedCellsToActivate::= SEOUENCE (SIZE (1..maxCellineNB)) OF ServedCellsToActivate-Item
ServedCellsToActivate-Item::= SEOUENCE {
   ecai
   iE-Extensions
                              ProtocolExtensionContainer { {ServedCellsToActivate-Item-ExtIEs} } OPTIONAL,
ServedCellsToActivate-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
   . . .
```

```
*****************
-- CELL ACTIVATION RESPONSE
  ********************
CellActivationResponse ::= SEQUENCE {
                                     {{CellActivationResponse-IEs}},
   protocolIEs
              ProtocolIE-Container
CellActivationResponse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ActivatedCellList
                          CRITICALITY ignore TYPE ActivatedCellList
                                                                              PRESENCE mandatory}
   { ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                              PRESENCE optional },
   . . .
ActivatedCellList ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ActivatedCellList-Item
ActivatedCellList-Item::= SEQUENCE {
   ecgi
                                 ECGI,
                                 ProtocolExtensionContainer { {ActivatedCellList-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
ActivatedCellList-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
__********************
-- CELL ACTIVATION FAILURE
__ *********************
CellActivationFailure ::= SEQUENCE {
   protocolIEs ProtocolIE-Container
                                     {{CellActivationFailure-IEs}},
   . . .
CellActivationFailure-IES X2AP-PROTOCOL-IES ::= {
   { ID id-Cause
                                 CRITICALITY ignore TYPE Cause
                                                                              PRESENCE mandatory } |
   { ID id-CriticalityDiagnostics
                                 CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                              PRESENCE optional },
-- X2 RELEASE
__ ********************************
```

```
X2Release ::= SEOUENCE {
   protocolIEs
                  ProtocolIE-Container
                                       {{X2Release-IEs}},
X2Release-IEs X2AP-PROTOCOL-IES ::= {
   { ID id-GlobalENB-ID
                                CRITICALITY reject TYPE GlobalENB-ID
                                                                           PRESENCE mandatory },
        -- X2AP MESSAGE TRANSFER
__ *********************
X2APMessageTransfer ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                       {{X2APMessageTransfer-IEs}},
   . . .
X2APMessageTransfer-IEs X2AP-PROTOCOL-IES ::= {
     ID id-RNL-Header CRITICALITY reject TYPE RNL-Header
                                                                 PRESENCE mandatory}
    ID id-x2APMessage CRITICALITY reject TYPE X2AP-Message
                                                                 PRESENCE optional },
RNL-Header ::= SEOUENCE {
   source-GlobalENB-ID GlobalENB-ID,
   target-GlobalENB-ID GlobalENB-ID
                                    OPTIONAL,
   iE-Extensions
                                    ProtocolExtensionContainer { {RNL-Header-Item-ExtIEs} } OPTIONAL,
RNL-Header-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
X2AP-Message ::= OCTET STRING
-- SENB ADDITION REQUEST
__ *********************
SeNBAdditionRequest ::= SEQUENCE {
   protocolIEs
                ProtocolIE-Container
                                       {{SeNBAdditionRequest-IEs}},
SeNBAdditionRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                       CRITICALITY reject TYPE UE-X2AP-ID
                                                                                          PRESENCE mandatory}
    { ID id-UE-SecurityCapabilities
                                                                                          PRESENCE conditional } |
                                       CRITICALITY reject TYPE UESecurityCapabilities
```

```
-- This IE shall be present if the Bearer Option IE is set to the value "SCG bearer" --
    { ID id-SeNBSecurityKey
                                           CRITICALITY reject TYPE SeNBSecurityKey
                                                                                                  PRESENCE conditional |
    -- This IE shall be present if the Bearer Option IE is set to the value "SCG bearer" --
     ID id-SeNBUEAggregateMaximumBitRate
                                          CRITICALITY reject TYPE UEAggregateMaximumBitRate
                                                                                                  PRESENCE mandatory } |
     ID id-ServingPLMN
                                           CRITICALITY ignore TYPE PLMN-Identity
                                                                                                  PRESENCE optional }
                                                                                                  PRESENCE mandatory
     ID id-E-RABs-ToBeAdded-List
                                           CRITICALITY reject TYPE E-RABs-ToBeAdded-List
     ID id-MeNBtoSeNBContainer
                                           CRITICALITY reject TYPE MeNBtoSeNBContainer
                                                                                                  PRESENCE mandatory }
     ID id-CSGMembershipStatus
                                           CRITICALITY reject TYPE CSGMembershipStatus
                                                                                                  PRESENCE optional}
     ID id-SeNB-UE-X2AP-ID
                                           CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                  PRESENCE optional}
                                                                                                  PRESENCE optional }
     ID id-SeNB-UE-X2AP-ID-Extension
                                           CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                  PRESENCE optional }
     ID id-ExpectedUEBehaviour
                                           CRITICALITY ignore TYPE ExpectedUEBehaviour
    { ID id-MeNB-UE-X2AP-ID-Extension
                                           CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                  PRESENCE optional },
E-RABs-ToBeAdded-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeAdded-ItemIEs} }
E-RABs-ToBeAdded-ItemIEs X2AP-PROTOCOL-IES ::= {
    PRESENCE mandatory },
    . . .
E-RABs-ToBeAdded-Item ::= CHOICE {
    sCG-Bearer
                   E-RABs-ToBeAdded-Item-SCG-Bearer
                   E-RABs-ToBeAdded-Item-Split-Bearer,
    split-Bearer
    . . .
E-RABs-ToBeAdded-Item-SCG-Bearer ::= SEQUENCE {
   e-RAB-ID
                                   E-RAB-ID,
    e-RAB-Level-OoS-Parameters
                                   E-RAB-Level-OoS-Parameters,
   dL-Forwarding
                                   DL-Forwarding
                                                                                                           OPTIONAL,
    s1-UL-GTPtunnelEndpoint
                                   GTPtunnelEndpoint,
                                   ProtocolExtensionContainer { {E-RABs-ToBeAdded-Item-SCG-BearerExtIEs} } 
                                                                                                           OPTIONAL,
   iE-Extensions
    . . .
E-RABs-ToBeAdded-Item-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-Correlation-ID
                                                                                          PRESENCE optional }
                                       CRITICALITY ignore EXTENSION Correlation-ID
     ID id-SIPTO-Correlation-ID
                                       CRITICALITY ignore EXTENSION Correlation-ID
                                                                                          PRESENCE optional }
                                                                                          PRESENCE optional },
     ID id-BearerType
                                       CRITICALITY ignore EXTENSION BearerType
E-RABs-ToBeAdded-Item-Split-Bearer ::= SEOUENCE {
   e-RAB-ID
                                   E-RAB-ID,
    e-RAB-Level-OoS-Parameters
                                   E-RAB-Level-OoS-Parameters,
   meNB-GTPtunnelEndpoint
                                   GTPtunnelEndpoint,
                                   ProtocolExtensionContainer { {E-RABs-ToBeAdded-Item-Split-BearerExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
E-RABs-ToBeAdded-Item-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
SENB ADDITION REQUEST ACKNOWLEDGE
   *******************
SeNBAdditionRequestAcknowledge ::= SEQUENCE
   protocolIEs
                  ProtocolIE-Container
                                          {{SeNBAdditionRequestAcknowledge-IEs}},
SeNBAdditionRequestAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                                  PRESENCE mandatory}
                                             CRITICALITY reject TYPE UE-X2AP-ID
     ID id-SeNB-UE-X2AP-ID
                                             CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                  PRESENCE mandatory }
     ID id-E-RABs-Admitted-ToBeAdded-List
                                             CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-List PRESENCE mandatory
     ID id-E-RABs-NotAdmitted-List
                                                                                                  PRESENCE optional }
                                             CRITICALITY ignore TYPE E-RAB-List
     ID id-SeNBtoMeNBContainer
                                             CRITICALITY reject TYPE SenBtoMenBContainer
                                                                                                  PRESENCE mandatory
     ID id-CriticalityDiagnostics
                                             CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                  PRESENCE optional }
     ID id-GW-TransportLayerAddress
                                             CRITICALITY ignore TYPE TransportLayerAddress
                                                                                                  PRESENCE optional }
     ID id-SIPTO-L-GW-TransportLayerAddress
                                             CRITICALITY ignore TYPE TransportLayerAddress
                                                                                                  PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                             CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                  PRESENCE optional }
     ID id-SeNB-UE-X2AP-ID-Extension
                                             CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                  PRESENCE optional }
     ID id-Tunnel-Information-for-BBF
                                             CRITICALITY ignore TYPE TunnelInformation
                                                                                                  PRESENCE optional },
E-RABs-Admitted-ToBeAdded-List ::= SEOUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeAdded-ItemIEs} }
E-RABs-Admitted-ToBeAdded-ItemIEs X2AP-PROTOCOL-IES ::= {
    PRESENCE mandatory}
E-RABs-Admitted-ToBeAdded-Item ::= CHOICE ·
    sCG-Bearer
                  E-RABs-Admitted-ToBeAdded-Item-SCG-Bearer,
                  E-RABs-Admitted-ToBeAdded-Item-Split-Bearer,
    split-Bearer
E-RABs-Admitted-ToBeAdded-Item-SCG-Bearer ::= SEQUENCE {
   e-RAB-ID
                                         E-RAB-ID,
    s1-DL-GTPtunnelEndpoint
                                         GTPtunnelEndpoint,
   dL-Forwarding-GTPtunnelEndpoint
                                         GTPtunnelEndpoint
                                                                                                                OPTIONAL,
    uL-Forwarding-GTPtunnelEndpoint
                                         GTPtunnelEndpoint
                                                                                                                OPTIONAL.
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-Item-SCG-BearerExtIEs} }
                                                                                                                OPTIONAL,
    . . .
E-RABs-Admitted-ToBeAdded-Item-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeAdded-Item-Split-Bearer ::= SEQUENCE {
```

```
e-RAB-ID
                                 E-RAB-ID,
   seNB-GTPtunnelEndpoint
                                 GTPtunnelEndpoint,
   iE-Extensions
                                 ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-Item-Split-BearerExtIEs} } OPTIONAL,
E-RABs-Admitted-ToBeAdded-Item-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
          ****************
-- SENB ADDITION REQUEST REJECT
__ **********************
SeNBAdditionRequestReject ::= SEOUENCE {
                  ProtocolIE-Container
                                        {{SeNBAdditionRequestReject-IEs}},
   protocolIEs
   . . .
SeNBAdditionRequestReject-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                        CRITICALITY reject TYPE UE-X2AP-ID
                                                                                         PRESENCE mandatory }
     ID id-SeNB-UE-X2AP-ID
                                        CRITICALITY reject TYPE UE-X2AP-ID
                                                                                         PRESENCE mandatory
     ID id-Cause
                                                                                         PRESENCE mandatory}
                                        CRITICALITY ignore TYPE Cause
     ID id-CriticalityDiagnostics
                                                                                         PRESENCE optional }
                                        CRITICALITY ignore TYPE CriticalityDiagnostics
     ID id-MeNB-UE-X2AP-ID-Extension
                                                                                         PRESENCE optional }
                                        CRITICALITY reject TYPE UE-X2AP-ID-Extension
     ID id-SeNB-UE-X2AP-ID-Extension
                                        CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                         PRESENCE optional }
     *****************
  SENB RECONFIGURATION COMPLETE
  ******************
SenbreconfigurationComplete ::= SEOUENCE {
                                        {{SeNBReconfigurationComplete-IEs}},
   protocolIEs
                  ProtocolIE-Container
   . . .
SeNBReconfigurationComplete-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                                        PRESENCE mandatory}
                                                CRITICALITY reject TYPE UE-X2AP-ID
     ID id-SeNB-UE-X2AP-ID
                                                                                                        PRESENCE mandatory }
                                                CRITICALITY reject TYPE UE-X2AP-ID
     ID id-ResponseInformationSeNBReconfComp
                                                CRITICALITY ignore TYPE ResponseInformationSeNBReconfComp
                                                                                                        PRESENCE mandatory }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                        PRESENCE optional }
     ID id-SeNB-UE-X2AP-ID-Extension
                                                CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                        PRESENCE optional },
ResponseInformationSeNBReconfComp ::= CHOICE {
                      ResponseInformationSeNBReconfComp-SuccessItem,
   success
   reject-by-MeNB
                      ResponseInformationSeNBReconfComp-RejectByMeNBItem,
```

```
ResponseInformationSeNBReconfComp-SuccessItem ::= SEQUENCE {
   meNBtoSeNBContainer
                                 MeNBtoSeNBContainer OPTIONAL,
                                 ProtocolExtensionContainer { {ResponseInformationSeNBReconfComp-SuccessItemExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
ResponseInformationSeNBReconfComp-SuccessItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ResponseInformationSeNBReconfComp-RejectByMeNBItem ::= SEQUENCE {
                                 Cause,
   meNBtoSeNBContainer
                                 MeNBtoSeNBContainer
                                                                                                                      OPTIONAL,
                                 ProtocolExtensionContainer { {ResponseInformationSeNBReconfComp-RejectByMeNBItemExtIEs} }
   iE-Extensions
ResponseInformationSeNBReconfComp-RejectByMeNBItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      SENB MODIFICATION REQUEST
  ****************
SenbModificationRequest ::= SEQUENCE {
                  ProtocolIE-Container
                                         {{ SeNBModificationRequest-IEs}},
   protocolIEs
   . . .
SeNBModificationRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                                   PRESENCE mandatory }
                                            CRITICALITY reject TYPE UE-X2AP-ID
     ID id-SeNB-UE-X2AP-ID
                                            CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                   PRESENCE mandatory
     ID id-Cause
                                            CRITICALITY ignore TYPE Cause
                                                                                                   PRESENCE mandatory}
     ID id-SCGChangeIndication
                                            CRITICALITY ignore TYPE SCGChangeIndication
                                                                                                   PRESENCE optional }
     ID id-ServingPLMN
                                            CRITICALITY ignore TYPE PLMN-Identity
                                                                                                   PRESENCE optional }
     ID id-UE-ContextInformationSeNBModReq
                                            CRITICALITY reject TYPE UE-ContextInformationSeNBModReq
                                                                                                   PRESENCE optional }
     ID id-MeNBtoSeNBContainer
                                            CRITICALITY ignore TYPE MeNBtoSeNBContainer
                                                                                                   PRESENCE optional }
     ID id-CSGMembershipStatus
                                            CRITICALITY reject TYPE CSGMembershipStatus
                                                                                                   PRESENCE optional }
                                                                                                   PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                            CRITICALITY reject TYPE UE-X2AP-ID-Extension
     ID id-SeNB-UE-X2AP-ID-Extension
                                            CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                   PRESENCE optional },
   . . .
UE-ContextInformationSeNBModReg ::= SEQUENCE {
   uE-SecurityCapabilities
                                 UESecurityCapabilities
                                                                                                      OPTIONAL,
   seNB-SecurityKey
                                 SeNBSecurityKey
                                                                                                      OPTIONAL,
   OPTIONAL,
   e-RABs-ToBeAdded
                                 E-RABs-ToBeAdded-List-ModReq
                                                                                                      OPTIONAL,
```

```
E-RABs-ToBeModified-List-ModReg
    e-RABs-ToBeModified
                                                                                                          OPTIONAL,
   e-RABs-ToBeReleased
                                   E-RABs-ToBeReleased-List-ModReg
                                                                                                          OPTIONAL,
                                   iE-Extensions
                                                                                                          OPTIONAL.
UE-ContextInformationSeNBModRegExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeAdded-List-ModReq ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeAdded-ModReqItemIEs} }
E-RABs-ToBeAdded-ModRegItemIEs X2AP-PROTOCOL-IES ::= {
   { ID id-E-RABs-ToBeAdded-ModRegItem CRITICALITY ignore TYPE E-RABs-ToBeAdded-ModRegItem
                                                                                             PRESENCE mandatory },
E-RABs-ToBeAdded-ModRegItem ::= CHOICE {
                   E-RABs-ToBeAdded-ModRegItem-SCG-Bearer,
                E-RABs-ToBeAdded-ModRegItem-Split-Bearer,
    split-Bearer
E-RABs-ToBeAdded-ModRegItem-SCG-Bearer ::= SEOUENCE {
   e-RAB-ID
                                  E-RAB-ID,
   e-RAB-Level-OoS-Parameters
                                  E-RAB-Level-OoS-Parameters,
   dL-Forwarding
                                  DL-Forwarding
                                                                                                          OPTIONAL,
   s1-UL-GTPtunnelEndpoint
                                  GTPtunnelEndpoint,
                                  ProtocolExtensionContainer { {E-RABs-ToBeAdded-ModRegItem-SCG-BearerExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-ToBeAdded-ModReqItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-Correlation-ID
                                      CRITICALITY ignore EXTENSION Correlation-ID
                                                                                         PRESENCE optional }
     ID id-SIPTO-Correlation-ID
                                      CRITICALITY ignore EXTENSION Correlation-ID
                                                                                         PRESENCE optional }
    { ID id-BearerType
                                      CRITICALITY ignore EXTENSION BearerType
                                                                                         PRESENCE optional },
E-RABs-ToBeAdded-ModRegItem-Split-Bearer ::= SEQUENCE {
   e-RAB-ID
                                   E-RAB-ID,
   e-RAB-Level-OoS-Parameters
                                  E-RAB-Level-OoS-Parameters,
                                  GTPtunnelEndpoint,
   meNB-GTPtunnelEndpoint
                                   ProtocolExtensionContainer { {E-RABs-ToBeAdded-ModReqItem-Split-BearerExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
E-RABs-ToBeAdded-ModReqItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeModified-List-ModReg ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeModified-ModRegItemIEs} }
E-RABs-ToBeModified-ModReqItemIEs X2AP-PROTOCOL-IES ::= {
```

```
PRESENCE mandatory },
E-RABs-ToBeModified-ModRegItem ::= CHOICE {
                  E-RABs-ToBeModified-ModRegItem-SCG-Bearer,
   sCG-Bearer
                 E-RABs-ToBeModified-ModRegItem-Split-Bearer,
   split-Bearer
E-RABs-ToBeModified-ModReqItem-SCG-Bearer ::= SEQUENCE {
   e-RAB-ID
                                E-RAB-ID,
   e-RAB-Level-QoS-Parameters
                                E-RAB-Level-QoS-Parameters
                                                                                                   OPTIONAL,
                                GTPtunnelEndpoint
   s1-UL-GTPtunnelEndpoint
                                                                                                   OPTIONAL,
   iE-Extensions
                                ProtocolExtensionContainer { {E-RABs-ToBeModified-ModRegItem-SCG-BearerExtIEs} } OPTIONAL,
E-RABs-ToBeModified-ModReqItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeModified-ModRegItem-Split-Bearer ::= SEOUENCE {
   e-RAB-ID
                                E-RAB-ID,
   e-RAB-Level-OoS-Parameters
                                E-RAB-Level-OoS-Parameters
                                                                                                         OPTIONAL,
   meNB-GTPtunnelEndpoint
                                GTPtunnelEndpoint
                                                                                                         OPTIONAL,
   iE-Extensions
                                ProtocolExtensionContainer { {E-RABs-ToBeModified-ModRegItem-Split-BearerExtIEs} } OPTIONAL,
E-RABs-ToBeModified-ModReqItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-List-ModReg ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-ModRegItemIEs} }
E-RABs-ToBeReleased-ModRegItemIEs X2AP-PROTOCOL-IES ::= {
   PRESENCE mandatory },
   . . .
E-RABs-ToBeReleased-ModReqItem ::= CHOICE {
                  E-RABs-ToBeReleased-ModReqItem-SCG-Bearer,
   sCG-Bearer
                 E-RABs-ToBeReleased-ModReqItem-Split-Bearer,
   split-Bearer
E-RABs-ToBeReleased-ModReqItem-SCG-Bearer ::= SEQUENCE {
   e-RAB-ID
                                 E-RAB-ID,
   dL-Forwarding-GTPtunnelEndpoint
                                       GTPtunnelEndpoint
                                                                                              OPTIONAL,
   uL-Forwarding-GTPtunnelEndpoint
                                        GTPtunnelEndpoint
                                                                                              OPTIONAL,
   iE-Extensions
                                ProtocolExtensionContainer { {E-RABs-ToBeReleased-ModReqItem-SCG-BearerExtIEs} } OPTIONAL,
   . . .
```

```
E-RABs-ToBeReleased-ModRegItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-ModRegItem-Split-Bearer ::= SEQUENCE {
                                 E-RAB-ID,
   dL-Forwarding-GTPtunnelEndpoint
                                        GTPtunnelEndpoint
                                                                                                 OPTIONAL,
                                 ProtocolExtensionContainer { {E-RABs-ToBeReleased-ModReqItem-Split-BearerExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-ToBeReleased-ModRegItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- SENB MODIFICATION REQUEST ACKNOWLEDGE
__ **********************
SenbModificationRequestAcknowledge ::= SEOUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        {{SeNBModificationRequestAcknowledge-IEs}},
   . . .
SeNBModificationRequestAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                                                 PRESENCE mandatory }
                                                    CRITICALITY ignore TYPE UE-X2AP-ID
     ID id-SeNB-UE-X2AP-ID
                                                    CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                 PRESENCE mandatory }
     ID id-E-RABs-Admitted-ToBeAdded-ModAckList
                                                    CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-ModAckList
                                                                                                                 PRESENCE optional }
     ID id-E-RABs-Admitted-ToBeModified-ModAckList
                                                    CRITICALITY ignore TYPE E-RABs-Admitted-ToBeModified-ModAckList PRESENCE optional
                                                    CRITICALITY ignore TYPE E-RABs-Admitted-ToBeReleased-ModAckList PRESENCE optional
     ID id-E-RABs-Admitted-ToBeReleased-ModAckList
     ID id-E-RABs-NotAdmitted-List
                                                    CRITICALITY ignore TYPE E-RAB-List
                                                                                                                 PRESENCE optional}
     ID id-SeNBtoMeNBContainer
                                                    CRITICALITY ignore TYPE SenBtoMenBContainer
                                                                                                                 PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                    CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                 PRESENCE optional }
                                                                                                                 PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                    CRITICALITY ignore TYPE UE-X2AP-ID-Extension
    { ID id-SeNB-UE-X2AP-ID-Extension
                                                    CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                 PRESENCE optional },
   . . .
E-RABs-Admitted-ToBeAdded-ModAckList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { E-RABs-Admitted-ToBeAdded-
ModAckItemIEs} }
E-RABs-Admitted-ToBeAdded-ModAckItemIEs X2AP-PROTOCOL-IES ::= {
   PRESENCE mandatory }
E-RABs-Admitted-ToBeAdded-ModAckItem ::= CHOICE {
                  E-RABs-Admitted-ToBeAdded-ModAckItem-SCG-Bearer,
   sCG-Bearer
   split-Bearer E-RABs-Admitted-ToBeAdded-ModAckItem-Split-Bearer,
```

```
E-RABs-Admitted-ToBeAdded-ModAckItem-SCG-Bearer ::= SEQUENCE {
    e-RAB-ID
                                            E-RAB-ID.
    s1-DL-GTPtunnelEndpoint
                                            GTPtunnelEndpoint,
    dL-Forwarding-GTPtunnelEndpoint
                                            GTPtunnelEndpoint
                                                                                                                       OPTIONAL.
    uL-Forwarding-GTPtunnelEndpoint
                                            GTPtunnelEndpoint
                                                                                                                       OPTIONAL,
    iE-Extensions
                                            ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-ModAckItem-SCG-BearerExtIEs} }OPTIONAL,
E-RABs-Admitted-ToBeAdded-ModAckItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeAdded-ModAckItem-Split-Bearer ::= SEQUENCE
    e-RAB-ID
                                    E-RAB-ID.
    seNB-GTPtunnelEndpoint
                                    GTPtunnelEndpoint,
                                    ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-ModAckItem-Split-BearerExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
E-RABs-Admitted-ToBeAdded-ModAckItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeModified-ModAckList ::= SEOUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeModified-
ModAckItemIEs} }
E-RABs-Admitted-ToBeModified-ModAckItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-Admitted-ToBeModified-ModAckItem
                                                        CRITICALITY ignore TYPE E-RABs-Admitted-ToBeModified-ModAckItem PRESENCE mandatory
E-RABs-Admitted-ToBeModified-ModAckItem ::= CHOICE
                    E-RABs-Admitted-ToBeModified-ModAckItem-SCG-Bearer,
    split-Bearer E-RABs-Admitted-ToBeModified-ModAckItem-Split-Bearer,
    . . .
E-RABs-Admitted-ToBeModified-ModAckItem-SCG-Bearer ::= SEQUENCE {
    e-RAB-ID
                                    E-RAB-ID,
    s1-DL-GTPtunnelEndpoint
                                    GTPtunnelEndpoint
                                                                                                                 OPTIONAL,
                                    ProtocolExtensionContainer { {E-RABs-Admitted-ToBeModified-ModAckItem-SCG-BearerExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
E-RABs-Admitted-ToBeModified-ModAckItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeModified-ModAckItem-Split-Bearer ::= SEQUENCE {
    e-RAB-ID
                                    E-RAB-ID,
    seNB-GTPtunnelEndpoint
                                    GTPtunnelEndpoint
                                                                                                                       OPTIONAL,
   iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-Admitted-ToBeModified-ModAckItem-Split-BearerExtIEs} } OPTIONAL,
```

```
E-RABs-Admitted-ToBeModified-ModAckItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeReleased-ModAckList ::= SEOUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeReleased-
ModAckItemIEs} }
E-RABs-Admitted-ToBeReleased-ModAckItemIEs X2AP-PROTOCOL-IES ::= {
   E-RABs-Admitted-ToReleased-ModAckItem ::= CHOICE {
   sCG-Bearer
                 E-RABs-Admitted-ToBeReleased-ModAckItem-SCG-Bearer,
   split-Bearer E-RABs-Admitted-ToBeReleased-ModAckItem-Split-Bearer,
E-RABs-Admitted-ToBeReleased-ModAckItem-SCG-Bearer ::= SEQUENCE {
   e-RAB-ID
   iE-Extensions
                            ProtocolExtensionContainer { {E-RABs-Admitted-ToBeReleased-ModAckItem-SCG-BearerExtIEs} } OPTIONAL,
E-RABs-Admitted-ToBeReleased-ModAckItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeReleased-ModAckItem-Split-Bearer ::= SEQUENCE {
   e-RAB-ID
                            E-RAB-ID,
   iE-Extensions
                            ProtocolExtensionContainer { {E-RABs-Admitted-ToBeReleased-ModAckItem-Split-BearerExtIEs} } OPTIONAL,
E-RABs-Admitted-ToBeReleased-ModAckItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- SENB MODIFICATION REQUEST REJECT
__ **********************
SenbModificationRequestReject ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                       {{SeNBModificationRequestReject-IEs}},
   . . .
SeNBModificationRequestReject-IES X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                           CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                        PRESENCE mandatory}
     ID id-SeNB-UE-X2AP-ID
                                           CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                        PRESENCE mandatory
     ID id-Cause
                                                                                        PRESENCE mandatory }
                                           CRITICALITY ignore TYPE Cause
     ID id-CriticalityDiagnostics
                                           CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional |
```

```
ID id-MeNB-UE-X2AP-ID-Extension
                                          CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                      PRESENCE optional |
    ID id-SeNB-UE-X2AP-ID-Extension
                                          CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                      PRESENCE optional },
  -- SENB MODIFICATION REOUIRED
__ *********************
SenbModificationRequired ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                          {{SeNBModificationRequired-IEs}},
SeNBModificationRequired-IES X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                           PRESENCE mandatory}
                                          CRITICALITY reject TYPE UE-X2AP-ID
     ID id-SeNB-UE-X2AP-ID
                                          CRITICALITY reject TYPE UE-X2AP-ID
                                                                                           PRESENCE mandatory
     ID id-Cause
                                          CRITICALITY ignore TYPE Cause
                                                                                           PRESENCE mandatory}
     ID id-SCGChangeIndication
                                          CRITICALITY ignore TYPE SCGChangeIndication
                                                                                           PRESENCE optional}
     ID id-E-RABs-ToBeReleased-ModRegd
                                          CRITICALITY ignore TYPE E-RABs-ToBeReleased-ModRegd
                                                                                           PRESENCE optional }
     ID id-SeNBtoMeNBContainer
                                          CRITICALITY ignore TYPE SeNBtoMeNBContainer
                                                                                           PRESENCE optional }
                                                                                           PRESENCE optional
     ID id-MeNB-UE-X2AP-ID-Extension
                                          CRITICALITY reject TYPE UE-X2AP-ID-Extension
    ID id-SeNB-UE-X2AP-ID-Extension
                                          CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                           PRESENCE optional },
E-RABs-ToBeReleased-ModReqd ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-ModReqdItemIEs} }
E-RABs-ToBeReleased-ModReqdItemIEs X2AP-PROTOCOL-IES ::= {
   TYPE E-RABs-ToBeReleased-ModRegdItem PRESENCE mandatory },
   . . .
E-RABs-ToBeReleased-ModReqdItem ::= SEQUENCE
   e-RAB-ID
                               E-RAB-ID,
   cause
                               Cause,
   iE-Extensions
                               ProtocolExtensionContainer { {E-RABs-ToBeReleased-ModRegdItemExtIEs} } OPTIONAL,
E-RABs-ToBeReleased-ModReqdItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
   ******************
-- SENB MODIFICATION CONFIRM
__ *******************************
SenbModificationConfirm ::= SEQUENCE {
```

```
{{SeNBModificationConfirm-IEs}},
   protocolIEs
                   ProtocolIE-Container
SeNBModificationConfirm-IES X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                                  PRESENCE mandatory }
                                               CRITICALITY ignore TYPE UE-X2AP-ID
     ID id-SeNB-UE-X2AP-ID
                                               CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                  PRESENCE mandatory }
     ID id-MeNBtoSeNBContainer
                                               CRITICALITY ignore TYPE MeNBtoSeNBContainer
                                                                                                  PRESENCE optional}
     ID id-CriticalityDiagnostics
                                               CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                  PRESENCE optional}
                                                                                                  PRESENCE optional)
     ID id-MeNB-UE-X2AP-ID-Extension
                                               CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                               CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                  PRESENCE optional },
     ID id-SeNB-UE-X2AP-ID-Extension
    -- SENB MODIFICATION REFUSE
SeNBModificationRefuse ::= SEQUENCE {
                   ProtocolIE-Container
                                               {{SeNBModificationRefuse-IEs}},
   protocolIEs
SeNBModificationRefuse-IEs X2AP-PROTOCOL-IES ::=
     ID id-MeNB-UE-X2AP-ID
                                                                                               PRESENCE mandatory}
                                               CRITICALITY ignore TYPE UE-X2AP-ID
     ID id-SeNB-UE-X2AP-ID
                                               CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                               PRESENCE mandatory }
     ID id-Cause
                                               CRITICALITY ignore TYPE Cause
                                                                                               PRESENCE mandatory
     ID id-MeNBtoSeNBContainer
                                               CRITICALITY ignore TYPE MeNBtoSeNBContainer
                                                                                               PRESENCE optional }
     ID id-CriticalityDiagnostics
                                               CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                               PRESENCE optional}
                                                                                               PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                               CRITICALITY ignore TYPE UE-X2AP-ID-Extension
    { ID id-SeNB-UE-X2AP-ID-Extension
                                               CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                               PRESENCE optional },
-- SENB RELEASE REQUEST
Senbreleaserequest ::= SEQUENCE {
                                               {{SeNBReleaseRequest-IEs}},
   protocolIEs
                   ProtocolIE-Container
    . . .
SeNBReleaseRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                                           PRESENCE mandatory }
                                               CRITICALITY reject TYPE UE-X2AP-ID
     ID id-SeNB-UE-X2AP-ID
                                               CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                           PRESENCE optional }
     ID id-Cause
                                               CRITICALITY ignore TYPE Cause
                                                                                                           PRESENCE optional}
     ID id-E-RABs-ToBeReleased-List-RelReg
                                               CRITICALITY ignore TYPE E-RABs-ToBeReleased-List-RelReq
                                                                                                           PRESENCE optional}
                                                                                                           PRESENCE optional}
     ID id-UE-ContextKeptIndicator
                                               CRITICALITY ignore TYPE UE-ContextKeptIndicator
     ID id-MeNB-UE-X2AP-ID-Extension
                                               CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                           PRESENCE optional }
```

```
ID id-SeNB-UE-X2AP-ID-Extension
                                               CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                           PRESENCE optional |
     ID id-MakeBeforeBreakIndicator
                                              CRITICALITY ignore TYPE MakeBeforeBreakIndicator
                                                                                                           PRESENCE optional },
E-RABs-ToBeReleased-List-RelReg ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-RelRegItemIEs} }
E-RABs-ToBeReleased-RelRegItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-RelRegItem
                                              CRITICALITY ignore TYPE E-RABs-ToBeReleased-RelRegItem
                                                                                                       PRESENCE mandatory },
E-RABs-ToBeReleased-RelRegItem ::= CHOICE
    sCG-Bearer
                  E-RABs-ToBeReleased-RelRegItem-SCG-Bearer,
   split-Bearer E-RABs-ToBeReleased-RelReqItem-Split-Bearer,
E-RABs-ToBeReleased-RelRegItem-SCG-Bearer ::= SEQUENCE {
    e-RAB-ID
                                   E-RAB-ID,
   uL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
                                                                                                     OPTIONAL,
   dL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
                                                                                                     OPTIONAL,
                                   ProtocolExtensionContainer { {E-RABs-ToBeReleased-RelReqItem-SCG-BearerExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-ToBeReleased-RelReqItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-RelReqItem-Split-Bearer ::= SEQUENCE {
   e-RAB-ID
                                   E-RAB-ID,
   dL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
                                                                                                        OPTIONAL,
   iE-Extensions
                                   ProtocolExtensionContainer { {E-RABs-ToBeReleased-RelReqItem-Split-BearerExtIEs} } OPTIONAL,
   . . .
E-RABs-ToBeReleased-RelReqItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- SENB RELEASE REQUIRED
__ *********************
Senbreleaserequired ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                          {{SeNBReleaseRequired-IEs}},
Senbreleaserequired-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                              PRESENCE mandatory }
                                          CRITICALITY reject TYPE UE-X2AP-ID
    { ID id-SeNB-UE-X2AP-ID
                                          CRITICALITY reject TYPE UE-X2AP-ID
                                                                                              PRESENCE mandatory}
```

```
ID id-Cause
                                           CRITICALITY ignore TYPE Cause
                                                                                               PRESENCE mandatory |
     ID id-MeNB-UE-X2AP-ID-Extension
                                           CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                               PRESENCE optional } |
     ID id-SeNB-UE-X2AP-ID-Extension
                                           CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                               PRESENCE optional },
-- SENB RELEASE CONFIRM
__ *********************
SenbreleaseConfirm ::= SEOUENCE {
    protocolIEs
                   ProtocolIE-Container
                                           {{SeNBReleaseConfirm-IEs}},
SeNBReleaseConfirm-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                   CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                               PRESENCE mandatory}
     ID id-SeNB-UE-X2AP-ID
                                                   CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                               PRESENCE mandatory }
     ID id-E-RABs-ToBeReleased-List-RelConf
                                                   CRITICALITY ignore TYPE E-RABs-ToBeReleased-List-RelConf
                                                                                                               PRESENCE optional}
                                                   CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                               PRESENCE optional
     ID id-CriticalityDiagnostics
     ID id-MeNB-UE-X2AP-ID-Extension
                                                   CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                               PRESENCE optional }
     ID id-SeNB-UE-X2AP-ID-Extension
                                                   CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                               PRESENCE optional },
E-RABs-ToBeReleased-List-RelConf ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-RelConfItemIEs} }
E-RABs-ToBeReleased-RelConfitemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-RelConfItem
                                               CRITICALITY ignore
                                                                       TYPE E-RABs-ToBeReleased-RelConfItem
                                                                                                               PRESENCE mandatory },
    . . .
E-RABs-ToBeReleased-RelConfItem ::= CHOICE {
    sCG-Bearer
                   E-RABs-ToBeReleased-RelConfItem-SCG-Bearer,
    split-Bearer E-RABs-ToBeReleased-RelConfItem-Split-Bearer,
E-RABs-ToBeReleased-RelConfItem-SCG-Bearer ::= SEQUENCE
    e-RAB-ID
                                   E-RAB-ID,
    uL-Forwarding-GTPtunnelEndpoint
                                           GTPtunnelEndpoint
                                                                                                      OPTIONAL,
                                           GTPtunnelEndpoint
    dL-Forwarding-GTPtunnelEndpoint
                                                                                                      OPTIONAL,
                                   ProtocolExtensionContainer { {E-RABs-ToBeReleased-RelConfItem-SCG-BearerExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
E-RABs-ToBeReleased-RelConfitem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-RelConfItem-Split-Bearer ::= SEQUENCE
    e-RAB-ID
                                   E-RAB-ID,
    dL-Forwarding-GTPtunnelEndpoint
                                           GTPtunnelEndpoint
                                                                                                         OPTIONAL,
```

```
ProtocolExtensionContainer { {E-RABs-ToBeReleased-RelConfItem-Split-BearerExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-ToBeReleased-RelConfItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- SENB COUNTER CHECK REQUEST
__ *********************
SeNBCounterCheckRequest ::= SEOUENCE {
   protocolIEs
                ProtocolIE-Container
                                     {{SeNBCounterCheckRequest-IEs}},
SeNBCounterCheckRequest-IEs X2AP-PROTOCOL-IES ::= {
    ID id-MeNB-UE-X2AP-ID
                                        CRITICALITY reject TYPE UE-X2AP-ID
                                                                                            PRESENCE mandatory }
    ID id-SeNB-UE-X2AP-ID
                                        CRITICALITY reject TYPE UE-X2AP-ID
                                                                                            PRESENCE mandatory }
    PRESENCE mandatory }
                                                                                            PRESENCE optional}
    ID id-MeNB-UE-X2AP-ID-Extension
                                        CRITICALITY ignore TYPE UE-X2AP-ID-Extension
    ID id-SeNB-UE-X2AP-ID-Extension
                                        CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                            PRESENCE optional },
   . . .
E-RABs-SubjectToCounterCheck-List ::= SEOUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-SubjectToCounterCheckItemIEs} }
E-RABs-SubjectToCounterCheckItemIEs X2AP-PROTOCOL-IES ::= {
   PRESENCE mandatory },
E-RABs-SubjectToCounterCheckItem ::= SEQUENCE {
   e-RAB-ID
                              E-RAB-ID,
   uL-Count
                              INTEGER (0..4294967295),
   dL-Count
                              INTEGER (0..4294967295),
                              ProtocolExtensionContainer { {E-RABs-SubjectToCounterCheckItemExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
E-RABs-SubjectToCounterCheckItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  ******************
-- X2 REMOVAL REOUEST
X2RemovalRequest ::= SEQUENCE {
                                     {{X2RemovalRequest-IEs}},
   protocolIEs
                ProtocolIE-Container
```

```
X2RemovalRequest-IES X2AP-PROTOCOL-IES ::= {
    ID id-GlobalENB-ID
                     CRITICALITY reject TYPE GlobalENB-ID
                                                                         PRESENCE mandatory } |
    ID id-X2RemovalThreshold
                                CRITICALITY reject TYPE X2BenefitValue
                                                                         PRESENCE optional },
}
__ *********************
-- X2 REMOVAL RESPONSE
X2RemovalResponse ::= SEQUENCE {
                                    {{X2RemovalResponse-IEs}},
   protocolIEs ProtocolIE-Container
X2RemovalResponse-IEs X2AP-PROTOCOL-IES ::= {
   { ID id-GlobalENB-ID CRITICALITY reject TYPE GlobalENB-ID
                                                                            PRESENCE mandatory}
   { ID id-CriticalityDiagnostics
                                 CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                            PRESENCE optional },
  *****************
-- X2 REMOVAL FAILURE
  ****************
X2RemovalFailure ::= SEQUENCE {
   protocolIEs ProtocolIE-Container
                                    {{X2RemovalFailure-IEs}},
X2RemovalFailure-IES X2AP-PROTOCOL-IES ::= {
    ID id-Cause
                                 CRITICALITY ignore TYPE Cause
                                                                                PRESENCE mandatory}
   { ID id-CriticalityDiagnostics
                                 CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                PRESENCE optional },
-- RETRIEVE UE CONTEXT REQUEST
__ *********************************
```

```
RetrieveUEContextRequest ::= SEOUENCE {
    protocolIEs
                   ProtocolIE-Container
                                           {{ RetrieveUEContextRequest-IEs}},
    . . .
RetrieveUEContextRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-New-eNB-UE-X2AP-ID
                                                                                              PRESENCE mandatory}
                                               CRITICALITY reject TYPE UE-X2AP-ID
     ID id-SeNB-UE-X2AP-ID-Extension
                                               CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                              PRESENCE optional }
     TD id-resumeTD
                                               CRITICALITY reject TYPE ResumeID
                                                                                              PRESENCE mandatory
                                                                                              PRESENCE mandatory
     ID id-ShortMAC-I
                                               CRITICALITY reject TYPE ShortMAC-I
     ID id-NewEUTRANCellIdentifier
                                                                                              PRESENCE mandatory
                                               CRITICALITY reject TYPE EUTRANCellIdentifier
    {ID id-FailureCellCRNTI
                                               CRITICALITY reject TYPE CRNTI
                                                                                              PRESENCE optional } |
    ID id-FailureCellPCI
                                                                                              PRESENCE optional },
                                               CRITICALITY reject TYPE PCI
-- RETRIEVE UE CONTEXT RESPONSE
      RetrieveUEContextResponse ::= SEQUENCE {
    protocolIEs
                       ProtocolIE-Container
                                               {{ RetrieveUEContextResponse-IEs}},
RetrieveUEContextResponse-IEs X2AP-PROTOCOL-IES ::= {
                                                                                                                          PRESENCE mandatory}
     ID id-New-eNB-UE-X2AP-ID
                                                       CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                          PRESENCE optional }
     ID id-New-eNB-UE-X2AP-ID-Extension
                                                       CRITICALITY ignore TYPE UE-X2AP-ID-Extension
     ID id-Old-eNB-UE-X2AP-ID
                                                       CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                          PRESENCE mandatory }
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                                       CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                          PRESENCE optional }
     ID id-GUMMEI-ID
                                                       CRITICALITY reject TYPE GUMMEI
                                                                                                                          PRESENCE mandatory
                                                                                                                          PRESENCE mandatory
     ID id-UE-ContextInformationRetrieve
                                                       CRITICALITY reject TYPE UE-ContextInformationRetrieve
     ID id-TraceActivation
                                                       CRITICALITY ignore TYPE TraceActivation
                                                                                                                          PRESENCE optional }
                                                                                                                          PRESENCE optional
     ID id-SRVCCOperationPossible
                                                       CRITICALITY ignore TYPE SRVCCOperationPossible
                                                                                                                          PRESENCE optional }
     ID id-Masked-IMEISV
                                                       CRITICALITY ignore TYPE Masked-IMEISV
     ID id-ExpectedUEBehaviour
                                                       CRITICALITY ignore TYPE ExpectedUEBehaviour
                                                                                                                          PRESENCE optional }
     ID id-ProSeAuthorized
                                                       CRITICALITY ignore TYPE ProSeAuthorized
                                                                                                                          PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                       CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                          PRESENCE optional}
                                                       CRITICALITY ignore TYPE V2XServicesAuthorized
     ID id-V2XServicesAuthorized
                                                                                                                          PRESENCE optional}
     ID id-AerialUEsubscriptionInformation
                                                       CRITICALITY ignore TYPE AerialUEsubscriptionInformation
                                                                                                                          PRESENCE optional}
    { ID id-Subscription-Based-UE-DifferentiationInfo
                                                      CRITICALITY ignore TYPE Subscription-Based-UE-DifferentiationInfo PRESENCE optional },
UE-ContextInformationRetrieve ::= SEOUENCE {
    mME-UE-S1AP-ID
                                       UE-S1AP-ID,
    uESecurityCapabilities
                                       UESecurityCapabilities,
    aS-SecurityInformation
                                       AS-SecurityInformation,
    uEaggregateMaximumBitRate
                                       UEAggregateMaximumBitRate,
    subscriberProfileIDforRFP
                                       SubscriberProfileIDforRFP
                                                                       OPTIONAL,
    e-RABs-ToBeSetup-ListRetrieve
                                       E-RABs-ToBeSetup-ListRetrieve,
    rRC-Context
                                       RRC-Context,
```

```
handoverRestrictionList
                                  HandoverRestrictionList
                                                              OPTIONAL,
   locationReportingInformation
                                  LocationReportingInformation
                                                              OPTIONAL,
   managBasedMDTallowed
                                  ManagementBasedMDTallowed
                                                              OPTIONAL.
                                  MDTPLMNList
   managBasedMDTPLMNList
                                                              OPTIONAL,
   iE-Extensions
                                  ProtocolExtensionContainer { {UE-ContextInformationRetrieve-ExtIEs} } OPTIONAL,
UE-ContextInformationRetrieve-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
 PRESENCE optional } |
{ ID id-EPCHandoverRestrictionListContainer CRITICALITY ignore EXTENSION EPCHandoverRestrictionListContainer
                                                                                                 PRESENCE optional },
   . . .
E-RABs-ToBeSetup-ListRetrieve ::= SEOUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeSetupRetrieve-ItemIEs} }
E-RABs-ToBeSetupRetrieve-ItemIEs
                              X2AP-PROTOCOL-IES ::= {
   . . .
E-RABs-ToBeSetupRetrieve-Item ::= SEQUENCE {
   e-RAB-ID
                               E-RAB-ID,
   e-RAB-Level-OoS-Parameters
                               E-RAB-Level-OoS-Parameters,
                               BearerType OPTIONAL,
   bearerType
                               ProtocolExtensionContainer { {E-RABs-ToBeSetupRetrieve-ItemExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
E-RABs-ToBeSetupRetrieve-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-uL-GTPtunnelEndpoint
                                  CRITICALITY reject EXTENSION GTPtunnelEndpoint
                                                                               PRESENCE mandatory } |
    ID id-dL-Forwarding
                                  CRITICALITY ignore EXTENSION DL-Forwarding
                                                                               PRESENCE optional },
   . . .
  ******************
-- RETRIEVE UE CONTEXT FAILURE
     *****************
RetrieveUEContextFailure ::= SEOUENCE {
                 ProtocolIE-Container
                                      {{ RetrieveUEContextFailure-IEs}},
   protocolIEs
RetrieveUEContextFailure-IES X2AP-PROTOCOL-IES ::= {
     ID id-New-eNB-UE-X2AP-ID
                                      CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                   PRESENCE mandatory}
     ID id-New-eNB-UE-X2AP-ID-Extension
                                     CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                   PRESENCE optional } |
     ID id-Cause
                                      CRITICALITY ignore TYPE Cause
                                                                                   PRESENCE mandatory |
   { ID id-CriticalityDiagnostics
                                      CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                   PRESENCE optional },
   . . .
```

```
******************
-- SGNB ADDITION REQUEST
   ****************
SqNBAdditionRequest ::= SEOUENCE {
                   ProtocolIE-Container {{SqNBAdditionRequest-IEs}},
   protocolIEs
SgNBAdditionRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                   CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                 PRESENCE mandatory |
     ID id-NRUESecurityCapabilities
                                                      CRITICALITY reject TYPE NRUESecurityCapabilities
                                                                                                                    PRESENCE mandatory }
     ID id-SqNBSecurityKey
                                                   CRITICALITY reject TYPE SqNBSecurityKey
                                                                                                                   PRESENCE mandatory}
     ID id-SqNBUEAggregateMaximumBitRate
                                                   CRITICALITY reject TYPE UEAggregateMaximumBitRate
                                                                                                                 PRESENCE mandatory } |
     ID id-SelectedPLMN
                                                      CRITICALITY ignore TYPE PLMN-Identity
                                                                                                                    PRESENCE optional }
     ID id-HandoverRestrictionList
                                                   CRITICALITY ignore TYPE HandoverRestrictionList
                                                                                                                 PRESENCE optional } |
                                                   CRITICALITY reject TYPE E-RABs-ToBeAdded-SqNBAddReqList
     ID id-E-RABs-ToBeAdded-SqNBAddRegList
                                                                                                                 PRESENCE mandatory |
                                                   CRITICALITY reject TYPE MenBtoSqnBContainer
     ID id-MeNBtoSgNBContainer
                                                                                                                    PRESENCE mandatory |
     ID id-SgNB-UE-X2AP-ID
                                                   CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                                                    PRESENCE optional }
                                                   CRITICALITY ignore TYPE ExpectedUEBehaviour
     ID id-ExpectedUEBehaviour
                                                                                                                   PRESENCE optional }
                                                   CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                 PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                                                                                 PRESENCE optional }
     ID id-RequestedSplitSRBs
                                                   CRITICALITY reject TYPE SplitSRBs
     ID id-MeNBResourceCoordinationInformation
                                                   CRITICALITY ignore TYPE MeNBResourceCoordinationInformation
                                                                                                                 PRESENCE optional }
     ID id-SGNB-Addition-Trigger-Ind
                                                   CRITICALITY reject TYPE SGNB-Addition-Trigger-Ind
                                                                                                                 PRESENCE optional}
     ID id-SubscriberProfileIDforRFP
                                                   CRITICALITY ignore TYPE SubscriberProfileIDforRFP
                                                                                                                 PRESENCE optional }
     ID id-MeNBCell-ID
                                                   CRITICALITY reject TYPE ECGI
                                                                                                                 PRESENCE mandatory |
     ID id-DesiredActNotificationLevel
                                                   CRITICALITY ignore TYPE DesiredActNotificationLevel
                                                                                                                 PRESENCE optional }
     ID id-TraceActivation
                                                                                                                 PRESENCE optional }
                                                   CRITICALITY ignore TYPE TraceActivation
     ID id-LocationInformationSqNBReporting
                                                      CRITICALITY ignore TYPE LocationInformationSqNBReporting
                                                                                                                      PRESENCE optional |
     ID id-Masked-IMEISV
                                                   CRITICALITY ignore TYPE Masked-IMEISV
                                                                                                                 PRESENCE optional },
    . . .
E-RABs-ToBeAdded-SqNBAddReqList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeAdded-SqNBAddReq-ItemIEs} }
E-RABs-ToBeAdded-SqNBAddReg-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeAdded-SqNBAddReg-Item
                                                  CRITICALITY reject TYPE E-RABs-ToBeAdded-SqNBAddReq-Item
                                                                                                             PRESENCE mandatory },
    . . .
E-RABs-ToBeAdded-SgNBAddReq-Item ::= SEQUENCE {
    e-RAB-ID
                                           E-RAB-ID,
    drb-ID
                                       DRB-ID,
    en-DC-ResourceConfiguration
                                       EN-DC-ResourceConfiguration,
   resource-configuration
                                       CHOICE {
       sgNBPDCPpresent
                                           E-RABs-ToBeAdded-SqNBAddReq-Item-SqNBPDCPpresent,
       sgNBPDCPnotpresent
                                           E-RABs-ToBeAdded-SgNBAddReq-Item-SgNBPDCPnotpresent,
    iE-Extensions
                                   ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBAddReq-ItemExtIEs} }
```

```
E-RABs-ToBeAdded-SqNBAddReq-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeAdded-SqNBAddReq-Item-SqNBPDCPpresent ::= SEQUENCE {
   full-E-RAB-Level-OoS-Parameters
                                             E-RAB-Level-OoS-Parameters,
   max-MCG-admit-E-RAB-Level-Oos-Parameters GBR-OosInformation
-- This IE shall be present if MCG resource and SCG resources IEs in the EN-DC Resource Configuration IE are set to "present" and GBR QoS
Information IE is present in Full E-RAB Level QoS Parameters IE --
   dL-Forwarding
                                             DL-Forwarding
                                                                                                                    OPTIONAL,
   meNB-DL-GTP-TEIDatMCG
                                             GTPtunnelEndpoint
                                                                                                                    OPTIONAL,
-- This IE shall be present if MCG resource IE in the EN-DC Resource Configuration IE is set to "present" --
    s1-UL-GTPtunnelEndpoint
                                             GTPtunnelEndpoint,
                                  ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBAddReq-Item-SqNBPDCPpresentExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-ToBeAdded-SqNBAddReq-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-RLCMode-transferred
                                             CRITICALITY ignore EXTENSION RLCMode
                                                                                                PRESENCE optional } |
    { ID id-BearerType
                                             CRITICALITY ignore EXTENSION BearerType
                                                                                                PRESENCE optional },
    . . .
E-RABs-ToBeAdded-SgNBAddReq-Item-SgNBPDCPnotpresent ::= SEQUENCE
    requested-SCG-E-RAB-Level-QoS-Parameters
                                                 E-RAB-Level-QoS-Parameters,
   meNB-UL-GTP-TEIDatPDCP
                                                 GTPtunnelEndpoint,
   secondary-meNB-UL-GTP-TEIDatPDCP
                                                 GTPtunnelEndpoint OPTIONAL,
   rlc-Mode
                                                 RLCMode,
   uL-Configuration
                                                 ULConfiguration OPTIONAL,
-- This IE shall be present if MCG resource and SCG resources IEs in the EN-DC Resource Configuration IE are set to "present" --
                                  ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBAddReq-Item-SqNBPDCPnotpresentExtIEs} }
   iE-Extensions
                                                                                                                             OPTIONAL,
    . . .
E-RABs-ToBeAdded-SqNBAddReq-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-uLpDCPSnLength
                                                 CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                      PRESENCE optional }
     ID id-dLPDCPSnLength
                                                 CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                      PRESENCE optional }
     ID id-duplicationActivation
                                                 CRITICALITY ignore EXTENSION DuplicationActivation PRESENCE optional },
    -- SGNB ADDITION REQUEST ACKNOWLEDGE
  ******************
SgNBAdditionRequestAcknowledge ::= SEQUENCE
                                          {{SqNBAdditionRequestAcknowledge-IEs}},
   protocolIEs
                   ProtocolIE-Container
SgNBAdditionRequestAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
```

```
ID id-MeNB-UE-X2AP-ID
                                                      CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                           PRESENCE mandatory
     ID id-SaNB-UE-X2AP-ID
                                                      CRITICALITY reject TYPE SqNB-UE-X2AP-ID
                                                                                                                           PRESENCE mandatory}
     ID id-E-RABs-Admitted-ToBeAdded-SanBAddRegAckList CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-SanBAddRegAckList
                                                                                                                           PRESENCE mandatory}
     ID id-E-RABs-NotAdmitted-List
                                                      CRITICALITY ignore TYPE E-RAB-List
                                                                                                                           PRESENCE optional}
     ID id-SqNBtoMeNBContainer
                                                      CRITICALITY reject TYPE SqNBtoMeNBContainer
                                                                                                                           PRESENCE mandatory |
                                                      CRITICALITY ignore TYPE CriticalityDiagnostics
     ID id-CriticalityDiagnostics
                                                                                                                           PRESENCE optional}
     ID id-MeNB-UE-X2AP-ID-Extension
                                                      CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                           PRESENCE optional}
     ID id-AdmittedSplitSRBs
                                                      CRITICALITY reject TYPE SplitSRBs
                                                                                                                           PRESENCE optional }
     ID id-SqNBResourceCoordinationInformation
                                                      CRITICALITY ignore TYPE SqNBResourceCoordinationInformation
                                                                                                                           PRESENCE optional }
     ID id-RRCConfigIndication
                                                      CRITICALITY reject TYPE RRC-Config-Ind
                                                                                                                           PRESENCE optional)
     ID id-LocationInformationSqNB
                                                      CRITICALITY ignore TYPE LocationInformationSqNB
                                                                                                                           PRESENCE optional },
    . . .
E-RABs-Admitted-ToBeAdded-SqnBAddRegAckList ::= SEOUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeAdded-
SqNBAddRegAck-ItemIEs} }
E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-ItemIEs X2AP-PROTOCOL-IES ::= {
    PRESENCE
mandatory }
E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item ::= SEQUENCE {
    e-RAB-ID
                                      E-RAB-ID,
    en-DC-ResourceConfiguration
                                      EN-DC-ResourceConfiguration,
   resource-configuration
                                      CHOICE {
                                          E-RABs-Admitted-ToBeAdded-SqNBAddRegAck-Item-SqNBPDCPpresent,
       sqNBPDCPpresent
       sqNBPDCPnotpresent
                                          E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item-SqNBPDCPnotpresent,
    iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBAddRegAck-ItemExtIEs} }
E-RABs-ToBeAdded-SqNBAddRegAck-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeAdded-SqNBAddRegAck-Item-SqNBPDCPpresent ::= SEQUENCE {
    s1-DL-GTPtunnelEndpoint
                                          GTPtunnelEndpoint,
    sqNB-UL-GTP-TEIDatPDCP
                                          GTPtunnelEndpoint
                                                                                                                                 OPTIONAL,
-- This IE shall be present if MCG resource IE in the EN-DC Resource Configuration IE is set to "present" --
   rlc-Mode
                                          RLCMode
                                                                                                                                 OPTIONAL,
-- This IE shall be present if MCG resource IE in the EN-DC Resource Configuration IE is set to "present" --
   dL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
                                                                                                                                 OPTIONAL,
   uL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
                                                                                                                                 OPTIONAL,
   mCG-E-RAB-Level-OoS-Parameters
                                          E-RAB-Level-OoS-Parameters
                                                                                                                                 OPTIONAL,
-- This IE shall be present if MCG resource and SCG resource IEs in the EN-DC Resource Configuration IE are set to "present" and the GBR QoS
Information IE is present in the Requested MCG E-RAB Level QoS Parameters IE --
    uL-Configuration
                                              ULConfiguration
                                                                                                                                    OPTIONAL,
-- This IE shall be present if MCG resource and SCG resources IEs in the EN-DC Resource Configuration IE are set to "present" --
   iE-Extensions
                                          ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item-SqNBPDCPpresentExtIEs} }
       OPTIONAL,
    . . .
```

```
E-RABs-Admitted-ToBeAdded-SqNBAddRegAck-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-uLpDCPSnLength
                                              CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                               PRESENCE optional } |
   { ID id-dLPDCPSnLength
                                              CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                               PRESENCE optional },
   . . .
E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item-SqNBPDCPnotpresent ::= SEQUENCE {
                                   GTPtunnelEndpoint,
   sgNB-DL-GTP-TEIDatSCG
                                   GTPtunnelEndpoint
   secondary-sgNB-DL-GTP-TEIDatSCG
                                                         OPTIONAL,
   iE-Extensions
                                   ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-SqNBAddRegAck-Item-SqNBPDCPnotpresentExtIEs} }
   OPTIONAL,
   . . .
E-RABs-Admitted-ToBeAdded-SqnBAddReqAck-Item-SqnBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
   { ID id-lCID
                            CRITICALITY ignore EXTENSION LCID
                                                                    PRESENCE optional },
   . . .
  ******************
-- SGNB ADDITION REQUEST REJECT
  ******************
SgNBAdditionRequestReject ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                       {{SqNBAdditionRequestReject-IEs}},
SgNBAdditionRequestReject-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                       CRITICALITY reject TYPE UE-X2AP-ID
                                                                                      PRESENCE mandatory}
     ID id-SgNB-UE-X2AP-ID
                                       CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                      PRESENCE optional } |
                                                                                      PRESENCE mandatory
     ID id-Cause
                                       CRITICALITY ignore TYPE Cause
     ID id-CriticalityDiagnostics
                                                                                      PRESENCE optional } |
                                       CRITICALITY ignore TYPE CriticalityDiagnostics
    { ID id-MeNB-UE-X2AP-ID-Extension
                                       CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                      PRESENCE optional },
    SGNB RECONFIGURATION COMPLETE
  *****************
SgNBReconfigurationComplete ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                       {{SgNBReconfigurationComplete-IEs}},
```

```
SqNBReconfigurationComplete-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                   CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                     PRESENCE mandatory}
     ID id-SqNB-UE-X2AP-ID
                                                   CRITICALITY reject TYPE SqNB-UE-X2AP-ID
                                                                                                                     PRESENCE mandatory}
     ID id-ResponseInformationSqNBReconfComp
                                                   CRITICALITY ignore TYPE ResponseInformationSqNBReconfComp
                                                                                                                     PRESENCE mandatory}
     ID id-MeNB-UE-X2AP-ID-Extension
                                                   CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                     PRESENCE optional },
ResponseInformationSqNBReconfComp ::= CHOICE
    success-SgNBReconfComp
                                       ResponseInformationSqNBReconfComp-SuccessItem,
    reject-by-MeNB-SgNBReconfComp
                                       ResponseInformationSgNBReconfComp-RejectByMeNBItem,
ResponseInformationSqNBReconfComp-SuccessItem ::= SEQUENCE {
    meNBtoSqNBContainer
                                   MeNBtoSqNBContainer
                                                                       OPTIONAL,
    iE-Extensions
                                   ProtocolExtensionContainer { ResponseInformationSqNBReconfComp-SuccessItemExtIEs} } OPTIONAL,
    . . .
ResponseInformationSqNBReconfComp-SuccessItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ResponseInformationSgNBReconfComp-RejectByMeNBItem ::= SEQUENCE {
    iE-Extensions
                                   ProtocolExtensionContainer { ResponseInformationSqNBReconfComp-RejectByMeNBItemExtIEs} }
                                                                                                                                 OPTIONAL
    . . .
ResponseInformationSqNBReconfComp-RejectByMeNBItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- SGNB MODIFICATION REQUEST
__ ********************************
SgNBModificationRequest ::= SEQUENCE {
                   ProtocolIE-Container
                                           {{ SgNBModificationRequest-IEs}},
    protocolIEs
    . . .
SgNBModificationRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                                            PRESENCE mandatory }
                                               CRITICALITY reject TYPE UE-X2AP-ID
     ID id-SqNB-UE-X2AP-ID
                                               CRITICALITY reject TYPE SqNB-UE-X2AP-ID
                                                                                                            PRESENCE mandatory }
     ID id-Cause
                                               CRITICALITY ignore TYPE Cause
                                                                                                            PRESENCE mandatory}
     ID id-SelectedPLMN
                                               CRITICALITY ignore TYPE PLMN-Identity
                                                                                                            PRESENCE optional }
     ID id-HandoverRestrictionList
                                               CRITICALITY ignore TYPE HandoverRestrictionList
                                                                                                            PRESENCE optional }
          id-SCGConfigurationQuery
                                               CRITICALITY ignore TYPE SCGConfigurationQuery
                                                                                                            PRESENCE optional }
```

```
ID id-UE-ContextInformation-SqNBModReg
                                               CRITICALITY reject TYPE UE-ContextInformation-SqNBModReq
                                                                                                           PRESENCE optional }
     ID id-MeNBtoSqNBContainer
                                               CRITICALITY reject TYPE MeNBtoSqNBContainer
                                                                                                           PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                               CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                           PRESENCE optional }
     ID id-MenbresourceCoordinationInformation CRITICALITY ignore TYPE MenbresourceCoordinationInformation PRESENCE optional
     ID id-RequestedSplitSRBs
                                               CRITICALITY ignore TYPE SplitSRBs
                                                                                                           PRESENCE optional}
     ID id-RequestedSplitSRBsrelease
                                               CRITICALITY ignore TYPE SplitSRBs
                                                                                                           PRESENCE optional}
     ID id-DesiredActNotificationLevel
                                               CRITICALITY ignore TYPE DesiredActNotificationLevel
                                                                                                           PRESENCE optional }
     ID id-LocationInformationSqNBReporting
                                               CRITICALITY ignore TYPE LocationInformationSqNBReporting
                                                                                                           PRESENCE optional }
     ID id-MeNBCell-ID
                                               CRITICALITY ignore TYPE ECGI
                                                                                                           PRESENCE optional },
    . . .
UE-ContextInformation-SqNBModReq ::= SEQUENCE {
   nRUE-SecurityCapabilities
                                   NRUESecurityCapabilities
                                                                                                              OPTIONAL.
    sqNB-SecurityKey
                                   SqNBSecurityKey
                                                                                                              OPTIONAL,
                                                                                                              OPTIONAL,
    sgNBUEAggregateMaximumBitRate
                                   UEAggregateMaximumBitRate
    e-RABs-ToBeAdded
                                   E-RABs-ToBeAdded-SqNBModReq-List
                                                                                                              OPTIONAL,
                                   E-RABs-ToBeModified-SqNBModReq-List
    e-RABs-ToBeModified
                                                                                                              OPTIONAL,
    e-RABs-ToBeReleased
                                   E-RABs-ToBeReleased-SqNBModReq-List
                                                                                                              OPTIONAL,
                                   OPTIONAL,
    iE-Extensions
UE-ContextInformationSqNBModReqExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    { ID id-SubscriberProfileIDforRFP
                                                      CRITICALITY ignore EXTENSION SubscriberProfileIDforRFP
                                                                                                                                      PRESENCE
optional},
    . . .
E-RABs-ToBeAdded-SgNBModReq-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeAdded-SgNBModReq-ItemIEs} }
E-RABs-ToBeAdded-SqNBModReq-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeAdded-SgNBModReq-Item
                                                   CRITICALITY ignore TYPE E-RABs-ToBeAdded-SqNBModReg-Item
                                                                                                            PRESENCE mandatory },
    . . .
E-RABs-ToBeAdded-SgNBModReq-Item ::= SEQUENCE {
   e-RAB-ID
                                           E-RAB-ID,
   drb-ID
                                           DRB-ID,
    en-DC-ResourceConfiguration
                                           EN-DC-ResourceConfiguration,
   resource-configuration
                                           CHOICE
       sqNBPDCPpresent
                                           E-RABs-ToBeAdded-SqNBModReg-Item-SqNBPDCPpresent,
       sgNBPDCPnotpresent
                                           E-RABs-ToBeAdded-SgNBModReq-Item-SgNBPDCPnotpresent,
    iE-Extensions
                                   ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBModReq-ItemExtIEs} } 
                                                                                                           OPTIONAL.
E-RABs-ToBeAdded-SqnBModReq-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeAdded-SgNBModReq-Item-SgNBPDCPpresent ::= SEQUENCE {
```

```
full-E-RAB-Level-OoS-Parameters
                                            E-RAB-Level-OoS-Parameters,
   max-MN-admit-E-RAB-Level-OoS-Parameters GBR-OosInformation
                                                                                                                 OPTIONAL.
-- This IE shall be present if MCG resource and SCG resources IEs in the EN-DC Resource Configuration IE are set to "present" and GBR OoS
Information IE is present in Full E-RAB Level OoS Parameters IE --
    dL-Forwarding
                                            DL-Forwarding
                                                                                                                       OPTIONAL.
    meNB-DL-GTP-TEIDatMCG
                                            GTPtunnelEndpoint
                                                                                                                       OPTIONAL,
-- This IE shall be present if MCG resource IE in the EN-DC Resource Configuration IE is set to "present" --
    s1-UL-GTPtunnelEndpoint
                                            GTPtunnelEndpoint,
    iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBModReq-Item-SqNBPDCPpresentExtIEs} }
                                                                                                                                OPTIONAL,
E-RABs-ToBeAdded-SqNBModReq-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      ID id-RLCMode-transferred
                                                CRITICALITY ignore EXTENSION RLCMode
                                                                                                     PRESENCE optional } |
     ID id-BearerType
                                                CRITICALITY ignore EXTENSION BearerType
                                                                                                     PRESENCE optional },
E-RABs-ToBeAdded-SqNBModReq-Item-SqNBPDCPnotpresent ::= SEQUENCE
    requested-SCG-E-RAB-Level-OoS-Parameters
                                                    E-RAB-Level-OoS-Parameters,
    meNB-UL-GTP-TEIDatPDCP
                                                    GTPtunnelEndpoint,
    secondary-meNB-UL-GTP-TEIDatPDCP
                                                    GTPtunnelEndpoint
                                                                            OPTIONAL.
   rlc-Mode
                                                    RLCMode,
    uL-Configuration
                                                    ULConfiguration
-- This IE shall be present if MCG resource and SCG resources IEs in the EN-DC Resource Configuration IE are set to "present" --
    iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBModReg-Item-SqNBPDCPnotpresentExtIEs} }
    . . .
E-RABs-ToBeAdded-SqNBModReq-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      ID id-uLpDCPSnLength
                                                    CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                           PRESENCE optional }
      ID id-dLPDCPSnLength
                                                    CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                           PRESENCE optional
    { ID id-duplicationActivation
                                                    CRITICALITY ignore EXTENSION DuplicationActivation PRESENCE optional }
    . . .
E-RABs-ToBeModified-SqNBModReq-List ::= SEOUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeModified-SqNBModReq-
ItemIEs} }
E-RABs-ToBeModified-SqNBModReq-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeModified-SqNBModReg-Item CRITICALITY ignore TYPE E-RABs-ToBeModified-SqNBModReg-Item
                                                                                                                 PRESENCE mandatory },
    . . .
E-RABs-ToBeModified-SqNBModReg-Item ::= SEOUENCE
    e-RAB-ID
                                            E-RAB-ID,
    en-DC-ResourceConfiguration
                                        EN-DC-ResourceConfiguration,
    resource-configuration
                                        CHOICE {
                                            E-RABs-ToBeModified-SqNBModReq-Item-SqNBPDCPpresent,
       sqNBPDCPpresent
       sqNBPDCPnotpresent
                                            E-RABs-ToBeModified-SqNBModReg-Item-SqNBPDCPnotpresent,
```

```
ProtocolExtensionContainer { {E-RABs-ToBeModified-SqNBModReq-ItemExtIEs} }
    iE-Extensions
E-RABs-ToBeModified-SqNBModReq-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::=
E-RABs-ToBeModified-SqNBModReq-Item-SqNBPDCPpresent ::= SEQUENCE {
    full-E-RAB-Level-OoS-Parameters
                                            E-RAB-Level-OoS-Parameters
                                                                                                                                OPTIONAL,
    max-MN-admit-E-RAB-Level-QoS-Parameters GBR-QosInformation
                                                                                                                                OPTIONAL,
    meNB-DL-GTP-TEIDatMCG
                                            GTPtunnelEndpoint
                                                                                                                                OPTIONAL,
    s1-UL-GTPtunnelEndpoint
                                            GTPtunnelEndpoint
                                                                                                                                OPTIONAL,
    iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeModified-SqNBModReg-Item-SqNBPDCPpresentExtIEs} } OPTIONAL,
E-RABs-ToBeModified-SqNBModReq-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::=
    { ID id-RLC-Status
                                CRITICALITY ignore
                                                            EXTENSION RLC-Status
                                                                                                 PRESENCE optional },
    . . .
E-RABs-ToBeModified-SqNBModReq-Item-SqNBPDCPnotpresent ::= SEQUENCE {
    requested-SCG-E-RAB-Level-QoS-Parameters
                                                    E-RAB-Level-OoS-Parameters
                                                                                                                                         OPTIONAL,
    meNB-UL-GTP-TEIDatPDCP
                                                GTPtunnelEndpoint
                                                                                                                                      OPTIONAL,
    uL-Configuration
                                                    ULConfiguration
                                                                                                                                         OPTIONAL.
                                    ProtocolExtensionContainer { {E-RABs-ToBeModified-SqNBModReq-Item-SqNBPDCPnotpresentExtIEs} } OPTIONAL,
    iE-Extensions
E-RABs-ToBeModified-SqNBModReq-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      ID id-uLpDCPSnLength
                                                                                                           PRESENCE optional }
                                                    CRITICALITY ignore EXTENSION PDCPSnLength
      ID id-dLPDCPSnLength
                                                    CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                           PRESENCE optional }
     ID id-secondarymeNBULGTPTEIDatPDCP
                                                    CRITICALITY ignore EXTENSION GTPtunnelEndpoint
                                                                                                           PRESENCE optional },
E-RABs-ToBeReleased-SqNBModReg-List ::= SEOUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-SqNBModReg-
ItemIEs} }
E-RABs-ToBeReleased-SgNBModReq-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-SgNBModReq-Item CRITICALITY ignore TYPE E-RABs-ToBeReleased-SgNBModReq-Item
                                                                                                                 PRESENCE mandatory },
    . . .
E-RABs-ToBeReleased-SgNBModReq-Item ::= SEQUENCE {
    e-RAB-ID
                                            E-RAB-ID.
    en-DC-ResourceConfiguration
                                        EN-DC-ResourceConfiguration,
    resource-configuration
                                        CHOICE {
        sqNBPDCPpresent
                                            E-RABs-ToBeReleased-SqNBModReg-Item-SqNBPDCPpresent,
       sgNBPDCPnotpresent
                                            E-RABs-ToBeReleased-SgNBModReq-Item-SgNBPDCPnotpresent,
                                    ProtocolExtensionContainer { {E-RABs-ToBeReleased-SgNBModReq-ItemExtIEs} }
    iE-Extensions
```

```
E-RABs-ToBeReleased-SqNBModReq-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SgNBModReq-Item-SgNBPDCPpresent ::= SEQUENCE {
   dL-GTPtunnelEndpoint
                                  GTPtunnelEndpoint
                                                                                                                    OPTIONAL,
                                  GTPtunnelEndpoint
   uL-GTPtunnelEndpoint
                                                                                                                    OPTIONAL,
                              ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBModReq-Item-SqNBPDCPpresentExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
E-RABs-ToBeReleased-SqNBModReq-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SqNBModReg-Item-SqNBPDCPnotpresent ::= SEQUENCE {
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBModReq-Item-SqNBPDCPnotpresentExtIEs} } OPTIONAL,
    . . .
E-RABs-ToBeReleased-SqNBModReg-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      -- SGNB MODIFICATION REQUEST ACKNOWLEDGE
__ *********************
SgNBModificationRequestAcknowledge ::= SEQUENCE {
                   ProtocolIE-Container
                                          {{SgNBModificationRequestAcknowledge-IEs}},
   protocolIEs
    . . .
SgNBModificationRequestAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                     CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                          PRESENCE mandatory |
     ID id-SgNB-UE-X2AP-ID
                                                     CRITICALITY ignore TYPE SgNB-UE-X2AP-ID
                                                                                                                             PRESENCE
mandatory}
    { ID id-E-RABs-Admitted-ToBeAdded-SqNBModAckList
                                                         CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-SgNBModAckList
                                                                                                                                PRESENCE
optional}|
     ID id-E-RABs-Admitted-ToBeModified-SqNBModAckList CRITICALITY ignore TYPE E-RABs-Admitted-ToBeModified-SqNBModAckList
                                                                                                                          PRESENCE optional }
     ID id-E-RABs-Admitted-ToBeReleased-SqNBModAckList CRITICALITY ignore TYPE E-RABs-Admitted-ToBeReleased-SqNBModAckList
                                                                                                                          PRESENCE optional}
     ID id-E-RABs-NotAdmitted-List
                                                     CRITICALITY ignore TYPE E-RAB-List
                                                                                                                          PRESENCE optional}
     ID id-SqNBtoMeNBContainer
                                                     CRITICALITY ignore TYPE SqNBtoMeNBContainer
                                                                                                                          PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                     CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                          PRESENCE optional}
     ID id-MeNB-UE-X2AP-ID-Extension
                                                      CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                          PRESENCE optional}
     ID id-SgNBResourceCoordinationInformation
                                                     CRITICALITY ignore TYPE SgNBResourceCoordinationInformation
                                                                                                                          PRESENCE optional}
     ID id-AdmittedSplitSRBs
                                                                                                                          PRESENCE optional }
                                                     CRITICALITY ignore TYPE SplitSRBs
```

```
{ ID id-AdmittedSplitSRBsrelease
                                                          CRITICALITY ignore TYPE SplitSRBs
                                                                                                                              PRESENCE
optional}|
     ID id-RRCConfigIndication
                                                      CRITICALITY reject TYPE RRC-Config-Ind
                                                                                                                           PRESENCE optional } |
     ID id-LocationInformationSqNB
                                                      CRITICALITY ignore TYPE LocationInformationSqNB
                                                                                                                           PRESENCE optional },
E-RABs-Admitted-ToBeAdded-SqnBModAckList ::= SEOUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeAdded-
SgNBModAck-ItemIEs } }
E-RABs-Admitted-ToBeAdded-SqNBModAck-ItemIEs X2AP-PROTOCOL-IES ::= {
    PRESENCE mandatory }
E-RABs-Admitted-ToBeAdded-SqNBModAck-Item ::= SEOUENCE {
    e-RAB-ID
                                          E-RAB-ID,
    en-DC-ResourceConfiguration
                                      EN-DC-ResourceConfiguration,
   resource-configuration
                                      CHOICE {
       sqNBPDCPpresent
                                          E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPpresent,
       sgNBPDCPnotpresent
                                          E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPnotpresent,
                                  ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-SqNBModAck-ItemExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
E-RABs-Admitted-ToBeAdded-SqNBModAck-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPpresent ::= SEQUENCE {
    s1-DL-GTPtunnelEndpoint
                                          GTPtunnelEndpoint,
    sgNB-UL-GTP-TEIDatPDCP
                                          GTPtunnelEndpoint
                                                                                                                              OPTIONAL.
-- This IE shall be present if MCG resource IE in the EN-DC Resource Configuration IE are set to "present" --
   rlc-Mode
                                              RLCMode
                                                                                                                                 OPTIONAL,
-- This IE shall be present if MCG resource IE in the EN-DC Resource Configuration IE are set to "present" --
   dL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
                                                                                                                              OPTIONAL,
   uL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
                                                                                                                              OPTIONAL,
   mCG-E-RAB-Level-OoS-Parameters
                                          E-RAB-Level-OoS-Parameters
                                                                                                                              OPTIONAL,
-- This IE shall be present if MCG resource and SCG resource IEs in the EN-DC Resource Configuration IE are set to "present" and the GBR OoS
Information IE is present in the Requested MCG E-RAB Level QoS Parameters IE --
    uL-Configuration
                                          ULConfiguration
                                                                                                                                 OPTIONAL.
-- This IE shall be present if MCG resource and SCG resources IEs in the EN-DC Resource Configuration IE are set to "present" --
                                  ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-SgNBModAck-Item-SgNBPDCPpresentExtIEs} }
   iE-Extensions
                                                                                                                                   OPTIONAL,
    . . .
E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-uLpDCPSnLength
                                                  CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                       PRESENCE optional }
    { ID id-dLPDCPSnLength
                                                  CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                       PRESENCE optional },
E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPnotpresent ::= SEQUENCE {
```

```
sqNB-DL-GTP-TEIDatSCG
                                            GTPtunnelEndpoint,
    secondary-sqNB-DL-GTP-TEIDatSCG
                                            GTPtunnelEndpoint
                                                                         OPTIONAL.
    iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPnotpresentExtIEs} } OPTIONAL,
E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    {ID id-lCID
                            CRITICALITY ignore EXTENSION LCID
                                                                     PRESENCE optional }.
    . . .
E-RABs-Admitted-ToBeModified-SqNBModAckList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeModified-
SgNBModAck-ItemIEs } }
E-RABs-Admitted-ToBeModified-SqNBModAck-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-Admitted-ToBeModified-SgNBModAck-Item
                                                                CRITICALITY ignore TYPE E-RABs-Admitted-ToBeModified-SqnBModAck-Item PRESENCE
mandatory}
E-RABs-Admitted-ToBeModified-SqNBModAck-Item ::= SEQUENCE {
    e-RAB-TD
                                            E-RAB-ID,
    en-DC-ResourceConfiguration
                                        EN-DC-ResourceConfiguration,
    resource-configuration
                                        CHOICE {
        sgNBPDCPpresent
                                            E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPpresent,
        sqNBPDCPnotpresent
                                            E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPnotpresent,
        . . .
    iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBModAck-ItemExtIEs} } 
                                                                                                               OPTIONAL,
E-RABs-ToBeAdded-SqNBModAck-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPpresent ::= SEQUENCE {
    s1-DL-GTPtunnelEndpoint
                                            GTPtunnelEndpoint
                                                                                                                                       OPTIONAL,
                                            GTPtunnelEndpoint
    sqNB-UL-GTP-TEIDatPDCP
                                                                                                                                       OPTIONAL,
                                            E-RAB-Level-OoS-Parameters
    mCG-E-RAB-Level-OoS-Parameters
                                                                                                                                       OPTIONAL,
    uL-Configuration
                                                ULConfiguration
                                                                                                                                          OPTIONAL,
                                    ProtocolExtensionContainer { {E-RABs-Admitted-ToBeModified-SgNBModAck-Item-SgNBPDCPpresentExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      ID id-uLpDCPSnLength
                                                    CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                            PRESENCE optional }
    { ID id-dLPDCPSnLength
                                                     CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                            PRESENCE optional }.
    . . .
E-RABs-Admitted-ToBeModified-SgNBModAck-Item-SgNBPDCPnotpresent ::= SEQUENCE {
    sqNB-DL-GTP-TEIDatSCG
                                            GTPtunnelEndpoint
    OPTIONAL,
```

```
ProtocolExtensionContainer { {E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPnotpresentExtIEs} }
        iE-Extensions
        OPTIONAL.
E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
            ID id-secondarysqNBDLGTPTEIDatPDCP
                                                                                                                CRITICALITY ignore EXTENSION GTPtunnelEndpoint
                                                                                                                                                                                                                                            PRESENCE optional } |
         { ID id-RLC-Status
                                                                                                                CRITICALITY ignore
                                                                                                                                                                            EXTENSION RLC-Status
                                                                                                                                                                                                                                            PRESENCE optional },
E-RABs-Admitted-ToBeReleased-SqNBModAckList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeReleased-
SgNBModAck-ItemIEs } }
E-RABs-Admitted-ToBeReleased-SqNBModAck-ItemIEs X2AP-PROTOCOL-IES ::= {
         { ID id-E-RABs-Admitted-ToBeReleased-SgNBModAck-Item
                                                                                                                                         CRITICALITY ignore TYPE E-RABs-Admitted-ToReleased-SqNBModAck-Item
                                                                                                                                                                                                                                                                                                     PRESENCE
mandatory}
E-RABs-Admitted-ToReleased-SqNBModAck-Item ::= SEQUENCE {
         e-RAB-TD
                                                                                     E-RAB-ID,
         en-DC-ResourceConfiguration
                                                                                     EN-DC-ResourceConfiguration,
        resource-configuration
                                                                                     CHOICE {
                 sgNBPDCPpresent
                                                                                              E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPpresent.
                 sqNBPDCPnotpresent
                                                                                              E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPnotpresent,
         iE-Extensions
                                                                             ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBModAck-ItemExtIEs} }
                                                                                                                                                                                                                                                OPTIONAL,
E-RABs-ToBeReleased-SqNBModAck-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPpresent ::= SEQUENCE {
                                                                    ProtocolExtensionContainer { {E-RABs-Admitted-ToBeReleased-SgNBModAck-Item-SgNBPDCPpresentExtIEs} }
        iE-Extensions
                                                                                                                                                                                                                                                                                                     OPTIONAL,
         . . .
 \texttt{E-RABs-Admitted-ToBeReleased-SgNBModAck-Item-SgNBPDCPpresentExtIES} \ \ \texttt{X2AP-PROTOCOL-EXTENSION} \ ::= \ \{ \texttt{E-RABs-Admitted-ToBeReleased-SgNBModAck-Item-SgNBPDCPpresentExtIES} \ \ \texttt{Admitted-ToBeReleased-SgNBModAck-Item-SgNBPDCPpresentExtIES} \ \ \ \texttt{Admitted-ToBeReleased-SgNBModAck-Item-SgNBPDCPpre
E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPnotpresent ::= SEOUENCE {
        iE-Extensions
                                                                    ProtocolExtensionContainer { {E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPnotpresentExtIEs} } OPTIONAL,
         . . .
E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
__ **********************
-- SGNB MODIFICATION REQUEST REJECT
   ****************
SqNBModificationRequestReject ::= SEOUENCE {
   protocolIEs
                   ProtocolIE-Container
                                          {{SqNBModificationRequestReject-IEs}},
SqNBModificationRequestReject-IES X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                              CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                              PRESENCE mandatory |
     ID id-SqNB-UE-X2AP-ID
                                              CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                                PRESENCE mandatory}
                                                                                              PRESENCE mandatory}
     ID id-Cause
                                              CRITICALITY ignore TYPE Cause
     ID id-CriticalityDiagnostics
                                              CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional |
                                                                                              PRESENCE optional },
     ID id-MeNB-UE-X2AP-ID-Extension
                                              CRITICALITY ignore TYPE UE-X2AP-ID-Extension
-- SGNB MODIFICATION REOUIRED
SqNBModificationRequired ::= SEOUENCE {
                  ProtocolIE-Container
                                              {{SqNBModificationRequired-IEs}},
   protocolIEs
SgNBModificationRequired-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                  CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                               PRESENCE mandatory } |
     ID id-SqNB-UE-X2AP-ID
                                                  CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                                                  PRESENCE mandatory}
     ID id-Cause
                                                  CRITICALITY ignore TYPE Cause
                                                                                                               PRESENCE mandatory |
     ID id-PDCPChangeIndication
                                                      CRITICALITY ignore TYPE PDCPChangeIndication
                                                                                                                     PRESENCE optional |
                                                                                                               PRESENCE optional } |
     ID id-E-RABs-ToBeReleased-SqNBModRegdList
                                                  CRITICALITY ignore TYPE E-RABs-ToBeReleased-SqNBModRegdList
     ID id-SqNBtoMeNBContainer
                                                  CRITICALITY ignore TYPE SqNBtoMeNBContainer
                                                                                                                  PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                  CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                               PRESENCE optional } |
                                                                                                               PRESENCE optional }
     ID id-E-RABs-ToBeModified-SgNBModReqdList
                                                  CRITICALITY ignore TYPE E-RABs-ToBeModified-SgNBModReqdList
     ID id-SqNBResourceCoordinationInformation
                                                  CRITICALITY ignore TYPE SgNBResourceCoordinationInformation
                                                                                                               PRESENCE optional }
     ID id-RRCConfigIndication
                                                  CRITICALITY reject TYPE RRC-Config-Ind
                                                                                                               PRESENCE optional }
    { ID id-LocationInformationSqNB
                                                  CRITICALITY ignore TYPE LocationInformationSgNB
                                                                                                               PRESENCE optional },
E-RABs-ToBeReleased-SqNBModReqdList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-SqNBModReqd-
ItemIEs} }
E-RABs-ToBeReleased-SqNBModReqd-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-SgNBModReqd-Item
                                                  CRITICALITY ignore
                                                                         TYPE E-RABs-ToBeReleased-SgNBModReqd-Item
                                                                                                                     PRESENCE mandatory },
    . . .
```

```
E-RABs-ToBeReleased-SqNBModRegd-Item ::= SEQUENCE {
    e-RAB-ID
                                        E-RAB-ID.
    cause
                                    Cause.
                                    ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBModRegd-ItemExtIEs} } OPTIONAL,
    iE-Extensions
E-RABs-ToBeReleased-SqNBModReqd-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    { ID id-RLCMode-transferred
                                                CRITICALITY ignore EXTENSION RLCMode
                                                                                                      PRESENCE optional },
    . . .
E-RABs-ToBeModified-SqNBModRegdList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeModified-SqNBModRegd-
ItemIEs} }
E-RABs-ToBeModified-SqNBModReqd-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeModified-SqNBModRegd-Item
                                                     CRITICALITY ignore
                                                                            TYPE E-RABs-ToBeModified-SqNBModRegd-Item
                                                                                                                           PRESENCE mandatory },
    . . .
E-RABs-ToBeModified-SqNBModRegd-Item ::= SEQUENCE {
    e-RAB-ID
                                            E-RAB-ID,
    en-DC-ResourceConfiguration
                                        EN-DC-ResourceConfiguration,
    resource-configuration
                                        CHOICE {
                                            E-RABs-ToBeModified-SqNBModRegd-Item-SqNBPDCPpresent,
        sqNBPDCPpresent
       sqNBPDCPnotpresent
                                            E-RABs-ToBeModified-SqNBModRegd-Item-SqNBPDCPnotpresent,
    iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeModified-SqNBModReqd-ItemExtIEs} } OPTIONAL,
E-RABs-ToBeModified-SqNBModRead-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeModified-SgNBModReqd-Item-SgNBPDCPpresent ::= SEQUENCE {
    requested-MCG-E-RAB-Level-OoS-Parameters
                                                    E-RAB-Level-OoS-Parameters
                                                                                                                        OPTIONAL,
    uL-Configuration
                                                    ULConfiguration
                                                                                                                        OPTIONAL,
    sgNB-UL-GTP-TEIDatPDCP
                                                GTPtunnelEndpoint
                                                                                                                     OPTIONAL,
    s1-DL-GTP-TEIDatSgNB
                                                    GTPtunnelEndpoint
                                                                                                                        OPTIONAL,
                                ProtocolExtensionContainer { {E-RABs-ToBeModified-SgNBModReqd-Item-SgNBPDCPpresentExtIEs} }
    iE-Extensions
                                                                                                                                 OPTIONAL,
    . . .
E-RABs-ToBeModified-SqNBModReqd-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-uLpDCPSnLength
                                                    CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                            PRESENCE optional }
                                                                                                            PRESENCE optional }
      ID id-dLPDCPSnLength
                                                    CRITICALITY ignore EXTENSION PDCPSnLength
     ID id-new-drb-ID-reg
                                                                                                            PRESENCE optional },
                                                    CRITICALITY ignore EXTENSION NewDRBIDrequest
    . . .
```

```
E-RABs-ToBeModified-SqNBModReqd-Item-SqNBPDCPnotpresent ::= SEQUENCE {
    sgNB-DL-GTP-TEIDatSCG
                                      GTPt.unnelEndpoint
                                                                     OPTIONAL.
    secondary-sqNB-DL-GTP-TEIDatSCG
                                      GTPt.unnelEndpoint
                                                                     OPTIONAL.
   iE-Extensions
                              ProtocolExtensionContainer { {E-RABs-ToBeModified-SqNBModReqd-Item-SqNBPDCPnotpresentExtIEs} }
                                                                                                                             OPTIONAL.
E-RABs-ToBeModified-SqNBModRead-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-RLC-Status
                              CRITICALITY ignore
                                                         EXTENSION RLC-Status
                                                                                            PRESENCE optional } |
                              CRITICALITY ignore
                                                                                            PRESENCE optional }.
     ID id-lCID
                                                         EXTENSION LCID
   ****************
-- SGNB MODIFICATION CONFIRM
   SgNBModificationConfirm ::= SEQUENCE {
                                          {{SgNBModificationConfirm-IEs}},
   protocolIEs
                  ProtocolIE-Container
SqNBModificationConfirm-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                                                          PRESENCE mandatory } |
                                                      CRITICALITY ignore TYPE UE-X2AP-ID
     ID id-SqNB-UE-X2AP-ID
                                                      CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                                                             PRESENCE
mandatory}
     ID id-E-RABs-AdmittedToBeModified-SgNBModConfList CRITICALITY ignore TYPE E-RABs-AdmittedToBeModified-SgNBModConfList
                                                                                                                          PRESENCE optional }
     ID id-MeNBtoSgNBContainer
                                                     CRITICALITY ignore TYPE MeNBtoSqNBContainer
                                                                                                                          PRESENCE optional}
     ID id-CriticalityDiagnostics
                                                      CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                          PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                      CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                          PRESENCE optional }
     ID id-MeNBResourceCoordinationInformation
                                                     CRITICALITY ignore TYPE MeNBResourceCoordinationInformation
                                                                                                                          PRESENCE optional },
E-RABs-AdmittedToBeModified-SqNBModConfList ::= SEOUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container
    { {E-RABs-AdmittedToBeModified-SqNBModConf-ItemIEs} }
E-RABs-AdmittedToBeModified-SqNBModConf-ItemIEs X2AP-PROTOCOL-IES ::= {
{ ID id-E-RABs-AdmittedToBeModified-SqNBModConf-Item
                                                   CRITICALITY ignore TYPE E-RABs-AdmittedToBeModified-SqNBModConf-Item
                                                                                                                           PRESENCE
mandatory },
    . . .
E-RABs-AdmittedToBeModified-SqNBModConf-Item ::= SEOUENCE
   e-RAB-ID
                                          E-RAB-ID,
                                      EN-DC-ResourceConfiguration,
    en-DC-ResourceConfiguration
   resource-configuration
                                      CHOICE {
       sqNBPDCPpresent
                                          E-RABs-AdmittedToBeModified-SgNBModConf-Item-SgNBPDCPpresent,
       sqNBPDCPnotpresent
                                          E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPnotpresent,
```

```
ProtocolExtensionContainer { {E-RABs-AdmittedToBeModified-SqNBModConf-ItemExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-AdmittedToBeModified-SqNBModConf-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPpresent ::= SEQUENCE {
                             ProtocolExtensionContainer { {E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPpresentExtIEs} }
   iE-Extensions
                                                                                                                             OPTIONAL,
E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPnotpresent ::= SEQUENCE {
   secondary-meNB-UL-GTP-TEIDatPDCP
                                               GTPtunnelEndpoint
                             ProtocolExtensionContainer { {E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPnotpresentExtIEs} }
   iE-Extensions
   OPTIONAL,
   . . .
E-RABs-AdmittedToBeModified-SgNBModConf-Item-SgNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-uLpDCPSnLength
                                               CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                 PRESENCE optional }
    { ID id-dLPDCPSnLength
                                               CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                 PRESENCE optional }
  -- SGNB MODIFICATION REFUSE
  ····
SgNBModificationRefuse ::= SEQUENCE {
                                            {{SqNBModificationRefuse-IEs}},
   protocolIEs
               ProtocolIE-Container
SgNBModificationRefuse-IEs X2AP-PROTOCOL-IES ::= {
                                                                                         PRESENCE mandatory } |
     ID id-MeNB-UE-X2AP-ID
                                           CRITICALITY ignore TYPE UE-X2AP-ID
     ID id-SgNB-UE-X2AP-ID
                                                                                           PRESENCE mandatory }
                                           CRITICALITY ignore TYPE SgNB-UE-X2AP-ID
     ID id-Cause
                                                                                         PRESENCE mandatory |
                                           CRITICALITY ignore TYPE Cause
     ID id-MeNBtoSgNBContainer
                                           CRITICALITY ignore TYPE MeNBtoSgNBContainer
                                                                                           PRESENCE optional } |
     ID id-CriticalityDiagnostics
                                           CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional |
    ID id-MeNB-UE-X2AP-ID-Extension
                                           CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                         PRESENCE optional },
  *****************
-- SGNB RELEASE REQUEST
```

```
SqNBReleaseRequest ::= SEQUENCE {
    protocolIEs
                   ProtocolIE-Container
                                                {{SqNBReleaseRequest-IEs}},
SgNBReleaseRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                    CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                   PRESENCE mandatory}
     ID id-SgNB-UE-X2AP-ID
                                                                                                                      PRESENCE optional }
                                                    CRITICALITY reject TYPE SgNB-UE-X2AP-ID
     ID id-Cause
                                                    CRITICALITY ignore TYPE Cause
                                                                                                                   PRESENCE mandatory |
                                                                                                                   PRESENCE optional }
     ID id-E-RABs-ToBeReleased-SgNBRelRegList
                                                    CRITICALITY ignore TYPE E-RABs-ToBeReleased-SqNBRelReqList
     ID id-UE-ContextKeptIndicator
                                                    CRITICALITY ignore TYPE UE-ContextKeptIndicator
                                                                                                                   PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                    CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                   PRESENCE optional }
     ID id-MeNBtoSqNBContainer
                                                    CRITICALITY reject TYPE MeNBtoSqNBContainer
                                                                                                                      PRESENCE optional } |
                                                                                                                   PRESENCE optional },
     ID id-ERABs-transferred-to-MeNB
                                                    CRITICALITY ignore TYPE E-RAB-List
E-RABs-ToBeReleased-SqNBRelReqList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-SqNBRelReq-
ItemIEs} }
E-RABs-ToBeReleased-SqNBRelReq-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-SqNBRelReq-Item
                                                CRITICALITY ignore TYPE E-RABs-ToBeReleased-SgNBRelReq-Item PRESENCE mandatory },
    . . .
E-RABs-ToBeReleased-SqNBRelReq-Item ::= SEQUENCE {
    e-RAB-ID
                                       E-RAB-ID,
    en-DC-ResourceConfiguration
                                       EN-DC-ResourceConfiguration,
    resource-configuration
                                       CHOICE {
       sgNBPDCPpresent
                                            E-RABs-ToBeReleased-SqNBRelReq-Item-SqNBPDCPpresent,
       sgNBPDCPnotpresent
                                           E-RABs-ToBeReleased-SqNBRelReq-Item-SqNBPDCPnotpresent,
                                    ProtocolExtensionContainer { {E-RABs-ToBeReleased-SgNBRelReq-ItemExtIEs} } OPTIONAL,
    iE-Extensions
E-RABs-ToBeReleased-SgNBRelReq-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SqNBRelReq-Item-SqNBPDCPpresent ::= SEQUENCE
    uL-GTPtunnelEndpoint
                                   GTPtunnelEndpoint
                                                                                                                OPTIONAL,
                                                                                                                         OPTIONAL,
    dL-GTPtunnelEndpoint
                                   GTPtunnelEndpoint
   iE-Extensions
                                   ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBRelReq-Item-SqNBPDCPpresentExtIEs} } OPTIONAL,
    . . .
E-RABs-ToBeReleased-SgNBRelReq-Item-SgNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
E-RABs-ToBeReleased-SqNBRelReq-Item-SqNBPDCPnotpresent ::= SEQUENCE {
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBRelReq-Item-SqNBPDCPnotpresentExtIEs} } OPTIONAL,
E-RABs-ToBeReleased-SqnBRelReq-Item-SqnBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  *****************
-- SGNB RELEASE REQUEST ACKNOWLEDGE
   ************************
SqNBReleaseRequestAcknowledge ::= SEQUENCE {
   protocolIEs
                   ProtocolIE-Container
                                             {{SqNBReleaseRequestAcknowledge-IEs}},
SqNBReleaseRequestAcknowledge-IES X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                         CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                       PRESENCE mandatory }
     ID id-SgNB-UE-X2AP-ID
                                                         CRITICALITY ignore TYPE SgNB-UE-X2AP-ID
                                                                                                                       PRESENCE mandatory }
     ID id-CriticalityDiagnostics
                                                         CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                       PRESENCE optional
     ID id-MeNB-UE-X2AP-ID-Extension
                                                         CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                       PRESENCE optional }
     ID id-E-RABs-Admitted-ToBeReleased-SqNBRelReqAckList CRITICALITY ignore TYPE E-RABs-Admitted-ToBeReleased-SqNBRelReqAckList PRESENCE
optional },
E-RABs-Admitted-ToBeReleased-SqNBRelReqAckList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF
                                      ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeReleased-SqNBRelRegAck-ItemIEs} }
E-RABs-Admitted-ToBeReleased-SqNBRelReqAck-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-Admitted-ToBeReleased-SgNBRelReqAck-Item CRITICALITY ignore TYPE E-RABs-Admitted-ToBeReleased-SgNBRelReqAck-Item
                                                                                                                                  PRESENCE
mandatory \},
E-RABs-Admitted-ToBeReleased-SgNBRelReqAck-Item ::= SEQUENCE {
                                      E-RAB-ID,
   e-RAB-ID
   rlc-Mode-transferred
                                  RLCMode,
                                  ProtocolExtensionContainer { {E-RABs-Admitted-ToBeReleased-SqNBRelRegAck-ItemExtIEs} } OPTIONAL.
   iE-Extensions
E-RABs-Admitted-ToBeReleased-SqNBRelReqAck-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
-- SGNB RELEASE REQUEST REJECT
SqNBReleaseRequestReject ::= SEQUENCE {
   protocolIEs ProtocolIE-Container
                                              {{SqNBReleaseRequestReject-IEs}},
SgNBReleaseRequestReject-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                  CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                               PRESENCE mandatory } |
     ID id-SgNB-UE-X2AP-ID
                                                  CRITICALITY ignore TYPE SgNB-UE-X2AP-ID
                                                                                                                  PRESENCE mandatory}
     ID id-Cause
                                                  CRITICALITY ignore TYPE Cause
                                                                                                               PRESENCE mandatory |
     ID id-CriticalityDiagnostics
                                                  CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                               PRESENCE optional } |
    ID id-MeNB-UE-X2AP-ID-Extension
                                                  CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                               PRESENCE optional },
-- SGNB RELEASE REOUIRED
  ****************
SqNBReleaseRequired ::= SEOUENCE {
   protocolIEs
                ProtocolIE-Container
                                          {{SqNBReleaseRequired-IEs}},
SgNBReleaseRequired-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                  CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                  PRESENCE mandatory}
     ID id-SgNB-UE-X2AP-ID
                                                  CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                                                     PRESENCE mandatory } |
     ID id-Cause
                                                  CRITICALITY ignore TYPE Cause
                                                                                                                  PRESENCE mandatory}
     ID id-MeNB-UE-X2AP-ID-Extension
                                                  CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                  PRESENCE optional }
     ID id-E-RABs-ToBeReleased-SqNBRelReqdList CRITICALITY ignore TYPE E-RABs-ToBeReleased-SqNBRelReqdList
                                                                                                                  PRESENCE optional }
                                                 CRITICALITY ignore TYPE SgNBtoMeNBContainer
                                                                                                                  PRESENCE optional },
    { ID id-SqNBtoMeNBContainer
E-RABs-ToBeReleased-SqNBRelRegdList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-SqNBRelRegd-
ItemIEs} }
E-RABs-ToBeReleased-SgNBRelReqd-ItemIEs X2AP-PROTOCOL-IES ::= {
   { ID id-E-RABs-ToBeReleased-SqNBRelRegd-Item
                                                CRITICALITY ignore TYPE E-RABs-ToBeReleased-SgNBRelReqd-Item
                                                                                                                     PRESENCE mandatory },
    . . .
E-RABs-ToBeReleased-SgNBRelRegd-Item ::= SEQUENCE {
   e-RAB-ID
                                      E-RAB-ID,
   rlc-Mode-transferred
                                  RLCMode,
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBRelRegd-ItemExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
```

```
E-RABs-ToBeReleased-SqNBRelReqd-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
   ****************
-- SGNB RELEASE CONFIRM
SgNBReleaseConfirm ::= SEQUENCE {
                                           {{SgNBReleaseConfirm-IEs}},
   protocolIEs
                   ProtocolIE-Container
SqNBReleaseConfirm-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                   CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                 PRESENCE mandatory }
     ID id-SqNB-UE-X2AP-ID
                                                   CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                                                    PRESENCE mandatory}
                                                                                                                 PRESENCE optional }
     ID id-E-RABs-ToBeReleased-SqNBRelConfList
                                                   CRITICALITY ignore TYPE E-RABs-ToBeReleased-SqNBRelConfList
     ID id-CriticalityDiagnostics
                                                   CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                 PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                   CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                 PRESENCE optional },
    . . .
E-RABs-ToBeReleased-SgNBRelConfList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-SgNBRelConf-
ItemIEs} }
E-RABs-ToBeReleased-SqNBRelConf-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-SqNBRelConf-Item
                                                      CRITICALITY ignore
                                                                              TYPE E-RABs-ToBeReleased-SqNBRelConf-Item
                                                                                                                         PRESENCE mandatory }
E-RABs-ToBeReleased-SqNBRelConf-Item ::= SEQUENCE {
   e-RAB-ID
                                       E-RAB-ID,
   en-DC-ResourceConfiguration
                                       EN-DC-ResourceConfiguration,
   resource-configuration
                                       CHOICE {
       sgNBPDCPpresent
                                           E-RABs-ToBeReleased-SgNBRelConf-Item-SgNBPDCPpresent,
       sqNBPDCPnotpresent
                                           E-RABs-ToBeReleased-SqNBRelConf-Item-SqNBPDCPnotpresent,
                                   ProtocolExtensionContainer { {E-RABs-ToBeReleased-SgNBRelConf-ItemExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-ToBeReleased-SqNBRelConf-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SqNBRelConf-Item-SqNBPDCPpresent ::= SEQUENCE {
   uL-GTPtunnelEndpoint
                                   GTPtunnelEndpoint
                                                                                                                       OPTIONAL,
   dL-GTPtunnelEndpoint
                                   GTPtunnelEndpoint
                                                                                                                       OPTIONAL,
   iE-Extensions
                                   ProtocolExtensionContainer { {E-RABs-ToBeReleased-SgNBRelConf-Item-SgNBPDCPpresentExtIEs} } OPTIONAL,
```

```
E-RABs-ToBeReleased-SqNBRelConf-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SqNBRelConf-Item-SqNBPDCPnotpresent ::= SEOUENCE {
   iE-Extensions
                              ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBRelConf-Item-SqNBPDCPnotpresentExtIEs} }
                                                                                                                  OPTIONAL.
   . . .
E-RABs-ToBeReleased-SqNBRelConf-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     -- SGNB COUNTER CHECK REQUEST
__ *********************
SgNBCounterCheckRequest ::= SEQUENCE {
   protocolIEs
                ProtocolIE-Container
                                     {{SgNBCounterCheckRequest-IEs}},
   . . .
SqNBCounterCheckRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                               CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                        PRESENCE mandatory } |
     ID id-SqNB-UE-X2AP-ID
                                               CRITICALITY reject TYPE SqNB-UE-X2AP-ID
                                                                                                          PRESENCE mandatory |
    ID id-E-RABs-SubjectToSgNBCounterCheck-List
                                                                                                        PRESENCE mandatory } |
                                               CRITICALITY ignore TYPE E-RABs-SubjectToSgNBCounterCheck-List
   { ID id-MeNB-UE-X2AP-ID-Extension
                                                CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                        PRESENCE optional },
E-RABs-SubjectToSqNBCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-SubjectToSqNBCounterCheck-
ItemIEs} }
E-RABs-SubjectToSgNBCounterCheck-ItemIEs X2AP-PROTOCOL-IES ::= {
   E-RABs-SubjectToSgNBCounterCheck-Item ::= SEQUENCE {
   e-RAB-ID
                              E-RAB-ID,
   uL-Count
                              INTEGER (0..4294967295),
   dL-Count
                              INTEGER (0..4294967295),
   iE-Extensions
                              ProtocolExtensionContainer { {E-RABs-SubjectToSqNBCounterCheck-ItemExtIEs} } OPTIONAL,
E-RABs-SubjectToSqNBCounterCheck-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
__ ************************
```

```
-- SGNB CHANGE REQUIRED
__ ********************
SqNBChangeRequired ::= SEQUENCE {
   protocolIEs
                   ProtocolIE-Container
                                              {{SqNBChangeRequired-IEs}},
SgNBChangeRequired-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                              CRITICALITY reject TYPE UE-X2AP-ID
                                                                                              PRESENCE mandatory } |
                                                                                                PRESENCE mandatory}
     ID id-SgNB-UE-X2AP-ID
                                              CRITICALITY reject TYPE SgNB-UE-X2AP-ID
     ID id-Target-SgNB-ID
                                              CRITICALITY reject TYPE GlobalGNB-ID
                                                                                              PRESENCE mandatory}
     ID id-Cause
                                                                                              PRESENCE mandatory }
                                              CRITICALITY ignore TYPE Cause
     ID id-SqNBtoMeNBContainer
                                              CRITICALITY reject TYPE SqNBtoMeNBContainer
                                                                                               PRESENCE optional } |
     ID id-MeNB-UE-X2AP-ID-Extension
                                                                                              PRESENCE optional },
                                              CRITICALITY reject TYPE UE-X2AP-ID-Extension
-- SGNB CHANGE CONFIRM
__ **********************
SgNBChangeConfirm ::= SEQUENCE {
   protocolIEs
                   ProtocolIE-Container
                                          {{SqNBChangeConfirm-IEs}},
SgNBChangeConfirm-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                  CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                               PRESENCE mandatory}
                                                                                                                 PRESENCE mandatory}
     ID id-SgNB-UE-X2AP-ID
                                                  CRITICALITY ignore TYPE SgNB-UE-X2AP-ID
     ID id-E-RABs-ToBeReleased-SgNBChaConfList
                                                 CRITICALITY ignore TYPE E-RABs-ToBeReleased-SqNBChaConfList
                                                                                                              PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                 CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                               PRESENCE optional }
    { ID id-MeNB-UE-X2AP-ID-Extension
                                                  CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                               PRESENCE optional },
    . . .
E-RABs-ToBeReleased-SgNBChaConfList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-SgNBChaConf-
ItemIEs} }
E-RABs-ToBeReleased-SgNBChaConf-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-SgNBChaConf-Item
                                                CRITICALITY ignore
                                                                            TYPE E-RABs-ToBeReleased-SqNBChaConf-Item PRESENCE mandatory .
E-RABs-ToBeReleased-SgNBChaConf-Item ::= SEQUENCE {
   e-RAB-ID
                                      E-RAB-ID,
   en-DC-ResourceConfiguration
                                      EN-DC-ResourceConfiguration,
   resource-configuration
                                      CHOICE {
       sgNBPDCPpresent
                                          E-RABs-ToBeReleased-SgNBChaConf-Item-SgNBPDCPpresent,
                                          E-RABs-ToBeReleased-SgNBChaConf-Item-SgNBPDCPnotpresent,
       sgNBPDCPnotpresent
```

```
iE-Extensions
                                ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBChaConf-ItemExtIEs} } OPTIONAL,
E-RABs-ToBeReleased-SqNBChaConf-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SqNBChaConf-Item-SqNBPDCPpresent ::= SEQUENCE {
   uL-GTPtunnelEndpoint
                                GTPtunnelEndpoint
                                                                                                               OPTIONAL,
   dL-GTPtunnelEndpoint
                                GTPtunnelEndpoint
                                                                                                               OPTIONAL,
   iE-Extensions
                                ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBChaConf-Item-SqNBPDCPpresentExtIEs} } OPTIONAL,
E-RABs-ToBeReleased-SqNBChaConf-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SqNBChaConf-Item-SqNBPDCPnotpresent ::= SEQUENCE {
                                ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBChaConf-Item-SqNBPDCPnotpresentExtIEs} }
   iE-Extensions
                                                                                                                         OPTIONAL,
   . . .
E-RABs-ToBeReleased-SqNBChaConf-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  -- RRC TRANSFER
  RRCTransfer ::= SEQUENCE {
                                           {{RRCTransfer-IEs}},
   protocolIEs ProtocolIE-Container
RRCTransfer-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                           CRITICALITY reject TYPE UE-X2AP-ID
                                                                                         PRESENCE mandatory } |
     ID id-SgNB-UE-X2AP-ID
                                                                                            PRESENCE mandatory }
                                           CRITICALITY reject TYPE SgNB-UE-X2AP-ID
     ID id-SplitSRB
                                                                                            PRESENCE optional |
                                               CRITICALITY reject TYPE SplitSRB
     ID id-NRUeReport
                                           CRITICALITY reject TYPE NRUeReport
                                                                                         PRESENCE optional |
    { ID id-MeNB-UE-X2AP-ID-Extension
                                           CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                         PRESENCE optional },
-- SGNB CHANGE REFUSE
```

```
__ *********************
SqNBChangeRefuse ::= SEOUENCE {
   protocolIEs
                  ProtocolIE-Container
                                            {{SqNBChangeRefuse-IEs}},
   . . .
SqNBChangeRefuse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                            CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                          PRESENCE mandatory |
     ID id-SaNB-UE-X2AP-ID
                                                                                            PRESENCE mandatory}
                                            CRITICALITY ignore TYPE SgNB-UE-X2AP-ID
     ID id-Cause
                                            CRITICALITY ignore TYPE Cause
                                                                                          PRESENCE mandatory } |
                                            CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional |
     ID id-CriticalityDiagnostics
    ID id-MeNB-UE-X2AP-ID-Extension
                                            CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                          PRESENCE optional }.
    -- EN-DC X2 SETUP REQUEST
  ENDCX2SetupRequest ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        {{ENDCX2SetupRequest-IEs}},
ENDCX2SetupRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-InitiatingNodeType-EndcX2Setup
                                               CRITICALITY reject TYPE InitiatingNodeType-EndcX2Setup
                                                                                                       PRESENCE mandatory } |
    { ID id-InterfaceInstanceIndication
                                               CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                       PRESENCE optional },
InitiatingNodeType-EndcX2Setup ::= CHOICE {
   init-eNB
                         ProtocolIE-Container
                                               {{ENB-ENDCX2SetupRegIEs}},
   init-en-qNB
                     ProtocolIE-Container
                                           {{En-gNB-ENDCX2SetupRegIEs}},
ENB-ENDCX2SetupRegIEs X2AP-PROTOCOL-IES ::= {
     ID id-GlobalENB-ID
                                                   CRITICALITY reject TYPE GlobalENB-ID
                                                                                                               PRESENCE mandatory }
     ID id-ServedEUTRAcellsENDCX2ManagementList
                                                   CRITICALITY reject TYPE ServedEUTRAcellsENDCX2ManagementList
                                                                                                               PRESENCE mandatory}
    { ID id-InterfaceInstanceIndication
                                               CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                             PRESENCE optional },
-- NOTE: In the current version of this specification the Interface Instance Indication IE is not included in the Initiating NodeType IE --
   . . .
ServedEUTRAcellsENDCX2ManagementList ::= SEQUENCE (SIZE (1.. maxCellineNB)) OF SEQUENCE {
   servedEUTRACellInfo
                                    ServedCell-Information,
   nrNeighbourInfo
                                    NRNeighbour-Information
                                                              OPTIONAL,
                                    ProtocolExtensionContainer { {ServedEUTRAcellsENDCX2Management-ExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
```

```
ServedEUTRAcellsENDCX2Management-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
En-qNB-ENDCX2SetupRegIEs X2AP-PROTOCOL-IES ::= {
     ID id-Globalen-qNB-ID
                                                    CRITICALITY reject TYPE GlobalGNB-ID
                                                                                                                        PRESENCE mandatory } |
     ID id-ServedNRcellsENDCX2ManagementList
                                                    CRITICALITY reject TYPE ServedNRcellsENDCX2ManagementList
                                                                                                                        PRESENCE mandatory },
    . . .
ServedNRcellsENDCX2ManagementList ::= SEQUENCE (SIZE (1.. maxCellinengNB)) OF SEQUENCE {
    servedNRCellInfo
                                            ServedNRCell-Information,
    nRNeighbourInfo
                                        NRNeighbour-Information OPTIONAL,
    iE-Extensions
                                        ProtocolExtensionContainer { {En-gNBServedCells-ExtIEs} } OPTIONAL,
En-qNBServedCells-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ServedNRCell-Information ::= SEQUENCE {
   nrpCI
                       NRPCI,
    nrCellID
                        NRCGI,
    fiveGS-TAC
                        FiveGS-TAC OPTIONAL,
    configured-TAC
                        TAC
                                    OPTIONAL,
    broadcastPLMNs
                        BroadcastPLMNs-Item,
    nrModeInfo
                        CHOICE {
        fdd
                FDD-InfoServedNRCell-Information,
                TDD-InfoServedNRCell-Information,
       tdd
    measurementTimingConfiguration OCTET STRING,
                                        ProtocolExtensionContainer { {ServedNRCell-Information-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
ServedNRCell-Information-ExtIES X2AP-PROTOCOL-EXTENSION ::= {
    {ID id-additionalPLMNs-Item
                                                                                                   PRESENCE optional } |
                                        CRITICALITY ignore EXTENSION AdditionalPLMNs-Item
    { ID id-BPLMN-ID-Info-NR
                                            CRITICALITY ignore EXTENSION BPLMN-ID-Info-NR
                                                                                                      PRESENCE optional },
    . . .
FDD-InfoServedNRCell-Information ::= SEQUENCE {
    ul-NRFregInfo
                                NRFregInfo,
   dl-NRFregInfo
                                NRFregInfo,
   ul-NR-TxBW
                           NR-TxBW,
    dl-NR-TxBW
                            NR-TxBW,
    iE-Extensions
                            ProtocolExtensionContainer { {FDD-InfoServedNRCell-Information-ExtIEs} }
                                                                                                         OPTIONAL,
    . . .
FDD-InfoServedNRCell-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
TDD-InfoServedNRCell-Information ::= SEQUENCE {
   nRFregInfo
                         NRFregInfo,
   nR-TxBW
                         NR-TxBW,
                         ProtocolExtensionContainer { {TDD-InfoServedNRCell-Information-ExtIEs} }
   iE-Extensions
                                                                                               OPTIONAL,
TDD-InfoServedNRCell-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CellAssistanceInformation ::= CHOICE {
   limited-list
                             Limited-list,
   full-list
                         ENUMERATED {allServedNRcells, ...},
    . . .
Limited-list
              ::= SEQUENCE (SIZE (1..maxCellinengNB)) OF SEQUENCE {
   nrCellID
                      NRCGI,
                                        ProtocolExtensionContainer { {Limited-list-ExtIEs} } OPTIONAL,
       iE-Extensions
   . . .
Limited-list-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
   -- EN-DC X2 SETUP RESPONSE
  ····
ENDCX2SetupResponse ::= SEQUENCE {
                                         {{ENDCX2SetupResponse-IEs}},
   protocolIEs
                  ProtocolIE-Container
ENDCX2SetupResponse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-RespondingNodeType-EndcX2Setup
                                            CRITICALITY reject TYPE RespondingNodeType-EndcX2Setup
                                                                                                  PRESENCE mandatory |
    { ID id-InterfaceInstanceIndication
                                            CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                  PRESENCE optional },
    . . .
RespondingNodeType-EndcX2Setup ::= CHOICE {
   respond-eNB
                      ProtocolIE-Container
                                            {{ENB-ENDCX2SetupRegAckIEs}},
                                            {{En-gNB-ENDCX2SetupReqAckIEs}},
   respond-en-qNB
                      ProtocolIE-Container
ENB-ENDCX2SetupReqAckIEs X2AP-PROTOCOL-IES ::= {
```

```
ID id-GlobalENB-ID
                                                   CRITICALITY reject TYPE GlobalENB-ID
                                                                                                               PRESENCE mandatory } |
     ID id-ServedEUTRAcellsENDCX2ManagementList
                                                   CRITICALITY reject TYPE ServedEUTRAcellsENDCX2ManagementList
                                                                                                               PRESENCE mandatory}
     ID id-InterfaceInstanceIndication
                                               CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                            PRESENCE optional }.
-- NOTE: In the current version of this specification the Interface Instance Indication IE is not included in the Responding NodeType IE --
En-gNB-ENDCX2SetupRegAckIEs X2AP-PROTOCOL-IES ::= {
     ID id-Globalen-gNB-ID
                                               CRITICALITY reject TYPE GlobalGNB-ID
                                                                                                            PRESENCE mandatory } |
    ID id-ServedNRcellsENDCX2ManagementList
                                               CRITICALITY reject TYPE ServedNRcellsENDCX2ManagementList
                                                                                                            PRESENCE mandatory },
  *****************
-- EN-DC X2 SETUP FAILURE
  ENDCX2SetupFailure ::= SEQUENCE {
                                        {{ENDCX2SetupFailure-IEs}},
   protocolIEs
                  ProtocolIE-Container
ENDCX2SetupFailure-IES X2AP-PROTOCOL-IES ::= {
     ID id-Cause
                                                                                              PRESENCE mandatory
                                        CRITICALITY ignore
                                                              TYPE Cause
     ID id-CriticalityDiagnostics
                                        CRITICALITY ignore
                                                              TYPE CriticalityDiagnostics
                                                                                              PRESENCE optional }
     ID id-TimeToWait
                                                                                              PRESENCE optional }
                                        CRITICALITY ignore
                                                              TYPE TimeToWait
                                                                                              PRESENCE optional },
    { ID id-InterfaceInstanceIndication
                                        CRITICALITY reject
                                                              TYPE InterfaceInstanceIndication
  *****************
-- EN-DC CONFIGURATION UPDATE
__ **********************
ENDCConfigurationUpdate ::= SEQUENCE {
                                        {{ENDCConfigurationUpdate-IEs}},
   protocolIEs
                  ProtocolIE-Container
   . . .
ENDCConfigurationUpdate-IEs X2AP-PROTOCOL-IES ::= {
     ID id-InitiatingNodeType-EndcConfigUpdate
                                                   CRITICALITY reject TYPE InitiatingNodeType-EndcConfigUpdate
                                                                                                                 PRESENCE mandatory}
    { ID id-InterfaceInstanceIndication
                                                   CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                                  PRESENCE optional },
InitiatingNodeType-EndcConfigUpdate::= CHOICE {
   init-eNB
                     ProtocolIE-Container
                                            {{ENB-ENDCConfigUpdateIEs}},
   init-en-gNB
                     ProtocolIE-Container
                                            {{En-gNB-ENDCConfigUpdateIEs}},
   . . .
```

```
ENB-ENDCConfigUpdateIEs X2AP-PROTOCOL-IES ::= {
     ID id-CellAssistanceInformation
                                                  CRITICALITY reject TYPE CellAssistanceInformation
                                                                                                                     PRESENCE optional } |
     ID id-ServedEUTRAcellsENDCX2ManagementList
                                                      CRITICALITY reject TYPE ServedEUTRAcellsENDCX2ManagementList
                                                                                                                        PRESENCE optional } |
     ID id-ServedEUTRAcellsToModifyListENDCConfUpd CRITICALITY reject TYPE ServedEUTRAcellsToModifyListENDCConfUpd
                                                                                                                     PRESENCE optional }
     ID id-ServedEUTRAcellsToDeleteListENDCConfUpd CRITICALITY reject TYPE ServedEUTRAcellsToDeleteListENDCConfUpd
                                                                                                                     PRESENCE optional },
ServedEUTRAcellsToModifyListENDCConfUpd ::= SEQUENCE (SIZE (1.. maxCellineNB)) OF SEQUENCE {
   old-ECGT
                                          ECGI,
   servedEUTRACellInfo
                                      ServedCell-Information,
   nrNeighbourInfo
                                      NRNeighbour-Information
                                                                  OPTIONAL.
   iE-Extensions
                                      ProtocolExtensionContainer { {ServedEUTRAcellsToModifyListENDCConfUpd-ExtIEs} } OPTIONAL,
ServedEUTRAcellsToModifyListENDCConfUpd-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ServedEUTRAcellsToDeleteListENDCConfUpd ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ECGI
En-gNB-ENDCConfigUpdateIEs X2AP-PROTOCOL-IES ::= {
     ID id-ServedNRcellsENDCX2ManagementList
                                                  CRITICALITY reject TYPE ServedNRcellsENDCX2ManagementList
                                                                                                                   PRESENCE optional }
     ID id-ServedNRcellsToModifyListENDCConfUpd
                                                      CRITICALITY reject TYPE ServedNRcellsToModifyENDCConfUpdList
                                                                                                                     PRESENCE optional } |
     ID id-ServedNRcellsToDeleteListENDCConfUpd
                                                      CRITICALITY reject TYPE ServedNRcellsToDeleteENDCConfUpdList
                                                                                                                     PRESENCE optional },
ServedNRcellsToModifyENDCConfUpdList ::= SEQUENCE (SIZE (1..maxCellinengNB)) OF ServedNRCellsToModify-Item
ServedNRCellsToModify-Item::= SEOUENCE {
   old-nrcgi
                                  NRCGI,
    servedNRCellInformation
                                  ServedNRCell-Information,
   nrNeighbourInformation
                                  NRNeighbour-Information
                                                                  OPTIONAL,
   nrDeactivationIndication
                                      DeactivationIndication
                                                                     OPTIONAL,
   iE-Extensions
                                  ProtocolExtensionContainer { {ServedNRCellsToModify-Item-ExtIEs} } OPTIONAL,
    . . .
ServedNRCellsToModify-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
ServedNRcellsToDeleteENDCConfUpdList ::= SEQUENCE (SIZE (1..maxCellinengNB)) OF NRCGI
__ *********************
-- EN-DC CONFIGURATION UPDATE ACKNOWLEDGE
__ **********************
```

```
ENDCConfigurationUpdateAcknowledge ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                         {{ENDCConfigurationUpdateAcknowledge-IEs}},
ENDCConfigurationUpdateAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
     ID id-RespondingNodeType-EndcConfigUpdate
                                                    CRITICALITY reject TYPE RespondingNodeType-EndcConfigUpdate
                                                                                                                     PRESENCE mandatory}
     ID id-InterfaceInstanceIndication
                                                    CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                                     PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                                                                                     PRESENCE optional },
                                                    CRITICALITY ignore TYPE CriticalityDiagnostics
RespondingNodeType-EndcConfigUpdate::= CHOICE {
   respond-eNB
                      ProtocolIE-Container
                                             {{ENB-ENDCConfigUpdateAckIEs}},
                                             {{En-qNB-ENDCConfigUpdateAckIEs}},
   respond-en-qNB
                      ProtocolIE-Container
ENB-ENDCConfigUpdateAckIEs X2AP-PROTOCOL-IES ::= {
En-gNB-ENDCConfigUpdateAckIEs X2AP-PROTOCOL-IES ::=
   { ID id-ServedNRcellsENDCX2ManagementList
                                                 CRITICALITY reject TYPE ServedNRcellsENDCX2ManagementList
                                                                                                            PRESENCE optional },
-- EN-DC CONFIGURATION UPDATE FAILURE
  ******************
ENDCConfigurationUpdateFailure ::= SEOUENCE
                  ProtocolIE-Container
                                         {{ENDCConfigurationUpdateFailure-IEs}},
   protocolIEs
   . . .
ENDCConfigurationUpdateFailure-IES X2AP-PROTOCOL-IES ::= {
     ID id-Cause
                                                                                            PRESENCE mandatory } |
                                         CRITICALITY ignore TYPE Cause
     ID id-CriticalityDiagnostics
                                         CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                            PRESENCE optional }
     ID id-TimeToWait
                                         CRITICALITY ignore TYPE TimeToWait
                                                                                            PRESENCE optional }
     ID id-InterfaceInstanceIndication
                                         CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                              PRESENCE optional },
  -- EN-DC CELL ACTIVATION REQUEST
```

```
ENDCCellActivationRequest ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        {{ENDCCellActivationRequest-IEs}},
ENDCCellActivationRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ServedNRCellsToActivate
                                        CRITICALITY reject TYPE ServedNRCellsToActivate
                                                                                                PRESENCE mandatory |
     ID id-ActivationID
                                        CRITICALITY reject TYPE ActivationID
                                                                                             PRESENCE mandatory } |
    { ID id-InterfaceInstanceIndication CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                             PRESENCE optional },
ServedNRCellsToActivate::= SEQUENCE (SIZE (1.. maxCellinenqNB)) OF ServedNRCellsToActivate-Item
ServedNRCellsToActivate-Item::= SEQUENCE {
   nrCellID
   iE-Extensions
                                 ProtocolExtensionContainer { {ServedNRCellsToActivate-Item-ExtIEs} } OPTIONAL,
ServedNRCellsToActivate-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- EN-DC CELL ACTIVATION RESPONSE
__ *********************
ENDCCellActivationResponse ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                         {{ENDCCellActivationResponse-IEs}},
   . . .
ENDCCellActivationResponse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ActivatedNRCellList
                                    CRITICALITY ignore TYPE ActivatedNRCellList
                                                                                          PRESENCE mandatory |
     ID id-ActivationID
                                        CRITICALITY reject TYPE ActivationID
                                                                                             PRESENCE mandatory |
     PRESENCE optional }
    { ID id-InterfaceInstanceIndication CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                          PRESENCE optional },
ActivatedNRCellList ::= SEQUENCE (SIZE (1.. maxCellinengNB)) OF ActivatedNRCellList-Item
ActivatedNRCellList-Item::= SEQUENCE {
   nrCellID
                                     ProtocolExtensionContainer { {ActivatedNRCellList-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
```

```
ActivatedNRCellList-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- EN-DC CELL ACTIVATION FAILURE
     ENDCCellActivationFailure ::= SEQUENCE {
   protocolIEs
                ProtocolIE-Container
                                     {{ENDCCellActivationFailure-IEs}},
ENDCCellActivationFailure-IEs X2AP-PROTOCOL-IES ::= {
    ID id-ActivationID
                                                                                     PRESENCE mandatory } |
                                        CRITICALITY reject TYPE ActivationID
    ID id-Cause
                                     CRITICALITY ignore TYPE Cause
                                                                                   PRESENCE mandatory }
    ID id-CriticalityDiagnostics
                                     CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                   PRESENCE optional }
   { ID id-InterfaceInstanceIndication
                                     CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                     PRESENCE optional },
  ******************
-- SECONDARY RAT DATA USAGE REPORT
  ******************
SecondaryRATDataUsageReport ::= SEQUENCE {
   protocolIEs
                ProtocolIE-Container
                                         {{SecondaryRATDataUsageReport-IEs}},
SecondaryRATDataUsageReport-IEs X2AP-PROTOCOL-IES ::= {
    ID id-MeNB-UE-X2AP-ID
                                       CRITICALITY reject TYPE UE-X2AP-ID
                                                                                           PRESENCE mandatory } |
    ID id-SgNB-UE-X2AP-ID
                                                                                             PRESENCE mandatory } |
                                        CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                           PRESENCE mandatory } |
     ID id-SecondaryRATUsageReportList
                                        CRITICALITY reject TYPE SecondaryRATUsageReportList
                                                                                           PRESENCE optional },
   { ID id-MeNB-UE-X2AP-ID-Extension
                                        CRITICALITY reject TYPE UE-X2AP-ID-Extension
   . . .
-- SGNB ACTIVITY NOTIFICATION
__ *******************
SgNBActivityNotification ::= SEQUENCE {
                                        {{SgNBActivityNotification-IEs}},
   protocolIEs
               ProtocolIE-Container
SgNBActivityNotification-IEs X2AP-PROTOCOL-IES ::= {
```

```
PRESENCE mandatory } |
     ID id-MeNB-UE-X2AP-ID
                                        CRITICALITY reject TYPE UE-X2AP-ID
     ID id-SqNB-UE-X2AP-ID
                                        CRITICALITY reject TYPE SqNB-UE-X2AP-ID
                                                                                             PRESENCE mandatory } |
     ID id-UEContextLevelUserPlaneActivity
                                        CRITICALITY ignore TYPE UserPlaneTrafficActivityReport
                                                                                          PRESENCE optional }
     ID id-ERABActivityNotifyItemList
                                        CRITICALITY ignore TYPE ERABActivityNotifyItemList
                                                                                          PRESENCE optional }
   { ID id-MeNB-UE-X2AP-ID-Extension
                                        CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                          PRESENCE optional }
     -- EN-DC PARTIAL RESET REQUIRED
__ *********************
ENDCPartialResetRequired ::= SEQUENCE {
   protocolIEs
                ProtocolIE-Container
                                     {{ENDCPartialResetRequired-IEs}},
   . . .
ENDCPartialResetRequired-IEs X2AP-PROTOCOL-IES ::= {
    ID id-UEs-ToBeReset
                                 CRITICALITY reject TYPE UEsToBeResetList
                                                                                   PRESENCE mandatory}
    ID id-Cause
                                 CRITICALITY ignore TYPE Cause
                                                                                   PRESENCE mandatory}
   { ID id-InterfaceInstanceIndication CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                     PRESENCE optional },
__ **********************
-- EN-DC PARTIAL RESET CONFIRM
__ *********************
ENDCPartialResetConfirm ::= SEQUENCE {
                                     {{ENDCPartialResetConfirm-IEs}},
   protocolIEs
               ProtocolIE-Container
   . . .
ENDCPartialResetConfirm-IEs X2AP-PROTOCOL-IES ::= {
    ID id-UEs-Admitted-ToBeReset
                                                                                        PRESENCE mandatory }
                                        CRITICALITY reject TYPE UEsToBeResetList
   { ID id-InterfaceInstanceIndication
                                        CRITICALITY reject TYPE InterfaceInstanceIndication PRESENCE optional },
   . . .
  -- E-UTRA - NR CELL RESOURCE COORDINATION REQUEST
__ ********************
EUTRANRCellResourceCoordinationRequest ::= SEQUENCE {
                                        {{EUTRANRCellResourceCoordinationRequest-IEs}},
   protocolIEs
                ProtocolIE-Container
   . . .
```

```
EUTRANRCellResourceCoordinationRequest-IES X2AP-PROTOCOL-IES ::= {
    PRESENCE mandatory}
   { ID id-InterfaceInstanceIndication
                                                           CRITICALITY reject TYPE InterfaceInstanceIndication
   PRESENCE optional },
InitiatingNodeType-EutranrCellResourceCoordination ::= CHOICE {
                                                {{ENB-EUTRA-NRCellResourceCoordinationRegIEs}},
   initiate-eNB
                         ProtocolIE-Container
   initiate-en-gNB
                                                {{En-gNB-EUTRA-NRCellResourceCoordinationRegIEs}},
                         ProtocolIE-Container
   . . .
ENB-EUTRA-NRCellResourceCoordinationRegIEs X2AP-PROTOCOL-IES ::= {
     ID id-DataTrafficResourceIndication
                                                CRITICALITY reject TYPE DataTrafficResourceIndication
                                                                                                             PRESENCE mandatory}
     ID id-SpectrumSharingGroupID
                                                CRITICALITY reject TYPE SpectrumSharingGroupID
                                                                                                             PRESENCE mandatory}
     ID id-ListofEUTRACellsinEUTRACoordinationReq CRITICALITY reject TYPE ListofEUTRACellsinEUTRACoordinationReq
                                                                                                             PRESENCE mandatory },
   . . .
En-qNB-EUTRA-NRCellResourceCoordinationRegIEs X2AP-PROTOCOL-IES ::= {
     ID id-DataTrafficResourceIndication
                                                CRITICALITY reject TYPE DataTrafficResourceIndication
                                                                                                           PRESENCE mandatory } |
     ID id-ListofEUTRACellsinNRCoordinationReg
                                                CRITICALITY reject TYPE ListofEUTRACellsinNRCoordinationReg
                                                                                                           PRESENCE mandatory } |
     ID id-SpectrumSharingGroupID
                                                                                                           PRESENCE mandatory } |
                                                CRITICALITY reject TYPE SpectrumSharingGroupID
     ID id-ListofNRCellsinNRCoordinationReg
                                                CRITICALITY reject TYPE ListofNRCellsinNRCoordinationReg
                                                                                                           PRESENCE mandatory },
ListofEUTRACellsinEUTRACoordinationReq ::= SEQUENCE (SIZE (0..maxCellineNB)) OF ECGI
ListofEUTRACellsinNRCoordinationReq ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ECGI
ListofNRCellsinNRCoordinationReg ::= SEOUENCE (SIZE (0..maxnoNRcellsSpectrumSharingWithE-UTRA)) OF NRCGI
      ********************
-- E-UTRA - NR CELL RESOURCE COORDINATION RESPONSE
__ ********************************
EUTRANRCellResourceCoordinationResponse ::= SEQUENCE {
                  ProtocolIE-Container
                                            {{EUTRANRCellResourceCoordinationResponse-IEs}},
   protocolIEs
   . . .
EUTRANRCellResourceCoordinationResponse-IES X2AP-PROTOCOL-IES ::= {
   { ID id-RespondingNodeType-EutranrCellResourceCoordination
                                                               CRITICALITY reject TYPE RespondingNodeType-EutranrCellResourceCoordination
       PRESENCE mandatory } |
   { ID id-InterfaceInstanceIndication CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                        PRESENCE optional },
    . . .
```

```
RespondingNodeType-EutranrCellResourceCoordination ::= CHOICE {
   respond-eNB
                     ProtocolIE-Container
                                           {{ENB-EUTRA-NRCellResourceCoordinationRegAckIEs}},
   respond-en-qNB
                     ProtocolIE-Container
                                           {{En-qNB-EUTRA-NRCellResourceCoordinationRegAckIEs}},
ENB-EUTRA-NRCellResourceCoordinationRegAckIEs X2AP-PROTOCOL-IES ::= {
     ID id-DataTrafficResourceIndication
                                                  CRITICALITY reject TYPE DataTrafficResourceIndication
                                                                                                              PRESENCE mandatory }
     ID id-SpectrumSharingGroupID
                                                                                                              PRESENCE mandatory}
                                                  CRITICALITY reject TYPE SpectrumSharingGroupID
    ID id-ListofEUTRACellsinEUTRACoordinationResp
                                                  CRITICALITY reject TYPE ListofEUTRACellsinEUTRACoordinationResp PRESENCE mandatory},
En-qNB-EUTRA-NRCellResourceCoordinationRegAckIEs X2AP-PROTOCOL-IES ::= {
     ID id-DataTrafficResourceIndication
                                           CRITICALITY reject TYPE DataTrafficResourceIndication
                                                                                                   PRESENCE mandatory
     ID id-SpectrumSharingGroupID
                                           CRITICALITY reject TYPE SpectrumSharingGroupID
                                                                                                   PRESENCE mandatory}
     PRESENCE mandatory },
   . . .
ListofEUTRACellsinEUTRACoordinationResp ::= SEQUENCE (SIZE (0..maxCellineNB)) OF ECGI
ListofNRCellsinNRCoordinationResp ::= SEQUENCE (SIZE (0..maxnoNRcellsSpectrumSharingWithE-UTRA)) OF NRCGI
    -- EN-DC X2 REMOVAL REQUEST
__ *********************
ENDCX2RemovalRequest ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        {{ENDCX2RemovalRequest-IEs}},
   . . .
ENDCX2RemovalRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-InitiatingNodeType-EndcX2Removal
                                                  CRITICALITY reject TYPE InitiatingNodeType-EndcX2Removal
                                                                                                           PRESENCE mandatory |
    { ID id-InterfaceInstanceIndication
                                                                                                           PRESENCE optional },
                                                  CRITICALITY reject TYPE InterfaceInstanceIndication
   . . .
InitiatingNodeType-EndcX2Removal ::= CHOICE
   init-eNB
                         ProtocolIE-Container
                                               {{ENB-ENDCX2RemovalRegIEs}},
                                           {{En-gNB-ENDCX2RemovalReqIEs}},
   init-en-qNB
                     ProtocolIE-Container
ENB-ENDCX2RemovalReqIEs X2AP-PROTOCOL-IES ::= {
   { ID id-GlobalENB-ID
                                                  CRITICALITY reject TYPE GlobalENB-ID
                                                                                                              PRESENCE mandatory },
```

```
En-gNB-ENDCX2RemovalReqIEs X2AP-PROTOCOL-IES ::= {
   { ID id-Globalen-qNB-ID
                                               CRITICALITY reject TYPE GlobalGNB-ID
                                                                                                             PRESENCE mandatory },
-- EN-DC X2 REMOVAL RESPONSE
  *****************
ENDCX2RemovalResponse ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        {{ENDCX2RemovalResponse-IEs}},
ENDCX2RemovalResponse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-RespondingNodeType-EndcX2Removal
                                                CRITICALITY reject TYPE RespondingNodeType-EndcX2Removal
                                                                                                       PRESENCE mandatory }
    { ID id-InterfaceInstanceIndication
                                               CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                          PRESENCE optional },
RespondingNodeType-EndcX2Removal ::= CHOICE {
   respond-eNB
                                            {{ENB-ENDCX2RemovalReqAckIEs}},
                     ProtocolIE-Container
   respond-en-gNB
                                            {{En-gNB-ENDCX2RemovalReqAckIEs}},
                      ProtocolIE-Container
   . . .
ENB-ENDCX2RemovalReqAckIEs X2AP-PROTOCOL-IES ::= {
   { ID id-GlobalENB-ID
                                                   CRITICALITY reject TYPE GlobalENB-ID
                                                                                                               PRESENCE mandatory },
En-gNB-ENDCX2RemovalRegAckIEs X2AP-PROTOCOL-IES ::= {
   { ID id-Globalen-gNB-ID
                                               CRITICALITY reject TYPE GlobalGNB-ID
                                                                                                             PRESENCE mandatory },
  -- EN-DC X2 REMOVAL FAILURE
    ******************
ENDCX2RemovalFailure ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        {{ENDCX2RemovalFailure-IEs}},
ENDCX2RemovalFailure-IES X2AP-PROTOCOL-IES ::= {
     ID id-Cause
                                        CRITICALITY ignore
                                                              TYPE Cause
                                                                                               PRESENCE mandatory}
     ID id-CriticalityDiagnostics
                                        CRITICALITY ignore
                                                              TYPE CriticalityDiagnostics
                                                                                               PRESENCE optional } |
     ID id-InterfaceInstanceIndication
                                                              TYPE InterfaceInstanceIndication
                                                                                               PRESENCE optional },
                                        CRITICALITY reject
```

```
******************
-- DATA FORWARDING ADDRESS INDICATION
__ **********************
DataForwardingAddressIndication ::= SEQUENCE
   protocolIEs
              ProtocolIE-Container
                                {{DataForwardingAddressIndication-IEs}},
   . . .
DataForwardingAddressIndication-IES X2AP-PROTOCOL-IES ::= {
    ID id-New-eNB-UE-X2AP-ID
                        CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                  PRESENCE mandatory}
    ID id-New-eNB-UE-X2AP-ID-Extension
                                   CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                  PRESENCE optional
    ID id-Old-eNB-UE-X2AP-ID
                                                                                  PRESENCE mandatory}
                                   CRITICALITY ignore TYPE UE-X2AP-ID
    ID id-Old-eNB-UE-X2AP-ID-Extension
                                   CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                  PRESENCE optional }
   PRESENCE mandatory },
E-RABs-DataForwardingAddress-List ::= SEOUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-DataForwardingAddress-ItemIEs} }
E-RABs-DataForwardingAddress-ItemIEs
                             X2AP-PROTOCOL-IES ::= {
   E-RABs-DataForwardingAddress-Item ::= SEQUENCE {
   e-RAB-ID
                          E-RAB-ID,
   dl-GTPtunnelEndpoint
                          GTPtunnelEndpoint,
                          ProtocolExtensionContainer { {E-RABs-DataForwardingAddress-ItemExtIEs} } OPTIONAL,
  iE-Extensions
E-RABs-DataForwardingAddress-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  ************************
-- GNB STATUS INDICATION
__ **********************
GNBStatusIndication ::= SEQUENCE {
                                  protocolIEs
             ProtocolIE-Container
GNBStatusIndicationIEs X2AP-PROTOCOL-IES ::= {
```

```
ID id-GNBOverloadInformation
                                       CRITICALITY ignore TYPE GNBOverloadInformation
                                                                                        PRESENCE mandatory}
     ID id-InterfaceInstanceIndication
                                       CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                          PRESENCE optional },
-- EN-DC CONFIGURATION TRANSFER
*****************
ENDCConfigurationTransfer ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                       {{ENDCConfigurationTransfer-IEs}},
ENDCConfigurationTransfer-IEs X2AP-PROTOCOL-IES ::= {
     PRESENCE optional } |
   { ID id-InterfaceInstanceIndication
                                       CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                PRESENCE optional },
-- TRACE START
TraceStart ::= SEOUENCE {
                                           { {TraceStartIEs} },
   protocolIEs
                 ProtocolIE-Container
TraceStartIEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                   CRITICALITY reject TYPE UE-X2AP-ID
                                                                                      PRESENCE mandatory
     ID id-SgNB-UE-X2AP-ID
                                   CRITICALITY reject TYPE SqNB-UE-X2AP-ID
                                                                                      PRESENCE mandatory
                                   CRITICALITY ignore TYPE TraceActivation
                                                                                      PRESENCE mandatory
     ID id-TraceActivation
     ID id-MeNB-UE-X2AP-ID-Extension CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                      PRESENCE optional
-- DEACTIVATE TRACE
DeactivateTrace ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                           { {DeactivateTraceIEs} },
   . . .
DeactivateTraceIEs X2AP-PROTOCOL-IES ::= {
                                                                                      PRESENCE mandatory }
   { ID id-MeNB-UE-X2AP-ID
                                   CRITICALITY reject TYPE UE-X2AP-ID
```

-- ASN1STOP

9.3.5 Information Element definitions

```
-- ASN1START
-- Information Element Definitions
  *****************
X2AP-IEs {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) x2ap (2) version1 (1) x2ap-IEs (2) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
TMPORTS
   id-E-RAB-Item,
   id-Number-of-Antennaports,
   id-MBSFN-Subframe-Info,
   id-PRACH-Configuration,
   id-CSG-Id,
   id-MDTConfiguration,
   id-SignallingBasedMDTPLMNList,
   id-MultibandInfoList,
   id-FreqBandIndicatorPriority,
   id-NeighbourTAC,
   id-Time-UE-StayedInCell-EnhancedGranularity,
   id-MBMS-Service-Area-List,
   id-HO-cause,
   id-eARFCNExtension,
   id-DL-EARFCNExtension,
   id-UL-EARFCNExtension,
   id-M3Configuration,
   id-M4Configuration,
   id-M5Configuration,
   id-MDT-Location-Info,
   id-NRrestrictioninEPSasSecondaryRAT,
   id-NRrestrictionin5GS,
   id-AdditionalSpecialSubframe-Info,
   id-UEID,
   id-enhancedRNTP,
```

```
id-ProSeUEtoNetworkRelaying,
id-M6Configuration,
id-M7Configuration.
id-OffsetOfNbiotChannelNumberToDL-EARFCN,
id-OffsetOfNbiotChannelNumberToUL-EARFCN.
id-AdditionalSpecialSubframeExtension-Info,
id-BandwidthReducedSI,
id-extended-e-RAB-MaximumBitrateDL,
id-extended-e-RAB-MaximumBitrateUL,
id-extended-e-RAB-GuaranteedBitrateDL,
id-extended-e-RAB-GuaranteedBitrateUL,
id-extended-uEaggregateMaximumBitRateDownlink,
id-extended-uEaggregateMaximumBitRateUplink,
id-E-RABUsageReport-Item,
id-SecondaryRATUsageReport-Item,
id-UEAppLayerMeasConfig,
id-DL-scheduling-PDCCH-CCE-usage,
id-UL-scheduling-PDCCH-CCE-usage,
id-DownlinkPacketLossRate,
id-UplinkPacketLossRate,
id-serviceType,
id-ProtectedEUTRAResourceIndication,
id-NRS-NSSS-PowerOffset,
id-NSSS-NumOccasionDifferentPrecoder.
id-CNTypeRestrictions,
id-BluetoothMeasurementConfiguration,
id-WLANMeasurementConfiguration,
id-ECGI,
id-NRCGI,
id-MeNBCoordinationAssistanceInformation,
id-SgNBCoordinationAssistanceInformation,
id-NRNeighbourInfoToAdd,
id-LastNG-RANPLMNIdentity,
id-BPLMN-ID-Info-EUTRA,
id-NBIoT-UL-DL-AlignmentOffset,
maxnoofBearers,
maxCellineNB,
maxEARFCN,
maxEARFCNPlusOne,
newmaxEARFCN,
maxInterfaces.
maxnoofBands.
maxnoofBPLMNs,
maxnoofAdditionalPLMNs,
maxnoofCells,
maxnoofEPLMNs,
maxnoofEPLMNsPlusOne,
maxnoofForbLACs,
maxnoofForbTACs,
maxnoofNeighbours,
maxnoofPRBs,
maxNrOfErrors,
```

```
maxPools,
    maxnoofMBSFN,
    maxnoofTAforMDT.
    maxnoofCellIDforMDT,
    maxnoofMBMSServiceAreaIdentities,
    maxnoofMDTPLMNs,
    maxnoofCoMPHypothesisSet,
    maxnoofCoMPCells,
    maxUEReport,
    maxCellReport,
    maxnoofPA,
    maxCSIProcess,
    maxCSIReport,
    maxSubband,
    maxnooftimeperiods,
    maxnoofCellIDforOMC,
    maxnoofTAforOMC,
    maxnoofPLMNforQMC,
    maxUEsinenqNBDU,
    maxnoofProtectedResourcePatterns,
    maxnoNRcellsSpectrumSharingWithE-UTRA,
    maxnoofNrCellBands,
    maxnoofBluetoothName,
    maxnoofWLANName,
    maxofNRNeighbours,
    maxnoofextBPLMNs
FROM X2AP-Constants
    Criticality,
    ProcedureCode,
    ProtocolIE-ID,
    TriggeringMessage
FROM X2AP-CommonDataTypes
    ProtocolExtensionContainer{},
    ProtocolIE-Single-Container{},
    X2AP-PROTOCOL-EXTENSION,
    X2AP-PROTOCOL-IES
FROM X2AP-Containers;
-- A
ABSInformation ::= CHOICE {
    fdd
                        ABSInformationFDD,
                        ABSInformationTDD,
    tdd
    abs-inactive
                        NULL,
    . . .
ABSInformationFDD ::= SEQUENCE {
    abs-pattern-info
                                         BIT STRING (SIZE(40)),
```

```
ENUMERATED {one, two, four, ...},
    numberOfCellSpecificAntennaPorts
    measurement-subset
                                        BIT STRING (SIZE(40)),
    iE-Extensions
                                        ProtocolExtensionContainer { {ABSInformationFDD-ExtIEs} } OPTIONAL,
ABSInformationFDD-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ABSInformationTDD ::= SEQUENCE {
    abs-pattern-info
                                        BIT STRING (SIZE(1..70, ...)),
    numberOfCellSpecificAntennaPorts
                                        ENUMERATED {one, two, four, ...},
    measurement-subset
                                        BIT STRING (SIZE(1..70, ...)),
    iE-Extensions
                                        ProtocolExtensionContainer { {ABSInformationTDD-ExtIEs} } OPTIONAL,
ABSInformationTDD-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ABS-Status ::= SEQUENCE {
    dL-ABS-status
                                                DL-ABS-status,
    usableABSInformation
                                                UsableABSInformation,
    iE-Extensions
                                                ProtocolExtensionContainer { {ABS-Status-ExtIEs} } OPTIONAL,
    . . .
ABS-Status-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ActivationID ::= INTEGER (0..255)
AdditionalSpecialSubframe-Info ::=
                                        SEOUENCE {
    additionalspecialSubframePatterns
                                            AdditionalSpecialSubframePatterns,
                                            CyclicPrefixDL,
    cyclicPrefixDL
    cyclicPrefixUL
                                            CyclicPrefixUL,
    iE-Extensions
                                            ProtocolExtensionContainer { {AdditionalSpecialSubframe-Info-ExtIEs} } OPTIONAL,
AdditionalSpecialSubframe-Info-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
AdditionalSpecialSubframePatterns ::= ENUMERATED {
    ssp0,
    ssp1,
    ssp2,
    ssp3,
    ssp4,
    ssp5,
```

```
ssp6,
    ssp7,
    ,8qaa
    ssp9,
    . . .
AdditionalSpecialSubframeExtension-Info ::=
                                                 SEOUENCE {
    additional special Subframe Patterns Extension Additional Special Subframe Patterns Extension,
    cyclicPrefixDL
                                                 CyclicPrefixDL,
    cyclicPrefixUL
                                                 CyclicPrefixUL,
    iE-Extensions
                                                 ProtocolExtensionContainer { {AdditionalSpecialSubframeExtension-Info-ExtIEs} } OPTIONAL,
AdditionalSpecialSubframeExtension-Info-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
AdditionalSpecialSubframePatternsExtension ::= ENUMERATED {
    ssp10,
    . . .
AerialUEsubscriptionInformation ::= ENUMERATED {
    allowed,
    not-allowed,
AllocationAndRetentionPriority ::= SEQUENCE
    priorityLevel
                                 PriorityLevel,
    pre-emptionCapability
                                 Pre-emptionCapability,
    pre-emptionVulnerability
                                Pre-emptionVulnerability,
                                 ProtocolExtensionContainer { {AllocationAndRetentionPriority-ExtIEs} } OPTIONAL,
    iE-Extensions
AllocationAndRetentionPriority-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
AreaScopeOfMDT ::= CHOICE {
    cellBased
                                 CellBasedMDT,
    tABased
                                 TABasedMDT,
    pLMNWide
                                 NULL,
    tAIBased
                                 TAIBasedMDT
AreaScopeOfQMC ::= CHOICE {
    cellBased
                                 CellBasedOMC,
    tABased
                                 TABasedQMC,
    tAIBased
                                 TAIBasedQMC,
```

358

```
pLMNAreaBased
                               PLMNAreaBasedOMC,
AS-SecurityInformation ::= SEQUENCE {
    key-eNodeB-star Key-eNodeB-Star,
    nextHopChainingCount
                                   NextHopChainingCount,
   iE-Extensions
                                       ProtocolExtensionContainer { {AS-SecurityInformation-ExtIEs} } OPTIONAL,
AS-SecurityInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
AdditionalPLMNs-Item ::= SEOUENCE (SIZE(1..maxnoofAdditionalPLMNs)) OF PLMN-Identity
-- B
BandwidthReducedSI::= ENUMERATED {
    scheduled,
    . . .
BearerType ::= ENUMERATED {
    non-IP,
    . . .
BenefitMetric ::= INTEGER (-101..100, ...)
BitRate ::= INTEGER (0..1000000000)
BroadcastPLMNs-Item ::= SEQUENCE (SIZE(1..maxnoofBPLMNs)) OF PLMN-Identity
BluetoothMeasurementConfiguration ::= SEQUENCE {
    bluetoothMeasConfig
                                   BluetoothMeasConfig,
                                   BluetoothMeasConfigNameList
    bluetoothMeasConfigNameList
                                                                       OPTIONAL,
   bt-rssi
                                   ENUMERATED {true, ...}
                                                                       OPTIONAL,
    iE-Extensions
                   ProtocolExtensionContainer { {BluetoothMeasurementConfiguration-ExtIEs} } OPTIONAL,
BluetoothMeasurementConfiguration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
BluetoothMeasConfigNameList ::= SEQUENCE (SIZE(1..maxnoofBluetoothName)) OF BluetoothName
BluetoothMeasConfig::= ENUMERATED {setup,...}
BluetoothName ::= OCTET STRING (SIZE (1..248))
BPLMN-ID-Info-EUTRA ::= SEQUENCE (SIZE(1..maxnoofBPLMNs)) OF BPLMN-ID-Info-EUTRA-Item
```

```
BPLMN-ID-Info-EUTRA-Item ::= SEQUENCE {
    broadcast.PLMNs
                                    BroadcastPLMNs-Item.
    tac
                                    TAC,
    e-utraCI
                                    EUTRANCellIdentifier.
                                    ProtocolExtensionContainer { {BPLMN-ID-Info-EUTRA-Item-ExtIEs} } OPTIONAL,
    iE-Extension
BPLMN-ID-Info-EUTRA-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
BPLMN-ID-Info-NR ::= SEQUENCE (SIZE(1..maxnoofextBPLMNs)) OF BPLMN-ID-Info-NR-Item
BPLMN-ID-Info-NR-Item ::= SEQUENCE {
    broadcastPLMNs
                                    BroadcastextPLMNs,
    fiveGStac
                                    FiveGS-TAC
                                                     OPTIONAL,
    nr-CI
                                    NRCellIdentifier,
                                    ProtocolExtensionContainer { {BPLMN-ID-Info-NR-Item-ExtIEs} } OPTIONAL,
    iE-Extension
BPLMN-ID-Info-NR-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
BroadcastextPLMNs ::= SEQUENCE (SIZE(1..maxnoofextBPLMNs)) OF PLMN-Identity
-- C
CapacityValue ::= INTEGER (0..100)
Cause ::= CHOICE {
                        CauseRadioNetwork,
   radioNetwork
    transport
                        CauseTransport,
    protocol
                        CauseProtocol,
    misc
                        CauseMisc,
CauseMisc ::= ENUMERATED {
    control-processing-overload,
    hardware-failure,
    om-intervention,
    not-enough-user-plane-processing-resources,
    unspecified,
    . . .
CauseProtocol ::= ENUMERATED {
    transfer-syntax-error,
    abstract-syntax-error-reject,
    abstract-syntax-error-ignore-and-notify,
```

```
message-not-compatible-with-receiver-state,
    semantic-error,
    unspecified.
    abstract-syntax-error-falsely-constructed-message,
CauseRadioNetwork ::= ENUMERATED {
    handover-desirable-for-radio-reasons.
    time-critical-handover,
    resource-optimisation-handover,
    reduce-load-in-serving-cell,
    partial-handover,
    unknown-new-eNB-UE-X2AP-ID.
    unknown-old-eNB-UE-X2AP-ID,
    unknown-pair-of-UE-X2AP-ID,
    ho-target-not-allowed,
    tx2relocoverall-expiry,
    trelocprep-expiry,
    cell-not-available,
    no-radio-resources-available-in-target-cell,
    invalid-MME-GroupID,
    unknown-MME-Code,
    encryption-and-or-integrity-protection-algorithms-not-supported,
    reportCharacteristicsEmpty,
    noReportPeriodicity,
    existingMeasurementID,
    unknown-eNB-Measurement-ID,
    measurement-temporarily-not-available,
    unspecified,
    . . . ,
    load-balancing,
    handover-optimisation,
    value-out-of-allowed-range,
    multiple-E-RAB-ID-instances,
    switch-off-ongoing,
    not-supported-QCI-value,
    measurement-not-supported-for-the-object,
    tDCoverall-expiry,
    tDCprep-expiry,
    action-desirable-for-radio-reasons,
    reduce-load.
    resource-optimisation,
    time-critical-action,
    target-not-allowed,
    no-radio-resources-available,
    invalid-OoS-combination,
    encryption-algorithms-not-supported,
    procedure-cancelled,
    rRM-purpose,
    improve-user-bit-rate,
    user-inactivity,
    radio-connection-with-UE-lost,
    failure-in-the-radio-interface-procedure,
```

```
bearer-option-not-supported,
    mCG-Mobility,
    sCG-Mobility,
    count-reaches-max-value,
    unknown-old-en-qNB-UE-X2AP-ID,
    pDCP-Overload
CauseTransport ::= ENUMERATED {
    transport-resource-unavailable,
    unspecified,
    . . .
CellBasedMDT::= SEQUENCE {
    cellIdListforMDT CellIdListforMDT,
                        ProtocolExtensionContainer { (CellBasedMDT-ExtIEs) } OPTIONAL,
    iE-Extensions
    . . .
CellBasedMDT-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CellBasedQMC::= SEQUENCE {
    cellIdListforOMC
                            CellIdListforOMC,
                        ProtocolExtensionContainer { {CellBasedQMC-ExtIEs} } OPTIONAL,
   iE-Extensions
CellBasedQMC-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CellCapacityClassValue ::= INTEGER (1..100, ...)
CellDeploymentStatusIndicator ::= ENUMERATED {pre-change-notification, ...}
CellIdListforMDT ::= SEQUENCE (SIZE(1..maxnoofCellIDforMDT)) OF ECGI
CellIdListforQMC ::= SEQUENCE (SIZE(1..maxnoofCellIDforQMC)) OF ECGI
CellReplacingInfo ::= SEQUENCE {
    replacingCellsList
                                    ReplacingCellsList,
                                    ProtocolExtensionContainer { {CellReplacingInfo-ExtIEs}}
    iE-Extensions
                                                                                                 OPTIONAL,
    . . .
CellReplacingInfo-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CellReportingIndicator ::= ENUMERATED {stop-request, ... }
```

```
Cell-Size ::= ENUMERATED {verysmall, small, medium, large, ... }
CellType ::= SEQUENCE {
    cell-Size
                                   Cell-Size,
   iE-Extensions
                                   ProtocolExtensionContainer { {CellType-ExtIEs}} OPTIONAL,
CellType-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CNTypeRestrictions ::= SEQUENCE (SIZE(1.. maxnoofEPLMNsPlusOne)) OF CNTypeRestrictionsItem
CNTypeRestrictionsItem ::= SEQUENCE {
   plmn-Id PLMN-Identity,
                       ENUMERATED {fiveGC-forbidden, ..., epc-forbidden},
    cn-type
                   ProtocolExtensionContainer { {CNTypeRestrictionsItem-ExtIEs} } OPTIONAL,
   iE-Extensions
CNTypeRestrictionsItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CoMPHypothesisSet ::= SEQUENCE (SIZE(1..maxnoofCoMPCells)) OF CoMPHypothesisSetItem
CompHypothesisSetItem ::= SEQUENCE {
    coMPCellID
                                   ECGI,
                                   BIT STRING (SIZE(6..4400, ...)),
    coMPHypothesis
   iE-Extensions
                                   ProtocolExtensionContainer { {COMPHypothesisSetItem-ExtIEs} } OPTIONAL,
CompHypothesisSetItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CoMPInformation ::= SEQUENCE {
                                           CoMPInformationItem
    coMPInformationItem
    coMPInformationStartTime
                                           CoMPInformationStartTime,
    iE-Extensions
                                           ProtocolExtensionContainer { {CoMPInformation-ExtIEs} } OPTIONAL,
    . . .
CoMPInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CoMPInformationItem ::= SEQUENCE (SIZE(1..maxnoofCoMPHypothesisSet)) OF
    SEQUENCE {
       coMPHypothesisSet
                                           CoMPHypothesisSet,
```

```
benefitMetric
                                            BenefitMetric,
       iE-Extensions
                                            ProtocolExtensionContainer { {CoMPInformationItem-ExtIEs} } OPTIONAL,
CoMPInformationItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CoMPInformationStartTime ::= SEQUENCE (SIZE(0..1)) OF
    SEQUENCE {
       startSFN
                                            INTEGER (0..1023, ...),
       startSubframeNumber
                                            INTEGER (0..9, ...),
       iE-Extensions
                                            ProtocolExtensionContainer { {CoMPInformationStartTime-ExtIEs} } OPTIONAL,
COMPINFORMATIONSTARTTIME-ExtIES X2AP-PROTOCOL-EXTENSION ::= {
CompositeAvailableCapacity ::= SEQUENCE {
    cellCapacityClassValue
                                                     CellCapacityClassValue
                                                                                         OPTIONAL,
    capacityValue
                                                     CapacityValue,
    iE-Extensions
                                                     ProtocolExtensionContainer { {CompositeAvailableCapacity-ExtIEs} } OPTIONAL,
    . . .
CompositeAvailableCapacity-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CompositeAvailableCapacityGroup ::= SEQUENCE {
    dL-CompositeAvailableCapacity
                                                     CompositeAvailableCapacity,
    uL-CompositeAvailableCapacity
                                                     CompositeAvailableCapacity,
                                                     ProtocolExtensionContainer { {CompositeAvailableCapacityGroup-ExtIEs} } OPTIONAL,
   iE-Extensions
CompositeAvailableCapacityGroup-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
Correlation-ID ::= OCTET STRING (SIZE (4))
COUNTvalue ::= SEQUENCE {
   pDCP-SN
                            PDCP-SN.
   hFN
    iE-Extensions
                            ProtocolExtensionContainer { (COUNTvalue-ExtIEs) } OPTIONAL,
    . . .
COUNTvalue-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
COUNTValueExtended ::= SEQUENCE {
   pDCP-SNExtended
                          PDCP-SNExtended,
   hFNModified
                          HFNModified.
                          ProtocolExtensionContainer { {COUNTValueExtended-ExtIEs} } OPTIONAL,
   iE-Extensions
COUNTValueExtended-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
COUNTvaluePDCP-SNlength18 ::= SEQUENCE {
   pDCP-SNlength18
                          PDCP-SNlength18,
   hFNforPDCP-SNlength18 HFNforPDCP-SNlength18,
                          ProtocolExtensionContainer { {COUNTvaluePDCP-SNlength18-ExtIEs} } OPTIONAL,
   iE-Extensions
COUNTvaluePDCP-SNlength18-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CoverageModificationList ::= SEQUENCE (SIZE (1..maxCellineNB)) OF CoverageModification-Item
CoverageModification-Item ::= SEQUENCE {
   eCGI
                                  ECGI,
                                  INTEGER (0..15, ...),
   coverageState
   cellDeploymentStatusIndicator CellDeploymentStatusIndicator
                                                                        OPTIONAL,
    cellReplacingInfo
                                  CellReplacingInfo
                                                                        OPTIONAL,
-- Included in case the Cell Deployment Status Indicator IE is present
CriticalityDiagnostics ::= SEQUENCE {
   procedureCode
                                  ProcedureCode
                                                                OPTIONAL,
                                  TriggeringMessage
   triggeringMessage
                                                                OPTIONAL,
   procedureCriticality
                                  Criticality
                                                                OPTIONAL,
   iEsCriticalityDiagnostics
                                  CriticalityDiagnostics-IE-List OPTIONAL,
                                  iE-Extensions
    . . .
CriticalityDiagnostics-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CriticalityDiagnostics-IE-List ::= SEOUENCE (SIZE (1..maxNrOfErrors)) OF
    SEQUENCE {
       iECriticality
                              Criticality,
       iE-ID
                              ProtocolIE-ID,
                              TypeOfError,
       typeOfError
```

```
ProtocolExtensionContainer { {CriticalityDiagnostics-IE-List-ExtIEs} } OPTIONAL,
       iE-Extensions
CriticalityDiagnostics-IE-List-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CRNTI ::= BIT STRING (SIZE (16))
CSGMembershipStatus ::= ENUMERATED {
   member,
   not-member
CSG-Id ::= BIT STRING (SIZE (27))
CSIReportList ::= SEQUENCE (SIZE(1..maxUEReport)) OF
    SEQUENCE {
       uEID
                                        UEID,
       cSIReportPerCSIProcess
                                        CSIReportPerCSIProcess,
                                        ProtocolExtensionContainer { {CSIReportList-ExtIEs} } OPTIONAL,
       iE-Extensions
CSIReportList-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CSIReportPerCSIProcess ::= SEQUENCE (SIZE(1.. maxCSIProcess)) OF
    SEQUENCE {
       cSIProcessConfigurationIndex
                                       INTEGER (1..7, ...),
       cSIReportPerCSIProcessItem
                                        CSIReportPerCSIProcessItem,
                                        ProtocolExtensionContainer { {CSIReportPerCSIProcess-ExtIEs} } OPTIONAL,
       iE-Extensions
CSIReportPerCSIProcess-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CSIReportPerCSIProcessItem ::= SEQUENCE (SIZE(1.. maxCSIReport)) OF
    SEQUENCE {
       rI
                                        INTEGER (1..8, ...),
       widebandCOI
                                        WidebandCOI,
                                        SubbandSize,
       subbandSize
       subbandCQIList
                                        SubbandCQIList OPTIONAL,
                                        ProtocolExtensionContainer { {CSIReportPerCSIProcessItem-ExtIEs} } OPTIONAL,
       iE-Extensions
CSIReportPerCSIProcessItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
CyclicPrefixDL ::= ENUMERATED {
    normal.
    extended,
    . . .
CyclicPrefixUL ::= ENUMERATED {
    normal,
    extended,
-- D
DataTrafficResources ::= BIT STRING (SIZE(6..17600))
DataTrafficResourceIndication ::= SEQUENCE {
    activationSFN
                                    INTEGER (0..1023),
    sharedResourceType
                                    SharedResourceType,
    reservedSubframePattern
                                    ReservedSubframePattern OPTIONAL,
                                    ProtocolExtensionContainer { {DataTrafficResourceIndication-ExtIEs} } OPTIONAL,
    iE-Extensions
DataTrafficResourceIndication-ExtIEs X2AP-PROTOCOL-EXTENSION ::=
DeactivationIndication::= ENUMERATED {
    deactivated,
DeliveryStatus ::= SEQUENCE {
    highestSuccessDeliveredPDCPSN
                                        INTEGER (0..4095),
                        ProtocolExtensionContainer { {DeliveryStatus-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
DeliveryStatus-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
DesiredActNotificationLevel ::= ENUMERATED {none, e-rab, ue-level, ...}
DL-ABS-status::= INTEGER (0..100)
DL-Forwarding ::= ENUMERATED {
    dL-forwardingProposed,
```

```
DL-GBR-PRB-usage::= INTEGER (0..100)
DL-non-GBR-PRB-usage::= INTEGER (0..100)
DLResourceBitmapULandDLSharing ::= DataTrafficResources
DLResourcesULandDLSharing ::= CHOICE {
unchanged
                    NULL,
                        DLResourceBitmapULandDLSharing,
    changed
DL-scheduling-PDCCH-CCE-usage::= INTEGER (0..100)
DL-Total-PRB-usage::= INTEGER (0..100)
DRB-ID ::= INTEGER (1..32)
DuplicationActivation::= ENUMERATED {active, inactive, ...}
DynamicDLTransmissionInformation ::= CHOICE {
    naics-active
                            DynamicNAICSInformation,
                            NULL,
    naics-inactive
DynamicNAICSInformation ::= SEQUENCE {
    transmissionModes
                                        BIT STRING (SIZE(8))
                                                                                                         OPTIONAL,
    pB-information
                                        INTEGER(0..3)
                                                                                                         OPTIONAL,
    pA-list
                                        SEQUENCE (SIZE(0..maxnoofPA)) OF PA-Values,
    iE-Extensions
                                        ProtocolExtensionContainer { {DynamicNAICSInformation-ExtIEs} } OPTIONAL,
    . . .
DynamicNAICSInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- E
EARFCN ::= INTEGER (0..maxEARFCN)
EARFCNExtension ::= INTEGER(maxEARFCNPlusOne..newmaxEARFCN, ...)
ECGI ::= SEQUENCE {
    pLMN-Identity
                                PLMN-Identity,
    eUTRANcellIdentifier
                                EUTRANCellIdentifier,
    iE-Extensions
                                ProtocolExtensionContainer { {ECGI-ExtIEs} } OPTIONAL,
    . . .
ECGI-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
EndcSONConfigurationTransfer ::= OCTET STRING
EnhancedRNTP ::= SEQUENCE {
    enhancedRNTPBitmap
                                BIT STRING (SIZE(12..8800, ...)),
    rNTP-High-Power-Threshold
                               RNTP-Threshold,
                                EnhancedRNTPStartTime OPTIONAL,
    enhancedRNTPStartTime
    iE-Extensions
                                ProtocolExtensionContainer { {EnhancedRNTP-ExtIEs} } OPTIONAL,
EnhancedRNTP-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
EnhancedRNTPStartTime ::= SEQUENCE {
                               INTEGER (0..1023, ...),
       startSFN
       startSubframeNumber
                               INTEGER (0..9, ...),
       iE-Extensions
                               ProtocolExtensionContainer { {EnhancedRNTPStartTime-ExtIEs} } OPTIONAL,
EnhancedRNTPStartTime-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ENB-ID ::= CHOICE {
   macro-eNB-ID
                   BIT STRING (SIZE (20)),
   home-eNB-ID
                   BIT STRING (SIZE (28)),
    short-Macro-eNB-ID
                           BIT STRING (SIZE(18)),
    long-Macro-eNB-ID
                           BIT STRING (SIZE(21))
EncryptionAlgorithms ::= BIT STRING (SIZE (16, ...))
EN-DC-ResourceConfiguration ::= SEQUENCE {
                   ENUMERATED {present, not-present, ...},
    pDCPatSqNB
    mCGresources
                   ENUMERATED {present, not-present, ...},
    sCGresources
                   ENUMERATED {present, not-present, ...},
                                    ProtocolExtensionContainer { {EN-DC-ResourceConfigurationExtIEs} } OPTIONAL,
    iE-Extensions
EN-DC-ResourceConfigurationExtIEs X2AP-PROTOCOL-EXTENSION ::= {
EPCHandoverRestrictionListContainer ::= OCTET STRING
-- The octets of the OCTET STRING contain the Handover Restriction List IE as specified in TS 36.413 [4]. --
EPLMNs ::= SEQUENCE (SIZE(1..maxnoofEPLMNs)) OF PLMN-Identity
```

```
ERABACtivityNotifyItemList ::= SEOUENCE (SIZE (0..maxnoofBearers)) OF ERABActivityNotifyItem
ERABACtivityNotifyItem ::= SEOUENCE {
   e-RAB-ID
                                  E-RAB-ID,
   activityReport
                                  UserPlaneTrafficActivityReport,
                                  ProtocolExtensionContainer { {ERABActivityNotifyItem-ExtIEs} } OPTIONAL,
   iE-Extensions
ERABActivityNotifyItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RAB-ID ::= INTEGER (0..15, ...)
E-RAB-Level-OoS-Parameters ::= SEQUENCE {
                                  OCI,
   allocationAndRetentionPriority AllocationAndRetentionPriority,
    qbr0osInformation
                                  GBR-OosInformation
                                                                                               OPTIONAL,
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RAB-Level-QoS-Parameters-ExtIEs} } OPTIONAL,
E-RAB-Level-QoS-Parameters-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- Extended for introduction of downlink and uplink packet loss rate for enhanced Voice performance -
     ID id-DownlinkPacketLossRate
                                         CRITICALITY ignore EXTENSION Packet-LossRate
                                                                                           PRESENCE optional } |
    { ID id-UplinkPacketLossRate
                                         CRITICALITY ignore EXTENSION Packet-LossRate
                                                                                           PRESENCE optional },
E-RAB-List ::= SEQUENCE (SIZE(1.. maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RAB-ItemIEs} }
E-RAB-ItemIEs X2AP-PROTOCOL-IES ::= {
   TYPE E-RAB-Item
                                                                PRESENCE mandatory },
   . . .
E-RAB-Item ::= SEQUENCE {
                          E-RAB-ID,
   e-RAB-ID
    cause
   iE-Extensions
                              ProtocolExtensionContainer { {E-RAB-Item-ExtIEs} } OPTIONAL,
E-RAB-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABUsageReportList ::= SEQUENCE (SIZE(1..maxnooftimeperiods)) OF ProtocolIE-Single-Container { {E-RABUsageReport-ItemIEs} }
E-RABUsageReport-ItemIEs X2AP-PROTOCOL-IES ::= {
    TYPE E-RABUsageReport-Item PRESENCE mandatory },
```

```
E-RABUsageReport-Item ::= SEOUENCE {
    startTimeStamp OCTET STRING (SIZE(4)),
                              OCTET STRING (SIZE(4)),
    endTimeStamp
                                INTEGER (0..18446744073709551615),
INTEGER (0..18446744073709551615),
    usageCountUL
    usageCountDL
    iE-Extensions
                                ProtocolExtensionContainer { {E-RABUsageReport-Item-ExtIEs} } OPTIONAL,
E-RABUsageReport-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
EUTRA-Mode-Info ::= CHOICE {
    fDD
           FDD-Info,
    tDD
           TDD-Info,
EUTRANCellIdentifier ::= BIT STRING (SIZE (28))
EUTRANTraceID
                    ::= OCTET STRING (SIZE (8))
EventType ::= ENUMERATED{
    change-of-serving-cell,
    . . .
ExpectedUEBehaviour ::= SEQUENCE {
    expectedActivity
                            ExpectedUEActivityBehaviour OPTIONAL,
    expectedHOInterval
                            ExpectedHOInterval
                                                        OPTIONAL,
   iE-Extensions
                            ProtocolExtensionContainer { {ExpectedUEBehaviour-ExtIEs} } OPTIONAL,
ExpectedUEBehaviour-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ExpectedUEActivityBehaviour ::= SEQUENCE {
                                            ExpectedActivityPeriod
    expectedActivityPeriod
                                                                                      OPTIONAL,
                                            ExpectedIdlePeriod
                                                                                     OPTIONAL,
    expectedIdlePeriod
    sourceofUEActivityBehaviourInformation SourceOfUEActivityBehaviourInformation OPTIONAL,
                        ProtocolExtensionContainer { {ExpectedUEActivityBehaviour-ExtIEs} } OPTIONAL,
   iE-Extensions
ExpectedUEActivityBehaviour-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
ExpectedActivityPeriod ::= INTEGER (1..30|40|50|60|80|100|120|150|180|181,...)
```

```
ExpectedIdlePeriod ::= INTEGER (1..30|40|50|60|80|100|120|150|180|181,...)
ExpectedHOInterval ::= ENUMERATED {
   sec15, sec30, sec60, sec90, sec120, sec180, long-time,
ExtendedULInterferenceOverloadInfo ::= SEOUENCE {
   associatedSubframes
                                          BIT STRING (SIZE (5)),
   extended-ul-InterferenceOverloadIndication UL-InterferenceOverloadIndication,
   iE-Extensions
                                          ProtocolExtensionContainer { {ExtendedULInterferenceOverloadInfo-ExtIEs} } OPTIONAL,
   . . .
ExtendedULInterferenceOverloadInfo-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ExtendedBitRate ::= INTEGER (1000000001..400000000000,...)
-- F
FDD-Info ::= SEQUENCE {
   uL-EARFCN
                                EARFCN,
   dL-EARFCN
                               EARFCN,
   uL-Transmission-Bandwidth
                               Transmission-Bandwidth,
   dL-Transmission-Bandwidth
                               Transmission-Bandwidth,
                            ProtocolExtensionContainer { {FDD-Info-ExtIEs} } OPTIONAL,
   iE-Extensions
FDD-Info-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-UL-EARFCNExtension
                                              CRITICALITY reject EXTENSION EARFCNExtension
                                                                                                           PRESENCE optional}
     ID id-DL-EARFCNExtension
                                              CRITICALITY reject EXTENSION EARFCNExtension
                                                                                                           PRESENCE optional}
     PRESENCE optional}
                                                                                                           PRESENCE optional }
     ID id-NRS-NSSS-PowerOffset
                                              CRITICALITY ignore EXTENSION NRS-NSSS-PowerOffset
                                                                                                           PRESENCE optional |
    ID id-NSSS-NumOccasionDifferentPrecoder
                                                                                                           PRESENCE optional },
                                              CRITICALITY ignore EXTENSION NSSS-NumOccasionDifferentPrecoder
FDD-InfoNeighbourServedNRCell-Information ::= SEQUENCE {
   ul-NRFreqInfo
                        NRFreqInfo,
   dl-NRFreqInfo
                        NRFreqInfo,
   iE-Extensions
                        ProtocolExtensionContainer { {FDD-InfoNeighbourServedNRCell-Information-ExtIEs} }
FDD-InfoNeighbourServedNRCell-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ForbiddenInterRATs ::= ENUMERATED {
   all,
```

```
geran,
    utran,
    cdma2000,
    geranandutran,
    cdma2000andutran
ForbiddenTAs ::= SEQUENCE (SIZE(1.. maxnoofEPLMNsPlusOne)) OF ForbiddenTAs-Item
ForbiddenTAs-Item ::= SEQUENCE {
    pLMN-Identity
                       PLMN-Identity,
    forbiddenTACs
                       ForbiddenTACs,
   iE-Extensions
                        ProtocolExtensionContainer { {ForbiddenTAs-Item-ExtIEs} } OPTIONAL,
ForbiddenTAs-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ForbiddenTACs ::= SEQUENCE (SIZE(1..maxnoofForbTACs)) OF TAC
ForbiddenLAs ::= SEQUENCE (SIZE(1..maxnoofEPLMNsPlusOne)) OF ForbiddenLAs-Item
ForbiddenLAs-Item ::= SEOUENCE {
    pLMN-Identity
                       PLMN-Identity,
    forbiddenLACs
                        ForbiddenLACs,
                        ProtocolExtensionContainer { {ForbiddenLAs-Item-ExtIEs} } OPTIONAL,
    iE-Extensions
ForbiddenLAs-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ForbiddenLACs ::= SEOUENCE (SIZE(1..maxnoofForbLACs)) OF LAC
Fourframes ::= BIT STRING (SIZE (24))
FreqBandIndicator ::= INTEGER (1..256, ...)
FreqBandIndicatorPriority ::= ENUMERATED {
   not-broadcasted,
   broadcasted.
    . . .
FreqBandNrItem ::= SEQUENCE {
    freqBandIndicatorNr
                                    INTEGER (1..1024,...),
    supportedSULBandList
                            SEQUENCE (SIZE(0..maxnoofNrCellBands)) OF SupportedSULFreqBandItem,
    iE-Extensions
                                ProtocolExtensionContainer { {FreqBandNrItem-ExtIEs} } OPTIONAL,
```

```
FreqBandNrItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
GBR-QosInformation ::= SEQUENCE {
    e-RAB-MaximumBitrateDL
                                    BitRate,
    e-RAB-MaximumBitrateUL
                                    BitRate,
    e-RAB-GuaranteedBitrateDL
                                    BitRate,
    e-RAB-GuaranteedBitrateUL
                                    BitRate,
    iE-Extensions
                                    ProtocolExtensionContainer { GBR-OosInformation-ExtIEs} } OPTIONAL,
GBR-OosInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- Extension for maximum bitrate > 10Gbps --
     ID id-extended-e-RAB-MaximumBitrateDL
                                                CRITICALITY ignore EXTENSION ExtendedBitRate PRESENCE optional}
     ID id-extended-e-RAB-MaximumBitrateUL
                                                CRITICALITY ignore EXTENSION ExtendedBitRate
                                                                                                PRESENCE optional}
     ID id-extended-e-RAB-GuaranteedBitrateDL CRITICALITY ignore EXTENSION ExtendedBitRate
                                                                                                PRESENCE optional }
     ID id-extended-e-RAB-GuaranteedBitrateUL CRITICALITY ignore EXTENSION ExtendedBitRate
                                                                                                PRESENCE optional }.
GlobalENB-ID ::= SEQUENCE {
   pLMN-Identity
                            PLMN-Identity,
    eNB-ID
                            ENB-ID,
    iE-Extensions
                           ProtocolExtensionContainer { {GlobalENB-ID-ExtIEs} } OPTIONAL,
GlobalENB-ID-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
GlobalGNB-ID ::= SEQUENCE {
   pLMN-Identity
                            PLMN-Identity,
    qNB-ID
                            GNB-ID,
                           ProtocolExtensionContainer { GlobalGNB-ID-ExtIEs} } OPTIONAL,
    iE-Extensions
GlobalGNB-ID-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
GNBOverloadInformation ::= ENUMERATED {overloaded, not-overloaded, ...}
GTPtunnelEndpoint ::= SEQUENCE {
    transportLayerAddress
                                    TransportLayerAddress,
    qTP-TEID
                                    GTP-TEI,
```

```
ProtocolExtensionContainer { {GTPtunnelEndpoint-ExtIEs} } OPTIONAL,
    iE-Extensions
GTPtunnelEndpoint-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
GTP-TEI
                      ::= OCTET STRING (SIZE (4))
GUGroupIDList
                   ::= SEQUENCE (SIZE (1..maxPools)) OF GU-Group-ID
GU-Group-ID
                    ::= SEQUENCE {
   pLMN-Identity
                    PLMN-Identity,
   mME-Group-ID
                       MME-Group-ID,
                       ProtocolExtensionContainer { {GU-Group-ID-ExtIEs} } OPTIONAL,
   iE-Extensions
GU-Group-ID-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
GUMMEI
               ::= SEQUENCE {
    qU-Group-ID
                    GU-Group-ID,
    mME-Code
                       MME-Code,
                                    ProtocolExtensionContainer { GUMMEI-ExtIEs} } OPTIONAL,
    iE-Extensions
GUMMEI-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
GNB-ID ::= CHOICE {
    gNB-ID BIT STRING (SIZE (22..32)),
-- H
HandoverReportType ::= ENUMERATED {
   hoTooEarly,
   hoToWrongCell,
    interRATpingpong
HandoverRestrictionList ::= SEQUENCE {
    servingPLMN
                                PLMN-Identity,
```

```
equivalentPLMNs
                                EPLMNs
                                                        OPTIONAL,
    forbiddenTAs
                                ForbiddenTAs
                                                        OPTIONAL,
    forbiddenLAs
                                ForbiddenLAs
                                                        OPTIONAL.
    forbiddenInterRATs
                                ForbiddenInterRATs
                                                        OPTIONAL,
    iE-Extensions
                                ProtocolExtensionContainer { {HandoverRestrictionList-ExtIEs} } OPTIONAL,
HandoverRestrictionList-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      ID id-NRrestrictioninEPSasSecondaryRAT
                                                        CRITICALITY ignore EXTENSION NRrestrictioninEPSasSecondaryRAT
                                                                                                                             PRESENCE optional } |
      ID id-CNTypeRestrictions
                                                    CRITICALITY ignore EXTENSION CNTypeRestrictions
                                                                                                                          PRESENCE optional } |
      ID id-NRrestrictionin5GS
                                                    CRITICALITY ignore EXTENSION NRrestrictionin5GS
                                                                                                                          PRESENCE optional }
    ID id-LastNG-RANPLMNIdentity
                                                    CRITICALITY ignore EXTENSION PLMN-Identity
                                                                                                                          PRESENCE optional },
HFN ::= INTEGER (0..1048575)
HFNModified ::= INTEGER (0..131071)
HFNforPDCP-SNlength18 ::= INTEGER (0..16383)
HWLoadIndicator ::= SEQUENCE {
    dLHWLoadIndicator
                                LoadIndicator,
    uLHWLoadIndicator
                                LoadIndicator,
    iE-Extensions
                                ProtocolExtensionContainer { {HWLoadIndicator-ExtIEs} } OPTIONAL,
HWLoadIndicator-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- I
IntegrityProtectionAlgorithms ::= BIT STRING (SIZE (16, ...))
InterfaceInstanceIndication ::= INTEGER (0..255, ...)
InterfacesToTrace ::= BIT STRING (SIZE (8))
InvokeIndication ::= ENUMERATED{
    abs-information,
    naics-information-start,
    naics-information-stop
-- J
-- K
Key-eNodeB-Star ::= BIT STRING (SIZE(256))
```

```
-- L
LAC
                  ::= OCTET STRING (SIZE (2)) --(EXCEPT ('0000'H|'FFFE'H))
LastVisitedCell-Item ::= CHOICE {
                                 LastVisitedEUTRANCellInformation,
   e-UTRAN-Cell
   uTRAN-Cell
                                 LastVisitedUTRANCellInformation,
   qERAN-Cell
                                LastVisitedGERANCellInformation,
                                LastVisitedNGRANCellInformation
   nG-RAN-Cell
LastVisitedEUTRANCellInformation ::= SEQUENCE {
   global-Cell-ID
                                 ECGI.
   cellType
                                CellType,
   time-UE-StayedInCell
                                Time-UE-StayedInCell,
                                 ProtocolExtensionContainer { {LastVisitedEUTRANCellInformation-ExtIEs} } OPTIONAL,
   iE-Extensions
LastVisitedEUTRANCellInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- Extension for Rel-11 to support enhanced granularity for time UE stayed in cell --
     CRITICALITY ignore EXTENSION Cause
     ID id-HO-cause
                                                                                                                    PRESENCE optional }.
LastVisitedGERANCellInformation ::= CHOICE {
   undefined
                                NULL,
    . . .
LastVisitedNGRANCellInformation ::= OCTET STRING
LastVisitedUTRANCellInformation ::= OCTET STRING
LCID ::= INTEGER(1..32, ...)
LHN-ID ::= OCTET STRING(SIZE (32..256))
Links-to-log ::= ENUMERATED {uplink, downlink, both-uplink-and-downlink, ...}
LoadIndicator ::= ENUMERATED {
   lowLoad,
   mediumLoad,
   highLoad,
   overLoad,
LocationInformationSgNB ::= SEQUENCE {
   pSCell-id
                      NRCGI,
   iE-Extensions
                      ProtocolExtensionContainer { {LocationInformationSgNB-ExtIEs} } OPTIONAL,
    . . .
```

```
LocationInformationSqNB-ExtIEs X2AP-PROTOCOL-EXTENSION ::={
LocationInformationSqNBReporting ::= ENUMERATED {
    pSCell,
LocationReportingInformation ::= SEQUENCE {
    eventType
                    EventType,
    reportArea
                    ReportArea,
    iE-Extensions
                        ProtocolExtensionContainer { {LocationReportingInformation-ExtIEs} } OPTIONAL,
LocationReportingInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::={
M1PeriodicReporting ::= SEQUENCE {
    reportInterval
                                ReportIntervalMDT,
                                ReportAmountMDT,
    reportAmount
                                ProtocolExtensionContainer { {MlPeriodicReporting-ExtIEs} } OPTIONAL,
    iE-Extensions
MlPeriodicReporting-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
MlReportingTrigger::= ENUMERATED{
    periodic,
    a2eventtriggered,
    a2eventtriggered-periodic
M1ThresholdEventA2 ::= SEQUENCE {
    measurementThreshold
                                MeasurementThresholdA2,
    iE-Extensions
                                ProtocolExtensionContainer { {MlThresholdEventA2-ExtIEs} } OPTIONAL,
MlThresholdEventA2-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
M3Configuration ::= SEQUENCE {
    m3period
                        M3period,
```

```
ProtocolExtensionContainer { {M3Configuration-ExtIEs} } OPTIONAL,
    iE-Extensions
M3Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
M3period ::= ENUMERATED {ms100, ms1000, ms10000, ... }
M4Configuration ::= SEQUENCE {
    m4period
                       M4period,
   m4-links-to-log
                       Links-to-log,
   iE-Extensions
                       ProtocolExtensionContainer { {M4Configuration-ExtIEs} } OPTIONAL,
M4Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
M4period ::= ENUMERATED {ms1024, ms2048, ms5120, ms10240, min1, ... }
M5Configuration ::= SEQUENCE
    m5period
                       M5period,
   m5-links-to-log
                       Links-to-log,
   iE-Extensions
                       ProtocolExtensionContainer { {M5Configuration-ExtIEs} } OPTIONAL,
M5Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
M5period ::= ENUMERATED {ms1024, ms2048, ms5120, ms10240, min1, ... }
M6Configuration ::= SEQUENCE {
   m6report-interval M6report-interval,
    m6delay-threshold M6delay-threshold OPTIONAL,
-- This IE shall be present if the M6 Links to log IE is set to "uplink" or to "both-uplink-and-downlink" --
    m6-links-to-log
                      Links-to-log,
                       ProtocolExtensionContainer { {M6Configuration-ExtIEs} } OPTIONAL,
   iE-Extensions
M6Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
M6report-interval ::= ENUMERATED { ms1024, ms2048, ms5120, ms10240, ... }
M6delay-threshold ::= ENUMERATED { ms30, ms40, ms50, ms60, ms70, ms80, ms90, ms100, ms150, ms300, ms500, ms750, ... }
```

```
M7Configuration ::= SEOUENCE {
    m7period
                        M7period,
    m7-links-to-log
                        Links-to-log.
    iE-Extensions
                        ProtocolExtensionContainer { {M7Configuration-ExtIEs} } OPTIONAL,
M7Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
M7period ::= INTEGER(1..60, ...)
MakeBeforeBreakIndicator::= ENUMERATED {true, ...}
ManagementBasedMDTallowed ::= ENUMERATED {allowed, ...}
Masked-IMEISV ::= BIT STRING (SIZE (64))
MDT-Activation
                    ::= ENUMERATED {
    immediate-MDT-only,
    immediate-MDT-and-Trace,
MDT-Configuration ::= SEQUENCE
                                MDT-Activation,
    mdt-Activation
    areaScopeOfMDT
                                AreaScopeOfMDT,
    measurementsToActivate
                                MeasurementsToActivate,
    mlreportingTrigger
                                MlReportingTrigger,
    m1thresholdeventA2
                                M1ThresholdEventA2
                                                            OPTIONAL,
-- Included in case of event-triggered, or event-triggered periodic reporting for measurement M1
    mlperiodicReporting
                                M1PeriodicReporting
                                                            OPTIONAL,
-- Included in case of periodic, or event-triggered periodic reporting for measurement M1
                                ProtocolExtensionContainer { {MDT-Configuration-ExtIEs} } OPTIONAL.
    iE-Extensions
MDT-Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    {ID id-M3Configuration
                                                    CRITICALITY ignore EXTENSION M3Configuration
                                                                                                                        PRESENCE conditional }
    {ID id-M4Configuration
                                                    CRITICALITY ignore EXTENSION M4Configuration
                                                                                                                        PRESENCE conditional }
                                                                                                                       PRESENCE conditional |
    {ID id-M5Configuration
                                                    CRITICALITY ignore EXTENSION M5Configuration
    {ID id-MDT-Location-Info
                                                    CRITICALITY ignore EXTENSION MDT-Location-Info
                                                                                                                       PRESENCE optional }
    {ID id-SignallingBasedMDTPLMNList
                                                    CRITICALITY ignore EXTENSION MDTPLMNList
                                                                                                                        PRESENCE optional }
    ID id-M6Configuration
                                                    CRITICALITY ignore EXTENSION M6Configuration
                                                                                                                       PRESENCE conditional}
    ID id-M7Configuration
                                                    CRITICALITY ignore EXTENSION M7Configuration
                                                                                                                        PRESENCE conditional }
     ID id-BluetoothMeasurementConfiguration
                                                    CRITICALITY ignore EXTENSION BluetoothMeasurementConfiguration
                                                                                                                        PRESENCE optional | |
     ID id-WLANMeasurementConfiguration
                                                    CRITICALITY ignore EXTENSION WLANMeasurementConfiguration
                                                                                                                        PRESENCE optional },
    . . .
MDTPLMNList ::= SEQUENCE (SIZE(1..maxnoofMDTPLMNs)) OF PLMN-Identity
MDT-Location-Info ::= BIT STRING (SIZE (8))
```

```
Measurement-ID ::= INTEGER (1..4095, ...)
MeasurementsToActivate::= BIT STRING (SIZE (8))
MeasurementThresholdA2 ::= CHOICE {
    threshold-RSRP
                                Threshold-RSRP,
    threshold-RSRO
                                Threshold-RSRO,
MeNBCoordinationAssistanceInformation ::= ENUMERATED{
    coordination-not-required,
MeNBResourceCoordinationInformation ::= SEOUENCE {
    eUTRA-Cell-ID
    uLCoordinationInformation
                                    BIT STRING (SIZE(6..4400, ...)),
    dLCoordinationInformation
                                    BIT STRING (SIZE(6..4400, ...))
                                                                         OPTIONAL,
    iE-Extensions
                                    ProtocolExtensionContainer { {MeNBResourceCoordinationInformationExtIEs} }
                                                                                                                       OPTIONAL,
MenbresourceCoordinationInformationExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-NRCGI
                                                     CRITICALITY ignore EXTENSION NRCGI
                                                                                                                            PRESENCE optional |
    { ID id-MeNBCoordinationAssistanceInformation
                                                         CRITICALITY reject EXTENSION MenbCoordinationAssistanceInformation PRESENCE optional },
MeNBtoSeNBContainer ::= OCTET STRING
MME-Group-ID
                ::= OCTET STRING (SIZE (2))
MME-Code
                ::= OCTET STRING (SIZE (1))
MBMS-Service-Area-Identity-List ::= SEQUENCE (SIZE(1.. maxnoofMBMSServiceAreaIdentities)) OF MBMS-Service-Area-Identity
MBMS-Service-Area-Identity ::= OCTET STRING (SIZE (2))
MBSFN-Subframe-Infolist::= SEQUENCE (SIZE(1.. maxnoofMBSFN)) OF MBSFN-Subframe-Info
MBSFN-Subframe-Info ::= SEQUENCE {
    radioframeAllocationPeriod
                                    RadioframeAllocationPeriod,
    radioframeAllocationOffset
                                    RadioframeAllocationOffset,
    subframeAllocation
                                    SubframeAllocation,
    iE-Extensions
                                    ProtocolExtensionContainer { {MBSFN-Subframe-Info-ExtIEs} } OPTIONAL,
{\tt MBSFN-Subframe-Info-ExtIEs} \  \, {\tt X2AP-PROTOCOL-EXTENSION} \, ::= \, \{ \,
```

```
MobilityParametersModificationRange ::= SEQUENCE {
    handoverTriggerChangeLowerLimit
                                        INTEGER (-20..20),
                                        INTEGER (-20..20),
    handoverTriggerChangeUpperLimit
MobilityParametersInformation ::= SEQUENCE {
    handoverTriggerChange
                                    INTEGER (-20..20),
MultibandInfoList ::= SEQUENCE (SIZE(1..maxnoofBands)) OF BandInfo
BandInfo
           ::= SEQUENCE {
    fregBandIndicator
                            FreqBandIndicator,
    iE-Extensions
                            ProtocolExtensionContainer { {BandInfo-ExtIEs} }
                                                                                 OPTIONAL,
BandInfo-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
MeNBtoSgNBContainer ::= OCTET STRING
SplitSRBs ::= ENUMERATED {srb1, srb2, srb1and2, ...}
SplitSRB ::= SEQUENCE {
    rrcContainer
                                RRCContainer
                                                         OPTIONAL,
    srbType
                                SRBType,
    deliveryStatus
                                DeliveryStatus
                                                         OPTIONAL,
    iE-Extensions
                                ProtocolExtensionContainer { {SplitSRB-ExtIEs} } OPTIONAL,
    . . .
SplitSRB-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NBIOT-UL-DL-AlignmentOffset ::= ENUMERATED {
    khz-7dot5,
    khz0,
    khz7dot5,
    . . .
Neighbour-Information ::= SEQUENCE (SIZE (0..maxnoofNeighbours)) OF SEQUENCE {
    eCGI
                                ECGI,
    pCI
                                PCI,
    eARFCN
                                EARFCN,
                                ProtocolExtensionContainer { {Neighbour-Information-ExtIEs} } OPTIONAL,
    iE-Extensions
```

```
Neighbour-Information-ExtlEs X2AP-PROTOCOL-EXTENSION ::= {
                                                                             PRESENCE optional}
     ID id-NeighbourTAC CRITICALITY ignore EXTENSION TAC
    ID id-eARFCNExtension
                            CRITICALITY reject EXTENSION EARFCNExtension PRESENCE optional },
NextHopChainingCount ::= INTEGER (0..7)
NewDRBIDrequest::= ENUMERATED {true, ...}
Number-of-Antennaports ::= ENUMERATED {
       an1,
       an2,
       an4,
NRFregInfo ::= SEQUENCE{
   nRARFCN
              INTEGER (0.. 3279165),
    freqBandListNr SEQUENCE (SIZE(1..maxnoofNrCellBands)) OF FreqBandNrItem,
    sULInformation SULInformation
                                      OPTIONAL,
   iE-Extensions ProtocolExtensionContainer { {NRFreqInfo-ExtIEs} } OPTIONAL,
NRFreqInfo-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NRCellIdentifier ::= BIT STRING (SIZE (36))
NRCGI ::= SEQUENCE {
   pLMN-Identity
                            PLMN-Identity,
                               NRCellIdentifier,
   nRcellIdentifier
                              ProtocolExtensionContainer { {NRCGI-ExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
NRCGI-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NRNeighbour-Information ::= SEQUENCE (SIZE (1.. maxofNRNeighbours))OF SEQUENCE {
   nrpCI
                                  NRPCI,
   nrCellID
                                  NRCGI,
    fiveGS-TAC
                                  FiveGS-TAC OPTIONAL,
    configured-TAC
                                  TAC
                                              OPTIONAL,
   measurementTimingConfiguration OCTET STRING,
    nRNeighbourModeInfo
                                  CHOICE {
               FDD-InfoNeighbourServedNRCell-Information,
```

```
TDD-InfoNeighbourServedNRCell-Information,
        tdd
    iE-Extensions
                                        ProtocolExtensionContainer { {NRNeighbour-Information-ExtIEs} } OPTIONAL,
NRNeighbour-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NRPCI ::= INTEGER (0..1007)
NRrestrictioninEPSasSecondaryRAT ::= ENUMERATED {
    nRrestrictedinEPSasSecondaryRAT,
NRrestrictionin5GS ::= ENUMERATED {
    nRrestrictedin5GS,
NRencryptionAlgorithms ::= BIT STRING (SIZE (16,...))
NRintegrityProtectionAlgorithms ::= BIT STRING (SIZE (16,...))
NR-TxBW ::= SEQUENCE {
    nRSCS NRSCS,
    nRNRB NRNRB,
                                ProtocolExtensionContainer { {NR-TxBW-ExtIEs} } OPTIONAL,
    iE-Extensions
NR-TxBW-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NRNRB ::= ENUMERATED { nrb11, nrb18, nrb24, nrb25, nrb31, nrb32, nrb38, nrb51, nrb52, nrb65, nrb66, nrb78, nrb79, nrb93, nrb106, nrb107, nrb121,
nrb132, nrb133, nrb135, nrb160, nrb162, nrb189, nrb216, nrb217, nrb245, nrb264, nrb270, nrb273, ...}
NRSCS ::= ENUMERATED { scs15, scs30, scs60, scs120, ...}
NRS-NSSS-PowerOffset ::= ENUMERATED { minusThree, zero, three, ...}
FiveGS-TAC ::= OCTET STRING (SIZE (3))
NRUeReport ::= SEQUENCE {
    uENRMeasurements
                                RRCContainer,
    iE-Extensions
                           ProtocolExtensionContainer { { NRUeReport-ExtIEs} } OPTIONAL,
NRUeReport-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
NRUESecurityCapabilities ::= SEQUENCE
    nRencryptionAlgorithms
                                        NRencryptionAlgorithms,
    nRintegrityProtectionAlgorithms
                                        NRintegrityProtectionAlgorithms,
    iE-Extensions
                                        ProtocolExtensionContainer { {NRUESecurityCapabilities-ExtIEs} } OPTIONAL,
}
NRUESecurityCapabilities-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NSSS-NumOccasionDifferentPrecoder ::= ENUMERATED { two, four, eight, ...}
-- O
OffsetOfNbiotChannelNumberToEARFCN ::= ENUMERATED {
        minusTen,
       minusNine,
       minusEight,
       minusSeven,
        minusSix,
        minusFive,
        minusFour,
        minusThree,
        minusTwo,
        minusOne,
        minusZeroDotFive,
        zero,
        one,
        two,
        three,
        four,
        five.
        six,
        seven,
        eight,
       nine,
        . . . ,
        minusEightDotFive,
        minusFourDotFive,
        threeDotFive,
        sevenDotFive
Oneframe ::= BIT STRING (SIZE (6))
-- P
Packet-LossRate ::= INTEGER(0..1000)
PA-Values ::= ENUMERATED {
    dB-6,
```

```
dB-4dot77,
    dB-3,
    dB-1dot77,
    dB0,
    dB1.
    dB2,
    dB3,
    . . .
PDCPChangeIndication ::= ENUMERATED {s-KgNB-update-required, pDCP-data-recovery-required,...}
PDCP-SN ::= INTEGER (0..4095)
PDCP-SNExtended ::= INTEGER (0..32767)
PDCP-SNlength18 ::= INTEGER (0..262143)
               ::= ENUMERATED {twelve-bits, eighteen-bits,...}
PDCPSnLength
PCI ::= INTEGER (0..503, ...)
PLMN-Identity ::= OCTET STRING (SIZE(3))
Port-Number ::= OCTET STRING (SIZE (2))
PRACH-Configuration ::= SEQUENCE {
    rootSequenceIndex
                                            INTEGER (0..837),
    zeroCorrelationIndex
                                            INTEGER (0..15),
    highSpeedFlag
                                            BOOLEAN,
    prach-FreqOffset
                                            INTEGER (0..94),
    prach-ConfigIndex
                                            INTEGER (0..63)
                                                                 OPTIONAL, -- present for TDD --
    iE-Extensions
                                            ProtocolExtensionContainer { {PRACH-Configuration-ExtIEs} } OPTIONAL,
PLMNAreaBasedQMC ::= SEQUENCE {
    plmnListforOMC
                        PLMNListforOMC,
                        ProtocolExtensionContainer { {PLMNAreaBasedQMC-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
PLMNAreaBasedQMC-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
PLMNListforQMC ::= SEQUENCE (SIZE(1..maxnoofPLMNforQMC)) OF PLMN-Identity
PRACH-Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
Pre-emptionCapability ::= ENUMERATED {
```

```
shall-not-trigger-pre-emption,
   may-trigger-pre-emption
Pre-emptionVulnerability ::= ENUMERATED {
    not-pre-emptable,
   pre-emptable
PriorityLevel
                            ::= INTEGER { spare (0), highest (1), lowest (14), no-priority (15) } (0..15)
ProSeAuthorized ::= SEQUENCE {
    proSeDirectDiscovery
                                ProSeDirectDiscovery
                                                                OPTIONAL,
    proSeDirectCommunication
                                ProSeDirectCommunication
                                                                OPTIONAL,
    iE-Extensions
                                ProtocolExtensionContainer { {ProSeAuthorized-ExtIEs} } OPTIONAL,
ProSeAuthorized-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    { ID id-ProSeUEtoNetworkRelaying
                                        CRITICALITY ignore EXTENSION ProSeUEtoNetworkRelaying
                                                                                                   PRESENCE optional },
    . . .
ProSeDirectDiscovery ::= ENUMERATED {
    authorized,
    not-authorized,
    . . .
ProSeDirectCommunication ::= ENUMERATED {
    authorized.
   not-authorized,
    . . .
ProSeUEtoNetworkRelaying ::= ENUMERATED {
    authorized,
   not-authorized,
ProtectedEUTRAResourceIndication::= SEQUENCE
    activationSFN
                                            INTEGER (0..1023),
    protectedResourceList
                                            ProtectedResourceList,
   mBSFNControlRegionLength
                                            INTEGER (0..3) OPTIONAL,
    pDCCHRegionLength
                                            INTEGER (1..3) OPTIONAL,
    iE-Extensions
                                            ProtocolExtensionContainer { {ProtectedEUTRAResourceIndication-ExtIEs} } OPTIONAL,
ProtectedEUTRAResourceIndication-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
} -- Rapporteur: missing extension --
```

```
ProtectedFootprintTimePattern ::= SEQUENCE {
    protectedFootprintTimePeriodicity
                                                     INTEGER (1..320, ...),
    protectedFootprintStartTime
                                                     INTEGER (1..20, ...),
    iE-Extensions
                                                     ProtocolExtensionContainer { {ProtectedFootprintTimePattern-ExtIEs} } OPTIONAL,
ProtectedFootprintTimePattern-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ProtectedResourceList ::= SEQUENCE (SIZE(1.. maxnoofProtectedResourcePatterns)) OF ProtectedResourceList-Item
ProtectedResourceList-Item ::= SEOUENCE {
    resourceType
                                    ResourceType,
    intraPRBProtectedResourceFootprint
                                            BIT STRING (SIZE(84, ...)),
    protectedFootprintFrequencyPattern
                                            BIT STRING (SIZE(6..110, ...)),
    protectedFootprintTimePattern
                                            ProtectedFootprintTimePattern,
                                            ProtocolExtensionContainer { {ProtectedResourceList-Item-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
ProtectedResourceList-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- 0
OCI ::= INTEGER (0..255)
-- R
RadioframeAllocationOffset ::= INTEGER (0..7, ...)
RadioframeAllocationPeriod ::= ENUMERATED{
   n1,
    n2,
   n4,
    n8,
    n16,
    n32,
    . . .
RadioResourceStatus ::= SEQUENCE {
    dL-GBR-PRB-usage
                                                DL-GBR-PRB-usage,
    uL-GBR-PRB-usage
                                                UL-GBR-PRB-usage,
    dL-non-GBR-PRB-usage
                                                DL-non-GBR-PRB-usage,
    uL-non-GBR-PRB-usage
                                                UL-non-GBR-PRB-usage,
    dL-Total-PRB-usage
                                                DL-Total-PRB-usage,
    uL-Total-PRB-usage
                                                UL-Total-PRB-usage,
    iE-Extensions
                                                ProtocolExtensionContainer { {RadioResourceStatus-ExtIEs} } OPTIONAL,
```

```
RadioResourceStatus-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    {ID id-DL-scheduling-PDCCH-CCE-usage
                                              CRITICALITY ignore EXTENSION DL-scheduling-PDCCH-CCE-usage
                                                                                                            PRESENCE optional } |
    ID id-UL-scheduling-PDCCH-CCE-usage
                                              CRITICALITY ignore EXTENSION UL-scheduling-PDCCH-CCE-usage
                                                                                                            PRESENCE optional },
ReceiveStatusofULPDCPSDUs ::= BIT STRING (SIZE(4096))
ReceiveStatusOfULPDCPSDUsExtended ::= BIT STRING (SIZE(1..16384))
ReceiveStatusOfULPDCPSDUsPDCP-SNlength18 ::= BIT STRING (SIZE(1..131072))
Reestablishment-Indication ::= ENUMERATED {
   reestablished,
Registration-Request
                     ::= ENUMERATED {
   start,
   stop,
    . . . ,
   partial-stop,
   add
RelativeNarrowbandTxPower ::= SEQUENCE {
   rNTP-PerPRB
                                      BIT STRING (SIZE(6..110, ...)),
   rNTP-Threshold
                                      RNTP-Threshold,
   numberOfCellSpecificAntennaPorts
                                      ENUMERATED {one, two, four, ...},
                                      INTEGER (0..3,...),
   pDCCH-InterferenceImpact
                                      INTEGER (0..4,...),
                                      ProtocolExtensionContainer { {RelativeNarrowbandTxPower-ExtIEs} } OPTIONAL,
   iE-Extensions
RelativeNarrowbandTxPower-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    PRESENCE optional },
   . . .
ReplacingCellsList ::= SEQUENCE (SIZE(0.. maxCellineNB)) OF ReplacingCellsList-Item
ReplacingCellsList-Item ::= SEQUENCE {
   eCGI
                   ECGI,
    . . .
ReportAmountMDT ::= ENUMERATED{r1, r2, r4, r8, r16, r32, r64, rinfinity}
ReportArea ::= ENUMERATED{
```

```
ecgi,
ReportCharacteristics ::= BIT STRING (SIZE (32))
ReportingPeriodicityCSIR ::= ENUMERATED {
   ms10,
    ms20,
    ms40,
    ms80,
ReportingPeriodicityRSRPMR ::= ENUMERATED {
    one-hundred-20-ms,
    two-hundred-40-ms,
    four-hundred-80-ms,
    six-hundred-40-ms,
ReportIntervalMDT ::= ENUMERATED {ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, min1, min6, min12, min30, min60}
ReservedSubframePattern ::= SEQUENCE{
    subframeType
                                    SubframeType,
    reservedSubframePattern
                                    BIT STRING (SIZE(10..160)),
    mBSFNControlRegionLength
                                    INTEGER (0..3),
    iE-Extensions
                                    ProtocolExtensionContainer { {ReservedSubframePattern-ExtIEs} } OPTIONAL,
    . . .
ReservedSubframePattern-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ResourceType ::= ENUMERATED {
    downlinknonCRS,
    cRS,
    uplink,
          ::= CHOICE {
ResumeID
    non-truncated BIT STRING(SIZE(40)),
    truncated
                   BIT STRING(SIZE(24)),
RLCMode ::= ENUMERATED {
   rlc-am,
    rlc-um-bidirectional,
    rlc-um-unidirectional-ul,
```

```
rlc-um-unidirectional-dl,
RLC-Status ::= SEOUENCE {
    reestablishment-Indication Reestablishment-Indication,
    iE-Extensions
                                ProtocolExtensionContainer { {RLC-Status-ExtIEs} } OPTIONAL,
RLC-Status-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
RNTP-Threshold ::= ENUMERATED {
    minusInfinity,
   minusEleven,
    minusTen,
    minusNine,
    minusEight,
    minusSeven,
    minusSix,
    minusFive,
    minusFour,
    minusThree,
    minusTwo,
    minusOne,
    zero,
    one,
    two,
    three,
RRC-Config-Ind ::= ENUMERATED {
    full-config,
    delta-config,
    . . .
RRC-Context ::= OCTET STRING
RRCConnReestabIndicator ::= ENUMERATED {
    reconfigurationFailure, handoverFailure, otherFailure, ...
-- The values correspond to the values of ReestablishmentCause reported from the UE in the RRCConnectionReestablishmentRequest, as defined in TS
36.331 [9]
RRCConnSetupIndicator::= ENUMERATED {
    rrcConnSetup,
RSRPMeasurementResult ::= SEQUENCE (SIZE(1..maxCellReport)) OF
```

```
SEOUENCE {
       rSRPCellID
                                        ECGI,
       rSRPMeasured
                                        INTEGER (0..97, ...),
       iE-Extensions
                                        ProtocolExtensionContainer { {RSRPMeasurementResult-ExtIEs} } OPTIONAL,
RSRPMeasurementResult-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
RSRPMRList ::= SEQUENCE (SIZE(1..maxUEReport)) OF
    SEOUENCE {
       rSRPMeasurementResult
                                        RSRPMeasurementResult,
                                        ProtocolExtensionContainer { {RSRPMRList-ExtIEs} } OPTIONAL,
       iE-Extensions
RSRPMRList-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    { ID id-UEID
                 CRITICALITY ignore EXTENSION UEID
                                                            PRESENCE optional },
    . . .
RRCContainer ::= OCTET STRING
-- S
S1TNLLoadIndicator ::= SEQUENCE {
    dLS1TNLLoadIndicator
                                    LoadIndicator,
    uLS1TNLLoadIndicator
                                    LoadIndicator,
   iE-Extensions
                                    ProtocolExtensionContainer { {S1TNLLoadIndicator-ExtIEs} } OPTIONAL,
S1TNLLoadIndicator-ExtIES X2AP-PROTOCOL-EXTENSION ::= {
SCGChangeIndication ::= ENUMERATED {pDCPCountWrapAround, pSCellChange, other, ...}
SecondaryRATUsageReportList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container {{SecondaryRATUsageReport-ItemIEs}}
SecondaryRATUsageReport-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-SecondaryRATUsageReport-Item
                                            CRITICALITY reject TYPE SecondaryRATUsageReport-Item
                                                                                                           PRESENCE mandatory },
    . . .
SecondaryRATUsageReport-Item ::= SEQUENCE {
    e-RAB-ID
                                    E-RAB-ID,
    secondaryRATType
                                   ENUMERATED {nr, ...},
    e-RABUsageReportList
                                   E-RABUsageReportList,
   iE-Extensions
                               ProtocolExtensionContainer { {SecondaryRATUsageReport-Item-ExtIEs} } OPTIONAL,
```

```
SecondaryRATUsageReport-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
SeNBSecurityKey ::= BIT STRING (SIZE(256))
SeNBtoMeNBContainer ::= OCTET STRING
ServedCells ::= SEQUENCE (SIZE (1.. maxCellineNB)) OF SEQUENCE {
                                    ServedCell-Information,
    servedCellInfo
   neighbour-Info
                                    Neighbour-Information
                                                                    OPTIONAL,
    iE-Extensions
                                    ProtocolExtensionContainer { {ServedCell-ExtIEs} } OPTIONAL,
ServedCell-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    { ID id-NRNeighbourInfoToAdd
                                            CRITICALITY ignore EXTENSION NRNeighbour-Information
                                                                                                           PRESENCE optional },
    . . .
ServedCell-Information ::= SEQUENCE {
    τCΙ
                        PCI,
    cellId
                        ECGI,
    t.AC
                        TAC.
    broadcastPLMNs
                        BroadcastPLMNs-Item,
    eUTRA-Mode-Info
                        EUTRA-Mode-Info,
                        ProtocolExtensionContainer { {ServedCell-Information-ExtIEs} } OPTIONAL,
    iE-Extensions
ServedCell-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::=
      ID id-Number-of-Antennaports
                                                                                                                 PRESENCE optional }
                                                CRITICALITY ignore EXTENSION Number-of-Antennaports
      ID id-PRACH-Configuration
                                                CRITICALITY ignore EXTENSION PRACH-Configuration
                                                                                                                 PRESENCE optional }
      ID id-MBSFN-Subframe-Info
                                                                                                                 PRESENCE optional}
                                                CRITICALITY ignore EXTENSION MBSFN-Subframe-Infolist
      ID id-CSG-Id
                                                CRITICALITY ignore EXTENSION CSG-Id
                                                                                                                 PRESENCE optional}
      ID id-MBMS-Service-Area-List
                                                CRITICALITY ignore EXTENSION MBMS-Service-Area-Identity-List
                                                                                                                 PRESENCE optional
      ID id-MultibandInfoList
                                                CRITICALITY ignore EXTENSION MultibandInfoList
                                                                                                                 PRESENCE optional }
      ID id-FregBandIndicatorPriority
                                                CRITICALITY ignore EXTENSION FreqBandIndicatorPriority
                                                                                                                 PRESENCE optional }
      ID id-BandwidthReducedSI
                                                CRITICALITY ignore EXTENSION BandwidthReducedSI
                                                                                                                 PRESENCE optional }
                                                                                                                 PRESENCE optional }
      ID id-ProtectedEUTRAResourceIndication
                                                CRITICALITY ignore EXTENSION ProtectedEUTRAResourceIndication
     ID id-BPLMN-ID-Info-EUTRA
                                                CRITICALITY ignore EXTENSION BPLMN-ID-Info-EUTRA
                                                                                                                 PRESENCE optional },
ServiceType ::= ENUMERATED{
    qMC-for-streaming-service,
    qMC-for-MTSI-service,
    . . .
SgNBCoordinationAssistanceInformation ::= ENUMERATED{
    coordination-not-required,
```

```
SgNBResourceCoordinationInformation ::= SEQUENCE {
                                    NRCGI.
    uLCoordinationInformation
                                    BIT STRING (SIZE(6..4400, ...)),
    dLCoordinationInformation
                                    BIT STRING (SIZE(6..4400, ...)) OPTIONAL,
                                    ProtocolExtensionContainer { {SqNBResourceCoordinationInformationExtIEs} }
    iE-Extensions
                                                                                                                       OPTIONAL,
SqNBResourceCoordinationInformationExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-ECGI
                                                         CRITICALITY ignore EXTENSION ECGI
                                                                                                                               PRESENCE optional } |
    { ID id-SgNBCoordinationAssistanceInformation
                                                         CRITICALITY reject EXTENSION SgnBCoordinationAssistanceInformation PRESENCE optional },
SqNB-UE-X2AP-ID ::= INTEGER (0..4294967295)
SIPTOBearerDeactivationIndication ::= ENUMERATED {
    true,
    . . .
SharedResourceType ::= CHOICE{
    uLOnlySharing
                        ULOnlySharing,
    uLandDLSharing
                        ULandDLSharing,
ShortMAC-I ::= BIT STRING (SIZE(16))
SGNB-Addition-Trigger-Ind
                             ::= ENUMERATED {
    sn-change,
    inter-eNB-HO,
    intra-eNB-HO,
    . . .
SourceOfUEActivityBehaviourInformation ::= ENUMERATED {
    subscription-information,
    statistics,
SpecialSubframe-Info ::= SEQUENCE {
    specialSubframePatterns
                                SpecialSubframePatterns,
    cyclicPrefixDL
                                CyclicPrefixDL,
    cyclicPrefixUL
                                CyclicPrefixUL,
                                ProtocolExtensionContainer { {SpecialSubframe-Info-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
```

```
SpecialSubframe-Info-ExtlEs X2AP-PROTOCOL-EXTENSION ::= {
SpecialSubframePatterns ::= ENUMERATED {
    , Ogaa
    ssp1,
    ssp2,
    ssp3,
    ssp4,
    ssp5,
    ssp6,
    ssp7,
    ssp8,
    . . .
SpectrumSharingGroupID ::= INTEGER (1..maxCellineNB)
SubbandCQI ::= SEQUENCE {
    subbandCQICodeword0
                                SubbandCQICodeword0,
    subbandCQICodeword1
                                SubbandCQICodeword1
                                                         OPTIONAL,
    iE-Extensions
                                ProtocolExtensionContainer { {SubbandCQI-ExtIEs} } OPTIONAL,
    . . .
Subscription-Based-UE-DifferentiationInfo ::= SEQUENCE {
    periodicCommunicationIndicator ENUMERATED {periodically, ondemand, ...}
                                                                                      OPTIONAL,
    periodicTime
                                    INTEGER (1..3600, ...)
                                                                                      OPTIONAL,
    scheduledCommunicationTime
                                    ScheduledCommunicationTime
                                                                                      OPTIONAL,
    stationaryIndication
                                    ENUMERATED {stationary, mobile, ...}
                                                                                      OPTIONAL,
    trafficProfile
                                    ENUMERATED {single-packet, dual-packets, multiple-packets, ...}
                                                                                                            OPTIONAL,
    batteryIndication
                                    ENUMERATED {battery-powered, battery-powered-not-rechargeable-or-replaceable, not-battery-powered, ...}
    OPTIONAL,
                                    ProtocolExtensionContainer { { Subscription-Based-UE-DifferentiationInfo-ExtIEs} } OPTIONAL,
    iE-Extensions
Subscription-Based-UE-DifferentiationInfo-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ScheduledCommunicationTime ::= SEQUENCE {
    dayofWeek
                           BIT STRING (SIZE(7))
                                                                                      OPTIONAL,
    timeofDavStart
                            INTEGER (0..86399, ...)
                                                                                      OPTIONAL,
    timeofDayEnd
                            INTEGER (0..86399, ...)
                                                                                      OPTIONAL,
    iE-Extensions
                            ProtocolExtensionContainer { { ScheduledCommunicationTime-ExtIEs}} OPTIONAL,
ScheduledCommunicationTime-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
SRVCCOperationPossible ::= ENUMERATED {
    possible,
    . . .
SubbandCOI-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
SubbandCQICodeword0 ::= CHOICE {
    four-bitCQI
                                     INTEGER (0..15, ...),
    two-bitSubbandDifferentialCQI
                                    INTEGER (0..3, ...),
    two-bitDifferentialCQI
                                     INTEGER (0..3, ...),
SubbandCOICodeword1 ::= CHOICE {
    four-bitCOI
                                         INTEGER (0..15, ...),
    three-bitSpatialDifferentialCOI
                                         INTEGER (0..7, ...),
    two-bitSubbandDifferentialCOI
                                         INTEGER (0..3, ...),
    two-bitDifferentialCQI
                                         INTEGER (0..3, ...),
    . . .
SubbandCQIList ::= SEQUENCE (SIZE(1.. maxSubband)) OF SubbandCQIItem
SubbandCQIItem ::= SEQUENCE {
    subbandCOI
                        SubbandCOI,
                        INTEGER (0..27,...),
    subbandIndex
                        ProtocolExtensionContainer { {SubbandCOIItem-ExtIEs} } OPTIONAL,
    iE-Extensions
SubbandCQIItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
SubbandSize ::= ENUMERATED {
    size2,
    size3,
    size4,
    size6,
    size8,
    . . .
SubscriberProfileIDforRFP ::= INTEGER (1..256)
SubframeAllocation ::= CHOICE {
    oneframe
                                     Oneframe,
    fourframes
                                     Fourframes,
SubframeAssignment ::= ENUMERATED {
```

```
sa0,
    sal,
    sa2.
    sa3,
    sa4,
    sa5,
    sa6,
    . . .
SubframeType ::= ENUMERATED{mbsfn,nonmbsfn,...}
SgNBSecurityKey ::= BIT STRING (SIZE(256))
SgNBtoMeNBContainer ::= OCTET STRING
SRBType ::= ENUMERATED {srb1, srb2, ...}
SCGConfigurationQuery ::= ENUMERATED {true,...}
SULInformation ::= SEQUENCE {
    sUL-ARFCN
                           INTEGER (0.. 3279165),
    sUL-TxBW
                           NR-TxBW,
    iE-Extensions
                          ProtocolExtensionContainer { {SULInformation-ExtIEs} }
                                                                                        OPTIONAL,
SupportedSULFreqBandItem ::= SEQUENCE {
    fregBandIndicatorNr
                                    INTEGER (1..1024,...),
    iE-Extensions
                            ProtocolExtensionContainer { {SupportedSULFreqBandItem-ExtIEs} }
                                                                                                  OPTIONAL,
    . . .
SupportedSULFreqBandItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
SULInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TABasedMDT::= SEQUENCE {
    tAListforMDT
                       TAListforMDT,
                       ProtocolExtensionContainer { {TABasedMDT-ExtIEs} } OPTIONAL,
    iE-Extensions
TABasedMDT-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TAC ::= OCTET STRING (SIZE (2))
```

```
TAIBasedMDT ::= SEQUENCE {
    tAIListforMDT
                           TAIListforMDT.
    iE-Extensions
                           ProtocolExtensionContainer { {TAIBasedMDT-ExtIEs} } OPTIONAL,
TAIBasedMDT-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TAIListforMDT ::= SEQUENCE (SIZE(1..maxnoofTAforMDT)) OF TAI-Item
TAI-Item ::= SEQUENCE {
    tAC
    pLMN-Identity
                       PLMN-Identity,
                       ProtocolExtensionContainer { {TAI-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
TAI-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TAListforMDT ::= SEQUENCE (SIZE(1..maxnoofTAforMDT)) OF TAC
TABasedOMC ::= SEQUENCE {
    tAListforOMC
                       TAListforOMC,
                       ProtocolExtensionContainer { {TABasedOMC-ExtIEs} } OPTIONAL,
    iE-Extensions
TABasedQMC-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TAListforQMC ::= SEQUENCE (SIZE(1..maxnoofTAforQMC)) OF TAC
TAIBasedQMC ::= SEQUENCE {
    tAIListforOMC
                       TAIListforOMC,
                       ProtocolExtensionContainer { {TAIBasedQMC-ExtIEs} } OPTIONAL,
    iE-Extensions
TAIBasedOMC-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TAIListforQMC ::= SEQUENCE (SIZE(1..maxnoofTAforQMC)) OF TAI-Item
TargetCellInUTRAN ::= OCTET STRING -- This IE is to be encoded according to the UTRAN Cell ID in the Last Visited UTRAN Cell Information IE in TS
25.413 [24]
TargeteNBtoSource-eNBTransparentContainer ::= OCTET STRING
```

```
TDD-Info ::= SEQUENCE {
    eARFCN
                                  EARFCN.
    transmission-Bandwidth
                                  Transmission-Bandwidth,
    subframeAssignment
                                  SubframeAssignment,
    specialSubframe-Info
                                  SpecialSubframe-Info,
   iE-Extensions
                                  ProtocolExtensionContainer { {TDD-Info-ExtIEs} } OPTIONAL,
TDD-Info-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-AdditionalSpecialSubframe-Info
                                                 CRITICALITY ignore EXTENSION Additional Special Subframe-Info
                                                                                                                   PRESENCE optional}
                                                                                                                   PRESENCE optional }
     ID id-eARFCNExtension
                                                 CRITICALITY reject EXTENSION EARFCNExtension
     ID id-AdditionalSpecialSubframeExtension-Info CRITICALITY ignore EXTENSION AdditionalSpecialSubframeExtension-Info PRESENCE optional}
     PRESENCE optional}
     ID id-NBIoT-UL-DL-AlignmentOffset
                                                 CRITICALITY reject EXTENSION NBIOT-UL-DL-AlignmentOffset
                                                                                                                   PRESENCE optional },
    . . .
TDD-InfoNeighbourServedNRCell-Information ::= SEQUENCE {
   nRFreqInfo
                          NRFregInfo,
                          ProtocolExtensionContainer { {TDD-InfoNeighbourServedNRCell-Information-ExtIEs} }
   iE-Extensions
                                                                                                          OPTIONAL,
TDD-InfoNeighbourServedNRCell-Information-ExtlEs X2AP-PROTOCOL-EXTENSION ::=
Threshold-RSRP ::= INTEGER(0..97)
Threshold-RSRQ ::= INTEGER(0..34)
TimeToWait ::= ENUMERATED {
   vls,
   v2s,
   v5s,
   v10s,
   v20s,
   v60s,
    . . .
Time-UE-StayedInCell ::= INTEGER (0..4095)
Time-UE-StayedInCell-EnhancedGranularity ::= INTEGER (0..40950)
TraceActivation ::= SEQUENCE {
   eUTRANTraceID
                                  EUTRANTraceID,
   interfacesToTrace
                                  InterfacesToTrace,
traceDepth
                                  TraceDepth,
traceCollectionEntityIPAddress
                                  TraceCollectionEntityIPAddress,
                                  ProtocolExtensionContainer { {TraceActivation-ExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
```

```
TraceActivation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-MDTConfiguration CRITICALITY ignore EXTENSION MDT-Configuration
                                                                                                PRESENCE optional |
    { ID id-UEAppLayerMeasConfig
                                       CRITICALITY ignore EXTENSION UEAppLayerMeasConfig
                                                                                                PRESENCE optional },
TraceCollectionEntityIPAddress ::= BIT STRING (SIZE(1..160, ...))
TraceDepth
                ::= ENUMERATED {
   minimum,
    medium,
    maximum.
    minimumWithoutVendorSpecificExtension,
    mediumWithoutVendorSpecificExtension,
    maximumWithoutVendorSpecificExtension,
Transmission-Bandwidth ::= ENUMERATED {
       bw6,
       bw15,
        bw25,
        bw50,
       bw75,
       bw100,
        . . . ,
       bw1
TransportLayerAddress
                                ::= BIT STRING (SIZE(1..160, ...))
TunnelInformation ::= SEQUENCE {
    transportLayerAddress TransportLayerAddress,
    uDP-Port-Number
                            Port-Number
                                                OPTIONAL,
    iE-Extensions
                            ProtocolExtensionContainer { {Tunnel-Information-ExtIEs} } OPTIONAL,
    . . .
Tunnel-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TypeOfError ::= ENUMERATED {
   not-understood,
   missing,
-- U
UEAggregateMaximumBitRate ::= SEQUENCE {
```

```
uEaggregateMaximumBitRateDownlink
                                     BitRate,
    uEaggregateMaximumBitRateUplink
                                     BitRate.
   iE-Extensions
                                     ProtocolExtensionContainer { {UEAggregate-MaximumBitrate-ExtIEs} } OPTIONAL,
UEAggregate-MaximumBitrate-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-extended-uEaggregateMaximumBitRateDownlink CRITICALITY ignore EXTENSION ExtendedBitRate PRESENCE optional}
     . . .
UEAppLayerMeasConfig ::= SEQUENCE {
    containerForAppLayerMeasConfig
                                         OCTET STRING (SIZE(1..1000)),
    areaScopeOfOMC
                      AreaScopeOfOMC,
   iE-Extensions
                      ProtocolExtensionContainer { {UEAppLayerMeasConfig-ExtIEs} } OPTIONAL,
    . . .
UEAppLayerMeasConfig-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    {ID id-serviceType CRITICALITY ignore EXTENSION ServiceType PRESENCE optional},
    . . .
UE-ContextKeptIndicator ::= ENUMERATED {
   true,
    . . .
UEID ::= BIT STRING (SIZE (16))
UE-HistoryInformation ::= SEQUENCE (SIZE(1..maxnoofCells)) OF LastVisitedCell-Item
UE-HistoryInformationFromTheUE ::= OCTET STRING
-- This IE is a transparent container and shall be encoded as the VisitedCellInfoList field contained in the UEInformationResponse message as
defined in TS 36.331 [9]
UE-S1AP-ID ::= INTEGER (0.. 4294967295)
UE-X2AP-ID ::= INTEGER (0..4095)
UE-X2AP-ID-Extension ::= INTEGER (0..4095, ...)
UE-RLF-Report-Container::= OCTET STRING
-- This IE is a transparent container and shall be encoded as the RLF-Report-r9 field contained in the UEInformationResponse message as defined in
TS 36.331 [9]
UE-RLF-Report-Container-for-extended-bands ::= OCTET STRING
-- This IE is a transparent container and shall be encoded as the RLF-Report-v9e0 field contained in the UEInformationResponse message as defined
in TS 36.331 [9]
UESecurityCapabilities ::= SEQUENCE {
    encryptionAlgorithms
                                     EncryptionAlgorithms,
   integrityProtectionAlgorithms
                                     IntegrityProtectionAlgorithms,
```

```
iE-Extensions
                                       ProtocolExtensionContainer { {UESecurityCapabilities-ExtIEs} }
                                                                                                          OPTIONAL,
UESecurityCapabilities-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UESidelinkAggregateMaximumBitRate ::= SEQUENCE {
    uESidelinkAggregateMaximumBitRate
    iE-Extensions
                                   ProtocolExtensionContainer { {UE-Sidelink-Aggregate-MaximumBitRate-ExtIEs} } OPTIONAL,
    . . .
UE-Sidelink-Aggregate-MaximumBitRate-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UEsToBeResetList ::= SEOUENCE (SIZE (1.. maxUEsinenqNBDU)) OF UEsToBeResetList-Item
UEsToBeResetList-Item::= SEQUENCE {
    meNB-ID
                           UE-X2AP-ID,
    meNB-ID-ext
                           UE-X2AP-ID-Extension
                                                                                                    OPTIONAL,
    sqNB-ID
                           SqNB-UE-X2AP-ID
                                                                                                    OPTIONAL,
    iE-Extensions
                           ProtocolExtensionContainer { {UEsToBeResetList-Item-ExtIEs} }
                                                                                                    OPTIONAL,
UEsToBeResetList-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ULandDLSharing ::= SEQUENCE{
    uLResourcesULandDLSharing
                                           ULResourcesULandDLSharing,
    dLResourcesULandDLSharing
                                           DLResourcesULandDLSharing,
    iE-Extensions ProtocolExtensionContainer { {ULandDLSharing-ExtIEs} }
                                                                                               OPTIONAL.
ULandDLSharing-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ULConfiguration::= SEQUENCE {
             UL-UE-Configuration,
    uL-PDCP
    iE-Extensions
                                   ProtocolExtensionContainer { {ULConfiguration-ExtIEs} } OPTIONAL,
ULConfiguration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UL-UE-Configuration::= ENUMERATED { no-data, shared, only, ... }
```

```
UL-GBR-PRB-usage::= INTEGER (0..100)
UL-HighInterferenceIndicationInfo ::= SEQUENCE (SIZE(1..maxCellineNB)) OF UL-HighInterferenceIndicationInfo-Item
UL-HighInterferenceIndicationInfo-Item ::= SEQUENCE {
    target-Cell-ID
                                    ECGI,
    ul-interferenceindication
                                    UL-HighInterferenceIndication,
    iE-Extensions
                                    ProtocolExtensionContainer { {UL-HighInterferenceIndicationInfo-Item-ExtIEs} } OPTIONAL,
    . . .
UL-HighInterferenceIndicationInfo-Item-ExtIES X2AP-PROTOCOL-EXTENSION ::= {
UL-HighInterferenceIndication ::= BIT STRING (SIZE(1..110, ...))
UL-InterferenceOverloadIndication ::= SEQUENCE (SIZE(1..maxnoofPRBs)) OF UL-InterferenceOverloadIndication-Item
UL-InterferenceOverloadIndication-Item ::= ENUMERATED {
    high-interference,
    medium-interference,
    low-interference,
UL-non-GBR-PRB-usage::= INTEGER (0..100)
ULOnlySharing ::= SEQUENCE{
    uLResourceBitmapULOnlySharing
                                    DataTrafficResources.
    iE-Extensions
                                    ProtocolExtensionContainer { {ULOnlySharing-ExtIEs} }
                                                                                                      OPTIONAL,
    . . .
ULOnlySharing-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ULResourceBitmapULandDLSharing ::= DataTrafficResources
ULResourcesULandDLSharing ::= CHOICE {
    unchanged
                        ULResourceBitmapULandDLSharing,
    changed
UL-scheduling-PDCCH-CCE-usage::= INTEGER (0..100)
UL-Total-PRB-usage::= INTEGER (0..100)
UsableABSInformation ::= CHOICE {
    fdd
                        UsableABSInformationFDD,
```

```
UsableABSInformationTDD,
    tdd
UsableABSInformationFDD ::= SEQUENCE {
    usable-abs-pattern-info
                                        BIT STRING (SIZE(40)),
    iE-Extensions
                                        ProtocolExtensionContainer { {UsableABSInformationFDD-ExtIEs} } OPTIONAL,
UsableABSInformationFDD-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UsableABSInformationTDD ::= SEQUENCE {
    usaable-abs-pattern-info
                                        BIT STRING (SIZE(1..70, ...)),
                                        ProtocolExtensionContainer { {UsableABSInformationTDD-ExtIEs} } OPTIONAL,
    iE-Extensions
UsableABSInformationTDD-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UserPlaneTrafficActivityReport ::= ENUMERATED {inactive, re-activated, ...}
-- V
V2XServicesAuthorized ::= SEQUENCE {
    vehicleUE
                       VehicleUE
                                                                                        OPTIONAL,
pedestrianUE
                       PedestrianUE
                                                                                        OPTIONAL,
   iE-Extensions
                      ProtocolExtensionContainer { {V2XServicesAuthorized-ExtIEs} }
                                                                                        OPTIONAL,
V2XServicesAuthorized-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
VehicleUE ::= ENUMERATED {
    authorized,
    not-authorized,
PedestrianUE ::= ENUMERATED {
    authorized,
   not-authorized,
-- W
```

404

```
WidebandCOI ::= SEOUENCE {
    widebandCOICodeword0
                                INTEGER (0..15, ...),
    widebandCOICodeword1
                                WidebandCOICodeword1
                                                             OPTIONAL.
    iE-Extensions
                                ProtocolExtensionContainer { {WidebandCOI-ExtIEs} } OPTIONAL,
WidebandCQI-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
WidebandCQICodeword1::= CHOICE {
                                            INTEGER (0..15, ...),
    four-bitCOI
    three-bitSpatialDifferentialCQI
                                            INTEGER (0..7, ...),
WLANMeasurementConfiguration ::= SEQUENCE {
    wlanMeasConfig
                                WLANMeasConfig,
    wlanMeasConfigNameList
                                WLANMeasConfigNameList
                                                                     OPTIONAL,
    wlan-rssi
                                ENUMERATED {true, ...}
                                                                     OPTIONAL,
    wlan-rtt
                                ENUMERATED {true, ...}
                                                                     OPTIONAL,
    iE-Extensions
                        ProtocolExtensionContainer { {WLANMeasurementConfiguration-ExtIEs} } OPTIONAL,
    . . .
WLANMeasurementConfiguration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
WLANMeasConfigNameList ::= SEQUENCE (SIZE(1..maxnoofWLANName)) OF WLANName
WLANMeasConfig::= ENUMERATED {setup,...}
WLANName ::= OCTET STRING (SIZE (1..32))
WTID ::= CHOICE {
    wTID-Type1
                        WTID-Type1,
                        WTID-Long-Type2,
    wTID-Type2
    . . .
WTID-Type1 ::= SEQUENCE {
    pLMN-Identity
                                    PLMN-Identity,
    shortWTID
                                    BIT STRING (SIZE(24)),
WTID-Long-Type2 ::= BIT STRING (SIZE(48))
WT-UE-XwAP-ID ::= OCTET STRING (SIZE (3))
-- X
```

```
X2BenefitValue ::= INTEGER (1..8, ...)
-- Y
-- Z
END
-- ASN1STOP
```

9.3.6 Common definitions

```
-- ASN1START
__ ********************************
-- Common definitions
__ ********************
X2AP-CommonDataTypes {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) x2ap (2) version1 (1) x2ap-CommonDataTypes (3) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
    ****************
-- Extension constants
__ ********************
maxPrivateIEs
                                    INTEGER ::= 65535
maxProtocolExtensions
                                    INTEGER ::= 65535
maxProtocolIEs
                                    INTEGER ::= 65535
__ *********************
-- Common Data Types
__ ********************
Criticality
            ::= ENUMERATED { reject, ignore, notify }
            ::= ENUMERATED { optional, conditional, mandatory }
Presence
PrivateIE-ID
            ::= CHOICE {
  local
                  INTEGER (0.. maxPrivateIEs),
   global
                  OBJECT IDENTIFIER
ProcedureCode
             ::= INTEGER (0..255)
```

```
ProtocolIE-ID ::= INTEGER (0..maxProtocolIEs)

TriggeringMessage ::= ENUMERATED { initiating-message, successful-outcome, unsuccessful-outcome}

END
-- ASN1STOP
```

9.3.7 Constant definitions

```
-- ASN1START
__ **********************
-- Constant definitions
__ ******************
X2AP-Constants {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) x2ap (2) version1 (1) x2ap-Constants (4) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
IMPORTS
   ProcedureCode,
   ProtocolIE-ID
FROM X2AP-CommonDataTypes;
__ ********************
-- Elementary Procedures
__ ***********************
id-handoverPreparation
                                                        ProcedureCode ::= 0
id-handoverCancel
                                                        ProcedureCode ::= 1
id-loadIndication
                                                        ProcedureCode ::= 2
id-errorIndication
                                                        ProcedureCode ::= 3
id-snStatusTransfer
                                                        ProcedureCode ::= 4
id-uEContextRelease
                                                        ProcedureCode ::= 5
id-x2Setup
                                                        ProcedureCode ::= 6
id-reset
                                                        ProcedureCode ::= 7
id-eNBConfigurationUpdate
                                                        ProcedureCode ::= 8
id-resourceStatusReportingInitiation
                                                        ProcedureCode ::= 9
id-resourceStatusReporting
                                                        ProcedureCode ::= 10
id-privateMessage
                                                        ProcedureCode ::= 11
id-mobilitySettingsChange
                                                        ProcedureCode ::= 12
id-rLFIndication
                                                        ProcedureCode ::= 13
id-handoverReport
                                                        ProcedureCode ::= 14
id-cellActivation
                                                        ProcedureCode ::= 15
id-x2Release
                                                        ProcedureCode ::= 16
```

```
id-x2APMessageTransfer
                                                              ProcedureCode ::= 17
id-x2Removal
                                                              ProcedureCode ::= 18
                                                              ProcedureCode ::= 19
id-seNBAdditionPreparation
id-seNBReconfigurationCompletion
                                                              ProcedureCode ::= 20
id-meNBinitiatedSeNBModificationPreparation
                                                              ProcedureCode ::= 21
id-seNBinitiatedSeNBModification
                                                              ProcedureCode ::= 22
id-meNBinitiatedSeNBRelease
                                                              ProcedureCode ::= 23
id-seNBinitiatedSeNBRelease
                                                              ProcedureCode ::= 24
id-seNBCounterCheck
                                                              ProcedureCode ::= 25
id-retrieveUEContext
                                                              ProcedureCode ::= 26
id-sgNBAdditionPreparation
                                                              ProcedureCode ::= 27
id-sgNBReconfigurationCompletion
                                                                  ProcedureCode ::= 28
id-meNBinitiatedSgNBModificationPreparation
                                                              ProcedureCode ::= 29
id-sqNBinitiatedSqNBModification
                                                                  ProcedureCode ::= 30
id-meNBinitiatedSqNBRelease
                                                              ProcedureCode ::= 31
id-sqNBinitiatedSqNBRelease
                                                              ProcedureCode ::= 32
                                                              ProcedureCode ::= 33
id-sqNBCounterCheck
                                                              ProcedureCode ::= 34
id-sqNBChange
id-rRCTransfer
                                                              ProcedureCode ::= 35
                                                              ProcedureCode ::= 36
id-endcX2Setup
id-endcConfigurationUpdate
                                                              ProcedureCode ::= 37
id-secondaryRATDataUsageReport
                                                              ProcedureCode ::= 38
id-endcCellActivation
                                                              ProcedureCode ::= 39
                                                              ProcedureCode ::= 40
id-endcPartialReset
id-eUTRANRCellResourceCoordination
                                                              ProcedureCode ::= 41
id-SgNBActivityNotification
                                                              ProcedureCode ::= 42
id-endcX2Removal
                                                              ProcedureCode ::= 43
id-dataForwardingAddressIndication
                                                              ProcedureCode ::= 44
                                                              ProcedureCode ::= 45
id-qNBStatusIndication
id-deactivateTrace
                                                              ProcedureCode ::= 46
                                                              ProcedureCode ::= 47
id-traceStart
id-endcConfigurationTransfer
                                                                  ProcedureCode ::= 48
__ *********************
-- Lists
      *****************
                                          INTEGER ::= 65535
maxEARFCN
maxEARFCNPlusOne
                                          INTEGER ::= 65536
newmaxEARFCN
                                          INTEGER ::= 262143
maxInterfaces
                                          INTEGER ::= 16
maxCellineNB
                                          INTEGER ::= 256
maxnoofBands
                                          INTEGER ::= 16
maxnoofBearers
                                          INTEGER ::= 256
maxNrOfErrors
                                          INTEGER ::= 256
maxnoofPDCP-SN
                                          INTEGER ::= 16
maxnoofEPLMNs
                                          INTEGER ::= 15
maxnoofEPLMNsPlusOne
                                          INTEGER ::= 16
maxnoofForbLACs
                                          INTEGER ::= 4096
maxnoofForbTACs
                                          INTEGER ::= 4096
maxnoofBPLMNs
                                          INTEGER ::= 6
maxnoofAdditionalPLMNs
                                          INTEGER ::= 6
maxnoofNeighbours
                                          INTEGER ::= 512
```

```
INTEGER ::= 110
maxnoofPRBs
maxPools
                                           INTEGER ::= 16
maxnoofCells
                                           INTEGER ::= 16
maxnoofMBSFN
                                           INTEGER ::= 8
maxFailedMeasObjects
                                           INTEGER ::= 32
maxnoofCellIDforMDT
                                           INTEGER ::= 32
maxnoofTAforMDT
                                           INTEGER ::= 8
maxnoofMBMSServiceAreaIdentities
                                           INTEGER ::= 256
maxnoofMDTPLMNs
                                           INTEGER ::= 16
maxnoofCoMPHypothesisSet
                                           INTEGER ::= 256
maxnoofCoMPCells
                                           INTEGER ::= 32
maxUEReport
                                           INTEGER ::= 128
maxCellReport
                                           INTEGER ::= 9
maxnoofPA
                                           INTEGER ::= 3
maxCSIProcess
                                           INTEGER ::= 4
maxCSIReport
                                           INTEGER ::= 2
maxSubband
                                           INTEGER ::= 14
maxofNRNeighbours
                                           INTEGER ::= 1024
maxCellinengNB
                                           INTEGER ::= 16384
                                           INTEGER ::= 32
-- maxnoofNRCarriers
maxnooftimeperiods
                                           INTEGER ::= 2
maxnoofCellIDforQMC
                                           INTEGER ::= 32
maxnoofTAforQMC
                                           INTEGER ::= 8
                                           INTEGER ::= 16
maxnoofPLMNforOMC
maxUEsinengNBDU
                                           INTEGER ::= 8192
maxnoofProtectedResourcePatterns
                                           INTEGER ::= 16
maxnoNRcellsSpectrumSharingWithE-UTRA
                                           INTEGER ::= 64
maxnoofNrCellBands
                                           INTEGER ::= 32
maxnoofBluetoothName
                                           INTEGER ::= 4
maxnoofWLANName
                                           INTEGER ::= 4
maxnoofextBPLMNs
                                           INTEGER ::= 12
****************
-- IEs
id-E-RABs-Admitted-Item
id-E-RABs-Admitted-List
id-E-RAB-Item
id-E-RABs-NotAdmitted-List
id-E-RABs-ToBeSetup-Item
id-Cause
id-CellInformation
id-CellInformation-Item
id-New-eNB-UE-X2AP-ID
id-Old-eNB-UE-X2AP-ID
id-TargetCell-ID
id-TargeteNBtoSource-eNBTransparentContainer
id-TraceActivation
id-UE-ContextInformation
id-UE-HistoryInformation
id-UE-X2AP-ID
```

ProtocolIE-ID ::= 0

ProtocolIE-ID ::= 1

ProtocolIE-ID ::= 2

ProtocolIE-ID ::= 3

ProtocolIE-ID ::= 4

ProtocolIE-ID ::= 5

ProtocolIE-ID ::= 6

ProtocolIE-ID ::= 7

ProtocolIE-ID ::= 9

ProtocolIE-ID ::= 10

ProtocolIE-ID ::= 11

ProtocolIE-ID ::= 12

ProtocolIE-ID ::= 13

ProtocolIE-ID ::= 14

ProtocolIE-ID ::= 15

ProtocolIE-ID ::= 16

```
id-CriticalityDiagnostics
                                                                             ProtocolIE-ID ::= 17
id-E-RABs-SubjectToStatusTransfer-List
                                                                             ProtocolIE-ID ::= 18
id-E-RABs-SubjectToStatusTransfer-Item
                                                                             ProtocolIE-ID ::= 19
id-ServedCells
                                                                             ProtocolIE-ID ::= 20
id-GlobalENB-ID
                                                                             ProtocolIE-ID ::= 21
id-TimeToWait
                                                                             ProtocolIE-ID ::= 22
id-GUMMEI-ID
                                                                             ProtocolIE-ID ::= 23
id-GUGroupIDList
                                                                             ProtocolIE-ID ::= 24
id-ServedCellsToAdd
                                                                             ProtocolTE-TD ::= 25
id-ServedCellsToModify
                                                                             ProtocolIE-ID ::= 26
id-ServedCellsToDelete
                                                                             ProtocolIE-ID ::= 27
id-Registration-Request
                                                                             ProtocolIE-ID ::= 28
id-CellToReport
                                                                             ProtocolIE-ID ::= 29
id-ReportingPeriodicity
                                                                             ProtocolIE-ID ::= 30
id-CellToReport-Item
                                                                             ProtocolIE-ID ::= 31
id-CellMeasurementResult
                                                                             ProtocolIE-ID ::= 32
id-CellMeasurementResult-Item
                                                                             ProtocolIE-ID ::= 33
id-GUGroupIDToAddList
                                                                             ProtocolIE-ID ::= 34
id-GUGroupIDToDeleteList
                                                                             ProtocolIE-ID ::= 35
id-SRVCCOperationPossible
                                                                             ProtocolIE-ID ::= 36
id-Measurement-ID
                                                                             ProtocolTE-TD ::= 37
id-ReportCharacteristics
                                                                             ProtocolIE-ID ::= 38
id-ENB1-Measurement-ID
                                                                             ProtocolIE-ID ::= 39
id-ENB2-Measurement-ID
                                                                             ProtocolIE-ID ::= 40
                                                                             ProtocolIE-ID ::= 41
id-Number-of-Antennaports
id-CompositeAvailableCapacityGroup
                                                                             ProtocolIE-ID ::= 42
id-ENB1-Cell-ID
                                                                             ProtocolIE-ID ::= 43
id-ENB2-Cell-ID
                                                                             ProtocolIE-ID ::= 44
id-ENB2-Proposed-Mobility-Parameters
                                                                             ProtocolIE-ID ::= 45
id-ENB1-Mobility-Parameters
                                                                             ProtocolIE-ID ::= 46
                                                                             ProtocolIE-ID ::= 47
id-ENB2-Mobility-Parameters-Modification-Range
id-FailureCellPCT
                                                                             ProtocolIE-ID ::= 48
id-Re-establishmentCellECGI
                                                                             ProtocolIE-ID ::= 49
id-FailureCellCRNTT
                                                                             ProtocolIE-ID ::= 50
id-ShortMAC-I
                                                                             ProtocolIE-ID ::= 51
id-SourceCellECGI
                                                                             ProtocolIE-ID ::= 52
id-FailureCellECGI
                                                                             ProtocolIE-ID ::= 53
id-HandoverReportType
                                                                             ProtocolIE-ID ::= 54
id-PRACH-Configuration
                                                                             ProtocolIE-ID ::= 55
id-MBSFN-Subframe-Info
                                                                             ProtocolIE-ID ::= 56
id-ServedCellsToActivate
                                                                             ProtocolIE-ID ::= 57
id-ActivatedCellList
                                                                             ProtocolIE-ID ::= 58
id-DeactivationIndication
                                                                             ProtocolIE-ID ::= 59
id-UE-RLF-Report-Container
                                                                             ProtocolIE-ID ::= 60
id-ABSInformation
                                                                             ProtocolIE-ID ::= 61
id-InvokeIndication
                                                                             ProtocolIE-ID ::= 62
id-ABS-Status
                                                                             ProtocolIE-ID ::= 63
id-PartialSuccessIndicator
                                                                             ProtocolIE-ID ::= 64
id-MeasurementInitiationResult-List
                                                                             ProtocolIE-ID ::= 65
id-MeasurementInitiationResult-Item
                                                                             ProtocolIE-ID ::= 66
id-MeasurementFailureCause-Item
                                                                             ProtocolIE-ID ::= 67
id-CompleteFailureCauseInformation-List
                                                                             ProtocolIE-ID ::= 68
id-CompleteFailureCauseInformation-Item
                                                                             ProtocolIE-ID ::= 69
id-CSG-Id
                                                                             ProtocolIE-ID ::= 70
```

id accomply and in the true	D
id-CSGMembershipStatus	ProtocolIE-ID ::= 71
id-MDTConfiguration	ProtocolIE-ID ::= 72
id-ManagementBasedMDTallowed	ProtocolIE-ID ::= 74
id-RRCConnSetupIndicator	ProtocolIE-ID ::= 75
id-NeighbourTAC	ProtocolIE-ID ::= 76
id-Time-UE-StayedInCell-EnhancedGranularity	ProtocolIE-ID ::= 77
id-RRCConnReestabIndicator	ProtocolIE-ID ::= 78
id-MBMS-Service-Area-List	ProtocolIE-ID ::= 79
id-HO-cause	ProtocolIE-ID ::= 80
id-TargetCellInUTRAN	ProtocolIE-ID ::= 81
id-MobilityInformation	ProtocolIE-ID ::= 82
id-SourceCellCRNTI	ProtocolIE-ID ::= 83
id-MultibandInfoList	ProtocolIE-ID ::= 84
id-M3Configuration	ProtocolIE-ID ::= 85
id-M4Configuration	ProtocolIE-ID ::= 86
id-M5Configuration	ProtocolIE-ID ::= 87
id-MDT-Location-Info	ProtocolIE-ID ::= 88
id-ManagementBasedMDTPLMNList	ProtocolIE-ID ::= 89
id-SignallingBasedMDTPLMNList	ProtocolIE-ID ::= 90
id-ReceiveStatusOfULPDCPSDUsExtended	ProtocolIE-ID ::= 91
id-ULCOUNTValueExtended	ProtocolIE-ID ::= 92
id-DLCOUNTValueExtended	ProtocolIE-ID ::= 93
id-eARFCNExtension	ProtocolIE-ID ::= 94
id-UL-EARFCNExtension	ProtocolIE-ID ::= 95
id-DL-EARFCNExtension	ProtocolIE-ID ::= 96
id-AdditionalSpecialSubframe-Info	ProtocolIE-ID ::= 97
id-Masked-IMEISV	ProtocolIE-ID ::= 98
id-IntendedULDLConfiguration	ProtocolIE-ID ::= 99
id-ExtendedULInterferenceOverloadInfo	ProtocolIE-ID ::= 100
id-RNL-Header	ProtocolIE-ID ::= 101
id-x2APMessage	ProtocolIE-ID ::= 102
id-ProSeAuthorized	ProtocolIE-ID ::= 103
id-ExpectedUEBehaviour	ProtocolIE-ID ::= 104
id-UE-HistoryInformationFromTheUE	ProtocolIE-ID ::= 105
id-DynamicDLTransmissionInformation	ProtocolIE-ID ::= 106
id-UE-RLF-Report-Container-for-extended-bands	ProtocolIE-ID ::= 107
id-CoMPInformation	ProtocolIE-ID ::= 108
id-ReportingPeriodicityRSRPMR	ProtocolIE-ID ::= 109
id-RSRPMRList	ProtocolIE-ID ::= 110
id-MeNB-UE-X2AP-ID	ProtocolIE-ID ::= 111
id-SenB-UE-X2AP-ID	ProtocolIE-ID ::= 112
id-UE-SecurityCapabilities	ProtocolIE-ID ::= 113
id-SenBSecurityKey	ProtocolIE-ID ::= 114
id-SeNBUEAggregateMaximumBitRate	ProtocolIE-ID ::= 115
id-ServingPLMN	ProtocolIE-ID ::= 116
id-E-RABs-ToBeAdded-List	ProtocolIE-ID ::= 117
id-E-RABs-ToBeAdded-Item	ProtocolIE-ID ::= 118
id-MeNBtoSeNBContainer	ProtocolIE-ID ::= 119
id-E-RABs-Admitted-ToBeAdded-List	ProtocolIE-ID ::= 120
id-E-RABs-Admitted-ToBeAdded-Item	ProtocolIE-ID ::= 120
id-SeNBtoMeNBContainer	ProtocolIE-ID ::= 121
id-ResponseInformationSeNBReconfComp	ProtocolIE-ID ::= 122
id-UE-ContextInformationSeNBModReg	ProtocoliE-ID ::= 123
id-E-RABs-ToBeAdded-ModReqItem	ProtocolIE-ID ::= 124
	1100000111 11 1- 1110

```
id-E-RABs-ToBeModified-ModRegItem
                                                                             ProtocolIE-ID ::= 126
id-E-RABs-ToBeReleased-ModRegItem
                                                                             ProtocolIE-ID ::= 127
id-E-RABs-Admitted-ToBeAdded-ModAckList
                                                                             ProtocolIE-ID ::= 128
id-E-RABs-Admitted-ToBeModified-ModAckList
                                                                             ProtocolIE-ID ::= 129
id-E-RABs-Admitted-ToBeReleased-ModAckList
                                                                             ProtocolIE-ID ::= 130
id-E-RABs-Admitted-ToBeAdded-ModAckItem
                                                                             ProtocolIE-ID ::= 131
id-E-RABs-Admitted-ToBeModified-ModAckItem
                                                                             ProtocolIE-ID ::= 132
id-E-RABs-Admitted-ToBeReleased-ModAckItem
                                                                             ProtocolIE-ID ::= 133
id-E-RABs-ToBeReleased-ModRegd
                                                                             ProtocolIE-ID ::= 134
id-E-RABs-ToBeReleased-ModRegdItem
                                                                             ProtocolIE-ID ::= 135
id-SCGChangeIndication
                                                                             ProtocolIE-ID ::= 136
id-E-RABs-ToBeReleased-List-RelReg
                                                                             ProtocolIE-ID ::= 137
id-E-RABs-ToBeReleased-RelRegItem
                                                                             ProtocolIE-ID ::= 138
id-E-RABs-ToBeReleased-List-RelConf
                                                                             ProtocolIE-ID ::= 139
id-E-RABs-ToBeReleased-RelConfItem
                                                                             ProtocolIE-ID ::= 140
id-E-RABs-SubjectToCounterCheck-List
                                                                             ProtocolIE-ID ::= 141
id-E-RABs-SubjectToCounterCheckItem
                                                                             ProtocolIE-ID ::= 142
id-CoverageModificationList
                                                                             ProtocolIE-ID ::= 143
id-ReportingPeriodicityCSIR
                                                                             ProtocolIE-ID ::= 145
id-CSIReportList
                                                                             ProtocolIE-ID ::= 146
id-UEID
                                                                             ProtocolTE-TD ::= 147
id-enhancedRNTP
                                                                             ProtocolIE-ID ::= 148
id-ProSeUEtoNetworkRelaying
                                                                             ProtocolIE-ID ::= 149
id-ReceiveStatusOfULPDCPSDUsPDCP-SNlength18
                                                                             ProtocolIE-ID ::= 150
id-ULCOUNTValuePDCP-SNlength18
                                                                             ProtocolIE-ID ::= 151
id-DLCOUNTValuePDCP-SNlength18
                                                                             ProtocolIE-ID ::= 152
id-UE-ContextReferenceAtSeNB
                                                                             ProtocolIE-ID ::= 153
id-UE-ContextKeptIndicator
                                                                             ProtocolIE-ID ::= 154
id-New-eNB-UE-X2AP-ID-Extension
                                                                             ProtocolIE-ID ::= 155
id-Old-eNB-UE-X2AP-ID-Extension
                                                                             ProtocolIE-ID ::= 156
id-MeNB-UE-X2AP-ID-Extension
                                                                             ProtocolIE-ID ::= 157
id-SeNB-UE-X2AP-ID-Extension
                                                                             ProtocolIE-ID ::= 158
id-LHN-ID
                                                                             ProtocolIE-ID ::= 159
id-FreqBandIndicatorPriority
                                                                             ProtocolIE-ID ::= 160
id-M6Configuration
                                                                             ProtocolIE-ID ::= 161
id-M7Configuration
                                                                             ProtocolIE-ID ::= 162
id-Tunnel-Information-for-BBF
                                                                             ProtocolIE-ID ::= 163
id-SIPTO-BearerDeactivationIndication
                                                                             ProtocolIE-ID ::= 164
id-GW-TransportLayerAddress
                                                                             ProtocolIE-ID ::= 165
id-Correlation-ID
                                                                             ProtocolIE-ID ::= 166
id-SIPTO-Correlation-ID
                                                                             ProtocolIE-ID ::= 167
id-SIPTO-L-GW-TransportLayerAddress
                                                                             ProtocolIE-ID ::= 168
id-X2RemovalThreshold
                                                                             ProtocolIE-ID ::= 169
id-CellReportingIndicator
                                                                             ProtocolIE-ID ::= 170
id-BearerType
                                                                             ProtocolIE-ID ::= 171
id-resumeID
                                                                             ProtocolIE-ID ::= 172
id-UE-ContextInformationRetrieve
                                                                             ProtocolIE-ID ::= 173
id-E-RABs-ToBeSetupRetrieve-Item
                                                                             ProtocolIE-ID ::= 174
id-NewEUTRANCellIdentifier
                                                                             ProtocolIE-ID ::= 175
id-V2XServicesAuthorized
                                                                             ProtocolIE-ID ::= 176
id-OffsetOfNbiotChannelNumberToDL-EARFCN
                                                                             ProtocolIE-ID ::= 177
id-OffsetOfNbiotChannelNumberToUL-EARFCN
                                                                             ProtocolIE-ID ::= 178
id-AdditionalSpecialSubframeExtension-Info
                                                                             ProtocolIE-ID ::= 179
id-BandwidthReducedSI
                                                                             ProtocolIE-ID ::= 180
```

```
id-MakeBeforeBreakIndicator
id-IIE-ContextReferenceAtWT
id-WT-UE-ContextKeptIndicator
id-UESidelinkAggregateMaximumBitRate
id-uL-GTPtunnelEndpoint
id-DL-scheduling-PDCCH-CCE-usage
id-UL-scheduling-PDCCH-CCE-usage
id-UEAppLaverMeasConfig
id-extended-e-RAB-MaximumBitrateDL
id-extended-e-RAB-MaximumBitrateUL
id-extended-e-RAB-GuaranteedBitrateDL
id-extended-e-RAB-GuaranteedBitrateUL
id-extended-uEaggregateMaximumBitRateDownlink
id-extended-uEaggregateMaximumBitRateUplink
id-NRrestrictioninEPSasSecondaryRAT
id-SqNBSecurityKey
id-SqNBUEAggregateMaximumBitRate
id-E-RABs-ToBeAdded-SqNBAddRegList
id-MeNBtoSqNBContainer
id-SqNB-UE-X2AP-ID
id-RequestedSplitSRBs
id-E-RABs-ToBeAdded-SgNBAddReq-Item
id-E-RABs-Admitted-ToBeAdded-SgNBAddRegAckList
id-SqNBtoMeNBContainer
id-AdmittedSplitSRBs
id-E-RABs-Admitted-ToBeAdded-SqNBAddRegAck-Item
id-ResponseInformationSqNBReconfComp
id-UE-ContextInformation-SqNBModReq
id-E-RABs-ToBeAdded-SqNBModReg-Item
id-E-RABs-ToBeModified-SqNBModReq-Item
id-E-RABs-ToBeReleased-SqNBModReq-Item
id-E-RABs-Admitted-ToBeAdded-SgNBModAckList
id-E-RABs-Admitted-ToBeModified-SqNBModAckList
id-E-RABs-Admitted-ToBeReleased-SgNBModAckList
id-E-RABs-Admitted-ToBeAdded-SqNBModAck-Item
id-E-RABs-Admitted-ToBeModified-SqNBModAck-Item
id-E-RABs-Admitted-ToBeReleased-SqNBModAck-Item
id-E-RABs-ToBeReleased-SqNBModRegdList
id-E-RABs-ToBeModified-SqNBModRegdList
id-E-RABs-ToBeReleased-SqNBModRegd-Item
id-E-RABs-ToBeModified-SqNBModRegd-Item
id-E-RABs-ToBeReleased-SqNBChaConfList
id-E-RABs-ToBeReleased-SqNBChaConf-Item
id-E-RABs-ToBeReleased-SqNBRelRegList
id-E-RABs-ToBeReleased-SqNBRelReq-Item
id-E-RABs-ToBeReleased-SgNBRelConfList
id-E-RABs-ToBeReleased-SqNBRelConf-Item
id-E-RABs-SubjectToSgNBCounterCheck-List
id-E-RABs-SubjectToSqNBCounterCheck-Item
id-RRCContainer
id-SRBType
id-Target-SqNB-ID
id-HandoverRestrictionList
id-SCGConfigurationOuery
```

ProtocolIE-ID ::= 181 ProtocolIE-ID ::= 182 ProtocolIE-ID ::= 183 ProtocolIE-ID ::= 184 ProtocolIE-ID ::= 185 ProtocolIE-ID ::= 193 ProtocolIE-ID ::= 194 ProtocolIE-ID ::= 195 ProtocolIE-ID ::= 196 ProtocolIE-ID ::= 197 ProtocolIE-ID ::= 198 ProtocolIE-ID ::= 199 ProtocolIE-ID ::= 200 ProtocolIE-ID ::= 201 ProtocolIE-ID ::= 202 ProtocolIE-ID ::= 203 ProtocolIE-ID ::= 204 ProtocolIE-ID ::= 205 ProtocolIE-ID ::= 206 ProtocolIE-ID ::= 207 ProtocolTE-TD ::= 208 ProtocolIE-ID ::= 209 ProtocolIE-ID ::= 210 ProtocolIE-ID ::= 211 ProtocolIE-ID ::= 212 ProtocolIE-ID ::= 213 ProtocolIE-ID ::= 214 ProtocolIE-ID ::= 215 ProtocolIE-ID ::= 216 ProtocolIE-ID ::= 217 ProtocolIE-ID ::= 218 ProtocolIE-ID ::= 219 ProtocolIE-ID ::= 220 ProtocolIE-ID ::= 221 ProtocolIE-ID ::= 222 ProtocolIE-ID ::= 223 ProtocolIE-ID ::= 224 ProtocolIE-ID ::= 225 ProtocolIE-ID ::= 226 ProtocolIE-ID ::= 227 ProtocolIE-ID ::= 228 ProtocolIE-ID ::= 229 ProtocolIE-ID ::= 230 ProtocolIE-ID ::= 231 ProtocolIE-ID ::= 232 ProtocolIE-ID ::= 233 ProtocolIE-ID ::= 234 ProtocolIE-ID ::= 235 ProtocolIE-ID ::= 236 ProtocolIE-ID ::= 237 ProtocolIE-ID ::= 238 ProtocolIE-ID ::= 239 ProtocolIE-ID ::= 240 ProtocolIE-ID ::= 241

```
id-SplitSRB
                                                                             ProtocolIE-ID ::= 242
id-NRUeReport
                                                                             ProtocolIE-ID ::= 243
id-InitiatingNodeType-EndcX2Setup
                                                                             ProtocolIE-ID ::= 244
id-InitiatingNodeType-EndcConfigUpdate
                                                                            ProtocolIE-ID ::= 245
id-RespondingNodeType-EndcX2Setup
                                                                             ProtocolIE-ID ::= 246
id-RespondingNodeType-EndcConfigUpdate
                                                                             ProtocolIE-ID ::= 247
id-NRUESecurityCapabilities
                                                                             ProtocolIE-ID ::= 248
id-PDCPChangeIndication
                                                                             ProtocolIE-ID ::= 249
id-ServedEUTRAcellsENDCX2ManagementList
                                                                             ProtocolTE-TD ::= 250
id-CellAssistanceInformation
                                                                                 ProtocolIE-ID ::= 251
id-Globalen-qNB-ID
                                                                             ProtocolIE-ID ::= 252
id-ServedNRcellsENDCX2ManagementList
                                                                                 ProtocolIE-ID ::= 253
id-UE-ContextReferenceAtSqNB
                                                                                 ProtocolIE-ID ::= 254
id-SecondaryRATUsageReport.
                                                                             ProtocolIE-ID ::= 255
id-ActivationID
                                                                             ProtocolIE-ID ::= 256
id-MeNBResourceCoordinationInformation
                                                                             ProtocolIE-ID ::= 257
id-SqNBResourceCoordinationInformation
                                                                             ProtocolIE-ID ::= 258
id-ServedEUTRAcellsToModifyListENDCConfUpd
                                                                             ProtocolIE-ID ::= 259
id-ServedEUTRAcellsToDeleteListENDCConfUpd
                                                                             ProtocolIE-ID ::= 260
id-ServedNRcellsToModifyListENDCConfUpd
                                                                             ProtocolIE-ID ::= 261
id-ServedNRcellsToDeleteListENDCConfUpd
                                                                             ProtocolIE-ID ::= 262
id-E-RABUsageReport-Item
                                                                                 ProtocolIE-ID ::= 263
id-Old-SqNB-UE-X2AP-ID
                                                                             ProtocolIE-ID ::= 264
id-SecondaryRATUsageReportList
                                                                             ProtocolIE-ID ::= 265
id-SecondaryRATUsageReport-Item
                                                                             ProtocolIE-ID ::= 266
id-ServedNRCellsToActivate
                                                                             ProtocolIE-ID ::= 267
id-ActivatedNRCellList
                                                                             ProtocolIE-ID ::= 268
id-SelectedPLMN
                                                                             ProtocolIE-ID ::= 269
id-UEs-ToBeReset
                                                                             ProtocolIE-ID ::= 270
id-UEs-Admitted-ToBeReset
                                                                             ProtocolIE-ID ::= 271
id-RRCConfigIndication
                                                                             ProtocolIE-ID ::= 272
id-DownlinkPacketLossRate
                                                                             ProtocolIE-ID ::= 273
id-UplinkPacketLossRate
                                                                             ProtocolIE-ID ::= 274
id-SubscriberProfileIDforRFP
                                                                             ProtocolIE-ID ::= 275
id-serviceTvpe
                                                                             ProtocolIE-ID ::= 276
id-AerialUEsubscriptionInformation
                                                                             ProtocolIE-ID ::= 277
id-SGNB-Addition-Trigger-Ind
                                                                             ProtocolIE-ID ::= 278
id-MeNBCell-ID
                                                                             ProtocolIE-ID ::= 279
id-RequestedSplitSRBsrelease
                                                                             ProtocolIE-ID ::= 280
id-AdmittedSplitSRBsrelease
                                                                             ProtocolIE-ID ::= 281
id-NRS-NSSS-PowerOffset
                                                                             ProtocolIE-ID ::= 282
id-NSSS-NumOccasionDifferentPrecoder
                                                                             ProtocolIE-ID ::= 283
id-ProtectedEUTRAResourceIndication
                                                                             ProtocolIE-ID ::= 284
id-InitiatingNodeType-EutranrCellResourceCoordination
                                                                             ProtocolIE-ID ::= 285
id-RespondingNodeType-EutranrCellResourceCoordination
                                                                             ProtocolIE-ID ::= 286
id-DataTrafficResourceIndication
                                                                             ProtocolIE-ID ::= 287
                                                                             ProtocolIE-ID ::= 288
id-SpectrumSharingGroupID
id-ListofEUTRACellsinEUTRACoordinationReg
                                                                             ProtocolIE-ID ::= 289
id-ListofEUTRACellsinEUTRACoordinationResp
                                                                             ProtocolIE-ID ::= 290
id-ListofEUTRACellsinNRCoordinationReg
                                                                            ProtocolIE-ID ::= 291
id-ListofNRCellsinNRCoordinationReg
                                                                             ProtocolIE-ID ::= 292
id-ListofNRCellsinNRCoordinationResp
                                                                             ProtocolIE-ID ::= 293
id-E-RABs-AdmittedToBeModified-SgNBModConfList
                                                                             ProtocolIE-ID ::= 294
id-E-RABs-AdmittedToBeModified-SqNBModConf-Item
                                                                            ProtocolIE-ID ::= 295
```

id-UEContextLevelUserPlaneActivity	ProtocolIE-ID ::= 296
id-ERABActivityNotifyItemList	ProtocolIE-ID ::= 297
id-InitiatingNodeType-EndcX2Removal	ProtocolIE-ID ::= 298
id-RespondingNodeType-EndcX2Removal	ProtocolIE-ID ::= 299
id-RLC-Status	ProtocolIE-ID ::= 300
id-CNTypeRestrictions	ProtocolIE-ID ::= 301
id-uLpDCPSnLength	ProtocolIE-ID ::= 302
id-BluetoothMeasurementConfiguration	ProtocolIE-ID ::= 303
id-WLANMeasurementConfiguration	ProtocolIE-ID ::= 304
id-NRrestrictionin5GS	ProtocolIE-ID ::= 305
id-dL-Forwarding	ProtocolIE-ID ::= 306
id-E-RABs-DataForwardingAddress-List	ProtocolIE-ID ::= 307
id-E-RABs-DataForwardingAddress-Item	ProtocolIE-ID ::= 308
id-Subscription-Based-UE-DifferentiationInfo	ProtocolIE-ID ::= 309
id-GNBOverloadInformation	ProtocolIE-ID ::= 310
id-dLPDCPSnLength	ProtocolIE-ID ::= 311
id-secondarysgNBDLGTPTEIDatPDCP	ProtocolIE-ID ::= 312
id-secondarymeNBULGTPTEIDatPDCP	ProtocolIE-ID ::= 313
id-lCID	ProtocolIE-ID ::= 314
id-duplicationActivation	ProtocolIE-ID ::= 315
id-ECGI	ProtocolIE-ID ::= 316
id-RLCMode-transferred	ProtocolIE-ID ::= 317
id-E-RABs-Admitted-ToBeReleased-SqNBRelReqAckList	ProtocolIE-ID ::= 318
id-E-RABs-Admitted-ToBeReleased-SgNBRelReqAck-Item	ProtocolIE-ID ::= 319
id-E-RABs-ToBeReleased-SqNBRelReqdList	ProtocolIE-ID ::= 320
id-E-RABs-ToBeReleased-SqNBRelReqd-Item	ProtocolIE-ID ::= 321
id-NRCGI	ProtocolIE-ID ::= 322
id-MeNBCoordinationAssistanceInformation	ProtocolIE-ID ::= 323
id-SgNBCoordinationAssistanceInformation	ProtocolIE-ID ::= 324
id-new-drb-ID-req	ProtocolIE-ID ::= 325
id-endcSONConfigurationTransfer	ProtocolIE-ID ::= 326
id-NRNeighbourInfoToAdd	ProtocolIE-ID ::= 327
id-NRNeighbourInfoToModify	ProtocolIE-ID ::= 328
id-DesiredActNotificationLevel	ProtocolIE-ID ::= 329
id-LocationInformationSgNBReporting	ProtocolIE-ID ::= 330
id-LocationInformationSqNB	ProtocolIE-ID ::= 331
id-LastNG-RANPLMNIdentity	ProtocolIE-ID ::= 332
id-EUTRANTraceID	ProtocolIE-ID ::= 333
id-additionalPLMNs-Item	ProtocolIE-ID ::= 334
id-InterfaceInstanceIndication	ProtocolIE-ID ::= 335
id-BPLMN-ID-Info-EUTRA	ProtocolIE-ID ::= 336
id-BPLMN-ID-Info-NR	ProtocolIE-ID ::= 337
id-NBIoT-UL-DL-AlignmentOffset	ProtocolIE-ID ::= 338
id-ERABs-transferred-to-MeNB	ProtocolIE-ID ::= 339
id-EPCHandoverRestrictionListContainer	ProtocolIE-ID ::= 360
END	
A GN 1 CHOP	

-- ASN1STOP

9.3.8 Container definitions

```
-- Container definitions
__ ***********************
X2AP-Containers {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) x2ap (2) version1 (1) x2ap-Containers (5) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
  *****************
-- IE parameter types from other modules.
__ ********************
IMPORTS
  maxPrivateIEs,
  maxProtocolExtensions,
  maxProtocolIEs,
   Criticality,
   Presence,
   PrivateIE-ID,
   ProtocolIE-ID
FROM X2AP-CommonDataTypes;
    *****************
-- Class Definition for Protocol IEs
__ **********************
X2AP-PROTOCOL-IES ::= CLASS {
   &id
              ProtocolIE-ID
                                 UNIQUE,
   &criticality Criticality,
   &Value,
   &presence
               Presence
WITH SYNTAX {
               &id
   ID
   CRITICALITY
               &criticality
   TYPE
               &Value
   PRESENCE
               &presence
  ****************
-- Class Definition for Protocol IEs
__ **********************************
```

```
X2AP-PROTOCOL-IES-PAIR ::= CLASS {
                           ProtocolIE-ID
                                              UNIQUE,
    &firstCriticality
                           Criticality,
    &FirstValue,
    &secondCriticality
                           Criticality,
    &SecondValue,
    &presence
                           Presence
WITH SYNTAX {
                           &id
    FIRST CRITICALITY
                           &firstCriticality
    FIRST TYPE
                           &FirstValue
                           &secondCriticality
    SECOND CRITICALITY
    SECOND TYPE
                           &SecondValue
    PRESENCE
                           &presence
-- Class Definition for Protocol Extensions
__ ********************
X2AP-PROTOCOL-EXTENSION ::= CLASS {
                       ProtocolIE-ID
    &id
                                          UNIQUE,
    &criticality
                       Criticality,
    &Extension,
    &presence
                       Presence
WITH SYNTAX {
                       &id
    CRITICALITY
                       &criticality
    EXTENSION
                       &Extension
    PRESENCE
                       &presence
-- Class Definition for Private IEs
X2AP-PRIVATE-IES ::= CLASS {
                       PrivateIE-ID,
    &criticality
                       Criticality,
    &Value,
    &presence
                       Presence
WITH SYNTAX {
    ID
                       &id
    CRITICALITY
                       &criticality
   TYPE
                       &Value
    PRESENCE
                       &presence
```

```
*****************
-- Container for Protocol IEs
__ ********************
ProtocolIE-Container {X2AP-PROTOCOL-IES : IEsSetParam} ::=
   SEQUENCE (SIZE (0..maxProtocolIEs)) OF
   ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-Single-Container {X2AP-PROTOCOL-IES : IEsSetParam} ::=
   ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-Field {X2AP-PROTOCOL-IES : IEsSetParam} ::= SEOUENCE {
              X2AP-PROTOCOL-IES.&id
                                                   ({IEsSetParam}),
                                                   ({IEsSetParam}{@id}),
   criticality X2AP-PROTOCOL-IES.&criticality
         X2AP-PROTOCOL-IES.&Value
                                                  ({IEsSetParam}{@id})
   value
  -----
-- Container for Protocol IE Pairs
__ *********************
ProtocolIE-ContainerPair {X2AP-PROTOCOL-IES-PAIR : IEsSetParam} ::=
   SEQUENCE (SIZE (0..maxProtocolIEs)) OF
   ProtocolIE-FieldPair {{IEsSetParam}}
ProtocolIE-FieldPair {X2AP-PROTOCOL-IES-PAIR : IESSetParam} ::= SEQUENCE {
          X2AP-PROTOCOL-IES-PAIR.&id
                                                         ({IEsSetParam}),
   firstCriticality X2AP-PROTOCOL-IES-PAIR.&firstCriticality
                                                         ({IEsSetParam}{@id}),
   firstValue X2AP-PROTOCOL-IES-PAIR.&FirstValue secondCriticality X2AP-PROTOCOL-IES-PAIR.&secondCriticality
                                                         ({IEsSetParam}{@id}),
                                                         ({IEsSetParam}{@id}),
   secondValue X2AP-PROTOCOL-IES-PAIR. & SecondValue
                                                         ({IEsSetParam}{@id})
    ******************
-- Container Lists for Protocol IE Containers
  ProtocolIE-ContainerList {INTEGER : lowerBound, INTEGER : upperBound, X2AP-PROTOCOL-IES : IEsSetParam} ::=
   SEQUENCE (SIZE (lowerBound..upperBound)) OF
   ProtocolIE-Container {{IEsSetParam}}
ProtocolIE-ContainerPairList {INTEGER : lowerBound, INTEGER : upperBound, X2AP-PROTOCOL-IES-PAIR : IESSetParam} ::=
   SEQUENCE (SIZE (lowerBound..upperBound)) OF
   ProtocolIE-ContainerPair {{IEsSetParam}}
__ ********************************
```

```
-- Container for Protocol Extensions
ProtocolExtensionContainer {X2AP-PROTOCOL-EXTENSION : ExtensionSetParam} ::=
   SEQUENCE (SIZE (1..maxProtocolExtensions)) OF
   ProtocolExtensionField {{ExtensionSetParam}}
ProtocolExtensionField {X2AP-PROTOCOL-EXTENSION : ExtensionSetParam} ::= SEQUENCE {
                     X2AP-PROTOCOL-EXTENSION.&id
                                                            ({ExtensionSetParam}),
   criticality
                      X2AP-PROTOCOL-EXTENSION.&criticality
                                                            ({ExtensionSetParam}{@id}),
   extensionValue
                                                            ({ExtensionSetParam}{@id})
                   X2AP-PROTOCOL-EXTENSION.&Extension
   *****************
-- Container for Private IEs
PrivateIE-Container {X2AP-PRIVATE-IES : IEsSetParam} ::=
   SEQUENCE (SIZE (1..maxPrivateIEs)) OF
   PrivateIE-Field {{IEsSetParam}}
PrivateIE-Field {X2AP-PRIVATE-IES : IESSetParam} ::= SEQUENCE {
                  X2AP-PRIVATE-IES.&id
                                                 ({IEsSetParam}),
                  X2AP-PRIVATE-IES.&criticality ({IEsSetParam}{@id}),
   criticality
                                                 ({IEsSetParam}{@id})
   value
                  X2AP-PRIVATE-IES.&Value
-- ASN1STOP
```

9.4 Message transfer syntax

X2AP shall use the ASN.1 Basic Packed Encoding Rules (BASIC-PER) Aligned Variant as transfer syntax, as specified in ITU-T Rec. X.691 [5].

9.5 Timers

$T_{RELOCprep}$

- Specifies the maximum time for the Handover Preparation procedure in the source eNB.

$TX2_{RELOCoverall} \\$

- Specifies the maximum time for the protection of the overall handover procedure in the source eNB.

T_{DCprep}

Specifies the maximum time for the SeNB Addition Preparation, MeNB initiated SeNB Modification
Preparation, SgNB Addition Preparation, or MeNB initiated SgNB Modification Preparation procedure in the
MeNB.

$T_{DCoverall} \\$

Specifies the maximum time in the SeNB for either the SeNB initiated SeNB Modification procedure or the
protection of the E-UTRAN actions necessary to configure UE resources at SeNB Addition or MeNB initiated
SeNB Modification. Or specifies the maximum time in the SgNB for either the SgNB initiated SgNB
Modification procedure or the protection of the E-UTRAN actions necessary to configure UE resources at SgNB
Addition or MeNB initiated SgNB Modification.

Handling of unknown, unforeseen and erroneous protocol data

Section 10 of TS 36.413 [4] is applicable for the purposes of the present document.

Annex A (informative): Change history

TSG#	TSG Doc.	CR	Rev	Subject/Comment	New
09/2009				Rel-9 version is created based on v.8.7.0	9.0.0
45	RP-090787	0296	1	Handling of Emergency Calls in Limited Service Mode	9.0.0
45	RP-090787	0297	1	Emergency Calls Mobility Handling	9.0.0
46	RP-091192	0307		Introduction of signalling support for Composite Available Capacity with relative units	9.1.0
46	RP-091192	0308	2	Configuration adaptation for MLB on X2	9.1.0
46	RP-091183	0310	1	Clarification on operational use of updated configuration data	9.1.0
46	RP-091192	0317	2	Automatic PRACH information exchange over X2 for SON	9.1.0
46	RP-091192	0333	1	Introduction of Radio Link Failure Indication procedure	9.1.0
46	RP-091192	0334	1	Introduction of Handover Report procedure	9.1.0
46	RP-091192	0335		Introduction of signalling support for Composite Available Capacity with relative units	9.1.0
47	RP-100213	0337		Correction to the Resource Status Reporting Initiation procedure	9.2.0
47	RP-100229	0341	2	Addition of MBSFN information on X2 interface	9.2.0
47	RP-100228	0344		Cell pair identification for Mobility Settings Change procedure	9.2.0
47	RP-100213	0352		Addition of cause value for not admitted E-RAB	9.2.0
47	RP-100229	0355	1	Rapporteur's update of X2AP protocol	9.2.0
47	RP-100230	0356		RNL-based energy saving solution	9.2.0
47	RP-100228	0358		Inclusion of UE RLF Report in RLF INDICATION message	9.2.0
48	RP-100599	0363	1	Correction of RLF INDICATION message	9.3.0
48	RP-100599	0364	1 -	Missing error cause for Not supported QCI on Handover	9.3.0
48	RP-100599	0370		Introduction of PLMN-related abnormal conditions during X2 handover in network sharing scenarios.	9.3.0
48	RP-100599	0372	1	Outcome of RAN3#68 review of X2AP	9.3.0
48	RP-100599	0373		Correction of forbidden inter-RAT	9.3.0
49	RP-100998	0376		Explicit PLMN coding in Trace IEs	9.4.0
49	RP-100906	0380		The corrections for Last Visited Cell Information	9.4.0
49	RP-100906	0383		Handover Restriction List	9.4.0
49	RP-100908	0384		Complete list of served cells to be provided in X2 SETUP and eNB Configuration Update messages	9.4.0
50	DD 101271	0385		Clarification on Handover Restriction List	9.5.0
50	RP-101271 RP-101270	0403	2		
12/2010	RP-101270	0403	3	Correction of semantics description	9.5.0
	DD 404004	0000	0	Rel-10 version created based in v. 9.5.0	10.0.0
50	RP-101304	0393		Introduction of partial failure in Resource Status Reporting Initiation procedure including detailed reporting of failure cause	10.0.0
50	RP-101279	0407	4	X2 handover support	10.0.0
SP-49	SP-100629			Clarification on the use of References (TS 21.801 CR#0030)	10.1.0
51	RP-110231	0408		Conditions for Enhanced X2 mobility	10.1.0
51	RP-110237	0409		Introduction of X2 signalling support for eICIC	10.1.0
51	RP-110222	0411	1	Correction of the usage of optional ShortMAC-I IE in RLF INDICATION message	10.1.0
51	RP-110230	0413	2	Support for MDT	10.1.0
51		0419		Clarification on TEID value range for X2AP	10.1.0
51	RP-110231	0420		Clarify X2 Handover Scenarios	10.1.0
51	RP-110237	0427	1	Enabling reporting of ABS resource status for eICIC purposes	10.1.0
52	RP-110695	0435		MDT correction for TAI	10.2.0
52	RP-110698	0436		Clarification on Radio Resource Status	10.2.0
52	RP-110700	0443		X2 support of RLF Report extension for SON MRO defined in R10	10.2.0
52	RP-110695	0447		Support for MDT user consent	10.2.0
52	RP-110686		2	Rapporteur's proposal following review of TS 36.423	10.2.0
52	RP-110689	0452		Correction of the partial success mechanism in Resource Status Reporting	10.2.0
52	RP-110695	0453	2	MDT amendments	10.2.0
52	RP-110685	0454	1	Reference review outcome in TS 36.423	10.2.0
52		0456	1	Correction of trace function and trace session	10.2.0
53	RP-111196	0464	2	Clarification of procedures defined for MLB purposes	10.3.0
53		0469		ASN.1 definition conforms to ITU-T Recommendations	10.3.0
53	RP-111194	0476		Updates of reported quantities for eICIC	10.3.0
	RP-111195	0478		Definition of value of bit in Measurements to Activate	10.3.0
	DE-111120			o. raid o. a mododiomonio to notivato	
53				Clarification on PLMN Identity	10.3.0
53 53	RP-111197	0479	2	Clarification on PLMN Identity Correction on ABS Information	10.3.0
53			2	Clarification on PLMN Identity Correction on ABS Information Correct of reset	10.3.0 10.4.0 10.5.0

55	RP-120236	0487	1	Addition of TAC to the neighbour information of a served cell for X2 setup	11.0.0
50	DD 465==:	0.457		and eNB update procedures	144.5
56	RP-120751	0496	-	Introduction of the Security Algorithm (ZUC)	11.1.0
56	RP-120751	0498		Clarification on TAC in X2 Setup	11.1.0
56 56	RP-120751		3	Adding RRC re-establishment cause to RLF indication	11.1.0
56	RP-120752	0513		Correction on Emergency ARP Value	11.1.0 11.1.0
57	RP-120752 RP-121137	0516 0520		Improved granularity for the time UE stayed in cell Support of MBMS Service Continuity	11.1.0
57	RP-121137		3	Multiband support per cell	11.2.0
57	RP-121140		1	Enhancement of HO REPORT to enable inter-RAT ping-pong detection	11.2.0
07	101-121133	0340	'	and addition of HO cause value to the UE history information	11.2.0
57	RP-121139	0546		Support for new special subframe configurations	11.2.0
58	RP-121731	0548		Addition of Mobility Information	11.3.0
58	RP-121730	0549	3	Introduction of new MDT measurements	11.3.0
58	RP-121732	0550	1	HeNB Mobility enhancement when target is hybrid HeNB	11.3.0
58	RP-121730		2	Multi-PLMN MDT	11.3.0
58	RP-121731	0564		Clarification on successful handover for HO report procedure	11.3.0
58	RP-121737	0569	2	X2AP Rapporteur Update	11.3.0
59	RP-130208	0572	3	Correction on the Special Subframe Pattern	11.4.0
59	RP-130208	0580	2	Support for Downlink-Only Bands	11.4.0
59	RP-130207	0581		Correction on use of Mobility Information	11.4.0
59	RP-130207	0582		Correction on MRO procedures	11.4.0
59	RP-130237		2	Extending maxEARFCN	11.4.0
59	RP-130237		1	Extending Maximum Frequency Band Index	11.4.0
59	RP-130211	0585	1	Rapporteur correction of X2AP	11.4.0
59	RP-130207	0586		Clarification on Signalling Based MDT PLMN List	11.4.0
59	RP-130210	0587	1	X2AP modification for PDCP SN extension	11.4.0
60	RP-130643	0588		Correction on the Definition of Direct Neighbours	11.5.0
60	RP-130641		1	Correction for the MDT Location Information IE	11.5.0
60	RP-130640	0590		Correction on RLF INDICATION procedure	11.5.0
60	RP-130643		1	Security key generation in case of MFBI	11.5.0
60	RP-130643	0593		Correction on the Multiple Frequency Band Indicators	11.5.0
61	RP-131181	0598		Correction on Handover Report procedure	11.6.0
61	RP-131179	0602		Correction on ABS Information	11.6.0
61	RP-131183	0606		Correction of terminology concerning the mobility restriction function	11.6.0
62	RP-131902		3	Correction of Handover Restriction List	11.7.0
62 62	RP-131902	0611	1	Correction for Load Balancing Related cause value CR for 36423	11.7.0
62	RP-131902		2	Correction for Load Balancing Related IE	12.0.0
63	RP-131909 RP-140294	0607 0634	3	Handling SIPTO@LN during UE Context Release procedure Correction to tabular of Served Cell Information IE	12.0.0
64	RP-140294	0629	4	TDD eIMTA support on X2AP	12.1.0 12.2.0
64	RP-140901	0630		Provide IMEISV to eNB to identify UE characteristics	12.2.0
64	RP-140905		1	Correction of SN STATUS TRANSFER	12.2.0
64	RP-140905	0676	'	Clarification of DL ABS status	12.2.0
64	RP-140897		4	Introduce X2GW procedures in Stage-3	12.2.0
65	RP-141520	0663		Introduction of the UE history reported from the UE	12.3.0
65	RP-141518	0690		Introduction of an indication of the expected UE behaviour	12.3.0
66	RP-142089		8	Introduction of Dual Connectivity	12.4.0
66	RP-142090	0692		Introduction of inter-eNB CoMP signalling	12.4.0
66	RP-142092	0748		X2 support for Network Assisted Interference Cancellation	12,4.0
66	RP-142094	0754		X2AP Rapporteur Update	12.4.0
66	RP-142094	0759		Correction on RLF Report Container	12.4.0
66	RP-142094	0776		Setting of Re-establishment Cell ID in RLF Indication message	12.4.0
66	RP-142094		3	X2 Removal Signaling	12.4.0
12/2014				History table corrected	12.4.1
12/2014				ASN.1 correction to make it compilable	12.4.2
67	RP-150353	0693	5	ProSe authorized indication	12.5.0
67	RP-150351	0782		Corrections on the usage of SeNB UE AMBR in dual connectivity	12.5.0
67	RP-150351	0790		Corrections of Dual Connectivity in general	12.5.0
67	RP-150356	0797		Correction on DC stage3	12.5.0
				Correction of the Usage of the MultibandInfoList IE	12.5.0
67	RP-150348	0801	1	Correction of the Osage of the Multiparidifficers in	12.0.0
	RP-150348 RP-150351	0801		Introduction of Cause values for Dual Connectivity	12.5.0
67			1		

67	RP-150356	0805		Miscellaneous Editorials for X2AP	12.5.0		
67	RP-150351	0806	1	Correction on SeNB behaviour for distinguishing uplink PDCP PDUs	12.5.0		
68	RP-150943		1	Correction on the definition of SeNB Reconfiguration Complete			
68	RP-150943	0827	1	ntroduction of a new DC cause for not supported configurations			
68	RP-150943	0831	· ·				
06/2015	141 100010	0001		Rel-13 version created based in v. 12.6.0	12.6.0 13.0.0		
68	RP-150945	0808	8	Addition of Intra-LTE notifications of AAS-based reconfigurations	13.0.0		
69	RP-151455	0788		Introduction of enhanced inter-eNB CoMP signalling	13.1.0		
69	RP-151451	0854	1	Correction on GBR parameters for dual connectivity	13.1.0		
69	RP-151450	0877	1	Handling of Unknown or Erroneous AP IDs in Dual Connectivity	13.1.0		
70	RP-152100	0850	5	UE-to-Network Relay authorization	13.2.0		
70	RP-152099	0892	2	Extension of PDCP SN	13.2.0		
70	RP-152102	0901	4	Adding CSG support to DC	13.2.0		
70	RP-152086	0907	i e	Correction on inter eNB CoMP	13.2.0		
70	RP-152102	0910	5	Support of SIPTO stand-alone architecture in dual connectivity	13.2.0		
70	RP-152102	0911	2	Support of SIPTO and LIPA in dual connectivity	13.2.0		
70	RP-152102	0912	6	Support of handover without SeNB change	13.2.0		
70	RP-152102	0916	2	Handling of User Inactivity in the SeNB	13.2.0		
70	RP-152086	0918	_	Correction of Subband Index	13.2.0		
70	RP-152085	0924	4	Correction of intra cell handovers in multiband deployments	13.2.0		
70	RP-152102	0927	2	Extension of UE X2AP ID	13.2.0		
70	RP-152102	0929	2	SIPTO@LN and LIPA bearer deactivation for DC	13.2.0		
70	RP-152103	0932	3	Introduction of feMDT	13.2.0		
70	RP-152108	0936	2	Addition of the Cell Deployment Status Indicator and replacing cell	13.2.0		
			_	information			
70	RP-152102	0939	1	Tunnel Information of BBAI in Dual Connectivity	13.2.0		
71	RP-160449	0937	3	Addition of X2 Removal Threshold to the X2 Removal Request message	13.3.0		
71	RP-160449	0949	2	Modification of an ongoing resource reporting procedure	13.3.0		
71	RP-160448	0950	1	Correction on SeNB Addition Preparation concerning inter-MeNB	13.3.0		
				handover without SeNB change			
71	RP-160448	0953	1	Correction on usage of extended eNB UE X2AP ID	13.3.0		
71	RP-160448	0954		Correction for SeNB Addition behaviour Abnormal	13.3.0		
71	RP-160451	0959		Clarification on the abnormal condition for DC SIPTO@LN	13.3.0		
71	RP-160449	0962	1	Rapporteur's Update	13.3.0		
71	RP-160448	0963	3	Correction on Old/New eNB UE X2AP ID	13.3.0		
72	RP-161042	0965	7	Introduction of the inter-eNB UE Context Resume function	13.4.0		
72	RP-161043	0968	1	Correction on the DC function description	13.4.0		
72	RP-161043	0969	3	Correction on eNB UE X2AP ID Extension	13.4.0		
72	RP-161043	0972	2	Indication of Bearer Type for cIOT	13.4.0		
72	RP-161047	0978		Correction of RSRP Measurement Report List	13.4.0		
73	RP-161551	0989	1	Correction on NB-IoT inter node RRC container	13.5.0		
73	RP-161550	0998	2	Correction on Security Related Information in UE Context Retrieval	13.5.0		
				Request			
09/2016				Rel-14 version created based in v. 13.5.0	14.0.0		
73	RP-161552	0975	5	Vehicular Authorization Signaling over X2	14.0.0		
74	RP-162337	1007		Clarification on V2X Services Authorized IE	14.1.0		
74	RP-162340	1008	3	Target cell selection for low complexity UEs and UEs in enhanced coverage	14.1.0		
74	RP-162340	1011	-	Correction to Served Cell Information for NB-IoT	14.1.0		

						Change history	
Date	Meeting	TDoc	CR	Rev	Cat	Subject/Comment	New
						,	version
03/2017	RP-75	RP-170535	1023		В	X2AP Support for Inter-eNB Mobility without WT Change	14.2.0
03/2017	RP-75	RP-170537 RP-170538	1005	3	В	Introduction of a new special subframe configuration Support of V2X over X2	14.2.0
03/2017	RP-75 RP-75	RP-170538 RP-170542	1025 1026		B B	Introduction of New types of eNB ID	14.2.0
03/2017	RP-75	RP-170536	1024	1	В	Introduction of New types of eNB ID	14.2.0
06/2017	RP-75	RP-171329	1033	1	A	Introduction of UL TNL address in CloT UP Solution	14.3.0
09/2017	RP-77	RP-171974	1035	1	F	Correction on NB-IoT UP mobility	14.4.0
09/2017	RP-77	RP-171974	1037	1	F	Correction of SeNB Release Confirm	14.4.0
12/2017	RP-78	RP-172673	1044	2	F	Introduction of new IEs in X2 for high performing load balance	14.5.0
12/2017	RP-78	RP-172715	1046	-	F	Correction of mismatched tabular and ASN.1	14.5.0
12/2017	RP-78	RP-172672	1041	6	В	Baseline CR to TS 36.423 covering agreements of RAN3 #98	15.0.0
12/2017	RP-78	RP-172674	1045	1	В	Introduction of QoE Measurement Collection for LTE	15.0.0
03/2018	RP-79	RP-180468	1050	-	В	X2AP corrections for agreed EN-DC BL CR	15.1.0
03/2018	RP-79	RP-180468	1051	1	F	Essential corrections for EN-DC	15.1.0
03/2018	RP-79	RP-180468	1052	1	F	Clarification on HRL for EN-DC	15.1.0
03/2018 03/2018	RP-79 RP-79	RP-180468 RP-180468	1053 1054	-	F B	Correction of counter Check procedure for EN-DC Support for supplementary UL carrier	15.1.0 15.1.0
03/2018	RP-79	RP-180468	1054	-	F	Correction on SgNB initiated SgNB Modification procedure	15.1.0
03/2018	RP-79	RP-180468	1061	1	F	Correction of mandatory/optional/Conditional IEs in 36.423	15.1.0
03/2018	RP-79	RP-180468	1067	2		Support for S-RLF	15.1.0
03/2018	RP-79	RP-180468	1071	2	F	Update of EN-DC X2 Setup and EN-DC Configuration Update	15.1.0
03/2018	RP-79	RP-180468	1073	-	F	Removal of wrong abnormal behaviour that does not exist in EN-DC	15.1.0
03/2018	RP-79	RP-180468	1078	1		CR for addition of cause	15.1.0
03/2018	RP-79	RP-180468	1079	2	F	Clarification and correction on X2 for EN-DC	15.1.0
03/2018	RP-79	RP-180468	1081	1	F	Corrections for EN-DC	15.1.0
03/2018	RP-79	RP-180468	1082	1	F	Resolve the remaining issues over X2 for EN-DC	15.1.0
03/2018	RP-79	RP-180468	1083	1	F	Introduction of DRB ID for EN-DC	15.1.0
03/2018	RP-79	RP-180314	1087	1	F	Removing data forwarding from the corresponding node for EN-DC	15.1.0
03/2018	RP-79	RP-180472	1092	1	F	Rapporteur correction of 36.423 before NSA ASN.1 freeze	15.1.0
03/2018	RP-79	RP-180473	1093	-	A	Correction on Offset of NB-IoT Channel Number to EARFCN	15.1.0
03/2018 03/2018	RP-79 RP-79	RP-180468 RP-180468	1094 1095		F	Correction of TAC for NG-RAN cells before NSA ASN.1 freeze Remove PDCP change indication in SN modification request	15.1.0 15.1.0
03/2010	101-73	100400	1033	_	'	message	13.1.0
03/2018	RP-79	RP-180468	1096	-	F	Change the presence of container in SgNB reconfiguration complete	15.1.0
						procedure	
03/2018	RP-79	RP-180468	1097	-	F	Addition of Measurement Timing Configuration information	15.1.0
06/2018	RP-80	RP-181241	1047	6	В	Support of Enhanced VoLTE Performance	15.2.0
06/2018	RP-80	RP-181239	1065	4	F	X2 partial reset for EN-DC	15.2.0
06/2018	RP-80	RP-181238	1068	1	F	Clarification of the interactions with the UE Context Release	15.2.0
06/2018	RP-80	RP-181241	1086	3	С	Introduction of QMC for MTSI in EUTRAN	15.2.0
06/2018	RP-80	RP-181237	1090	9	В	Baseline CR for E-UTRA - NR Cell Resource Coordination for TS 36.423 covering agreements of RAN3#100	15.2.0
06/2018	RP-80	RP-181238	1104		F	Correction of UL link configuration in TS36.423	15.2.0
06/2018	RP-80	RP-181410	1107	4	F	Addition of the full config indicator	15.2.0
06/2018	RP-80	RP-181239	1116	1	F	Correction of the SeNB Reconfiguration Completion procedure	15.2.0
06/2018	RP-80	RP-181239	1117	2	F	Correction of abnormal conditions for EN-DC security algorithm	15.2.0
				_		selection	
06/2018	RP-80	RP-181238	1121	1	F	Correction of reference in RRC Container	15.2.0
06/2018	RP-80	RP-181238	1122	-	F	Correction of condition presence of E-RAB Level QoS Parameters	15.2.0
						related	<u> </u>
06/2018	RP-80	RP-181238	1123	1	F	Support of TEID change at SN	15.2.0
06/2018	RP-80	RP-181237	1125	4	B F	X2AP CR for support of NR Multiple frequency band in EN-DC	15.2.0
06/2018	RP-80	RP-181238	1130	-	В	Correction of max NR ARFCN value	15.2.0
06/2018 06/2018	RP-80 RP-80	RP-181243 RP-181238	1132 1133	3	F	Baseline CR: Introduction of the Aerial Usage Indication Use of SPID for EN-DC	15.2.0 15.2.0
06/2018	RP-80	RP-181238	1134	1	F	Correction of references to RRC containers for EN-DC	15.2.0
06/2018	RP-80	RP-181238	1135	-	F	Corrections on Tabular indentation and ASN.1 criticality	15.2.0
06/2018	RP-80	RP-181239	1138	-	F	Adding missing relation for the TEID	15.2.0
06/2018	RP-80	RP-181241	1142	3	В	Retrieve UE Context at UE Re-establishment	15.2.0
06/2018	RP-80	RP-181241	1143	-	D	Rapporteur's corrections on the specification	15.2.0
06/2018	RP-80	RP-181239	1145	-	F	Correction on the same terminology of "Split SRB" in TS36.423	15.2.0
06/2018	RP-80	RP-181239	1146	2	F	Correction of Split SRB configuration in TS36.423	15.2.0
06/2018	RP-80	RP-181239	1149	3	F	CR for Clarification on resource coordination	15.2.0
06/2018	RP-80	RP-181239	1152	-	F	Correction for PDCP Duplication	15.2.0
06/2018	RP-80	RP-181239	1153	-	F	Coordination of Inactivity for EN-DC	15.2.0
06/2018	RP-80	RP-181239	1155	-	С	Introduction of CN type restriction	15.2.0
06/2018	RP-80	RP-181239	1158	-	F	User Inactivity handling over X2 EN-DC	15.2.0
06/2018	RP-80 RP-80	RP-181239 RP-181239	1160 1161	2	F	Addition of Cause Value	15.2.0 15.2.0
06/2018	ווט טק ן					Addition of MeNB cell ID to solve the PCI confusion	1 1600

			1			I a	
06/2018	RP-80		1164	-	F	Corrections on misalignment between tabular and ASN.1	15.2.0
06/2018	RP-80	RP-181239	1165	1	F	Introduction of EN-DC X2 removal procedure	15.2.0
06/2018	RP-80	RP-181239	1167	-	F	Support of DL TEID change over S1 at SN	15.2.0
06/2018	RP-80	RP-181242	1174	2	В	Support of NB-IoT measurement enhancement and TDD Config	15.2.0
06/2018	RP-80	RP-181239	1175	-	F	ASN.1 correction for EN-DC support in TS 36.423	15.2.0
06/2018	RP-80	RP-181239	1176	1	F	Introduction of a Configured TAC into the NR Neighbour Information	15.2.0
						IE and the Served NR Cell Information IE	
06/2018	RP-80	RP-181239	1178	-	F	Correction of the Limited List IE encoding to enable extensibility	15.2.0
09/2018	RP-81	RP-181920	1115	4	F	Indication of the RLC re-establishment at the assisting node	15.3.0
09/2018	RP-81	RP-181920	1190	-	F	Addition of RRC config indication to SGNB MODIFICATION	15.3.0
						REQUIRED and SGNB MODIFICATION REQUEST	
						ACKNOWLEDGE	
09/2018	RP-81	RP-181920	1191	2	F	Clarification on secondary RAT data volume reporting	15.3.0
09/2018	RP-81	RP-181920	1192	1	F	Essential corrections for EN-DC	15.3.0
09/2018	RP-81	RP-181920	1193	1	F	Corrections on EN-DC Resource Configuration	15.3.0
09/2018	RP-81	RP-181921	1196	3	F	Notification of PDCP SN length change	15.3.0
09/2018	RP-81	RP-181920	1198	1	F	Corrections on E-UTRA – NR Cell Resource Coordination	15.3.0
09/2018	RP-81	RP-181921	1201	2	F	RLC Mode Indication over X2 – for 36.423	15.3.0
				4	F		
09/2018	RP-81	RP-181922	1202	4	F	Baseline CR for TS 36.423 covering agreements of RAN3#AH1807 and RAN3#101	15.3.0
00/0040	DD 04	DD 404004	4000				45.0.0
09/2018	RP-81	RP-181921	1203	2	F	Correction of "Maximum MCG admittable E-RAB Level QoS	15.3.0
00/0040	DD 04	DD 404004	1000			Parameters"	45.0.0
09/2018	RP-81	RP-181921	1206	-	<u>F</u>	X2 Corrections for EN-DC	15.3.0
09/2018	RP-81	RP-181921	1211	1	F	Access Restriction Data for NR in EPC	15.3.0
09/2018	RP-81	RP-181921	1214	2	С	Extension of Data Traffic Resources IE for E-UTRA-NR Cell	15.3.0
						Resource Coordination	
09/2018	RP-81	RP-181921	1217	-	F	Correction of 5GS TAC	15.3.0
09/2018	RP-81	RP-181921	1221	1	F	CR on clarification of successfully delivered for NR-U	15.3.0
09/2018	RP-81	RP-181923	1226	3	F	Data forwarding for Retrieve UE Context in case of RRC connection	15.3.0
						re-establishment	
09/2018	RP-81	RP-181924	1231	1	F	CR to X2AP to introduce Bluetooth and WLAN measurement	15.3.0
						in MDT	
09/2018	RP-81	RP-182127	1233	4	В	Introduction of Subscription based UE differentiation	15.3.0
09/2018	RP-81	RP-181921	1235	-	F	Correction of SgNB Activity Notification Procedure	15.3.0
12/2018	RP-82	RP-182447	1237	4	F	Addition of the RLC Mode information for PDCP transfer	15.4.0
12/2018	RP-82	RP-182446	1243	3	F	Correction on PDCP SN length	15.4.0
12/2018	RP-82	RP-182447	1244	2	F	Support of CA based PDCP duplication on X2	15.4.0
12/2018	RP-82	RP-182446	1245	1	F	CR on Introduction of overload indication over X2	15.4.0
12/2018	RP-82	RP-182447	1246	1	F	CR on alingment of terminology for eNB or MeNB	15.4.0
12/2018	RP-82	RP-182446	1247	1	F	Correction of SgNB Initiated SN Modification procedure for	15.4.0
						Measurement Gap	
12/2018	RP-82	RP-182446	1248	-	F	ASN.1 corrections on NRNeighbour-Information IE and NRFreqInfo	15.4.0
						IE	
12/2018	RP-82	RP-182446	1250	-	F	Correction on E-UTRA - NR resource coordination	15.4.0
12/2018	RP-82	RP-182447	1253	3	F	Corrections of MeNB/SgNB resource coordination	15.4.0
12/2018	RP-82	RP-182446	1256	1	F	Correction on SGNB ACTIVITY NOTIFICATION IE's	15.4.0
12/2018	RP-82	RP-182447	1259	1	F	Correction of PDCP SN Length Indication	15.4.0
12/2018	RP-82	RP-182447	1264	2	F	RLC reestablishment indication for TS36.423	15.4.0
12/2018	RP-82	RP-182504	1267	1	F	Update on Retrieve UE Context Request message for TS36.423	15.4.0
12/2018	RP-82	RP-182447	1272	1	F	Handling of RLC failure	15.4.0
12/2018	RP-82	RP-182447	1273		F	Add missing description on non-operational X2 interface for EN-DC	15.4.0
12/2018	RP-82	RP-182447	1275	2	F	Further corrections of MeNB/SgNB resource coordination	15.4.0
12/2018	RP-82	RP-182447	1279	1	F	Criticality Correction for X2AP UE-ID	15.4.0
12/2018	RP-82	RP-182437	1280	2	F	Allowing SgNB to request new DRB ID from MeNB in EN-DC for an	15.4.0
12/2010	115-02	111 - 102431	1200		-	already established SN terminated bearer	13.4.0
02/2040	DD 00	DD 100555	1202	2	F	Correction to RRC transfer	15 5 0
03/2019	RP-83	RP-190555	1282	3			15.5.0
03/2019	RP-83	RP-190555	1283	2	F	Transfer of the PSCell information for LI purposes	15.5.0
03/2019	RP-83	RP-190555	1285		F	Enabling using Dual Connectivity cause values in EN-DC	15.5.0
03/2019	RP-83	RP-190555	1287	1	<u>F</u>	Desired Activity Notification Level	15.5.0
03/2019	RP-83	RP-190555	1291	-	F	Introduction of IMEISV to Addition Request over X2	15.5.0
03/2019	RP-83	RP-190555	1292	1	F	Clarification on the usage of coordination assistance information	15.5.0
03/2019	RP-83	RP-190556	1297	1	F	Introducing NR Neighbour information in X2 Setup	15.5.0
03/2019	RP-83	RP-190555	1298	-	F	Rapporteur updates on version 15.4.0	15.5.0
03/2019	RP-83	RP-190523	1300	3	F	Adding Trace Messages in X2AP	15.5.0
03/2019	RP-83	RP-190556	1301	1	F	Correction of EPC interworking	15.5.0
03/2019	RP-83	RP-190555	1302	-	F	Straighten-up SgNB's request to release and add the same SN-	15.5.0
			<u>L</u>			terminated bearer with different DRB ID	
03/2019	RP-83	RP-190561	1304	1	F	Introduction of TNL Address discovery for EN-DC (using new	15.5.0
						container)	
2019-07	RP-84	RP-191395	1299	2	F	Correction of MaxnoofBPLMNs for NR	15.6.0
2019-07	RP-84	RP-191395	1307	1	F	RRC config indication behaviour	15.6.0
2019-07	RP-84	RP-191395	1308	-	F	Transferring of NR RRC message in MeNB	15.6.0

2019-07	RP-84	RP-191396	1313	1	F	PDCP SN length related clean-up over To Be Mofidified structure in SN initiated SN Modification procedure	15.6.0
2019-07	RP-84	RP-191429	1314	5	F	RAN sharing with multiple Cell ID broadcast	15.6.0
2019-07	RP-84	RP-191395	1315	-	F	SN Status Transfer applicability for Re-establishment	15.6.0
2019-07	RP-84	RP-191395	1316	2	F	Rapporteur's corrections to version 15.5.0	15.6.0
2019-07	RP-84	RP-191397	1317	1	F	Correction of Core Network Type Restriction	15.6.0
2019-07	RP-84	RP-191395	1318	-	F	CR36423 for Addition of MN (MeNB) cell ID to solve the PCI	15.6.0
						confusion in SN(SgNB) modification Request message	
2019-07	RP-84	RP-191395	1321	1	F	Updates on TS 36.423 for EN-DC TNL Address discovery	15.6.0
2019-07	RP-84	RP-191394	1330	1	F	PDCP SN length related clean-up over To Be Modified structure in MN initiated SN Modification procedure	15.6.0
2019-09	RP-85	RP-192166	1322	2	F	Correction of handling of the Location Information at the MeNB	15.7.0
2019-09	RP-85	RP-192169	1336	-	F	Correction on Data Forwarding Address Indication	15.7.0
2019-09	RP-85	RP-192170	1339	1	Α	Correction on Handover Request Acknowledge	15.7.0
2019-09	RP-85	RP-192169	1341	1	F	Correction of NB-IoT TDD Cell Frequency info	15.7.0
2019-09	RP-85	RP-192169	1359	1	F	Non IP bearer support for Dual Connectivity	15.7.0
2019-12	RP-86	RP-192916	1346	3	F	Critical correction to the presence of the SgNB UE X2AP ID in the SgNB Release Request Reject	15.8.0
2019-12	RP-86	RP-192916	1364	3	F	Correction to SN Status Transfer considering EN-DC operations	15.8.0
2019-12	RP-86	RP-192916	1380	2	F	SN Status Transfer for bearer reconfiguration during HO with EN-DC	15.8.0
2019-12	RP-86	RP-192915	1398	-	F	Correction on the DL forwarding for MeNB terminated bearer in SgNB initiated SgNB Release	15.8.0
2019-12	RP-86	RP-192916	1410	1	F	CR36.423 for correction on EN-DC X2 SETUP REQUEST message	15.8.0
2019-12	RP-86	RP-192916	1415	2	F	Support of delta configuration in EN-DC	15.8.0
2020-03	RP-87-e	RP-200429	1429	-	F	Correction on Assigned Criticality for Bearer Type	15.9.0
2020-03	RP-87-e	RP-200428	1451	-	F	Correction of CR1380r2 to explicate procedural interaction	15.9.0
2020-03	RP-87-e	RP-200429	1453	-	F	Correction of tabular representation of the RRC TRANSFER message	15.9.0
2020-03	RP-87-e	RP-200428	1455	1	F	Correction of CR1415r2 – procedure text	15.9.0
2020-03	RP-87-e	RP-200428	1459	-	F	Propagation of Roaming and Access Restriction information in E- UTRAN in non-homogenous eNB deployments	15.9.0
2020-07	RP-88-e	RP-201090	1474	2	F	Encoding PLMNs in served cell information NR	15.10.0
2020-07	RP-88-e	RP-201091	1484	-	F	CR 36.423 Correction to E-UTRA-NR Cell-level Resource Coordination	15.10.0
2020-07	RP-88-e	RP-201090	1490	-	F	Encoding PLMNs in served cell information IEs - semantics corrections	15.10.0
2020-07	RP-88-e	RP-201090	1493	5	F	Clarification on MIB only scenario	15.10.0
2020-07	RP-88-e	RP-201092	1501	-	F	Tabular and ASN.1 correction of messages of the EN-DC X2 Setup and EN-DC Configuration Update procedures	15.10.0
2020-09	RP-89-e	RP-201954	1524	-	F	Missing MeNB UE X2AP ID Extension IE in Trace messages	15.11.0
2020-09	RP-89-e	RP-201954	1527	-	F	Correction for the Interface Instance Indication in the EN-DC X2 SETUP RESPONSE message	15.11.0
2020-09	RP-89-e	RP-201954	1538	2	F	Clarification on TAC presence in Serving Cell Info over X2	15.11.0

History

	Document history							
V15.2.0	July 2018	Publication						
V15.3.0	October 2018	Publication						
V15.4.0	April 2019	Publication						
V15.5.0	May 2019	Publication						
V15.6.0	July 2019	Publication						
V15.7.0	October 2019	Publication						
V15.8.0	January 2020	Publication						
V15.9.0	April 2020	Publication						
V15.10.0	July 2020	Publication						
V15.11.0	November 2020	Publication						