# ETSI TS 136 423 V16.5.0 (2021-04)



# LTE;

Evolved Universal Terrestrial Radio Access Network (E-UTRAN); X2 Application Protocol (X2AP) (3GPP TS 36.423 version 16.5.0 Release 16)



Reference
RTS/TSGR-0336423vg50
Keywords
LTE

#### **ETSI**

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - APE 7112B Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° w061004871

#### Important notice

The present document can be downloaded from: http://www.etsi.org/standards-search

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the prevailing version of an ETSI deliverable is the one made publicly available in PDF format at <a href="https://www.etsi.org/deliver">www.etsi.org/deliver</a>.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at <a href="https://portal.etsi.org/TB/ETSIDeliverableStatus.aspx">https://portal.etsi.org/TB/ETSIDeliverableStatus.aspx</a>

If you find errors in the present document, please send your comment to one of the following services: https://portal.etsi.org/People/CommiteeSupportStaff.aspx

### Notice of disclaimer & limitation of liability

The information provided in the present deliverable is directed solely to professionals who have the appropriate degree of experience to understand and interpret its content in accordance with generally accepted engineering or other professional standard and applicable regulations.

No recommendation as to products and services or vendors is made or should be implied.

No representation or warranty is made that this deliverable is technically accurate or sufficient or conforms to any law and/or governmental rule and/or regulation and further, no representation or warranty is made of merchantability or fitness for any particular purpose or against infringement of intellectual property rights.

In no event shall ETSI be held liable for loss of profits or any other incidental or consequential damages.

Any software contained in this deliverable is provided "AS IS" with no warranties, express or implied, including but not limited to, the warranties of merchantability, fitness for a particular purpose and non-infringement of intellectual property rights and ETSI shall not be held liable in any event for any damages whatsoever (including, without limitation, damages for loss of profits, business interruption, loss of information, or any other pecuniary loss) arising out of or related to the use of or inability to use the software.

#### Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© ETSI 2021. All rights reserved.

# Intellectual Property Rights

#### **Essential patents**

IPRs essential or potentially essential to normative deliverables may have been declared to ETSI. The declarations pertaining to these essential IPRs, if any, are publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (https://ipr.etsi.org/).

Pursuant to the ETSI Directives including the ETSI IPR Policy, no investigation regarding the essentiality of IPRs, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

#### **Trademarks**

The present document may include trademarks and/or tradenames which are asserted and/or registered by their owners. ETSI claims no ownership of these except for any which are indicated as being the property of ETSI, and conveys no right to use or reproduce any trademark and/or tradename. Mention of those trademarks in the present document does not constitute an endorsement by ETSI of products, services or organizations associated with those trademarks.

**DECT**<sup>TM</sup>, **PLUGTESTS**<sup>TM</sup>, **UMTS**<sup>TM</sup> and the ETSI logo are trademarks of ETSI registered for the benefit of its Members. **3GPP**<sup>TM</sup> and **LTE**<sup>TM</sup> are trademarks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners. **oneM2M**<sup>TM</sup> logo is a trademark of ETSI registered for the benefit of its Members and of the oneM2M Partners. **GSM**<sup>®</sup> and the GSM logo are trademarks registered and owned by the GSM Association.

# **Legal Notice**

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities. These shall be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between 3GPP and ETSI identities can be found under <a href="http://webapp.etsi.org/key/queryform.asp">http://webapp.etsi.org/key/queryform.asp</a>.

# Modal verbs terminology

In the present document "shall", "shall not", "should", "should not", "may", "need not", "will", "will not", "can" and "cannot" are to be interpreted as described in clause 3.2 of the <u>ETSI Drafting Rules</u> (Verbal forms for the expression of provisions).

"must" and "must not" are NOT allowed in ETSI deliverables except when used in direct citation.

# Contents

Intell	llectual Property Rights	2
Legal	al Notice	2
Moda	lal verbs terminology	2
Forev	eword	13
1	Scope	
2	References	
3	Definitions, symbols and abbreviations	
3.1 3.2	Symbols	
3.3	Abbreviations	
4	General	18
4.1	Procedure specification principles	18
4.2	Forwards and backwards compatibility	
4.3	Specification notations	18
5	X2AP services	
5.1	X2AP procedure modules	
5.2	Parallel transactions	
6	Services expected from signalling transport	19
7	Functions of X2AP	19
8	X2AP procedures	22
8.1	Elementary procedures	22
8.2	Basic mobility procedures	
8.2.1	1	
8.2.1.		
8.2.1.	· · · · · · · · · · · · · · · · · · ·	
8.2.1.		
8.2.1.		
8.2.2 8.2.2.		
8.2.2. 8.2.2.		
8.2.2. 8.2.2.	1	
8.2.3		
8.2.3.		
8.2.3.		
8.2.3.		
8.2.3.		
8.2.4	Handover Cancel	35
8.2.4.	1 General	35
8.2.4.	1	
8.2.4.	1	35
8.2.4.		
8.2.5		
8.2.5.		
8.2.5.	1	
8.2.5.	1	
8.2.5.		
8.2.6		
8.2.6. 8.2.6.		
8.2.6. 8.2.6.	1	
8.2.6. 8.2.6.		
··~··	7.1 1.01101111ttt C01101110110	

8.2.7	Early Status Transfer	37
8.2.7.1	General	37
8.2.7.2	Successful Operation	37
8.2.7.3	Abnormal Conditions	38
8.3	Global Procedures	38
8.3.1	Load Indication	38
8.3.1.1	General	38
8.3.1.2	Successful Operation	39
8.3.1.3	Unsuccessful Operation	40
8.3.1.4	Abnormal Conditions	
8.3.2	Error Indication	40
8.3.2.1	General	40
8.3.2.2	Successful Operation	41
8.3.2.3	Unsuccessful Operation	
8.3.2.4	Abnormal Conditions	42
8.3.3	X2 Setup	42
8.3.3.1	General	42
8.3.3.2	Successful Operation	
8.3.3.3	Unsuccessful Operation	
8.3.3.4	Abnormal Conditions	
8.3.4	Reset	44
8.3.4.1	General	44
8.3.4.2	Successful Operation	45
8.3.4.3	Unsuccessful Operation	
8.3.4.4	Abnormal Conditions	
8.3.5	eNB Configuration Update	
8.3.5.1	General	46
8.3.5.2	Successful Operation	46
8.3.5.3	Unsuccessful Operation	
8.3.5.4	Abnormal Conditions	
8.3.6	Resource Status Reporting Initiation	
8.3.6.1	General	
8.3.6.2	Successful Operation	
8.3.6.3	Unsuccessful Operation	50
8.3.6.4	Abnormal Conditions	50
8.3.7	Resource Status Reporting	51
8.3.7.1	General	51
8.3.7.2	Successful Operation	51
8.3.7.3	Unsuccessful Operation	52
8.3.7.4	Abnormal Conditions	52
8.3.8	Mobility Settings Change	52
8.3.8.1	General	52
8.3.8.2	Successful Operation	52
8.3.8.3	Unsuccessful Operation	52
8.3.8.4	Abnormal Conditions	53
8.3.9	Radio Link Failure Indication	53
8.3.9.1	General	53
8.3.9.2	Successful Operation	53
8.3.9.3	Unsuccessful Operation	53
8.3.9.4	Abnormal Conditions	54
8.3.10	Handover Report	54
8.3.10.1	General	54
8.3.10.2	Successful Operation	54
8.3.10.3	Unsuccessful Operation	55
8.3.10.4	Abnormal Conditions	55
8.3.11	Cell Activation	55
8.3.11.1	General	55
8.3.11.2	Successful Operation	55
8.3.11.3	Unsuccessful Operation	
8.3.11.4	Abnormal Conditions	56
8.3.12	X2 Removal	56
8.3.12.1	General	56

8.3.12.2	Successful Operation	
8.3.12.3	Unsuccessful Operation	
8.3.12.4	Abnormal Conditions	56
8.3.13	Retrieve UE Context	
8.3.13.1	General	
8.3.13.2	Successful Operation	
8.3.13.3	Unsuccessful Operation	58
8.3.13.4	Abnormal Conditions	59
8.3.14	EN-DC X2 Removal	59
8.3.14.1	General	59
8.3.14.2	Successful Operation	
8.3.14.3	Unsuccessful Operation	
8.3.14.4	Abnormal Conditions	60
8.3.15	Data Forwarding Address Indication	60
8.3.15.1	General	60
8.3.15.2	Successful Operation	
8.3.15.3	Unsuccessful Operation	
8.3.15.4	Abnormal Conditions	
8.4	X2 Release	
8.4.1	General	
8.4.2	Successful Operation	
8.4.3	Unsuccessful Operation	
8.4.4	Abnormal Condition	
8.5	X2AP Message Transfer	
8.5.1	General	
8.5.2	Successful Operation	
8.5.3	Unsuccessful Operation	
8.5.4	Abnormal Condition	
8.6	Procedures for Dual Connectivity	
8.6.1	SeNB Addition Preparation	
8.6.1.1	General	
8.6.1.2	Successful Operation	
8.6.1.3	Unsuccessful Operation	
8.6.1.4	Abnormal Conditions	
8.6.2	SeNB Reconfiguration Completion	
8.6.2.1	General	
8.6.2.2	Successful Operation.	
8.6.2.3	Abnormal Conditions	
8.6.3	MeNB initiated SeNB Modification Preparation	
8.6.3.1	General	
8.6.3.2	Successful Operation.	
8.6.3.3	Unsuccessful Operation	
8.6.3.4	Abnormal Conditions	
8.6.4	SeNB initiated SeNB Modification	
8.6.4.1	General	
8.6.4.2	Successful Operation.	
8.6.4.3	Unsuccessful Operation	
8.6.4.4	Abnormal Conditions	
8.6.5	MeNB initiated SeNB Release	
8.6.5.1	General	
8.6.5.2	Successful Operation.	
8.6.5.3	Unsuccessful Operation	
8.6.5.4	Abnormal Conditions	
8.6.6	SeNB initiated SeNB Release	
8.6.6.1	General	
8.6.6.2	Successful Operation	
8.6.6.3	Unsuccessful Operation	
8.6.6.4	Abnormal Conditions	
8.6.7	SeNB Counter Check	
8.6.7.1	General	
8.6.7.2	Successful Operation.	
8.6.7.3	Unsuccessful Operation	
0.0.7.3		

8.6.7.4	Abnormal Conditions	
8.7	Procedures for E-UTRAN-NR Dual Connectivity	74
8.7.1	EN-DC X2 Setup	74
8.7.1.1	General	74
8.7.1.2	Successful Operation	75
8.7.1.3	Unsuccessful Operation	77
8.7.1.4	Abnormal Conditions	77
8.7.2	EN-DC Configuration Update	78
8.7.2.1	General	
8.7.2.2	Successful Operation	78
8.7.2.3	Unsuccessful Operation	81
8.7.2.4	Abnormal Conditions	
8.7.3	EN-DC Cell Activation	82
8.7.3.1	General	82
8.7.3.2	Successful Operation	
8.7.3.3	Unsuccessful Operation	
8.7.3.4	Abnormal Conditions	
8.7.4	SgNB Addition Preparation	
8.7.4.1	General	
8.7.4.2	Successful Operation	83
8.7.4.3	Unsuccessful Operation	
8.7.4.4	Abnormal Conditions	
8.7.5	SgNB Reconfiguration Completion	
8.7.5.1	General	
8.7.5.2	Successful Operation	
8.7.5.3	Abnormal Conditions	
8.7.6	MeNB initiated SgNB Modification Preparation	
8.7.6.1	General	
8.7.6.2	Successful Operation	
8.7.6.3	Unsuccessful Operation	
8.7.6.4	Abnormal Conditions	
8.7.7	SgNB initiated SgNB Modification	
8.7.7.1	General	
8.7.7.2	Successful Operation	
8.7.7.3	Unsuccessful Operation	
8.7.7.4	Abnormal Conditions	96
8.7.8	SgNB Change	96
8.7.8.1	General	
8.7.8.2	Successful Operation	
8.7.8.3	Unsuccessful Operation	
8.7.8.4	Abnormal Conditions	
8.7.9	MeNB initiated SgNB Release	
8.7.9.1	General	
8.7.9.2	Successful Operation	
8.7.9.3	Unsuccessful Operation	
8.7.9.4	Abnormal Conditions	
8.7.10	SgNB initiated SgNB Release	
8.7.10.1	General	99
8.7.10.2	Successful Operation	
8.7.10.3	Unsuccessful Operation	
8.7.10.4	Abnormal Conditions	
8.7.11	SgNB Counter Check	
8.7.11.1	General	
8.7.11.2	Successful Operation	
8.7.11.3	Unsuccessful Operation	
8.7.11.4	Abnormal Conditions	
8.7.12	RRC Transfer	
8.7.12.1	General	
8.7.12.2	Successful Operation	
8.7.12.3	Abnormal Conditions	
8.7.13	Secondary RAT Data Usage Report	
9.7.12 9.7.13 1	Ganaral	100

8.7.13.2	Successful Operation	102
8.7.13.3	Unsuccessful Operation	103
8.7.13.4	Abnormal Conditions	
8.7.14	Partial reset of EN-DC	
8.7.14.1	General	
8.7.14.2	Successful Operation	
8.7.14.3	Unsuccessful Operation	
8.7.14.4	Abnormal Conditions	
8.7.15	E-UTRA – NR Cell Resource Coordination	
8.7.15.1	General	
8.7.15.2	Successful Operation	
8.7.16	SgNB Activity Notification	
8.7.16.1	General	
8.7.16.2	Successful Operation	
8.7.16.3	Abnormal Conditions	
8.7.17	gNB Status Indication	
8.7.17.1	General	
8.7.17.2	Successful Operation	
8.7.17.3	Abnormal Conditions	
8.7.18	EN-DC Configuration Transfer	
8.7.18.1	General	
8.7.18.2	Successful Operation	
8.7.18.3	Abnormal Conditions	
8.7.19	Trace Start	
8.7.19.1	General	
8.7.19.2	Successful Operation	
8.7.19.3	Abnormal Conditions	
8.7.20 8.7.20.1	Deactivate Trace	
8.7.20.1	General	
8.7.20.2	Abnormal Conditions	
	EN-DC Resource Status Reporting Initiation	
8.7.21.1	General	109
8.7.21.1 8.7.21.2	General	109
8.7.21.1 8.7.21.2 8.7.21.2.1	General	109 109 109
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2	General	109 109 110
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2 8.7.21.3	General Successful Operation  Successful Operation - eNB-initiated Successful Operation - en-gNB-initiated Unsuccessful Operation	109 109 110 110
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2 8.7.21.3 8.7.21.4	General Successful Operation  Successful Operation - eNB-initiated Successful Operation - en-gNB-initiated Unsuccessful Operation Abnormal Conditions	
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22	General Successful Operation  Successful Operation - eNB-initiated Successful Operation - en-gNB-initiated Unsuccessful Operation Abnormal Conditions EN-DC Resource Status Reporting	
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22 8.7.22.1	General Successful Operation.  Successful Operation - eNB-initiated Successful Operation - en-gNB-initiated Unsuccessful Operation Abnormal Conditions EN-DC Resource Status Reporting General	
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22 8.7.22.1 8.7.22.1	General Successful Operation	
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22 8.7.22.1 8.7.22.1 8.7.22.2 8.7.22.3	General Successful Operation.  Successful Operation - eNB-initiated Successful Operation - en-gNB-initiated Unsuccessful Operation Abnormal Conditions EN-DC Resource Status Reporting General	
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22 8.7.22.1 8.7.22.2 8.7.22.2 8.7.22.3	General Successful Operation	
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22 8.7.22.1 8.7.22.2 8.7.22.3 8.7.22.4 8.7.23	General Successful Operation	
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22 8.7.22.1 8.7.22.2 8.7.22.3 8.7.22.4 8.7.23 8.7.23.1	General Successful Operation.  Successful Operation - eNB-initiated Successful Operation - en-gNB-initiated Unsuccessful Operation Abnormal Conditions  EN-DC Resource Status Reporting General Successful Operation Unsuccessful Operation Abnormal Conditions  Cell Traffic Trace.	
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22 8.7.22.1 8.7.22.2 8.7.22.3 8.7.22.3 8.7.22.4 8.7.23 8.7.23.1 8.7.23.2	General Successful Operation.  Successful Operation - eNB-initiated Successful Operation - en-gNB-initiated Unsuccessful Operation Abnormal Conditions  EN-DC Resource Status Reporting General Successful Operation. Unsuccessful Operation Abnormal Conditions  Cell Traffic Trace. General	
8.7.21.1 8.7.21.2 8.7.21.2.2 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22 8.7.22.1 8.7.22.2 8.7.22.3 8.7.22.4 8.7.23 8.7.23.1 8.7.23.2	General Successful Operation	
8.7.21.1 8.7.21.2 8.7.21.2.2 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22 8.7.22.1 8.7.22.2 8.7.22.3 8.7.22.4 8.7.23 8.7.23.1 8.7.23.2 8.7.23.1	General Successful Operation	
8.7.21.1 8.7.21.2 8.7.21.2.2 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22 8.7.22.1 8.7.22.2 8.7.22.3 8.7.22.4 8.7.23 8.7.23.1 8.7.23.2 8.7.24 8.7.24.1 8.7.24.1	General Successful Operation.  Successful Operation - eNB-initiated Successful Operation - en-gNB-initiated Unsuccessful Operation Abnormal Conditions  EN-DC Resource Status Reporting General Successful Operation Unsuccessful Operation Cell Traffic Trace General Successful Operation UE Radio Capability ID Mapping General General General General	
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22.1 8.7.22.1 8.7.22.2 8.7.22.3 8.7.22.4 8.7.23 8.7.23.1 8.7.23.2 8.7.24.1 8.7.24.1 8.7.24.2 8.7.24.3	General Successful Operation  Successful Operation - eNB-initiated Successful Operation - en-gNB-initiated Unsuccessful Operation Abnormal Conditions  EN-DC Resource Status Reporting General Successful Operation Unsuccessful Operation Cell Traffic Trace General Successful Operation UE Radio Capability ID Mapping General Successful Operation UE Radio Capation  Veraffic Trace General Successful Operation  UE Radio Capability ID Mapping General Successful Operation	
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22.1 8.7.22.2 8.7.22.3 8.7.22.3 8.7.22.4 8.7.23.1 8.7.23.1 8.7.23.2 8.7.24.1 8.7.24.1 8.7.24.2 8.7.24.3	General Successful Operation  Successful Operation - eNB-initiated  Successful Operation - en-gNB-initiated Unsuccessful Operation Abnormal Conditions  EN-DC Resource Status Reporting General Successful Operation Unsuccessful Operation Abnormal Conditions  Cell Traffic Trace General Successful Operation UE Radio Capability ID Mapping General Successful Operation UE Radio Capability ID Mapping General Successful Operation Unsuccessful Operation Unsuccessful Operation Unsuccessful Operation Unsuccessful Operation	
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22 8.7.22.1 8.7.22.2 8.7.22.3 8.7.22.3 8.7.22.4 8.7.23.1 8.7.23.2 8.7.24.1 8.7.24.2 8.7.24.3 8.8.1.1	General Successful Operation Successful Operation - eNB-initiated Unsuccessful Operation - en-gNB-initiated Unsuccessful Operation Abnormal Conditions EN-DC Resource Status Reporting General Successful Operation Unsuccessful Operation Abnormal Conditions Cell Traffic Trace. General Successful Operation UE Radio Capability ID Mapping General Successful Operation UE Radio Capability ID Mapping General Successful Operation Unsuccessful Operation Unsuccessful Operation UTSUCCESSFUL OPERATION UNSUCCESSFUL	
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22 8.7.22.1 8.7.22.2 8.7.22.3 8.7.22.4 8.7.22.3 8.7.23.1 8.7.23.1 8.7.23.2 8.7.24.1 8.7.24.2 8.7.24.3 8.8.1.1 8.8.1.1	General Successful Operation  Successful Operation - eNB-initiated  Successful Operation - en-gNB-initiated Unsuccessful Operation Abnormal Conditions  EN-DC Resource Status Reporting General Successful Operation Unsuccessful Operation Cell Traffic Trace General Successful Operation UE Radio Capability ID Mapping General Successful Operation UI Rusuccessful Operation UE Radio Capability ID Mapping General Successful Operation Unsuccessful Operation Unsuccessful Operation UT Radio Capability ID Mapping General Successful Operation Unsuccessful Operation	
8.7.21.1 8.7.21.2 8.7.21.2.3 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22.1 8.7.22.2 8.7.22.1 8.7.22.2 8.7.22.3 8.7.22.4 8.7.23.1 8.7.23.2 8.7.24.1 8.7.24.2 8.7.24.3 8.8.1.1 8.8.1.1 8.8.1.2	General Successful Operation  Successful Operation - eNB-initiated  Successful Operation - en-gNB-initiated Unsuccessful Operation Abnormal Conditions  EN-DC Resource Status Reporting General Successful Operation Unsuccessful Operation Abnormal Conditions  Cell Traffic Trace General Successful Operation UE Radio Capability ID Mapping General Successful Operation  UF Radio Capability ID Mapping General Successful Operation UTE Radio Capability ID Mapping General Successful Operation Unsuccessful Operation	
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22 8.7.22.1 8.7.22.2 8.7.22.3 8.7.22.4 8.7.22.3 8.7.22.4 8.7.23.1 8.7.23.2 8.7.24.1 8.7.24.2 8.7.24.3 8.8.1.1 8.8.1.1 8.8.1.2 8.8.1.3	General Successful Operation  Successful Operation - eNB-initiated  Successful Operation - en-gNB-initiated Unsuccessful Operation Abnormal Conditions  EN-DC Resource Status Reporting General Successful Operation Unsuccessful Operation Cell Traffic Trace General Successful Operation UE Radio Capability ID Mapping General Successful Operation UI Rusuccessful Operation UE Radio Capability ID Mapping General Successful Operation Unsuccessful Operation Unsuccessful Operation UT Radio Capability ID Mapping General Successful Operation Unsuccessful Operation	
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22.1 8.7.22.2 8.7.22.3 8.7.22.3 8.7.22.4 8.7.22.4 8.7.23.1 8.7.23.2 8.7.24.1 8.7.24.2 8.7.24.3 8.8.1.3 8.8.1.1	General Successful Operation  I Successful Operation - eNB-initiated  2 Successful Operation - en-gNB-initiated Unsuccessful Operation Abnormal Conditions  EN-DC Resource Status Reporting General Successful Operation Unsuccessful Operation Abnormal Conditions  Cell Traffic Trace General Successful Operation UE Radio Capability ID Mapping General Successful Operation UB Radio Capability ID Mapping General Successful Operation Unsuccessful Operation  IAB Procedures  F1-C Traffic Transfer General Successful Operation Unsuccessful Operation Unsuccessful Operation Unsuccessful Operation Unsuccessful Operation Unsuccessful Operation Abnormal Conditions	
	General Successful Operation.  1 Successful Operation - eNB-initiated 2 Successful Operation - en-gNB-initiated Unsuccessful Operation Abnormal Conditions  EN-DC Resource Status Reporting. General Successful Operation. Unsuccessful Operation Abnormal Conditions  Cell Traffic Trace. General Successful Operation. UE Radio Capability ID Mapping General Successful Operation. UE Radio Capability ID Mapping General Successful Operation. UTRAGIO Capability ID Mapping General Successful Operation. Unsuccessful Operation Abnormal Conditions	
8.7.21.1 8.7.21.2 8.7.21.2.1 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22 8.7.22.1 8.7.22.2 8.7.22.3 8.7.22.4 8.7.23.1 8.7.23.2 8.7.23.1 8.7.24.2 8.7.24.3 8.8.1.2 8.8.1.1 8.8.1.2 8.8.1.4 9 EI	General Successful Operation - eNB-initiated  Successful Operation - en-gNB-initiated Unsuccessful Operation Abnormal Conditions  EN-DC Resource Status Reporting General Successful Operation Abnormal Conditions  Cell Traffic Trace General Successful Operation UE Radio Capability ID Mapping General Successful Operation UF Radio Capability ID Mapping General Successful Operation UF Radio Capability ID Mapping General Successful Operation Unsuccessful Operation Unsuccessful Operation Unsuccessful Operation Unsuccessful Operation	
8.7.21.1 8.7.21.2 8.7.21.2.3 8.7.21.2.2 8.7.21.3 8.7.21.4 8.7.22.1 8.7.22.2 8.7.22.1 8.7.22.2 8.7.22.3 8.7.22.4 8.7.23.1 8.7.23.2 8.7.24.1 8.7.24.2 8.7.24.3 8.8.1.2 8.8.1.1 8.8.1.2 8.8.1.3 8.8.1.4	General Successful Operation.  1 Successful Operation - eNB-initiated 2 Successful Operation - en-gNB-initiated Unsuccessful Operation Abnormal Conditions  EN-DC Resource Status Reporting. General Successful Operation. Unsuccessful Operation Abnormal Conditions  Cell Traffic Trace. General Successful Operation. UE Radio Capability ID Mapping General Successful Operation. UE Radio Capability ID Mapping General Successful Operation. UTRAGIO Capability ID Mapping General Successful Operation. Unsuccessful Operation Abnormal Conditions	

9.1.1.2	HANDOVER REQUEST ACKNOWLEDGE	
9.1.1.3	HANDOVER PREPARATION FAILURE	120
9.1.1.4	SN STATUS TRANSFER	
9.1.1.5	UE CONTEXT RELEASE	
9.1.1.6	HANDOVER CANCEL	
9.1.1.7	HANDOVER SUCCESS	
9.1.1.8	CONDITIONAL HANDOVER CANCEL	
9.1.1.9	EARLY STATUS TRANSFER	
9.1.2	Messages for global procedures	
9.1.2.1	LOAD INFORMATION	
9.1.2.2	ERROR INDICATION	
9.1.2.3	X2 SETUP REQUEST	
9.1.2.4	X2 SETUP RESPONSE	
9.1.2.5	X2 SETUP FAILURE	
9.1.2.6	RESET REQUEST	
9.1.2.7	RESET RESPONSE	
9.1.2.8	ENB CONFIGURATION UPDATE	
9.1.2.9	ENB CONFIGURATION UPDATE ACKNOWLEDGE	
9.1.2.10	ENB CONFIGURATION UPDATE FAILURE	
9.1.2.11	RESOURCE STATUS REQUEST	
9.1.2.12	RESOURCE STATUS RESPONSERESOURCE STATUS FAILURE	
9.1.2.13 9.1.2.14	RESOURCE STATUS FAILURE	
9.1.2.14	MOBILITY CHANGE REQUEST	
9.1.2.15	MOBILITY CHANGE REQUEST:	
9.1.2.17	MOBILITY CHANGE ACKNOWLEDGE	
9.1.2.17	RLF INDICATION	
9.1.2.19	HANDOVER REPORT	
9.1.2.20	CELL ACTIVATION REQUEST	
9.1.2.21	CELL ACTIVATION RESPONSE	
9.1.2.22	CELL ACTIVATION FAILURE	
9.1.2.23	X2 RELEASE	
9.1.2.24	X2AP MESSAGE TRANSFER	145
9.1.2.25	X2 REMOVAL REQUEST	
9.1.2.26	X2 REMOVAL RESPONSE	
9.1.2.27	X2 REMOVAL FAILURE	
9.1.2.28	RETRIEVE UE CONTEXT REQUEST	
9.1.2.29	RETRIEVE UE CONTEXT RESPONSE	
9.1.2.30	RETRIEVE UE CONTEXT FAILURE	
9.1.2.31	EN-DC X2 SETUP REQUEST	
9.1.2.32	EN-DC X2 SETUP RESPONSE	-
9.1.2.33	EN-DC X2 SETUP FAILURE	
9.1.2.34	EN-DC CONFIGURATION UPDATEEN-DC CONFIGURATION UPDATE ACKNOWLEDGE	
9.1.2.35 9.1.2.36	EN-DC CONFIGURATION UPDATE ACKNOWLEDGE	
9.1.2.30	EN-DC CELL ACTIVATION REQUEST	
9.1.2.37	EN-DC CELL ACTIVATION REQUEST	
9.1.2.39	EN-DC CELL ACTIVATION FAILURE	
9.1.2.40	EN-DC X2 REMOVAL REQUEST	
9.1.2.41	EN-DC X2 REMOVAL RESPONSE	
9.1.2.42	EN-DC X2 REMOVAL FAILURE	
9.1.2.43	DATA FORWARDING ADDRESS INDICATION	
9.1.2.44	EN-DC CONFIGURATION TRANSFER	
9.1.2.45	EN-DC RESOURCE STATUS REQUEST	
9.1.2.46	EN-DC RESOURCE STATUS RESPONSE	
9.1.2.47	EN-DC RESOURCE STATUS FAILURE	161
9.1.2.48	EN-DC RESOURCE STATUS UPDATE	162
9.1.2.49	CELL TRAFFIC TRACE	
9.1.3	Messages for Dual Connectivity Procedures	
9.1.3.1	SENB ADDITION REQUEST	
9.1.3.2	SENB ADDITION REQUEST ACKNOWLEDGE	
9.1.3.3	SENB ADDITION REQUEST REJECT	168

9.1.3.4	SENB RECONFIGURATION COMPLETE	168
9.1.3.4	SENB MODIFICATION REQUEST	
9.1.3.6	SENB MODIFICATION REQUEST ACKNOWLEDGE	
9.1.3.7	SENB MODIFICATION REQUEST REJECT	
9.1.3.8	SENB MODIFICATION REQUIRED	
9.1.3.9	SENB MODIFICATION CONFIRM	
9.1.3.10	SENB MODIFICATION REFUSE	
9.1.3.11	SENB RELEASE REQUEST	
9.1.3.12	SENB RELEASE REQUIRED	176
9.1.3.13	SENB RELEASE CONFIRM	177
9.1.3.14	SENB COUNTER CHECK REQUEST	178
9.1.4	Messages for E-UTRAN-NR Dual Connectivity Procedures	
9.1.4.1	SGNB ADDITION REQUEST	
9.1.4.2	SGNB ADDITION REQUEST ACKNOWLEDGE	182
9.1.4.3	SGNB ADDITION REQUEST REJECT	
9.1.4.4	SGNB RECONFIGURATION COMPLETE	
9.1.4.4	SGNB MODIFICATION REQUEST	
9.1.4.6	SGNB MODIFICATION REQUEST ACKNOWLEDGE	
9.1.4.7	SGNB MODIFICATION REQUEST REJECT	
9.1.4.8	SGNB MODIFICATION REQUIRED	
9.1.4.9	SGNB MODIFICATION CONFIRM	
9.1.4.10	SGNB MODIFICATION REFUSE	
9.1.4.11	SGNB RELEASE REQUEST	
9.1.4.12	SGNB RELEASE REQUEST ACKNOWLEDGE	201
9.1.4.13	SGNB RELEASE REQUEST REJECT	201
9.1.4.14	SGNB RELEASE REQUIRED	202
9.1.4.15	SGNB RELEASE CONFIRM	
9.1.4.16	SGNB COUNTER CHECK REQUEST	
9.1.4.17	SGNB CHANGE REQUIRED	
9.1.4.18	SGNB CHANGE CONFIRM	
9.1.4.19	SGNB CHANGE REFUSE	
9.1.4.20	SECONDARY RAT DATA USAGE REPORT	
9.1.4.21	RRC TRANSFER	
9.1.4.21		
	PARTIAL RESET REQUIRED	
9.1.4.23	PARTIAL RESET CONFIRM	
9.1.4.24	E-UTRA – NR CELL RESOURCE COORDINATION REQUEST	
9.1.4.25	E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE	
9.1.4.26	SGNB ACTIVITY NOTIFICATION	
9.1.4.27	GNB STATUS INDICATION	213
9.1.4.28	TRACE START	213
9.1.4.29	DEACTIVATE TRACE	214
9.1.4.30	UE Radio Capability ID Mapping Request	214
9.1.4.31	UE Radio Capability ID Mapping Response	
9.1.5	Messages for IAB Procedures	
9.1.5.1	F1-C TRAFFIC TRANSFER	
9.2	Information Element definitions.	
9.2.0	General	
9.2.1	GTP Tunnel Endpoint	
	*	
9.2.2	Trace Activation	
9.2.3	Handover Restriction List	
9.2.4	PLMN Identity	
9.2.5	DL Forwarding	
9.2.6	Cause	
9.2.7	Criticality Diagnostics	225
9.2.8	Served Cell Information	226
9.2.9	E-RAB Level QoS Parameters	231
9.2.10	GBR QoS Information	231
9.2.11	Bit Rate	
9.2.12	UE Aggregate Maximum Bit Rate	
9.2.13	Message Type	
9.2.14	ECGI	
0.2.14	COUNT Value	73/

9.2.16	GUMMEI	235
9.2.17	UL Interference Overload Indication	
9.2.18	UL High Interference Indication	235
9.2.19	Relative Narrowband Tx Power (RNTP)	
9.2.20	GU Group Id	
9.2.21	Location Reporting Information	
9.2.22	Global eNB ID	239
9.2.23	E-RAB ID	
9.2.24	eNB UE X2AP ID	
9.2.25	Subscriber Profile ID for RAT/Frequency priority	240
9.2.25a	Additional RRM Policy Index	
9.2.26	EARFCN	
9.2.27	Transmission Bandwidth	
9.2.28	E-RAB List	241
9.2.29	UE Security Capabilities	
9.2.30	AS Security Information	
9.2.31	Allocation and Retention Priority	
9.2.32	Time To Wait	
9.2.33	SRVCC Operation Possible	
9.2.34	Hardware Load Indicator	243
9.2.35	S1 TNL Load Indicator	243
9.2.36	Load Indicator	243
9.2.37	Radio Resource Status	243
9.2.38	UE History Information	244
9.2.39	Last Visited Cell Information	
9.2.40	Last Visited E-UTRAN Cell Information	244
9.2.41	Last Visited GERAN Cell Information	245
9.2.42	Cell Type	
9.2.43	Number of Antenna Ports	245
9.2.44	Composite Available Capacity Group	245
9.2.45	Composite Available Capacity	246
9.2.46	Cell Capacity Class Value	246
9.2.47	Capacity Value	246
9.2.48	Mobility Parameters Information	
9.2.49	Mobility Parameters Modification Range	
9.2.50	PRACH Configuration	
9.2.51	Subframe Allocation	
9.2.52	CSG Membership Status	
9.2.53	CSG ID	
9.2.54	ABS Information	
9.2.55	Invoke Indication	
9.2.56	MDT Configuration	
9.2.57	Void	
9.2.58	ABS Status	
9.2.59	Management Based MDT Allowed	
9.2.60	MultibandInfoList	
9.2.61	M3 Configuration	
9.2.62	M4 Configuration	
9.2.63	M5 Configuration	
9.2.64	MDT PLMN List	
9.2.65	EARFCN Extension	
9.2.66	COUNT Value Extended	
9.2.67	Extended UL Interference Overload Info	
9.2.68	RNL Header	
9.2.69	Masked IMEISV	
9.2.70	Expected UE Behaviour	
9.2.71	Expected UE Activity Behaviour	
9.2.72	SeNB Security Key	
9.2.73	SCG Change Indication	
9.2.74	CoMP Information	
9.2.75	CoMP Hypothesis Set	
9.2.76	RSRP Measurement Report List	260

9.2.77	Dynamic DL transmission information	
9.2.78	ProSe Authorized	261
9.2.79	CSI Report	261
9.2.80	Wideband CQI	262
9.2.81	Subband CQI	
9.2.82	COUNT Value for PDCP SN Length 18	263
9.2.83	LHN ID	263
9.2.84	Correlation ID	263
9.2.85	UE Context Kept Indicator	263
9.2.86	eNB UE X2AP ID Extension	264
9.2.87	M6 Configuration	264
9.2.88	M7 Configuration	264
9.2.89	Tunnel Information	
9.2.90	X2 Benefit Value	265
9.2.91	Resume ID	265
9.2.92	Bearer Type	
9.2.93	V2X Services Authorized	
9.2.94	Offset of NB-IoT Channel Number to EARFCN	
9.2.95	WT ID	
9.2.96	WT UE XwAP ID	
9.2.97	UE Sidelink Aggregate Maximum Bit Rate	
9.2.98	NR Neighbour Information	
9.2.99	Extended Bit Rate	
9.2.100	en-gNB UE X2AP ID	
9.2.101	SgNB Security Key	
9.2.102	Target SgNB ID Information	
9.2.103	SCG Configuration Query	
9.2.104	Delivery Status	
9.2.105	Void	
9.2.106	NR Frequency Info	
9.2.107	NR UE Security Capabilities	
9.2.108	EN-DC Resource Configuration	
9.2.109	PDCP Change Indication	
9.2.110	Served NR Cell Information	
9.2.111	NR CGI	
9.2.112	Global en-gNB ID	
9.2.113	Void	
9.2.114	NR Transmission Bandwidth	
9.2.115	Cell Assistance Information	
9.2.116	MeNB Resource Coordination Information	
9.2.117	SgNB Resource Coordination Information	
9.2.118	UL Configuration	
9.2.119	RLC Mode	
9.2.120 9.2.121	Secondary RAT Usage Report ListUE Application layer measurement configuration	
9.2.121	DRB ID	
9.2.122	SUL Information	
9.2.123	Packet Loss Rate	
9.2.124	Protected E-UTRA Resource Indication	
9.2.125	Data Traffic Resource Indication	
9.2.120	Data Traffic Resources	
9.2.127	Reserved Subframe Pattern	
9.2.128	Aerial UE subscription information	
9.2.129	User plane traffic activity report	
9.2.130	RLC Status	
9.2.131	RRC config indication	
9.2.132	PDCP SN Length	
9.2.133	Bluetooth Measurement Configuration.	
9.2.135	WLAN Measurement Configuration	
9.2.136	Subscription Based UE Differentiation Information	
9.2.137	Duplication activation	
9.2.138	LCID	

9.2.139	MeNB Coordination Assistance Information	
9.2.140	SgNB Coordination Assistance Information	
9.2.141	Desired Activity Notification Level	
9.2.142	Location Information at SgNB	
9.2.143	Interface Instance Indication	
9.2.144	NB-IoT UL DL Alignment Offset	
9.2.145	Lower Layer presence status change	
9.2.146	Cell and Capacity Assistance Information	
9.2.147	Maximum Cell List Size	295
9.2.148	Message Oversize Notification	
9.2.149	TNL Transport Layer Address Info	296
9.2.150	CP Transport Layer Information	
9.2.151	TNL Association Usage	297
9.2.152	RAN UE NGAP ID	
9.2.153	EPC Handover Restriction List Container	
9.2.154	DAPS Request Information	
9.2.155	DAPS Response Information	297
9.2.156	Maximum Number of CHO Preparations	
9.2.157	Ethernet Type	298
9.2.158	NR V2X Services Authorized	
9.2.159	NR UE Sidelink Aggregate Maximum Bit Rate	
9.2.160	PC5 QoS Parameters	
9.2.161	TNL Capacity Indicator	299
9.2.162	NR Radio Resource Status	300
9.2.163	NR Composite Available Capacity Group	300
9.2.164	NR Composite Available Capacity	
9.2.165	NR Cell Capacity Class Value	301
9.2.166	NR Capacity Value	301
9.2.167	SSB Index	302
9.2.168	NR Carrier List	
9.2.169	SSB Positions In Burst	
9.2.170	NPRACH Configuration	
9.2.171	UE Radio Capability ID	
9.2.172	QoS Mapping Information	
9.2.173	UE Radio Capability	
9.2.174	URI	
9.2.175	SFN Offset	
9.3	Message and Information Element Abstract Syntax (with ASN.1)	
9.3.1	General	
9.3.2	Usage of Private Message Mechanism for Non-standard Use	
9.3.3	Elementary Procedure Definitions	
9.3.4	PDU Definitions	
9.3.5	Information Element definitions	411
9.3.6	Common definitions	475
9.3.7	Constant definitions	
9.3.8	Container definitions	
9.4	Message transfer syntax	
9.5	Timers	491
10 H	Iandling of unknown, unforeseen and erroneous protocol data	491
Annex	A (informative): Change history	492
	, , , , , , , , , , , , , , , , , , , ,	

# **Foreword**

This Technical Specification has been produced by the 3<sup>rd</sup> Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

#### where:

- x the first digit:
  - 1 presented to TSG for information;
  - 2 presented to TSG for approval;
  - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

# 1 Scope

[16]

The present document specifies the radio network layer signalling procedures of the control plane between eNBs in E-UTRAN. X2AP supports the functions of X2 interface by signalling procedures defined in this document. X2AP is developed in accordance to the general principles stated in TS 36.401 [2] and TS 36.420 [3].

### 2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

[1]	3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
[2]	3GPP TS 36.401: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Architecture Description".
[3]	3GPP TS 36.420: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); X2 General Aspects and Principles".
[4]	3GPP TS 36.413: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); S1 Application Protocol (S1AP)".
[5]	ITU-T Recommendation X.691 (2002-07): "Information technology - ASN.1 encoding rules - Specification of Packed Encoding Rules (PER) ".
[6]	3GPP TS 32.422: "Telecommunication Management; Subscriber and Equipment Trace; Trace Control and Configuration Management".
[7]	3GPP TS 32.421: "Telecommunication Management; Subscriber and Equipment Trace; Trace concepts and requirements".
[8]	3GPP TS 36.424: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); X2 data transport".
[9]	3GPP TS 36.331: "Evolved Universal Terrestrial Radio Access (E-UTRAN); Radio Resource Control (RRC) Protocol Specification".
[10]	3GPP TS 36.211: "Evolved Universal Terrestrial Radio Access (E-UTRA); Physical Channels and Modulation".
[11]	3GPP TS 36.213: "Evolved Universal Terrestrial Radio Access (E-UTRA); Physical layer procedures ".
[12]	3GPP TS 23.401: "General Packet Radio Service (GPRS) enhancements for Evolved Universal Terrestrial Radio Access Network (E-UTRAN) access".
[13]	3GPP TS 23.203: "Policy and charging control architecture".
[14]	3GPP TS 24.301: "Non-Access-Stratum (NAS) protocol for Evolved Packet System; Stage 3".
[15]	3GPP TS 36.300: "Evolved Universal Terrestrial Radio Access (E-UTRA), Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Overall description; stage 2".

3GPP TS 36.104: "Base Station (BS) radio transmission and reception ".

[17]	Void.
[18]	3GPP TS 33.401: "Security architecture".
[19]	3GPP TS 36.414: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); S1 data transport".
[20]	3GPP TS 23.216: "Single Radio Voice Call Continuity (SRVCC)".
[21]	3GPP TS 36.422: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); X2 signaling transport".
[22]	3GPP TS 36.314: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Layer 2 - Measurements".
[23]	Void.
[24]	3GPP TS 25.413: "UTRAN Iu interface RANAP signalling"
[25]	3GPP TS 37.320: "Universal Terrestrial Radio Access (UTRA) and Evolved Universal Terrestrial Radio Access (E-UTRA); Radio measurement collection for Minimization of Drive Tests (MDT); Overall description; Stage 2".
[26]	3GPP TS 29.281: "General Packet Radio Service (GPRS); Tunnelling Protocol User Plane (GTPv1-U)".
[27]	ITU-T Recommendation X.680 (2002-07): "Information technology – Abstract Syntax Notation One (ASN.1): Specification of basic notation".
[28]	ITU-T Recommendation X.681 (2002-07): "Information technology – Abstract Syntax Notation One (ASN.1): Information object specification".
[29]	3GPP TS 23.003: "Technical Specification Group Core Network and Terminals; Numbering, addressing and identification".
[30]	3GPP TR 25.921 (version.7.0.0): "Guidelines and principles for protocol description and error handling".
[31]	3GPP TS 38.331: "NR; Radio Resource Control (RRC); Protocol Specification".
[32]	3GPP TS 37.340: "Evolved Universal Terrestrial Radio Access (E-UTRA) and NR; Multiconnectivity; Stage 2".
[33]	3GPP TS 38.323: "NR; Packet Data Convergence Protocol (PDCP) specification".
[34]	3GPP TS 38.401: "NG-RAN; Architecture description".
[35]	IETF RFC 5905: "Network Time Protocol Version 4: Protocol and Algorithms Specification".
[36]	3GPP TS 26.247: "Transparent end-to-end Packet-switched Streaming Service (PSS); Progressive Download and Dynamic Adaptive Streaming over HTTP (3GP-DASH)".
[37]	3GPP TS 38.104: "NR; Base Station (BS) radio transmission and reception".
[38]	3GPP TS 23.501: "System Architecture for the 5G System"
[39]	3GPP TS 38.413: "NG Radio Access Network (NG-RAN); NG Application Protocol (NGAP)".
[40]	3GPP TS 36.322: "Evolved Universal Terrestrial Radio Access (E-UTRA); Radio Link Control (RLC) protocol specification".
[41]	3GPP TS 23.285: "Technical Specification Group Services and System Aspects; Architecture enhancements for V2X services".
[42]	3GPP TS 38.211: "NR; Physical channels and modulation".
[43]	3GPP TS 38.213: "NR; Physical layer procedures for control".

[44]	3GPP TS 38.473: "NG-RAN; F1 application protocol (F1AP)".
[45]	3GPP TS 38.314: "NR; Layer 2 Measurements".
[46]	Void
[47]	3GPP TS 38.300: "NR; Overall description; Stage-2".
[48]	3GPP TS 38.472: "NG-RAN; F1 signalling transport"
[49]	3GPP TS 38.423: "NG-RAN; Xn Application Protocol (XnAP)".
[50]	3GPP TS 33.501: "Security architecture and procedures for 5G System".

# 3 Definitions, symbols and abbreviations

### 3.1 Definitions

For the purposes of the present document, the terms and definitions given in TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in TR 21.905 [1].

**ACL functionality:** A functionality controlling the access to network nodes. In case of Access Control Lists (ACL) functionality is applied in a network node the network node may only accept connections from other peer network nodes once the source addresses of the sending network node is already known in the target node.

**Elementary Procedure:** X2AP protocol consists of Elementary Procedures (EPs). An X2AP Elementary Procedure is a unit of interaction between two eNBs. An EP consists of an initiating message and possibly a response message. Two kinds of EPs are used:

- Class 1: Elementary Procedures with response (success or failure),
- Class 2: Elementary Procedures without response.

**E-RAB:** Defined in TS 36.401 [2].

**CSG Cell:** as defined in TS 36.300 [15].

**Dual Connectivity:** as defined in TS 36.300 [15].

E-UTRA-NR Dual Connectivity: as defined in TS 37.340 [32].

Hybrid cell: as defined in TS 36.300 [15].

Master eNB: as defined in TS 36.300 [15].

**Secondary Cell Group:** as defined in TS 36.300 [15].

**Secondary eNB:** as defined in TS 36.300 [15].

**en-gNB**: as defined in TS 37.340 [32].

**Conditional Handover:** As defined in TS 36.300 [15].

**DAPS HO:** As defined in TS 36.300 [15].

Conditional PSCell Change: As defined in TS 37.340 [32].

**Immediate Handover:** Used in the context of Conditional Handover, to refer to a handover that is executed immediately after the UE receives the Handover Command.

**IAB-node:** as defined in TS 38.300 [47].

# 3.2 Symbols

For the purposes of the present document, the following symbols apply:

<symbol> <Explanation>

### 3.3 Abbreviations

For the purposes of the present document, the abbreviations given in TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in TR 21.905 [1].

ABS Almost Blank Subframe ARPI Additional RRM Policy Index

ACL Access Control List BBF Broadband Forum

BL Bandwidth reduced Low complexity

CCO Cell Change Order
CE Coverage Enhancement
CHO Conditional Handover
CoMP Coordinated Multi Point
DAPS Dual Active Protocol Stacks

DC Dual Connectivity

DL Downlink

EARFCN E-UTRA Absolute Radio Frequency Channel Number

E-CID Enhanced Cell-ID (positioning method)

eNB E-UTRAN NodeB

EN-DC E-UTRA-NR Dual Connectivity

EP Elementary Procedure EPC Evolved Packet Core

E-RAB E-UTRAN Radio Access Bearer

E-UTRAN Evolved UTRAN

GNSS Global Navigation Satellite System
GUMMEI Globally Unique MME Identifier

HFN Hyper Frame Number

IAB Integrated Access and Backhaul

IE Information Element L-GW Local GateWay

LWA LTE-WLAN Aggregation MCG Master Cell Group

MDT Minimization of Drive Tests

MeNB Master eNB

MME Mobility Management Entity

MTSI Multimedia Telephony Service for IMS

NAICS Network-Assisted Interference Cancellation and Suppression

NR New Radio

PDCP Packet Data Convergence Protocol
PLMN Public Land Mobile Network

ProSe Proximity Service

QMC QoE Measurement Collection

QoE Quality of Experience SCG Secondary Cell Group S-GW Serving Gateway SeNB Secondary eNB SgNB Secondary gNB

SIPTO Selected IP Traffic Offload

SIPTO@LN Selected IP Traffic Offload at the Local Network

SN Sequence Number
SSID Service Set Identifier
TAC Tracking Area Code
UE User Equipment

UL Uplink

V2X Vehicle-to-Everything WLAN Wireless Local Area Network

WT WLAN Termination

### 4 General

# 4.1 Procedure specification principles

The principle for specifying the procedure logic is to specify the functional behaviour of the terminating eNB exactly and completely. Any rule that specifies the behaviour of the originating eNB shall be possible to be verified with information that is visible within the system.

The following specification principles have been applied for the procedure text in clause 8:

- The procedure text discriminates between:
  - 1) Functionality which "shall" be executed

The procedure text indicates that the receiving node "shall" perform a certain function Y under a certain condition. If the receiving node supports procedure X but cannot perform functionality Y requested in the initiating message of a Class 1 EP, the receiving node shall respond with the message used to report unsuccessful outcome for this procedure, containing an appropriate cause value.

2) Functionality which "shall, if supported" be executed

The procedure text indicates that the receiving node "shall, if supported," perform a certain function Y under a certain condition. If the receiving node supports procedure X, but does not support functionality Y, the receiving node shall proceed with the execution of the EP, possibly informing the requesting node about the not supported functionality.

- Any required inclusion of an optional IE in a response message is explicitly indicated in the procedure text. If the procedure text does not explicitly indicate that an optional IE shall be included in a response message, the optional IE shall not be included. For requirements on including *Criticality Diagnostics* IE, see section 10.

# 4.2 Forwards and backwards compatibility

The forwards and backwards compatibility of the protocol is assured by a mechanism where all current and future messages, and IEs or groups of related IEs, include ID and criticality fields that are coded in a standard format that will not be changed in the future. These parts can always be decoded regardless of the standard version.

# 4.3 Specification notations

For the purposes of the present document, the following notations apply:

Procedure When referring to an elementary procedure in the specification the Procedure Name is written with

the first letters in each word in upper case characters followed by the word "procedure", e.g.

Handover Preparation procedure.

Message When referring to a message in the specification the MESSAGE NAME is written with all letters

in upper case characters followed by the word "message", e.g. HANDOVER REQUEST message.

IE When referring to an information element (IE) in the specification the *Information Element Name* 

is written with the first letters in each word in upper case characters and all letters in Italic font

followed by the abbreviation "IE", e.g. E-RAB ID IE.

Value of an IE When referring to the value of an information element (IE) in the specification the "Value" is

written as it is specified in sub clause 9.2 enclosed by quotation marks, e.g. "Value".

# 5 X2AP services

The present clause describes the services an eNB offers to its neighbours.

### 5.1 X2AP procedure modules

The X2 interface X2AP procedures are divided into two modules as follows:

- 1. X2AP Basic Mobility Procedures;
- 2. X2AP Global Procedures;

The X2AP Basic Mobility Procedures module contains procedures used to handle the UE mobility within E-UTRAN.

The Global Procedures module contains procedures that are not related to a specific UE. The procedures in this module are in contrast to the above module involving two peer eNBs.

### 5.2 Parallel transactions

Unless explicitly indicated in the procedure specification, at any instance in time one protocol peer shall have a maximum of one ongoing X2AP procedure related to a certain UE.

# 6 Services expected from signalling transport

The signalling connection shall provide in sequence delivery of X2AP messages. X2AP shall be notified if the signalling connection breaks.

X2 signalling transport is described in TS 36.422 [21].

# 7 Functions of X2AP

The X2AP protocol provides the following functions:

- Mobility Management. This function allows the eNB to move the responsibility of a certain UE to another eNB. Forwarding of user plane data, Status Transfer and UE Context Release function are parts of the mobility management.
- Dual Connectivity. This function allows the eNB to request another eNB to provide radio resources for a certain UE while keeping responsibility for that UE.
- E-UTRA-NR Dual Connectivity. This function allows the eNB to request another en-gNB to provide radio resources for a certain UE while keeping responsibility for that UE.
- Load Management. This function is used by eNBs to indicate resource status, overload and traffic load to each other.
- Reporting of General Error Situations. This function allows reporting of general error situations, for which function specific error messages have not been defined.
- Resetting the X2. This function is used to reset the X2 interface.
- Setting up the X2. This function is used to exchange necessary data for the eNB or en-gNB for setup the X2 interface and implicitly perform an X2 Reset.
- eNB Configuration Update. This function allows updating of application level data needed for two eNBs to interoperate correctly over the X2 interface.

- Mobility Parameters Management. This function allows the eNB to coordinate adaptation of mobility parameter settings with a peer eNB.
- Mobility Robustness Optimisation. This function allows reporting of information related to mobility failure events.
- Energy Saving. This function allows decreasing energy consumption by enabling indication of cell activation/deactivation over the X2 interface.
- X2 Release. This function allows an eNB to be aware that the signalling connection to a peer eNB is unavailable.
- Message Transfer. This function allows indirect transport of X2AP messages to a peer eNB.
- Registration. This function allows registration of eNB in case indirect transport of X2AP messages is supported.
- Removing the X2. This function allows removing the signalling connection between two eNBs or between eNB and en-gNB in a controlled manner.
- Inter-eNB UE Context Retrieval. This function allows retrieval of a UE context in case of resumption or reestablishment of an RRC connection.
- Secondary RAT Data Usage Report. This function allows eNB to get the uplink and downlink data volumes for the Secondary RAT on a per E-RAB basis.
- E-UTRA NR Spectrum Sharing. This function allows uplink and downlink spectrum sharing between a number of E UTRA and a number of NR cells with overlapping coverage.
- EN-DC Configuration Transfer. This function supports en-gNB X2 TNL address discovery.
- EN-DC Load Management. This function is used by MeNB/en-gNB to indicate resource status, overload and traffic load to each other.
- UE Radio Capability ID Mapping.

The mapping between the above functions and X2 EPs is shown in the table below.

Table 7-1: Mapping between X2AP functions and X2AP EPs

Function	Elementary Procedure(s)
Mobility Management	a) Handover Preparation
	b) SN Status Transfer
	c) UE Context Release
	d) Handover Cancel
	e) Handover Success
	f) Conditional Handover Cancel
Dual Connectivity	a) SeNB Addition Preparation
	b) SeNB Reconfiguration Completion
	c) MeNB initiated SeNB Modification
	Preparation
	d) SeNB initiated SeNB Modification
	e) MeNB initiated SeNB Release
	f) SeNB initiated SeNB Release
E LITEA NE E LO COMO	g) SeNB Counter Check
E-UTRA-NR Dual Connectivity	a) SgNB Addition Preparation
	b) SgNB Reconfiguration Completion
	c) MeNB initiated SgNB Modification
	Preparation d) SgNB initiated SgNB Modification
	e) SgNB change
	f) MeNB initiated SgNB Release
	g) SgNB initiated SgNB Release
	h) SgNB Counter Check
	i) RRC transfer
	j) EN-DC X2 Setup
	k) EN-DC Configuration Update
	I) EN-DC Cell Activation
	m) SgNB Activity Notification
	n) EN-DC X2 Removal
	o) gNB Status Indication
	p) EN-DC Resource Status Reporting Initiation
	q) EN-DC Resource Status Reporting
	r) F1-C Traffic Transfer
Load Management	a) Load Indication
	b) Resource Status Reporting Initiation
D (1 (0 15 0))	c) Resource Status Reporting
Reporting of General Error Situations	Error Indication
Resetting the X2	Reset
Setting up the X2	X2 Setup
eNB Configuration Update	a) eNB Configuration Update
Mobility Parameters Management	b) Cell Activation  Makility Settings Change
Mobility Parameters Management	Mobility Settings Change
Mobility Robustness Optimisation	a) Radio Link Failure Indication
Energy Saving	b) Handover Report a) eNB Configuration Update
Lifety Gaving	b) Cell Activation
X2 Release	X2 Release
Message Transfer Registration	X2AP Message Transfer
Removing the X2	X2 Removal
Inter-eNB UE Context Retrieval	a) Retrieve UE Context
Intel of De Context (Cineval	b) Data Forwarding Address Indication
Secondary RAT Data Usage Report	Secondary RAT Data Usage Report
E-UTRA – NR Spectrum Sharing	E-UTRA - NR Cell Resource Coordination
EN-DC Configuration Transfer	EN-DC Configuration Transfer
UE Radio Capability ID Mapping	UE Radio Capability ID Mapping

# 8 X2AP procedures

# 8.1 Elementary procedures

In the following tables, all EPs are divided into Class 1 and Class 2 EPs.

**Table 8.1-1: Class 1 Elementary Procedures** 

Elementary	Initiating Message	Successful Outcome	Unsuccessful Outcome
Procedure		Response message	Response message
Handover Preparation	HANDOVER REQUEST	HANDOVER REQUEST ACKNOWLEDGE	HANDOVER PREPARATION FAILURE
Reset X2 Setup	RESET REQUEST X2 SETUP REQUEST	RESET RESPONSE X2 SETUP RESPONSE	X2 SETUP FAILURE
eNB Configuration Update	ENB CONFIGURATION UPDATE	ENB CONFIGURATION UPDATE ACKNOWLEDGE	ENB CONFIGURATION UPDATE FAILURE
Resource Status Reporting Initiation	RESOURCE STATUS REQUEST	RESOURCE STATUS RESPONSE	RESOURCE STATUS FAILURE
Mobility Settings Change	MOBILITY CHANGE REQUEST	MOBILITY CHANGE ACKNOWLEDGE	MOBILITY CHANGE FAILURE
Cell Activation	CELL ACTIVATION REQUEST	CELL ACTIVATION RESPONSE	CELL ACTIVATION FAILURE
SeNB Addition Preparation	SENB ADDITION REQUEST	SENB ADDITION REQUEST ACKNOWLEDGE	SENB ADDITION REQUEST REJECT
MeNB initiated SeNB Modification Preparation	SENB MODIFICATION REQUEST	SENB MODIFICATION REQUEST ACKNOWLEDGE	SENB MODIFICATION REQUEST REJECT
SeNB initiated SeNB Modification	SENB MODIFICATION REQUIRED	SENB MODIFICATION CONFIRM	SENB MODIFICATION REFUSE
SeNB initiated	SENB RELEASE	SENB RELEASE	
SeNB Release X2 Removal	REQUIRED X2 REMOVAL REQUEST	CONFIRM X2 REMOVAL RESPONSE	X2 REMOVAL FAILURE
Retrieve UE Context	RETRIEVE UE CONTEXT REQUEST	RETRIEVE UE CONTEXT RESPONSE	RETRIEVE UE CONTEXT FAILURE
SgNB Addition Preparation	SGNB ADDITION REQUEST	SGNB ADDITION REQUEST ACKNOWLEDGE	SGNB ADDITION REQUEST REJECT
MeNB initiated SgNB Modification Preparation	SGNB MODIFICATION REQUEST	SGNB MODIFICATION REQUEST ACKNOWLEDGE	SGNB MODIFICATION REQUEST REJECT
SgNB initiated SgNB Modification	SGNB MODIFICATION REQUIRED	SGNB MODIFICATION CONFIRM	SGNB MODIFICATION REFUSE
SgNB change	SGNB CHANGE REQUIRED	SGNB CHANGE CONFIRM	SGNB CHANGE REFUSE
MeNB initiated SgNB Release	SGNB RELEASE REQUEST	SGNB RELEASE REQUEST ACKNOWLEDGE	SGNB RELEASE REQUEST REJECT
SgNB initiated SgNB Release EN-DC X2 Setup	SGNB RELEASE REQUIRED EN-DC X2 SETUP	SGNB RELEASE CONFIRM EN-DC X2 SETUP	EN-DC X2 SETUP
•	REQUEST	RESPONSE	FAILURE
EN-DC Configuration Update	EN-DC CONFIGURATION UPDATE	EN-DC CONFIGURATION UPDATE ACKNOWLEDGE	EN-DC CONFIGURATION UPDATE FAILURE
EN-DC Cell Activation	EN-DC CELL ACTIVATION REQUEST	EN-DC CELL ACTIVATION RESPONSE	EN-DC CELL ACTIVATION FAILURE
E-UTRA - NR Cell Resource Coordination	E-UTRA - NR CELL RESOURCE COORDINATION REQUEST	E-UTRA - NR CELL RESOURCE COORDINATION RESPONSE	

Elementary	Initiating Message	Successful Outcome	Unsuccessful Outcome
Procedure		Response message	Response message
EN-DC X2 Removal	EN-DC X2 REMOVAL REQUEST	EN-DC X2 REMOVAL RESPONSE	EN-DC X2 REMOVAL FAILURE
EN-DC Resource Status Reporting Initiation	EN-DC RESOURCE STATUS REQUEST	EN-DC RESOURCE STATUS RESPONSE	EN-DC RESOURCE STATUS FAILURE
UE Radio Capability ID Mapping	UE RADIO CAPABILITY ID MAPPING REQUEST	UE RADIO CAPABILITY ID MAPPING RESPONSE	

**Table 8.1-2: Class 2 Elementary Procedures** 

Elementary Procedure	Initiating Message
Load Indication	LOAD INFORMATION
Handover Cancel	HANDOVER CANCEL
SN Status Transfer	SN STATUS TRANSFER
UE Context Release	UE CONTEXT RELEASE
Resource Status Reporting	RESOURCE STATUS UPDATE
Error Indication	ERROR INDICATION
Radio Link Failure Indication	RLF INDICATION
Handover Report	HANDOVER REPORT
X2 Release	X2 RELEASE
X2AP Message Transfer	X2AP MESSAGE TRANSFER
SeNB Reconfiguration Completion	SENB RECONFIGURATION
	COMPLETE
MeNB initiated SeNB Release	SENB RELEASE REQUEST
SeNB Counter Check	SENB COUNTER CHECK REQUEST
SgNB Reconfiguration Completion	SGNB RECONFIGURATION
	COMPLETE
SgNB Counter Check	SGNB COUNTER CHECK
	REQUEST
RRC Transfer	RRC TRANSFER
Secondary RAT Data Usage Report	SECONDARY RAT DATA USAGE
	REPORT
SgNB Activity Notification	SGNB ACTIVITY NOTIFICATION
Data Forwarding Address Indication	DATA FORWARDING ADDRESS
	INDICATION
gNB Status Indication	GNB STATUS INDICATION
EN-DC Configuration Transfer	EN-DC CONFIGURATION
-	TRANSFER
Trace Start	TRACE START
Deactivate Trace	DEACTIVATE TRACE
Handover Success	HANDOVER SUCCESS
Conditional Handover Cancel	CONDITIONAL HANDOVER
E L OLL E	CANCEL
Early Status Transfer	EARLY STATUS TRANSFER
EN-DC Resource Status Reporting	EN-DC RESOURCE STATUS
Call Traffic Trace	UPDATE
Cell Traffic Trace	CELL TRAFFIC TRACE
F1-C Traffic Transfer	F1-C TRAFFIC TRANSFER

# 8.2 Basic mobility procedures

## 8.2.1 Handover Preparation

### 8.2.1.1 General

This procedure is used to establish necessary resources in an eNB for an incoming handover. If the procedure concerns a conditional handover, parallel transactions are allowed. Possible parallel requests are identified by the target cell ID when the source UE AP IDs are the same.

The procedure uses UE-associated signalling.

#### 8.2.1.2 Successful Operation

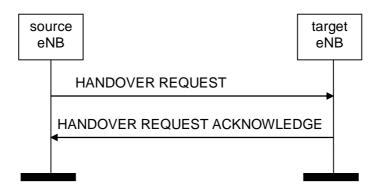


Figure 8.2.1.2-1: Handover Preparation, successful operation

The source eNB initiates the procedure by sending the HANDOVER REQUEST message to the target eNB. When the source eNB sends the HANDOVER REQUEST message, it shall start the timer  $T_{RELOCprep.}$ 

If the *Conditional Handover Information Request* IE is contained in the HANDOVER REQUEST message, the target eNB shall consider that the request concerns a conditional handover and shall include the *Conditional Handover Information Acknowledge* IE in the HANDOVER REQUEST ACKNOWLEDGE message.

If the *New eNB UE X2AP ID* IE is contained in the *Conditional Handover Information Request* IE included in the HANDOVER REQUEST message, then the target eNB shall remove the existing prepared conditional HO identified by the *New eNB UE X2AP ID* IE and the *Target Cell ID* IE. It is up to the implementation of the target eNB when to remove the HO information.

The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

The source eNB may include in the GUMMEI IE any GUMMEI corresponding to the source MME node.

If at least one of the requested non-GBR E-RABs is admitted to the cell indicated by the *Target Cell ID* IE, the target eNB shall reserve necessary resources, and send the HANDOVER REQUEST ACKNOWLEDGE message back to the source eNB. The target eNB shall include the E-RABs for which resources have been prepared at the target cell in the *E-RABs Admitted List* IE. The target eNB shall include the E-RABs that have not been admitted in the *E-RABs Not Admitted List* IE with an appropriate cause value.

At reception of the HANDOVER REQUEST message the target eNB shall:

- prepare the configuration of the AS security relation between the UE and the target eNB by using the information in the *UE Security Capabilities* IE and the *AS Security Information* IE in the *UE Context Information* IE.

For each E-RAB for which the source eNB proposes to do forwarding of downlink data, the source eNB shall include the *DL Forwarding* IE within the *E-RABs To be Setup Item* IE of the HANDOVER REQUEST message. The source eNB shall include the DL Forwarding IE if it requests a DAPS handover for that E-RAB. For each E-RAB that it has decided to admit, the target eNB may include the *DL GTP Tunnel Endpoint* IE within the *E-RABs Admitted Item* IE of the HANDOVER REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this bearer. This GTP tunnel endpoint may be different from the corresponding GTP tunnel endpoint, i.e. the information contained in the *Transport Layer address* IE and *GTP TEID* IE in the *E-RAB To Be Switched in Downlink List* IE of the PATH SWITCH REQUEST message (see TS 36.413 [4]) depending on implementation choice.

For each bearer in the *E-RABs Admitted List* IE, the target eNB may include the *UL GTP Tunnel Endpoint* IE to indicate that it requests data forwarding of uplink packets to be performed for that bearer.

Upon reception of the HANDOVER REQUEST ACKNOWLEDGE message the source eNB shall stop the timer  $T_{\text{RELOC}_{\text{prep}}}$  and terminate the Handover Preparation procedure. If the procedure was initiated for an immediate handover, the source eNB shall start the timer TX2RELOCoverall. The source eNB is then defined to have a Prepared Handover for that X2 UE-associated signalling.

If the *Trace Activation* IE is included in the HANDOVER REQUEST message then the target eNB shall, if supported, initiate the requested trace function as described in TS 32.422 [6]. In particular, the target eNB shall, if supported:

- if the *Trace Activation* IE does not include the *MDT Configuration* IE, initiate the requested trace session as described in TS 32.422 [6];
- if the *Trace Activation* IE includes the *MDT Activation* IE, within the *MDT Configuration* IE, set to "Immediate MDT and Trace" initiate the requested trace session and MDT session as described in TS 32.422 [6];
- if the *Trace Activation* IE includes the *MDT Activation* IE, within the *MDT Configuration* IE, set to "Immediate MDT Only" initiate the requested MDT session as described in TS 32.422 [6] and the target eNB shall ignore *Interfaces To Trace* IE, and *Trace Depth* IE;
- if the *Trace Activation* IE includes the *MDT Location Information* IE, within the *MDT Configuration* IE, store this information and take it into account in the requested MDT session;
- if the *Trace Activation* IE includes the *Signalling based MDT PLMN List* IE, within the *MDT Configuration* IE, the eNB may use it to propagate the MDT Configuration as described in TS 37.320 [31];
- if the *Trace Activation* IE includes the *UE Application layer measurement configuration* IE, initiate the requested trace session and QoE Measurement Collection function as described in TS 36.300 [15].
- if the *Trace Activation* IE includes the *Bluetooth Measurement Configuration* IE, within the *MDT Configuration* IE, take it into account for MDT Configuration as described in TS 37.320 [31].
- if the *Trace Activation* IE includes the *WLAN Measurement Configuration* IE, within the *MDT Configuration* IE, take it into account for MDT Configuration as described in TS 37.320 [31].
- if the *Trace Activation* IE includes the *MDT Configuration NR* IE, store and forward the *MDT Configuration NR* IE to the SgNB, if the target eNB has configured EN-DC for the UE.

If the *Management Based MDT Allowed* IE only or the *Management Based MDT Allowed* IE and the *Management Based MDT PLMN List* IE is contained in the HANDOVER REQUEST message, the target eNB shall, if supported, store the received information in the UE context, and use this information to allow subsequent selection of the UE for management based MDT defined in TS 32.422 [6].

If the *Masked IMEISV* IE is contained in the HANDOVER REQUEST message the target eNB shall, if supported, use it to determine the characteristics of the UE for subsequent handling.

The source eNB shall, if supported and available in the UE context, include the *Management Based MDT Allowed* IE and the *Management Based MDT PLMN List* IE in the HANDOVER REQUEST message, except if the source eNB selects a serving PLMN in the target eNB which is not included in the Management Based MDT PLMN List. If the *Management Based MDT PLMN List* IE is not present, the source eNB shall, if supported, include the *Management Based MDT Allowed* IE, if this information is available in the UE context, in the HANDOVER REQUEST message, except if the source eNB selects a serving PLMN in the target eNB different from the serving PLMN in the source eNB.

If the Handover Restriction List IE is

- contained in the HANDOVER REQUEST message, the target eNB shall
  - store the information received in the *Handover Restriction List* IE in the UE context;
  - use this information to determine a target for the UE during subsequent mobility action for which the eNB provides information about the target of the mobility action towards the UE, except when one of the E-RABs has a particular ARP value (TS 23.401 [12]) in which case the information shall not apply;
  - use this information to select a proper SCG during dual connectivity operation.
- not contained in the HANDOVER REQUEST message, the target eNB shall consider that no roaming and no access restriction apply to the UE.

If the *Location Reporting Information* IE is included in the HANDOVER REQUEST message then the target eNB should initiate the requested location reporting functionality as defined in TS 36.413 [4].

If the *SRVCC Operation Possible* IE is included in the HANDOVER REQUEST message, the target eNB shall store the content of such IE in the UE context and use it as defined in TS 23.216 [20].

If the *UE Security Capabilities* IE included in the HANDOVER REQUEST message only contains the EIA0 algorithm as defined in TS 33.401 [18] and if this EIA0 algorithm is defined in the configured list of allowed integrity protection algorithms in the eNB (TS 33.401 [18]), the eNB shall take it into use and ignore the keys received in the *AS Security Information* IE.

The HANDOVER REQUEST message shall contain the Subscriber Profile ID for RAT/Frequency priority IE, if available.

If the *Subscriber Profile ID for RAT/Frequency priority* IE is contained in the HANDOVER REQUEST message, the target eNB shall store this information and the target eNB should use the information as defined in TS 36.300 [15].

If the *Additional RRM Policy Index* IE is contained in the HANDOVER REQUEST message, the target eNB shall, if supported, store this information and the target eNB should use the information as defined in TS 36.300 [15].

Upon reception of *UE History Information* IE in the HANDOVER REQUEST message, the target eNB shall collect the information defined as mandatory in the *UE History Information* IE and shall, if supported, collect the information defined as optional in the *UE History Information* IE, for as long as the UE stays in one of its cells, and store the collected information to be used for future handover preparations.

Upon reception of the *UE History Information from the UE* IE in the HANDOVER REQUEST message, the target eNB shall, if supported, store the collected information to be used for future handover preparations.

If the *Mobility Information* IE is provided in the HANDOVER REQUEST message, the target eNB shall, if supported, store this information and use it as defined in TS 36.300 [15]. The target eNB shall, if supported, store the C-RNTI of the source cell received in the HANDOVER REQUEST message.

If the *Expected UE Behaviour* IE is provided in the HANDOVER REQUEST message, the target eNB shall, if supported, store this information and may use it to determine the RRC connection time.

If the *ProSe Authorized* IE is contained in the HANDOVER REQUEST message and it contains one or more IEs set to "authorized", the eNB shall, if supported, consider that the UE is authorized for the relevant ProSe service(s).

If the *V2X Services Authorized* IE is contained in the HANDOVER REQUEST message and it contains one or more IEs set to "authorized", the eNB shall, if supported, consider that the UE is authorized for the relevant service(s).

If the *UE Context Reference at the SeNB* IE is contained in the HANDOVER REQUEST message the target eNB may use it as specified in TS 36.300 [15]. In this case, the source eNB may expect the target eNB to include the *UE Context Kept Indicator* IE set to "True" in the HANDOVER REQUEST ACKNOWLEDGE message, which shall use this information as specified in TS 36.300 [15]. If the *UE Context Reference at the WT* IE is contained in the HANDOVER REQUEST message, the target eNB may use it as specified in TS 36.300 [15]. In this case, the source eNB may expect the target eNB to include the *WT UE Context Kept Indicator* IE set to "True" in the HANDOVER REQUEST ACKNOWLEDGE message; the source eNB shall use this information as specified in TS 36.300 [15].

If the *UE Context Reference at the SgNB* IE is contained in the HANDOVER REQUEST message the target eNB may use it as specified in TS 37.340 [32]. In this case, the source eNB may expect the target eNB to include the *UE Context Kept Indicator* IE set to "True" in the HANDOVER REQUEST ACKNOWLEDGE message, which shall use this information as specified in TS 37.340 [32].

If the *Bearer Type* IE is included in the HANDOVER REQUEST message and is set to "non IP", then the target eNB shall not perform IP header compression for the concerned E-RAB.

If the *Ethernet Type* IE is included in the HANDOVER REQUEST message and is set to "True", then the target eNB shall, if supported, take this into account to perform header compression appropriately for the concerned E-RAB.

If the *UE Sidelink Aggregate Maximum Bit Rate* IE is contained in the HANDOVER REQUEST message, the target eNB shall, if supported, use it for the concerned UE's sidelink communication in network scheduled mode for V2X services.

If the *NR UE Security Capabilities* IE is included in the HANDOVER REQUEST message, the target eNB shall, if supported, store this information in the UE context and send it to the respective peer node during subsequent handover preparations and/or EN-DC operations for the UE as defined in TS 33.401 [15].

If the *Aerial UE subscription information* IE is included in the HANDOVER REQUEST message, the target eNB shall, if supported, store this information in the UE context and use it as defined in TS 36.300 [15].

If the Subscription Based UE Differentiation Information IE is included in the HANDOVER REQUEST message, the eNB shall, if supported, store this information in the UE context for further use according to TS 23.401 [12].

If the *DAPS Request Information* IE is included for an E-RAB to be setup in the HANDOVER REQUEST message, the target eNB shall consider that the request concerns a DAPS handover for that E-RAB, as described in TS 36.300 [15]. Accordingly, the target eNB shall include the *DAPS Response Information* IE in the HANDOVER REQUEST ACKNOWLEDGE message.

If the *Maximum Number of CHO Preparations* IE is included in *Conditional Handover Information Acknowledge* IE contained in the the HANDOVER REQUEST ACKNOWLEDGE message, then the source eNB should not initiate more Handover Preparation procedures for a CHO for the same UE towards the target eNB than the number indicated in the *Maximum Number of CHO Preparations* IE.

If the *Estimated Arrival Probability* IE is contained in the *Conditional Handover Information Request* IE included in the HANDOVER REQUEST message, then the target eNB may use the information to allocate necessary resources for the incoming CHO.

If the *EPC Handover Restriction List Container* IE is included in the HANDOVER REQUEST message, the target eNB shall, if supported, store this information in the UE context and shall use it as specified in TS 36.300 [15].

If the *NR V2X Services Authorized* IE is contained in the HANDOVER REQUEST message and it contains one or more IEs set to "authorized", the eNB shall, if supported, consider that the UE is authorized for the relevant service(s).

If the NR UE Sidelink Aggregate Maximum Bit Rate IE is contained in the HANDOVER REQUEST message, the target eNB shall, if supported, use it for the concerned UE's sidelink communication in network scheduled mode for NR V2X services.

If the PC5 QoS Parameters IE is contained in the HANDOVER REQUEST message, the target eNB shall, if supported, use it for the concerned UE's NR sidelink communication as specified in TS 23.285 [41].

If the *UE Radio Capability ID* IE is contained in the HANDOVER REQUEST message, the target eNB shall, if supported, store this information in the UE context and use it as specified in TS 23.401 [12].

If the *IAB Node Indication* IE is contained in the HANDOVER REQUEST message, the target eNB shall, if supported, consider that the request is for an IAB node.

### Interaction with SN Status Transfer procedure:

If the *UE Context Kept Indicator* IE set to "True" and the *E-RABs transferred to MeNB* IE are included in the HANDOVER REQUEST ACKNOWLEDGE message, then the source eNB shall, if supported, include the uplink/downlink PDCP SN and HFN status received from the SgNB in the SN Status Transfer procedure towards the target eNB, as specified in TS 37.340 [32].

### 8.2.1.3 Unsuccessful Operation

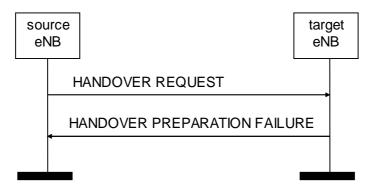


Figure 8.2.1.3-1: Handover Preparation, unsuccessful operation

If the target eNB does not admit at least one non-GBR E-RAB, or a failure occurs during the Handover Preparation, the target eNB shall send the HANDOVER PREPARATION FAILURE message to the source eNB. The message shall contain the *Cause* IE with an appropriate value.

If the target eNB receives a HANDOVER REQUEST message containing *RRC Context* IE that does not include required information as specified in TS 36.331 [9], the target eNB shall send the HANDOVER PREPARATION FAILURE message to the source eNB.

If the *Conditional Handover Information Request* IE is contained in the HANDOVER REQUEST message and the target eNB rejects the handover or a failure occurs during the Handover Preparation, the target eNB shall include the *Requested Target Cell ID* IE in the HANDOVER PREPARATION FAILURE message.

#### **Interactions with Handover Cancel procedure:**

If there is no response from the target eNB to the HANDOVER REQUEST message before timer T<sub>RELOCprep</sub> expires in the source eNB, the source eNB should cancel the Handover Preparation procedure towards the target eNB by initiating the Handover Cancel procedure with the appropriate value for the *Cause* IE. The source eNB shall ignore any HANDOVER REQUEST ACKNOWLEDGE or HANDOVER PREPARATION FAILURE message received after the initiation of the Handover Cancel procedure and remove any reference and release any resources related to the concerned X2 UE-associated signalling.

#### 8.2.1.4 Abnormal Conditions

If the target eNB receives a HANDOVER REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RABs To Be Setup List* IE) set to the same value, the target eNB shall not admit the corresponding E-RABs.

If the target eNB receives a HANDOVER REQUEST message containing a *E-RAB Level QoS Parameters* IE which contains a *QCI* IE indicating a GBR bearer (as defined in TS 23.203 [13]), and which does not contain the *GBR QoS Information* IE, the target eNB shall not admit the corresponding E-RAB.

If the supported algorithms for encryption defined in the *Encryption Algorithms* IE in the *UE Security Capabilities* IE in the *UE Context Information* IE, plus the mandated support of EEA0 in all UEs (TS 33.401 [18]), do not match any algorithms defined in the configured list of allowed encryption algorithms in the target eNB (TS 33.401 [18]), the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the supported algorithms for integrity defined in the *Integrity Protection Algorithms* IE in the *UE Security Capabilities* IE in the *UE Context Information* IE, plus the mandated support of the EIA0 algorithm in all UEs (TS 33.401 [18]), do not match any algorithms defined in the configured list of allowed integrity protection algorithms in the eNB (TS 33.401 [18]), the eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the target eNB receives a HANDOVER REQUEST message which does not contain the *Handover Restriction List* IE, and the PLMN to be used cannot be determined otherwise, the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the target eNB receives a HANDOVER REQUEST message containing the *Handover Restriction List* IE, and the serving PLMN is not supported by the target cell, the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the target eNB receives a HANDOVER REQUEST message which does not contain the *CSG Membership Status* IE, and the target cell is a hybrid cell, the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the target cell is a CSG cell and the target eNB has not received any CSG ID of the source cell, the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the target cell is a CSG cell with a different CSG from the source cell, the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the *CHO trigger* IE is set to "CHO-replace" in the HANDOVER REQUEST message, but there is no CHO prepared for the included *New eNB UE X2AP ID* IE, or the candidate cell in the *Target Cell ID* IE was not prepared using the same UE-associated signaling connection, the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

#### 8.2.2 SN Status Transfer

#### 8.2.2.1 General

The purpose of the SN Status Transfer procedure is to transfer the uplink PDCP SN and HFN receiver status and the downlink PDCP SN and HFN transmitter status either, from the source to the target eNB during an X2 handover, between the eNBs involved in dual connectivity and/or LWA, or between MeNB and en-gNB involved in EN-DC, for each respective E-RAB for which PDCP SN and HFN status preservation applies.

In case that the X2 handover is a DAPS handover, the SN Status Transfer procedure may also be used to transfer the uplink PDCP SN and HFN receiver status, or the downlink PDCP SN and HFN transmitter status for an E-RAB associated with RLC-UM and configured with DAPS as described in TS 36.300 [15].

If the SN Status Transfer procedure is applied in the course of dual connectivity, LWA, RRC connection reestablishment or EN-DC, in the subsequent specification text

- the behaviour of the eNB from which the E-RAB context is transferred, i.e., the eNB involved in dual connectivity, LWA, RRC connection re-establishment from which data forwarding, is specified by the behaviour of the "source eNB",
- the behaviour of the eNB to which the E-RAB context is transferred, i.e., the eNB involved in dual connectivity, LWA, RRC connection re-establishment to which data is forwarded, is specified by the behaviour of the "target eNB".
- in case of EN-DC, the behaviour of the node from which the E-RAB context is transferred, i.e., either the engNB or the MeNB from which data is forwarded, is specified by the behaviour of the "source eNB",
- in case of EN-DC, the behaviour of the node to which the E-RAB context is transferred, i.e., either the en-gNB or the MeNB to which data is forwarded, is specified by the behaviour of the "target eNB".

The procedure uses UE-associated signalling.

### 8.2.2.2 Successful Operation

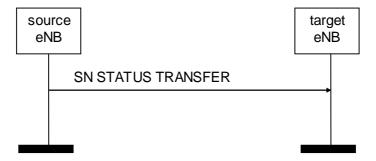


Figure 8.2.2.2-1: SN Status Transfer, successful operation



Figure 8.2.2.2: MeNB initiated SN Status Transfer for EN-DC, successful operation



Figure 8.2.2.2-3: en-gNB initiated SN Status Transfer for EN-DC, successful operation

The source eNB initiates the procedure by stop assigning PDCP SNs to downlink SDUs and stop delivering UL SDUs towards the EPC and sending the SN STATUS TRANSFER message to the target eNB at the time point when it considers the transmitter/receiver status to be frozen. The target eNB using Full Configuration for this handover as per TS 36.300 [15] or for the EN-DC operations as per TS 37.340 [32] shall ignore the information received in this message. In case of EN-DC, if the target eNB performs PDCP version change or PDCP SN length change or RLC mode change for an E-RAB as specified in TS 37.340 [32], it shall ignore the information received for that E-RAB in this message.

In case that the X2 handover is a DAPS handover, the source eNB may continue assigning PDCP SNs to downlink SDUs and delivering uplink SDUs toward the EPC when initiating this procedure for E-RABs not configured with DAPS as in TS 36.300 [15].

The *E-RABs Subject To Status Transfer List* IE included in the SN STATUS TRANSFER message contains the E-RAB ID(s) corresponding to the E-RAB(s) for which PDCP SN and HFN status preservation shall be applied. In case that the X2 handover is a DAPS handover, this IE may contain the E-RAB ID(s) corresponding to the E-RAB(s) associated with RLC-UM.

If the source eNB includes in the SN STATUS TRANSFER message, the information on the missing and received uplink SDUs in the *Receive Status Of UL PDCP SDUs* IE or *Receive Status Of UL PDCP SDUs Extended* IE or *Receive Status Of UL PDCP SDUs for PDCP SN Length 18* IE for each E-RAB for which the source eNB has accepted the request from the target eNB for uplink forwarding, then the target eNB may use it in a Status Report message sent to the UE over the radio.

For each E-RAB for which the *DL COUNT Value* IE is received in the SN STATUS TRANSFER message, the target eNB shall use it to mark with the value contained in the *PDCP-SN* IE of this IE the first downlink packet for which there is no PDCP SN yet assigned. If the *DL COUNT Value Extended* IE or *DL COUNT Value for PDCP SN Length 18* IE is included in the *E-RABs Subject To Status Transfer Item* IE, the target eNB shall, if supported, use the value contained in the *PDCP-SN Extended* IE of the *DL COUNT Value Extended* IE or *PDCP-SN Length 18* IE of the *DL COUNT Value for PDCP SN Length 18* IE instead of the value contained in the *PDCP-SN* IE of the *DL COUNT Value* IE.

For each E-RAB for which the *UL COUNT Value* IE is received in the SN STATUS TRANSFER message, the target eNB shall not deliver any uplink packet which has a PDCP SN lower than the value contained in the *PDCP-SN* IE of this IE. If the *UL COUNT Value Extended* IE or *UL COUNT Value for PDCP SN Length 18* IE is included in the *E-RABs Subject To Status Transfer Item* IE, the target eNB shall, if supported, use the value contained in the *PDCP-SN Extended* IE of the *UL COUNT Value Extended* IE or *PDCP-SN Length 18* IE of the *UL COUNT Value for PDCP SN Length 18* IE instead of the value contained in the *PDCP-SN* IE of the *UL COUNT Value* IE.

#### **EN-DC**

If the en-gNB sends the message to the MeNB, then the *SgNB UE X2AP ID* IE shall be included in the SN STATUS TRANSFER message, while the *Old eNB UE X2AP ID* IE is ignored. The *SgNB UE X2AP ID* IE is used as the old UE ID

If the MeNB sends the message to the en-gNB, then the *SgNB UE X2AP ID* IE shall be included in the SN STATUS TRANSFER message, while the *New eNB UE X2AP ID* IE is ignored. The *SgNB UE X2AP ID* IE is used as the new UE ID

### 8.2.2.3 Abnormal Conditions

If the target eNB receives this message for a UE for which no prepared handover exists at the target eNB, the target eNB shall ignore the message.

### 8.2.3 UE Context Release

#### 8.2.3.1 General

For handover, the UE Context Release procedure is initiated by the target eNB to indicate to the source eNB that radio and control plane resources for the associated UE context are allowed to be released.

For dual connectivity, UE Context Release procedure is initiated by the MeNB to finally release the UE context at the SeNB. For dual connectivity specific mobility scenarios specified in TS 36.300 [15] only resources related to the UE-associated signalling connection between the MeNB and the SeNB are released. For EN-DC, the UE Context Release procedure is initiated by the MeNB to finally release the UE context at the en-gNB. For EN-DC specific mobility scenarios specified in TS 37.340 [32] where SCG radio resources in the en-gNB are kept, only resources related to the UE-associated signalling connection between the MeNB and the en-gNB are released.

The procedure uses UE-associated signalling.

### 8.2.3.2 Successful Operation



Figure 8.2.3.2-1: UE Context Release, successful operation for handover



Figure 8.2.3.2-2: UE Context Release, successful operation for dual connectivity



Figure 8.2.3.2-3: UE Context Release, successful operation for EN-DC

#### Handover

The UE Context Release procedure is initiated by the target eNB. By sending the UE CONTEXT RELEASE message the target eNB informs the source eNB of Handover success and triggers the release of resources.

Upon reception of the UE CONTEXT RELEASE message, the source eNB may release radio and control plane related resources associated to the UE context. For E-RABs for which data forwarding has been performed, the source eNB should continue forwarding of U-plane data as long as packets are received at the source eNB from the EPC or the source eNB buffer has not been emptied (an implementation dependent mechanism decides that data forwarding can be stopped). When the eNB supporting L-GW function for SIPTO@LN operation releases radio and control plane related resources associated to the UE context, it shall also request using intra-node signalling the collocated L-GW to release the SIPTO@LN PDN connection as defined in TS 23.401 [12].

#### **Dual Connectivity**

The UE Context Release procedure is initiated by the MeNB. By sending the UE CONTEXT RELEASE message the MeNB informs the SeNB that the UE Context can be removed.

Upon reception of the UE CONTEXT RELEASE message, the SeNB may release radio and control plane related resources associated to the UE context. For E-RABs for which data forwarding has been performed, the SeNB should continue forwarding of U-plane data as long as packets are received at the SeNB from the EPC or the SeNB buffer has not been emptied (an implementation dependent mechanism decides that data forwarding can be stopped). The SeNB supporting L-GW function for LIPA operation shall also request using intra-node signalling the collocated L-GW to release the LIPA PDN connection as defined in TS 23.401 [12]. If the SIPTO Bearer Deactivation Indication IE is received in the UE CONTEXT RELEASE message, the SeNB supporting L-GW function for SIPTO@LN operation shall also request using intra-node signalling the collocated L-GW to release the SIPTO@LN PDN connection as defined in TS 23.401 [12].

#### **EN-DC**

The UE Context Release procedure is initiated by the MeNB. By sending the UE CONTEXT RELEASE message the MeNB informs the en-gNB that the UE Context can be removed.

Upon reception of the UE CONTEXT RELEASE message, the en-gNB may release radio and control plane related resources associated to the UE context. For E-RABs for which data forwarding has been performed, the en-gNB should continue forwarding of U-plane data as long as packets are received at the en-gNB from the EPC or the en-gNB buffer has not been emptied (an implementation dependent mechanism decides that data forwarding can be stopped).

In the course of signalling for EN-DC, the *SgNB UE X2AP ID* IE shall be included in the UE CONTEXT RELEASE message, while the *Old eNB UE X2AP ID* IE is ignored. The *SgNB UE X2AP ID* IE is used as the new UE ID.

#### Interaction with the MeNB initiated SeNB Release procedure:

The SeNB may receive the SENB RELEASE REQUEST message including the *UE Context Kept Indicator* IE set to "True", upon which the SeNB shall, if supported, only release the resources related to the UE-associated signalling connection between the MeNB and the SeNB, as specified in TS 36.300 [15].

### Interaction with the MeNB initiated SgNB Release procedure:

The en-gNB may receive the SGNB RELEASE REQUEST message including the *UE Context Kept Indicator* IE set to "True", upon which the en-gNB shall, if supported, only release the resources related to the UE-associated signalling connection between the MeNB and the en-gNB, as specified in TS 37.340 [32].

### 8.2.3.3 Unsuccessful Operation

Not applicable.

#### 8.2.3.4 Abnormal Conditions

If the UE Context Release procedure is not initiated towards the source eNB from any prepared eNB before the expiry of the timer  $TX2_{RELOCoverall}$ , the source eNB shall request the MME to release the UE context.

If the UE returns to source eNB before the reception of the UE CONTEXT RELEASE message or the expiry of the timer  $TX2_{RELOCoverall}$ , the source eNB shall stop the  $TX2_{RELOCoverall}$  and continue to serve the UE.

### 8.2.4 Handover Cancel

#### 8.2.4.1 General

The Handover Cancel procedure is used to enable a source eNB to cancel an ongoing handover preparation or an already prepared handover.

The procedure uses UE-associated signalling.

### 8.2.4.2 Successful Operation



Figure 8.2.4.2-1: Handover Cancel, successful operation

The source eNB initiates the procedure by sending the HANDOVER CANCEL message to the target eNB. The source eNB shall indicate the reason for cancelling the handover by means of an appropriate cause value.

At the reception of the HANDOVER CANCEL message, the target eNB shall remove any reference to, and release any resources previously reserved to the concerned UE context.

The New eNB UE X2AP ID IE and, if available, the New eNB UE X2AP ID Extension IE shall be included if it has been obtained from the target eNB.

If the *Candidate Cells To Be Cancelled List* IE is included in the HANDOVER CANCEL message, the target eNB shall consider that the source eNB is cancelling only the handover associated to the candidate cells identified by the included ECGI and associated to the UE-associated signaling connection identified by the *Old eNB UE X2AP ID* IE (or the *Old eNB UE X2AP ID Extension* IE if included) and, if included, also by the *New eNB UE X2AP ID* IE (or the *New eNB UE X2AP ID Extension* IE if included).

### 8.2.4.3 Unsuccessful Operation

Not applicable.

### 8.2.4.4 Abnormal Conditions

Should the HANDOVER CANCEL message refer to a context that does not exist, the target eNB shall ignore the message.

If the *Candidate Cells To Be Cancelled List* IE is included in the HANDOVER CANCEL message and the handover is not associated to a conditional handover, the target eNB shall ignore the *Candidate Cells To Be Cancelled List* IE.

If one or more candidate cells in the *Candidate Cells To Be Cancelled List* IE included in the HANDOVER CANCEL message were not prepared using the same UE-associated signaling connection, the target eNB shall ignore those non-associated candidate cells.

### 8.2.5 Handover Success

#### 8.2.5.1 General

The Handover Success procedure is used during a conditional handover or a DAPS handover to enable a target eNB to inform the source eNB that the UE has successfully accessed the target eNB.

The procedure uses UE-associated signalling.

## 8.2.5.2 Successful Operation



Figure 8.2.5.2-1: Handover Success, successful operation

The target eNB initiates the procedure by sending the HANDOVER SUCCESS message to the source eNB.

If late data forwarding was configured for this UE, the source eNB shall start data forwarding using the tunnel information related to the global target cell ID provided in the HANDOVER SUCCESS message.

When the source eNB receives the HANDOVER SUCCESS message, it shall consider all other CHO preparations accepted for this UE under the same UE-associated signalling connection in the target eNB as cancelled.

#### Interactions with other procedures

If a CONDITIONAL HANDOVER CANCEL message was received for this UE prior the reception of the HANDOVER SUCCESS message, the source eNB node shall consider that the UE successfully executed the handover. The source eNB may initiate Handover Cancel procedure towards the other signaling connections or other candidate target eNBs for this UE, if any.

### 8.2.5.3 Unsuccessful Operation

Not applicable.

### 8.2.5.4 Abnormal Conditions

If the HANDOVER SUCCESS message refers to a context that does not exist, the source eNB shall ignore the message.

## 8.2.6 Conditional Handover Cancel

### 8.2.6.1 General

The Conditional Handover Cancel procedure is used to enable a target eNB to cancel an already prepared conditional handover.

The procedure uses UE-associated signalling.

# 8.2.6.2 Successful Operation



Figure 8.2.6.2-1: Conditional Handover Cancel, successful operation

The target eNB initiates the procedure by sending the CONDITIONAL HANDOVER CANCEL message to the source eNB. The target eNB shall indicate the reason for cancelling the conditional handover by means of an appropriate cause value.

The New eNB UE X2AP ID IE and, if available, the New eNB UE X2AP ID Extension IE shall be included.

At the reception of the CONDITIONAL HANDOVER CANCEL message, the source eNB shall consider that the target eNB is about to remove any reference to, and release any resources previously reserved for candidate cells associated to the UE-associated signalling identified by the *Old eNB UE X2AP ID* IE (or the *Old eNB UE X2AP ID Extension* IE if included) and the *New eNB UE X2AP ID* IE (or the *New eNB UE X2AP ID Extension* IE if included).

If the *Candidate Cells To Be Cancelled List* IE is also included, the source eNB shall consider that only the resources reserved for the cells identified by the included ECGI are about to be released.

# 8.2.6.3 Unsuccessful Operation

Not applicable.

#### 8.2.6.4 Abnormal Conditions

Should the CONDITIONAL HANDOVER CANCEL message refer to a context that does not exist, the source eNB shall ignore the message.

If one or more candidate cells in the *Candidate Cells To Be Cancelled List* IE included in the CONDITIONAL HANDOVER CANCEL message were not prepared using the same UE-associated signaling connection, the source eNB shall ignore those non-associated candidate cells.

# 8.2.7 Early Status Transfer

### 8.2.7.1 General

The purpose of the Early Status Transfer procedure is to transfer the COUNT of the first downlink SDU that the source eNB forwards to the target eNB or the COUNT for discarding already forwarded downlink SDUs for respective E-RAB during DAPS Handover or Conditional Handover.

The procedure uses UE-associated signalling.

# 8.2.7.2 Successful Operation



Figure 8.2.7.2-1: Early Status Transfer during DAPS Handover or Conditional Handover, successful operation



Figure 8.2.7.2-2: Early Status Transfer during Conditional Handover in dual connectivity or EN-DC operation, successful operation

#### Between source eNB and target eNB

The *E-RABs Subject To Early Status Transfe List* IE included in the EARLY STATUS TRANSFER message contains the E-RAB ID(s) corresponding to the E-RAB(s) subject to be simultaneously served by the source and the target eNBs during DAPS Handover or the E-RAB(s) transferred during Conditional Handover.

For each E-RAB for which the *FIRST DL COUNT Value* IE is received in the EARLY STATUS TRANSFER message, the target eNB shall use it as the COUNT of the first downlink SDU that the source eNB forwards to the target eNB. If the *FIRST DL COUNT Value Extended* IE or *FIRST DL COUNT Value for PDCP SN Length 18* IE is included in the *E-RABs Subject To Early Status Transfer Item* IE, the target eNB shall, if supported, use this value instead of the value contained in the *FIRST DL COUNT Value* IE.

For each E-RAB for which the *DISCARD DL COUNT Value* IE is received in the EARLY STATUS TRANSFER message, the target eNB does not transmit forwarded downlink SDUs to the UE whose COUNT is less than the provided and discards them if transmission has not been attempted. If the *DISCARD DL COUNT Value Extended* IE or *DISCARD DL COUNT Value for PDCP SN Length 18* IE is included in the *E-RABs Subject To Early Status Transfer Item* IE, the target eNB shall, if supported, use this value instead of the value contained in the *DISCARD DL COUNT Value* IE.

### Between source SN (respectively, source en-gNB) and source MN (respectively, source eNB)

The *E-RABs Subject To Early Status Transfer List* IE included in the EARLY STATUS TRANSFER message contains the E-RAB ID(s) corresponding to the E-RAB(s) transferred during Conditional Handover.

For each E-RABs in the *E-RABs Subject To Early Status Transfer List* IE, the source eNB shall forward to the target, the value of the received *FIRST DL COUNT Value* IE or *DISCARD DL COUNT Value* IE. If the *FIRST DL COUNT Value Extended* IE or *FIRST DL COUNT Value for PDCP SN Length 18* IE is included, if supported, this value is forwarded instead of the value contained in the *FIRST DL COUNT Value* IE. If the *DISCARD DL COUNT Value Extended* IE or *DISCARD DL COUNT Value for PDCP SN Length 18* IE is included, if supported, this value is forwarded instead of the value contained in the *DISCARD DL COUNT Value* IE.

### 8.2.7.3 Abnormal Conditions

If the target eNB receives this message for a UE for which no prepared DAPS Handover or Conditional Handover exists at the target eNB, the target eNB shall ignore the message.

# 8.3 Global Procedures

### 8.3.1 Load Indication

#### 8.3.1.1 General

The purpose of the Load Indication procedure is to transfer load and interference co-ordination information between eNBs controlling intra-frequency neighboring cells, and additionally between eNBs controlling inter-frequency neighboring cells for TDD.

The procedure uses non UE-associated signalling.

# 8.3.1.2 Successful Operation

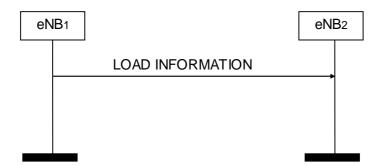


Figure 8.3.1.2-1: Load Indication, successful operation

An eNB<sub>1</sub> initiates the procedure by sending LOAD INFORMATION message to a peer eNB<sub>2</sub>.

If the *UL Interference Overload Indication* IE is received in the LOAD INFORMATION message, it indicates the interference level experienced by the indicated cell on all resource blocks, per PRB. If the *Extended UL Interference Overload Info* IE is received in the LOAD INFORMATION message, the *UL Interference Overload Indication* IE indicates the interference level experienced by the indicated cell ignoring the UL subframe(s) represented as value "1" in the *Associated Subframes* IE. The receiving eNB may take such information into account when setting its scheduling policy and shall consider the received *UL Interference Overload Indication* IE value valid until reception of a new LOAD INFORMATION message carrying an update of the same IE.

If the *UL High Interference Indication* IE is received in the LOAD INFORMATION message, it indicates, per PRB, the occurrence of high interference sensitivity, as seen from the sending eNB. The receiving eNB should try to avoid scheduling cell edge UEs in its cells for the concerned PRBs. The *Target Cell ID* IE received within the *UL High Interference Information* IE group in the LOAD INFORMATION message indicates the cell for which the corresponding UL High Interference Indication is meant. The receiving eNB shall consider the value of the *UL High Interference Information* IE group valid until reception of a new LOAD INFORMATION message carrying an update.

If the *Relative Narrowband Tx Power (RNTP)* IE is received in the LOAD INFORMATION message, it indicates, per PRB or per subframe per PRB (Enhanced RNTP), whether downlink transmission power is lower than the value indicated by the *RNTP Threshold* IE. If the *Enhanced RNTP* IE is included in the *Relative Narrowband Tx Power (RNTP)* IE, it additionally indicates whether the downlink transmission power is lower than the value specified by the *RNTP High Power Threshold* IE. The receiving eNB may take such information into account when setting its scheduling policy and shall consider the received *Relative Narrowband Tx Power (RNTP)* IE value valid until reception of a new LOAD INFORMATION message carrying an update. If the *Enhanced RNTP* IE included in the *Relative Narrowband Tx Power (RNTP)* IE is present, the receiving eNB shall consider the received *Enhanced RNTP* IE value valid starting from the subframe indicated by the *Start SFN* IE and *Start Subframe Number* IE, if present.

If the *ABS Information* IE is included in the LOAD INFORMATION message, the *ABS Pattern Info* IE indicates the subframes designated as almost blank subframes by the sending eNB for the purpose of interference coordination. The receiving eNB may take such information into consideration when scheduling UEs.

The receiving eNB may use the *Measurement Subset* IE received in the LOAD INFORMATION message, for the configuration of specific measurements towards the UE.

The receiving eNB shall consider the received information as immediately applicable. The receiving eNB shall consider the value of the *ABS Information* IE valid until reception of a new LOAD INFORMATION message carrying an update.

If an ABS indicated in the ABS pattern info IE coincides with a MBSFN subframe, the receiving eNB shall consider that the subframe is designated as almost blank subframe by the sending eNB.

If the *Invoke Indication* IE is included in the LOAD INFORMATION message, it indicates which type of information the sending eNB would like the receiving eNB to send back. The receiving eNB may take such request into account.

If the *Invoke Indication* IE is set to "ABS Information", it indicates the sending eNB would like the receiving eNB to initiate the Load Indication procedure, with the LOAD INFORMATION message containing the *ABS Information* IE indicating non-zero ABS patterns in the relevant cells. If the *Invoke Indication* IE is set to "Start NAICS Information", it indicates the sending eNB would like the receiving eNB to initiate the Load Indication procedure with the LOAD

INFORMATION message containing the *Dynamic DL transmission information* IE. The first time the *Dynamic DL transmission information* IE is signalled after receiving the *Invoke Indication* IE set to "Start NAICS Information", all the NAICS parameters in the *NAICS Information* IE shall be included. If the *Invoke Indication* IE is set to "Stop NAICS Information", it indicates the sending eNB does not need NAICS information and therefore the receiving eNB should stop signalling NAICS parameters for the concerned cell.

If the *NAICS Information* IE is set to "NAICS Active", the receiving eNB may use it for the configuration of DL interference mitigation assistance information towards the UE. Information included in the *NAICS Information* IE shall replace corresponding NAICS information existing at the receiver. If the *NAICS Information* IE is set to "NAICS Inactive", the receiving eNB shall consider the existing NAICS information as invalid.

If the *Intended UL-DL Configuration* IE is included in the LOAD INFORMATION message, it indicates the UL-DL configuration intended to be used by the indicated cell. The receiving eNB may take such information into account when setting its scheduling policy and shall consider the received *Intended UL-DL Configuration* IE value valid until reception of a new LOAD INFORMATION message carrying an update of the same IE.

If the Extended UL Interference Overload Info IE is received in the LOAD INFORMATION message, the Extended UL Interference Overload Indication IE indicates the interference level experienced by the indicated cell on all resource blocks, per PRB, in the UL subframe(s) which is represented as value "1" in the Associated Subframes IE. The receiving eNB may take such information into account when setting its scheduling policy and shall consider the received Extended UL Interference Overload Info IE value valid until reception of a new LOAD INFORMATION message carrying an update of the same IE.

If the *CoMP Information* IE is received in the LOAD INFORMATION message, the receiving eNB may take the IE into account for RRM. The receiving eNB shall consider the *CoMP Information* IE valid starting in the subframe indicated by the *Start SFN* IE and *Start Subframe Number* IE, if present. If the *Start SFN* IE and *Start Subframe Number* IE are not present, then the receiving eNB shall consider the *CoMP Information* IE as immediately valid. The receiving eNB shall consider the *CoMP Information* IE valid until an update of the same IE, received in a new LOAD INFORMATION message, is considered valid.

# 8.3.1.3 Unsuccessful Operation

Not applicable.

### 8.3.1.4 Abnormal Conditions

Void.

### 8.3.2 Error Indication

### 8.3.2.1 General

The Error Indication procedure is initiated by an eNB to report detected errors in one incoming message, provided they cannot be reported by an appropriate failure message.

If the error situation arises due to reception of a message utilising UE associated signalling, then the Error Indication procedure uses UE-associated signalling. Otherwise the procedure uses non UE-associated signalling.

# 8.3.2.2 Successful Operation

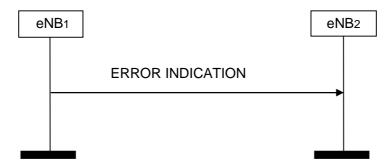


Figure 8.3.2.2-1: Error Indication, successful operation.

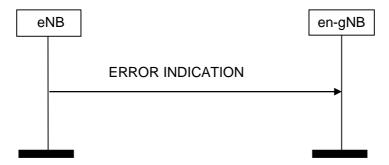


Figure 8.3.2.2-2: eNB initiated Error Indication for EN-DC, successful operation.

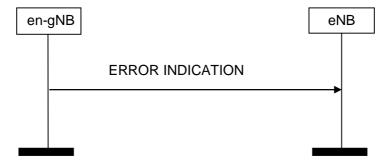


Figure 8.3.2.2-3: en-gNB initiated Error Indication for EN-DC, successful operation.

When the conditions defined in clause 10 are fulfilled, the Error Indication procedure is initiated by an ERROR INDICATION message sent from the node detecting the error situation.

The ERROR INDICATION message shall contain at least either the Cause IE or the Criticality Diagnostics IE.

In case the Error Indication procedure is triggered by UE associated signalling, in the course of handover signalling and signalling for dual connectivity, the *Old eNB UE X2AP ID* IE and the *New eNB UE X2AP ID* IE shall be included in the ERROR INDICATION message. In case the Error Indication procedure is triggered by UE associated signalling, in the course of signalling for EN-DC, the *Old en-gNB UE X2AP ID* IE and the *New eNB UE X2AP ID* IE shall be included in the ERROR INDICATION message. If any of *Old eNB UE X2AP ID* IE, *Old en-gNB UE X2AP ID* IE and *New eNB UE X2AP ID* IE is not correct, the cause shall be set to appropriate value e.g. "unknown Old eNB UE X2AP ID", "unknown Old en-gNB UE X2AP ID", "unknown New eNB UE X2AP ID" or "unknown pair of UE X2AP ID".

If the UE-associated signalling connection is identified by extended eNB UE X2AP IDs the specification text above is applicable for the UE X2AP ID Extension accordingly.

In case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], if the Error Indication procedure is triggered by non UE-associated signalling, the ERROR INDICATION message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

# 8.3.2.3 Unsuccessful Operation

Not applicable.

### 8.3.2.4 Abnormal Conditions

Not applicable.

# 8.3.3 X2 Setup

#### 8.3.3.1 General

The purpose of the X2 Setup procedure is to exchange application level configuration data needed for two eNBs to interoperate correctly over the X2 interface. This procedure erases any existing application level configuration data in the two nodes and replaces it by the one received. This procedure also resets the X2 interface like a Reset procedure would do.

NOTE: Exchange of application level configuration data also applies between two eNBs in case the SN (i.e. the en-gNB) does not broadcast system information other than for radio frame timing and SFN, as specified in the TS 37.340 [32]. How to use this information when this option is used is not explicitly specified.

The procedure uses non UE-associated signalling.

## 8.3.3.2 Successful Operation

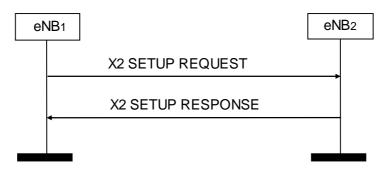


Figure 8.3.3.2-1: X2 Setup, successful operation

An eNB<sub>1</sub> initiates the procedure by sending the X2 SETUP REQUEST message to a candidate eNB<sub>2</sub>. The candidate eNB<sub>2</sub> replies with the X2 SETUP RESPONSE message. The initiating eNB<sub>1</sub> shall transfer the complete list of its served cells and, if available, a list of supported GU Group Ids to the candidate eNB<sub>2</sub>. The candidate eNB<sub>2</sub> shall reply with the complete list of its served cells and shall include, if available, a list of supported GU Group Ids in the reply.

If a cell is switched off for energy savings reasons, it should be activated before initiating or responding to the X2 Setup procedure and shall still be included in the list of served cells.

The initiating eNB<sub>1</sub> may include the *Neighbour Information* IE in the X2 SETUP REQUEST message. The candidate eNB<sub>2</sub> may also include the *Neighbour Information* IE in the X2 SETUP RESPONSE message. The *Neighbour Information* IE shall only include E-UTRAN cells that are direct neighbours of cells in the reporting eNB. A direct neighbour of one cell of a given eNB may be any cell belonging to an eNB that is a neighbour of that given eNB cell e.g. even if the cell has not been reported by a UE. The initiating eNB<sub>1</sub> may include the *TAC* IE with the *Neighbour Information* IE in the X2 SETUP REQUEST message. The candidate eNB<sub>2</sub> may also include the *TAC* IE with the *Neighbour Information* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it according to TS 36.300 [15].

The initiating eNB<sub>1</sub> may include the *NR Neighbour Information* IE in the X2 SETUP REQUEST message. The candidate eNB<sub>2</sub> may also include the *NR Neighbour Information* IE in the X2 SETUP RESPONSE message. The *NR Neighbour Information* IE shall only include NR cells capable of performing EN-DC with the corresponding served E-UTRA cell. The eNB receiving the *NR Neighbour Information* IE may use it according to TS 36.300 [15].

The initiating eNB<sub>1</sub> may include the *Number of Antenna Ports* IE in the X2 SETUP REQUEST message. The candidate eNB<sub>2</sub> may also include the *Number of Antenna Ports* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it according to TS 36.331 [9].

The initiating eNB<sub>1</sub> may include the *PRACH Configuration* IE in the X2 SETUP REQUEST message. The candidate eNB<sub>2</sub> may also include the *PRACH Configuration* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use this information for RACH optimisation.

The initiating eNB<sub>1</sub> may include the *MBSFN Subframe Info* IE in the X2 SETUP REQUEST message. The candidate eNB<sub>2</sub> may also include the *MBSFN Subframe Info* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it according to TS 36.331 [9].

For each CSG cell or hybrid cell served by the initiating eNB<sub>1</sub> the X2 SETUP REQUEST message shall contain the *CSG ID* IE. For each CSG cell or hybrid cell served by the candidate eNB<sub>2</sub> the X2 SETUP RESPONSE message shall contain the *CSG ID* IE. The eNB receiving the IE shall take this information into account when further deciding whether X2 handover between the source cell and the target cell may be performed.

The initiating eNB<sub>1</sub> may include the *MBMS Service Area Identity List* IE in the X2 SETUP REQUEST message. The candidate eNB<sub>2</sub> may also include the *MBMS Service Area Identity List* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it according to TS 36.300 [15].

For each cell served by the initiating eNB<sub>1</sub> the X2 SETUP REQUEST message may contain the *MultibandInfoList* IE and may also contain the *FreqBandIndicatorPriority* IE. For each cell served by the candidate eNB<sub>2</sub> the X2 SETUP RESPONSE message may contain the *MultibandInfoList* IE and may also contain the *FreqBandIndicatorPriority* IE. The eNB receiving the *MultibandInfoList* IE shall, if supported, take this information into account when further deciding whether subsequent mobility actions between the source cell and the target cell may be performed, and use this IE and the *FreqBandIndicatorPriority* IE, if received, as specified in TS 36.331 [9].

The initiating eNB<sub>1</sub> may include the *LHN ID* IE in the X2 SETUP REQUEST message. The candidate eNB<sub>2</sub> may also include *LHN ID* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it according to TS 36.300 [15].

The initiating eNB<sub>1</sub> may include the *BandwidthReducedSI* IE in the X2 SETUP REQUEST message. The candidate eNB<sub>2</sub> may also include *BandwidthReducedSI* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it to determine a suitable target in case of subsequent outgoing mobility involving BL UEs or UEs requiring CE.

The initiating  $eNB_1$  may include the NPRACH Configuration IE in the X2 SETUP REQUEST message. The candidate  $eNB_2$  may also include the NPRACH Configuration IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use this information for RACH optimization.

### **Interaction with the EN-DC Configuration Update procedure:**

The receiving eNB may forward the *Intended TDD DL-UL Configuration NR* IE received in the *NR Neighbour Information* IE in the X2 SETUP REQUEST message or in the X2 SETUP RESPONSE message to neighbouring engNBs by triggering the EN-DC Configuration Update procedure.

### Interaction with the eNB Configuration Update procedure:

The receiving eNB may forward the *Intended TDD DL-UL Configuration NR* IE received in the *NR Neighbour Information* IE in the X2 SETUP REQUEST message or in the X2 SETUP RESPONSE message to neighbouring eNBs by triggering the eNB Configuration Update procedure.

# 8.3.3.3 Unsuccessful Operation

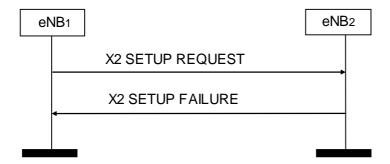


Figure 8.3.3.3-1: X2 Setup, unsuccessful operation

If the candidate  $eNB_2$  cannot accept the setup it shall respond with an X2 SETUP FAILURE message with appropriate cause value.

If the X2 SETUP FAILURE message includes the *Time To Wait* IE the initiating eNB<sub>1</sub> shall wait at least for the indicated time before reinitiating the X2 Setup procedure towards the same eNB<sub>2</sub>.

### 8.3.3.4 Abnormal Conditions

If the first message received for a specific TNL association is not an X2 SETUP REQUEST, X2 SETUP RESPONSE, or X2 SETUP FAILURE message then this shall be treated as a logical error.

If the initiating eNB<sub>1</sub> does not receive either X2 SETUP RESPONSE message or X2 SETUP FAILURE message, the eNB<sub>1</sub> may reinitiate the X2 Setup procedure towards the same eNB, provided that the content of the new X2 SETUP REQUEST message is identical to the content of the previously unacknowledged X2 SETUP REQUEST message.

If the initiating eNB<sub>1</sub> receives an X2 SETUP REQUEST message from the peer entity on the same X2 interface:

- In case the eNB<sub>1</sub> answers with an X2 SETUP RESPONSE message and receives a subsequent X2 SETUP FAILURE message, the eNB<sub>1</sub> shall consider the X2 interface as non operational and the procedure as unsuccessfully terminated according to sub clause 8.3.3.3.
- In case the eNB<sub>1</sub> answers with an X2 SETUP FAILURE message and receives a subsequent X2 SETUP RESPONSE message, the eNB<sub>1</sub> shall ignore the X2 SETUP RESPONSE message and consider the X2 interface as non operational.

### 8.3.4 Reset

### 8.3.4.1 General

The purpose of the Reset procedure is to align the resources in  $eNB_1$  and  $eNB_2$ , or the resources in eNB and en-gNB involved in the EN-DC in the event of an abnormal failure. The procedure resets the X2 interface. This procedure doesn't affect the application level configuration data exchanged during, e.g., the X2 Setup procedure, EN-DC X2 Setup procedure.

The procedure uses non UE-associated signalling.

# 8.3.4.2 Successful Operation

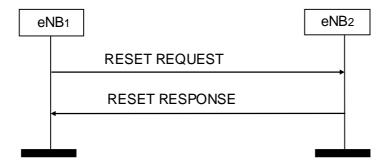


Figure 8.3.4.2-1: Reset, successful operation

The procedure is initiated with a RESET REQUEST message sent from the  $eNB_1$  to the  $eNB_2$ . Upon receipt of this message,  $eNB_2$  shall abort any other ongoing procedures over X2 between  $eNB_1$  and  $eNB_2$ . The  $eNB_2$  shall delete all the context information related to the  $eNB_1$ , except the application level configuration data exchanged during the X2 Setup or eNB Configuration Update procedures, and release the corresponding resources. After completion of release of the resources, the  $eNB_2$  shall respond with a RESET RESPONSE message.

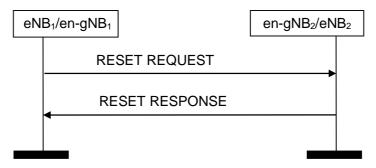


Figure 8.3.4.2-2: Reset, successful operation for EN-DC.

The procedure is initiated with a RESET REQUEST message sent from the  $eNB_1/en-gNB_1$  to  $en-gNB_2/eNB_2$ . Upon receipt of this message,  $eNB_2/en-gNB_2$  shall abort any other ongoing procedures over X2 between both nodes.  $eNB_2/en-gNB_2$  shall delete all the context information related to  $eNB_1/en-gNB_1$ , except the application level configuration data exchanged during the EN-DC X2 Setup or EN-DC Configuration Update procedures, and release the corresponding resources. After completion of release of the resources,  $eNB_2/en-gNB_2$  shall respond with a RESET RESPONSE message.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the RESET REQUEST and the RESET RESPONSE messages shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

# 8.3.4.3 Unsuccessful Operation

Void.

## 8.3.4.4 Abnormal Conditions

If the RESET REQUEST message is received, any other ongoing procedure (except another Reset procedure) on the same X2 interface shall be aborted.

If Reset procedure is ongoing and the responding node receives the RESET REQUEST message from the peer entity on the same X2 interface, it shall respond with the RESET RESPONSE message as described in 8.3.4.2.

If the initiating node does not receive RESET RESPONSE message, the initiating node may reinitiate the Reset procedure towards the same eNB/en-gNB, provided that the content of the new RESET REQUEST message is identical to the content of the previously unacknowledged RESET REQUEST message.

# 8.3.5 eNB Configuration Update

### 8.3.5.1 General

The purpose of the eNB Configuration Update procedure is to update application level configuration data needed for two eNBs to interoperate correctly over the X2 interface.

NOTE: Update of application level configuration data also applies between two eNBs in case the SN (i.e. the engNB) does not broadcast system information other than for radio frame timing and SFN, as specified in the TS 37.340 [32]. How to use this information when this option is used is not explicitly specified.

The procedure uses non UE-associated signalling.

# 8.3.5.2 Successful Operation

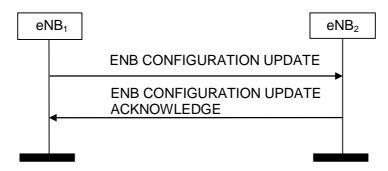


Figure 8.3.5.2-1: eNB Configuration Update, successful operation

An  $eNB_1$  initiates the procedure by sending an ENB CONFIGURATION UPDATE message to a peer  $eNB_2$ . Such message shall include an appropriate set of up-to-date configuration data, including, but not limited to, the complete lists of added, modified and deleted served cells, that  $eNB_1$  has just taken into operational use.

Upon reception of an ENB CONFIGURATION UPDATE message,  $eNB_2$  shall update the information for  $eNB_1$  as follows:

#### **Update of Served Cell Information:**

- If Served Cells To Add IE is contained in the ENB CONFIGURATION UPDATE message, eNB<sub>2</sub> shall add cell information according to the information in the Served Cell Information IE.
- If *Number of Antenna Ports* IE is contained in the *Served Cell Information* IE in the ENB CONFIGURATION UPDATE message, eNB<sub>2</sub> may use this information according to TS 36.331 [9].
- If the *PRACH Configuration* IE is contained in the *Served Cell Information* IE in the ENB CONFIGURATION UPDATE message, the eNB receiving the IE may use this information for RACH optimisation.
- If Served Cells To Modify IE is contained in the ENB CONFIGURATION UPDATE message, eNB<sub>2</sub> shall modify information of cell indicated by Old ECGI IE according to the information in the Served Cell Information IE.
- If MBSFN Subframe Info IE is contained in the Served Cell Information IE in the ENB CONFIGURATION UPDATE message, eNB<sub>2</sub> may use this information according to TS 36.331 [9]. If a MBSFN subframe indicated in the MBSFN Subframe Info IE coincides with an ABS, the eNB<sub>2</sub> shall consider that the subframe is designated as ABS by the sending eNB.
- If *BandwidthReducedSI* IE is contained in the *Served Cell Information* IE in the ENB CONFIGURATION UPDATE message, eNB<sub>2</sub> may use this information to determine a suitable target in case of subsequent outgoing mobility involving BL UEs or UEs requiring CE.

When either served cell information or neighbour information of an existing served cell in  $eNB_1$  need to be updated, the whole list of neighbouring cells, if any, shall be contained in the *Neighbour Information* IE.

If the *Deactivation Indication* IE is contained in *Served Cells To Modify* IE, it indicates that the concerned cell was switched off to lower energy consumption.

The  $eNB_2$  shall overwrite the served cell information and the whole list of neighbour cell information for the affected served cell.

- If *Served Cells To Delete* IE is contained in the ENB CONFIGURATION UPDATE message, eNB<sub>2</sub> shall delete information of cell indicated by *Old ECGI* IE.
- If *MBMS Service Area Identity List* IE is contained in the *Served Cell Information* IE in the ENB CONFIGURATION UPDATE message, the eNB receiving the IE may use it according to TS 36.300 [15].

When the MBMS Service Area Identities of a cell in eNB<sub>1</sub> need to be updated, the whole list of MBMS Service Area Identities of the affected cell shall be contained in the *Served Cell Information* IE.

- If the *NPRACH Configuration* IE is contained in the *Served Cell Information* IE in the ENB CONFIGURATION UPDATE message, the eNB receiving the IE may use this information for RACH optimization.

#### **Update of GU Group Id List:**

- If GU Group Id To Add List IE is contained in the ENB CONFIGURATION UPDATE message, eNB<sub>2</sub> shall add the GU Group Id to its GU Group Id List.
- If *GU Group Id To Delete List* IE is contained in the ENB CONFIGURATION UPDATE message, eNB<sub>2</sub> shall remove the GU Group Id from its GU Group Id List.

If *Neighbour Information* IE is contained in the ENB CONFIGURATION UPDATE message, eNB<sub>2</sub> may use this information to update its neighbour cell relations, or use it for other functions, like PCI selection. The *Neighbour Information* IE shall only include E-UTRAN cells that are direct neighbours of cells in the reporting eNB. A direct neighbour of one cell of a given eNB may be any cell belonging to an eNB that is a neighbour of that given eNB cell e.g. even if that cell has not been reported by a UE. The *Neighbour Information* IE may contain the *TAC* IE of the included cells. The receiving eNB may use *TAC* IE, as described in TS 36.300 [15].

If the *NR Neighbour Information* IE is contained in the ENB CONFIGURATION UPDATE message, eNB<sub>2</sub> may use this information to update its neighbour cell relations or use it for other functions. The *NR Neighbour Information* IE shall only include NR cells capable of performing EN-DC with the corresponding served E-UTRA cell. The eNB receiving the *NR Neighbour Information* IE may use it according to TS 36.300 [15].

After successful update of requested information, eNB<sub>2</sub> shall reply with the ENB CONFIGURATION UPDATE ACKNOWLEDGE message to inform the initiating eNB<sub>1</sub> that the requested update of application data was performed successfully. In case the peer eNB<sub>2</sub> receives an ENB CONFIGURATION UPDATE without any IE except for *Message Type* IE it shall reply with ENB CONFIGURATION UPDATE ACKNOWLEDGE message without performing any updates to the existing configuration.

The eNB<sub>1</sub> may initiate a further eNB Configuration Update procedure only after a previous eNB Configuration Update procedure has been completed.

For each cell served by the initiating eNB<sub>1</sub> the ENB CONFIGURATION UPDATE message may contain the *MultibandInfoList* IE and may also contain the *FreqBandIndicatorPriority* IE. The eNB receiving the *MultibandInfoList* IE shall, if supported, take this information into account when further deciding whether subsequent mobility actions between the source cell and the target cell may be performed, and use this IE and the *FreqBandIndicatorPriority* IE, if received, as specified in TS 36.331 [9].

If the Coverage Modification List IE is present, eNB<sub>2</sub> may use the information in the Cell Coverage State IE to identify the cell deployment configuration enabled by eNB<sub>1</sub> and for configuring the mobility towards the cell(s) indicated by the ECGI IE, as described in TS 36.300 [15]. If the Cell Deployment Status Indicator IE is present in the Coverage Modification List IE, the eNB<sub>2</sub> shall consider the cell deployment configuration of the cell to be modified as the next planned configuration and shall remove any planned configuration stored for this cell. If the Cell Deployment Status Indicator IE is present and the Cell Replacing Info IE contains non-empty cell list, the eNB<sub>2</sub> may use this list to avoid connection or re-establishment failures during the reconfiguration, e.g. consider the cells in the list as possible alternative handover targets. If the Cell Deployment Status Indicator IE is not present, the eNB<sub>2</sub> shall consider the cell deployment configuration of cell to be modified as activated and replace any previous configuration for the cells indicated in the Coverage Modification List IE.

### Interaction with the eNB Configuration Update procedure:

If an eNB<sub>2</sub> which has not stored a *FreqBandIndicatorPriority* IE received from eNB<sub>1</sub>, but has signaled a *FreqBandIndicatorPriority* IE to eNB<sub>1</sub> after the TNL association has become available, receives an ENB CONFIGURATION UPDATE message from eNB<sub>1</sub> containing the *FreqBandIndicatorPriority* IE, the eNB<sub>2</sub> shall initiate the eNB Configuration Update procedure towards eNB<sub>1</sub> including the *FreqBandIndicatorPriority* IE.

The receiving eNB may forward the *Intended TDD DL-UL Configuration NR* IE received in the *NR Neighbour Information* IE in the ENB CONFIGURATION UPDATE message to neighbouring eNBs by triggering the eNB Configuration Update procedure.

### **Interaction with the EN-DC Configuration Update procedure:**

The receiving eNB may forward the *Intended TDD DL-UL Configuration NR* IE received in the *NR Neighbour Information* IE in the ENB CONFIGURATION UPDATE message to neighbouring en-gNBs by triggering the EN-DC Configuration Update procedure.

# 8.3.5.3 Unsuccessful Operation

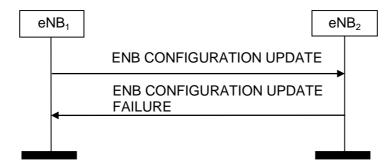


Figure 8.3.5.3-1: eNB Configuration Update, unsuccessful operation

If the  $eNB_2$  can not accept the update it shall respond with an ENB CONFIGURATION UPDATE FAILURE message and appropriate cause value.

If the ENB CONFIGURATION UPDATE FAILURE message includes the *Time To Wait* IE the eNB<sub>1</sub> shall wait at least for the indicated time before reinitiating the eNB Configuration Update procedure towards the same eNB<sub>2</sub>. Both nodes shall continue to operate the X2 with their existing configuration data.

### 8.3.5.4 Abnormal Conditions

If the eNB<sub>1</sub> after initiating eNB Configuration Update procedure receives neither ENB CONFIGURATION UPDATE ACKNOWLEDGE message nor ENB CONFIGURATION UPDATE FAILURE message, the eNB<sub>1</sub> may reinitiate the eNB Configuration Update procedure towards the same eNB<sub>2</sub>, provided that the content of the new ENB CONFIGURATION UPDATE message is identical to the content of the previously unacknowledged ENB CONFIGURATION UPDATE message.

# 8.3.6 Resource Status Reporting Initiation

### 8.3.6.1 General

This procedure is used by an eNB to request the reporting of load measurements to another eNB.

The procedure uses non UE-associated signalling.

### 8.3.6.2 Successful Operation

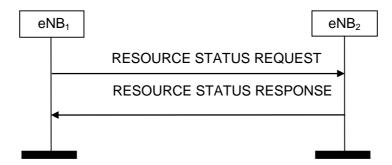


Figure 8.3.6.2-1: Resource Status Reporting Initiation, successful operation

The procedure is initiated with a RESOURCE STATUS REQUEST message sent from eNB<sub>1</sub> to eNB<sub>2</sub>. Upon receipt, eNB<sub>2</sub>:

- shall initiate the requested measurement according to the parameters given in the request in case the *Registration Request* IE set to "start"; or
- shall stop all cells measurements and terminate the reporting in case the *Registration Request* IE is set to "stop"; or
- if supported, stop cell measurements and terminate the reporting for cells indicated in the *Cell To Report* IE list, in case the *Registration Request* IE is set to "partial stop"; or
- if supported, add cells indicated in the *Cell To Report* IE list to the measurements initiated before for the given measurement IDs, in case the *Registration Request* IE is set to "add".

If the eNB<sub>2</sub> received a RESOURCE STATUS REQUEST message, which includes the *Registration Request* IE set to "stop", the *Cell To Report* IE list shall be ignored.

If the *Registration Request* IE is set to "start" then the *Report Characteristics* IE shall be included in RESOURCE STATUS REQUEST message. The eNB<sub>2</sub> shall ignore the *Report Characteristics* IE, if the *Registration Request* IE is not set to "start".

The *Report Characteristics* IE indicates the type of objects eNB<sub>2</sub> shall perform measurements on. For each cell, the eNB<sub>2</sub> shall include in the RESOURCE STATUS UPDATE message:

- the *Radio Resource Status* IE, if the first bit, "PRB Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1;
- the *S1 TNL Load Indicator* IE, if the second bit, "TNL Load Ind Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1;
- the *Hardware Load Indicator* IE, if the third bit, "HW Load Ind Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1;
- the *Composite Available Capacity Group* IE, if the fourth bit, "Composite Available Capacity Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1. If *Cell Capacity Class Value* IE is included within the *Composite Available Capacity Group* IE, this IE is used to assign weights to the available capacity indicated in the *Capacity Value* IE;
- the *ABS Status* IE, if the fifth bit, "ABS Status Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1 and eNB<sub>1</sub> had indicated the ABS pattern to eNB<sub>2</sub>:
- the RSRP Measurement Report List IE, if the sixth bit, "RSRP Measurement Report Periodic" of the Report Characteristics IE included in the RESOURCE STATUS REQUEST message is set to 1;
- the *CSI Report* IE, if the seventh bit, "CSI Report Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1.

If the *Reporting Periodicity* IE is included in the RESOURCE STATUS REQUEST message, eNB<sub>2</sub> shall use its value as the time interval between two subsequent RESOURCE STATUS UPDATE messages that include the *Radio* 

Resource Status IE, S1 TNL Load Indicator IE, Hardware Load Indicator IE, Composite Available Capacity Group IE, or ABS Status IE.

If the *Reporting Periodicity of RSRP Measurement Report* IE is included in the RESOURCE STATUS REQUEST message, eNB<sub>2</sub> shall use its value as the minimum time interval between two subsequent RESOURCE STATUS UPDATE messages that include the *RSRP Measurement Report List* IE.

If the *Reporting Periodicity of CSI Report* IE is included in the RESOURCE STATUS REQUEST message, eNB<sub>2</sub> shall use its value as the minimum time interval between two subsequent RESOURCE STATUS UPDATE messages that include the *CSI Report* IE.

If eNB<sub>2</sub> is capable to provide all requested resource status information, it shall initiate the measurement as requested by eNB<sub>1</sub>, and respond with the RESOURCE STATUS RESPONSE message.

If eNB<sub>2</sub> is capable to provide some but not all of the requested resource status information and the *Partial Success Indicator* IE is present in the RESOURCE STATUS REQUEST message, it shall initiate the measurement for the admitted measurement objects and include the *Measurement Initiation Result* IE in the RESOURCE STATUS RESPONSE message.

# 8.3.6.3 Unsuccessful Operation

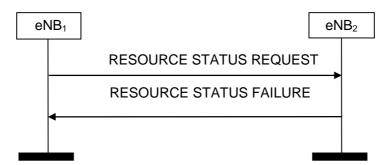


Figure 8.3.6.3-1: Resource Status Reporting Initiation, unsuccessful operation

If none of the requested measurements can be initiated,  $eNB_2$  shall send a RESOURCE STATUS FAILURE message. The *Cause* IE shall be set to an appropriate value e.g. "Measurement Temporarily not Available" or "Measurement not Supported For The Object" for each requested measurement object. The eNB may use the *Complete Failure Cause Information* IE to enhance the failure cause information per measurement in the RESOURCE STATUS FAILURE message.

### 8.3.6.4 Abnormal Conditions

If the initiating eNB<sub>1</sub> does not receive either RESOURCE STATUS RESPONSE message or RESOURCE STATUS FAILURE message, the eNB<sub>1</sub> may reinitiate the Resource Status Reporting Initiation procedure towards the same eNB, provided that the content of the new RESOURCE STATUS REQUEST message is identical to the content of the previously unacknowledged RESOURCE STATUS REQUEST message.

If the initiating eNB<sub>1</sub> receives the RESOURCE STATUS RESPONSE message including the *Measurement Initiation Result* IE containing no admitted measurements, the eNB<sub>1</sub> shall consider the procedure as failed.

If the *Report Characteristics* IE bitmap is set to "0" (all bits are set to "0") in the RESOURCE STATUS REQUEST message then eNB<sub>2</sub> shall initiate a RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "ReportCharacteristicsEmpty".

If the *Reporting Periodicity* IE value is not specified when at least one of the bits of the *Report Characteristics* IE, for which semantics is specified, other than the sixth or seventh bit, is set to 1 then eNB<sub>2</sub> shall initiate a RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "NoReportPeriodicity".

If the *Reporting Periodicity of RSRP Measurement Report* IE value is not specified when the sixth bit of the *Report Characteristics* IE is set to 1, then eNB<sub>2</sub> shall initiate the RESOURCE STATUS FAILURE message and the cause shall be set to appropriate value e.g. "NoReportPeriodicity".

If the *Reporting Periodicity of CSI Report* IE value is not specified when the seventh bit of the *Report Characteristics* IE is set to 1, then eNB<sub>2</sub> shall initiate the RESOURCE STATUS FAILURE message and the cause shall be set to appropriate value e.g. "NoReportPeriodicity".

If the eNB<sub>2</sub> received a RESOURCE STATUS REQUEST message which includes the *Registration Request* IE set to "start" and the *eNB1Measurement ID* IE corresponding to an existing on-going load measurement reporting, then eNB<sub>2</sub> shall initiate a RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "ExistingMeasurementID".

If the *Registration Request* IE is set to "stop", "partial stop" or "add" and the RESOURCE STATUS REQUEST message does not contain *eNB2 Measurement ID* IE, eNB<sub>2</sub> shall consider the procedure as failed and respond with the RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "Unknown eNB Measurement ID".

If the *Registration Request* IE is set to "partial stop" and the *Cell To Report* IE contains cells that have not been initiated for the reporting before, eNB<sub>2</sub> shall consider the procedure as failed and respond with the RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "Cell not Available". If the *Registration Request* IE is set to "add" and the *Cell To Report* IE contains cells that have been initiated for the reporting before, eNB<sub>2</sub> shall consider the procedure as failed and respond with the RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "Cell not Available".

# 8.3.7 Resource Status Reporting

### 8.3.7.1 General

This procedure is initiated by eNB<sub>2</sub> to report the result of measurements admitted by eNB<sub>2</sub> following a successful Resource Status Reporting Initiation procedure.

The procedure uses non UE-associated signalling.

### 8.3.7.2 Successful Operation



Figure 8.3.7.2-1: Resource Status Reporting, successful operation

The eNB<sub>2</sub> shall report the results of the admitted measurements in RESOURCE STATUS UPDATE message. The admitted measurements are the measurements that were successfully initiated during the preceding Resource Status Reporting Initiation procedure, and thus not reported in the *Measurement Failed Report Characteristics* IE for the concerned cell in the RESOURCE STATUS RESPONSE message.

If the eNB<sub>1</sub> receives the RESOURCE STATUS UPDATE message which includes the *UE ID* IE in the *RSRP Measurement Report List* IE, the eNB<sub>1</sub> may use the *UE ID* IE to link the associated RSRP measurement report with other measurement results (e.g. CSI reports, RSRP measurement reports) of the same UE.

If the CSI Report IE including the CSI Process Configuration Index IE is received,  $eNB_1$  shall interpret this IE as an index identifying one of the CSI process configurations that can be configured for all UEs within the cell where the CSI measurements were collected. For all UEs within the cell, the maximum number of CSI process configurations is given by the maximum value of the CSI Process Configuration Index IE.

If the  $eNB_1$  receives the RESOURCE STATUS UPDATE message, which includes the *Cell Reporting Indicator* IE set to "stop request" in one or more items of the *Cell Measurement Result* IE, the  $eNB_1$  should initialise the Resource Status Reporting Initiation procedure to remove all or some of the corresponding cells from the measurement.

# 8.3.7.3 Unsuccessful Operation

Not applicable.

### 8.3.7.4 Abnormal Conditions

If the eNB<sub>1</sub> receives a RESOURCE STATUS UPDATE message which includes the *ABS Status* IE, and all bits in the *Usable ABS Pattern Info* IE are set to '0', the eNB1 shall ignore the *DL ABS Status* IE.

# 8.3.8 Mobility Settings Change

### 8.3.8.1 General

This procedure enables an eNB to negotiate the handover trigger settings with a peer eNB controlling neighbouring cells.

The procedure uses non UE-associated signalling.

# 8.3.8.2 Successful Operation

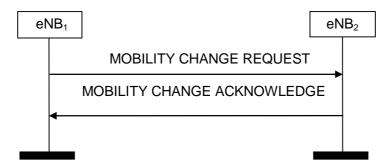


Figure 8.3.8.2-1: Mobility Settings Change, successful operation

The procedure is initiated with a MOBILITY CHANGE REQUEST message sent from eNB<sub>1</sub> to eNB<sub>2</sub>.

Upon receipt,  $eNB_2$  shall evaluate if the proposed  $eNB_2$  handover trigger modification may be accepted. If  $eNB_2$  is able to successfully complete the request it shall reply with MOBILITY CHANGE ACKNOWLEDGE.

### 8.3.8.3 Unsuccessful Operation

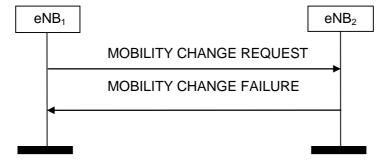


Figure 8.3.8.3-1: Mobility Settings Change, unsuccessful operation

If the requested parameter modification is refused by the eNB<sub>2</sub>, or if the eNB<sub>2</sub> is not able to complete the procedure, the eNB<sub>2</sub> shall send a MOBILITY CHANGE FAILURE message with the *Cause* IE set to an appropriate value. The eNB<sub>2</sub> may include *eNB2 Mobility Parameters Modification Range* IE in MOBILITY CHANGE FAILURE message, for example in cases when the proposed change is out of permitted range.

#### 8.3.8.4 Abnormal Conditions

Void.

# 8.3.9 Radio Link Failure Indication

### 8.3.9.1 General

The purpose of the Radio Link Failure Indication procedure is to transfer information regarding RRC re-establishment attempts, or received RLF Reports, between eNBs. The signalling takes place from the eNB at which a re-establishment attempt is made, or an RLF Report is received, to an eNB to which the UE concerned may have previously been attached prior to the connection failure. This may aid the detection of radio link failure and handover failure cases (TS 36.300 [15]).

The procedure uses non UE-associated signalling.

# 8.3.9.2 Successful Operation

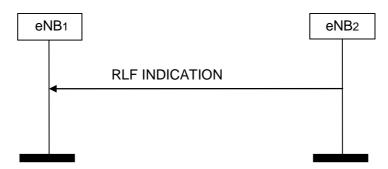


Figure 8.3.9.2-1: Radio Link Failure Indication, successful operation

 $eNB_2$  initiates the procedure by sending the RLF INDICATION message to  $eNB_1$  following a re-establishment attempt or an RLF Report reception from a UE at  $eNB_2$ , when  $eNB_2$  considers that the UE may have previously suffered a connection failure at a cell controlled by  $eNB_1$ .

eNB<sub>2</sub> may include the *ShortMAC-I* IE in the RLF INDICATION message, e.g., in order to aid the eNB<sub>1</sub> to resolve a potential PCI confusion situation or to aid the eNB<sub>1</sub> to identify the UE.

eNB<sub>2</sub> may include the *UE RLF Report Container* IE and optionally also the *UE RLF Report Container for extended bands* IE in the RLF INDICATION message, which may be used by the eNB<sub>1</sub> to determine the nature of the failure. If the *UE RLF Report Container* IE is included in the RLF INDICATION message sent after successful re-establishment, the eNB<sub>2</sub> shall use the *Re-establishment Cell ECGI* IE in the RLF INDICATION message to indicate the ECGI of the cell where the re-establishment was successful.

eNB<sub>2</sub> may include the *RRC Conn Setup Indicator* IE in the RLF INDICATION message, which indicates that the RLF Report is retrieved after an RRC connection setup or an incoming successful handover.

If the *RRC Conn Setup Indicator* IE is present in the RLF INDICATION message, the eNB<sub>1</sub> shall ignore the values in the *Failure cell PCI* IE, *Re-establishment cell ECGI* IE, *C-RNTI* IE and *ShortMAC-I* IE.

eNB<sub>2</sub> may include the *RRC Conn Reestab Indicator* IE in the RLF INDICATION message, which may be used by the eNB<sub>1</sub> to determine where the failure occurred.

eNB<sub>2</sub> may include the *NB-IoT RLF Report Container* IE in the RLF INDICATION message, which may be used by the eNB<sub>1</sub> to determine the nature of the failure. If the *NB-IoT RLF Report Container* IE is included in the RLF INDICATION message sent after successful re-establishment, the eNB<sub>2</sub> shall use the *Re-establishment Cell ECGI* IE in the RLF INDICATION message to indicate the ECGI of the cell where the re-establishment was successful.

## 8.3.9.3 Unsuccessful Operation

Not applicable.

#### 8.3.9.4 Abnormal Conditions

Void.

# 8.3.10 Handover Report

### 8.3.10.1 General

The purpose of the Handover Report procedure is to transfer mobility related information between eNBs.

The procedure uses non UE-associated signalling.

# 8.3.10.2 Successful Operation



Figure 8.3.10.2-1: Handover Report, successful operation

An eNB initiates the procedure by sending an HANDOVER REPORT message to another eNB. By sending the message eNB<sub>1</sub> indicates to eNB<sub>2</sub> that a mobility-related problem was detected.

If the  $Handover\ Report\ Type\ IE$  is set to "HO too early" or "HO to wrong cell", then the  $eNB_1$  indicates to  $eNB_2$  that, following a successful handover from a cell of  $eNB_2$  to a cell of  $eNB_1$ , a radio link failure occurred and the UE attempted RRC Re-establishment either at the original cell of  $eNB_2$  (Handover Too Early), or at another cell (Handover to Wrong Cell). The detection of Handover Too Early and Handover to Wrong Cell events is made according to TS 36.300 [15].

If the UE-related information is available in eNB<sub>1</sub>, the eNB<sub>1</sub> should include in HANDOVER REPORT message:

- the Mobility Information IE, if the Mobility Information IE was sent for this handover from eNB2;
- the Source cell C-RNTI IE.

If received, the eNB<sub>2</sub> uses the above information according to TS 36.300 [15].

If the UE RLF Report received from the eNB sending the RLF INDICATION message, as described in TS 36.300 [15], is available, the eNB<sub>1</sub> may also include it in the HANDOVER REPORT as *UE RLF Report Container* IE and optionally also *UE RLF Report Container for extended bands* IE.

If the *Handover Report Type* IE is set to "InterRAT ping-pong", then the eNB<sub>1</sub> indicates to eNB<sub>2</sub> that a completed handover from a cell of eNB<sub>2</sub> to a cell in other RAT might have resulted in an inter-RAT ping-pong and the UE was successfully handed over to a cell of eNB<sub>1</sub> (indicated with the *Failure cell ECGI* IE).

If the *Handover Report Type* IE is set to "Inter-system ping-pong", then the eNB<sub>1</sub> indicates to eNB<sub>2</sub> that a completed handover from a cell of eNB<sub>2</sub> to a cell in NG-RAN might have resulted in an inter-system ping-pong and the UE was successfully handed over to a cell of eNB<sub>1</sub> (indicated with the *Failure cell ECGI* IE).

The report contains the source and target cells, and cause of the handover. If the *Handover Report Type* IE is set to "HO to wrong cell", then the *Re-establishment cell ECGI* IE shall be included in the HANDOVER REPORT message. If the *Handover Report Type* IE is set to "InterRAT ping-pong", then the *Target cell in UTRAN* IE shall be included in the HANDOVER REPORT message. If the *Handover Report Type* IE is set to "Inter-system ping-pong", then the *Target cell in NG-RAN* IE shall be included in the HANDOVER REPORT message.

# 8.3.10.3 Unsuccessful Operation

Not applicable.

### 8.3.10.4 Abnormal Conditions

Void.

## 8.3.11 Cell Activation

### 8.3.11.1 General

The purpose of the Cell Activation procedure is to request to a neighbouring eNB to switch on one or more cells, previously reported as inactive due to energy saving reasons.

The procedure uses non UE-associated signalling.

# 8.3.11.2 Successful Operation

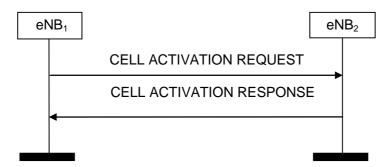


Figure 8.3.11.2-1: Cell Activation, successful operation

An  $eNB_1$  initiates the procedure by sending a CELL ACTIVATION REQUEST message to a peer  $eNB_2$ .

Upon receipt of this message, eNB<sub>2</sub> should activate the cell(s) indicated in the CELL ACTIVATION REQUEST message and shall indicate in the CELL ACTIVATION RESPONSE message for which cells the request was fulfilled.

# Interactions with eNB Configuration Update procedure:

 $eNB_2$  shall not send an ENB CONFIGURATION UPDATE message to  $eNB_1$  just for the reason of the cell(s) indicated in the CELL ACTIVATION REQUEST message changing state, as the receipt of the CELL ACTIVATION RESPONSE message by  $eNB_1$  is used to update the information about cell activation state of  $eNB_2$  cells in  $eNB_1$ .

## 8.3.11.3 Unsuccessful Operation

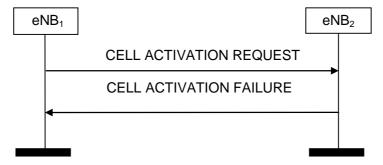


Figure 8.3.11.3-1: Cell Activation, unsuccessful operation

If the  $eNB_2$  cannot activate any of the cells indicated in the CELL ACTIVATION REQUEST message, it shall respond with a CELL ACTIVATION FAILURE message with an appropriate cause value.

## 8.3.11.4 Abnormal Conditions

Not applicable.

# 8.3.12 X2 Removal

# 8.3.12.1 General

The purpose of the X2 Removal procedure is to remove the signaling connection between two eNBs in a controlled manner. If successful, this procedure erases any existing application level configuration data in the two nodes.

The procedure uses non UE-associated signaling.

# 8.3.12.2 Successful Operation

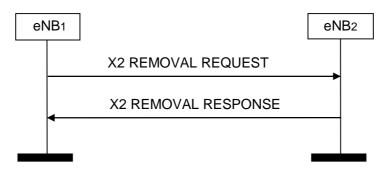


Figure 8.3.12.2-1: X2 Removal, successful operation

An eNB $_1$  initiates the procedure by sending the X2 REMOVAL REQUEST message to a candidate eNB $_2$ . Upon reception of the X2 REMOVAL REQUEST message the candidate eNB $_2$  shall reply with the X2 REMOVAL RESPONSE message. After receiving the X2 REMOVAL RESPONSE message, the initiating eNB $_1$  shall initiate removal of the TNL association towards eNB $_2$  and may remove all resources associated with that signaling connection. The candidate eNB $_2$  may then remove all resources associated with that signaling connection.

If the X2 Removal Threshold IE is included in the X2 REMOVAL REQUEST message, the candidate eNB<sub>2</sub> shall, if supported, accept to remove the signalling connection with eNB<sub>1</sub> if the X2 Benefit Value of the signalling connection determined at the candidate eNB<sub>2</sub> is lower than the value of the X2 Removal Threshold IE.

## 8.3.12.3 Unsuccessful Operation

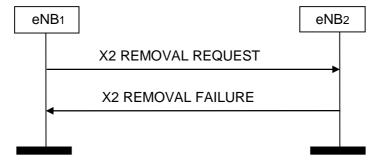


Figure 8.3.12.3-1: X2 Removal, unsuccessful operation

If the candidate eNB<sub>2</sub> cannot accept to remove the signaling connection with eNB<sub>1</sub> it shall respond with an X2 REMOVAL FAILURE message with an appropriate cause value.

#### 8.3.12.4 Abnormal Conditions

Void.

## 8.3.13 Retrieve UE Context

### 8.3.13.1 General

The purpose of the Retrieve UE Context procedure is to retrieve the UE context from the eNB where the RRC connection has been suspended (old eNB) and transfer it to the eNB where the RRC Connection has been requested to be resumed (new eNB) or to retrieve the UE context for a UE which attempts to re-establish its RRC connection in an eNB (the new eNB) different from the eNB (the old eNB) where the RRC connection failed, e.g. due to RLF.

The procedure uses UE-associated signalling.

# 8.3.13.2 Successful Operation

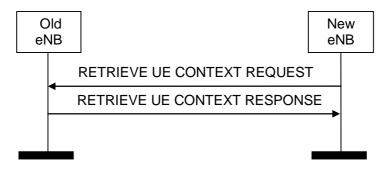


Figure 8.3.13.2-1: Retrieve UE Context, successful operation

The new eNB initiates the procedure by sending the RETRIEVE UE CONTEXT REQUEST message to the old eNB.

If the old eNB is able to identify the UE context and to successfully verify the UE by means of the Resume ID, the ShortMAC-I, optionally the C-RNTI, the failure cell PCI and the E-UTRAN Cell Identifier of the new cell contained in the RETRIEVE UE CONTEXT REQUEST message, it shall respond with the RETRIEVE UE CONTEXT RESPONSE message. The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

If the C-RNTI IE is present in the RETRIEVE UE CONTEXT REQUEST, the old eNB shall ignore the Resume ID IE.

The old eNB may include in the GUMMEI IE any GUMMEI corresponding to the source MME node.

If the PLMN of the new cell is not the Serving PLMN stored in the UE Context the old eNB shall replace the Serving PLMN with the PLMN of the new cell and move the Serving PLMN to the equivalent PLMN list, before propagating the roaming and access restriction information to the new eNB. The new eNB shall act upon reception of the

- UE Security Capabilities IE,
- AS Security Information IE,
- Subscriber Profile ID for RAT/Frequency priority IE,
- Additional RRM Policy Index IE,
- Handover Restriction List IE,
- Location Reporting Information IE,
- Management Based MDT Allowed IE
- Management Based MDT PLMN List IE
- Trace Activation IE,
- SRVCC Operation Possible IE,
- Masked IMEISV IE
- Expected UE Behaviour IE,

- ProSe Authorized IE,
- V2X Services Authorized IE,
- Aerial UE subscription information IE,
- Subscription Based UE Differentiation Information IE,
- EPC Handover Restriction List Container IE,

within the RETRIEVE UE CONTEXT RESPONSE message as specified for the target eNB upon reception of the HANDOVER REQUEST message for the Handover Preparation procedure.

If the *UE Sidelink Aggregate Maximum Bit Rate* IE is contained in the RETRIEVE UE CONTEXT RESPONSE message, the new eNB shall, if supported, use it for the concerned UE's sidelink communication in network scheduled mode for V2X services.

If the *Aerial UE subscription information* IE is included in the RETRIEVE UE CONTEXT RESPONSE message, the target eNB shall, if supported, store this information in the UE context and use it as defined in TS 36.300 [15].

For each E-RAB for which the old eNB proposes to do forwarding of downlink data, the old eNB shall include the *DL Forwarding* IE within the *E-RABs To Be Setup Item* IE of the RETRIEVE UE CONTEXT RESPONSE message.

If the *Bearer Type* IE is included in the RETRIEVE UE CONTEXT RESPONSE message and is set to "non IP", then the new eNB shall not perform IP header compression for the concerned E-RAB.

If the *Ethernet Type* IE is included in the RETRIEVE UE CONTEXT RESPONSE message and is set to "True", then the new eNB shall, if supported, take this into account to perform header compression appropriately for the concerned E-RAB.

If the NR UE Sidelink Aggregate Maximum Bit Rate IE is contained in the RETRIEVE UE CONTEXT RESPONSE message, the new eNB shall, if supported, use it for the concerned UE's sidelink communication in network scheduled mode for NR V2X services.

If the NR V2X Services Authorized IE is contained in the RETRIEVE UE CONTEXT RESPONSE message and it contains one or more IEs set to "authorized", the eNB shall, if supported, consider that the UE is authorized for the relevant service(s).

If the *PC5 QoS Parameters* IE is contained in the RETRIEVE UE CONTEXT RESPONSE message, the target eNB shall, if supported, use it for the concerned UE's NR sidelink communication as specified in TS 23.285 [41].

If the *UE Radio Capability ID* IE is contained in the RETRIEVE UE CONTEXT RESPONSE message, the target eNB shall, if supported, store this information in the UE context and use it as specified in TS 23.401 [12].

### 8.3.13.3 Unsuccessful Operation

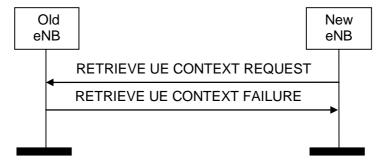


Figure 8.3.13.3-1: Retrieve UE Context, unsuccessful operation

If the old eNB is not able to identify the UE context by means of the Resume ID, or with the ShortMAC-I, C-RNTI, failed cell PCI and new E-UTRAN Cell Identifier contained in the RETRIEVE UE CONTEXT REQUEST message, it shall respond to the new eNB with the RETRIEVE UE CONTEXT FAILURE message.

### 8.3.13.4 Abnormal Conditions

Void.

# 8.3.14 EN-DC X2 Removal

### 8.3.14.1 General

The purpose of the EN-DC X2 Removal procedure is to remove the signaling connection between eNB and en-gNB in a controlled manner. If successful, this procedure erases any existing application level configuration data in the two nodes.

NOTE: In case the signalling transport is shared among several X2-C interface instances, and the TNL association is still used by one or more X2-C interface instances, the initiating node should not initiate the removal of the TNL association.

The procedure uses non UE-associated signaling.

## 8.3.14.2 Successful Operation

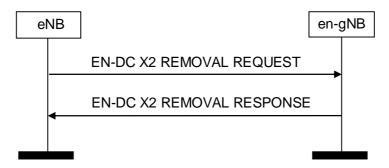


Figure 8.3.14.2-1: eNB Initiated EN-DC X2 Removal, successful operation

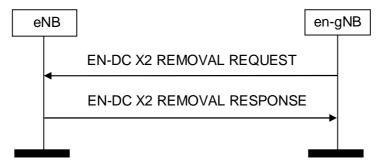


Figure 8.3.14.2-2: en-gNB Initiated EN-DC X2 Removal, successful operation

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC X2 REMOVAL REQUEST message and the EN-DC X2 REMOVAL RESPONSE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

#### eNB initiated EN-DC X2 Removal:

An eNB initiates the procedure by sending the EN-DC X2 REMOVAL REQUEST message to a candidate en-gNB. Upon reception of the EN-DC X2 REMOVAL REQUEST message the candidate en-gNB shall reply with the EN-DC X2 REMOVAL RESPONSE message. After receiving the EN-DC X2 REMOVAL RESPONSE message, the initiating eNB shall initiate removal of the TNL association towards en-gNB and may remove all resources associated with that signaling connection. The candidate eNB may then remove all resources associated with that signaling connection.

If the X2 Removal Threshold IE is included in the EN-DC X2 REMOVAL REQUEST message, the candidate en-gNB shall, if supported, accept to remove the signalling connection with eNB if the X2 Benefit Value of the signalling connection determined at the candidate en-gNB is lower than the value of the X2 Removal Threshold IE.

#### en-gNB initiated EN-DC X2 Removal:

An en-gNB initiates the procedure by sending the EN-DC X2 REMOVAL REQUEST message to a candidate eNB. Upon reception of the EN-DC X2 REMOVAL REQUEST message the candidate eNB shall reply with the EN-DC X2 REMOVAL RESPONSE message. After receiving the EN-DC X2 REMOVAL RESPONSE message, the initiating engNB shall initiate removal of the TNL association towards eNB and may remove all resources associated with that signaling connection. The candidate eNB may then remove all resources associated with that signaling connection.

If the X2 Removal Threshold IE is included in the EN-DC X2 REMOVAL REQUEST message, the candidate eNB shall, if supported, accept to remove the signalling connection with en-gNB if the X2 Benefit Value of the signalling connection determined at the candidate eNB is lower than the value of the X2 Removal Threshold IE.

# 8.3.14.3 Unsuccessful Operation

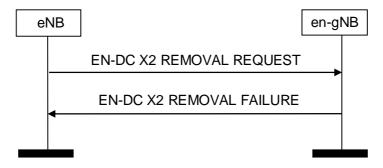


Figure 8.3.14.3-1: eNB Initiated EN-DC X2 Removal, unsuccessful operation

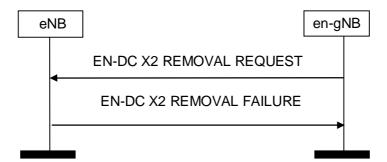


Figure 8.3.14.3-2: en-gNB Initiated EN-DC X2 Removal, unsuccessful operation

If the candidate receiving node cannot accept to remove the signaling connection with initiating node it shall respond with an EN-DC X2 REMOVAL FAILURE message with an appropriate cause value.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC X2 REMOVAL REQUEST message and the EN-DC X2 REMOVAL FAILURE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

# 8.3.14.4 Abnormal Conditions

Void.

# 8.3.15 Data Forwarding Address Indication

## 8.3.15.1 General

The purpose of the Data Forwarding Address Indication procedure is to allow the new eNB to provide data forwarding addresses to the old eNB in case the RRC connection has been re-established, as specified in TS 36.300 [15].

For Dual Connectivity or EN-DC, the Data Forwarding Address Indication procedure is used during a Conditional Handover to provide data forwarding addresses from the MeNB to the SeNB as specified in TS 36.300 [15], or from the eNB to the en-gNB as specified in TS 37.340 [32].

The procedure uses UE-associated signalling.

# 8.3.15.2 Successful Operation



Figure 8.3.15.2-1: Data Forwarding Address Indication, successful operation



Figure 8.3.15.2-2: Data Forwarding Address Indication for Conditional Handover, successful operation

The new eNB initiates the procedure by sending a DATA FORWARDING ADDRESS INDICATION message to the old eNB.

For each E-RAB included in *E-RABs Data Forwarding Address List* IE, the new eNB indicates that it requests data forwarding of downlink packets to the GTP TEID indicated in the *DL GTP Tunnel Endpoint* IE.

If the DATA FORWARDING ADDRESS INDICATION message includes the *CHO DC Indicator* IE, the SeNB (respectively, the en-gNB for EN-DC) shall, if supported, consider that the DATA FORWARDING ADDRESS INDICATION message concerns a Conditional Handover, and act as specified in TS 36.300 [15] for dual connectivity (respectively, act as specified in TS 37.340 [32] for EN-DC).

# 8.3.15.3 Unsuccessful Operation

Not applicable.

# 8.3.15.4 Abnormal Conditions

Void.

# 8.4 X2 Release

## 8.4.1 General

The purpose of the X2 Release procedure is to inform an eNB that the signalling (i.e. SCTP) connection to a peer eNB is unavailable.

# 8.4.2 Successful Operation



Figure 8.4.2-1: X2AP Release, successful operation

eNB<sub>1</sub> initiates the procedure by sending the X2 RELEASE message to eNB<sub>2</sub>. Upon the reception of X2 RELEASE message, eNB<sub>2</sub> shall consider that the signalling connection to an eNB indicated by the *eNB ID* IE is unavailable. eNB<sub>2</sub> may delete all the context information related to the indicated eNB.

# 8.4.3 Unsuccessful Operation

Not Applicable

# 8.4.4 Abnormal Condition

Not Applicable.

# 8.5 X2AP Message Transfer

## 8.5.1 General

The purpose of the X2AP Message Transfer procedure is to allow indirect transport of an X2AP message (except the X2AP MESSAGE TRANSFER message) between two eNBs and to allow an eNB to perform registration.

# 8.5.2 Successful Operation



Figure 8.5.2-1: X2AP Message Transfer, successful operation

 $eNB_1$  initiates the procedure by sending the X2AP MESSAGE TRANSFER message to  $eNB_2$ .

Upon the reception of X2 MESSAGE TRANSFER message the target eNB may:

- Retrieve the X2AP message included in the X2AP Message IE;

- Consider the target eNB ID contained in the *Target eNB ID* IE, included in the *RNL Header* IE, as the destination for the X2AP message signaled in the *X2AP Message* IE;
- Consider the source eNB ID contained in the *Source eNB ID* IE, included in the *RNL Header* IE, as the source of the X2AP message signaled in the *X2AP Message* IE.

In case the included *RNL Header* IE does not contain the *Target eNB ID* IE, the receiving eNB shall consider the eNB ID included in the *Source eNB ID* IE as the eNB ID corresponding to the TNL address(es) of the sender and update its internal information.

# 8.5.3 Unsuccessful Operation

Not Applicable.

### 8.5.4 Abnormal Condition

Not Applicable.

# 8.6 Procedures for Dual Connectivity

# 8.6.1 SeNB Addition Preparation

### 8.6.1.1 General

The purpose of the SeNB Addition Preparation procedure is to request the SeNB to allocate resources for dual connectivity operation for a specific UE.

The procedure uses UE-associated signalling.

### 8.6.1.2 Successful Operation

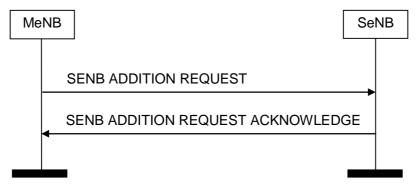


Figure 8.6.1.2-1: SeNB Addition Preparation, successful operation

The MeNB initiates the procedure by sending the SENB ADDITION REQUEST message to the SeNB. When the MeNB sends the SENB ADDITION REQUEST message, it shall start the timer  $T_{DCprep}$ .

The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

If the SENB ADDITION REQUEST message contains the Serving PLMN IE, the SeNB may use it for RRM purposes.

If the SENB ADDITION REQUEST message contains the *Expected UE Behaviour* IE, the SeNB shall, if supported, store this information and may use it to optimize resource allocation.

The SeNB shall report to the MeNB, in the SENB ADDITION REQUEST ACKNOWLEDGE message, the result for all the requested E-RABs in the following way:

- A list of E-RABs which are successfully established shall be included in the *E-RABs Admitted To Be Added List* IE.
- A list of E-RABs which failed to be established shall be included in the E-RABs Not Admitted List IE.

NOTE: The MeNB may trigger the SeNB Addition Preparation procedure in the course of the Inter-MeNB handover without SeNB change procedure as described in 36.300 [15]. The deleted E-RABs are not included in the *E-RABs To Be Added List* IE in the SENB ADDITION REQUEST message, from MeNB point of view. If the SeNB reports a certain E-RAB to be successfully established, respective SCG resources, from an SeNB point of view, may be actually successfully established or modified or kept; if a certain E-RAB is reported to be failed to be established, respective SCG resources, from an SeNB point of view, may be actually failed to be established or modified or kept.

For each E-RAB configured with the SCG bearer option

- the SeNB shall choose the ciphering algorithm based on the information in the *UE Security Capabilities* IE and locally configured priority list of AS encryption algorithms and apply the key indicated in the *SeNB Security Key* IE as specified in the TS 33.401 [18].
- the MeNB may propose to apply forwarding of downlink data by including the *DL Forwarding* IE within the *E-RABs To be Added Item* IE of the SENB ADDITION REQUEST message. For each E-RAB that it has decided to admit, the SeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs Admitted To Be Added Item* IE of the SENB ADDITION REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this bearer. This GTP tunnel endpoint may be different from the corresponding GTP tunnel endpoint, i.e the information contained in the *Transport Layer Address* IE and the *DL GTP TEID* IE in the *E-RAB To Be Modified List* IE of the E-RAB MODIFICATION INDICATION message (see TS 36.413 [4]) depending on implementation choice.
- the SeNB may include for each bearer in the *E-RABs Admitted To Be Added List* IE the *UL Forwarding GTP Tunnel Endpoint* IE to indicate that it requests data forwarding of uplink packets to be performed for that bearer.
- If the *Correlation ID* IE for the concerned E-RAB is received by the SeNB, the SeNB shall use this information for LIPA operation for the concerned E-RAB.
- If the *SIPTO Correlation ID* IE for the concerned E-RAB is received by the SeNB, the SeNB shall use this information for SIPTO@LN operation for the concerned E-RAB.
- If the *Bearer Type* IE for the concerned E-RAB is received by the SeNB and is set to "non IP", the SeNB shall, if supported, not perform IP header compression for the concerned E-RAB.
- If the *Ethernet Type* IE for the concerned E-RAB is received by the SeNB and is set to "True", the SeNB shall, if supported, take this into account to perform header compression appropriately for the concerned E-RAB.

If the CSG Membership Status IE is included in the SENB ADDITION REQUEST message, the SeNB shall act as specified in TS 36.300 [15].

Upon reception of the SENB ADDITION REQUEST ACKNOWLEDGE message the MeNB shall stop the timer  $T_{\text{DCprep}}$ .

If the *GW Transport Layer Address* IE is received in the SENB ADDITION REQUEST ACKNOWLEDGE message, the MeNB stores this information and use it according to TS 36.300 [15].

If the SIPTO L-GW Transport Layer Address IE is received in the SENB ADDITION REQUEST ACKNOWLEDGE message, the MeNB stores this information and use it according to TS 36.300 [15].

If the SeNB UE X2AP ID IE and/or SeNB UE X2AP ID Extension IE are contained in the SENB ADDITION REQUEST message, the SeNB shall, if supported, store this information and use it as defined in TS 36.300 [15].

If the *Tunnel Information for BBF* IE is received in the SENB ADDITION REQUEST ACKNOWLEDGE message, the MeNB shall, if supported, transfer the tunnel information for BBF to the core network.

### Interactions with the SeNB Reconfiguration Completion procedure:

If the SeNB admits at least one E-RAB, the SeNB shall start the timer  $T_{DCoverall}$  when sending the SENB ADDITION REQUEST ACKNOWLEDGE message to the MeNB. The reception of the SENB RECONFIGURATION COMPLETE message shall stop the timer  $T_{DCoverall}$ .

# 8.6.1.3 Unsuccessful Operation

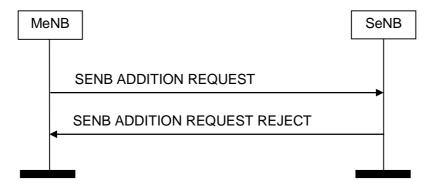


Figure 8.6.1.3-1: SeNB Addition Preparation, unsuccessful operation

If the SeNB is not able to accept any of the bearers or a failure occurs during the SeNB Addition Preparation, the SeNB sends the SENB ADDITION REQUEST REJECT message with an appropriate cause value to the MeNB.

# 8.6.1.4 Abnormal Conditions

If the SeNB receives a SENB ADDITION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RABs To Be Added List* IE) set to the same value, the SeNB shall consider the establishment of the corresponding E-RAB as failed.

If the SeNB receives a SENB ADDITION REQUEST message containing a *E-RAB Level QoS Parameters* IE which contains a *QCI* IE indicating a GBR bearer (as defined in TS 23.203 [13]), and which does not contain the *GBR QoS Information* IE, the SeNB shall consider the establishment of the corresponding E-RAB as failed.

If the supported algorithms for encryption defined in the *Encryption Algorithms* IE in the *UE Security Capabilities* IE, plus the mandated support of EEA0 in all UEs (TS 33.401 [18]), do not match any algorithms defined in the configured list of allowed encryption algorithms in the SeNB (TS 33.401 [18]), the SeNB shall reject the procedure using the SENB ADDITION REQUEST REJECT message.

If the SeNB receives a SENB ADDITION REQUEST message which does not contain the *CSG Membership Status* IE, and the SCell served by the SeNB is a hybrid cell, the SeNB shall reject the procedure using the SENB ADDITION REQUEST REJECT message.

If the SeNB receives a SENB ADDITION REQUEST message containing a *SeNB UE X2AP ID* IE that does not match any existing UE Context that has such ID, the SeNB shall reject the procedure using the SENB ADDITION REQUEST REJECT message.

If the SeNB receives a SENB ADDITION REQUEST message containing both the *Correlation ID* and the *SIPTO Correlation ID* IEs for the same E-RAB, the SeNB shall consider the establishment of the corresponding E-RAB as failed.

# Interactions with the SeNB Reconfiguration Completion and SeNB initiated SeNB Release procedure:

If the timer  $T_{DCoverall}$  expires before the SeNB has received the SENB RECONFIGURATION COMPLETE or the SENB RELEASE REQUEST message, the SeNB shall regard the requested RRC connection reconfiguration as being not applied by the UE and shall trigger the SeNB initiated SeNB Release procedure.

#### Interactions with the MeNB initiated SeNB Release procedure:

If the timer  $T_{DCprep}$  expires before the MeNB has received the SENB ADDITION REQUEST ACKNOWLEDGE message, the MeNB shall regard the SeNB Addition Preparation procedure as being failed and shall trigger the MeNB initiated SeNB Release procedure.

# 8.6.2 SeNB Reconfiguration Completion

### 8.6.2.1 General

The purpose of the SeNB Reconfiguration Completion procedure is to provide information to the SeNB whether the requested configuration was successfully applied by the UE.

The procedure uses UE-associated signalling.

## 8.6.2.2 Successful Operation



Figure 8.6.2.2-1: SeNB Reconfiguration Complete procedure, successful operation.

The MeNB initiates the procedure by sending the SENB RECONFIGURATION COMPLETE message to the SeNB.

The SENB RECONFIGURATION COMPLETE message may contain information that

- either the UE has successfully applied the configuration requested by the SeNB. The MeNB may also provide configuration information in the *MeNB to SeNB Container* IE.
- or the MeNB has not triggered configuration requested by the SeNB. The MeNB shall provide information with sufficient precision in the included *Cause* IE to enable the SeNB to know the reason for an unsuccessful reconfiguration. The MeNB may also provide configuration information in the *MeNB to SeNB Container* IE.

Upon reception of the SENB RECONFIGURATION COMPLETE message the SeNB shall stop the timer T<sub>DCoverall</sub>.

### 8.6.2.3 Abnormal Conditions

Void.

# 8.6.3 MeNB initiated SeNB Modification Preparation

# 8.6.3.1 General

This procedure is used to enable an MeNB to request an SeNB to modify the UE context at the SeNB.

The procedure uses UE-associated signalling.

# 8.6.3.2 Successful Operation

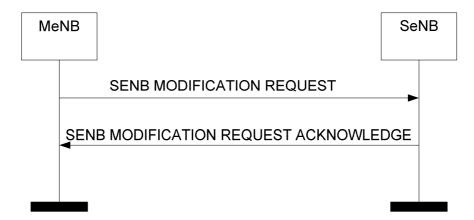


Figure 8.6.3.2-1: MeNB initiated SeNB Modification Preparation, successful operation

The MeNB initiates the procedure by sending the SENB MODIFICATION REQUEST message to the SeNB. When the MeNB sends the SENB MODIFICATION REQUEST message, it shall start the timer  $T_{DCprep}$ .

The SENB MODIFICATION REQUEST message may contain

- within the *UE Context Information* IE;
  - E-RABs to be added within the E-RABs To Be Added Item IE;
  - E-RABs to be modified within the *E-RABs To Be Modified Item* IE;
  - E-RABs to be released within the *E-RABs To Be Released Item* IE;
  - the SeNB UE Aggregate Maximum Bit Rate IE;
- the MeNB to SeNB Container IE;
- the SCG Change Indication IE;
- the CSG Membership Status IE.

If the SENB MODIFICATION REQUEST message contains the *Serving PLMN* IE, the SeNB may use it for RRM purposes.

If the SeNB UE Aggregate Maximum Bit Rate IE is included in the SENB MODIFICATION REQUEST message, the SeNB shall:

- replace the previously provided SeNB UE Aggregate Maximum Bit Rate by the received SeNB UE Aggregate Maximum Bit Rate in the UE context;
- use the received SeNB UE Aggregate Maximum Bit Rate for non-GBR Bearers for the concerned UE as defined in TS 36.300 [15].

The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

If at least one of the requested modifications is admitted by the SeNB, the SeNB shall modify the related part of the UE context accordingly and send the SENB MODIFICATION REQUEST ACKNOWLEDGE message back to the MeNB.

The SeNB shall include the E-RABs for which resources have been either added or modified or released at the SeNB either in the *E-RABs Admitted To Be Added List* IE or the *E-RABs Admitted To Be Modified List* IE or the *E-RABs Admitted To Be Released List* IE. The SeNB shall include the E-RABs that have not been admitted in the *E-RABs Not Admitted List* IE with an appropriate cause value.

For each E-RAB configured with the SCG bearer option

- the SeNB shall, if included, choose the ciphering algorithm based on the information in the *UE Security Capabilities* IE and locally configured priority list of AS encryption algorithms and apply the key indicated in the *SeNB Security Key* IE as specified in the TS 33.401 [18].
- if applicable, the MeNB may propose to apply forwarding of downlink data by including the *DL Forwarding* IE within the *E-RABs To Be Added Item* IE of the SENB MODIFICATION REQUEST message. For each E-RAB that it has decided to admit, the SeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs Admitted To Be Added Item* IE of the SENB MODIFICATION REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this bearer. The MeNB may also provide for an applicable E-RAB to be released the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SENB MODIFICATION REQUEST message.
- if applicable, the SeNB may include for each bearer in the *E-RABs Admitted To Be Added List* IE in the SENB MODIFICATION REQUEST ACKNOWLEDGE message the *UL Forwarding GTP Tunnel Endpoint* IE to indicate that it requests data forwarding of uplink packets to be performed for that bearer.
- If the *Correlation ID* IE for the concerned E-RAB is received by the SeNB, the SeNB shall use this information for LIPA operation for the concerned E-RAB.
- If the *SIPTO Correlation ID* IE for the concerned E-RAB is received by the SeNB, the SeNB shall use this information for SIPTO@LN operation for the concerned E-RAB.
- If the *Bearer Type* IE for the concerned E-RAB is received by the SeNB and is set to "non IP", the SeNB shall, if supported, not perform IP header compression for the concerned E-RAB.
- If the *Ethernet Type* IE for the concerned E-RAB is received by the SeNB and is set to "True", the SeNB shall, if supported, take this into account to perform header compression appropriately for the concerned E-RAB.

For each E-RAB configured with the split bearer option to be modified, if the SENB MODIFICATION REQUEST message includes the *SCG Change Indication* IE and the *MeNB GTP Tunnel Endpoint* IE in the *E-RABs To Be Modified Item* IE, the SeNB shall act as specified in TS 36.300 [15].

For each E-RAB configured with the split bearer option to be modified (released)

- if applicable, the MeNB may provide for an applicable E-RAB to be released the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SENB MODIFICATION REQUEST message.

If the *E-RAB level QoS parameter* IE is included in the SENB MODIFICATION REQUEST message for an E-RAB to be modified the SeNB shall allocate respective resources and provide corresponding radio configuration information within the *SeNB to MeNB Container* IE as described in TS 36.300 [15].

If the SENB MODIFICATION REQUEST message contains for an E-RAB to be modified which is configured with the SCG bearer option the *S1 UL GTP Tunnel Endpoint* IE the SeNB shall use it as the new UL S1-U address.

If the SENB MODIFICATION REQUEST message contains for an E-RAB to be modified which is configured with the split bearer option the *MeNB GTP Tunnel Endpoint* IE the SeNB shall use it as the new UL X2-U address.

For an E-RAB to be modified which is configured with the SCG bearer option the SeNB may include in the SENB MODIFICATION REQUEST ACKNOWLEDGE message the *S1 DL GTP Tunnel Endpoint* IE.

For an E-RAB to be modified which is configured with the split bearer option the SeNB may include in the SENB MODIFICATION REQUEST ACKNOWLEDGE message the *SeNB GTP Tunnel Endpoint* IE.

If the SCG Change Indication IE is included in the SENB MODIFICATION REQUEST message, the SeNB shall act as specified in TS 36.300 [15].

If the CSG Membership Status IE is included in the SENB MODIFICAITON REQUEST message, the SeNB shall act as specified in TS 36.300 [15].

Upon reception of the SENB MODIFICATION REQUEST ACKNOWLEDGE message the MeNB shall stop the timer  $T_{DCprep}$ . If the SENB MODIFICATION REQUEST ACKNOWLEDGE message has included the *SeNB to MeNB Container* IE the MeNB is then defined to have a Prepared SeNB Modification for that X2 UE-associated signalling.

When the SeNB supporting L-GW function for LIPA operation releases radio and control plane related resources associated to the LIPA bearer, it shall also request using intra-node signalling the collocated L-GW to release the LIPA PDN connection as defined in TS 23.401 [12].

#### **Interactions with the SeNB Reconfiguration Completion procedure:**

If the SeNB admits a modification of the UE context requiring the MeNB to report about the success of the RRC connection reconfiguration procedure, the SeNB shall start the timer  $T_{DCoverall}$  when sending the SENB MODIFICATION REQUEST ACKNOWLEDGE message to the MeNB. The reception of the SeNB RECONFIGURATION COMPLETE message shall stop the timer  $T_{DCoverall}$ .

# 8.6.3.3 Unsuccessful Operation



Figure 8.6.3.3-1: MeNB initiated SeNB Modification Preparation, unsuccessful operation

If the SeNB does not admit any modification requested by the MeNB, or a failure occurs during the MeNB initiated SeNB Modification Preparation, the SeNB shall send the SENB MODIFICATION REQUEST REJECT message to the MeNB. The message shall contain the *Cause* IE with an appropriate value.

If the SeNB receives a SENB MODIFICATION REQUEST message containing the *MeNB to SeNB Container* IE that does not include required information as specified in TS 36.331 [9], the SeNB shall send the SENB MODIFICATION REQUEST REJECT message to the MeNB.

### 8.6.3.4 Abnormal Conditions

If the SeNB receives a SENB MODIFICATION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RABs To Be Added List* IE and/or the *E-RABs To Be Modified List* IE) set to the same value, the SeNB shall not admit the action requested for the corresponding E-RABs.

If the SeNB receives an SENB MODIFICATION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RAB To Be Released List* IE) set to the same value, the SeNB shall initiate the release of one corresponding E-RAB and ignore the duplication of the instances of the selected corresponding E-RABs.

If the SeNB receives a SENB MODIFICATION REQUEST message containing a *E-RAB Level QoS Parameters* IE which contains a *QCI* IE indicating a GBR bearer (as defined in TS 23.203 [13]), and which does not contain the *GBR QoS Information* IE, the SeNB shall not admit the corresponding E-RAB.

If the supported algorithms for encryption defined in the *Encryption Algorithms* IE in the *UE Security Capabilities* IE in the *UE Context Information* IE, plus the mandated support of EEA0 in all UEs (TS 33.401 [18]), do not match any algorithms defined in the configured list of allowed encryption algorithms in the SeNB (TS 33.401 [18]), the SeNB shall reject the procedure using the SENB MODIFICATION REQUEST REJECT message.

If the timer  $T_{DCprep}$  expires before the MeNB has received the SENB MODIFICATION REQUEST ACKNOWLEDGE message, the MeNB shall regard the MeNB initiated SeNB Modification Preparation procedure as being failed and shall release the UE Context at the SeNB.

If the SeNB receives a SENB MODIFICATION REQUEST message containing both the *Correlation ID* and the *SIPTO Correlation ID* IEs for the same E-RAB, the SeNB shall consider the establishment of the corresponding E-RAB as failed.

#### Interactions with the SeNB Reconfiguration Completion and SeNB initiated SeNB Release procedure:

If the timer T<sub>DCoverall</sub> expires before the SeNB has received the SENB RECONFIGURATION COMPLETE or the SENB RELEASE REQUEST message, the SeNB shall regard the requested modification RRC connection reconfiguration as being not applied by the UE and shall trigger the SeNB initiated SeNB Release procedure.

### Interaction with the SeNB initiated SeNB Modification Preparation procedure:

If the MeNB, after having initiated the MeNB initiated SeNB Modification procedure, receives the SENB MODIFICATION REQUIRED message, the MeNB shall refuse the SeNB initiated SeNB Modification procedure with an appropriate cause value in the *Cause* IE.

If the MeNB has a Prepared SeNB Modification and receives the SENB MODIFICATION REQUIRED message, the MeNB shall respond with the SENB MODIFICATION REFUSE message to the SeNB with an appropriate cause value in the *Cause* IE.

# 8.6.4 SeNB initiated SeNB Modification

### 8.6.4.1 General

This procedure is used by the SeNB to modify the UE context in the SeNB.

The procedure uses UE-associated signalling.

# 8.6.4.2 Successful Operation

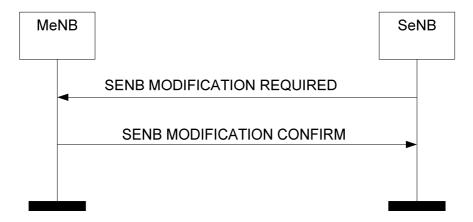


Figure 8.6.4.2-1: SeNB initiated SeNB Modification, successful operation.

The SeNB initiates the procedure by sending the SENB MODIFICATION REQUIRED message to the MeNB. When the SeNB sends the SENB MODIFICATION REQUIRED message, it shall start the timer  $T_{DCoverall}$ .

The SENB MODIFICATION REQUIRED message may contain

- the SeNB to MeNB Container IE.
- E-RABs to be released within the *E-RABs To Be Released Item* IE;
- the SCG Change Indication IE.

If the MeNB receives a SENB MODIFICATION REQUIRED message containing the SCG Change Indication IE, the MeNB shall act as specified in TS 36.300 [15].

If the MeNB is able to perform the modifications requested by the SeNB, the MeNB shall send the SENB MODIFICATION CONFIRM message to the SeNB. The SENB MODIFICATION CONFIRM message may contain the *MeNB to SeNB Container* IE.

Upon reception of the SENB MODIFICATION CONFIRM message the SeNB shall stop the timer T<sub>DCoverall</sub>.

### Interaction with the MeNB initiated SeNB Modification Preparation procedure:

If applicable, as specified in TS 36.300 [15], the SeNB may receive, after having initiated the SeNB initiated SeNB Modification procedure, the SENB MODIFICATION REQUEST message including the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released List* IE.

If applicable, as specified in TS 36.300 [15], the SeNB may receive, after having initiated the SeNB initiated SeNB Modification procedure, the SENB MODIFICATION REQUEST message including the *SeNB Security Key* IE within the *UE Context Information* IE.

If the SeNB has initiated the SeNB initiated SeNB Modification procedure with the SENB MODIFICATION REQUIRED message including the *E-RABs To Be Released Item* IE, it may receive the SENB MODIFICATION REQUEST message including the *SCG Change Indication* IE, upon which the SeNB shall provide respective information in the *SeNB to MeNB Container* IE within the SENB MODIFICATION REQUEST ACKNOWLEDGMENT message, as specified in TS 36.300 [15].

### 8.6.4.3 Unsuccessful Operation

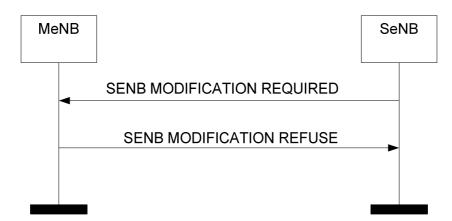


Figure 8.6.4.3-1: SeNB initiated SeNB Modification, unsuccessful operation.

In case the request modification cannot be performed successfully the MeNB shall respond with the SENB MODIFICATION REFUSE message to the SeNB with an appropriate cause value in the *Cause* IE.

The MeNB may also provide configuration information in the MeNB to SeNB Container IE.

### 8.6.4.4 Abnormal Conditions

If the timer T<sub>DCoverall</sub> expires before the SeNB has received the SENB MODIFICATION CONFIRM or the SENB MODIFICATION REFUSE message, the SeNB shall regard the requested modification as failed and may take further actions like triggering the SeNB initiated SeNB Release procedure to release all SeNB resources allocated for the UE.

If the MeNB is aware that the SeNB didn't receive the latest configuration information concerning the MCG, the MeNB may respond with the SENB MODIFICATION REFUSE message to the SeNB with an appropriate cause value in the *Cause* IE.

If the value received in the *E-RAB ID* IE of any of the *E-RABs To Be Released Items* IE is not known at the MeNB, the MeNB shall regard the procedure as failed and may take appropriate actions like triggering the MeNB initiated SeNB Release procedure.

#### Interaction with the MeNB initiated SeNB Modification Preparation procedure:

If the SeNB, after having initiated the SeNB initiated SeNB Modification procedure, receives the SENB MODIFICATION REQUEST message including other IEs than an applicable *SeNB Security Key* IE and/or applicable forwarding addresses and/or the *SCG Change Indication* IE the SeNB shall

- regard the SeNB initiated SeNB Modification Procedure as being failed,
- stop the T<sub>DCoverall</sub>, which was started to supervise the SeNB initiated SeNB Modification procedure,
- be prepared to receive the SENB MODIFICATION REFUSE message from the MeNB and

- continue with the MeNB initiated SeNB Modification Preparation procedure as specified in section 8.6.3.

# 8.6.5 MeNB initiated SeNB Release

#### 8.6.5.1 General

The MeNB initiated SeNB Release procedure is triggered by the MeNB to initiate the release of the resources for a specific UE.

The procedure uses UE-associated signalling.

# 8.6.5.2 Successful Operation



Figure 8.6.5.2-1: MeNB initiated SeNB Release, successful operation

The MeNB initiates the procedure by sending the SENB RELEASE REQUEST message. Upon reception of the SENB RELEASE REQUEST message the SeNB shall stop providing user data to the UE. The SeNB UE X2AP ID IE and, if available, the SeNB UE X2AP ID Extension IE shall be included if it has been obtained from the SeNB. The MeNB may provide appropriate information within the Cause IE.

If the bearer context in the SeNB was configured with the SCG bearer option, for each SCG bearer for which the MeNB requests forwarding of uplink/downlink data, the MeNB includes the *UL Forwarding GTP Tunnel Endpoint/DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SENB RELEASE REQUEST message to indicate that the SeNB should perform data forwarding of uplink/downlink packets for that SCG bearer.

If the bearer context in the SeNB was configured with the split bearer option, for each Split bearer for which the MeNB requests forwarding of downlink data, the MeNB includes the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SENB RELEASE REQUEST message to indicate that the SeNB should perform data forwarding of downlink packets for that split bearer.

Upon reception of the SENB RELEASE REQUEST message containing *UE Context Kept Indicator* IE set to "True", the SeNB shall, if supported, only initiate the release of the resources related to the UE-associated signalling connection between the MeNB and the SeNB.

Upon reception of the SENB RELEASE REQUEST message containing *MakeBeforeBreak Indicator* IE set to "True", the SeNB shall, if supported, perform Make-Before-Break SeNB change as specified in TS 36.300 [15].

# 8.6.5.3 Unsuccessful Operation

Not applicable.

## 8.6.5.4 Abnormal Conditions

Should the SENB RELEASE REQUEST message refer to a context that does not exist, the SeNB shall ignore the message.

When the MeNB has initiated the procedure and did not include the SeNB UE X2AP ID IE the MeNB shall regard the resources for the UE at the SeNB as being fully released.

# 8.6.6 SeNB initiated SeNB Release

#### 8.6.6.1 General

This procedure is triggered by the SeNB to initiate the release of the resources for a specific UE.

The procedure uses UE-associated signalling.

### 8.6.6.2 Successful Operation

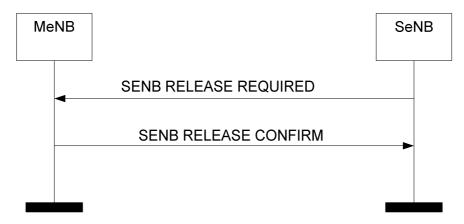


Figure 8.6.6.2-1: SeNB initiated SeNB Release, successful operation.

The SeNB initiates the procedure by sending the SENB RELEASE REQUIRED message to the MeNB.

Upon reception of the SENB RELEASE REQUIRED message, the MeNB replies with the SENB RELEASE CONFIRM message. For each E-RAB configured with the SCG bearer option, the MeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE to indicate that it requests data forwarding of uplink and downlink packets to be performed for that bearer. For each E-RAB configured with the split bearer option, the MeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE to indicate that it requests data forwarding of downlink packets to be performed for that bearer.

The SeNB may start data forwarding and stop providing user data to the UE upon reception of the SENB RELEASE CONFIRM message,

# 8.6.6.3 Unsuccessful Operation

Not applicable.

#### 8.6.6.4 Abnormal Conditions

Void.

# 8.6.7 SeNB Counter Check

#### 8.6.7.1 General

This procedure is initiated by the SeNB to request the MeNB to execute a counter check procedure to verify the value of the PDCP COUNTs associated with SCG bearers established in the SeNB.

# 8.6.7.2 Successful Operation

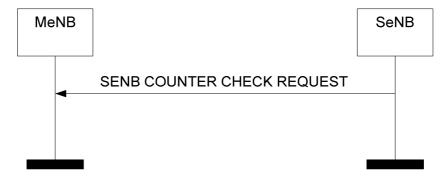


Figure 8.6.7.2-1: SeNB Counter Check procedure, successful operation.

The SeNB initiates the procedure by sending the SENB COUNTER CHECK REQUEST message to the MeNB.

Upon reception of the SENB COUNTER CHECK REQUEST message, the MeNB may perform the RRC counter check procedure as defined in TS 33.401 [18].

# 8.6.7.3 Unsuccessful Operation

Not applicable.

# 8.6.7.4 Abnormal Conditions

Not applicable.

# 8.7 Procedures for E-UTRAN-NR Dual Connectivity

# 8.7.1 EN-DC X2 Setup

#### 8.7.1.1 General

The purpose of the EN-DC X2 Setup procedure is to exchange application level configuration data needed for eNB and en-gNB to interoperate correctly over the X2 interface. This procedure erases any existing application level configuration data in the two nodes and replaces it by the one received. This procedure also resets the X2 interface like a Reset procedure would do.

- NOTE 1: If X2-C signalling transport is shared among multiple X2-C interface instances, one EN-DC X2 Setup procedure is issued per X2-C interface instance to be setup, i.e. several X2 Setup procedures may be issued via the same TNL association after that TNL association has become operational.
- NOTE 2: Exchange of application level configuration data also applies between eNB and en-gNB in case the SN (i.e. the en-gNB) does not broadcast system information other than for radio frame timing and SFN, as specified in the TS 37.340 [32]. How to use this information when this option is used is not explicitly specified.

# 8.7.1.2 Successful Operation

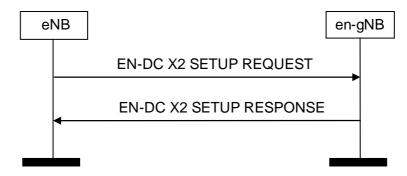


Figure 8.7.1.2-1: eNB Initiated EN-DC X2 Setup, successful operation

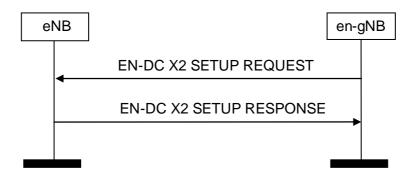


Figure 8.7.1.2-2: en-gNB Initiated EN-DC X2 Setup, successful operation

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC X2 SETUP REQUEST message and the EN-DC X2 SETUP RESPONSE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance. In the current version of this specification an eNB shall not include the *Interface Instance Indication* IE in the *Initiating NodeType* IE in the EN-DC X2 SETUP REQUEST message.

If the *SFN Offset* IE is included in the EN-DC X2 SETUP REQUEST or EN-DC X2 SETUP RESPONSE message, the receiving node shall, if supported, use this information to deduce the SFN0 time offset of the reported cell. The receiving node shall consider the received *SFN Offset* IE content valid until reception of an update of the IE for the same cell(s).

#### eNB initiated EN-DC X2 Setup:

An eNB initiates the procedure by sending the EN-DC X2 SETUP REQUEST message to a candidate en-gNB. The candidate en-gNB replies with the EN-DC X2 SETUP RESPONSE message. The initiating eNB shall transfer the complete list of its served cells to the candidate en-gNB. The candidate en-gNB shall reply with the complete list of its served cells or if supported, a partial list of its served cells together with the *Partial List Indicator* IE, according to the received information in *Cell and Capacity Assistance Information* IE in EN-DC X2 SETUP REQUEST message. If Supplementary Uplink is configured at the candidate en-gNB, the candidate en-gNB shall include in the EN-DC X2 SETUP RESPONSE message the *SUL Information* IE and the *Supported SUL band List* IE for each served cell where supplementary uplink is configured.

If the EN-DC X2 SETUP REQUEST message contains the *Protected E-UTRA Resource Indication* IE, the receiving en-gNB should take this into account for cell-level resource coordination with the eNB. The en-gNB shall consider the received *Protected E-UTRA Resource Indication* IE content valid until reception of a new update of the IE for the same eNB.

The protected resource pattern indicated in the *Protected E-UTRA Resource Indication* IE is not valid in subframes indicated by the *Reserved Subframes* IE, as well as in the non-control region of the MBSFN subframes i.e. it is valid only in the control region therein. The size of the control region of MBSFN subframes is indicated in the *Protected E-UTRA Resource Indication* IE.

If the *Partial List Indicator* IE is set to "partial" in the EN-DC X2 SETUP RESPONSE message from the en-gNB, the eNB shall, if supported, assume that the en-gNB has included in the *List of Served Cells NR* IE a partial list of cells.

If the EN-DC X2 SETUP REQUEST message contains the *TNL Transport Layer Address info* IE, the receiving en-gNB shall, if supported, take this into account for IPSEC tunnel establishment.

If the EN-DC X2 SETUP RESPONSE message contains the *TNL Transport Layer Address info* IE, the receiving eNB shall, if supported, take this into account for IPSEC tunnel establishment.

If the *NR Cell PRACH Configuration* IE is included in the *Served NR Cell Information* IE contained in the EN-DC X2 SETUP RESPONSE message, the eNB may store the information.

If the *CSI-RS Transmision Indication* IE is contained in the EN-DC X2 SETUP REQUEST message, the en-gNB may use this information for neighbour NR cell's CSI-RS measurement.

If the *Intended TDD DL-UL Configuration NR* IE is contained in the *NR Neighbour Information* IE in the EN-DC X2 SETUP REQUEST message, en-gNB should take this information into account for cross-link interference management. The en-gNB shall consider the received *Intended TDD DL-UL Configuration NR* IE content valid until reception of an update of the IE for the same cell(s).

#### Interaction with the eNB Configuration Update procedure:

The receiving eNB may forward the *Intended TDD DL-UL Configuration NR* IE received in the *Served NR Cell Information* IE in the EN-DC X2 SETUP RESPONSE message to neighbouring eNBs by triggering the eNB Configuration Update procedure.

#### **Interaction with the EN-DC Configuration Update procedure:**

The receiving eNB may forward the *Intended TDD DL-UL Configuration NR* IE received in the *Served NR Cell Information* IE in the EN-DC X2 SETUP RESPONSE message to neighbouring en-gNBs by triggering the EN-DC Configuration Update procedure.

#### en-gNB initiated EN-DC X2 Setup:

An en-gNB initiates the procedure by sending the EN-DC X2 SETUP REQUEST message to a candidate eNB. The candidate eNB replies with the EN-DC X2 SETUP RESPONSE message. The initiating en-gNB shall transfer the complete list of its served cells or if supported, a partial list of its served cells together with the *Partial List Indicator* IE in the EN-DC X2 SETUP REQUEST message to the candidate eNB. The candidate eNB shall reply with the complete list of its served cells.

If Supplementary Uplink is configured at the en-gNB, the en-gNB shall include in the EN-DC X2 SETUP REQUEST message the *SUL Information* IE and the *Supported SUL band List* IE for each served cell where supplementary uplink is configured.

If the EN-DC X2 SETUP RESPONSE message contains the *Protected E-UTRA Resource Indication* IE, the receiving en-gNB should take this into account for cell-level resource coordination with the eNB. The en-gNB shall consider the received *Protected E-UTRA Resource Indication* IE content valid until reception of a new update of the IE for the same eNB

If the *Partial List Indicator* IE is set to "partial" in the EN-DC X2 SETUP REQUEST message from the en-gNB, the eNB shall, if supported, assume that the en-gNB has included in the *List of Served Cells NR* IE a partial list of cells.

If the *Cell and Capacity Assistance Information* IE is present in the EN-DC X2 SETUP RESPONSE message from the eNB, the en-gNB shall, if supported, store the collected information to be used for future interface management.

If the EN-DC X2 SETUP REQUEST message contains the *TNL Transport Layer Address info* IE, the receiving eNB shall, if supported, take this into account for IPSEC tunnel establishment.

If the EN-DC X2 SETUP RESPONSE message contains the *TNL Transport Layer Address info* IE, the receiving engNB shall, if supported, take this into account for IPSEC tunnel establishment.

If the NR Cell PRACH Configuration IE is included in the Served NR Cell Information IE contained in the EN-DC X2 SETUP REQUEST message, the eNB may store the information.

If the CSI-RS Transmision Indication IE is contained in the EN-DC X2 SETUP REQUEST message, the eNB should take it into account when forwarding neighbour NR cell's CSI-RS configuration.

If the *Intended TDD DL-UL Configuration NR* IE is contained in the *NR Neighbour Information* IE in the EN-DC X2 SETUP RESPONSE message, en-gNB should take this information into account for cross-link interference

management. The en-gNB shall consider the received *Intended TDD DL-UL Configuration NR* IE content valid until reception of an update of the IE for the same cell(s).

#### Interaction with the eNB Configuration Update procedure:

The receiving eNB may forward the *Intended TDD DL-UL Configuration NR* IE received in the *Served NR Cell Information* IE in the EN-DC X2 SETUP REQUEST message to neighbouring eNBs by triggering the eNB Configuration Update procedure.

## Interaction with the EN-DC Configuration Update procedure:

The receiving eNB may forward the *Intended TDD DL-UL Configuration NR* IE received in the *Served NR Cell Information* IE in the EN-DC X2 SETUP REQUEST message to neighbouring en-gNBs by triggering the EN-DC Configuration Update procedure.

# 8.7.1.3 Unsuccessful Operation

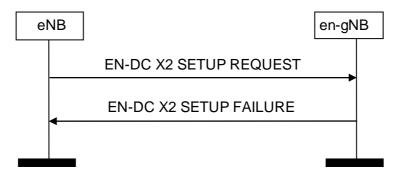


Figure 8.7.1.3-1: eNB Initiated EN-DC X2 Setup, unsuccessful operation

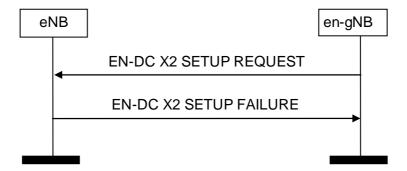


Figure 8.7.1.3-2: en-gNB Initiated EN-DC X2 Setup, unsuccessful operation

If the candidate receving node cannot accept the setup it shall respond with an EN-DC X2 SETUP FAILURE message with appropriate cause value.

If the *Message Oversize Notification* IE is included in the EN-DC X2 SETUP FAILURE, the initiating node shall, if supported, deduce that the failure is due to a too large EN-DC X2 SETUP REQUEST message and ensure that the total number of served cells in following EN-DC X2 SETUP REQUEST message is equal to or lower than the value of the *Message Oversize Notification* IE.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC X2 SETUP REQUEST message and the EN-DC X2 SETUP FAILURE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

# 8.7.1.4 Abnormal Conditions

If the first message received for a specific TNL association is not an EN-DC X2 SETUP REQUEST, EN-DC X2 SETUP RESPONSE, or EN-DC X2 SETUP FAILURE message then this shall be treated as a logical error.

If the initiating node does not receive either EN-DC X2 SETUP RESPONSE message or EN-DC X2 SETUP FAILURE message, the initiating node may reinitiate the EN-DC X2 Setup procedure towards the same candidate node, provided

that the content of the EN-DC X2 SETUP REQUEST message is identical to the content of the previously unacknowledged EN-DC X2 SETUP REQUEST message.

If the EN-DC X2 SETUP FAILURE message includes the *Time To Wait* IE the initiating node shall wait at least for the indicated time before reinitiating the EN-DC X2 Setup procedure towards the same peer node.

If the initiating node receives an EN-DC X2 SETUP REQUEST message from the peer entity on the same X2 interface:

- In case the initiating node answers with an EN-DC X2 SETUP RESPONSE message and receives a subsequent EN-DC X2 SETUP FAILURE message, the initiating node shall consider the X2 interface as non operational and the procedure as unsuccessfully terminated according to sub clause 8.7.1.3.
- In case the initiating node answers with an EN-DC X2 SETUP FAILURE message and receives a subsequent EN-DC X2 SETUP RESPONSE message, the initiating node shall ignore the EN-DC X2 SETUP RESPONSE message and consider the X2 interface as non operational.

# 8.7.2 EN-DC Configuration Update

# 8.7.2.1 General

The purpose of the EN-DC Configuration Update procedure is to update application level configuration data needed for eNB and en-gNB to interoperate correctly over the X2 interface.

NOTE: Update of application level configuration data also applies between eNB and en-gNB in case the SN (i.e. the en-gNB) does not broadcast system information other than for radio frame timing and SFN, as specified in the TS 37.340 [32]. How to use this information when this option is used is not explicitly specified.

The procedure uses non UE-associated signalling.

# 8.7.2.2 Successful Operation

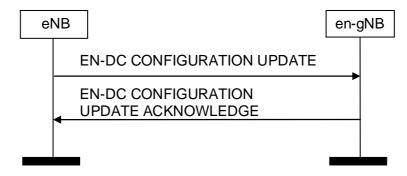


Figure 8.7.2.2-1: eNB Initiated EN-DC Configuration Update, successful operation

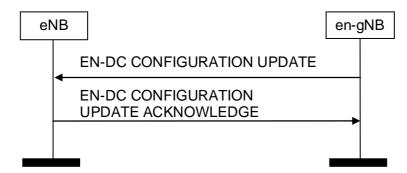


Figure 8.7.2.2-2: en-gNB Initiated EN-DC Configuration Update, successful operation

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC CONFIGURATION UPDATE message and the EN-DC CONFIGURATION UPDATE

ACKNOWLEDGE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

If the *SFN Offset* IE is included in the EN-DC CONFIGURATION UPDATE or EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message, the receiving node shall, if supported, use this information to update the SFN0 time offset of the reported cell.

#### eNB initiated EN-DC Configuration Update:

An eNB initiates the procedure by sending an EN-DC CONFIGURATION UPDATE message to a peer en-gNB.

After successful update of requested information, en-gNB shall reply with the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message to inform the initiating eNB that the requested update of application data was performed successfully.

If the *Cell Assistance Information* IE is present, the en-gNB shall, if supported, use it to generate the *List of Served NR Cells* IE and include the list in the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message.

If the EN-DC CONFIGURATION UPDATE REQUEST message contains the Protected E-UTRA Resource Indication IE, the receiving en-gNB should take this into account for cell-level resource coordination with the eNB. The en-gNB shall consider the received Protected E-UTRA Resource Indication IE content valid until reception of a new update of the IE for the same eNB. The protected resource pattern indicated in the Protected E-UTRA Resource Indication IE is not valid in subframes indicated by the Reserved Subframes IE, as well as in the non-control region of the MBSFN subframes i.e. it is valid only in the control region therein. The size of the control region of MBSFN subframes is indicated in the Protected E-UTRA Resource Indication IE.

The eNB may initiate a further EN-DC Configuration Update procedure only after a previous EN-DC Configuration Update procedure has been completed.

If Supplementary Uplink is configured at the en-gNB, the en-gNB shall include in the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message the *SUL Information* IE and the *Supported SUL band List* IE for each cell added in the Served NR Cells To Add IE and in the Served NR Cells To Modify IE.

If the EN-DC CONFIGURATION UPDATE message contains the *TNL Transport Layer Address info* IE, the receiving en-gNB shall, if supported, take this into account for IPSEC tunnel establishment.

If the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message contains the *TNL Transport Layer Address info* IE, the receiving eNB shall, if supported, take this into account for IPSEC tunnel establishment.

If the *NR Cell PRACH Configuration* IE is included in the *Served NR Cell Information* IE contained in the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message, the eNB may update the information.

If the CSI-RS Transmision Indication IE is contained in the EN-DC CONFIGURATION UPDATE message, the engNB may use this information for neighbour NR cell's CSI-RS measurement.

If the *Intended TDD DL-UL Configuration NR* IE is contained in the *NR Neighbour Information* IE in the EN-DC CONFIGURATION UPDATE message, en-gNB should take this information into account for cross-link interference management. The en-gNB shall consider the received *Intended TDD DL-UL Configuration NR* IE content valid until reception of an update of the IE for the same cell(s).

# Interaction with the eNB Configuration Update procedure:

The receiving eNB may forward the *Intended TDD DL-UL Configuration NR* IE received in the *Served NR Cell Information* IE in the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message to neighbouring eNBs by triggering the eNB Configuration Update procedure.

#### **Interaction with the EN-DC Configuration Update procedure:**

The receiving eNB may forward the *Intended TDD DL-UL Configuration NR* IE received in the *Served NR Cell Information* IE in the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message to neighbouring en-gNBs by triggering the EN-DC Configuration Update procedure.

## en-gNB initiated EN-DC Configuration Update:

An en-gNB initiates the procedure by sending an EN-DC CONFIGURATION UPDATE message to an eNB.

If Supplementary Uplink is configured at the en-gNB, the en-gNB shall include in the EN-DC CONFIGURATION UPDATE message the *SUL Information* IE and the *Supported SUL band List* IE for each served cell added in the Served NR Cells To Add IE and in the Served NR Cells To Modify IE.

If the Deactivation Indication IE is contained in the *Served NR Cells To Modify* IE, it indicates that the concerned NR cell was switched off to lower energy consumption, and is available for activation on request from the eNB, as described in TS 36.300 [15].

After successful update of requested information, eNB shall reply with the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message to inform the initiating en-gNB that the requested update of application data was performed successfully. In case the eNB receives an EN-DC CONFIGURATION UPDATE without any IE except for *Message Type* IE it shall reply with EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message without performing any updates to the existing configuration.

Upon reception of an EN-DC CONFIGURATION UPDATE message, eNB shall update the information for en-gNB as follows:

# **Update of Served NR Cell Information:**

- If Served NR Cells To Add IE is contained in the EN-DC CONFIGURATION UPDATE message, eNB shall add cell information according to the information in the Served NR Cell Information IE.
- If Served NR Cells To Modify IE is contained in the EN-DC CONFIGURATION UPDATE message, eNB shall modify information of cell indicated by Old NR-CGI IE according to the information in the Served NR Cell Information IE.
- If *Served NR Cells To Delete* IE is contained in the EN-DC CONFIGURATION UPDATE message, eNB shall delete information of cell indicated by *Old NR-CGI* IE.

The en-gNB may initiate a further EN-DC Configuration Update procedure only after a previous EN-DC Configuration Update procedure has been completed.

If the EN-DC CONFIGURATION UPDATE message contains the *TNL Transport Layer Address info* IE, the receiving eNB shall, if supported, take this into account for IPSEC tunnel establishment.

If the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message contains the *TNL Transport Layer Address info* IE, the receiving en-gNB shall, if supported, take this into account for IPSEC tunnel establishment.

If the NR Cell PRACH Configuration IE is included in the Served NR Cell Information IE contained in the EN-DC CONFIGURATION UPDATE message, the eNB may update the information.

If the *CSI-RS Transmision Indication* IE is contained in the EN-DC CONFIGURATION UPDATE message, the eNB should take it into account when forwarding neighbour NR cell's CSI-RS configuration.

#### **Update of SCTP associations:**

If the *TNL Association to Add List* IE is included in the EN-DC CONFIGURATION UPDATE message, the receiving eNB shall, if supported, use it to establish the TNL association(s) with the en-gNB. The eNB shall report to the en-gNB, in the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message, the successful establishment of the TNL association(s) with the en-gNB as follows:

- A list of successfully established TNL associations shall be included in the TNL Association Setup List IE;
- A list of TNL associations that failed to be established shall be included in the TNL Association Failed to Setup List IE.

If the *TNL Association to Remove List* IE is included in the EN-DC CONFIGURATION UPDATE message, the receiving eNB shall, if supported, initiate removal of the TNL association(s) indicated by the received Transport Layer information towards the en-gNB.

If the *TNL Association to Update List* IE is included in the EN-DC CONFIGURATION UPDATE message the receiving eNB shall, if supported, update the TNL association(s) indicated by the received Transport Layer information towards the en-gNB.

If the *Intended TDD DL-UL Configuration NR* IE is contained in the *NR Neighbour Information* IE in the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message, en-gNB should take this information into account for

cross-link interference management. The en-gNB shall consider the received *Intended TDD DL-UL Configuration NR* IE content valid until reception of an update of the IE for the same cell(s).

#### Interaction with the eNB Configuration Update procedure:

The receiving eNB may forward the *Intended TDD DL-UL Configuration NR* IE received in the *Served NR Cell Information* IE in the EN-DC CONFIGURATION UPDATE message to neighbouring eNBs by triggering the eNB Configuration Update procedure.

## Interaction with the EN-DC Configuration Update procedure:

The receiving eNB may forward the *Intended TDD DL-UL Configuration NR* IE received in the *Served NR Cell Information* IE in the EN-DC CONFIGURATION UPDATE message to neighbouring en-gNBs by triggering the EN-DC Configuration Update procedure.

# 8.7.2.3 Unsuccessful Operation

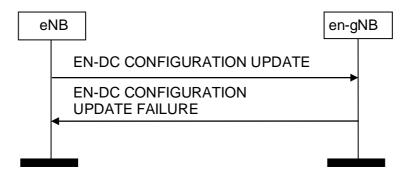


Figure 8.7.2.3-1: eNB Initiated EN-DC Configuration Update, unsuccessful operation

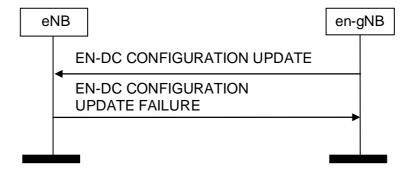


Figure 8.7.2.3-2: en-gNB Initiated EN-DC Configuration Update, unsuccessful operation

If the candidate receving node can not accept the update it shall respond with an EN-DC CONFIGURATION UPDATE FAILURE message and appropriate cause value.

If the EN-DC CONFIGURATION UPDATE FAILURE message includes the *Time To Wait* IE the initiating node shall wait at least for the indicated time before reinitiating the EN-DC Configuration Update procedure towards the same peer node. Both nodes shall continue to operate the X2 with their existing configuration data.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC CONFIGURATION UPDATE message and the EN-DC CONFIGURATION UPDATE FAILURE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

#### 8.7.2.4 Abnormal Conditions

If the initiating node after initiating EN-DC Configuration Update procedure receives neither EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message nor EN-DC CONFIGURATION UPDATE FAILURE message, the initiating node may reinitiate the EN-DC Configuration Update procedure towards the same candidate receiving node, provided that the content of the EN-DC CONFIGURATION UPDATE message is identical to the content of the previously unacknowledged EN-DC CONFIGURATION UPDATE message.

# 8.7.3 EN-DC Cell Activation

#### 8.7.3.1 General

The purpose of the EN-DC Cell Activation procedure is to enable an eNB to request a neighbouring en-gNB to switch on one or more cells, previously reported as inactive due to energy saving reasons.

The procedure uses non UE-associated signalling.

# 8.7.3.2 Successful Operation

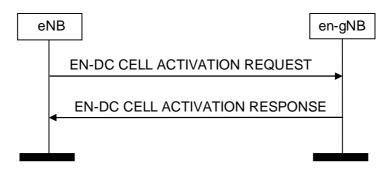


Figure 8.7.3.2-1: EN-DC Cell Activation, successful operation

An eNB initiates the procedure by sending a EN-DC CELL ACTIVATION REQUEST message to a peer en-gNB.

Upon receipt of this message, the en-gNB should activate the cell(s) indicated in the EN-DC CELL ACTIVATION REQUEST message and shall indicate in the EN-DC CELL ACTIVATION RESPONSE message for which cells the request was fulfilled.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC CELL ACTIVATION REQUEST message and the EN-DC CELL ACTIVATION RESPONSE message shall contain the *Interface Instance Indication* IE to identify the corresponding interface instance.

#### **Interactions with EN-DC Configuration Update procedure:**

The en-gNB shall not send an EN-DC CONFIGURATION UPDATE message to the eNB just for the reason of the cell(s) indicated in the EN-DC CELL ACTIVATION REQUEST message changing cell activation state, as the receipt of the EN-DC CELL ACTIVATION RESPONSE message by the eNB is used to update the information about the activation state of en-gNB cells in the eNB.

# 8.7.3.3 Unsuccessful Operation

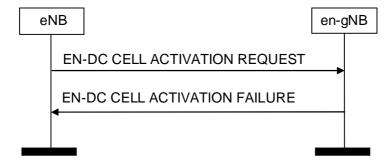


Figure 8.7.3.3-1: EN-DC Cell Activation, unsuccessful operation

If the en-gNB cannot activate any of the cells indicated in the EN-DC CELL ACTIVATION REQUEST message, it shall respond with a EN-DC CELL ACTIVATION FAILURE message with an appropriate cause value.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC CELL ACTIVATION REQUEST message and the EN-DC CELL ACTIVATION FAILURE message shall contain the *Interface Instance Indication* IE to identify the corresponding interface instance.

# 8.7.3.4 Abnormal Conditions

Not applicable.

# 8.7.4 SgNB Addition Preparation

#### 8.7.4.1 General

The purpose of the SgNB Addition Preparation procedure is to request the en-gNB to allocate resources for EN-DC connectivity operation for a specific UE.

The procedure uses UE-associated signalling.

# 8.7.4.2 Successful Operation

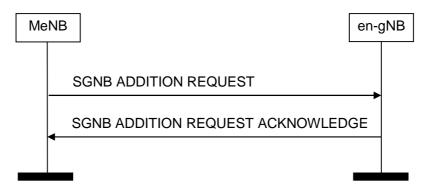


Figure 8.7.4.2-1: SgNB Addition Preparation, successful operation

The MeNB initiates the procedure by sending the SGNB ADDITION REQUEST message to the en-gNB. When the MeNB sends the SGNB ADDITION REQUEST message, it shall start the timer  $T_{DCprep}$ .

The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *Full E-RAB Level QoS Parameters* IE or in the *Requested MCG E-RAB Level QoS Parameters IE* or in the *Requested SCG E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

If the SGNB ADDITION REQUEST message contains the *Serving PLMN* IE, the en-gNB may use it for RRM purposes.

If the SGNB ADDITION REQUEST message contains the *Expected UE Behaviour* IE, the en-gNB shall, if supported, store this information and may use it to optimize resource allocation.

If the SGNB ADDITION REQUEST message contains the *Handover Restriction List* IE, the en-gNB node, if supported, shall store this information and use it to select an appropriate NR cell.

If the SGNB ADDITION REQUEST message contains the *MeNB Resource Coordination Information* IE, the en-gNB should forward it to lower layers and it may use it for the purpose of resource coordination with the MeNB. The engNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The en-gNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. If the *MeNB Coordination Assistance Information* IE is contained in the *MeNB Resource Coordination Information* IE, the en-gNB shall, if supported, use the information to determine further coordination of resource utilisation between the en-gNB and the MeNB.

The en-gNB shall choose the ciphering algorithm based on the information in the *NR UE Security Capabilities* IE and locally configured priority list of AS encryption algorithms and apply the key indicated in the *SgNB Security Key* IE as specified in the TS 33.401 [18].

If the SGNB ADDITION REQUEST message contains the *Subscriber Profile ID for RAT/Frequency Priority* IE, the en-gNB may use it for RRM purposes.

If the SGNB ADDITION REQUEST message contains the *Additional RRM Policy Index* IE, the en-gNB may use it for RRM purposes.

The en-gNB shall search for the target NR cell among the NR neighbour cells of the E-UTRAN cell indicated in *MeNB Cell ID* IE, as specified in the TS 37.340 [32].

If the *Masked IMEISV* IE is contained in the SGNB ADDITION REQUEST message the en-gNB shall, if supported, use it to determine the characteristics of the UE for subsequent handling.

The en-gNB shall report to the MeNB, in the SGNB ADDITION REQUEST ACKNOWLEDGE message, the result for all the requested E-RABs in the following way:

- a list of E-RABs which are successfully established shall be included in the *E-RABs Admitted To Be Added List* IE;
- a list of E-RABs which failed to be established shall be included in the E-RABs Not Admitted List IE.

NOTE: The MeNB may trigger the SgNB Addition Preparation procedure in the course of the Inter-MeNB handover without SgNB change procedure as described in TS 37.340 [32]. The deleted E-RABs are not included in the *E-RABs To Be Added List* IE in the SGNB ADDITION REQUEST message, from MeNB point of view. If the en-gNB reports a certain E-RAB to be successfully established, respective SCG resources, from an en-gNB point of view, may be actually successfully established or modified or kept; if a certain E-RAB is reported to be failed to be established, respective SCG resources, from an en-gNB point of view, may be actually failed to be established or modified or kept.

For each E-RAB successfully established in the en-gNB, the en-gNB shall report to the MeNB, in the SGNB ADDITION REQUEST ACKNOWLEDGE message, the same value in the *EN-DC Resource Configuration* IE as received in the SGNB ADDITION REQUEST message.

For each E-RAB for which allocation of the PDCP entity is requested at the en-gNB:

- the MeNB may propose to apply forwarding of downlink data by including the *DL Forwarding* IE within the *E-RABs To be Added Item* IE of the SGNB ADDITION REQUEST message. For each E-RAB that it has decided to admit, the en-gNB may include the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs Admitted To Be Added Item* IE of the SGNB ADDITION REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this bearer. This GTP tunnel endpoint may be different from the corresponding GTP tunnel endpoint, i.e the information contained in the *Transport Layer Address* IE and the *DL GTP TEID* IE in the *E-RAB To Be Modified List* IE of the E-RAB MODIFICATION INDICATION message (see TS 36.413 [4]) depending on implementation choice;
- the en-gNB may include for each bearer in the *E-RABs Admitted To Be Added List* IE the *UL Forwarding GTP Tunnel Endpoint* IE to indicate that it requests data forwarding of uplink packets to be performed for that bearer.
- the en-gNB shall use the S1 UL GTP Tunnel Endpoint IE of the SGNB ADDITION REQUEST message as the UL S1-U address.
- the MeNB shall use the *SgNB UL GTP Tunnel Endpoint at PDCP* IE of the SGNB ADDITION REQUEST ACKNOWLEDGE message as the UL X2-U address.
- if the SGNB ADDITION REQUEST message contains for an E-RAB to be added which is requested to be configured with MCG resources the *MeNB DL GTP Tunnel Endpoint at MCG* IE the en-gNB shall use it as the DL X2-U address for delivery of DL PDCP PDUs.
- the en-gNB shall include in the SGNB ADDITION REQUEST ACKNOWLEDGE message the S1 DL GTP Tunnel Endpoint at the SgNB IE.
- the en-gNB shall include in the SGNB ADDITION REQUEST ACKNOWLEDGE message the RLC Mode IE.
- the en-gNB may include for each bearer in the *E-RABs Admitted To Be Added List* IE in the SGNB ADDITION REQUEST ACKNOWLEDGE the *PDCP SN Length* IE to indicate the PDCP SN length for that bearer.
- If the *RLC Mode* IE is included for an E-RAB within the *E-RABs To be Added List* IE in the SGNB ADDITION REQUEST message, it indicates the mode that the MeNB used for the E-RAB when it was hosted at the MeNB.
- If the *Bearer Type* IE for the concerned E-RAB is received by the en-gNB and is set to "non IP", the en-gNB shall, if supported, not perform IP header compression for the concerned E-RAB.
- If the *Ethernet Type* IE for the concerned E-RAB is received by the en-gNB and is set to "True", the en-gNB shall, if supported, take this into account to perform header compression appropriately for the concerned E-RAB.

Upon reception of the SGNB ADDITION REQUEST ACKNOWLEDGE message the MeNB shall stop the timer  $T_{\text{DCprep}}$ .

If the SGNB ADDITION ACKNOWLEDGE message contains the *SgNB Resource Coordination Information* IE, the MeNB may use it for the purpose of resource coordination with the en-gNB. The MeNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The MeNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. If the *SgNB Coordination Assistance Information* IE is contained in the *SgNB Resource Coordination Information* IE, the MeNB shall, if supported, use the information to determine further coordination of resource utilisation between the en-gNB and the MeNB.

If the *SgNB UE X2AP ID* IE is contained in the SGNB ADDITION REQUEST message, the en-gNB shall, if supported, store this information and use it as defined in TS 37.340 [32].

If the SGNB ADDITION REQUEST message contains the *SGNB Addition Trigger Indication*, the en-gNB shall include the *RRC config indication* IE in the SGNB ADDITION REQUEST ACKNOWLEDGE message to inform the MeNB if the en-gNB applied full or delta configuration, as specified in TS 37.340 [32].

If the en-gNB receives for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE and the *Duplication Activation* IE in the SGNB ADDITION REQUEST message, it may provide the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE and the *LCID* IE to the MeNB in the SGNB ADDITION REQUEST ACKNOWLEDGE message if PDCP duplication is configured at the en-gNB.

If the SGNB ADDITION REQUEST message contains the *UL PDCP SN Length* IE and the *DL PDCP SN Length* IE, the en-gNB shall, if supported, store this information and use it for lower layer configuration of the concerned MN terminated bearer.

The SgNB may include the *Location Information at SgNB* IE in the SGNB ADDITION REQUEST ACKNOWLEDGE message, if respective information is available at the SgNB.

If the *Location Information at SgNB Reporting* IE set to "pscell" is included in the SGNB ADDITION REQUEST, the SgNB shall start providing information about the current location of the UE. If the *Location Information at SgNB* IE is included in the SGNB ADDITION REQUEST ACKNOWLEDGE, the MeNB shall store the included information so that it may be transferred towards the MME.

If *Trace Activation* IE has previously been received for this UE, it shall be included in the SGNB ADDITION REQUEST message. If the *Trace Activation* IE is included in the SGNB ADDITION REQUEST message, the en-gNB shall, if supported, initiate the requested trace function as described in TS 32.422 [6]. If the *Trace Activation* IE includes the *MDT Configuration NR* IE, the en-gNB shall take it into account for MDT function as described in TS 37.320 [31].

If the Management Based MDT Allowed IE only or the Management Based MDT Allowed IE and the Management Based MDT PLMN List IE is contained in the SGNB ADDITION REQUEST message, the en-gNB shall, if supported, store the received information in the UE context, and use this information to allow subsequent selection of the UE for management based MDT defined in TS 32.422 [6].

The MeNB shall, if supported and available in the UE context, include the *Management Based MDT Allowed* IE and the *Management Based MDT PLMN List* IE in the SGNB ADDITION REQUEST message.

If the *UE Context Reference at Source NG-RAN* IE is contained in the SGNB ADDITION REQUEST message, the engNB shall, if supported, store this information and use it for UE context retrieval and allocate data forwarding resources as specified in TS 37.340 [32].

If the *Requested Fast MCG recovery via SRB3* IE set to "true" is included in the SGNB ADDITION REQUEST message and the en-gNB decides to configure fast MCG link recovery via SRB3 as specified in TS 37.340 [32], the engNB shall, if supported, include the *Available fast MCG recovery via SRB3* IE set to "true" in the SGNB ADDITION REQUEST ACKNOWLEDGE message.

If the *UE Radio Capability ID* IE is contained in the SGNB ADDITION REQUEST message, the en-gNB shall, if supported, store this information and use it as specified in TS 23.401 [12].

If the SGNB ADDITION REQUEST message contains the *IAB Node Indication* IE, the en-gNB shall, if supported, consider that the request is for an IAB node.

For each requested E-RAB configured as MN-terminated split bearer/SCG bearer, if the *QoS Mapping Information* IE is contained in the *GTP Tunnel Endpoint* IE in the SGNB ADDITION REQUEST ACKNOWLEDGE message, the

MeNB shall, if supported, use it to set DSCP and/or flow label fields for the downlink IP packets which are transmitted from MeNB to en-gNB through the GTP tunnels indicated by the *GTP Tunnel Endpoint* IE.

#### Interactions with the MeNB initiated SgNB Modification procedure:

If the en-gNB provides for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE to the MeNB in the SGNB ADDITION REQUEST ACKNOWLEDGE message and the MeNB has not provided the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE in the SGNB ADDITION REQUEST message, the MeNB shall trigger the MeNB initiated SgNB Modification procedure to provide the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE to the SgNB.

#### **Interactions with the SgNB Reconfiguration Completion procedure:**

If the en-gNB admits at least one E-RAB, the en-gNB shall start the timer  $T_{DCoverall}$  when sending the SGNB ADDITION REQUEST ACKNOWLEDGE message to the MeNB. The reception of the SGNB RECONFIGURATION COMPLETE message shall stop the timer  $T_{DCoverall}$ .

#### **Interaction with the Activity Notification procedure**

Upon receiving an SGNB ADDITION REQUEST message containing the *Desired Activity Notification Level* IE, the en-gNB shall, if supported, use this information to decide whether to trigger subsequent SgNB Activitity Notification procedures according to the requested notification level.

# 8.7.4.3 Unsuccessful Operation

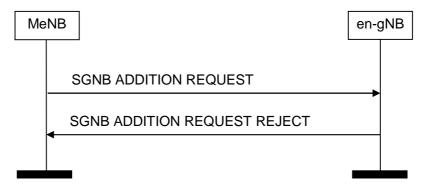


Figure 8.7.4.3-1: SgNB Addition Preparation, unsuccessful operation

If the en-gNB is not able to accept any of the bearers or a failure occurs during the SgNB Addition Preparation, the en-gNB sends the SGNB ADDITION REQUEST REJECT message with an appropriate cause value to the MeNB.

#### 8.7.4.4 Abnormal Conditions

If the en-gNB receives a SGNB ADDITION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RABs To Be Added List* IE) set to the same value, the en-gNB shall consider the establishment of the corresponding E-RAB as failed.

If the en-gNB receives a SGNB ADDITION REQUEST message containing a *E-RAB Level QoS Parameters* IE which contains a *QCI* IE indicating a GBR bearer (as defined in TS 23.203 [13]), and which does not contain the *GBR QoS Information* IE, the en-gNB shall consider the establishment of the corresponding E-RAB as failed.

If the supported algorithms for encryption defined in the *NR Encryption Algorithms* IE in the *NR UE Security Capabilities* IE, plus the mandated support of NEA0 in all UEs (TS 33.401 [18]), do not match any algorithms defined in the configured list of allowed encryption algorithms in the en-gNB (TS 33.401 [18]), the en-gNB shall reject the procedure using the SGNB ADDITION REQUEST REJECT message.

If the supported algorithms for integrity defined in the *NR Integrity Protection Algorithms* IE in the *NR UE Security Capabilities* IE do not match any algorithms defined in the configured list of allowed integrity protection algorithms in the en-gNB (TS 33.401 [18]), the en-gNB shall reject the procedure using the SGNB ADDITION REQUEST REJECT message.

If the en-gNB receives a SGNB ADDITION REQUEST message containing a *SgNB UE X2AP ID* IE that does not match any existing UE Context that has such ID, the en-gNB shall reject the procedure using the SGNB ADDITION REQUEST REJECT message.

If the MeNB has provided the en-gNB for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE and the *Duplication Activation* IE in the SGNB ADDITION REQUEST message, and the en-gNB does not provide the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE and the *LCID* IE to the MeNB in the SGNB ADDITION REQUEST ACKNOWLEDGE message, the MeNB shall assume that PDCP duplication was not configured at the en-gNB and releases duplication resources.

If the en-gNB provides for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE and the *LCID* IE to the MeNB in the SGNB ADDITION REQUEST ACKNOWLEDGE message and the MeNB has not provided the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE and the *Duplication Activation* IE in the SGNB ADDITION REQUEST message, and the MeNB does not trigger the MeNB initiated SgNB Modification procedure to provide the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE and the *Duplication Activation* IE to the SgNB the en-gNB before the SgNB Reconfigurationi Completion procedure was triggered, the en-gNB shall trigger the release of the concerned E-RAB.

#### Interactions with the SgNB Reconfiguration Completion and SgNB initiated SgNB Release procedure:

If the timer  $T_{DCoverall}$  expires before the en-gNB has received the SGNB RECONFIGURATION COMPLETE or the SGNB RELEASE REQUEST message, the en-gNB shall regard the requested RRC connection reconfiguration as being not applied by the UE and shall trigger the SgNB initiated SgNB Release procedure.

#### Interactions with the MeNB initiated SgNB Release procedure:

If the timer  $T_{DCprep}$  expires before the MeNB has received the SGNB ADDITION REQUEST ACKNOWLEDGE message, the MeNB shall regard the SgNB Addition Preparation procedure as being failed and shall trigger the MeNB initiated SgNB Release procedure.

# 8.7.5 SgNB Reconfiguration Completion

### 8.7.5.1 General

The purpose of the SgNB Reconfiguration Completion procedure is to provide information to the en-gNB whether the requested configuration was successfully applied by the UE.

The procedure uses UE-associated signalling.

# 8.7.5.2 Successful Operation



Figure 8.7.5.2-1: SgNB Reconfiguration Complete procedure, successful operation.

The MeNB initiates the procedure by sending the SGNB RECONFIGURATION COMPLETE message to the en-gNB.

The SGNB RECONFIGURATION COMPLETE message may contain information that

either the UE has successfully applied the configuration requested by the en-gNB. The MeNB may also provide NR *RRCReconfigurationComplete* message in the *MeNB to SgNB Container* IE.

- or the configuration requested by the en-gNB has been rejected. The MeNB shall provide information with sufficient precision in the included *Cause* IE to enable the en-gNB to know the reason for an unsuccessful reconfiguration.

Upon reception of the SGNB RECONFIGURATION COMPLETE message the en-gNB shall stop the timer T<sub>DCoverall</sub>.

# 8.7.5.3 Abnormal Conditions

Void.

# 8.7.6 MeNB initiated SgNB Modification Preparation

#### 8.7.6.1 General

This procedure is used to enable an MeNB to request an en-gNB to modify the UE context at the en-gNB, or to query the current SCG configuration for supporting delta signalling in MeNB initiated SgNB change, or to provide the S-RLF-related information to the en-gNB.

The procedure uses UE-associated signalling.

# 8.7.6.2 Successful Operation

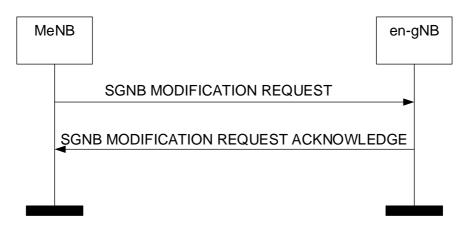


Figure 8.7.6.2-1: MeNB initiated SgNB Modification Preparation, successful operation

The MeNB initiates the procedure by sending the SGNB MODIFICATION REQUEST message to the en-gNB. When the MeNB sends the SGNB MODIFICATION REQUEST message, it shall start the timer  $T_{DCprep}$ .

The SGNB MODIFICATION REQUEST message may contain:

- within the UE Context Information IE (if the modification of the UE context at the en-gNB is requested);
  - E-RABs to be added within the E-RABs To Be Added Item IE;
  - E-RABs to be modified within the *E-RABs To Be Modified Item* IE;
  - E-RABs to be released within the *E-RABs To Be Released Item* IE;
  - the SgNB UE Aggregate Maximum Bit Rate IE;
- the MeNB to SgNB Container IE;
- the SCG Configuration Query IE;
- the MeNB Resource Coordination Information IE;
- the Requested split SRBs IE;
- the Requested split SRBs release IE;

- the Requested fast MCG recovery via SRB3 IE;
- the Requested fast MCG recovery via SRB3 Release IE.

If the SGNB MODIFICATION REQUEST message contains the *Serving PLMN* IE, the en-gNB may use it for RRM purposes.

If the SGNB MODIFICATION REQUEST message contains the Handover Restriction List IE, the en-gNB shall

- replace the previously provided Handover Restriction List by the received Handover Restriction List in the UE context;
- use this information to select an appropriate NR cell.

If the SgNB UE Aggregate Maximum Bit Rate IE is included in the SGNB MODIFICATION REQUEST message, the en-gNB shall:

- replace the previously provided SgNB UE Aggregate Maximum Bit Rate by the received SgNB UE Aggregate Maximum Bit Rate in the UE context;
- use the received SgNB UE Aggregate Maximum Bit Rate for non-GBR Bearers for the concerned UE as defined in TS 37.340 [32].

The allocation of resources according to the values of the *QCI* IE, *Allocation and Retention Priority* IE or *GBR QoS Information* IE included in the *Full E-RAB Level QoS Parameters* IE or in the *Requested SCG E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

If the SGNB MODIFICATION REQUEST message contains the *MeNB Resource Coordination Information* IE, the engNB should forward it to lower layers and it may use it for the purpose of resource coordination with the MeNB. The en-gNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The en-gNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. If the *MeNB Coordination Assistance Information* IE is contained in the *MeNB Resource Coordination Information* IE, the en-gNB shall, if supported, use the information to determine further coordination of resource utilisation between the en-gNB and the MeNB.

If at least one of the requested modifications is admitted by the en-gNB, the en-gNB shall modify the related part of the UE context accordingly and send the SGNB MODIFICATION REQUEST ACKNOWLEDGE message back to the MeNB.

The en-gNB shall include the E-RABs for which resources have been either added or modified or released at the en-gNB either in the *E-RABs Admitted To Be Added List* IE or the *E-RABs Admitted To Be Modified List* IE or the *E-RABs Admitted To Be Released List* IE. The en-gNB shall include the E-RABs that have not been admitted in the *E-RABs Not Admitted List* IE with an appropriate cause value.

For each E-RAB successfully established or modified or released in the en-gNB, the en-gNB shall report to the MeNB, in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message, the same value in the *EN-DC Resource Configuration* IE as received in the SGNB MODIFICATION REQUEST message.

The en-gNB shall, if included, choose the ciphering algorithm based on the information in the *NR UE Security Capabilities* IE and locally configured priority list of AS encryption algorithms and apply the key indicated in the *SgNB Security Key* IE as specified in the TS 33.401 [18].

For each E-RAB for which allocation of the PDCP entity is requested at the en-gNB:

- if applicable, the MeNB may propose to apply forwarding of downlink data by including the *DL Forwarding* IE within the *E-RABs To Be Added Item* IE of the SGNB MODIFICATION REQUEST message. For each E-RAB that it has decided to admit, the en-gNB may include the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs Admitted To Be Added Item* IE of the SGNB MODIFICATION REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this bearer. The MeNB may also provide for an applicable E-RAB to be released the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SGNB MODIFICATION REQUEST message.

- if applicable, the en-gNB may include for each bearer in the *E-RABs Admitted To Be Added List* IE in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message the *UL Forwarding GTP Tunnel Endpoint* IE to indicate that it requests data forwarding of uplink packets to be performed for that bearer.
- if applicable, the en-gNB may include for each bearer in the *E-RABs Admitted To Be Modified* List IE which is configured with the SN terminated split bearer option in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message the *UL Configuration* IE to indicate that the MCG UL configuration of the UE has changed.
- if applicable, the en-gNB may include for each bearer in the *E-RABs Admitted To Be Added List* IE in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message the *UL PDCP SN Length* IE and the *DL PDCP SN Length* IE to indicate the PDCP SN length for that bearer.
- If the *Bearer Type* IE for the concerned E-RAB is received by the en-gNB and is set to "non IP", then the en-gNB shall, if supported, not perform IP header compression for the concerned E-RAB.
- If the *Ethernet Type* IE for the concerned E-RAB is received by the en-gNB and is set to "True", the en-gNB shall take this into account to perform header compression appropriately for the concerned E-RAB.

For each E-RAB configured with SCG resources and the PDCP entity is hosted by the MeNB and

- requested to be modified,
  - if the SGNB MODIFICATION REQUEST message includes the *MeNB UL GTP Tunnel Endpoint at PDCP* IE in the *E-RABs To Be Modified Item* IE, the en-gNB shall act as specified in TS 37.340 [32].
  - if the SGNB MODIFICATION REQUEST message contains the *MeNB UL GTP Tunnel Endpoint at PDCP* IE the en-gNB shall use it as the new UL X2-U address.
  - the en-gNB may include in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message the *SgNB DL GTP Tunnel Endpoint at SCG* IE.

If, dependent on the configured bearer type, the *Full E-RAB Level QoS Parameters* IE or the *Maximum MCG admittable E-RAB Level QoS Parameters* IE or the *Requested SCG E-RAB level QoS Parameters* IE are included in the SGNB MODIFICATION REQUEST message for an E-RAB to be modified the en-gNB shall allocate respective resources and provide corresponding radio configuration information within the *SgNB to MeNB Container* IE as described in TS 37.340 [32].

If the SGNB MODIFICATION REQUEST message contains, for an E-RAB to be modified which is configured with the PDCP entity in the en-gNB, the *S1 UL GTP Tunnel Endpoint* IE, the en-gNB shall use it as the new UL S1-U address.

If the SGNB MODIFICATION REQUEST message contains an E-RAB to be modified which is configured with the MN terminated split bearer option, the MeNB may include the *UL Configuration* IE to indicate that the SCG UL configuration of the UE has changed.

If the SGNB MODIFICATION REQUEST message contains for an E-RAB to be modified which is configured with the PDCP enitiy in the en-gNB and MCG resources the *MeNB DL GTP Tunnel Endpoint at MCG* IE the en-gNB shall use it as the DL X2-U address.

If the SGNB MODIFICATION REQUEST message contains the *Subscriber Profile ID for RAT/Frequency Priority* IE, the en-gNB may use it for RRM purposes.

If the SGNB MODIFICATION REQUEST message contains the *Additional RRM Policy Index* IE, the en-gNB may use it for RRM purposes.

For an E-RAB to be modified which is configured with the PDCP entity in the en-gNB the en-gNB may include in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message the *S1 DL GTP Tunnel Endpoint at the SgNB* IE.

If the SGNB MODIFICATION REQUEST ACKNOWLEDGE message contains the *SgNB Resource Coordination Information* IE, the MeNB may use it for the purpose of resource coordination with the en-gNB. The MeNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The MeNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. If the *SgNB Coordination Assistance Information* IE is contained in the *SgNB Resource* 

*Coordination Information* IE, the MeNB shall, if supported, use the information to determine further coordination of resource utilisation between the en-gNB and the MeNB.

Upon reception of the SGNB MODIFICATION REQUEST ACKNOWLEDGE message the MeNB shall stop the timer T<sub>DCprep</sub>. If the SGNB MODIFICATION REQUEST ACKNOWLEDGE message has included the *SgNB to MeNB Container* IE the MeNB is then defined to have a Prepared SgNB Modification for that X2 UE-associated signalling.

If the *SCG Configuration Query* IE is included in the SGNB MODIFICATION REQUEST message, the en-gNB shall provide corresponding radio configuration information within the *SgNB to MeNB Container* IE as described in TS 37.340 [32].

If the SGNB MODIFICATION REQUEST message contains the *Requested split SRBs* IE, the en-gNB may use it to add split SRBs. If the SGNB MODIFICATION REQUEST message contains the *Requested split SRBs release* IE, the en-gNB may use it to release split SRBs.

If the *Requested Fast MCG recovery via SRB3* IE set to "true" is included in the SGNB MODIFICATION REQUEST message and the en-gNB decides to configure fast MCG link recovery via SRB3 as specified in TS 37.340 [32], the en-gNB shall, if supported, include the *Available fast MCG recovery via SRB3* IE set to "true" in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message. If the *Requested Fast MCG recovery via SRB3 Release* IE set to "true" is included in the SGNB MODIFICATION REQUEST message and the en-gNB decides to release fast MCG link recovery via SRB3, the en-gNB shall, if supported, include the *Release fast MCG recovery via SRB3* IE set to "true" in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message.

If the en-gNB receives for an E-RAB to be setup for which the PDCP entity is allocated at the MeNB the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE and the *Duplication Activation* IE in the SGNB MODIFICATION REQUEST message, it may provide the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE and the *LCID* IE to the MeNB in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message if PDCP duplication is configured at the en-gNB.

If the SGNB MODIFICATION REQUEST message contains the *RLC Status* IE, the en-gNB shall assume that RLC has been reestablished at the MeNB and may trigger PDCP data recovery.

If the en-gNB applied a full configuration or delta configuration, e.g. as part of a mobility procedure involving a change of DU, the en-gNB shall inform the MeNB by including the *RRC config indication* IE in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message.

If SGNB MODIFICATION REQUEST message contains the *UL PDCP SN Length* IE and the *DL PDCP SN Length* IE, the en-gNB shall, if supported, store this information and use it for lower layer configuration of the concerned MN terminated bearer.

If the *RLC Mode* IE is included for an E-RAB within the *E-RABs To be Added List* IE in the SGNB MODIFICATION REQUEST message, it indicates the mode that the MeNB used for the E-RAB when it was hosted at the MeNB.

If the SGNB MODIFICATION REQUEST message contains the *MeNB Cell ID* IE, the en-gNB may search for the target NR cell among the NR neighbour cells of the E-UTRAN cell indicated in *MeNB Cell ID* IE, as specified in the TS 37.340 [32].

If the SGNB MODIFICATION REQUEST ACKNOWLEDGE message contains the *RLC Status* IE, the MeNB shall assume that RLC has been reestablished at the en-gNB and may trigger PDCP data recovery.

The en-gNB may include the *Location Information at SgNB* IE in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message, if respective information is available at the en-gNB.

If the *Location Information at* en-gNB *Reporting* IE set to "pscell" is included in the SGNB MODIFICATION REQUEST, the SgNB shall start providing information about the current location of the UE. If the *Location Information at SgNB* IE is included in the SGNB MODIFICATION REQUEST ACKNOWLEDGE, the MeNB shall store the included information so that it may be transferred towards the MME.

If the *Lower Layer presence status change* IE set to "release lower layers" is included in the SGNB MODIFICATION REQUEST message, the en-gNB shall act as specified in TS 37.340 [32].

If the *Lower Layer presence status change* IE set to "re-establish lower layers" is included in the SGNB MODIFICATION REQUEST message, the en-gNB shall act as specified in TS 37.340 [32].

If the *Lower Layer presence status change* IE set to "suspend lower layers" is included in the SGNB MODIFICATION REQUEST message, the en-gNB shall act as specified in TS 37.340 [32].

If the *Lower Layer presence status change* IE set to "resume lower layers" is included in the SGNB MODIFICATION REQUEST message, the en-gNB shall act as specified in TS 37.340 [32].

If the SGNB MODIFICATION REQUEST message contains the *IAB Node Indication* IE, the en-gNB shall, if supported, consider that the request is for an IAB node.

For each requested E-RAB configured as MN-terminated split bearer/SCG bearer, if the *QoS Mapping Information* IE is contained in the *GTP Tunnel Endpoint* IE in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message, the MeNB shall, if supported, use it to set DSCP and/or flow label fields for the downlink IP packets which are transmitted from MeNB to SgNB through the GTP tunnels indicated by the *GTP Tunnel Endpoint* IE.

#### Interactions with the MeNB initiated SgNB Modification procedure:

If the en-gNB provides for an E-RAB to be setup for which the PDCP entity is allocated at the MeNB the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE and the *LCID* IE to the MeNB in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message and the MeNB has not provided the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE and the *Duplication Activation* IE in the SGNB MODIFICATION REQUEST message, the MeNB shall trigger the MeNB initiated SgNB Modification procedure to provide the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE and the *Duplication Activation* IE to the SgNB.

#### Interactions with the SgNB Reconfiguration Completion procedure:

If the en-gNB admits a modification of the UE context requiring the MeNB to report about the success of the RRC connection reconfiguration procedure, the en-gNB shall start the timer  $T_{DCoverall}$  when sending the SGNB MODIFICATION REQUEST ACKNOWLEDGE message to the MeNB. The reception of the SGNB RECONFIGURATION COMPLETE message shall stop the timer  $T_{DCoverall}$ .

#### Interaction with the Activity Notification procedure

Upon receiving an SGNB MODIFICATION REQUEST message containing the *Desired Activity Notification Level* IE, the en-gNB shall, if supported, use this information to decide whether to trigger subsequent SgNB Activity Notification procedures, or stop or modify ongoing triggering of these procedures due to a previous request.

# Interaction with the SgNB initiated SgNB Modification Preparation procedure:

If the MeNB receives the SGNB MODIFICATION REQUIRED message and the requested SN modification procedure needs further information from MeNB, the MeNB shall send SGNB MODIFICATION REQUEST message to en-gNB in response to a previously SgNB initiated SgNB Modification procedure.

# 8.7.6.3 Unsuccessful Operation



Figure 8.7.6.3-1: MeNB initiated SgNB Modification Preparation, unsuccessful operation

If the en-gNB does not admit any modification requested by the MeNB, or a failure occurs during the MeNB initiated SgNB Modification Preparation, the en-gNB shall send the SGNB MODIFICATION REQUEST REJECT message to the MeNB. The message shall contain the *Cause* IE with an appropriate value.

If the en-gNB receives a SGNB MODIFICATION REQUEST message containing the *MeNB to SgNB Container* IE that does not include required information as specified in TS 38.331 [31], the en-gNB shall send the SGNB MODIFICATION REQUEST REJECT message to the MeNB.

#### 8.7.6.4 Abnormal Conditions

If the en-gNB receives a SGNB MODIFICATION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RABs To Be Added List* IE and/or the *E-RABs To Be Modified List* IE) set to the same value, the en-gNB shall not admit the action requested for the corresponding E-RABs.

If the en-gNB receives an SGNB MODIFICATION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RAB To Be Released List* IE) set to the same value, the en-gNB shall initiate the release of one corresponding E-RAB and ignore the duplication of the instances of the selected corresponding E-RABs.

If the en-gNB receives a SGNB MODIFICATION REQUEST message containing, dependent on the configured bearer type, the *Full E-RAB Level QoS Parameters* IE or the *Requested SCG E-RAB Level QoS Parameters* IE which contains a *QCI* IE indicating a GBR bearer (as defined in TS 23.203 [13]), and which does not contain the *GBR QoS Information* IE, the en-gNB shall not admit the corresponding E-RAB.

If the supported algorithms for encryption defined in the *NR Encryption Algorithms* IE in the *NR UE Security Capabilities* IE in the *UE Context Information* IE, plus the mandated support of NEA0 in all UEs (TS 33.401 [18]), do not match any algorithms defined in the configured list of allowed encryption algorithms in the en-gNB (TS 33.401 [18]), the en-gNB shall reject the procedure using the SGNB MODIFICATION REQUEST REJECT message.

If the supported algorithms for integrity defined in the *NR Integrity Protection Algorithms* IE in the *NR UE Security Capabilities* IE in the *UE Context Information* IE do not match any algorithms defined in the configured list of allowed integrity protection algorithms in the en-gNB (TS 33.401 [18]), the en-gNB shall reject the procedure using the SGNB MODIFICATION REQUEST REJECT message.

If the timer  $T_{DCprep}$  expires before the MeNB has received the SGNB MODIFICATION REQUEST ACKNOWLEDGE message, the MeNB shall regard the MeNB initiated SgNB Modification Preparation procedure as being failed and shall release the UE Context at the en-gNB.

If the MeNB has provided the en-gNB for an E-RAB to be setupr which the PDCP entity is allocated at the MeNB the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE in the SGNB MODIFICATION REQUEST message, and the en-gNB does not provide the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE to the MeNB in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message, the MeNB shall assume that PDCP duplication was not configured at the en-gNB and releases duplication resources.

If the en-gNB provides for an E-RAB to be setup for which the PDCP entity is allocated at the MeNB the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE to the MeNB in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message and the MeNB has not provided the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE in the SGNB MODIFICATION REQUEST message, and the MeNB does not trigger the MeNB initiated SgNB Modification procedure to provide the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE to the SgNB the engNB before the SgNB Reconfigurationi Completion procedure was triggered, the en-gNB shall trigger the release of the concerned E-RAB.

## Interactions with the SgNB Reconfiguration Completion and SgNB initiated SgNB Release procedure:

If the timer  $T_{DCoverall}$  expires before the en-gNB has received the SGNB RECONFIGURATION COMPLETE or the SGNB RELEASE REQUEST message, the en-gNB shall regard the requested modification RRC connection reconfiguration as being not applied by the UE and shall trigger the SgNB initiated SgNB Release procedure.

#### Interaction with the SgNB initiated SgNB Modification Preparation procedure:

If the MeNB, after having initiated the MeNB initiated SgNB Modification procedure, receives the SGNB MODIFICATION REQUIRED message, the MeNB shall refuse the SgNB initiated SgNB Modification procedure with an appropriate cause value in the *Cause* IE.

If the MeNB has a Prepared SgNB Modification and receives the SGNB MODIFICATION REQUIRED message, the MeNB shall respond with the SGNB MODIFICATION REFUSE message to the en-gNB with an appropriate cause value in the *Cause* IE.

#### Interactions with the MeNB initiated SgNB Release procedure:

If the timer  $T_{DCprep}$  expires before the MeNB has received the SGNB MODIFICATION REQUEST ACKNOWLEDGE message, the MeNB shall regard the SgNB Modification Preparation procedure as being failed and may trigger the MeNB initiated SgNB Release procedure.

# 8.7.7 SgNB initiated SgNB Modification

#### 8.7.7.1 General

This procedure is used by the en-gNB to modify the UE context in the en-gNB.

The procedure uses UE-associated signalling.

# 8.7.7.2 Successful Operation

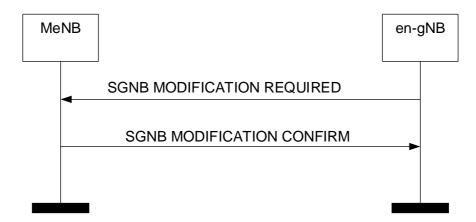


Figure 8.7.7.2-1: SgNB initiated SgNB Modification, successful operation.

The en-gNB initiates the procedure by sending the SGNB MODIFICATION REQUIRED message to the MeNB. When the en-gNB sends the SGNB MODIFICATION REQUIRED message, it shall start the timer  $T_{DCoverall}$ .

The SGNB MODIFICATION REQUIRED message may contain

- the PDCP Change Indication IE;
- the SgNB to MeNB Container IE.
- E-RABs to be modified within the E-RABs To Be Modified Item IE;
- E-RABs to be released within the E-RABs To Be Released Item IE;
- the SgNB Resource Coordination Information IE.

For the SN terminated split bearers, the en-gNB may include in the SGNB MODIFICATION REQUIRED message the *UL Configuration* IE to indicate that the MCG UL configuration of the UE has changed.

The en-gNB may include for each bearer in the *E-RABs to Be Modified List* IE in the SGNB MODIFICATION REQUIRED message the *New DRB ID Request* IE to request the MeNB to assign a new DRB ID for that bearer.

If the MeNB is able to perform the change requested by the en-gNB, the MeNB shall send the SGNB MODIFICATION CONFIRM message to the en-gNB. The SGNB MODIFICATION CONFIRM message may contain the *MeNB to SgNB Container* IE.

If the SGNB MODIFICATION REQUIRED message contains the *SgNB Resource Coordination Information* IE, the MeNB may use it for the purpose of resource coordination with the en-gNB. The MeNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The MeNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. If the *SgNB Coordination Assistance Information* IE is contained in the *SgNB Resource Coordination Information* IE, the MeNB shall, if supported, use the information to determine further coordination of resource utilisation between the en-gNB and the MeNB.

If the en-gNB applied a full configuration or delta configuration, e.g. as part of a mobility procedure involving a change of DU, the en-gNB shall inform the MeNB by including the *RRC config indication* IE in the SGNB MODIFICATION REQUIRED message.

For each E-RAB successfully modified or released as requested by the en-gNB, the MeNB shall inform the en-gNB, in the SGNB MODIFICATION CONFIRM message, the same value in the *EN-DC Resource Configuration* IE as received in the SGNB MODIFICATION REQUIRED message.

Upon reception of the SGNB MODIFICATION CONFIRM message the en-gNB shall stop the timer T<sub>DCoverall</sub>.

If the SGNB MODIFICATION CONFIRM message contains the *MeNB Resource Coordination Information* IE, the engNB should forward it to lower layers and it may use it for the purpose of resource coordination with the MeNB. The en-gNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The en-gNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. If the *MeNB Coordination Assistance Information* IE is contained in the *MeNB Resource Coordination Information* IE, the en-gNB shall, if supported, use the information to determine further coordination of resource utilisation between the en-gNB and the MeNB.

If the MeNB receives for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE in the SGNB MODIFICATION REQUIRED message, it shall provide the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE to the en-gNB in the SGNB MODIFICATION CONFIRM message. If the *LCID* IE is included in the SGNB MODIFICATION REQUIRED message, the MeNB should take it into account.

If the SGNB MODIFICATION REQUIRED message contains the *RLC Status* IE, the MeNB shall assume that RLC has been reestablished at the en-gNB and may trigger PDCP data recovery.

If the *RLC Mode* IE is included for an E-RAB within the *E-RABs To Be Released List* IE (for E-RABs hosted at the engNB) in the SGNB MODIFICATION REQUIRED message, it indicates the mode that the en-gNB used for the E-RAB when it was hosted at the en-gNB.

The MeNB shall include only E-RABs with the following IE in E-RABs Admitted To Be Modified List IE:

- the Secondary MeNB UL GTP Tunnel Endpoint at PDCP IE.

If the *Location Information at SgNB* IE is included in the SGNB MODIFICATION REQUIRED, the MeNB shall store the included information so that it may be transferred towards the MME.

#### Interaction with the MeNB initiated SgNB Modification Preparation procedure:

If applicable, as specified in TS 37.340 [32], the en-gNB may receive, after having initiated the SgNB initiated SgNB Modification procedure, the SGNB MODIFICATION REQUEST message including the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released List* IE.

If applicable, as specified in TS 37.340 [32], the en-gNB may receive, after having initiated the SgNB initiated SgNB Modification procedure, the SGNB MODIFICATION REQUEST message including the *SgNB Security Key* IE within the *UE Context Information* IE.

If applicable, as specified in TS 37.340 [32], the en-gNB may receive, after having initiated the SgNB initiated SgNB Modification procedure, the SGNB MODIFICATION REQUEST message including the *measGapConfig* IE as defined in TS 38.331 [31] within the *MeNB to SgNB Container* IE.

The en-gNB may receive, after having initiated the SgNB initiated SgNB modification procedure including the *New DRB ID Request* IE for an SN terminated bearer within the *E-RABs To Be Modified List* IE, the SGNB MODIFICATION REQUEST message to release and add the same bearer with a new DRB ID or with the same DRB ID but together with the *SgNB Security Key* IE within the *UE Context Information* IE.

The en-gNB may receive, after having initiated the SgNB initiated SgNB modification procedure, the SGNB MODIFICATION REQUEST message including the *SN triggered* IE.

# 8.7.7.3 Unsuccessful Operation

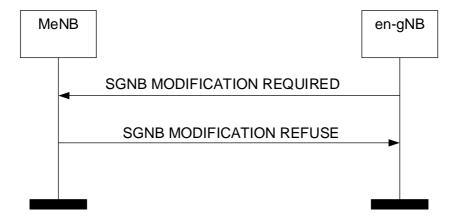


Figure 8.7.7.3-1: SgNB initiated SgNB Modification, unsuccessful operation.

In case the requested modification cannot be performed successfully the MeNB shall respond with the SGNB MODIFICATION REFUSE message to the en-gNB with an appropriate cause value in the *Cause* IE.

The MeNB may also provide configuration information in the MeNB to SgNB Container IE.

#### 8.7.7.4 Abnormal Conditions

If the timer T<sub>DCoverall</sub> expires before the en-gNB has received the SGNB MODIFICATION CONFIRM or the SGNB MODIFICATION REFUSE message, the en-gNB shall regard the requested modification as failed and may take further actions like triggering the SgNB initiated SgNB Release procedure to release all en-gNB resources allocated for the UE.

If the value received in the *E-RAB ID* IE of any of the *E-RABs To Be Released Items* IE is not known at the MeNB, the MeNB shall regard the procedure as failed and may take appropriate actions like triggering the MeNB initiated SgNB Release procedure.

If the en-gNB does not receives for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary MeNB UL GTP Tunnel Endpoint at PDCP* IE to the en-gNB in the SGNB MODIFICATION CONFIRM message although the *Secondary SgNB DL GTP Tunnel Endpoint at SCG* IE was provided to the MeNB in the SGNB MODIFICATION REQUIRED message, it shall assume the setup of the secondary X2-U bearer as being failed.

#### Interaction with the MeNB initiated SgNB Modification Preparation procedure:

If the en-gNB, after having initiated the SgNB initiated SgNB Modification procedure, receives the SGNB MODIFICATION REQUEST message including other IEs than an applicable *SgNB Security Key* IE and/or applicable forwarding addresses or applicable measurement gap pattern or information applicable to release and add the same bearer with different DRB ID and/or the *SN triggered* IE set to "True", the en-gNB shall

- regard the SgNB initiated SgNB Modification Procedure as being failed;
- stop the T<sub>DCoverall</sub>, which was started to supervise the SgNB initiated SgNB Modification procedure;
- be prepared to receive the SGNB MODIFICATION REFUSE message from the MeNB and;
- continue with the MeNB initiated SgNB Modification Preparation procedure as specified in section 8.7.6.

#### Interaction with the MeNB initiated handover procedure:

If the MeNB, after having initiated the handover procedure, receives the SGNB MODIFICATION REQUIRED message, the MeNB shall refuse the SgNB modification procedure with an appropriate cause value in the *Cause* IE.

# 8.7.8 SgNB Change

#### 8.7.8.1 General

This procedure is used by the en-gNB to change to another en-gNB.

The procedure uses UE-associated signalling.

### 8.7.8.2 Successful Operation



Figure 8.7.8.2-1: SgNB Change, successful operation.

The en-gNB initiates the procedure by sending the SGNB CHANGE REQUIRED message to the MeNB including the *Target SgNB ID Information IE*. When the en-gNB sends the SGNB CHANGE REQUIRED message, it shall start the timer T<sub>DCoverall</sub>.

The SGNB CHANGE REQUIRED message may contain

- the SgNB to MeNB Container IE.

If the MeNB is able to perform the change requested by the en-gNB, the MeNB shall send the SGNB CHANGE CONFIRM message to the en-gNB. For each E-RAB configured with the PDCP entity in the en-gNB, the MeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE to indicate that it requests data forwarding of uplink and downlink packets to be performed for that bearer.

The en-gNB may start data forwarding and stop providing user data to the UE and shall stop the timer  $T_{DCoverall}$  upon reception of the SGNB CHANGE CONFIRM message.

# 8.7.8.3 Unsuccessful Operation



Figure 8.7.8.3-1: SgNB Change, unsuccessful operation.

In case the request change cannot be performed successfully the MeNB shall respond with the SGNB CHANGE REFUSE message to the en-gNB with an appropriate cause value in the *Cause* IE.

#### 8.7.8.4 Abnormal Conditions

If the timer  $T_{DCoverall}$  expires before the en-gNB has received the SGNB CHANGE CONFIRM or the SGNB CHANGE REFUSE message, the en-gNB shall regard the requested change as failed and may take further actions like triggering the SgNB initiated SgNB Release procedure to release all en-gNB resources allocated for the UE.

#### Interaction with the MeNB initiated handover procedure:

If the MeNB, after having initiated the handover procedure, receives the SGNB CHANGE REQUIRED message, the MeNB shall refuse the SgNB change procedure with an appropriate cause value in the Cause IE.

# 8.7.9 MeNB initiated SgNB Release

#### 8.7.9.1 General

The MeNB initiated SgNB Release procedure is triggered by the MeNB to initiate the release of the resources for a specific UE.

The procedure uses UE-associated signalling.

# 8.7.9.2 Successful Operation



Figure 8.7.9.2-1: MeNB initiated SgNB Release, successful operation

The MeNB initiates the procedure by sending the SGNB RELEASE REQUEST message. Upon reception of the SGNB RELEASE REQUEST message the en-gNB shall stop providing user data to the UE. The *SgNB UE X2AP ID* IE shall be included if it has been obtained from the en-gNB.

If the bearer context in the en-gNB was configured with the PDCP entity in the en-gNB, for E-RAB for which the MeNB requests forwarding of uplink/downlink data, the MeNB includes the *UL Forwarding GTP Tunnel Endpoint/DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SGNB RELEASE REQUEST message to indicate that the en-gNB should perform data forwarding of uplink/downlink packets for that E-RAB.

Upon reception of the SGNB RELEASE REQUEST message containing *UE Context Kept Indicator* IE set to "True", the en-gNB shall, if supported, only initiate the release of the resources related to the UE-associated signalling connection between the MeNB and the en-gNB.

If the en-gNB confirms the request to release en-gNB resources it shall send the SGNB RELEASE REQUEST ACKNOWLEDGE message to the MeNB.

If the *RLC Mode* IE is included for an E-RAB within the *E-RABs Admitted To Be Released List* IE (for E-RABs hosted at the en-gNB) in the SGNB RELEASE REQUEST ACKNOWLEDGE message, it indicates the mode that the en-gNB used for the E-RAB when it was hosted at the en-gNB.

If the MeNB did not include the *SgNB UE X2AP ID* IE in the SGNB RELEASE REQUEST message, the MeNB shall ignore the *SgNB UE X2AP ID* IE in the SGNB RELEASE REQUEST ACKNOWLEDGE message.

Upon successful completion of the procedure, the MeNB shall start counting time, so that information regarding time since Secondary Node Release may be transferred towards the MME as specified in TS 36.413 [4].

### **Interaction with SN Status Transfer procedure:**

If the *UE Context Kept Indicator* IE set to "True" and the *E-RABs transferred to MeNB* IE are included in the SGNB RELEASE REQUEST message, then the en-gNB shall, if supported, include the uplink/downlink PDCP SN and HFN status for the listed E-RABs, as specified in TS 37.340 [32].

# 8.7.9.3 Unsuccessful Operation

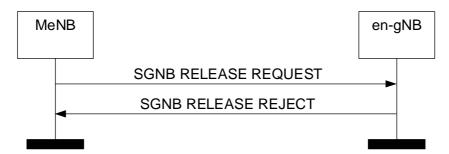


Figure 8.7.9.3-1: MeNB initiated SgNB Release, unsuccessful operation

If the en-gNB cannot confirm the request to release en-gNB resources it shall send the SGNB RELEASE REQUEST REJECT message to the MeNB with an appropriate cause indicated in the *Cause* IE.

If the MeNB did not include the *SgNB UE X2AP ID* IE in the SGNB RELEASE REQUEST message, the MeNB shall ignore the *SgNB UE X2AP ID* IE in the SGNB RELEASE REQUEST REJECT message.

#### 8.7.9.4 Abnormal Conditions

If the SGNB RELEASE REQUEST message refer to a context that does not exist, the en-gNB shall ignore the message.

When the MeNB has initiated the procedure and did not include the *SgNB UE X2AP ID* IE the MeNB shall regard the resources for the UE at the en-gNB as being fully released.

#### **Interactions with the UE Context Release procedure:**

If the MeNB does not receive the reply from the en-gNB before it has to relase the EN-DC connection, or it receives SGNB RELEASE REQUEST REJECT, it may trigger the UE Context Release procedure. If the en-gNB received the UE CONTEXT RELEASE right after receiving the SGNB RELEASE REQUEST (and before or after responding to it), the en-gNB shall consider the related MeNB initiated SgNB Release procedure as being the resolution of abnormal conditions and release the related UE context immediately.

# 8.7.10 SgNB initiated SgNB Release

#### 8.7.10.1 General

This procedure is triggered by the en-gNB to initiate the release of the resources for a specific UE.

# 8.7.10.2 Successful Operation



Figure 8.7.10.2-1: SgNB initiated SgNB Release, successful operation.

The en-gNB initiates the procedure by sending the SGNB RELEASE REQUIRED message to the MeNB.

Upon reception of the SGNB RELEASE REQUIRED message, the MeNB replies with the SGNB RELEASE CONFIRM message. For each E-RAB configured with the PDCP entity in the en-gNB, the MeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE to indicate that it requests data forwarding of uplink and downlink packets to be performed for that bearer.

If the *RLC Mode* IE is included for an E-RAB within the *E-RABs To Be Released List* IE (for E-RABs hosted at the engNB) in the SGNB RELEASE REQUIRED message, it indicates the mode that the en-gNB used for the E-RAB when it was hosted at the en-gNB.

If the *SgNB to MeNB Container* IE is included in the SGNB RELEASE REQUIRED message, the MeNB may use the contained information to apply delta configuration.

The en-gNB may start data forwarding and stop providing user data to the UE upon reception of the SGNB RELEASE CONFIRM message.

Upon successful completion of the procedure, the MeNB shall start counting time, so that information regarding time since Secondary Node Release may be transferred towards the MME as specified in TS 36.413 [4].

# 8.7.10.3 Unsuccessful Operation

Not applicable.

# 8.7.10.4 Abnormal Conditions

Void.

# 8.7.11 SgNB Counter Check

## 8.7.11.1 General

This procedure is initiated by the en-gNB to request the MeNB to execute a counter check procedure to verify the value of the PDCP COUNTs associated with SN terminated bearers.

# 8.7.11.2 Successful Operation



Figure 8.7.11.2-1: SgNB Counter Check procedure, successful operation.

The en-gNB initiates the procedure by sending the SGNB COUNTER CHECK REQUEST message to the MeNB.

Upon reception of the SGNB COUNTER CHECK REQUEST message, the MeNB may perform the RRC counter check procedure as defined in TS 33.401 [18].

## 8.7.11.3 Unsuccessful Operation

Not applicable.

## 8.7.11.4 Abnormal Conditions

Not applicable.

# 8.7.12 RRC Transfer

### 8.7.12.1 General

The purpose of the RRC Transfer procedure is to deliver a PDCP-C PDU encapsulating an LTE RRC message to the en-gNB so that it may then be forwarded to the UE, or from the en-gNB, if it was received from the UE. Delivery status may also be provided from the en-gNB to the MeNB using the RRC Transfer.

The procedure is also to enable transfer of the NR RRC message container with the NR measurements from the MeNB to the en-gNB, when received from the UE.

The procedure is also to enable transfer of the NR RRC message container with the NR failure information from the MeNB to the en-gNB, when received from the UE.

The procedure is also used to enable transfer of the NR RRC message container with an IAB information from the MeNB to the en-gNB, when received from the IAB-MT.

The procedure is also to enable transfer of the NR RRC message container with the NR RRCReconfigurationComplete message from the MeNB to the en-gNB, when received from the UE.

The procedure is also to enable transfer of the NR RRC message container with the UE Assistance information from the MeNB to the en-gNB, when received from the UE.

# 8.7.12.2 Successful Operation



Figure 8.7.12.2-1: RRC Transfer procedure, successful operation.

Either the MeNB initiates the procedure by sending the RRC TRANSFER message to the en-gNB initiates the procedure by sending the RRC TRANSFER message to the MeNB.

If the en-gNB receives an RRC TRANSFER message which does not include the *RRC Container* IE in the *Split SRB* IE, or the *RRC container* IE in *NR UE Report* IE, or the *RRC Container* IE in the *Fast MCG Recovery via SRB3 from MN to SN* IE, or the *RRC Container* IE in the *Fast MCG Recovery via SRB3 from SN to MN* IE, it shall ignore the message. If the en-gNB receives an RRC TRANSFER message with the Delivery Status IE, it shall ignore the message. If the en-gNB receives the *RRC Container* IE in the *Split SRB* IE, it shall deliver the contained PDCP-C PDU encapsulating an RRC message to the UE. If the en-gNB receives the *RRC Container* IE in the *Fast MCG Recovery from MeNB to SgNB* IE, the en-gNB shall, if supported, deliver the contained RRC Container encapsulating an RRC message to the UE.

If the MeNB receives the *Delivery Status* IE in the *split SRB* IE the MeNB shall consider RRC messages up to the indicated NR PDCP SN as having been successfully delivered (as defined in TS 36.322 [40]) to the UE by the en-gNB. If the MeNB receives the *RRC Container* IE in the *Fast MCG Recovery from SgNB to MeNB* IE, the MeNB shall, if supported, consider MCG link failure detected at the UE as specified in TS 37.340 [32].

#### 8.7.12.3 Abnormal Conditions

In case of the split SRBs, the receiving node may ignore the message, if the MeNB has not indicated possibility of RRC transfer at the bearer setup.

# 8.7.13 Secondary RAT Data Usage Report

## 8.7.13.1 General

This procedure is initiated by the en-gNB to report secondary RAT data volume.

The procedure uses UE-associated signalling.

### 8.7.13.2 Successful Operation



Figure 8.7.13.2-1: Secondary RAT Data Usage Report procedure, successful operation.

The en-gNB initiates the procedure by sending the SECONDARY RAT DATA USAGE REPORT message to the MeNB.

# 8.7.13.3 Unsuccessful Operation

Not applicable.

### 8.7.13.4 Abnormal Conditions

Not applicable.

# 8.7.14 Partial reset of EN-DC

#### 8.7.14.1 General

This procedure is triggered by the en-gNB or the MeNB to initiate the reset of the resources for selected UEs.

The procedure uses non UE-associated signalling.

# 8.7.14.2 Successful Operation

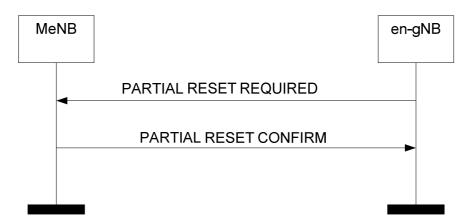


Figure 8.7.14.2-1: en-gNB initiated Partial Reset of EN-DC, successful operation.

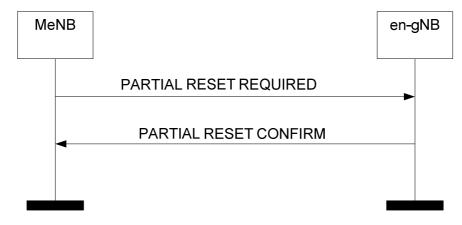


Figure 8.7.14.2-2: eNB initiated Partial Reset of EN-DC, successful operation.

The en-gNB or MeNB initiates the procedure by sending the PARTIAL RESET REQUIRED message to the MeNB or the en-gNB.

In case of the eNB-initiated Partial Reset, at reception of the PARTIAL RESET REQUIRED message, the en-gNB node shall release all allocated resources on X2 and Uu related to the UE association(s) indicated in the PARTIAL RESET REQUIRED message and remove the indicated UE contexts including X2AP ID.

In case of the en-gNB-initiated Partial Reset, at reception of the PARTIAL RESET REQUIRED message, the MeNB may decide to release all allocated resources on X2 and Uu related to the UE association(s) indicated in the PARTIAL RESET REQUIRED message and remove the indicated UE contexts including X2AP ID, or to reconfigure the UEs for MN-terminated MCG bearers.

After the receiving node has released or reconfigured all assigned X2 resources and the UE X2AP IDs for all indicated UE associations which can be used for new UE-associated logical X2-connections over the X2 interface, the receiving node shall respond with the PARTIAL RESET CONFIRM message. The node receiving the request does not need to wait for the release or reconfiguration of radio resources to be completed before returning the PARTIAL RESET CONFIRM message.

The node initiating the procedure shall include the *SgNB UE X2AP ID* IE in the PARTIAL RESET REQUIRED message if it has already been allocated for the UE. The node receiving the request shall use the *SgNB UE X2AP ID* IE (if included) and/or the *MeNB UE S1AP ID* IE (and the *MeNB UE S1AP ID Extension* IE, if included) to identify the UE association(s) to be released. If the *SgNB UE X2AP ID* IE was included in the PARTIAL RESET REQUIRED message, the receiving node shall include it also in the PARTIAL RESET CONFIRM message.

The node receiving the request shall include in the PARTIAL RESET CONFIRM message, for each UE association to be released, the same list of UE-associated logical X2-connections over X2. The list shall be in the same order as received in the PARTIAL RESET REQUIRED message and shall include also unknown UE-associated logical X2-connections.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the PARTIAL RESET REQUIRED message and the PARTIAL RESET CONFIRM message shall contain the *Interface Instance Indication* IE to identify the corresponding interface instance.

#### Interactions with other procedures:

If the PARTIAL RESET REQUIRED message is received, any other ongoing procedure (except for a Reset or another Partial Reset of EN-DC procedures) on the same X2 interface related to a UE association, indicated in the PARTIAL RESET REQUIRED message, shall be aborted.

#### 8.7.14.3 Unsuccessful Operation

Not applicable.

# 8.7.14.4 Abnormal Conditions

Void.

# 8.7.15 E-UTRA – NR Cell Resource Coordination

#### 8.7.15.1 General

The purpose of the E-UTRA – NR Cell Resource Coordination procedure is to enable coordination of radio resource allocation between an eNB and an en-gNB that are sharing spectrum and whose coverage areas are fully or partially overlapping. During the procedure, the eNB and en-gNB shall exchange their intended resource allocations for data traffic, and, if possible, converge to a shared resource. The procedure is only to be used for the purpose of E-UTRA – NR spectrum sharing.

# 8.7.15.2 Successful Operation

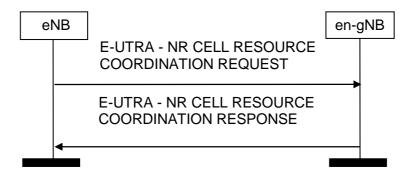


Figure 8.7.15.2-1: eNB-initiated E-UTRA – NR Cell Resource Coordination request, successful operation

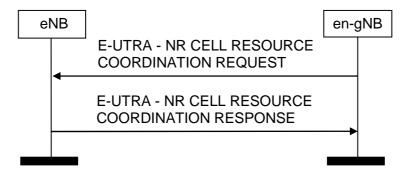


Figure 8.7.15.2-2: en-gNB-initiated E-UTRA – NR Cell Resource Coordination request, successful operation

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the E-UTRA – NR CELL RESOURCES COORDINATION REQUEST message and the E-UTRA – NR CELL RESOURCES COORDINATION RESPONSE message shall contain the *Interface Instance Indication* IE to identify the corresponding interface instance.

#### eNB initiated E-UTRA - NR Cell Resource Coordination:

An eNB initiates the procedure by sending the E-UTRA – NR CELL RESOURCE COORDINATION REQUEST message to an en-gNB over the X2 interface. The en-gNB extracts the *Data Traffic Resource Indication* IE and it replies by sending the E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE message. The en-gNB shall calculate the full eNB resource allocation by combining the *Data Traffic Resource Indication* IE and the *Protected E-UTRA Resource Indication* IE that were most recently received from the eNB.

In case of conflict between the most recently received *Data Traffic Resource Indication* IE and the most recently received *Protected E-UTRA Resource Indication* IE, the en-gNB shall give priority to the *Protected E-UTRA Resource Indication* IE.

If the *Initiating Node Type* is eNB, then the E-UTRA – NR CELL RESOURCE COORDINATION REQUEST message shall contain at least one *EUTRA Cell ID* in the List of E-UTRA Cells in NR Coordination Request. If the *Initiating Node Type* is en-gNB, then the E-UTRA – NR CELL RESOURCE COORDINATION REQUEST message shall contain at least one NR-Cell ID in the List of NR Cells in NR Coordination Request.

# en-gNB initiated E-UTRA – NR Cell Resource Coordination:

An en-gNB initiates the procedure by sending the E-UTRA – NR CELL RESOURCE COORDINATION REQUEST message to an eNB. The eNB replies with the E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE message. The en-gNB shall calculate the full eNB resource allocation by combining the *Data Traffic Resource Indication* IE and the *Protected E-UTRA Resource Indication* IE that were most recently received from the eNB.

In case of conflict between the most recently received *Data Traffic Resource Indication* IE and the most recently received *Protected E-UTRA Resource Indication* IE, the en-gNB shall give priority to the *Protected E-UTRA Resource Indication* IE.

# 8.7.16 SgNB Activity Notification

#### 8.7.16.1 General

The purpose of the SgNB Activity Notification procedure is to allow an en-gNB to send a notification to an eNB concerning user data traffic activity of already established E-RABs. The procedure uses UE-associated signalling.

# 8.7.16.2 Successful Operation



Figure 8.7.16.2-1: Activity Notification procedure, successful operation

The en-gNB initiates the procedure by sending an SGNB ACTIVITY NOTIFICATION message to the MeNB.

The SGNB ACTIVITY NOTIFICATION message may contain notification for UE context level user plane activity in the UE Context level user plane activity report IE.

The SGNB ACTIVITY NOTIFICATION message may contain notification for activity of E-RABs.

### 8.7.16.3 Abnormal Conditions

Void.

# 8.7.17 gNB Status Indication

#### 8.7.17.1 General

The purpose of the gNB Status Indication procedure is to inform the eNB that the en-gNB is overloaded so that overload reduction actions can be applied. The procedure uses non-UE associated signalling.

# 8.7.17.2 Successful Operation



Figure 8.7.17.2-1: gNB Status Indiciation procedure, successful operation

If the *gNB Overload Information* IE in the GNB STATUS INDICATION message is set to "overloaded", the eNB shall apply overload reduction actions until it receives a subsequent GNB STATUS INDICATION message with *gNB Overload Information* IE set to "not-overloaded".

The detailed overload reduction policy is up to eNB implementation.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the GNB STATUS INDICATION message shall contain the *Interface Instance Indication* IE to identify the corresponding interface instance.

### 8.7.17.3 Abnormal Conditions

Void.

# 8.7.18 EN-DC Configuration Transfer

#### 8.7.18.1 General

The purpose of the EN-DC Configuration Transfer procedure is to transfer the EN-DC SON Configuration container, either from the eNB to the en-gNB or from the en-gNB to the eNB, in the context of en-gNB X2 TNL address discovery as described in TS 36.300 [15].

The procedure uses non UE-associated signalling.

# 8.7.18.2 Successful Operation



Figure 8.7.18.2-1: eNB initiated EN-DC Configuration Transfer, successful operation

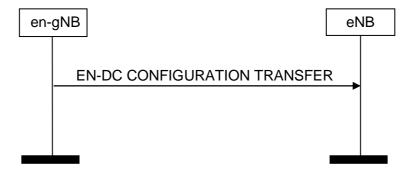


Figure 8.7.18.2-2: en-gNB initiated EN-DC Configuration Transfer, successful operation

The eNB initiates the procedure by sending the EN-DC CONFIGURATION TRANSFER message to an en-gNB.

If the en-gNB receives, in the *EN-DC SON Configuration Transfer* IE, the *SON Information* IE containing the *SON Information Request* IE, it may transfer back the requested information towards the eNB indicated in the *Source eNB-ID* IE of the *EN-DC SON Configuration Transfer* IE by initiating the EN-DC Configuration Transfer procedure.

If the en-gNB receives, in the *EN-DC SON Configuration Transfer* IE, the *X2 TNL Configuration Info* IE containing the *eNB X2 Extended Transport Layer Addresses* IE, it may use it as part of its ACL functionality configuration actions, if such ACL functionality is deployed.

In case the *IP-Sec Transport Layer Addresss* IE is present and the *GTP Transport Layer Addresses* IE within the *eNB X2 Extended Transport Layer Addresses* IE is not empty, GTP traffic is conveyed within an IP-Sec tunnel terminated at the IP-Sec tunnel end point given in by the *IP-Sec Transport Layer Address* IE.

In case the *IP-Sec Transport Layer Address* IE is not present, GTP traffic is terminated at the end points given by the list of addresses in *eNB GTP Transport Layer Addresses* IE within the *eNB X2 Extended Transport Layer Addresses* IE.

In case the *eNB GTP Transport Layer Addresses* IE is empty and the *IP-Sec Transport Layer Address* IE is present, SCTP traffic is conveyed within an IP-Sec tunnel terminated at the IP-Sec tunnel end point given in the *IP-Sec Transport Layer Address* IE, within the *eNB X2 Extended Transport Layer Addresses* IE.

If the en-gNB is configured to use one IPsec tunnel for EN-DC X2 traffic (IPsec star topology) then the traffic to the peer eNB shall be routed through this IPsec tunnel and the *IP-Sec Transport Layer Address* IE shall be ignored.

The en-gNB initiates the procedure by sending the EN-DC CONFIGURATION TRANSFER message to an eNB.

If case of network sharing with multiple cell ID broadcast with shared X2-C signalling transport, as specified in TS 36.300 [15], the EN-DC CONFIGURATION TRANSFER message shall contain the *Interface Instance Indication* IE to identify the corresponding interface instance.

#### 8.7.18.3 Abnormal Conditions

Void.

#### 8.7.19 Trace Start

#### 8.7.19.1 General

The purpose of the Trace Start procedure is to allow the MeNB to request the en-gNB to initiate a trace session for a UE. The procedure uses UE-associated signalling.

#### 8.7.19.2 Successful Operation



Figure 8.7.19.2-1: Trace Start, successful operation

The Trace Start procedure is initiated by the MeNB sending the TRACE START message to the en-gNB for that specific UE. Upon reception of the TRACE START message, the en-gNB shall initiate the requested trace session as described in TS 32.422 [6]. If the *Trace Activation* IE includes the *MDT Configuration NR* IE, the en-gNB shall take it into account for MDT function as described in TS 37.320 [31].

#### 8.7.19.3 Abnormal Conditions

Void.

#### 8.7.20 Deactivate Trace

#### 8.7.20.1 General

The purpose of the Deactivate Trace procedure is to allow the MeNB to request the en-gNB to stop the trace session for the indicated trace reference. The procedure uses UE-associated signalling.

### 8.7.20.2 Successful Operation



Figure 8.7.20.2-1: Deactivate Trace, successful opration

The Deactivate Trace procedure is initiated by the MeNB by sending the DEACTIVATE TRACE to the en-gNB for that specific UE. Upon reception of the DEACTIVATE TRACE message, the en-gNB shall stop the trace session for the indicated trace reference in the *E-UTRAN Trace ID* IE.

#### 8.7.20.3 Abnormal Conditions

Void.

# 8.7.21 EN-DC Resource Status Reporting Initiation

#### 8.7.21.1 General

This procedure is used by the eNB to request the reporting of load measurements to the en-gNB.

The procedure uses non UE-associated signalling.

#### 8.7.21.2 Successful Operation

#### 8.7.21.2.1 Successful Operation - eNB-initiated

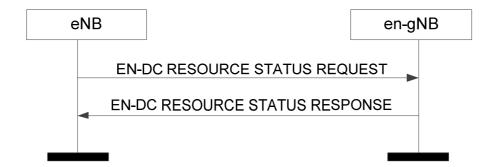


Figure 8.7.21.2-1: EN-DC Resource Status Reporting Initiation, successful operation - eNB-initiated

The procedure is initiated with an EN-DC RESOURCE STATUS REQUEST message sent from the eNB to the en-gNB to start a measurement, stop a measurement, add cells to report for a measurement.

If the *Report Characteristics EN-DC* IE is included in the EN-DC RESOURCE STATUS REQUEST message and indicates cell specific measurements, the *NR Cell To Report EN-DC List* IE shall be included.

Upon receipt of the EN-DC RESOURCE STATUS REQUEST message, the en-gNB:

- shall initiate the requested measurement according to the parameters given in the request in case the *Registration Request EN-DC* IE set to "start"; or
- shall stop all cells measurements and terminate the reporting in case the *Registration Request EN-DC* IE is set to "stop"; or
- shall add cells indicated in the *NR Cell To Report EN-DC List* IE list to the measurements initiated before for the given measurement IDs, in case the *Registration Request EN-DC* IE is set to "add". If measurements are already initiated for a cell indicated in the *NR Cell To Report EN-DC List* IE, this information shall be ignored.

The en-gNB shall send an EN-DC RESOURCE STATUS RESPONSE message to the eNB to indicate that all of the requested measurement objects the measurement can be initiated.

#### **Interaction with other procedures**

When starting a measurement, the *Report Characteristics EN-DC* IE in the EN-DC RESOURCE STATUS REQUEST indicates the type of objects en-gNB shall perform measurements on. For each cell, the en-gNB shall include in the EN-DC RESOURCE STATUS UPDATE message:

- the NR Radio Resource Status IE, if the first bit, "PRB Periodic" of the Report Characteristics EN-DC IE included in the EN-DC RESOURCE STATUS REQUEST message is set to "1". If the cell for which NR Radio Resource Status IE is requested to be reported supports more than one SSB, the NR Radio Resource Status IE for such cell shall include the SSB Area Radio Resource Status Item IE for all SSB areas supported by the cell. If the SSB To Report List IE is included for a cell, the NR Radio Resource Status IE for such cell shall include the requested SSB Area Radio Resource Status List IE.
- the *TNL Capacity Indicator* IE, if the second bit, "TNL Capacity Ind Periodic" of the *Report Characteristics EN-DC* IE included in the EN-DC RESOURCE STATUS REQUEST message is set to "1". The received *TNL Capacity Indicator* IE represents the lowest TNL capacity available for the cell.
- the NR Composite Available Capacity Group IE, if the third bit, "Composite Available Capacity Periodic" of the Report Characteristics EN-DC IE included in the EN-DC RESOURCE STATUS REQUEST message is set to "1". If Cell Capacity Class Value IE is included within the NR Composite Available Capacity Group IE, this IE is used to assign weights to the available capacity indicated in the Capacity Value IE. If the cell for which NR Composite Available Capacity Group IE is requested to be reported supports more than one SSB, and if the SSB To Report List IE is included for a cell, the NR Composite Available Capacity Group IE for such cell shall include the requested SSB Area Capacity Value List IE, providing the SSB area capacity with respect to the Cell Capacity Class Value.

If the *Reporting Periodicity EN-DC* IE in the EN-DC RESOURCE STATUS REQUEST is present, this indicates the periodicity for the reporting of periodic measurements. The en-gNB shall only report more than once if the *Reporting Periodicity EN-DC* IE is included.

#### 8.7.21.2.2 Successful Operation - en-gNB-initiated

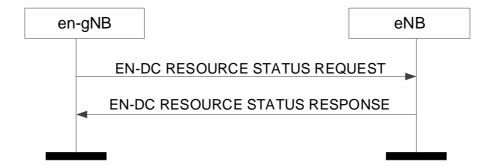


Figure 8.7.21.2-2: EN-DC Resource Status Reporting Initiation, successful operation - en-gNB-initiated

The procedure is initiated with an EN-DC RESOURCE STATUS REQUEST message sent from the en-gNB to the eNB to start a measurement, stop a measurement, add cells to report for a measurement.

If the *Report Characteristics EN-DC* IE is included in the EN-DC RESOURCE STATUS REQUEST message and indicates cell specific measurements, the *E-UTRA Cell To Report EN-DC List* IE shall be included.

Upon receipt of the EN-DC RESOURCE STATUS REQUEST message, the eNB:

- shall initiate the requested measurement according to the parameters given in the request in case the *Registration Request EN-DC* IE set to "start"; or
- shall stop all cells measurements and terminate the reporting in case the *Registration Request EN-DC* IE is set to "stop"; or
- shall add cells indicated in the *E-UTRA Cell To Report EN-DC List* IE list to the measurements initiated before for the given measurement IDs, in case the *Registration Request EN-DC* IE is set to "add". If measurements are already initiated for a cell indicated in the *E-UTRA Cell To Report EN-DC List* IE, this information shall be ignored. The eNB shall ignore the *E-UTRA Cell To Report EN-DC List* IE, if included.

The eNB shall send an EN-DC RESOURCE STATUS RESPONSE message to the en-gNB to indicate that all of the requested measurement objects the measurement can be initiated.

#### Interaction with other procedures, en-gNB-initiated operation

When starting a measurement, the *Report Characteristics EN-DC* IE in the EN-DC RESOURCE STATUS REQUEST indicates the type of objects eNB shall perform measurements on. For each cell, the eNB shall include in the EN-DC RESOURCE STATUS UPDATE message:

- the *Radio Resource Status* IE, if the first bit, "PRB Periodic" of the *Report Characteristics EN-DC* IE included in the RESOURCE STATUS REQUEST message is set to "1";
- the S1 TNL Load Indicator IE, if the second bit, "TNL Load Ind Periodic" of the Report Characteristics EN-DC IE included in the RESOURCE STATUS REQUEST message is set to "1";
- the *Hardware Load Indicator* IE, if the third bit, "HW Load Ind Periodic" of the *Report Characteristics EN-DC* IE included in the RESOURCE STATUS REQUEST message is set to "1";
- the *Composite Available Capacity Group* IE, if the fourth bit, "Composite Available Capacity Periodic" of the *Report Characteristics EN-DC* IE included in the RESOURCE STATUS REQUEST message is set to "1". If the *Cell Capacity Class Value* IE is included within the *Composite Available Capacity Group* IE, this IE is used to assign weights to the available capacity indicated in the *Capacity Value* IE;

If the *Reporting Periodicity EN-DC* IE in the EN-DC RESOURCE STATUS REQUEST is present, this indicates the periodicity for the reporting of periodic measurements. The eNB shall only report more than once if the *Reporting Periodicity EN-DC* IE is included.

#### 8.7.21.3 Unsuccessful Operation

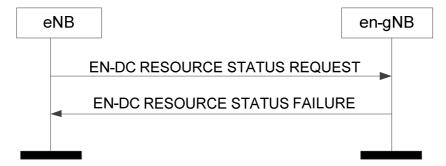


Figure 8.7.21.3-1: EN-DC Resource Status Reporting Initiation, unsuccessful operation - eNB-initiated

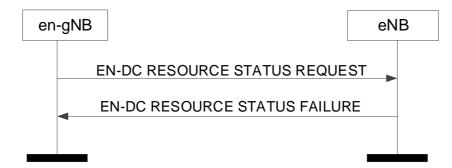


Figure 8.7.21.3-2: EN-DC Resource Status Reporting Initiation, unsuccessful operation - en-gNB-initiated

If any of the requested measurements cannot be initiated, the en-gNB or the eNB shall send an EN-DC RESOURCE STATUS FAILURE message.

#### 8.7.21.4 Abnormal Conditions

Void.

# 8.7.22 EN-DC Resource Status Reporting

#### 8.7.22.1 General

This procedure is initiated by the en-gNB or by the eNB to report the result of measurements admitted by the en-gNB or by the eNB following a successful EN-DC Resource Status Reporting Initiation procedure.

The procedure uses non UE-associated signalling.

### 8.7.22.2 Successful Operation



Figure 8.7.22.2-1: EN-DC Resource Status Reporting, successful operation - en-gNB-initiated



Figure 8.7.22.2-2: EN-DC Resource Status Reporting, successful operation - eNB-initiated

The en-gNB or the eNB shall report the results of the admitted measurements in the EN-DC RESOURCE STATUS UPDATE message. The admitted measurements are the measurements that were successfully initiated during the preceding EN-DC Resource Status Reporting Initiation procedure.

#### 8.7.22.3 Unsuccessful Operation

Not applicable.

#### 8.7.22.4 Abnormal Conditions

Void.

#### 8.7.23 Cell Traffic Trace

#### 8.7.23.1 General

The purpose of the Cell Traffic Trace procedure is to send the allocated Trace Recording Session Reference and the Trace Reference to the MeNB. The procedure uses UE-associated signalling.

#### 8.7.23.2 Successful Operation



Figure 8.7.23.2-1: Cell Traffic Trace procedure. Successful operation.

The procedure is initiated with a CELL TRAFFIC TRACE message sent from the en-gNB to the MeNB.

If the *Privacy Indicator* IE is included in the message, the MeNB shall take the information into account for anonymisation of MDT data as specified in TS 32.422 [6].

# 8.7.24 UE Radio Capability ID Mapping

#### 8.7.24.1 General

The purpose of the UE Radio Capability ID Mapping procedure is to enable an en-gNB to request a connected eNB to provide the UE Radio Capability information that maps to a specific UE Radio Capability ID.

The procedure uses non-UE-associated signalling.

## 8.7.24.2 Successful Operation

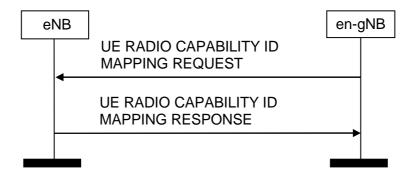


Figure 8.7.24.2-1: UE Radio Capability ID Mapping procedure. Successful operation

The en-gNB initiates the procedure by sending a UE RADIO CAPABILITY ID MAPPING REQUEST message to the eNB

Upon receipt of the UE RADIO CAPABILITY ID MAPPING REQUEST message, the eNB shall include the UE Radio Capability information that maps to the UE Radio Capability ID indicated in the UE RADIO CAPABILITY ID MAPPING REQUEST message in the UE RADIO CAPABILITY ID MAPPING RESPONSE message.

#### 8.7.24.3 Unsuccessful Operation

Not applicable.

## 8.8 IAB Procedures

#### 8.8.1 F1-C Traffic Transfer

#### 8.8.1.1 General

The purpose of the F1-C Traffic Transfer procedure is to deliver F1-C traffic to the MeNB so that it is then forwarded to the IAB-node, or deliver F1-C traffic to the en-gNB, if it was received from the IAB-node.

The procedure uses UE-associated signalling.

#### 8.8.1.2 Successful Operation



Figure 8.8.1.2-1: F1-C Traffic Transfer procedure, successful operation.

Either the MeNB initiates the procedure by sending the F1-C TRAFFIC TRANSFER message including the received F1-C traffic to the en-gNB, or the en-gNB initiates the procedure by sending the F1-C TRAFFIC TRANSFER message to the MeNB.

Upon reception of the F1-C TRAFFIC TRANSFER message, the MeNB shall deliver the contained F1-C traffic to the IAB-node as specified in TS 36.331 [9].

Upon reception of the F1-C TRAFFIC TRANSFER message, the en-gNB shall handle the received F1-C traffic as specified in TS 38.473 [44] and TS 38.472 [48].

# 8.8.1.3 Unsuccessful Operation

Not applicable.

#### 8.8.1.4 Abnormal Conditions

Not Applicable.

# 9 Elements for X2AP Communication

### 9.0 General

Sub clauses 9.1 and 9.2 describe the structure of the messages and information elements required for the X2AP protocol in tabular format. Sub clause 9.3 provides the corresponding ASN.1 definition.

The following attributes are used for the tabular description of the messages and information elements: Presence, Range Criticality and Assigned Criticality. Their definition and use can be found in TS 36.413 [4].

NOTE: The messages have been defined in accordance to the guidelines specified in TR 25.921 [30].

# 9.1 Message Functional Definition and Content

# 9.1.1 Messages for Basic Mobility Procedures

#### 9.1.1.1 HANDOVER REQUEST

This message is sent by the source eNB to the target eNB to request the preparation of resources for a handover.

Direction: source eNB  $\rightarrow$  target eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13	•	YES	reject
Old eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the source eNB	YES	reject
Cause	M		9.2.6		YES	ignore
Target Cell ID	М		ECGI 9.2.14		YES	reject
GUMMEI	M		9.2.16		YES	reject
UE Context Information		1			YES	reject
>MME UE S1AP ID	M		INTEGER (02 <sup>32</sup> -1)	MME UE S1AP ID allocated at the MME	_	
>UE Security Capabilities	M		9.2.29		_	
>AS Security Information	M		9.2.30		_	
>UE Aggregate Maximum Bit Rate	M		9.2.12		_	
>Subscriber Profile ID for RAT/Frequency priority	0		9.2.25		_	
>E-RABs To Be Setup List		1			_	
>>E-RABs To Be Setup Item		1 <maxnoofbeare rs&gt;</maxnoofbeare 			EACH	ignore
>>>E-RAB ID	M		9.2.23		-	
>>>E-RAB Level QoS Parameters	M		9.2.9	Includes necessary QoS parameters	ı	
>>>DL Forwarding	0		9.2.5		_	
>>>UL GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	SGW endpoint of the S1 transport bearer. For delivery of UL PDUs.	_	
>>>Bearer Type	0		9.2.92		YES	reject
>>>Ethernet Type	0		9.2.157		YES	ignore
>>>DAPS Request Information	0		9.2.154		YES	ignore
>RRC Context	М		OCTET STRING	Includes the RRC HandoverPreparati onInformation message as defined in subclause 10.2.2 of TS 36.331 [9], or the RRC HandoverPreparati onInformation-NB message as defined in 10.6.2 of TS 36.331 [9].	_	
>Handover Restriction List	0		9.2.3		_	
>Location Reporting Information	0		9.2.21	Includes the necessary parameters for location reporting	_	
>Management Based MDT Allowed	0		9.2.59		YES	ignore
>Management Based MDT PLMN List	0		MDT PLMN List 9.2.64		YES	ignore
>UE Sidelink Aggregate Maximum Bit Rate	0		9.2.97	This IE applies only if the UE is authorized for V2X services.	YES	ignore
>EPC Handover Restriction List Container	0		9.2.153		YES	ignore

		10005	<del> </del>	\/50	<del> </del>
>Additional RRM Policy Index	0	9.2.25a		YES	ignore
>NR UE Sidelink Aggregate Maximum Bit Rate	0	9.2.159	This IE applies only if the UE is authorized for NR V2X services.	YES	ignore
>UE Radio Capability ID	0	9.2.171		YES	reject
UE History Information	М	9.2.38	Same definition as in TS 36.413 [4]	YES	ignore
Trace Activation	0	9.2.2		YES	ignore
SRVCC Operation Possible	0	9.2.33		YES	ignore
CSG Membership Status	0	9.2.52		YES	reject
Mobility Information	0	BIT STRING (SIZE (32))	Information related to the handover; the source eNB provides it in order to enable later analysis of the conditions that led to a wrong HO.	YES	ignore
Masked IMEISV	0	9.2.69		YES	ignore
UE History Information from the UE	0	OCTET STRING	VisitedCellInfoList contained in the UEInformationResp onse message (TS 36.331 [9])	YES	ignore
Expected UE Behaviour	0	9.2.70		YES	ignore
ProSe Authorized	0	9.2.78		YES	ignore
UE Context Reference at the SeNB	0			YES	ignore
>Global SeNB ID	M	Global eNB ID 9.2.22		-	
>SeNB UE X2AP ID	M	eNB UE X2AP ID 9.2.24	Allocated at the SeNB	-	
>SeNB UE X2AP ID Extension	0	Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	-	
Old eNB UE X2AP ID Extension	0	Extended eNB UE X2AP ID 9.2.86	Allocated at the source eNB	YES	reject
V2X Services Authorized	0	9.2.93		YES	ignore
UE Context Reference at the WT	0			YES	ignore
>WT ID	M	9.2.95		_	
>WT UE XwAP ID	M	9.2.96			
NR UE Security Capabilities UE Context Reference at the	0	9.2.107		YES YES	ignore ignore
SgNB	NA	0.0440			<del> </del>
>Global en-gNB ID >SgNB UE X2AP ID	M	9.2.112 en-gNB UE X2AP ID 9.2.100	Allocated at the SgNB.		
Aerial UE subscription information	0	9.2.129		YES	ignore
Subscription Based UE Differentiation Information	0	9.2.136		YES	ignore
Conditional Handover Information Request	0			YES	reject
>CHO Trigger	М	ENUMERAT ED (CHO- initiation, CHO- replace,)		-	

>New eNB UE X2AP ID	C- ifCHOmod	eNB UE X2AP ID	Allocated at the target eNB	-	
		9.2.24			
>New eNB UE X2AP ID Extension	0	Extended eNB UE X2AP ID	Allocated at the target eNB	_	
		9.2.86			
>Estimated Arrival Probability	0	INTEGER (1100)		1	
NR V2X Services Authorized	0	9.2.158		YES	ignore
PC5 QoS Parameters	0	9.2.160	This IE applies only if the UE is authorized for NR V2X services.	YES	ignore
IAB Node Indication	0	ENUMERAT ED (true,)		YES	reject

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256
maxnoofMDTPLMNs	PLMNs in the Management Based MDT PLMN list. Value is 16.

Condition	Explanation
ifCHOmod	This IE shall be present if the CHO Trigger IE is present and set to "CHO-
	replace".

# 9.1.1.2 HANDOVER REQUEST ACKNOWLEDGE

This message is sent by the target eNB to inform the source eNB about the prepared resources at the target.

Direction: target eNB  $\rightarrow$  source eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13	•	YES	reject
Old eNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the source eNB	YES	ignore
New eNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the target eNB	YES	ignore
E-RABs Admitted List		1			YES	ignore
>E-RABs Admitted Item		1 <maxnoofbearers &gt;</maxnoofbearers 			EACH	ignore
>>E-RAB ID	M		9.2.23		_	
>>UL GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	-	
>>DL GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer. used for forwarding of DL PDUs	-	
>>DAPS Response Information	0		9.2.155		YES	reject
E-RABs Not Admitted List	0		E-RAB List 9.2.28	A value for E-RAB ID shall only be present once in E-RABs Admitted List IE and in E- RABs Not Admitted List IE.	YES	ignore
Target eNB To Source eNB Transparent Container	M		OCTET STRING	Includes the RRC E- UTRA Handover Command message as defined in subclause 10.2.2 in TS 36.331 [9]	YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
UE Context Kept Indicator Old eNB UE X2AP ID Extension	0		9.2.85 Extended eNB UE X2AP ID 9.2.86	Allocated at the source eNB	YES YES	ignore ignore
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the target eNB	YES	reject
WT UE Context Kept Indicator	0		UE Context Kept Indicator 9.2.85	Indicates that the WT has acknowledge d to keep the UE context	YES	ignore

E-RABs transferred to MeNB	0		E-RAB List 9.2.28	In case of EN-DC, indicates that SN Status is needed for the listed E- RABs from the SgNB	YES	ignore
Conditional Handover Information Acknowledge	0				YES	reject
>Requested Target Cell ID	М		ECGI 9.2.14	Target cell indicated in the correspondin g HANDOVER REQUEST message	_	
>Maximum Number of CHO Preparations	0	(	9.2.156	Ĭ	-	

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

#### 9.1.1.3 HANDOVER PREPARATION FAILURE

This message is sent by the target eNB to inform the source eNB that the Handover Preparation has failed.

Direction: target eNB  $\rightarrow$  source eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Old eNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the source eNB	YES	ignore
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
Old eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the source eNB	YES	ignore
Requested Target Cell ID	0		ECGI 9.2.14	Target cell indicated in the correspondin g HANDOVER REQUEST message	YES	reject

# 9.1.1.4 SN STATUS TRANSFER

This message is sent by the source eNB to the target eNB to transfer the uplink/downlink PDCP SN and HFN status during a handover or for EN-DC.

Direction: source eNB  $\rightarrow$  target eNB (handover), eNB from which the E-RAB context is transferred  $\rightarrow$  eNB to which the E-RAB context is transferred (RRC connection re-establishment or dual connectivity), MeNB/en-gNB from which the E-RAB context is transferred  $\rightarrow$  en-gNB/MeNB to which the E-RAB context is transferred (EN-DC).

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13	•	YES	ignore
Old eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated for handover at the source eNB and for dual connectivity/EN-DC at the eNB from which the E-RAB context is transferred	YES	reject
New eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated for handover at the target eNB and for dual connectivity/EN-DC at the eNB to which the E- RAB context is transferred	YES	reject
E-RABs Subject To Status Transfer List		1			YES	ignore
>E-RABs Subject To Status Transfer Item		1 <maxnoofb earers&gt;</maxnoofb 			EACH	ignore
>>E-RAB ID	M		9.2.23		-	
>>Receive Status Of UL PDCP SDUs	0		BIT STRING (4096)	PDCP Sequence Number = (First Missing SDU Number + bit position) modulo 4096	_	
				0: PDCP SDU has not been received. 1: PDCP SDU has been received correctly.		
>>UL COUNT Value	M		COUNT Value 9.2.15	PDCP-SN and Hyper Frame Number of the first missing UL SDU in case of 12 bit long PDCP-SN	_	
>>DL COUNT Value	М		COUNT Value 9.2.15	PDCP-SN and Hyper frame number that the target eNB/en-gNB should assign for the next DL SDU not having an SN yet in case of 12 bit long PDCP-SN	-	
>>Receive Status Of UL PDCP SDUs Extended	O		BIT STRING (116384)	The IE is used in case of 15 bit long PDCP-SN in this release. The first bit indicates the status of the SDU after the First Missing UL PDCP SDU. The N <sup>th</sup> bit indicates the status of the UL PDCP SDU in position (N + First Missing SDU Number) modulo (1 + the maximum value of the PDCP-SN).  0: PDCP SDU has not been received. 1: PDCP SDU has been received correctly.	YES	ignore

>>UL COUNT Value Extended	0	COUNT Value Extended 9.2.66	PDCP-SN and Hyper Frame Number of the first missing UL SDU in case of 15 bit long PDCP-SN	YES	ignore
>>DL COUNT Value Extended	0	COUNT Value Extended 9.2.66	PDCP-SN and Hyper Frame Number that the target eNB/en-gNB should assign for the next DL SDU not having an SN yet in case of 15 bit long PDCP-SN	YES	ignore
>>Receive Status Of UL PDCP SDUs for PDCP SN Length 18	0	BIT STRING (1131072)	The IE is used in case of 18 bit long PDCP-SN. The first bit indicates the status of the SDU after the First Missing UL PDCP SDU. The Nth bit indicates the status of the UL PDCP SDU in position (N + First Missing SDU Number) modulo (1 + the maximum value of the PDCP-SN).  0: PDCP SDU has not been received. 1: PDCP SDU has been received correctly.	YES	ignore
>>UL COUNT Value for PDCP SN Length 18	0	COUNT Value for PDCP SN Length 18 9.2.82	PDCP-SN and Hyper Frame Number of the first missing UL SDU in case of 18 bit long PDCP-SN	YES	ignore
>>DL COUNT Value for PDCP SN Length 18	0	COUNT Value for PDCP SN Length 18 9.2.82	PDCP-SN and Hyper Frame Number that the target eNB/en-gNB should assign for the next DL SDU not having an SN yet in case of 18 bit long PDCP-SN	YES	ignore
Old eNB UE X2AP ID Extension	0	Extended eNB UE X2AP ID 9.2.86	Allocated for handover at the source eNB and for dual connectivity/EN-DC at the eNB from which the E-RAB context is transferred.	YES	reject
New eNB UE X2AP ID Extension	0	Extended eNB UE X2AP ID 9.2.86	Allocated for handover at the target eNB and for dual connectivity/EN-DC at the eNB to which the E-RAB context is transferred.	YES	reject
SgNB UE X2AP ID	0	en-gNB UE X2AP ID 9.2.100	Allocated for EN-DC at the SgNB.	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256.

### 9.1.1.5 UE CONTEXT RELEASE

This message is sent by the target eNB to the source eNB to indicate that resources can be released.

Direction: target eNB  $\rightarrow$  source eNB (handover), MeNB  $\rightarrow$  SeNB (dual connectivity), MeNB  $\rightarrow$  en-gNB (EN-DC).

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
Old eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated for handover at the source eNB and for dual connectivity at the SeNB.	YES	reject
New eNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated for handover at the target eNB and for dual connectivity/EN-DC at the MeNB.	YES	reject
Old eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated for handover at the source eNB and for dual connectivity at the SeNB.	YES	reject
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated for handover at the source eNB and for dual connectivity/EN-DC at the MeNB.	YES	reject
SIPTO Bearer Deactivation Indication	0		ENUMERATED (True,,)	Indicates that SIPTO@LN PDN connection deactivation is needed.	YES	ignore
SgNB UE X2AP ID	0		en-gNB UE X2AP ID 9.2.100	Allocated for EN-DC at the SgNB.	YES	ignore

### 9.1.1.6 HANDOVER CANCEL

This message is sent by the source eNB to the target eNB to cancel an ongoing handover.

Direction: source eNB  $\rightarrow$  target eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	ignore
Old eNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the source eNB	YES	reject
New eNB UE X2AP ID	0		eNB UE X2AP ID 9.2.24	Allocated at the target eNB	YES	ignore
Cause	M		9.2.6		YES	ignore
Old eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the source eNB	YES	reject
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the target eNB	YES	ignore
Candidate Cells To Be Cancelled List		0 <maxnoof CellsinCH O&gt;</maxnoof 			YES	reject
>Target Cell ID	M		ECGI 9.2.14		_	

Range bound	Explanation
maxnoofCellsinCHO	Maximum no. cells that can be prepared for a conditional handover.
	Value is 8.

### 9.1.1.7 HANDOVER SUCCESS

This message is sent by the target eNB to the source eNB to indicate the successful access of the UE toward the target eNB.

Direction: target eNB  $\rightarrow$  source eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
Old eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the source eNB	YES	reject
New eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the target eNB	YES	reject
Old eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the source eNB	YES	ignore
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the target eNB	YES	ignore
Target Cell ID	M		ECGI 9.2.14	Target cell indicated in the corresponding Handover Preparation procedure	YES	reject

### 9.1.1.8 CONDITIONAL HANDOVER CANCEL

This message is sent by the target eNB to the source eNB to cancel an ongoing conditional handover.

Direction: target eNB  $\rightarrow$  source eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
Old eNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the source eNB	YES	ignore
New eNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the target eNB	YES	reject
Cause	M		9.2.6		YES	ignore
Old eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the source eNB	YES	ignore
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the target eNB	YES	reject
Candidate Cells To Be Cancelled List		0 <maxnoof CellsinCH O&gt;</maxnoof 			YES	reject
>Target Cell ID	М		ECGI 9.2.14		_	

Range bound	Explanation
maxnoofCellsinCHO	Maximum no. cells that can be prepared for a conditional handover.
	Value is 8.

# 9.1.1.9 EARLY STATUS TRANSFER

This message is sent by the source eNB to the target eNB to transfer the COUNT value related to the forwarded downlink SDUs during DAPS Handover or Conditional Handover.

Direction: source eNB  $\rightarrow$  target eNB (DAPS Handover or Conditional Handover).

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	_	YES	ignore
Old eNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated for DAPS handover or Conditional handover at the source eNB	YES	reject
New eNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated for DAPS handover or Conditional handover at the target eNB	YES	reject
Old eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated for DAPS handover or Conditional handover at the source eNB	YES	reject
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated for DAPS handover or Conditional handover at the target eNB	YES	reject
CHOICE Procedure Stage	M				YES	reject
>First DL COUNT >>E-RABs Subject To Early Status Transfer List		1 <maxnoofb earers&gt;</maxnoofb 			-	
>>>E-RABs Subject To Early Status Transfer Item					_	
>>>E-RAB ID	М		9.2.23		_	
>>>>FIRST DL COUNT Value	М		COUNT Value 9.2.15	PDCP-SN and Hyper frame number of the first DL SDU that the source eNB/MeNB forwards to the target eNB/en-gNB in case of 12 bit long PDCP-SN	_	
>>>>FIRST DL COUNT Value Extended	0		COUNT Value Extended 9.2.66	PDCP-SN and Hyper frame number of the first DL SDU that the source eNB/MeNB forwards to the target eNB/en-gNB in case of 15 bit long PDCP-SN	-	
>>>>FIRST DL COUNT Value for PDCP SN Length 18	0		COUNT Value for PDCP SN Length 18 9.2.82	PDCP-SN and Hyper frame number of the first DL SDU that the source eNB/MeNB forwards to the target eNB/en-gNB in case of 18 bit long PDCP-SN	-	
>DL Discarding						
>>E-RABs Subject To DL Discarding List	М	1			_	
>>>E-RABs Subject To DL Discarding Item		1 <maxnoofb earers&gt;</maxnoofb 			_	
>>>E-RAB ID	M		9.2.23		_	
>>>>DISCARD DL COUNT Value	M		COUNT Value 9.2.15	PDCP-SN and Hyper frame number for which the target eNB/en-gNB should discard forwarded DL SDUs associated with lower values in case of 12 bit long PDCP-SN	_	

>>>>DISCARD DL COUNT Value Extended	0	COL Valu Exte 9.2.6	nded 66	PDCP-SN and Hyper frame number for which the target eNB/en-gNB should discard forwarded DL SDUs associated with lower values in case of 15 bit long PDCP-SN	I	
>>>>DISCARD DL COUNT Value for PDCP SN Length 18	0	PDC	ie for CP SN gth 18 32	PDCP-SN and Hyper frame number for which the target eNB/en-gNB should discard forwarded DL SDUs associated with lower values in case of 18 bit long PDCP-SN	-	

Range bound	Explanation			
maxnoofBearers	Maximum no. of E-RABs. Value is 256.			

# 9.1.2 Messages for global procedures

# 9.1.2.1 LOAD INFORMATION

This message is sent by an eNB to neighbouring eNBs to transfer load and interference co-ordination information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	•	YES	ignore
Cell Information	M				YES	ignore
>Cell Information Item		1 <maxcellinenb></maxcellinenb>			EACH	ignore
>>Cell ID	M		ECGI 9.2.14	ld of the source cell	-	
>>UL Interference Overload Indication	0		9.2.17		-	
>>UL High Interference Information		0 <maxcellinenb></maxcellinenb>			-	
>>>Target Cell ID	M		ECGI 9.2.14	Id of the cell for which the HII is meant	-	
>>>UL High Interference Indication	М		9.2.18		-	
>>Relative Narrowband Tx Power (RNTP)	0		9.2.19		-	
>>ABS Information	0		9.2.54		YES	ignore
>>Invoke Indication	0		9.2.55		YES	ignore
>>Intended UL-DL Configuration	0		ENUMERAT ED(sa0, sa1, sa2, sa3, sa4, sa5, sa6,)	One of the UL-DL configuration s defined in TS 36.211 [10]. The UL subframe(s) in the indicated configuration is subset of those in SIB1 UL-DL configuration . This IE applies to TDD only.	YES	ignore
>>Extended UL Interference Overload Info	0		9.2.67	This IE applies to TDD only.	YES	ignore
>>CoMP Information	0		9.2.74		YES	ignore
>>Dynamic DL transmission information	0		9.2.77		YES	ignore

Range bound	Explanation			
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.			

# 9.1.2.2 ERROR INDICATION

This message is used to indicate that some error has been detected in the eNB/en-gNB.

Direction: eNB  $_1 \rightarrow eNB_2$  or eNB  $\rightarrow en\mbox{-}gNB$  or en\mbox{-}gNB  $\rightarrow eNB_.$ 

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	ignore
Old eNB UE X2AP ID	0		eNB UE X2AP ID 9.2.24	Allocated for handover at the source eNB and for dual connectivity at the SeNB or the eNB from which the E-RAB context is transferred.	YES	ignore
New eNB UE X2AP ID	0		eNB UE X2AP ID 9.2.24	Allocated for handover at the target eNB and for dual connectivity/EN-DC at the MeNB or the eNB to which the E-RAB context is transferred.	YES	ignore
Cause	0		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
Old eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated for handover at the source eNB and for dual connectivity at the SeNB or the eNB from which the E-RAB context is transferred.	YES	ignore
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated for handover at the target eNB and for dual connectivity at the MeNB or the eNB to which the E-RAB context is transferred.	YES	ignore
Old en-gNB UE X2AP ID	0		en-gNB UE X2AP ID 9.2.100	Allocated for EN-DC at the en-gNB.	YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

# 9.1.2.3 X2 SETUP REQUEST

This message is sent by an eNB to a neighbouring eNB to transfer the initialization information for a TNL association.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Global eNB ID	M		9.2.22		YES	reject
Served Cells		1 <maxcellinenb></maxcellinenb>		Complete list of cells served by the eNB	YES	reject
>Served Cell Information	M		9.2.8		_	
>Neighbour Information		0 <maxnoofneighb ours&gt;</maxnoofneighb 			-	
>>ECGI	М		ECGI 9.2.14	E-UTRAN Cell Global Identifier of the neighbour cell	-	
>>PCI	М		INTEGER (0503,)	Physical Cell Identifier of the neighbour cell	_	
>>EARFCN	М		9.2.26	DL EARFCN for FDD or EARFCN for TDD	-	
>>TAC	0		OCTET STRING (2)	Tracking Area Code	YES	ignore
>>EARFCN Extension	0		9.2.65	DL EARFCN for FDD or EARFCN for TDD. If this IE is present, the value signalled in the EARFCN IE is ignored.	YES	reject
>NR Neighbour Information	0		9.2.98	NR neighbour, capable of performing EN- DC with the served E-UTRA cell	YES	ignore
GU Group Id List		0 <maxfpools></maxfpools>		List of all the pools to which the eNB belongs	GLOBAL	reject
>GU Group Id	M		9.2.20		-	
LHN ID	0		9.2.83		YES	ignore

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.
maxnoofNeighbours	Maximum no. of neighbour cells associated to a given served cell. Value is 512.
maxPools	Maximum no. of pools an eNB can belong to. Value is 16.

# 9.1.2.4 X2 SETUP RESPONSE

This message is sent by an eNB to a neighbouring eNB to transfer the initialization information for a TNL association. Direction:  $eNB_2 \rightarrow eNB_1$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Global eNB ID	M		9.2.22		YES	reject
Served Cells		1 <maxcellinenb></maxcellinenb>		Complete list of cells served by the eNB	GLOBAL	reject
>Served Cell Information	M		9.2.8		-	
>Neighbour Information		0 <maxnoofneighb ours&gt;</maxnoofneighb 			-	
>>ECGI	M		ECGI 9.2.14	E-UTRAN Cell Global Identifier of the neighbour cell	-	
>>PCI	М		INTEGER (0503,)	Physical Cell Identifier of the neighbour cell	ı	
>>EARFCN	М		9.2.26	DL EARFCN for FDD or EARFCN for TDD	-	
>>TAC	0		OCTET STRING (2)	Tracking Area Code	YES	ignore
>>EARFCN Extension	O		9.2.65	DL EARFCN for FDD or EARFCN for TDD. If this IE is present, the value signalled in the EARFCN IE is ignored.	YES	reject
>NR Neighbour Information	0		9.2.98	NR neighbour, capable of performing EN- DC with the served E-UTRA cell	YES	ignore
GU Group Id List		0 <maxpools></maxpools>		List of all the pools to which the eNB belongs	GLOBAL	reject
>GU Group Id	M		9.2.20		-	_
Criticality Diagnostics	0		9.2.7		YES	ignore
LHN ID	0		9.2.83		YES	ignore

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.
maxnoofNeighbours	Maximum no. of neighbour cells associated to a given served cell.
	Value is 512.
maxPools	Maximum no. of pools an eNB can belong to. Value is 16.

# 9.1.2.5 X2 SETUP FAILURE

This message is sent by the eNB to indicate X2 Setup failure.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Cause	M		9.2.6		YES	ignore
Time To Wait	0		9.2.32		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore

### 9.1.2.6 RESET REQUEST

This message is sent from one eNB to another eNB/en-gNB or from en-gNB to an eNB and is used to request the X2 interface between the two eNB or between an eNB and an en-gNB to be reset.

Direction:  $eNB_1 \rightarrow eNB_2$ ,  $eNB \rightarrow en\text{-}gNB$ ,  $en\text{-}gNB \rightarrow eNB$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Cause	M		9.2.6		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

### 9.1.2.7 RESET RESPONSE

This message is sent by a eNB/en-gNB as a response to a RESET REQUEST message.

Direction:  $eNB_2 \rightarrow eNB_1$ ,  $eNB \rightarrow en-gNB$ ,  $en-gNB \rightarrow eNB$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Criticality Diagnostics	0		9.2.7		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

## 9.1.2.8 ENB CONFIGURATION UPDATE

This message is sent by an eNB to a peer eNB to transfer updated information for a TNL association.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Served Cells To Add		0 <maxcellinenb></maxcellinenb>		Complete list of added cells served by the eNB	GLOBAL	reject
>Served Cell Information	M		9.2.8		_	
>Neighbour Information		0 <maxnoofneighb ours&gt;</maxnoofneighb 			_	
>>ECGI	M		ECGI 9.2.14	E-UTRAN Cell Global Identifier of the neighbour cell	-	
>>PCI	М		INTEGER (0503,)	Physical Cell Identifier of the neighbour cell	-	
>>EARFCN	M		9.2.26	DL EARFCN for FDD or EARFCN for TDD	_	
>>TAC	0		OCTET STRING (2)	Tracking Area Code	YES	ignore
>>EARFCN Extension	0		9.2.65	DL EARFCN for FDD or EARFCN for TDD. If this IE is present, the value signalled in the EARFCN IE is ignored.	YES	reject
>NR Neighbour Information	0		9.2.98	NR neighbour, capable of performing EN- DC with the served E-UTRA cell	YES	ignore
Served Cells To Modify		0 <maxcellinenb></maxcellinenb>		Complete list of modified cells served by the eNB	GLOBAL	reject
>Old ECGI	M		ECGI 9.2.14	Old E-UTRAN Cell Global Identifier	-	
>Served Cell Information	M		9.2.8		_	·
>Neighbour Information		0 <maxnoofneighb ours&gt;</maxnoofneighb 			_	
>>ECGI	M		ECGI 9.2.14	E-UTRAN Cell Global Identifier of the neighbour cell	-	
>>PCI	M		INTEGER (0503,)	Physical Cell Identifier of the neighbour cell	_	
>>EARFCN	M		9.2.26	DL EARFCN for FDD or EARFCN for TDD	-	
>>TAC	0		OCTET STRING (2)	Tracking Area Code	YES	ignore

>>EARFCN Extension	0		9.2.65	DL EARFCN for FDD or EARFCN for TDD. If this IE is present, the value signalled in the <i>EARFCN</i> IE is ignored.	YES	reject
>NR Neighbour Information	0		9.2.98	NR neighbour, capable of performing EN- DC with the served E-UTRA cell	YES	ignore
>Deactivation Indication	0		ENUMERAT ED(deactivat ed, )	Indicates that the concerned cell is switched off for energy saving reasons	YES	ignore
Served Cells To Delete		0 <maxcellinenb></maxcellinenb>		Complete list of deleted cells served by the eNB	GLOBAL	reject
>Old ECGI	М		ECGI 9.2.14	Old E-UTRAN Cell Global Identifier of the cell to be deleted	-	
GU Group Id To Add List		0 <maxpools></maxpools>			GLOBAL	reject
>GU Group Id	М		9.2.20		-	
GU Group Id To Delete List		0 <maxpools></maxpools>			GLOBAL	reject
>GU Group Id	M		9.2.20		-	
Coverage Modification List		0 <maxcellinenb></maxcellinenb>		List of cells with modified coverage	GLOBAL	reject
>ECGI	M		ECGI 9.2.14	E-UTRAN Cell Global Identifier of the cell to be modified	-	
>Cell Coverage State	M		INTEGER (015,)	Value '0' indicates that the cell is inactive. Other values Indicates that the cell is active and also indicates the coverage configuration of the concerned cell	-	
>Cell Deployment Status Indicator	0		ENUMERAT ED(pre- change- notification, . )	Indicates the Cell Coverage State is planned to be used at the next reconfiguration		
>Cell Replacing Info	C- ifCellDeplo ymentStat usIndicator Present					
>>Replacing Cells		0 <maxcellinenb></maxcellinenb>				

>>>ECGI	ECG	I E-UTRAN Cell	
	9.2.1	4 Global Identifier	
		of a cell that	
		may replace all	
		or part of the	
		coverage of the	
		cell to be	
		modified	

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.
maxnoofNeighbours	Maximum no. of neighbour cells associated to a given served cell.
	Value is 512.
maxPools	Maximum no. of pools an eNB can belong to. Value is 16.

Condition	Explanation
ifCellDeploymentStatusIndicatorPresent	This IE shall be present if the Cell Deployment Status Indicator IE is
	present.

### 9.1.2.9 ENB CONFIGURATION UPDATE ACKNOWLEDGE

This message is sent by an eNB to a peer eNB to acknowledge update of information for a TNL association.

Direction:  $eNB_2 \rightarrow eNB_1$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Criticality Diagnostics	0	_	9.2.7		YES	ignore

### 9.1.2.10 ENB CONFIGURATION UPDATE FAILURE

This message is sent by an eNB to a peer eNB to indicate eNB Configuration Update Failure.

Direction:  $eNB_2 \rightarrow eNB_1$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Cause	M		9.2.6		YES	ignore
Time To Wait	0		9.2.32		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore

#### 9.1.2.11 RESOURCE STATUS REQUEST

This message is sent by an  $eNB_1$  to neighbouring  $eNB_2$  to initiate the requested measurement according to the parameters given in the message.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
eNB1 Measurement ID	М		INTEGER (14095,)	Allocated by eNB <sub>1</sub>	YES	reject
eNB2 Measurement ID	C- ifRegistrati onRequest StoporPart ialStoporA dd		INTEGER (14095,)	Allocated by eNB <sub>2</sub>	YES	ignore
Registration Request	M		ENUMERAT ED(start, stop, , partial stop, add)	Type of request for which the resource status is required.	YES	reject
Report Characteristics	0		BITSTRING (SIZE(32))	Each position in the bitmap indicates measurement object the eNB <sub>2</sub> is requested to report. First Bit = PRB Periodic, Second Bit = TNL load Ind Periodic, Third Bit = HW Load Ind Periodic, Fourth Bit = Composite Available Capacity Periodic, this bit should be set to 1 if at least one of the First, Second or Third bits is set to 1, Fifth Bit = ABS Status Periodic, Sixth Bit = RSRP Measurement Report Periodic, Seventh Bit = CSI Report Periodic. Other bits shall be ignored by the eNB <sub>2</sub> .	YES	reject
Cell To Report		1		Cell ID list to which the request applies.	YES	ignore
>Cell To Report Item		1 <maxcel lineNB&gt;</maxcel 		12.2.2.11.2.2.	EACH	ignore
>>Cell ID	M		ECGI 9.2.14		_	
Reporting Periodicity	0		ENUMERAT ED(1000ms, 2000ms, 5000ms,100 00ms,)	Periodicity that can be used for reporting of PRB Periodic, TNL Load Ind Periodic, HW Load Ind Periodic, Composite Available Capacity Periodic or ABS Status Periodic.	YES	ignore
Partial Success Indicator	0		ENUMERAT ED(partial success allowed,)	Included if partial success is allowed	YES	ignore
Reporting Periodicity of RSRP Measurement Report	0		ENUMERAT ED(120ms, 240ms, 480ms, 640ms,)	Periodicity that can be used for the reporting of RSRP Measurement Report Periodic.	YES	ignore

Reporting Periodicity of CSI Report	0	ENUMERAT ED(5ms.	Periodicity that can be used for the reporting of	YES	ignore
Report		10ms, 20ms,	1 0		
		40ms,	CONTROPORT FORGUS.		
		80ms,)			

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.

Condition	Explanation
ifRegistrationRequestStoporPartialStoporA	This IE shall be present if the Registration Request IE is set to the
dd	value "stop", "partial stop" or "add".

### 9.1.2.12 RESOURCE STATUS RESPONSE

This message is sent by the  $eNB_2$  to indicate that the requested measurement, for all or for a subset of the measurement objects included in the measurement is successfully initiated.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
eNB1 Measurement ID	M		INTEGER (14095,)	Allocated by eNB₁	YES	reject
eNB2 Measurement ID	М		INTEGER (14095,)	Allocated by eNB <sub>2</sub>	YES	reject
Criticality Diagnostics	0		9.2.7		YES	ignore
Measurement Initiation Result		01		List of all cells in which measurement objects were requested, included when indicating partial success	YES	ignore
>Measurement Initiation Result Item		1 <maxce IlineNB&gt;</maxce 			EACH	ignore
>>Cell ID	М		ECGI 9.2.14		_	
>>Measurement Failure Cause List		01		Indicates that eNB <sub>2</sub> could not initiate the measurement for at least one of the requested measurement objects in the cell	-	
>>>Measurement Failure Cause Item		1 <maxfa iledMea sObject s&gt;</maxfa 			EACH	ignore
>>>>Measurement Failed Report Characteristics	M		BITSTRING (SIZE(32))	Each position in the bitmap indicates measurement object that failed to be initiated in the eNB <sub>2</sub> . First Bit = PRB Periodic, Second Bit = TNL load Ind Periodic, Third Bit = HW Load Ind Periodic, Fourth Bit = Composite Available Capacity Periodic, Fifth Bit = ABS Status Periodic, Sixth Bit = RSRP Measurement Report Periodic, Seventh Bit = CSI Report Periodic. Other bits shall be ignored by the eNB <sub>1</sub> .	_	
>>>Cause	M		9.2.6	Failure cause for measurement objects for which the measurement cannot be initiated	-	

Range bound	Explanation
maxFailedMeasObjects	Maximum number of measurement objects that can fail per measurement. Value is 32.
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.

# 9.1.2.13 RESOURCE STATUS FAILURE

This message is sent by the  $eNB_2$  to indicate that for none of the requested measurement objects the measurement can be initiated.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
eNB1 Measurement ID	M		INTEGER	Allocated by eNB <sub>1</sub>	YES	reject
			(14095,)	-		-
eNB2 Measurement ID	М		INTEGER (14095,)	Allocated by eNB <sub>2</sub>	YES	reject
Cause	M		9.2.6	Ignored by the receiver when the Complete Failure Cause Information IE is included	YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
Complete Failure Cause Information		01		Complete list of failure causes for all requested cells	YES	ignore
>Complete Failure Cause Information Item		1 <maxce IlineNB&gt;</maxce 			EACH	ignore
>>Cell ID	М		ECGI 9.2.14		_	
>>Measurement Failure Cause List		1			_	
>>>Measurement Failure Cause Item		1 <maxfa iledMea sObject s&gt;</maxfa 			EACH	ignore
>>>>Measuremen t Failed Report Characteristics	M		BITSTRING (SIZE(32))	Each position in the bitmap indicates measurement object that failed to be initiated in the eNB2. First Bit = PRB Periodic, Second Bit = TNL load Ind Periodic, Third Bit = HW Load Ind Periodic, Fourth Bit = Composite Available Capacity Periodic, Fifth Bit = ABS Status Periodic, Sixth Bit = RSRP Measurement Report Periodic, Seventh Bit = CSI Report Periodic. Other bits shall be ignored by the eNB1.		
>>>Cause	М		9.2.6	Failure cause for measurements that cannot be initiated	_	

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.
maxFailedMeasObjects	Max number of measurement objects that can fail per measurement. Value is 32.

# 9.1.2.14 RESOURCE STATUS UPDATE

This message is sent by eNB<sub>2</sub> to neighbouring eNB<sub>1</sub> to report the results of the requested measurements.

Direction:  $eNB_2 \rightarrow eNB_1$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	description	YES	ignore
eNB1 Measurement ID	М		INTEGER (14095,)	Allocated by eNB <sub>1</sub>	YES	reject
eNB2 Measurement ID	М		INTEGER (14095,)	Allocated by eNB <sub>2</sub>	YES	reject
Cell Measurement Result		1			YES	ignore
>Cell Measurement Result Item		1 <maxcellinenb></maxcellinenb>			EACH	ignore
>>Cell ID	М		ECGI 9.2.14			
>>Hardware Load Indicator	0		9.2.34			
>>S1 TNL Load Indicator	0		9.2.35			
>>Radio Resource Status	0		9.2.37			
>>Composite Available Capacity Group	0		9.2.44		YES	ignore
>>ABS Status	0		9.2.58		YES	ignore
>>RSRP Measurement Report List	0		9.2.76		YES	ignore
>>CSI Report	0		9.2.79		YES	ignore
>>Cell Reporting Indicator	0		ENUMERAT ED(stop request,)		YES	ignore

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.

# 9.1.2.15 MOBILITY CHANGE REQUEST

This message is sent by an  $eNB_1$  to neighbouring  $eNB_2$  to initiate adaptation of mobility parameters.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
eNB1 Cell ID	M		ECGI		YES	reject
			9.2.14			
eNB2 Cell ID	M		ECGI		YES	reject
			9.2.14			
eNB1 Mobility Parameters	0		Mobility	Configuration	YES	ignore
			Parameters	change in eNB₁		
			Information	cell		
			9.2.48			
eNB2 Proposed Mobility	M		Mobility	Proposed	YES	reject
Parameters			Parameters	configuration		
			Information	change in eNB <sub>2</sub>		
			9.2.48	cell		
Cause	M		9.2.6		YES	reject

#### 9.1.2.16 MOBILITY CHANGE ACKNOWLEDGE

This message is sent by the  $eNB_2$  to indicate that the  $eNB_2$  Proposed Mobility Parameter proposed by  $eNB_1$  was accepted.

Direction:  $eNB_2 \rightarrow eNB_1$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
eNB1 Cell ID	М		ECGI		YES	reject
			9.2.14			
eNB2 Cell ID	M		ECGI 9.2.14		YES	reject
Criticality Diagnostics	0		9.2.7		YES	ignore

### 9.1.2.17 MOBILITY CHANGE FAILURE

This message is sent by the  $eNB_2$  to indicate that the  $eNB_2$  Proposed Mobility Parameter proposed by  $eNB_1$  was refused.

Direction:  $eNB_2 \rightarrow eNB_1$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
eNB1 Cell ID	М		ECGI 9.2.14		YES	ignore
eNB2 Cell ID	M		ECGI 9.2.14		YES	ignore
Cause	M		9.2.6		YES	ignore
Mobility Parameters Modification Range	0		9.2.49		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore

### 9.1.2.18 RLF INDICATION

This message is sent by the  $eNB_2$  to indicate an RRC re-establishment attempt or a reception of an RLF Report from a UE that suffered a connection failure at  $eNB_1$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13	-	YES	ignore
Failure cell PCI	M		INTEGER (0503,)	Physical Cell Identifier	YES	ignore
Re-establishment cell ECGI	М		EĆGI 9.2.14		YES	ignore
C-RNTI	M		BIT STRING (SIZE (16))	C-RNTI contained in the RRC Re- establishment Request message (TS 36.331 [9])	YES	ignore
ShortMAC-I	0		BIT STRING (SIZE (16))	ShortMAC-I contained in the RRC Re- establishment Request message (TS 36.331 [9])	YES	ignore
UE RLF Report Container	0		OCTET STRING	RLF -Report-r9 IE contained in the UEInformationRe sponse message (TS 36.331 [9])	YES	ignore
RRC Conn Setup Indicator	0		ENUMERATED(RR C Conn Setup,)	Included if the RLF Report within the UE RLF Report Container IE is retrieved after an RRC connection setup or an incoming successful handover	YES	reject
RRC Conn Reestab Indicator	0		ENUMERATED(rec onfigurationFailure, handoverFailure, otherFailure,)	The Reestablishment Cause in RRCConnection Reestablishment Request message(TS 36.331 [9])	YES	ignore
UE RLF Report Container for extended bands	0		OCTET STRING	RLF-Report-v9e0 IE contained in the UEInformationRe sponse message (TS 36.331 [9])	YES	ignore
NB-IoT RLF Report Container	0		OCTET STRING	RLF-Report-NB- r16 IE contained in the UEInformationRe sponse-NB message (TS 36.331 [9])	YES	ignore

# 9.1.2.19 HANDOVER REPORT

This message is sent by the  $eNB_1$  to report a handover failure event or other critical mobility problem.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
Handover Report Type	М		ENUMERATED (HO too early, HO to wrong cell, , InterRAT ping-pong, Inter System ping- pong)		YES	ignore
Handover Cause	M		Cause 9.2.6	Indicates handover cause employed for handover from eNB <sub>2</sub>	YES	ignore
Source cell ECGI	M		ECGI 9.2.14	ECGI of source cell for handover procedure (in eNB <sub>2</sub> )	YES	ignore
Failure cell ECGI	М		ECGI 9.2.14	ECGI of target cell for handover procedure (in eNB <sub>1</sub> )	YES	ignore
Re-establishment cell ECGI	C- ifHandoverR eportType HoToWrong Cell		ECGI 9.2.14	ECGI of cell where UE attempted re- establishment	YES	ignore
Target cell in UTRAN	C- ifHandoverR eportType InterRATpin gpong		OCTET STRING	Encoded according to UTRAN Cell ID in the Last Visited UTRAN Cell Information IE, as defined in in TS 25.413 [24]	YES	ignore
Source cell C-RNTI	0		BIT STRING (SIZE (16))	C-RNTI allocated at the source eNB (in eNB <sub>2</sub> ) contained in the AS-config (TS 36.331 [9]).	YES	ignore
Mobility Information	0		BIT STRING (SIZE (32))	Information provided in the HANDOVER REQUEST message from eNB <sub>2</sub> .	YES	ignore
UE RLF Report Container	0		OCTET STRING	The UE RLF Report Container IE received in the RLF INDICATION message.	YES	ignore
UE RLF Report Container for extended bands	0		OCTET STRING	The UE RLF Report Container for extended bands IE received in the RLF INDICATION message.	YES	ignore
Target cell in NG-RAN	C- ifHandoverR eportType Inter-system pingpong		OCTET STRING	Encoded according to NG-RAN CGI IE in TS 38.413 [39].	YES	ignore

Condition	Explanation
ifHandoverReportType HoToWrongCell	This IE shall be present if the Handover Report Type IE is set to the
	value "HO to wrong cell"
ifHandoverReportType InterRATpingpong	This IE shall be present if the Handover Report Type IE is set to the
	value "InterRAT ping-pong"
ifHandoverReportType Inter-system	This IE shall be present if the Handover Report Type IE is set to the
pingpong	value "Inter-system ping-pong"

#### 9.1.2.20 CELL ACTIVATION REQUEST

This message is sent by an eNB to a peer eNB to request a previously switched-off cell(s) to be re-activated.

Direction:  $eNB_1 \rightarrow eNB_2$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Served Cells To Activate		1			GLOBAL	reject
		<maxcellinenb></maxcellinenb>				-
>ECGI	M		9.2.14		-	

Range bound	Explanation					
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.					

#### 9.1.2.21 CELL ACTIVATION RESPONSE

This message is sent by an eNB to a peer eNB to indicate that one or more cell(s) previously switched-off has(have) been activated.

Direction:  $eNB_2 \rightarrow eNB_1$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Activated Cell List		1			GLOBAL	ignore
		<maxcellinenb></maxcellinenb>				_
>ECGI	M		9.2.14		-	
Criticality Diagnostics	0		9.2.7		YES	ignore

Range bound	Explanation				
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.				

#### 9.1.2.22 CELL ACTIVATION FAILURE

This message is sent by an eNB to a peer eNB to indicate cell activation failure.

Direction:  $eNB_2 \rightarrow eNB_1$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore

## 9.1.2.23 X2 RELEASE

This message is used to indicate that the signalling connection to an eNB is unavailable.

Direction:  $eNB_1 \rightarrow eNB_2$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Global eNB ID	M		9.2.22		YES	reject

#### 9.1.2.24 X2AP MESSAGE TRANSFER

This message is used for indirect transport of an X2AP message (except the X2AP MESSAGE TRANSFER message) between two eNBs, and to allow an eNB to perform registration.

Direction:  $eNB_1 \rightarrow eNB_2$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
RNL Header	M		9.2.68		YES	reject
X2AP Message	0		OCTET STRING	Includes any X2AP message except the X2AP MESSAGE TRANSFER message	YES	reject

#### 9.1.2.25 X2 REMOVAL REQUEST

This message is sent by an eNB to a neighbouring eNB to initiate the removal of the signaling connection.

Direction:  $eNB_1 \rightarrow eNB_2$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
Global eNB ID	М		9.2.22		YES	reject
X2 Removal Threshold	0		X2 Benefit Value 9.2.90		YES	reject

## 9.1.2.26 X2 REMOVAL RESPONSE

This message is sent by an eNB to a neighbouring eNB to acknowledge the initiation of removal of the signaling connection.

Direction:  $eNB_2 \rightarrow eNB_1$ .

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
			reference	description		Criticality
Message Type	M		9.2.13		YES	reject
Global eNB ID	M		9.2.22		YES	reject
Criticality Diagnostics	0		9.2.7		YES	ignore

#### 9.1.2.27 X2 REMOVAL FAILURE

This message is sent by the eNB to indicate that removing the signaling connection cannot be accepted.

Direction:  $eNB_2 \rightarrow eNB_1$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore

## 9.1.2.28 RETRIEVE UE CONTEXT REQUEST

This message is sent by the new eNB to request the old eNB to transfer the UE Context to the new eNB.

Direction: new eNB  $\rightarrow$  old eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	•	YES	ignore
New eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the new eNB	YES	reject
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the new eNB See Note 1)	YES	reject
Resume ID	М		9.2.91	000 11010 1)	YES	reject
ShortMAC-I	M		BIT STRING (SIZE (16))	RRC Resume: Corresponds to the ShortResumeMAC-I in the RRCConnection ResumeRequest message as defined in TS 36.331 [9]  RRC Reestablishment: Corresponds to the ShortMAC-I in the RRCConnectionRe establishmentRequ estmessage as defined in TS 36.331 [9].	YES	reject
New E-UTRAN Cell Identifier	M		BIT STRING (SIZE (28))	RRC Resume: Corresponds to the cellIdentity within the VarShortResumeM AC-Input as specified in TS 36.331 [9].  RRC Reestablishment: Corresponds to the cellIdentity within the VarShortMAC-Input as specified in TS 36.331 [9].	YES	reject
C-RNTI	0		BIT STRING (SIZE (16))	C-RNTI contained in the RRC Reestablishment Request message (TS 36.331 [9]). If this IE is present, the Resume ID IE is ignored	YES	reject
Failure cell PCI	0		INTEGER (0503,)	Physical Cell Identifier	YES	reject

NOTE 1: The ASN.1 definition of the RETRIEVE UE CONTEXT REQUEST message contains the a wrong IE-Id, which references the *SeNB UE X2AP ID Extension* IE instead of the *New eNB UE X2AP ID Extension* IE. The old eNB interprets the content of this IE as the Extended eNB UE X2AP ID, which, together with the *New eNB UE X2AP ID* IE represents the eNB UE X2AP ID allocated at the new eNB.

## 9.1.2.29 RETRIEVE UE CONTEXT RESPONSE

This message is sent by the old eNB to transfer the UE context to the new eNB.

Direction: old eNB  $\rightarrow$  new eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
New eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the new eNB	YES	ignore
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the new eNB	YES	ignore
Old eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the old eNB	YES	ignore
Old eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the old eNB	YES	ignore
GUMMEI	М		9.2.16		YES	reject
<b>UE Context Information</b>		1			YES	reject
>MME UE S1AP ID	М		INTEGER (02 <sup>32</sup> - 1)	MME UE S1AP ID allocated at the MME	_	7
>UE Security Capabilities	М		9.2.29		_	
>AS Security Information	М		9.2.30		_	
>UE Aggregate Maximum Bit Rate	М		9.2.12		_	
>Subscriber Profile ID for RAT/Frequency priority	0		9.2.25		_	
>E-RABs To Be Setup List		1			_	
>>E-RABs To Be Setup Item		1 <maxno ofBeare rs&gt;</maxno 			EACH	ignore
>>>E-RAB ID	M		9.2.23		_	
>>>E-RAB Level QoS Parameters	M		9.2.9	Includes necessary QoS parameters	_	
>>>Bearer Type	0		9.2.92	1	_	
>>>UL GTP Tunnel Endpoint	М		GTP Tunnel Endpoint 9.2.1	SGW endpoint of the S1 transport bearer. For delivery of UL PDUs.	YES	reject
>>>DL Forwarding	0		9.2.5		YES	ignore
>>>Ethernet Type	0		9.2.157		YES	ignore
>RRC Context	М		OCTET STRING	Includes either the RRC Handover Preparation Information message as defined in subclause 10.2.2 of TS 36.331 [9], or the HandoverPrepar ationInformation-NB message as defined in subclause 10.6.2 of TS 36.331 [9].	_	
>Handover Restriction List	0		9.2.3		_	
>Location Reporting Information	0		9.2.21	Includes the necessary parameters for location reporting	-	

>Management Based MDT Allowed	0	9.2.59		-	
>Management Based MDT PLMN List	0	MDT PLMN List 9.2.64		-	
>UE Sidelink Aggregate Maximum Bit Rate	0	9.2.97 This IE applies only if the UE is authorized for V2X services.		YES	ignore
>Additional RRM Policy Index	0	9.2.25a		YES	ignore
>EPC Handover Restriction List Container	0	9.2.153		YES	ignore
>NR UE Sidelink Aggregate Maximum Bit Rate	0	9.2.159	This IE applies only if the UE is authorized for NR V2X services.	YES	ignore
>UE Radio Capability ID	0	9.2.171		YES	reject
Trace Activation	0	9.2.2		YES	ignore
SRVCC Operation Possible	0	9.2.33		YES	ignore
Masked IMEISV	0	9.2.69		YES	ignore
Expected UE Behaviour	0	9.2.70		YES	ignore
ProSe Authorized	0	9.2.78		YES	ignore
Criticality Diagnostics	0	9.2.7		YES	ignore
V2X Services Authorized	0	9.2.93		YES	ignore
Aerial UE subscription information	0	9.2.129		YES	ignore
Subscription Based UE Differentiation Information	0	9.2.136		YES	ignore
NR V2X Services Authorized	0	9.2.158		YES	ignore
PC5 QoS Parameters	0	9.2.160	This IE applies only if the UE is authorized for NR V2X services.	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

## 9.1.2.30 RETRIEVE UE CONTEXT FAILURE

This message is sent by the old eNB to inform the new eNB that the Retrieve UE Context procedure has failed.

Direction: old eNB  $\rightarrow$  new eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
New eNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the new eNB	YES	ignore
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the new eNB	YES	ignore
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore

## 9.1.2.31 EN-DC X2 SETUP REQUEST

This message is sent by an initiating node to a neighbouring node, both nodes able to interact for EN-DC, to transfer the initialization information for a TNL association.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
CHOICE Initiating	M				YES	reject
NodeType						
>eNB						
>>Global eNB ID	M		9.2.22		YES	reject
>>List of Served E-		1		Complete list of	YES	reject
UTRA Cells		<maxcellinenb></maxcellinenb>		cells served by the eNB		
>>>Served E-UTRA Cell Information	M		Served Cell Information 9.2.8		_	
>>>NR Neighbour Information	0		9.2.98	NR neighbours	_	
>>Interface Instance Indication	0		9.2.143	NOTE: In the current version of this specification this IE is not included in the <i>Initiating Node Type</i> IE.	YES	reject
>>Cell and Capacity Assistance Information	0		9.2.146		YES	ignore
>en-gNB						
>>Global en-gNB ID	M		9.2.112		YES	roinat
>>List of Served NR	IVI	1	9.2.112	List of cells	YES	reject reject
Cells	M	<maxcellinengn B&gt;</maxcellinengn 	0.2.440	served by the en-gNB. If a partial list of cells is signalled, it contains at least one cell per carrier configured at the gNB.		reject
>>>Served NR Cell Information	M		9.2.110		_	
>>>NR Neighbour Information	0		9.2.98	NR neighbours.	_	
>>Partial List Indicator	0		ENUMERAT ED (partial, )	Value "partial" indicates that a partial list of cells is included in the List of Served NR Cells IE	YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject
TNL Transport Layer Address info	0		9.2.149		YES	ignore

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.
maxCellinengNB	Maximum no. cells that can be served by an en-gNB. Value is 16384.

## 9.1.2.32 EN-DC X2 SETUP RESPONSE

This message is sent by a neighbouring node to an initiating node, both nodes able to interact for EN-DC, to transfer the initialization information for a TNL association.

Direction:  $eNB \rightarrow en-gNB$ ,  $en-gNB \rightarrow eNB$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
CHOICE Responding NodeType >eNB	М				YES	reject
>>Global eNB ID	M		9.2.22		YES	i
>>List of Served E-	IVI	1	9.2.22	Complete list of	YES	reject reject
UTRA Cells		<maxcellinenb></maxcellinenb>		cells served by the eNB	163	reject
>>>Served E-UTRA Cell Information	М		Served Cell Information 9.2.8		_	
>>>NR Neighbour Information	0		9.2.98	NR neighbours	_	
>>Cell and Capacity Assistance Information	0		9.2.146		YES	ignore
>en-gNB						
>>Global en-gNB ID >>List of Served NR	M	1	9.2.112	List of cells	YES YES	reject reject
Cells		<maxcellinengn B&gt;</maxcellinengn 		served by the en-gNB. If a partial list of cells is signalled, it contains at least one cell per carrier configured at the gNB.		
>>>Served NR Cell Information	М		9.2.110		_	
>>>NR Neighbour Information	0		9.2.98	NR neighbours	_	
>>Partial List Indicator	0		ENUMERAT ED (partial, )	Value "partial" indicates that a partial list of cells is included in the List of Served NR Cells IE	YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject
TNL Transport Layer Address info	0		9.2.149		YES	ignore

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.
maxCellinengNB	Maximum no. cells that can be served by an en-gNB. Value is 16384.

## 9.1.2.33 EN-DC X2 SETUP FAILURE

This message is sent by the neighbouring node to indicate EN-DC X2 Setup failure.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13	•	YES	reject
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
Time To Wait	0		9.2.32		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject
Message Oversize Notification	0		9.2.148		YES	ignore

## 9.1.2.34 EN-DC CONFIGURATION UPDATE

This message is sent by an initiating node to a peer neighbouring node, both nodes able to interact for EN-DC, to transfer updated information for a TNL association.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
CHOICE Initiating NodeType >eNB	M				YES	reject
>>Cell Assistance Information	0		9.2.115		YES	reject
>>Served E-UTRA Cells To Add		0 <maxcellinenb></maxcellinenb>			GLOBAL	reject
>>>Served E-UTRA Cell Information	М		Served Cell Information 9.2.8		_	
>>>NR Neighbour Information	0		9.2.98	NR neighbours	_	
>>Served E-UTRA Cells To Modify		0 <maxcellinenb></maxcellinenb>		Complete list of modified cells served by the eNB	GLOBAL	reject
>>>Old ECGI	М		ECGI 9.2.14	Old E-UTRAN Cell Global Identifier	-	
>>>Served E-UTRA Cell Information	М		Served Cell Information 9.2.8		-	
>>>NR Neighbour Information	0		9.2.98	NR neighbours	_	
>>Served E-UTRA Cells To Delete		0 <maxcellinenb></maxcellinenb>		Complete list of deleted cells served by the eNB	GLOBAL	reject
>>>Old ECGI	M		ECGI 9.2.14	Old E-UTRAN Cell Global Identifier of the cell to be deleted	-	
>en-gNB						
>>Served NR Cells To Add		0 <maxcellinengn B&gt;</maxcellinengn 			GLOBAL	reject
>>>Served NR Cell Information	М		9.2.110		-	
>>>NR Neighbour Information	0		9.2.98	NR neighbours	_	
>>Served NR Cells To Modify		0 <maxcellinengn B&gt;</maxcellinengn 			GLOBAL	reject
>>>Old NR-CGI	М		NR CGI 9.2.111		-	
>>>Served NR Cell Information	М		9.2.110		_	
>>>NR Neighbour Information	0		9.2.98	NR neighbours	_	
>>>NR Deactivation Indication	0		ENUMERAT ED(deactivat ed, )	Indicates that the concerned NR cell is switched off for energy saving reasons. If this IE is not included, indicates that the concerned cell is activated.	YES	ignore
>>Served NR Cells To Delete		0 <maxcellinengn B&gt;</maxcellinengn 			GLOBAL	reject

>>>Old NR-CGI	М		NR CGI 9.2.111		-	
Interface Instance Indication	0		9.2.143		YES	reject
TNL Transport Layer Address info	0		9.2.149		YES	ignore
TNLA To Add List		01			YES	ignore
>TNLA To Add Item IEs		1 <maxnooftnl Associations&gt;</maxnooftnl 			_	
>>TNLA Transport Layer Information	М		9.2.150	CP Transport Layer Information of the en-gNB	-	-
>>TNLA Usage	M		9.2.151		-	-
TNLA To Update List		01			YES	ignore
>TNLA To Update Item IEs		1 <maxnooftnl Associations&gt;</maxnooftnl 			_	
>>TNLA Transport Layer Information	М		9.2.150	CP Transport Layer Information of the en-gNB	-	-
>>TNLA Usage	0		9.2.151		-	-
TNLA To Remove List		01			YES	ignore
>TNLA To Remove Item IEs		1 <maxnooftnl Associations&gt;</maxnooftnl 			_	
>>TNLA Transport Layer Information	М		9.2.150	CP Transport Layer Information of the en-gNB	-	-

Range bound	Explanation
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.
maxCellinengNB	Maximum no. cells that can be served by an en-gNB. Value is 16384.
maxnoofTNLAssociations	Maximum numbers of TNL Associations between the eNB and the en-gNB. Value is 32.

## 9.1.2.35 EN-DC CONFIGURATION UPDATE ACKNOWLEDGE

This message is sent by a neighbouring node to a peer node, both nodes able to interact for EN-DC, to acknowledge update of information for a TNL association.

Direction: en-gNB  $\rightarrow$  eNB, eNB  $\rightarrow$  en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
CHOICE Responding	M				YES	reject
NodeType						
>eNB						
>en-gNB						
>>List of Served NR Cells		0 <maxcellinengn B&gt;</maxcellinengn 		Complete or limited list of cells served by the engNB, if requested by the eNB.	-	
>>>Served NR Cell Information	М		9.2.110		-	
>>>NR Neighbour Information	0		9.2.98	NR neighbours.		
Interface Instance Indication	0		9.2.143		YES	reject
Criticality Diagnostics	0		9.2.7		YES	ignore
TNL Transport Layer Address info	0		9.2.149		YES	ignore
TNLA Setup List		01			YES	ignore
>TNLA Setup Item		1 <maxnooftnl Associations&gt;</maxnooftnl 			_	
>>TNLA Transport Layer Address	М		9.2.150	CP Transport Layer Information of the en- gNB	-	
TNLA Failed to Setup List		01			YES	ignore
>TNLA Failed To Setup Item		1 <maxnooftnl Associations&gt;</maxnooftnl 			_	
>>TNLA Transport Layer Address	M		9.2.150	CP Transport Layer Information of the en- gNB	-	
>>Cause	М		9.2.6		_	

Range bound	Explanation
maxCellinengNB	Maximum no. cells that can be served by an en-gNB. Value is
	16384.
maxnoofTNLAssociations	Maximum numbers of TNL Associations between the eNB and the en-gNB. Value is 32.

# 9.1.2.36 EN-DC CONFIGURATION UPDATE FAILURE

This message is sent by a neighbouring node to a peer node to indicate EN-DC eNB Configuration Update Failure.

Direction: en-gNB  $\rightarrow$  eNB, eNB  $\rightarrow$  en-gNB.

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
			reference	description		Criticality
Message Type	M		9.2.13		YES	reject
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
Time To Wait	0		9.2.32		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

#### 9.1.2.37 EN-DC CELL ACTIVATION REQUEST

This message is sent by an eNB to a peer en-gNB to request a previously switched-off cell(s) to be re-activated.

Direction: eNB  $\rightarrow$  en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
Served NR Cells To Activate		1			GLOBAL	reject
>Served NR Cells To Activate Item		1 < maxCellinengNB >				
>>NR CGI	М		9.2.111		-	
Activation ID	М		INTEGER (0255)	Allocated by the eNB	YES	reject
Interface Instance Indication	0		9.2.143		YES	reject

Range bound	Explanation
maxCellinengNB	Maximum no. cells that can be served by an en-gNB. Value is
	16384.

## 9.1.2.38 EN-DC CELL ACTIVATION RESPONSE

This message is sent by an en-gNB to a peer eNB to indicate that one or more cell(s) previously switched-off has (have) been activated.

Direction: en-gNB  $\rightarrow$  eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Activated NR Cell List		1			GLOBAL	ignore
>Activated NR Cell Item		1 < maxCellinengNB >				
>>NR CGI	M		9.2.111		-	
Activation ID	М		INTEGER (0255)	Allocated by the eNB	YES	reject
Criticality Diagnostics	0		9.2.7		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

Range bound	Explanation
maxCellinengNB	Maximum no. cells that can be served by an en-gNB. Value is
	16384.

## 9.1.2.39 EN-DC CELL ACTIVATION FAILURE

This message is sent by an en-gNB to a peer eNB to indicate cell activation failure.

Direction: en-gNB  $\rightarrow$  eNB.

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
			reference	description		Criticality
Message Type	M		9.2.13		YES	reject
Activation ID	M		INTEGER	Allocated by	YES	reject
			(0255)	the eNB		
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
Interface Instance	0		9.2.143		YES	reject
Indication						

## 9.1.2.40 EN-DC X2 REMOVAL REQUEST

This message is sent by an initiating node to a neighbouring node to initiate the removal of the signaling connection.

Direction:  $eNB \rightarrow en-gNB$ ,  $en-gNB \rightarrow eNB$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
CHOICE Initiating Node Type	M					
>eNB						
>>Global eNB ID	M		9.2.22		YES	reject
>en-gNB						
>>Global en-gNB ID	M		9.2.112			
X2 Removal Threshold	0		X2 Benefit Value 9.2.90		YES	reject
Interface Instance Indication	0		9.2.143		YES	reject

## 9.1.2.41 EN-DC X2 REMOVAL RESPONSE

This message is sent by an initiating node to a neighbouring node to acknowledge the initiation of removal of the signaling connection.

Direction: eNB  $\rightarrow$  en-gNB, en-gNB  $\rightarrow$  eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
CHOICE Initiating Node	M					-
Type						
>eNB						
>>Global eNB ID	M		9.2.22		YES	reject
>en-gNB						-
>>Global en-gNB ID	M		9.2.112		YES	reject
Criticality Diagnostics	0		9.2.7		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

## 9.1.2.42 EN-DC X2 REMOVAL FAILURE

This message is sent by the initiating node to indicate that removing the signaling connection cannot be accepted.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

## 9.1.2.43 DATA FORWARDING ADDRESS INDICATION

This message is sent by the new eNB to indicate to the old eNB forwarding addresses for each E-RAB for which it admits data forwarding.

Direction: new eNB  $\rightarrow$  old eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
New eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the new eNB	YES	ignore
New eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the new eNB	YES	ignore
Old eNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the old eNB	YES	ignore
Old eNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the old eNB	YES	ignore
E-RABs Data Forwarding Address List		1			YES	ignore
> E-RABs Data Forwarding Address Item		1 <maxnoofbearers< td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxnoofbearers<>			EACH	ignore
>>E-RAB ID	М		9.2.23		_	
>>DL GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	
CHO DC Indicator	0		ENUMERAT ED (true,)	Indicating that the DATA FORWARDI NG ADDRESS INDICATION message is for a Conditional Handover.	YES	reject

Range bound	Explanation			
maxnoofBearers	Maximum no. of E-RABs. Value is 256			

## 9.1.2.44 EN-DC CONFIGURATION TRANSFER

This message is sent by an eNB in order to transfer the EN-DC SON Configuration container to an en-gNB, or it is sent by an en-gNB in order to transfer the EN-DC SON Configuration container to an eNB.

Direction:  $eNB \rightarrow en-gNB$  or  $en-gNB \rightarrow eNB$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
EN-DC SON Configuration Transfer	0		OCTET STRING	Contains the EN-DC SON Configuration Transfer IE as defined in TS 36.413 [4].	YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

## 9.1.2.45 EN-DC RESOURCE STATUS REQUEST

This message is sent by the eNB to the en-gNB or by the en-gNB to the eNB to initiate the requested measurement according to the parameters given in the message.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1		YES	reject
eNB Measurement ID	М		INTEGER (14095,)	Allocated by the eNB	YES	reject
en-gNB Measurement ID	C- ifRegistrati onRequest StoporAdd		INTEGER (14095,)	Allocated by the en-gNB	YES	ignore
Registration Request EN- DC	M		ENUMERAT ED (start, stop, add, )	Type of request for which the resource status is required.	YES	reject
Reporting Periodicity ENDC	0		ENUMERAT ED (500ms, 1000ms, 2000ms, 5000ms,100 00ms,)	Periodicity that can be used for reporting of PRB Periodic, TNL Capacity Ind Periodic, Composite Available Capacity Periodic. Also used as the averaging window length for all measurement object if supported.	YES	ignore
Report Characteristics ENDC	C- ifRegistrati onRequest Start		BITSTRING (SIZE(32))	When sent by the eNB, each position in the bitmap indicates measurement object the en-gNB is requested to report. First Bit = PRB Periodic, Second Bit = TNL Capacity Ind Periodic, Third Bit = Composite Available Capacity Periodic, Fourth Bit = Number of Active UEs. Other bits shall be ignored by the en-gNB. When sent by the en-gNB, when sent by the engNB, each position in the bitmap indicates measurement object the eNB is requested to report. First Bit = PRB Periodic, Second Bit = TNL load Ind Periodic, Third Bit = HW Load Ind Periodic, Fourth Bit = Composite Available Capacity Periodic, this bit should be set to 1 if at least one of the First, Second or Third bits is set to 1. Other bits shall be ignored by the eNB.	YES	ignore
NR Cell To Report EN-DC List		01		NR cell ID list to which the request applies.	YES	ignore
>NR Cell To Report EN- DC Item		1 <maxcel linengNB &gt;</maxcel 			EACH	ignore
>>NR Cell ID	М		NR CGI		-	
			9.2.111	1		

>>SSB To Report List		01		SSB list to which the request applies.	YES	ignore
>>>SSB To Report Item		1 <maxno ofSSBAr eas&gt;</maxno 			EACH	ignore
>>>SSB Index	М		9.2.167		_	
Interface Instance Indication	0		9.2.143		YES	reject
E-UTRA Cell To Report EN-DC List		01		E-UTRA cell ID list to which the request applies.	YES	ignore
>E-UTRA Cell To Report EN-DC Item		1 <maxcel lineNB&gt;</maxcel 			EACH	ignore
>>E-UTRA Cell ID	М		ECGI 9.2.14		ı	

Condition	Explanation
ifRegistrationRequestStoporAdd	This IE shall be present if the Registration Request EN-DC IE is set
	to the value "stop", or "add".
ifRegistrationRequestStart	This IE shall be present if the Registration Request EN-DC IE is set
	to the value "start".

Range bound	Explanation
maxCellinengNB	Maximum no. cells that can be served by an en-gNB. Value is
	16384.
maxnoofSSBAreas	Maximum no. SSB Areas that can be served by a NG-RAN node
	cell. Value is 64.
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.

## 9.1.2.46 EN-DC RESOURCE STATUS RESPONSE

This message is sent by the en-gNB or by the eNB to indicate that the requested measurement, for all of the measurement objects included in the measurement is successfully initiated.

Direction: en-gNB  $\rightarrow$  eNB, eNB  $\rightarrow$  en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
eNB Measurement ID	М		INTEGER (14095,)	Allocated by the eNB	YES	reject
en-gNB Measurement ID	М		INTEGER (14095,)	Allocated by the en-gNB	YES	reject
Criticality Diagnostics	0		9.2.7		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

## 9.1.2.47 EN-DC RESOURCE STATUS FAILURE

This message is sent by the en-gNB or by the eNB to indicate that for any of the requested measurement objects the measurement cannot be initiated.

Direction: en-gNB  $\rightarrow$  eNB, eNB  $\rightarrow$  en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
eNB Measurement ID	M		INTEGER (14095,)	Allocated by the eNB	YES	reject
en-gNB Measurement ID	M		INTEGER (14095,)	Allocated by the en-gNB	YES	reject
Cause	M		9.2.6	Ignored by the receiver when the Complete Failure Cause Information IE is included	YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

## 9.1.2.48 EN-DC RESOURCE STATUS UPDATE

This message is sent by the en-gNB or by the eNB to the en-gNB to the eNB to report the results of the requested measurements.

Direction: en-gNB  $\rightarrow$  eNB, eNB  $\rightarrow$  en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1		YES	ignore
eNB Measurement ID	М		INTEGER (14095,)	Allocated by the eNB	YES	reject
en-gNB Measurement ID	М		INTEGER (14095,)	Allocated by the engnB	YES	reject
NR Cell Measurement Result		01		Concerned NR cells in the en-gNB.	YES	ignore
>NR Cell Measurement Result Item		1 <maxce IlinengN B&gt;</maxce 			EACH	ignore
>>NR Cell ID	М		NR CGI 9.2.111		_	
>>NR Radio Resource Status	0		9.2.162		-	
>>TNL Capacity Indicator	0		9.2.161		_	
>>NR Composite Available Capacity Group	0		9.2.163		_	
>>Number of Active UEs	0		INTEGER (01677721 5,)	As defined in TS 38.314 [45]. Value "1" is equivalent to 0.1 Active UEs, value "2" is equivalent to 0.2 Active UEs, value n is equivalent to n/10 Active UEs.	_	
Interface Instance Indication	0		9.2.143		YES	reject
E-UTRA Cell Measurement Result		01		Concerned E-UTRA cells in the eNB.	YES	ignore
>E-UTRA Cell Measurement Result Item		1 <maxce IlineNB&gt;</maxce 			EACH	ignore
>>E-UTRA Cell ID	М		ECGI 9.2.14		_	
>>Hardware Load Indicator	0		9.2.34		_	
>>S1 TNL Load Indicator	0		9.2.35		_	
>>Radio Resource Status	0		9.2.37		_	
>>Composite Available Capacity Group	0		9.2.44		_	

Range bound	Explanation
maxCellinengNB	Maximum no. cells that can be served by an en-gNB. Value is 16384.
maxCellineNB	Maximum no. cells that can be served by an eNB. Value is 256.

# 9.1.2.49 CELL TRAFFIC TRACE

This message is sent by en-gNB to transfer the trace information to the MeNB.

Direction: en-gNB  $\rightarrow$  MeNB

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.1.1		YES	ignore
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.	YES	reject
E-UTRAN Trace ID	М		OCTET STRING (SIZE(8))	As per E-UTRAN Trace ID in <i>Trace Activation</i> IE	YES	ignore
Trace Collection Entity IP Address	M		Transport Layer Address 9.2.2.1	Defined in TS 32.422 [6]	YES	ignore
Privacy Indicator	0		ENUMERAT ED (Immediate MDT,)		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

# 9.1.3 Messages for Dual Connectivity Procedures

## 9.1.3.1 SENB ADDITION REQUEST

This message is sent by the MeNB to the SeNB to request the preparation of resources for dual connectivity operation for a specific UE

Direction: MeNB  $\rightarrow$  SeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
UE Security Capabilities	C- ifSCGBear erOption		9.2.29		YES	reject
SeNB Security Key	C- ifSCGBear erOption		9.2.72	The S-KeNB which is provided by the MeNB, see TS 33.401 [18].	YES	reject
SeNB UE Aggregate Maximum Bit Rate	M		UE Aggregate Maximum Bit Rate 9.2.12	The UE Aggregate Maximum Bit Rate is split into MeNB UE Aggregate Maximum Bit Rate and SeNB UE Aggregate Maximum Bit Rate which are enforced by MeNB and SeNB respectively.	YES	reject
Serving PLMN	0		PLMN Identity 9.2.4	The serving PLMN of the SCG in the SeNB.	YES	ignore
E-RABs To Be Added List		1			YES	reject
>E-RABs To Be Added		1			EACH	reject
Item		<maxnoofbeare rs=""></maxnoofbeare>			_,	. 5,551
>>CHOICE Bearer Option	M					
>>>SCG Bearer	1.4		0.000			
>>>E-RAB ID	M		9.2.23	landuden annenne	_	
>>>E-RAB Level QoS Parameters	М		9.2.9	Includes necessary QoS parameters	_	
>>>>DL Forwarding	0		9.2.5	00\\\ ==============	_	
>>>>S1 UL GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	SGW endpoint of the S1 transport bearer. For delivery of UL PDUs.	_	
>>>Correlation ID	0		Correlation ID 9.2.84		-	
>>>SIPTO Correlation ID	0		Correlation ID 9.2.84		_	
>>>Bearer Type	0		9.2.92		YES	ignore
>>>Ethernet Type >>>Split Bearer	0		9.2.157		YES	ignore
>>>E-RAB ID	M		9.2.23		_	
>>>E-RAB Level	М		9.2.9	Includes necessary	_	
QoS Parameters		<u> </u>		QoS parameters		
>>>>MeNB GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	MeNB endpoint of the X2 transport bearer. For delivery of UL PDUs.	-	
MeNB to SeNB Container	М		OCTET STRING	Includes the SCG- ConfigInfo message as defined in TS 36.331 [9]	YES	reject
CSG Membership Status	0		9.2.52		YES	reject
SeNB UE X2AP ID	0		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	reject

SeNB UE X2AP ID Extension	0	Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	reject
Expected UE Behaviour	0	9.2.70		YES	ignore
MeNB UE X2AP ID Extension	0	Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject

Range bound	Explanation			
maxnoofBearers	Maximum no. of E-RABs. Value is 256			

Condition	Explanation
ifSCGBearerOption	This IE shall be present if the Bearer Option IE is set to the value
	"SCG bearer".

## 9.1.3.2 SENB ADDITION REQUEST ACKNOWLEDGE

This message is sent by the SeNB to confirm the MeNB about the SeNB addition preparation.

Direction: SeNB  $\rightarrow$  MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	reject
E-RABs Admitted To Be Added List		1			YES	ignore
>E-RABs Admitted To Be Added Item		1 <maxnoofbe arers&gt;</maxnoofbe 			EACH	ignore
>>CHOICE Bearer Option	М					
>>>SCG Bearer						
>>>E-RAB ID	M		9.2.23		_	
>>>S1 DL GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	SeNB endpoint of the S1 transport bearer. For delivery of DL PDUs.	-	
>>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	_	
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	_	
>>>Split Bearer						
>>>E-RAB ID	M		9.2.23		_	
>>>>SeNB GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	Endpoint of the X2 transport bearer at the SeNB.	-	
E-RABs Not Admitted List	0		E-RAB List 9.2.28	A value for E-RAB ID shall only be present once in E- RABs Admitted List IE and in E-RABs Not Admitted List IE.	YES	ignore
SeNB to MeNB Container	М		OCTET STRING	Includes the SCG- Config message as defined in TS 36.331 [9]	YES	reject
Criticality Diagnostics	0		9.2.7		YES	ignore
GW Transport Layer Address	0		BIT STRING (1160,)	Indicating GW Transport Layer Address.	YES	ignore
SIPTO L-GW Transport Layer Address	0		BIT STRING (1160,)	Indicating SIPTO L- GW Transport Layer Address.	YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	reject
Tunnel Information for BBF	0		Tunnel Information 9.2.89	Indicating eNB's Local IP Address assigned by the broadband access provider, UDP port Number.	YES	ignore

Range bound	Explanation			
maxnoofBearers	Maximum no. of E-RABs. Value is 256			

## 9.1.3.3 SENB ADDITION REQUEST REJECT

This message is sent by the SeNB to inform the MeNB that the SeNB Addition Preparation has failed.

Direction: SeNB  $\rightarrow$  MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	reject
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	reject

## 9.1.3.4 SENB RECONFIGURATION COMPLETE

This message is sent by the MeNB to the SeNB to indicate whether the configuration requested by the SeNB was applied by the UE.

Direction: MeNB  $\rightarrow$  SeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	reject
Response Information	M				YES	ignore
>CHOICE Response Type	M					
>>Configuration successfully applied						
>>>MeNB to SeNB Container	0		OCTET STRING	Includes the SCG- ConfigInfo message as defined in TS 36.331 [9]	-	
>>Configuration rejected by the MeNB						
>>>Cause	M		9.2.6		ı	
>>>MeNB to SeNB Container	0		OCTET STRING	Includes the SCG- ConfigInfo message as defined in TS 36.331 [9]	1	
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	reject

## 9.1.3.5 SENB MODIFICATION REQUEST

This message is sent by the MeNB to the SeNB to request the preparation to modify SeNB resources for a specific UE. Direction:  $MeNB \rightarrow SeNB$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13	•	YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	reject
Cause	M		9.2.6		YES	ignore
SCG Change Indication	0		9.2.73		YES	ignore
Serving PLMN	0		PLMN Identity 9.2.4	The serving PLMN of the SCG in the SeNB.	YES	ignore
UE Context Information		01			YES	reject
>UE Security Capabilities	0		9.2.29		_	
>SeNB Security Key	0		9.2.72		_	
>SeNB UE Aggregate Maximum Bit Rate	0		UE Aggregate Maximum Bit Rate 9.2.12		_	
>E-RABs To Be Added List		01			_	
>>E-RABs To Be Added Item		1 <maxnoofbeare rs&gt;</maxnoofbeare 			EACH	ignore
>>>CHOICE Bearer Option	M					
>>>SCG Bearer						
>>>>E-RAB ID	M		9.2.23		_	
>>>>E-RAB Level QoS Parameters	M		9.2.9	Includes necessary QoS parameters	_	
>>>>DL Forwarding	0		9.2.5		_	
>>>>S1 UL GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	SGW endpoint of the S1 transport bearer. For delivery of UL PDUs.	_	
>>>>Correlation ID	0		Correlation ID 9.2.84		_	
>>>>SIPTO Correlation ID	0		Correlation ID 9.2.84		_	
>>>>Bearer Type	0		9.2.92		YES	ignore
>>>>Ethernet Type	0		9.2.157		YES	ignore
>>>Split Bearer						
>>>>E-RAB ID	M		9.2.23		_	
>>>>E-RAB Level QoS Parameters	M		9.2.9	Includes necessary QoS parameters	-	
>>>>MeNB GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	MeNB endpoint of the X2 transport bearer. For delivery of UL PDUs.	_	
>E-RABs To Be Modified List		01			_	
>>E-RABs To Be Modified Item		1 <maxnoofbeare rs&gt;</maxnoofbeare 			EACH	ignore
>>>CHOICE Bearer Option	М					
>>>SCG Bearer	NA.		0.0.00			
>>>>E-RAB ID	M	<u> </u>	9.2.23		_	

		1	1			1
>>>>E-RAB Level QoS Parameters	0		9.2.9	Includes QoS parameters to be modified	_	
>>>>S1 UL GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	SGW endpoint of the S1 transport bearer. For delivery of UL PDUs.	-	
>>>Split Bearer						
>>>>E-RAB ID	M		9.2.23		-	
>>>>E-RAB Level QoS Parameters	0		9.2.9	Includes QoS parameters to be modified	-	
>>>>MeNB GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	MeNB endpoint of the X2 transport bearer. For delivery of UL PDUs.	I	
>E-RABs To Be Released List		01			1	
>>E-RABs To Be Released Item		1 <maxnoofbeare rs&gt;</maxnoofbeare 			EACH	ignore
>>>CHOICE Bearer Option	М	132				
>>>SCG Bearer						
>>>>E-RAB ID	M		9.2.23		_	
>>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	1	
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer. used for forwarding of UL PDUs	-	
>>>Split Bearer						
>>>>E-RAB ID	M		9.2.23		_	
>>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	
MeNB to SeNB Container	0		OCTET STRING	Includes the SCG- ConfigInfo message as defined in TS 36.331 [9]	YES	ignore
CSG Membership Status	0		9.2.52		YES	reject
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	reject

Range bound	Explanation			
maxnoofBearers	Maximum no. of E-RABs. Value is 256			

# 9.1.3.6 SENB MODIFICATION REQUEST ACKNOWLEDGE

This message is sent by the SeNB to confirm the MeNB's request to modify the SeNB resources for a specific UE.

Direction: SeNB  $\rightarrow$  MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	•	YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	ignore
E-RABs Admitted List		01			YES	ignore
>E-RABs Admitted To Be		1			_	Ü
Added List						
>>E-RABs Admitted To Be Added Item		1 <maxnoofbearers &gt;</maxnoofbearers 			EACH	ignore
>>>CHOICE Bearer Option	М					
>>>SCG Bearer						
>>>>E-RAB ID	М		9.2.23		_	
>>>>S1 DL GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	SeNB endpoint of the S1 transport bearer. For delivery of DL PDUs.	-	
>>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	I	
>>>Split Bearer						
>>>>E-RAB ID	M		9.2.23		_	
>>>>SeNB GTP Tunnel Endpoint	M		GTP Tunnel Endpoint 9.2.1	Endpoint of the X2 transport bearer at the SeNB.	I	
>E-RABs Admitted To Be Modified List		01			_	
>>E-RABs Admitted To Be Modified Item		1 <maxnoofbearers &gt;</maxnoofbearers 			EACH	ignore
>>>CHOICE Bearer Option	М					
>>>SCG Bearer						
>>>>E-RAB ID	М		9.2.23		_	
>>>>S1 DL GTP Tunnel Endpoint	Ö		GTP Tunnel Endpoint 9.2.1	SeNB endpoint of the S1 transport bearer. For delivery of DL PDUs.	_	
>>>Split Bearer						
>>>>E-RAB ID	М		9.2.23		-	

>>>>SeNB GTP Tunnel Endpoint  >E-RABs Admitted To Be	0	01	GTP Tunnel Endpoint 9.2.1	Endpoint of the X2 transport bearer at the SeNB.	-	
Released List		01			_	
>>E-RABs Admitted To Be Released Item		1 <maxnoofbearers< td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxnoofbearers<>			EACH	ignore
>>>CHOICE Bearer Option	М					
>>>SCG Bearer						
>>>>E-RAB ID	М		9.2.23			
>>>Split Bearer						
>>>>E-RAB ID	M		9.2.23		_	
E-RABs Not Admitted List	0		E-RAB List 9.2.28	A value for E-RAB ID shall only be present once in E-RABs Admitted List IE and in E- RABs Not Admitted List IE.	YES	ignore
SeNB to MeNB Container	0		OCTET STRING	Includes the SCG-Config message as defined in TS 36.331	YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	Ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

## 9.1.3.7 SENB MODIFICATION REQUEST REJECT

This message is sent by the SeNB to inform the MeNB that the MeNB initiated SeNB Modification Preparation has failed.

Direction: SeNB  $\rightarrow$  MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	ignore
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	ignore

## 9.1.3.8 SENB MODIFICATION REQUIRED

This message is sent by the SeNB to the MeNB to request the modification of SeNB resources for a specific UE.

Direction: SeNB  $\rightarrow$  MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	reject
Cause	M		9.2.6		YES	ignore
SCG Change Indication	0		9.2.73		YES	ignore
E-RABs To Be Released List		01			YES	ignore
>E-RABs To Be Released Item		1 <maxnoofbeare rs&gt;</maxnoofbeare 			EACH	ignore
>>E-RAB ID	M		9.2.23		_	
>>Cause	M		9.2.6		_	
SeNB to MeNB Container	0		OCTET STRING	Includes the SCG- Config message as defined in TS 36.331 [9]	YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	reject

Range bound	Explanation		
maxnoofBearers	Maximum no. of E-RABs. Value is 256		

## 9.1.3.9 SENB MODIFICATION CONFIRM

This message is sent by the MeNB to inform the SeNB about the successful modification.

Direction: MeNB  $\rightarrow$  SeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	ignore
MeNB to SeNB Container	0		OCTET STRING	Includes the SCG-ConfigInfo message as defined in TS 36.331	YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	ignore

## 9.1.3.10 SENB MODIFICATION REFUSE

This message is sent by the MeNB to inform the SeNB that the SeNB initiated SeNB Modification has failed.

Direction: MeNB  $\rightarrow$  SeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13	_	YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	ignore
Cause	M		9.2.6		YES	ignore
MeNB to SeNB Container	0		OCTET STRING	Includes the SCG-ConfigInfo message as defined in TS 36.331	YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	ignore

## 9.1.3.11 SENB RELEASE REQUEST

This message is sent by the MeNB to the SeNB to request the release of resources.

Direction: MeNB  $\rightarrow$  SeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	•	YES	ignore
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID	0		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	reject
Cause	0		9.2.6		YES	ignore
E-RABs To Be Released List		01			YES	ignore
> E-RABs To Be Released Item		1 <maxnoofbearers &gt;</maxnoofbearers 			EACH	ignore
>>CHOICE Bearer Option	М					
>>>SCG Bearer						
>>>E-RAB ID	М		9.2.23		_	
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	-	
>>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer. used for forwarding of DL PDUs	-	
>>>Split Bearer						
>>>E-RAB ID	М		9.2.23		_	
>>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer. used for forwarding of DL PDUs	-	
UE Context Kept Indicator	0		9.2.85		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	reject
MakeBeforeBreak Indicator	0		ENUMERAT ED (True, ,)		YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs, Value is 256

# 9.1.3.12 SENB RELEASE REQUIRED

This message is sent by the SeNB to request the release of all resources for a specific UE at the SeNB.

Direction: SeNB  $\rightarrow$  MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	reject
Cause	M		9.2.6		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	reject

## 9.1.3.13 SENB RELEASE CONFIRM

This message is sent by the MeNB to confirm the release of all resources for a specific UE at the SeNB.

Direction: MeNB  $\rightarrow$  SeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	ignore
E-RABs to be Released List		01			YES	ignore
>E-RABs To Be Released Item		1 <maxnoofbearers &gt;</maxnoofbearers 			-	
>>CHOICE Bearer Option	М					
>>>SCG Bearer			0.000			
>>>E-RAB ID	М		9.2.23	11 20 2		
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	-	
>>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	
>>>Split Bearer						
>>>E-RAB ID	М		9.2.23		_	
>>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	ignore

Range bound	Explanation		
maxnoofBearers	Maximum no. of E-RABs. Value is 256		

## 9.1.3.14 SENB COUNTER CHECK REQUEST

This message is sent by the SeNB to request the verification of the value of the PDCP COUNTs associated with SCG bearers established in the SeNB.

Direction: SeNB  $\rightarrow$  MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the SeNB	YES	ignore
E-RABs Subject to Counter Check List		1			YES	ignore
>E-RABs Subject to Counter Check Item		1 <maxnoofbearers &gt;</maxnoofbearers 			EACH	ignore
>>E-RAB ID	M		9.2.23		-	
>>UL COUNT	M	INTEGER(0 4294967295)		Indicates the value of uplink COUNT associated to this E-RAB.	-	
>>DL COUNT	М	INTEGER(0 4294967295)		Indicates the value of downlink COUNT associated to this E-RAB.	-	
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore
SeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the SeNB	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

# 9.1.4 Messages for E-UTRAN-NR Dual Connectivity Procedures

## 9.1.4.1 SGNB ADDITION REQUEST

This message is sent by the MeNB to the en-gNB to request the preparation of resources for EN-DC operation for a specific UE

Direction: MeNB  $\rightarrow$  en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
NR UE Security Capabilities	M		9.2.107		YES	reject
SgNB Security Key	М		9.2.101	The S-KgNB which is provided by the MeNB, see TS 33.401 [18].	YES	reject
SgNB UE Aggregate Maximum Bit Rate	М		UE Aggregate Maximum Bit Rate 9.2.12	The UE Aggregate Maximum Bit Rate is split into MeNB UE Aggregate Maximum Bit Rate and SgNB UE Aggregate Maximum Bit Rate which are enforced by MeNB and en- gNB respectively.	YES	reject
Selected PLMN	0		PLMN Identity 9.2.4	The selected PLMN of the SCG in the en-gNB.	YES	ignore
Handover Restriction List	0		9.2.3		YES	ignore
E-RABs To Be Added List		1			YES	reject
>E-RABs To Be Added		1			EACH	reject
Item		<maxnoofbeare rs&gt;</maxnoofbeare 			2,1011	10,000
>>E-RAB ID	M		9.2.23		_	
>>DRB ID	M		9.2.122		_	
>>EN-DC Resource Configuration	М		EN-DC Resource Configuratio n 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration.	_	
>>CHOICE Resource Configuration	М					
>>>PDCP present in SN				This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present".		
>>>Full E-RAB Level QoS Parameters	М		E-RAB Level QoS Parameters 9.2.9	Includes the E-RAB level QoS parameters as received on S1- MME.	_	
>>>>Maximum MCG admittable E-RAB Level QoS Parameters	C- ifMCGand SCGprese nt_GBR		GBR QoS Information 9.2.10	Includes the GBR QoS Information admittable by the MCG.	-	
>>>>DL Forwarding	0		9.2.5		_	
>>>>MeNB DL GTP Tunnel Endpoint at MCG	C- ifMCGpres ent		GTP Tunnel Endpoint 9.2.1	MeNB endpoint of the X2-U transport bearer at MCG. For delivery of DL PDCP PDUs.	_	
>>>S1 UL GTP Tunnel Endpoint	М		GTP Tunnel Endpoint 9.2.1	SGW endpoint of the S1-U transport bearer. For delivery of UL PDUs from the en-gNB.	-	

	1 - 1	15:5:	I		
>>>RLC Mode	0	RLC Mode 9.2.119	Indicates the RLC mode at the MeNB	YES	ignore
			for PDCP transfer		
>>>>Bearer Type	0	9.2.92	to en-gNB.	YES	ignore
>>>Ethernet Type	0	9.2.157		YES	ignore
>>>PDCP not present		0.2.107	This choice tag is	120	ignore
in SN			used if the PDCP at		
6.1			SgNB IE in the EN-		
			DC Resource		
			Configuration IE is		
			set to the value		
			"not present".		
>>>Requested SCG	M	E-RAB Level	Includes E-RAB	_	
E-RAB Level QoS		QoS	level QoS		
Parameters		Parameters	parameters		
		9.2.9	requested to be		
			provided by the		
			SCG.		
>>>>MeNB UL GTP	M	GTP Tunnel	MeNB endpoint of	_	
Tunnel Endpoint at		Endpoint	the X2-U transport		
PDCP		9.2.1	bearer. For delivery		
Cocondon.		CTD Tunnal	of UL PDCP PDUs.		
>>>Secondary MeNB UL GTP	0	GTP Tunnel Endpoint	MeNB endpoint of the X2-U transport	_	
Tunnel Endpoint at		9.2.1	bearer. For delivery		
PDCP		9.2.1	of UL PDCP PDUs		
FDCF			in case of PDCP		
			duplication.		
>>>RLC Mode	M	RLC Mode	Indicates the RLC		
>>>TEO WOOD	141	9.2.119	mode to be used in		
		0.2.110	the assisting node.		
>>>UL Configuration	C-	9.2.118	Information about	_	
3	ifMCGand		UL usage in the en-		
	SCGprese		gNB.		
	nt				
>>>>UL PDCP SN	0	PDCP SN	Indicates the PDCP	YES	ignore
Length		Length	SN length of the		
		9.2.133	bearer for the UL.		
>>>DL PDCP SN	0	PDCP SN	Indicates the PDCP	YES	ignore
Length		Length	SN length of the		
D # 4		9.2.133	bearer for the DL.	\/F0	
>>>>Duplication	0	9.2.137	Indicated the initial staus of PDCP	YES	ignore
activation			duplication.		
MeNB to SgNB Container	M	OCTET	Includes the CG-	YES	reject
Mend to Sgnb Container	IVI	STRING	ConfigInfo	ILS	reject
		STRING	message as		
			defined in TS		
			38.331 [31].		
SgNB UE X2AP ID	0	en-gNB UE	Allocated at the en-	YES	reject
- G	-	X2AP ID	gNB.		, 5,550
		9.2.100			
Expected UE Behaviour	0	9.2.70		YES	ignore
MeNB UE X2AP ID	0	Extended	Allocated at the	YES	reject
Extension		eNB UE	MeNB.		
		X2AP ID			
		9.2.86			
Requested split SRBs	0	ENUMERAT	Indicates that	YES	reject
		ED (srb1,	resources for Split		
		srb2,	SRB are requested.		
M ND D		srb1&2,)		\/=0	
MeNB Resource	0	9.2.116	Information used to	YES	ignore
Coordination Information			coordinate		
			resources		
			utilisation between		
			MeNB and en-gNB.		

SGNB Addition Trigger Indication	0	ENUMERAT ED (SN change, inter-eNB HO, intra- eNB HO,)	This IE indicates the trigger for SGNB Addition procedure.	YES	reject
Subscriber Profile ID for RAT/Frequency priority	0	9.2.25		YES	ignore
MeNB Cell ID	M	ECGI 9.2.14	Indicates the cell ID for PCell in MeNB.	YES	reject
Desired Activity Notification Level	0	9.2.141		YES	ignore
Trace Activation	0	9.2.2		YES	ignore
Location Information at SgNB reporting	0	ENUMERAT ED (pscell,)	Indicates that the user's location information is to be provided.	YES	ignore
Masked IMEISV	0	9.2.69		YES	ignore
Additional RRM Policy Index	0	9.2.25a		YES	ignore
Requested Fast MCG recovery via SRB3	0	ENUMERAT ED (true,)	Indicates that the resources for fast MCG recovery via SRB3 are requested.	YES	ignore
UE Context Reference at Source NG-RAN	0	RAN UE NGAP ID 9.2.152		YES	ignore
Management Based MDT Allowed	0	9.2.59		YES	ignore
Management Based MDT PLMN List	0	MDT PLMN List 9.2.64		YES	ignore
UE Radio Capability ID	0	9.2.171		YES	reject
IAB Node Indication	0	ENUMERAT ED (true,)		YES	reject

Range bound	Explanation		
maxnoofBearers	Maximum no. of E-RABs. Value is 256.		

Condition	Explanation
ifMCGandSCGpresent	This IE shall be present if, for the E-RAB requested to be added, the MCG resources and SCG resources IEs in the EN-DC Resource
	Configuration IE are set to the value "present".
ifMCGpresent	This IE shall be present if, for the E-RAB requested to be added, the MCG resources IE in the EN-DC Resource Configuration IE is set to the value "present".
C-ifMCGandSCGpresent_GBR	This IE shall be present if, for the E-RAB requested to be added, the MCG resources and SCG resources IEs in the EN-DC Resource Configuration IE are set to the value "present", and GBR QoS Information IE is present in Full E-RAB Level QoS Parameters IE.

### 9.1.4.2 SGNB ADDITION REQUEST ACKNOWLEDGE

This message is sent by the en-gNB to confirm the MeNB about the SgNB addition preparation.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	М		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.	YES	reject
E-RABs Admitted To Be Added List		1			YES	ignore
>E-RABs Admitted To Be Added Item		1 <maxnoofbe arers&gt;</maxnoofbe 			EACH	ignore
>>E-RAB ID	M		9.2.23		_	
>>EN-DC Resource Configuration	M		EN-DC Resource Configuration 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration.	_	
>>CHOICE Resource Configuration	M					
>>>PDCP present in SN				This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present".		
>>>S1 DL GTP Tunnel Endpoint at the SgNB	M		GTP Tunnel Endpoint 9.2.1	en-gNB endpoint of the S1 transport bearer. For delivery of DL PDUs.	-	
>>>>SgNB UL GTP Tunnel Endpoint at PDCP	C- ifMCGpres ent		GTP Tunnel Endpoint 9.2.1	en-gNB endpoint of the X2-U transport bearer at PDCP. For delivery of UL PDCP PDUs.	_	
>>>RLC Mode	C- ifMCGpres ent		RLC Mode 9.2.119	Indicates the RLC mode.	-	
>>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	
>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	-	
>>>Requested MCG E-RAB Level QoS Parameters	C- ifMCGand SCGprese nt_GBRpr esent		E-RAB Level QoS Parameters 9.2.9	Includes E-RAB level QoS parameters requested to be provided by the MCG.	-	
>>>UL Configuration	C- ifMCGand SCGprese nt		9.2.118	Information about UL usage in the MeNB.	_	
>>>UL PDCP SN Length	0		PDCP SN Length 9.2.133	Indicates the PDCP SN length of the bearer for the UL.	YES	ignore
>>>DL PDCP SN Length	0		PDCP SN Length 9.2.133	Indicates the PDCP SN length of the bearer for the DL.	YES	ignore

>>>PDCP not present in SN			This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "not present".		
>>>>SgNB DL GTP Tunnel Endpoint at SCG	M	GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs.	-	
>>>>Secondary SgNB DL GTP Tunnel Endpoint at SCG	0	GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs in case of PDCP duplication	<del>-</del>	
>>>>LCID	0	9.2.138	LCID for the primary path in case of PDCP duplication	YES	ignore
E-RABs Not Admitted List	0	E-RAB List 9.2.28	A value for <i>E-RAB ID</i> shall only be present once in <i>E-RABs Admitted List</i> IE and in <i>E-RABs Not Admitted List</i> IE.	YES	ignore
SgNB to MeNB Container	М	OCTET STRING	Includes the CG- Config message as defined in TS 38.331[31].	YES	reject
Criticality Diagnostics	0	9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0	Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
Admitted split SRBs	0	ENUMERATE D (srb1, srb2, srb1&2,)	Indicates admitted SRBs	YES	reject
SgNB Resource Coordination Information	0	9.2.117	Information used to coordinate resources utilisation between en-gNB and MeNB.	YES	ignore
RRC config indication	0	9.2.132	Indicates the type of RRC configuration used at the en-gNB.	YES	reject
Location Information at SgNB	0	9.2.142	Contains information to support localisation of the UE	YES	ignore
Available fast MCG recovery via SRB3	0	ENUMERATE D (true,)	Indicates the fast MCG recovery via SRB3 isenabled.	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

Condition	Explanation
ifMCGpresent	This IE shall be present if, for the E-RAB admitted to be added, the
	MCG resources IE in the EN-DC Resource Configuration IE is set to the value "present".

ifMCGandSCGpresent	This IE shall be present if, for the E-RAB admitted to be added, the
	MCG resources and SCG resources IEs in the EN-DC Resource
	Configuration IE are set to the value "present".
C-ifMCGandSCGpresent_GBRpresent	This IE shall be present if, for the E-RAB admitted to be added, the
	MCG resources and SCG resources IEs in the EN-DC Resource
	Configuration IE are set to the value "present", and the GBR QoS
	Information IE is present in the Requested MCG E-RAB Level QoS
	Parameters IE.

#### 9.1.4.3 SGNB ADDITION REQUEST REJECT

This message is sent by the en-gNB to inform the MeNB that the SgNB Addition Preparation has failed.

Direction: en-gNB  $\rightarrow$  MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	0		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	reject
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

#### 9.1.4.4 SGNB RECONFIGURATION COMPLETE

This message is sent by the MeNB to the en-gNB to indicate whether the configuration requested by the en-gNB was applied by the UE.

Direction: MeNB  $\rightarrow$  en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.	YES	reject
Response Information	M				YES	ignore
>CHOICE Response Type	M					
>>Configuration successfully applied						
>>>MeNB to SgNB Container	0		OCTET STRING	Includes the NR RRCReconfiguration Complete message as defined in TS 38.331 [31].	-	
>>Configuration rejected						
>>>Cause	M		9.2.6		-	
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject

#### 9.1.4.5 SGNB MODIFICATION REQUEST

This message is sent by the MeNB to the en-gNB to request the preparation to modify en-gNB resources for a specific UE, to query for the current SCG configuration, or to provide the S-RLF-related information to the en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.	YES	reject
Cause	М		9.2.6		YES	ignore
Selected PLMN	0		PLMN Identity 9.2.4	The selected PLMN of the SCG in the en-gNB.	YES	ignore
Handover Restriction List	0		9.2.3		YES	ignore
SCG Configuration Query	0		9.2.103		YES	ignore
UE Context Information		01			YES	reject
>NR UE Security Capabilities	0		9.2.107		_	
>SgNB Security Key	0		9.2.101		_	
>SgNB UE Aggregate Maximum Bit Rate	0		UE Aggregate Maximum Bit Rate 9.2.12		-	
>Lower Layer presence status change	0		9.2.145		_	
>E-RABs To Be Added List		01			_	
>>E-RABs To Be Added Item		1 <maxnoofbeare rs&gt;</maxnoofbeare 			EACH	ignore
>>>E-RAB ID	М		9.2.23		_	
>>>DRB ID	M		9.2.122		_	
>>>EN-DC Resource Configuration	M		EN-DC Resource Configuratio n 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration.	-	
>>>CHOICE Resource Configuration	M					
>>>>PDCP present in SN				This choice tag is used if the PDCP at SgNB IE in the ENDCP at SgNB IE in the ENDCP Resource Configuration IE is set to the value "present".	-	
>>>>Full E-RAB Level QoS Parameters	M		E-RAB Level QoS Parameters 9.2.9	Includes E-RAB level QoS parameters as received on S1- MME.	_	
>>>>Maximum MCG admittable E- RAB Level QoS Parameters	C- ifMCGand SCGprese nt_GBR		GBR QoS Information 9.2.10	Includes the GBR QoS Information admittable by the MCG.	-	
>>>>DL Forwarding	0		9.2.5		_	
>>>>MeNB DL GTP Tunnel Endpoint at MCG	C- ifMCGpres ent		GTP Tunnel Endpoint 9.2.1	MeNB endpoint of the X2-U transport bearer at MCG. For delivery of DL PDCP PDUs.		

>>>>S1 UL GTP	M		GTP Tunnel	SGW endpoint of	_	
Tunnel Endpoint			Endpoint	the S1-U transport		
·			9.2.1	bearer. For delivery		
				of UL PDUs from		
				the en-gNB.		
>>>>RLC Mode	0		RLC Mode	Indicates the RLC	YES	ignore
>>>>IXEO IVIOGE			9.2.119	mode at the MeNB	120	ignore
			9.2.119	for PDCP transfer		
				to en-gNB.		
>>>>Bearer Type	0		9.2.92		YES	ignore
>>>>Ethernet	0		9.2.157		YES	ignore
Type						
>>>PDCP not				This choice tag is		
present in SN				used if the PDCP at		
				SgNB IE in the EN-		
				DC Resource		
				Configuration IE is		
				set to the value		
				"present".		
>>>>Requested	М		E-RAB Level	Includes necessary		
SCG E-RAB Level	IVI		QoS	E-RAB level QoS	_	
QoS Parameters			Parameters	parameters		
			9.2.9	requested to be		
				provided by the		
				SCG.		
>>>>MeNB UL	M		GTP Tunnel	MeNB endpoint of	_	
GTP Tunnel			Endpoint	the X2-U transport		
Endpoint at PDCP			9.2.1	bearer. For delivery		
·				of UL PDCP PDUs.		
>>>>Secondary	0		GTP Tunnel	MeNB endpoint of	_	
MeNB UL GTP			Endpoint	the X2-U transport		
Tunnel Endpoint at			9.2.1	bearer. For delivery		
PDCP			0.2.1	of UL PDCP PDUs		
1 501				in case of PDCP		
				duplication.		
>>>>RLC Mode	N/A		RLC Mode	Indicates the RLC		
>>>>RLC iviode	M				_	
			9.2.119	mode to be used in		
				the assisting node.		
>>>>UL	C-		9.2.118	Information about	_	
Configuration	ifMCGand			UL usage in the en-		
	SCGprese			gNB.		
	nt					
>>>>UL PDCP SN	0		PDCP SN	Indicates the PDCP	YES	ignore
Length			Length	SN length of the		· ·
			9.2.133	bearer for the UL.		
>>>>DL PDCP SN	0		PDCP SN	Indicates the PDCP	YES	ignore
Length			Length	SN length of the	120	ignore
Lengin			9.2.133	bearer for the DL.		
>>>>Duplication	0		9.2.137	Indicated the initial	YES	ianoro
	U		9.2.137		150	ignore
activation				staus of PDCP		
				duplication.		
>E-RABs To Be Modified		01			_	
List						
>>E-RABs To Be		1	1		EACH	ignore
Modified Item		<maxnoofbeare< td=""><td>1</td><td></td><td></td><td></td></maxnoofbeare<>	1			
	<u> </u>	rs>	<u> </u>			
>>>E-RAB ID	M		9.2.23		_	<del></del>
>>>EN-DC Resource	М		EN-DC	Indicates the PDCP	_	
Configuration			Resource	and Lower Layer		
			Configuratio	MCG/SCG		
			n	configuration.		
			9.2.108	John garadon.		
>>>CHOICE Resource	M		J.Z. 100			
Sycholice Resource Configuration	IVI					
ı Comiduration	1	İ	1	Ī		

Sg/WB IE in the EN-DC Resource Configuration IE is set to the value 'present'.	SCG E-RAB Level			QoS Parameters 9.2.9	DC Resource Configuration IE is set to the value "not present".  Includes E-RAB level QoS parameters requested to be provided by the SCG.	-	
DC Resource   Configuration IE is set to the value present.	SCG E-RAB Level	0		QoS Parameters	DC Resource Configuration IE is set to the value "not present". Includes E-RAB level QoS parameters requested to be provided by the	_	
DC Resource   Configuration   E is set to the value 'present'.	SCG E-RAB Level	0		QoS Parameters	DC Resource Configuration IE is set to the value "not present". Includes E-RAB level QoS parameters	_	
DC Resource   Configuration IE is set to the value   Present*.	SCG E-RAB Level	0		QoS	DC Resource Configuration IE is set to the value "not present". Includes E-RAB level QoS	-	
DC Resource   Configuration IE is set to the value 'present''.		0		E-RAB Level	DC Resource Configuration IE is set to the value "not present".	_	
DC Resource Configuration IE is set to the value "present".					DC Resource Configuration IE is set to the value		
DC Resource   Configuration IE is set to the value "present".					DC Resource Configuration IE is set to the value		
DC Resource   Configuration   E is set to the value "present".					DC Resource		
DC Resource   Configuration IE is set to the value "present".							
DC Resource   Configuration IE is set to the value "present".	•	•					
DC Resource   Configuration IE is set to the value "present".		1		1		l	1
DC Resource   Configuration IE is set to the value "present".	present in SN						
DC Resource Configuration IE is set to the value "present".							
DC Resource Configuration IE is set to the value "present".	>>>PDCP not		1	1			
DC Resource Configuration IE is set to the value "present".				_			
DC Resource   Configuration   E is set to the value "present".							
DC Resource   Configuration   E is set to the value "present".	>>>>KLU Status			J.Z. 131			
DC Resource Configuration IE is set to the value "present".  >>>>Full E-RAB Level QoS Parameters Parameters  9.2.9  Serial E-RAB Level QoS Parameters 9.2.9  Serial E-RAB Level QoS Parameters 9.2.9  Serial E-RAB Level QoS Parameters Parameters 9.2.9  Serial E-RAB Level QoS Parameters Parameters 9.2.9  Serial E-RAB Level QoS Parameters Parameters Parameters  Serial E-RAB Level QoS Parameters Parameters Parameters  Serial E-RAB Level QoS Parameters P	>>>>RLC Status	0	1	9.2.131			
DC Resource   Configuration   E is set to the value   "present".			1_	<u></u>	the en-gNB.		
DC Resource   Configuration   E is set to the value   "present".							
DC Resource Configuration IE is set to the value "present".							
DC Resource Configuration IE is set to the value "present".					bearer. For delivery		
DC Resource Configuration IE is set to the value "present".  >>>>Full E-RAB O E-RAB Level Includes E-RAB   - Includes E-RAB   Includes E-RAB   - Includes E-RAB   Includes E-RAB	Lunnel Endpoint						
DC Resource Configuration IE is set to the value "present".    Set to the value						_	
DC Resource Configuration IE is set to the value "present".    Set to the value		0			SGW endpoint of		
DC Resource   Configuration   E is set to the value "present".	SSSS CALL OTD	0	+	GTD Tunnel			1
DC Resource   Configuration   E is set to the value "present".	24 2==	<del>                                     </del>	+	OTD T			1
DC Resource   Configuration   E is set to the value "present".			<u> </u>		PDCP PDUs.	<u></u>	
DC Resource Configuration IE is set to the value "present".  >>>>Full E-RAB Level QoS Parameters  Parameters  O  GBR QoS Includes the GBR AB Level QoS Information RAB Level QoS Parameters  O  GBR QoS Includes the GBR OS Information QoS in							
DC Resource Configuration IE is set to the value "present".  >>>>Full E-RAB Level QoS Parameters Pa	IVICG	1		9.2.1			
DC Resource Configuration IE is set to the value "present".  >>>>>Full E-RAB Level QoS Parameters Parameters  O  E-RAB Level Includes E-RAB level QoS Parameters parameters to be modified as received on S1- MME  >>>>>Maximum MCG admittable E- RAB Level QoS Parameters  O  GBR QoS Includes the GBR QoS information QoS information admittable by the MCG  >>>>>MeNB GTP O  GTP Tunnel  MeNB endpoint of  -		1				l	
DC Resource Configuration IE is set to the value "present".  >>>>Full E-RAB Level QoS Parameters  Parameters  O  E-RAB Level QoS Parameters  Parameters  Parameters  O  GBR QoS Includes E-RAB Parameters to be modified as received on S1- MME  >>>>Maximum MCG admittable E- RAB Level QoS Parameters  O  GBR QoS Includes the GBR QoS information admittable by the MCG  Parameters		~					
DC Resource Configuration IE is set to the value "present".  >>>>Full E-RAB Level QoS Parameters  Parameters  O  E-RAB Level QoS Parameters  Parameters  Parameters  O  GBR QoS Includes E-RAB Parameters to be modified as received on S1- MME  >>>>Maximum MCG admittable E- RAB Level QoS Parameters  O  GBR QoS Includes the GBR QoS information QoS information admittable by the MCG  MCG		0		GTP Tunnel		_	
DC Resource Configuration IE is set to the value "present".  >>>>Full E-RAB Level QoS Parameters Parameters  O  E-RAB Level QoS Parameters Parameters  Parameters  O  GBR QoS Includes the GBR O  GBR QoS Information PAB Level QoS Information PAB Level QoS Indides the GBR O  GBR QoS Information PAB Level QoS Indides the GBR O  GBR QoS Includes the GBR O  GBR QOS Incl					MCG		
DC Resource Configuration IE is set to the value "present".  >>>>>Full E-RAB Level QoS Parameters  Parameters  DC Resource Configuration IE is set to the value "present".  E-RAB Level Includes E-RAB level QoS Parameters to be parameters to be modified as received on S1- MME  >>>>>Maximum MCG admittable E-  DC Resource Configuration IE is set to the value "present".  Includes E-RAB Parameters to be modified as received on S1- MME  O GBR QoS Includes the GBR QoS information		1		9.2.10		l	
DC Resource Configuration IE is set to the value "present".  >>>>>Full E-RAB Level QoS Parameters Parameters  DC Resource Configuration IE is set to the value "present".  E-RAB Level Includes E-RAB level QoS Parameters parameters to be modified as received on S1- MME  >>>>>Maximum O GBR QoS Includes the GBR  -		1				l	
DC Resource Configuration IE is set to the value "present".  >>>>Full E-RAB Level QoS Parameters to be modified as received on S1- MME		1				_	
DC Resource Configuration IE is set to the value "present".  >>>>Full E-RAB Level QoS Parameters  Parameters  DC Resource Configuration IE is set to the value "present".  E-RAB Level Includes E-RAB level QoS Parameters parameters to be modified as received on S1-	>>>>Maximum	0	1	GBR Oos		_	
DC Resource Configuration IE is set to the value "present".  >>>>Full E-RAB Level QoS Parameters  Parameters  DC Resource Configuration IE is set to the value "present".  E-RAB Level Includes E-RAB level QoS Parameters parameters to be modified as received on S1-		<u></u>		<u></u>	MME	<u></u>	<u>L</u>
DC Resource Configuration IE is set to the value "present".  >>>>Full E-RAB Level QoS Parameters  Parameters  DC Resource Configuration IE is set to the value "present".  E-RAB Level Includes E-RAB Level QoS Parameters parameters to be 9.2.9  podified as	1	1				l	
DC Resource Configuration IE is set to the value "present".  >>>>Full E-RAB Level QoS Parameters  DC Resource Configuration IE is set to the value "present".	1	1		ಶ.∠.⊎		l	
DC Resource Configuration IE is set to the value "present".  >>>>Full E-RAB O Level QoS  E-RAB Level QoS Includes E-RAB Includ	i aiaiiieleis	1			•	l	
DC Resource Configuration IE is set to the value "present".  >>>>Full E-RAB O E-RAB Level Includes E-RAB —		1				l	
DC Resource Configuration IE is set to the value "present".  >>>>Full E-RAB O E-RAB Level Includes E-RAB —	Level QoS	1		QoS	level QoS	l	
DC Resource Configuration IE is set to the value "present".		ľ				_	
DC Resource Configuration IE is set to the value	Fall E DAD		+	EDAD		<del> </del>	1
DC Resource Configuration IE is	1	1		1		I	1
DC Resource Configuration IE is	1	1				l	
DC Resource	1	1				l	
	1	1				l	ĺ
	1	I		1		I	1
SaNR IF in the FN.	1	I		1		I	1
	1	I		1	SgNB IE in the FN-	I	1
	<b>3</b> /V	I		1		I	1
SN used if the PDCP at		ſ	1	1		I	1
>>>PDCP present in This choice tag is		1	_	1			

>>>EN-DC Resource Configuration	М	EN-DC Resource	Indicates the PDCP and Lower Layer		
Jg		Configuratio	MCG/SCG		
		n 9.2.108	configuration.		
>>>CHOICE Resource Configuration	М	3.2.100			
>>>PDCP present in SN			This choice tag is		
3/1			used if the PDCP at SgNB IE in the EN-		
			DC Resource		
			Configuration IE is set to the value		
			"present".		
>>>>DL	0	GTP Tunnel	Identifies the X2	_	
Forwarding GTP Tunnel Endpoint		Endpoint 9.2.1	transport bearer used for forwarding		
			of DL PDUs		
>>>>UL Forwarding GTP	0	GTP Tunnel Endpoint	Identifies the X2 transport bearer.	_	
Tunnel Endpoint		9.2.1	used for forwarding		
>>>PDCP not			of UL PDUs		
>>>PDCP not present in SN			This choice tag is used if the PDCP at		
			SgNB IE in the EN-		
			DC Resource Configuration IE is		
			set to the value		
>Subscriber Profile ID for	0	9.2.25	"not present".	YES	ianoro
RAT/Frequency priority		9.2.25		150	ignore
>Additional RRM Policy	0	9.2.25a		YES	ignore
Index MeNB to SgNB Container	0	OCTET	Includes the CG-	YES	reject
		STRING	ConfigInfo	0	,
			message as defined in TS		
			38.331 [31].		
MeNB UE X2AP ID Extension	0	Extended eNB UE	Allocated at the MeNB	YES	reject
Extension		X2AP ID	Meind		
M ND D		9.2.86		\/E0	
MeNB Resource Coordination Information	0	9.2.116	Information used to coordinate	YES	ignore
			resources		
			utilisation between		
Requested split SRBs	0	ENUMERAT	MeNB and en-gNB. Indicates that	YES	ignore
		ED (srb1,	resources for Split		J
		srb2, srb1&2,)	SRB are requested.		
Requested split SRBs	0	ENUMERAT	Indicates that	YES	ignore
release		ED (srb1, srb2,	resources for Split SRB are requested		
		 srb1&2,)	to be released.		
Desired Activity Notification Level	0	 9.2.141		YES	ignore
Location Information at SgNB	0	 ENUMERAT	Indicates that the	YES	ignore
reporting		ED (pscell,)	user's location information is to be		
		-	provided.		
MeNB Cell ID	0	 ECGI 9.2.14	Indicates the cell ID for PCell in MeNB.	YES	ignore
Requested Fast MCG	0	 ENUMERAT	Indicates that the	YES	ignore
recovery via SRB3		ED (true,)	resources for fast MCG recovery via		
			SRB3 are		
			requested.		

Requested Fast MCG recovery via SRB3 Release	0	ENUMER ED (true,	YES	ignore
SN triggered	0	ENUMER ED (True	YES	ignore
IAB Node Indication	0	ENUMER ED (true,	YES	reject

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

Condition	Explanation
ifMCGandSCGpresent	This IE shall be present if, for the E-RAB requested to be added, the MCG resources and SCG resources IEs in the EN-DC Resource Configuration IE are set to the value "present".
ifMCGpresent	This IE shall be present if, for the E-RAB requested to be added, the MCG resources IE in the EN-DC Resource Configuration IE is set to the value "present".
C-ifMCGandSCGpresent_GBR	This IE shall be present if, for the E-RAB requested to be added, the MCG resources and SCG resources IEs in the EN-DC Resource Configuration IE are set to the value "present", and GBR QoS Information IE is present in Full E-RAB Level QoS Parameters IE.

## 9.1.4.6 SGNB MODIFICATION REQUEST ACKNOWLEDGE

This message is sent by the en-gNB to confirm the MeNB's request to modify the en-gNB resources for a specific UE. Direction: en-gNB  $\rightarrow$  MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.	YES	ignore
E-RABs Admitted To Be Added List		01			YES	ignore
>E-RABs Admitted To Be		1			EACH	ignore
Added Item		<maxnoofb earers&gt;</maxnoofb 				
>>E-RAB ID	M		9.2.23		_	
>>EN-DC Resource Configuration	M		EN-DC Resource Configuration 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration.	_	
>>CHOICE Resource Configuration	M					
>>>PDCP present in SN				This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present".		
>>>>S1 DL GTP Tunnel Endpoint at the SgNB	M		GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the S1 transport bearer. For delivery of DL PDUs.	-	
>>>>SgNB UL GTP Tunnel Endpoint at PDCP	C- ifMCGpres ent		GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the X2-U transport bearer at PDCP. For delivery of UL PDCP PDUs.	-	
>>>RLC Mode	C- ifMCGpres ent		RLC Mode 9.2.119	Indicates the RLC mode to be used at the assisting node.	_	
>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	_	
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	-	
>>>>Requested MCG E-RAB Level QoS Parameters	C- ifMCGand SCGprese nt_GBRpr esent		E-RAB Level QoS Parameters 9.2.9	Includes E-RAB level QoS parameters requested to be provided by the MCG.	_	
>>>>UL Configuration	C- ifMCGand SCGprese nt		9.2.118	Information about UL usage in the MeNB.	-	
>>>>UL PDCP SN Length	0		PDCP SN Length 9.2.133	Indicates the PDCP SN length of the bearer for the UL.	YES	ignore
>>>DL PDCP SN Length	0		PDCP SN Length 9.2.133	Indicates the PDCP SN length of the bearer for the DL.	YES	ignore
>>>PDCP not present in SN				This choice tag is used if the PDCP at SgNB IE in the ENDCP at DC Resource Configuration IE is set to the value "not present".		

>>>>SgNB DL GTP Tunnel Endpoint at SCG	М		GTP Tunnel Endpoint 9.2.1	Endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs.	_	
>>>Secondary SgNB DL GTP Tunnel Endpoint at SCG	0		GTP Tunnel Endpoint 9.2.1	Endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs in case of PDCP duplication.	-	
>>>LCID	0		9.2.138	LCID for the primary path in case of PDCP duplication configured.	YES	ignore
E-RABs Admitted To Be Modified List		01			YES	ignore
>E-RABs Admitted To Be Modified Item		1 <maxnoofb earers&gt;</maxnoofb 			EACH	ignore
>>E-RAB ID	M		9.2.23		1	
>>EN-DC Resource Configuration	M		EN-DC Resource Configuration 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration.	1	
>>CHOICE Resource Configuration	М					
>>>PDCP present in SN				This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present".		
>>>S1 DL GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the S1 transport bearer. For delivery of DL PDUs.	-	
>>>>SgNB UL GTP Tunnel Endpoint at PDCP	0		GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the X2-U transport bearer at PDCP. For delivery of UL PDCP PDUs.	-	
>>>Requested MCG E-RAB Level QoS Parameters	0		E-RAB Level QoS Parameters 9.2.9	Includes E-RAB level QoS parameters requested to be provided by the MCG.	-	
>>>UL Configuration	0		9.2.118	Information about UL usage in the MeNB.	_	
>>>UL PDCP SN Length	0		PDCP SN Length 9.2.133	Shall be ignored by the MeNB if received.	YES	ignore
>>>>DL PDCP SN Length	0		PDCP SN Length 9.2.133	Shall be ignored by the MeNB if received.	YES	ignore
>>>PDCP not present in SN				This choice tag is used if the PDCP at SgNB IE in the ENDCP Resource Configuration IE is set to the value "not present".		
>>>>SgNB DL GTP Tunnel Endpoint at SCG	0		GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs.	-	

>>>Secondary SgNB DL GTP Tunnel Endpoint at SCG	0		GTP Tunnel Endpoint 9.2.1	Endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs in case of PDCP duplication.	YES	ignore
>>>RLC Status	0		9.2.131	Indicates the RLC has been re-established.	YES	ignore
E-RABs Admitted To Be Released List		01			YES	ignore
>E-RABs Admitted To Be Released Item		1 <maxnoofb earers&gt;</maxnoofb 			EACH	ignore
>>E-RAB ID	М		9.2.23		_	
>>EN-DC Resource Configuration	M		EN-DC Resource Configuration 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration.	-	
>>CHOICE Resource Configuration	M			Note: no further information contained in the IE container		
E-RABs Not Admitted List	0		E-RAB List 9.2.28	A value for <i>E-RAB ID</i> shall only be present once in <i>E-RABs</i> Admitted List IE and in <i>E-RABs Not</i> Admitted List IE.	YES	ignore
SgNB to MeNB Container	0		OCTET STRING	Includes the NR CG- Config message as defined in TS 38.331 [31].	YES	ignore
Criticality Diagnostics	0		9.2.7	[0.].	YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore
SgNB Resource Coordination Information	0		9.2.117	Information used to coordinate resources utilisation between en-gNB and MeNB.	YES	ignore
Admitted split SRBs	0		ENUMERATE D (srb1, srb2, srb1&2,)	Indicates admitted SRBs	YES	ignore
Admitted split SRBs release	0		ENUMERATE D (srb1, srb2, srb1&2,)	Indicates admitted SRBs release	YES	ignore
RRC config indication	0		9.2.132	Indicates the type of RRC configuration used at the en-gNB.	YES	reject
Location Information at SgNB	0		9.2.142	Contains information to support localisation of the UE	YES	ignore
Available fast MCG recovery via SRB3	0		ENUMERATE D (true,)	Indicates the fast MCG recovery via SRB3 isenabled.	YES	ignore
Release fast MCG recovery via SRB3	0		ENUMERATE D (true,)	Indicates the fast MCG recovery via SRB3 is released.	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

Condition	Explanation

ifMCGandSCGpresent	This IE shall be present if, for the E-RAB admitted to be added, the
	MCG resources and SCG resources IEs in the EN-DC Resource
	Configuration IE are set to the value "present".
ifMCGpresent	This IE shall be present if, for the E-RAB admitted to be added, the
	MCG resources IE in the EN-DC Resource Configuration IE is set to
	the value "present".
C-ifMCGandSCGpresent_GBRpresent	This IE shall be present if, for the E-RAB admitted to be added, the
	MCG resources and SCG resources IEs in the EN-DC Resource
	Configuration IE are set to the value "present", and the GBR QoS
	Information IE is present in the Requested MCG E-RAB Level QoS
	Parameters IE.

#### 9.1.4.7 SGNB MODIFICATION REQUEST REJECT

This message is sent by the en-gNB to inform the MeNB that the MeNB initiated SgNB Modification Preparation has failed.

Direction: en-gNB  $\rightarrow$  MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	ignore
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	ignore

#### 9.1.4.8 SGNB MODIFICATION REQUIRED

This message is sent by the en-gNB to the MeNB to request the modification of en-gNB resources for a specific UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.	YES	reject
Cause	M		9.2.6		YES	ignore
PDCP Change Indication	0		9.2.109		YES	ignore
E-RABs To Be Released List		01			YES	ignore
>E-RABs To Be Released Item		1 <maxnoofbeare rs&gt;</maxnoofbeare 			EACH	ignore
>>E-RAB ID	М	702	9.2.23		_	
>>Cause	M		9.2.6		_	
>>RLC Mode	0		RLC Mode 9.2.119	Indicates the RLC mode at the engNB for PDCP transfer to MeNB.	YES	ignore
SgNB to MeNB Container	0		OCTET STRING	Includes the NR CG-Config message as defined in TS 38.331 [31].	YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	reject
E-RABs To Be Modified List		01			YES	ignore
>E-RABs To Be Modified Item		1 <maxnoofbeare rs&gt;</maxnoofbeare 			EACH	ignore
>>E-RAB ID	М		9.2.23		_	
>>EN-DC Resource Configuration	M		EN-DC Resource Configuratio n 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration.	-	
>>CHOICE Resource Configuration	М					
>>>PDCP present in SN				This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present".		
>>>>Requested MCG E-RAB Level QoS Parameters	0		E-RAB Level QoS Parameters 9.2.9	Includes E-RAB level QoS parameters requested to be provided by the MCG.	-	
>>>>UL Configuration	0		9.2.118	Information about UL usage in the MeNB.	-	
>>>>UL PDCP SN Length	0		PDCP SN Length 9.2.133	Shall be ignored by the MeNB if received.	YES	ignore
>>>DL PDCP SN Length	0		PDCP SN Length 9.2.133	Shall be ignored by the MeNB if received.	YES	ignore

		1	1		
>>>>SgNB UL GTP Tunnel Endpoint at PDCP	0	GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the X2-U transport bearer at PDCP. For delivery of UL PDCP PDUs.	_	
>>>>S1 DL GTP Tunnel Endpoint at the SgNB	0	GTP Tunnel Endpoint 9.2.1	en-gNB endpoint of the S1 transport bearer. For delivery of DL PDUs.	-	
>>>>New DRB ID Request	0	ENUMERAT ED (True, ,)		YES	ignore
>>>PDCP not present in SN			This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "not present".		
>>>>SgNB DL GTP Tunnel Endpoint at SCG	0	GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs.	ı	
>>>>Secondary SgNB DL GTP Tunnel Endpoint at SCG	0	GTP Tunnel Endpoint 9.2.1	SgNB endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs for PDCP duplication.	-	
>>>>RLC Status	0	9.2.131	Indicates the RLC has been reestablished		
>>>>LCID	0	9.2.138	Indicate the LCID of the primary path in case of PDCP duplication	YES	ignore
SgNB Resource Coordination Information	0	9.2.117	Information used to coordinate resources utilisation between the en-gNB and the MeNB.	YES	ignore
RRC config indication	0	9.2.132	Indicates the type of RRC configuration used at the en-gNB.	YES	reject
Location Information at SgNB	0	9.2.142	Contains information to support localisation of the UE	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

### 9.1.4.9 SGNB MODIFICATION CONFIRM

This message is sent by the MeNB to inform the en-gNB about the successful modification.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	ignore
E-RABs Admitted To Be Modified List		01			YES	ignore
>E-RABs Admitted To Be Modified Item		1 <maxnoofbe arers&gt;</maxnoofbe 			EACH	ignore
>>E-RAB ID	M		9.2.23		_	
>>EN-DC Resource Configuration	M		EN-DC Resource Configuratio n 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration.	1	
>>CHOICE Resource Configuration	М					
>>>PDCP not present in SN				This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuration IE is set to the value "not present".		
>>>>Secondary MeNB UL GTP Tunnel Endpoint at PDCP	0		GTP Tunnel Endpoint 9.2.1	MeNB endpoint of the X2-U transport bearer at the PDCP. For delivery of UL PDCP PDUs for PDCP duplication.	_	
>>>UL PDCP SN Length	0		PDCP SN Length 9.2.133	Shall be ignored by the en-gNB if received.	YES	ignore
>>>DL PDCP SN Length	0		PDCP SN Length 9.2.133	Shall be ignored by the en-gNB if received.	YES	ignore
MeNB to SgNB Container	0		OCTET STRING	Includes the NR RRCReconfigurati onComplete message as defined in TS 38.331 [31].	YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	ignore
MeNB Resource Coordination Information	0		9.2.116	Information used to coordinate resources utilisation between the MeNB and the en-gNB.	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

#### 9.1.4.10 SGNB MODIFICATION REFUSE

This message is sent by the MeNB to inform the en-gNB that the SgNB initiated SgNB Modification has failed.

Direction: MeNB  $\rightarrow$  en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	ignore
Cause	M		9.2.6		YES	ignore
MeNB to SgNB Container	0		OCTET STRING	Includes the CG-ConfigInfo message as defined in TS 38.331 [31].	YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	ignore

#### 9.1.4.11 SGNB RELEASE REQUEST

This message is sent by the MeNB to the en-gNB to request the release of resources.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	-	YES	ignore
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	0		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	reject
Cause	M		9.2.6		YES	ignore
E-RABs To Be Released List		01			YES	ignore
>E-RABs To Be Released Item		1 <maxnoofbearers &gt;</maxnoofbearers 			EACH	ignore
>>E-RAB ID	M		9.2.23		_	
>>EN-DC Resource Configuration	M		EN-DC Resource Configuratio n 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration	-	
>>CHOICE Resource Configuration	М					
>>>PDCP present in SN				This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "present".		
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	-	
>>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer. used for forwarding of DL PDUs	-	
>>>PDCP not present in SN				This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "not present".		
UE Context Kept Indicator MeNB UE X2AP ID Extension	0		9.2.85 Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES YES	ignore reject

MeNB to SgNB Container	0	OCTET STRING	Includes the CG-ConfigInfo message as defined in TS 38.331 [31].	YES	reject
E-RABs transferred to MeNB	0	E-RAB List 9.2.28	Indicates the target MeNB reconfigured the listed E-RABs as MN-terminated bearers.	YES	ignore

Range bound	Explanation		
maxnoofBearers	Maximum no. of E-RABs. Value is 256		

#### 9.1.4.12 SGNB RELEASE REQUEST ACKNOWLEDGE

This message is sent by the en-gNB to the MeNB to confirme the request to release en-gNB resources.

Direction: en-gNB  $\rightarrow$  MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject
E-RABs Admitted To Be Released List		01			YES	ignore
>E-RABs Admitted To Be Released Item		1 <maxnoofbearers &gt;</maxnoofbearers 			EACH	ignore
>>E-RAB ID	M		9.2.23		_	
>>RLC Mode	M		RLC Mode 9.2.119	Indicates the RLC mode at the en- gNB for PDCP transfer to MeNB.	_	

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

#### 9.1.4.13 SGNB RELEASE REQUEST REJECT

This message is sent by the en-gNB to the MeNB to reject the request to release en-gNB resources.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	ignore
Cause	М		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

#### 9.1.4.14 SGNB RELEASE REQUIRED

This message is sent by the en-gNB to request the release of all resources for a specific UE at the en-gNB.

Direction: en-gNB  $\rightarrow$  MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics	Criticality	Assigned
Message Type	M		9.2.13	description	YES	Criticality reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	М		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.	YES	reject
Cause	М		9.2.6		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject
E-RABs To Be Released List		01			YES	ignore
>E-RABs To Be Released Item		1 <maxnoo fBearers</maxnoo 			EACH	ignore
>>E-RAB ID	M		9.2.23		_	
>>RLC Mode	М		RLC Mode 9.2.119	Indicates the RLC mode at the en-gNB for PDCP transfer to MeNB.	-	
SgNB to MeNB Container	0		OCTET STRING	Includes the NR CG-Config message as defined in TS 38.331 [31].	YES	ignore

Range bound	Explanation			
maxnoofBearers	Maximum no. of E-RABs. Value is 256			

#### 9.1.4.15 SGNB RELEASE CONFIRM

This message is sent by the MeNB to confirm the release of all resources for a specific UE at the en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	ignore
E-RABs to be Released List		01			YES	ignore
>E-RABs To Be Released Item		1 <maxnoofbearers &gt;</maxnoofbearers 			-	
>>E-RAB ID	M		9.2.23		_	
>>EN-DC Resource Configuration	M		EN-DC Resource Configuratio n 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration	-	
>>CHOICE Resource Configuration	М					
>>>PDCP present in SN				This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "present".		
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	-	
>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	
>>>PDCP not present in SN				This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "not present".		
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

#### 9.1.4.16 SGNB COUNTER CHECK REQUEST

This message is sent by the en-gNB to request the verification of the value of the PDCP COUNTs associated with the bearers established in the en-gNB.

Direction: en-gNB  $\rightarrow$  MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	reject
E-RABs Subject to Counter Check List		1			YES	ignore
>E-RABs Subject to Counter Check Item		1 <maxnoofbearers &gt;</maxnoofbearers 			EACH	ignore
>>E-RAB ID	M		9.2.23		-	
>>UL COUNT	M	INTEGER(0 4294967295)		Indicates the value of uplink COUNT associated to this E-RAB.	-	
>>DL COUNT	M	INTEGER(0 4294967295)		Indicates the value of downlink COUNT associated to this E-RAB.	-	
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

### 9.1.4.17 SGNB CHANGE REQUIRED

This message is sent by the en-gNB to the MeNB to request the change of en-gNB for a specific UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.	YES	reject
Target SgNB ID Information	M		9.2.102		YES	reject
Cause	M		9.2.6		YES	ignore
SgNB to MeNB Container	0		OCTET STRING	Includes the <i>CG-Config</i> message as defined in TS 38.331 [31].	YES	reject
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

### 9.1.4.18 SGNB CHANGE CONFIRM

This message is sent by the MeNB to inform the en-gNB about the successful change.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	-	YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	М		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	ignore
E-RABs to be Released List		01			YES	ignore
>E-RABs To Be Released Item		1 <maxnoofbearers &gt;</maxnoofbearers 			-	
>>E-RAB ID	M		9.2.23		_	
>>EN-DC Resource Configuration	M		EN-DC Resource Configuratio n 9.2.108	Indicates the PDCP and Lower Layer MCG/SCG configuration	-	
>>CHOICE Resource Configuration	М					
>>>PDCP present in SN				This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "present".		
>>>>UL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of UL PDUs	-	
>>>DL Forwarding GTP Tunnel Endpoint	0		GTP Tunnel Endpoint 9.2.1	Identifies the X2 transport bearer used for forwarding of DL PDUs	-	
>>>PDCP not present in SN				This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "not present".		
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB	YES	ignore

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

#### 9.1.4.19 SGNB CHANGE REFUSE

This message is sent by the MeNB to inform the en-gNB that the SgNB initiated SgNB Change has failed.

Direction: MeNB  $\rightarrow$  en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	ignore
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	ignore
Cause	M		9.2.6		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

#### 9.1.4.20 SECONDARY RAT DATA USAGE REPORT

This message is sent by the en-gNB to report data volumes for secondary RAT.

Direction: en-gNB  $\rightarrow$  MeNB

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	reject
Secondary RAT Usage Report List	М		9.2.120		YES	reject
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

#### 9.1.4.21 RRC TRANSFER

This message is sent by the MeNB to the en-gNB or by the en-gNB to the MeNB to transfer an RRC message.

Direction: MeNB  $\rightarrow$  en-gNB or en-gNB  $\rightarrow$  MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13	•	YES	reject
MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.	YES	reject
Split SRB		01			YES	reject
>RRC Container	0		OCTET STRING	Contains a PDCP-C PDU encapsulating an RRC message as defined in subclause 6.2.1 of TS 36.331 [9] and ciphered with the key of the MeNB	-	
>SRB Type	M		ENUMERAT ED (srb1, srb2,)	The SRB type	_	
>Delivery Status	0		9.2.104	DL RRC delivery status of split SRB	_	
NR UE Report		01			YES	reject
>RRC Container	M		OCTET STRING	Includes the UL-DCCH-Message as defined in subclause 6.2.1 of TS 38.331 [31] containing the MeasurementRepo rt message, or the FailureInformation message, or the RRCReconfiguratio nComplete message, or the UEAssistanceInformation message, or the IABOtherInformatio n message.  Allocated at the	YES	reject
Extension	O		eNB UE X2AP ID 9.2.86	MeNB.		-
Fast MCG Recovery via SRB3 from SgNB to MeNB		01			YES	ignore
>RRC Container	0		OCTET STRING	Includes the <i>UL-DCCH-Message</i> as defined in subclause 6.2.1 of TS 36.331 [9] containing <i>MCGFailureInformation</i> message.	_	
Fast MCG Recovery via SRB3 from MeNB to SgNB		01			YES	ignore

>RRC Container	0	C	OCTET	Includes the DL-	_	
		S	STRING	DCCH-Message as		
				defined in		
				subclause 6.2.1 of		
				TS 36.331 [9]		
				containing the		
				RRCConnectionRe		
				configuration		
				message, or the		
				RRCConnectionRel		
				ease message, or		
				the		
				MobilityfromEUTRA		
				Command		
				message.		

#### 9.1.4.22 PARTIAL RESET REQUIRED

This message is sent by an initiating node to a neighbouring node, both nodes able to interact for EN-DC, to release all the resources for selected UEs.

Direction: en-gNB  $\rightarrow$  MeNB, MeNB  $\rightarrow$  en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.13		YES	reject
UEs to be Reset List		1			YES	reject
>UEs To Be Reset Item		1 <maxnoof UEs&gt;</maxnoof 				
>>MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.		
>>SgNB UE X2AP ID	0		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.		
>>MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.		
Cause	М		9.2.6		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

Range bound	Explanation		
maxnoofUEs	Maximum no. of UEs. Value is 8192.		

#### 9.1.4.23 PARTIAL RESET CONFIRM

This message is sent by an initiating node to a neighbouring node, both nodes able to interact for EN-DC, to confirm the release all the resources for selected UEs.

Direction: en-gNB  $\rightarrow$  MeNB, MeNB  $\rightarrow$  en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
UEs Admitted to be Reset List		1			YES	reject
>UEs Admitted To Be		1				
Reset Item		<maxnoof UEsineng NBDU&gt;</maxnoof 				
>>MeNB UE X2AP ID	М		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.		
>>SgNB UE X2AP ID	0		en-gNB UE X2AP ID 9.2.100	Allocated at the engNB.		
>>MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.		
Interface Instance Indication	0		9.2.143		YES	reject

Range bound	Explanation			
maxnoofUEsinengNBDU	Maximum no. of UEs. Value is 8192.			

#### 9.1.4.24 E-UTRA – NR CELL RESOURCE COORDINATION REQUEST

Direction: eNB  $\rightarrow$  en-gNB, en-gNB  $\rightarrow$  eNB.

This message is sent by a neighbouring eNB to a peer en-gNB or by a neighbouring en-gNB to a peer eNB, both nodes able to interact for EN-DC, to express the desired resource allocation for data traffic, for the sake of E-UTRA - NR Cell Resource Coordination.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
CHOICE Initiating Node Type >eNB	М				-	
>>Data Traffic Resource Indication	M		9.2.126	Indicates resource allocations for data traffic.	YES	reject
>>Spectrum Sharing Group ID	М		INTEGER (1 maxCellineN B)	Indicates the E- UTRA cells involved in resource coordination with the NR cells affiliated with the same <b>Spectrum</b> <b>Sharing Group ID</b> .	YES	reject
>>List of E-UTRA Cells in E-UTRA Coordination Request		0 <maxcellinenb &gt;</maxcellinenb 		List of applicable E- UTRA cells.	YES	reject
>>>EUTRA Cell ID	M		ECGI 9.2.14		-	
>en-gNB						
>>Data Traffic Resource Indication	M		9.2.126	Indicates resource allocations for data traffic.	YES	reject
>>List of E-UTRA Cells in NR Coordination Request		1 <maxcellinenb &gt;</maxcellinenb 		List of applicable E- UTRA cells	YES	reject
>>>EUTRA Cell ID	М		ECGI 9.2.14		_	
>>Spectrum Sharing Group ID	М		INTEGER (1 maxCellineN B)	Indicates the NR cells involved in resource coordination with the E-UTRA cells affiliated with the same Spectrum Sharing Group ID.	YES	reject
>>List of NR Cells in NR Coordination Request		0 < maxnoNRcellsS pectrumSharing withE-UTRA >		List of applicable NR cells	YES	reject
>>>NR-Cell ID	М		NR-CGI 9.2.111		-	
Interface Instance Indication	0		9.2.143		YES	reject

Range bound	Explanation
maxCellineNB	Maximum no. of E-UTRA cells in eNB. Value is 256.
maxnoNRcellsSpectrumSharingwithE- UTRA	Maximum no. of NR cells affiliated to a Spectrum Sharing Group ID involved in cell resource coordination with a number of E-UTRA cells affiliated with the same Spectrum Sharing Group ID. Value is 64.

### 9.1.4.25 E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE

This message is sent by a neighbouring eNB to a peer en-gNB or by a neighbouring en-gNB to a peer eNB, both nodes able to interact for EN-DC, as a response to the E-UTRA – NR CELL RESOURCE COORDINATION REQUEST.

Direction: eNB  $\rightarrow$  en-gNB, en-gNB  $\rightarrow$  eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13	•	YES	reject
CHOICE Responding	M				-	•
NodeType						
>eNB						
>>Data Traffic Resource Indication	M		9.2.126	Indicates resource allocations for data traffic.	YES	reject
>>Spectrum Sharing Group ID	М		INTEGER (1 maxCellineN B)	Indicates the E- UTRA cells involved in resource coordination with the NR cells affiliated with the same Spectrum Sharing Group ID.	YES	reject
>>List of E-UTRA Cells		0		List of applicable E-	YES	reject
in E-UTRA Coordination		<maxcellinenb< td=""><td></td><td>UTRA cells</td><td></td><td>7</td></maxcellinenb<>		UTRA cells		7
Response		>				
>>>EUTRA Cell ID	M		ECGI 9.2.14		-	
>en-gNB						
>>Data Traffic Resource Indication	М		9.2.126	Indicates resource allocations for data traffic.	YES	reject
>>Spectrum Sharing Group ID	M		INTEGER (1 maxCellineN B)	Indicates the NR cells involved in resource coordination with the E-UTRA cells affiliated with the same Spectrum Sharing Group ID.	YES	reject
>>List of NR Cells in NR Coordination Response		0 < maxnoNRcellsS pectrumSharing withE-UTRA >		List of applicable NR cells	YES	reject
>>>NR Cell ID	М		NR-CGI 9.2.111		-	
Interface Instance Indication	0		9.2.143		YES	reject

Range bound	Explanation
maxCellineNB	Maximum no. of E-UTRA cells in eNB. Value is 256.
maxnoNRcellsSpectrumSharingwithE- UTRA	Maximum no. of NR cells affiliated to a Spectrum Sharing Group ID involved in cell resource coordination with a number of E-UTRA cells affiliated with the same Spectrum Sharing Group ID. Value is 64.

#### 9.1.4.26 SGNB ACTIVITY NOTIFICATION

This message is sent by the en-gNB to inform the MeNB that resources for E-RABs controlled by the en-gNB have not been used or are in use again.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13	_	YES	reject
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	reject
UE Context level user plane activity report	0		User plane traffic activity report 9.2.130		YES	ignore
E-RAB Activity Notify Item List		0 <maxnoofbeare rs=""></maxnoofbeare>			EACH	ignore
>E-RAB ID	M		9.2.23		_	
>User plane traffic activity report	М		9.2.130		-	
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256

#### 9.1.4.27 GNB STATUS INDICATION

This message is sent by the en-gNB to indicate to the eNB its status of overload.

Direction: en-gNB  $\rightarrow$  eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
gNB Overload Information	M		ENUMERATED (overloaded, not-overloaded,)		YES	ignore
Interface Instance Indication	0		9.2.143		YES	reject

#### 9.1.4.28 TRACE START

This message is sent by the MeNB to initiate a trace session for a UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	reject
Trace Activation	M		9.2.2		YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

#### 9.1.4.29 DEACTIVATE TRACE

This message is sent by the MeNB to deactivate a trace session.

Direction: MeNB  $\rightarrow$  en-gNB

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the en-gNB.	YES	reject
E-UTRAN Trace ID	M		OCTET STRING (SIZE(8))	As per E-UTRAN Trace ID in <i>Trace</i> Activation IE	YES	ignore
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

#### 9.1.4.30 UE Radio Capability ID Mapping Request

This message is sent by the en-gNB and is used to request the UE Radio Capability information that maps to a specific UE Radio Capability ID.

Direction: en-gNB  $\rightarrow$  eNB

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	reject
UE Radio Capability ID	M		9.2.171		YES	reject

### 9.1.4.31 UE Radio Capability ID Mapping Response

This message is sent by the eNB and is used to provide the UE Radio Capability information that maps to a specific UE Radio Capability ID indicated in the UE RADIO CAPABILITY ID MAPPING REQUEST message.

Direction: eNB  $\rightarrow$  en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13	•	YES	reject
UE Radio Capability ID	M		9.2.171		YES	reject
UE Radio Capability	M		9.2.173		YES	ignore
Criticality Diagnostics	0		9.2.7		YES	ignore

# 9.1.5 Messages for IAB Procedures

#### 9.1.5.1 F1-C TRAFFIC TRANSFER

This message is sent by the en-gNB to the MeNB or by the MeNB to the en-gNB to transfer the F1-C traffic to and from an IAB-node.

Direction: MeNB  $\rightarrow$  en-gNB or en-gNB  $\rightarrow$  MeNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.13		YES	ignore
MeNB UE X2AP ID	M		eNB UE X2AP ID 9.2.24	Allocated at the MeNB.	YES	reject
SgNB UE X2AP ID	M		en-gNB UE X2AP ID 9.2.100	Allocated at the engnB.	YES	reject
F1-C Traffic Container	M		OCTET STRING	Contains an F1-C interface SCTP CHUNK and IP header, or an IP packet to protect the traffic on the F1-C interface as defined in TS 33.501 [50]. This IE corresponds to the dedicatedInfoF1c-r16 defined in TS 36.331 [9].	YES	reject
MeNB UE X2AP ID Extension	0		Extended eNB UE X2AP ID 9.2.86	Allocated at the MeNB.	YES	reject

### 9.2 Information Element definitions

### 9.2.0 General

When specifying information elements which are to be represented by bit strings, if not otherwise specifically stated in the semantics description of the concerned IE or elsewhere, the following principle applies with regards to the ordering of bits:

- The first bit (leftmost bit) contains the most significant bit (MSB);
- The last bit (rightmost bit) contains the least significant bit (LSB);
- When importing bit strings from other specifications, the first bit of the bit string contains the first bit of the concerned information.

### 9.2.1 GTP Tunnel Endpoint

The *GTP Tunnel Endpoint* IE identifies an X2 transport bearer or the S-GW endpoint of the S1 transport bearer associated to an E-RAB. It contains a Transport Layer Address and a GTP Tunnel Endpoint Identifier. The Transport Layer Address is an IP address to be used for the X2 user plane transport (see TS 36.424 [8]) or for the S1 user plane transport (see TS 36.414 [19]). The GTP Tunnel Endpoint Identifier is to be used for the user plane transport. The QoS Mapping Information is used to set the IP header of packets in case that the en-gNB serves the IAB, and the packets belonging to MN-terminated split bearer/SCG bearer are transmitted from MeNB to en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Transport Layer Address	М		BIT STRING (1160,)	For details on the Transport Layer Address, see TS 36.424 [8], TS 36.414 [19]	-	,
GTP TEID	М		OCTET STRING (4)	For details and range, see TS 29.281 [26]	_	
QoS Mapping Information	0		9.2.172		YES	reject

#### 9.2.2 Trace Activation

Defines parameters related to trace activation.

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
-		)	reference	description		Criticality
E-UTRAN Trace ID	M		OCTET STRING (8)	The E-UTRAN Trace ID IE is composed of the following: Trace Reference defined in TS 32.422 [6] (leftmost 6 octets, with PLMN information coded as in 9.2.4), and Trace Recording Session Reference defined in TS 32.422 [6] (last 2 octets)	_	
Interfaces To Trace	M		BIT STRING (8)	Each position in the bitmap represents a eNB interface: first bit =S1-MME, second bit =X2, third bit =Uu, fourth bit = F1-C, fifth bit = E1. Other bits reserved for future use. Value '1' indicates 'should be traced'. Value '0' indicates 'should not be traced'.	_	
Trace Depth	M		ENUMERATED( minimum, medium, maximum, MinimumWithoutVend orSpecificExtension, MediumWithoutVend orSpecificExtension, MaximumWithoutVen dorSpecificExtension,)	Defined in TS 32.421 [7]	_	
Trace Collection Entity IP Address	M		BIT STRING (1160,)	For File based Reporting. Defined in TS 32.422 [6]. For details on the Transport Layer Address, see TS 36.424 [8], TS 36.414 [19]. This IE is ignored if the <i>Trace</i> Collection Entity URI IE is present.	_	
MDT Configuration	0		9.2.56		YES	ignore
UE Application layer measurement configuration	0		9.2.121		YES	ignore
MDT Configuration NR	0		OCTET STRING	Defined in TS 38.413 [39]. Only the immediate MDT configurations are included in the IE in this version of the specification.	YES	ignore
Trace Collection Entity URI	0		URI 9.2.174	For Streaming based Reporting. Defined in TS 32.422 [11]. Replaces Trace Collection Entity IP Address if present.	YES	ignore

### 9.2.3 Handover Restriction List

This IE defines roaming or access restrictions for subsequent mobility action for which the eNB provides information about the target of the mobility action towards the UE, e.g., handover and CCO, or for SCG selection during dual connectivity operation.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Serving PLMN	М		PLMN Identity 9.2.4		_	
Equivalent PLMNs		0 <maxnoof EPLMNs&gt;</maxnoof 	3.2.4	Allowed PLMNs in addition to Serving PLMN. This list corresponds to the list of "equivalent PLMNs list" as defined in TS 24.301 [14]. This list is part of the roaming restriction information. Roaming restrictions apply to PLMNs other than the serving PLMN and Equivalent PLMNs.	-	
>PLMN Identity	М		9.2.4	I LIVII VO.	_	
Forbidden TAs	101	0 <maxnoof EPLMNsPlu sOne&gt;</maxnoof 	3.2.4	intra E-UTRAN roaming restrictions	_	
>PLMN Identity	M		9.2.4	The PLMN of forbidden TACs	_	
>Forbidden TACs		1 <maxnoof ForbTACs&gt;</maxnoof 			-	
>>TAC	M		OCTET STRING(2)	The forbidden TAC	-	
Forbidden LAs		0 <maxnoof EPLMNsPlu sOne&gt;</maxnoof 		inter-3GPP RAT roaming restrictions	_	
>PLMN Identity	М		9.2.4		_	
>Forbidden LACs		1 <maxnoof ForbLACs&gt;</maxnoof 			-	
>>LAC	M		OCTET STRING(2)		_	
Forbidden inter RATs	0		ENUMERATED(ALL, GERAN, UTRAN, CDMA2000,, GERAN and UTRAN, CDMA2000 and UTRAN)	inter-3GPP and 3GPP2 RAT access restrictions. "ALL" means that all RATs mentioned in the enumeration of this IE are restricted.	_	
NR restriction in EPS as secondary RAT	0		ENUMERATED(NRr estrictedinEPSasSec ondaryRAT,)	Restriction to use NR when the NR is used as secondary RAT in EN-DC.	YES	ignore

Core Network Type Restrictions		0 <maxnoof EPLMNsPlu sOne&gt;</maxnoof 		Includes any of the Serving PLMN or any PLMN of the Equivalent PLMNs listed in the Mobility Restriction List IE for which core network type restriction applies as specified in TS 23.501 [38].	YES	ignore
>PLMN Identity >Core Network Type	M		9.2.4  ENUMERATED (5GCForbidden,, EPCForbidden)	The indication indicates whether the UE is restricted to connect to 5GC or to EPC for this PLMN.		
NR Restriction in 5GS	0		ENUMERATED(NRr estrictedin5GS,)	Restriction to use NR when the NR connects to 5GS.	YES	ignore
Last NG-RAN PLMN Identity	0		9.2.4	Indicates the NG-RAN PLMN from where the UE formerly handed over to EPS and which is preferred in case of subsequent mobility to 5GS.	YES	ignore
Unlicensed Spectrum Restriction	0		ENUMERATED(Unli censedRestricted,)	Restriction to use unlicensed spectrum in the form of LAA or LWA/LWIP or NR-U as described in TS 23.401 [11].	YES	ignore

Range bound	Explanation
maxnoofEPLMNs	Maximum no. of equivalent PLMN lds. Value is 15.
maxnoofEPLMNsPlusOne	Maximum no. of equivalent PLMN Ids plus one. Value is 16.
maxnoofForbTACs	Maximum no. of forbidden Tracking Area Codes. Value is 4096.
maxnoofForbLACs	Maximum no. of forbidden Location Area Codes. Value is 4096.

# 9.2.4 PLMN Identity

This information element indicates the PLMN Identity.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	М		OCTET STRING (3)	- digits 0 to 9, encoded 0000 to 1001, - 1111 used as filler digit, two digits per octet, - bits 4 to 1 of octet n encoding digit 2n- 1 - bits 8 to 5 of octet n encoding digit 2n -The PLMN identity consists of 3 digits from MCC followed by either -a filler digit plus 2 digits from MNC (in case of 2 digit MNC) or -3 digits from MNC (in case of a 3 digit MNC).

# 9.2.5 DL Forwarding

This element indicates that the E-RAB is proposed for forwarding of downlink packets.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DL Forwarding	М		ENUMERATED	
			(DL forwarding	
			proposed,)	

## 9.2.6 Cause

The purpose of the cause information element is to indicate the reason for a particular event for the whole protocol.

CHOICE Cause Group  >Radio Network Layer  >>Radio Network Layer    Cause   Cau	IE/Group Name	Presence	Range	IE Type and Reference	Semantics
Seadio Network Layer   Seadio Network Layer   Seadio Network Layer   Cause   Seadio Network Layer   Seadio Netwo			3	,,,	
Sendio Network Layer   Cause		M			
(Handower Desirable for Radio Reasons, Time Critical Handower, Resource Optimisation Handower, Reduce Load in Serving Cell, Partial Handower, Unknown New BNB UE X2AP ID, Unknown Old eNB UE X2AP ID, Unknown Old eNB UE X2AP ID, Unknown Pair of UE X2AP ID, HO Target not Allowed, TX2e;100;000;100;100;100;100;100;100;100;10		N.4		ENHANCEDATED	
Reasons. Time Critical Handover, Resource Optimisation Handover, Reduce Load in Serving Cell, Partial Handover, Unknown New MB UE X2AP ID, Unknown Not of UE X2AP ID, Unknown Old eNB UE X2AP ID, Unknown Pior Of UE X2AP ID, HO Target not Allowed, TX2acucowae Exptry, TRECOCOWAE Exptry, Cell not Available, No Radio Resources Available in Target Cell, Invalid MME Group ID, Unknown MME Code, Encryption And/Or Integrity Protection Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement Temporarily not Available, Unspecified,Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported COI value, Measurement not supported for the object, Tocowael Exptry, Tocpape Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Procedure, Readio Interface Readio Interface Procedure, Readio Interface R		IVI			
Time Critical Handover, Resource Optimisation Handover, Resource Optimisation Handover, Reduce Load in Serving Cell, Partial Handover, Unknown New eNB UE X2AP ID, Unknown Old Roll BE X2AP ID, Unknown Pair of UE X2AP ID, HO Target not Allowed, TX2ee_Cooweal Expiry, Cell not Available, No Radio Resources Available in Target Cell, Invalld MME Group ID, Unknown MME Code. Encryption And/Or Integrity Protection Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity ExistingMeasurementID. Unknown eNB Measurement ID. Unknown eNB Measurement ID. Unknown eNB Measurement Temporarily not Available, Unspecified, Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID Instances, Switch Off Ongoing, Not supported Col Value, Measurement not supported for the object, Tocoweal Expiry, Action Desirable for Radio Reasons, Resource Optimisation, Time Critical action, Farget not Allowand, No Radio Resources Available, Invalid OSS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Beard Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-yNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)	Cause			,	
Reduce Load in Serving Cell, Partial Handover, Unknown New eNB UE X2AP ID, Unknown Old RNB UE X2AP ID, Unknown Pair of UE X2AP ID, HO Target not Allowed, TX2RELOCOMED EXPITY, TRELOCOMED EXPITY, Cell not Available, No Radio Resources Available in Target Cell. Invaild MME Group ID, Unknown MME Code, Encryption And/Or Integrity Protection Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement ID, Unknown eNB Measurement ID, measurement ID, Measurement Temporarily not Available, UnspecifiedLoad Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported OCI value, Measurement not supported for the object.Tocometal Expity, Tocprep Expity, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid OoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-qNB UE X2AP ID, PDCP Overtoad, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)				·	
Partial Handover, Unknown New eMB UE X2AP ID, Unknown New eMB UE X2AP ID, Unknown Pair of UE X2AP ID, Unknown Pair of UE X2AP ID, HO Target not Allowed, TX2escopess Explry, TRESCOPESS Explry, Cell not Available, No Radio Resources Available in Target Cell, Invalid MME Group ID, Unknown MME Code, Encryption And/Or Integrity Protection Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement ID, Measurement Temporarily not Available, Unspecified,Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported CI value, Measurement not supported for the object, Tocoreal Explry, Tocorea Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid CoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)					
Unknown New eNB UE X2AP ID, Unknown Pair of UE X2AP ID, Unknown Pair of UE X2AP ID, HO Target not Allowed, TX2ete.cocwent Expiry, Trescocres Expiry, Call not Available, No Radio Resources Available in Target Cell, Invalid MME group ID, Unknown MME Code, Encryption And/or Integrity Protection Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurement ID, Unknown eNB Measurement ID, Measurement IT, Measurement Temporarily not Available, UnspecifiedLoad Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported Ccl value, Measurement not supported for the object, Tocoreal Expiry, Tocpres Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)					
Unknown Old eNB UE X2AP ID, Unknown Pair of UE X2AP ID, HO Target not Allowed, TX2neLocement Expiry, Tree.Occure Expiry, Cell not Available, No Radio Resources Available in Target Cell, Invalid MME Group ID, Unknown MME Code, Encryption And/Or Intergity Protection Algorithms Not Supported, ReportCharacteristicsEmptly, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement ID, Measurement ID, Measurement ID, Measurement Temporarily not Available, Unspecified,,Load Balancing, Handover Optimisation, Value aut of allowed range, Multiple E-RAB ID instances, Switch Off Orgoing, Not supported QCI value, Measurement not supported for the object, Tocovenit Expiry, Toccenit Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QOS combination, Tirner Critical action, Target not Allowed, No Radio Resources Available, Invalid QOS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)					
Unknown Pair of UE X2AP ID, HO Target not Allowed, TX2RELOCOME Expiry, TRELOCOME Expiry, Cell not Available, No Radio Resources Available in Target Cell, Invalid MME Group ID, Unknown MME Code, Encryption And/Or Integrity Protection Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement ID, Measurement Temporarily not Available, Unspecified,Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported QCI value, Measurement not supported for the object, Tocomat Expiry, Tocores Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bir rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)				,	
HOTarget not Allowed, TX2eEucopeae Expiry, Trescopeae Expiry, Trescopeae Expiry, Trescopeae Expiry, Cell not Available, No Radio Resources Available in Target Cell, Invalid MME Group ID, Unknown MME Code, Encryption And/Or Integrity Protection Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement ID, Unknown eNB Measurement ID, Wassurement ID, Measurement Temporarily not Available, UnspecifiedLoad Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported CCI value, Measurement not supported for the object, Tocopeae Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Forception Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bir tate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)				*	
TRELICOPRE EXPITY,   Cell not Available,   No Radio Resources Available in   Target Cell,   No Radio Resources Available in   Target Cell,   Invalid MME Group ID,   Unknown MME Code, Encryption   And/Or Integrity Protection   Algorithms Not Supported,   ReportCharacteristicsEmpty,   NoReportPeriodicity,   ExistingMeasurementD, Unknown eNB Measurement ID,   Integration, Value out of allowed range, Multiple E-RAB   ID instances, Switch Off Ongoing,   Not supported Oct I value,   Measurement not supported for from the object, Tocoveral Expiry, Tocoveral Expiry, Action Desirable for Radio   Reasons,   Reduce Load,   Resource Optimisation,   Time Critical action,   Target not Allowed,   No Radio Resources Available,   Invalid CoS combination,   Target not Allowed,   No Radio Resources Available,   Invalid CoS combination,   Encryption Algorithms Not   Supported, Procedure cancelled,   RRM purpose,   Improve user bit rate,   User Inactivity,   Radio Connection With UE Lost,   Failure in the Radio Interface   Procedure,   Bearer Option not Supported, MCG   Mobility, SCG Mobility, SCO Mobility, SCG Mobility, SCO Mo					
Cell not Available, No Radio Resources Available in Target Cell, Invalid MME Group ID, Unknown MME Code, Encryption And/Or Integrity Protection Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB MeasurementID, Unknown eNB Measurement Temporarily not Available, UnspecifiedLoad Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported OCI value, Measurement not supported for the object, Tocoverae Explry, Tocprep Explry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >*Transport Layer  >*Transport Layer    SUMERATED					
No Radio Resources Available in Target Cell, Invalid MME Group ID, Unknown MME Code, Encryption And/Or Integrity Protection Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement ID, Measurement ID, Measurement ID, Measurement ID, Invalidable, UnspecifiedLoad Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported Oct I value, Measurement not supported for the object, Tocoreral Expiry, Tocoreral Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, Count reaches max value, Unknown Old en-yNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >*Transport Layer  >*Transport Layer    Support Resource Unavailable, Unspecified					
Target Cell, Invalid MME Group ID, Unknown MME Code, Encryption And/Or Integrity Protection Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement ID, Measurement Temporarily not Available, Unspecified,,Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported CCI value, Measurement not supported for the object, Tocoveral Expiry, Tocover Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, CGG Mobility, CGI with IDE Capabilities, Normal Release)  >-Transport Layer  >>Transport Layer    Support Layer				· ·	
Invalid MME Group ID, Unknown MME Code, Encryption And/Or Integrity Protection Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement ID, Measurement Temporarily not Available, Unspecified,Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported QCI value, Measurement not supported for the object, Tocoveral Expiry, Tocoveral Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid OoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gMB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  > Transport Layer    STransport Layer					
Unknown MME Code, Encryption And/Or Integrity Protection Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement ID, Measurement Temporarily not Available, Unspecified,,Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported QCI value, Measurement not supported for the object,Tocoverel Expiry, Tocorep Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gMB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  > Transport Layer    STransport Layer					
Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement ID, Measurement ID, Measurement Temporarily not Available, Unspecified,Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported QCI value, Measurement not supported for the object, Trocureal Explry, Tocpree Explry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG				Unknown MME Code, Encryption	
ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement ID, Measurement Temporarily not Available, Unspecified,Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported QCI value, Measurement not supported for the object,Tocoverall Expiry, Tocprep Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  > Transport Layer  >>Transport Layer    SUMMERATED					
NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement ID, Measurement Temporarily not Available, Unspecified,,Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported CQI value, Measurement not supported for the object,Tocoverall Expiry, Tocprep Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  > Transport Layer  >>Transport Layer  M ENUMERATED (Transport Resource Unavailable, Unspecified,)					
ExistingMeasurementID, Unknown eNB Measurement ID, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported QCI value, Measurement not supported for the object,TDcorreal Expiry, Tocprep Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Oid en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer  >Transport Layer    Stransport Layer					
eNB Measurement ID, Measurement Temporarily not Available, Unspecified,Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported CQI value, Measurement not supported for the object,Ticcoveral Expiry, Tocprep Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer  >Transport Layer    SIMMERATED					
Available, Unspecified,,Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported QCI value, Measurement not supported for the object, Tocoveral Expiry, Tocprep Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer  >Transport Layer  M ENUMERATED (Transport Resource Unavailable, Unspecified,)					
Unspecified,,Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported QCI value, Measurement not supported for the object, Tocoverall Expiry, Tocprep Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer  >Transport Layer  M ENUMERATED  Transport Layer  Cause  Unspecified,)					
Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported QCI value, Measurement not supported for the object, Tocoverall Expiry, Tocprep Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer  >Transport Layer  M ENUMERATED (Transport Resource Unavailable, Unspecified,)					
of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported QCI value, Measurement not supported for the object, Tocoverall Expiry, Tocprep Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer  >Transport Layer  M ENUMERATED (Transport Resource Unavailable, Unspecified,)					
ID instances, Switch Off Ongoing, Not supported QCI value, Measurement not supported for the object, TDCoverall Expiry, TDCprep Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer  >Transport Layer    ENUMERATED   (Transport Resource Unavailable, Unspecified,)					
Measurement not supported for the object, Tocoreal Expiry, Tocoreal Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer  >Transport Layer    STransport Layer					
object, Tocoverall Expiry, Tocprep Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer  >Transport Layer  (Transport Resource Unavailable, Unspecified,)					
Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer  >Transport Layer  Cause  M  ENUMERATED (Transport Resource Unavailable, Unspecified,)					
Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  > Transport Layer  > Transport Layer  (Transport Resource Unavailable, Unspecified,)					
Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer  >Transport Layer    STransport Layer					
Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer    STransport Layer					
Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer  >>Transport Layer    STransport Layer				· ·	
Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer  >>Transport Layer    STransport Layer					
No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer  >Transport Layer    Selumerated   Selumerated					
Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer  >>Transport Layer    Sequence   Sequence					
Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer  >Transport Layer    STransport Layer					
Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer  >Transport Layer  M ENUMERATED (Transport Resource Unavailable, Unspecified,)					
Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer >>Transport Layer Cause  M ENUMERATED (Transport Resource Unavailable, Unspecified,)				Supported, Procedure cancelled,	
User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer >>Transport Layer Cause  M ENUMERATED (Transport Resource Unavailable, Unspecified,)					
Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer >>Transport Layer Cause  M ENUMERATED (Transport Resource Unavailable, Unspecified,)					
Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer >>Transport Layer Cause  ENUMERATED (Transport Resource Unavailable, Unspecified,)					
Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer >>Transport Layer Cause  ENUMERATED (Transport Resource Unavailable, Unspecified,)				,	
Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer >>Transport Layer Cause  M ENUMERATED (Transport Resource Unavailable, Unspecified,)				,	
reaches max value, Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer >>Transport Layer Cause  BNUMERATED (Transport Resource Unavailable, Unspecified,)					
Unknown Old en-gNB UE X2AP ID, PDCP Overload, CHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer >>Transport Layer Cause  ENUMERATED (Transport Resource Unavailable, Unspecified,)					
PDCP Overload, ČHO-CPC resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer >>Transport Layer M Cause ENUMERATED (Transport Resource Unavailable, Unspecified,)					
resources to be changed, UE Power Saving, Insufficient UE Capabilities, Normal Release)  >Transport Layer >>Transport Layer M Cause ENUMERATED (Transport Resource Unavailable, Unspecified,)					
Capabilities, Normal Release)  >Transport Layer  >>Transport Layer  M Cause  (Transport Resource Unavailable, Unspecified,)				resources to be changed, UE	
>Transport Layer >>Transport Layer M ENUMERATED Cause (Transport Resource Unavailable, Unspecified,)					
>>Transport Layer M ENUMERATED Cause (Transport Resource Unavailable, Unspecified,)	Transport			Capabilities, Normal Release)	
Cause (Transport Resource Unavailable, Unspecified,)		M		ENLIMERATED	
Unspecified,)		IVI			
	>Protocol				

>>Protocol Cause	M	ENUMERATED (Transfer Syntax Error,Abstract Syntax Error (Reject),Abstract Syntax Error (Ignore and Notify),Message not Compatible with Receiver State,Semantic Error,Unspecified,Abstract Syntax Error (Falsely Constructed Message),)
>Misc		
>>Miscellaneous Cause	М	ENUMERATED (Control Processing Overload, Hardware Failure,O&M Intervention,Not enough User Plane Processing Resources,Unspecified,)

The meaning of the different cause values is described in the following table. In general, "not supported" cause values indicate that the concerned capability is missing. On the other hand, "not available" cause values indicate that the concerned capability is present, but insufficient resources were available to perform the requested action.

Radio Network Layer cause	Meaning
Cell not Available	The concerned cell is not available.
Handover Desirable for Radio Reasons	The reason for requesting handover is radio related.
Handover Target not Allowed	Handover to the indicated target cell is not allowed for the UE in question
Invalid MME Group ID	The target eNB doesn't belong to the same pool area of the source eNB
	i.e. S1 handovers should be attempted instead.
No Radio Resources Available in Target Cell	The target cell doesn't have sufficient radio resources available.
Partial Handover	Provides a reason for the handover cancellation. The target eNB did not
	admit all E-RABs included in the HANDOVER REQUEST and the source
	eNB estimated service continuity for the UE would be better by not proceeding with handover towards this particular target eNB.
Reduce Load in Serving Cell	Load in serving cell needs to be reduced. When applied to handover preparation, it indicates the handover is triggered due to load balancing.
Resource Optimisation Handover	The reason for requesting handover is to improve the load distribution
Г	with the neighbour cells.
Time Critical Handover	Handover is requested for time critical reason i.e. this cause value is
	reserved to represent all critical cases where the connection is likely to be
	dropped if handover is not performed.
TX2 <sub>RELOCoverall</sub> Expiry	The reason for the action is expiry of timer TX2 <sub>RELOCoverall</sub> .
T <sub>RELOCprep</sub> Expiry	Handover Preparation procedure is cancelled when timer T <sub>RELOCprep</sub>
Unknown MME Code	expires.  The target eNB belongs to the same pool area of the source eNB and
Unknown MIME Code	recognizes the MME Group ID. However, the MME Code is unknown to
Unknown New eNB UE X2AP ID	the target eNB.  The action failed because the New eNB UE X2AP ID or the MeNB UE
	X2AP ID is unknown.
Unknown Old eNB UE X2AP ID	The action failed because the Old eNB UE X2AP ID or the SeNB UE X2AP ID is unknown.
Unknown Pair of UE X2AP ID	The action failed because the pair of UE X2 AP IDs is unknown.
Encryption And/Or Integrity	The target eNB is unable to support any of the encryption and/or integrity
Protection Algorithms Not	protection algorithms supported by the UE, or the en-gNB is unable to
Supported	support any of the NR encryption and/or integrity protection algorithms supported by the UE for EN-DC operation.
ReportCharacteristicsEmpty	The action failed because there is no characteristic reported.
NoReportPeriodicity	The action failed because the periodicity is not defined.
ExistingMeasurementID	The action failed because measurement-ID is already used.
Unknown eNB Measurement ID	The action failed because some eNB Measurement-ID is unknown.
Measurement Temporarily not Available	The eNB can temporarily not provide the requested measurement object.
Load Balancing	The reason for mobility settings change is load balancing.
Handover Optimisation	The reason for mobility settings change is handover optimisation.
Value out of allowed range	The action failed because the proposed Handover Trigger parameter
-	change in the eNB <sub>2</sub> Proposed Mobility Parameters IE is too low or too high.
Multiple E-RAB ID Instances	The action failed because multiple instances of the same E-RAB had
	been provided to the eNB.
Switch Off Ongoing	The reason for the action is an ongoing switch off i.e. the concerned cell will be switched off after offloading and not be available. It aides the
	receiving eNB in taking subsequent actions, e.g. selecting the target cell
	for subsequent handovers.
Not supported QCI value	The action failed because the requested QCI is not supported.
Unspecified	Sent when none of the above cause values applies but still the cause is
Measurement not Supported For	Radio Network Layer related.  At least one of the concerned cell(s) does not support the requested
The Object	measurement.
T <sub>DCoverall</sub> Expiry	The reason for the action is expiry of timer T <sub>DCoveral</sub> l.
T <sub>DCprep</sub> Expiry	The reason for the action is expiry of timer T <sub>DCprep</sub> .
Action Desirable for Radio	The reason for requesting the action is radio related.
Reasons	In the current version of this specification applicable for Dual Connectivity
Reduce Load	and EN-DC only.  Load in the cell(group) served by the requesting node needs to be
Neduce Load	reduced.
	In the current version of this specification applicable for Dual Connectivity
	and EN-DC only.

Resource Optimisation	The reason for requesting this action is to improve the load distribution with the neighbour cells.  In the current version of this specification applicable for Dual Connectivity
	and EN-DC only.
Time Critical action	The action is requested for time critical reason i.e. this cause value is
	reserved to represent all critical cases where radio resources are likely to
	be dropped if the requested action is not performed.
	In the current version of this specification applicable for Dual Connectivity and EN-DC only.
Target not Allowed	Requested action towards the indicated target cell is not allowed for the
raiget not / lilowed	UE in question.
	In the current version of this specification applicable for Dual Connectivity
	and EN-DC only.
No Radio Resources Available	The cell(s) in the requested node don't have sufficient radio resources
	available.
	In the current version of this specification applicable for Dual Connectivity and EN-DC only.
Invalid QoS combination	The action was failed because of invalid QoS combination.
mivalia que combination	In the current version of this specification applicable for Dual Connectivity
	and EN-DC only.
Encryption Algorithms Not	The requested eNB is unable to support any of the encryption algorithms
Supported	supported by the UE.
	In the current version of this specification applicable for Dual Connectivity
Procedure cancelled	and EN-DC only.  The sending node cancelled the procedure due to other urgent actions to
1 Tocedure carroened	be performed.
	In the current version of this specification applicable for Dual Connectivity
	and EN-DC only.
RRM purpose	The procedure is initiated due to node internal RRM purposes.
	In the current version of this specification applicable for Dual Connectivity
Improve User Dit Date	and EN-DC only.
Improve User Bit Rate	The reason for requesting this action is to improve the user bit rate.  In the current version of this specification applicable for Dual Connectivity
	and EN-DC only.
User Inactivity	The action is requested due to user inactivity on all E-RABs, e.g., S1 is
•	requested to be released in order to optimise the radio resources; or
	SeNB/en-gNB didn't see activity on the DRB recently.
	In the current version of this specification applicable for Dual Connectivity and EN-DC only.
Radio Connection With UE Lost	The action is requested due to losing the radio connection to the UE.
Radio Connection With OE East	In the current version of this specification applicable for Dual Connectivity
	and EN-DC only.
Failure in the Radio Interface	Radio interface procedure has failed.
Procedure	In the current version of this specification applicable for Dual Connectivity
	and EN-DC only.
Bearer Option not Supported	The requested bearer option is not supported by the sending node.  In the current version of this specification applicable for Dual Connectivity
	and EN-DC only.
MCG Mobility	The procedure is initiated due to mobility related at MCG radio resource.
SCG Mobility	The procedure is initiated due to mobility related at SCG radio resource.
Count reaches max value	Indicates the PDCP COUNT for UL or DL reached the max value and the
	bearer may be released.
Unknown Old en-gNB UE X2AP ID	The action failed because the Old en-gNB UE X2AP ID or the SgNB UE X2AP ID is unknown.
PDCP Overload	The procedure is initiated due to PDCP resource limitation.
CHO-CPC resources to be	The prepared resources for CHO or CPC for a UE are to be changed.
changed	
UE Power Saving	The procedure is initiated to accommodate the preference indicated by UE to release the SCG for UE power saving purpose.
	In the current version of this specification applicable for Dual Connectivity
	and EN-DC only.
Insufficient UE Capabilities	The procedure can't proceed due to insufficient UE capabilities.
Normal Release	The release is due to normal reasons.

Transport Network Layer cause	Meaning	
Transport resource unavailable	The required transport resources are not available.	
Unspecified	Sent when none of the above cause values applies but still the cause is	
	Transport Network Layer related	

Protocol cause	Meaning
Abstract Syntax Error (Reject)	The received message included an abstract syntax error and the concerned criticality indicated "reject" (see sub clause 10.3 of TS 36.413 [4]).
Abstract Syntax Error (Ignore and Notify)	The received message included an abstract syntax error and the concerned criticality indicated "ignore and notify" (see sub clause 10.3 of TS 36.413 [4]).
Abstract syntax error (falsely constructed message)	The received message contained IEs or IE groups in wrong order or with too many occurrences (see sub clause 10.3 of TS 36.413 [4]).
Message not Compatible with Receiver State	The received message was not compatible with the receiver state (see sub clause 10.4 of TS 36.413 [4]).
Semantic Error	The received message included a semantic error (see sub clause 10.4 of TS 36.413 [4]).
Transfer Syntax Error	The received message included a transfer syntax error (see sub clause 10.2 of TS 36.413 [4]).
Unspecified	Sent when none of the above cause values applies but still the cause is Protocol related

Miscellaneous cause	Meaning
Control Processing Overload	eNB control processing overload
Hardware Failure	eNB hardware failure
Not enough User Plane Processing	eNB has insufficient user plane processing resources available.
Resources	
O&M Intervention	Operation and Maintenance intervention related to eNB equipment
Unspecified	Sent when none of the above cause values applies and the cause is not related to any of the categories Radio Network Layer, Transport Network Layer or Protocol

# 9.2.7 Criticality Diagnostics

The *Criticality Diagnostics* IE is sent by the eNB/en-gNB when parts of a received message have not been comprehended or were missing, or if the message contained logical errors. When applicable, it contains information about which IEs were not comprehended or were missing.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Procedure Code	0		INTEGER (0255)	Procedure Code is to be used if Criticality Diagnostics is part of Error Indication procedure, and not within the response message of the same procedure that caused the error.
Triggering Message	0		ENUMERATED(initiatin g message, successful outcome, unsuccessful outcome)	The Triggering Message is used only if the Criticality Diagnostics is part of Error Indication procedure.
Procedure Criticality	0		ENUMERATED(reject, ignore, notify)	This Procedure Criticality is used for reporting the Criticality of the Triggering message (Procedure).
Information Element Criticality Diagnostics		0 <maxnroferror s&gt;</maxnroferror 		
>IE Criticality	М		ENUMERATED(reject, ignore, notify)	The IE Criticality is used for reporting the criticality of the triggering IE. The value "ignore" shall not be used.
>IE ID	M		INTEGER (065535)	The IE ID of the not understood or missing IE
>Type Of Error	М		ENUMERATED(not understood, missing,)	, and the second

Range bound	Explanation
maxNrOfErrors	Maximum no. of IE errors allowed to be reported with a single
	message. The value for maxnooferrors is 256.

## 9.2.8 Served Cell Information

This IE contains cell configuration information of a cell that a neighbour eNB may need for the X2 AP interface.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PCI	М		INTEGER (0503,)	Physical Cell ID	-	
Cell ID	М		ECGI 9.2.14		_	
TAC	М		OCTET STRING(2)	Tracking Area Code	_	
Broadcast PLMNs		1 <maxnoof BPLMNs&gt;</maxnoof 	,	Broadcast PLMNs in SIB1 associated to the E-UTRA Cell Identity in the Cell ID IE.	-	
>PLMN Identity	М		9.2.4		_	
CHOICE EUTRA-Mode- Info	М				_	
>FDD						
>>FDD Info		1			_	
>>>UL EARFCN	M		EARFCN 9.2.26	Corresponds to N <sub>UL</sub> in TS 36.104 [16] for E-UTRA operating bands for which it is defined; ignored for E-UTRA operating bands for which N <sub>UL</sub> is not defined	_	
>>>DL EARFCN	M		EARFCN 9.2.26	Corresponds to N <sub>DL</sub> in TS 36.104 [16]	_	
>>>UL Transmission Bandwidth	M		Transmission Bandwidth 9.2.27	Same as DL Transmission Bandwidth in this release; ignored in case UL EARFCN value is ignored	_	
>>>DL Transmission Bandwidth	М		Transmission Bandwidth 9.2.27		_	
>>>UL EARFCN Extension	0		EARFCN Extension 9.2.65	If this IE is present, the value signalled in the <i>UL EARFCN</i> IE is ignored.	YES	reject
>>>DL EARFCN Extension	0		EARFCN Extension 9.2.65	If this IE is present, the value signalled in the DL EARFCN IE is ignored.	YES	reject
>>>Offset of NB-loT Channel Number to DL EARFCN	0		Offset of NB-IoT Channel Number to EARFCN 9.2.94	Corresponds to M <sub>DL</sub> in TS 36.104 [16]	YES	reject
>>>Offset of NB-IoT Channel Number to UL EARFCN	0		Offset of NB-IoT Channel Number to EARFCN 9.2.94	Corresponds to M <sub>UL</sub> in TS 36.104 [16]	YES	reject

	1 -	1	T	T		
>>>NRS-NSSS-	0		ENUMERATED	NRS to NSSS	YES	Ignore
PowerOffset			(-3, 0, 3,)	power ratio,		
				as defined in		
				TS6.213 [11].		
>>NSSS-	0		ENUMERATED	The number of	YES	ignore
NumOccasionDifferen	•		(2, 4, 8,)	consecutive	120	ignoro
tPrecoder			(2, 4, 0,)	NSSS		
terecoder						
				occasions that		
				use different		
				precoders for		
				NSSS		
				transmission, as		
				defined in		
				TS6.213 [11].		
>TDD				100.210 [11].	_	
>>TDD Info		1				
	N.4	1	0.000	0	_	
>>>EARFCN	M		9.2.26	Corresponds to	_	
				$N_{DL}/N_{UL}$ in TS		
				36.104 [16]		
>>>Transmission	M		Transmission		_	
Bandwidth			Bandwidth			
			9.2.27			
>>>Subframe	М		ENUMERATED	Uplink-downlink	_	
Assignment	'*'		(sa0, sa1, sa2,	subframe		
Assignment						
			sa3, sa4, sa5,	configuration		
			sa6,)	information		
				defined in TS		
				36.211 [10].		
				In NB-IOT, sa0		
				and sa6 are not		
				applicable.		
>>>Special		1		Special		
Subframe Info		'			_	
Subframe info				subframe		
				configuration		
				information		
				defined in TS		
				36.211 [10]		
>>>Special	M		ENUMERATED		_	
Subframe Patterns			(ssp0, ssp1,			
			ssp2, ssp3,			
			ssp4, ssp5,			
			ssp6, ssp7,			
			ssp8,)			
>>>Cyclic Prefix	M		ENUMERATED		_	
DL			(Normal,			
			Extended,)			
>>>Cyclic Prefix	M		ENUMERATED		_	
UL			(Normal,			
			Extended,)			
>>>Additional	0			Special	YES	ignore
Special Subframe	~			subframe	125	ignore
Info						
IIIIO				configuration		
				information		
				defined in TS		
				36.211 [10].		
				Only for newly		
				defined		
				configuration of		
				special		
				subframe from		
				Release 11.		
, A alakti I	N4			110000011.		
>>>Additional	M		ENUMERATED		_	
Special Subframe			(ssp0, ssp1,			
Patterns			ssp2, ssp3,			
			ssp4, ssp5,			
			ssp6, ssp7,			
			ssp8, ssp9,)			
<u> </u>	1	l .	, ,-r-, <del>, , , , , , , , , , , , , , , , , , </del>	ı	ı	

>>>>Cyclic Prefix DL	М		ENUMERATED (Normal,		_	
>>>>Cyclic Prefix UL	М		Extended,) ENUMERATED (Normal, Extended,)		_	
>>>EARFCN Extension	0		9.2.65	If this IE is present, the value signalled in the <i>EARFCN</i> IE is ignored.	YES	reject
>>>Additional Special Subframe Extension Info	0			Special subframe configuration information defined in TS 36.211 [10]. Only for newly defined configuration of special subframe from Release 14.	YES	ignore
>>>>Additional Special Subframe Patterns Extension	М		ENUMERATED (ssp10,)		-	
>>>Cyclic Prefix DL	М		ENUMERATED (Normal, Extended,)		-	
>>>>Cyclic Prefix UL	M		ENUMERATED (Normal, Extended,)		-	
>>>Offset of NB-IoT Channel Number to DL EARFCN	0		Offset of NB-IoT Channel Number to EARFCN 9.2.94	Corresponds to M <sub>DL</sub> in TS 36.104 [16]	YES	reject
>>>NB-IoT UL DL Alignment Offset	0		NB-IoT UL DL Alignment Offset 9.2.144	Corresponds to the TDD-UL-DL- AlignmentOffset -NB in TS 36.331 [9].	YES	reject
Number of Antenna Ports	0		9.2.43		YES	ignore
PRACH Configuration	0		PRACH Configuration 9.2.50		YES	ignore
MBSFN Subframe Info		0 <maxnoof MBSFN&gt;</maxnoof 		MBSFN subframe defined in TS 36.331 [9]	GLOBAL	ignore
>Radioframe Allocation Period	М		ENUMERATED (n1, n2, n4, n8, n16, n32,)		-	
>Radioframe Allocation Offset >Subframe Allocation	M		INTEGER (07,) 9.2.51		_	
CSG ID	O		9.2.53		YES	ignore
MBMS Service Area Identity List		0 <maxnoof MBMSServic eArealdentiti es &gt;</maxnoof 		Supported MBMS Service Area Identities in the cell	GLOBAL	ignore
>MBMS Service Area Identity			OCTET STRING(2)	MBMS Service Area Identities as defined in TS 23.003 [29]		
MultibandInfoList	0		9.2.60		YES	ignore

FreqBandIndicatorPriority	0		ENUMERATED (not- broadcasted, broadcasted,)	This IE indicates that the eNodeB supports FreqBandIndica tionPriority, and whether FreqBandIndica torPriority is broadcasted in SIB 1 (see TS 36.331 [9])	YES	ignore
BandwidthReducedSI	0		ENUMERATED (scheduled,)	This IE indicates that the SystemInformati onBlockType1-BR is scheduled in the cell (see TS 36.331 [9])	YES	ignore
Protected E-UTRA Resource Indication	0		9.2.125	This IE indicates which E-UTRA control/referenc e signal resources are protected and are not subject to E-UTRA - NR Cell Resource Coordination.	YES	ignore
Broadcast PLMN Identity Info List E-UTRA		0 <maxnoof BPLMNs&gt;</maxnoof 		This IE corresponds to the cellAccessRelat edInfo IE in SIB1 as specified in TS 36.331 [9]. All PLMN Identities and associated information contained in the cellAccessRelat edInfo IE are included and provided in the same order as broadcast in SIB1.	YES	ignore
>Broadcast PLMNs		1 <maxnoof BPLMNs&gt;</maxnoof 		Broadcast PLMN IDs in SIB1 associated to the <i>E-UTRA</i> Cell Identity IE.	-	
>>PLMN Identity	М		9.2.4	<u> </u>	_	
>TAC	M		OCTET STRING(2)		_	
>E-UTRA Cell Identity	М		BIT STRING (28)		_	
NPRACH Configuration	0		NPRACH Configuration 9.2.170		YES	ignore
SFN Offset	0		9.2.175		YES	ignore

Range bound	Explanation

maxnoofBPLMNs	Maximum no. of Broadcast PLMN lds. Value is 6.				
maxnoofMBSFN	Maximum no. of MBSFN frame allocation with different offset. Value				
	is 8.				
maxnoofMBMSServiceArealdentities	Maximum no. of MBMS Service Area Identities. Value is 256.				

### 9.2.9 E-RAB Level QoS Parameters

This IE defines the QoS to be applied to an E-RAB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
QCI	М		INTEGER (0255)	QoS Class Identifier defined in TS 23.401 [12]. Logical range and coding specified in TS 23.203 [13].	-	
Allocation and Retention Priority	M		9.2.31		_	
GBR QoS Information	0		9.2.10	This IE applies to GBR bearers only and shall be ignored otherwise.	-	
Downlink Maximum Packet Loss Rate	0		Packet Loss Rate 9.2.124	This IE applies only to bearers with specific QCI (see TS 23.401 [12]) and indicates the maximum allowed packet loss rate for downlink as specified in TS 23.401 [12].	YES	ignore
Uplink Maximum Packet Loss Rate	0		Packet Loss Rate 9.2.124	This IE applies only to bearers with specific QCI (see TS 23.401 [12]) and indicates the maximum allowed packet loss rate for uplink as specified in TS 23.401 [12].	YES	ignore

### 9.2.10 GBR QoS Information

This IE indicates the maximum and guaranteed bit rates of a GBR E-RAB for downlink and uplink.

NOTE: For LTE DC, the SeNB regards the *GBR QoS Information* IE as an E-RAB level parameter also for E-RABs configured with the split bearer option, although for the split bearer option the bitrates signalled by the MeNB are typically not equal to the bitrates signalled by the MME for that E-RAB (see TS 36.300 [15]).

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
E-RAB Maximum Bit Rate Downlink	M		reference Bit Rate 9.2.11	description  Maximum Bit Rate in  DL (i.e. from EPC to	_	Criticality
Downlink			0.2.11	E-UTRAN) for the bearer.		
				Details in TS 23.401		
				[12]. If the Extended E-		
				RAB Maximum Bit Rate Downlink IE is		
				included, the E-RAB Maximum Bit Rate		
				Downlink IE shall be ignored.		
E-RAB Maximum Bit Rate Uplink	М		Bit Rate 9.2.11	Maximum Bit Rate in UL (i.e. from E-	_	
op				UTRAN to EPC) for the bearer.		
				Details in TS 23.401		
				[12]. If the Extended E-		
				RAB Maximum Bit Rate Uplink IE is		
				included, the E-RAB Maximum Bit Rate		
				Uplink IE shall be ignored.		
E-RAB Guaranteed Bit	M		Bit Rate 9.2.11	Guaranteed Bit Rate	_	
Rate Downlink				(provided that there is data to deliver) in DL		
				(i.e. from EPC to E- UTRAN) for the		
				bearer. Details in TS 23.401		
				[12].		
				If the Extended E- RAB Guaranteed Bit		
				Rate Downlink IE is included, the E-RAB		
				Guaranteed Bit Rate Downlink IE shall be		
E DAD Customad Dit	NA.		Dit Data 0.044	ignored.		
E-RAB Guaranteed Bit Rate Uplink	M		Bit Rate 9.2.11	Guaranteed Bit Rate (provided that there is	_	
				data to deliver) in UL (i.e. from E-UTRAN to		
				EPC) for the bearer. Details in TS 23.401		
				[12]. If the Extended E-		
				RAB Guaranteed Bit		
				Rate Uplink IE is included, the E-RAB		
				Guaranteed Bit Rate Uplink IE shall be		
Extended E-RAB Maximum	0		Extended Bit	ignored.  Maximum Bit Rate in	_	
Bit Rate Downlink			Rate 9.2.99	DL (i.e. from EPC to	_	
				E-UTRAN) for the bearer.		
				Details in TS 23.401 [12].		
	1	<u>I</u>	I	[·-=]·	<u>l</u>	1

Extended E-RAB Maximum Bit Rate Uplink	0	Extended Bit Rate 9.2.99	Maximum Bit Rate in UL (i.e. from E-UTRAN to EPC) for the bearer. Details in TS 23.401 [12].	-	
Extended E-RAB Guaranteed Bit Rate Downlink	0	Extended Bit Rate 9.2.99	Guaranteed Bit Rate (provided that there is data to deliver) in DL (i.e. from EPC to E-UTRAN) for the bearer. Details in TS 23.401 [12].	_	
Extended E-RAB Guaranteed Bit Rate Uplink	0	Extended Bit Rate 9.2.99	Guaranteed Bit Rate (provided that there is data to deliver) in UL (i.e. from E-UTRAN to EPC) for the bearer. Details in TS 23.401 [12].	-	

#### 9.2.11 Bit Rate

This IE indicates the number of bits delivered by E-UTRAN in UL or to E-UTRAN in DL or by UE in sidelink within a period of time, divided by the duration of the period. It is used, for example, to indicate the maximum or guaranteed bit rate for a GBR E-RAB, or an aggregated maximum bit rate.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Bit Rate	М		INTEGER (010,000,000,000)	The unit is: bit/s

## 9.2.12 UE Aggregate Maximum Bit Rate

On Handover Aggregate Maximum Bitrate is transferred to the target eNB. In Dual Connectivity, UE Aggregate Maximum Bit Rate is split into MeNB UE Aggregate Maximum Bit Rate and SeNB UE Aggregate Maximum Bit Rate which are enforced by MeNB and SeNB respectively as specified in TS 36.300 [15]. The UE Aggregate Maximum Bitrate is applicable for all Non-GBR bearers per UE which is defined for the Downlink and the Uplink direction and provided by the MME to the eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
UE Aggregate Maximum Bit Rate Downlink	М		Bit Rate 9.2.11	If the Extended UE Aggregate Maximum Bit Rate Downlink IE is included, the UE Aggregate Maximum Bit Rate Downlink IE shall be ignored.	-	
UE Aggregate Maximum Bit Rate Uplink	М		Bit Rate 9.2.11	If the Extended UE Aggregate Maximum Bit Rate Uplink IE is included, the UE Aggregate Maximum Bit Rate Uplink IE shall be ignored.	-	
Extended UE Aggregate Maximum Bit Rate Downlink	0		Extended Bit Rate 9.2.99	UE Aggregate Maximum Bit Rate in DL. Details in TS 23.401 [12].	-	
Extended UE Aggregate Maximum Bit Rate Uplink	0		Extended Bit Rate 9.2.99	UE Aggregate Maximum Bit Rate in UL. Details in TS 23.401 [12].	_	

## 9.2.13 Message Type

The Message Type IE uniquely identifies the message being sent. It is mandatory for all messages.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Procedure Code	M		INTEGER (0255)	
Type of Message	М		CHOICE (Initiating Message, Successful Outcome, Unsuccessful Outcome,)	

## 9.2.14 ECGI

The E-UTRAN Cell Global Identifier (ECGI) is used to globally identify a cell (see TS 36.401 [2]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PLMN Identity	М		9.2.4		_	
E-UTRAN Cell Identifier	M		BIT STRING (28)	The leftmost bits of the E-UTRAN Cell Identifier IE value correspond to the value of the eNB ID IE contained in the Global eNB ID IE (defined in section 9.2.22) identifying the eNB that controls the cell.	-	

### 9.2.15 COUNT Value

This information element indicates the 12 bit PDCP sequence number and the corresponding 20 bit Hyper frame number.

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
			reference	description		Criticality
PDCP-SN	M		INTEGER		_	
			(04095)			
HFN	M		INTEGER		_	
			(01048575)			

#### 9.2.16 GUMMEI

This information element indicates the globally unique MME identity.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
GU Group Id	M		9.2.20		_	
MME code	М		OCTET STRING (1)		_	

### 9.2.17 UL Interference Overload Indication

This IE provides, per PRB, a report on interference overload. The interaction between the indication of UL Interference Overload and UL High Interference is implementation specific.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UL Interference Overload Indication List		1 <maxnoofprbs &gt;</maxnoofprbs 		
>UL Interference Overload Indication	М		ENUMERATED (high interference, medium interference, low interference,)	Each PRB is identified by its position in the list: the first element in the list corresponds to PRB 0, the second to PRB 1, etc.

Range bound	Explanation
maxnoofPRBs	Maximum no. Physical Resource Blocks. Value is 110.

## 9.2.18 UL High Interference Indication

This IE provides, per PRB, a 2 level report on interference sensitivity. The interaction between the indication of UL Overload and UL High Interference is implementation specific.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
HII	M		BIT STRING (1110,)	Each position in the bitmap represents a PRB (first bit=PRB 0 and so on), for which value "1" indicates 'high interference sensitivity' and value "0" indicates 'low interference sensitivity'.  The maximum number of Physical Resource Blocks is 110.

# 9.2.19 Relative Narrowband Tx Power (RNTP)

This IE provides an indication on DL power restriction per PRB or per subframe per PRB (Enhanced RNTP) in a cell and other information needed by a neighbour eNB for interference aware scheduling.

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
DNTD Day DDD	M		reference BIT STRING	description		Criticality
RNTP Per PRB	IVI		(6110,)	Each position in the bitmap represents a	_	
			(0110,)	n <sub>PRB</sub> value (i.e. first		
				bit=PRB 0 and so		
				on), for which the bit		
				value represents		
				RNTP (n <sub>PRB</sub> ), defined		
				in TS 36.213 [11].		
				Value 0 indicates "Tx		
				not exceeding RNTP		
				threshold".		
				Value 1 indicates "no		
				promise on the Tx		
				power is given". The		
				IE is ignored if the		
				Enhanced RNTP IE is		
				included.		
RNTP Threshold	M		ENUMERATE	RNTP <sub>threshold</sub> is	_	
			D (-∞, -11, -10,	defined in TS 36.213		
			-9, -8, -7, -6, -	[11].		
			5, -4, -3, -2, -1,			
N 1 0/0 II ''	1		0, 1, 2, 3,) ENUMERATE	5/ / /		
Number Of Cell-specific	M			P (number of antenna	_	
Antenna Ports			D (1, 2, 4,)	ports for cell-specific		
				reference signals) defined in TS 36.211		
				[10]		
P_B	M		INTEGER	P <sub>B</sub> is defined in TS	_	
r_b	IVI		(03,)	36.213 [11].	_	
PDCCH Interference Impact	M		INTEGER	Measured by	_	
			(04,)	Predicted Number Of		
				Occupied PDCCH		
				OFDM Symbols (see		
				TS 36.211 [10]).		
				Value 0 means "no		
				prediction is		
				available".		
Enhanced RNTP	0				YES	ignore

	ı	1	1	T	1	
>Enhanced RNTP Bitmap	M		BIT STRING (128800,)	Each position in the bitmap represents a PRB in a subframe; value "00" indicates "Tx not exceeding RNTP Threshold", value "01" indicates "Tx not exceeding RNTP High Power Threshold", value "11" indicates that "no promise on the Tx power is given". Value "10" is ignored		
				by the receiver". Each position is applicable only in positions corresponding to DL subframes. The first 2 bits correspond to PRB 0 of the first subframe for which the IE is valid, the following 2 bits correspond to PRB 1 of the first subframe for which the IE is valid, and so		
				on. The bit string may span across multiple contiguous subframes (maximum 40). The length of the bit string is an integer multiple of $2\times N_{\rm RB}^{\rm DL}$ . $N_{\rm RB}^{\rm DL} \mbox{ is defined in TS 36.211 [10].}$ The Enhanced RNTP pattern is continuously repeated.		
>RNTP High Power Threshold	M		ENUMERATE D (-∞, -11, -10, -9, -8, -7, -6, - 5, -4, -3, -2, -1, 0, 1, 2, 3,)	Defined as the RNTP <sub>threshold</sub> in TS 36.213 [11].		
>Enhanced RNTP Start Time		01				
>>Start SFN	М		INTEGER (01023,)	SFN of the radio frame containing the first subframe when the <i>Enhanced RNTP</i> IE is valid.		
>>Start Subframe Number	М		INTEGER (09,)	Subframe number, within the radio frame indicated by the <i>Start SFN</i> IE, of the first subframe when the <i>Enhanced RNTP</i> IE is valid.		

## 9.2.20 GU Group Id

The GU Group Id IE is the globally unique group id corresponding to a pool area.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PLMN Id	M		PLMN Identity 9.2.4		_	
MME Group Id	M		OCTET STRING(2)		_	

## 9.2.21 Location Reporting Information

This information element indicates how the location information should be reported.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Event	M		ENUMERATED (Change of serving cell,)		_	
Report Area	М		ENUMERATED (ECGI,)		_	

#### 9.2.22 Global eNB ID

This IE is used to globally identify an eNB (see TS 36.401 [2]).

IE/Group Name	Presenc e	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PLMN Identity	М		9.2.4		_	Criticality
CHOICE eNB ID	М		-		_	
>Macro eNB ID	M		BIT STRING (20)	Equal to the 20 leftmost bits of the value of the <i>E-UTRAN Cell Identifier</i> IE contained in the <i>ECGI</i> IE (see section 9.2.14) identifying each cell controlled by the eNB	-	
>Home eNB ID	M		BIT STRING (28)	Equal to the value of the <i>E-UTRAN Cell Identifier</i> IE contained in the <i>ECGI</i> IE (see section 9.2.14) identifying the cell controlled by the eNB	-	
>Short Macro eNB ID	М		BIT STRING (SIZE(18))	Equal to the 18 leftmost bits of the value of the <i>E-UTRAN Cell Identifier</i> IE contained in the <i>ECGI</i> IE (see section 9.2.14) identifying each cell controlled by the eNB.	-	
>Long Macro eNB ID	М		BIT STRING (SIZE(21))	Equal to the 21 leftmost bits of the value of the <i>E-UTRAN Cell Identifier</i> IE contained in the <i>ECGI</i> IE (see section 9.2.14) identifying each cell controlled by the eNB.	-	

#### 9.2.23 E-RAB ID

This IE uniquely identifies an E-RAB for a UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
E-RAB ID	М		INTEGER (015,)	

#### 9.2.24 eNB UE X2AP ID

This information element, combined with the eNB UE X2AP ID Extension when present regardless its value, uniquely identifies an UE over the X2 interface within an eNB.

The usage of this IE is defined in TS 36.401 [2].

NOTE: If X2-C signalling transport is shared among multiple interface instances, the value of the eNB UE X2AP ID, combined with the eNB UE X2AP ID Extension, if applicable, is allocated so that it can be associated with an X2-C interface instance.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
eNB UE X2AP ID	М		INTEGER (04095)	

### 9.2.25 Subscriber Profile ID for RAT/Frequency priority

The Subscriber Profile ID IE for RAT/Frequency Selection Priority is used to define camp priorities in Idle mode and to control inter-RAT/inter-frequency handover in Active mode (TS 36.300 [15]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Subscriber Profile ID for RAT/Frequency Priority	М		INTEGER (1256)	
KAT/Frequency Friority			(1230)	

## 9.2.25a Additional RRM Policy Index

The Additional RRM Policy Index IE is used to provide additional information independent from the Subscriber Profile ID for RAT/Frequency priority as specified in TS 36.300 [15].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Additional RRM Policy Index	М		BIT STRING (32)	

#### 9.2.26 EARFCN

The E-UTRA Absolute Radio Frequency Channel Number defines the carrier frequency used in a cell for a given direction (UL or DL) in FDD or for both UL and DL directions in TDD.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
EARFCN	М		INTEGER (0maxEARFCN)	The relation between EARFCN and carrier frequency (in MHz) are defined in TS 36.104 [16].

Range bound	Explanation
maxEARFCN	Maximum value of EARFCNs. Value is 65535.

#### 9.2.27 Transmission Bandwidth

The *Transmission Bandwidth* IE is used to indicate the UL or DL transmission bandwidth expressed in units of resource blocks " $N_{RB}$ " (TS 36.104 [16]). The values bw1, bw6, bw15, bw25, bw50, bw75, bw100 correspond to the number of resource blocks " $N_{RB}$ " 6, 15, 25, 50, 75, 100.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Transmission Bandwidth	М		ENUMERATED (bw6,	
			bw15, bw25, bw50,	
			bw75, bw100,, bw1)	

#### 9.2.28 E-RAB List

The IE contains a list of E-RAB identities with a cause value. It is used for example to indicate not admitted bearers.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
E-RAB List Item		1 <maxnoofbeare rs=""></maxnoofbeare>			EACH	ignore
>E-RAB ID	M		9.2.23		-	
>Cause	M		9.2.6		-	

Range bound	Explanation
maxnoofBearers	Maximum no. of E-RABs. Value is 256.

## 9.2.29 UE Security Capabilities

The UE Security Capabilities IE defines the supported algorithms for encryption and integrity protection in the UE.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Encryption Algorithms	М		BIT STRING (16,)	Each position in the bitmap represents an encryption algorithm:  "all bits equal to 0" - UE supports no other algorithm than EEA0  "first bit" - 128-EEA1,  "second bit" - 128-EEA2,  "third bit" - 128-EEA3,  other bits reserved for future use.  Value '1' indicates support and value "0" indicates no support of the algorithm.  Algorithms are defined in TS 33.401 [18].
Integrity Protection Algorithms	M		BIT STRING (16,)	Each position in the bitmap represents an integrity protection algorithm: all bits equal to 0" - UE supports no other algorithm than EIA0 (TS 33.401 [18]) "first bit" - 128-EIA1, "second bit" - 128-EIA2, "third bit" - 128-EIA3, other bits reserved for future use. Value '1' indicates support and value "0" indicates no support of the algorithm. Algorithms are defined in TS 33.401 [18].

# 9.2.30 AS Security Information

The AS Security Information IE is used to generate the key material to be used for AS security with the UE.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Key eNodeB Star	М		BIT STRING (256)	KeNB* defined in TS 33.401 [18]. If the target cell belongs to multiple frequency bands, the source eNB selects the DL-EARFCN for KeNB* calculation as specified in section 10.3 of TS 36.331 [9].
Next Hop Chaining Count	M		INTEGER (07)	Next Hop Chaining Count (NCC) defined in TS 33.401 [18]

## 9.2.31 Allocation and Retention Priority

This IE specifies the relative importance compared to other E-RABs for allocation and retention of the E-UTRAN Radio Access Bearer.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Priority Level	M		INTEGER (015)	Desc.: This IE should be understood as "priority of allocation and retention" (see TS 23.401 [12]). Usage: Value 15 means "no priority". Values between 1 and 14 are ordered in decreasing order of priority, i.e. 1 is the highest and 14 the lowest. Value 0 shall be treated as a logical error if received.
Pre-emption Capability	M		ENUMERATED(sh all not trigger pre- emption, may trigger pre-emption)	Descr.: This IE indicates the preemption capability of the request on other E-RABs Usage: The E-RAB shall not pre-empt other E-RABs or, the E-RAB may pre-empt other E-RABs The Pre-emption Capability indicator applies to the allocation of resources for an E-RAB and as such it provides the trigger to the pre-emption procedures/processes of the eNB.
Pre-emption Vulnerability	M		ENUMERATED(not pre-emptable, pre-emptable)	Desc.: This IE indicates the vulnerability of the E-RAB to preemption of other E-RABs. Usage: The E-RAB shall not be pre-empted by other E-RABs or the E-RAB may be pre-empted by other RABs. Pre-emption Vulnerability indicator applies for the entire duration of the E-RAB, unless modified, and as such indicates whether the E-RAB is a target of the pre-emption procedures/processes of the eNB.

#### 9.2.32 Time To Wait

This IE defines the minimum allowed waiting times.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Time To Wait	M		ENUMERATED(1s,	
			2s, 5s, 10s, 20s,	
			60s,)	

## 9.2.33 SRVCC Operation Possible

The IE indicates that both the UE and the MME are SRVCC-capable. E-UTRAN behaviour on reception of this is specified in TS 23.216 [20].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
SRVCC Operation Possible	М		ENUMERATED(Po ssible,)	

#### 9.2.34 Hardware Load Indicator

The Hardware Load Indicator IE indicates the status of the Hardware Load experienced by the cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DL Hardware Load Indicator	M		Load Indicator	
			9.2.36	
UL Hardware Load Indicator	M		Load Indicator	
			9.2.36	

#### 9.2.35 S1 TNL Load Indicator

The S1 TNL Load Indicator IE indicates the status of the S1 Transport Network Load experienced by the cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DL S1TNL Load Indicator	M		Load Indicator	
			9.2.36	
UL S1TNL Load Indicator	M		Load Indicator	
			9.2.36	

#### 9.2.36 Load Indicator

The Load Indicator IE indicates the status of Load.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Load Indicator	M		ENUMERATED (LowLoad,	
			MediumLoad, HighLoad, Overload,)	

#### 9.2.37 Radio Resource Status

The *Radio Resource Status* IE indicates the usage of the PRBs for all traffic in Downlink and Uplink (TS 36.314 [22], TS 23.203 [13]) and the usage of PDCCH CCEs for Downlink and Uplink scheduling.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DL GBR PRB usage	M		INTEGER (0100)	
UL GBR PRB usage	M		INTEGER (0100)	
DL non-GBR PRB usage	M		INTEGER (0100)	
UL non-GBR PRB usage	M		INTEGER (0100)	
DL Total PRB usage	M		INTEGER (0100)	
UL Total PRB usage	M		INTEGER (0100)	
DL scheduling PDCCH CCE usage	0		INTEGER (0100)	
UL scheduling PDCCH CCE usage	0		INTEGER (0100)	

## 9.2.38 UE History Information

The *UE History Information* IE contains information about cells that a UE has been served by in active state prior to the target cell. The overall mechanism is described in TS 36.300 [15].

NOTE: The definition of this IE is aligned with the definition of the *UE History Information* IE in TS 36.413 [4].

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Last Visited Cell List		1 <maxnoofcells &gt;</maxnoofcells 		Most recent information is added to the top of this list	_	
>Last Visited Cell Information	M		9.2.39		_	

Range bound	Explanation
maxnoofCells	Maximum number of last visited cell information records that can be
	reported in the IE. Value is 16.

#### 9.2.39 Last Visited Cell Information

The Last Visited Cell Information may contain cell specific information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE Last Visited Cell Information	М				-	
>E-UTRAN Cell					-	
>>Last Visited E-UTRAN Cell Information	М		9.2.40		-	
>UTRAN Cell					-	
>>Last Visited UTRAN Cell Information	М		OCTET STRING	Defined in TS 25.413 [24]		
>GERAN Cell					-	
>>Last Visited GERAN Cell Information	М		9.2.41		-	
>NG-RAN Cell					-	
>>Last Visited NG-RAN Cell Information	М		OCTET STRING	Defined in TS 38.413 [39]. (see subclause 9.3.1.97).		

## 9.2.40 Last Visited E-UTRAN Cell Information

The Last Visited E-UTRAN Cell Information contains information about a cell that is to be used for RRM purposes.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Global Cell ID	М		ECGI 9.2.14		-	
Cell Type	M		9.2.42		-	
Time UE stayed in Cell	М		INTEGER (04095)	The duration of the time the UE stayed in the cell in seconds. If the UE stays in a cell more than 4095s, this IE is set to 4095.	-	
Time UE stayed in Cell Enhanced Granularity	0		INTEGER (040950)	The duration of the time the UE stayed in the cell in 1/10 seconds. If the UE stays in a cell more than 4095s, this IE is set to 40950.	YES	ignore
HO Cause Value	0		Cause 9.2.6	The cause for the handover from the E-UTRAN cell.	YES	ignore

#### 9.2.41 Last Visited GERAN Cell Information

The Last Visited Cell Information for GERAN is currently undefined.

NOTE: If in later Releases this is defined, the choice type may be extended with the actual GERAN specific information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE Last Visited GERAN Cell Information	М				-	
>Undefined	M		NULL		-	

## 9.2.42 Cell Type

The cell type provides the cell coverage area.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Cell Size	M		ENUMERATED		-	
			(verysmall, small,			
			medium, large,)			

#### 9.2.43 Number of Antenna Ports

The Number of Antenna Ports IE is used to indicate the number of cell specific antenna ports.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
Number of Antenna Ports			ENUMERATED (an1,	an1 = One antenna port
			an2, an4,)	an2 = Two antenna ports
				an4 = Four antenna ports

## 9.2.44 Composite Available Capacity Group

The *Composite Available Capacity Group* IE indicates the overall available resource level in the cell in Downlink and Uplink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Composite Available Capacity Downlink	M		Composite Available Capacity 9.2.45	For the Downlink	-	
Composite Available Capacity Uplink	M		Composite Available Capacity 9.2.45	For the Uplink	-	

### 9.2.45 Composite Available Capacity

The *Composite Available Capacity* IE indicates the overall available resource level in the cell in either Downlink or Uplink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Cell Capacity Class Value	0		9.2.46		-	
Capacity Value	М		9.2.47	'0' indicates no resource is available, Measured on a linear scale.	-	

## 9.2.46 Cell Capacity Class Value

The *Cell Capacity Class Value* IE indicates the value that classifies the cell capacity with regards to the other cells. The *Cell Capacity Class Value* IE only indicates resources that are configured for traffic purposes.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Cell Capacity Class Value	M		INTEGER (1100,)	Value 1 shall indicate the minimum cell capacity, and 100 shall indicate the maximum cell capacity. There should be a linear relation between cell capacity and Cell Capacity Class Value.	-	

## 9.2.47 Capacity Value

The Capacity Value IE indicates the amount of resources that are available relative to the total E-UTRAN resources. The capacity value should be measured and reported so that the minimum E-UTRAN resource usage of existing services is reserved according to implementation. The Capacity Value IE can be weighted according to the ratio of cell capacity class values, if available.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Capacity Value	М		INTEGER (0100)	Value 0 shall indicate no available capacity, and 100 shall indicate maximum available capacity . Capacity Value should be measured on a linear scale.	-	

### 9.2.48 Mobility Parameters Information

The *Mobility Parameters Information* IE contains the change of the Handover Trigger as compared to its current value. The Handover Trigger corresponds to the threshold at which a cell initialises the handover preparation procedure towards a specific neighbour cell. Positive value of the change means the handover is proposed to take place later.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Handover Trigger Change	М		INTEGER (- 2020)	The actual value is IE value * 0.5 dB.

## 9.2.49 Mobility Parameters Modification Range

The Mobility Parameters Modification Range IE contains the range of Handover Trigger Change values permitted by the eNB<sub>2</sub> at the moment the MOBILITY CHANGE FAILURE message is sent.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Handover Trigger Change Lower Limit	М		INTEGER (- 2020)	The actual value is IE value * 0.5 dB.
Handover Trigger Change Upper Limit	М		INTEGER (- 2020)	The actual value is IE value * 0.5 dB.

### 9.2.50 PRACH Configuration

This IE indicates the PRACH resources used in neighbor cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
RootSequenceIndex	М		INTEGER (0837)	See section 5.7.2. in TS 36.211 [10]	_	
ZeroCorrelationZoneConfigur ation	М		INTEGER (015)	See section 5.7.2. in TS 36.211 [10]	_	
HighSpeedFlag	M		BOOLEAN	TRUE corresponds to Restricted set and FALSE to Unrestricted set. See section 5.7.2 in TS 36.211 [10]	-	
PRACH-FrequencyOffset	М		INTEGER (094)	See section 5.7.1 of TS 36.211 [10]	_	
PRACH-ConfigurationIndex	0		INTEGER (063)	Mandatory for TDD, shall not be present for FDD. See section 5.7.1. in TS 36.211 [10]	_	

#### 9.2.51 Subframe Allocation

The *Subframe Allocation* IE is used to indicate the subframes that are allocated for MBSFN within the radio frame allocation period as defined in TS 36.331 [9].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Subframe	M			
Allocation				
>Oneframe	M		BITSTRING (SIZE(6))	
>Fourframes	М		BITSTRING (SIZE(24))	

## 9.2.52 CSG Membership Status

This element indicates the membership status of the UE to a particular CSG.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CSG Membership Status	M		ENUMERATED (member, not- member)		-	

#### 9.2.53 CSG ID

This element indicates the identifier of the Closed Subscriber Group.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CSG ID	M		BIT STRING		-	
			(SIZE (27))			

#### 9.2.54 ABS Information

This IE provides information about which sub frames the sending eNB is configuring as almost blank subframes and which subset of almost blank subframes are recommended for configuring measurements towards the UE. Almost blank subframes are subframes with reduced power on some physical channels and/or reduced activity.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE ABS Information	M			
>FDD				
>>ABS Pattern Info	M		BIT STRING (SIZE(40))	Each position in the bitmap represents a DL subframe, for which value "1" indicates 'ABS' and value "0" indicates 'non ABS'. The first position of the ABS pattern corresponds to subframe 0 in a radio frame where SFN = 0. The ABS pattern is continuously repeated in all radio frames. The maximum number of subframes is 40.
>>Number Of Cell- specific Antenna Ports	M		ENUMERATED (1, 2, 4,)	P (number of antenna ports for cell-specific reference signals) defined in TS 36.211 [10]
>>Measurement Subset	M		BIT STRING (SIZE(40))	Indicates a subset of the ABS Pattern Info above, and is used to configure specific measurements towards the UE.
>TDD				
>>ABS Pattern Info	M		BIT STRING (170,)	Each position in the bitmap represents a subframe. Value "1" indicates 'ABS' and value "0" indicates 'non ABS' which is applicable only in positions corresponding to the DL direction. The maximum number of subframes depends on UL/DL subframe configuration. The maximum number of subframes is 20 for UL/DL subframe configuration 1~5; 60 for UL/DL subframe configuration 0. UL/DL subframe configuration 0. UL/DL subframe configuration 0. UL/DL subframe configuration 0. UL/DL subframe configuration of the ABS pattern corresponds to subframe 0 in a radio frame where SFN = 0. The ABS pattern is continuously repeated in all radio frames, and restarted each time SFN = 0.
>>Number Of Cell- specific Antenna Ports	М		ENUMERATED (1, 2, 4,)	P (number of antenna ports for cell-specific reference signals) defined in TS 36.211 [10]
>>Measurement Subset	M		BIT STRING (170,)	Indicates a subset of the ABS Pattern Info above, and is used to configure specific measurements towards the UE

>ABS Inactive	M	NULL	Indicates that interference
			coordination by means of
			almost blank sub frames is
			not active

### 9.2.55 Invoke Indication

This IE provides an indication about which type of information the sending eNB would like the receiving eNB to send back.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Invoke Indication	М		ENUMERATED	
			(ABS	
			Information,,	
			Start NAICS	
			Information,	
			Stop NAICS	
I			Information)	

# 9.2.56 MDT Configuration

The IE defines the MDT configuration parameters.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
MDT Activation	M		ENUMERATED(Imme diate MDT only, Immediate MDT and Trace,)		_	
CHOICE Area Scope of MDT	М				_	
>Cell Based					_	
>>Cell ID List for MDT		1 <maxno ofCellIDfor MDT&gt;</maxno 			_	
>>>ECGI	М		9.2.14		_	
>TA Based					_	
>>TA List for MDT		1 <maxno ofTAforM DT&gt;</maxno 			_	
>>>TAC	M		OCTET STRING (2)	Tracking Area Code. The TAI is derived using the current serving PLMN.	_	
>PLMN Wide			NULL		_	
>TAI based						
>>TAI List for MDT		1 <maxno ofTAforM DT&gt;</maxno 				
>>>TAC	M		OCTET STRING (2)	Tracking Area Code		
>>>PLMN Identity	М		9.2.4			
Measurements to Activate  M1 Reporting Trigger	M		BITSTRING (SIZE(8))	Each position in the bitmap indicates a MDT measurement, as defined in TS 37.320 [25]. First Bit = M1, Second Bit = M2, Third Bit = M3, Fourth Bit = M4, Fifth Bit = M5, Sixth Bit = logging of M1 from event triggered measurement reports according to existing RRM configuration. Seventh Bit = M6, Eighth Bit = M7.  Value "1" indicates "activate" and value "0" indicates "do not activate".	_	
M1 Reporting Trigger	M		ENUMERATED (periodic, A2event- triggered,, A2event-triggered periodic)	This IE shall be ignored if the <i>Measurements to</i> Activate IE has the first bit set to "0".	_	
M1 Threshold Event A2	C- ifM1A2trig ger			Included in case of event- triggered or event- triggered periodic reporting for measurement M1	-	
>CHOICE Threshold	М				_	
>>RSRP					-	
>>>Threshold RSRP	M		INTEGER (097)	This IE is defined in TS 36.331 [9].	_	
>>RSRQ >>>Threshold	M		INTEGER (034)	This IE is defined in TS	_	
RSRQ	141		(UUT)	36.331 [9].		

M1 Periodic reporting	C- ifperiodic MDT		Included in case of periodic or event-triggered periodic reporting for measurement M1	-	
>Report interval	M	ENUMERATED ( ms120, ms240,  ms480, ms640,  ms1024, ms2048,  ms5120, ms10240,  min1, min6, min12,  min30, min60)	This IE is defined in TS 36.331 [9].	-	
>Report amount	М	ENUMERATED (1, 2, 4, 8, 16, 32, 64, infinity)	Number of reports	-	
M3 Configuration	C-ifM3	9.2.61		YES	ignore
M4 Configuration	C-ifM4	9.2.62		YES	ignore
M5 Configuration	C-ifM5	9.2.63		YES	ignore
MDT Location Information	0	BITSTRING(SIZE(8))	Each position in the bitmap represents requested location information as defined in TS 37.320 [31]. First Bit = GNSS Second Bit = E-CID information. Other bits are reserved for future use and are ignored if received. Value "1" indicates "activate" and value "0" indicates "do not activate". The eNB shall ignore the first bit unless the Measurements to Activate IE has the first bit or the sixth bit set to "1".	YES	ignore
Signalling based MDT PLMN List	0	MDT PLMN List 9.2.64		YES	ignore
M6 Configuration	C-ifM6	9.2.87		YES	ignore
M7 Configuration	C-ifM7	9.2.88		YES	ignore
Bluetooth Measurement Configuration	0	9.2.134		YES	ignore
WLAN Measurement Configuration	0	9.2.135		YES	ignore

Range bound	Explanation
maxnoofCellIDforMDT	Maximum no. of Cell ID subject for MDT scope. Value is 32.
maxnoofTAforMDT	Maximum no. of TA subject for MDT scope. Value is 8.

Condition	Explanation
ifM1A2trigger	This IE shall be present if the Measurements to Activate IE has the
	first bit set to "1" and the M1 Reporting Trigger IE is set to "A2event-
	triggered" or to "A2event-triggered periodic".
ifperiodicMDT	This IE shall be present if the M1 Reporting Trigger IE is set to
	"periodic" or to "A2event-triggered periodic".
ifM3	This IE shall be present if the Measurements to Activate IE has the
	third bit set to "1".
ifM4	This IE shall be present if the Measurements to Activate IE has the
	fourth bit set to "1".
ifM5	This IE shall be present if the Measurements to Activate IE has the
	fifth bit set to "1".
ifM6	This IE shall be present if the Measurements to Activate IE has the
	seventh bit set to "1".
ifM7	This IE shall be present if the Measurements to Activate IE has the
	eighth bit set to "1".

# 9.2.57 Void

# 9.2.58 ABS Status

The ABS Status IE is used to aid the eNB designating ABS to evaluate the need for modification of the ABS pattern.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DL ABS status	M		INTEGER (0100)	Percentage of used ABS resources. The numerator of the percentage calculation consists of resource blocks within the ABS indicated in the Usable ABS Pattern Info IE allocated by the eNB2 for DL traffic needing protection by ABS from inter-cell interference for DL scheduling, or allocated by the eNB2 for other reasons (e.g. some control channels). The denominator of the percentage calculation is the total quantity of resource blocks within the ABS indicated in the Usable ABS Pattern Info IE.
CHOICE Usable ABS Information	М		_	-
>FDD			_	
>>Usable ABS Pattern Info	М		BIT STRING (SIZE(40))	Each position in the bitmap represents a subframe, for which value "1" indicates 'ABS that has been designated as protected from inter-cell interference by the eNB <sub>1</sub> , and available to serve this purpose for DL scheduling in the eNB <sub>2</sub> ' and value "0" is used for all other subframes.  The pattern represented by the bitmap is a subset of, or the same as, the corresponding ABS Pattern Info IE conveyed in the LOAD INFORMATION message from the eNB <sub>1</sub> .
>>Usable ABS Pattern Info	M		BIT STRING (170)	Each position in the bitmap represents a subframe, for which value "1" indicates 'ABS that has been designated as protected from inter-cell interference by the eNB <sub>1</sub> , and available to serve this purpose for DL scheduling in the eNB <sub>2</sub> ' and value "0" is used for all other subframes.  The pattern represented by the bitmap is a subset of, or the same as, the corresponding ABS Pattern Info IE conveyed in the LOAD INFORMATION message from the eNB <sub>1</sub> .

# 9.2.59 Management Based MDT Allowed

This information element is used by the eNB to allow selection of the UE for management based MDT as described in TS 32.422 [6].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Management Based MDT	М		ENUMERATED	
Allowed			(Allowed,)	

#### 9.2.60 MultibandInfoList

The *MultibandInfoList* IE contains the additional frequency band indicators that a cell belongs to listed in decreasing order of preference, see TS 36.331 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
BandInfo		1 <maxnoofband s&gt;</maxnoofband 			_	
>FrequencyBandIndicator	M		INTEGER (1 256,)	E-UTRA operating band as defined in TS 36.101 [42, table 5.5-1]	-	

Range bound	Explanation
maxnoofBands	Maximum number of frequency bands that a cell belongs to. The
	value is 16.

## 9.2.61 M3 Configuration

This IE defines the parameters for M3 measurement collection.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
M3 Collection Period	M		ENUMERATED	
			(ms100, ms1000,	
			ms10000,)	

# 9.2.62 M4 Configuration

This IE defines the parameters for M4 measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
M4 Collection Period	M		ENUMERATED (ms1024, ms2048, ms5120, ms10240, min1,)	
M4 Links to log	M		ENUMERATED(uplin k, downlink, both-uplink-and-downlink,)	

# 9.2.63 M5 Configuration

This IE defines the parameters for M5 measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
M5 Collection Period	М		ENUMERATED (ms1024, ms2048, ms5120, ms10240, min1,)	
M5 Links to log	М		ENUMERATED(uplin k, downlink, both-uplink-and-downlink,)	

#### 9.2.64 MDT PLMN List

The purpose of the MDT PLMN List IE is to provide the list of PLMNs allowed for MDT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MDT PLMN List		1 <maxnoof MDTPLMNs &gt;</maxnoof 		
>PLMN Identity	M		9.2.4	

Range bound	Explanation
maxnoofMDTPLMNs	Maximum no. of PLMNs in the MDT PLMN list. Value is 16.

#### 9.2.65 EARFCN Extension

The E-UTRA Absolute Radio Frequency Channel Number Extension defines the carrier frequency used in a cell for a given direction (UL or DL) in FDD or for both UL and DL directions in TDD.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
EARFCN Extension	M		INTEGER (maxEARFCN+1 newmaxEARFCN)	The relation between EARFCN and carrier frequency (in MHz) are defined in TS 36.104 [16].

Range bound	Explanation
maxEARFCN	Maximum value of EARFCNs. Value is 65535.
newmaxEARFCN	New maximum value of EARFCNs. Value is 262143.

#### 9.2.66 COUNT Value Extended

This information element indicates the 15 bit long PDCP SN and the corresponding 17 bit long Hyper Frame Number.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PDCP-SN Extended	М		INTEGER (032767)		-	
HFN Modified	М		INTEGER (0131071)		-	

#### 9.2.67 Extended UL Interference Overload Info

This IE provides report on interference overload for the set of subframes that are subject to UL-DL subframe reconfiguration. This IE applies to TDD only.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Associated Subframes	M		BITSTRING (SIZE(5))	The set of subframe(s) to which the Extended UL interference overload indication is applicable. The bitmap from the least significant bit position to the most significant bit position represents subframes #{3, 4, 7, 8, 9} in a radio frame.  Value "1" in a bit position indicates that the Extended UL interference overload indication is applicable to the corresponding subframe; and value "0" indicates otherwise.
Extended UL Interference Overload Indication	M		UL Interference Overload Indication 9.2.17	

### 9.2.68 RNL Header

The RNL Header IE indicates the target eNB ID and source eNB ID.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Source eNB ID	M		Global eNB ID 9.2.22		-	
Target eNB ID	0		Global eNB ID 9.2.22		-	

### 9.2.69 Masked IMEISV

This information element contains the IMEISV value with a mask, to identify a terminal model without identifying an individual Mobile Equipment.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Masked IMEISV	M		BIT STRING (SIZE(64))	Coded as the International Mobile station Equipment Identity and Software Version Number (IMEISV) defined in TS 23.003 [29] with the last 4 digits of the SNR masked by setting the corresponding bits to 1.

## 9.2.70 Expected UE Behaviour

This IE defines the behaviour of a UE with predictable activity and/or mobility behaviour, to assist the eNB/en-gNB in determining the optimum RRC connection time.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Expected UE Activity Behaviour	М		9.2.71	
Expected HO Interval	0		ENUMERATED (sec15, sec30, sec60, sec90, sec120, sec180, long-time,)	Indicates the expected time interval between inter-eNB handovers.  If "long-time" is included, the interval between inter-eNB handovers is expected to be longer than 180 seconds.

### 9.2.71 Expected UE Activity Behaviour

Indicates information about the expected "UE activity behaviour" as defined in TS 23.401 [12].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Expected Activity Period	0		INTEGER (130 40 50 60 80  100 120 150 180  181,)	If this IE is set to "181" the expected activity time is longer than 180 seconds. The remaining values indicate the expected activity time in [seconds].
Expected Idle Period	0		INTEGER (130 40 50 60 80  100 120 150 180  181,)	If this IE is set to "181" the expected idle time is longer than 180 seconds. The remaining values indicate the expected idle time in [seconds].
Source of UE Activity Behaviour Information	0		ENUMERATED (subscription information, statistics,)	If "subscription information" is indicated, the information contained in the Expected Activity Period IE and the Expected Idle Period IE, if present, is derived from subscription information. If "statistics" is indicated, the information contained in the Expected Activity Period IE and the Expected Idle Period IE, if present, is derived from statistical information.

# 9.2.72 SeNB Security Key

The SeNB Security Key IE is used to apply security in the SeNB as defined in TS 33.401 [18].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SeNB Security	М		BIT STRING	The S-KeNB which is provided by the MeNB,
Key			(SIZE(256))	see TS 33.401 [18].

## 9.2.73 SCG Change Indication

The SCG Change Indication IE is either used to request the SeNB to prepare the SCG Change in the SeNB or to request the MeNB to initiate the SCG Change towards the UE (see TS 36.300 [15]).

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SCG Change	M		ENUMERATED	
Indication			(PDCPCountWrapAround,	
			PSCellChange, other,)	

### 9.2.74 CoMP Information

This IE provides the list of CoMP hypothesis sets, where each CoMP hypothesis set is the collection of CoMP hypothesis(es) of one or multiple cells and each CoMP hypothesis set is associated with a benefit metric.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CoMP Information Item		1 <maxnoofcomph ypothesisSet&gt;</maxnoofcomph 		
>CoMP Hypothesis Set	М		9.2.75	
>Benefit Metric	М		INTEGER (- 101100,)	Value -100 indicates the maximum cost, and 100 indicates the maximum benefit. Value -101 indicates unknown benefit. Values from -100 to 100 should be calculated on a linear scale.
CoMP Information Start Time		01		
>Start SFN	M		INTEGER (01023,)	SFN of the radio frame containing the first subframe when the <i>CoMP Information</i> IE is valid.
>Start Subframe Number	M		INTEGER (09,)	Subframe number, within the radio frame indicated by the <i>Start SFN</i> IE, of the first subframe when the <i>CoMP Information</i> IE is valid.

Range bound	Explanation
maxnoofCoMPHypothesisSet	Maximum number of CoMP Hypothesis sets. The value is 256.

## 9.2.75 CoMP Hypothesis Set

This IE provides a set of CoMP hypotheses. A CoMP hypothesis is hypothetical PRB-specific resource allocation information for a cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CoMP Hypothesis Set Item		1 <maxnoofcom PCells&gt;</maxnoofcom 		
>Cell ID	M		ECGI 9.2.14	ID of the cell for which the CoMP Hypothesis IE is applied.
>CoMP Hypothesis	M		BIT STRING (64400,)	Each position in the bitmap represents a PRB in a subframe, for which value "1" indicates 'interference protected resource' and value "0" indicates 'resource with no utilization constraints,' which is applicable only in positions corresponding to the DL direction.  The first bit corresponds to PRB 0 of the first subframe for which the IE is valid, the second bit corresponds to PRB 1 of the first subframe for which the IE is valid, and so on.  The bit string may span across multiple contiguous subframes.  The length of the bit string is an integer (maximum 40) multiple of $N_{\rm RB}^{\rm DL}$ . $N_{\rm RB}^{\rm DL}$ is defined in TS 36.211 [10]. The CoMP hypothesis pattern is continuously repeated.

Range bound	Explanation
maxnoofCoMPCells	Maximum number of cells in a CoMP hypothesis set. Value is 32.

# 9.2.76 RSRP Measurement Report List

This IE provides RSRP measurement reports of UEs served by the sending eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RSRP Measurement Report		1		
Item		<maxuereport></maxuereport>		
>RSRP Measurement		1		
Result		<maxcellreport></maxcellreport>		
>>RSRP Cell ID	M		ECGI	ID of the cell on which the
			9.2.14	RSRP is measured.
>>RSRP Measured	M		INTEGER	Measured RSRP.
			(097,)	Defined in TS 36.331 [9].
>UE ID	0		BIT STRING	ID assigned by eNB <sub>2</sub> for
			(SIZE(16))	the UE.

Range bound	Explanation
maxUEReport	Maximum number of UE measurement reports. Value is 128.
maxCellReport	Maximum number of reported cells. The value is 9.

# 9.2.77 Dynamic DL transmission information

This IE contains assistance information for DL interference mitigation.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE NAICS Information	M			
>NAICS Active				
>>Transmission Modes	0		BIT STRING (SIZE(8))	The set bits indicate some or all transmission modes: 1, 2, 3, 4, 6, 8, 9, 10, as defined in TS 36.213 [23, 7.1]. The first/ leftmost bit is for transmission mode 1, the second bit is for transmission mode 2, and so on.
>>P_B	0		INTEGER (03)	See TS 36.213 [23, Table 5.2-1]
>>P_A_list		0 <maxnoofpa></maxnoofpa>		
>>>P_A	M		ENUMERATED (dB-6, dB- 4dot77, dB-3, dB-1dot77, dB0, dB1, dB2, dB3,)	See P <sub>A</sub> TS 36.213 [23, 5.2]. Value dB-6 corresponds to -6 dB, dB- 4dot77 corresponds to - 4.77 dB etc.
>NAICS Inactive			NULL	

Range bound	Explanation
maxnoofPA	Maximum no of P <sub>A</sub> values that can be configured. Value is 3.

### 9.2.78 ProSe Authorized

This IE provides information on the authorization status of the UE for ProSe service(s).

IE/Group Name	Presence	Range	IE type and	Semantics description	Criticality	Assigned
			reference			Criticality
ProSe Direct	0		ENUMERATED	Indicates whether the UE	-	
Discovery			(authorized, not	is authorized for ProSe		
			authorized,)	Direct Discovery		
ProSe Direct	0		ENUMERATED	Indicates whether the UE	-	
Communication			(authorized, not	is authorized for ProSe		
			authorized,)	Direct Communication		
ProSe UE-to-	0		ENUMERATED	Indicates whether the UE	YES	ignore
Network			(authorized, not	is authorized to act as		
Relaying			authorized,)	ProSe UE-to-Network		
			•	Relay		

# 9.2.79 CSI Report

This IE provides CSI reports of UEs served by the cell for which the information is provided.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CSI Report per Cell		1 <maxuereport></maxuereport>		
>UE ID	M		BIT STRING (SIZE(16))	ID assigned by eNB <sub>2</sub> for the UE.
>CSI Report per CSI Process		1 <maxcsiprocess></maxcsiprocess>		
>>CSI Process Configuration Index	M		INTEGER (17,)	Indicates one of the possible CSI Process configurations in the serving cell.
>>CSI Report per CSI Process Item		1 <maxcsireport></maxcsireport>		
>>>RI	M		INTEGER (18,)	The RI corresponding to the CQI being reported for this CSI process item. Value defined in TS 36.213 [11].
>>>Wideband CQI	M		9.2.80	
>>>Subband Size	M		ENUMERATED (2, 3, 4, 6, 8,)	Corresponds to a value of subband size $k$ defined in TS 36.213 [11] for the system bandwidth $N_{\rm RB}^{\rm DL}$ .
>>>Subband CQI List		0 <maxsubband></maxsubband>		, and
>>>Subband CQI	M		9.2.81	
>>>Subband Index	M		INTEGER (027,)	

Range bound	Explanation
maxUEReport	Maximum number of UE. Value is 128.
maxCSIProcess	Maximum number of CSI processes per UE. The value is 4.
maxCSIReport	Maximum number of CSI Reports per CSI Process. The value is 2.
maxSubband	Maximum number of subbands. The value is 14.

## 9.2.80 Wideband CQI

This IE indicates the Wideband CQI as defined in TS 36.213 [11].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Wideband CQI Codeword	M		INTEGER (015,)	Value defined in TS 36.213
0				[11].
CHOICE Wideband CQI	0			
Codeword 1				
>4-bit CQI	M		INTEGER (015,)	Value defined in TS 36.213
				[11].
>3-bit spatial differential	M		INTEGER (07,)	Value defined in TS 36.213
CQI				[11].

### 9.2.81 Subband CQI

This IE indicates the Subband CQI as defined in TS 36.213 [11].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Subband CQI	M			
Codeword 0				
>4-bit CQI	М		INTEGER (015,)	Value defined in TS 36.213 [11].
>2-bit Subband	M		INTEGER (03,)	Value defined in TS 36.213
differential CQI				[11].
>2-bit differential CQI	M		INTEGER (03,)	Value defined in TS 36.213
				[11].
CHOICE Subband CQI	0			
Codeword 1				
>4-bit CQI	M		INTEGER (015,)	Value defined in TS 36.213
				[11].
>3-bit spatial differential	M		INTEGER (07,)	Value defined in TS 36.213
CQI				[11].
>2-bit Subband	M		INTEGER (03,)	Value defined in TS 36.213
differential CQI				[11].
>2-bit differential CQI	M		INTEGER (03,)	Value defined in TS 36.213
				[11].

## 9.2.82 COUNT Value for PDCP SN Length 18

This information element indicates the 18 bit long PDCP SN and the corresponding 14 bit long Hyper Frame Number.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PDCP-SN Length 18	M		INTEGER		_	
			(0262143)			
HFN for PDCP-SN	M		INTEGER		_	
Length 18			(016383)			

#### 9.2.83 LHN ID

The LHN ID IE is used to indicate the LHN ID of the eNB, as defined in TS 23.003 [29].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Local Home Network ID	M		OCTET STRING (SIZE (32256))	Identifies the Local
			, , , , , , , , , , , , , , , , , , , ,	Home Network.

### 9.2.84 Correlation ID

This information element is the GTP Tunnel Endpoint Identifier or GRE key to be used for the user plane transport between eNB and the L-GW described in TS 23.401 [12].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Correlation ID	M		OCTET STRING	
			(SIZE(4))	

## 9.2.85 UE Context Kept Indicator

This IE indicates that the UE Context at the SeNB is kept in case of inter-MeNB handover without SeNB/SgNB Change procedure, as specified in TS 36.300 [15] or TS37.340 [32].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Context Kept Indicator	M		ENUMERATED (True,)	

#### 9.2.86 eNB UE X2AP ID Extension

This information element combined with the eNB UE X2AP ID uniquely identifies an UE over the X2 interface within an eNB. If the setup of an UE associated signalling connection was initiated including the eNB UE X2AP ID Extension, the eNB UE X2AP ID Extension shall be used by both peers for the life-time of the respective UE-associated signalling connection.

The usage of this IE is defined in TS 36.401 [2].

NOTE: If X2-C signalling transport is shared among multiple interface instances, the value of the eNB UE X2AP ID, combined with the eNB UE X2AP ID Extension, is allocated so that it can be associated with an X2-C interface instance.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
eNB UE X2AP ID Extension	М		INTEGER (04095,)	

## 9.2.87 M6 Configuration

This IE defines the parameters for M6 measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
M6 Report Interval	M		ENUMERATED (ms1024, ms2048, ms5120, ms10240,)	
M6 Delay Threshold	C-ifUL		ENUMERATED (ms30, ms40, ms50, ms60, ms70, ms80, ms90, ms100, ms150, ms300, ms500, ms750,)	
M6 Links to log	М		ENUMERATED(uplin k, downlink, both-uplink-and-downlink,)	

Condition	Explanation
ifUL	This IE shall be present if the M6 Links to log IE is set to "uplink" or to
	"both-uplink-and-downlink".

## 9.2.88 M7 Configuration

This IE defines the parameters for M7 measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
M7 Collection Period	М		INTEGER (160,)	Unit: minutes
M7 Links to log	M		ENUMERATED(uplin k, downlink, both-uplink-and-downlink,)	

#### 9.2.89 Tunnel Information

The *Tunnel Information* IE indicates the transport layer address and UDP port number.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
Transport Layer Address	M		BIT STRING	eNB's Transport Layer
			(1160,)	Address.
UDP Port Numbers	0		OCTET	UDP Port Numbers if
			STRING	NAT/NAPT is deployed in the
			(SIZE(2))	BBF access network.

### 9.2.90 X2 Benefit Value

The X2 Benefit Value IE indicates the quantified benefit of the signalling connection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
X2 Benefit Value	M		INTEGER (18,)	Value 1 indicates low benefit,
				and 8 indicates high benefit.

### 9.2.91 Resume ID

The Resume ID IE is used to address a suspended UE Context within an eNB.

Presence	Range	IE Type and Reference	Semantics Description
M			
M		BIT STRING (SIZE (40))	40 bit Resume Resume Identity
			contained in the RRCConnection
			ResumeRequest message (TS
			36.331 [9]).
			The 20 most significant bits refer
			to the eNB ID of the eNB that
			allocated the Resume ID, the 20
			least significant bits identify the UE
			Context stored at the eNB that
			allocated the Resume ID.
		DIT OTDING (OIZE (O4))	04177
M		BIT STRING (SIZE (24))	24 bit Resume Identity contained
			in the RRCConnection
			ResumeRequest message (TS
			36.331 [9]).
			The 12 most significant bits refer
			to the 12 least significant bits of the eNB ID of the eNB that
			allocated the Resume ID.
			The 12 least significant bits refer to
			the 12 least significant bits that identify the UE Context stored at
			the eNB that allocated the Resume
			ID.
	M	M	M BIT STRING (SIZE (40))

# 9.2.92 Bearer Type

This IE is used to support Non-IP data as specified in TS 23.401 [11].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Bearer Type	М		ENUMERATED (non IP,)	

### 9.2.93 V2X Services Authorized

This IE provides information on the authorization status of the UE to use the sidelink for V2X services.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Vehicle UE	0		ENUMERATED	Indicates whether the	-	
			(authorized, not	UE is authorized as		
			authorized,)	Vehicle UE		
Pedestrian UE	0		ENUMERATED	Indicates whether the	-	
			(authorized, not	UE is authorized as		
			authorized,)	Pedestrian UE		

#### 9.2.94 Offset of NB-IoT Channel Number to EARFCN

This IE is used to indicate the offset of the NB-IoT Channel Number to the EARFCN (TS 36.104 [16]).

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Offset of NB-IoT Channel Number to EARFCN	М		ENUMERATED (-10,- 9,-8,-7,-6,-5,-4,-3,-2,-1,- 0.5,0,1,2,3,4,5,6,7,8,9, ., -8.5, -4.5, 3.5, 7.5)	

#### 9.2.95 WT ID

This IE is used to identify a WT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE WT ID Type	M			
>WT ID Type 1				
>>PLMN ID	M		PLMN Identity	
			9.2.4	
>>Short WT ID	M		BIT STRING (24)	
>WT ID Type 2				
>>Long WT ID	M		BIT STRING (48)	

#### 9.2.96 WT UE XwAP ID

The WT UE XwAP ID is allocated by the WT and uniquely identifies a UE over the Xw interface.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
WT UE XwAP ID	М		OCTET STRING (SIZE(3))	

# 9.2.97 UE Sidelink Aggregate Maximum Bit Rate

This IE indicates the aggregate maximum bit rate for all radio bearers per UE in the sidelink for V2X services.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Sidelink Aggregate Maximum Bit Rate	M		Bit Rate 9.2.11	Value 0 shall be considered as a logical error by the receiving eNB.

# 9.2.98 NR Neighbour Information

This IE contains cell configuration information of NR cells that a neighbour node may need for the X2 AP interface.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
NR Neighbour Information		1 <maxnoofnr Neighbours&gt;</maxnoofnr 			-	
>NR Neighbour Information Item					_	
>>NRPCI	М		INTEGER (01007)	NR Physical Cell ID	_	
>>NR CGI	М		9.2.111	OON ID	_	
>>5GS-TAC	0		OCTET	Broadcast 5GS	_	
			STRING (3)	Tracking Area Code		
>>Configured TAC	0		OCTET STRING (2)	This is the TAC configured in the en-gNB, different from the 5GS TAC broadcast in the NR cell and enables application of Roaming and Access Restrictions for EN-DC as specified in TS 37.340 [32].	_	
>>Measurement Timing Configuration	М		OCTET STRING	Contains the MeasurementTi mingConfigurati on inter-node message for the neighbour cell, as defined in TS 38.331 [31].	_	
>>CHOICE NR- Neighbour-Mode-Info	М				_	
>>>FDD						
>>>FDD Info		1			_	
>>>>UL ARFCNFreqInfo	М		NR ARFCN Frequency Info 9.2.106		-	
>>>>DL ARFCNFreqInfo	M		NR ARFCN Frequency Info 9.2.106		-	
>>>TDD						
>>>TDD Info		1			_	
>>>>ARFCNNRF reqInfo	М		NR ARFCN Frequency Info 9.2.106		_	
>>>>Intended TDD DL-UL Configuration NR	0		OCTET STRING	Contains the Intended TDD DL-UL Configuration NR IE as defined in TS 38.423 [49].	YES	ignore
>>CSI-RS Transmission Indication	0		ENUMERATED {activated, deactivated,}	This IE indicates the CSI-RS transmission status of the given cell.	YES	ignore

Range bound	Explanation
maxnoofNRNeighbours	Maximum no. of neighbour NR cells associated to a given served cell. Value is 1024.

#### 9.2.99 Extended Bit Rate

This IE indicates the number of bits delivered by E-UTRAN in UL or to E-UTRAN in DL within a period of time, divided by the duration of the period. It is used, for example, to indicate the maximum or guaranteed bit rate for a GBR bearer, or an aggregated maximum bit rate.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Extended Bit Rate			INTEGER	The unit is: bit/s
			(10,000,000,0014,00	
			0,000,000,000,)	

### 9.2.100 en-gNB UE X2AP ID

This information element uniquely identifies an UE over the X2 interface within an en-gNB.

The usage of this IE is defined in TS 36.401 [2].

NOTE: If X2-C signalling transport is shared among multiple interface instances, the value of the en-gNB UE X2AP ID is allocated so that it can be associated with an X2-C interface instance.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
en-gNB UE X2AP ID	M		INTEGER (0 2 <sup>32</sup> -1)	

## 9.2.101 SgNB Security Key

The SgNB Security Key IE is used to apply security in the en-gNB as defined in TS 33.401 [18].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SgNB Security	M		BIT STRING	The S-KgNB which is provided by the MeNB,
Kev			(SIZE(256))	see TS 33.401 [18].

## 9.2.102 Target SgNB ID Information

This IE contains the target SgNB ID used by MeNB to find the target en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Target SgNB ID	M		Global en-	
			gNB ID	
			9.2.112	

## 9.2.103 SCG Configuration Query

The SCG Configuration Query IE is used to request the en-gNB to provide current SCG configuration.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SCG Configuration Query	М		ENUMERATED (True)	

# 9.2.104 Delivery Status

This IE defines the Delivery Status IE of RRC Transfer message.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Highest successfully	М	02 <sup>12</sup> -1	INTEGER	Highest successfully	_	
delivered NR PDCP			$(02^{12}-1)$	delivered NR PDCP SN, as		
Sequence Number				defined in 38.323 [33].		

### 9.2.105 Void

Void

# 9.2.106 NR Frequency Info

The NR Frequency Info defines the carrier frequency and bands used in a cell for a given direction (UL or DL) in FDD or for both UL and DL directions in TDD.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
NRARFCN	M		INTEGER (0maxNRARFCN)	RF Reference Frequency as defined in TS 38.104 [37] section 5.4.2.1. The frequency provided in this IE identifies the absolute frequency position of the reference resource block (Common RB 0) of the carrier. Its lowest subcarrier is also known as Point A.	-	
Frequency Band List		1			_	
>Frequency Band Item		1 <ma xnoofNr CellBan ds&gt;</ma 				
>>NR Frequency Band	М		INTEGER (1 1024,)	Primary NR Operating Band as defined in TS38.104 [37] section 5.4.2.3. The value 1 corresponds e n1, value 2 corresponds to NR operating band n2, etc.	-	
>>Supported SUL band List		0 <ma xnoofNr CellBan ds&gt;</ma 			-	
>>>Supported SUL band Item	М		INTEGER (1 1024,)	Supplementary NR Operating Band as defined in TS 38.104 [37] section 5.4.2.3 that can be used for SUL duplex mode as per TS 38.101-1 table 5.21. The value 80 corresponds to NR operating band n80, value 81 corresponds to NR operating band n81, etc.	-	
SUL Information	0		9.2.123		_	
Frequency Shift 7p5khz	0		ENUMERATED (false, true,)	Indicate whether the value of $\Delta_{\text{shift}}$ is 0kHz or 7.5kHz when calculating F <sub>REF,shift</sub> as defined in Section 5.4.2.1 of TS 38.104 [37].	YES	ignore

Range bound	Explanation		
maxNRARFCN	Maximum value of NRARFCNs. Value is 3279165.		

maxnoofNrCellBands	Maximum no. of frequency bands supported for a NR cell. Value is
	32.

## 9.2.107 NR UE Security Capabilities

This IE defines the supported algorithms for encryption and integrity protection in NR as defined in TS 33.401 [18].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NR Encryption Algorithms	M		BIT STRING (SIZE(16,))	Each position in the bitmap represents an encryption algorithm:  "all bits equal to 0" – UE supports no other NR algorithm than NEA0,  "first bit" – 128-NEA1,  "second bit" – 128-NEA2,  "third bit" – 128-NEA3, other bits reserved for future use. Value '1' indicates support and value '0' indicates no support of the algorithm. Algorithms are defined in TS 33.401 [18].
NR Integrity Protection Algorithms	M		BIT STRING (SIZE(16,))	Each position in the bitmap represents an integrity protection algorithm:  "all bits equal to 0" – UE supports no other NR algorithm than NIA0,  "first bit" – 128-NIA1,  "second bit" – 128-NIA2,  "third bit" – 128-NIA3,  other bits reserved for future use.  Value '1' indicates support and value '0' indicates no support of the algorithm.  Algorithms are defined in TS 33.401 [18].

# 9.2.108 EN-DC Resource Configuration

This IE contains the EN-DC resource configuration for an E-RAB, indicating the presence of PDCP at the en-gNB and Lower Layers at MCG and SCG.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
						Criticality
PDCP at SgNB	M		ENUMERAT		_	
			ED (present,			
			not present)			
MCG resources	M		ENUMERAT		_	
			ED (present,			
			not present)			
SCG resources	M		ENUMERAT		_	
			ED (present,			
			not present)			

# 9.2.109 PDCP Change Indication

The *PDCP Change Indication* IE is used to require the MeNB to either initiate the security key update or to perform PDCP data recovery towards the UE (see TS 37.340 [15]).

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PDCP Change Indication	M		ENUMERATED (S-KgNB update required,	The value of S-KgNB update required indicates that the security
			PDCP data recovery required,	key in en-gNB needs to be
			)	updated. The value of PDCP data recovery
				required indicates that MeNB needs to perform PDCP data
				recovery.

## 9.2.110 Served NR Cell Information

This IE contains cell configuration information of an NR cell that a neighbour eNB may need for the X2 AP interface.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
NR-PCI	M		INTEGER (01007)	NR Physical Cell ID	_	-
Cell ID	M		NR CGI 9.2.111		_	
5GS-TAC	0		OCTET STRING (3)	Broadcast 5GS Tracking Area Code. If this IE is included, the receiving node may assume that the NR cell provides 5GS service and is eligible as intersystem HO target candidate.	-	
Configured TAC	0		OCTET STRING (2)	This is the TAC configured in the engNB, different from the 5GS TAC broadcast in the NR cell and enables application of Roaming and Access Restrictions for EN-DC as specified in TS 37.340 [32].	-	
Served PLMNs		1 <max noofBP LMNs&gt;</max 		Broadcast PLMNs in SIB1 associated to the NR Cell Identity in the Cell ID IE. If more than maxnoofBPLMNs are needed for NR, they are provided by the Additional PLMNs IE.	_	
>PLMN Identity	М		9.2.4		_	
CHOICE NR-Mode-	M				_	
Info >FDD						
>>FDD Info		1			_	
>>>UL FreqInfo	M		NR Frequency Info 9.2.106		_	
>>>DL FreqInfo	М		NR Frequency Info 9.2.106		_	
>>>UL Transmission Bandwidth	М		NR Transmission Bandwidth 9.2.114		-	
>>>DL Transmission Bandwidth	M		NR Transmission Bandwidth 9.2.114		-	
>>>UL Carrier List	0		NR Carrier List 9.2.168	If included, the <i>UL</i> Transmission  Bandwidth IE shall be ignored.	YES	ignore
>>>DL Carrier List	0		NR Carrier List 9.2.168	If included, the <i>DL</i> Transmission  Bandwidth IE shall be ignored.	YES	ignore
>TDD						
>>TDD Info		1			_	
>>>NRFreqInfo	M		NR Frequency Info 9.2.106		_	
>>>Transmissi on Bandwidth	М		NR Transmission Bandwidth 9.2.114		-	
>>>TDD UL-DL Configuration Common NR	0		OCTET STRING	The tdd-UL-DL- ConfigurationCommon IE in TS 38.331 [31]	YES	ignore
>>>Carrier List	0		NR Carrier List 9.2.168	If included, the Transmission Bandwidth IE shall be ignored.	YES	ignore

	1		T	1		
>>>Intended TDD DL-UL Configuration NR	0		OCTET STRING	Contains the Intended TDD DL-UL Configuration NR IE as defined in TS 38.423	YES	ignore
				[49].		
Measurement Timing Configuration	M		OCTET STRING	Contains the MeasurementTimingCo nfiguration inter-node message for the served cell, as defined in TS 38.331 [31].	-	
Additional PLMNs		0 <max noofAdd itionalP LMNs&gt;</max 		Additional PLMNs in addition to the Served PLMNs	YES	reject
>PLMN Identity	M		9.2.4		_	
Broadcast PLMN Identity Info List NR  >Broadcast PLMNs		0 <max noofext BPLMN s&gt; 1<max noofext BPLMN</max </max 		This IE corresponds to the PLMN- IdentityInfoList IE in SIB1 as specified in TS 38.331 [31]. All PLMN Identities and associated information contained in the PLMN- IdentityInfoList IE are included and provided in the same order as broadcast in SIB1.  Broadcast PLMN IDs in SIB1 associated to the NR Cell Identity IE	YES -	ignore
		S>		NR Cell Identity IE		
>>PLMN Identity	М		9.2.4		_	
>5GS-TAC	0		OCTET STRING (3)		_	
>NR Cell Identity	М		BIT STRING (SIZE(36))		-	
SSB Positions In Burst	0		9.2.169		YES	ignore
NR Cell PRACH Configuration	0		OCTET STRING	Containing 9.3.1.139 NR Cell PRACH Configuration as of TS 38.473 [44].	YES	ignore
CSI-RS Transmission Indication	0		ENUMERATED {activated, deactivated,}	This IE indicates the CSI-RS transmission status of the given cell.	YES	ignore
SFN Offset	0		9.2.175		YES	ignore
C. 1. Onoot		1	0.2.170			ignore

Range bound	Explanation		
maxnoofBPLMNs	Maximum no. of broadcast PLMN lds. Value is 6.		
maxnoofAdditionalPLMNs	Maximum no. additional PLMN lds. Value is 6.		
maxnoofextBPLMNs	Maximum no. of extended broadcast PLMN lds. Value is 12.		

# 9.2.111 NR CGI

The NR Cell Global Identifier (NR CGI) is used to globally identify an NR cell (see TS 38.401 [34]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.2.4	
NR Cell Identity	М		BIT STRING (36)	The leftmost bits of the NR Cell Identity IE value correspond to the value of the en-gNB ID IE contained in the Global en-gNB ID IE (defined in section 9.2.112) identifying the en-gNB that controls the cell.

# 9.2.112 Global en-gNB ID

This IE is used to globally identify an en-gNB (see TS 37.340 [32]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.2.4	
CHOICE en-gNB ID	M			
>en-gNB ID				
>>en-gNB ID	М		BIT STRING (SIZE(2232))	Equal to the leftmost bits of the <i>NR Cell Identity</i> IE contained in the <i>NR CGI</i> IE of each cell served by the en-qNB.

### 9.2.113 Void

#### 9.2.114 NR Transmission Bandwidth

The NR Transmission Bandwidth IE is used to indicate the UL or DL transmission bandwidth.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
NR SCS	М		ENUMERATED (scs15, scs30, scs60, scs120,)	The values scs15, scs30, scs60 and scs120 corresponds to the sub carrier spacing in TS 38.104 [37].
NR NRB	M		ENUMERATED (nrb11, nrb18, nrb24, nrb25, nrb31, nrb32, nrb38, nrb51, nrb52, nrb65, nrb66, nrb78, nrb79, nrb93, nrb106, nrb107, nrb121, nrb132, nrb133, nrb135, nrb160, nrb162, nrb189, nrb216, nrb217, nrb245, nrb264, nrb270, nrb273,)	This IE is used to indicate the UL or DL transmission bandwidth expressed in units of resource blocks "N <sub>RB</sub> " (TS 38.104 [37]). The values nrb11, nrb18, etc. correspond to the number of resource blocks "N <sub>RB</sub> " 11, 18, etc.

## 9.2.115 Cell Assistance Information

The Cell Assistance Information IE is used by the eNB to request information about NR cells.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Cell Assistance Type	M			This IE may be refined.
>Limited List				
>>List of Requested NR Cells		1 < maxCel linengN B >		Included when the eNB requests a limited list of served NR cells.
>>>NR CGI	M		9.2.111	NR cell for which served NR cell information is requested.
>Full List				
>>Complete Information Request Indicator	M		ENUMERATED (allServedNRCells,)	Included when the eNB requests the complete list of served NR cells.

Range bound	Explanation
maxCellinengNB	Maximum no. cells that can be served by an en-gNB. Value is
	16384.

## 9.2.116 MeNB Resource Coordination Information

The *MeNB Resource Coordination Information* IE is LTE resource allocation at MeNB and used at the en-gNB to coordinate resource utilisation between the MeNB and the en-gNB.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
EUTRA Cell ID	M		ECGI 9.2.14	This IE indicates the PCell.	_	•
UL Coordination Information	M		BIT STRING (64400,)	Each position in the bitmap represents a PRB pair in a subframe; value "0" indicates "PCell resource not intended to be used for transmission by the sending node", value "1" indicates "PCell resource intended to be used for transmission by the sending node". The bit string spans from the first PRB pair of the first represented subframe to the last PRB pair of the same subframe and then moves to the following PRBs in the following subframes in the same order. Each position is applicable only in positions corresponding to UL subframes.  The bit string may span across multiple contiguous subframes (maximum 40). The first position of the <i>UL Coordination Information</i> corresponds to subframe 0 in a radio frame where <i>SFN</i> = 0. The length of the bit string is an integer multiple of $N_{\rm RB}^{\rm UL}$ is defined in TS 36.211 [10]. The UL Coordination Information information is continuously repeated.		

DL Coordination Information	0	9.2.111	Each position in the bitmap represents a PRB pair in a subframe; value "0" indicates "PCell resource not intended to be used for transmission by the sending node", value "1" indicates "PCell resource intended to be used for transmission by the sending node". The bit string spans from the first PRB pair of the first represented subframe to the last PRB pair of the same subframe and then moves to the following PRBs in the following subframes in the same order. Each position is applicable only in positions corresponding to DL subframes.  The bit string may span across multiple contiguous subframes (maximum 40). The first position of the <i>DL Coordination Information</i> corresponds to the receiving node's subframe 0 in a receiving node's radio frame where <i>SFN</i> = 0.  The length of the bit string is an integer multiple of NDL coordination Information is continuously repeated.  This IE indicates the assumed	YES	ignore
MeNB Coordination Assistance Information	0	9.2.139	PSCell.	YES	reject

# 9.2.117 SgNB Resource Coordination Information

The *SgNB Resource Coordination Information* IE indicates resources within the bandwidth of the PCell which are not available for use by the MeNB and is used at the MeNB to coordinate resource utilisation between the en-gNB and the MeNB.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
NR CGI	М		9.2.111	This IE indicates the PSCell.	_	
UL Coordination	М		BIT STRING	Each position in the bitmap	-	
Information			(64400,)	represents a PRB pair in a		
				subframe; value "0" indicates		
				"PCell resource not intended		
				to be used for transmission by		
				the sending node", value "1"		
				indicates "PCell resource		
				intended to be used for		
				transmission by the sending		
				node". The bit string spans		
				from the first PRB pair of the first represented subframe to		
				the last PRB pair of the same		
				subframe and then moves to		
				the following PRBs in the		
				following subframes in the		
				same order. Each position is		
				applicable only in positions		
				corresponding to UL		
				subframes.		
				The bit string may span		
				across multiple contiguous		
				subframes (maximum 40).		
				The first position of the <i>UL</i>		
				Coordination Information		
				corresponds to the receiving		
				node's subframe 0 in a		
				receiving node's radio frame		
				where $SFN = 0$ .		
				The length of the bit string is		
				an integer multiple of $N_{ m RB}^{ m UL}$		
				. $N_{ m RB}^{ m UL}$ is defined in TS		
				36.211 [10].		
				The UL Coordination		
				Information is continuously		
				repeated.		
				Topodiou.		

DL Coordination Information	0	BIT STRING (64400,)	Each position in the bitmap represents a PRB pair in a subframe; value "0" indicates "PCell resource not intended to be used for transmission by the sending node", value "1" indicates "PCell resource intended to be used for transmission by the sending node". The bit string spans from the first PRB pair of the first represented subframe to the last PRB pair of the same subframe and then moves to the following PRBs in the following subframes in the same order. Each position is applicable only in positions corresponding to DL subframes.  The bit string may span across multiple contiguous subframes (maximum 40). The first position of the DL Coordination Information corresponds to the receiving node's subframe 0 in a receiving node's radio frame where SFN = 0.  The length of the bit string is an integer multiple of NDL Coordination Information Information Information is continuously repeated.		
EUTRA Cell ID	0	ECGI 9.2.14	Reference cell for <i>UL</i> Coordination Information IE and <i>DL</i> Coordination Information IE.	YES	ignore
SgNB Coordination Assistance Information	0	9.2.140		YES	reject

# 9.2.118 UL Configuration

This IE indicates how the UL PDCP is configured for the assisting node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UL UE Configuration	М		ENUMERATED (no- data, shared, only,)	Indicates how the UE uses the UL at the assisting node.

### 9.2.119 RLC Mode

The RLC Mode IE indicates the RLC Mode used for an E-RAB.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
RLC Mode	M		ENUMERATED (	
			RLC-AM, RLC-UM-	
			Bidirectional, RLC-	
			UM-Unidirectional-	
			UL, RLC-UM-	
			Unidirectionall-DL,	
			)	

# 9.2.120 Secondary RAT Usage Report List

This IE provides information on the NR resources used with EN-DC as specified in TS 37.340 [32].

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Secondary RAT usage report Item		1 < maxno ofbeare rs >			EACH	reject
>E-RAB ID	М		9.2.23		-	
>Secondary RAT Type	M		ENUMERATED (nR,, nR- unlicensed)		-	
>E-RAB Usage Report List		1			-	
>>E-RAB Usage Report Item		1 <maxn ooftime periods &gt;</maxn 			EACH	ignore
>>>Start timestamp	М		OCTET STRING (SIZE(4))	UTC time encoded in the same format as the first four octets of the 64-bit timestamp format as defined in section 6 of IETF RFC 5905 [35]. It indicates the start time of the collecting period of the included <i>Usage Count UL</i> IE and <i>Usage Count DL</i> IE.	-	
>>>End timestamp	М		OCTET STRING (SIZE(4))	UTC time encoded in the same format as the first four octets of the 64-bit timestamp format as defined in section 6 of IETF RFC 5905 [35]. It indicates the end time of the collecting period of the included Usage Count UL IE and Usage Count DL IE.	-	
>>>Usage count UL	М		INTEGER (02 <sup>64</sup> -1)	The unit is: octets.	-	
>>>Usage count DL	М		INTEGER (02 <sup>64</sup> - 1)	The unit is: octets.	-	

Range bound	Explanation
maxnoofbearers	Maximum no. of E-RABs. Value is 256.
maxnooftimeperiods	Maximum no. of time reporting periods. Value is 2.

# 9.2.121 UE Application layer measurement configuration

The IE defines configuration information for the QoE Measurement Collection (QMC) function.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigne Criticali
Container for application layer measurement configuration	M		Octet string (11000)	Indicates application layer measurement configuration, see Annex L in [36].	-	
CHOICE Area Scope of QMC	М				-	
>Cell based						
>>Cell ID List for QMC		1 <maxno ofCellID forQMC</maxno 				
>>>E-CGI	М		9.2.1.38		_	
>TA based	101		3.2.1.00			
>>TA List for QMC		1 <maxno ofTAfor QMC&gt;</maxno 				
>>>TAC	М		9.2.3.7	The TAI is derived using the current serving PLMN.	-	
>TAI based					-	
>>TAI List for QMC		1 <maxno ofTAfor QMC&gt;</maxno 			-	
>>>TAI	М		9.2.3.16		-	
>PLMN area based						
>>PLMN List for QMC		1 <maxno ofPLMN forQMC &gt;</maxno 				
>>>PLMN Identity	M		9.2.3.8		-	
Service Type	M		ENUMERATED (QMC for streaming service, QMC for MTSI service,)	This IE indicates the service type of UE application layer measurements.	-	

Range bound	Explanation
maxnoofCellIDforQMC	Maximum no. of Cell ID subject for QMC scope. Value is 32.
maxnoofTAforQMC	Maximum no. of TA subject for QMC scope. Value is 8.
maxnoofPLMNforQMC	Maximum no. of PLMNs in the PLMN list for QMC scope. Value is 16.

### 9.2.122 DRB ID

This information element uniquely identifies a DRB over the X2 interface within an en-gNB.

The usage of this IE is defined in TS 36.331 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DRB ID	М		INTEGER (1 32)	

### 9.2.123 SUL Information

This IE provides information about the SUL carrier.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
SUL ARFCN	М		INTEGER (0maxNRARF CN)	RF Reference Frequency as defined in TS 38.104 [37] section 5.4.2.1. The frequency provided in this IE identifies the absolute frequency position of the reference resource block (Common RB 0) of the SUL carrier. Its lowest subcarrier is also known as Point A.	-	
SUL Transmission Bandwidth	M		NR Transmission Bandwidth 9.2.114		-	
Carrier List	0		NR Carrier List 9.2.168	If included, the SUL Transmission Bandwidth IE shall be ignored.	YES	ignore
Frequency Shift 7p5khz	0		ENUMERATED (false, true,)	Indicate whether the value of $\Delta_{\text{shift}}$ is 0kHz or 7.5kHz when calculating F <sub>REF,shift</sub> as defined in Section 5.4.2.1 of TS 38.104 [37].	YES	ignore

Range bound	Explanation
maxNRARFCN	Maximum value of NRARFCNs. Value is 3279165.

### 9.2.124 Packet Loss Rate

This IE indicates the packet loss rate.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Packet Loss Rate	М		INTEGER(01000)	Ratio of lost packets per number of packets sent, expressed in tenth of percent.	-	-

### 9.2.125 Protected E-UTRA Resource Indication

This IE indicates the resources allocated for E-UTRA DL and UL reference and control signals (hereby referred to as protected resources). This information is used in the process of E-UTRA - NR Cell Resource Coordination.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Activation SFN	M		INTEGER (01023)	Indicates from which SFN of the receiving node the resource allocation is valid.		Ormounty
Protected Resource List		1		The protected resource pattern is continuously repeated, and it is valid until stated otherwise or until replaced by a new pattern. The pattern does not apply in reserved subframes.	YES	ignore
>Protected Resource List Item		1 <maxnoofprot ectedResourceP atterns&gt;</maxnoofprot 		Each item describes one transmission pattern. A pattern may comprise several control signals.	-	
>>Resource Type	M		ENUMERAT ED (downlinkno nCRS,CRS, uplink)	Indicates whether the protected resource is E- UTRA DL non- CRS, E-UTRA CRS or E-UTRA UL.	-	

	T	1			1	
>>Intra-PRB Protected	M		BIT STRING	The bitmap of		
Resource Footprint			(84,)	REs occupied		
				by the protected		
				signal within		
				one PRB. Each		
				position in the		
				bitmap		
				represents an		
				RE in one PRB;		
				value "0"		
				indicates		
				"resource not		
				protected",		
				value "1"		
				indicates		
				"resource		
				protected ". The		
				first bit of the		
				string		
				corresponds to		
				the RE with the		
				smallest time		
				and frequency		
				index in the		
				PRB, where the		
				indexing first		
				goes into the		
				frequency		
				domain. The		
				length of the bit		
				string equals		
				the product of		
				$N_{RB}^{SC}$ and the		
				length of PRB in		
				time dimension,		
				measured in		
				REs. $N_{RB}^{SC}$ is		
				defined in TS		
				36.211 [10]. The		
				intra-PRB		
				pattern		
				consisting of all		
				"1"s is		
				equivalent to		
				PRB-level		
				granularity.		

			T		
>>Protected Footprint M	1	BIT	The bit string	-	
Frequency Pattern		STRING(6	indicates in		
		110,)	which PRBs		
		-,,	inside carrier		
			bandwidth the		
			Intra-PRB		
			Protected		
			Resource		
			Footprint		
			applies. How		
			often in time		
			dimension this		
			frequency		
			pattern applies,		
			depends on		
			time periodicity		
			of Intra-PRB		
			Protected		
			Resource		
			Footprint. The		
			first bit of the bit		
			string		
			corresponds to		
			the PRB		
			occupying the		
			lowest		
			subcarrier		
			frequencies of		
			the carrier		
			bandwidth,		
			where the		
			indexing first		
			goes into the		
			frequency		
			domain. Each		
			position in the		
			string		
			represents a		
			PRB; value "0"		
			indicates " Intra-		
			PRB Protected		
			Resource		
			Footprint does		
			not appear in		
			PRB", value "1"		
			indicates "Intra		
			indicates "Intra-		
			PRB Protected		
			Resource		
			Footprint		
			appears in		
			PRB". The		
			length of the bit		
			string equals		
			the number of		
			PRBs in the		
			carrier		
			bandwidth.		
>>Protected Footprint M	1		The description		
Time Pattern			of time		
			periodicity of the		
			Intra-PRB		
			Protected		
	i	•	Froiecteo		
			Resource Footprint.		

	1	, , , , , , , , , , , , , , , , , , , ,		1	
>>>Protected Footprint Time- periodicity	M	INTEGER(1320,)	Periodicity with which the periodic Intra-PRB Protected Resource Footprint repeats in time-dimension (1= every PRB (i.e. slot), 2=every other PRB (i.e. slot) etc.	-	
>>>Protected Footprint Start Time	M	INTEGER(120,)	The time- position of the PRB inside the frame in which the periodic Intra-PRB Protected Resource Footprint appears for the first time. The value "1" corresponds to the receiving node's slot 0 in subframe 0 in the receiving node's radio frame where SFN = Activation SFN.	-	
MBSFN Control Region Length	0	INTEGER(03)	Length of control region in MBSFN subframes. Expressed in REs, in the time dimension.		
PDCCH Region Length	M	INTEGER(13)	Length of PDCCH region in regular subframes. Expressed in REs, in the time dimension.		

Range bound	Explanation
maxnoofProtectedResourcePatterns	Maximum no. protected resource patterns. Value is 16.

### 9.2.126 Data Traffic Resource Indication

This IE indicates the intended data traffic resource allocation for E-UTRA - NR Cell Resource Coordination.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Activation SFN	М		INTEGER (01023)	Indicates from which SFN of the receiving node the agreement is valid.		
CHOICE Shared Resource Type	М				-	
>UL Only Sharing >>UL Resource Bitmap	M		Data Traffic Resources 9.2.127		-	
>UL and DL Sharing >>CHOICE UL Resources	M					
>>>Unchanged >>>Changed			NULL			
>>>UL Resource Bitmap	M		Data Traffic Resources 9.2.127			
>>CHOICE <i>DL</i> Resources	М					
>>>Unchanged >>>Changed			NULL			
>>>>DL Resource Bitmap	M		Data Traffic Resources 9.2.127			
Reserved Subframe Pattern	0		9.2.128	Indicates subframes in which the resource allocation does not hold.		

#### 9.2.127 Data Traffic Resources

The *Data Traffic Resources* IE indicates the intended data traffic resource allocation for E-UTRA - NR Cell Resource Coordination.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
Data Traffic Resources	M		BIT STRING (617600)	The indication of resources allocated to E-UTRA PDSCH/PUSCH. Each position in the bit string represents a PRB pair in a subframe; value "0" indicates "resource not intended to be used for transmission", value "1" indicates "resource intended to be used for transmission ". The first bit of the bit string corresponds to the PRB pair occupying the lowest subcarrier frequencies of the carrier, where the indexing first goes into the frequency domain. The bit string may span across multiple contiguous subframes. The first position of the Data Traffic Resources corresponds to the receiving node's subframe 0 in a receiving node's radio frame where SFN = Activation SFN. The length of the bit string is an integer multiple of NRB or NRB, defined in

### 9.2.128 Reserved Subframe Pattern

The Reserved Subframe Pattern IE indicates the pattern of subframes in which the Protected E-UTRA Resource Indication and Data Traffic Resource Indication do not hold.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Subframe Type	М		ENUMERATED( MBSFN,non- MBSFN,)	Indicates what type of non-regular subframes the Reserved Subframe Pattern refers to (e.g. MBSFN).
Reserved Subframe Pattern	M		BIT STRING (10160)	Each position in the bitmap represents a subframe. Value '0' indicates "regular subframe". Value '1' indicates "reserved subframe". For MBSFN subframes, the exception refers only to the noncontrol region of the subframe. The bit string may span across multiple contiguous subframes. The first position of the Subframe Configuration IE corresponds to the receiving node's subframe 0 in a receiving node's radio frame where SFN = Activation SFN. The IE is ignored if received by the eNB.
MBSFN Control Region Length	0		INTEGER(03)	Length of control region in MBSFN subframes. Expressed in REs, in the time dimension.

### 9.2.129 Aerial UE subscription information

This information element is used by the eNB to know if the UE is allowed to use aerial UE function, refer to TS 23.401[12].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Aerial UE subscription	M		ENUMERATED	
information			(allowed, not	
			allowed,)	

## 9.2.130 User plane traffic activity report

This IE is used to indicate user plane traffic activity.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
User plane traffic	М		ENUMERATED	"re-activated" shall be only set after
activity report			(inactive, re-	"inactive" has been reported for the
			activated,)	concerned reporting object

### 9.2.131 RLC Status

This IE indicates about the RLC configuration change included in the container towards the UE.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
Reestablishment Indication	0		ENUMERATED (reestablished,)	Indicates that following the change of the radio status, the RLC has been reestablished.

#### 9.2.132 RRC config indication

This IE is used to indicate the type of RRC configuration used at the en-gNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RRC config indication	M		ENUMERATED	
_			(full config,	
			delta config,)	

# 9.2.133 PDCP SN Length

The PDCP SN Length IE is used to indicate the PDCP SN length configuration of the bearer.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PDCP SN Length	М		ENUMERATED (12bits,	This IE indicates the PDCP
			18bits,)	sequence number size.

#### 9.2.134 Bluetooth Measurement Configuration

This IE defines the parameters for Bluetooth measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Bluetooth Measurement Configuration	М		ENUMERATED (Setup,)	
Bluetooth Measurement Configuration Name List		01		
>Bluetooth Measurement Configuration Name Item IEs		1 <maxnoofblu etoothName &gt;</maxnoofblu 		
>>Bluetooth Measurement Configuration Name	М		OCTET STRING (SIZE (1248))	
BT RSSI	0		ENUMERATED (True,)	In case of Immediate MDT, it corresponds to M8 measurement as defined in 37.320 [31].

Range bound	Explanation
maxnoofBluetoothname	Maximum no. of Bluetooth local name used for Bluetooth
	measurement collection, the maximum value is 4.

### 9.2.135 WLAN Measurement Configuration

This IE defines the parameters for WLAN measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
WLAN Measurement	M		ENUMERATED	
Configuration			(Setup,)	
WLAN Measurement		01		
Configuration Name List				
>WLAN Measurement		1		
Configuration Name Item IEs		<maxnoofw< td=""><td></td><td></td></maxnoofw<>		
		LANName>		
>>WLAN Measurement	M		OCTET STRING	
Configuration Name			(SIZE (132))	
WLAN RSSI	0		ENUMERATED	In case of Immediate MDT,
			(True,)	it corresponds to M8 as
				defined in 37.320 [31].
WLAN RTT	0		ENUMERATED	For Immediate MDT, it
			(True,)	corresponds to M9 as
				defined in 37.320 [31].

Range bound	Explanation
maxnoofWLANname	Maximum no. of WLAN SSID used for WLAN measurement
	collection, the maximum value is 4.

## 9.2.136 Subscription Based UE Differentiation Information

This IE is generated by the MME based on the UE subscription information, it provides the Subscription Based UE differentiation Information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Periodic Communication Indicator	0		ENUMERATED(peri odically, on demand,)	This IE indicates whether the UE communicates periodically or not, e.g. only on demand.
Periodic Time	0		INTEGER (13600,)	This IE indicates the interval time of periodic communication, the unit is: second
Scheduled Communication Time		01		This IE indicates the time zone and day of the week when the UE is available for communication.
>Day of Week	0		BIT STRING (SIZE(7))	If Day-Of-Week is not provided this shall be interpreted as every day of the week. Each position in the bitmap represents a day of the week: first bit = Mon, second bit =Tue, third bit =Wed, and so on. Value '1' indicates 'scheduled. Value '0' indicates 'not scheduled'.
>Time of Day Start	0		INTEGER (086399,)	This IE indicates the time to start of the day, each value represent the corresponding second since 00:00 of the day. If Time-Of-Day-Start is not provided, starting time shall be set to start of the day(s) indicated by Day-Of-Week.
>Time of Day End	0		INTEGER (086399,)	This IE indicates the time to start of the day, each value represent the corresponding second since 00:00 of the day. The value of this IE should be bigger than the value of <i>Time of Day Start</i> IE.  If Time-Of-Day-End is not provided, ending time is end of the day(s) indicated by Day-Of-Week.
Stationary Indication	0		ENUMERATED(stat ionary, mobile,)	
Traffic Profile	0		ENUMERATED(sin gle packet, dual packets, multiple packets,)	"single packet" indicates single packet transmission (UL or DL), "dual packets" indicates dual packet transmission (UL with subsequent DL, or DL with subsequent UL), "multiple packets" indicates multiple packets transmission.
Battery Indication	0		ENUMERATED(batt ery powered, battery powered not rechargeable or replaceable, not battery powered,)	"battery powered" indicates that the UE is battery powered and the battery is rechargeable/replaceable, "battery powered not rechargeable or replaceable" indicates that the UE is battery powered but the battery is not rechargeable/replaceable, "not battery powered" indicates that the UE is not battery powered.

## 9.2.137 Duplication activation

The *Duplication Activation* IE indicates whether UL PDCP Duplication is activated or not.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Duplication Activation	M		ENUMERATED (	
			Active, Inactive,)	

#### 9.2.138 LCID

This IE uniquely identifies a LCID for the associated DRB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
LCID	M		INTEGER	Corresponds to the
			(132,)	LogicalChannelIdentity
			, , ,	defined in TS 38.331 [8].

#### 9.2.139 MeNB Coordination Assistance Information

The MeNB Coordination Assistance Information IE is provided by the MeNB and used by the SgNB to determine further coordination of resource utilisation between the en-gNB and the MeNB.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
MeNB Coordination	М		ENUMERATED(Coordi	The absence of this IE
Assistance Information			nation Not Required, )	indicates that the resource coordination is required.

#### 9.2.140 SgNB Coordination Assistance Information

The *SgNB Coordination Assistance Information* IE is provided by the SgNB and used by the MeNB to determine further coordination of resource utilisation between the en-gNB and the MeNB.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SgNB Coordination	M		ENUMERATED(Coordi	The absence of this IE
Assistance Information			nation Not Required,	indicates that the resource
			)	coordination is required.

## 9.2.141 Desired Activity Notification Level

This IE contains information on which level activity notification shall be performed.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
			reference	
Desired Activity Notification	0		ENUMERATED	
Level			(None, E-RAB,	
			UE-level,)	

### 9.2.142 Location Information at SgNB

The Location Information at SgNB IE enables the SgNB to provide the MeNB with information that supports localisation of the UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PSCell ID	M		NR CGI	PSCell of the UE	_	
			9.2.111			

#### 9.2.143 Interface Instance Indication

The Interface Instance Indication identifies the interface instance the X2AP message is destined for.

NOTE: The Interface Instance Indication is allocated so that it can be associated with an X2-C interface instance. The Interface Instance Indication may identify more than one interface instance.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Interface Instance Indication	M		INTEGER (0255,)	

#### 9.2.144 NB-IoT UL DL Alignment Offset

This IE is used to indicate the offset between the UL carrier frequency center with respect to DL carrier frequency center.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
NB-IoT UL DL Alignment Offset	M		ENUMERATED (-7.5, 0, 7.5,)	Unit: kHz

#### 9.2.145 Lower Layer presence status change

This IE is used to indicate that lower layer resources' presence status shall be changed. If the presence status is set to "release lower layers" or "suspend lower layers", PDCP entities, X2-U bearer resources, S1-U bearer resources and UE context information shall be kept.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Lower Layer presence status change	M		ENUMERATED (release lower layers, re- establish lower layers, suspend lower layers, resume lower layers)	"re-establish lower layers" shall be only set after "release lower layers" has been indicated. "resume lower layers" shall restore SCG. "resume lower layers" shall be only set after "suspend lower layers" has been indicated.

### 9.2.146 Cell and Capacity Assistance Information

The *Cell and Capacity Assistance Information* IE is used by the eNB to request information about NR or E-UTRA cells and it includes information about cell list size capacity.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Maximum Cell List Size	0		9.2.147	
Cell Assistance Information	0		9.2.115	

#### 9.2.147 Maximum Cell List Size

This IE indicates the maximum size the sending node can handle for a given list.

IE/Group Name	Presenc e	Range	IE type and reference	Semantics description
Maximum Cell List Size	M		INTEGER	
			(016384,)	

### 9.2.148 Message Oversize Notification

This IE indicates the maximum number of cells that can be received in the List of Served Cells NR IE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Maximum Cell List Size	M		9.2.147			

### 9.2.149 TNL Transport Layer Address Info

This IE is used for signalling IP addresses of IP-Sec endpoints used for establishment of IP-Sec tunnels.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Transport UP Layer		01		
Addresses Info to Add				
List				
>Transport UP Layer		1 <maxnooftl< td=""><td></td><td></td></maxnooftl<>		
Addresses Info to Add		As>		
Item				
>>IP-Sec Transport	M		BIT	Transport Layer Addresses for
Layer Address			STRING(1160,)	IP-Sec endpoint.
>>GTP Transport		01		
Layer Addresses To				
Add List				
>>>GTP Transport		1 <maxnoofg< td=""><td></td><td></td></maxnoofg<>		
Layer Addresses To		TPTLAs>		
Add Item				
>>>GTP Transport	M		BIT STRING	GTP Transport Layer Addresses
Layer Address Info			(1160,)	for GTP end-points.
Transport UP Layer		01		
Addresses Info to				
Remove List				
>Transport UP Layer		1 <maxnooftl< td=""><td></td><td></td></maxnooftl<>		
Addresses Info to		As>		
Remove Item				
>>IP-Sec Transport	M		BIT STRING	Transport Layer Addresses for
Layer Address			(1160,)	IP-Sec endpoint.
>>GTP Transport		01		
Layer Addresses To				
Remove List				
>>>GTP Transport		1 <maxnoofg< td=""><td></td><td></td></maxnoofg<>		
Layer Addresses To		TPTLAs>		
Remove Item				
>>>GTP Transport	М		BIT STRING	GTP Transport Layer Addresses
Layer Address Info			(1160,)	for GTP end-points.

Range bound	Explanation
maxnoofTLAs	Maximum no. of Transport Layer Addresses in the message. Value is 16
maxnoofGTPTLAs	Maximum no. of GTP Transport Layer Addresses for a GTP end-point in
	the message. Value is 16.

## 9.2.150 CP Transport Layer Information

This element is used to provide the transport layer information associated with EN-DC X2 control plane transport.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE CP Transport				•
Layer Information				
>Endpoint-IP-address				
>>Endpoint IP Address	M		BIT STRING (1160,)	
>Endpoint-IP-address-				
and-port				
>>Endpoint IP Address	М		BIT STRING (1160,)	
>>Port Number	М		OCTET STRING	
			(SIZE(2))	

#### 9.2.151 TNL Association Usage

This IE indicates the usage of the TNL association.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
TNL Association Usage	0		ENUMERATED (ue, non-ue, both,)	Indicates whether the TNL association is only used for UE-associated signalling, or non-UE-associated signalling, or both.

#### 9.2.152 RAN UE NGAP ID

This IE uniquely identifies the UE association over the NG interface within the NG-RAN node, as specified in TS 38.413 [39].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RAN UE NGAP ID	М		INTEGER (02 <sup>32</sup> -1)	

#### 9.2.153 EPC Handover Restriction List Container

This IE contains the *Handover Restriction List* IE specified in TS 36.413 [4] as received by the E-UTRAN from the EPC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
EPC Handover Restriction List Container	М		OCTET STRING	The octets of the OCTET STRING are encoded according to the specifications of the Handover Restriction List IE specified in TS 36.413 [4].

### 9.2.154 DAPS Request Information

The DAPS Indicator IE indicates that the source eNB requests a DAPS HO for the concered E-RAB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DAPS Indicator	M		ENUMERATED (DAPS HO required,)	Indicates that DAPS HO
				is requested

### 9.2.155 DAPS Response Information

The DAPS Response Indicator IE indicates the response to a requested DAPS Handover for the concerned E-RAB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DAPS Response	M		ENUMERATED (DAPS HO accepted,	Indicates that DAPS
Indicator			DAPS HO not accepted,)	Handover is accepted or
				not.

#### 9.2.156 Maximum Number of CHO Preparations

This IE indicates the maximum number of CHO preparations for a UE towards a candidate target eNB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Maximum Number of	M		INTEGER (18,)	
CHO Preparations				

### 9.2.157 Ethernet Type

This IE is used to indicate that Ethernet data is expected.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Ethernet Type	M		ENUMERATED	
			(True,,)	

#### 9.2.158 NR V2X Services Authorized

This IE provides information on the authorization status of the UE to use the NR sidelink for V2X services.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Vehicle UE	0		ENUMERATED (authorized, not authorized,)	Indicates whether the UE is authorized as Vehicle UE.
Pedestrian UE	0		ENUMERATED (authorized, not authorized,)	Indicates whether the UE is authorized as Pedestrian UE.

## 9.2.159 NR UE Sidelink Aggregate Maximum Bit Rate

This IE provides information on the Aggregate Maximum Bitrate of the UE's sidelink communication for NR V2X services.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
NR UE Sidelink Aggregate Maximum Bit Rate	M		Bit Rate 9.2.97	Value 0 shall be considered as a logical error by the receiving eNB.

#### 9.2.160 PC5 QoS Parameters

This IE provides information on the PC5 QoS parameters of the UE's sidelink communication for NR PC5.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PC5 QoS Flow List		1		
>PC5 QoS Flow Item		1 <maxno ofPC5QoS Flows&gt;</maxno 		
>>PQI	M		INTEGER (0255,)	PQI is a special 5QI as specified in TS 23.501 [9].
>>PC5 Flow Bit Rates	0			Only applies for GBR QoS Flows.
>>>Guaranteed Flow Bit Rate	М		Bit Rate 9.2.11	Guaranteed Bit Rate for the PC5 QoS flow. Details in TS 23.501 [9].
>>>Maximum Flow Bit Rate	М		Bit Rate 9.2.11	Maximum Bit Rate for the PC5 QoS flow. Details in TS 23.501 [9].
>>Range	0		ENUMERAT ED (m50, m80, m180, m200, m350, m400, m500, m700, m1000,)	Only applies for groupcast.
PC5 Link Aggregated Bit Rates	0		Bit Rate 9.2.11	Only applies for non-GBR QoS Flows.

Range bound	Explanation
maxnoofPC5QoSFlows	Maximum no. of PC5 QoS flows allowed towards one UE. Value is 2048.

## 9.2.161 TNL Capacity Indicator

The TNL Capacity Indicator IE indicates the available capacity of the Transport Network experienced by the NR cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DL TNL Maximum Offered	M		INTEGER (1	Maximum capacity
Capacity			16777216,)	offered by the transport
				portion of the cell in kbps
DL TNL Available Capacity	М		INTEGER (0 100,)	Available capacity over the transport portion serving the cell in percentage_relative to the <i>DL TNL Maximum Offered Capacity.</i> Value 100 corresponds to the Maximum offered capacity.
UL TNL Maximum Offered Capacity	М		INTEGER (1 16777216)	Maximum capacity offered by the transport portion of the cell in kbps
UL TNL Available Capacity	М		INTEGER (0 100,)	Available capacity over the transport portion serving the cell in percentage_relative to the <i>DL TNL Maximum Offered Capacity.</i> Value 100 corresponds to the Maximum offered capacity.

#### 9.2.162 NR Radio Resource Status

The NR Radio Resource Status IE indicates the usage of the PRBs per cell and per SSB area for all traffic in Downlink and Uplink and the usage of PDCCH CCEs for Downlink and Uplink scheduling.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
SSB Area Radio Resource Status List		1		
>SSB Area Radio Resource Status		1 <max< td=""><td></td><td></td></max<>		
Item		noofSS		
		BAreas		
		>		
>>SSB Index	M		9.2.167	
>>SSB Area DL GBR PRB usage	M		INTEGER (0100)	Per SSB area DL GBR PRB usage
>>SSB Area UL GBR PRB usage	М		INTEGER (0100)	Per SSB area UL GBR PRB usage
>>SSB Area DL non-GBR PRB	M		INTEGER (0100)	Per SSB area DL non-
usage				GBR PRB usage
>>SSB Area UL non-GBR PRB	M		INTEGER (0100)	Per SSB area UL non-
usage				GBR PRB usage
>>SSB Area DL Total PRB usage	M		INTEGER (0100)	Per SSB area DL Total
				PRB usage
>>SSB Area UL Total PRB usage	M		INTEGER (0100)	Per SSB area UL Total
				PRB usage
>>DL scheduling PDCCH CCE	0		INTEGER (0100)	
usage				
>>UL scheduling PDCCH CCE	0		INTEGER (0100)	
usage				

Range bound	Explanation
maxnoofSSBAreas	Maximum no. SSB Areas that can be served by a NG-RAN node
	cell. Value is 64.

### 9.2.163 NR Composite Available Capacity Group

The NR Composite Available Capacity Group IE indicates the overall available resource level per cell and per SSB area in the cell in Downlink and Uplink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Composite Available Capacity Downlink	М		NR Composite Available Capacity 9.2.164	For the Downlink
Composite Available Capacity Uplink	М		NR Composite Available Capacity 9.2.164	For the Uplink

### 9.2.164 NR Composite Available Capacity

The NR Composite Available Capacity IE indicates the overall available resource level in the cell in either Downlink or Uplink.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
Cell Capacity Class Value	0		NR Cell	
			Capacity	
			Class Value	
			9.2.165	
Capacity Value	M		NR Capacity	
			Value	
			9.2.166	

### 9.2.165 NR Cell Capacity Class Value

The NR Cell Capacity Class Value IE indicates the value that classifies the cell capacity with regards to the other cells. The NR Cell Capacity Class Value IE only indicates resources that are configured for traffic purposes.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NR Capacity Class Value	M		INTEGER (1100,)	Value 1 shall indicate the minimum cell capacity, and 100 shall indicate the maximum cell capacity. There should be a linear relation between cell capacity and Cell Capacity Class Value.

#### 9.2.166 NR Capacity Value

The NR Capacity Value IE indicates the amount of resources per cell and per SSB area that are available relative to the total en-gNB resources. The capacity value should be measured and reported so that the minimum en-gNB resource usage of existing services is reserved according to implementation. The NR Capacity Value IE can be weighted according to the ratio of cell capacity class values, if available.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Capacity Value	M		INTEGER (0100)	Value 0 shall indicate no available capacity, and 100 shall indicate maximum available capacity with respect to the whole cell. Capacity Value should be measured on a linear scale.
SSB Area Capacity Value List		01		
>SSB Area Capacity Value Item		1 <max noofSS BAreas</max 		
>>SSB Index	М		9.2.167	
>>SSB Area Capacity Value	М		INTEGER (0100)	Value 0 shall indicate no available capacity, and 100 shall indicate maximum available capacity . SSB Area Capacity Value should be measured on a linear scale.

	l
Range bound	Explanation

maxnoofSSBAreas	Maximum no. SSB Areas that can be served by a NG-RAN node
	cell. Value is 64.

#### 9.2.167 SSB Index

The SSB Index IE identify an SSB area of an NR cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
SSB Index	М		INTEGER (063)	

#### 9.2.168 NR Carrier List

This IE indicates the SCS-specific carriers per TDD, per DL, per UL or per SUL of an NR cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
NR Carrier Item		1 <maxnoofn RSCSs&gt;</maxnoofn 		
>NR SCS	M		ENUMERATED (scs15, scs30, scs60, scs120,)	SCS for the corresponding carrier.
>Offset to Carrier	М		INTEGER (0 2199,)	Offset in frequency domain between Point A (lowest subcarrier of common RB 0) and the lowest usable subcarrier on this carrier in number of PRBs (using the <i>NR SCS</i> IE defined for this carrier). The maximum value corresponds to 275×8–1. See TS 38.211 [42], clause 4.4.2.
>Carrier Bandwidth	M		INTEGER (1 maxnoofNRPhysical ResourceBlocks,)	Width of this carrier in number of PRBs (using the NR SCS IE defined for this carrier). See TS 38.211 [42], clause 4.4.2.

Range bound	Explanation
maxnoofNRSCSs	Maximum no. of SCS-specific carriers per TDD, per DL, per UL or per SUL of an NR cell. Value is 5.
maxnoofNRPhysicalResourceBlocks	Maximum no. of Physical Resource Blocks of an NR Cell. Value is 275.

#### 9.2.169 SSB Positions In Burst

Indicates the time domain positions of the transmitted SS-blocks in a half frame with SS/PBCH blocks as defined in TS 38.213 [43], clause 4.1.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE ssb- PositionsInBurst	M			The first/ leftmost bit corresponds to SS/PBCH block index 0, the second bit corresponds to SS/PBCH block index 1, and so on. Value 0 in the bitmap indicates that the corresponding SS/PBCH block is not transmitted while value 1 indicates that the corresponding SS/PBCH block is transmitted.
>ShortBitmap				
>>ShortBitmap	M		BIT STRING (SIZE(4))	
>MediumBitmap				
>>MediumBitmap	M		BIT STRING (SIZE(8))	
>LongBitmap		·		
>>LongBitmap	M		BIT STRING (SIZE(64))	

# 9.2.170 NPRACH Configuration

This IE indicates the NPRACH Configuration.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE FDDorTDD	M		1010101100	
>FDD				
>>NPRACH-CP-Length	M	ENUMERATED {us66dot7, us266dot7,}		
>>Anchor Carrier NPRACH Configuration	M		OCTET STRING	Includes the NPRACH- ParametersList-NB-r13 IE as defined in 6.7.3.2 of TS 36.331 [9].
>>Anchor Carrier EDT NPRACH Configuration	0		OCTET STRING	Includes the NPRACH- ParametersList-NB-r14 IE as defined in 6.7.3.2 of TS 36.331 [9].
>>Anchor Carrier Format 2 NPRACH Configuration	0		OCTET STRING	Includes the NPRACH- ParametersListFmt2-NB- r15 IE as defined in 6.7.3.2 of TS 36.331 [9]
>>Anchor Carrier Format 2 EDT NPRACH Configuration	0		OCTET STRING	Includes the NPRACH- ParametersListFmt2-NB- r15 IE as defined in 6.7.3.2 of TS 36.331 [9]
>>Non Anchor Carrier NPRACH Configuration	0		OCTET STRING	Includes the <i>UL-ConfigCommonList-NB-r14</i> IE as defined in 6.7.3.1 of TS 36.331 [9].
>>Non Anchor Carrier Format 2 NPRACH Configuration	0		OCTET STRING	Includes the <i>UL-ConfigCommonList-NB-v1530</i> IE as defined in 6.7.3.1 of TS 36.331 [9].
>TDD				• •
>>nprach-PreambleFormat	М	ENUMERATED {fmt0, fmt1, fmt2, fmt0-a, fmt1-a,}		
>>Anchor Carrier NPRACH Configuration TDD	M		OCTET STRING	Includes the NPRACH- ParametersListTDD-NB- r15 IE as defined in 6.7.3.2 of TS 36.331 [9]
>>Non Anchor Carrier Frequency Configuration list		0< maxnoofNonAnch orCarrierFreqConf ig>		
>>> Non Anchor Carrier Frequency	M		OCTET STRING	Includes the <i>DL-CarrierConfigCommon-NB-r14</i> IE as defined in 6.7.3.2 of TS 36.331 [9]
>>Non Anchor Carrier NPRACH Configuration TDD	0		OCTET STRING	Includes the <i>UL- ConfigCommonListTDD- NB-r15</i> IE as defined in 6.7.3.1 of TS 36.331 [9].

Range bound	Explanation
maxnoofNonAnchorCarrierFreqConfig	Maximum no. of non-Anchor Carrier Frequency Configurations. Value is 15.

### 9.2.171 UE Radio Capability ID

This IE contains the UE Capability ID as defined in TS 23.003[29].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Radio Capability ID	M		OCTET STRING	

### 9.2.172 QoS Mapping Information

This IE indicates the DSCP and/or IPv6 Flow Label field(s) of IP packets sent in the corresponding GTP-U tunnel.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DSCP	0		BIT STRING (SIZE(6))	
Flow label	0		BIT STRING (SIZE(20))	

#### 9.2.173 UE Radio Capability

This IE contains UE Radio Capability information.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UE Radio Capability	М		OCTET STRING	Includes the UERadioAccessCapabilityInf ormation message as defined in 10.2.2 of TS 36.331 [9].

#### 9.2.174 URI

This IE is a URI.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
URI	M		VisibleString	String representing URI (Uniform Resource Identifier)

#### 9.2.175 SFN Offset

This IE contains the time offset between an absolute time reference and the SFN0 start. The IE is calculated assuming that the SFN transmission started at the absolute time reference. The absolute time reference chosen is 1980-01-06 T00:00:19 International Atomic Time (TAI).

IE/Group Name	Presenc e	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
SFN Time Offset	М		BIT STRING (SIZE(24))	Time offset in microseconds between the absolute time reference "1980-01-06 T00:00:19 International Atomic Time (TAI)" and the SFN0 start. The maximum usable value is (1024*10^4-1). Values higher than the maximum are discarded.		

### 9.3 Message and Information Element Abstract Syntax (with ASN.1)

#### 9.3.1 General

X2AP ASN.1 definition conforms to ITU-T Rec. X.680 [27] and ITU-T Rec. X.681 [28].

Sub clause 9.3 presents the Abstract Syntax of the X2AP protocol with ASN.1. In case there is contradiction between the ASN.1 definition in this sub clause and the tabular format in sub clause 9.1 and 9.2, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional elements, in which the tabular format shall take precedence.

The ASN.1 definition specifies the structure and content of X2AP messages. X2AP messages can contain any IEs specified in the object set definitions for that message without the order or number of occurrence being restricted by ASN.1. However, for this version of the standard, a sending entity shall construct an X2AP message according to the PDU definitions module and with the following additional rules:

- IEs shall be ordered (in an IE container) in the order they appear in object set definitions.
- Object set definitions specify how many times IEs may appear. An IE shall appear exactly once if the presence field in an object has value "mandatory". An IE may appear at most once if the presence field in an object has value "optional" or "conditional". If in a tabular format there is multiplicity specified for an IE (i.e. an IE list) then in the corresponding ASN.1 definition the list definition is separated into two parts. The first part defines an IE container list in which the list elements reside. The second part defines list elements. The IE container list appears as an IE of its own. For this version of the standard an IE container list may contain only one kind of list elements.

NOTE: In the above, "IE" means an IE in the object set with an explicit ID. If one IE needs to appear more than once in one object set, then the different occurrences have different IE IDs.

If an X2AP message that is not constructed as defined above is received, this shall be considered as Abstract Syntax Error, and the message shall be handled as defined for Abstract Syntax Error in clause 10.

#### 9.3.2 Usage of Private Message Mechanism for Non-standard Use

The private message mechanism for non-standard use may be used:

- for special operator (and/or vendor) specific features considered not to be part of the basic functionality, i.e. the functionality required for a complete and high-quality specification in order to guarantee multivendor inter-operability.
- by vendors for research purposes, e.g. to implement and evaluate new algorithms/features before such features are proposed for standardisation.

The private message mechanism shall not be used for basic functionality. Such functionality shall be standardised.

#### 9.3.3 Elementary Procedure Definitions

-- ASN1START

```
__ *******************
-- Elementary Procedure definitions
__ ********************
X2AP-PDU-Descriptions {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) x2ap (2) version1 (1) x2ap-PDU-Descriptions (0) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
__ ********************
-- IE parameter types from other modules.
__ ********************
IMPORTS
   Criticality,
   ProcedureCode
FROM X2AP-CommonDataTypes
   CellActivationRequest,
   CellActivationResponse,
   CellActivationFailure,
   ENBConfigurationUpdate,
   ENBConfigurationUpdateAcknowledge,
   ENBConfigurationUpdateFailure,
   ErrorIndication,
   HandoverCancel,
   HandoverReport,
   HandoverPreparationFailure,
   HandoverRequest,
   HandoverRequestAcknowledge,
   LoadInformation,
   PrivateMessage,
   ResetRequest,
   ResetResponse,
   ResourceStatusFailure,
   ResourceStatusRequest,
   ResourceStatusResponse,
   ResourceStatusUpdate,
   RLFIndication.
   SNStatusTransfer,
   UEContextRelease,
   X2SetupFailure,
   X2SetupRequest,
   X2SetupResponse,
   MobilityChangeRequest,
   MobilityChangeAcknowledge,
```

```
MobilityChangeFailure,
X2Release,
X2APMessageTransfer,
SeNBAdditionRequest,
SeNBAdditionRequestAcknowledge,
SeNBAdditionRequestReject,
SeNBReconfigurationComplete,
SeNBModificationRequest,
SeNBModificationRequestAcknowledge,
SeNBModificationRequestReject,
SeNBModificationRequired,
SeNBModificationConfirm,
SeNBModificationRefuse,
SeNBReleaseRequest,
SeNBReleaseRequired,
SeNBReleaseConfirm,
SeNBCounterCheckRequest,
X2RemovalFailure,
X2RemovalRequest,
X2RemovalResponse,
RetrieveUEContextRequest,
RetrieveUEContextResponse,
RetrieveUEContextFailure,
SqNBAdditionRequest,
SgNBAdditionRequestAcknowledge,
SgNBAdditionRequestReject,
SqNBReconfigurationComplete,
SqNBModificationRequest,
SqNBModificationRequestAcknowledge,
SgNBModificationRequestReject,
SqNBModificationRequired,
SqNBModificationConfirm,
SqNBModificationRefuse,
SqNBReleaseRequest,
SqNBReleaseRequestAcknowledge,
SqNBReleaseRequestReject,
SgNBReleaseRequired,
SqNBReleaseConfirm,
SgNBCounterCheckRequest,
SgNBChangeRequired,
SgNBChangeConfirm,
SgNBChangeRefuse,
RRCTransfer,
ENDCX2SetupRequest,
ENDCX2SetupResponse,
ENDCX2SetupFailure,
ENDCConfigurationUpdate,
ENDCConfigurationUpdateAcknowledge,
ENDCConfigurationUpdateFailure,
SecondaryRATDataUsageReport,
ENDCCellActivationRequest,
ENDCCellActivationResponse,
ENDCCellActivationFailure,
ENDCPartialResetRequired,
```

```
ENDCPartialResetConfirm,
EUTRANRCellResourceCoordinationRequest,
EUTRANRCellResourceCoordinationResponse,
SgNBActivityNotification,
ENDCX2RemovalRequest,
ENDCX2RemovalResponse,
ENDCX2RemovalFailure,
DataForwardingAddressIndication,
GNBStatusIndication,
ENDCConfigurationTransfer,
DeactivateTrace,
TraceStart.
HandoverSuccess,
EarlyStatusTransfer,
ConditionalHandoverCancel,
ENDCResourceStatusRequest,
ENDCResourceStatusResponse,
ENDCResourceStatusFailure,
ENDCResourceStatusUpdate,
CellTrafficTrace,
F1CTrafficTransfer,
UERadioCapabilityIDMappingRequest,
UERadioCapabilityIDMappingResponse
```

#### FROM X2AP-PDU-Contents

```
id-cellActivation,
id-eNBConfigurationUpdate,
id-errorIndication,
id-handoverCancel.
id-handoverReport,
id-handoverPreparation,
id-loadIndication,
id-privateMessage,
id-reset,
id-resourceStatusReporting,
id-resourceStatusReportingInitiation,
id-rLFIndication.
id-snStatusTransfer,
id-uEContextRelease,
id-x2Setup,
id-mobilitySettingsChange,
id-x2Release,
id-x2APMessageTransfer,
id-seNBAdditionPreparation,
id-seNBReconfigurationCompletion,
id-meNBinitiatedSeNBModificationPreparation,
id-seNBinitiatedSeNBModification,
id-meNBinitiatedSeNBRelease,
```

```
id-seNBinitiatedSeNBRelease,
   id-seNBCounterCheck.
   id-x2Removal.
   id-retrieveUEContext,
   id-sqNBAdditionPreparation,
   id-sqNBReconfigurationCompletion,
    id-meNBinitiatedSqNBModificationPreparation,
   id-sqNBinitiatedSqNBModification,
   id-meNBinitiatedSqNBRelease,
   id-sqNBinitiatedSqNBRelease,
   id-sqNBChange,
   id-sqNBCounterCheck,
   id-rRCTransfer,
   id-endcX2Setup,
   id-endcConfigurationUpdate,
   id-secondaryRATDataUsageReport,
   id-endcCellActivation,
   id-endcPartialReset,
   id-eUTRANRCellResourceCoordination,
   id-SqNBActivityNotification,
   id-endcX2Removal,
   id-dataForwardingAddressIndication,
   id-qNBStatusIndication,
   id-endcConfigurationTransfer,
   id-deactivateTrace,
   id-traceStart.
   id-handoverSuccess,
   id-earlyStatusTransfer,
   id-conditionalHandoverCancel,
   id-endcresourceStatusReporting,
   id-endcresourceStatusReportingInitiation,
   id-cellTrafficTrace,
   id-f1CTrafficTransfer.
   id-UERadioCapabilityIDMapping
FROM X2AP-Constants;
__ *******************
-- Interface Elementary Procedure Class
__ ********************
X2AP-ELEMENTARY-PROCEDURE ::= CLASS {
    &InitiatingMessage
    &SuccessfulOutcome
                                 OPTIONAL,
    &UnsuccessfulOutcome
                                     OPTIONAL,
    &procedureCode
                          ProcedureCode UNIQUE,
   &criticality
                          Criticality
                                         DEFAULT ignore
WITH SYNTAX {
```

```
&InitiatingMessage
    INITIATING MESSAGE
    [SUCCESSFUL OUTCOME
                           &SuccessfulOutcomel
    [UNSUCCESSFUL OUTCOME
                               &UnsuccessfulOut.comel
    PROCEDURE CODE
                           &procedureCode
    [CRITICALITY
                           &criticality]
    *******************
  Interface PDU Definition
X2AP-PDU ::= CHOICE {
    initiatingMessage
                      InitiatingMessage,
    successfulOutcome
                     SuccessfulOutcome,
    unsuccessfulOutcome UnsuccessfulOutcome,
InitiatingMessage ::= SEQUENCE
    procedureCode X2AP-ELEMENTARY-PROCEDURE.&procedureCode
                                                                  ({X2AP-ELEMENTARY-PROCEDURES}),
    criticality
                                                                  ({X2AP-ELEMENTARY-PROCEDURES}{@procedureCode}),
                   X2AP-ELEMENTARY-PROCEDURE.&criticality
                                                                  ({X2AP-ELEMENTARY-PROCEDURES}{@procedureCode})
    value
                   X2AP-ELEMENTARY-PROCEDURE.&InitiatingMessage
SuccessfulOutcome ::= SEQUENCE {
    procedureCode X2AP-ELEMENTARY-PROCEDURE.&procedureCode
                                                                  ({X2AP-ELEMENTARY-PROCEDURES}),
                                                                  ({X2AP-ELEMENTARY-PROCEDURES}{@procedureCode}),
    criticality
                   X2AP-ELEMENTARY-PROCEDURE.&criticality
                   X2AP-ELEMENTARY-PROCEDURE. & Successful Outcome
                                                                  ({X2AP-ELEMENTARY-PROCEDURES}{@procedureCode})
    value
UnsuccessfulOutcome ::= SEQUENCE {
    procedureCode X2AP-ELEMENTARY-PROCEDURE.&procedureCode
                                                                  ({X2AP-ELEMENTARY-PROCEDURES}),
                                                                  ({X2AP-ELEMENTARY-PROCEDURES}{@procedureCode}),
    criticality
                   X2AP-ELEMENTARY-PROCEDURE.&criticality
                                                                 ({X2AP-ELEMENTARY-PROCEDURES} | @procedureCode)
    value
                   X2AP-ELEMENTARY-PROCEDURE. & UnsuccessfulOutcome
     *****************
-- Interface Elementary Procedure List
X2AP-ELEMENTARY-PROCEDURES X2AP-ELEMENTARY-PROCEDURE ::= {
    X2AP-ELEMENTARY-PROCEDURES-CLASS-1
   X2AP-ELEMENTARY-PROCEDURES-CLASS-2
X2AP-ELEMENTARY-PROCEDURES-CLASS-1 X2AP-ELEMENTARY-PROCEDURE ::=
    handoverPreparation
    reset
    x2Setup
```

```
resourceStatusReportingInitiation
    eNBConfigurationUpdate
    mobilitySettingsChange
    cellActivation
    seNBAdditionPreparation
    meNBinitiatedSeNBModificationPreparation
    seNBinitiatedSeNBModification
    seNBinitiatedSeNBRelease
    x2Removal
    retrieveUEContext
    sqNBAdditionPreparation
    meNBinitiatedSgNBModificationPreparation
    sqNBinitiatedSqNBModification
    meNBinitiatedSgNBRelease
    sgNBinitiatedSgNBRelease
    sqNBChange
    endcX2Setup
    endcConfigurationUpdate
    endcCellActivation
    endcPartialReset
    eUTRANRCellResourceCoordination
    endcX2Removal
    endcresourceStatusReportingInitiation
    uERadioCapabilityIDMapping
X2AP-ELEMENTARY-PROCEDURES-CLASS-2 X2AP-ELEMENTARY-PROCEDURE ::=
    snStatusTransfer
    uEContextRelease
    handoverCancel
    errorIndication
    resourceStatusReporting
    loadIndication
    privateMessage
    rLFIndication
    handoverReport
    x2Release
    x2APMessageTransfer
    seNBReconfigurationCompletion
    meNBinitiatedSeNBRelease
    seNBCounterCheck
    sqNBReconfigurationCompletion
    sqNBCounterCheck
    rRCTransfer
    secondaryRATDataUsageReport
    sqNBActivityNotification
    dataForwardingAddressIndication
    gNBStatusIndication
    endcConfigurationTransfer
    deactivateTrace
    traceStart
    handoverSuccess
    earlyStatusTransfer
```

```
conditionalHandoverCancel
    endcresourceStatusReporting
    cellTrafficTrace
    f1CTrafficTransfer
    . . .
-- Interface Elementary Procedures
handoverPreparation X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            HandoverRequest
                            HandoverRequestAcknowledge
    SUCCESSFUL OUTCOME
                            HandoverPreparationFailure
    UNSUCCESSFUL OUTCOME
                            id-handoverPreparation
    PROCEDURE CODE
    CRITICALITY
                            reject
snStatusTransfer X2AP-ELEMENTARY-PROCEDURE ::= {
                            SNStatusTransfer
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-snStatusTransfer
    CRITICALITY
                            ignore
uEContextRelease X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            UEContextRelease
    PROCEDURE CODE
                            id-uEContextRelease
    CRITICALITY
                            ignore
handoverCancel X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            HandoverCancel
                            id-handoverCancel
    PROCEDURE CODE
    CRITICALITY
                            ignore
handoverReport X2AP-ELEMENTARY-PROCEDURE ::= {
                            HandoverReport
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-handoverReport
    CRITICALITY
                            ignore
errorIndication X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ErrorIndication
                            id-errorIndication
    PROCEDURE CODE
    CRITICALITY
                            ignore
       X2AP-ELEMENTARY-PROCEDURE ::= {
```

314

```
ResetRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            ResetResponse
    PROCEDURE CODE
                            id-reset
    CRITICALITY
                            reject
x2Setup X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            X2SetupRequest
    SUCCESSFUL OUTCOME
                            X2SetupResponse
    UNSUCCESSFUL OUTCOME
                            X2SetupFailure
    PROCEDURE CODE
                            id-x2Setup
    CRITICALITY
                            reject
loadIndication X2AP-ELEMENTARY-PROCEDURE ::= {
                            LoadInformation
    INITIATING MESSAGE
                            id-loadIndication
    PROCEDURE CODE
    CRITICALITY
                            ignore
eNBConfigurationUpdate
                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ENBConfigurationUpdate
                            ENBConfigurationUpdateAcknowledge
    SUCCESSFUL OUTCOME
                            ENBConfigurationUpdateFailure
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-eNBConfigurationUpdate
    CRITICALITY
                            reject
resourceStatusReportingInitiation
                                    X2AP-ELEMENTARY-PROCEDURE ::= {
                                    ResourceStatusRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                                    ResourceStatusResponse
    UNSUCCESSFUL OUTCOME
                                    ResourceStatusFailure
    PROCEDURE CODE
                                    id-resourceStatusReportingInitiation
   CRITICALITY
                                    reject
resourceStatusReporting X2AP-ELEMENTARY-PROCEDURE ::= {
                            ResourceStatusUpdate
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-resourceStatusReporting
    CRITICALITY
                            ignore
rLFIndication X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            RLFIndication
    PROCEDURE CODE
                            id-rLFIndication
    CRITICALITY
                            ignore
                        X2AP-ELEMENTARY-PROCEDURE ::=
privateMessage
    INITIATING MESSAGE
                            PrivateMessage
    PROCEDURE CODE
                            id-privateMessage
    CRITICALITY
                            ignore
```

315

```
mobilitySettingsChange X2AP-ELEMENTARY-PROCEDURE ::= {
                            MobilityChangeRequest
    INITIATING MESSAGE
                            MobilityChangeAcknowledge
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            MobilityChangeFailure
                            id-mobilitySettingsChange
    PROCEDURE CODE
    CRITICALITY
                            reject
cellActivation X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            CellActivationRequest
    SUCCESSFUL OUTCOME
                            CellActivationResponse
                            CellActivationFailure
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-cellActivation
    CRITICALITY
                            reject
x2Release X2AP-ELEMENTARY-PROCEDURE ::= {
                            X2Release
    INITIATING MESSAGE
                            id-x2Release
    PROCEDURE CODE
    CRITICALITY
                            reject
x2APMessageTransfer X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            X2APMessageTransfer
    PROCEDURE CODE
                            id-x2APMessageTransfer
    CRITICALITY
                            reject
seNBAdditionPreparation X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SeNBAdditionRequest
    SUCCESSFUL OUTCOME
                            SeNBAdditionRequestAcknowledge
    UNSUCCESSFUL OUTCOME
                            SeNBAdditionRequestReject
    PROCEDURE CODE
                            id-seNBAdditionPreparation
    CRITICALITY
                            reject
seNBReconfigurationCompletion
                                X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SeNBReconfigurationComplete
    PROCEDURE CODE
                            id-seNBReconfigurationCompletion
    CRITICALITY
                            ignore
meNBinitiatedSeNBModificationPreparation
                                           X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SeNBModificationRequest
                            SeNBModificationRequestAcknowledge
    SUCCESSFUL OUTCOME
                            SeNBModificationRequestReject
    UNSUCCESSFUL OUTCOME
                            id-meNBinitiatedSeNBModificationPreparation
    PROCEDURE CODE
    CRITICALITY
                            reject
seNBinitiatedSeNBModification
                                X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SeNBModificationRequired
                            SeNBModificationConfirm
    SUCCESSFUL OUTCOME
```

```
UNSUCCESSFUL OUTCOME
                            SeNBModificationRefuse
    PROCEDURE CODE
                            id-seNBinitiatedSeNBModification
    CRITICALITY
                            reject
meNBinitiatedSeNBRelease
                            X2AP-ELEMENTARY-PROCEDURE ::= {
                            SeNBReleaseRequest
    INITIATING MESSAGE
                            id-meNBinitiatedSeNBRelease
    PROCEDURE CODE
    CRITICALITY
                            ignore
seNBinitiatedSeNBRelease
                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SeNBReleaseRequired
    SUCCESSFUL OUTCOME
                            SeNBReleaseConfirm
    PROCEDURE CODE
                            id-seNBinitiatedSeNBRelease
    CRITICALITY
                            reject
                    X2AP-ELEMENTARY-PROCEDURE ::= {
seNBCounterCheck
    INITIATING MESSAGE
                            SeNBCounterCheckRequest
    PROCEDURE CODE
                            id-seNBCounterCheck
                            reject
    CRITICALITY
x2Removal X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            X2RemovalRequest
                            X2RemovalResponse
    SUCCESSFUL OUTCOME
                            X2RemovalFailure
    UNSUCCESSFUL OUTCOME
                            id-x2Removal
    PROCEDURE CODE
                            reject
    CRITICALITY
retrieveUEContext X2AP-ELEMENTARY-PROCEDURE ::= {
                            RetrieveUEContextRequest
    INITIATING MESSAGE
                            RetrieveUEContextResponse
    SUCCESSFUL OUTCOME
                            RetrieveUEContextFailure
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-retrieveUEContext
    CRITICALITY
                            reject
sgNBAdditionPreparation
                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SgNBAdditionRequest
                            SqNBAdditionRequestAcknowledge
    SUCCESSFUL OUTCOME
                            SqNBAdditionRequestReject
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-sqNBAdditionPreparation
    CRITICALITY
                            reject
sgNBReconfigurationCompletion
                                X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SgNBReconfigurationComplete
    PROCEDURE CODE
                            id-sgNBReconfigurationCompletion
    CRITICALITY
                            ignore
```

```
meNBinitiatedSqNBModificationPreparation
                                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SqNBModificationRequest
                            SqNBModificationRequestAcknowledge
    SUCCESSFUL OUTCOME
                            SqNBModificationRequestReject
    UNSUCCESSFUL OUTCOME
                            id-meNBinitiatedSqNBModificationPreparation
    PROCEDURE CODE
                            reiect
    CRITICALITY
sqNBinitiatedSqNBModification
                                    X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SqNBModificationRequired
    SUCCESSFUL OUTCOME
                            SqNBModificationConfirm
                            SqNBModificationRefuse
    UNSUCCESSFUL OUTCOME
                            id-sqNBinitiatedSqNBModification
    PROCEDURE CODE
    CRITICALITY
                            reject
                            X2AP-ELEMENTARY-PROCEDURE ::=
meNBinitiatedSqNBRelease
    INITIATING MESSAGE
                            SqNBReleaseRequest
                            SgNBReleaseRequestAcknowledge
    SUCCESSFUL OUTCOME
                            SqNBReleaseRequestReject
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-meNBinitiatedSqNBRelease
    CRITICALITY
                            ignore
sgNBinitiatedSgNBRelease
                            X2AP-ELEMENTARY-PROCEDURE ::=
    INITIATING MESSAGE
                            SgNBReleaseRequired
    SUCCESSFUL OUTCOME
                            SqNBReleaseConfirm
                            id-sqNBinitiatedSqNBRelease
    PROCEDURE CODE
                            reject
    CRITICALITY
sqNBCounterCheck
                    X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SqNBCounterCheckRequest
    PROCEDURE CODE
                            id-sqNBCounterCheck
    CRITICALITY
                            reiect
sgNBChange X2AP-ELEMENTARY-PROCEDURE ::=
                            SgNBChangeRequired
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            SgNBChangeConfirm
                            SgNBChangeRefuse
    UNSUCCESSFUL OUTCOME
                            id-sgNBChange
    PROCEDURE CODE
                            reject
    CRITICALITY
rRCTransfer X2AP-ELEMENTARY-PROCEDURE ::= {
                            RRCTransfer
    INITIATING MESSAGE
                            id-rRCTransfer
    PROCEDURE CODE
    CRITICALITY
                            reject
endcX2Setup X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ENDCX2SetupRequest
    SUCCESSFUL OUTCOME
                            ENDCX2SetupResponse
```

PROCEDURE CODE

```
ENDCX2SetupFailure
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-endcX2Setup
    CRITICALITY
                            reject
endcConfigurationUpdate
                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ENDCConfigurationUpdate
    SUCCESSFUL OUTCOME
                            ENDCConfigurationUpdateAcknowledge
                            ENDCConfigurationUpdateFailure
    UNSUCCESSFUL OUTCOME
                            id-endcConfigurationUpdate
    PROCEDURE CODE
    CRITICALITY
                            reject
secondaryRATDataUsageReport X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SecondaryRATDataUsageReport
    PROCEDURE CODE
                            id-secondaryRATDataUsageReport
    CRITICALITY
                            reject
endcCellActivation X2AP-ELEMENTARY-PROCEDURE ::= {
                            ENDCCellActivationRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            ENDCCellActivationResponse
                            ENDCCellActivationFailure
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-endcCellActivation
    CRITICALITY
                            reject
                    X2AP-ELEMENTARY-PROCEDURE ::= {
endcPartialReset
                            ENDCPartialResetRequired
    INITIATING MESSAGE
                            ENDCPartialResetConfirm
    SUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-endcPartialReset
    CRITICALITY
                            reject
eUTRANRCellResourceCoordination X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            EUTRANRCellResourceCoordinationRequest
    SUCCESSFUL OUTCOME
                            EUTRANRCellResourceCoordinationResponse
    PROCEDURE CODE
                            id-eUTRANRCellResourceCoordination
    CRITICALITY
                            reject
                            X2AP-ELEMENTARY-PROCEDURE ::=
sqNBActivityNotification
    INITIATING MESSAGE
                            SqNBActivityNotification
    PROCEDURE CODE
                            id-SqNBActivityNotification
    CRITICALITY
                            reject
endcX2Removal X2AP-ELEMENTARY-PROCEDURE ::= {
                            ENDCX2RemovalRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            ENDCX2RemovalResponse
    UNSUCCESSFUL OUTCOME
                            ENDCX2RemovalFailure
```

id-endcX2Removal

```
CRITICALITY
                            reject
dataForwardingAddressIndication X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            DataForwardingAddressIndication
                            id-dataForwardingAddressIndication
    PROCEDURE CODE
    CRITICALITY
                            ignore
qNBStatusIndication
                        X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            GNBStatusIndication
    PROCEDURE CODE
                            id-qNBStatusIndication
    CRITICALITY
                            ignore
endcConfigurationTransfer
                            X2AP-ELEMENTARY-PROCEDURE ::= {
                            ENDCConfigurationTransfer
    INITIATING MESSAGE
                            id-endcConfigurationTransfer
    PROCEDURE CODE
    CRITICALITY
                            ignore
deactivateTrace X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            DeactivateTrace
                            id-deactivateTrace
    PROCEDURE CODE
    CRITICALITY
                            ignore
traceStart X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            TraceStart
    PROCEDURE CODE
                            id-traceStart
    CRITICALITY
                            ignore
handoverSuccess X2AP-ELEMENTARY-PROCEDURE ::= {
                            HandoverSuccess
    INITIATING MESSAGE
                            id-handoverSuccess
    PROCEDURE CODE
    CRITICALITY
                            ignore
earlyStatusTransfer
                        X2AP-ELEMENTARY-PROCEDURE ::= {
                            EarlyStatusTransfer
    INITIATING MESSAGE
                            id-earlyStatusTransfer
    PROCEDURE CODE
    CRITICALITY
                            ignore
conditionalHandoverCancel X2AP-ELEMENTARY-PROCEDURE ::= {
                            ConditionalHandoverCancel
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-conditionalHandoverCancel
    CRITICALITY
                            ignore
endcresourceStatusReportingInitiation X2AP-ELEMENTARY-PROCEDURE ::=
    INITIATING MESSAGE
                            ENDCResourceStatusRequest
    SUCCESSFUL OUTCOME
                            ENDCResourceStatusResponse
```

```
ENDCResourceStatusFailure
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-endcresourceStatusReportingInitiation
    CRITICALITY
                            reject
                                X2AP-ELEMENTARY-PROCEDURE ::= {
endcresourceStatusReporting
                            ENDCResourceStatusUpdate
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-endcresourceStatusReporting
    CRITICALITY
                            ignore
cellTrafficTrace X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            CellTrafficTrace
    PROCEDURE CODE
                            id-cellTrafficTrace
    CRITICALITY
                            ignore
f1CTrafficTransfer
                            X2AP-ELEMENTARY-PROCEDURE ::= {
                            F1CTrafficTransfer
    INITIATING MESSAGE
                            id-f1CTrafficTransfer
    PROCEDURE CODE
    CRITICALITY
                            ignore
uERadioCapabilityIDMapping X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            UERadioCapabilityIDMappingRequest
    SUCCESSFUL OUTCOME
                            UERadioCapabilityIDMappingResponse
                            id-UERadioCapabilityIDMapping
    PROCEDURE CODE
    CRITICALITY
                            reject
END
-- ASN1STOP
```

#### 9.3.4 PDU Definitions

```
IMPORTS
    ABSInformation.
    ABS-Status,
    AS-SecurityInformation,
    BearerType,
    Cause,
    CompositeAvailableCapacityGroup,
    Correlation-ID,
    COUNTvalue,
    CellReportingIndicator,
    AerialUEsubscriptionInformation,
    CriticalityDiagnostics,
    CRNTI,
    CSGMembershipStatus,
    CSG-Id,
    DeactivationIndication,
    DL-Forwarding,
    DynamicDLTransmissionInformation,
    E-RABsSubjectToDLDiscarding-List,
    E-RABsSubjectToEarlyStatusTransfer-List,
    ECGI,
    E-RAB-ID,
    E-RAB-Level-QoS-Parameters,
    E-RAB-List,
    EUTRANTraceID,
    GlobalENB-ID,
    GTPtunnelEndpoint,
    GUGroupIDList,
    GUMMEI,
    HandoverReportType,
    HandoverRestrictionList,
    Masked-IMEISV.
    InvokeIndication,
    LocationReportingInformation,
    LowerLayerPresenceStatusChange,
    MDT-Configuration,
    ManagementBasedMDTallowed,
    MDTPLMNList,
    Neighbour-Information,
    PCI,
    PDCP-SN,
    PLMN-Identity,
    ReceiveStatusofULPDCPSDUs,
    Registration-Reguest,
    RelativeNarrowbandTxPower,
    RadioResourceStatus,
    RLC-Status,
    RRCConnReestabIndicator,
    RRCConnSetupIndicator,
    UE-RLF-Report-Container,
    UEAppLayerMeasConfig,
```

```
RRC-Context,
ServedCell-Information,
ServedCells.
ShortMAC-I,
SRVCCOperationPossible,
SubscriberProfileIDforRFP.
TargetCellInUTRAN,
TargeteNBtoSource-eNBTransparentContainer,
TimeToWait,
TraceActivation,
TraceDepth,
TransportLayerAddress,
UEAggregateMaximumBitRate,
UE-HistoryInformation,
UE-HistoryInformationFromTheUE,
UE-S1AP-ID,
UESecurityCapabilities,
UEsToBeResetList,
UE-X2AP-ID,
UL-HighInterferenceIndicationInfo,
UL-InterferenceOverloadIndication,
HWLoadIndicator,
S1TNLLoadIndicator,
Measurement-ID,
ReportCharacteristics,
MobilityParametersInformation,
MobilityParametersModificationRange,
ReceiveStatusOfULPDCPSDUsExtended,
COUNTValueExtended,
SubframeAssignment,
ExtendedULInterferenceOverloadInfo,
ExpectedUEBehaviour,
SeNBSecurityKey,
MeNBtoSeNBContainer,
SeNBtoMeNBContainer,
SCGChangeIndication,
CoMPInformation,
ReportingPeriodicityRSRPMR,
RSRPMRList,
UE-RLF-Report-Container-for-extended-bands,
ProSeAuthorized,
CoverageModificationList,
ReportingPeriodicityCSIR,
CSIReportList,
ReceiveStatusOfULPDCPSDUsPDCP-SNlength18.
COUNTvaluePDCP-SNlength18,
LHN-ID,
UE-ContextKeptIndicator,
UE-X2AP-ID-Extension,
SIPTOBearerDeactivationIndication,
TunnelInformation,
V2XServicesAuthorized,
X2BenefitValue,
ResumeID,
```

```
EUTRANCellIdentifier,
MakeBeforeBreakIndicator,
WTID.
WT-UE-XwAP-ID,
UESidelinkAggregateMaximumBitRate,
SqNBSecurityKey,
MeNBtoSqNBContainer,
SqNBtoMeNBContainer,
SplitSRBs,
RRCContainer,
SRBType,
GlobalGNB-ID,
GNB-ID,
SCGConfigurationQuery,
SplitSRB,
NRUeReport,
EN-DC-ResourceConfiguration,
TAC,
NRFregInfo,
NRCGI,
NRPCI,
NRUESecurityCapabilities,
PDCPChangeIndication,
ULConfiguration,
SgNB-UE-X2AP-ID,
SecondaryRATUsageReportList,
ActivationID,
MeNBResourceCoordinationInformation,
SqNBResourceCoordinationInformation,
NR-TxBW,
BroadcastPLMNs-Item,
Additional PLMNs-Item,
RLCMode,
GBR-QosInformation,
DRB-ID,
FiveGS-TAC,
SULInformation,
Packet-LossRate,
ResourceType,
DataTrafficResourceIndication,
SpectrumSharingGroupID,
RRC-Config-Ind,
SGNB-Addition-Trigger-Ind,
UserPlaneTrafficActivityReport,
ERABActivityNotifyItemList,
PDCPSnLength,
Subscription-Based-UE-DifferentiationInfo,
LCID,
DuplicationActivation,
GNBOverloadInformation,
NewDRBIDrequest,
DesiredActNotificationLevel,
LocationInformationSgNB,
LocationInformationSqNBReporting,
```

```
EndcSONConfigurationTransfer,
NRNeighbour-Information,
InterfaceInstanceIndication.
BPLMN-ID-Info-NR,
SNtriggered,
EPCHandoverRestrictionListContainer,
Additional RRMPriority Index,
RequestedFastMCGRecoveryViaSRB3,
AvailableFastMCGRecoveryViaSRB3,
RequestedFastMCGRecoveryViaSRB3Release,
ReleaseFastMCGRecoveryViaSRB3,
FastMCGRecovery,
PartialListIndicator,
MaximumCellListSize,
MessageOversizeNotification,
TNLConfigurationInfo,
TNLA-To-Add-List,
TNLA-To-Update-List,
TNLA-To-Remove-List,
TNLA-Setup-List,
TNLA-Failed-To-Setup-List,
RAN-UE-NGAP-ID,
CHOinformation-REQ,
CHOinformation-ACK,
DAPSRequestInfo,
DAPSResponseInfo,
CandidateCellsToBeCancelledList,
CHO-DC-Indicator,
Ethernet-Type,
NRV2XServicesAuthorized,
NRUESidelinkAggregateMaximumBitRate,
PC5QoSParameters,
TargetCellInNGRAN,
Measurement-ID-ENDC,
Registration-Request-ENDC,
ReportCharacteristics-ENDC,
NRRadioResourceStatus,
TNLCapacityIndicator,
NRCompositeAvailableCapacityGroup,
SSBIndex,
TDDULDLConfigurationCommonNR,
NRCarrierList,
SSB-PositionsInBurst,
NRCellPRACHConfig,
NBIoT-RLF-Report-Container,
PrivacyIndicator,
UERadioCapabilityID,
CSI-RSTransmissionIndication.
IABNodeIndication,
F1CTrafficContainer,
IntendedTDD-DL-ULConfiguration-NR,
UERadioCapability,
SFN-Offset
```

```
FROM X2AP-IEs
    PrivateIE-Container{},
    ProtocolExtensionContainer{}.
    ProtocolIE-Container{},
    ProtocolIE-ContainerList{},
    ProtocolIE-ContainerPair(),
    ProtocolIE-ContainerPairList{},
    ProtocolIE-Single-Container{},
    X2AP-PRIVATE-IES,
    X2AP-PROTOCOL-EXTENSION,
    X2AP-PROTOCOL-IES,
    X2AP-PROTOCOL-IES-PAIR
FROM X2AP-Containers
    id-ABSInformation,
    id-ActivatedCellList,
    id-BearerType,
    id-Cause,
    id-CellInformation,
    id-CellInformation-Item,
    id-CellMeasurementResult,
    id-CellMeasurementResult-NR-ENDC,
    id-CellMeasurementResult-Item,
    id-CellMeasurementResult-NR-ENDC-Item,
    id-CellMeasurementResult-E-UTRA-ENDC,
    id-CellMeasurementResult-E-UTRA-ENDC-Item,
    id-CellToReport,
    id-CellToReport-E-UTRA-ENDC,
    id-CellToReport-NR-ENDC,
    id-CellToReport-Item,
    id-CellToReport-E-UTRA-ENDC-Item,
    id-CellToReport-NR-ENDC-Item,
    id-CompositeAvailableCapacityGroup,
    id-AerialUEsubscriptionInformation,
    id-CriticalityDiagnostics,
    id-DeactivationIndication,
    id-DynamicDLTransmissionInformation,
    id-E-RABs-Admitted-Item,
    id-E-RABs-Admitted-List,
    id-E-RABs-NotAdmitted-List,
    id-E-RABs-SubjectToStatusTransfer-List,
    id-E-RABs-SubjectToStatusTransfer-Item,
    id-E-RABs-ToBeSetup-Item,
    id-GlobalENB-ID,
    id-GUGroupIDList,
    id-GUGroupIDToAddList,
    id-GUGroupIDToDeleteList,
    id-GUMMEI-ID,
    id-Masked-IMEISV,
    id-InvokeIndication,
    id-New-eNB-UE-X2AP-ID,
```

```
id-Old-eNB-UE-X2AP-ID,
id-Registration-Reguest,
id-ReportingPeriodicity,
id-RLC-Status,
id-ServedCells.
id-ServedCellsToActivate,
id-ServedCellsToAdd,
id-ServedCellsToModify.
id-ServedCellsToDelete,
id-SRVCCOperationPossible,
id-TargetCell-ID,
id-TargeteNBtoSource-eNBTransparentContainer,
id-TimeToWait.
id-TraceActivation.
id-UE-ContextInformation,
id-UE-HistoryInformation,
id-UE-X2AP-ID,
id-Measurement-ID,
id-ReportCharacteristics,
id-ENB1-Measurement-ID,
id-ENB2-Measurement-ID,
id-ENB1-Cell-ID,
id-ENB2-Cell-ID,
id-ENB2-Proposed-Mobility-Parameters,
id-ENB1-Mobility-Parameters,
id-ENB2-Mobility-Parameters-Modification-Range,
id-FailureCellPCI,
id-Re-establishmentCellECGI,
id-FailureCellCRNTI,
id-ShortMAC-I,
id-SourceCellECGI.
id-FailureCellECGI,
id-HandoverReportType,
id-UE-RLF-Report-Container,
id-PartialSuccessIndicator,
id-MeasurementInitiationResult-List.
id-MeasurementInitiationResult-Item,
id-MeasurementFailureCause-Item,
id-CompleteFailureCauseInformation-List,
id-CompleteFailureCauseInformation-Item,
id-CSGMembershipStatus,
id-CSG-Id,
id-MDTConfiguration,
id-ManagementBasedMDTallowed,
id-ABS-Status,
id-RRCConnSetupIndicator,
id-RRCConnReestabIndicator,
id-TargetCellInUTRAN,
id-MobilityInformation,
id-SourceCellCRNTI,
id-ManagementBasedMDTPLMNList,
id-ReceiveStatusOfULPDCPSDUsExtended,
id-ULCOUNTValueExtended,
id-DLCOUNTValueExtended,
```

```
id-IntendedULDLConfiguration,
id-ExtendedULInterferenceOverloadInfo.
id-RNL-Header.
id-x2APMessage,
id-UE-HistoryInformationFromTheUE,
id-ExpectedUEBehaviour,
id-MeNB-UE-X2AP-ID,
id-SeNB-UE-X2AP-ID.
id-UE-SecurityCapabilities,
id-SeNBSecurityKey,
id-SeNBUEAggregateMaximumBitRate,
id-ServingPLMN,
id-E-RABs-ToBeAdded-List,
id-E-RABs-ToBeAdded-Item.
id-MeNBtoSeNBContainer,
id-E-RABs-Admitted-ToBeAdded-List,
id-E-RABs-Admitted-ToBeAdded-Item,
id-SeNBtoMeNBContainer,
id-ResponseInformationSeNBReconfComp,
id-UE-ContextInformationSeNBModReg,
id-E-RABs-ToBeAdded-ModRegItem,
id-E-RABs-ToBeModified-ModRegItem,
id-E-RABs-ToBeReleased-ModRegItem,
id-E-RABs-Admitted-ToBeAdded-ModAckList,
id-E-RABs-Admitted-ToBeModified-ModAckList,
id-E-RABs-Admitted-ToBeReleased-ModAckList,
id-E-RABs-Admitted-ToBeAdded-ModAckItem,
id-E-RABs-Admitted-ToBeModified-ModAckItem,
id-E-RABs-Admitted-ToBeReleased-ModAckItem,
id-SCGChangeIndication,
id-E-RABs-ToBeReleased-ModRegd,
id-E-RABs-ToBeReleased-ModRegdItem,
id-E-RABs-ToBeReleased-List-RelReg,
id-E-RABs-ToBeReleased-RelRegItem,
id-E-RABs-ToBeReleased-List-RelConf.
id-E-RABs-ToBeReleased-RelConfItem.
id-E-RABs-SubjectToCounterCheck-List,
id-E-RABs-SubjectToCounterCheckItem,
id-CoMPInformation,
id-ReportingPeriodicityRSRPMR,
id-RSRPMRList,
id-UE-RLF-Report-Container-for-extended-bands,
id-ProSeAuthorized,
id-CoverageModificationList,
id-ReportingPeriodicityCSIR,
id-CSIReportList,
id-ReceiveStatusOfULPDCPSDUsPDCP-SNlength18.
id-ULCOUNTValuePDCP-SNlength18,
id-DLCOUNTValuePDCP-SNlength18,
id-LHN-ID,
id-Correlation-ID,
id-SIPTO-Correlation-ID,
id-UE-ContextReferenceAtSeNB,
id-UE-ContextReferenceAtWT,
```

```
id-UE-ContextKeptIndicator,
id-UEs-ToBeReset.
id-UEs-Admitted-ToBeReset.
id-WT-UE-ContextKeptIndicator,
id-New-eNB-UE-X2AP-ID-Extension.
id-Old-eNB-UE-X2AP-ID-Extension.
id-MeNB-UE-X2AP-ID-Extension,
id-SeNB-UE-X2AP-ID-Extension.
id-SIPTO-BearerDeactivationIndication.
id-Tunnel-Information-for-BBF,
id-SIPTO-L-GW-TransportLayerAddress,
id-GW-TransportLayerAddress,
id-X2RemovalThreshold,
id-CellReportingIndicator,
id-V2XServicesAuthorized,
id-resumeID.
id-UE-ContextInformationRetrieve,
id-E-RABs-ToBeSetupRetrieve-Item,
id-NewEUTRANCellIdentifier,
id-MakeBeforeBreakIndicator,
id-UESidelinkAggregateMaximumBitRate,
id-uL-GTPtunnelEndpoint,
id-SqNBSecurityKey,
id-SqNBUEAggregateMaximumBitRate,
id-E-RABs-ToBeAdded-SqNBAddRegList,
id-MeNBtoSqNBContainer,
id-SqNB-UE-X2AP-ID,
id-RequestedSplitSRBs,
id-E-RABs-ToBeAdded-SqNBAddReg-Item,
id-E-RABs-Admitted-ToBeAdded-SqNBAddRegAckList,
id-SqNBtoMeNBContainer,
id-AdmittedSplitSRBs,
id-E-RABs-Admitted-ToBeAdded-SqNBAddRegAck-Item,
id-ResponseInformationSqNBReconfComp,
id-UE-ContextInformation-SqNBModReg,
id-E-RABs-ToBeAdded-SqNBModReq-Item,
id-E-RABs-ToBeModified-SgNBModReq-Item,
id-E-RABs-ToBeReleased-SgNBModReq-Item,
id-E-RABs-Admitted-ToBeAdded-SqNBModAckList,
id-E-RABs-Admitted-ToBeModified-SqNBModAckList,
id-E-RABs-Admitted-ToBeReleased-SgNBModAckList,
id-E-RABs-Admitted-ToBeAdded-SgNBModAck-Item,
id-E-RABs-Admitted-ToBeModified-SqNBModAck-Item,
id-E-RABs-Admitted-ToBeReleased-SqNBModAck-Item,
id-E-RABs-Admitted-ToBeReleased-SqNBRelRegAckList,
id-E-RABs-Admitted-ToBeReleased-SqNBRelRegAck-Item,
id-E-RABs-ToBeReleased-SqNBModRegdList,
id-E-RABs-ToBeModified-SqNBModRegdList,
id-E-RABs-ToBeReleased-SqNBModRegd-Item,
id-E-RABs-ToBeModified-SqNBModRegd-Item,
id-E-RABs-ToBeReleased-SqNBChaConfList,
id-E-RABs-ToBeReleased-SqNBChaConf-Item,
id-E-RABs-ToBeReleased-SgNBRelReqList,
id-E-RABs-ToBeReleased-SqNBRelReg-Item,
```

```
id-E-RABs-ToBeReleased-SqNBRelConfList,
id-E-RABs-ToBeReleased-SqNBRelConf-Item,
id-E-RABs-ToBeReleased-SqNBRelReadList.
id-E-RABs-ToBeReleased-SqNBRelRegd-Item,
id-E-RABs-SubjectToSqNBCounterCheck-List,
id-E-RABs-SubjectToSqNBCounterCheck-Item,
id-Target-SqNB-ID,
id-RRCContainer.
id-SRBType,
id-HandoverRestrictionList,
id-SCGConfigurationQuery,
id-SplitSRB,
id-NRUeReport,
id-InitiatingNodeType-EndcX2Setup,
id-InitiatingNodeType-EndcConfigUpdate,
id-RespondingNodeType-EndcX2Setup,
id-RespondingNodeType-EndcConfigUpdate,
id-NRUESecurityCapabilities,
id-PDCPChangeIndication,
id-ServedEUTRAcellsENDCX2ManagementList,
id-ServedEUTRAcellsToModifyListENDCConfUpd,
id-ServedEUTRAcellsToDeleteListENDCConfUpd,
id-ServedNRcellsToModifyListENDCConfUpd,
id-ServedNRcellsToDeleteListENDCConfUpd.
id-CellAssistanceInformation,
id-Globalen-qNB-ID,
id-ServedNRcellsENDCX2ManagementList,
id-Old-SqNB-UE-X2AP-ID,
id-UE-ContextReferenceAtSqNB,
id-SecondaryRATUsageReportList,
id-ActivationID,
id-ServedNRCellsToActivate,
id-ActivatedNRCellList,
id-MeNBResourceCoordinationInformation,
id-SqNBResourceCoordinationInformation.
id-UEAppLayerMeasConfig,
id-SelectedPLMN,
id-SubscriberProfileIDforRFP,
id-InitiatingNodeType-EutranrCellResourceCoordination,
id-RespondingNodeType-EutranrCellResourceCoordination,
id-DataTrafficResourceIndication,
id-SpectrumSharingGroupID,
id-ListofEUTRACellsinEUTRACoordinationReg,
id-ListofEUTRACellsinEUTRACoordinationResp,
id-ListofEUTRACellsinNRCoordinationReg,
id-ListofNRCellsinNRCoordinationReg,
id-ListofNRCellsinNRCoordinationResp.
id-RRCConfigIndication,
id-SGNB-Addition-Trigger-Ind,
id-RequestedSplitSRBsrelease,
id-AdmittedSplitSRBsrelease,
id-E-RABs-AdmittedToBeModified-SqNBModConfList,
id-E-RABs-AdmittedToBeModified-SgNBModConf-Item,
id-UEContextLevelUserPlaneActivity,
```

```
id-ERABActivityNotifyItemList,
id-MeNBCell-ID.
id-InitiatingNodeType-EndcX2Removal,
id-RespondingNodeType-EndcX2Removal,
id-uLpDCPSnLength,
id-dL-Forwarding,
id-E-RABs-DataForwardingAddress-List,
id-E-RABs-DataForwardingAddress-Item,
id-Subscription-Based-UE-DifferentiationInfo,
id-RLCMode-transferred,
id-dLPDCPSnLength,
id-secondarysqNBDLGTPTEIDatPDCP,
id-secondarymeNBULGTPTEIDatPDCP,
id-lCID.
id-duplicationActivation,
id-GNBOverloadInformation,
id-new-drb-ID-req,
id-NRNeighbourInfoToModify,
id-DesiredActNotificationLevel,
id-LocationInformationSqNB,
id-LocationInformationSgNBReporting,
id-endcSONConfigurationTransfer,
id-EUTRANTraceID,
id-additionalPLMNs-Item,
id-InterfaceInstanceIndication,
id-BPLMN-ID-Info-NR,
id-SNtriggered,
id-EPCHandoverRestrictionListContainer,
id-ERABs-transferred-to-MeNB,
id-AdditionalRRMPriorityIndex,
id-LowerLayerPresenceStatusChange,
id-FastMCGRecovery-SN-to-MN,
id-FastMCGRecovery-MN-to-SN,
id-RequestedFastMCGRecoveryViaSRB3,
id-AvailableFastMCGRecovervViaSRB3,
id-RequestedFastMCGRecoveryViaSRB3Release,
id-ReleaseFastMCGRecoveryViaSRB3,
id-PartialListIndicator,
id-MaximumCellListSize,
id-MessageOversizeNotification,
id-CellandCapacityAssistInfo,
id-TNLConfigurationInfo,
id-TNLA-To-Add-List,
id-TNLA-To-Update-List,
id-TNLA-To-Remove-List,
id-TNLA-Setup-List,
id-TNLA-Failed-To-Setup-List,
id-UEContextReferenceatSourceNGRAN,
id-CHOinformation-REO,
id-CHOinformation-ACK,
id-DAPSRequestInfo,
id-RequestedTargetCellID,
id-CandidateCellsToBeCancelledList,
id-DAPSResponseInfo,
```

```
id-ProcedureStage,
    id-CHO-DC-Indicator,
    id-Ethernet-Type,
    id-NRV2XServicesAuthorized,
    id-NRUESidelinkAggregateMaximumBitRate,
    id-PC5OoSParameters,
    id-TargetCellInNGRAN,
    id-eNB-Measurement-ID-ENDC,
    id-engNB-Measurement-ID-ENDC,
    id-TDDULDLConfigurationCommonNR,
    id-CarrierList,
    id-ULCarrierList,
    id-SSB-PositionsInBurst,
    id-NRCellPRACHConfig,
    id-NBIoT-RLF-Report-Container,
    id-MDTConfigurationNR,
    id-PrivacyIndicator,
    id-TraceCollectionEntityIPAddress,
    id-UERadioCapabilityID,
    id-CSI-RSTransmissionIndication,
    id-DLCarrierList,
    id-IABNodeIndication,
    id-F1CTrafficContainer,
    id-IntendedTDD-DL-ULConfiguration-NR,
    id-UERadioCapability,
    id-SFN-Offset,
    maxCellineNB,
    maxnoofBearers,
    maxnoofPDCP-SN,
    maxFailedMeasObjects,
    maxnoofCellIDforMDT,
    maxnoofTAforMDT,
    maxCellinengNB,
    maxnoofCellIDforQMC,
    maxnoofTAforOMC,
    maxnoofPLMNforQMC,
    maxnoofProtectedResourcePatterns,
    maxnoNRcellsSpectrumSharingWithE-UTRA,
    maxnoofNrCellBands,
    maxnoofSSBAreas
FROM X2AP-Constants;
-- HANDOVER REQUEST
__ *********************
HandoverRequest ::= SEQUENCE {
                                               {{HandoverRequest-IEs}},
    protocolIEs
                       ProtocolIE-Container
    . . .
```

```
HandoverRequest-IEs X2AP-PROTOCOL-IES ::= {
      ID id-Old-eNB-UE-X2AP-ID
                                                        CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                             PRESENCE mandatory}
      ID id-Cause
                                                        CRITICALITY ignore TYPE Cause
                                                                                                                             PRESENCE mandatory
      ID id-TargetCell-ID
                                                        CRITICALITY reject TYPE ECGI
                                                                                                                             PRESENCE mandatory }
      ID id-GUMMEI-ID
                                                        CRITICALITY reject TYPE GUMMEI
                                                                                                                             PRESENCE mandatory }
                                                                                                                             PRESENCE mandatory }
      ID id-UE-ContextInformation
                                                        CRITICALITY reject TYPE UE-ContextInformation
                                                                                                                             PRESENCE mandatory
      ID id-UE-HistorvInformation
                                                        CRITICALITY ignore TYPE UE-HistoryInformation
      ID id-TraceActivation
                                                        CRITICALITY ignore TYPE TraceActivation
                                                                                                                             PRESENCE optional }
      ID id-SRVCCOperationPossible
                                                        CRITICALITY ignore TYPE SRVCCOperationPossible
                                                                                                                             PRESENCE optional }
      ID id-CSGMembershipStatus
                                                        CRITICALITY reject TYPE CSGMembershipStatus
                                                                                                                             PRESENCE optional }
      ID id-MobilityInformation
                                                        CRITICALITY ignore TYPE MobilityInformation
                                                                                                                             PRESENCE optional }
                                                                                                                             PRESENCE optional }
      ID id-Masked-IMEISV
                                                        CRITICALITY ignore TYPE Masked-IMEISV
                                                                                                                             PRESENCE optional
      ID id-UE-HistoryInformationFromTheUE
                                                        CRITICALITY ignore TYPE UE-HistoryInformationFromTheUE
      ID id-ExpectedUEBehaviour
                                                        CRITICALITY ignore TYPE ExpectedUEBehaviour
                                                                                                                             PRESENCE optional }
      ID id-ProSeAuthorized
                                                        CRITICALITY ignore TYPE ProSeAuthorized
                                                                                                                             PRESENCE optional }
                                                                                                                             PRESENCE optional
      ID id-UE-ContextReferenceAtSeNB
                                                        CRITICALITY ignore TYPE UE-ContextReferenceAtSeNB
      ID id-Old-eNB-UE-X2AP-ID-Extension
                                                        CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                             PRESENCE optional }
      ID id-V2XServicesAuthorized
                                                        CRITICALITY ignore TYPE V2XServicesAuthorized
                                                                                                                             PRESENCE optional }
                                                                                                                             PRESENCE optional }
      ID id-UE-ContextReferenceAtWT
                                                        CRITICALITY ignore TYPE UE-ContextReferenceAtWT
                                                                                                                                PRESENCE optional } |
      ID id-NRUESecurityCapabilities
                                                             CRITICALITY ignore TYPE NRUESecurityCapabilities
      ID id-UE-ContextReferenceAtSqNB
                                                        CRITICALITY ignore TYPE UE-ContextReferenceAtSqNB
                                                                                                                             PRESENCE optional }
                                                        CRITICALITY ignore TYPE AerialUEsubscriptionInformation
                                                                                                                             PRESENCE optional }
      ID id-AerialUEsubscriptionInformation
      ID id-Subscription-Based-UE-DifferentiationInfo
                                                        CRITICALITY ignore TYPE Subscription-Based-UE-DifferentiationInfo
                                                                                                                             PRESENCE optional }
      ID id-CHOinformation-REO
                                                        CRITICALITY ignore TYPE CHOinformation-REO
                                                                                                                             PRESENCE optional }
      ID id-NRV2XServicesAuthorized
                                                        CRITICALITY ignore TYPE NRV2XServicesAuthorized
                                                                                                                             PRESENCE optional }
      ID id-PC5QoSParameters
                                                        CRITICALITY ignore TYPE PC50oSParameters
                                                                                                                              PRESENCE optional |
     ID id-IABNodeIndication
                                                        CRITICALITY reject TYPE IABNodeIndication
                                                                                                                             PRESENCE optional },
UE-ContextInformation ::= SEOUENCE {
    mME-UE-S1AP-ID
                                        UE-S1AP-ID,
    uESecurityCapabilities
                                        UESecurityCapabilities,
    aS-SecurityInformation
                                        AS-SecurityInformation,
    uEaggregateMaximumBitRate
                                        UEAggregateMaximumBitRate,
    subscriberProfileIDforRFP
                                        SubscriberProfileIDforRFP
                                                                        OPTIONAL,
    e-RABs-ToBeSetup-List
                                        E-RABs-ToBeSetup-List,
    rRC-Context
                                        RRC-Context,
    handoverRestrictionList
                                        HandoverRestrictionList
                                                                    OPTIONAL,
    locationReportingInformation
                                        LocationReportingInformation
                                                                        OPTIONAL,
                                        ProtocolExtensionContainer { {UE-ContextInformation-ExtIEs} } OPTIONAL,
    iE-Extensions
UE-ContextInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
 ID id-ManagementBasedMDTallowed
                                            CRITICALITY ignore EXTENSION ManagementBasedMDTallowed
                                                                                                                 PRESENCE optional
  ID id-ManagementBasedMDTPLMNList
                                            CRITICALITY ignore EXTENSION MDTPLMNList
                                                                                                                 PRESENCE optional
 ID id-UESidelinkAggregateMaximumBitRate
                                            CRITICALITY ignore EXTENSION UESidelinkAggregateMaximumBitRate
                                                                                                                 PRESENCE optional
  ID id-EPCHandoverRestrictionListContainer CRITICALITY ignore EXTENSION EPCHandoverRestrictionListContainer
                                                                                                                 PRESENCE optional }
                                            CRITICALITY ignore EXTENSION Additional RRMPriorityIndex
                                                                                                                 PRESENCE optional }
  ID id-AdditionalRRMPriorityIndex
  ID id-NRUESidelinkAggregateMaximumBitRate CRITICALITY ignore EXTENSION NRUESidelinkAggregateMaximumBitRate
                                                                                                                 PRESENCE optional }
 ID id-UERadioCapabilityID
                                            CRITICALITY reject EXTENSION UERadioCapabilityID
                                                                                                                 PRESENCE optional },
```

```
E-RABs-ToBeSetup-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeSetup-ItemIEs} }
E-RABs-ToBeSetup-ItemIEs
                          X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeSetup-Item
                                 CRITICALITY ignore
                                                        TYPE E-RABs-ToBeSetup-Item PRESENCE mandatory },
    . . .
E-RABs-ToBeSetup-Item ::= SEQUENCE {
   e-RAB-ID
                             E-RAB-ID.
   e-RAB-Level-QoS-Parameters E-RAB-Level-QoS-Parameters,
                                 DL-Forwarding
                                                                                             OPTIONAL,
   dL-Forwarding
   uL-GTPtunnelEndpoint
                                 GTPtunnelEndpoint,
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-ToBeSetup-ItemExtIEs} } OPTIONAL,
E-RABs-ToBeSetup-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-BearerType
                       CRITICALITY reject EXTENSION BearerType
                                                                        PRESENCE optional | |
     PRESENCE optional }
    { ID id-Ethernet-Type CRITICALITY ignore EXTENSION Ethernet-Type
                                                                        PRESENCE optional },
    . . .
MobilityInformation ::= BIT STRING (SIZE(32))
UE-ContextReferenceAtSeNB ::= SEQUENCE {
    source-GlobalSeNB-ID
                              GlobalENB-ID,
   seNB-UE-X2AP-ID
                              UE-X2AP-ID,
   seNB-UE-X2AP-ID-Extension UE-X2AP-ID-Extension,
   iE-Extensions
                              ProtocolExtensionContainer { {UE-ContextReferenceAtSeNB-ItemExtIEs} } OPTIONAL,
UE-ContextReferenceAtSeNB-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::=
UE-ContextReferenceAtWT ::= SEQUENCE {
   wTID
                          WTID,
   wT-UE-XwAP-ID
                          WT-UE-XwAP-ID,
                          ProtocolExtensionContainer { {UE-ContextReferenceAtWT-ItemExtIEs} } OPTIONAL,
   iE-Extensions
UE-ContextReferenceAtWT-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UE-ContextReferenceAtSgNB ::= SEQUENCE {
    source-GlobalSgNB-ID
                                  GlobalGNB-ID,
    sgNB-UE-X2AP-ID
                              SgNB-UE-X2AP-ID,
   iE-Extensions
                              ProtocolExtensionContainer { {UE-ContextReferenceAtSqNB-ItemExtIEs} } OPTIONAL,
```

```
UE-ContextReferenceAtSqNB-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- HANDOVER REQUEST ACKNOWLEDGE
__ *********************
HandoverRequestAcknowledge ::= SEQUENCE {
   protocolIEs
                   ProtocolIE-Container
                                           {{HandoverRequestAcknowledge-IEs}},
HandoverRequestAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                                       CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                           PRESENCE mandatory }
     ID id-New-eNB-UE-X2AP-ID
                                                       CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                           PRESENCE mandatory }
     ID id-E-RABs-Admitted-List
                                                       CRITICALITY ignore TYPE E-RABs-Admitted-List
                                                                                                                           PRESENCE mandatory }
     ID id-E-RABs-NotAdmitted-List
                                                       CRITICALITY ignore TYPE E-RAB-List
                                                                                                                           PRESENCE optional }
                                                      CRITICALITY ignore TYPE TargeteNBtoSource-eNBTransparentContainer
                                                                                                                           PRESENCE mandatory
     ID id-TargeteNBtoSource-eNBTransparentContainer
                                                       CRITICALITY ignore TYPE CriticalityDiagnostics
     ID id-CriticalityDiagnostics
                                                                                                                           PRESENCE optional }
     ID id-UE-ContextKeptIndicator
                                                       CRITICALITY ignore TYPE UE-ContextKeptIndicator
                                                                                                                           PRESENCE optional }
     ID id-SeNB-UE-X2AP-ID-Extension
                                                       CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                           PRESENCE optional } --
The id-SeNB-UE-X2AP-ID-Extension shall not be sent and shall be ignored, if received .--
                                                       CRITICALITY ignore TYPE UE-X2AP-ID-Extension
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                                                                                                           PRESENCE optional }
                                                                                                                           PRESENCE optional }
     ID id-New-eNB-UE-X2AP-ID-Extension
                                                       CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                           PRESENCE optional }
     ID id-WT-UE-ContextKeptIndicator
                                                      CRITICALITY ignore TYPE UE-ContextKeptIndicator
     ID id-ERABs-transferred-to-MeNB
                                                       CRITICALITY ignore TYPE E-RAB-List
                                                                                                                           PRESENCE optional }
     ID id-CHOinformation-ACK
                                                      CRITICALITY ignore TYPE CHOinformation-ACK
    PRESENCE optional },
E-RABs-Admitted-List
                           ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ItemIEs} }
E-RABs-Admitted-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-Admitted-Item
                                CRITICALITY ignore TYPE E-RABs-Admitted-Item PRESENCE mandatory
E-RABs-Admitted-Item ::= SEQUENCE {
    e-RAB-ID
                               E-RAB-ID,
   uL-GTP-TunnelEndpoint
                                   GTPtunnelEndpoint
                                                                                                 OPTIONAL,
                                   GTPtunnelEndpoint
   dL-GTP-TunnelEndpoint
                                                                                                 OPTIONAL,
   iE-Extensions
                                   ProtocolExtensionContainer { {E-RABs-Admitted-Item-ExtIEs} }
                                                                                                 OPTIONAL,
E-RABs-Admitted-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    { ID id-DAPSResponseInfo
                                          CRITICALITY reject EXTENSION DAPSResponseInfo
                                                                                                                           PRESENCE optional },
```

```
-- HANDOVER PREPARATION FAILURE
__ ******************
HandoverPreparationFailure ::= SEOUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        {{HandoverPreparationFailure-IEs}},
HandoverPreparationFailure-IES X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                        CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                        PRESENCE mandatory
     ID id-Cause
                                        CRITICALITY ignore TYPE Cause
                                                                                        PRESENCE mandatory
     ID id-CriticalityDiagnostics
                                        CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                        PRESENCE optional }
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                                                                        PRESENCE optional
                                        CRITICALITY ignore TYPE UE-X2AP-ID-Extension
     ID id-RequestedTargetCellID
                                        CRITICALITY reject TYPE ECGI
                                                                                        PRESENCE optional ),
    ****************
-- HANDOVER REPORT
    ************
HandoverReport ::= SEQUENCE {
                                        {{HandoverReport-IEs}},
   protocolIEs
                  ProtocolIE-Container
HandoverReport-IEs X2AP-PROTOCOL-IES ::= {
     ID id-HandoverReportType
                                                   CRITICALITY ignore TYPE HandoverReportType
                                                                                                                  PRESENCE mandatory }
     ID id-Cause
                                                   CRITICALITY ignore TYPE Cause
                                                                                                                  PRESENCE mandatory
     ID id-SourceCellECGI
                                                   CRITICALITY ignore TYPE ECGI
                                                                                                                  PRESENCE mandatory
     ID id-FailureCellECGI
                                                   CRITICALITY ignore TYPE ECGI
                                                                                                                  PRESENCE mandatory }
     ID id-Re-establishmentCellECGI
                                                   CRITICALITY ignore TYPE ECGI
                                                                                                                  PRESENCE conditional } -
- The IE shall be present if the Handover Report Type IE is set to "HO to Wrong Cell" -- |
   { ID id-TargetCellInUTRAN
                                                   CRITICALITY ignore TYPE TargetCellInUTRAN
                                                                                                                  PRESENCE conditional } -
- The IE shall be present if the Handover Report Type IE is set to "InterRAT ping-pong" -- |
     ID id-SourceCellCRNTI
                                                   CRITICALITY ignore TYPE CRNTI
                                                                                                                  PRESENCE optional }
     ID id-MobilityInformation
                                                   CRITICALITY ignore TYPE MobilityInformation
                                                                                                                  PRESENCE optional }
     ID id-UE-RLF-Report-Container
                                                   CRITICALITY ignore TYPE UE-RLF-Report-Container
                                                                                                                  PRESENCE optional }
     ID id-UE-RLF-Report-Container-for-extended-bands CRITICALITY ignore TYPE UE-RLF-Report-Container-for-extended-bands PRESENCE optional
     ID id-TargetCellInNGRAN
                                                   CRITICALITY ignore TYPE TargetCellInNGRAN
                                                                                                                  PRESENCE conditional } -
- The IE shall be present if the Handover Report Type IE is set to "interSystemPingpong" --,
     ****************
-- EARLY STATUS TRANSFER
```

. . .

```
__ ********************
EarlyStatusTransfer ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                             {{ EarlyStatusTransfer-IEs}},
   . . .
EarlyStatusTransfer-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                             CRITICALITY reject
                                                                   TYPE UE-X2AP-ID
                                                                                                         PRESENCE mandatory
                                                                                                         PRESENCE mandatory
     ID id-New-eNB-UE-X2AP-ID
                                             CRITICALITY reject
                                                                   TYPE UE-X2AP-ID
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                                                                                         PRESENCE optional }
                                             CRITICALITY reject
                                                                   TYPE UE-X2AP-ID-Extension
     ID id-New-eNB-UE-X2AP-ID-Extension
                                             CRITICALITY reject
                                                                   TYPE UE-X2AP-ID-Extension
                                                                                                         PRESENCE optional }
     ID id-ProcedureStage
                                             CRITICALITY reject
                                                                   TYPE ProcedureStageChoice
                                                                                                         PRESENCE mandatory },
ProcedureStageChoice ::= CHOICE {
   first-dl-count
                                     FirstDLCount,
   dl-discarding
                                     DLDiscarding,
                                     ProtocolIE-Single-Container { {ProcedureStageChoice-ExtIEs} }
   choice-extension
ProcedureStageChoice-ExtIEs X2AP-PROTOCOL-IES ::= {
   . . .
FirstDLCount ::= SEQUENCE {
   e-RABsSubjectToEarlyStatusTransfer
                                         E-RABsSubjectToEarlyStatusTransfer-List,
                                             ProtocolExtensionContainer { {FirstDLCount-ExtIEs} } OPTIONAL,
   iE-Extension
FirstDLCount-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
DLDiscarding ::= SEQUENCE {
   e-RABsSubjectToDLDiscarding-List
                                             E-RABsSubjectToDLDiscarding-List,
   iE-Extension
                                             ProtocolExtensionContainer { {DLDiscarding-ExtIEs} } OPTIONAL,
   . . .
DLDiscarding-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
__ ****************************
-- SN STATUS TRANSFER
__ *********************
SNStatusTransfer ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                         {{SNStatusTransfer-IEs}},
```

```
SNStatusTransfer-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                                   CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                  PRESENCE mandatory
     ID id-New-eNB-UE-X2AP-ID
                                                   CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                  PRESENCE mandatory }
     ID id-E-RABs-SubjectToStatusTransfer-List
                                                   CRITICALITY ignore TYPE E-RABs-SubjectToStatusTransfer-List
                                                                                                                  PRESENCE mandatory |
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                                   CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                  PRESENCE optional }
     ID id-New-eNB-UE-X2AP-ID-Extension
                                                   CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                  PRESENCE optional }
    { ID id-SqNB-UE-X2AP-ID
                                                   CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                                                     PRESENCE optional },
    . . .
E-RABs-SubjectToStatusTransfer-List ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-SubjectToStatusTransfer-
ItemIEs} }
E-RABs-SubjectToStatusTransfer-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-SubjectToStatusTransfer-Item CRITICALITY ignore TYPE E-RABs-SubjectToStatusTransfer-Item PRESENCE mandatory
E-RABs-SubjectToStatusTransfer-Item ::= SEQUENCE {
    e-RAB-TD
                                           E-RAB-ID,
    receiveStatusofULPDCPSDUs
                                           ReceiveStatusofULPDCPSDUs
                                                                               OPTIONAL,
    uL-COUNTvalue
                                   COUNTvalue,
    dL-COUNTvalue
                                   COUNTvalue.
                                           ProtocolExtensionContainer { {E-RABs-SubjectToStatusTransfer-ItemExtIEs} } OPTIONAL,
    iE-Extensions
E-RABs-SubjectToStatusTransfer-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-ReceiveStatusOfULPDCPSDUsExtended
                                                       CRITICALITY ignore EXTENSION ReceiveStatusOfULPDCPSDUsExtended
                                                                                                                              PRESENCE optional }
     ID id-ULCOUNTValueExtended
                                                       CRITICALITY ignore EXTENSION COUNTValueExtended
                                                                                                                              PRESENCE optional }
     ID id-DLCOUNTValueExtended
                                                       CRITICALITY ignore EXTENSION COUNTValueExtended
                                                                                                                              PRESENCE optional }
                                                       CRITICALITY ignore EXTENSION ReceiveStatusOfULPDCPSDUsPDCP-SNlength18 PRESENCE optional
     ID id-ReceiveStatusOfULPDCPSDUsPDCP-SNlength18
     ID id-ULCOUNTValuePDCP-SNlength18
                                                       CRITICALITY ignore EXTENSION COUNTvaluePDCP-SNlength18
                                                                                                                              PRESENCE optional }
     ID id-DLCOUNTValuePDCP-SNlength18
                                                       CRITICALITY ignore EXTENSION COUNTvaluePDCP-SNlength18
                                                                                                                              PRESENCE optional },
   *****************
-- UE CONTEXT RELEASE
UEContextRelease ::= SEQUENCE {
    protocolIEs
                   ProtocolIE-Container
                                           {{UEContextRelease-IEs}},
UEContextRelease-IES X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                               CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                            PRESENCE mandatory
     ID id-New-eNB-UE-X2AP-ID
                                               CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                            PRESENCE mandatory }
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                               CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                            PRESENCE optional |
```

\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*

```
ID id-New-eNB-UE-X2AP-ID-Extension
                                                                                                PRESENCE optional } |
                                          CRITICALITY reject TYPE UE-X2AP-ID-Extension
     PRESENCE optional)
     ID id-SqNB-UE-X2AP-ID
                                          CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                                PRESENCE optional },
  *****************
-- HANDOVER CANCEL
HandoverCancel ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                       {{HandoverCancel-IEs}},
HandoverCancel-IES X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                          CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                   PRESENCE mandatory } |
     ID id-New-eNB-UE-X2AP-ID
                                          CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                   PRESENCE optional}
                                          CRITICALITY ignore TYPE Cause
                                                                                                   PRESENCE mandatory }
     ID id-Cause
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                                                                                      PRESENCE optional }
                                              CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                              CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                      PRESENCE optional }
     ID id-New-eNB-UE-X2AP-ID-Extension
     ID id-CandidateCellsToBeCancelledList
                                          CRITICALITY reject TYPE CandidateCellsToBeCancelledList
                                                                                                      PRESENCE optional },
-- HANDOVER SUCCESS
__ ********************************
HandoverSuccess ::= SEQUENCE {
                 ProtocolIE-Container
                                       {{HandoverSuccess-IEs}},
   protocolIEs
HandoverSuccess-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                          CRITICALITY reject TYPE UE-X2AP-ID
                                                                                      PRESENCE mandatory
                                                                                      PRESENCE mandatory}
     ID id-New-eNB-UE-X2AP-ID
                                          CRITICALITY reject TYPE UE-X2AP-ID
                                                                                      PRESENCE optional }
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                          CRITICALITY ignore TYPE UE-X2AP-ID-Extension
     ID id-New-eNB-UE-X2AP-ID-Extension
                                          CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                      PRESENCE optional }
                                                                                      PRESENCE mandatory },
    ID id-TargetCell-ID
                                          CRITICALITY reject TYPE ECGI
    ****************
-- CONDITIONAL HANDOVER CANCEL
```

```
ConditionalHandoverCancel ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                         {{ConditionalHandoverCancel-IEs}},
ConditionalHandoverCancel-IES X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                             CRITICALITY reject TYPE UE-X2AP-ID
                                                                                             PRESENCE mandatory |
     ID id-New-eNB-UE-X2AP-ID
                                             CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                             PRESENCE optional }
                                             CRITICALITY ignore TYPE Cause
                                                                                             PRESENCE mandatory
     ID id-Cause
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                             CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                             PRESENCE optional}
                                                                                             PRESENCE optional }
     ID id-New-eNB-UE-X2AP-ID-Extension
                                             CRITICALITY ignore TYPE UE-X2AP-ID-Extension
     ID id-CandidateCellsToBeCancelledList
                                             CRITICALITY reject TYPE CandidateCellsToBeCancelledList
                                                                                                          PRESENCE optional },
  ERROR INDICATION
ErrorIndication ::= SEQUENCE {
                                         {{ErrorIndication-IEs}},
   protocolIEs
                  ProtocolIE-Container
ErrorIndication-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                                                                                  PRESENCE optional }
                                             CRITICALITY ignore TYPE UE-X2AP-ID
     ID id-New-eNB-UE-X2AP-ID
                                                                                                  PRESENCE optional }
                                             CRITICALITY ignore TYPE UE-X2AP-ID
     ID id-Cause
                                             CRITICALITY ignore TYPE Cause
                                                                                                  PRESENCE optional
     ID id-CriticalityDiagnostics
                                             CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                  PRESENCE optional }
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                             CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                  PRESENCE optional }
     ID id-New-eNB-UE-X2AP-ID-Extension
                                             CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                  PRESENCE optional }
     ID id-Old-SaNB-UE-X2AP-ID
                                             CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                                  PRESENCE optional }
    ID id-InterfaceInstanceIndication
                                             CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                  PRESENCE optional },
  *****************
-- RESET REQUEST
ResetRequest ::= SEQUENCE {
   protocolIEs
                   ProtocolIE-Container
                                         {{ResetRequest-IEs}},
ResetRequest-IEs X2AP-PROTOCOL-IES ::= {
    { ID id-Cause
                                         CRITICALITY ignore TYPE Cause
                                                                                            PRESENCE mandatory |
    { ID id-InterfaceInstanceIndication
                                         CRITICALITY reject TYPE InterfaceInstanceIndication PRESENCE optional },
```

```
-- RESET RESPONSE
ResetResponse ::= SEQUENCE {
                                             {{ResetResponse-IEs}},
    protocolIEs
                    ProtocolIE-Container
ResetResponse-IEs X2AP-PROTOCOL-IES ::= {
      ID id-CriticalityDiagnostics
                                            CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                   PRESENCE optional } |
    { ID id-InterfaceInstanceIndication
                                            CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                      PRESENCE optional },
-- X2 SETUP REQUEST
X2SetupRequest ::= SEQUENCE
                                             {{X2SetupRequest-IEs}},
    protocolIEs
                    ProtocolIE-Container
X2SetupRequest-IEs X2AP-PROTOCOL-IES ::= {
      ID id-GlobalENB-ID CRITICALITY reject TYPE GlobalENB-ID
                                                                                     PRESENCE mandatory }
                              CRITICALITY reject TYPE ServedCells CRITICALITY reject TYPE GUGroupIDList
      ID id-ServedCells
                                                                                     PRESENCE mandatory }
                                                                                     PRESENCE optional } |
      ID id-GUGroupIDList
      ID id-LHN-ID
                                    CRITICALITY ignore TYPE LHN-ID
                                                                                     PRESENCE optional },
-- X2 SETUP RESPONSE
X2SetupResponse ::= SEQUENCE
    protocolIEs
                    ProtocolIE-Container
                                            {{X2SetupResponse-IEs}},
X2SetupResponse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-GlobalENB-ID
                                        CRITICALITY reject TYPE GlobalENB-ID
                                                                                         PRESENCE mandatory }
    { ID id-ServedCells
                                        CRITICALITY reject TYPE ServedCells
                                                                                         PRESENCE mandatory }
```

```
ID id-GUGroupIDList
                                                                            PRESENCE optional }
                                  CRITICALITY reject TYPE GUGroupIDList
     ID id-CriticalityDiagnostics
                                  CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional }
     ID id-LHN-ID
                                  CRITICALITY ignore TYPE LHN-ID
                                                                            PRESENCE optional },
-- X2 SETUP FAILURE
__ **********************
X2SetupFailure ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                    {{X2SetupFailure-IEs}},
X2SetupFailure-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Cause
                             CRITICALITY ignore
                                                TYPE Cause
                                                                                    PRESENCE mandatory }
     ID id-TimeToWait
                                                                                    PRESENCE optional |
                           CRITICALITY ignore TYPE TimeToWait
   ID id-CriticalityDiagnostics CRITICALITY ignore
                                                                                    PRESENCE optional },
                                                   TYPE CriticalityDiagnostics
-- LOAD INFORMATION
__ ********************************
LoadInformation ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                     {{LoadInformation-IEs}},
LoadInformation-IES X2AP-PROTOCOL-IES ::= {
   { ID id-CellInformation
                                  CRITICALITY ignore TYPE CellInformation-List
                                                                               PRESENCE mandatory },
   . . .
CellInformation-List ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ProtocolIE-Single-Container { {CellInformation-ItemIEs} }
CellInformation-ItemIEs X2AP-PROTOCOL-IES ::= {
   CellInformation-Item ::= SEQUENCE {
   cell-ID
                               ECGI.
   ul-InterferenceOverloadIndication
                                     UL-InterferenceOverloadIndication
                                                                                            OPTIONAL,
```

```
ul-HighInterferenceIndicationInfo
                                          UL-HighInterferenceIndicationInfo
                                                                                                       OPTIONAL,
    relativeNarrowbandTxPower
                                          RelativeNarrowbandTxPower
                                                                                                       OPTIONAL.
   iE-Extensions
                                          ProtocolExtensionContainer { {CellInformation-Item-ExtIEs} }
                                                                                                      OPTIONAL.
CellInformation-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::=
 ID id-ABSInformation
                                          CRITICALITY ignore EXTENSION ABSInformation
                                                                                                         PRESENCE optional
 TD id-InvokeIndication
                                          CRITICALITY ignore EXTENSION InvokeIndication
                                                                                                         PRESENCE optional
 ID id-IntendedULDLConfiguration
                                          CRITICALITY ignore EXTENSION SubframeAssignment
                                                                                                         PRESENCE optional
 ID id-ExtendedULInterferenceOverloadInfo CRITICALITY ignore EXTENSION ExtendedULInterferenceOverloadInfo PRESENCE optional
 ID id-CoMPInformation
                                          CRITICALITY ignore EXTENSION Complinformation
                                                                                                         PRESENCE optional }
 ID id-DynamicDLTransmissionInformation
                                          CRITICALITY ignore EXTENSION DynamicDLTransmissionInformation
                                                                                                         PRESENCE optional },
     ENB CONFIGURATION UPDATE
      *****************
ENBConfigurationUpdate ::= SEQUENCE {
   protocolIEs
                   ProtocolIE-Container
                                          {{ENBConfigurationUpdate-IEs}},
ENBConfigurationUpdate-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ServedCellsToAdd
                                                                                            PRESENCE optional }
                                      CRITICALITY reject TYPE ServedCells
     ID id-ServedCellsToModify
                                      CRITICALITY reject TYPE ServedCellsToModify
                                                                                            PRESENCE optional }
     ID id-ServedCellsToDelete
                                      CRITICALITY reject TYPE Old-ECGIs
                                                                                            PRESENCE optional }
     ID id-GUGroupIDToAddList
                                      CRITICALITY reject TYPE GUGroupIDList
                                                                                            PRESENCE optional }
     ID id-GUGroupIDToDeleteList
                                      CRITICALITY reject TYPE GUGroupIDList
                                                                                            PRESENCE optional }
     ID id-CoverageModificationList
                                      CRITICALITY reject TYPE CoverageModificationList
                                                                                            PRESENCE optional },
ServedCellsToModify::= SEQUENCE (SIZE (1..maxCellineNB)) OF ServedCellsToModify-Item
ServedCellsToModify-Item::= SEQUENCE
   old-ecgi
                                  ECGI,
    servedCellInfo
                                  ServedCell-Information,
   neighbour-Info
                                  Neighbour-Information
                                                                 OPTIONAL,
                                  ProtocolExtensionContainer { {ServedCellsToModify-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
ServedCellsToModify-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-DeactivationIndication
                                          CRITICALITY ignore EXTENSION DeactivationIndication
                                                                                                      PRESENCE optional } |
     ID id-NRNeighbourInfoToModify
                                                                                                      PRESENCE optional },
                                          CRITICALITY ignore EXTENSION NRNeighbour-Information
```

```
Old-ECGIs::= SEQUENCE (SIZE (1..maxCellineNB)) OF ECGI
__ **********************
-- ENB CONFIGURATION UPDATE ACKNOWLEDGE
  *****************
ENBConfigurationUpdateAcknowledge ::= SEQUENCE {
                ProtocolIE-Container {{ENBConfigurationUpdateAcknowledge-IEs}},
   protocolIEs
ENBConfigurationUpdateAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
   { ID id-CriticalityDiagnostics
                                CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                               PRESENCE optional },
  -- ENB CONFIGURATION UPDATE FAIURE
         ENBConfigurationUpdateFailure ::= SEQUENCE {
   protocolIEs
                ProtocolIE-Container
                                    {{ENBConfigurationUpdateFailure-IEs}},
ENBConfigurationUpdateFailure-IEs X2AP-PROTOCOL-IES ::= {
    ID id-Cause
                                CRITICALITY ignore TYPE Cause
                                                                           PRESENCE mandatory }
    ID id-TimeToWait
                                CRITICALITY ignore TYPE TimeToWait
                                                                           PRESENCE optional } |
   { ID id-CriticalityDiagnostics
                                CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                           PRESENCE optional },
   . . .
  *****************
-- RESOURCE STATUS REQUEST
  ********************
ResourceStatusRequest ::= SEQUENCE {
   protocolIEs ProtocolIE-Container
                                    {{ResourceStatusRequest-IEs}},
   . . .
ResourceStatusRequest-IEs X2AP-PROTOCOL-IES ::= {
    ID id-ENB1-Measurement-ID
                           CRITICALITY reject TYPE Measurement-ID
                                                                               PRESENCE mandatory }
                           CRITICALITY ignore TYPE Measurement-ID
    ID id-ENB2-Measurement-ID
                                                                               PRESENCE conditional \ | -- The IE shall be present if
the Registration Request IE is set to "Stop", "Partial stop" or to "Add"--
   { ID id-Registration-Request
                            CRITICALITY reject TYPE Registration-Request
                                                                               PRESENCE mandatory } |
```

```
ID id-ReportCharacteristics
                                     CRITICALITY reject TYPE ReportCharacteristics
                                                                                         PRESENCE optional }
     ID id-CellToReport
                                     CRITICALITY ignore TYPE CellToReport-List
                                                                                         PRESENCE mandatory
     ID id-ReportingPeriodicity
                                     CRITICALITY ignore TYPE ReportingPeriodicity
                                                                                         PRESENCE optional }
     ID id-PartialSuccessIndicator
                                     CRITICALITY ignore TYPE PartialSuccessIndicator
                                                                                         PRESENCE optional }
     ID id-ReportingPeriodicityRSRPMR CRITICALITY ignore TYPE ReportingPeriodicityRSRPMR
                                                                                         PRESENCE optional }
                                     CRITICALITY ignore TYPE ReportingPeriodicityCSIR
     ID id-ReportingPeriodicityCSIR
                                                                                         PRESENCE optional },
                     ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ProtocolIE-Single-Container { {CellToReport-ItemIEs} }
CellToReport-List
CellToReport-ItemIEs X2AP-PROTOCOL-IES ::= {
    CellToReport-Item ::= SEQUENCE {
   cell-ID
                                        ECGI,
                                        ProtocolExtensionContainer { {CellToReport-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
CellToReport-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ReportingPeriodicity ::= ENUMERATED {
   one-thousand-ms,
   two-thousand-ms,
   five-thousand-ms.
   ten-thousand-ms,
PartialSuccessIndicator ::= ENUMERATED {
   partial-success-allowed,
-- RESOURCE STATUS RESPONSE
  ***********************
ResourceStatusResponse ::= SEQUENCE
   protocolIEs
                  ProtocolIE-Container
                                        {{ResourceStatusResponse-IEs}},
ResourceStatusResponse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ENB1-Measurement-ID
                                            CRITICALITY reject TYPE Measurement-ID
                                                                                                   PRESENCE mandatory } |
    ID id-ENB2-Measurement-ID
                                            CRITICALITY reject TYPE Measurement-ID
                                                                                                   PRESENCE mandatory |
```

```
CRITICALITY ignore TYPE CriticalityDiagnostics
     ID id-CriticalityDiagnostics
                                                                                            PRESENCE optional } |
     ID id-MeasurementInitiationResult-List
                                         CRITICALITY ignore TYPE MeasurementInitiationResult-List PRESENCE optional },
MeasurementInitiationResult-List ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ProtocolIE-Single-Container { {MeasurementInitiationResult-ItemIEs} }
MeasurementInitiationResult-ItemIEs X2AP-PROTOCOL-IES ::= {
   MeasurementInitiationResult-Item ::= SEQUENCE {
   cell-ID
                                             ECGI.
   measurementFailureCause-List
                                             MeasurementFailureCause-List
   iE-Extensions
                                             ProtocolExtensionContainer { {MeasurementInitiationResult-Item-ExtIEs} } OPTIONAL,
MeasurementInitiationResult-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
MeasurementFailureCause-List ::= SEQUENCE (SIZE (1..maxFailedMeasObjects)) OF ProtocolIE-Single-Container { {MeasurementFailureCause-ItemIEs} }
MeasurementFailureCause-ItemIEs X2AP-PROTOCOL-IES ::= {
   PRESENCE mandatory
MeasurementFailureCause-Item ::= SEQUENCE {
   measurementFailedReportCharacteristics
                                             ReportCharacteristics,
   cause
   iE-Extensions
                                             ProtocolExtensionContainer { {MeasurementFailureCause-Item-ExtIEs} } OPTIONAL,
MeasurementFailureCause-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- RESOURCE STATUS FAILURE
  ***********************
ResourceStatusFailure ::= SEQUENCE
   protocolIEs
                 ProtocolIE-Container
                                      {{ResourceStatusFailure-IEs}},
ResourceStatusFailure-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ENB1-Measurement-ID
                                             CRITICALITY reject TYPE Measurement-ID
                                                                                                   PRESENCE mandatory}
   { ID id-ENB2-Measurement-ID
                                             CRITICALITY reject TYPE Measurement-ID
                                                                                                   PRESENCE mandatory |
```

```
ID id-Cause
                                          CRITICALITY ignore TYPE Cause
                                                                                             PRESENCE mandatory}
    ID id-CriticalityDiagnostics
                                          CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                             PRESENCE optional }
    ID id-CompleteFailureCauseInformation-List
                                          CRITICALITY ignore TYPE CompleteFailureCauseInformation-List PRESENCE optional },
CompleteFailureCauseInformation-List ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ProtocolIE-Single-Container { {CompleteFailureCauseInformation-
ItemIEs} }
CompleteFailureCauseInformation-ItemIEs X2AP-PROTOCOL-IES ::= {
   CompleteFailureCauseInformation-Item ::= SEQUENCE {
   cell-ID
   measurementFailureCause-List
                                          MeasurementFailureCause-List,
                                          ProtocolExtensionContainer { {CompleteFailureCauseInformation-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
CompleteFailureCauseInformation-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::=
   ***************
-- RESOURCE STATUS UPDATE
__ *********************
ResourceStatusUpdate ::= SEQUENCE {
                ProtocolIE-Container
                                   {{ResourceStatusUpdate-IEs}},
   protocolIEs
   . . .
ResourceStatusUpdate-IEs X2AP-PROTOCOL-IES ::= {
    ID id-ENB1-Measurement-ID
                            CRITICALITY reject TYPE Measurement-ID
                                                                          PRESENCE mandatory}
    ID id-ENB2-Measurement-ID
                            CRITICALITY reject TYPE Measurement-ID
                                                                          PRESENCE mandatory
    PRESENCE mandatory },
CellMeasurementResult-List ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ProtocolIE-Single-Container { {CellMeasurementResult-ItemIEs} }
CellMeasurementResult-ItemIEs X2AP-PROTOCOL-IES ::=
   CellMeasurementResult-Item ::= SEQUENCE {
   cell-ID
                         HWLoadIndicator
   hWLoadIndicator
                                          OPTIONAL,
   s1TNLLoadIndicator
                         S1TNLLoadIndicator OPTIONAL,
   radioResourceStatus
                         RadioResourceStatus OPTIONAL,
   iE-Extensions
                         ProtocolExtensionContainer { {CellMeasurementResult-Item-ExtIEs} }
                                                                                    OPTIONAL,
```

```
CellMeasurementResult-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    ID id-CompositeAvailableCapacityGroup CRITICALITY ignore EXTENSION CompositeAvailableCapacityGroup
                                                                                         PRESENCE optional }
    ID id-ABS-Status
                                   CRITICALITY ignore EXTENSION ABS-Status
                                                                                         PRESENCE optional }
    ID id-RSRPMRList
                                   CRITICALITY ignore EXTENSION RSRPMRList
                                                                                         PRESENCE optional }
    ID id-CSIReportList
                                   CRITICALITY ignore EXTENSION CSIReportList
                                                                                         PRESENCE optional }
   { ID id-CellReportingIndicator
                                   CRITICALITY ignore EXTENSION CellReportingIndicator
                                                                                         PRESENCE optional },
-- PRIVATE MESSAGE
__ ********************
PrivateMessage ::= SEQUENCE {
   privateIEs
                PrivateIE-Container {{PrivateMessage-IEs}},
   . . .
PrivateMessage-IEs X2AP-PRIVATE-IES ::= {
  *****************
-- MOBILITY CHANGE REQUEST
MobilityChangeRequest ::= SEQUENCE {
                                    {{MobilityChangeRequest-IEs}},
   protocolIEs
                ProtocolIE-Container
MobilityChangeRequest-IEs X2AP-PROTOCOL-IES ::= {
    ID id-ENB1-Cell-ID
                                       CRITICALITY reject TYPE ECGI
                                                                                            PRESENCE mandatory }
    ID id-ENB2-Cell-ID
                                       CRITICALITY reject TYPE ECGI
                                                                                            PRESENCE mandatory }
                                                                                            PRESENCE optional } |
    ID id-ENB1-Mobility-Parameters
                                       CRITICALITY ignore TYPE MobilityParametersInformation
    PRESENCE mandatory }
    ID id-Cause
                                       CRITICALITY reject TYPE Cause
                                                                                            PRESENCE mandatory },
  -- MOBILITY CHANGE ACKNOWLEDGE
  ******************
```

```
MobilityChangeAcknowledge ::= SEQUENCE {
    protocolIEs
                   ProtocolIE-Container
                                           {{MobilityChangeAcknowledge-IEs}},
    . . .
MobilityChangeAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ENB1-Cell-ID
                                   CRITICALITY reject TYPE ECGI
                                                                                           PRESENCE mandatory
     ID id-ENB2-Cell-ID
                                   CRITICALITY reject TYPE ECGI
                                                                                           PRESENCE mandatory
    { ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                           PRESENCE optional },
-- MOBILITY CHANGE FAILURE
__ *********************
MobilityChangeFailure ::= SEQUENCE {
    protocolIEs
                   ProtocolIE-Container
                                           {{MobilityChangeFailure-IEs}},
    . . .
MobilityChangeFailure-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ENB1-Cell-ID
                                                           CRITICALITY ignore TYPE ECGI
                                                                                                                            PRESENCE mandatory }
     ID id-ENB2-Cell-ID
                                                                                                                            PRESENCE mandatory
                                                           CRITICALITY ignore TYPE ECGI
     ID id-Cause
                                                           CRITICALITY ignore TYPE Cause
                                                                                                                           PRESENCE mandatory }
     ID id-ENB2-Mobility-Parameters-Modification-Range
                                                           CRITICALITY ignore TYPE MobilityParametersModificationRange
                                                                                                                           PRESENCE optional }
    { ID id-CriticalityDiagnostics
                                                           CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                            PRESENCE optional },
    . . .
-- RADIO LINK FAILURE INDICATION
RLFIndication ::= SEQUENCE
                                           {{RLFIndication-IEs}},
    protocolIEs
                   ProtocolIE-Container
    . . .
RLFIndication-IES X2AP-PROTOCOL-IES ::= {
     ID id-FailureCellPCI
                                                       CRITICALITY ignore TYPE PCI
                                                                                                                              PRESENCE mandatory }
                                                       CRITICALITY ignore TYPE ECGI
     ID id-Re-establishmentCellECGI
                                                                                                                              PRESENCE mandatory}
     ID id-FailureCellCRNTI
                                                       CRITICALITY ignore TYPE CRNTI
                                                                                                                              PRESENCE mandatory }
     ID id-ShortMAC-I
                                                       CRITICALITY ignore TYPE ShortMAC-I
                                                                                                                              PRESENCE optional }
     ID id-UE-RLF-Report-Container
                                                       CRITICALITY ignore TYPE UE-RLF-Report-Container
                                                                                                                              PRESENCE optional }
     ID id-RRCConnSetupIndicator
                                                       CRITICALITY reject TYPE RRCConnSetupIndicator
                                                                                                                              PRESENCE optional }
     ID id-RRCConnReestabIndicator
                                                       CRITICALITY ignore TYPE RRCConnReestabIndicator
                                                                                                                              PRESENCE optional }
     ID id-UE-RLF-Report-Container-for-extended-bands
                                                      CRITICALITY ignore TYPE UE-RLF-Report-Container-for-extended-bands
                                                                                                                              PRESENCE optional }
                                                                                                                              PRESENCE optional },
     ID id-NBIoT-RLF-Report-Container
                                                       CRITICALITY ignore TYPE NBIoT-RLF-Report-Container
```

```
-- CELL ACTIVATION REQUEST
CellActivationRequest ::= SEQUENCE {
                   ProtocolIE-Container
                                         {{CellActivationRequest-IEs}},
   protocolIEs
CellActivationRequest-IEs X2AP-PROTOCOL-IES ::= {
    { ID id-ServedCellsToActivate CRITICALITY reject TYPE ServedCellsToActivate
                                                                                    PRESENCE mandatory },
ServedCellsToActivate::= SEQUENCE (SIZE (1..maxCellineNB)) OF ServedCellsToActivate-Item
ServedCellsToActivate-Item::= SEQUENCE {
    ecai
    iE-Extensions
                                  ProtocolExtensionContainer { {ServedCellsToActivate-Item-ExtIEs} } OPTIONAL,
ServedCellsToActivate-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- CELL ACTIVATION RESPONSE
CellActivationResponse ::= SEQUENCE
    protocolIEs
                   ProtocolIE-Container
                                         {{CellActivationResponse-IEs}},
{\tt CellActivationResponse-IEs~X2AP-PROTOCOL-IES~::=~\{}
     ID id-ActivatedCellList
                              CRITICALITY ignore TYPE ActivatedCellList
                                                                                       PRESENCE mandatory }
     ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                       PRESENCE optional },
ActivatedCellList ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ActivatedCellList-Item
ActivatedCellList-Item::= SEQUENCE {
    ecgi
                                      ECGI,
   iE-Extensions
                                      ProtocolExtensionContainer { {ActivatedCellList-Item-ExtIEs} } OPTIONAL,
```

```
ActivatedCellList-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
__*******************
-- CELL ACTIVATION FAILURE
  *****************
CellActivationFailure ::= SEQUENCE {
              ProtocolIE-Container
                                    {{CellActivationFailure-IEs}},
   protocolIEs
CellActivationFailure-IEs X2AP-PROTOCOL-IES ::= {
    ID id-Cause
                                 CRITICALITY ignore TYPE Cause
                                                                             PRESENCE mandatory } |
   { ID id-CriticalityDiagnostics
                                 CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                             PRESENCE optional },
__ ********************
-- X2 RELEASE
__ ********************
X2Release ::= SEQUENCE {
   protocolIEs ProtocolIE-Container
                                    {{X2Release-IEs}},
   . . .
X2Release-IEs X2AP-PROTOCOL-IES ::= {
   { ID id-GlobalENB-ID
                             CRITICALITY reject TYPE GlobalENB-ID
                                                                      PRESENCE mandatory },
-- X2AP MESSAGE TRANSFER
__ ********************************
X2APMessageTransfer ::= SEQUENCE {
   protocolIEs ProtocolIE-Container {{X2APMessageTransfer-IEs}},
X2APMessageTransfer-IEs X2AP-PROTOCOL-IES ::= {
    ID id-RNL-Header CRITICALITY reject TYPE RNL-Header
                                                            PRESENCE mandatory }
   { ID id-x2APMessage CRITICALITY reject TYPE X2AP-Message
                                                            PRESENCE optional },
```

```
RNL-Header ::= SEQUENCE {
   source-GlobalENB-ID GlobalENB-ID,
   target-GlobalENB-ID GlobalENB-ID
                                     OPTIONAL,
   iE-Extensions
                                     ProtocolExtensionContainer { {RNL-Header-Item-ExtIEs} } OPTIONAL,
RNL-Header-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
X2AP-Message ::= OCTET STRING
····
-- SENB ADDITION REQUEST
SeNBAdditionRequest ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                         {{SeNBAdditionRequest-IEs}},
SeNBAdditionRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                               PRESENCE mandatory } |
                                         CRITICALITY reject TYPE UE-X2AP-ID
   { ID id-UE-SecurityCapabilities
                                         CRITICALITY reject TYPE UESecurityCapabilities
                                                                                               PRESENCE conditional |
   -- This IE shall be present if the Bearer Option IE is set to the value "SCG bearer" --
   { ID id-SeNBSecurityKey
                                         CRITICALITY reject TYPE SeNBSecurityKey
                                                                                               PRESENCE conditional \ |
   -- This IE shall be present if the Bearer Option IE is set to the value "SCG bearer" --
     ID id-SeNBUEAggregateMaximumBitRate
                                         CRITICALITY reject TYPE UEAggregateMaximumBitRate
                                                                                               PRESENCE mandatory } |
     ID id-ServingPLMN
                                                                                               PRESENCE optional }
                                         CRITICALITY ignore TYPE PLMN-Identity
                                                                                               PRESENCE mandatory
     ID id-E-RABs-ToBeAdded-List
                                         CRITICALITY reject TYPE E-RABs-ToBeAdded-List
     ID id-MeNBtoSeNBContainer
                                         CRITICALITY reject TYPE MeNBtoSeNBContainer
                                                                                               PRESENCE mandatory }
                                         CRITICALITY reject TYPE CSGMembershipStatus
                                                                                               PRESENCE optional }
     ID id-CSGMembershipStatus
     ID id-SeNB-UE-X2AP-ID
                                         CRITICALITY reject TYPE UE-X2AP-ID
                                                                                               PRESENCE optional }
                                                                                               PRESENCE optional
     ID id-SeNB-UE-X2AP-ID-Extension
                                         CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                               PRESENCE optional }
     ID id-ExpectedUEBehaviour
                                         CRITICALITY ignore TYPE ExpectedUEBehaviour
     ID id-MeNB-UE-X2AP-ID-Extension
                                         CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                               PRESENCE optional },
E-RABs-ToBeAdded-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeAdded-ItemIEs} }
E-RABs-ToBeAdded-ItemIEs X2AP-PROTOCOL-IES ::= {
   PRESENCE mandatory },
   . . .
E-RABs-ToBeAdded-Item ::= CHOICE {
                  E-RABs-ToBeAdded-Item-SCG-Bearer,
```

```
split-Bearer
                   E-RABs-ToBeAdded-Item-Split-Bearer,
E-RABs-ToBeAdded-Item-SCG-Bearer ::= SEQUENCE {
   e-RAB-ID
   e-RAB-Level-QoS-Parameters
                                   E-RAB-Level-OoS-Parameters,
   dL-Forwarding
                                   DL-Forwarding
                                                                                                           OPTIONAL,
    s1-UL-GTPtunnelEndpoint
                                   GTPtunnelEndpoint,
                                   ProtocolExtensionContainer { {E-RABs-ToBeAdded-Item-SCG-BearerExtIEs} }
   iE-Extensions
                                                                                                           OPTIONAL,
E-RABs-ToBeAdded-Item-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
                                                                                          PRESENCE optional }
     ID id-Correlation-ID
                                       CRITICALITY ignore EXTENSION Correlation-ID
     ID id-SIPTO-Correlation-ID
                                       CRITICALITY ignore EXTENSION Correlation-ID
                                                                                          PRESENCE optional
                                       CRITICALITY ignore EXTENSION BearerType
                                                                                          PRESENCE optional }
     ID id-BearerType
     ID id-Ethernet-Type
                                       CRITICALITY ignore EXTENSION Ethernet-Type
                                                                                          PRESENCE optional },
    . . .
E-RABs-ToBeAdded-Item-Split-Bearer ::= SEQUENCE {
   e-RAB-ID
                                   E-RAB-ID,
   e-RAB-Level-OoS-Parameters
                                   E-RAB-Level-OoS-Parameters,
   meNB-GTPtunnelEndpoint
                                   GTPtunnelEndpoint,
                                   ProtocolExtensionContainer { {E-RABs-ToBeAdded-Item-Split-BearerExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
E-RABs-ToBeAdded-Item-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- SENB ADDITION REQUEST ACKNOWLEDGE
  SeNBAdditionRequestAcknowledge ::= SEQUENCE
   protocolIEs
                   ProtocolIE-Container
                                           {{SeNBAdditionRequestAcknowledge-IEs}},
    . . .
SeNBAdditionRequestAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                               CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                     PRESENCE mandatory }
     ID id-SeNB-UE-X2AP-ID
                                               CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                     PRESENCE mandatory
                                               CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-List PRESENCE mandatory}
     ID id-E-RABs-Admitted-ToBeAdded-List
     ID id-E-RABs-NotAdmitted-List
                                               CRITICALITY ignore TYPE E-RAB-List
                                                                                                     PRESENCE optional }
     ID id-SeNBtoMeNBContainer
                                               CRITICALITY reject TYPE SenBtoMenBContainer
                                                                                                     PRESENCE mandatory
     ID id-CriticalityDiagnostics
                                               CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                     PRESENCE optional }
     ID id-GW-TransportLayerAddress
                                               CRITICALITY ignore TYPE TransportLayerAddress
                                                                                                     PRESENCE optional }
     ID id-SIPTO-L-GW-TransportLayerAddress
                                               CRITICALITY ignore TYPE TransportLayerAddress
                                                                                                     PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                               CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                     PRESENCE optional }
```

```
ID id-SeNB-UE-X2AP-ID-Extension
                                              CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                    PRESENCE optional |
     ID id-Tunnel-Information-for-BBF
                                              CRITICALITY ignore TYPE TunnelInformation
                                                                                                    PRESENCE optional },
E-RABs-Admitted-ToBeAdded-List ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeAdded-ItemIEs} }
E-RABs-Admitted-ToBeAdded-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-Admitted-ToBeAdded-Item CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-Item
                                                                                                    PRESENCE mandatory }
E-RABs-Admitted-ToBeAdded-Item ::= CHOICE
                   E-RABs-Admitted-ToBeAdded-Item-SCG-Bearer,
    sCG-Bearer
   split-Bearer
                E-RABs-Admitted-ToBeAdded-Item-Split-Bearer,
E-RABs-Admitted-ToBeAdded-Item-SCG-Bearer ::= SEQUENCE {
   e-RAB-ID
                                          E-RAB-ID,
    s1-DL-GTPtunnelEndpoint
                                          GTPtunnelEndpoint,
   dL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
                                                                                                                  OPTIONAL,
    uL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
                                                                                                                  OPTIONAL,
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-Item-SCG-BearerExtIEs} }
                                                                                                                  OPTIONAL,
    . . .
E-RABs-Admitted-ToBeAdded-Item-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeAdded-Item-Split-Bearer ::= SEQUENCE {
   e-RAB-ID
                                  E-RAB-ID,
    seNB-GTPtunnelEndpoint
                                  GTPtunnelEndpoint,
                                  ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-Item-Split-BearerExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-Admitted-ToBeAdded-Item-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
   *******************
-- SENB ADDITION REQUEST REJECT
__ *********************
SeNBAdditionRequestReject ::= SEQUENCE {
                                          {{SeNBAdditionRequestReject-IEs}},
   protocolIEs
                   ProtocolIE-Container
    . . .
SeNBAdditionRequestReject-IEs X2AP-PROTOCOL-IES ::= {
    { ID id-MeNB-UE-X2AP-ID
                                          CRITICALITY reject TYPE UE-X2AP-ID
                                                                                            PRESENCE mandatory } |
```

```
ID id-SeNB-UE-X2AP-ID
                                           CRITICALITY reject TYPE UE-X2AP-ID
                                                                                              PRESENCE mandatory
     ID id-Cause
                                           CRITICALITY ignore TYPE Cause
                                                                                              PRESENCE mandatory
     ID id-CriticalityDiagnostics
                                           CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                              PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                           CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                              PRESENCE optional }
     ID id-SeNB-UE-X2AP-ID-Extension
                                           CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                              PRESENCE optional },
-- SENB RECONFIGURATION COMPLETE
__ **********************
SenbreconfigurationComplete ::= SEQUENCE {
    protocolIEs
                   ProtocolIE-Container
                                           {{SeNBReconfigurationComplete-IEs}},
    . . .
SeNBReconfigurationComplete-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                   CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                              PRESENCE mandatory
     ID id-SeNB-UE-X2AP-ID
                                                   CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                              PRESENCE mandatory }
     ID id-ResponseInformationSeNBReconfComp
                                                   CRITICALITY ignore TYPE ResponseInformationSeNBReconfComp
                                                                                                              PRESENCE mandatory }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                   CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                              PRESENCE optional }
     ID id-SeNB-UE-X2AP-ID-Extension
                                                   CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                              PRESENCE optional },
ResponseInformationSeNBReconfComp ::= CHOICE {
                       ResponseInformationSeNBReconfComp-SuccessItem,
    reject-by-MeNB
                       ResponseInformationSeNBReconfComp-RejectByMeNBItem,
ResponseInformationSeNBReconfComp-SuccessItem ::= SEQUENCE
    meNBtoSeNBContainer
                                   MeNBtoSeNBContainer OPTIONAL,
    iE-Extensions
                                   ProtocolExtensionContainer { {ResponseInformationSeNBReconfComp-SuccessItemExtIEs} } OPTIONAL,
ResponseInformationSeNBReconfComp-SuccessItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ResponseInformationSeNBReconfComp-RejectByMeNBItem ::= SEQUENCE
                                   Cause,
    meNBtoSeNBContainer
                                   MeNBtoSeNBContainer
                                                                                                                             OPTIONAL,
    iE-Extensions
                                   ProtocolExtensionContainer { {ResponseInformationSeNBReconfComp-RejectByMeNBItemExtIEs} }
                                                                                                                             OPTIONAL,
ResponseInformationSeNBReconfComp-RejectByMeNBItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
-- SENB MODIFICATION REQUEST
__ ******************
SenbModificationRequest ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                         {{ SeNBModificationRequest-IEs}},
   . . .
SeNBModificationRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                            CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                   PRESENCE mandatory }
     ID id-SeNB-UE-X2AP-ID
                                            CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                   PRESENCE mandatory }
     ID id-Cause
                                            CRITICALITY ignore TYPE Cause
                                                                                                   PRESENCE mandatory }
                                            CRITICALITY ignore TYPE SCGChangeIndication
                                                                                                   PRESENCE optional }
     ID id-SCGChangeIndication
     ID id-ServingPLMN
                                            CRITICALITY ignore TYPE PLMN-Identity
                                                                                                   PRESENCE optional }
                                                                                                   PRESENCE optional }
     ID id-UE-ContextInformationSeNBModReg
                                            CRITICALITY reject TYPE UE-ContextInformationSeNBModReg
     ID id-MeNBtoSeNBContainer
                                            CRITICALITY ignore TYPE MeNBtoSeNBContainer
                                                                                                   PRESENCE optional }
     ID id-CSGMembershipStatus
                                            CRITICALITY reject TYPE CSGMembershipStatus
                                                                                                   PRESENCE optional }
                                            CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                   PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
    ID id-SeNB-UE-X2AP-ID-Extension
                                            CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                   PRESENCE optional }
   . . .
UE-ContextInformationSeNBModReg ::= SEQUENCE {
   uE-SecurityCapabilities
                                 UESecurityCapabilities
                                                                                                      OPTIONAL,
                                 SeNBSecurityKey
   seNB-SecurityKey
                                                                                                      OPTIONAL,
   OPTIONAL,
   e-RABs-ToBeAdded
                                 E-RABs-ToBeAdded-List-ModReq
                                                                                                      OPTIONAL,
                                 E-RABs-ToBeModified-List-ModReg
   e-RABs-ToBeModified
                                                                                                      OPTIONAL,
   e-RABs-ToBeReleased
                                 E-RABs-ToBeReleased-List-ModReq
                                                                                                      OPTIONAL,
                                 OPTIONAL,
   iE-Extensions
   . . .
UE-ContextInformationSeNBModRegExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeAdded-List-ModReq ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeAdded-ModReqItemIEs} }
E-RABs-ToBeAdded-ModRegItemIEs X2AP-PROTOCOL-IES ::= {
   { ID id-E-RABs-ToBeAdded-ModReqItem CRITICALITY ignore TYPE E-RABs-ToBeAdded-ModReqItem
                                                                                         PRESENCE mandatory },
E-RABs-ToBeAdded-ModReqItem ::= CHOICE {
   sCG-Bearer
                  E-RABs-ToBeAdded-ModRegItem-SCG-Bearer,
   split-Bearer
                  E-RABs-ToBeAdded-ModReqItem-Split-Bearer,
   . . .
```

```
E-RABs-ToBeAdded-ModRegItem-SCG-Bearer ::= SEQUENCE {
   e-RAB-ID
                                  E-RAB-ID.
   e-RAB-Level-OoS-Parameters
                                  E-RAB-Level-OoS-Parameters.
   dL-Forwarding
                                  DL-Forwarding
                                                                                                        OPTIONAL.
    s1-UL-GTPtunnelEndpoint
                                  GTPtunnelEndpoint,
                                  ProtocolExtensionContainer { {E-RABs-ToBeAdded-ModRegItem-SCG-BearerExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-ToBeAdded-ModReqItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-Correlation-ID
                                     CRITICALITY ignore EXTENSION Correlation-ID
                                                                                       PRESENCE optional }
     ID id-SIPTO-Correlation-ID
                                     CRITICALITY ignore EXTENSION Correlation-ID
                                                                                       PRESENCE optional }
                                                                                       PRESENCE optional
     ID id-BearerType
                                     CRITICALITY ignore EXTENSION BearerType
     ID id-Ethernet-Type
                                     CRITICALITY ignore EXTENSION Ethernet-Type
                                                                                       PRESENCE optional },
E-RABs-ToBeAdded-ModRegItem-Split-Bearer ::= SEQUENCE {
   e-RAB-ID
                                  E-RAB-ID,
   e-RAB-Level-QoS-Parameters
                                  E-RAB-Level-QoS-Parameters,
   meNB-GTPtunnelEndpoint
                                  GTPtunnelEndpoint,
                                  ProtocolExtensionContainer { {E-RABs-ToBeAdded-ModRegItem-Split-BearerExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-ToBeAdded-ModReqItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeModified-List-ModReq ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeModified-ModReqItemIEs} }
E-RABs-ToBeModified-ModRegItemIEs X2AP-PROTOCOL-IES ::= {
    PRESENCE mandatory },
    . . .
E-RABs-ToBeModified-ModRegItem ::= CHOICE
                  E-RABs-ToBeModified-ModRegItem-SCG-Bearer,
   sCG-Bearer
    split-Bearer E-RABs-ToBeModified-ModReqItem-Split-Bearer,
    . . .
E-RABs-ToBeModified-ModReqItem-SCG-Bearer ::= SEQUENCE {
   e-RAB-ID
                                  E-RAB-ID.
   e-RAB-Level-QoS-Parameters
                                  E-RAB-Level-QoS-Parameters
                                                                                                        OPTIONAL,
    s1-UL-GTPtunnelEndpoint
                                  GTPtunnelEndpoint
                                                                                                        OPTIONAL,
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-ToBeModified-ModReqItem-SCG-BearerExtIEs} } OPTIONAL,
E-RABs-ToBeModified-ModReqItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
E-RABs-ToBeModified-ModReqItem-Split-Bearer ::= SEQUENCE {
   e-RAB-ID
                                E-RAB-ID.
   e-RAB-Level-QoS-Parameters
                                E-RAB-Level-Oos-Parameters
                                                                                                        OPTIONAL,
   meNB-GTPtunnelEndpoint
                                GTPtunnelEndpoint
                                                                                                        OPTIONAL.
                                ProtocolExtensionContainer { {E-RABs-ToBeModified-ModRegItem-Split-BearerExtIEs} } OPTIONAL.
   iE-Extensions
E-RABs-ToBeModified-ModReqItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-List-ModReq ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-ModReqItemIEs} }
E-RABs-ToBeReleased-ModRegItemIEs X2AP-PROTOCOL-IES ::= {
   PRESENCE mandatory },
E-RABs-ToBeReleased-ModRegItem ::= CHOICE {
                 E-RABs-ToBeReleased-ModRegItem-SCG-Bearer,
   sCG-Bearer
   split-Bearer
                 E-RABs-ToBeReleased-ModRegItem-Split-Bearer,
   . . .
E-RABs-ToBeReleased-ModRegItem-SCG-Bearer ::= SEQUENCE {
   e-RAB-ID
                                E-RAB-ID,
   dL-Forwarding-GTPtunnelEndpoint
                                       GTPtunnelEndpoint
                                                                                             OPTIONAL,
   uL-Forwarding-GTPtunnelEndpoint
                                       GTPtunnelEndpoint
                                                                                             OPTIONAL,
   iE-Extensions
                                ProtocolExtensionContainer { {E-RABs-ToBeReleased-ModReqItem-SCG-BearerExtIEs} } OPTIONAL,
E-RABs-ToBeReleased-ModReqItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-ModReqItem-Split-Bearer ::= SEQUENCE {
   e-RAB-ID
                                E-RAB-ID,
   dL-Forwarding-GTPtunnelEndpoint
                                       GTPtunnelEndpoint
   iE-Extensions
                                ProtocolExtensionContainer { {E-RABs-ToBeReleased-ModReqItem-Split-BearerExtIEs} } OPTIONAL,
   . . .
E-RABs-ToBeReleased-ModReqItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    ************
-- SENB MODIFICATION REQUEST ACKNOWLEDGE
  *******************
```

```
SeNBModificationRequestAcknowledge ::= SEQUENCE {
    protocolIEs
                   ProtocolIE-Container
                                           {{SeNBModificationRequestAcknowledge-IEs}},
SeNBModificationRequestAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
      ID id-MeNB-UE-X2AP-ID
                                                        CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                          PRESENCE mandatory
     ID id-SeNB-UE-X2AP-ID
                                                        CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                          PRESENCE mandatory
     ID id-E-RABs-Admitted-ToBeAdded-ModAckList
                                                        CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-ModAckList
                                                                                                                          PRESENCE optional }
     ID id-E-RABs-Admitted-ToBeModified-ModAckList
                                                        CRITICALITY ignore TYPE E-RABs-Admitted-ToBeModified-ModAckList PRESENCE optional
     ID id-E-RABs-Admitted-ToBeReleased-ModAckList
                                                        CRITICALITY ignore TYPE E-RABs-Admitted-ToBeReleased-ModAckList PRESENCE optional
     ID id-E-RABs-NotAdmitted-List
                                                        CRITICALITY ignore TYPE E-RAB-List
                                                                                                                          PRESENCE optional }
     ID id-SeNBtoMeNBContainer
                                                        CRITICALITY ignore TYPE SenBtoMenBContainer
                                                                                                                          PRESENCE optional }
                                                                                                                          PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                        CRITICALITY ignore TYPE CriticalityDiagnostics
     ID id-MeNB-UE-X2AP-ID-Extension
                                                        CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                          PRESENCE optional }
                                                                                                                          PRESENCE optional },
     ID id-SeNB-UE-X2AP-ID-Extension
                                                        CRITICALITY ignore TYPE UE-X2AP-ID-Extension
E-RABs-Admitted-ToBeAdded-ModAckList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeAdded-
ModAckItemIEs } }
E-RABs-Admitted-ToBeAdded-ModAckItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-Admitted-ToBeAdded-ModAckItem
                                                    CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-ModAckItem
                                                                                                                       PRESENCE mandatory
E-RABs-Admitted-ToBeAdded-ModAckItem ::= CHOICE {
    sCG-Bearer
                   E-RABs-Admitted-ToBeAdded-ModAckItem-SCG-Bearer,
                   E-RABs-Admitted-ToBeAdded-ModAckItem-Split-Bearer,
    split-Bearer
E-RABs-Admitted-ToBeAdded-ModAckItem-SCG-Bearer ::= SEQUENCE {
    e-RAB-ID
                                            E-RAB-ID,
    s1-DL-GTPtunnelEndpoint
                                            GTPtunnelEndpoint,
    dL-Forwarding-GTPtunnelEndpoint
                                            GTPtunnelEndpoint
                                                                                                                       OPTIONAL,
    uL-Forwarding-GTPtunnelEndpoint
                                            GTPtunnelEndpoint
                                                                                                                       OPTIONAL,
                                            ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-ModAckItem-SCG-BearerExtIEs} }OPTIONAL,
    iE-Extensions
    . . .
E-RABs-Admitted-ToBeAdded-ModAckItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeAdded-ModAckItem-Split-Bearer ::= SEOUENCE
    e-RAB-ID
                                    E-RAB-ID,
    seNB-GTPtunnelEndpoint
                                    GTPtunnelEndpoint,
                                    ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-ModAckItem-Split-BearerExtIEs} } OPTIONAL,
    iE-Extensions
E-RABs-Admitted-ToBeAdded-ModAckItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
E-RABs-Admitted-ToBeModified-ModAckList ::= SEOUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeModified-
ModAckItemIEs}
E-RABs-Admitted-ToBeModified-ModAckItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-Admitted-ToBeModified-ModAckItem
                                                      CRITICALITY ignore TYPE E-RABs-Admitted-ToBeModified-ModAckItem PRESENCE mandatory
E-RABs-Admitted-ToBeModified-ModAckItem ::= CHOICE {
    sCG-Bearer
                   E-RABs-Admitted-ToBeModified-ModAckItem-SCG-Bearer,
    split-Bearer E-RABs-Admitted-ToBeModified-ModAckItem-Split-Bearer,
    . . .
E-RABs-Admitted-ToBeModified-ModAckItem-SCG-Bearer ::= SEQUENCE {
    e-RAB-ID
                                   E-RAB-ID,
                                   GTPtunnelEndpoint
    s1-DL-GTPtunnelEndpoint
                                                                                                                OPTIONAL,
                                   ProtocolExtensionContainer { {E-RABs-Admitted-ToBeModified-ModAckItem-SCG-BearerExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-Admitted-ToBeModified-ModAckItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
E-RABs-Admitted-ToBeModified-ModAckItem-Split-Bearer ::= SEQUENCE {
    e-RAB-ID
                                   E-RAB-ID,
    seNB-GTPtunnelEndpoint
                                   GTPtunnelEndpoint
                                   ProtocolExtensionContainer { {E-RABs-Admitted-ToBeModified-ModAckItem-Split-BearerExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-Admitted-ToBeModified-ModAckItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeReleased-ModAckList ::= SEOUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeReleased-
ModAckItemIEs } }
E-RABs-Admitted-ToBeReleased-ModAckItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-Admitted-ToBeReleased-ModAckItem
                                                     CRITICALITY ignore TYPE E-RABs-Admitted-ToReleased-ModAckItem PRESENCE mandatory
E-RABs-Admitted-ToReleased-ModAckItem ::= CHOICE {
    sCG-Bearer E-RABs-Admitted-ToBeReleased-ModAckItem-SCG-Bearer.
    split-Bearer E-RABs-Admitted-ToBeReleased-ModAckItem-Split-Bearer.
E-RABs-Admitted-ToBeReleased-ModAckItem-SCG-Bearer ::= SEOUENCE {
    e-RAB-ID
                               E-RAB-ID,
    iE-Extensions
                               ProtocolExtensionContainer { {E-RABs-Admitted-ToBeReleased-ModAckItem-SCG-BearerExtIEs} } OPTIONAL,
```

```
E-RABs-Admitted-ToBeReleased-ModAckItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeReleased-ModAckItem-Split-Bearer ::= SEQUENCE {
   iE-Extensions
                             ProtocolExtensionContainer { {E-RABs-Admitted-ToBeReleased-ModAckItem-Split-BearerExtIEs} } OPTIONAL,
E-RABs-Admitted-ToBeReleased-ModAckItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- SENB MODIFICATION REQUEST REJECT
        ***************
SeNBModificationRequestReject ::= SEQUENCE {
   protocolIEs
               ProtocolIE-Container
                                         {{SeNBModificationRequestReject-IEs}},
SeNBModificationRequestReject-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                            CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                           PRESENCE mandatory
                                                                                           PRESENCE mandatory
     ID id-SeNB-UE-X2AP-ID
                                            CRITICALITY ignore TYPE UE-X2AP-ID
     ID id-Cause
                                            CRITICALITY ignore TYPE Cause
                                                                                           PRESENCE mandatory}
     ID id-CriticalityDiagnostics
                                            CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional
     ID id-MeNB-UE-X2AP-ID-Extension
                                            CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                           PRESENCE optional }
    ID id-SeNB-UE-X2AP-ID-Extension
                                            CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                           PRESENCE optional },
-- SENB MODIFICATION REQUIRED
         SenbModificationRequired ::= SEQUENCE {
   protocolIEs
                ProtocolIE-Container
                                             {{SeNBModificationRequired-IEs}},
SeNBModificationRequired-IES X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                            CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                 PRESENCE mandatory
     ID id-SeNB-UE-X2AP-ID
                                            CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                 PRESENCE mandatory
     ID id-Cause
                                            CRITICALITY ignore TYPE Cause
                                                                                                 PRESENCE mandatory }
     ID id-SCGChangeIndication
                                            CRITICALITY ignore TYPE SCGChangeIndication
                                                                                                 PRESENCE optional }
     ID id-E-RABs-ToBeReleased-ModRegd
                                                                                                 PRESENCE optional }
                                            CRITICALITY ignore TYPE E-RABs-ToBeReleased-ModRegd
```

```
ID id-SeNBtoMeNBContainer
                                            CRITICALITY ignore TYPE SenBtoMenBContainer
                                                                                               PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                            CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                               PRESENCE optional }
     ID id-SeNB-UE-X2AP-ID-Extension
                                            CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                               PRESENCE optional },
E-RABs-ToBeReleased-ModReqd ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-ModReqdItemIEs} }
E-RABs-ToBeReleased-ModRegdItemIEs X2AP-PROTOCOL-IES ::= {
   { ID id-E-RABs-ToBeReleased-ModRegdItem CRITICALITY ignore
                                                              TYPE E-RABs-ToBeReleased-ModRegdItem PRESENCE mandatory },
   . . .
E-RABs-ToBeReleased-ModReqdItem ::= SEQUENCE
   e-RAB-ID
                                 E-RAB-ID,
   cause
   iE-Extensions
                                 ProtocolExtensionContainer { {E-RABs-ToBeReleased-ModRegdItemExtIEs} } OPTIONAL,
E-RABs-ToBeReleased-ModReqdItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  *****************
-- SENB MODIFICATION CONFIRM
           ***************
SeNBModificationConfirm ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        {{SeNBModificationConfirm-IEs}},
   . . .
SeNBModificationConfirm-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                            CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                            PRESENCE mandatory
     ID id-SeNB-UE-X2AP-ID
                                            CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                            PRESENCE mandatory }
     ID id-MeNBtoSeNBContainer
                                            CRITICALITY ignore TYPE MeNBtoSeNBContainer
                                                                                            PRESENCE optional }
     ID id-CriticalityDiagnostics
                                            CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                            PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                            CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                            PRESENCE optional }
    { ID id-SeNB-UE-X2AP-ID-Extension
                                            CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                            PRESENCE optional },
  *******************
-- SENB MODIFICATION REFUSE
  *****************
SeNBModificationRefuse ::= SEQUENCE
   protocolIEs
                  ProtocolIE-Container
                                            {{SeNBModificationRefuse-IEs}},
```

```
SeNBModificationRefuse-IEs X2AP-PROTOCOL-IES ::=
     ID id-MeNB-UE-X2AP-ID
                                              CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                              PRESENCE mandatory }
     ID id-SeNB-UE-X2AP-ID
                                              CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                              PRESENCE mandatory
     ID id-Cause
                                              CRITICALITY ignore TYPE Cause
                                                                                              PRESENCE mandatory
     ID id-MeNBtoSeNBContainer
                                              CRITICALITY ignore TYPE MeNBtoSeNBContainer
                                                                                              PRESENCE optional }
     ID id-CriticalityDiagnostics
                                              CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                             PRESENCE optional }
                                                                                              PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                              CRITICALITY ignore TYPE UE-X2AP-ID-Extension
     ID id-SeNB-UE-X2AP-ID-Extension
                                              CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                              PRESENCE optional },
   *****************
-- SENB RELEASE REQUEST
   SeNBReleaseRequest ::= SEQUENCE {
                                              {{SeNBReleaseRequest-IEs}},
   protocolIEs
                  ProtocolIE-Container
SeNBReleaseRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                              CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                         PRESENCE mandatory }
     ID id-SeNB-UE-X2AP-ID
                                              CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                         PRESENCE optional }
                                                                                                         PRESENCE optional }
     ID id-Cause
                                              CRITICALITY ignore TYPE Cause
     ID id-E-RABs-ToBeReleased-List-RelReq
                                              CRITICALITY ignore TYPE E-RABs-ToBeReleased-List-RelReq
                                                                                                         PRESENCE optional }
     ID id-UE-ContextKeptIndicator
                                              CRITICALITY ignore TYPE UE-ContextKeptIndicator
                                                                                                         PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                                                                         PRESENCE optional }
                                              CRITICALITY reject TYPE UE-X2AP-ID-Extension
     ID id-SeNB-UE-X2AP-ID-Extension
                                              CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                         PRESENCE optional }
                                                                                                         PRESENCE optional },
    ID id-MakeBeforeBreakIndicator
                                              CRITICALITY ignore TYPE MakeBeforeBreakIndicator
E-RABs-ToBeReleased-List-RelReq ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-RelReqItemIEs} }
E-RABs-ToBeReleased-RelReqItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-RelRegItem
                                             CRITICALITY ignore TYPE E-RABs-ToBeReleased-RelRegItem
                                                                                                     PRESENCE mandatory \,
    . . .
E-RABs-ToBeReleased-RelRegItem ::= CHOICE {
                  E-RABs-ToBeReleased-RelRegItem-SCG-Bearer,
   split-Bearer E-RABs-ToBeReleased-RelRegItem-Split-Bearer,
    . . .
E-RABs-ToBeReleased-RelReqItem-SCG-Bearer ::= SEQUENCE {
    e-RAB-ID
                                  E-RAB-ID,
    uL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
                                                                                                   OPTIONAL,
   dL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
                                                                                                   OPTIONAL,
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-RelReqItem-SCG-BearerExtIEs} } OPTIONAL,
```

```
E-RABs-ToBeReleased-RelReqItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-RelReqItem-Split-Bearer ::= SEQUENCE {
   e-RAB-ID
                                  E-RAB-ID,
   dL-Forwarding-GTPtunnelEndpoint
                                         GTPtunnelEndpoint
                                                                                                      OPTIONAL,
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-RelReqItem-Split-BearerExtIEs} } OPTIONAL,
E-RABs-ToBeReleased-RelRegItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
__ **********************
-- SENB RELEASE REOUIRED
SenBReleaseRequired ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                          {{SeNBReleaseRequired-IEs}},
SeNBReleaseRequired-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                         CRITICALITY reject TYPE UE-X2AP-ID
                                                                                           PRESENCE mandatory }
     ID id-SeNB-UE-X2AP-ID
                                         CRITICALITY reject TYPE UE-X2AP-ID
                                                                                           PRESENCE mandatory
     ID id-Cause
                                         CRITICALITY ignore TYPE Cause
                                                                                           PRESENCE mandatory
                                                                                           PRESENCE optional } |
     ID id-MeNB-UE-X2AP-ID-Extension
                                         CRITICALITY reject TYPE UE-X2AP-ID-Extension
    { ID id-SeNB-UE-X2AP-ID-Extension
                                         CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                           PRESENCE optional },
-- SENB RELEASE CONFIRM
__ *********************
SeNBReleaseConfirm ::= SEOUENCE {
                                          {{SeNBReleaseConfirm-IEs}},
   protocolIEs ProtocolIE-Container
   . . .
SeNBReleaseConfirm-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                 CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                           PRESENCE mandatory }
     ID id-SeNB-UE-X2AP-ID
                                                 CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                           PRESENCE mandatory }
     ID id-E-RABs-ToBeReleased-List-RelConf
                                                 CRITICALITY ignore TYPE E-RABs-ToBeReleased-List-RelConf
                                                                                                           PRESENCE optional }
                                                                                                           PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                 CRITICALITY ignore TYPE CriticalityDiagnostics
```

```
ID id-MeNB-UE-X2AP-ID-Extension
                                                   CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                              PRESENCE optional |
     ID id-SeNB-UE-X2AP-ID-Extension
                                                   CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                              PRESENCE optional },
E-RABs-ToBeReleased-List-RelConf ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-RelConfItemIEs} }
E-RABs-ToBeReleased-RelConfitemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-RelConfItem
                                               CRITICALITY ignore
                                                                      TYPE E-RABs-ToBeReleased-RelConfItem
                                                                                                              PRESENCE mandatory },
E-RABs-ToBeReleased-RelConfItem ::= CHOICE {
                   E-RABs-ToBeReleased-RelConfItem-SCG-Bearer,
    sCG-Bearer
    split-Bearer E-RABs-ToBeReleased-RelConfItem-Split-Bearer,
E-RABs-ToBeReleased-RelConfItem-SCG-Bearer ::= SEQUENCE {
    e-RAB-ID
                                   E-RAB-ID,
    uL-Forwarding-GTPtunnelEndpoint
                                           GTPtunnelEndpoint
                                                                                                      OPTIONAL,
    dL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
                                                                                                      OPTIONAL,
                                   ProtocolExtensionContainer { {E-RABs-ToBeReleased-RelConfItem-SCG-BearerExtIEs} } OPTIONAL,
    iE-Extensions
E-RABs-ToBeReleased-RelConfitem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-RelConfItem-Split-Bearer ::= SEQUENCE {
    e-RAB-ID
                                   E-RAB-ID,
    dL-Forwarding-GTPtunnelEndpoint
                                           GTPtunnelEndpoint
                                                                                                         OPTIONAL,
   iE-Extensions
                                   ProtocolExtensionContainer { {E-RABs-ToBeReleased-RelConfItem-Split-BearerExtIEs} } OPTIONAL,
E-RABs-ToBeReleased-RelConfitem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- SENB COUNTER CHECK REQUEST
  ************************
SeNBCounterCheckRequest ::= SEQUENCE {
    protocolIEs
                 ProtocolIE-Container
                                           {{SeNBCounterCheckRequest-IEs}},
SeNBCounterCheckRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                               CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                           PRESENCE mandatory }
    { ID id-SeNB-UE-X2AP-ID
                                               CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                           PRESENCE mandatory } |
```

```
PRESENCE mandatory |
    ID id-MeNB-UE-X2AP-ID-Extension
                                      CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                        PRESENCE optional } |
    ID id-SeNB-UE-X2AP-ID-Extension
                                      CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                        PRESENCE optional },
E-RABs-SubjectToCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-SubjectToCounterCheckItemIEs} }
E-RABs-SubjectToCounterCheckItemIEs X2AP-PROTOCOL-IES ::= {
   PRESENCE mandatory },
   . . .
E-RABs-SubjectToCounterCheckItem ::= SEQUENCE {
   e-RAB-ID
                             E-RAB-ID,
   uL-Count
                             INTEGER (0..4294967295),
   dL-Count
                             INTEGER (0..4294967295),
                             ProtocolExtensionContainer { {E-RABs-SubjectToCounterCheckItemExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-SubjectToCounterCheckItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  *****************
-- X2 REMOVAL REQUEST
__ *********************
X2RemovalRequest ::= SEQUENCE {
   protocolIEs
                ProtocolIE-Container
                                   {{X2RemovalRequest-IEs}},
   . . .
X2RemovalRequest-IEs X2AP-PROTOCOL-IES ::= {
    ID id-GlobalENB-ID
                                CRITICALITY reject TYPE GlobalENB-ID
                                                                       PRESENCE mandatory } |
                                                                       PRESENCE optional },
    ID id-X2RemovalThreshold
                                CRITICALITY reject TYPE X2BenefitValue
-- X2 REMOVAL RESPONSE
__ *******************************
X2RemovalResponse ::= SEQUENCE {
   protocolIEs
                                   {{X2RemovalResponse-IEs}},
                ProtocolIE-Container
   . . .
```

```
X2RemovalResponse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-GlobalENB-ID CRITICALITY reject TYPE GlobalENB-ID
                                                                                  PRESENCE mandatory |
     ID id-CriticalityDiagnostics
                                   CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                  PRESENCE optional },
  *****************
-- X2 REMOVAL FAILURE
__ **********************
X2RemovalFailure ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                       {{X2RemovalFailure-IEs}},
X2RemovalFailure-IEs X2AP-PROTOCOL-IES ::= {
     TD id-Cause
                                   CRITICALITY ignore TYPE Cause
                                                                                     PRESENCE mandatory } |
   ID id-CriticalityDiagnostics
                                   CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                     PRESENCE optional },
-- RETRIEVE UE CONTEXT REQUEST
__ ******************
RetrieveUEContextRequest ::= SEQUENCE {
               ProtocolIE-Container
                                       {{ RetrieveUEContextRequest-IEs}},
   protocolIEs
   . . .
RetrieveUEContextRequest-IES X2AP-PROTOCOL-IES ::= {
     ID id-New-eNB-UE-X2AP-ID
                                                                                     PRESENCE mandatory } |
                                          CRITICALITY reject TYPE UE-X2AP-ID
     ID id-SeNB-UE-X2AP-ID-Extension
                                          CRITICALITY reject TYPE UE-X2AP-ID-Extension PRESENCE optional | |
-- Allocated at the new eNB.
-- This IE contains an Extended eNB UE X2AP ID, which, together with the New eNB UE X2AP ID IE
-- represents the eNB UE X2AP ID allocated at the new eNB.
     ID id-resumeID
                                                                                     PRESENCE mandatory }
                                          CRITICALITY reject TYPE ResumeID
     ID id-ShortMAC-I
                                          CRITICALITY reject TYPE ShortMAC-I
                                                                                     PRESENCE mandatory
     ID id-NewEUTRANCellIdentifier
                                                                                     PRESENCE mandatory
                                          CRITICALITY reject TYPE EUTRANCellIdentifier
    {ID id-FailureCellCRNTI
                                          CRITICALITY reject TYPE CRNTI
                                                                                     PRESENCE optional } |
   {ID id-FailureCellPCI
                                          CRITICALITY reject TYPE PCI
                                                                                     PRESENCE optional },
  *****************
-- RETRIEVE UE CONTEXT RESPONSE
```

```
RetrieveUEContextResponse ::= SEQUENCE {
   protocolIEs
                       ProtocolIE-Container
                                              {{ RetrieveUEContextResponse-IEs}},
    . . .
RetrieveUEContextResponse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-New-eNB-UE-X2AP-ID
                                                                                                                         PRESENCE mandatory
                                                      CRITICALITY ignore TYPE UE-X2AP-ID
     ID id-New-eNB-UE-X2AP-ID-Extension
                                                      CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                         PRESENCE optional }
                                                                                                                         PRESENCE mandatory |
     ID id-Old-eNB-UE-X2AP-ID
                                                      CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                         PRESENCE optional }
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                                      CRITICALITY ignore TYPE UE-X2AP-ID-Extension
     ID id-GUMMEI-ID
                                                      CRITICALITY reject TYPE GUMMEI
                                                                                                                         PRESENCE mandatory
     ID id-UE-ContextInformationRetrieve
                                                      CRITICALITY reject TYPE UE-ContextInformationRetrieve
                                                                                                                         PRESENCE mandatory
     ID id-TraceActivation
                                                      CRITICALITY ignore TYPE TraceActivation
                                                                                                                         PRESENCE optional }
     ID id-SRVCCOperationPossible
                                                      CRITICALITY ignore TYPE SRVCCOperationPossible
                                                                                                                         PRESENCE optional }
                                                                                                                         PRESENCE optional
     ID id-Masked-IMEISV
                                                      CRITICALITY ignore TYPE Masked-IMEISV
     ID id-ExpectedUEBehaviour
                                                      CRITICALITY ignore TYPE ExpectedUEBehaviour
                                                                                                                         PRESENCE optional }
                                                      CRITICALITY ignore TYPE ProSeAuthorized
                                                                                                                         PRESENCE optional }
     ID id-ProSeAuthorized
     ID id-CriticalityDiagnostics
                                                      CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                         PRESENCE optional }
     ID id-V2XServicesAuthorized
                                                      CRITICALITY ignore TYPE V2XServicesAuthorized
                                                                                                                         PRESENCE optional }
                                                      CRITICALITY ignore TYPE AerialUEsubscriptionInformation
                                                                                                                         PRESENCE optional }
     ID id-AerialUEsubscriptionInformation
     ID id-Subscription-Based-UE-DifferentiationInfo
                                                      CRITICALITY ignore TYPE Subscription-Based-UE-DifferentiationInfo
                                                                                                                         PRESENCE optional }
     ID id-NRV2XServicesAuthorized
                                                      CRITICALITY ignore TYPE NRV2XServicesAuthorized
                                                                                                                         PRESENCE optional }
     ID id-PC50oSParameters
                                                      CRITICALITY ignore TYPE PC50oSParameters
                                                                                                                         PRESENCE optional
UE-ContextInformationRetrieve ::= SEQUENCE {
   mME-UE-S1AP-ID
                                       UE-S1AP-ID,
   uESecurityCapabilities
                                       UESecurityCapabilities,
    aS-SecurityInformation
                                       AS-SecurityInformation,
                                       UEAggregateMaximumBitRate,
    uEaggregateMaximumBitRate
    subscriberProfileIDforRFP
                                       SubscriberProfileIDforRFP
                                                                      OPTIONAL,
    e-RABs-ToBeSetup-ListRetrieve
                                       E-RABs-ToBeSetup-ListRetrieve,
    rRC-Context
                                       RRC-Context,
                                                                      OPTIONAL,
    handoverRestrictionList
                                      HandoverRestrictionList
    locationReportingInformation
                                       LocationReportingInformation
                                                                      OPTIONAL,
    managBasedMDTallowed
                                       ManagementBasedMDTallowed
                                                                      OPTIONAL,
    managBasedMDTPLMNList
                                      MDTPLMNList
                                                                      OPTIONAL,
                                       ProtocolExtensionContainer { {UE-ContextInformationRetrieve-ExtIEs} } OPTIONAL,
    iE-Extensions
UE-ContextInformationRetrieve-ExtIES X2AP-PROTOCOL-EXTENSION ::= 
 PRESENCE optional
 ID id-AdditionalRRMPriorityIndex
                                          CRITICALITY ignore EXTENSION Additional RRMPriorityIndex
                                                                                                             PRESENCE optional
 ID id-EPCHandoverRestrictionListContainer CRITICALITY ignore EXTENSION EPCHandoverRestrictionListContainer
                                                                                                             PRESENCE optional }
 ID id-NRUESidelinkAggregateMaximumBitRate CRITICALITY ignore EXTENSION NRUESidelinkAggregateMaximumBitRate
                                                                                                             PRESENCE optional }
 ID id-UERadioCapabilityID
                                          CRITICALITY reject EXTENSION UERadioCapabilityID
                                                                                                             PRESENCE optional },
    . . .
```

```
E-RABs-ToBeSetup-ListRetrieve ::= SEOUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeSetupRetrieve-ItemIEs} }
E-RABs-ToBeSetupRetrieve-ItemIEs X2AP-PROTOCOL-IES ::= {
   . . .
E-RABs-ToBeSetupRetrieve-Item ::= SEQUENCE {
   e-RAB-ID
                              E-RAB-ID,
   e-RAB-Level-QoS-Parameters
                              E-RAB-Level-QoS-Parameters,
   bearerType
                              BearerType OPTIONAL,
                              ProtocolExtensionContainer { {E-RABs-ToBeSetupRetrieve-ItemExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-ToBeSetupRetrieve-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-uL-GTPtunnelEndpoint CRITICALITY reject EXTENSION GTPtunnelEndpoint
                                                                              PRESENCE mandatory }
     ID id-dL-Forwarding
                                 CRITICALITY ignore EXTENSION DL-Forwarding
                                                                              PRESENCE optional } |
   { ID id-Ethernet-Type
                                 CRITICALITY ignore EXTENSION Ethernet-Type
                                                                              PRESENCE optional },
-- RETRIEVE UE CONTEXT FAILURE
__ **********************
RetrieveUEContextFailure ::= SEQUENCE {
                                     {{ RetrieveUEContextFailure-IEs}},
   protocolIEs
                ProtocolIE-Container
   . . .
RetrieveUEContextFailure-IEs X2AP-PROTOCOL-IES ::= {
     ID id-New-eNB-UE-X2AP-ID
                                     CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                  PRESENCE mandatory |
    ID id-New-eNB-UE-X2AP-ID-Extension CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                  PRESENCE optional } |
    ID id-Cause
                                                                                  PRESENCE mandatory } |
                                     CRITICALITY ignore TYPE Cause
    ID id-CriticalityDiagnostics
                                     CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                  PRESENCE optional },
  -- SGNB ADDITION REOUEST
__ **********************
SqNBAdditionRequest ::= SEQUENCE {
                 ProtocolIE-Container {{SgNBAdditionRequest-IEs}},
   protocolIEs
   . . .
SgNBAdditionRequest-IEs X2AP-PROTOCOL-IES ::= {
   { ID id-MeNB-UE-X2AP-ID
                                            CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                  PRESENCE mandatory |
```

369

```
CRITICALITY reject TYPE NRUESecurityCapabilities
      ID id-NRUESecurityCapabilities
                                                                                                                       PRESENCE mandatory \
     ID id-SqNBSecurityKey
                                                    CRITICALITY reject TYPE SqNBSecurityKey
                                                                                                                       PRESENCE mandatory}
      ID id-SqNBUEAggregateMaximumBitRate
                                                    CRITICALITY reject TYPE UEAggregateMaximumBitRate
                                                                                                                    PRESENCE mandatory}
     ID id-SelectedPLMN
                                                        CRITICALITY ignore TYPE PLMN-Identity
                                                                                                                       PRESENCE optional } |
     ID id-HandoverRestrictionList
                                                    CRITICALITY ignore TYPE HandoverRestrictionList
                                                                                                                    PRESENCE optional |
     ID id-E-RABs-ToBeAdded-SqNBAddRegList
                                                    CRITICALITY reject TYPE E-RABs-ToBeAdded-SqNBAddReqList
                                                                                                                    PRESENCE mandatory |
     ID id-MeNBtoSqNBContainer
                                                    CRITICALITY reject TYPE MeNBtoSqNBContainer
                                                                                                                       PRESENCE mandatory |
      ID id-SqNB-UE-X2AP-ID
                                                    CRITICALITY reject TYPE SqNB-UE-X2AP-ID
                                                                                                                       PRESENCE optional }
     ID id-ExpectedUEBehaviour
                                                    CRITICALITY ignore TYPE ExpectedUEBehaviour
                                                                                                                       PRESENCE optional }
                                                    CRITICALITY reject TYPE UE-X2AP-ID-Extension
      ID id-MeNB-UE-X2AP-ID-Extension
                                                                                                                    PRESENCE optional }
                                                                                                                    PRESENCE optional }
     ID id-RequestedSplitSRBs
                                                    CRITICALITY reject TYPE SplitSRBs
     ID id-MeNBResourceCoordinationInformation
                                                    CRITICALITY ignore TYPE MeNBResourceCoordinationInformation
                                                                                                                    PRESENCE optional }
     ID id-SGNB-Addition-Trigger-Ind
                                                    CRITICALITY reject TYPE SGNB-Addition-Trigger-Ind
                                                                                                                    PRESENCE optional }
     ID id-SubscriberProfileIDforRFP
                                                    CRITICALITY ignore TYPE SubscriberProfileIDforRFP
                                                                                                                    PRESENCE optional }
     ID id-MeNBCell-ID
                                                    CRITICALITY reject TYPE ECGI
                                                                                                                    PRESENCE mandatory |
     ID id-DesiredActNotificationLevel
                                                    CRITICALITY ignore TYPE DesiredActNotificationLevel
                                                                                                                    PRESENCE optional }
                                                                                                                    PRESENCE optional }
     ID id-TraceActivation
                                                    CRITICALITY ignore TYPE TraceActivation
     ID id-LocationInformationSqNBReporting
                                                        CRITICALITY ignore TYPE LocationInformationSqNBReporting
                                                                                                                         PRESENCE optional } |
      ID id-Masked-IMEISV
                                                    CRITICALITY ignore TYPE Masked-IMEISV
                                                                                                                    PRESENCE optional }
     ID id-AdditionalRRMPriorityIndex
                                                    CRITICALITY ignore TYPE Additional RRMPriorityIndex
                                                                                                                    PRESENCE optional }
     ID id-RequestedFastMCGRecoveryViaSRB3
                                                    CRITICALITY ignore TYPE
                                                                                 RequestedFastMCGRecoveryViaSRB3
                                                                                                                       PRESENCE optional } |
     ID id-UEContextReferenceatSourceNGRAN
                                                    CRITICALITY ignore TYPE RAN-UE-NGAP-ID
                                                                                                                    PRESENCE optional }
     ID id-ManagementBasedMDTallowed
                                                    CRITICALITY ignore TYPE ManagementBasedMDTallowed
                                                                                                                    PRESENCE optional
     ID id-ManagementBasedMDTPLMNList
                                                    CRITICALITY ignore TYPE MDTPLMNList
                                                                                                                    PRESENCE optional }
     ID id-UERadioCapabilityID
                                                    CRITICALITY reject TYPE UERadioCapabilityID
                                                                                                                    PRESENCE optional |
     ID id-IABNodeIndication
                                                    CRITICALITY reject TYPE IABNodeIndication
                                                                                                                    PRESENCE optional }, ...
E-RABs-ToBeAdded-SqNBAddReqList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeAdded-SqNBAddReq-ItemIEs} }
E-RABs-ToBeAdded-SqNBAddReq-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeAdded-SqNBAddReq-Item
                                                    CRITICALITY reject TYPE E-RABs-ToBeAdded-SqNBAddReq-Item PRESENCE mandatory },
    . . .
E-RABs-ToBeAdded-SqNBAddReq-Item ::= SEQUENCE {
    e-RAB-ID
                                            E-RAB-ID,
    drb-ID
                                        DRB-ID,
    en-DC-ResourceConfiguration
                                        EN-DC-ResourceConfiguration,
    resource-configuration
                                        CHOICE {
        sgNBPDCPpresent
                                            E-RABs-ToBeAdded-SgNBAddReq-Item-SgNBPDCPpresent,
        sgNBPDCPnotpresent
                                            E-RABs-ToBeAdded-SgNBAddReq-Item-SgNBPDCPnotpresent,
        . . .
                                    ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBAddReg-ItemExtIEs} }
    iE-Extensions
E-RABs-ToBeAdded-SqnBAddReg-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeAdded-SqNBAddReq-Item-SqNBPDCPpresent ::= SEQUENCE {
    full-E-RAB-Level-OoS-Parameters
                                                E-RAB-Level-QoS-Parameters,
```

```
max-MCG-admit-E-RAB-Level-OoS-Parameters
                                               GBR-OosInformation
-- This IE shall be present if MCG resource and SCG resources IEs in the EN-DC Resource Configuration IE are set to "present" and GBR QoS
Information IE is present in Full E-RAB Level OoS Parameters IE --
    dL-Forwarding
                                               DL-Forwarding
                                                                                                                        OPTIONAL,
    meNB-DL-GTP-TEIDatMCG
                                               GTPtunnelEndpoint
                                                                                                                        OPTIONAL.
-- This IE shall be present if MCG resource IE in the EN-DC Resource Configuration IE is set to "present" --
    s1-UL-GTPtunnelEndpoint
                                               GTPtunnelEndpoint,
    iE-Extensions
                                   ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBAddReq-Item-SqNBPDCPpresentExtIEs} } OPTIONAL,
E-RABs-ToBeAdded-SqNBAddReq-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-RLCMode-transferred
                                               CRITICALITY ignore EXTENSION RLCMode
                                                                                                    PRESENCE optional }
     ID id-BearerType
                                               CRITICALITY ignore EXTENSION BearerType
                                                                                                    PRESENCE optional }
     ID id-Ethernet-Type
                                               CRITICALITY ignore EXTENSION Ethernet-Type
                                                                                                    PRESENCE optional },
E-RABs-ToBeAdded-SqNBAddReq-Item-SqNBPDCPnotpresent ::= SEOUENCE
    requested-SCG-E-RAB-Level-QoS-Parameters
                                                   E-RAB-Level-QoS-Parameters,
    meNB-UL-GTP-TEIDatPDCP
                                                   GTPtunnelEndpoint,
    secondary-meNB-UL-GTP-TEIDatPDCP
                                                   GTPtunnelEndpoint OPTIONAL,
    rlc-Mode
                                                   RLCMode,
    uL-Configuration
                                                   ULConfiguration OPTIONAL,
-- This IE shall be present if MCG resource and SCG resources IEs in the EN-DC Resource Configuration IE are set to "present" --
    iE-Extensions
                                   ProtocolExtensionContainer { {E-RABs-ToBeAdded-SgNBAddReq-Item-SgNBPDCPnotpresentExtIEs} }
                                                                                                                                  OPTIONAL,
    . . .
E-RABs-ToBeAdded-SqNBAddReq-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-uLpDCPSnLength
                                                   CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                          PRESENCE optional }
     ID id-dLPDCPSnLength
                                                   CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                          PRESENCE optional }
     ID id-duplicationActivation
                                                   CRITICALITY ignore EXTENSION DuplicationActivation PRESENCE optional }
    . . .
-- SGNB ADDITION REQUEST ACKNOWLEDGE
__ ********************
SqNBAdditionRequestAcknowledge ::= SEQUENCE
    protocolIEs
                   ProtocolIE-Container
                                           {{SqNBAdditionRequestAcknowledge-IEs}},
    . . .
SqNBAdditionRequestAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                       CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                              PRESENCE mandatory }
     ID id-SqNB-UE-X2AP-ID
                                                       CRITICALITY reject TYPE SqNB-UE-X2AP-ID
                                                                                                                              PRESENCE mandatory }
     ID id-E-RABs-Admitted-ToBeAdded-SgNBAddReqAckList CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-SgNBAddReqAckList
                                                                                                                              PRESENCE mandatory}
     ID id-E-RABs-NotAdmitted-List
                                                       CRITICALITY ignore TYPE E-RAB-List
                                                                                                                              PRESENCE optional }
     ID id-SgNBtoMeNBContainer
                                                       CRITICALITY reject TYPE SgNBtoMeNBContainer
                                                                                                                              PRESENCE mandatory } |
     ID id-CriticalityDiagnostics
                                                       CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                              PRESENCE optional } |
```

```
ID id-MeNB-UE-X2AP-ID-Extension
                                                        CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                                PRESENCE optional }
     ID id-AdmittedSplitSRBs
                                                        CRITICALITY reject TYPE SplitSRBs
                                                                                                                                PRESENCE optional }
     ID id-SqNBResourceCoordinationInformation
                                                        CRITICALITY ignore TYPE SqNBResourceCoordinationInformation
                                                                                                                                PRESENCE optional }
     ID id-RRCConfigIndication
                                                        CRITICALITY reject TYPE RRC-Config-Ind
                                                                                                                                PRESENCE optional }
     ID id-LocationInformationSqNB
                                                        CRITICALITY ignore TYPE LocationInformationSqNB
                                                                                                                                PRESENCE optional }
     ID id-AvailableFastMCGRecovervViaSRB3
                                                        CRITICALITY ignore TYPE AvailableFastMCGRecoveryViaSRB3
                                                                                                                                PRESENCE optional }.
E-RABs-Admitted-ToBeAdded-SqNBAddReqAckList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeAdded-
SqNBAddReqAck-ItemIEs } }
E-RABs-Admitted-ToBeAdded-SqNBAddRegAck-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-Admitted-ToBeAdded-SqNBAddRegAck-Item
                                                         CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-SqNBAddRegAck-Item
                                                                                                                                      PRESENCE
mandatory }
E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item ::= SEQUENCE
    e-RAB-ID
                                        E-RAB-ID,
    en-DC-ResourceConfiguration
                                        EN-DC-ResourceConfiguration,
    resource-configuration
                                        CHOICE {
        sqNBPDCPpresent
                                            E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item-SqNBPDCPpresent,
       sqNBPDCPnotpresent
                                            E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item-SqNBPDCPnotpresent,
                                    ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBAddReqAck-ItemExtIEs} }
    iE-Extensions
E-RABs-ToBeAdded-SqNBAddRegAck-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item-SqNBPDCPpresent ::= SEQUENCE {
    s1-DL-GTPtunnelEndpoint
                                            GTPtunnelEndpoint,
    sqNB-UL-GTP-TEIDatPDCP
                                            GTPtunnelEndpoint
                                                                                                                                      OPTIONAL,
-- This IE shall be present if MCG resource IE in the EN-DC Resource Configuration IE is set to "present" --
    rlc-Mode
                                            RLCMode
                                                                                                                                      OPTIONAL,
-- This IE shall be present if MCG resource IE in the EN-DC Resource Configuration IE is set to "present" --
    dL-Forwarding-GTPtunnelEndpoint
                                            GTPtunnelEndpoint
                                                                                                                                      OPTIONAL,
    uL-Forwarding-GTPtunnelEndpoint
                                            GTPtunnelEndpoint
                                                                                                                                      OPTIONAL,
    mCG-E-RAB-Level-QoS-Parameters
                                            E-RAB-Level-OoS-Parameters
                                                                                                                                      OPTIONAL,
-- This IE shall be present if MCG resource and SCG resource IEs in the EN-DC Resource Configuration IE are set to "present" and the GBR QOS
Information IE is present in the Requested MCG E-RAB Level QoS Parameters IE --
    uL-Configuration
                                                ULConfiguration
                                                                                                                                         OPTIONAL,
-- This IE shall be present if MCG resource and SCG resources IEs in the EN-DC Resource Configuration IE are set to "present" --
    iE-Extensions
                                            ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item-SqNBPDCPpresentExtIEs} }
        OPTIONAL,
E-RABs-Admitted-ToBeAdded-SgNBAddReqAck-Item-SgNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-uLpDCPSnLength
                                                    CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                           PRESENCE optional }
     ID id-dLPDCPSnLength
                                                    CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                           PRESENCE optional },
```

```
E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item-SqNBPDCPnotpresent ::= SEQUENCE
    sqNB-DL-GTP-TEIDatSCG
                                       GTPtunnelEndpoint,
    secondary-sqNB-DL-GTP-TEIDatSCG
                                       GTPtunnelEndpoint
                                                               OPTIONAL,
                                       ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item-SqNBPDCPnotpresentExtIEs} }
    iE-Extensions
    OPTIONAL,
E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    { ID id-lCID
                               CRITICALITY ignore EXTENSION LCID
                                                                           PRESENCE optional },
    . . .
__ **********************
-- SGNB ADDITION REQUEST REJECT
SgNBAdditionRequestReject ::= SEQUENCE {
                   ProtocolIE-Container
                                           {{SgNBAdditionRequestReject-IEs}},
    protocolIEs
SgNBAdditionRequestReject-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                           CRITICALITY reject TYPE UE-X2AP-ID
                                                                                               PRESENCE mandatory }
     ID id-SqNB-UE-X2AP-ID
                                           CRITICALITY reject TYPE SqNB-UE-X2AP-ID
                                                                                               PRESENCE optional }
     ID id-Cause
                                           CRITICALITY ignore TYPE Cause
                                                                                               PRESENCE mandatory } |
     ID id-CriticalityDiagnostics
ID id-MeNB-UE-X2AP-ID-Extension
                                           CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                               PRESENCE optional } |
     ID id-MeNB-UE-X2AP-ID-Extension
                                           CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                               PRESENCE optional },
-- SGNB RECONFIGURATION COMPLETE
SgNBReconfigurationComplete ::= SEQUENCE {
    protocolIEs
                   ProtocolIE-Container
                                           {{SqNBReconfigurationComplete-IEs}},
SgNBReconfigurationComplete-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                   CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                      PRESENCE mandatory
     ID id-SgNB-UE-X2AP-ID
                                                   CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                                                     PRESENCE mandatory }
    ID id-ResponseInformationSqNBReconfComp
                                                   CRITICALITY ignore TYPE ResponseInformationSqNBReconfComp
                                                                                                                      PRESENCE mandatory }
```

```
{ ID id-MeNB-UE-X2AP-ID-Extension
                                                  CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                   PRESENCE optional },
ResponseInformationSqNBReconfComp ::= CHOICE {
    success-SqNBReconfComp
                                      ResponseInformationSqNBReconfComp-SuccessItem,
    reject-by-MeNB-SqNBReconfComp
                                      ResponseInformationSqNBReconfComp-RejectByMeNBItem,
ResponseInformationSqNBReconfComp-SuccessItem ::= SEQUENCE {
    meNBtoSqNBContainer
                                  MeNBtoSgNBContainer
                                                                      OPTIONAL,
   iE-Extensions
                                  ProtocolExtensionContainer { ResponseInformationSqNBReconfComp-SuccessItemExtIEs} } OPTIONAL,
ResponseInformationSqNBReconfComp-SuccessItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ResponseInformationSqNBReconfComp-RejectByMeNBItem ::= SEQUENCE {
                                   ProtocolExtensionContainer { {ResponseInformationSqNBReconfComp-RejectByMeNBItemExtIEs} }
   iE-Extensions
                                                                                                                              OPTIONAL,
    . . .
ResponseInformationSqNBReconfComp-RejectByMeNBItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     *****************
-- SGNB MODIFICATION REQUEST
  *****************
SqNBModificationRequest ::= SEQUENCE {
                   ProtocolIE-Container
                                          {{ SgNBModificationRequest-IEs}},
   protocolIEs
    . . .
SqNBModificationRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                  CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                   PRESENCE mandatory }
     ID id-SqNB-UE-X2AP-ID
                                                  CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                                                   PRESENCE mandatory
     ID id-Cause
                                                  CRITICALITY ignore TYPE Cause
                                                                                                                   PRESENCE mandatory }
     ID id-SelectedPLMN
                                                  CRITICALITY ignore TYPE PLMN-Identity
                                                                                                                   PRESENCE optional }
                                                  CRITICALITY ignore TYPE HandoverRestrictionList
     ID id-HandoverRestrictionList
                                                                                                                   PRESENCE optional }
                                                                                                                   PRESENCE optional }
                                                  CRITICALITY ignore TYPE SCGConfigurationQuery
     ID id-SCGConfigurationQuery
     ID id-UE-ContextInformation-SgNBModReq
                                                  CRITICALITY reject TYPE UE-ContextInformation-SgNBModReq
                                                                                                                   PRESENCE optional }
     ID id-MeNBtoSgNBContainer
                                                  CRITICALITY reject TYPE MeNBtoSgNBContainer
                                                                                                                   PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                  CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                   PRESENCE optional }
     ID id-MeNBResourceCoordinationInformation
                                                  CRITICALITY ignore TYPE MeNBResourceCoordinationInformation
                                                                                                                   PRESENCE optional }
     ID id-RequestedSplitSRBs
                                                  CRITICALITY ignore TYPE SplitSRBs
                                                                                                                   PRESENCE optional }
```

374

```
ID id-RequestedSplitSRBsrelease
                                                     CRITICALITY ignore TYPE SplitSRBs
                                                                                                                        PRESENCE optional }
      ID id-DesiredActNotificationLevel
                                                     CRITICALITY ignore TYPE DesiredActNotificationLevel
                                                                                                                        PRESENCE optional }
                                                                                                                        PRESENCE optional
      ID id-LocationInformationSqNBReporting
                                                     CRITICALITY ignore TYPE LocationInformationSqNBReporting
      ID id-MeNBCell-ID
                                                     CRITICALITY ignore TYPE ECGI
                                                                                                                        PRESENCE optional }
      ID id-RequestedFastMCGRecoveryViaSRB3
                                                     CRITICALITY ignore TYPE RequestedFastMCGRecoveryViaSRB3
                                                                                                                        PRESENCE optional }
      ID id-RequestedFastMCGRecoveryViaSRB3Release CRITICALITY ignore TYPE RequestedFastMCGRecoveryViaSRB3Release
                                                                                                                        PRESENCE optional }
      ID id-SNtriggered
                                                     CRITICALITY ignore TYPE SNtriggered
                                                                                                                        PRESENCE optional }
     ID id-IABNodeIndication
                                                     CRITICALITY reject TYPE IABNodeIndication
                                                                                                                        PRESENCE optional },
UE-ContextInformation-SqNBModReg ::= SEQUENCE {
    nRUE-SecurityCapabilities
                                    NRUESecurityCapabilities
                                                                                                                  OPTIONAL.
    sqNB-SecurityKey
                                    SqNBSecurityKey
                                                                                                                  OPTIONAL.
    sqNBUEAggregateMaximumBitRate
                                    UEAggregateMaximumBitRate
                                                                                                                  OPTIONAL,
    e-RABs-ToBeAdded
                                    E-RABs-ToBeAdded-SqNBModReg-List
                                                                                                                  OPTIONAL,
                                    E-RABs-ToBeModified-SqNBModReg-List
    e-RABs-ToBeModified
                                                                                                                  OPTIONAL,
                                    E-RABs-ToBeReleased-SqNBModReg-List
    e-RABs-ToBeReleased
                                                                                                                  OPTIONAL,
                                    ProtocolExtensionContainer { {UE-ContextInformationSqNBModRegExtIEs} }
    iE-Extensions
                                                                                                                  OPTIONAL,
    . . .
UE-ContextInformationSqNBModReqExtIEs X2AP-PROTOCOL-EXTENSION ::= {
       ID id-SubscriberProfileIDforRFP
                                                         CRITICALITY ignore EXTENSION SubscriberProfileIDforRFP
                                                                                                                                          PRESENCE
optional}|
      ID id-AdditionalRRMPriorityIndex
                                                     CRITICALITY ignore EXTENSION Additional RRMPriorityIndex
                                                                                                                           PRESENCE optional |
    {ID id-LowerLayerPresenceStatusChange
                                                    CRITICALITY ignore EXTENSION LowerLayerPresenceStatusChange
                                                                                                                           PRESENCE optional },
E-RABs-ToBeAdded-SqNBModReq-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeAdded-SqNBModReq-ItemIEs} }
E-RABs-ToBeAdded-SqNBModReq-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeAdded-SqNBModReq-Item
                                                    CRITICALITY ignore TYPE E-RABs-ToBeAdded-SqNBModReq-Item
                                                                                                                  PRESENCE mandatory },
    . . .
E-RABs-ToBeAdded-SqNBModReg-Item ::= SEQUENCE {
    e-RAB-ID
                                            E-RAB-ID,
    drb-ID
                                            DRB-ID,
    en-DC-ResourceConfiguration
                                            EN-DC-ResourceConfiguration,
    resource-configuration
                                            CHOICE {
        sqNBPDCPpresent
                                            E-RABs-ToBeAdded-SqNBModReg-Item-SqNBPDCPpresent,
       sqNBPDCPnotpresent
                                            E-RABs-ToBeAdded-SqNBModReq-Item-SqNBPDCPnotpresent,
    iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBModReq-ItemExtIEs} } 
E-RABs-ToBeAdded-SqNBModReq-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
E-RABs-ToBeAdded-SqNBModReq-Item-SqNBPDCPpresent ::= SEQUENCE {
    full-E-RAB-Level-OoS-Parameters
                                           E-RAB-Level-QoS-Parameters,
    max-MN-admit-E-RAB-Level-Oos-Parameters GBR-OosInformation
-- This IE shall be present if MCG resource and SCG resources IEs in the EN-DC Resource Configuration IE are set to "present" and GBR QoS
Information IE is present in Full E-RAB Level QoS Parameters IE --
    dL-Forwarding
                                           DL-Forwarding
   meNB-DL-GTP-TEIDatMCG
                                           GTPtunnelEndpoint
                                                                                                                     OPTIONAL,
-- This IE shall be present if MCG resource IE in the EN-DC Resource Configuration IE is set to "present" --
    s1-UL-GTPtunnelEndpoint
                                           GTPtunnelEndpoint,
                                   ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBModReq-Item-SqNBPDCPpresentExtIEs} }
    iE-Extensions
                                                                                                                              OPTIONAL,
E-RABs-ToBeAdded-SqnBModReq-Item-SqnBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      ID id-RLCMode-transferred
                                    CRITICALITY ignore EXTENSION RLCMode
                                                                                                   PRESENCE optional }
     ID id-BearerType
                                               CRITICALITY ignore EXTENSION BearerType
                                                                                                   PRESENCE optional }
     ID id-Ethernet-Type
                                               CRITICALITY ignore EXTENSION Ethernet-Type
                                                                                                   PRESENCE optional },
E-RABs-ToBeAdded-SqNBModReq-Item-SqNBPDCPnotpresent ::= SEQUENCE
    requested-SCG-E-RAB-Level-QoS-Parameters
                                                   E-RAB-Level-QoS-Parameters,
    meNB-UL-GTP-TEIDatPDCP
                                                   GTPtunnelEndpoint,
    secondary-meNB-UL-GTP-TEIDatPDCP
                                                   GTPtunnelEndpoint
                                                                           OPTIONAL,
    rlc-Mode
                                                   RLCMode,
    uL-Configuration
                                                   ULConfiguration
-- This IE shall be present if MCG resource and SCG resources IEs in the EN-DC Resource Configuration IE are set to "present" --
                                   ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBModReg-Item-SqNBPDCPnotpresentExtIEs} }
    iE-Extensions
                                                                                                                                OPTIONAL,
    . . .
E-RABs-ToBeAdded-SqNBModReq-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-uLpDCPSnLength
                                                   CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                         PRESENCE optional }
     ID id-dLPDCPSnLength
                                                   CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                         PRESENCE optional
     ID id-duplicationActivation
                                                   CRITICALITY ignore EXTENSION DuplicationActivation PRESENCE optional },
E-RABs-ToBeModified-SqNBModReg-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeModified-SqNBModReg-
ItemIEs } }
E-RABs-ToBeModified-SqNBModReq-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeModified-SqNBModReg-Item CRITICALITY ignore TYPE E-RABs-ToBeModified-SqNBModReg-Item
                                                                                                               PRESENCE mandatory },
    . . .
E-RABs-ToBeModified-SgNBModReq-Item ::= SEQUENCE {
    e-RAB-ID
                                           E-RAB-ID,
    en-DC-ResourceConfiguration
                                       EN-DC-ResourceConfiguration,
    resource-configuration
                                       CHOICE {
        sgNBPDCPpresent
                                           E-RABs-ToBeModified-SgNBModReq-Item-SgNBPDCPpresent,
                                           E-RABs-ToBeModified-SqNBModReq-Item-SqNBPDCPnotpresent,
        sqNBPDCPnotpresent
```

```
iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeModified-SqNBModReq-ItemExtIEs} } OPTIONAL,
E-RABs-ToBeModified-SqNBModReq-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeModified-SqNBModReq-Item-SqNBPDCPpresent ::= SEQUENCE
    full-E-RAB-Level-QoS-Parameters
                                            E-RAB-Level-OoS-Parameters
                                                                                                                                OPTIONAL,
    max-MN-admit-E-RAB-Level-QoS-Parameters GBR-QosInformation
                                                                                                                                OPTIONAL.
    meNB-DL-GTP-TEIDatMCG
                                            GTPtunnelEndpoint
                                                                                                                                OPTIONAL,
    s1-UL-GTPtunnelEndpoint
                                            GTPtunnelEndpoint
                                                                                                                                OPTIONAL,
    iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeModified-SqNBModReg-Item-SqNBPDCPpresentExtIEs} } OPTIONAL,
    . . .
E-RABs-ToBeModified-SqNBModReq-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    { ID id-RLC-Status
                                CRITICALITY ignore
                                                            EXTENSION RLC-Status
                                                                                                 PRESENCE optional },
    . . .
E-RABs-ToBeModified-SqNBModReq-Item-SqNBPDCPnotpresent ::= SEQUENCE
    requested-SCG-E-RAB-Level-QoS-Parameters
                                                    E-RAB-Level-OoS-Parameters
                                                                                                                                          OPTIONAL.
    meNB-UL-GTP-TEIDatPDCP
                                                GTPtunnelEndpoint
                                                                                                                                      OPTIONAL,
    uL-Configuration
                                                    ULConfiguration
                                                                                                                                          OPTIONAL,
                                    ProtocolExtensionContainer { {E-RABs-ToBeModified-SqNBModReg-Item-SqNBPDCPnotpresentExtIEs} } OPTIONAL,
    iE-Extensions
E-RABs-ToBeModified-SqnBModReq-Item-SqnBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      ID id-uLpDCPSnLength
                                                    CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                           PRESENCE optional }
      ID id-dLPDCPSnLength
                                                    CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                           PRESENCE optional }
     ID id-secondarymeNBULGTPTEIDatPDCP
                                                    CRITICALITY ignore EXTENSION GTPtunnelEndpoint
                                                                                                           PRESENCE optional }
E-RABs-ToBeReleased-SqNBModReg-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-SqNBModReg-
ItemIEs } }
E-RABs-ToBeReleased-SqNBModReq-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-SqNBModReq-Item CRITICALITY ignore TYPE E-RABs-ToBeReleased-SqNBModReq-Item
                                                                                                                 PRESENCE mandatory },
    . . .
E-RABs-ToBeReleased-SqNBModReq-Item ::= SEQUENCE {
    e-RAB-ID
                                            E-RAB-ID,
    en-DC-ResourceConfiguration
                                        EN-DC-ResourceConfiguration,
    resource-configuration
                                        CHOICE {
        sqNBPDCPpresent
                                            E-RABs-ToBeReleased-SgNBModReq-Item-SgNBPDCPpresent,
        sgNBPDCPnotpresent
                                            E-RABs-ToBeReleased-SgNBModReq-Item-SgNBPDCPnotpresent,
```

```
iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBModReg-ItemExtIEs} } OPTIONAL,
E-RABs-ToBeReleased-SqNBModReq-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SqNBModReq-Item-SqNBPDCPpresent ::= SEQUENCE
   dL-GTPtunnelEndpoint
                                  GTPtunnelEndpoint
                                                                                                                    OPTIONAL,
    uL-GTPtunnelEndpoint
                                  GTPtunnelEndpoint
                                                                                                                    OPTIONAL,
   iE-Extensions
                              ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBModReg-Item-SqNBPDCPpresentExtIEs} } OPTIONAL,
E-RABs-ToBeReleased-SqNBModReq-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SqNBModReq-Item-SqNBPDCPnotpresent ::= SEQUENCE {
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBModReq-Item-SqNBPDCPnotpresentExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-ToBeReleased-SgnBModReq-Item-SgnBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  *****************
-- SGNB MODIFICATION REQUEST ACKNOWLEDGE
  *****************
SgNBModificationRequestAcknowledge ::= SEQUENCE {
                   ProtocolIE-Container
                                         {{SqNBModificationRequestAcknowledge-IEs}},
   protocolIEs
   . . .
SqNBModificationRequestAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                     CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                          PRESENCE mandatory \
     ID id-SaNB-UE-X2AP-ID
                                                     CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                                                             PRESENCE
mandatory} |
    { ID id-E-RABs-Admitted-ToBeAdded-SgNBModAckList
                                                         CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-SqNBModAckList
                                                                                                                                PRESENCE
optional}
     ID id-E-RABs-Admitted-ToBeModified-SqNBModAckList CRITICALITY ignore TYPE E-RABs-Admitted-ToBeModified-SqNBModAckList
                                                                                                                          PRESENCE optional }
     ID id-E-RABs-Admitted-ToBeReleased-SqNBModAckList CRITICALITY ignore TYPE E-RABs-Admitted-ToBeReleased-SqNBModAckList
                                                                                                                          PRESENCE optional}
     ID id-E-RABs-NotAdmitted-List
                                                     CRITICALITY ignore TYPE E-RAB-List
                                                                                                                          PRESENCE optional }
     ID id-SgNBtoMeNBContainer
                                                     CRITICALITY ignore TYPE SgNBtoMeNBContainer
                                                                                                                          PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                     CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                          PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                                                                                          PRESENCE optional |
                                                     CRITICALITY ignore TYPE UE-X2AP-ID-Extension
```

```
ID id-SqNBResourceCoordinationInformation
                                                      CRITICALITY ignore TYPE SgNBResourceCoordinationInformation
                                                                                                                           PRESENCE optional }
     ID id-AdmittedSplitSRBs
                                                      CRITICALITY ignore TYPE SplitSRBs
                                                                                                                           PRESENCE optional }
     ID id-AdmittedSplitSRBsrelease
                                                          CRITICALITY ignore TYPE SplitSRBs
                                                                                                                              PRESENCE
optional}|
     ID id-RRCConfigIndication
                                                      CRITICALITY reject TYPE RRC-Config-Ind
                                                                                                                           PRESENCE optional }
     ID id-LocationInformationSqNB
                                                      CRITICALITY ignore TYPE LocationInformationSqNB
                                                                                                                           PRESENCE optional }
                                                                                                                           PRESENCE optional } |
     ID id-AvailableFastMCGRecoveryViaSRB3
                                                      CRITICALITY ignore TYPE AvailableFastMCGRecoveryViaSRB3
     ID id-ReleaseFastMCGRecoveryViaSRB3
                                              CRITICALITY ignore TYPE ReleaseFastMCGRecoveryViaSRB3
                                                                                                             PRESENCE optional },
E-RABs-Admitted-ToBeAdded-SqnBModAckList ::= SEOUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeAdded-
SqNBModAck-ItemIEs } }
E-RABs-Admitted-ToBeAdded-SqNBModAck-ItemIEs X2AP-PROTOCOL-IES ::= {
     PRESENCE mandatory }
E-RABs-Admitted-ToBeAdded-SqNBModAck-Item ::= SEQUENCE {
    e-RAB-ID
                                          E-RAB-ID,
    en-DC-ResourceConfiguration
                                      EN-DC-ResourceConfiguration,
    resource-configuration
                                      CHOICE {
       sqNBPDCPpresent
                                          E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPpresent,
       sqNBPDCPnotpresent
                                          E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPnotpresent,
                                   ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-SqNBModAck-ItemExtIEs} } OPTIONAL,
    iE-Extensions
E-RABs-Admitted-ToBeAdded-SqNBModAck-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPpresent ::= SEQUENCE {
    s1-DL-GTPtunnelEndpoint
                                          GTPtunnelEndpoint,
    sgNB-UL-GTP-TEIDatPDCP
                                          GTPtunnelEndpoint
                                                                                                                              OPTIONAL,
-- This IE shall be present if MCG resource IE in the EN-DC Resource Configuration IE are set to "present" --
    rlc-Mode
                                              RLCMode
                                                                                                                                 OPTIONAL,
-- This IE shall be present if MCG resource IE in the EN-DC Resource Configuration IE are set to "present" --
    dL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
                                                                                                                              OPTIONAL,
   uL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
                                                                                                                              OPTIONAL,
   mCG-E-RAB-Level-QoS-Parameters
                                          E-RAB-Level-QoS-Parameters
                                                                                                                              OPTIONAL,
-- This IE shall be present if MCG resource and SCG resource IEs in the EN-DC Resource Configuration IE are set to "present" and the GBR QoS
Information IE is present in the Requested MCG E-RAB Level OoS Parameters IE --
   uL-Configuration
                                          ULConfiguration
                                                                                                                                 OPTIONAL,
-- This IE shall be present if MCG resource and SCG resources IEs in the EN-DC Resource Configuration IE are set to "present" --
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPpresentExtIEs} }
                                                                                                                                    OPTIONAL,
E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-uLpDCPSnLength
                                                  CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                       PRESENCE optional }
     ID id-dLPDCPSnLength
                                                  CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                       PRESENCE optional },
```

```
E-RABs-Admitted-ToBeAdded-SqnBModAck-Item-SqnBPDCPnotpresent ::= SEQUENCE {
    sqNB-DL-GTP-TEIDatSCG
                                            GTPtunnelEndpoint,
                                            GTPtunnelEndpoint
    secondary-sqNB-DL-GTP-TEIDatSCG
                                                                         OPTIONAL,
                                    ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPnotpresentExtIEs} } OPTIONAL,
    iE-Extensions
E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
                            CRITICALITY ignore EXTENSION LCID
                                                                     PRESENCE optional },
    {ID id-lCID
    . . .
E-RABs-Admitted-ToBeModified-SqNBModAckList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeModified-
SqNBModAck-ItemIEs } }
E-RABs-Admitted-ToBeModified-SqNBModAck-ItemIEs X2AP-PROTOCOL-IES ::=
    { ID id-E-RABs-Admitted-ToBeModified-SqNBModAck-Item
                                                                CRITICALITY ignore TYPE E-RABs-Admitted-ToBeModified-SqNBModAck-Item
mandatory }
E-RABs-Admitted-ToBeModified-SqNBModAck-Item ::= SEOUENCE
    e-RAB-ID
                                            E-RAB-ID,
    en-DC-ResourceConfiguration
                                        EN-DC-ResourceConfiguration,
    resource-configuration
                                        CHOICE {
        sqNBPDCPpresent
                                            E-RABs-Admitted-ToBeModified-SgNBModAck-Item-SgNBPDCPpresent,
                                            E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPnotpresent,
        sgNBPDCPnotpresent
                                    ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBModAck-ItemExtIEs} }
    iE-Extensions
                                                                                                               OPTIONAL,
    . . .
E-RABs-ToBeAdded-SqNBModAck-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeModified-SgNBModAck-Item-SgNBPDCPpresent ::= SEQUENCE {
                                            GTPtunnelEndpoint
    s1-DL-GTPtunnelEndpoint
                                                                                                                                       OPTIONAL,
    sgNB-UL-GTP-TEIDatPDCP
                                            GTPtunnelEndpoint
                                                                                                                                       OPTIONAL,
                                            E-RAB-Level-QoS-Parameters
    mCG-E-RAB-Level-QoS-Parameters
                                                                                                                                       OPTIONAL,
    uL-Configuration
                                                ULConfiguration
                                                                                                                                          OPTIONAL,
                                    ProtocolExtensionContainer { {E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPpresentExtIEs} } OPTIONAL.
    iE-Extensions
E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      ID id-uLpDCPSnLength
                                                    CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                            PRESENCE optional }
     ID id-dLPDCPSnLength
                                                     CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                            PRESENCE optional },
    . . .
```

```
E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPnotpresent ::= SEQUENCE
    sqNB-DL-GTP-TEIDatSCG
                                             GTPtunnelEndpoint
    OPTIONAL.
    iE-Extensions
                                     ProtocolExtensionContainer { {E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPnotpresentExtIEs} }
    OPTIONAL,
    . . .
E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      ID id-secondarysqNBDLGTPTEIDatPDCP
                                                      CRITICALITY ignore EXTENSION GTPtunnelEndpoint
                                                                                                                 PRESENCE optional }
     ID id-RLC-Status
                                                      CRITICALITY ignore
                                                                                   EXTENSION RLC-Status
                                                                                                                 PRESENCE optional },
    . . .
E-RABs-Admitted-ToBeReleased-SqNBModAckList ::= SEOUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeReleased-SqNBModAckList ::= SEOUENCE (SIZE (1..maxnoofBearers)) }
SqNBModAck-ItemIEs } }
E-RABs-Admitted-ToBeReleased-SqNBModAck-ItemIEs X2AP-PROTOCOL-IES ::=
    { ID id-E-RABs-Admitted-ToBeReleased-SqNBModAck-Item
                                                                  CRITICALITY ignore TYPE E-RABs-Admitted-ToReleased-SqNBModAck-Item
                                                                                                                                             PRESENCE
mandatory }
E-RABs-Admitted-ToReleased-SqNBModAck-Item ::= SEQUENCE
    e-RAB-ID
                                         E-RAB-ID,
    en-DC-ResourceConfiguration
                                         EN-DC-ResourceConfiguration,
    resource-configuration
                                         CHOICE
        sqNBPDCPpresent
                                             E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPpresent,
        sgNBPDCPnotpresent
                                             E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPnotpresent,
    iE-Extensions
                                     ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBModAck-ItemExtIEs} }
E-RABs-ToBeReleased-SqNBModAck-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::=
E-RABs-Admitted-ToBeReleased-SgNBModAck-Item-SgNBPDCPpresent ::= SEQUENCE {
    iE-Extensions
                                 ProtocolExtensionContainer { {E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPpresentExtIEs} }
                                                                                                                                             OPTIONAL,
    . . .
E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPnotpresent ::= SEQUENCE {
                                 ProtocolExtensionContainer { {E-RABs-Admitted-ToBeReleased-SgNBModAck-Item-SgNBPDCPnotpresentExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
E-RABs-Admitted-ToBeReleased-SgNBModAck-Item-SgNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
**********
-- SGNB MODIFICATION REQUEST REJECT
  *****************
SqNBModificationRequestReject ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        {{SqNBModificationRequestReject-IEs}},
   . . .
SqNBModificationRequestReject-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                            CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                          PRESENCE mandatory |
     ID id-SqNB-UE-X2AP-ID
                                            CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                             PRESENCE mandatory }
                                                                                          PRESENCE mandatory } |
     ID id-Cause
                                            CRITICALITY ignore TYPE Cause
     ID id-CriticalityDiagnostics
                                            CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                          PRESENCE optional } |
     ID id-MeNB-UE-X2AP-ID-Extension
                                            CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                          PRESENCE optional },
    *************
-- SGNB MODIFICATION REQUIRED
  *****************
SqNBModificationRequired ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                            {{SqNBModificationRequired-IEs}},
   . . .
SqNBModificationRequired-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                                           PRESENCE mandatory |
                                                CRITICALITY reject TYPE UE-X2AP-ID
     ID id-SqNB-UE-X2AP-ID
                                                CRITICALITY reject TYPE SqNB-UE-X2AP-ID
                                                                                                              PRESENCE mandatory }
     ID id-Cause
                                                CRITICALITY ignore TYPE Cause
                                                                                                           PRESENCE mandatory |
                                                    CRITICALITY ignore TYPE PDCPChangeIndication
     ID id-PDCPChangeIndication
                                                                                                                PRESENCE optional |
     ID id-E-RABs-ToBeReleased-SgNBModReqdList
                                                CRITICALITY ignore TYPE E-RABs-ToBeReleased-SgNBModReqdList
                                                                                                           PRESENCE optional } |
                                                                                                              PRESENCE optional } |
     ID id-SgNBtoMeNBContainer
                                                CRITICALITY ignore TYPE SgNBtoMeNBContainer
                                                CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                           PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
     ID id-E-RABs-ToBeModified-SqNBModRegdList
                                                CRITICALITY ignore TYPE E-RABs-ToBeModified-SqNBModRegdList
                                                                                                           PRESENCE optional }
     ID id-SqNBResourceCoordinationInformation
                                                CRITICALITY ignore TYPE SqNBResourceCoordinationInformation
                                                                                                           PRESENCE optional }
     ID id-RRCConfigIndication
                                                CRITICALITY reject TYPE RRC-Config-Ind
                                                                                                           PRESENCE optional }
     ID id-LocationInformationSqNB
                                                CRITICALITY ignore TYPE LocationInformationSqNB
                                                                                                           PRESENCE optional }.
E-RABs-ToBeReleased-SqNBModReqdList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-SqNBModReqd-
ItemIEs} }
```

```
E-RABs-ToBeReleased-SqNBModReqd-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-SqNBModRegd-Item
                                                     CRITICALITY ignore
                                                                            TYPE E-RABs-ToBeReleased-SqNBModRegd-Item
                                                                                                                          PRESENCE mandatory },
    . . .
E-RABs-ToBeReleased-SqNBModReqd-Item ::= SEQUENCE {
    e-RAB-ID
                                        E-RAB-ID,
    cause
    iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBModRegd-ItemExtIEs} } OPTIONAL,
E-RABs-ToBeReleased-SqNBModRegd-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    { ID id-RLCMode-transferred
                                                CRITICALITY ignore EXTENSION RLCMode
                                                                                                     PRESENCE optional },
    . . .
E-RABs-ToBeModified-SqnBModRegdList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeModified-SqnBModRegd-
ItemIEs} }
E-RABs-ToBeModified-SqNBModReqd-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeModified-SqNBModReqd-Item
                                                                            TYPE E-RABs-ToBeModified-SqNBModRegd-Item
                                                                                                                           PRESENCE mandatory },
                                                     CRITICALITY ignore
E-RABs-ToBeModified-SgNBModReqd-Item ::= SEQUENCE
    e-RAB-ID
                                            E-RAB-ID,
    en-DC-ResourceConfiguration
                                        EN-DC-ResourceConfiguration,
    resource-configuration
                                        CHOICE {
                                            E-RABs-ToBeModified-SgNBModReqd-Item-SgNBPDCPpresent,
        sgNBPDCPpresent
        sqNBPDCPnotpresent
                                            E-RABs-ToBeModified-SqNBModReqd-Item-SqNBPDCPnotpresent,
                                    ProtocolExtensionContainer { {E-RABs-ToBeModified-SqNBModReqd-ItemExtIEs} } OPTIONAL,
    iE-Extensions
E-RABs-ToBeModified-SqNBModReqd-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeModified-SqNBModReqd-Item-SqNBPDCPpresent ::= SEQUENCE {
    requested-MCG-E-RAB-Level-QoS-Parameters
                                                    E-RAB-Level-QoS-Parameters
                                                                                                                       OPTIONAL,
    uL-Configuration
                                                    ULConfiguration
                                                                                                                       OPTIONAL,
    sqNB-UL-GTP-TEIDatPDCP
                                                GTPtunnelEndpoint
                                                                                                                    OPTIONAL,
    s1-DL-GTP-TEIDatSqNB
                                                    GTPtunnelEndpoint
                                                                                                                       OPTIONAL,
    iE-Extensions
                                ProtocolExtensionContainer { {E-RABs-ToBeModified-SqNBModReqd-Item-SqNBPDCPpresentExtIEs} }
E-RABs-ToBeModified-SgNBModReqd-Item-SgNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      ID id-uLpDCPSnLength
                                                    CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                            PRESENCE optional }
      ID id-dLPDCPSnLength
                                                    CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                            PRESENCE optional }
     ID id-new-drb-ID-req
                                                    CRITICALITY ignore EXTENSION NewDRBIDrequest
                                                                                                            PRESENCE optional }
```

```
E-RABs-ToBeModified-SqNBModReqd-Item-SqNBPDCPnotpresent ::= SEQUENCE {
   sqNB-DL-GTP-TEIDatSCG
                                    GTPtunnelEndpoint
                                                                  OPTIONAL,
   secondary-sqNB-DL-GTP-TEIDatSCG
                                    GTPtunnelEndpoint
                                                                  OPTIONAL,
   iE-Extensions
                             ProtocolExtensionContainer { {E-RABs-ToBeModified-SqNBModReqd-Item-SqNBPDCPnotpresentExtIEs} }
                                                                                                                       OPTIONAL
E-RABs-ToBeModified-SqNBModReqd-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-RLC-Status
                             CRITICALITY ignore
                                                                                        PRESENCE optional }
                                                      EXTENSION RLC-Status
                             CRITICALITY ignore
    ID id-lCID
                                                      EXTENSION LCID
                                                                                        PRESENCE optional }
        ****************
-- SGNB MODIFICATION CONFIRM
  *****************
SqNBModificationConfirm ::= SEQUENCE {
                  ProtocolIE-Container
                                        {{SgNBModificationConfirm-IEs}},
   protocolIEs
   . . .
SqNBModificationConfirm-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                   CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                    PRESENCE mandatory |
     ID id-SqNB-UE-X2AP-ID
                                                   CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                                                       PRESENCE
mandatory } |
     ID id-E-RABs-AdmittedToBeModified-SqNBModConfList CRITICALITY ignore TYPE E-RABs-AdmittedToBeModified-SqNBModConfList
                                                                                                                    PRESENCE optional }
     ID id-MeNBtoSqNBContainer
                                                   CRITICALITY ignore TYPE MeNBtoSqNBContainer
                                                                                                                    PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                   CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                    PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                   CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                    PRESENCE optional }
     ID id-MeNBResourceCoordinationInformation
                                                   CRITICALITY ignore TYPE MeNBResourceCoordinationInformation
                                                                                                                    PRESENCE optional },
   . . .
E-RABs-AdmittedToBeModified-SgNBModConfList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container
   { {E-RABs-AdmittedToBeModified-SgNBModConf-ItemIEs} }
E-RABs-AdmittedToBeModified-SqNBModConf-ItemIEs X2AP-PROTOCOL-IES ::= {
mandatory },
   . . .
E-RABs-AdmittedToBeModified-SgNBModConf-Item ::= SEQUENCE
   e-RAB-ID
                                        E-RAB-ID,
   en-DC-ResourceConfiguration
                                    EN-DC-ResourceConfiguration,
   resource-configuration
                                    CHOICE {
       sqNBPDCPpresent
                                        E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPpresent,
```

```
sqNBPDCPnotpresent
                                         E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPnotpresent,
    iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-AdmittedToBeModified-SqNBModConf-ItemExtIEs} } OPTIONAL,
E-RABs-AdmittedToBeModified-SqNBModConf-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPpresent ::= SEQUENCE {
                              ProtocolExtensionContainer { {E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPpresentExtIEs} }
   iE-Extensions
                                                                                                                                 OPTIONAL,
    . . .
E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPnotpresent ::= SEQUENCE {
    secondary-meNB-UL-GTP-TEIDatPDCP
                                                 GTPtunnelEndpoint
                                                                                OPTIONAL,
                              ProtocolExtensionContainer { {E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPnotpresentExtIEs} }
   iE-Extensions
   OPTIONAL,
E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-uLpDCPSnLength
                                                 CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                     PRESENCE optional }
    { ID id-dLPDCPSnLength
                                                 CRITICALITY ignore EXTENSION PDCPSnLength
                                                                                                     PRESENCE optional },
    . . .
__ *********************
-- SGNB MODIFICATION REFUSE
SqNBModificationRefuse ::= SEQUENCE
                                             {{SgNBModificationRefuse-IEs}},
   protocolIEs
                ProtocolIE-Container
    . . .
SqNBModificationRefuse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                             CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                             PRESENCE mandatory |
     ID id-SgNB-UE-X2AP-ID
                                                                                               PRESENCE mandatory}
                                             CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
     ID id-Cause
                                             CRITICALITY ignore TYPE Cause
                                                                                             PRESENCE mandatory |
     ID id-MeNBtoSgNBContainer
                                             CRITICALITY ignore TYPE MeNBtoSgNBContainer
                                                                                               PRESENCE optional |
     ID id-CriticalityDiagnostics
                                                                                             PRESENCE optional } |
                                             CRITICALITY ignore TYPE CriticalityDiagnostics
     ID id-MeNB-UE-X2AP-ID-Extension
                                                                                             PRESENCE optional },
                                             CRITICALITY ignore TYPE UE-X2AP-ID-Extension
    . . .
```

```
__ *********************
-- SGNB RELEASE REQUEST
    SqNBReleaseRequest ::= SEQUENCE {
   protocolIEs
                ProtocolIE-Container
                                             {{SqNBReleaseRequest-IEs}},
SqNBReleaseRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                 CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                              PRESENCE mandatory } |
     ID id-SqNB-UE-X2AP-ID
                                                 CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                                                 PRESENCE optional } |
     ID id-Cause
                                                 CRITICALITY ignore TYPE Cause
                                                                                                              PRESENCE mandatory |
     ID id-E-RABs-ToBeReleased-SqNBRelRegList
                                                 CRITICALITY ignore TYPE E-RABs-ToBeReleased-SqNBRelRegList
                                                                                                              PRESENCE optional }
     ID id-UE-ContextKeptIndicator
                                                 CRITICALITY ignore TYPE UE-ContextKeptIndicator
                                                                                                              PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                 CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                              PRESENCE optional }
                                                 CRITICALITY reject TYPE MeNBtoSqNBContainer
                                                                                                                 PRESENCE optional } |
     ID id-MeNBtoSqNBContainer
    ID id-ERABs-transferred-to-MeNB
                                                 CRITICALITY ignore TYPE E-RAB-List
                                                                                                              PRESENCE optional },
E-RABs-ToBeReleased-SqNBRelRegList ::= SEOUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-SqNBRelReg-
ItemIEs} }
E-RABs-ToBeReleased-SqNBRelReq-ItemIEs X2AP-PROTOCOL-IES ::= {
   { ID id-E-RABs-ToBeReleased-SqNBRelReg-Item
                                              CRITICALITY ignore TYPE E-RABs-ToBeReleased-SqNBRelReg-Item PRESENCE mandatory },
    . . .
E-RABs-ToBeReleased-SqNBRelReg-Item ::= SEQUENCE {
   e-RAB-ID
                                      E-RAB-ID,
   en-DC-ResourceConfiguration
                                     EN-DC-ResourceConfiguration,
   resource-configuration
                                     CHOICE {
       sqNBPDCPpresent
                                         E-RABs-ToBeReleased-SqNBRelReq-Item-SqNBPDCPpresent,
       sgNBPDCPnotpresent
                                         E-RABs-ToBeReleased-SgNBRelReq-Item-SgNBPDCPnotpresent,
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBRelReg-ItemExtIEs} } OPTIONAL,
E-RABs-ToBeReleased-SqNBRelReq-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SqNBRelReq-Item-SqNBPDCPpresent ::= SEQUENCE
                                  GTPtunnelEndpoint
   uL-GTPtunnelEndpoint
                                                                                                           OPTIONAL,
   dL-GTPtunnelEndpoint
                                  GTPtunnelEndpoint
                                                                                                                   OPTIONAL,
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-SgNBRelReq-Item-SgNBPDCPpresentExtIEs} } OPTIONAL,
```

```
E-RABs-ToBeReleased-SqNBRelReq-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SqNBRelReq-Item-SqNBPDCPnotpresent ::= SEQUENCE {
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBRelReq-Item-SqNBPDCPnotpresentExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
E-RABs-ToBeReleased-SqnBRelReq-Item-SqnBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  ******************
-- SGNB RELEASE REQUEST ACKNOWLEDGE
  ····
SqNBReleaseRequestAcknowledge ::= SEQUENCE {
                                             {{SqNBReleaseRequestAcknowledge-IEs}},
   protocolIEs
                  ProtocolIE-Container
SgNBReleaseRequestAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                         CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                      PRESENCE mandatory }
     ID id-SgNB-UE-X2AP-ID
                                                         CRITICALITY ignore TYPE SgNB-UE-X2AP-ID
                                                                                                                      PRESENCE mandatory }
     ID id-CriticalityDiagnostics
                                                         CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                      PRESENCE optional
     ID id-MeNB-UE-X2AP-ID-Extension
                                                         CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                      PRESENCE optional
     ID id-E-RABs-Admitted-ToBeReleased-SqNBRelReqAckList CRITICALITY ignore TYPE E-RABs-Admitted-ToBeReleased-SqNBRelReqAckList PRESENCE
optional },
    . . .
E-RABs-Admitted-ToBeReleased-SqNBRelReqAckList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF
                                      ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeReleased-SqNBRelReqAck-ItemIEs} }
E-RABs-Admitted-ToBeReleased-SqNBRelReqAck-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-Admitted-ToBeReleased-SqNBRelRegAck-Item CRITICALITY ignore TYPE E-RABs-Admitted-ToBeReleased-SqNBRelRegAck-Item
mandatory },
    . . .
E-RABs-Admitted-ToBeReleased-SqnBRelRegAck-Item ::= SEOUENCE {
   e-RAB-ID
                                     E-RAB-ID,
   rlc-Mode-transferred
                                  RLCMode,
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-Admitted-ToBeReleased-SqNBRelReqAck-ItemExtIEs} } OPTIONAL,
E-RABs-Admitted-ToBeReleased-SqNBRelReqAck-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
-- SGNB RELEASE REQUEST REJECT
__ *******************
SqNBReleaseRequestReject ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                            {{SqNBReleaseRequestReject-IEs}},
   . . .
SqNBReleaseRequestReject-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                               CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                         PRESENCE mandatory}
     ID id-SqNB-UE-X2AP-ID
                                               CRITICALITY ignore TYPE SgNB-UE-X2AP-ID
                                                                                                            PRESENCE mandatory } |
     ID id-Cause
                                               CRITICALITY ignore TYPE Cause
                                                                                                         PRESENCE mandatory |
     ID id-CriticalityDiagnostics
                                               CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                         PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                               CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                         PRESENCE optional },
-- SGNB RELEASE REOUIRED
SqNBReleaseRequired ::= SEQUENCE {
                                        {{SqNBReleaseRequired-IEs}},
   protocolIEs
                  ProtocolIE-Container
SqNBReleaseRequired-IES X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                               CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                            PRESENCE mandatory }
     ID id-SqNB-UE-X2AP-ID
                                               CRITICALITY reject TYPE SqNB-UE-X2AP-ID
                                                                                                               PRESENCE mandatory } |
     ID id-Cause
                                               CRITICALITY ignore TYPE Cause
                                                                                                            PRESENCE mandatory \
     ID id-MeNB-UE-X2AP-ID-Extension
                                               CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                            PRESENCE optional }
                                                                                                            PRESENCE optional }
     ID id-E-RABs-ToBeReleased-SqNBRelRegdList
                                               CRITICALITY ignore TYPE E-RABs-ToBeReleased-SgNBRelReqdList
    { ID id-SgNBtoMeNBContainer
                                               CRITICALITY ignore TYPE SgNBtoMeNBContainer
                                                                                                               PRESENCE optional },
   . . .
E-RABs-ToBeReleased-SqNBRelRegdList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-SqNBRelRegd-
ItemIEs} }
E-RABs-ToBeReleased-SqNBRelReqd-ItemIEs X2AP-PROTOCOL-IES ::= {
   . . .
E-RABs-ToBeReleased-SgNBRelReqd-Item ::= SEQUENCE {
   e-RAB-ID
                                    E-RAB-ID,
   rlc-Mode-transferred
                                RLCMode,
   iE-Extensions
                                ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBRelReqd-ItemExtIEs} } OPTIONAL,
```

```
E-RABs-ToBeReleased-SqNBRelRegd-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
   *****************
-- SGNB RELEASE CONFIRM
SgNBReleaseConfirm ::= SEQUENCE {
                                          {{SgNBReleaseConfirm-IEs}},
   protocolIEs ProtocolIE-Container
SgNBReleaseConfirm-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                  CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                               PRESENCE mandatory |
     ID id-SqNB-UE-X2AP-ID
                                                  CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                                                  PRESENCE mandatory }
     ID id-E-RABs-ToBeReleased-SgNBRelConfList
                                                  CRITICALITY ignore TYPE E-RABs-ToBeReleased-SgNBRelConfList
                                                                                                               PRESENCE optional }
                                                  CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                               PRESENCE optional }
     ID id-CriticalityDiagnostics
     ID id-MeNB-UE-X2AP-ID-Extension
                                                  CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                               PRESENCE optional }.
E-RABs-ToBeReleased-SqNBRelConfList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-SqNBRelConf-
ItemIEs} }
E-RABs-ToBeReleased-SqNBRelConf-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-SqNBRelConf-Item
                                                CRITICALITY ignore
                                                                             TYPE E-RABs-ToBeReleased-SqNBRelConf-Item PRESENCE mandatory },
   . . .
E-RABs-ToBeReleased-SqNBRelConf-Item ::= SEQUENCE {
   e-RAB-ID
                                      E-RAB-ID,
    en-DC-ResourceConfiguration
                                      EN-DC-ResourceConfiguration,
   resource-configuration
                                      CHOICE {
       sgNBPDCPpresent
                                          E-RABs-ToBeReleased-SgNBRelConf-Item-SgNBPDCPpresent,
                                          E-RABs-ToBeReleased-SgNBRelConf-Item-SgNBPDCPnotpresent,
       sgNBPDCPnotpresent
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBRelConf-ItemExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-ToBeReleased-SqNBRelConf-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SqNBRelConf-Item-SqNBPDCPpresent ::= SEQUENCE {
   uL-GTPtunnelEndpoint
                                  GTPtunnelEndpoint
                                                                                                                     OPTIONAL,
   dL-GTPtunnelEndpoint
                                  GTPtunnelEndpoint
                                                                                                                     OPTIONAL,
```

```
ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBRelConf-Item-SqNBPDCPpresentExtIEs} } OPTIONAL,
        iE-Extensions
E-RABs-ToBeReleased-SqnBRelConf-Item-SqnBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SqNBRelConf-Item-SqNBPDCPnotpresent ::= SEQUENCE {
                                                                      ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqnBRelConf-Item-SqnBPDCPnotpresentExtIEs} }
       iE-Extensions
E-RABs-ToBeReleased-SqNBRelConf-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     *****************
-- SGNB COUNTER CHECK REQUEST
SqNBCounterCheckRequest ::= SEQUENCE {
                                      ProtocolIE-Container
                                                                                      {{SgNBCounterCheckRequest-IEs}},
        protocolIEs
SgNBCounterCheckRequest-IEs X2AP-PROTOCOL-IES ::= {
           ID id-MeNB-UE-X2AP-ID
                                                                                                              CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                                                                                                                                               PRESENCE mandatory }
           ID id-SqNB-UE-X2AP-ID
                                                                                                              CRITICALITY reject TYPE SqNB-UE-X2AP-ID
                                                                                                                                                                                                                                                    PRESENCE mandatory}
           ID id-E-RABs-SubjectToSqNBCounterCheck-List
                                                                                                             CRITICALITY ignore TYPE E-RABs-SubjectToSqNBCounterCheck-List
                                                                                                                                                                                                                                              PRESENCE mandatory |
        { ID id-MeNB-UE-X2AP-ID-Extension
                                                                                                              CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                                                                                                                                               PRESENCE optional },
E-RABs-SubjectToSqNBCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { E-RABs-SubjectToSqNBCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { E-RABs-SubjectToSqNBCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { E-RABs-SubjectToSqNBCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { E-RABs-SubjectToSqNBCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { E-RABs-SubjectToSqNBCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { E-RABs-SubjectToSqNBCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { E-RABs-SubjectToSqNBCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { E-RABs-SubjectToSqNBCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { E-RABs-SubjectToSqNBCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { E-RABs-SubjectToSqNBCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { E-RABs-SubjectToSqNBCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { E-RABs-SubjectToSqNBCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { E-RABs-SubjectToSqNBCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { E-RABs-SubjectToSqNBCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Check-List ::= SEQUENCE (SIZE(1..maxnoofBearer)) OF ProtocolIE-Single-Check-List ::= SEQUENCE (SIZE(1..maxnoofBearer)) OF ProtocolIE-Single-Check-List ::= SEQUENCE (SIZE(1..maxnoofBearer)) OF Pro
ItemIEs} }
E-RABs-SubjectToSqNBCounterCheck-ItemIEs X2AP-PROTOCOL-IES ::= {
        . . .
E-RABs-SubjectToSqNBCounterCheck-Item ::= SEOUENCE
        e-RAB-ID
                                                                      E-RAB-ID,
       uL-Count
                                                                      INTEGER (0..4294967295),
       dL-Count
                                                                      INTEGER (0..4294967295),
       iE-Extensions
                                                                      ProtocolExtensionContainer { {E-RABs-SubjectToSqNBCounterCheck-ItemExtIEs} } OPTIONAL,
        . . .
E-RABs-SubjectToSqNBCounterCheck-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
-- SGNB CHANGE REQUIRED
  *******************
SqNBChangeRequired ::= SEQUENCE {
                                             {{SqNBChangeRequired-IEs}},
   protocolIEs
                  ProtocolIE-Container
SgNBChangeRequired-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                             PRESENCE mandatory } |
                                             CRITICALITY reject TYPE UE-X2AP-ID
     ID id-SqNB-UE-X2AP-ID
                                             CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                               PRESENCE mandatory |
     ID id-Target-SqNB-ID
                                                                                             PRESENCE mandatory } |
                                             CRITICALITY reject TYPE GlobalGNB-ID
     ID id-Cause
                                             CRITICALITY ignore TYPE Cause
                                                                                             PRESENCE mandatory}
     ID id-SgNBtoMeNBContainer
                                             CRITICALITY reject TYPE SgNBtoMeNBContainer
                                                                                               PRESENCE optional |
     ID id-MeNB-UE-X2AP-ID-Extension
                                             CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                             PRESENCE optional },
-- SGNB CHANGE CONFIRM
  SgNBChangeConfirm ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                          {{SqNBChangeConfirm-IEs}},
SqNBChangeConfirm-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                 CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                              PRESENCE mandatory } |
     ID id-SgNB-UE-X2AP-ID
                                                 CRITICALITY ignore TYPE SgNB-UE-X2AP-ID
                                                                                                                PRESENCE mandatory |
     ID id-E-RABs-ToBeReleased-SgNBChaConfList
                                                                                                              PRESENCE optional }
                                                 CRITICALITY ignore TYPE E-RABs-ToBeReleased-SgNBChaConfList
     ID id-CriticalityDiagnostics
                                                 CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                              PRESENCE optional }
    { ID id-MeNB-UE-X2AP-ID-Extension
                                                 CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                              PRESENCE optional },
    . . .
E-RABs-ToBeReleased-SqNBChaConfList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-SqNBChaConf-
ItemIEs} }
E-RABs-ToBeReleased-SqNBChaConf-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-SqNBChaConf-Item
                                                     CRITICALITY ignore
                                                                            TYPE E-RABs-ToBeReleased-SqNBChaConf-Item PRESENCE mandatory },
E-RABs-ToBeReleased-SgNBChaConf-Item ::= SEQUENCE {
   e-RAB-ID
                                      E-RAB-ID,
    en-DC-ResourceConfiguration
                                      EN-DC-ResourceConfiguration,
```

```
CHOICE {
    resource-configuration
       sqNBPDCPpresent
                                          E-RABs-ToBeReleased-SqNBChaConf-Item-SqNBPDCPpresent,
       sqNBPDCPnotpresent
                                          E-RABs-ToBeReleased-SqNBChaConf-Item-SqNBPDCPnotpresent,
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBChaConf-ItemExtIEs} } OPTIONAL,
    iE-Extensions
E-RABs-ToBeReleased-SqNBChaConf-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SgNBChaConf-Item-SgNBPDCPpresent ::= SEQUENCE {
   uL-GTPtunnelEndpoint
                                  GTPtunnelEndpoint
                                                                                                                    OPTIONAL,
   dL-GTPtunnelEndpoint
                                  GTPtunnelEndpoint
                                                                                                                    OPTIONAL,
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBChaConf-Item-SqNBPDCPpresentExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-ToBeReleased-SqNBChaConf-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SqNBChaConf-Item-SqNBPDCPnotpresent ::= SEQUENCE {
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-SgNBChaConf-Item-SgNBPDCPnotpresentExtIEs} }
                                                                                                                                OPTIONAL,
   . . .
E-RABs-ToBeReleased-SgNBChaConf-Item-SgNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  ****************
-- RRC TRANSFER
__ ************************
RRCTransfer ::= SEQUENCE {
                                              {{RRCTransfer-IEs}},
   protocolIEs
                ProtocolIE-Container
    . . .
RRCTransfer-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                              CRITICALITY reject TYPE UE-X2AP-ID
                                                                                              PRESENCE mandatory |
                                                                                                PRESENCE mandatory}
     ID id-SqNB-UE-X2AP-ID
                                              CRITICALITY reject TYPE SqNB-UE-X2AP-ID
     ID id-SplitSRB
                                                  CRITICALITY reject TYPE SplitSRB
                                                                                                PRESENCE optional |
     ID id-NRUeReport
                                              CRITICALITY reject TYPE NRUeReport
                                                                                              PRESENCE optional }
                                                                                              PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                              CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                   PRESENCE optional } |
     ID id-FastMCGRecovery-SN-to-MN
                                                  CRITICALITY ignore TYPE FastMCGRecovery
                                                                                                   PRESENCE optional },
     ID id-FastMCGRecovery-MN-to-SN
                                                  CRITICALITY ignore TYPE FastMCGRecovery
```

```
-- SGNB CHANGE REFUSE
SqNBChangeRefuse ::= SEOUENCE {
   protocolIEs
                   ProtocolIE-Container
                                               {{SqNBChangeRefuse-IEs}},
    . . .
SqNBChangeRefuse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                               CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                PRESENCE mandatory } |
     ID id-SqNB-UE-X2AP-ID
                                               CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                                  PRESENCE mandatory }
     ID id-Cause
                                               CRITICALITY ignore TYPE Cause
                                                                                                PRESENCE mandatory |
                                                                                               PRESENCE optional } |
     ID id-CriticalityDiagnostics
                                               CRITICALITY ignore TYPE CriticalityDiagnostics
     ID id-MeNB-UE-X2AP-ID-Extension
                                               CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                PRESENCE optional },
     -- EN-DC X2 SETUP REOUEST
ENDCX2SetupRequest ::= SEQUENCE {
   protocolIEs
                                           {{ENDCX2SetupRequest-IEs}},
                   ProtocolIE-Container
ENDCX2SetupRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-InitiatingNodeType-EndcX2Setup
                                                   CRITICALITY reject TYPE InitiatingNodeType-EndcX2Setup
                                                                                                              PRESENCE mandatory } |
                                                   CRITICALITY reject TYPE InterfaceInstanceIndication
     ID id-InterfaceInstanceIndication
                                                                                                              PRESENCE optional }
     ID id-TNLConfigurationInfo
                                                                                                              PRESENCE optional },
                                                   CRITICALITY ignore TYPE TNLConfigurationInfo
InitiatingNodeType-EndcX2Setup ::= CHOICE {
                                                   {{ENB-ENDCX2SetupReqIEs}},
   init-eNB
                           ProtocolIE-Container
                                               {{En-gNB-ENDCX2SetupReqIEs}},
   init-en-qNB
                       ProtocolIE-Container
    . . .
ENB-ENDCX2SetupRegIEs X2AP-PROTOCOL-IES ::= {
     ID id-GlobalENB-ID
                                                       CRITICALITY reject TYPE GlobalENB-ID
                                                                                                                       PRESENCE mandatory
     ID id-ServedEUTRAcellsENDCX2ManagementList
                                                       CRITICALITY reject TYPE ServedEUTRAcellsENDCX2ManagementList
                                                                                                                       PRESENCE mandatory }
     ID id-InterfaceInstanceIndication
                                                   CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                                    PRESENCE optional } |
-- NOTE: In the current version of this specification the Interface Instance Indication IE is not included in the Initiating NodeType IE --
    { ID id-CellandCapacityAssistInfo
                                                   CRITICALITY ignore TYPE CellandCapacityAssistInfo
                                                                                                                    PRESENCE optional },
    . . .
```

```
ServedEUTRAcellsENDCX2ManagementList ::= SEQUENCE (SIZE (1.. maxCellineNB)) OF SEQUENCE {
    servedEUTRACellInfo
                                        ServedCell-Information,
    nrNeighbourInfo
                                        NRNeighbour-Information
                                                                     OPTIONAL.
    iE-Extensions
                                        ProtocolExtensionContainer { {ServedEUTRAcellsENDCX2Management-ExtIEs} } OPTIONAL,
ServedEUTRAcellsENDCX2Management-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
En-gNB-ENDCX2SetupReqIEs X2AP-PROTOCOL-IES ::= {
      ID id-Globalen-qNB-ID
                                                    CRITICALITY reject TYPE GlobalGNB-ID
                                                                                                                        PRESENCE mandatory}
      ID id-ServedNRcellsENDCX2ManagementList
                                                    CRITICALITY reject TYPE ServedNRcellsENDCX2ManagementList
                                                                                                                        PRESENCE mandatory }
     ID id-PartialListIndicator
                                                        CRITICALITY ignore TYPE PartialListIndicator
                                                                                                                             PRESENCE optional },
ServedNRcellsENDCX2ManagementList ::= SEQUENCE (SIZE (1.. maxCellinengNB)) OF SEQUENCE {
    servedNRCellInfo
                                            ServedNRCell-Information,
    nRNeighbourInfo
                                        NRNeighbour-Information OPTIONAL,
    iE-Extensions
                                        ProtocolExtensionContainer { {En-qNBServedCells-ExtIEs} } OPTIONAL,
En-gNBServedCells-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ServedNRCell-Information ::= SEQUENCE {
    nrpCI
                       NRPCI,
   nrCellID
                        NRCGI,
    fiveGS-TAC
                        FiveGS-TAC OPTIONAL,
    configured-TAC
                        TAC
                                    OPTIONAL,
    broadcastPLMNs
                       BroadcastPLMNs-Item,
    nrModeInfo
                        CHOICE {
        fdd
                FDD-InfoServedNRCell-Information,
        t.dd
                TDD-InfoServedNRCell-Information,
    measurementTimingConfiguration OCTET STRING,
                                        ProtocolExtensionContainer { {ServedNRCell-Information-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
ServedNRCell-Information-ExtIES X2AP-PROTOCOL-EXTENSION ::= {
      ID id-additionalPLMNs-Item
                                            CRITICALITY ignore EXTENSION Additional PLMNs-Item
                                                                                                            PRESENCE optional }
      ID id-BPLMN-ID-Info-NR
                                            CRITICALITY ignore EXTENSION BPLMN-ID-Info-NR
                                                                                                            PRESENCE optional }
      ID id-SSB-PositionsInBurst
                                            CRITICALITY ignore EXTENSION SSB-PositionsInBurst
                                                                                                            PRESENCE optional }
                                                                                                            PRESENCE optional }
      ID id-NRCellPRACHConfig
                                            CRITICALITY ignore EXTENSION NRCellPRACHConfig
      ID id-CSI-RSTransmissionIndication
                                                                                                            PRESENCE optional }
                                            CRITICALITY ignore EXTENSION CSI-RSTransmissionIndication
     ID id-SFN-Offset
                                            CRITICALITY ignore EXTENSION SFN-Offset
                                                                                                            PRESENCE optional }
```

```
FDD-InfoServedNRCell-Information ::= SEQUENCE {
                             NRFregInfo,
   ul-NRFregInfo
   dl-NRFregInfo
                             NRFregInfo,
   ul-NR-TxBW
                          NR-TxBW,
   dl-NR-TxBW
                          NR-TxBW,
                          ProtocolExtensionContainer { {FDD-InfoServedNRCell-Information-ExtIEs} }
   iE-Extensions
                                                                                                 OPTIONAL,
FDD-InfoServedNRCell-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-ULCarrierList
                                         CRITICALITY ignore EXTENSION NRCarrierList
                                                                                          PRESENCE optional } |
                                                                                          PRESENCE optional },
    { ID id-DLCarrierList
                                         CRITICALITY ignore EXTENSION NRCarrierList
TDD-InfoServedNRCell-Information ::= SEQUENCE {
   nRFregInfo
                          NRFregInfo,
                          NR-TxBW,
   nR-TxBW
                          ProtocolExtensionContainer { {TDD-InfoServedNRCell-Information-ExtIEs} }
   iE-Extensions
TDD-InfoServedNRCell-Information-ExtIES X2AP-PROTOCOL-EXTENSION ::= {
     ID id-CarrierList
                                         CRITICALITY ignore EXTENSION NRCarrierList
                                                                                          PRESENCE optional |
    ID id-IntendedTDD-DL-ULConfiguration-NR CRITICALITY ignore EXTENSION IntendedTDD-DL-ULConfiguration-NR
                                                                                                            PRESENCE optional },
CellandCapacityAssistInfo::= SEQUENCE {
   maximumCellListSize
                                                MaximumCellListSize
                                                                           OPTIONAL,
   cellAssistanceInformation
                                                CellAssistanceInformation OPTIONAL,
   iE-Extensions
                                                ProtocolExtensionContainer { {CellandCapacityAssistInfo-ExtIEs} } OPTIONAL,
   . . .
CellandCapacityAssistInfo-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CellAssistanceInformation ::= CHOICE {
   limited-list
                             Limited-list,
                          ENUMERATED {allServedNRcells, ...},
   full-list
   . . .
Limited-list
              ::= SEQUENCE (SIZE (1..maxCellinengNB)) OF SEQUENCE {
   nrCellID
                      NRCGI,
                                         ProtocolExtensionContainer { {Limited-list-ExtIEs} } OPTIONAL,
       iE-Extensions
   . . .
```

```
Limited-list-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    ****************
-- EN-DC X2 SETUP RESPONSE
ENDCX2SetupResponse ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                         {{ENDCX2SetupResponse-IEs}},
   . . .
ENDCX2SetupResponse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-RespondingNodeType-EndcX2Setup
                                             CRITICALITY reject TYPE RespondingNodeType-EndcX2Setup
                                                                                                    PRESENCE mandatory }
     ID id-InterfaceInstanceIndication
                                             CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                    PRESENCE optional }
    { ID id-TNLConfigurationInfo
                                                 CRITICALITY ignore TYPE TNLConfigurationInfo
                                                                                                       PRESENCE optional },
   . . .
RespondingNodeType-EndcX2Setup ::= CHOICE {
                                             {{ENB-ENDCX2SetupRegAckIEs}},
   respond-eNB
                      ProtocolIE-Container
   respond-en-gNB
                      ProtocolIE-Container
                                             {{En-gNB-ENDCX2SetupReqAckIEs}},
   . . .
ENB-ENDCX2SetupRegAckIEs X2AP-PROTOCOL-IES ::= {
     ID id-GlobalENB-ID
                                                     CRITICALITY reject TYPE GlobalENB-ID
                                                                                                                   PRESENCE mandatory }
                                                     CRITICALITY reject TYPE ServedEUTRAcellsENDCX2ManagementList
     ID id-ServedEUTRAcellsENDCX2ManagementList
                                                                                                                  PRESENCE mandatory }
     ID id-InterfaceInstanceIndication
                                                 CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                                PRESENCE optional }
-- NOTE: In the current version of this specification the Interface Instance Indication IE is not included in the Responding NodeType IE --
   { ID id-CellandCapacityAssistInfo
                                                 CRITICALITY ignore TYPE CellandCapacityAssistInfo
                                                                                                                PRESENCE optional },
   . . .
En-gNB-ENDCX2SetupReqAckIEs X2AP-PROTOCOL-IES ::= {
     ID id-Globalen-qNB-ID
                                                 CRITICALITY reject TYPE GlobalGNB-ID
                                                                                                                PRESENCE mandatory }
     ID id-ServedNRcellsENDCX2ManagementList
                                                 CRITICALITY reject TYPE ServedNRcellsENDCX2ManagementList
                                                                                                                PRESENCE mandatory \
    ID id-PartialListIndicator
                                                     CRITICALITY ignore TYPE PartialListIndicator
                                                                                                                      PRESENCE optional },
   . . .
  *****************
-- EN-DC X2 SETUP FAILURE
  ****************
ENDCX2SetupFailure ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                         {{ENDCX2SetupFailure-IEs}},
   . . .
```

```
ENDCX2SetupFailure-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Cause
                                           CRITICALITY ignore
                                                                   TYPE Cause
                                                                                                       PRESENCE mandatory }
     ID id-CriticalityDiagnostics
                                           CRITICALITY ignore
                                                                   TYPE CriticalityDiagnostics
                                                                                                       PRESENCE optional
     ID id-TimeToWait
                                           CRITICALITY ignore
                                                                   TYPE TimeToWait
                                                                                                       PRESENCE optional }
     ID id-InterfaceInstanceIndication
                                           CRITICALITY reject
                                                                   TYPE InterfaceInstanceIndication
                                                                                                      PRESENCE optional } |
                                           CRITICALITY ignore
     ID id-MessageOversizeNotification
                                                                   TYPE MessageOversizeNotification
                                                                                                      PRESENCE optional },
      *****************
-- EN-DC CONFIGURATION UPDATE
ENDCConfigurationUpdate ::= SEQUENCE {
                                            {{ENDCConfigurationUpdate-IEs}},
    protocolIEs
                   ProtocolIE-Container
    . . .
ENDCConfigurationUpdate-IEs X2AP-PROTOCOL-IES ::= {
     ID id-InitiatingNodeType-EndcConfigUpdate
                                                       CRITICALITY reject TYPE InitiatingNodeType-EndcConfigUpdate
                                                                                                                           PRESENCE mandatory
     ID id-InterfaceInstanceIndication
                                                       CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                                           PRESENCE optional }
     ID id-TNLConfigurationInfo
                                                       CRITICALITY ignore TYPE TNLConfigurationInfo
                                                                                                                           PRESENCE optional
     ID id-TNLA-To-Add-List
                                                       CRITICALITY ignore TYPE TNLA-To-Add-List
                                                                                                                           PRESENCE optional
     ID id-TNLA-To-Update-List
                                                       CRITICALITY ignore TYPE TNLA-To-Update-List
                                                                                                                           PRESENCE optional
     ID id-TNLA-To-Remove-List
                                                       CRITICALITY ignore TYPE TNLA-To-Remove-List
                                                                                                                           PRESENCE optional },
InitiatingNodeType-EndcConfigUpdate::= CHOICE {
                                                {{ENB-ENDCConfigUpdateIEs}},
    init-eNB
                       ProtocolIE-Container
    init-en-qNB
                       ProtocolIE-Container
                                                {{En-qNB-ENDCConfigUpdateIEs}},
    . . .
ENB-ENDCConfigUpdateIEs X2AP-PROTOCOL-IES ::= {
      ID id-CellAssistanceInformation
                                                   CRITICALITY reject TYPE CellAssistanceInformation
                                                                                                                        PRESENCE optional }
     ID id-ServedEUTRAcellsENDCX2ManagementList
                                                                                                                           PRESENCE optional } |
                                                       CRITICALITY reject TYPE ServedEUTRAcellsENDCX2ManagementList
     ID id-ServedEUTRAcellsToModifyListENDCConfUpd CRITICALITY reject TYPE ServedEUTRAcellsToModifyListENDCConfUpd
                                                                                                                        PRESENCE optional } |
     ID id-ServedEUTRAcellsToDeleteListENDCConfUpd CRITICALITY reject TYPE ServedEUTRAcellsToDeleteListENDCConfUpd
                                                                                                                        PRESENCE optional },
ServedEUTRAcellsToModifyListENDCConfUpd ::= SEQUENCE (SIZE (1.. maxCellineNB)) OF SEQUENCE {
    old-ECGI
                                           ECGI,
    servedEUTRACellInfo
                                       ServedCell-Information,
    nrNeighbourInfo
                                       NRNeighbour-Information
                                                                   OPTIONAL,
                                       ProtocolExtensionContainer { {ServedEUTRAcellsToModifyListENDCConfUpd-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
```

```
ServedEUTRAcellsToModifyListENDCConfUpd-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ServedEUTRAcellsToDeleteListENDCConfUpd ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ECGI
En-qNB-ENDCConfigUpdateIEs X2AP-PROTOCOL-IES ::= {
     ID id-ServedNRcellsENDCX2ManagementList
                                                  CRITICALITY reject TYPE ServedNRcellsENDCX2ManagementList
                                                                                                                  PRESENCE optional } |
     ID id-ServedNRcellsToModifyListENDCConfUpd
                                                      CRITICALITY reject TYPE ServedNRcellsToModifyENDCConfUpdList
                                                                                                                     PRESENCE optional } |
     ID id-ServedNRcellsToDeleteListENDCConfUpd
                                                      CRITICALITY reject TYPE ServedNRcellsToDeleteENDCConfUpdList
                                                                                                                     PRESENCE optional },
ServedNRcellsToModifyENDCConfUpdList ::= SEOUENCE (SIZE (1..maxCellinengNB)) OF ServedNRCellsToModify-Item
ServedNRCellsToModify-Item::= SEQUENCE {
   old-nrcgi
    servedNRCellInformation
                                   ServedNRCell-Information,
   nrNeighbourInformation
                                  NRNeighbour-Information
                                                                 OPTIONAL,
    nrDeactivationIndication
                                      DeactivationIndication
                                                                     OPTIONAL,
                                  ProtocolExtensionContainer { {ServedNRCellsToModify-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
ServedNRCellsToModify-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ServedNRcellsToDeleteENDCConfUpdList ::= SEQUENCE (SIZE (1..maxCellinenqNB)) OF NRCGI
__ *******************************
-- EN-DC CONFIGURATION UPDATE ACKNOWLEDGE
  *****************
ENDCConfigurationUpdateAcknowledge ::= SEQUENCE {
   protocolIEs
                   ProtocolIE-Container
                                          {{ENDCConfigurationUpdateAcknowledge-IEs}},
    . . .
ENDCConfigurationUpdateAcknowledge-IES X2AP-PROTOCOL-IES ::= {
     ID id-RespondingNodeType-EndcConfigUpdate
                                                      CRITICALITY reject TYPE RespondingNodeType-EndcConfigUpdate
                                                                                                                        PRESENCE mandatory }
     ID id-InterfaceInstanceIndication
                                                      CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                                        PRESENCE optional
     ID id-CriticalityDiagnostics
                                                      CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                        PRESENCE optional
     ID id-TNLConfigurationInfo
                                                      CRITICALITY ignore TYPE TNLConfigurationInfo
                                                                                                                        PRESENCE optional }
                                                                                                                           PRESENCE optional }
     ID id-TNLA-Setup-List
                                                      CRITICALITY ignore TYPE TNLA-Setup-List
     ID id-TNLA-Failed-To-Setup-List
                                                      CRITICALITY ignore TYPE TNLA-Failed-To-Setup-List
                                                                                                                        PRESENCE optional },
RespondingNodeType-EndcConfigUpdate::= CHOICE {
```

```
{{ENB-ENDCConfigUpdateAckIEs}},
   respond-eNB
                      ProtocolIE-Container
   respond-en-gNB
                      ProtocolIE-Container
                                            {{En-gNB-ENDCConfigUpdateAckIEs}},
ENB-ENDCConfigUpdateAckIEs X2AP-PROTOCOL-IES ::= {
En-qNB-ENDCConfigUpdateAckIEs X2AP-PROTOCOL-IES ::= {
   { ID id-ServedNRcellsENDCX2ManagementList
                                                CRITICALITY reject TYPE ServedNRcellsENDCX2ManagementList
                                                                                                          PRESENCE optional },
   . . .
  ******************
-- EN-DC CONFIGURATION UPDATE FAILURE
  *****************
ENDCConfigurationUpdateFailure ::= SEQUENCE
                                         {{ENDCConfigurationUpdateFailure-IEs}},
   protocolIEs
                  ProtocolIE-Container
ENDCConfigurationUpdateFailure-IES X2AP-PROTOCOL-IES ::= {
     ID id-Cause
                                        CRITICALITY ignore TYPE Cause
                                                                                          PRESENCE mandatory |
     ID id-CriticalityDiagnostics
                                                                                          PRESENCE optional
                                        CRITICALITY ignore TYPE CriticalityDiagnostics
     ID id-TimeToWait
                                        CRITICALITY ignore TYPE TimeToWait
                                                                                          PRESENCE optional }
     ID id-InterfaceInstanceIndication
                                        CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                             PRESENCE optional },
-- EN-DC CELL ACTIVATION REQUEST
__ ********************
ENDCCellActivationRequest ::= SEQUENCE {
                                        {{ENDCCellActivationRequest-IEs}},
   protocolIEs
                  ProtocolIE-Container
   . . .
ENDCCellActivationRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ServedNRCellsToActivate
                                        CRITICALITY reject TYPE ServedNRCellsToActivate
                                                                                                PRESENCE mandatory \
     ID id-ActivationID
                                        CRITICALITY reject TYPE ActivationID
                                                                                             PRESENCE mandatory |
                                                                                             PRESENCE optional },
    ID id-InterfaceInstanceIndication CRITICALITY reject TYPE InterfaceInstanceIndication
```

```
ServedNRCellsToActivate::= SEQUENCE (SIZE (1.. maxCellinengNB)) OF ServedNRCellsToActivate-Item
ServedNRCellsToActivate-Item::= SEOUENCE {
   nrCellID
   iE-Extensions
                               ProtocolExtensionContainer { {ServedNRCellsToActivate-Item-ExtIEs} } OPTIONAL,
ServedNRCellsToActivate-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  ****************
-- EN-DC CELL ACTIVATION RESPONSE
__ *********************
ENDCCellActivationResponse ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                      {{ENDCCellActivationResponse-IEs}},
   . . .
ENDCCellActivationResponse-IES X2AP-PROTOCOL-IES ::= {
     PRESENCE mandatory |
     ID id-ActivationID
                                      CRITICALITY reject TYPE ActivationID
                                                                                        PRESENCE mandatory } |
     ID id-CriticalityDiagnostics
                                  CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                    PRESENCE optional } |
    { ID id-InterfaceInstanceIndication CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                     PRESENCE optional },
   . . .
ActivatedNRCellList ::= SEQUENCE (SIZE (1.. maxCellinenqNB)) OF ActivatedNRCellList-Item
ActivatedNRCellList-Item::= SEQUENCE {
   nrCellID
                               NRCGI,
                                   ProtocolExtensionContainer { {ActivatedNRCellList-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
ActivatedNRCellList-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- EN-DC CELL ACTIVATION FAILURE
__ ********************
ENDCCellActivationFailure ::= SEQUENCE {
                                      {{ENDCCellActivationFailure-IEs}},
   protocolIEs
                 ProtocolIE-Container
   . . .
```

```
ENDCCellActivationFailure-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ActivationID
                                               CRITICALITY reject TYPE ActivationID
                                                                                                   PRESENCE mandatory } |
     ID id-Cause
                                           CRITICALITY ignore TYPE Cause
                                                                                                PRESENCE mandatory }
     ID id-CriticalityDiagnostics
                                           CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                PRESENCE optional } |
     ID id-InterfaceInstanceIndication
                                           CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                   PRESENCE optional },
-- EN-DC RESOURCE STATUS REQUEST
__ **********************
ENDCResourceStatusRequest ::= SEQUENCE {
    protocolIEs
                   ProtocolIE-Container
                                           {{ENDCResourceStatusRequest-IEs}},
    . . .
ENDCResourceStatusRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-eNB-Measurement-ID-ENDC
                                           CRITICALITY reject TYPE Measurement-ID-ENDC
                                                                                                PRESENCE mandatory } |
     ID id-engNB-Measurement-ID-ENDC
                                           CRITICALITY ignore TYPE Measurement-ID-ENDC
                                                                                              PRESENCE conditional | -- The IE shall be present
if the Registration Request EN-DC IE is set to "Stop" or to "Add"
     ID id-Registration-Request
                                           CRITICALITY reject TYPE Registration-Request-ENDC
                                                                                                PRESENCE mandatory
     ID id-ReportingPeriodicity
                                           CRITICALITY ignore TYPE ReportingPeriodicity-ENDC
                                                                                                PRESENCE optional
     ID id-ReportCharacteristics
                                           CRITICALITY ignore TYPE ReportCharacteristics-ENDC
                                                                                                PRESENCE conditional | -- The IE shall be present
if the Registration Request EN-DC IE is set to "Start"
     ID id-CellToReport-NR-ENDC
                                       CRITICALITY ignore TYPE CellToReport-NR-ENDC-List
                                                                                                PRESENCE optional
                                                                                              PRESENCE optional }|
     ID id-InterfaceInstanceIndication CRITICALITY reject TYPE InterfaceInstanceIndication
    { ID id-CellToReport-E-UTRA-ENDC
                                       CRITICALITY ignore TYPE CellToReport-E-UTRA-ENDC-List
                                                                                                PRESENCE optional },
    . . .
ReportingPeriodicity-ENDC ::= ENUMERATED {ms500, ms1000, ms2000, ms5000, ms10000, ...}
CellToReport-NR-ENDC-List ::= SEQUENCE (SIZE (1..maxCellinenqNB)) OF ProtocolIE-Single-Container { {CellToReport-NR-ENDC-ItemIEs} }
CellToReport-NR-ENDC-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-CellToReport-NR-ENDC-Item
                                               CRITICALITY ignore TYPE CellToReport-NR-ENDC-Item
                                                                                                      PRESENCE mandatory}
CellToReport-NR-ENDC-Item
                                       ::= SEQUENCE {
    nr-cell-ID
                                           NRCGI,
    ssbToReport-List
                                       SSBToReport-List
                                                                                          OPTIONAL,
                                       ProtocolExtensionContainer { {CellToReport-NR-ENDC-Item-ExtIEs} } OPTIONAL.
   iE-Extensions
CellToReport-NR-ENDC-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CellToReport-E-UTRA-ENDC-List
                                   ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ProtocolIE-Single-Container { {CellToReport-E-UTRA-ENDC-Item-IEs} }
```

```
CellToReport-E-UTRA-ENDC-Item-IEs X2AP-PROTOCOL-IES ::= {
   CellToReport-E-UTRA-ENDC-Item ::= SEQUENCE {
   e-utra-cell-ID
                                    ProtocolExtensionContainer { {CellToReport-E-UTRA-ENDC-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
CellToReport-E-UTRA-ENDC-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::=
                ::= SEQUENCE (SIZE (1.. maxnoofSSBAreas)) OF SSBToReport-Item
SSBToReport-List
SSBToReport-Item
                ::= SEQUENCE {
   ssbIndex
                                 SSBIndex,
                                 ProtocolExtensionContainer { {SSBToReport-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
SSBToReport-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  ******************
-- EN-DC RESOURCE STATUS RESPONSE
  ***********************
ENDCResourceStatusResponse ::= SEQUENCE {
                ProtocolIE-Container
                                    {{ENDCResourceStatusResponse-IEs}},
   protocolIEs
   . . .
ENDCResourceStatusResponse-IEs X2AP-PROTOCOL-IES ::= {
    ID id-eNB-Measurement-ID-ENDC
                                 CRITICALITY reject TYPE Measurement-ID-ENDC
                                                                                PRESENCE mandatory
    ID id-engNB-Measurement-ID-ENDC CRITICALITY reject TYPE Measurement-ID-ENDC
                                                                                PRESENCE mandatory }
    ID id-CriticalityDiagnostics
                                 CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                PRESENCE optional } |
    ID id-InterfaceInstanceIndication CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                PRESENCE optional },
   . . .
  *****************
-- EN-DC RESOURCE STATUS FAILURE
__ ********************
ENDCResourceStatusFailure ::= SEQUENCE {
   protocolIEs
                ProtocolIE-Container
                                    {{ENDCResourceStatusFailure-IEs}},
   . . .
```

```
ENDCResourceStatusFailure-IEs X2AP-PROTOCOL-IES ::= {
     ID id-eNB-Measurement-ID-ENDC CRITICALITY reject TYPE Measurement-ID-ENDC
                                                                                          PRESENCE mandatory
     ID id-enqNB-Measurement-ID-ENDC CRITICALITY reject TYPE Measurement-ID-ENDC
                                                                                          PRESENCE mandatory
     ID id-Cause
                                     CRITICALITY ignore TYPE Cause
                                                                                          PRESENCE mandatory
     ID id-CriticalityDiagnostics
                                     CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                          PRESENCE optional }
    ID id-InterfaceInstanceIndication CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                          PRESENCE optional },
-- EN-DC RESOURCE STATUS UPDATE
ENDCResourceStatusUpdate ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                         {{ENDCResourceStatusUpdate-IEs}},
   . . .
ENDCResourceStatusUpdate-IEs X2AP-PROTOCOL-IES ::= {
     ID id-eNB-Measurement-ID-ENDC
                                            CRITICALITY reject TYPE Measurement-ID-ENDC
                                                                                                         PRESENCE mandatory
     ID id-engNB-Measurement-ID-ENDC
                                             CRITICALITY reject TYPE Measurement-ID-ENDC
                                                                                                         PRESENCE mandatory }
     ID id-CellMeasurementResult-NR-ENDC
                                            CRITICALITY ignore TYPE CellMeasurementResult-NR-ENDC-List
                                                                                                         PRESENCE optional
     ID id-InterfaceInstanceIndication
                                                                                                         PRESENCE optional }
                                            CRITICALITY reject TYPE InterfaceInstanceIndication
     CellMeasurementResult-NR-ENDC-List ::= SEQUENCE (SIZE (1..maxCellinenqNB)) OF ProtocolIE-Single-Container { {CellMeasurementResult-NR-ENDC-ItemIEs}
CellMeasurementResult-NR-ENDC-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-CellMeasurementResult-NR-ENDC-Item CRITICALITY ignore TYPE CellMeasurementResult-NR-ENDC-Item PRESENCE mandatory}
CellMeasurementResult-NR-ENDC-Item ::= SEQUENCE {
   nr-cell-ID
                                     NRCGI,
                                     NRRadioResourceStatus
   nr-radioResourceStatus
                                                                                      OPTIONAL,
   tnlCapacityIndicator
                                     TNLCapacityIndicator
                                                                                      OPTIONAL,
   nr-compositeAvailableCapacityGroup NRCompositeAvailableCapacityGroup
                                                                                      OPTIONAL,
   numberofActiveUEs
                                     INTEGER (0..16777215, ...)
                                                                                      OPTIONAL,
                                     ProtocolExtensionContainer { {CellMeasurementResult-NR-ENDC-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
CellMeasurementResult-NR-ENDC-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CellMeasurementResult-E-UTRA-ENDC-List ::= SEQUENCE (SIZE (1..maxCellineNB))
                                                    OF ProtocolIE-Single-Container { {CellMeasurementResult-E-UTRA-ENDC-ItemIEs} }
```

```
CellMeasurementResult-E-UTRA-ENDC-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-CellMeasurementResult-E-UTRA-ENDC-Item CRITICALITY ignore TYPE CellMeasurementResult-E-UTRA-ENDC-Item PRESENCE mandatory}
CellMeasurementResult-E-UTRA-ENDC-Item ::= SEOUENCE {
   e-utra-cell-ID
                             ECGI,
   hWLoadIndicator
                             HWLoadIndicator
                                                OPTIONAL,
   s1TNLLoadIndicator
                             S1TNLLoadIndicator OPTIONAL,
                             RadioResourceStatus OPTIONAL,
   radioResourceStatus
   compositeAvailableCapacityGroup CompositeAvailableCapacityGroup
                                                                                                  OPTIONAL,
                             ProtocolExtensionContainer { {CellMeasurementResult-E-UTRA-ENDC-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
CellMeasurementResult-E-UTRA-ENDC-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- SECONDARY RAT DATA USAGE REPORT
  **********************
SecondaryRATDataUsageReport ::= SEQUENCE {
                                            {{SecondaryRATDataUsageReport-IEs}},
   protocolIEs
                  ProtocolIE-Container
SecondaryRATDataUsageReport-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                                   PRESENCE mandatory } |
                                            CRITICALITY reject TYPE UE-X2AP-ID
     ID id-SqNB-UE-X2AP-ID
                                            CRITICALITY reject TYPE SqNB-UE-X2AP-ID
                                                                                                      PRESENCE mandatory }
                                                                                                   PRESENCE mandatory } |
     ID id-SecondaryRATUsageReportList
                                            CRITICALITY reject TYPE SecondaryRATUsageReportList
     ID id-MeNB-UE-X2AP-ID-Extension
                                            CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                   PRESENCE optional },
    -- SGNB ACTIVITY NOTIFICATION
  *****************
SgNBActivityNotification ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                             {{SqNBActivityNotification-IEs}},
   . . .
SgNBActivityNotification-IES X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                            CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                   PRESENCE mandatory |
     ID id-SgNB-UE-X2AP-ID
                                            CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                                      PRESENCE mandatory }
     ID id-UEContextLevelUserPlaneActivity
                                            CRITICALITY ignore TYPE UserPlaneTrafficActivityReport
                                                                                                   PRESENCE optional }
     ID id-ERABActivityNotifyItemList
                                            CRITICALITY ignore TYPE ERABActivityNotifyItemList
                                                                                                   PRESENCE optional }
```

```
CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                         PRESENCE optional },
  { ID id-MeNB-UE-X2AP-ID-Extension
 *****************
-- EN-DC PARTIAL RESET REQUIRED
 **********************
ENDCPartialResetRequired ::= SEQUENCE {
            ProtocolIE-Container
                              {{ENDCPartialResetRequired-IEs}},
  protocolIEs
ENDCPartialResetRequired-IES X2AP-PROTOCOL-IES ::= {
   ID id-UEs-ToBeReset
                                                                   PRESENCE mandatory
                           CRITICALITY reject TYPE UEsToBeResetList
   ID id-Cause
                           CRITICALITY ignore TYPE Cause
                                                                   PRESENCE mandatory }
   { ID id-InterfaceInstanceIndication CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                    PRESENCE optional },
   -- EN-DC PARTIAL RESET CONFIRM
__ ********************
ENDCPartialResetConfirm ::= SEQUENCE {
            ProtocolIE-Container
                              {{ENDCPartialResetConfirm-IEs}},
  protocolIEs
  . . .
ENDCPartialResetConfirm-IEs X2AP-PROTOCOL-IES ::= {
  PRESENCE mandatory } |
 ····
-- E-UTRA - NR CELL RESOURCE COORDINATION REQUEST
EUTRANRCellResourceCoordinationRequest ::= SEQUENCE {
  protocolIEs
             ProtocolIE-Container
                                {{EUTRANRCellResourceCoordinationRequest-IEs}},
EUTRANRCellResourceCoordinationRequest-IEs X2AP-PROTOCOL-IES ::= {
   PRESENCE mandatory \
```

```
{ ID id-InterfaceInstanceIndication
                                                              CRITICALITY reject TYPE InterfaceInstanceIndication
   PRESENCE optional },
    . . .
InitiatingNodeType-EutranrCellResourceCoordination ::= CHOICE {
                                                  {{ENB-EUTRA-NRCellResourceCoordinationRegIEs}},
    initiate-eNB
                          ProtocolIE-Container
    initiate-en-qNB
                           ProtocolIE-Container
                                                  {{En-qNB-EUTRA-NRCellResourceCoordinationReqIEs}},
ENB-EUTRA-NRCellResourceCoordinationRegIEs X2AP-PROTOCOL-IES ::=
     ID id-DataTrafficResourceIndication
                                                  CRITICALITY reject TYPE DataTrafficResourceIndication
                                                                                                                  PRESENCE mandatory }
     ID id-SpectrumSharingGroupID
                                                  CRITICALITY reject TYPE SpectrumSharingGroupID
                                                                                                                  PRESENCE mandatory}
     ID id-ListofEUTRACellsinEUTRACoordinationReg CRITICALITY reject TYPE ListofEUTRACellsinEUTRACoordinationReg
                                                                                                                  PRESENCE mandatory },
En-qNB-EUTRA-NRCellResourceCoordinationReqIEs X2AP-PROTOCOL-IES ::= {
     ID id-DataTrafficResourceIndication
                                                  CRITICALITY reject TYPE DataTrafficResourceIndication
                                                                                                                PRESENCE mandatory } |
     ID id-ListofEUTRACellsinNRCoordinationReg
                                                  CRITICALITY reject TYPE ListofEUTRACellsinNRCoordinationReq
                                                                                                               PRESENCE mandatory } |
     ID id-SpectrumSharingGroupID
                                                  CRITICALITY reject TYPE SpectrumSharingGroupID
                                                                                                               PRESENCE mandatory |
     ID id-ListofNRCellsinNRCoordinationReq
                                                  CRITICALITY reject TYPE ListofNRCellsinNRCoordinationReq
                                                                                                               PRESENCE mandatory },
ListofEUTRACellsinEUTRACoordinationReq ::= SEQUENCE (SIZE (0..maxCellineNB)) OF ECGI
ListofEUTRACellsinNRCoordinationReg ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ECGI
ListofNRCellsinNRCoordinationReg ::= SEQUENCE (SIZE (0..maxnoNRcellsSpectrumSharingWithE-UTRA)) OF NRCGI
__ *******************************
-- E-UTRA - NR CELL RESOURCE COORDINATION RESPONSE
  EUTRANRCellResourceCoordinationResponse ::= SEQUENCE
    protocolIEs
                   ProtocolIE-Container
                                              {{EUTRANRCellResourceCoordinationResponse-IEs}},
    . . .
EUTRANRCellResourceCoordinationResponse-IES X2AP-PROTOCOL-IES ::=
    { ID id-RespondingNodeType-EutranrCellResourceCoordination
                                                                  CRITICALITY reject TYPE RespondingNodeType-EutranrCellResourceCoordination
       PRESENCE mandatory |
    { ID id-InterfaceInstanceIndication CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                            PRESENCE optional },
RespondingNodeType-EutranrCellResourceCoordination ::= CHOICE {
    respond-eNB
                       ProtocolIE-Container
                                              {{ENB-EUTRA-NRCellResourceCoordinationReqAckIEs}},
                                              {{En-qNB-EUTRA-NRCellResourceCoordinationRegAckIEs}},
    respond-en-qNB
                       ProtocolIE-Container
```

```
ENB-EUTRA-NRCellResourceCoordinationRegAckIEs X2AP-PROTOCOL-IES ::= {
     ID id-DataTrafficResourceIndication
                                                   CRITICALITY reject TYPE DataTrafficResourceIndication
                                                                                                               PRESENCE mandatory }
     ID id-SpectrumSharingGroupID
                                                   CRITICALITY reject TYPE SpectrumSharingGroupID
                                                                                                               PRESENCE mandatory } |
    ID id-ListofEUTRACellsinEUTRACoordinationResp
                                                   CRITICALITY reject TYPE ListofEUTRACellsinEUTRACoordinationResp PRESENCE mandatory },
En-qNB-EUTRA-NRCellResourceCoordinationReqAckIEs X2AP-PROTOCOL-IES ::= {
     ID id-DataTrafficResourceIndication
                                           CRITICALITY reject TYPE DataTrafficResourceIndication
                                                                                                    PRESENCE mandatory }
     ID id-SpectrumSharingGroupID
                                           CRITICALITY reject TYPE SpectrumSharingGroupID
                                                                                                    PRESENCE mandatory
     PRESENCE mandatory },
ListofEUTRACellsinEUTRACoordinationResp ::= SEQUENCE (SIZE (0..maxCellineNB)) OF ECGI
ListofNRCellsinNRCoordinationResp ::= SEQUENCE (SIZE (0..maxnoNRcellsSpectrumSharingWithE-UTRA)) OF NRCGI
__ *********************
-- EN-DC X2 REMOVAL REQUEST
__ *********************
ENDCX2RemovalRequest ::= SEQUENCE {
                                        {{ENDCX2RemovalRequest-IEs}},
   protocolIEs
                  ProtocolIE-Container
   . . .
ENDCX2RemovalRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-InitiatingNodeType-EndcX2Removal
                                                   CRITICALITY reject TYPE InitiatingNodeType-EndcX2Removal
                                                                                                            PRESENCE mandatory |
     ID id-InterfaceInstanceIndication
                                                   CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                            PRESENCE optional },
InitiatingNodeType-EndcX2Removal ::= CHOICE
                         ProtocolIE-Container
                                               {{ENB-ENDCX2RemovalRegIEs}},
   init-eNB
                     ProtocolIE-Container
                                            {{En-qNB-ENDCX2RemovalRegIEs}},
   init-en-qNB
   . . .
ENB-ENDCX2RemovalReqIEs X2AP-PROTOCOL-IES ::= {
   { ID id-GlobalENB-ID
                                                   CRITICALITY reject TYPE GlobalENB-ID
                                                                                                               PRESENCE mandatory },
   . . .
En-gNB-ENDCX2RemovalReqIEs X2AP-PROTOCOL-IES ::= {
   { ID id-Globalen-qNB-ID
                                               CRITICALITY reject TYPE GlobalGNB-ID
                                                                                                            PRESENCE mandatory },
```

```
*****************
-- EN-DC X2 REMOVAL RESPONSE
__ ******************
ENDCX2RemovalResponse ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                         {{ENDCX2RemovalResponse-IEs}},
   . . .
ENDCX2RemovalResponse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-RespondingNodeType-EndcX2Removal
                                                CRITICALITY reject TYPE RespondingNodeType-EndcX2Removal
                                                                                                        PRESENCE mandatory } |
     ID id-InterfaceInstanceIndication
                                                CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                           PRESENCE optional },
RespondingNodeType-EndcX2Removal ::= CHOICE {
                      ProtocolIE-Container
                                             {{ENB-ENDCX2RemovalReqAckIEs}},
   respond-eNB
                                            {{En-gNB-ENDCX2RemovalReqAckIEs}},
   respond-en-qNB
                      ProtocolIE-Container
   . . .
ENB-ENDCX2RemovalRegAckIEs X2AP-PROTOCOL-IES ::= {
   { ID id-GlobalENB-ID
                                                    CRITICALITY reject TYPE GlobalENB-ID
                                                                                                                 PRESENCE mandatory },
   . . .
En-qNB-ENDCX2RemovalRegAckIEs X2AP-PROTOCOL-IES ::=
   { ID id-Globalen-qNB-ID
                                                CRITICALITY reject TYPE GlobalGNB-ID
                                                                                                              PRESENCE mandatory },
   . . .
-- EN-DC X2 REMOVAL FAILURE
__ ********************
ENDCX2RemovalFailure ::= SEQUENCE {
                                         {{ENDCX2RemovalFailure-IEs}},
   protocolIEs
                  ProtocolIE-Container
   . . .
ENDCX2RemovalFailure-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Cause
                                         CRITICALITY ignore
                                                               TYPE Cause
                                                                                                PRESENCE mandatory}
     ID id-CriticalityDiagnostics
                                         CRITICALITY ignore
                                                               TYPE CriticalityDiagnostics
                                                                                                PRESENCE optional }
     ID id-InterfaceInstanceIndication
                                                                                                PRESENCE optional },
                                         CRITICALITY reject
                                                               TYPE InterfaceInstanceIndication
```

```
__ ********************************
-- DATA FORWARDING ADDRESS INDICATION
  *************
DataForwardingAddressIndication ::= SEQUENCE
                ProtocolIE-Container
   protocolIEs
                                   {{DataForwardingAddressIndication-IEs}},
DataForwardingAddressIndication-IES X2AP-PROTOCOL-IES ::= {
    ID id-New-eNB-UE-X2AP-ID
                                                                                         PRESENCE mandatory }
                                       CRITICALITY ignore TYPE UE-X2AP-ID
    ID id-New-eNB-UE-X2AP-ID-Extension
                                       CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                         PRESENCE optional
                                                                                         PRESENCE mandatory }
    ID id-Old-eNB-UE-X2AP-ID
                                       CRITICALITY ignore TYPE UE-X2AP-ID
    ID id-Old-eNB-UE-X2AP-ID-Extension
                                       CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                         PRESENCE optional
    PRESENCE mandatory
    ID id-CHO-DC-Indicator
                                                                                         PRESENCE optional },
                                       CRITICALITY reject TYPE CHO-DC-Indicator
   . . .
E-RABs-DataForwardingAddress-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-DataForwardingAddress-ItemIEs} }
E-RABs-DataForwardingAddress-ItemIEs X2AP-PROTOCOL-IES ::= {
   . . .
E-RABs-DataForwardingAddress-Item ::= SEQUENCE {
   e-RAB-ID
                             E-RAB-ID,
   dl-GTPtunnelEndpoint
                             GTPtunnelEndpoint,
                             ProtocolExtensionContainer { {E-RABs-DataForwardingAddress-ItemExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
E-RABs-DataForwardingAddress-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  ····
-- GNB STATUS INDICATION
GNBStatusIndication ::= SEOUENCE {
   protocolIEs
                  ProtocolIE-Container
                                       { GNBStatusIndicationIEs} },
GNBStatusIndicationIEs X2AP-PROTOCOL-IES ::=
    ID id-GNBOverloadInformation
                                   CRITICALITY ignore TYPE GNBOverloadInformation
                                                                                PRESENCE mandatory |
   { ID id-InterfaceInstanceIndication
                                   CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                  PRESENCE optional },
```

```
-- EN-DC CONFIGURATION TRANSFER
__ ******************
ENDCConfigurationTransfer ::= SEQUENCE {
   protocolIEs
                ProtocolIE-Container
                                     {{ENDCConfigurationTransfer-IEs}},
   . . .
ENDCConfigurationTransfer-IEs X2AP-PROTOCOL-IES ::= {
    PRESENCE optional } |
    ID id-InterfaceInstanceIndication
                                     CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                          PRESENCE optional },
-- TRACE START
__ **********************
TraceStart ::= SEQUENCE {
                                        { {TraceStartIEs} },
   protocolIEs
                ProtocolIE-Container
TraceStartIEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                 CRITICALITY reject TYPE UE-X2AP-ID
                                                                                 PRESENCE mandatory } |
    ID id-SqNB-UE-X2AP-ID
                                 CRITICALITY reject TYPE SqNB-UE-X2AP-ID
                                                                                  PRESENCE mandatory
    ID id-TraceActivation
                                 CRITICALITY ignore TYPE TraceActivation
                                                                                   PRESENCE mandatory
   { ID id-MeNB-UE-X2AP-ID-Extension CRITICALITY reject
                                                      TYPE UE-X2AP-ID-Extension
                                                                                   PRESENCE optional },
  *****************
-- DEACTIVATE TRACE
DeactivateTrace ::= SEQUENCE {
   protocolIEs
                ProtocolIE-Container
                                        { {DeactivateTraceIEs} },
DeactivateTraceIEs X2AP-PROTOCOL-IES ::= {
    ID id-MeNB-UE-X2AP-ID
                                 CRITICALITY reject TYPE UE-X2AP-ID
                                                                                 PRESENCE mandatory }
                                                                                  PRESENCE mandatory }
    ID id-SgNB-UE-X2AP-ID
                                 CRITICALITY reject TYPE SgNB-UE-X2AP-ID
    ID id-EUTRANTraceID
                                 CRITICALITY ignore TYPE EUTRANTraceID
                                                                                 PRESENCE mandatory }
```

```
PRESENCE optional },
   { ID id-MeNB-UE-X2AP-ID-Extension
                                     CRITICALITY reject TYPE UE-X2AP-ID-Extension
  ******************
-- CELL TRAFFIC TRACE
CellTrafficTrace ::= SEQUENCE {
                                        { {CellTrafficTraceIEs} },
   protocolIEs
                ProtocolIE-Container
CellTrafficTraceIEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                     CRITICALITY reject TYPE UE-X2AP-ID
                                                                                   PRESENCE mandatory
     ID id-SgNB-UE-X2AP-ID
                                     CRITICALITY reject TYPE SqNB-UE-X2AP-ID
                                                                                   PRESENCE mandatory
     ID id-EUTRANTraceID
                                     CRITICALITY ignore TYPE EUTRANTraceID
                                                                                   PRESENCE mandatory
    ID id-TraceCollectionEntityIPAddress CRITICALITY ignore TYPE TransportLayerAddress
                                                                                   PRESENCE mandatory
     ID id-PrivacyIndicator
                                     CRITICALITY ignore TYPE PrivacyIndicator
                                                                                   PRESENCE optional }
   { ID id-MeNB-UE-X2AP-ID-Extension
                                     CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                   PRESENCE optional },
  ******************
-- F1-C TRAFFIC TRANSFER
          F1CTrafficTransfer ::= SEQUENCE {
   protocolIEs
                ProtocolIE-Container
                                        {{ F1CTrafficTransfer-IEs}},
F1CTrafficTransfer-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                        CRITICALITY reject TYPE UE-X2AP-ID
                                                                                     PRESENCE mandatory
     ID id-SgNB-UE-X2AP-ID
                                                                                     PRESENCE mandatory }
                                        CRITICALITY reject TYPE SgNB-UE-X2AP-ID
     ID id-F1CTrafficContainer
                                        CRITICALITY reject TYPE F1CTrafficContainer
                                                                                     PRESENCE mandatory }
                                                                                     PRESENCE optional },
    ID id-MeNB-UE-X2AP-ID-Extension
                                        CRITICALITY reject TYPE UE-X2AP-ID-Extension
    -- UE RADIO CAPABILITY ID MAPPING REOUEST
  UERadioCapabilityIDMappingRequest::= SEQUENCE {
   protocolIEs
                   ProtocolIE-Container
                                           { { UERadioCapabilityIDMappingRequestIEs} },
```

```
UERadioCapabilityIDMappingRequestIEs X2AP-PROTOCOL-IES ::= {
   PRESENCE mandatory },
-- UE RADIO CAPABILITY ID MAPPING RESPONSE
__ *********************
UERadioCapabilityIDMappingResponse ::= SEQUENCE {
   protocolIEs
                   ProtocolIE-Container
                                          { { UERadioCapabilityIDMappingResponseIEs} },
   . . .
UERadioCapabilityIDMappingResponseIEs X2AP-PROTOCOL-IES ::= {
    ID id-UERadioCapabilityID
                                    CRITICALITY reject TYPE UERadioCapabilityID
                                                                                 PRESENCE mandatory }
    ID id-UERadioCapability
                                    CRITICALITY ignore TYPE UERadioCapability
                                                                                 PRESENCE mandatory }
   { ID id-CriticalityDiagnostics
                                    CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                 PRESENCE optional },
   . . .
END
-- ASN1STOP
```

## 9.3.5 Information Element definitions

```
-- ASN1START
  *****************
-- Information Element Definitions
  *****************
X2AP-IEs {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) x2ap (2) version1 (1) x2ap-IEs (2) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
IMPORTS
   id-E-RAB-Item,
   id-Number-of-Antennaports,
   id-MBSFN-Subframe-Info,
   id-PRACH-Configuration,
   id-CSG-Id,
   id-MDTConfiguration,
   id-SignallingBasedMDTPLMNList,
```

```
id-MultibandInfoList,
id-FregBandIndicatorPriority,
id-NeighbourTAC.
id-Time-UE-StayedInCell-EnhancedGranularity,
id-MBMS-Service-Area-List.
id-HO-cause,
id-eARFCNExtension.
id-DL-EARFCNExtension,
id-UL-EARFCNExtension,
id-M3Configuration,
id-M4Configuration,
id-M5Configuration,
id-MDT-Location-Info,
id-NRrestrictioninEPSasSecondaryRAT,
id-NRrestrictionin5GS,
id-AdditionalSpecialSubframe-Info,
id-UEID,
id-enhancedRNTP,
id-ProSeUEtoNetworkRelaying,
id-M6Configuration,
id-M7Configuration,
id-OffsetOfNbiotChannelNumberToDL-EARFCN,
id-OffsetOfNbiotChannelNumberToUL-EARFCN,
id-AdditionalSpecialSubframeExtension-Info,
id-BandwidthReducedSI,
id-extended-e-RAB-MaximumBitrateDL,
id-extended-e-RAB-MaximumBitrateUL,
id-extended-e-RAB-GuaranteedBitrateDL,
id-extended-e-RAB-GuaranteedBitrateUL,
id-extended-uEaggregateMaximumBitRateDownlink,
id-extended-uEaggregateMaximumBitRateUplink,
id-E-RABUsageReport-Item,
id-SecondaryRATUsageReport-Item,
id-UEAppLayerMeasConfig,
id-DL-scheduling-PDCCH-CCE-usage,
id-UL-scheduling-PDCCH-CCE-usage,
id-DownlinkPacketLossRate,
id-UplinkPacketLossRate,
id-serviceType,
id-ProtectedEUTRAResourceIndication,
id-NRS-NSSS-PowerOffset,
id-NSSS-NumOccasionDifferentPrecoder.
id-CNTypeRestrictions,
id-BluetoothMeasurementConfiguration,
id-WLANMeasurementConfiguration,
id-ECGI,
id-NRCGI,
id-MeNBCoordinationAssistanceInformation,
id-SqNBCoordinationAssistanceInformation,
id-NRNeighbourInfoToAdd,
id-LastNG-RANPLMNIdentity,
id-BPLMN-ID-Info-EUTRA,
id-NBIoT-UL-DL-AlignmentOffset,
id-UnlicensedSpectrumRestriction,
```

```
id-CarrierList,
id-FrequencyShift7p5khz,
id-NPRACHConfiguration,
id-MDTConfigurationNR,
id-CSI-RSTransmissionIndication,
id-QoS-Mapping-Information,
id-IntendedTDD-DL-ULConfiguration-NR,
id-TraceCollectionEntityURI,
id-SFN-Offset.
maxnoofBearers,
maxCellineNB,
maxEARFCN,
maxEARFCNPlusOne,
newmaxEARFCN,
maxInterfaces,
maxnoofBands,
maxnoofBPLMNs,
maxnoofAdditionalPLMNs,
maxnoofCells,
maxnoofEPLMNs,
maxnoofEPLMNsPlusOne,
maxnoofForbLACs,
maxnoofForbTACs,
maxnoofNeighbours,
maxnoofPRBs,
maxNrOfErrors,
maxPools,
maxnoofMBSFN,
maxnoofTAforMDT,
maxnoofCellIDforMDT,
maxnoofMBMSServiceAreaIdentities,
maxnoofMDTPLMNs,
maxnoofCoMPHypothesisSet,
maxnoofCoMPCells,
maxUEReport,
maxCellReport,
maxnoofPA,
maxCSIProcess,
maxCSIReport,
maxSubband,
maxnooftimeperiods,
maxnoofCellIDforQMC,
maxnoofTAforOMC,
maxnoofPLMNforQMC,
maxUEsinengNBDU,
maxnoofProtectedResourcePatterns,
maxnoNRcellsSpectrumSharingWithE-UTRA,
maxnoofNrCellBands,
maxnoofBluetoothName,
maxnoofWLANName,
maxofNRNeighbours,
maxnoofextBPLMNs,
```

414

```
maxnoofTLAs,
    maxnoofGTPTLAs,
    maxnoofTNLAssociations,
    maxnoofCellsinCHO, maxnoofPC5QoSFlows,
    maxnoofSSBAreas,
    maxnoofNRSCSs.
    maxnoofNRPhysicalResourceBlocks,
    maxnoofNonAnchorCarrierFreqConfig
FROM X2AP-Constants
    Criticality,
    ProcedureCode,
    ProtocolIE-ID,
    TriggeringMessage
FROM X2AP-CommonDataTypes
    ProtocolExtensionContainer{},
    ProtocolIE-Single-Container{},
    X2AP-PROTOCOL-EXTENSION,
    X2AP-PROTOCOL-IES
FROM X2AP-Containers;
-- A
ABSInformation ::= CHOICE {
    fdd
                        ABSInformationFDD,
    t.dd
                        ABSInformationTDD,
    abs-inactive
                        NULL,
ABSInformationFDD ::= SEQUENCE {
    abs-pattern-info
                                         BIT STRING (SIZE(40)),
    numberOfCellSpecificAntennaPorts
                                         ENUMERATED {one, two, four, ...},
    measurement-subset
                                         BIT STRING (SIZE(40)),
                                         ProtocolExtensionContainer { {ABSInformationFDD-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
ABSInformationFDD-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ABSInformationTDD ::= SEQUENCE {
    abs-pattern-info
                                         BIT STRING (SIZE(1..70, ...)),
    numberOfCellSpecificAntennaPorts
                                         ENUMERATED {one, two, four, ...},
    measurement-subset
                                         BIT STRING (SIZE(1..70, ...)),
                                         ProtocolExtensionContainer { {ABSInformationTDD-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
```

```
ABSInformationTDD-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ABS-Status ::= SEQUENCE {
    dL-ABS-status
                                                 DL-ABS-status,
    usableABSInformation
                                                 UsableABSInformation,
                                                 ProtocolExtensionContainer { {ABS-Status-ExtIEs} } OPTIONAL,
    iE-Extensions
ABS-Status-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ActivationID ::= INTEGER (0..255)
AdditionalRRMPriorityIndex ::= BIT STRING (SIZE(32))
AdditionalSpecialSubframe-Info ::=
                                         SEQUENCE {
    additionalspecialSubframePatterns
                                             Additional Special Subframe Patterns,
                                             CyclicPrefixDL,
    cyclicPrefixDL
    cyclicPrefixUL
                                             CyclicPrefixUL,
                                             ProtocolExtensionContainer { {AdditionalSpecialSubframe-Info-ExtIEs} } OPTIONAL,
    iE-Extensions
AdditionalSpecialSubframe-Info-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
AdditionalSpecialSubframePatterns ::= ENUMERATED {
    ssp0,
    ssp1,
    ssp2,
    ssp3,
    ssp4,
    ssp5,
    ssp6,
    ssp7,
    ssp8,
    ssp9,
    . . .
AdditionalSpecialSubframeExtension-Info ::=
                                                 SEQUENCE {
    additional special Subframe Patterns Extension Additional Special Subframe Patterns Extension,
                                                 CyclicPrefixDL,
    cyclicPrefixDL
    cyclicPrefixUL
                                                 CyclicPrefixUL,
    iE-Extensions
                                                 ProtocolExtensionContainer { {AdditionalSpecialSubframeExtension-Info-ExtIEs} } OPTIONAL,
AdditionalSpecialSubframeExtension-Info-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
AdditionalSpecialSubframePatternsExtension ::= ENUMERATED
    ssp10,
    . . .
AvailableFastMCGRecoveryViaSRB3 ::= ENUMERATED {true,...}
AerialUEsubscriptionInformation ::= ENUMERATED {
    allowed,
    not-allowed,
AllocationAndRetentionPriority ::= SEQUENCE
    priorityLevel
                                PriorityLevel,
    pre-emptionCapability
                                Pre-emptionCapability,
    pre-emptionVulnerability
                                Pre-emptionVulnerability,
    iE-Extensions
                                ProtocolExtensionContainer { {AllocationAndRetentionPriority-ExtIEs} } OPTIONAL,
AllocationAndRetentionPriority-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
AreaScopeOfMDT ::= CHOICE {
    cellBased
                                CellBasedMDT,
    tABased
                                TABasedMDT,
    pLMNWide
                                NULL,
    tAIBased
                                TAIBasedMDT
AreaScopeOfQMC ::= CHOICE {
    cellBased
                                CellBasedOMC,
    tABased
                                TABasedOMC,
    tAIBased
                                TAIBasedOMC,
                                PLMNAreaBasedQMC,
    pLMNAreaBased
AS-SecurityInformation ::= SEQUENCE {
    key-eNodeB-star
                     Key-eNodeB-Star,
    nextHopChainingCount
                                    NextHopChainingCount,
                                        ProtocolExtensionContainer { {AS-SecurityInformation-ExtIEs} } OPTIONAL,
    iE-Extensions
AS-SecurityInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
Additional PLMNs-Item ::= SEQUENCE (SIZE(1..maxnoofAdditional PLMNs)) OF PLMN-Identity
-- B
BandwidthReducedSI::= ENUMERATED {
    scheduled,
BearerType ::= ENUMERATED {
    non-IP,
BenefitMetric ::= INTEGER (-101..100, ...)
BitRate ::= INTEGER (0..1000000000)
BroadcastPLMNs-Item ::= SEQUENCE (SIZE(1..maxnoofBPLMNs)) OF PLMN-Identity
BluetoothMeasurementConfiguration ::= SEQUENCE {
    bluetoothMeasConfig
                                    BluetoothMeasConfig,
    bluetoothMeasConfiqNameList
                                    BluetoothMeasConfiqNameList
                                                                        OPTIONAL,
    bt-rssi
                                    ENUMERATED {true, ...}
                                                                        OPTIONAL,
    iE-Extensions
                    ProtocolExtensionContainer { {BluetoothMeasurementConfiguration-ExtIEs} } OPTIONAL,
BluetoothMeasurementConfiguration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
BluetoothMeasConfiqNameList ::= SEQUENCE (SIZE(1..maxnoofBluetoothName)) OF BluetoothName
BluetoothMeasConfig::= ENUMERATED {setup,...}
BluetoothName ::= OCTET STRING (SIZE (1..248))
BPLMN-ID-Info-EUTRA ::= SEQUENCE (SIZE(1..maxnoofBPLMNs)) OF BPLMN-ID-Info-EUTRA-Item
BPLMN-ID-Info-EUTRA-Item ::= SEQUENCE {
    broadcastPLMNs
                                    BroadcastPLMNs-Item,
    tac
                                    EUTRANCellIdentifier,
    e-utraCI
    iE-Extension
                                    ProtocolExtensionContainer { {BPLMN-ID-Info-EUTRA-Item-ExtIEs} } OPTIONAL,
BPLMN-ID-Info-EUTRA-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
BPLMN-ID-Info-NR ::= SEQUENCE (SIZE(1..maxnoofextBPLMNs)) OF BPLMN-ID-Info-NR-Item
```

```
BPLMN-ID-Info-NR-Item ::= SEQUENCE {
    broadcast.PLMNs
                                     BroadcastextPLMNs.
    fiveGS-TAC
                                    FiveGS-TAC
                                                     OPTIONAL,
    nr-CI
                                    NRCellIdentifier,
                                    ProtocolExtensionContainer { {BPLMN-ID-Info-NR-Item-ExtIEs} } OPTIONAL,
    iE-Extension
BPLMN-ID-Info-NR-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
BroadcastextPLMNs ::= SEQUENCE (SIZE(1..maxnoofextBPLMNs)) OF PLMN-Identity
-- C
CapacityValue ::= INTEGER (0..100)
Cause ::= CHOICE {
    radioNetwork
                        CauseRadioNetwork,
                        CauseTransport,
    transport
                        CauseProtocol,
    protocol
                        CauseMisc.
    misc
CauseMisc ::= ENUMERATED {
    control-processing-overload,
    hardware-failure,
    om-intervention,
    not-enough-user-plane-processing-resources,
    unspecified,
    . . .
CauseProtocol ::= ENUMERATED {
    transfer-syntax-error,
    abstract-syntax-error-reject,
    abstract-syntax-error-ignore-and-notify,
    message-not-compatible-with-receiver-state,
    semantic-error,
    unspecified,
    abstract-syntax-error-falsely-constructed-message,
    . . .
CauseRadioNetwork ::= ENUMERATED {
    handover-desirable-for-radio-reasons,
    time-critical-handover,
    resource-optimisation-handover,
    reduce-load-in-serving-cell,
    partial-handover,
    unknown-new-eNB-UE-X2AP-ID,
```

```
unknown-old-eNB-UE-X2AP-ID,
unknown-pair-of-UE-X2AP-ID,
ho-target-not-allowed,
tx2relocoverall-expiry,
trelocprep-expiry,
cell-not-available,
no-radio-resources-available-in-target-cell,
invalid-MME-GroupID,
unknown-MME-Code,
encryption-and-or-integrity-protection-algorithms-not-supported,
reportCharacteristicsEmpty,
noReportPeriodicity,
existingMeasurementID,
unknown-eNB-Measurement-ID,
measurement-temporarily-not-available,
unspecified,
. . . ,
load-balancing,
handover-optimisation,
value-out-of-allowed-range,
multiple-E-RAB-ID-instances,
switch-off-ongoing,
not-supported-QCI-value,
measurement-not-supported-for-the-object,
tDCoverall-expiry,
tDCprep-expiry,
action-desirable-for-radio-reasons,
reduce-load,
resource-optimisation,
time-critical-action,
target-not-allowed,
no-radio-resources-available,
invalid-QoS-combination,
encryption-algorithms-not-supported,
procedure-cancelled.
rRM-purpose,
improve-user-bit-rate,
user-inactivity,
radio-connection-with-UE-lost,
failure-in-the-radio-interface-procedure,
bearer-option-not-supported,
mCG-Mobility,
sCG-Mobility,
count-reaches-max-value,
unknown-old-en-qNB-UE-X2AP-ID,
pDCP-Overload,
cho-cpc-resources-tobechanged,
ue-power-saving,
insufficient-ue-capabilities,
normal-release
```

```
CauseTransport ::= ENUMERATED {
    transport-resource-unavailable,
    unspecified,
CellBasedMDT::= SEQUENCE {
    cellIdListforMDT
                        CellIdListforMDT,
   iE-Extensions
                        ProtocolExtensionContainer { {CellBasedMDT-ExtIEs} } OPTIONAL,
    . . .
CellBasedMDT-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CellBasedOMC::= SEQUENCE {
    cellIdListforOMC
                            CellIdListforOMC,
                        ProtocolExtensionContainer { {CellBasedOMC-ExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
CellBasedQMC-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
CellCapacityClassValue ::= INTEGER (1..100, ...)
CellDeploymentStatusIndicator ::= ENUMERATED {pre-change-notification, ...}
CellIdListforMDT ::= SEQUENCE (SIZE(1..maxnoofCellIDforMDT)) OF ECGI
CellIdListforQMC ::= SEQUENCE (SIZE(1..maxnoofCellIDforQMC)) OF ECGI
CellReplacingInfo ::= SEQUENCE {
    replacingCellsList
                                    ReplacingCellsList,
   iE-Extensions
                                    ProtocolExtensionContainer { {CellReplacingInfo-ExtIEs}}
                                                                                                 OPTIONAL,
    . . .
CellReplacingInfo-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CellReportingIndicator ::= ENUMERATED {stop-request, ... }
Cell-Size ::= ENUMERATED {verysmall, small, medium, large, ... }
CellType ::= SEQUENCE {
    cell-Size
                                    Cell-Size,
   iE-Extensions
                                    ProtocolExtensionContainer { {CellType-ExtIEs}} OPTIONAL,
```

```
CellType-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CHO-DC-Indicator ::= ENUMERATED {true, ...}
CNTypeRestrictions ::= SEQUENCE (SIZE(1.. maxnoofEPLMNsPlusOne)) OF CNTypeRestrictionsItem
CNTypeRestrictionsItem ::= SEQUENCE {
   plmn-Id PLMN-Identity,
                       ENUMERATED {fiveGC-forbidden, ..., epc-forbidden},
    cn-type
                      ProtocolExtensionContainer { {CNTypeRestrictionsItem-ExtIEs} } OPTIONAL,
   iE-Extensions
CNTypeRestrictionsItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CoMPHypothesisSet ::= SEQUENCE (SIZE(1...maxnoofCoMPCells)) OF CoMPHypothesisSetItem
CompHypothesisSetItem ::= SEQUENCE {
    coMPCellID
    coMPHypothesis
                                   BIT STRING (SIZE(6..4400, ...)),
   iE-Extensions
                                   ProtocolExtensionContainer { {CoMPHypothesisSetItem-ExtIEs} } OPTIONAL,
ComphypothesisSetItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CoMPInformation ::= SEQUENCE {
                                           CoMPInformationItem
    coMPInformationItem
    coMPInformationStartTime
                                           CoMPInformationStartTime,
   iE-Extensions
                                           ProtocolExtensionContainer { {CoMPInformation-ExtIEs} } OPTIONAL,
    . . .
CoMPInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CompInformationItem ::= SEQUENCE (SIZE(1..maxnoofComPHypothesisSet)) OF
    SEQUENCE {
       coMPHypothesisSet
                                           CoMPHypothesisSet,
       benefitMetric
                                           BenefitMetric,
       iE-Extensions
                                           ProtocolExtensionContainer { {CoMPInformationItem-ExtIEs} } OPTIONAL,
        . . .
CoMPInformationItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
CoMPInformationStartTime ::= SEQUENCE (SIZE(0..1)) OF
    SEQUENCE {
       startSFN
                                            INTEGER (0..1023, ...),
        startSubframeNumber
                                            INTEGER (0..9, ...),
                                            ProtocolExtensionContainer { {COMPInformationStartTime-ExtIEs} } OPTIONAL,
       iE-Extensions
COMPInformationStartTime-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CompositeAvailableCapacity ::= SEQUENCE {
    cellCapacityClassValue
                                                     CellCapacityClassValue
                                                                                         OPTIONAL,
    capacityValue
                                                     CapacityValue,
                                                     ProtocolExtensionContainer { {CompositeAvailableCapacity-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
CompositeAvailableCapacity-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CompositeAvailableCapacityGroup ::= SEQUENCE {
    dL-CompositeAvailableCapacity
                                                     CompositeAvailableCapacity,
    uL-CompositeAvailableCapacity
                                                     CompositeAvailableCapacity,
                                                     ProtocolExtensionContainer { {CompositeAvailableCapacityGroup-ExtIEs} } OPTIONAL,
    iE-Extensions
CompositeAvailableCapacityGroup-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
Correlation-ID ::= OCTET STRING (SIZE (4))
COUNTvalue ::= SEQUENCE {
    pDCP-SN
                            PDCP-SN,
    hFN
                            ProtocolExtensionContainer { {COUNTvalue-ExtIEs} } OPTIONAL,
    iE-Extensions
COUNTvalue-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
COUNTValueExtended ::= SEQUENCE {
    pDCP-SNExtended
                            PDCP-SNExtended,
    hFNModified
                            HFNModified,
    iE-Extensions
                            ProtocolExtensionContainer { {COUNTValueExtended-ExtIEs} } OPTIONAL,
    . . .
```

```
COUNTValueExtended-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
COUNTvaluePDCP-SNlength18 ::= SEQUENCE {
    pDCP-SNlength18
                           PDCP-SNlength18,
    hFNforPDCP-SNlength18 HFNforPDCP-SNlength18,
                            ProtocolExtensionContainer { {COUNTvaluePDCP-SNlength18-ExtIEs} } OPTIONAL,
   iE-Extensions
COUNTvaluePDCP-SNlength18-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CoverageModificationList ::= SEQUENCE (SIZE (1..maxCellineNB)) OF CoverageModification-Item
CoverageModification-Item ::= SEQUENCE {
    eCGI
                                    ECGI,
    coverageState
                                    INTEGER (0..15, ...),
    cellDeploymentStatusIndicator CellDeploymentStatusIndicator
                                                                            OPTIONAL,
    cellReplacingInfo
                                    CellReplacingInfo
                                                                            OPTIONAL,
-- Included in case the Cell Deployment Status Indicator IE is present
                                ::= CHOICE {
CPTransportLayerInformation
    endpointIPAddress
                                            TransportLayerAddress,
                                                TransportLayerAddressAndPort,
    endpointIPAddressAndPort
CriticalityDiagnostics ::= SEQUENCE {
    procedureCode
                                    ProcedureCode
                                                                    OPTIONAL,
    triggeringMessage
                                    TriggeringMessage
                                                                    OPTIONAL,
                                    Criticality
    procedureCriticality
                                                                    OPTIONAL,
    iEsCriticalityDiagnostics
                                    CriticalityDiagnostics-IE-List OPTIONAL,
    iE-Extensions
                                    ProtocolExtensionContainer { (CriticalityDiagnostics-ExtIEs) }
    . . .
CriticalityDiagnostics-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CriticalityDiagnostics-IE-List ::= SEQUENCE (SIZE (1..maxNrOfErrors)) OF
    SEQUENCE {
        iECriticality
                                Criticality,
       iE-ID
                                ProtocolIE-ID,
       typeOfError
                                TypeOfError,
                                ProtocolExtensionContainer { {CriticalityDiagnostics-IE-List-ExtIEs} } OPTIONAL,
        iE-Extensions
```

```
CriticalityDiagnostics-IE-List-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CRNTI ::= BIT STRING (SIZE (16))
CSGMembershipStatus ::= ENUMERATED {
   member,
   not-member
CSG-Id ::= BIT STRING (SIZE (27))
CSIReportList ::= SEQUENCE (SIZE(1..maxUEReport)) OF
    SEQUENCE {
       uEID
                                       UEID,
       cSIReportPerCSIProcess
                                       CSIReportPerCSIProcess,
       iE-Extensions
                                       ProtocolExtensionContainer { (CSIReportList-ExtIEs) } OPTIONAL,
CSIReportList-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CSIReportPerCSIProcess ::= SEOUENCE (SIZE(1.. maxCSIProcess)) OF
    SEQUENCE {
       cSIProcessConfigurationIndex INTEGER (1..7, ...),
       cSIReportPerCSIProcessItem
                                       CSIReportPerCSIProcessItem,
       iE-Extensions
                                       ProtocolExtensionContainer { {CSIReportPerCSIProcess-ExtIEs} } OPTIONAL,
CSIReportPerCSIProcess-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CSIReportPerCSIProcessItem ::= SEQUENCE (SIZE(1.. maxCSIReport)) OF
    SEQUENCE {
       rI
                                       INTEGER (1..8, ...),
       widebandCQI
                                       WidebandCQI,
       subbandSize
                                       SubbandSize,
                                       SubbandCQIList OPTIONAL,
       subbandCQIList
       iE-Extensions
                                       ProtocolExtensionContainer { {CSIReportPerCSIProcessItem-ExtIEs} } OPTIONAL,
CSIReportPerCSIProcessItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
CyclicPrefixDL ::= ENUMERATED {
    normal,
    extended.
CyclicPrefixUL ::= ENUMERATED {
    normal,
    extended,
    . . .
CHOtrigger ::= ENUMERATED {
    cho-initiation,
    cho-replace,
CHOinformation-REO ::= SEQUENCE {
    cho-trigger
                                    CHOtrigger,
    new-eNB-UE-X2AP-ID
                                    UE-X2AP-ID
                                                                                         OPTIONAL
        -- This IE shall be present if the cho-trigger IE is present and set to "CHO-replace" --,
    new-eNB-UE-X2AP-ID-Extension UE-X2AP-ID-Extension
                                                                                         OPTIONAL,
    cHO-EstimatedArrivalProbability CHO-Probability
                                                                                         OPTIONAL,
    iE-Extensions
                                ProtocolExtensionContainer { { CHOinformation-REQ-ExtIEs} } OPTIONAL,
CHOinformation-REO-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CHOinformation-ACK ::= SEQUENCE {
    requestedTargetCellID
                                     ECGI,
                                    MaxCHOpreparations
                                                                                                  OPTIONAL,
    maxCHOpreparations
    iE-Extensions
                                    ProtocolExtensionContainer { { CHOinformation-ACK-ExtIEs} } OPTIONAL,
CHOinformation-ACK-ExtIES X2AP-PROTOCOL-EXTENSION ::= {
CandidateCellsToBeCancelledList ::= SEOUENCE (SIZE (1..maxnoofCellsinCHO)) OF ECGI
CHO-Probability ::= INTEGER (1..100)
CSI-RSTransmissionIndication ::= ENUMERATED {
    activated,
    deactivated,
```

```
-- D
DataTrafficResources ::= BIT STRING (SIZE(6..17600))
DataTrafficResourceIndication ::= SEQUENCE {
                                   INTEGER (0..1023),
    activationSFN
    sharedResourceType
                                   SharedResourceType,
    reservedSubframePattern
                                    ReservedSubframePattern OPTIONAL,
                                    ProtocolExtensionContainer { {DataTrafficResourceIndication-ExtIEs} } OPTIONAL,
    iE-Extensions
DataTrafficResourceIndication-ExtIEs X2AP-PROTOCOL-EXTENSION ::=
DAPSRequestInfo ::= SEQUENCE {
    dAPSIndicator
                                ENUMERATED {daps-HO-required, ...},
                                ProtocolExtensionContainer { {DAPSRequestInfo-ExtIEs} } OPTIONAL,
    iE-Extensions
DAPSRequestInfo-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
DAPSResponseInfo ::= SEQUENCE {
                                            ENUMERATED { daps-HO-accepted, daps-HO-not-accepted,...},
    dAPSResponseIndicator
                                ProtocolExtensionContainer { { DAPSResponseInfo-ExtIEs} } OPTIONAL,
    iE-Extensions
DAPSResponseInfo-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
DeactivationIndication::= ENUMERATED {
    deactivated,
DeliveryStatus ::= SEQUENCE {
    highestSuccessDeliveredPDCPSN
                                        INTEGER (0..4095),
                       ProtocolExtensionContainer { {DeliveryStatus-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
DeliveryStatus-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
DesiredActNotificationLevel ::= ENUMERATED {none, e-rab, ue-level, ...}
DL-ABS-status::= INTEGER (0..100)
```

```
DL-Forwarding ::= ENUMERATED {
    dL-forwardingProposed,
DL-GBR-PRB-usage::= INTEGER (0..100)
DL-non-GBR-PRB-usage::= INTEGER (0..100)
DLResourceBitmapULandDLSharing ::= DataTrafficResources
DLResourcesULandDLSharing ::= CHOICE {
unchanged
                    NULL,
    changed
                        DLResourceBitmapULandDLSharing,
DL-scheduling-PDCCH-CCE-usage::= INTEGER (0..100)
DL-Total-PRB-usage::= INTEGER (0..100)
DRB-ID ::= INTEGER (1..32)
DuplicationActivation::= ENUMERATED {active, inactive, ...}
DynamicDLTransmissionInformation ::= CHOICE {
    naics-active
                            DynamicNAICSInformation,
    naics-inactive
                            NULL,
DynamicNAICSInformation ::= SEQUENCE {
                                        BIT STRING (SIZE(8))
                                                                                                         OPTIONAL,
    transmissionModes
    pB-information
                                        INTEGER (0..3)
                                                                                                          OPTIONAL,
    pA-list
                                        SEQUENCE (SIZE(0..maxnoofPA)) OF PA-Values,
    iE-Extensions
                                        ProtocolExtensionContainer { { DynamicNAICSInformation-ExtIEs} } OPTIONAL,
    . . .
DynamicNAICSInformation-ExtlEs X2AP-PROTOCOL-EXTENSION ::= {
-- E
EARFCN ::= INTEGER (0..maxEARFCN)
EARFCNExtension ::= INTEGER(maxEARFCNPlusOne..newmaxEARFCN, ...)
ECGI ::= SEQUENCE {
    pLMN-Identity
                                PLMN-Identity,
    eUTRANcellIdentifier
                                EUTRANCellIdentifier,
                                ProtocolExtensionContainer { {ECGI-ExtIEs} } OPTIONAL,
    iE-Extensions
```

```
ECGI-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
EndcSONConfigurationTransfer ::= OCTET STRING
EnhancedRNTP ::= SEQUENCE {
   enhancedRNTPBitmap
                               BIT STRING (SIZE(12..8800, ...)),
   rNTP-High-Power-Threshold RNTP-Threshold,
   enhancedRNTPStartTime
                              EnhancedRNTPStartTime OPTIONAL,
   iE-Extensions
                               ProtocolExtensionContainer { {EnhancedRNTP-ExtIEs} } OPTIONAL,
EnhancedRNTP-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
EnhancedRNTPStartTime ::= SEQUENCE {
                  INTEGER (0..1023, ...),
       startSFN
       startSubframeNumber INTEGER (0..9, ...),
       iE-Extensions
                      ProtocolExtensionContainer { {EnhancedRNTPStartTime-ExtIEs} } OPTIONAL,
       . . .
EnhancedRNTPStartTime-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ENB-ID ::= CHOICE {
   macro-eNB-ID BIT STRING (SIZE (20)),
   home-eNB-ID BIT STRING (SIZE (28)),
   short-Macro-eNB-ID
                        BIT STRING (SIZE(18)),
   long-Macro-eNB-ID
                          BIT STRING (SIZE(21))
EncryptionAlgorithms ::= BIT STRING (SIZE (16, ...))
EN-DC-ResourceConfiguration ::= SEQUENCE {
   pDCPatSgNB ENUMERATED {present, not-present, ...},
   mCGresources ENUMERATED {present, not-present, ...},
   sCGresources ENUMERATED {present, not-present, ...},
   iE-Extensions
                                  ProtocolExtensionContainer { {EN-DC-ResourceConfigurationExtIEs} } OPTIONAL,
EN-DC-ResourceConfigurationExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
EPCHandoverRestrictionListContainer ::= OCTET STRING
-- This octets of the OCTET STRING contain the Handover Restriction List IE as specified in TS 36.413 [4]. --
EPLMNs ::= SEQUENCE (SIZE(1..maxnoofEPLMNs)) OF PLMN-Identity
ERABActivityNotifyItemList ::= SEQUENCE (SIZE (0..maxnoofBearers)) OF ERABActivityNotifyItem
ERABActivityNotifyItem ::= SEQUENCE {
   e-RAB-ID
                                   E-RAB-ID,
   activityReport
                                   UserPlaneTrafficActivityReport,
   iE-Extensions
                                   ProtocolExtensionContainer { {ERABActivityNotifyItem-ExtIEs} } OPTIONAL,
ERABActivityNotifyItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RAB-ID ::= INTEGER (0..15, ...)
E-RAB-Level-QoS-Parameters ::= SEQUENCE {
   allocationAndRetentionPriority AllocationAndRetentionPriority,
   qbr0osInformation
                                   GBR-OosInformation
                                                                                                  OPTIONAL,
   iE-Extensions
                                   ProtocolExtensionContainer { {E-RAB-Level-QoS-Parameters-ExtIEs} } OPTIONAL,
E-RAB-Level-Oos-Parameters-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- Extended for introduction of downlink and uplink packet loss rate for enhanced Voice performance -
                                          CRITICALITY ignore EXTENSION Packet-LossRate
     ID id-DownlinkPacketLossRate
                                                                                              PRESENCE optional } |
     ID id-UplinkPacketLossRate
                                          CRITICALITY ignore EXTENSION Packet-LossRate
                                                                                              PRESENCE optional },
   . . .
E-RAB-List ::= SEQUENCE (SIZE(1.. maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RAB-ItemIEs} }
E-RAB-ItemIEs X2AP-PROTOCOL-IES ::= {
   PRESENCE mandatory },
                                              TYPE E-RAB-Item
   . . .
E-RAB-Item ::= SEQUENCE {
   e-RAB-ID
                           E-RAB-ID,
   cause
   iE-Extensions
                               ProtocolExtensionContainer { {E-RAB-Item-ExtIEs} } OPTIONAL,
E-RAB-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABsSubjectToEarlyStatusTransfer-List ::= SEQUENCE (SIZE (1.. maxnoofBearers)) OF E-RABsSubjectToEarlyStatusTransfer-Item
```

```
E-RABsSubjectToEarlyStatusTransfer-Item ::= SEQUENCE {
   e-RAB-ID
                                                       E-RAB-ID.
   fIRST-DL-COUNTValue
                                                       COUNTvalue,
    fIRST-DL-COUNTValueExtended
                                                       COUNTValueExtended
                                                                                                                 OPTIONAL.
                                                       COUNTvaluePDCP-SNlength18
    fIRST-DL-COUNTValueforPDCPSNLength18
                                                                                                                      OPTIONAL,
   iE-Extension
                       ProtocolExtensionContainer { { E-RABSSubjectToEarlyStatusTransfer-Item-ExtIEs} } OPTIONAL,
E-RABsSubjectToEarlyStatusTransfer-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABsSubjectToDLDiscarding-List ::= SEQUENCE (SIZE (1.. maxnoofBearers)) OF E-RABsSubjectToDLDiscarding-Item
E-RABsSubjectToDLDiscarding-Item ::= SEQUENCE {
   e-RAB-ID
                                                       E-RAB-ID,
   dISCARD-DL-COUNTValue
                                                       COUNTvalue,
   dISCARD-DL-COUNTValueExtended
                                                       COUNTValueExtended
                                                                                                                 OPTIONAL,
   dISCARD-DL-COUNTValueforPDCPSNLength18
                                                      COUNTvaluePDCP-SNlength18
                                                                                                                       OPTIONAL,
                       ProtocolExtensionContainer { { E-RABsSubjectToDLDiscarding-Item-ExtIEs} }
   iE-Extension
                                                                                                           OPTIONAL,
E-RABsSubjectToDLDiscarding-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABUsageReportList ::= SEQUENCE (SIZE(1..maxnooftimeperiods)) OF ProtocolIE-Single-Container { {E-RABUsageReport-ItemIEs} }
E-RABUsageReport-ItemIEs X2AP-PROTOCOL-IES ::= {
    TYPE E-RABUsageReport-Item PRESENCE mandatory },
    . . .
E-RABUsageReport-Item ::= SEQUENCE {
    startTimeStamp
                               OCTET STRING (SIZE(4)),
    endTimeStamp
                                   OCTET STRING (SIZE(4)),
                                   INTEGER (0..18446744073709551615),
   usageCountUL
   usageCountDL
                                   INTEGER (0..18446744073709551615),
                               ProtocolExtensionContainer { {E-RABUsageReport-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
E-RABUsageReport-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
Ethernet-Type ::= ENUMERATED {
   true,
```

```
EUTRA-Mode-Info ::= CHOICE {
    fDD
           FDD-Info.
    t.DD
           TDD-Info,
    . . .
EUTRANCellIdentifier ::= BIT STRING (SIZE (28))
EUTRANTraceID
                    ::= OCTET STRING (SIZE (8))
EventType ::= ENUMERATED{
    change-of-serving-cell,
ExpectedUEBehaviour ::= SEQUENCE {
                            ExpectedUEActivityBehaviour OPTIONAL,
    expectedActivity
                            ExpectedHOInterval
                                                        OPTIONAL,
    expectedHOInterval
                            ProtocolExtensionContainer { {ExpectedUEBehaviour-ExtIEs} } OPTIONAL,
    iE-Extensions
ExpectedUEBehaviour-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ExpectedUEActivityBehaviour ::= SEQUENCE {
    expectedActivityPeriod
                                            ExpectedActivityPeriod
                                                                                     OPTIONAL,
    expectedIdlePeriod
                                            ExpectedIdlePeriod
                                                                                     OPTIONAL,
    sourceofUEActivityBehaviourInformation SourceOfUEActivityBehaviourInformation OPTIONAL,
                        ProtocolExtensionContainer { {ExpectedUEActivityBehaviour-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
ExpectedUEActivityBehaviour-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ExpectedActivityPeriod ::= INTEGER (1..30|40|50|60|80|100|120|150|180|181,...)
ExpectedIdlePeriod ::= INTEGER (1..30|40|50|60|80|100|120|150|180|181,...)
ExpectedHOInterval ::= ENUMERATED {
    sec15, sec30, sec60, sec90, sec120, sec180, long-time,
ExtendedULInterferenceOverloadInfo ::= SEQUENCE {
    associatedSubframes
                                                BIT STRING (SIZE (5)),
    extended-ul-InterferenceOverloadIndication UL-InterferenceOverloadIndication,
    iE-Extensions
                                                ProtocolExtensionContainer { {ExtendedULInterferenceOverloadInfo-ExtIEs} } OPTIONAL,
```

```
ExtendedULInterferenceOverloadInfo-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ExtendedBitRate ::= INTEGER (1000000001..400000000000...)
-- F
F1CTrafficContainer ::= OCTET STRING
FastMCGRecovery ::= SEQUENCE {
    rrcContainer
                                RRCContainer
                                                        OPTIONAL.
   iE-Extensions
                                ProtocolExtensionContainer { {FastMCGRecovery-ExtIEs} } OPTIONAL,
FastMCGRecovery-ExtlEs X2AP-PROTOCOL-EXTENSION ::= {
FDD-Info ::= SEQUENCE {
   uL-EARFCN
                                    EARFCN,
    dL-EARFCN
                                    EARFCN,
    uL-Transmission-Bandwidth
                                    Transmission-Bandwidth,
    dL-Transmission-Bandwidth
                                    Transmission-Bandwidth,
                                ProtocolExtensionContainer { {FDD-Info-ExtIEs} } OPTIONAL,
    iE-Extensions
FDD-Info-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      ID id-UL-EARFCNExtension
                                                    CRITICALITY reject EXTENSION EARFCNExtension
                                                                                                                          PRESENCE optional }
      ID id-DL-EARFCNExtension
                                                    CRITICALITY reject EXTENSION EARFCNExtension
                                                                                                                          PRESENCE optional }
     ID id-OffsetOfNbiotChannelNumberToDL-EARFCN
                                                    CRITICALITY reject EXTENSION OffsetOfNbiotChannelNumberToEARFCN
                                                                                                                          PRESENCE optional }
                                                                                                                          PRESENCE optional }
      ID id-OffsetOfNbiotChannelNumberToUL-EARFCN
                                                    CRITICALITY reject EXTENSION OffsetOfNbiotChannelNumberToEARFCN
     ID id-NRS-NSSS-PowerOffset
                                                    CRITICALITY ignore EXTENSION NRS-NSSS-PowerOffset
                                                                                                                          PRESENCE optional |
    { ID id-NSSS-NumOccasionDifferentPrecoder
                                                    CRITICALITY ignore EXTENSION NSSS-NumOccasionDifferentPrecoder
                                                                                                                          PRESENCE optional },
    . . .
FDD-InfoNeighbourServedNRCell-Information ::= SEQUENCE {
    ul-NRFreqInfo
                           NRFregInfo,
    dl-NRFregInfo
                            ProtocolExtensionContainer { {FDD-InfoNeighbourServedNRCell-Information-ExtIEs} }
   iE-Extensions
                                                                                                                 OPTIONAL,
    . . .
FDD-InfoNeighbourServedNRCell-Information-ExtIES X2AP-PROTOCOL-EXTENSION ::= {
FiveQI ::= INTEGER (0..255, ...)
ForbiddenInterRATs ::= ENUMERATED {
```

```
all,
    geran,
    utran,
    cdma2000,
    geranandutran.
    cdma2000andutran
ForbiddenTAs ::= SEQUENCE (SIZE(1.. maxnoofEPLMNsPlusOne)) OF ForbiddenTAs-Item
ForbiddenTAs-Item ::= SEQUENCE {
    pLMN-Identity
                       PLMN-Identity,
    forbiddenTACs
                        ForbiddenTACs,
   iE-Extensions
                        ProtocolExtensionContainer { {ForbiddenTAs-Item-ExtIEs} } OPTIONAL,
ForbiddenTAs-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ForbiddenTACs ::= SEQUENCE (SIZE(1..maxnoofForbTACs)) OF TAC
ForbiddenLAs ::= SEQUENCE (SIZE(1..maxnoofEPLMNsPlusOne)) OF ForbiddenLAs-Item
ForbiddenLAs-Item ::= SEQUENCE {
                        PLMN-Identity,
    pLMN-Identity
    forbiddenLACs
                        ForbiddenLACs,
    iE-Extensions
                        ProtocolExtensionContainer { {ForbiddenLAs-Item-ExtIEs} } OPTIONAL,
ForbiddenLAs-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ForbiddenLACs ::= SEQUENCE (SIZE(1..maxnoofForbLACs)) OF LAC
Fourframes ::= BIT STRING (SIZE (24))
FregBandIndicator ::= INTEGER (1..256, ...)
FreqBandIndicatorPriority ::= ENUMERATED {
   not-broadcasted,
   broadcasted,
FreqBandNrItem ::= SEQUENCE {
    freqBandIndicatorNr
                                    INTEGER (1..1024,...),
    supportedSULBandList
                            SEQUENCE (SIZE(0..maxnoofNrCellBands)) OF SupportedSULFreqBandItem,
```

```
ProtocolExtensionContainer { {FreqBandNrItem-ExtIEs} } OPTIONAL,
    iE-Extensions
FregBandNrItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
FrequencyShift7p5khz ::= ENUMERATED {false, true, ...}
-- G
GBR-QosInformation ::= SEQUENCE {
    e-RAB-MaximumBitrateDL
                                    BitRate,
    e-RAB-MaximumBitrateUL
                                    BitRate,
    e-RAB-GuaranteedBitrateDL
                                    BitRate,
    e-RAB-GuaranteedBitrateUL
                                    BitRate,
                                    ProtocolExtensionContainer { GBR-OosInformation-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
GBR-QosInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- Extension for maximum bitrate > 10Gbps --
      ID id-extended-e-RAB-MaximumBitrateDL
                                                CRITICALITY ignore EXTENSION ExtendedBitRate
                                                                                                PRESENCE optional }
      ID id-extended-e-RAB-MaximumBitrateUL
                                                CRITICALITY ignore EXTENSION ExtendedBitRate
                                                                                                 PRESENCE optional }
      ID id-extended-e-RAB-GuaranteedBitrateDL CRITICALITY ignore EXTENSION ExtendedBitRate
                                                                                                 PRESENCE optional }
     ID id-extended-e-RAB-GuaranteedBitrateUL CRITICALITY ignore EXTENSION ExtendedBitRate
                                                                                                 PRESENCE optional }
GlobalENB-ID ::= SEQUENCE {
   pLMN-Identity
                            PLMN-Identity,
                            ENB-ID,
    eNB-ID
                            ProtocolExtensionContainer { {GlobalENB-ID-ExtIEs} } OPTIONAL,
   iE-Extensions
GlobalENB-ID-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
GlobalGNB-ID ::= SEQUENCE {
                            PLMN-Identity,
    pLMN-Identity
    aNB-ID
                            GNB-ID,
                            ProtocolExtensionContainer { {GlobalGNB-ID-ExtIEs} } OPTIONAL,
    iE-Extensions
GlobalGNB-ID-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
GNBOverloadInformation ::= ENUMERATED {overloaded, not-overloaded, ...}
```

```
GTPTLAS ::= SEQUENCE (SIZE(1.. maxnoofGTPTLAS)) OF GTPTLA-Item
GTPTLA-Item ::= SEQUENCE {
    qTPTransportLayerAddresses
                                       TransportLayerAddress,
   iE-Extensions
                                       ProtocolExtensionContainer { GTPTLA-Item-ExtIEs } } OPTIONAL,
GTPTLA-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
GTPtunnelEndpoint ::= SEQUENCE {
    transportLayerAddress
                                   TransportLayerAddress,
    qTP-TEID
                                   GTP-TEI,
                                   ProtocolExtensionContainer { {GTPtunnelEndpoint-ExtIEs} } OPTIONAL,
    iE-Extensions
GTPtunnelEndpoint-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    {ID id-Qos-Mapping-Information CRITICALITY reject EXTENSION Qos-Mapping-Information PRESENCE optional},
    . . .
GTP-TEI
                      ::= OCTET STRING (SIZE (4))
GUGroupIDList
                 ::= SEQUENCE (SIZE (1..maxPools)) OF GU-Group-ID
GU-Group-ID
                 ::= SEQUENCE {
    pLMN-Identity
                   PLMN-Identity,
   mME-Group-ID
                      MME-Group-ID,
                      ProtocolExtensionContainer { {GU-Group-ID-ExtIEs} } OPTIONAL,
   iE-Extensions
GU-Group-ID-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
GUMMEI
               ::= SEQUENCE {
    qU-Group-ID
                   GU-Group-ID,
    mME-Code
                       MME-Code,
                                   ProtocolExtensionContainer { GUMMEI-ExtIEs} } OPTIONAL,
    iE-Extensions
GUMMEI-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
GNB-ID ::= CHOICE {
    qNB-ID BIT STRING (SIZE (22..32)),
-- H
HandoverReportType ::= ENUMERATED {
   hoTooEarly,
    hoToWrongCell,
    . . . ,
    interRATpingpong,
    interSystemPingpong
HandoverRestrictionList ::= SEQUENCE {
    servingPLMN
                                PLMN-Identity,
    equivalentPLMNs
                                EPLMNs
                                                        OPTIONAL,
    forbiddenTAs
                                ForbiddenTAs
                                                        OPTIONAL,
    forbiddenLAs
                                ForbiddenLAs
                                                        OPTIONAL,
    forbiddenInterRATs
                                ForbiddenInterRATs
                                                        OPTIONAL,
                                ProtocolExtensionContainer { {HandoverRestrictionList-ExtIEs} } OPTIONAL,
    iE-Extensions
HandoverRestrictionList-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      ID id-NRrestrictioninEPSasSecondaryRAT
                                                         CRITICALITY ignore EXTENSION NRrestrictioninEPSasSecondaryRAT
                                                                                                                              PRESENCE optional } |
      ID id-CNTypeRestrictions
                                                     CRITICALITY ignore EXTENSION CNTypeRestrictions
                                                                                                                           PRESENCE optional } |
      ID id-NRrestrictionin5GS
                                                    CRITICALITY ignore EXTENSION NRrestrictionin5GS
                                                                                                                           PRESENCE optional }
      ID id-LastNG-RANPLMNIdentity
                                                    CRITICALITY ignore EXTENSION PLMN-Identity
                                                                                                                           PRESENCE optional }
    ID id-UnlicensedSpectrumRestriction
                                                    CRITICALITY ignore EXTENSION UnlicensedSpectrumRestriction
                                                                                                                           PRESENCE optional },
    . . .
HFN ::= INTEGER (0..1048575)
HFNModified ::= INTEGER (0..131071)
HFNforPDCP-SNlength18 ::= INTEGER (0..16383)
HWLoadIndicator ::= SEQUENCE {
    dLHWLoadIndicator
                                LoadIndicator,
    uLHWLoadIndicator
                                LoadIndicator.
                                ProtocolExtensionContainer { {HWLoadIndicator-ExtIEs} } OPTIONAL,
    iE-Extensions
HWLoadIndicator-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
-- I
IABNodeIndication ::= ENUMERATED {true,...}
IntegrityProtectionAlgorithms ::= BIT STRING (SIZE (16, ...))
IntendedTDD-DL-ULConfiguration-NR ::= OCTET STRING
InterfaceInstanceIndication ::= INTEGER (0..255, ...)
InterfacesToTrace ::= BIT STRING (SIZE (8))
InvokeIndication ::= ENUMERATED{
   abs-information,
   naics-information-start,
   naics-information-stop
Key-eNodeB-Star ::= BIT STRING (SIZE(256))
-- L
LAC
                  ::= OCTET STRING (SIZE (2)) -- (EXCEPT ('0000'H|'FFFE'H))
LastVisitedCell-Item ::= CHOICE {
   e-UTRAN-Cell
                                LastVisitedEUTRANCellInformation,
   uTRAN-Cell
                                LastVisitedUTRANCellInformation,
   gERAN-Cell
                                LastVisitedGERANCellInformation,
   nG-RAN-Cell
                                LastVisitedNGRANCellInformation
LastVisitedEUTRANCellInformation ::= SEQUENCE {
   global-Cell-ID
                                ECGI,
                                CellType,
   cellType
   time-UE-StayedInCell
                                Time-UE-StayedInCell,
                                ProtocolExtensionContainer { {LastVisitedEUTRANCellInformation-ExtIEs} } OPTIONAL,
   iE-Extensions
LastVisitedEUTRANCellInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- Extension for Rel-11 to support enhanced granularity for time UE stayed in cell --
     { ID id-HO-cause
                                                  CRITICALITY ignore EXTENSION Cause
                                                                                                                   PRESENCE optional },
   . . .
LastVisitedGERANCellInformation ::= CHOICE {
   undefined
                                NULL,
```

```
LastVisitedNGRANCellInformation ::= OCTET STRING
LastVisitedUTRANCellInformation ::= OCTET STRING
LCID ::= INTEGER (1..32, ...)
LHN-ID ::= OCTET STRING(SIZE (32..256))
Links-to-log ::= ENUMERATED {uplink, downlink, both-uplink-and-downlink, ...}
LoadIndicator ::= ENUMERATED {
    lowLoad,
    mediumLoad,
    highLoad,
    overLoad,
    . . .
LocationInformationSqNB ::= SEQUENCE {
    pSCell-id
               NRCGI,
    iE-Extensions
                       ProtocolExtensionContainer { {LocationInformationSqNB-ExtIEs} } OPTIONAL,
LocationInformationSgNB-ExtIEs X2AP-PROTOCOL-EXTENSION ::={
LocationInformationSqNBReporting ::= ENUMERATED {
    pSCell,
    . . .
LocationReportingInformation ::= SEQUENCE {
    eventType
                    EventType,
    reportArea
                    ReportArea,
    iE-Extensions
                        ProtocolExtensionContainer { {LocationReportingInformation-ExtIEs} } OPTIONAL,
LocationReportingInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::={
    . . .
LowerLayerPresenceStatusChange ::= ENUMERATED {
    release-lower-layers,
    re-establish-lower-layers,
    suspend-lower-layers,
    resume-lower-layers,
```

```
-- M
M1PeriodicReporting ::= SEQUENCE {
    reportInterval
                                ReportIntervalMDT,
    reportAmount
                                ReportAmountMDT,
    iE-Extensions
                               ProtocolExtensionContainer { {M1PeriodicReporting-ExtIEs} } OPTIONAL,
M1PeriodicReporting-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
M1ReportingTrigger::= ENUMERATED{
    periodic,
    a2eventtriggered,
    a2eventtriggered-periodic
M1ThresholdEventA2 ::= SEQUENCE {
    measurementThreshold
                               MeasurementThresholdA2,
                                ProtocolExtensionContainer { {M1ThresholdEventA2-ExtIEs} } OPTIONAL,
    iE-Extensions
M1ThresholdEventA2-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
M3Configuration ::= SEQUENCE
    m3period
                       M3period,
    iE-Extensions
                       ProtocolExtensionContainer { {M3Configuration-ExtIEs} } OPTIONAL,
M3Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
M3period ::= ENUMERATED {ms100, ms1000, ms10000, ... }
M4Configuration ::= SEQUENCE {
    m4period
                       M4period,
   m4-links-to-log Links-to-log,
                      ProtocolExtensionContainer { {M4Configuration-ExtIEs} } OPTIONAL,
   iE-Extensions
M4Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
M4period ::= ENUMERATED {ms1024, ms2048, ms5120, ms10240, min1, ... }
M5Configuration ::= SEQUENCE
    m5period
                       M5period,
   m5-links-to-log Links-to-log,
                      ProtocolExtensionContainer { {M5Configuration-ExtIEs} } OPTIONAL,
   iE-Extensions
M5Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
M5period ::= ENUMERATED {ms1024, ms2048, ms5120, ms10240, min1, ... }
M6Configuration ::= SEQUENCE {
    m6report-interval M6report-interval,
    m6delay-threshold M6delay-threshold OPTIONAL,
-- This IE shall be present if the M6 Links to log IE is set to "uplink" or to "both-uplink-and-downlink" --
    m6-links-to-log Links-to-log,
                      ProtocolExtensionContainer { {M6Configuration-ExtIEs} } OPTIONAL,
   iE-Extensions
M6Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
M6report-interval ::= ENUMERATED { ms1024, ms2048, ms5120, ms10240, ... }
M6delay-threshold ::= ENUMERATED { ms30, ms40, ms50, ms60, ms70, ms80, ms90, ms100, ms150, ms300, ms500, ms750, ... }
M7Configuration ::= SEQUENCE
   m7period
                      M7period,
   m7-links-to-log Links-to-log,
   iE-Extensions
                      ProtocolExtensionContainer { {M7Configuration-ExtIEs} } OPTIONAL,
M7Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
M7period ::= INTEGER(1..60, ...)
MakeBeforeBreakIndicator::= ENUMERATED {true, ...}
ManagementBasedMDTallowed ::= ENUMERATED {allowed, ...}
Masked-IMEISV ::= BIT STRING (SIZE (64))
MaxCHOpreparations ::= INTEGER(1..8, ...)
```

PRESENCE conditional }

PRESENCE conditional

PRESENCE conditional |

PRESENCE conditional \

PRESENCE conditional |

PRESENCE optional | | PRESENCE optional | |

PRESENCE optional } |

PRESENCE optional },

```
MDT-Activation
                    ::= ENUMERATED {
    immediate-MDT-only,
    immediate-MDT-and-Trace.
MDT-Configuration ::= SEQUENCE
    mdt-Activation
                                MDT-Activation,
    areaScopeOfMDT
                                AreaScopeOfMDT,
                                MeasurementsToActivate,
    measurementsToActivate
    m1reportingTrigger
                                M1ReportingTrigger,
    m1thresholdeventA2
                                M1ThresholdEventA2
                                                            OPTIONAL,
-- Included in case of event-triggered, or event-triggered periodic reporting for measurement M1
    m1periodicReporting
                                M1PeriodicReporting
                                                            OPTIONAL.
-- Included in case of periodic, or event-triggered periodic reporting for measurement M1
    iE-Extensions
                                ProtocolExtensionContainer { {MDT-Configuration-ExtIEs} } OPTIONAL,
    . . .
MDT-Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    {ID id-M3Configuration
                                                    CRITICALITY ignore EXTENSION M3Configuration
    ID id-M4Configuration
                                                    CRITICALITY ignore EXTENSION M4Configuration
    ID id-M5Configuration
                                                    CRITICALITY ignore EXTENSION M5Configuration
    ID id-MDT-Location-Info
                                                    CRITICALITY ignore
                                                                        EXTENSION MDT-Location-Info
    {ID id-SignallingBasedMDTPLMNList
                                                    CRITICALITY ignore EXTENSION MDTPLMNList
    {ID id-M6Configuration
                                                    CRITICALITY ignore EXTENSION M6Configuration
    {ID id-M7Configuration
                                                    CRITICALITY ignore EXTENSION M7Configuration
     ID id-BluetoothMeasurementConfiguration
                                                    CRITICALITY ignore EXTENSION BluetoothMeasurementConfiguration
    ID id-WLANMeasurementConfiguration
                                                    CRITICALITY ignore EXTENSION WLANMeasurementConfiguration
MDTPLMNList ::= SEQUENCE (SIZE(1..maxnoofMDTPLMNs)) OF PLMN-Identity
MDT-Location-Info ::= BIT STRING (SIZE (8))
Measurement-ID ::= INTEGER (1..4095, ...)
Measurement-ID-ENDC ::= INTEGER (1..4095, ...)
MeasurementsToActivate::= BIT STRING (SIZE (8))
MeasurementThresholdA2 ::= CHOICE {
    threshold-RSRP
                                Threshold-RSRP,
                                Threshold-RSRO,
    threshold-RSRO
    . . .
MeNBCoordinationAssistanceInformation ::= ENUMERATED{
    coordination-not-required,
    . . .
```

```
MeNBResourceCoordinationInformation ::= SEQUENCE {
   eUTRA-Cell-ID
                                  ECGI.
   uLCoordinationInformation
                                  BIT STRING (SIZE(6..4400, ...)),
   dLCoordinationInformation
                                  BIT STRING (SIZE(6..4400, ...))
                                                                     OPTIONAL,
   iE-Extensions
                                  OPTIONAL.
MenbresourceCoordinationInformationExtlEs X2AP-PROTOCOL-EXTENSION ::= {
                                                  CRITICALITY ignore EXTENSION NRCGI
     ID id-NRCGI
                                                                                                                    PRESENCE optional |
    ID id-MeNBCoordinationAssistanceInformation
                                                     CRITICALITY reject EXTENSION MenBCoordinationAssistanceInformation PRESENCE optional },
MeNBtoSeNBContainer ::= OCTET STRING
MME-Group-ID
               ::= OCTET STRING (SIZE (2))
MME-Code
               ::= OCTET STRING (SIZE (1))
MBMS-Service-Area-Identity-List ::= SEQUENCE (SIZE(1.. maxnoofMBMSServiceAreaIdentities)) OF MBMS-Service-Area-Identity
MBMS-Service-Area-Identity ::= OCTET STRING (SIZE (2))
MBSFN-Subframe-Infolist::= SEQUENCE (SIZE(1.. maxnoofMBSFN)) OF MBSFN-Subframe-Info
MBSFN-Subframe-Info ::= SEQUENCE {
   radioframeAllocationPeriod
                                  RadioframeAllocationPeriod,
    radioframeAllocationOffset
                                  RadioframeAllocationOffset,
    subframeAllocation
                                  SubframeAllocation,
   iE-Extensions
                                  ProtocolExtensionContainer { {MBSFN-Subframe-Info-ExtIEs} } OPTIONAL,
MBSFN-Subframe-Info-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
MDT-ConfigurationNR ::= OCTET STRING
MobilityParametersModificationRange ::= SEQUENCE {
   handoverTriggerChangeLowerLimit
                                      INTEGER (-20..20),
   handoverTriggerChangeUpperLimit
                                      INTEGER (-20..20),
MobilityParametersInformation ::= SEQUENCE {
   handoverTriggerChange
                                  INTEGER (-20..20),
MultibandInfoList ::= SEQUENCE (SIZE(1..maxnoofBands)) OF BandInfo
MessageOversizeNotification ::= SEQUENCE {
```

```
maximumCellListSize
                                                     MaximumCellListSize,
    iE-Extensions
                                    ProtocolExtensionContainer { {MessageOversizeNotification-ExtIEs} }
                                                                                                            OPTIONAL,
MessageOversizeNotification-ExtlEs X2AP-PROTOCOL-EXTENSION ::= {
MaximumCellListSize ::= INTEGER(1..16384, ...)
BandInfo
          ::= SEQUENCE {
    fregBandIndicator
                            FregBandIndicator,
    iE-Extensions
                            ProtocolExtensionContainer { {BandInfo-ExtIEs} }
                                                                                 OPTIONAL,
BandInfo-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
MeNBtoSqNBContainer ::= OCTET STRING
SplitSRBs ::= ENUMERATED {srb1, srb2, srb1and2, ...}
SplitSRB ::= SEQUENCE {
    rrcContainer
                                                         OPTIONAL,
                                RRCContainer
    srbType
                                SRBType,
    deliveryStatus
                                DeliveryStatus
                                                         OPTIONAL,
    iE-Extensions
                                ProtocolExtensionContainer { {SplitSRB-ExtIEs} } OPTIONAL,
    . . .
SplitSRB-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NBIOT-UL-DL-AlignmentOffset ::= ENUMERATED {
    khz-7dot5,
    khz0,
    khz7dot5,
NBIOT-RLF-Report-Container ::= OCTET STRING
Neighbour-Information ::= SEQUENCE (SIZE (0..maxnoofNeighbours)) OF SEQUENCE {
    eCGI
                                ECGI,
    pCI
                                PCI,
    eARFCN
                                EARFCN,
    iE-Extensions
                                ProtocolExtensionContainer { {Neighbour-Information-ExtIEs} } OPTIONAL,
```

```
Neighbour-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      ID id-NeighbourTAC
                                CRITICALITY ignore EXTENSION TAC
                                                                                 PRESENCE optional |
                                CRITICALITY reject EXTENSION EARFCNExtension PRESENCE optional },
    { ID id-eARFCNExtension
    . . .
NextHopChainingCount ::= INTEGER (0..7)
NewDRBIDrequest::= ENUMERATED {true, ...}
Number-of-Antennaports ::= ENUMERATED {
        an1,
        an2,
        an4,
        . . .
NRCapacityValue
                                ::= SEQUENCE {
    capacityValue
                                        INTEGER (0..100),
    ssbAreaCapacityValue-List
                                        SSBAreaCapacityValue-List
    iE-Extensions
                                        ProtocolExtensionContainer { { NRCapacityValue-ExtIEs} } OPTIONAL,
    . . .
NRCapacityValue-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NRCarrierList ::= SEQUENCE (SIZE(1..maxnoofNRSCSs)) OF NRCarrierItem
NRCarrierItem ::= SEQUENCE {
    carrierSCS
                                NRSCS,
                                INTEGER (0..2199, ...),
    offsetToCarrier
                                INTEGER (0..maxnoofNRPhysicalResourceBlocks, ...),
    carrierBandwidth
    iE-Extension
                        ProtocolExtensionContainer { {NRCarrierItem-ExtIEs} }
                                                                                     OPTIONAL,
    . . .
NRCarrierItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NRCellCapacityClassValue ::= INTEGER (1..100, ...)
NRCellPRACHConfig ::= OCTET STRING
NRCompositeAvailableCapacityGroup
                                    ::= SEQUENCE {
    compositeAvailableCapacityDL
                                        NRCompositeAvailableCapacity,
    compositeAvailableCapacityUL
                                        NRCompositeAvailableCapacity,
                                        ProtocolExtensionContainer { {NRCompositeAvailableCapacityGroup-ExtIEs} } OPTIONAL,
    iE-Extensions
```

```
NRCompositeAvailableCapacityGroup-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NRCompositeAvailableCapacity ::= SEQUENCE {
    cellCapacityClassValue
                                       NRCellCapacityClassValue
                                                                                           OPTIONAL,
    capacityValue
                                       NRCapacityValue,
   iE-Extensions
                                       ProtocolExtensionContainer { {NRCompositeAvailableCapacity-ExtIEs} } OPTIONAL,
NRCompositeAvailableCapacity-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NRFregInfo ::= SEQUENCE{
             INTEGER (0.. 3279165),
    nRARFCN
    fregBandListNr SEQUENCE (SIZE(1..maxnoofNrCellBands)) OF FregBandNrItem,
    sULInformation SULInformation
                                       OPTIONAL,
    iE-Extensions ProtocolExtensionContainer { {NRFreqInfo-ExtIEs} } OPTIONAL,
NRFreqInfo-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    { ID id-FrequencyShift7p5khz
                                           CRITICALITY ignore EXTENSION FrequencyShift7p5khz PRESENCE optional },
NRCellIdentifier ::= BIT STRING (SIZE (36))
NRCGI ::= SEQUENCE {
   pLMN-Identity
                               PLMN-Identity,
   nRcellIdentifier
                                   NRCellIdentifier,
                               ProtocolExtensionContainer { {NRCGI-ExtIEs} } OPTIONAL,
   iE-Extensions
NRCGI-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NRNeighbour-Information ::= SEQUENCE (SIZE (1.. maxofNRNeighbours))OF SEQUENCE {
    nrpCI
                                   NRPCI,
   nrCellID
                                   NRCGI,
    fiveGS-TAC
                                   FiveGS-TAC OPTIONAL,
    configured-TAC
                                   TAC
                                               OPTIONAL,
    measurementTimingConfiguration OCTET STRING,
    nRNeighbourModeInfo
                                   CHOICE {
       fdd
               FDD-InfoNeighbourServedNRCell-Information,
       tdd
               TDD-InfoNeighbourServedNRCell-Information,
```

```
ProtocolExtensionContainer { {NRNeighbour-Information-ExtIEs} } OPTIONAL,
    iE-Extensions
NRNeighbour-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    {ID id-CSI-RSTransmissionIndication
                                            CRITICALITY ignore EXTENSION EARFCNExtension PRESENCE optional },
NPRACHConfiguration::= SEQUENCE {
    fdd-or-tdd
                            CHOICE .
        fdd
                    NPRACHConfiguration-FDD,
        t.dd
                    NPRACHConfiguration-TDD,
      iE-Extensions
                                            ProtocolExtensionContainer { { NPRACHConfiguration-ExtIEs} } OPTIONAL,
NPRACHConfiguration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NPRACHConfiguration-FDD::= SEQUENCE {
    nprach-CP-length
                                                    NPRACH-CP-Length,
    anchorCarrier-NPRACHConfig
                                                    OCTET STRING,
    anchorCarrier-EDT-NPRACHConfig
                                                                                         OPTIONAL,
                                                    OCTET STRING
    anchorCarrier-Format2-NPRACHConfig
                                                                                         OPTIONAL,
                                                    OCTET STRING
    anchorCarrier-Format2-EDT-NPRACHConfig
                                                    OCTET STRING
                                                                                         OPTIONAL,
    non-anchorCarrier-NPRACHConfig
                                                    OCTET STRING
                                                                                         OPTIONAL,
    non-anchorCarrier-Format2-NPRACHConfig
                                                    OCTET STRING
                                                                                         OPTIONAL,
                      ProtocolExtensionContainer { { NPRACHConfiguration-FDD-ExtIEs} }
                                                                                        OPTIONAL,
NPRACHConfiguration-FDD-ExtIES X2AP-PROTOCOL-EXTENSION ::= {
NPRACHConfiguration-TDD::= SEQUENCE {
    nprach-preambleFormat
                                                    NPRACH-preambleFormat,
    anchorCarrier-NPRACHConfigTDD
                                                    OCTET STRING,
    non-anchorCarrierFequencyConfiglist
                                                    Non-AnchorCarrierFrequencylist
                                                                                         OPTIONAL,
    non-anchorCarrier-NPRACHConfigTDD
                                                    OCTET STRING
                                                                                         OPTIONAL,
    iE-Extensions ProtocolExtensionContainer { { NPRACHConfiguration-TDD-ExtIEs}
                                                                                         OPTIONAL,
NPRACHConfiguration-TDD-ExtIES X2AP-PROTOCOL-EXTENSION ::= {
NPRACH-CP-Length::=
                            ENUMERATED {
```

```
us66dot7,
    us266dot7,
                          ENUMERATED {fmt0,fmt1,fmt2,fmt0a,fmt1a,...}
NPRACH-preambleFormat::=
Non-AnchorCarrierFrequencylist ::= SEQUENCE (SIZE(1..maxnoofNonAnchorCarrierFreqConfig)) OF
    SEQUENCE {
       non-anchorCarrioerFrquency
                                        OCTET STRING,
       iE-Extensions
                                        ProtocolExtensionContainer { { Non-AnchorCarrierFrequencylist-ExtIEs} } OPTIONAL,
Non-AnchorCarrierFrequencylist-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NRPCI ::= INTEGER (0..1007)
NRrestrictioninEPSasSecondaryRAT ::= ENUMERATED {
    nRrestrictedinEPSasSecondaryRAT,
    . . .
NRRadioResourceStatus ::= SEQUENCE {
    ssbAreaRadioResourceStatus-List
                                        SSBAreaRadioResourceStatus-List,
                                        ProtocolExtensionContainer { {NRRadioResourceStatus-ExtIEs} } OPTIONAL,
    iE-Extensions
NRRadioResourceStatus-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NRrestrictionin5GS ::= ENUMERATED {
    nRrestrictedin5GS,
    . . .
NRencryptionAlgorithms ::= BIT STRING (SIZE (16,...))
NRintegrityProtectionAlgorithms ::= BIT STRING (SIZE (16,...))
NR-TxBW ::= SEQUENCE {
    nRSCS NRSCS,
   nRNRB NRNRB,
                                ProtocolExtensionContainer { {NR-TxBW-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
NR-TxBW-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
NRNRB ::= ENUMERATED { nrb11, nrb18, nrb24, nrb25, nrb31, nrb32, nrb38, nrb51, nrb52, nrb65, nrb66, nrb78, nrb79, nrb93, nrb106, nrb107, nrb121,
nrb132, nrb133, nrb135, nrb160, nrb162, nrb189, nrb216, nrb217, nrb245, nrb264, nrb270, nrb273, ...}
NRSCS ::= ENUMERATED { scs15, scs30, scs60, scs120, ...}
NRS-NSSS-PowerOffset ::= ENUMERATED { minusThree, zero, three, ...}
FiveGS-TAC ::= OCTET STRING (SIZE (3))
NRUeReport ::= SEQUENCE {
    uENRMeasurements
                                RRCContainer,
   iE-Extensions
                           ProtocolExtensionContainer { { NRUeReport-ExtIEs} } OPTIONAL,
NRUeReport-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NRUESidelinkAggregateMaximumBitRate ::= SEQUENCE {
    uESidelinkAggregateMaximumBitRate
                                   ProtocolExtensionContainer { { NRUESidelinkAqqreqateMaximumBitRate-ExtIEs} } OPTIONAL,
   iE-Extensions
NRUESidelinkAggregateMaximumBitRate-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NRUESecurityCapabilities ::= SEQUENCE
    nRencryptionAlgorithms
                                        NRencryptionAlgorithms,
    nRintegrityProtectionAlgorithms
                                        NRintegrityProtectionAlgorithms,
                                        ProtocolExtensionContainer { {NRUESecurityCapabilities-ExtIEs} } OPTIONAL,
   iE-Extensions
NRUESecurityCapabilities-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NSSS-NumOccasionDifferentPrecoder ::= ENUMERATED { two, four, eight, ...}
NRV2XServicesAuthorized ::= SEOUENCE {
    vehicleUE
                       VehicleUE
                                                                                        OPTIONAL,
    pedestrianUE
                       PedestrianUE
                                                                                        OPTIONAL,
    iE-Extensions
                      ProtocolExtensionContainer { {NRV2XServicesAuthorized-ExtIEs} } OPTIONAL,
NRV2XServicesAuthorized-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
-- O
OffsetOfNbiotChannelNumberToEARFCN ::= ENUMERATED {
        minusTen,
        minusNine,
        minusEight,
        minusSeven,
        minusSix,
        minusFive,
        minusFour,
        minusThree,
        minusTwo,
        minusOne,
        minusZeroDotFive,
        zero,
        one,
        two,
        three,
        four,
        five,
        six,
        seven,
        eight,
        nine,
        minusEightDotFive,
        minusFourDotFive,
        threeDotFive,
        sevenDotFive
Oneframe ::= BIT STRING (SIZE (6))
-- P
Packet-LossRate ::= INTEGER(0..1000)
PA-Values ::= ENUMERATED {
    dB-6,
    dB-4dot77,
    dB-3,
    dB-1dot77,
    dB0,
    dB1,
    dB2,
    dB3,
    . . .
PC5QoSParameters ::= SEQUENCE {
    pc5QoSFlowList
                                 PC5QoSFlowList,
    pc5LinkAggregatedBitRates BitRate
                                                     OPTIONAL,
                        ProtocolExtensionContainer { { PC5QoSParameters-ExtIEs} }
```

```
PC5QoSParameters-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
PC5QoSFlowList ::= SEQUENCE (SIZE(1..maxnoofPC5QoSFlows)) OF PC5QoSFlowItem
PC5QoSFlowItem::= SEQUENCE {
                               FiveQI,
    IQq
   pc5FlowBitRates
                               PC5FlowBitRates
                                                           OPTIONAL,
                                                           OPTIONAL,
   iE-Extensions ProtocolExtensionContainer { { PC5QoSFlowItem-ExtIEs} } OPTIONAL,
PC5QoSFlowItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
PC5FlowBitRates ::= SEQUENCE {
    quaranteedFlowBitRate
                               BitRate,
   maximumFlowBitRate
                               BitRate.
    iE-Extensions ProtocolExtensionContainer { { PC5FlowBitRates-ExtIEs} }
                                                                                   OPTIONAL,
PC5FlowBitRates-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
PDCPChangeIndication ::= ENUMERATED {s-KqNB-update-required, pDCP-data-recovery-required,...}
PDCP-SN ::= INTEGER (0..4095)
PDCP-SNExtended ::= INTEGER (0..32767)
PDCP-SNlength18 ::= INTEGER (0..262143)
             ::= ENUMERATED {twelve-bits, eighteen-bits, ...}
PDCPSnLength
PCI ::= INTEGER (0..503, ...)
PLMN-Identity ::= OCTET STRING (SIZE(3))
Port-Number ::= OCTET STRING (SIZE (2))
PRACH-Configuration ::= SEQUENCE {
    rootSequenceIndex
                                           INTEGER (0..837),
    zeroCorrelationIndex
                                           INTEGER (0..15),
    highSpeedFlag
                                           BOOLEAN,
    prach-FreqOffset
                                           INTEGER (0..94),
    prach-ConfigIndex
                                           INTEGER (0..63)
                                                               OPTIONAL, -- present for TDD --
```

```
ProtocolExtensionContainer { {PRACH-Configuration-ExtIEs} } OPTIONAL,
    iE-Extensions
PLMNAreaBasedOMC ::= SEQUENCE {
    plmnListforOMC
                       PLMNListforOMC.
                        ProtocolExtensionContainer { {PLMNAreaBasedQMC-ExtIEs} } OPTIONAL,
   iE-Extensions
PLMNAreaBasedQMC-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
PLMNListforOMC ::= SEQUENCE (SIZE(1..maxnoofPLMNforOMC)) OF PLMN-Identity
PRACH-Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
Pre-emptionCapability ::= ENUMERATED {
    shall-not-trigger-pre-emption,
    may-trigger-pre-emption
Pre-emptionVulnerability ::= ENUMERATED {
    not-pre-emptable,
    pre-emptable
PriorityLevel
                            ::= INTEGER { spare (0), highest (1), lowest (14), no-priority (15) } (0..15)
ProSeAuthorized ::= SEQUENCE {
   proSeDirectDiscovery
                                ProSeDirectDiscovery
                                                                OPTIONAL.
                                                                OPTIONAL,
   proSeDirectCommunication
                                ProSeDirectCommunication
   iE-Extensions
                                ProtocolExtensionContainer { {ProSeAuthorized-ExtIEs} } OPTIONAL,
    . . .
ProSeAuthorized-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    { ID id-ProSeUEtoNetworkRelaying
                                        CRITICALITY ignore EXTENSION ProSeUEtoNetworkRelaying
                                                                                                   PRESENCE optional },
    . . .
ProSeDirectDiscovery ::= ENUMERATED {
    authorized,
    not-authorized,
ProSeDirectCommunication ::= ENUMERATED {
    authorized,
    not-authorized,
```

```
ProSeUEtoNetworkRelaying ::= ENUMERATED {
    authorized.
    not-authorized,
ProtectedEUTRAResourceIndication: := SEQUENCE
    activationSFN
                                            INTEGER (0..1023),
    protectedResourceList
                                            ProtectedResourceList,
   mBSFNControlRegionLength
                                            INTEGER (0..3) OPTIONAL,
    pDCCHRegionLength
                                            INTEGER (1..3) OPTIONAL,
    iE-Extensions
                                            ProtocolExtensionContainer { ProtectedEUTRAResourceIndication-ExtIEs} } OPTIONAL,
ProtectedEUTRAResourceIndication-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
} -- Rapporteur: missing extension --
ProtectedFootprintTimePattern ::= SEQUENCE {
    protectedFootprintTimePeriodicity
                                                    INTEGER (1..320, ...),
    protectedFootprintStartTime
                                                    INTEGER (1..20, ...),
                                                    ProtocolExtensionContainer { {ProtectedFootprintTimePattern-ExtIEs} } OPTIONAL,
    iE-Extensions
ProtectedFootprintTimePattern-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ProtectedResourceList ::= SEOUENCE (SIZE(1.. maxnoofProtectedResourcePatterns)) OF ProtectedResourceList-Item
ProtectedResourceList-Item ::= SEQUENCE {
    resourceType
                                    ResourceType,
    intraPRBProtectedResourceFootprint
                                            BIT STRING (SIZE(84, ...)),
    protectedFootprintFrequencyPattern
                                            BIT STRING (SIZE(6..110, ...)),
    protectedFootprintTimePattern
                                            ProtectedFootprintTimePattern,
                                            ProtocolExtensionContainer { {ProtectedResourceList-Item-ExtIEs} } OPTIONAL,
    iE-Extensions
ProtectedResourceList-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
PartialListIndicator ::= ENUMERATED {partial, ...}
PrivacyIndicator ::= ENUMERATED {
    immediate-MDT,
    logged-MDT,
```

```
-- O
OCI ::= INTEGER (0..255)
QoS-Mapping-Information ::= SEQUENCE {
dscp
                                BIT STRING (SIZE(6))
                                                                 OPTIONAL,
flow-label
                                BIT STRING (SIZE(20))
                                                             OPTIONAL,
iE-Extensions
                                ProtocolExtensionContainer { {QoS-Mapping-Information-ExtIEs} } OPTIONAL,
QoS-Mapping-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- R
RadioframeAllocationOffset ::= INTEGER (0..7, ...)
RadioframeAllocationPeriod ::= ENUMERATED{
    n2,
    n4,
    n8,
    n16,
    n32,
    . . .
RadioResourceStatus ::= SEQUENCE {
    dL-GBR-PRB-usage
                                                 DL-GBR-PRB-usage,
    uL-GBR-PRB-usage
                                                 UL-GBR-PRB-usage,
    dL-non-GBR-PRB-usage
                                                 DL-non-GBR-PRB-usage,
                                                 UL-non-GBR-PRB-usage,
    uL-non-GBR-PRB-usage
    dL-Total-PRB-usage
                                                 DL-Total-PRB-usage,
    uL-Total-PRB-usage
                                                 UL-Total-PRB-usage,
                                                 ProtocolExtensionContainer { {RadioResourceStatus-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
RadioResourceStatus-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    {ID id-DL-scheduling-PDCCH-CCE-usage
                                                 CRITICALITY ignore EXTENSION DL-scheduling-PDCCH-CCE-usage
                                                                                                                  PRESENCE optional | |
    {ID id-UL-scheduling-PDCCH-CCE-usage
                                                 CRITICALITY ignore EXTENSION UL-scheduling-PDCCH-CCE-usage
                                                                                                                  PRESENCE optional },
Range ::= ENUMERATED {m50, m80, m180, m200, m350, m400, m500, m700, m1000, ...}
RAN-UE-NGAP-ID ::= INTEGER (0..4294967295)
```

```
ReceiveStatusofULPDCPSDUs ::= BIT STRING (SIZE(4096))
ReceiveStatusOfULPDCPSDUsExtended ::= BIT STRING (SIZE(1..16384))
ReceiveStatusOfULPDCPSDUsPDCP-SNlength18 ::= BIT STRING (SIZE(1..131072))
ReleaseFastMCGRecoveryViaSRB3 ::= ENUMERATED {true,...}
Reestablishment-Indication ::= ENUMERATED {
    reestablished.
Registration-Request
                      ::= ENUMERATED {
    start,
    stop,
    partial-stop,
Registration-Request-ENDC ::= ENUMERATED {
    start,
    stop,
    add,
RelativeNarrowbandTxPower ::= SEQUENCE {
    rNTP-PerPRB
                                        BIT STRING (SIZE(6..110, ...)),
    rNTP-Threshold
                                        RNTP-Threshold,
    numberOfCellSpecificAntennaPorts
                                        ENUMERATED {one, two, four, ...},
                                        INTEGER (0..3,...),
    pDCCH-InterferenceImpact
                                        INTEGER (0..4,...),
    iE-Extensions
                                        ProtocolExtensionContainer { {RelativeNarrowbandTxPower-ExtIEs} } OPTIONAL,
RelativeNarrowbandTxPower-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    { ID id-enhancedRNTP
                         CRITICALITY ignore EXTENSION EnhancedRNTP
                                                                            PRESENCE optional },
    . . .
ReplacingCellsList ::= SEQUENCE (SIZE(0.. maxCellineNB)) OF ReplacingCellsList-Item
ReplacingCellsList-Item ::= SEQUENCE {
    eCGI
                    ECGI,
    . . .
ReportAmountMDT ::= ENUMERATED{r1, r2, r4, r8, r16, r32, r64, rinfinity}
```

454

```
ReportArea ::= ENUMERATED{
    ecgi,
    . . .
ReportCharacteristics ::= BIT STRING (SIZE (32))
ReportingPeriodicityCSIR ::= ENUMERATED {
   ms5,
   ms10,
   ms20,
   ms40,
    ms80,
ReportCharacteristics-ENDC ::= BIT STRING (SIZE (32))
ReportingPeriodicityRSRPMR ::= ENUMERATED {
    one-hundred-20-ms,
    two-hundred-40-ms,
    four-hundred-80-ms,
    six-hundred-40-ms,
ReportIntervalMDT ::= ENUMERATED {ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, min1, min6, min12, min30, min60}
RequestedFastMCGRecoveryViaSRB3 ::= ENUMERATED {true,...}
RequestedFastMCGRecoveryViaSRB3Release ::= ENUMERATED {true,...}
ReservedSubframePattern ::= SEQUENCE{
    subframeType
                                    SubframeType,
                                    BIT STRING (SIZE(10..160)),
    reservedSubframePattern
   mBSFNControlRegionLength
                                    INTEGER (0..3),
    iE-Extensions
                                    ProtocolExtensionContainer { {ReservedSubframePattern-ExtIEs} } OPTIONAL,
    . . .
ReservedSubframePattern-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ResourceType ::= ENUMERATED {
    downlinknonCRS,
    cRS,
    uplink,
ResumeID
           ::= CHOICE {
   non-truncated BIT STRING(SIZE(40)),
    truncated
                    BIT STRING(SIZE(24)),
```

```
RLCMode ::= ENUMERATED {
    rlc-am.
    rlc-um-bidirectional,
    rlc-um-unidirectional-ul,
    rlc-um-unidirectional-dl,
RLC-Status ::= SEQUENCE {
    reestablishment-Indication Reestablishment-Indication,
    iE-Extensions
                                ProtocolExtensionContainer { {RLC-Status-ExtIEs} } OPTIONAL,
RLC-Status-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
RNTP-Threshold ::= ENUMERATED {
    minusInfinity,
    minusEleven,
    minusTen,
    minusNine,
    minusEight,
    minusSeven,
    minusSix,
    minusFive,
    minusFour,
    minusThree,
    minusTwo,
    minusOne,
    zero,
    one,
    two,
    three,
RRC-Config-Ind ::= ENUMERATED {
    full-config,
    delta-config,
    . . .
RRC-Context ::= OCTET STRING
RRCConnReestabIndicator ::= ENUMERATED {
    reconfigurationFailure, handoverFailure, otherFailure, ...
-- The values correspond to the values of ReestablishmentCause reported from the UE in the RRCConnectionReestablishmentRequest, as defined in TS
36.331 [9]
```

```
RRCConnSetupIndicator::= ENUMERATED {
    rrcConnSetup,
RSRPMeasurementResult ::= SEQUENCE (SIZE(1..maxCellReport)) OF
    SEOUENCE {
       rSRPCellID
                                        ECGI,
                                        INTEGER (0..97, ...),
       rSRPMeasured
                                        ProtocolExtensionContainer { {RSRPMeasurementResult-ExtIEs} } OPTIONAL,
       iE-Extensions
RSRPMeasurementResult-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
RSRPMRList ::= SEQUENCE (SIZE(1..maxUEReport)) OF
    SEOUENCE {
       rSRPMeasurementResult
                                        RSRPMeasurementResult,
                                        ProtocolExtensionContainer { {RSRPMRList-ExtIEs} } OPTIONAL,
       iE-Extensions
RSRPMRList-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    { ID id-UEID
                 CRITICALITY ignore EXTENSION UEID
                                                            PRESENCE optional },
RRCContainer ::= OCTET STRING
-- S
S1TNLLoadIndicator ::= SEOUENCE {
    dLS1TNLLoadIndicator
                                    LoadIndicator,
    uLS1TNLLoadIndicator
                                    LoadIndicator,
                                    ProtocolExtensionContainer { {S1TNLLoadIndicator-ExtIEs} } OPTIONAL,
   iE-Extensions
S1TNLLoadIndicator-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
SCGChangeIndication ::= ENUMERATED {pDCPCountWrapAround, pSCellChange, other, ...}
SecondaryRATUsageReportList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container {{SecondaryRATUsageReport-ItemIEs}}
SecondaryRATUsageReport-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-SecondaryRATUsageReport-Item
                                                CRITICALITY reject TYPE SecondaryRATUsageReport-Item
                                                                                                           PRESENCE mandatory },
    . . .
```

```
SecondaryRATUsageReport-Item ::= SEQUENCE {
    e-RAB-ID
                                   E-RAB-ID.
                                    ENUMERATED {nr, ..., nR-unlicensed },
    secondaryRATType
    e-RABUsageReportList
                                   E-RABUsageReportList,
    iE-Extensions
                                ProtocolExtensionContainer { {SecondaryRATUsageReport-Item-ExtIEs} } OPTIONAL,
SecondaryRATUsageReport-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
SeNBSecurityKey ::= BIT STRING (SIZE(256))
SeNBtoMeNBContainer ::= OCTET STRING
ServedCells ::= SEQUENCE (SIZE (1.. maxCellineNB)) OF SEQUENCE {
                                    ServedCell-Information,
    servedCellInfo
    neighbour-Info
                                   Neighbour-Information
                                                                    OPTIONAL,
    iE-Extensions
                                    ProtocolExtensionContainer { {ServedCell-ExtIEs} } OPTIONAL,
ServedCell-ExtIEs X2AP-PROTOCOL-EXTENSION ::=
    { ID id-NRNeighbourInfoToAdd
                                            CRITICALITY ignore EXTENSION NRNeighbour-Information
                                                                                                           PRESENCE optional },
    . . .
ServedCell-Information ::= SEQUENCE {
    τCΙ
                        PCI,
    cellId
                        ECGI,
    † AC
                        TAC,
    broadcastPLMNs
                       BroadcastPLMNs-Item,
                       EUTRA-Mode-Info,
    eUTRA-Mode-Info
                       ProtocolExtensionContainer { {ServedCell-Information-ExtIEs} } OPTIONAL,
    iE-Extensions
ServedCell-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::=
     ID id-Number-of-Antennaports
                                                                                                                 PRESENCE optional }
                                                CRITICALITY ignore EXTENSION Number-of-Antennaports
     ID id-PRACH-Configuration
                                                CRITICALITY ignore EXTENSION PRACH-Configuration
                                                                                                                 PRESENCE optional }
     ID id-MBSFN-Subframe-Info
                                                CRITICALITY ignore EXTENSION MBSFN-Subframe-Infolist
                                                                                                                 PRESENCE optional }
     ID id-CSG-Id
                                                CRITICALITY ignore EXTENSION CSG-Id
                                                                                                                 PRESENCE optional
     ID id-MBMS-Service-Area-List
                                                CRITICALITY ignore EXTENSION MBMS-Service-Area-Identity-List
                                                                                                                PRESENCE optional
     ID id-MultibandInfoList
                                                                                                                 PRESENCE optional
                                                CRITICALITY ignore EXTENSION MultibandInfoList
     ID id-FregBandIndicatorPriority
                                                CRITICALITY ignore EXTENSION FreqBandIndicatorPriority
                                                                                                                 PRESENCE optional
     ID id-BandwidthReducedSI
                                                CRITICALITY ignore EXTENSION BandwidthReducedSI
                                                                                                                 PRESENCE optional }
     ID id-ProtectedEUTRAResourceIndication
                                                CRITICALITY ignore EXTENSION ProtectedEUTRAResourceIndication
                                                                                                                PRESENCE optional }
     ID id-BPLMN-ID-Info-EUTRA
                                                CRITICALITY ignore EXTENSION BPLMN-ID-Info-EUTRA
                                                                                                                 PRESENCE optional }
                                                                                                                 PRESENCE optional }
     ID id-NPRACHConfiguration
                                                CRITICALITY ignore EXTENSION NPRACHConfiguration
     ID id-SFN-Offset
                                                CRITICALITY ignore EXTENSION SFN-Offset
                                                                                                                 PRESENCE optional },
```

```
ServiceType ::= ENUMERATED{
    qMC-for-streaming-service,
    qMC-for-MTSI-service,
    . . .
SqNBCoordinationAssistanceInformation ::= ENUMERATED{
    coordination-not-required,
    . . .
SqNBResourceCoordinationInformation ::= SEQUENCE {
    nR-CGI
                                     NRCGI,
    uLCoordinationInformation
                                     BIT STRING (SIZE(6..4400, ...)),
    dLCoordinationInformation
                                     BIT STRING (SIZE(6..4400, ...)) OPTIONAL,
                                     ProtocolExtensionContainer { {SqNBResourceCoordinationInformationExtIEs} }
    iE-Extensions
                                                                                                                        OPTIONAL,
SqNBResourceCoordinationInformationExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      ID id-ECGI
                                                         CRITICALITY ignore EXTENSION ECGI
                                                                                                                                PRESENCE optional }
     ID id-SqNBCoordinationAssistanceInformation
                                                         CRITICALITY reject EXTENSION SgNBCoordinationAssistanceInformation PRESENCE optional },
    . . .
SqNB-UE-X2AP-ID ::= INTEGER (0..4294967295)
SIPTOBearerDeactivationIndication ::= ENUMERATED {
    true,
    . . .
SharedResourceType ::= CHOICE{
    uLOnlySharing
                        ULOnlySharing,
    uLandDLSharing
                        ULandDLSharing,
ShortMAC-I ::= BIT STRING (SIZE(16))
SGNB-Addition-Trigger-Ind
                             ::= ENUMERATED
    sn-change,
    inter-eNB-HO,
    intra-eNB-HO,
    . . .
SNtriggered ::=ENUMERATED{
    true,
    . . .
```

```
SourceOfUEActivityBehaviourInformation ::= ENUMERATED {
    subscription-information,
    statistics.
SpecialSubframe-Info ::= SEQUENCE {
    specialSubframePatterns
                                SpecialSubframePatterns,
    cyclicPrefixDL
                                CyclicPrefixDL,
    cyclicPrefixUL
                                CyclicPrefixUL,
    iE-Extensions
                                ProtocolExtensionContainer { {SpecialSubframe-Info-ExtIEs} } OPTIONAL,
SpecialSubframe-Info-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
SpecialSubframePatterns ::= ENUMERATED {
    ssp0,
    ssp1,
    ssp2,
    ssp3,
    ssp4,
    ssp5,
    ssp6,
    ssp7,
    ssp8,
    . . .
SpectrumSharingGroupID ::= INTEGER (1..maxCellineNB)
SubbandCQI ::= SEQUENCE {
    subbandCOICodeword0
                                SubbandCQICodeword0,
    subbandCQICodeword1
                                SubbandCQICodeword1
                                                         OPTIONAL,
    iE-Extensions
                                ProtocolExtensionContainer { {SubbandCQI-ExtIEs} } OPTIONAL,
Subscription-Based-UE-DifferentiationInfo ::= SEQUENCE {
    periodicCommunicationIndicator ENUMERATED {periodically, ondemand, ...}
                                                                                      OPTIONAL,
    periodicTime
                                    INTEGER (1..3600, ...)
                                                                                      OPTIONAL,
    scheduledCommunicationTime
                                    ScheduledCommunicationTime
                                                                                      OPTIONAL,
    stationarvIndication
                                    ENUMERATED {stationary, mobile, ...}
                                                                                      OPTIONAL,
                                    ENUMERATED {single-packet, dual-packets, multiple-packets, ...}
    trafficProfile
                                                                                                            OPTIONAL,
    batteryIndication
                                    ENUMERATED {battery-powered, battery-powered-not-rechargeable-or-replaceable, not-battery-powered, ...}
    OPTIONAL,
    iE-Extensions
                                    ProtocolExtensionContainer { { Subscription-Based-UE-DifferentiationInfo-ExtIEs} } OPTIONAL,
    . . .
Subscription-Based-UE-DifferentiationInfo-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
ScheduledCommunicationTime ::= SEQUENCE {
    dayofWeek
               BIT STRING (SIZE(7))
                                                                                      OPTIONAL,
    timeofDayStart INTEGER (0..86399, ...)
timeofDayEnd INTEGER (0..86399, ...)
                                                                                      OPTIONAL,
                                                                                      OPTIONAL,
                            ProtocolExtensionContainer { { ScheduledCommunicationTime-ExtIEs}} OPTIONAL,
    iE-Extensions
ScheduledCommunicationTime-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
SRVCCOperationPossible ::= ENUMERATED {
    possible,
    . . .
SSBAreaCapacityValue-List ::= SEQUENCE (SIZE (1.. maxnoofSSBAreas)) OF SSBAreaCapacityValue-Item
SSBAreaCapacityValue-Item ::=
                                     SEQUENCE {
    ssbIndex
                                        SSBIndex,
    ssbAreaCapacityValue
                                         INTEGER (0..100),
    iE-Extensions
                                         ProtocolExtensionContainer { {SSBAreaCapacityValue-ExtIEs} } OPTIONAL,
    . . .
SSBAreaCapacityValue-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
SSBAreaRadioResourceStatus-List ::= SEQUENCE (SIZE (1.. maxnoofSSBAreas)) OF SSBAreaRadioResourceStatus-Item
SSBAreaRadioResourceStatus-Item ::= SEOUENCE
    ssbIndex
                                        SSBIndex,
    ssbAreaDLGBRPRBUsage
                                        INTEGER (0..100),
    ssbAreaULGBRPRBUsage
                                        INTEGER (0..100),
    ssbAreaDLNonGBRPRBUsage
                                        INTEGER (0..100),
    ssbAreaULNonGBRPRBUsage
                                        INTEGER (0..100),
    ssbAreaDLTotalPRBUsage
                                        INTEGER (0..100),
    ssbAreaULTotalPRBUsage
                                        INTEGER (0..100),
    ssbAreaDLSchedulingPDCCHCCEUsage
                                        INTEGER (0..100)
                                                                                              OPTIONAL,
    ssbAreaULSchedulingPDCCHCCEUsage
                                        INTEGER (0..100)
                                                                                              OPTIONAL,
    iE-Extensions
                                        ProtocolExtensionContainer { {SSBAreaRadioResourceStatus-ExtIEs} } OPTIONAL,
SSBAreaRadioResourceStatus-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
SSBIndex ::= INTEGER (0..63)
```

```
SSB-PositionsInBurst ::= CHOICE {
    shortBitmap
                                    BIT STRING (SIZE (4)),
    mediumBitmap
                                    BIT STRING (SIZE (8)),
    longBitmap
                                    BIT STRING (SIZE (64)),
    choice-extension
                                    ProtocolIE-Single-Container { {SSB-PositionsInBurst-ExtIEs} }
SSB-PositionsInBurst-ExtIEs X2AP-PROTOCOL-IES ::= {
SubbandCOI-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
SubbandCOICodeword0 ::= CHOICE {
    four-bitCOI
                                     INTEGER (0..15, ...),
    two-bitSubbandDifferentialCOI
                                    INTEGER (0..3, ...),
    two-bitDifferentialCQI
                                    INTEGER (0..3, ...),
SubbandCQICodeword1 ::= CHOICE {
    four-bitCOI
                                         INTEGER (0..15, ...),
    three-bitSpatialDifferentialCQI
                                        INTEGER (0..7, ...),
    two-bitSubbandDifferentialCOI
                                        INTEGER (0..3, ...),
    two-bitDifferentialCOI
                                        INTEGER (0..3, ...),
    . . .
SubbandCQIList ::= SEQUENCE (SIZE(1.. maxSubband)) OF SubbandCQIItem
SubbandCQIItem ::= SEQUENCE {
    subbandCQI
                        SubbandCQI,
    subbandIndex
                        INTEGER (0..27,...),
    iE-Extensions
                        ProtocolExtensionContainer { {SubbandCQIItem-ExtIEs} } OPTIONAL,
SubbandCOIItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
SubbandSize ::= ENUMERATED {
    size2.
    size3.
    size4.
    size6,
    size8,
    . . .
SubscriberProfileIDforRFP ::= INTEGER (1..256)
```

```
SubframeAllocation ::= CHOICE {
    oneframe
                                    Oneframe.
    fourframes
                                    Fourframes,
SubframeAssignment ::= ENUMERATED {
    sal,
    sa2,
    sa3,
    sa4,
    sa5,
    sa6,
    . . .
SubframeType ::= ENUMERATED{mbsfn,nonmbsfn,...}
SqNBSecurityKey ::= BIT STRING (SIZE(256))
SqNBtoMeNBContainer ::= OCTET STRING
SRBType ::= ENUMERATED {srb1, srb2, ...}
SCGConfigurationQuery ::= ENUMERATED {true,...}
SULInformation ::= SEQUENCE {
    sUL-ARFCN
                            INTEGER (0.. 3279165),
    sUL-TxBW
                            NR-TxBW,
    iE-Extensions
                            ProtocolExtensionContainer { {SULInformation-ExtIEs} }
                                                                                         OPTIONAL,
SupportedSULFreqBandItem ::= SEQUENCE
    freqBandIndicatorNr
                                    INTEGER (1..1024,...),
    iE-Extensions
                            ProtocolExtensionContainer { {SupportedSULFreqBandItem-ExtIEs} }
                                                                                                   OPTIONAL,
    . . .
SupportedSULFreqBandItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
SULInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      ID id-CarrierList
                                            CRITICALITY ignore EXTENSION NRCarrierList
                                                                                                 PRESENCE optional } |
    { ID id-FrequencyShift7p5khz
                                            CRITICALITY ignore EXTENSION FrequencyShift7p5khz PRESENCE optional },
SFN-Offset ::= SEQUENCE {
    sFN-Time-Offset
                                    BIT STRING (SIZE(24)),
    iE-Extensions
                        ProtocolExtensionContainer { {SFN-Offset-ExtIEs} } OPTIONAL,
    . . .
```

```
SFN-Offset-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- T
TABasedMDT::= SEQUENCE {
                       TAListforMDT,
    tAListforMDT
    iE-Extensions
                       ProtocolExtensionContainer { {TABasedMDT-ExtIEs} } OPTIONAL,
TABasedMDT-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TAC ::= OCTET STRING (SIZE (2))
TAIBasedMDT ::= SEQUENCE {
    tAIListforMDT
                           ProtocolExtensionContainer { {TAIBasedMDT-ExtIEs} } OPTIONAL,
    iE-Extensions
TAIBasedMDT-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TAIListforMDT ::= SEQUENCE (SIZE(1..maxnoofTAforMDT)) OF TAI-Item
TAI-Item ::= SEQUENCE {
                        TAC,
    pLMN-Identity
                       PLMN-Identity,
   iE-Extensions
                       ProtocolExtensionContainer { {TAI-Item-ExtIEs} } OPTIONAL,
TAI-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TAListforMDT ::= SEQUENCE (SIZE(1..maxnoofTAforMDT)) OF TAC
TABasedQMC ::= SEQUENCE {
    tAListforOMC
                       TAListforOMC,
                       ProtocolExtensionContainer { {TABasedQMC-ExtIEs} } OPTIONAL,
    iE-Extensions
TABasedOMC-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
TAListforOMC ::= SEQUENCE (SIZE(1..maxnoofTAforOMC)) OF TAC
TAIBasedOMC ::= SEQUENCE {
   tAIListforOMC
                     TAIListforOMC,
                     ProtocolExtensionContainer { {TAIBasedOMC-ExtIEs} } OPTIONAL.
   iE-Extensions
TAIBasedQMC-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TAIListforOMC ::= SEQUENCE (SIZE(1..maxnoofTAforOMC)) OF TAI-Item
TargetCellInNGRAN ::= OCTET STRING
TargetCellInUTRAN ::= OCTET STRING -- This IE is to be encoded according to the UTRAN Cell ID in the Last Visited UTRAN Cell Information IE in TS
25.413 [24]
TargeteNBtoSource-eNBTransparentContainer ::= OCTET STRING
TDD-Info ::= SEQUENCE {
   eARFCN
                                EARFCN.
   transmission-Bandwidth
                                Transmission-Bandwidth,
   subframeAssignment
                                SubframeAssignment,
   specialSubframe-Info
                                SpecialSubframe-Info,
                                ProtocolExtensionContainer { {TDD-Info-ExtIEs} } OPTIONAL,
   iE-Extensions
TDD-Info-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-AdditionalSpecialSubframe-Info
                                              CRITICALITY ignore EXTENSION Additional Special Subframe-Info
                                                                                                            PRESENCE optional }
     ID id-eARFCNExtension
                                              CRITICALITY reject EXTENSION EARFCNExtension
                                                                                                            PRESENCE optional }
     ID id-AdditionalSpecialSubframeExtension-Info CRITICALITY ignore EXTENSION AdditionalSpecialSubframeExtension-Info PRESENCE optional
     PRESENCE optional |
    { ID id-NBIoT-UL-DL-AlignmentOffset
                                              CRITICALITY reject EXTENSION NBIOT-UL-DL-AlignmentOffset
                                                                                                            PRESENCE optional },
   . . .
TDD-InfoNeighbourServedNRCell-Information ::= SEQUENCE {
   nRFregInfo
                        NRFregInfo,
                         ProtocolExtensionContainer { {TDD-InfoNeighbourServedNRCell-Information-ExtIEs} }
   iE-Extensions
                                                                                                    OPTIONAL,
TDD-InfoNeighbourServedNRCell-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
   PRESENCE optional },
TDDULDLConfigurationCommonNR ::= OCTET STRING
```

```
Threshold-RSRP ::= INTEGER(0..97)
Threshold-RSRO ::= INTEGER(0..34)
TimeToWait ::= ENUMERATED {
    v1s.
    v2s,
    v5s,
    v10s.
    v20s.
    v60s,
Time-UE-StayedInCell ::= INTEGER (0..4095)
Time-UE-StayedInCell-EnhancedGranularity ::= INTEGER (0..40950)
TNLA-To-Add-List ::= SEQUENCE (SIZE(1..maxnoofTNLAssociations)) OF TNLA-To-Add-Item
TNLA-To-Add-Item ::= SEQUENCE {
    tNLAssociationTransportLayerAddress
                                            CPTransportLayerInformation,
    tNLAssociationUsage
                                            TNLAssociationUsage,
                                            ProtocolExtensionContainer { { TNLA-To-Add-Item-ExtIEs} } OPTIONAL
    iE-Extensions
TNLA-To-Add-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TNLA-To-Update-List ::= SEQUENCE (SIZE(1..maxnoofTNLAssociations)) OF TNLA-To-Update-Item
TNLA-To-Update-Item::= SEQUENCE {
    tNLAssociationTransportLayerAddress
                                            CPTransportLayerInformation,
    tNLAssociationUsage
                                            TNLAssociationUsage
                                                                         OPTIONAL,
    iE-Extensions
                                            ProtocolExtensionContainer { { TNLA-To-Update-Item-ExtIEs} } OPTIONAL
TNLA-To-Update-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TNLA-To-Remove-List ::= SEQUENCE (SIZE(1..maxnoofTNLAssociations)) OF TNLA-To-Remove-Item
TNLA-To-Remove-Item::= SEQUENCE {
    tNLAssociationTransportLayerAddress
                                            CPTransportLayerInformation,
    iE-Extensions
                                            ProtocolExtensionContainer { { TNLA-To-Remove-Item-ExtIEs} } OPTIONAL
TNLA-To-Remove-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TNLA-Setup-List ::= SEQUENCE (SIZE(1..maxnoofTNLAssociations)) OF TNLA-Setup-Item
```

```
TNLA-Setup-Item ::= SEQUENCE {
    tNLAssociationTransportLayerAddress
                                            CPTransportLayerInformation,
                                            ProtocolExtensionContainer { { TNLA-Setup-Item-ExtIEs} } OPTIONAL,
    iE-Extensions
TNLA-Setup-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TNLA-Failed-To-Setup-List ::= SEQUENCE (SIZE(1..maxnoofTNLAssociations)) OF TNLA-Failed-To-Setup-Item
TNLA-Failed-To-Setup-Item ::= SEQUENCE {
    tNLAssociationTransportLayerAddress
                                            CPTransportLayerInformation,
    cause
                                            Cause,
                                            ProtocolExtensionContainer { { TNLA-Failed-To-Setup-Item-ExtIEs} } OPTIONAL
    iE-Extensions
TNLA-Failed-To-Setup-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TNLAssociationUsage ::= ENUMERATED
    non-ue,
    both,
TNLCapacityIndicator ::= SEQUENCE {
    dlTNLMaximumOfferedCapacity
                                        INTEGER (1..16777216, ...),
    dlTNLAvailableCapacity
                                        INTEGER (0..100, ...),
    ulTNLMaximumOfferedCapacity
                                        INTEGER (1..16777216, ...),
    ulTNLAvailableCapacity
                                        INTEGER (0..100, ...),
                                        ProtocolExtensionContainer { {TNLCapacityIndicator-ExtIEs} } OPTIONAL,
    iE-Extensions
TNLCapacityIndicator-ExtIEs X2AP-PROTOCOL-EXTENSION ::=
Transport-UP-Layer-Addresses-Info-To-Add-List ::= SEQUENCE (SIZE(1.. maxnoofTLAs)) OF Transport-UP-Layer-Addresses-Info-To-Add-Item
Transport-UP-Layer-Addresses-Info-To-Add-Item ::= SEQUENCE {
    iP-SecTransportLayerAddress
                                    TransportLayerAddress,
    gTPTransportLayerAddressesToAdd
                                            GTPTLAs
                                                                            OPTIONAL,
                                    ProtocolExtensionContainer { { Transport-UP-Layer-Addresses-Info-To-Add-ItemExtIEs } }
    iE-Extensions
                                                                                                                              OPTIONAL,
Transport-UP-Layer-Addresses-Info-To-Add-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
Transport-UP-Layer-Addresses-Info-To-Remove-List
                                                  ::= SEQUENCE (SIZE(1.. maxnoofTLAs)) OF Transport-UP-Layer-Addresses-Info-To-Remove-Item
Transport-UP-Laver-Addresses-Info-To-Remove-Item ::= SEOUENCE {
    iP-SecTransportLayerAddress
                                    TransportLayerAddress,
    qTPTransportLayerAddressesToRemove
    iE-Extensions
                                    ProtocolExtensionContainer { { Transport-UP-Layer-Addresses-Info-To-Remove-ItemExtIEs } }
                                                                                                                                  OPTIONAL,
Transport-UP-Layer-Addresses-Info-To-Remove-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TNLConfigurationInfo ::= SEQUENCE
    transport-UP-Layer-Addresses-Info-To-Add-List
                                                        Transport-UP-Layer-Addresses-Info-To-Add-List
                                                                                                                       OPTIONAL,
    transport-UP-Layer-Addresses-Info-To-Remove-List
                                                        Transport-UP-Layer-Addresses-Info-To-Remove-List
                                                                                                                       OPTIONAL,
    iE-Extensions ProtocolExtensionContainer { { TNLConfigurationInfo-ExtIEs } }
                                                                                                                    OPTIONAL,
TNLConfigurationInfo-ExtIEs
                                X2AP-PROTOCOL-EXTENSION ::= {
TraceActivation ::= SEQUENCE {
    eUTRANTraceID
                                    EUTRANTraceID,
    interfacesToTrace
                                    InterfacesToTrace,
traceDepth
                                    TraceDepth,
traceCollectionEntityIPAddress
                                    TraceCollectionEntityIPAddress,
                                    ProtocolExtensionContainer { {TraceActivation-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
TraceActivation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
      ID id-MDTConfiguration
                                        CRITICALITY ignore EXTENSION MDT-Configuration
                                                                                                 PRESENCE optional }
      ID id-UEAppLayerMeasConfig
                                        CRITICALITY ignore EXTENSION UEAppLayerMeasConfig
                                                                                                 PRESENCE optional }
      ID id-MDTConfigurationNR
                                        CRITICALITY ignore EXTENSION MDT-ConfigurationNR
                                                                                                 PRESENCE optional }
     ID id-TraceCollectionEntityURI
                                        CRITICALITY ignore EXTENSION URI-Address
                                                                                                 PRESENCE optional },
    . . .
TraceCollectionEntityIPAddress ::= BIT STRING (SIZE(1..160, ...))
TraceDepth
                ::= ENUMERATED {
   minimum,
    medium,
    maximum,
    minimumWithoutVendorSpecificExtension,
    mediumWithoutVendorSpecificExtension,
    maximumWithoutVendorSpecificExtension,
```

```
Transmission-Bandwidth ::= ENUMERATED {
      bw6.
      bw15,
      bw25,
      bw50,
      bw75,
       bw100,
       . . . ,
      bw1
TransportLayerAddress
                            ::= BIT STRING (SIZE(1..160, ...))
TransportLayerAddressAndPort
                                ::= SEQUENCE {
   endpointIPAddress
                                TransportLayerAddress,
   portnumber
                                Port-Number
TunnelInformation ::= SEQUENCE {
   transportLayerAddress TransportLayerAddress,
   uDP-Port-Number
                         Port-Number
                                           OPTIONAL,
   iE-Extensions
                         ProtocolExtensionContainer { {Tunnel-Information-ExtIEs} } OPTIONAL,
Tunnel-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TypeOfError ::= ENUMERATED {
   not-understood,
   missing,
-- U
UEAggregateMaximumBitRate ::= SEQUENCE {
   uEaggregateMaximumBitRateDownlink BitRate,
   uEaggregateMaximumBitRateUplink
                                   BitRate,
   iE-Extensions
                                   ProtocolExtensionContainer { {UEAqqreqate-MaximumBitrate-ExtIEs} } OPTIONAL,
UEAggregate-MaximumBitrate-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-extended-uEaggregateMaximumBitRateDownlink CRITICALITY ignore EXTENSION ExtendedBitRate PRESENCE optional}
     . . .
```

```
UEAppLayerMeasConfig ::= SEQUENCE {
   containerForAppLayerMeasConfig
                                          OCTET STRING (SIZE(1..1000)),
    areaScopeOfOMC
                      AreaScopeOfOMC.
   iE-Extensions
                       ProtocolExtensionContainer { {UEAppLayerMeasConfig-ExtIEs} } OPTIONAL,
UEAppLayerMeasConfig-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
UE-ContextKeptIndicator ::= ENUMERATED {
   true,
UEID ::= BIT STRING (SIZE (16))
UE-HistoryInformation ::= SEQUENCE (SIZE(1..maxnoofCells)) OF LastVisitedCell-Item
UE-HistoryInformationFromTheUE ::= OCTET STRING
-- This IE is a transparent container and shall be encoded as the VisitedCellInfoList field contained in the UEInformationResponse message as
defined in TS 36.331 [9]
UE-S1AP-ID ::= INTEGER (0.. 4294967295)
UE-X2AP-ID ::= INTEGER (0..4095)
UE-X2AP-ID-Extension ::= INTEGER (0..4095, ...)
UERadioCapability ::= OCTET STRING
UERadioCapabilityID ::= OCTET STRING
UE-RLF-Report-Container::= OCTET STRING
-- This IE is a transparent container and shall be encoded as the RLF-Report-r9 field contained in the UEInformationResponse message as defined in
TS 36.331 [9]
UE-RLF-Report-Container-for-extended-bands ::= OCTET STRING
-- This IE is a transparent container and shall be encoded as the RLF-Report-v9e0 field contained in the UEInformationResponse message as defined
in TS 36.331 [9]
UESecurityCapabilities ::= SEQUENCE {
    encryptionAlgorithms
                                      EncryptionAlgorithms,
   integrityProtectionAlgorithms
                                      IntegrityProtectionAlgorithms,
   iE-Extensions
                                      ProtocolExtensionContainer { {UESecurityCapabilities-ExtIEs} } }
                                                                                                      OPTIONAL,
UESecurityCapabilities-ExtIES X2AP-PROTOCOL-EXTENSION ::= {
    . . .
```

470

```
UESidelinkAggregateMaximumBitRate ::= SEQUENCE {
    uESidelinkAggregateMaximumBitRate
                                            BitRate,
   iE-Extensions
                                    ProtocolExtensionContainer { {UE-Sidelink-Aggregate-MaximumBitRate-ExtIEs} } OPTIONAL,
UE-Sidelink-Aggregate-MaximumBitRate-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UEsToBeResetList ::= SEQUENCE (SIZE (1.. maxUEsinenqNBDU)) OF UEsToBeResetList-Item
UEsToBeResetList-Item::= SEQUENCE {
   meNB-ID
                           UE-X2AP-ID,
   meNB-ID-ext
                           UE-X2AP-ID-Extension
                                                                                                     OPTIONAL,
    sqNB-ID
                         SqNB-UE-X2AP-ID
                                                                                                     OPTIONAL,
                           ProtocolExtensionContainer { {UEsToBeResetList-Item-ExtIEs} }
   iE-Extensions
                                                                                                     OPTIONAL,
UEsToBeResetList-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ULandDLSharing ::= SEQUENCE{
    uLResourcesULandDLSharing
                                            ULResourcesULandDLSharing,
    dLResourcesULandDLSharing
                                            DLResourcesULandDLSharing,
    iE-Extensions
                           ProtocolExtensionContainer { {ULandDLSharing-ExtIEs} }
                                                                                                OPTIONAL,
ULandDLSharing-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ULConfiguration::= SEQUENCE {
    uL-PDCP
                   UL-UE-Configuration,
                                    ProtocolExtensionContainer { {ULConfiguration-ExtIEs} } OPTIONAL,
   iE-Extensions
ULConfiguration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UL-UE-Configuration::= ENUMERATED { no-data, shared, only, ... }
UL-GBR-PRB-usage::= INTEGER (0..100)
UL-HighInterferenceIndicationInfo ::= SEQUENCE (SIZE(1..maxCellineNB)) OF UL-HighInterferenceIndicationInfo-Item
UL-HighInterferenceIndicationInfo-Item ::= SEQUENCE {
    target-Cell-ID
    ul-interferenceindication
                                    UL-HighInterferenceIndication,
```

```
ProtocolExtensionContainer { {UL-HighInterferenceIndicationInfo-Item-ExtIEs} } OPTIONAL,
    iE-Extensions
UL-HighInterferenceIndicationInfo-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UL-HighInterferenceIndication ::= BIT STRING (SIZE(1..110, ...))
UL-InterferenceOverloadIndication ::= SEQUENCE (SIZE(1..maxnoofPRBs)) OF UL-InterferenceOverloadIndication-Item
UL-InterferenceOverloadIndication-Item ::= ENUMERATED {
    high-interference,
    medium-interference,
   low-interference,
UL-non-GBR-PRB-usage::= INTEGER (0..100)
ULOnlySharing ::= SEQUENCE{
    uLResourceBitmapULOnlySharing DataTrafficResources,
                                    ProtocolExtensionContainer { {ULOnlySharing-ExtIEs} }
   iE-Extensions
                                                                                                      OPTIONAL,
ULOnlySharing-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ULResourceBitmapULandDLSharing ::= DataTrafficResources
ULResourcesULandDLSharing ::= CHOICE {
    unchanged
    changed
                        ULResourceBitmapULandDLSharing,
    . . .
UL-scheduling-PDCCH-CCE-usage::= INTEGER (0..100)
UL-Total-PRB-usage::= INTEGER (0..100)
UnlicensedSpectrumRestriction ::= ENUMERATED {
    unlicensed-restricted.
    . . .
URI-Address ::= VisibleString
UsableABSInformation ::= CHOICE {
    fdd
                        UsableABSInformationFDD,
    tdd
                        UsableABSInformationTDD,
```

```
UsableABSInformationFDD ::= SEQUENCE {
    usable-abs-pattern-info
                                        BIT STRING (SIZE(40)),
   iE-Extensions
                                        ProtocolExtensionContainer { {UsableABSInformationFDD-ExtIEs} } OPTIONAL,
UsableABSInformationFDD-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UsableABSInformationTDD ::= SEQUENCE {
    usaable-abs-pattern-info
                                       BIT STRING (SIZE(1..70, ...)),
                                        ProtocolExtensionContainer { {UsableABSInformationTDD-ExtIEs} } OPTIONAL,
   iE-Extensions
UsableABSInformationTDD-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UserPlaneTrafficActivityReport ::= ENUMERATED {inactive, re-activated, ...}
-- V
V2XServicesAuthorized ::= SEQUENCE {
    vehicleUE
                    VehicleUE
                                                                                        OPTIONAL,
pedestrianUE
                       PedestrianUE
                                                                                        OPTIONAL,
   iE-Extensions
                      ProtocolExtensionContainer { {V2XServicesAuthorized-ExtIEs} }
                                                                                       OPTIONAL,
V2XServicesAuthorized-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
VehicleUE ::= ENUMERATED {
    authorized,
    not-authorized,
PedestrianUE ::= ENUMERATED {
    authorized,
   not-authorized,
-- W
```

```
WidebandCOI ::= SEQUENCE {
    widebandCOICodeword0
                                INTEGER (0..15, ...),
    widebandCOICodeword1
                                WidebandCOICodeword1
                                                             OPTIONAL,
                                ProtocolExtensionContainer { {WidebandCOI-ExtIEs} } OPTIONAL,
    iE-Extensions
WidebandCQI-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
WidebandCOICodeword1::= CHOICE {
    four-bitCQI
                                            INTEGER (0..15, ...),
    three-bitSpatialDifferentialCQI
                                            INTEGER (0..7, ...),
WLANMeasurementConfiguration ::= SEQUENCE {
    wlanMeasConfig
                                WLANMeasConfig,
    wlanMeasConfigNameList
                                WLANMeasConfigNameList
                                                                     OPTIONAL,
    wlan-rssi
                                ENUMERATED {true, ...}
                                                                     OPTIONAL,
    wlan-rtt
                                ENUMERATED {true, ...}
                                                                     OPTIONAL,
    iE-Extensions
                        ProtocolExtensionContainer { {WLANMeasurementConfiguration-ExtIEs} } OPTIONAL,
    . . .
WLANMeasurementConfiguration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
WLANMeasConfiqNameList ::= SEQUENCE (SIZE(1..maxnoofWLANName)) OF WLANName
WLANMeasConfig::= ENUMERATED {setup,...}
WLANName ::= OCTET STRING (SIZE (1..32))
WTID ::= CHOICE {
    wTID-Type1
                        WTID-Type1,
    wTID-Type2
                        WTID-Long-Type2,
    . . .
WTID-Type1 ::= SEQUENCE {
    pLMN-Identity
                                    PLMN-Identity,
    shortWTID
                                    BIT STRING (SIZE(24)),
WTID-Long-Type2 ::= BIT STRING (SIZE(48))
WT-UE-XwAP-ID ::= OCTET STRING (SIZE (3))
-- X
```

```
X2BenefitValue ::= INTEGER (1..8, ...)
-- Y
-- Z
END
-- ASN1STOP
```

#### 9.3.6 Common definitions

```
-- ASN1START
__ ********************
-- Common definitions
__ **********************
X2AP-CommonDataTypes {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) x2ap (2) version1 (1) x2ap-CommonDataTypes (3) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
    ****************
-- Extension constants
__ *********************
maxPrivateIEs
                                    INTEGER ::= 65535
maxProtocolExtensions
                                    INTEGER ::= 65535
maxProtocolIEs
                                    INTEGER ::= 65535
__ ********************
-- Common Data Types
__ *********************
Criticality
           ::= ENUMERATED { reject, ignore, notify }
            ::= ENUMERATED { optional, conditional, mandatory }
Presence
PrivateIE-ID ::= CHOICE {
  local
                 INTEGER (0.. maxPrivateIEs),
   global
                  OBJECT IDENTIFIER
ProcedureCode
            ::= INTEGER (0..255)
```

```
ProtocolIE-ID ::= INTEGER (0..maxProtocolIEs)

TriggeringMessage ::= ENUMERATED { initiating-message, successful-outcome, unsuccessful-outcome}

END
-- ASN1STOP
```

#### 9.3.7 Constant definitions

```
-- ASN1START
__ ********************
-- Constant definitions
__ *******************
X2AP-Constants {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) x2ap (2) version1 (1) x2ap-Constants (4) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
IMPORTS
   ProcedureCode,
   ProtocolIE-ID
FROM X2AP-CommonDataTypes;
__ ********************
-- Elementary Procedures
  *****************
id-handoverPreparation
                                                        ProcedureCode ::= 0
id-handoverCancel
                                                        ProcedureCode ::= 1
id-loadIndication
                                                        ProcedureCode ::= 2
id-errorIndication
                                                        ProcedureCode ::= 3
                                                        ProcedureCode ::= 4
id-snStatusTransfer
id-uEContextRelease
                                                        ProcedureCode ::= 5
id-x2Setup
                                                        ProcedureCode ::= 6
id-reset
                                                        ProcedureCode ::= 7
id-eNBConfigurationUpdate
                                                        ProcedureCode ::= 8
id-resourceStatusReportingInitiation
                                                        ProcedureCode ::= 9
id-resourceStatusReporting
                                                        ProcedureCode ::= 10
id-privateMessage
                                                        ProcedureCode ::= 11
id-mobilitySettingsChange
                                                        ProcedureCode ::= 12
id-rLFIndication
                                                        ProcedureCode ::= 13
id-handoverReport
                                                        ProcedureCode ::= 14
id-cellActivation
                                                        ProcedureCode ::= 15
id-x2Release
                                                        ProcedureCode ::= 16
```

```
ProcedureCode ::= 17
id-x2APMessageTransfer
id-x2Removal
                                                              ProcedureCode ··= 18
                                                              ProcedureCode ::= 19
id-seNBAdditionPreparation
                                                              ProcedureCode ::= 20
id-seNBReconfigurationCompletion
id-meNBinitiatedSeNBModificationPreparation
                                                              ProcedureCode ::= 21
                                                              ProcedureCode ::= 22
id-seNBinitiatedSeNBModification
id-meNBinitiatedSeNBRelease
                                                              ProcedureCode ::= 23
                                                              ProcedureCode ::= 24
id-seNBinitiatedSeNBRelease
id-seNBCounterCheck
                                                              ProcedureCode ::= 25
id-retrieveUEContext
                                                              ProcedureCode ::= 26
id-sqNBAdditionPreparation
                                                              ProcedureCode ::= 27
id-sqNBReconfigurationCompletion
                                                                  ProcedureCode ::= 28
id-meNBinitiatedSqNBModificationPreparation
                                                              ProcedureCode ::= 29
id-sqNBinitiatedSqNBModification
                                                                  ProcedureCode ::= 30
id-meNBinitiatedSqNBRelease
                                                              ProcedureCode ::= 31
id-sqNBinitiatedSqNBRelease
                                                              ProcedureCode ··= 32
id-sqNBCounterCheck
                                                              ProcedureCode ::= 33
id-sqNBChange
                                                              ProcedureCode ::= 34
id-rRCTransfer
                                                              ProcedureCode ::= 35
id-endcX2Setup
                                                              ProcedureCode ::= 36
id-endcConfigurationUpdate
                                                              ProcedureCode ::= 37
id-secondaryRATDataUsageReport
                                                              ProcedureCode ::= 38
id-endcCellActivation
                                                              ProcedureCode ::= 39
id-endcPartialReset
                                                              ProcedureCode ::= 40
                                                              ProcedureCode ::= 41
id-eUTRANRCellResourceCoordination
id-SgNBActivityNotification
                                                              ProcedureCode ::= 42
id-endcX2Removal
                                                              ProcedureCode ::= 43
id-dataForwardingAddressIndication
                                                              ProcedureCode ::= 44
id-qNBStatusIndication
                                                              ProcedureCode ::= 45
id-deactivateTrace
                                                              ProcedureCode ::= 46
                                                              ProcedureCode ::= 47
id-traceStart
id-endcConfigurationTransfer
                                                                  ProcedureCode ::= 48
id-handoverSuccess
                                                              ProcedureCode ::= 49
id-conditionalHandoverCancel
                                                                  ProcedureCode ::= 50
id-earlyStatusTransfer
                                                          ProcedureCode ::= 51
id-cellTrafficTrace
                                                                  ProcedureCode ::= 52
id-endcresourceStatusReporting
                                                              ProcedureCode ::= 53
id-endcresourceStatusReportingInitiation
                                                              ProcedureCode ::= 54
id-f1CTrafficTransfer
                                                              ProcedureCode ::= 55
id-UERadioCapabilityIDMapping
                                                              ProcedureCode ::= 56
__ **********************
-- Lists
__ ******************
maxEARFCN
                                          INTEGER ::= 65535
maxEARFCNPlusOne
                                          INTEGER ::= 65536
newmaxEARFCN
                                          INTEGER ::= 262143
maxInterfaces
                                          INTEGER ::= 16
maxCellineNB
                                          INTEGER ::= 256
maxnoofBands
                                          INTEGER ::= 16
maxnoofBearers
                                          INTEGER ::= 256
```

```
maxNrOfErrors
                                            INTEGER ::= 256
maxnoofPDCP-SN
                                            INTEGER ::= 16
                                            INTEGER ::= 15
maxnoofEPLMNs
maxnoofEPLMNsPlusOne
                                            INTEGER ::= 16
maxnoofForbLACs
                                            INTEGER ::= 4096
                                            INTEGER ::= 4096
maxnoofForbTACs
maxnoofBPLMNs
                                            INTEGER ::= 6
                                            INTEGER ::= 6
maxnoofAdditionalPLMNs
maxnoofNeighbours
                                            INTEGER ::= 512
maxnoofPRBs
                                            INTEGER ::= 110
maxPools
                                            INTEGER ::= 16
maxnoofCells
                                            INTEGER ::= 16
maxnoofMBSFN
                                            INTEGER ::= 8
maxFailedMeasObjects
                                            INTEGER ::= 32
                                            INTEGER ::= 32
maxnoofCellIDforMDT
maxnoofTAforMDT
                                            INTEGER ::= 8
maxnoofMBMSServiceAreaIdentities
                                            INTEGER ::= 256
maxnoofMDTPLMNs
                                            INTEGER ::= 16
maxnoofCoMPHypothesisSet
                                            INTEGER ::= 256
maxnoofCoMPCells
                                            INTEGER ::= 32
maxUEReport
                                            INTEGER ::= 128
                                            INTEGER ::= 9
maxCellReport
maxnoofPA
                                            INTEGER ::= 3
maxCSIProcess
                                            INTEGER ::= 4
maxCSIReport
                                            INTEGER ::= 2
maxSubband
                                            INTEGER ::= 14
maxofNRNeighbours
                                            INTEGER ::= 1024
maxCellinengNB
                                            INTEGER ::= 16384
-- maxnoofNRCarriers
                                            INTEGER ::= 32
maxnooftimeperiods
                                            INTEGER ::= 2
                                            INTEGER ::= 32
maxnoofCellIDforOMC
maxnoofTAforQMC
                                            INTEGER ::= 8
maxnoofPLMNforOMC
                                            INTEGER ::= 16
maxUEsinengNBDU
                                            INTEGER ::= 8192
maxnoofProtectedResourcePatterns
                                            INTEGER ::= 16
maxnoNRcellsSpectrumSharingWithE-UTRA
                                            INTEGER ::= 64
                                            INTEGER ::= 32
maxnoofNrCellBands
maxnoofBluetoothName
                                            INTEGER ::= 4
maxnoofWLANName
                                            INTEGER ::= 4
maxnoofextBPLMNs
                                            INTEGER ::= 12
maxnoofTLAs
                                            INTEGER ::= 16
maxnoofGTPTLAs
                                            INTEGER ::= 16
maxnoofTNLAssociations
                                            INTEGER ::= 32
maxnoofCellsinCHO
                                            INTEGER ::= 8
maxnoofPC5OoSFlows
                                            INTEGER ::= 2048
maxnoofSSBAreas
                                            INTEGER ::= 64
maxnoofNRSCSs
                                            INTEGER ::= 5
maxnoofNRPhysicalResourceBlocks
                                            INTEGER ::= 275
maxnoofNonAnchorCarrierFregConfig
                                            INTEGER ::= 15
```

\_\_ \*

-- .

-- IEs

- -

\_\_ \*

id-E-RABs-Admitted-Item	ProtocolIE-ID ::= 0
id-E-RABs-Admitted-List	ProtocolIE-ID ::= 1
id-E-RAB-Item	ProtocolIE-ID ::= 2
id-E-RABs-NotAdmitted-List	ProtocolIE-ID ::= 3
id-E-RABs-ToBeSetup-Item	ProtocolIE-ID ::= 4
id-Cause	ProtocolIE-ID ::= 5
id-CellInformation	ProtocolIE-ID ::= 6
id-CellInformation-Item	ProtocolIE-ID ::= 7
id-New-eNB-UE-X2AP-ID	ProtocolIE-ID ::= 9
id-Old-eNB-UE-X2AP-ID	ProtocolIE-ID ::= 10
id-TargetCell-ID	ProtocolIE-ID ::= 11
id-TargeteNBtoSource-eNBTransparentContainer	ProtocolIE-ID ::= 12
id-TraceActivation	ProtocolIE-ID ::= 13
id-UE-ContextInformation	ProtocolIE-ID ::= 14
id-UE-HistoryInformation	ProtocolIE-ID ::= 15
id-UE-X2AP-ID	ProtocolIE-ID ::= 16
id-CriticalityDiagnostics	ProtocolIE-ID ::= 17
id-E-RABs-SubjectToStatusTransfer-List	ProtocolIE-ID ::= 18
id-E-RABs-SubjectToStatusTransfer-Item	ProtocolIE-ID ::= 19
id-ServedCells	ProtocolIE-ID ::= 20
id-GlobalENB-ID	ProtocolIE-ID ::= 21
id-TimeToWait	ProtocolIE-ID ::= 22
id-GUMMEI-ID	ProtocolIE-ID ::= 23
id-GUGroupIDList	ProtocolIE-ID ::= 24
id-ServedCellsToAdd	ProtocolIE-ID ::= 25
id-ServedCellsToModify	ProtocolIE-ID ::= 26
id-ServedCellsToDelete	ProtocolIE-ID ::= 27
id-Registration-Request	ProtocolIE-ID ::= 28
id-CellToReport	ProtocolIE-ID ::= 29
id-ReportingPeriodicity	ProtocolIE-ID ::= 30
id-CellToReport-Item	ProtocolIE-ID ::= 31
id-CellMeasurementResult	ProtocolIE-ID ::= 32
id-CellMeasurementResult-Item	ProtocolIE-ID ::= 33
id-GUGroupIDToAddList	ProtocolIE-ID ::= 34
id-GUGroupIDToDeleteList	ProtocolIE-ID ::= 35
id-SRVCCOperationPossible	ProtocolIE-ID ::= 36
id-Measurement-ID	ProtocolIE-ID ::= 37
id-ReportCharacteristics	ProtocolIE-ID ::= 38
id-ENB1-Measurement-ID	ProtocolIE-ID ::= 39
id-ENB2-Measurement-ID	ProtocolIE-ID ::= 40
id-Number-of-Antennaports	ProtocolIE-ID ::= 41
id-CompositeAvailableCapacityGroup	ProtocolIE-ID ::= 42
id-ENB1-Cell-ID	ProtocolIE-ID ::= 43
id-ENB2-Cell-ID	ProtocolIE-ID ::= 44
id-ENB2-Proposed-Mobility-Parameters	ProtocolIE-ID ::= 45
id-ENB1-Mobility-Parameters	ProtocolIE-ID ::= 46
id-ENB2-Mobility-Parameters-Modification-Range	ProtocolIE-ID ::= 47
id-FailureCellPCI	ProtocolIE-ID ::= 48
id-Re-establishmentCellECGI	ProtocolIE-ID ::= 49
id-FailureCellCRNTI	ProtocolIE-ID ::= 50
id-ShortMAC-I	ProtocolIE-ID ::= 51
id-SourceCellECGI	ProtocolIE-ID ::= 52

id-FailureCellECGI	ProtocolIE-ID ::= 53
id-HandoverReportType	ProtocolIE-ID ::= 54
id-PRACH-Configuration	ProtocolIE-ID ::= 55
id-MBSFN-Subframe-Info	ProtocolIE-ID ::= 56
id-ServedCellsToActivate	ProtocolIE-ID ::= 56 ProtocolIE-ID ::= 57
id-ActivatedCellList	ProtocolIE-ID ::= 58
id-DeactivationIndication	ProtocolIE-ID ::= 59
id-UE-RLF-Report-Container	ProtocolIE-ID ::= 60
id-ABSInformation	ProtocolIE-ID ::= 61
id-InvokeIndication	ProtocolIE-ID ::= 62
id-ABS-Status	ProtocolIE-ID ::= 63
id-PartialSuccessIndicator	ProtocolIE-ID ::= 64
id-MeasurementInitiationResult-List	ProtocolIE-ID ::= 65
id-MeasurementInitiationResult-Item	ProtocolIE-ID ::= 66
id-MeasurementFailureCause-Item	ProtocolIE-ID ::= 67
id-CompleteFailureCauseInformation-List	ProtocolIE-ID ::= 68
id-CompleteFailureCauseInformation-Item	ProtocolIE-ID ::= 69
id-CSG-Id	ProtocolIE-ID ::= 70
id-CSGMembershipStatus	ProtocolIE-ID ::= 71
id-MDTConfiguration	ProtocolIE-ID ::= 72
id-ManagementBasedMDTallowed	ProtocolIE-ID ::= 74
id-RRCConnSetupIndicator	ProtocolIE-ID ::= 75
id-NeighbourTAC	ProtocolIE-ID ::= 76
id-Time-UE-StayedInCell-EnhancedGranularity	ProtocolIE-ID ::= 77
id-RRCConnReestabIndicator	ProtocolIE-ID ::= 78
id-MBMS-Service-Area-List	ProtocolIE-ID ::= 79
id-HO-cause	ProtocolIE-ID ::= 80
id-TargetCellInUTRAN	ProtocolIE-ID ::= 81
id-MobilityInformation	ProtocolIE-ID ::= 82
id-SourceCellCRNTI	ProtocolIE-ID ::= 83
id-MultibandInfoList	ProtocolIE-ID ::= 84
id-M3Configuration	ProtocolIE-ID ::= 85
id-M4Configuration	ProtocolIE-ID ::= 86
id-M5Configuration	ProtocolIE-ID ::= 87
id-MDT-Location-Info	ProtocolIE-ID ::= 88
id-ManagementBasedMDTPLMNList	ProtocolIE-ID ::= 89
id-SignallingBasedMDTPLMNList	ProtocolIE-ID ::= 90
id-ReceiveStatusOfULPDCPSDUsExtended	ProtocolIE-ID ::= 91
id-ULCOUNTValueExtended	ProtocolIE-ID ::= 92
id-DLCOUNTValueExtended	ProtocolIE-ID ::= 93
id-eARFCNExtension	ProtocolIE-ID ::= 94
id-UL-EARFCNExtension	ProtocolIE-ID ::= 95
id-DL-EARFCNExtension	ProtocolIE-ID ::= 96
id-AdditionalSpecialSubframe-Info	ProtocolIE-ID ::= 97
id-Masked-IMEISV	ProtocolIE-ID ::= 98
id-IntendedULDLConfiguration	ProtocolIE-ID ::= 99
id-ExtendedULInterferenceOverloadInfo	ProtocolIE-ID ::= 100
id-RNL-Header	ProtocolIE-ID ::= 101
id-x2APMessage	ProtocolIE-ID ::= 102
id-ProSeAuthorized	ProtocolIE-ID ::= 103
id-ExpectedUEBehaviour	ProtocolIE-ID ::= 104
id-UE-HistoryInformationFromTheUE	ProtocolIE-ID ::= 105
id-DynamicDLTransmissionInformation	ProtocolIE-ID ::= 106
id-UE-RLF-Report-Container-for-extended-bands	ProtocolIE-ID ::= 107

id-CoMPInformation	ProtocolIE-ID ::= 108
	ProtocolIE-ID ::= 108 ProtocolIE-ID ::= 109
id-ReportingPeriodicityRSRPMR id-RSRPMRList	
	ProtocolIE-ID ::= 110
id-MeNB-UE-X2AP-ID	ProtocolIE-ID ::= 111
id-SeNB-UE-X2AP-ID	ProtocolIE-ID ::= 112
id-UE-SecurityCapabilities	ProtocolIE-ID ::= 113
id-SeNBSecurityKey	ProtocolIE-ID ::= 114
id-SeNBUEAggregateMaximumBitRate	ProtocolIE-ID ::= 115
id-ServingPLMN	ProtocolIE-ID ::= 116
id-E-RABs-ToBeAdded-List	ProtocolIE-ID ::= 117
id-E-RABs-ToBeAdded-Item	ProtocolIE-ID ::= 118
id-MeNBtoSeNBContainer	ProtocolIE-ID ::= 119
id-E-RABs-Admitted-ToBeAdded-List	ProtocolIE-ID ::= 120
id-E-RABs-Admitted-ToBeAdded-Item	ProtocolIE-ID ::= 121
id-SeNBtoMeNBContainer	ProtocolIE-ID ::= 122
id-ResponseInformationSeNBReconfComp	ProtocolIE-ID ::= 123
id-UE-ContextInformationSeNBModReq	ProtocolIE-ID ::= 124
id-E-RABs-ToBeAdded-ModReqItem	ProtocolIE-ID ::= 125
id-E-RABs-ToBeModified-ModReqItem	ProtocolIE-ID ::= 126
id-E-RABs-ToBeReleased-ModReqItem	ProtocolIE-ID ::= 127
id-E-RABs-Admitted-ToBeAdded-ModAckList	ProtocolIE-ID ::= 128
id-E-RABs-Admitted-ToBeModified-ModAckList	ProtocolIE-ID ::= 129
id-E-RABs-Admitted-ToBeReleased-ModAckList	ProtocolIE-ID ::= 130
id-E-RABs-Admitted-ToBeAdded-ModAckItem	ProtocolIE-ID ::= 131
id-E-RABs-Admitted-ToBeModified-ModAckItem	ProtocolIE-ID ::= 132
id-E-RABs-Admitted-ToBeReleased-ModAckItem	ProtocolIE-ID ::= 133
id-E-RABs-ToBeReleased-ModReqd	ProtocolIE-ID ::= 134
id-E-RABs-ToBeReleased-ModRegdItem	ProtocolIE-ID ::= 135
id-SCGChangeIndication	ProtocolIE-ID ::= 136
id-E-RABs-ToBeReleased-List-RelReg	ProtocolIE-ID ::= 137
id-E-RABs-ToBeReleased-RelRegItem	ProtocolIE-ID ::= 138
id-E-RABs-ToBeReleased-List-RelConf	ProtocolIE-ID ::= 139
id-E-RABs-TOBeReleased-RelConfItem	ProtocolIE-ID ::= 140
id-E-RABs-SubjectToCounterCheck-List	ProtocolIE-ID ::= 141
id-E-RABs-SubjectToCounterCheckItem	ProtocolIE-ID ::= 142
id-CoverageModificationList	ProtocolIE-ID ::= 143
id-ReportingPeriodicityCSIR	ProtocolIE-ID ::= 145
id-CSIReportList	ProtocolIE-ID ::= 145
id-UEID	ProtocolIE-ID ::= 146 ProtocolIE-ID ::= 147
id-enhancedRNTP	ProtocolIE-ID ::= 147 ProtocolIE-ID ::= 148
	ProtocolIE-ID ::= 148 ProtocolIE-ID ::= 149
id-ProSeUEtoNetworkRelaying id-ReceiveStatusOfULPDCPSDUsPDCP-SNlength18	ProtocolIE-ID ::= 149 ProtocolIE-ID ::= 150
<u> </u>	
id-ULCOUNTValuePDCP-SNlength18	ProtocolIE-ID ::= 151
id-DLCOUNTValuePDCP-SNlength18	ProtocolIE-ID ::= 152
id-UE-ContextReferenceAtSeNB	ProtocolIE-ID ::= 153
id-UE-ContextKeptIndicator	ProtocolIE-ID ::= 154
id-New-eNB-UE-X2AP-ID-Extension	ProtocolIE-ID ::= 155
id-Old-eNB-UE-X2AP-ID-Extension	ProtocolIE-ID ::= 156
id-MeNB-UE-X2AP-ID-Extension	ProtocolIE-ID ::= 157
id-SeNB-UE-X2AP-ID-Extension	ProtocolIE-ID ::= 158
id-LHN-ID	ProtocolIE-ID ::= 159
id-FreqBandIndicatorPriority	ProtocolIE-ID ::= 160
id-M6Configuration	ProtocolIE-ID ::= 161
id-M7Configuration	ProtocolIE-ID ::= 162

```
id-Tunnel-Information-for-BBF
id-SIPTO-BearerDeactivationIndication
id-GW-TransportLaverAddress
id-Correlation-ID
id-SIPTO-Correlation-ID
id-SIPTO-L-GW-TransportLaverAddress
id-X2RemovalThreshold
id-CellReportingIndicator
id-BearerTvpe
id-resumeID
id-UE-ContextInformationRetrieve
id-E-RABs-ToBeSetupRetrieve-Item
id-NewEUTRANCellIdentifier
id-V2XServicesAuthorized
id-OffsetOfNbiotChannelNumberToDL-EARFCN
id-OffsetOfNbiotChannelNumberToUL-EARFCN
id-AdditionalSpecialSubframeExtension-Info
id-BandwidthReducedSI
id-MakeBeforeBreakIndicator
id-UE-ContextReferenceAtWT
id-WT-UE-ContextKeptIndicator
id-UESidelinkAggregateMaximumBitRate
id-uL-GTPtunnelEndpoint
id-DL-scheduling-PDCCH-CCE-usage
id-UL-scheduling-PDCCH-CCE-usage
id-UEAppLayerMeasConfig
id-extended-e-RAB-MaximumBitrateDL
id-extended-e-RAB-MaximumBitrateUL
id-extended-e-RAB-GuaranteedBitrateDL
id-extended-e-RAB-GuaranteedBitrateUL
id-extended-uEaggregateMaximumBitRateDownlink
id-extended-uEaggregateMaximumBitRateUplink
id-NRrestrictioninEPSasSecondaryRAT
id-SqNBSecurityKey
id-SqNBUEAggregateMaximumBitRate
id-E-RABs-ToBeAdded-SqNBAddRegList
id-MeNBtoSgNBContainer
id-SqNB-UE-X2AP-ID
id-RequestedSplitSRBs
id-E-RABs-ToBeAdded-SqNBAddReg-Item
id-E-RABs-Admitted-ToBeAdded-SqNBAddRegAckList
id-SqNBtoMeNBContainer
id-AdmittedSplitSRBs
id-E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item
id-ResponseInformationSqNBReconfComp
id-UE-ContextInformation-SqNBModReq
id-E-RABs-ToBeAdded-SaNBModReg-Item
id-E-RABs-ToBeModified-SqNBModReg-Item
id-E-RABs-ToBeReleased-SqNBModReg-Item
id-E-RABs-Admitted-ToBeAdded-SqNBModAckList
id-E-RABs-Admitted-ToBeModified-SqNBModAckList
id-E-RABs-Admitted-ToBeReleased-SqNBModAckList
id-E-RABs-Admitted-ToBeAdded-SgNBModAck-Item
id-E-RABs-Admitted-ToBeModified-SqNBModAck-Item
```

ProtocolIE-ID ::= 163 ProtocolIE-ID ::= 164 ProtocolIE-ID ::= 165 ProtocolIE-ID ::= 166 ProtocolIE-ID ::= 167 ProtocolIE-ID ::= 168 ProtocolIE-ID ::= 169 ProtocolIE-ID ::= 170 ProtocolIE-ID ::= 171 ProtocolIE-ID ::= 172 ProtocolIE-ID ::= 173 ProtocolIE-ID ::= 174 ProtocolIE-ID ::= 175 ProtocolIE-ID ::= 176 ProtocolIE-ID ::= 177 ProtocolIE-ID ::= 178 ProtocolIE-ID ::= 179 ProtocolIE-ID ::= 180 ProtocolIE-ID ::= 181 ProtocolIE-ID ::= 182 ProtocolTE-TD ::= 183 ProtocolIE-ID ::= 184 ProtocolIE-ID ::= 185 ProtocolIE-ID ::= 193 ProtocolIE-ID ::= 194 ProtocolIE-ID ::= 195 ProtocolIE-ID ::= 196 ProtocolIE-ID ::= 197 ProtocolIE-ID ::= 198 ProtocolIE-ID ::= 199 ProtocolIE-ID ::= 200 ProtocolIE-ID ::= 201 ProtocolIE-ID ::= 202 ProtocolIE-ID ::= 203 ProtocolIE-ID ::= 204 ProtocolIE-ID ::= 205 ProtocolIE-ID ::= 206 ProtocolIE-ID ::= 207 ProtocolIE-ID ::= 208 ProtocolIE-ID ::= 209 ProtocolIE-ID ::= 210 ProtocolIE-ID ::= 211 ProtocolIE-ID ::= 212 Protocol TE-TD ::= 213 ProtocolIE-ID ::= 214 ProtocolIE-ID ::= 215 ProtocolIE-ID ::= 216 ProtocolIE-ID ::= 217 ProtocolIE-ID ::= 218 ProtocolIE-ID ::= 219 ProtocolIE-ID ::= 220 ProtocolIE-ID ::= 221 ProtocolIE-ID ::= 222 ProtocolIE-ID ::= 223

```
id-E-RABs-Admitted-ToBeReleased-SqNBModAck-Item
id-E-RABs-ToBeReleased-SqNBModReadList
id-E-RABs-ToBeModified-SaNBModReadList
id-E-RABs-ToBeReleased-SqNBModRegd-Item
id-E-RABs-ToBeModified-SqNBModRegd-Item
id-E-RABs-ToBeReleased-SqNBChaConfList
id-E-RABs-ToBeReleased-SqNBChaConf-Item
id-E-RABs-ToBeReleased-SqNBRelRegList
id-E-RABs-ToBeReleased-SqNBRelReg-Item
id-E-RABs-ToBeReleased-SqNBRelConfList
id-E-RABs-ToBeReleased-SqNBRelConf-Item
id-E-RABs-SubjectToSqNBCounterCheck-List
id-E-RABs-SubjectToSqNBCounterCheck-Item
id-RRCContainer
id-SRBType
id-Target-SqNB-ID
id-HandoverRestrictionList
id-SCGConfigurationOuery
id-SplitSRB
id-NRUeReport
id-InitiatingNodeType-EndcX2Setup
id-InitiatingNodeType-EndcConfigUpdate
id-RespondingNodeType-EndcX2Setup
id-RespondingNodeType-EndcConfigUpdate
id-NRUESecurityCapabilities
id-PDCPChangeIndication
id-ServedEUTRAcellsENDCX2ManagementList
id-CellAssistanceInformation
id-Globalen-qNB-ID
id-ServedNRcellsENDCX2ManagementList
id-UE-ContextReferenceAtSqNB
id-SecondaryRATUsageReport
id-ActivationID
id-MeNBResourceCoordinationInformation
id-SqNBResourceCoordinationInformation
id-ServedEUTRAcellsToModifyListENDCConfUpd
id-ServedEUTRAcellsToDeleteListENDCConfUpd
id-ServedNRcellsToModifyListENDCConfUpd
id-ServedNRcellsToDeleteListENDCConfUpd
id-E-RABUsageReport-Item
id-Old-SqNB-UE-X2AP-ID
id-SecondaryRATUsageReportList
id-SecondaryRATUsageReport-Item
id-ServedNRCellsToActivate
id-ActivatedNRCellList
id-SelectedPLMN
id-UEs-ToBeReset
id-UEs-Admitted-ToBeReset
id-RRCConfigIndication
id-DownlinkPacketLossRate
id-UplinkPacketLossRate
id-SubscriberProfileIDforRFP
id-serviceType
id-AerialUEsubscriptionInformation
```

```
ProtocolIE-ID ::= 224
ProtocolIE-ID ::= 225
ProtocolIE-ID ::= 226
ProtocolIE-ID ::= 227
ProtocolIE-ID ::= 228
ProtocolIE-ID ::= 229
ProtocolIE-ID ::= 230
ProtocolIE-ID ::= 231
Protocol TE-TD \cdot \cdot = 232
ProtocolIE-ID ::= 233
ProtocolIE-ID ::= 234
    ProtocolIE-ID ::= 235
    ProtocolIE-ID ::= 236
ProtocolIE-ID ::= 237
ProtocolIE-ID ::= 238
ProtocolIE-ID ::= 239
ProtocolIE-ID ::= 240
    ProtocolIE-ID ::= 241
ProtocolIE-ID ::= 242
ProtocolIE-ID ::= 243
ProtocolTE-TD ::= 244
ProtocolIE-ID ::= 245
ProtocolIE-ID ::= 246
ProtocolIE-ID ::= 247
ProtocolIE-ID ::= 248
ProtocolIE-ID ::= 249
ProtocolIE-ID ::= 250
    ProtocolIE-ID ::= 251
ProtocolIE-ID ::= 252
    ProtocolIE-ID ::= 253
    ProtocolIE-ID ::= 254
ProtocolIE-ID ::= 255
ProtocolIE-ID ::= 256
ProtocolIE-ID ::= 257
ProtocolIE-ID ::= 258
ProtocolIE-ID ::= 259
ProtocolIE-ID ::= 260
ProtocolIE-ID ::= 261
ProtocolIE-ID ::= 262
    ProtocolIE-ID ::= 263
ProtocolIE-ID ::= 264
ProtocolIE-ID ::= 265
ProtocolIE-ID ::= 266
ProtocolIE-ID ::= 267
ProtocolIE-ID ::= 268
ProtocolIE-ID ::= 269
ProtocolIE-ID ::= 270
ProtocolIE-ID ::= 271
ProtocolIE-ID ::= 272
ProtocolIE-ID ::= 273
ProtocolIE-ID ::= 274
ProtocolIE-ID ::= 275
ProtocolIE-ID ::= 276
ProtocolIE-ID ::= 277
```

id-SGNB-Addition-Trigger-Ind	ProtocolIE-ID	::=	278
id-MeNBCell-ID	ProtocolIE-ID	::=	279
id-RequestedSplitSRBsrelease	ProtocolIE-ID	::=	280
id-AdmittedSplitSRBsrelease	ProtocolIE-ID	::=	281
id-NRS-NSSS-PowerOffset	ProtocolIE-ID	::=	282
id-NSSS-NumOccasionDifferentPrecoder	ProtocolIE-ID	::=	283
id-ProtectedEUTRAResourceIndication	ProtocolIE-ID	::=	284
id-InitiatingNodeType-EutranrCellResourceCoordination	ProtocolIE-ID	: :=	285
id-RespondingNodeType-EutranrCellResourceCoordination	ProtocolIE-ID	: :=	286
id-DataTrafficResourceIndication	ProtocolIE-ID	: :=	287
id-SpectrumSharingGroupID	ProtocolIE-ID	: :=	288
id-ListofEUTRACellsinEUTRACoordinationReq	ProtocolIE-ID	: :=	289
id-ListofEUTRACellsinEUTRACoordinationResp	ProtocolIE-ID	: :=	290
id-ListofEUTRACellsinNRCoordinationReg	ProtocolIE-ID		
id-ListofNRCellsinNRCoordinationReq	ProtocolIE-ID		
id-ListofNRCellsinNRCoordinationResp	ProtocolIE-ID		
id-E-RABs-AdmittedToBeModified-SgNBModConfList	ProtocolIE-ID		
id-E-RABs-AdmittedToBeModified-SqNBModConf-Item	ProtocolIE-ID		
id-UEContextLevelUserPlaneActivity	ProtocolIE-ID		
id-ERABActivityNotifyItemList	ProtocolIE-ID		
id-InitiatingNodeType-EndcX2Removal	ProtocolIE-ID		
id-RespondingNodeType-EndcX2Removal	ProtocolIE-ID		
id-RLC-Status	ProtocolIE-ID		
id-CNTypeRestrictions	ProtocolIE-ID		
id-uLpDCPSnLength	ProtocolIE-ID		
id-BluetoothMeasurementConfiguration	ProtocolIE-ID		
id-WLANMeasurementConfiguration	ProtocolIE-ID		
id-NRrestrictionin5GS	ProtocolIE-ID		
id-dL-Forwarding	ProtocolIE-ID		
id-E-RABs-DataForwardingAddress-List	ProtocolIE-ID		
id-E-RABs-DataForwardingAddress-Item	ProtocolIE-ID		
id-E-RABS-DataForwardIngAddress-Item id-Subscription-Based-UE-DifferentiationInfo	ProtocolIE-ID		
id-Subscription-Based-OE-Differentiationing			
	ProtocolIE-ID		
id-dLPDCPSnLength	ProtocolIE-ID		
id-secondarysgNBDLGTPTEIDatPDCP	ProtocolIE-ID		
id-secondarymeNBULGTPTEIDatPDCP	ProtocolIE-ID		
id-lCID	ProtocolIE-ID		
id-duplicationActivation	ProtocolIE-ID		
id-ECGI	ProtocolIE-ID		
id-RLCMode-transferred	ProtocolIE-ID		
id-E-RABs-Admitted-ToBeReleased-SgNBRelReqAckList	ProtocolIE-ID		
id-E-RABs-Admitted-ToBeReleased-SgNBRelReqAck-Item	ProtocolIE-ID		
id-E-RABs-ToBeReleased-SgNBRelReqdList	ProtocolIE-ID		
id-E-RABs-ToBeReleased-SgNBRelReqd-Item	ProtocolIE-ID		
id-NRCGI	ProtocolIE-ID		
id-MeNBCoordinationAssistanceInformation	ProtocolIE-ID		
id-SgNBCoordinationAssistanceInformation	ProtocolIE-ID		
id-new-drb-ID-req	ProtocolIE-ID		
id-endcSONConfigurationTransfer	ProtocolIE-ID		
id-NRNeighbourInfoToAdd	ProtocolIE-ID		
id-NRNeighbourInfoToModify	ProtocolIE-ID		
id-DesiredActNotificationLevel	ProtocolIE-ID		
id-LocationInformationSgNBReporting	ProtocolIE-ID		
id-LocationInformationSgNB	ProtocolIE-ID	::=	331

id-LastNG-RANPLMNIdentity	ProtocolIE-ID ::= 332
id-EUTRANTraceID	ProtocolIE-ID ::= 333
id-additionalPLMNs-Item	ProtocolIE-ID ::= 334
id-InterfaceInstanceIndication	ProtocolIE-ID ::= 335
id-BPLMN-ID-Info-EUTRA	ProtocolIE-ID ::= 336
id-BPLMN-ID-Info-NR	ProtocolIE-ID ::= 337
id-NBIoT-UL-DL-AlignmentOffset	ProtocolIE-ID ::= 338
id-ERABs-transferred-to-MeNB	ProtocolIE-ID ::= 339
id-AdditionalRRMPriorityIndex	ProtocolIE-ID ::= 340
id-LowerLayerPresenceStatusChange	ProtocolIE-ID ::= 341
id-FastMCGRecovery-SN-to-MN	ProtocolIE-ID ::= 342
id-RequestedFastMCGRecoveryViaSRB3	ProtocolIE-ID ::= 343
id-AvailableFastMCGRecoveryViaSRB3	ProtocolIE-ID ::= 344
id-RequestedFastMCGRecoveryViaSRB3Release	ProtocolIE-ID ::= 345
id-ReleaseFastMCGRecoveryViaSRB3	ProtocolIE-ID ::= 346
id-FastMCGRecovery-MN-to-SN	ProtocolIE-ID ::= 347
id-PartialListIndicator	ProtocolIE-ID ::= 348
id-MaximumCellListSize	ProtocolIE-ID ::= 349
id-MessageOversizeNotification	ProtocolIE-ID ::= 350
id-CellandCapacityAssistInfo	ProtocolIE-ID ::= 351
id-TNLConfigurationInfo	ProtocolIE-ID ::= 352
id-TNLA-To-Add-List	ProtocolIE-ID ::= 353
id-TNLA-To-Update-List	ProtocolIE-ID ::= 354
id-TNLA-To-Remove-List	ProtocolIE-ID ::= 355
id-TNLA-Setup-List	ProtocolIE-ID ::= 356
id-TNLA-Failed-To-Setup-List	ProtocolIE-ID ::= 357
id-UnlicensedSpectrumRestriction	ProtocolIE-ID ::= 358
id-UEContextReferenceatSourceNGRAN	ProtocolIE-ID ::= 359
id-EPCHandoverRestrictionListContainer	ProtocolIE-ID ::= 360
id-CHOinformation-REQ	ProtocolIE-ID ::= 361
id-CHOinformation-ACK	ProtocolIE-ID ::= 362
id-DAPSRequestInfo	ProtocolIE-ID ::= 363
id-RequestedTargetCellID	ProtocolIE-ID ::= 364
id-CandidateCellsToBeCancelledList	ProtocolIE-ID ::= 365
id-DAPSResponseInfo	ProtocolIE-ID ::= 366
id-ProcedureStage	ProtocolIE-ID ::= 367
id-CHO-DC-Indicator	ProtocolIE-ID ::= 368
id-Ethernet-Type	ProtocolIE-ID ::= 369
id-NRV2XServicesAuthorized	ProtocolIE-ID ::= 370
id-NRUESidelinkAggregateMaximumBitRate	ProtocolIE-ID ::= 371
id-PC5QoSParameters	ProtocolIE-ID ::= 372
id-NPRACHConfiguration	ProtocolIE-ID ::= 373
id-NBIoT-RLF-Report-Container	ProtocolIE-ID ::= 374
id-MDTConfigurationNR	ProtocolIE-ID ::= 375
id-PrivacyIndicator	ProtocolIE-ID ::= 376
id-TraceCollectionEntityIPAddress	ProtocolIE-ID ::= 377
id-UERadioCapabilityID 1	ProtocolIE-ID ::= 378
id-SNtriggered	ProtocolIE-ID ::= 379
id-CSI-RSTransmissionIndication	ProtocolIE-ID ::= 380
id-DLCarrierList	ProtocolIE-ID ::= 381
id-TargetCellInNGRAN	ProtocolIE-ID ::= 382
id-eNB-Measurement-ID-ENDC	ProtocolIE-ID ::= 383
id-engNB-Measurement-ID-ENDC	ProtocolIE-ID ::= 384
id-TDDULDLConfigurationCommonNR	ProtocolIE-ID ::= 385
	1100000112 12 303

```
id-CarrierList
                                                                             ProtocolIE-ID ::= 386
id-ULCarrierList
                                                                             ProtocolIE-ID ::= 387
id-FrequencyShift7p5khz
                                                                             ProtocolIE-ID ::= 388
id-SSB-PositionsInBurst
                                                                             ProtocolIE-ID ::= 389
id-NRCellPRACHConfig
                                                                             ProtocolIE-ID ::= 390
id-CellToReport-NR-ENDC
                                                                             ProtocolIE-ID ::= 391
id-CellToReport-NR-ENDC-Item
                                                                             ProtocolIE-ID ::= 392
id-CellMeasurementResult-NR-ENDC
                                                                             ProtocolIE-ID ::= 393
id-CellMeasurementResult-NR-ENDC-Item
                                                                             ProtocolIE-ID ::= 394
id-IABNodeIndication
                                                                             ProtocolIE-ID ::= 395
                                                                             ProtocolIE-ID ::= 396
id-QoS-Mapping-Information
id-F1CTrafficContainer
                                                                             ProtocolIE-ID ::= 397
id-IntendedTDD-DL-ULConfiguration-NR
                                                                             ProtocolIE-ID ::= 399
id-UERadioCapability
                                                                             ProtocolIE-ID ::= 400
id-CellMeasurementResult-E-UTRA-ENDC
                                                                             ProtocolIE-ID ::= 401
id-CellMeasurementResult-E-UTRA-ENDC-Item
                                                                             ProtocolIE-ID ::= 402
id-CellToReport-E-UTRA-ENDC
                                                                             ProtocolIE-ID ::= 403
id-CellToReport-E-UTRA-ENDC-Item
                                                                             ProtocolIE-ID ::= 404
id-TraceCollectionEntityURI
                                                                             ProtocolIE-ID ::= 405
id-SFN-Offset
                                                                             ProtocolIE-ID ::= 406
```

#### 9.3.8 Container definitions

END

-- ASN1STOP

```
-- ASN1START
__ *******************************
-- Container definitions
__ ********************
X2AP-Containers
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) x2ap (2) version1 (1) x2ap-Containers (5) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
    ****************
-- IE parameter types from other modules.
__ ********************
IMPORTS
   maxPrivateIEs,
  maxProtocolExtensions.
   maxProtocolIEs,
   Criticality,
```

```
Presence,
   PrivateIE-ID,
   ProtocolIE-ID
FROM X2AP-CommonDataTypes;
__ **********************
-- Class Definition for Protocol IEs
__ **********************
X2AP-PROTOCOL-IES ::= CLASS {
   &id
                ProtocolIE-ID
                                   UNIQUE,
   &criticality
                Criticality,
   &Value,
   &presence
                Presence
WITH SYNTAX {
                &id
   CRITICALITY
                &criticality
   TYPE
                &Value
   PRESENCE
                &presence
  *****************
-- Class Definition for Protocol IEs
__ ********************
X2AP-PROTOCOL-IES-PAIR ::= CLASS {
   &id
                      ProtocolIE-ID
                                       UNIQUE,
   &firstCriticality
                      Criticality,
   &FirstValue,
   &secondCriticality
                      Criticality,
   &SecondValue,
   &presence
                       Presence
WITH SYNTAX {
   ID
   FIRST CRITICALITY
                       &firstCriticality
   FIRST TYPE
                       &FirstValue
                       &secondCriticality
   SECOND CRITICALITY
                       &SecondValue
   SECOND TYPE
   PRESENCE
                       &presence
-- Class Definition for Protocol Extensions
__ ********************
X2AP-PROTOCOL-EXTENSION ::= CLASS {
```

```
&id
                    ProtocolIE-ID
                                     UNIQUE,
   &criticality
                    Criticality,
   &Extension,
   &presence
                    Presence
WITH SYNTAX {
                    &id
   TD
                    &criticality
   CRITICALITY
   EXTENSION
                    &Extension
   PRESENCE
                    &presence
  ****************
-- Class Definition for Private IEs
__ ******************
X2AP-PRIVATE-IES ::= CLASS {
   &id
                    PrivateIE-ID,
   &criticality
                    Criticality,
   &Value,
   &presence
                    Presence
WITH SYNTAX {
                    &id
   ID
   CRITICALITY
                    &criticality
   TYPE
                    &Value
   PRESENCE
                    &presence
  ******************
-- Container for Protocol IEs
ProtocolIE-Container {X2AP-PROTOCOL-IES : IEsSetParam} ::=
   SEQUENCE (SIZE (0..maxProtocolIEs)) OF
   ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-Single-Container {X2AP-PROTOCOL-IES : IEsSetParam} ::=
   ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-Field {X2AP-PROTOCOL-IES : IEsSetParam} ::= SEQUENCE {
                 X2AP-PROTOCOL-IES.&id
                                                    ({IEsSetParam}),
                                                    ({IEsSetParam}{@id}),
   criticality
                 X2AP-PROTOCOL-IES.&criticality
                 X2AP-PROTOCOL-IES.&Value
                                                    ({IEsSetParam}{@id})
   value
     *****************
-- Container for Protocol IE Pairs
```

```
__ **********************
ProtocolIE-ContainerPair {X2AP-PROTOCOL-IES-PAIR : IEsSetParam} ::=
   SEQUENCE (SIZE (0..maxProtocolIEs)) OF
   ProtocolIE-FieldPair {{IEsSetParam}}
ProtocolIE-FieldPair {X2AP-PROTOCOL-IES-PAIR : IESSetParam} ::= SEQUENCE
                   X2AP-PROTOCOL-IES-PAIR.&id
                                                          ({IEsSetParam}),
   firstCriticality X2AP-PROTOCOL-IES-PAIR.&firstCriticality
                                                          ({IEsSetParam}{@id}),
                 X2AP-PROTOCOL-IES-PAIR.&FirstValue
                                                          ({IEsSetParam}{@id}),
   firstValue
   secondCriticality X2AP-PROTOCOL-IES-PAIR.&secondCriticality
                                                         ({IEsSetParam}{@id}),
   secondValue
                   X2AP-PROTOCOL-IES-PAIR.&SecondValue
                                                          ({IEsSetParam}{@id})
  *****************
  Container Lists for Protocol IE Containers
  *****************
ProtocolIE-ContainerList {INTEGER : lowerBound, INTEGER : upperBound, X2AP-PROTOCOL-IES : IESSetParam} ::=
   SEQUENCE (SIZE (lowerBound..upperBound)) OF
   ProtocolIE-Container {{IEsSetParam}}
ProtocolIE-ContainerPairList {INTEGER : lowerBound, INTEGER : upperBound, X2AP-PROTOCOL-IES-PAIR : IESSetParam} ::=
   SEQUENCE (SIZE (lowerBound..upperBound)) OF
   ProtocolIE-ContainerPair {{IEsSetParam}}
__ *********************
  Container for Protocol Extensions
        *************
ProtocolExtensionContainer {X2AP-PROTOCOL-EXTENSION : ExtensionSetParam} ::=
   SEQUENCE (SIZE (1..maxProtocolExtensions)) OF
   ProtocolExtensionField {{ExtensionSetParam}}
ProtocolExtensionField {X2AP-PROTOCOL-EXTENSION : ExtensionSetParam} ::= SEQUENCE {
   id
                   X2AP-PROTOCOL-EXTENSION.&id
                                                      ({ExtensionSetParam}),
                                                      ({ExtensionSetParam}{@id}),
   criticality
                    X2AP-PROTOCOL-EXTENSION.&criticality
                                                      ({ExtensionSetParam}{@id})
   extensionValue
                   X2AP-PROTOCOL-EXTENSION. & Extension
    *****************
  Container for Private IEs
  PrivateIE-Container {X2AP-PRIVATE-IES : IEsSetParam} ::=
   SEQUENCE (SIZE (1..maxPrivateIEs)) OF
   PrivateIE-Field {{IEsSetParam}}
```

### 9.4 Message transfer syntax

X2AP shall use the ASN.1 Basic Packed Encoding Rules (BASIC-PER) Aligned Variant as transfer syntax, as specified in ITU-T Rec. X.691 [5].

#### 9.5 Timers

#### $T_{RELOCprep}$

- Specifies the maximum time for the Handover Preparation procedure in the source eNB.

#### $TX2_{RELOCoverall} \\$

- Specifies the maximum time for the protection of the overall handover procedure in the source eNB.

#### $T_{DCprep}$

 Specifies the maximum time for the SeNB Addition Preparation, MeNB initiated SeNB Modification Preparation, SgNB Addition Preparation, or MeNB initiated SgNB Modification Preparation procedure in the MeNB.

#### $T_{DCoverall} \\$

Specifies the maximum time in the SeNB for either the SeNB initiated SeNB Modification procedure or the
protection of the E-UTRAN actions necessary to configure UE resources at SeNB Addition or MeNB initiated
SeNB Modification. Or specifies the maximum time in the SgNB for either the SgNB initiated SgNB
Modification procedure or the protection of the E-UTRAN actions necessary to configure UE resources at SgNB
Addition or MeNB initiated SgNB Modification.

## Handling of unknown, unforeseen and erroneous protocol data

Section 10 of TS 36.413 [4] is applicable for the purposes of the present document.

# Annex A (informative): Change history

TSG#	TSG Doc.	CR	Rev	Subject/Comment	New
09/2009				Rel-9 version is created based on v.8.7.0	9.0.0
45	RP-090787	0296	1	Handling of Emergency Calls in Limited Service Mode	9.0.0
45	RP-090787	0297	1	Emergency Calls Mobility Handling	9.0.0
46	RP-091192	0307		Introduction of signalling support for Composite Available Capacity with	9.1.0
				relative units	
46	RP-091192	0308	2	Configuration adaptation for MLB on X2	9.1.0
46	RP-091183	0310		Clarification on operational use of updated configuration data	9.1.0
46	RP-091192	0317		Automatic PRACH information exchange over X2 for SON	9.1.0
46	RP-091192	0333		Introduction of Radio Link Failure Indication procedure	9.1.0
46	RP-091192	0334		Introduction of Handover Report procedure	9.1.0
46	RP-091192	0335		Introduction of signalling support for Composite Available Capacity with	9.1.0
10	141 001102	0000		relative units	0.1.0
47	RP-100213	0337		Correction to the Resource Status Reporting Initiation procedure	9.2.0
47	RP-100229		2	Addition of MBSFN information on X2 interface	9.2.0
47	RP-100228	0344		Cell pair identification for Mobility Settings Change procedure	9.2.0
47	RP-100223	0352	4	Addition of cause value for not admitted E-RAB	9.2.0
47	RP-100213	0355	1	Rapporteur's update of X2AP protocol	9.2.0
47	RP-100229	0356		RNL-based energy saving solution	9.2.0
47	RP-100228	0358		Inclusion of UE RLF Report in RLF INDICATION message	9.2.0
48	RP-100599	0363		Correction of RLF INDICATION message	9.3.0
48	RP-100599	0364		Missing error cause for Not supported QCI on Handover	9.3.0
48	RP-100599	0370	1	Introduction of PLMN-related abnormal conditions during X2 handover in	9.3.0
			_	network sharing scenarios.	
48	RP-100599	0372		Outcome of RAN3#68 review of X2AP	9.3.0
48	RP-100599	0373		Correction of forbidden inter-RAT	9.3.0
49	RP-100908	0376		Explicit PLMN coding in Trace IEs	9.4.0
49	RP-100906	0380		The corrections for Last Visited Cell Information	9.4.0
49	RP-100906	0383		Handover Restriction List	9.4.0
49	RP-100908	0384	1	Complete list of served cells to be provided in X2 SETUP and eNB	9.4.0
				Configuration Update messages	
50	RP-101271	0385		Clarification on Handover Restriction List	9.5.0
50	RP-101270	0403	3	Correction of semantics description	9.5.0
12/2010				Rel-10 version created based in v. 9.5.0	10.0.0
50	RP-101304	0393	2	Introduction of partial failure in Resource Status Reporting Initiation	10.0.0
				procedure including detailed reporting of failure cause	
50	RP-101279	0407	4	X2 handover support	10.0.0
SP-49	SP-100629			Clarification on the use of References (TS 21.801 CR#0030)	10.1.0
51	RP-110231	0408		Conditions for Enhanced X2 mobility	10.1.0
51	RP-110237	0409		Introduction of X2 signalling support for eICIC	10.1.0
51		0411	1	Correction of the usage of optional ShortMAC-I IE in RLF INDICATION	10.1.0
				message	
51	RP-110230	0413	2	Support for MDT	10.1.0
51		0419	2	Clarification on TEID value range for X2AP	10.1.0
51	RP-110231	0420		Clarify X2 Handover Scenarios	10.1.0
51	RP-110237	0427	1	Enabling reporting of ABS resource status for elCIC purposes	10.1.0
52	RP-110695	0435		MDT correction for TAI	10.2.0
52	RP-110698	0436		Clarification on Radio Resource Status	10.2.0
52	RP-110700	0443		X2 support of RLF Report extension for SON MRO defined in R10	10.2.0
52	RP-110695	0447		Support for MDT user consent	10.2.0
52	RP-110695		2	Rapporteur's proposal following review of TS 36.423	10.2.0
52	RP-110689	0451		Correction of the partial success mechanism in Resource Status	10.2.0
32	KF-110009	0432			10.2.0
	DD 440605	0453	2	Reporting MDT amendments	10.2.0
F2		10453	_	Reference review outcome in TS 36.423	10.2.0
52	RP-110695				10.2.0
52	RP-110685	0454			4000
52 52	RP-110685 RP-110695	0454 0456	0	Correction of trace function and trace session	10.2.0
52 52 53	RP-110685 RP-110695 RP-111196	0454 0456 0464		Correction of trace function and trace session Clarification of procedures defined for MLB purposes	10.3.0
52 52 53 53	RP-110685 RP-110695 RP-111196 RP-111196	0454 0456 0464 0469	1	Correction of trace function and trace session Clarification of procedures defined for MLB purposes ASN.1 definition conforms to ITU-T Recommendations	10.3.0 10.3.0
52 52 53 53 53	RP-110685 RP-110695 RP-111196 RP-111194	0454 0456 0464 0469 0476	1 2	Correction of trace function and trace session Clarification of procedures defined for MLB purposes ASN.1 definition conforms to ITU-T Recommendations Updates of reported quantities for eICIC	10.3.0 10.3.0 10.3.0
52 52 53 53 53 53	RP-110685 RP-110695 RP-111196 RP-111194 RP-111195	0454 0456 0464 0469	1 2	Correction of trace function and trace session Clarification of procedures defined for MLB purposes ASN.1 definition conforms to ITU-T Recommendations Updates of reported quantities for eICIC Definition of value of bit in Measurements to Activate	10.3.0 10.3.0 10.3.0 10.3.0
52 52 53 53 53	RP-110685 RP-110695 RP-111196 RP-111194	0454 0456 0464 0469 0476	1 2	Correction of trace function and trace session Clarification of procedures defined for MLB purposes ASN.1 definition conforms to ITU-T Recommendations Updates of reported quantities for eICIC	10.3.0 10.3.0 10.3.0
52 52 53 53 53 53	RP-110685 RP-110695 RP-111196 RP-111194 RP-111195	0454 0456 0464 0469 0476 0478	1 2 1	Correction of trace function and trace session Clarification of procedures defined for MLB purposes ASN.1 definition conforms to ITU-T Recommendations Updates of reported quantities for eICIC Definition of value of bit in Measurements to Activate	10.3.0 10.3.0 10.3.0 10.3.0
52 52 53 53 53 53 53	RP-110685 RP-110695 RP-111196 RP-111196 RP-111194 RP-111195 RP-111197	0454 0456 0464 0469 0476 0478 0479	1 2 1	Correction of trace function and trace session Clarification of procedures defined for MLB purposes ASN.1 definition conforms to ITU-T Recommendations Updates of reported quantities for elCIC Definition of value of bit in Measurements to Activate Clarification on PLMN Identity	10.3.0 10.3.0 10.3.0 10.3.0 10.3.0

55	RP-120236	0487	1	Addition of TAC to the neighbour information of a served cell for X2 setup and eNB update procedures	11.0.0
56	RP-120751	0496	  -	Introduction of the Security Algorithm (ZUC)	11.1.0
56	RP-120751	0498	2	Clarification on TAC in X2 Setup	11.1.0
56	RP-120751		3	Adding RRC re-establishment cause to RLF indication	11.1.0
56	RP-120752	1	1	Correction on Emergency ARP Value	11.1.0
56	RP-120752	0516		Improved granularity for the time UE stayed in cell	11.1.0
57	RP-121137		2	Support of MBMS Service Continuity	11.2.0
57	RP-121140	0527	3	Multiband support per cell	11.2.0
57	RP-121135	0540	1	Enhancement of HO REPORT to enable inter-RAT ping-pong detection and addition of HO cause value to the UE history information	11.2.0
57	RP-121139	0546		Support for new special subframe configurations	11.2.0
58	RP-121731	0548		Addition of Mobility Information	11.3.0
58	RP-121730	0549	3	Introduction of new MDT measurements	11.3.0
58	RP-121732	0550	1	HeNB Mobility enhancement when target is hybrid HeNB	11.3.0
58	RP-121730	0552	2	Multi-PLMN MDT	11.3.0
58	RP-121731	0564		Clarification on successful handover for HO report procedure	11.3.0
58	RP-121737	0569	2	X2AP Rapporteur Update	11.3.0
59	RP-130208	0572	3	Correction on the Special Subframe Pattern	11.4.0
59	RP-130208	0580	2	Support for Downlink-Only Bands	11.4.0
59	RP-130207	0581		Correction on use of Mobility Information	11.4.0
59	RP-130207		1	Correction on MRO procedures	11.4.0
59	RP-130237		2	Extending maxEARFCN	11.4.0
59	RP-130237		1	Extending Maximum Frequency Band Index	11.4.0
59	RP-130211		1	Rapporteur correction of X2AP	11.4.0
59	RP-130207	0586		Clarification on Signalling Based MDT PLMN List	11.4.0
59	RP-130210		1	X2AP modification for PDCP SN extension	11.4.0
60	RP-130643	0588		Correction on the Definition of Direct Neighbours	11.5.0
60	RP-130641		1	Correction for the MDT Location Information IE	11.5.0
60	RP-130640		5	Correction on RLF INDICATION procedure	11.5.0
60	RP-130643		1	Security key generation in case of MFBI	11.5.0
60	RP-130643	0593	+	Correction on the Multiple Frequency Band Indicators	11.5.0
61	RP-131181		1	Correction on Handover Report procedure	11.6.0
61	RP-131179		2	Correction on ABS Information	11.6.0
61 62	RP-131183		1	Correction of terminology concerning the mobility restriction function	11.6.0
62	RP-131902		3	Correction of Handover Restriction List	11.7.0
62	RP-131902 RP-131902	0611 0623	2	Correction for Load Balancing Related cause value CR for 36423  Correction for Load Balancing Related IE	11.7.0 12.0.0
62	RP-131902		3	Handling SIPTO@LN during UE Context Release procedure	12.0.0
63	RP-140294	0634	3	Correction to tabular of Served Cell Information IE	12.1.0
64	RP-140901	0629	1	TDD eIMTA support on X2AP	12.2.0
64	RP-140906	0630		Provide IMEISV to eNB to identify UE characteristics	12.2.0
64	RP-140905		1	Correction of SN STATUS TRANSFER	12.2.0
64	RP-140905	0676	1	Clarification of DL ABS status	12.2.0
64	RP-140897		4	Introduce X2GW procedures in Stage-3	12.2.0
65	RP-141520	0663		Introduction of the UE history reported from the UE	12.3.0
65	RP-141518	0690		Introduction of an indication of the expected UE behaviour	12.3.0
66	RP-142089		8	Introduction of Dual Connectivity	12.4.0
66	RP-142090		10	Introduction of inter-eNB CoMP signalling	12.4.0
66	RP-142092		5	X2 support for Network Assisted Interference Cancellation	12,4.0
66	RP-142094		2	X2AP Rapporteur Update	12.4.0
66	RP-142094	0759		Correction on RLF Report Container	12.4.0
66	RP-142094	0776		Setting of Re-establishment Cell ID in RLF Indication message	12.4.0
66	RP-142094	0777	3	X2 Removal Signaling	12.4.0
12/2014				History table corrected	12.4.1
12/2014				ASN.1 correction to make it compilable	12.4.2
67	RP-150353	0693	5	ProSe authorized indication	12.5.0
67	RP-150351		1	Corrections on the usage of SeNB UE AMBR in dual connectivity	12.5.0
67	RP-150351	0790		Corrections of Dual Connectivity in general	12.5.0
67	RP-150356	0797	1	Correction on DC stage3	12.5.0
67	RP-150348		1	Correction of the Usage of the MultibandInfoList IE	12.5.0
67	RP-150351	0802		Introduction of Cause values for Dual Connectivity	12.5.0
67	RP-150356	0803		ASN.1 Corrections for X2AP	12.5.0
67	RP-150351	0804	2	Corrections for Dual Connectivity	12.5.0

67	RP-150356	0805		Miscellaneous Editorials for X2AP	12.5.0
67	RP-150351	0806	1	Correction on SeNB behaviour for distinguishing uplink PDCP PDUs	12.5.0
68	RP-150943		1	Correction on the definition of SeNB Reconfiguration Complete	12.6.0
68	RP-150943	0827	1	Introduction of a new DC cause for not supported configurations	12.6.0
68	RP-150943	0831		Clarification on UE-AMBR for split bearer	12.6.0
06/2015				Rel-13 version created based in v. 12.6.0	13.0.0
68	RP-150945	0808	8	Addition of Intra-LTE notifications of AAS-based reconfigurations	13.0.0
69	RP-151455	0788		Introduction of enhanced inter-eNB CoMP signalling	13.1.0
69	RP-151451	0854	1	Correction on GBR parameters for dual connectivity	13.1.0
69	RP-151450	0877	1	Handling of Unknown or Erroneous AP IDs in Dual Connectivity	13.1.0
70	RP-152100	0850	5	UE-to-Network Relay authorization	13.2.0
70	RP-152099	0892	2	Extension of PDCP SN	13.2.0
70	RP-152102	0901	4	Adding CSG support to DC	13.2.0
70	RP-152086	0907	_	Correction on inter eNB CoMP	13.2.0
70	RP-152102	0910	5	Support of SIPTO stand-alone architecture in dual connectivity	13.2.0
70	RP-152102	0911	2	Support of SIPTO and LIPA in dual connectivity	13.2.0
70	RP-152102	0912	6	Support of Sir 10 and Ein A in dual connectivity  Support of handover without SeNB change	13.2.0
70	RP-152102	0916		Handling of User Inactivity in the SeNB	13.2.0
70	RP-152086	0918		Correction of Subband Index	13.2.0
70	RP-152085	0924	1	Correction of Subbaria maex  Correction of intra cell handovers in multiband deployments	13.2.0
70	RP-152102	0927	2	Extension of UE X2AP ID	13.2.0
70	RP-152102	0929	2	SIPTO@LN and LIPA bearer deactivation for DC	13.2.0
70	RP-152103	0932	3	Introduction of feMDT	13.2.0
70	RP-152108	0932	2	Addition of the Cell Deployment Status Indicator and replacing cell	13.2.0
70	KF-132106	0930	_	information	13.2.0
70	RP-152102	0939	1	Tunnel Information of BBAI in Dual Connectivity	13.2.0
71	RP-160449	0937	3	Addition of X2 Removal Threshold to the X2 Removal Request message	13.3.0
71	RP-160449	0949	2	Modification of an ongoing resource reporting procedure	13.3.0
71	RP-160448	0950	1	Correction on SeNB Addition Preparation concerning inter-MeNB	13.3.0
	100440	0000	'	handover without SeNB change	10.0.0
71	RP-160448	0953	1	Correction on usage of extended eNB UE X2AP ID	13.3.0
71	RP-160448	0954	<u> </u>	Correction for SeNB Addition behaviour Abnormal	13.3.0
71	RP-160451	0959		Clarification on the abnormal condition for DC SIPTO@LN	13.3.0
71	RP-160449	0962	1	Rapporteur's Update	13.3.0
71	RP-160448	0963	3	Correction on Old/New eNB UE X2AP ID	13.3.0
72	RP-161042	0965	7	Introduction of the inter-eNB UE Context Resume function	13.4.0
72	RP-161043	0968	1	Correction on the DC function description	13.4.0
72	RP-161043	0969		Correction on eNB UE X2AP ID Extension	13.4.0
72	RP-161043	0909	2	Indication of Bearer Type for cIOT	13.4.0
72	RP-161043	0978		Correction of RSRP Measurement Report List	13.4.0
73	RP-161551	0989	1	Correction on NB-IoT inter node RRC container	13.4.0
73	RP-161550	0998		Correction on Security Related Information in UE Context Retrieval	13.5.0
73	KF-101550	0990	_	Request	13.5.0
09/2016		<del>                                     </del>	1	Rel-14 version created based in v. 13.5.0	14.0.0
73	RP-161552	0975	5	Vehicular Authorization Signaling over X2	14.0.0
74	RP-162337	1007	-	Clarification on V2X Services Authorized IE	14.0.0
74	RP-162340	1007	3	Target cell selection for low complexity UEs and UEs in enhanced	14.1.0
	102340	1008	٦	coverage	14.1.0
74	RP-162340	1011	<u> </u>	Correction to Served Cell Information for NB-IoT	14.1.0
	111-102340	1011	1-	Concount to derved dell'illionnation for ND-101	I <del>T</del> . I .U

						Change history	
Date	Meeting	TDoc	CR	Rev	Cat	Subject/Comment	New version
03/2017	RP-75	RP-170535	1023		В	X2AP Support for Inter-eNB Mobility without WT Change	14.2.0
03/2017	RP-75	RP-170537	1005	3	В	Introduction of a new special subframe configuration	14.2.0
03/2017	RP-75	RP-170538	1025		В	Support of V2X over X2	14.2.0
03/2017	RP-75	RP-170542	1026		В	Introduction of New types of eNB ID	14.2.0
03/2017	RP-75	RP-170536	1024	1	В	Introduction of eMOB Stage3	14.2.0
06/2017 09/2017	RP-75 RP-77	RP-171329 RP-171974	1033	1	A F	Introduction of UL TNL address in CloT UP Solution	14.3.0
09/2017	RP-77	RP-171974	1035 1037	1	F	Correction on NB-IoT UP mobility  Correction of SeNB Release Confirm	14.4.0
12/2017	RP-78	RP-172673	1044	2	F	Introduction of new IEs in X2 for high performing load balance	14.5.0
12/2017	RP-78	RP-172715	1046	-	F	Correction of mismatched tabular and ASN.1	14.5.0
12/2017	RP-78	RP-172672	1041	6	В	Baseline CR to TS 36.423 covering agreements of RAN3 #98	15.0.0
12/2017	RP-78	RP-172674	1045	1	В	Introduction of QoE Measurement Collection for LTE	15.0.0
03/2018	RP-79	RP-180468	1050	-	В	X2AP corrections for agreed EN-DC BL CR	15.1.0
03/2018	RP-79	RP-180468	1051	1	F	Essential corrections for EN-DC	15.1.0
03/2018	RP-79	RP-180468	1052	1	<u>_F</u>	Clarification on HRL for EN-DC	15.1.0
03/2018 03/2018	RP-79 RP-79	RP-180468 RP-180468	1053 1054	-	F B	Correction of counter Check procedure for EN-DC Support for supplementary UL carrier	15.1.0 15.1.0
03/2018	RP-79	RP-180468	1054	-	F	Correction on SgNB initiated SgNB Modification procedure	15.1.0
03/2018	RP-79	RP-180468	1061	1	F	Correction of mandatory/optional/Conditional IEs in 36.423	15.1.0
03/2018	RP-79	RP-180468	1067	2		Support for S-RLF	15.1.0
03/2018	RP-79	RP-180468	1071	2	F	Update of EN-DC X2 Setup and EN-DC Configuration Update	15.1.0
03/2018	RP-79	RP-180468	1073	-	F	Removal of wrong abnormal behaviour that does not exist in EN-DC	15.1.0
03/2018	RP-79	RP-180468	1078	1		CR for addition of cause	15.1.0
03/2018	RP-79	RP-180468	1079	2	F	Clarification and correction on X2 for EN-DC	15.1.0
03/2018	RP-79	RP-180468	1081	1	F	Corrections for EN-DC	15.1.0
03/2018 03/2018	RP-79 RP-79	RP-180468 RP-180468	1082 1083	1	F F	Resolve the remaining issues over X2 for EN-DC Introduction of DRB ID for EN-DC	15.1.0 15.1.0
03/2018	RP-79 RP-79	RP-180468 RP-180314	1083	1	F	Removing data forwarding from the corresponding node for EN-DC	15.1.0
03/2018	RP-79	RP-180472	1092	1	F	Rapporteur correction of 36.423 before NSA ASN.1 freeze	15.1.0
03/2018	RP-79	RP-180473	1093	-	A	Correction on Offset of NB-IoT Channel Number to EARFCN	15.1.0
03/2018	RP-79	RP-180468	1094	-	F	Correction of TAC for NG-RAN cells before NSA ASN.1 freeze	15.1.0
03/2018	RP-79	RP-180468	1095	-	F	Remove PDCP change indication in SN modification request	15.1.0
03/2018	RP-79	RP-180468	1096	-	F	message Change the presence of container in SgNB reconfiguration complete procedure	15.1.0
03/2018	RP-79	RP-180468	1097	_	F	Addition of Measurement Timing Configuration information	15.1.0
06/2018	RP-80	RP-181241	1047	6	В	Support of Enhanced VoLTE Performance	15.2.0
06/2018	RP-80	RP-181239	1065	4	F	X2 partial reset for EN-DC	15.2.0
06/2018	RP-80	RP-181238	1068	1	F	Clarification of the interactions with the UE Context Release	15.2.0
06/2018	RP-80	RP-181241	1086	3	С	Introduction of QMC for MTSI in EUTRAN	15.2.0
06/2018	RP-80	RP-181237	1090	9	B F	Baseline CR for E-UTRA - NR Cell Resource Coordination for TS 36.423 covering agreements of RAN3#100  Correction of UL link configuration in TS36.423	15.2.0
06/2018	RP-80 RP-80	RP-181238 RP-181410	1104 1107	-	F	Addition of the full config indicator	15.2.0 15.2.0
06/2018	RP-80	RP-181239	1116	1	F	Correction of the SeNB Reconfiguration Completion procedure	15.2.0
06/2018	RP-80	RP-181239	1117	2	F	Correction of abnormal conditions for EN-DC security algorithm selection	15.2.0
06/2018	RP-80	RP-181238	1121	1	F	Correction of reference in RRC Container	15.2.0
06/2018	RP-80	RP-181238	1122	-	F	Correction of condition presence of E-RAB Level QoS Parameters related	15.2.0
06/2018	RP-80	RP-181238	1123	1	<u></u>	Support of TEID change at SN	15.2.0
06/2018	RP-80	RP-181237	1125	4	B F	X2AP CR for support of NR Multiple frequency band in EN-DC	15.2.0
06/2018 06/2018	RP-80 RP-80	RP-181238 RP-181243	1130 1132	3	<u>- F</u> В	Correction of max NR ARFCN value Baseline CR: Introduction of the Aerial Usage Indication	15.2.0 15.2.0
06/2018	RP-80	RP-181238	1133	1	F	Use of SPID for EN-DC	15.2.0
06/2018	RP-80	RP-181238	1134	1	F	Correction of references to RRC containers for EN-DC	15.2.0
06/2018	RP-80	RP-181238	1135	-	F	Corrections on Tabular indentation and ASN.1 criticality	15.2.0
06/2018	RP-80	RP-181239	1138	-	F	Adding missing relation for the TEID	15.2.0
06/2018	RP-80	RP-181241	1142	3	В	Retrieve UE Context at UE Re-establishment	15.2.0
06/2018	RP-80	RP-181241	1143	-	D	Rapporteur's corrections on the specification	15.2.0
06/2018	RP-80	RP-181239	1145	-	F	Correction on the same terminology of "Split SRB" in TS36.423	15.2.0
06/2018 06/2018	RP-80 RP-80	RP-181239 RP-181239	1146 1149	3	F F	Correction of Split SRB configuration in TS36.423 CR for Clarification on resource coordination	15.2.0
06/2018	RP-80	RP-181239 RP-181239	1152	3	F	Correction for PDCP Duplication	15.2.0 15.2.0
06/2018	RP-80	RP-181239	1153	_	F	Coordination of Inactivity for EN-DC	15.2.0
06/2018	RP-80	RP-181239	1155	_	C	Introduction of CN type restriction	15.2.0
06/2018	RP-80	RP-181239	1158	-	F	User Inactivity handling over X2 EN-DC	15.2.0
06/2018	RP-80	RP-181239	1160	1	F	Addition of Cause Value	15.2.0
06/2018	RP-80	RP-181239	1161	2	F	Addition of MeNB cell ID to solve the PCI confusion	15.2.0

			1			I	
06/2018	RP-80		1164	-	<u> F</u>	Corrections on misalignment between tabular and ASN.1	15.2.0
06/2018	RP-80	RP-181239	1165	1	F	Introduction of EN-DC X2 removal procedure	15.2.0
06/2018	RP-80	RP-181239	1167	-	F	Support of DL TEID change over S1 at SN	15.2.0
06/2018	RP-80	RP-181242	1174	2	В	Support of NB-IoT measurement enhancement and TDD Config	15.2.0
06/2018	RP-80	RP-181239	1175	-	F	ASN.1 correction for EN-DC support in TS 36.423	15.2.0
06/2018	RP-80	RP-181239	1176	1	F	Introduction of a Configured TAC into the NR Neighbour Information	15.2.0
						IE and the Served NR Cell Information IE	
06/2018	RP-80	RP-181239	1178	-	F	Correction of the Limited List IE encoding to enable extensibility	15.2.0
09/2018	RP-81	RP-181920	1115	4	F	Indication of the RLC re-establishment at the assisting node	15.3.0
09/2018	RP-81	RP-181920	1190	_	F	Addition of RRC config indication to SGNB MODIFICATION	15.3.0
00,20.0		1 10.1020			•	REQUIRED and SGNB MODIFICATION REQUEST	
						ACKNOWLEDGE	
09/2018	RP-81	RP-181920	1191	2	F	Clarification on secondary RAT data volume reporting	15.3.0
	RP-81		1192	1	F		
09/2018		RP-181920			F	Essential corrections for EN-DC	15.3.0
09/2018	RP-81	RP-181920	1193	1		Corrections on EN-DC Resource Configuration	15.3.0
09/2018	RP-81	RP-181921	1196	3	F	Notification of PDCP SN length change	15.3.0
09/2018	RP-81	RP-181920	1198	1	F	Corrections on E-UTRA – NR Cell Resource Coordination	15.3.0
09/2018	RP-81	RP-181921	1201	2	F	RLC Mode Indication over X2 – for 36.423	15.3.0
09/2018	RP-81	RP-181922	1202	4	F	Baseline CR for TS 36.423 covering agreements of RAN3#AH1807	15.3.0
						and RAN3#101	
09/2018	RP-81	RP-181921	1203	2	F	Correction of "Maximum MCG admittable E-RAB Level QoS	15.3.0
						Parameters"	
09/2018	RP-81	RP-181921	1206	_	F	X2 Corrections for EN-DC	15.3.0
09/2018	RP-81	RP-181921	1211	1	F	Access Restriction Data for NR in EPC	15.3.0
09/2018	RP-81	RP-181921	1211	2	C	Extension of Data Traffic Resources IE for E-UTRA-NR Cell	15.3.0
09/2018	RP-81	RP-181921	1214		C		15.3.0
00/00:5	DD 61	DD 101551	401=			Resource Coordination	45.0.0
09/2018	RP-81	RP-181921	1217	-	F	Correction of 5GS TAC	15.3.0
09/2018	RP-81	RP-181921	1221	1	F	CR on clarification of successfully delivered for NR-U	15.3.0
09/2018	RP-81	RP-181923	1226	3	F	Data forwarding for Retrieve UE Context in case of RRC connection	15.3.0
						re-establishment	
09/2018	RP-81	RP-181924	1231	1	F	CR to X2AP to introduce Bluetooth and WLAN measurement	15.3.0
						in MDT	
09/2018	RP-81	RP-182127	1233	4	В		15.3.0
				4		Introduction of Subscription based UE differentiation	
09/2018	RP-81	RP-181921	1235	-	F	Correction of SgNB Activity Notification Procedure	15.3.0
12/2018	RP-82	RP-182447	1237	4	F	Addition of the RLC Mode information for PDCP transfer	15.4.0
12/2018	RP-82	RP-182446	1243	3	F	Correction on PDCP SN length	15.4.0
12/2018	RP-82	RP-182447	1244	2	F	Support of CA based PDCP duplication on X2	15.4.0
12/2018	RP-82	RP-182446	1245	1	F	CR on Introduction of overload indication over X2	15.4.0
12/2018	RP-82	RP-182447	1246	1	F	CR on alingment of terminology for eNB or MeNB	15.4.0
12/2018	RP-82	RP-182446	1247	1	F	Correction of SgNB Initiated SN Modification procedure for	15.4.0
12/2016	KF-02	KF-102440	1247	1	Г		13.4.0
40/0040	DD 00	DD 400440	4040			Measurement Gap	45.40
12/2018	RP-82	RP-182446	1248	-	F	ASN.1 corrections on NRNeighbour-Information IE and NRFreqInfo	15.4.0
						IE	
12/2018	RP-82	RP-182446	1250	-	F	Correction on E-UTRA - NR resource coordination	15.4.0
12/2018	RP-82	RP-182447	1253	3	F	Corrections of MeNB/SgNB resource coordination	15.4.0
12/2018	RP-82	RP-182446	1256	1	F	Correction on SGNB ACTIVITY NOTIFICATION IE's	15.4.0
12/2018	RP-82	RP-182447	1259	1	F	Correction of PDCP SN Length Indication	15.4.0
12/2018	RP-82	RP-182447	1264	2	F	RLC reestablishment indication for TS36.423	15.4.0
12/2018	RP-82	RP-182504	1267	1	F	Update on Retrieve UE Context Request message for TS36.423	15.4.0
12/2018	RP-82	RP-182447	1272	1	F	Handling of RLC failure	15.4.0
12/2018	RP-82	RP-182447	1273	-	F	Add missing description on non-operational X2 interface for EN-DC	15.4.0
				-			
12/2018	RP-82	RP-182447	1275	2	F	Further corrections of MeNB/SgNB resource coordination	15.4.0
12/2018	RP-82	RP-182447	1279	1	F	Criticality Correction for X2AP UE-ID	15.4.0
12/2018	RP-82	RP-182437	1280	2	F	Allowing SgNB to request new DRB ID from MeNB in EN-DC for an	15.4.0
						already established SN terminated bearer	
03/2019	RP-83	RP-190555	1282	3	F	Correction to RRC transfer	15.5.0
03/2019	RP-83	RP-190555	1283	2	F	Transfer of the PSCell information for LI purposes	15.5.0
03/2019	RP-83	RP-190555	1285	-	F	Enabling using Dual Connectivity cause values in EN-DC	15.5.0
03/2019	RP-83	RP-190555	1287	1	F	Desired Activity Notification Level	15.5.0
03/2019	RP-83	RP-190555	1291		F	Introduction of IMEISV to Addition Request over X2	15.5.0
03/2019	RP-83	RP-190555	1292	1	F	Clarification on the usage of coordination assistance information	15.5.0
				1	F		
03/2019	RP-83	RP-190556	1297	1		Introducing NR Neighbour information in X2 Setup	15.5.0
03/2019	RP-83	RP-190555	1298	-	<u></u>	Rapporteur updates on version 15.4.0	15.5.0
03/2019	RP-83	RP-190523	1300	3	F	Adding Trace Messages in X2AP	15.5.0
03/2019	RP-83	RP-190556	1301	1	F	Correction of EPC interworking	15.5.0
03/2019	RP-83	RP-190555	1302	-	F	Straighten-up SgNB's request to release and add the same SN-	15.5.0
			1			terminated bearer with different DRB ID	
03/2019	RP-83	RP-190561	1304	1	F	Introduction of TNL Address discovery for EN-DC (using new	15.5.0
						container)	
2019-07	RP-84	RP-191395	1299	2	F	Correction of MaxnoofBPLMNs for NR	15.6.0
2019-07	RP-84	RP-191395	1307	1	F	RRC config indication behaviour	15.6.0
2019-07	RP-84	RP-191395	1308		F	Transferring of NR RRC message in MeNB	15.6.0
ZU13-U1	115-04	171 - 191999	1300		-	Transioning of the telegrape in Memb	10.0.0

2019-07	RP-84	RP-191396	1313	1	F	PDCP SN length related clean-up over To Be Mofidified structure in	15.6.0
						SN initiated SN Modification procedure	
2019-07	RP-84	RP-191429	1314	5	F	RAN sharing with multiple Cell ID broadcast	15.6.0
2019-07 2019-07	RP-84 RP-84	RP-191395 RP-191395	1315 1316	2	F F	SN Status Transfer applicability for Re-establishment Rapporteur's corrections to version 15.5.0	15.6.0 15.6.0
2019-07	RP-84	RP-191395 RP-191397	1317	1	F	Correction of Core Network Type Restriction	15.6.0
2019-07	RP-84	RP-191397	1318	- 1	F	CR36423 for Addition of MN (MeNB) cell ID to solve the PCI	15.6.0
2013-01	111 -04	1(1-191090	1310	_	•	confusion in SN(SgNB) modification Request message	13.0.0
2019-07	RP-84	RP-191395	1321	1	F	Updates on TS 36.423 for EN-DC TNL Address discovery	15.6.0
2019-07	RP-84	RP-191394	1330	1	F	PDCP SN length related clean-up over To Be Modified structure in	15.6.0
						MN initiated SN Modification procedure	
2019-09	RP-85	RP-192166	1322	2	F	Correction of handling of the Location Information at the MeNB	15.7.0
2019-09	RP-85	RP-192169	1336	-	F	Correction on Data Forwarding Address Indication	15.7.0
2019-09	RP-85	RP-192170	1339	1	Α	Correction on Handover Request Acknowledge	15.7.0
2019-09	RP-85	RP-192169	1341	1	F	Correction of NB-IoT TDD Cell Frequency info	15.7.0
2019-09	RP-85	RP-192169	1359	1	F	Non IP bearer support for Dual Connectivity	15.7.0
2019-12	RP-86	RP-192916	1346	3	F	Critical correction to the presence of the SgNB UE X2AP ID in the SgNB Release Request Reject	15.8.0
2019-12	RP-86	RP-192916	1364	3	F	Correction to SN Status Transfer considering EN-DC operations	15.8.0
2019-12	RP-86	RP-192916	1380	2	F	SN Status Transfer for bearer reconfiguration during HO with EN-DC	15.8.0
2019-12	RP-86	RP-192915	1398	-	F	Correction on the DL forwarding for MeNB terminated bearer in SgNB initiated SgNB Release	15.8.0
2019-12	RP-86	RP-192916	1410	1	F	CR36.423 for correction on EN-DC X2 SETUP REQUEST message	15.8.0
2019-12	RP-86	RP-192916	1415	2	F	Support of delta configuration in EN-DC	15.8.0
2019-12	RP-86	RP-192913	1311	5	В	Introduction of Additional RRM Policy Index (ARPI)	16.0.0
2019-12	RP-86	RP-192910	1391	4	В	Resuming SCG in RRC Resume	16.0.0
2019-12	RP-86	RP-192910	1416	2	В	Fast MCG link recovery via SRB3	16.0.0
2019-12	RP-86	RP-192913	1418	1	F	Introduction of message size control for EN-DC X2 Setup	16.0.0
2019-12	RP-86	RP-192692	1421	2	F	Support for setting up IPSec a priori in X2	16.0.0
2020-03	RP-87-e	RP-200425	1390	3	В	Support for Multiple SCTP	16.1.0
2020-03	RP-87-e	RP-200422	1408	2	В	Introduction of NR-U	16.1.0
2020-03	RP-87-e	RP-200429	1426	-	Α	Correction on Assigned Criticality for Bearer Type	16.1.0
2020-03	RP-87-e	RP-200419	1438	1	В	SA to ENDC handover with shared SgNB/gNB	16.1.0
2020-03	RP-87-e	RP-200427	1448	1	F	Cleanup for Fast MCG link Recovery with SRB3	16.1.0
2020-03	RP-87-e	RP-200428	1452	-	Α	Correction of CR1380r2 to explicate procedural interaction	16.1.0
2020-03	RP-87-e	RP-200429	1454	1	Α	Correction of tabular representation of the RRC TRANSFER	16.1.0
2020-03	RP-87-e	RP-200428	1456	1	Α	message Correction of CR1415r2 – procedure text	16.1.0
2020-03	RP-87-e	RP-200428	1460	- 1	A	Propagation of Roaming and Access Restriction information in E-	16.1.0
2020-03	111 -01-6	111 -200420	1400	_	^	UTRAN in non-homogenous eNB deployments	10.1.0
2020-03	RP-87-e	RP-200425	1462	-	F	Correction of CR1418 on X2 Setup Message Size Control	16.1.0
2020-03	RP-87-e	RP-200425	1463	-	F	Rapporteur Corrections Rel-16	16.1.0
2020-03	RP-87-e	RP-200423	1468	-	В	X2AP support for Radio Capability Signaling Optimization	16.1.0
						(The CR is not implemented. The CR was marked agreed by	
						mistake while the WI is not yet complete)	
2020-07	RP-88-e	RP-201077	1303	16	В	BL CR to 36.423: Support for IAB	16.2.0
2020-07	RP-88-e	RP-201089	1331	15	В	Baseline CR for introducing Rel-16 LTE further mobility	16.2.0
						enhancements	
2020-07	RP-88-e	RP-201079	1340	9	В	Support of Ethernet Type Bearer	16.2.0
2020-07	RP-88-e	RP-201074	1369	12	В	Support of NR V2X over X2	16.2.0
2020-07	RP-88-e	RP-201082	1373	12	В	Addition of SON feature	16.2.0
2020-07	RP-88-e	RP-201088	1374	4	В	CR for 36.423 on NB-IoT PRACH configuration exchange over X2AP	16.2.0
2020-07	RP-88-e	RP-201088	1427	4	В	Support of RLF in NB-IoT	16.2.0
2020-07	RP-88-e	RP-201082	1440	6	В	MDT support for EN-DC	16.2.0
2020-07	RP-88-e	RP-201078	1468	4	В	X2AP support for Radio Capability Signaling Optimization	16.2.0
2020-07	RP-88-e	RP-201085	1472	-	F	Correction of the criticality of the TNLA to add/update/remove list	16.2.0
2020-07	RP-88-e	RP-201090	1475	2	A	Encoding PLMNs in served cell information NR	16.2.0
2020-07	RP-88-e	RP-201085	1478	1	F	Rapporteur's Correction to X2AP version 16.1.0	16.2.0
2020-07	RP-88-e	RP-201085	1479	-	F	Wrong ASN.1 IE-Id for the New eNB UE X2AP ID Extension IE	16.2.0
2020-07	RP-88-e	RP-201091	1485	-	Α	CR 36.423 Correction to E-UTRA-NR Cell-level Resource	16.2.0
0000 07	DD 66	DD 001001	4.400			Coordination	40.0.0
2020-07	RP-88-e	RP-201091	1489		F	Correction on nested SN modification procedure for EN-DC	16.2.0
2020-07	RP-88-e	RP-201090	1491	-	Α	Encoding PLMNs in served cell information IEs - semantics corrections	16.2.0
2020-07	RP-88-e	RP-201085	1492	1	F	CR to TS36.423 on Correction of R3-202726 Agreed for EN-DC CSI-	16.2.0
						RS Transfer	
2020-07	RP-88-e	RP-201090	1494	3	Α	Clarification on MIB only scenario	16.2.0
2020-07	RP-88-e	RP-201092	1502	-	Α	Tabular and ASN.1 correction of messages of the EN-DC X2 Setup	16.2.0
2020.07	DD 00 -	DD 004070	1500		ח	and EN-DC Configuration Update procedures	16.0.0
2020-07 2020-07	RP-88-e RP-88-e	RP-201076 RP-201085	1503 1505	-	B F	Inter-RAT HO support for fast MCG recovery	16.2.0 16.2.0
	RE-00-6	スト-てい こりなり	CUGIL	2	г	Correction on RF parameters in NR cell information	10.2.0

2020-09   RP-89-e   RP-201946   1504   2   Further correction on fast MCG recovery via SRB3   16.3.0								
2020-09   RP-89-e   RP-201948   1513   1   F   Support for intended TDD configuration transfer for EN-DC   16.3.0	2020-09	RP-89-e	RP-201946	1504	2	F	Further correction on fast MCG recovery via SRB3	16.3.0
2020-09         RP-89-e         RP-201948         1518         2         F         Clarification of the TNL Capacity Indicator         16.3.0           2020-09         RP-89-e         RP-201951         1525         -         F         Essential correction for Rel-16 LTE_feMob-Core WI         16.3.0           2020-09         RP-89-e         RP-201951         1526         1         F         Rapporteur's corrections for NR SON MDT WI and IAB WI         16.3.0           2020-09         RP-89-e         RP-201952         1529         -         F         Missing ASN.1 of TNL Transport Layer Address Info IE in the EN-DC X2 SETUP RESPONSE message         16.3.0           2020-09         RP-89-e         RP-201954         1530         -         A         Missing MeNB UE X2AP ID Extension IE in Trace messages         16.3.0           2020-09         RP-89-e         RP-201954         1531         -         A         Correction for the Interface Instance Indication in the EN-DC X2 SETUP RESPONSE message         16.3.0           2020-09         RP-89-e         RP-201954         1531         -         A         Correction for the Interface Instance Indication in the EN-DC X2 SETUP RESPONSE message         16.3.0           2020-09         RP-89-e         RP-201948         1532         1         B         Introducing UE Radio Capability ID M	2020-09	RP-89-e	RP-201948	1511		В	Introduction of NR SCG Release for Power Saving	16.3.0
2020-09         RP-89-e         RP-201951         1525         -         F         Essential correction for Rel-16 LTE_feMob-Core WI         16.3.0           2020-09         RP-89-e         RP-201951         1526         1         F         Rapporteur's corrections to TS 36.423 v16.2.0         16.3.0           2020-09         RP-89-e         RP-201947         1528         1         F         Rapporteur Corrections for NR SON MDT WI and IAB WI         16.3.0           2020-09         RP-89-e         RP-201952         1529         -         F         Missing ASN.1 of TNL Transport Layer Address Info IE in the EN-DC X2 SETUP RESPONSE message         16.3.0           2020-09         RP-89-e         RP-201954         1530         -         A         Missing MeNB UE X2AP ID Extension IE in Trace messages         16.3.0           2020-09         RP-89-e         RP-201954         1531         -         A         Correction for the Interface Instance Indication in the EN-DC X2 SETUP RESPONSE message         16.3.0           2020-09         RP-89-e         RP-201954         1531         -         A         Correction for the Interface Instance Indication in the EN-DC X2 SETUP RESPONSE message         16.3.0           2020-09         RP-89-e         RP-201951         1537         -         F         Correction on the Maximum Number of	2020-09	RP-89-e	RP-201948	1513	1	F	Support for intended TDD configuration transfer for EN-DC	16.3.0
2020-09         RP-89-e         RP-201951         1526         1         F         Rapporteur's corrections to TS 36.423 v16.2.0         16.3.0           2020-09         RP-89-e         RP-201947         1528         1         F         Rapporteur Corrections for NR SON MDT WI and IAB WI         16.3.0           2020-09         RP-89-e         RP-201952         1529         -         F         Missing ASN.1 of TNL Transport Layer Address Info IE in the EN-DC X2 SETUP RESPONSE message         16.3.0           2020-09         RP-89-e         RP-201954         1530         -         A         Missing MeNB UE X2AP ID Extension IE in Trace messages         16.3.0           2020-09         RP-89-e         RP-201954         1531         -         A         Correction for the Interface Instance Indication in the EN-DC X2 SETUP RESPONSE message         16.3.0           2020-09         RP-89-e         RP-201954         1537         -         F         Correction on the Maximum Number of CHO Preparations in X2AP         16.3.0           2020-09         RP-89-e         RP-201954         1539         2         A         Clarification on TAC presence in Serving Cell Info over X2         16.3.0           2020-09         RP-89-e         RP-201948         1542         -         F         Correction on protocol IE for MDTConfigurationNR	2020-09	RP-89-e	RP-201948	1518	2	F	Clarification of the TNL Capacity Indicator	16.3.0
2020-09         RP-89-e         RP-201947         1528         1         F         Rapporteur Corrections for NR SON MDT WI and IAB WI         16.3.0           2020-09         RP-89-e         RP-201952         1529         -         F         Missing ASN.1 of TNL Transport Layer Address Info IE in the EN-DC X2 SETUP RESPONSE message         16.3.0           2020-09         RP-89-e         RP-201954         1530         -         A         Missing MeNB UE X2AP ID Extension IE in Trace messages         16.3.0           2020-09         RP-89-e         RP-201954         1531         -         A         Correction for the Interface Instance Indication in the EN-DC X2 SETUP RESPONSE message         16.3.0           2020-09         RP-89-e         RP-201948         1532         1         B         Introducing UE Radio Capability ID Mapping procedure         16.3.0           2020-09         RP-89-e         RP-201951         1537         -         F         Correction on the Maximum Number of CHO Preparations in X2AP         16.3.0           2020-09         RP-89-e         RP-201954         1539         2         A         Clarification on TAC presence in Serving Cell Info over X2         16.3.0           2020-12         RP-89-e         RP-201948         1542         -         F         Correction on Protocol IE for MDTConfigurationN	2020-09	RP-89-e	RP-201951	1525	- 1	F	Essential correction for Rel-16 LTE_feMob-Core WI	16.3.0
2020-09   RP-89-e   RP-201952   1529   F   Missing ASN.1 of TNL Transport Layer Address Info IE in the EN-DC   16.3.0   X2 SETUP RESPONSE message   16.3.0   2020-09   RP-89-e   RP-201954   1530   A   Missing MeNB UE X2AP ID Extension IE in Trace messages   16.3.0   2020-09   RP-89-e   RP-201954   1531   A   Correction for the Interface Instance Indication in the EN-DC X2   16.3.0   SETUP RESPONSE message   2020-09   RP-89-e   RP-201948   1532   1   B   Introducing UE Radio Capability ID Mapping procedure   16.3.0   2020-09   RP-89-e   RP-201951   1537   F   Correction on the Maximum Number of CHO Preparations in X2AP   16.3.0   2020-09   RP-89-e   RP-201954   1539   2   A   Clarification on TAC presence in Serving Cell Info over X2   16.3.0   2020-09   RP-89-e   RP-201948   1542   F   Correction on protocol IE for MDTConfigurationNR   16.3.0   2020-12   RP-90-e   RP-202314   1545   1   F   Correction on CPC Complete Transfer   16.4.0   2020-12   RP-90-e   RP-202310   1550   F   Correction of IAB related RRC Container IRRC TRANSFER   16.4.0   message   2020-12   RP-90-e   RP-202313   1562   F   Removal of duplicated imports   16.4.0   2020-12   RP-90-e   RP-202312   1563   1   F   Load information for SN-initiated DC release   16.4.0   2020-12   RP-90-e   RP-202312   1565   F   Enabling URI configuration within Trace Activation over X2   16.5.0   2021-03   RP-91-e   RP-210239   1561   4   F   Cause value on X2 for insufficient UE capabilities CR 36.423   16.5.0   2021-03   RP-91-e   RP-210239   1561   4   F   Cause value on X2 for insufficient UE capabilities CR 36.423   16.5.0   2021-03   RP-91-e   RP-210239   1561   4   F   Cause value on X2 for insufficient UE capabilities CR 36.423   16.5.0   2021-03   RP-91-e   RP-210239   1561   4   F   Cause value on X2 for insufficient UE capabilities CR 36.423   16.5.0   2021-03   RP-91-e   RP-210239   1561   4   F   Cause value on X2 for insufficient UE capabilities CR 36.423   16.5.0   2021-03   RP-91-e   RP-210239   1561   4   F   Cause value on X2 for insufficient	2020-09	RP-89-e	RP-201951	1526	1	F	Rapporteur's corrections to TS 36.423 v16.2.0	16.3.0
X2 SETUP RESPONSE message   2020-09   RP-89-e   RP-201954   1530   - A   Missing MeNB UE X2AP ID Extension IE in Trace messages   16.3.0   2020-09   RP-89-e   RP-201954   1531   - A   Correction for the Interface Instance Indication in the EN-DC X2   16.3.0   SETUP RESPONSE message   2020-09   RP-89-e   RP-201951   1537   - F   Correction on the Maximum Number of CHO Preparations in X2AP   16.3.0   2020-09   RP-89-e   RP-201954   1539   2 A   Clarification on TAC presence in Serving Cell Info over X2   16.3.0   2020-09   RP-89-e   RP-201948   1542   - F   Correction on protocol IE for MDT ConfigurationNR   16.3.0   2020-12   RP-90-e   RP-202314   1545   1 F   Correction on CPC Complete Transfer   16.4.0   2020-12   RP-90-e   RP-202310   1550   - F   Correction of IAB related RRC Container IR RRC TRANSFER message   2020-12   RP-90-e   RP-202313   1562   - F   Removal of duplicated imports   16.4.0   2020-12   RP-90-e   RP-202312   1563   1 F   Load information for SN-initiated DC release   16.4.0   2020-12   RP-90-e   RP-202312   1565   F   Enabling URI configuration within Trace Activation over X2   16.5.0   2021-03   RP-91-e   RP-210239   1561   4 F   Cause value on X2 for insufficient UE capabilities CR 36.423   16.5.0	2020-09	RP-89-e	RP-201947	1528	1	F	Rapporteur Corrections for NR SON MDT WI and IAB WI	16.3.0
2020-09         RP-89-e         RP-201954         1530         -         A         Missing MeNB UE X2AP ID Extension IE in Trace messages         16.3.0           2020-09         RP-89-e         RP-201954         1531         -         A         Correction for the Interface Instance Indication in the EN-DC X2 SETUP RESPONSE message         16.3.0           2020-09         RP-89-e         RP-201948         1532         1         B         Introducing UE Radio Capability ID Mapping procedure         16.3.0           2020-09         RP-89-e         RP-201951         1537         -         F         Correction on the Maximum Number of CHO Preparations in X2AP         16.3.0           2020-09         RP-89-e         RP-201954         1539         2         A         Clarification on TAC presence in Serving Cell Info over X2         16.3.0           2020-09         RP-89-e         RP-201948         1542         -         F         Correction on protocol IE for MDTConfigurationNR         16.3.0           2020-12         RP-90-e         RP-202314         1545         1         F         Correction on CPC Complete Transfer         16.4.0           2020-12         RP-90-e         RP-202310         1550         -         F         Clarification for F1-C Traffic Container IE         16.4.0           20	2020-09	RP-89-e	RP-201952	1529	-	F		16.3.0
2020-09         RP-89-e         RP-201954         1531         -         A         Correction for the Interface Instance Indication in the EN-DC X2 SETUP RESPONSE message         16.3.0           2020-09         RP-89-e         RP-201948         1532         1         B         Introducing UE Radio Capability ID Mapping procedure         16.3.0           2020-09         RP-89-e         RP-201951         1537         -         F         Correction on the Maximum Number of CHO Preparations in X2AP         16.3.0           2020-09         RP-89-e         RP-201954         1539         2         A         Clarification on TAC presence in Serving Cell Info over X2         16.3.0           2020-09         RP-89-e         RP-201948         1542         -         F         Correction on protocol IE for MDTConfigurationNR         16.3.0           2020-12         RP-90-e         RP-202314         1545         1         F         Correction on CPC Complete Transfer         16.4.0           2020-12         RP-90-e         RP-202310         1550         -         F         Correction of IAB related RRC Container in RRC TRANSFER message         16.4.0           2020-12         RP-90-e         RP-202313         1562         -         F         Removal of duplicated imports         16.4.0           2020-12								
SETUP RESPONSE message   2020-09   RP-89-e   RP-201948   1532   1   B   Introducing UE Radio Capability ID Mapping procedure   16.3.0	2020-09	RP-89-e	RP-201954	1530	-	Α	Missing MeNB UE X2AP ID Extension IE in Trace messages	16.3.0
2020-09         RP-89-e         RP-201948         1532         1         B         Introducing UE Radio Capability ID Mapping procedure         16.3.0           2020-09         RP-89-e         RP-201951         1537         -         F         Correction on the Maximum Number of CHO Preparations in X2AP         16.3.0           2020-09         RP-89-e         RP-201954         1539         2         A         Clarification on TAC presence in Serving Cell Info over X2         16.3.0           2020-09         RP-89-e         RP-201948         1542         -         F         Correction on Protocol IE for MDTConfigurationNR         16.3.0           2020-12         RP-90-e         RP-202314         1545         1         F         Correction on CPC Complete Transfer         16.4.0           2020-12         RP-90-e         RP-202310         1550         -         F         Correction of IAB related RRC Container in RRC TRANSFER message         16.4.0           2020-12         RP-90-e         RP-202310         1552         1         F         Clarification for F1-C Traffic Container IE         16.4.0           2020-12         RP-90-e         RP-202313         1562         -         F         Removal of duplicated imports         16.4.0           2020-12         RP-90-e         R	2020-09	RP-89-e	RP-201954	1531	-	Α	Correction for the Interface Instance Indication in the EN-DC X2	16.3.0
2020-09         RP-89-e         RP-201951         1537         - F         Correction on the Maximum Number of CHO Preparations in X2AP         16.3.0           2020-09         RP-89-e         RP-201954         1539         2 A         Clarification on TAC presence in Serving Cell Info over X2         16.3.0           2020-09         RP-89-e         RP-201948         1542         - F         Correction on protocol IE for MDTConfigurationNR         16.3.0           2020-12         RP-90-e         RP-202314         1545         1 F         Correction on CPC Complete Transfer         16.4.0           2020-12         RP-90-e         RP-202310         1550         - F         Correction of IAB related RRC Container in RRC TRANSFER message         16.4.0           2020-12         RP-90-e         RP-202310         1552         1 F         Clarification for F1-C Traffic Container IE         16.4.0           2020-12         RP-90-e         RP-202313         1562         - F         Removal of duplicated imports         16.4.0           2020-12         RP-90-e         RP-202312         1563         1 F         Load information for SN-initiated DC release         16.4.0           2020-12         RP-90-e         RP-202312         1565         F         Enabling URI configuration within Trace Activation over X2         1							SETUP RESPONSE message	
2020-09         RP-89-e         RP-201954         1539         2         A         Clarification on TAC presence in Serving Cell Info over X2         16.3.0           2020-09         RP-89-e         RP-201948         1542         -         F         Correction on protocol IE for MDTConfigurationNR         16.3.0           2020-12         RP-90-e         RP-202314         1545         1         F         Correction on CPC Complete Transfer         16.4.0           2020-12         RP-90-e         RP-202310         1550         -         F         Correction of IAB related RRC Container in RRC TRANSFER message         16.4.0           2020-12         RP-90-e         RP-202310         1552         1         F         Clarification for F1-C Traffic Container IE         16.4.0           2020-12         RP-90-e         RP-202313         1562         -         F         Removal of duplicated imports         16.4.0           2020-12         RP-90-e         RP-202312         1563         1         F         Load information for SN-initiated DC release         16.4.0           2020-12         RP-90-e         RP-202312         1565         F         Enabling URI configuration within Trace Activation over X2         16.4.0           2021-03         RP-91-e         RP-210799         136	2020-09	RP-89-e	RP-201948	1532	1	В	Introducing UE Radio Capability ID Mapping procedure	16.3.0
2020-09         RP-89-e         RP-201948         1542         -         F         Correction on protocol IE for MDTConfigurationNR         16.3.0           2020-12         RP-90-e         RP-202314         1545         1         F         Correction on CPC Complete Transfer         16.4.0           2020-12         RP-90-e         RP-202310         1550         -         F         Correction of IAB related RRC Container in RRC TRANSFER message         16.4.0           2020-12         RP-90-e         RP-202310         1552         1         F         Clarification for F1-C Traffic Container IE         16.4.0           2020-12         RP-90-e         RP-202313         1562         -         F         Removal of duplicated imports         16.4.0           2020-12         RP-90-e         RP-202312         1563         1         F         Load information for SN-initiated DC release         16.4.0           2020-12         RP-90-e         RP-202312         1565         F         Enabling URI configuration within Trace Activation over X2         16.4.0           2021-03         RP-91-e         RP-210799         1367         8         B         Introduction of SFN Offset per cell over X2         16.5.0           2021-03         RP-91-e         RP-210239         1561	2020-09	RP-89-e	RP-201951	1537	-	F	Correction on the Maximum Number of CHO Preparations in X2AP	16.3.0
2020-12         RP-90-e         RP-202314         1545         1         F         Correction on CPC Complete Transfer         16.4.0           2020-12         RP-90-e         RP-202310         1550         -         F         Correction of IAB related RRC Container in RRC TRANSFER message         16.4.0           2020-12         RP-90-e         RP-202310         1552         1         F         Clarification for F1-C Traffic Container IE         16.4.0           2020-12         RP-90-e         RP-202313         1562         -         F         Removal of duplicated imports         16.4.0           2020-12         RP-90-e         RP-202312         1563         1         F         Load information for SN-initiated DC release         16.4.0           2020-12         RP-90-e         RP-202312         1565         F         Enabling URI configuration within Trace Activation over X2         16.4.0           2021-03         RP-91-e         RP-210799         1367         8         B         Introduction of SFN Offset per cell over X2         16.5.0           2021-03         RP-91-e         RP-210239         1561         4         F         Cause value on X2 for insufficient UE capabilities CR 36.423         16.5.0	2020-09	RP-89-e	RP-201954	1539	2	Α	Clarification on TAC presence in Serving Cell Info over X2	16.3.0
2020-12         RP-90-e         RP-202310         1550         -         F         Correction of IAB related RRC Container in RRC TRANSFER message         16.4.0           2020-12         RP-90-e         RP-202310         1552         1         F         Clarification for F1-C Traffic Container IE         16.4.0           2020-12         RP-90-e         RP-202313         1562         -         F         Removal of duplicated imports         16.4.0           2020-12         RP-90-e         RP-202312         1563         1         F         Load information for SN-initiated DC release         16.4.0           2020-12         RP-90-e         RP-202312         1565         F         Enabling URI configuration within Trace Activation over X2         16.4.0           2021-03         RP-91-e         RP-210799         1367         8         B         Introduction of SFN Offset per cell over X2         16.5.0           2021-03         RP-91-e         RP-210239         1561         4         F         Cause value on X2 for insufficient UE capabilities CR 36.423         16.5.0	2020-09	RP-89-e	RP-201948	1542	-	F	Correction on protocol IE for MDTConfigurationNR	16.3.0
2020-12         RP-90-e         RP-202310         1552         1         F         Clarification for F1-C Traffic Container IE         16.4.0           2020-12         RP-90-e         RP-202313         1562         -         F         Removal of duplicated imports         16.4.0           2020-12         RP-90-e         RP-202312         1563         1         F         Load information for SN-initiated DC release         16.4.0           2020-12         RP-90-e         RP-202312         1565         F         Enabling URI configuration within Trace Activation over X2         16.4.0           2021-03         RP-91-e         RP-210799         1367         8         B         Introduction of SFN Offset per cell over X2         16.5.0           2021-03         RP-91-e         RP-210239         1561         4         F         Cause value on X2 for insufficient UE capabilities CR 36.423         16.5.0	2020-12	RP-90-e	RP-202314	1545	1	F	Correction on CPC Complete Transfer	16.4.0
2020-12         RP-90-e         RP-202310         1552         1         F         Clarification for F1-C Traffic Container IE         16.4.0           2020-12         RP-90-e         RP-202313         1562         -         F         Removal of duplicated imports         16.4.0           2020-12         RP-90-e         RP-202312         1563         1         F         Load information for SN-initiated DC release         16.4.0           2020-12         RP-90-e         RP-202312         1565         F         Enabling URI configuration within Trace Activation over X2         16.4.0           2021-03         RP-91-e         RP-210799         1367         8         B         Introduction of SFN Offset per cell over X2         16.5.0           2021-03         RP-91-e         RP-210239         1561         4         F         Cause value on X2 for insufficient UE capabilities CR 36.423         16.5.0	2020-12	RP-90-e	RP-202310	1550	- 1	F	Correction of IAB related RRC Container in RRC TRANSFER	16.4.0
2020-12         RP-90-e         RP-202313         1562         - F         Removal of duplicated imports         16.4.0           2020-12         RP-90-e         RP-202312         1563         1 F         Load information for SN-initiated DC release         16.4.0           2020-12         RP-90-e         RP-202312         1565         F         Enabling URI configuration within Trace Activation over X2         16.4.0           2021-03         RP-91-e         RP-210799         1367         8 B         Introduction of SFN Offset per cell over X2         16.5.0           2021-03         RP-91-e         RP-210239         1561         4 F         Cause value on X2 for insufficient UE capabilities CR 36.423         16.5.0							message	
2020-12         RP-90-e         RP-202312         1563         1         F         Load information for SN-initiated DC release         16.4.0           2020-12         RP-90-e         RP-202312         1565         F         Enabling URI configuration within Trace Activation over X2         16.4.0           2021-03         RP-91-e         RP-210799         1367         8         B         Introduction of SFN Offset per cell over X2         16.5.0           2021-03         RP-91-e         RP-210239         1561         4         F         Cause value on X2 for insufficient UE capabilities CR 36.423         16.5.0	2020-12	RP-90-e	RP-202310	1552	1	F	Clarification for F1-C Traffic Container IE	16.4.0
2020-12         RP-90-e         RP-202312         1565         F         Enabling URI configuration within Trace Activation over X2         16.4.0           2021-03         RP-91-e         RP-210799         1367         8         B         Introduction of SFN Offset per cell over X2         16.5.0           2021-03         RP-91-e         RP-210239         1561         4         F         Cause value on X2 for insufficient UE capabilities CR 36.423         16.5.0	2020-12	RP-90-e	RP-202313	1562	- 1	F	Removal of duplicated imports	16.4.0
2021-03         RP-91-e         RP-210799         1367         8         B         Introduction of SFN Offset per cell over X2         16.5.0           2021-03         RP-91-e         RP-210239         1561         4         F         Cause value on X2 for insufficient UE capabilities CR 36.423         16.5.0	2020-12	RP-90-e	RP-202312	1563	1	F	Load information for SN-initiated DC release	16.4.0
2021-03 RP-91-e RP-210239 1561 4 F Cause value on X2 for insufficient UE capabilities CR 36.423 16.5.0	2020-12	RP-90-e	RP-202312	1565		F	Enabling URI configuration within Trace Activation over X2	16.4.0
2021-03 RP-91-e RP-210239 1561 4 F Cause value on X2 for insufficient UE capabilities CR 36.423 16.5.0	2021-03	RP-91-e	RP-210799	1367	8	В	Introduction of SFN Offset per cell over X2	16.5.0
	2021-03	RP-91-e	RP-210239	1561	4	F		16.5.0
	2021-03	RP-91-e	RP-210239	1580	1	F		16.5.0

### History

Document history		
V16.2.0	July 2020	Publication
V16.3.0	November 2020	Publication
V16.4.0	January 2021	Publication
V16.5.0	April 2021	Publication