ETSI TS 136 508 V12.4.1 (2015-04)



LTE;

Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Packet Core (EPC);
Common test environments for User Equipment (UE) conformance testing
(3GPP TS 36.508 version 12.4.1 Release 12)



Reference
RTS/TSGR-0536508vc41

Keywords
LTE

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

The present document can be downloaded from: http://www.etsi.org/standards-search

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the only prevailing document is the print of the Portable Document Format (PDF) version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

http://portal.etsi.org/tb/status/status.asp

If you find errors in the present document, please send your comment to one of the following services: https://portal.etsi.org/People/CommiteeSupportStaff.aspx

Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2015.
All rights reserved.

DECT[™], **PLUGTESTS**[™], **UMTS**[™] and the ETSI logo are Trade Marks of ETSI registered for the benefit of its Members. **3GPP**[™] and **LTE**[™] are Trade Marks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

GSM® and the GSM logo are Trade Marks registered and owned by the GSM Association.

Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://ipr.etsi.org).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Foreword

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under http://webapp.etsi.org/key/queryform.asp.

Modal verbs terminology

In the present document "shall", "shall not", "should", "should not", "may", "need not", "will", "will not", "can" and "cannot" are to be interpreted as described in clause 3.2 of the <u>ETSI Drafting Rules</u> (Verbal forms for the expression of provisions).

"must" and "must not" are NOT allowed in ETSI deliverables except when used in direct citation.

Contents

Intelle	ectual Property Rights	2
Forew	vord	2
Moda	ıl verbs terminology	2
Forew	vord	16
Introd	luction	16
1	Scope	17
2	References	17
3	Definitions, symbols and abbreviations	19
3.1	Definitions	
3.2	Symbols	
3.3	Abbreviations	
4	Common test environment	
4.1	Environmental conditions	
4.1.1	Temperature	
4.1.2	Voltage	20
4.2	Common requirements of test equipment	21
4.2.1	General functional requirements	21
4.2.2	Minimum functional requirements	22
4.2.2.1		
4.2.2.1		
4.2.2.2		
4.3	Reference test conditions	
4.3.1	Test frequencies	
4.3.1.1	•	
4.3.1.1 4.3.1.1		
4.3.1.1 4.3.1.1		
4.3.1.1 4.3.1.1		
	r	
4.3.1.1		
4.3.1.1		
4.3.1.1		
4.3.1.1	1 6	
4.3.1.1	1 0	
4.3.1.1	1 6	
4.3.1.1		
4.3.1.1	FDD reference test frequencies for operating band 7	29
4.3.1.1	1.7A FDD reference test frequencies for CA in operating band 7	29
4.3.1.1	FDD reference test frequencies for operating band 8	30
4.3.1.1	FDD reference test frequencies for operating band 9	30
4.3.1.1		
4.3.1.1	1 1 0	
4.3.1.1		
4.3.1.1		
4.3.1.1		
4.3.1.1		
4.3.1.1		
4.3.1.1 4.3.1.1		
4.3.1.1 4.3.1.1		
	1 1 0	
4.3.1.1		
4.3.1.1		
4.3.1.1		
4.3.1.1	1 1 0	
4.3.1.1	1 1 0	
4.3.1.1	1 5	
4.3.1.1	FDD reference test frequencies for operating band 24	34

4.3.1.1.25	FDD reference test frequencies for operating band 25	
4.3.1.1.25A	FDD reference test frequencies for CA in operating band 25	
4.3.1.1.26	FDD reference test frequencies for operating band 26	
4.3.1.1.27	FDD reference test frequencies for operating band 27	
4.3.1.1.27A	FDD reference test frequencies for CA in operating band 27	
4.3.1.1.28	FDD reference test frequencies for operating band 28	
4.3.1.1.29	FDD reference test frequencies for CA in operating band 29	
4.3.1.1.31	FDD reference test frequencies for operating band 31	
4.3.1.2	TDD Mode Test frequencies	
4.3.1.2.1	TDD reference test frequencies for Operating Band 33	
4.3.1.2.2	TDD reference test frequencies for Operating Band 34	
4.3.1.2.3	TDD reference test frequencies for Operating Band 35	
4.3.1.2.4	TDD reference test frequencies for Operating Band 36	
4.3.1.2.5	TDD reference test frequencies for Operating Band 37	
4.3.1.2.6	TDD reference test frequencies for Operating Band 38	
4.3.1.2.6A	TDD reference test frequencies for CA in operating band 38	
4.3.1.2.7	TDD reference test frequencies for Operating Band 39	
4.3.1.2.7A	TDD reference test frequencies for CA in Operating Band 39	
4.3.1.2.8	TDD reference test frequencies for Operating Band 40	
4.3.1.2.8A	TDD reference test frequencies for CA in operating band 40	
4.3.1.2.9	TDD reference test frequencies for Operating Band 41	
4.3.1.2.9A	TDD reference test frequencies for CA in operating band 41	
4.3.1.2.10	TDD reference test frequencies for Operating Band 42	
4.3.1.2.10A	TDD reference test frequencies for CA in operating band 42	
4.3.1.2.11	TDD reference test frequencies for Operating Band 43	
4.3.1.2.12	TDD reference test frequencies for Operating Band 44	
4.3.1.3	HRPD Test frequencies	
4.3.1.3.1	HRPD test frequencies for Band Class 0	
4.3.1.3.2	HRPD test frequencies for Band Class 1	
4.3.1.3.3	HRPD test frequencies for Band Class 3	
4.3.1.3.4	HRPD test frequencies for Band Class 4	
4.3.1.3.5	HRPD test frequencies for Band Class 6	
4.3.1.3.6	HRPD test frequencies for Band Class 10	
4.3.1.3.7	HRPD test frequencies for Band Class 15	
4.3.1.4	1xRTT Test frequencies	
4.3.1.4.1	1xRTT test frequencies for Band Class 0	
4.3.1.4.2	1xRTT test frequencies for Band Class 1	
4.3.1.4.3 4.3.1.4.4	1xRTT test frequencies for Band Class 4	
4.3.1.4.5	1xRTT test frequencies for Band Class 6	
4.3.1.4.6	1xRTT test frequencies for Band Class 0	
4.3.1.4.7	1xRTT test frequencies for Band Class 15	
4.3.1.5	MFBI Test frequencies	
4.3.1.5.1	MFBI Test frequencies for operation band 2 overlapping with band 25	
4.3.1.5.2	MFBI Test frequencies for operation band 3 overlapping with band 9	
4.3.1.5.3	MFBI Test frequencies for operation band 4 overlapping with band 10	
4.3.1.5.4	MFBI Test frequencies for operation band 5 overlapping with band 18	
4.3.1.5.5	MFBI Test frequencies for operation band 5 overlapping with band 19	
4.3.1.5.6	MFBI Test frequencies for operation band 5 overlapping with band 26	
4.3.1.5.7	MFBI Test frequencies for operation band 9 overlapping with band 3	
4.3.1.5.8	MFBI Test frequencies for operation band 10 overlapping with band 4	
4.3.1.5.9	MFBI Test frequencies for operation band 12 overlapping with band 17	
4.3.1.5.10	MFBI Test frequencies for operation band 17 overlapping with band 12	
4.3.1.5.11	MFBI Test frequencies for operation band 18 overlapping with band 5	
4.3.1.5.12	MFBI Test frequencies for operation band 18 overlapping with band 26	
4.3.1.5.13	MFBI Test frequencies for operation band 18 overlapping with band 27	
4.3.1.5.14	MFBI Test frequencies for operation band 19 overlapping with band 5	
4.3.1.5.15	MFBI Test frequencies for operation band 19 overlapping with band 26	
4.3.1.5.16	MFBI Test frequencies for operation band 25 overlapping with band 2	
4.3.1.5.17	MFBI Test frequencies for operation band 26 overlapping with band 5	
4.3.1.5.18	MFBI Test frequencies for operation band 26 overlapping with band 18	51
4.3.1.5.19	MFBI Test frequencies for operation band 26 overlapping with band 19	52

4.3.1.5.20		
4.3.1.5.21	MFBI Test frequencies for operation band 27 overlapping with band 18	52
4.3.1.5.22	MFBI Test frequencies for operation band 27 overlapping with band 26	53
4.3.1.5.23	MFBI Test frequencies for operation band 33 overlapping with band 39	53
4.3.1.5.24	MFBI Test frequencies for operation band 38 overlapping with band 41	53
4.3.1.5.25	MFBI Test frequencies for operation band 39 overlapping with band 33	53
4.3.1.5.26	MFBI Test frequencies for operation band 41 overlapping with band 38	53
4.3.2	Radio conditions	54
4.3.2.1	Normal propagation condition	54
4.3.3	Physical channel allocations	54
4.3.3.1	Antennas	54
4.3.3.2	Downlink physical channels and physical signals	
4.3.3.3	Mapping of downlink physical channels and signals to physical resources	
4.3.3.4	Uplink physical channels and physical signals	
4.3.3.5	Mapping of uplink physical channels and signals to physical resources	
4.3.4	Signal levels	
4.3.4.1	Downlink signal levels	
4.3.4.2	Uplink signal levels	
4.3.5	Standard test signals	
4.3.5.1	Downlink test signals	
4.3.5.2	Uplink test signals	
4.3.6	Physical layer parameters	
4.3.6.1	Downlink physical layer parameters	
4.3.6.1.1	Physical layer parameters for DCI format 0	
4.3.6.1.2	Physical layer parameters for DCI format 1	
4.3.6.1.2	Physical layer parameters for DCI format 1 A	
4.3.6.1.3A 4.3.6.1.4	Physical layer parameters for DCI format 1B	
4.3.6.1.5		
	Physical layer parameters for DCI format 2	
4.3.6.1.6	Physical layer parameters for DCI format 2A	
4.4	Reference system configurations.	
4.4.1	Simulated network scenarios	
4.4.1.1	Single cell network scenarios.	
4.4.1.2	E-UTRA single mode multi cell network scenarios	
4.4.1.3	E-UTRA dual mode multi cell network scenarios	
4.4.1.4	3GPP Inter-RAT network scenarios	
4.4.1.5	3GPP2 Inter-RAT network scenarios	
4.4.1.6	WLAN Inter-RAT network scenarios	
4.4.2	Simulated cells	
4.4.3	Common parameters for simulated E-UTRA cells	
4.4.3.1	Common configurations of system information blocks	
4.4.3.1.1	Combinations of system information blocks	
4.4.3.1.2	Scheduling of system information blocks	
4.4.3.2	Common contents of system information messages	
-	MasterInformationBlock	
-	SystemInformation	
-	SystemInformationBlockType1	
4.4.3.3	Common contents of system information blocks	
-	SystemInformationBlockType2	
-	SystemInformationBlockType3	
-	SystemInformationBlockType4	
-	SystemInformationBlockType5	
-	SystemInformationBlockType6	
-	SystemInformationBlockType7	
-	SystemInformationBlockType8	
-	SystemInformationBlockType9	
-	SystemInformationBlockType10	88
-	SystemInformationBlockType11	90
-	SystemInformationBlockType12	92
-	SystemInformationBlockType13	
-	SystemInformationBlockType14	
_	System Information Rlock Type 15	Q/

4.4.3.4	Channel-bandwidth-dependent parameters in system information blocks	
4.4.4	Common parameters for simulated UTRA cells	
4.4.4.1	Common contents of system information blocks for UTRA cells	
-	System Information Block type 19	
4.4.4.2	UTRA SIB scheduling for inter EUTRA - UTRA test	
4.4.4.3	UTRA SIB scheduling for inter EUTRA - UTRA - GERAN test	
4.4.5	Common parameters for simulated GERAN cells	
4.4.6	Common parameters for simulated CDMA2000 cells	
4.4.7	Default parameters specific for simulated cells	
4.4.7.1	Common contents of HRPD Overhead messages	
4.4.7.2	Common contents of 1XRTT Overhead messages	
4.4.7.2.1	Configuration sequence number	
4.4.7.2.2	Over Head messages	
4.5	Generic procedures	
4.5.1	UE test states	
4.5.2	UE Registration (State 2)	
4.5.2.1	Initial conditions	
4.5.2.2	Definition of system information messages	
4.5.2.3	Procedure	
4.5.2.4	Specific message contents	
4.5.2A	UE Registration, UE Test Mode Activated (State 2A)	
4.5.2A.1	Initial conditions	
4.5.2A.2	Definition of system information messages	
4.5.2A.3	Procedure	
4.5.2A.4	Specific message contents	
4.5.2B	UE Registration, pre-registration on HRPD (State 2B)	
4.5.2B.1	Initial conditions	
4.5.2B.2	Definition of system information messages	
4.5.2B.3 4.5.2B.4	Procedure	
4.5.2 D .4 4.5.2 C	Specific message contents	
4.5.2C.1	Initial conditions	
4.5.2C.1 4.5.2C.2	Definition of system information messages	
4.5.2C.2 4.5.2C.3	Procedure Procedure	
4.5.2C.4	Specific message contents	
4.5.3	Generic Radio Bearer Establishment (State 3)	
4.5.3.1	Initial conditions	
4.5.3.2	Definition of system information messages	
4.5.3.3	Procedure	
4.5.3.4	Specific message contents	
4.5.3A	Generic Radio Bearer Establishment, UE Test Mode Activated (State 3A)	
4.5.3A.1	Initial conditions	
4.5.3A.2	Definition of system information messages	
4.5.3A.3	Procedure	
4.5.3A.4	Specific message contents	
4.5.3B	Generic Radio Bearer Establishment, pre-registered on HRPD (State 3B)	
4.5.3B.1	Initial conditions	
4.5.3B.2	Definition of system information messages	150
4.5.3B.3	Procedure	150
4.5.3B.4	Specific message contents	150
4.5.3C	Generic Radio Bearer Establishment, pre-registered on 1xRTT (State 3C)	150
4.5.3C.1	Initial conditions	
4.5.3C.2	Definition of system information messages	
4.5.3C.3	Procedure	
4.5.3C.4	Specific message contents	
4.5.4	Loopback Activation (State 4)	
4.5.4.1	Initial conditions	
4.5.4.2	Definition of system information messages	
4.5.4.3	Procedure	
4.5.4.4	Specific message contents	
4.5.5	HRPD registration (State H2)	
4.5.5.1	Initial conditions	151

4.5.5.2	Definition of system information messages	
4.5.5.3	Procedure	
4.5.5.4	Specific message contents	
4.5.5A	HRPD registration, pre-registration on E-UTRAN (State H2A)	
4.5.5A.1	Initial conditions	
4.5.5A.2	Definition of system information messages	
4.5.5A.3	Procedure	
4.5.5A.4	Specific message contents	
4.5.6	HRPD session establishment (State H3)	
4.5.6.1	Initial conditions	
4.5.6.2	Definition of system information messages	
4.5.6.3	Procedure	
4.5.6.4	Specific message contents	
4.5.6A	HRPD session establishment, pre-registered on E-UTRAN (State H3A)	
4.5.6A.1	Initial conditions	
4.5.6A.2	Definition of system information messages	
4.5.6A.3	Procedure	
4.5.6A.4	Specific message contents	
4.5A	Other generic procedures	
4.5A.1	Procedure for IP address allocation in the U-plane	
4.5A.2	Tracking area updating procedure	
4.5A.3	Procedure for IMS signalling	
4.5A.4	Generic Test Procedure for IMS Emergency call establishment in EUTRA: Normal Service	
4.5A.4.1	Initial conditions	
4.5A.4.2	Definition of system information messages	
4.5A.4.3	Procedure	
4.5A.4.4	Specific message contents	
4.5A.5	Generic Test Procedure for IMS Emergency call establishment in EUTRA: Limited Service	
4.5A.5.1	Initial conditions	
4.5A.5.2	Definition of system information messages	
4.5A.5.3	Procedure	
4.5A.5.4	Specific message contents	
4.5A.6	Generic Test Procedure for IMS MO speech call establishment in E-UTRA	
4.5A.6.1	Initial conditions	
4.5A.6.2	Definition of system information messages	
4.5A.6.3	Procedure	
4.5A.6.4	Specific message contents	
4.5A.7	Generic Test Procedure for IMS MT Speech call establishment in E-UTRA	
4.5A.7.1	Initial conditions	
4.5A.7.2	Definition of system information messages	
4.5A.7.3	Procedure	
4.5A.7.4	Specific message contents	
4.5A.8	Generic Test Procedure for IMS MO video call establishment in E-UTRA	
4.5A.8.1	Initial conditions	
4.5A.8.2	Definition of system information messages	
4.5A.8.3	Procedure Specific message contents	
4.5A.8.4 4.5A.9	Specific message contents Generic Test Procedure for IMS MT video call establishment in E-UTRA	
4.5A.9 4.5A.9.1		
4.5A.9.1 4.5A.9.2	Initial conditions	
4.5A.9.2 4.5A.9.3	Procedure Procedure	
4.5A.9.3 4.5A.9.4	Specific message contents	
4.5A.9.4 4.5A.10	Generic Test Procedure for IMS MO speech and aSRVCC in E-UTRA	
4.5A.10 4.5A.10.1		
4.5A.10.1 4.5A.10.2		
4.5A.10.2 4.5A.10.3	•	
4.5A.10.3 4.5A.10.4		
4.5A.10.4 4.5A.11	Generic Test Procedure for IMS MO add video establishment in E-UTRA	
4.5A.11 4.5A.11.1		
4.5A.11.1 4.5A.11.2		
4.5A.11.2	•	
4.5A.11.4		
	~ F - 22224 2224 AND A CONTRACTOR	

4.5A.12	Generic Test Procedure for IMS MT add video establishment in E-UTRA	
4.5A.12.1	Initial conditions	
4.5A.12.2	Definition of system information messages	175
4.5A.12.3	Procedure	
4.5A.12.4	Specific message contents	
4.5A.14	Generic Test Procedure for IMS XCAP establishment in EUTRA	
4.5A.14.1	Initial conditions	
4.5A.14.2	Definition of system information messages	
4.5A.14.3	Procedure	
4.5A.14.4	Specific message contents	
4.5A.15	Generic Test Procedure for EPS Bearer Deactivation	
4.5A.15.1	Initial conditions	
4.5A.15.2	Definition of system information messages	
4.5A.15.3	Procedure	
4.5A.15.4	Specific message contents	
4.5A.16	Generic Test Procedure to establish additional PDN connectivity	
4.5A.16.1	Initial conditions	
4.5A.16.2	Definition of system information messages	
4.5A.16.3	Procedure	
4.5A.16.4	Specific message contents	179
4.5A.17	Generic Test Procedure for user initiated release of additional PDN connectivity	180
4.5A.17.1	Initial conditions	180
4.5A.17.2	Definition of system information messages	180
4.5A.17.3	Procedure	181
4.5A.17.4	Specific message contents	181
4.5A.18	Generic Test Procedure for network initiated release of additional PDN connectivity	
4.5A.18.1	Initial conditions	182
4.5A.18.2	Definition of system information messages	182
4.5A.18.3	Procedure	183
4.5A.18.4	Specific message contents	183
4.6	Default RRC message and information elements contents	184
4.6.1	Contents of RRC messages	184
_	CounterCheck	184
_	CounterCheckResponse	184
_	CSFBParametersRequestCDMA2000	185
_	CSFBParametersResponseCDMA2000	185
_	DLInformationTransfer	
_	HandoverFromEUTRAPreparationRequest	186
-	LoggedMeasurementConfiguration	
_	MBMSCountingRequest	188
_	MBMSCountingResponse	188
_	MBMSInterestIndication	189
_	MBSFNAreaConfiguration	189
_	MeasurementReport	190
_	MobilityFromEUTRACommand	190
_	Paging	190
_	RRCConnectionReconfiguration	191
_	RRCConnectionReconfigurationComplete	193
_	RRCConnectionReestablishment	194
_	RRCConnectionReestablishmentComplete	194
_	RRCConnectionReestablishmentReject	194
_	RRCConnectionReestablishmentRequest	195
_	RRCConnectionReject	195
_	RRCConnectionRelease	
_	RRCConnectionRequest	
_	RRCConnectionSetup	196
_	RRCConnectionSetupComplete	196
_	SecurityModeCommand	197
_	SecurityModeComplete	197
_	SecurityModeFailure	197
_	UECapabilityEnquiry	198
_	UECapabilityInformation	

_	UEInformationRequest	
_	UEInformationResponse	206
-	ULHandoverPreparationTransfer	206
_	ULInformationTransfer	207
_	UEAssistanceInformation	207
4.6.2	System information blocks	207
4.6.3	Radio resource control information elements	208
_	BCCH-Config-DEFAULT	208
_	CQI-ReportAperiodic-r10-DEFAULT	208
_	CQI-ReportConfig-DEFAULT	209
_	CQI-ReportConfig-r10-DEFAULT	209
_	CQI-ReportConfigSCell-r10-DEFAULT	212
_	CQI-ReportPeriodic-r10-DEFAULT	212
_	CSI-RS-ConfigNZP-r11-DEFAULT	213
_	CSI-RS-ConfigZP-r11-DEFAULT	213
_	DMRS-Config-r11-DEFAULT	214
_	DRB-ToAddModList-RECONFIG	214
_	EPDCCH-Config-r11-DEFAULT	215
_	PCCH-Config-DEFAULT	216
_	PHICH-Config-DEFAULT	216
_	PDSCH-ConfigCommon-DEFAULT	216
_	PDSCH-ConfigDedicated-DEFAULT	217
_	PDSCH-ConfigDedicated-v1130-DEFAULT	217
_	PhysicalConfigDedicatedSCell-r10-DEFAULT	218
_	PRACH-Config-DEFAULT	
_	PRACH-ConfigSIB-DEFAULT	219
_	PUCCH-ConfigCommon-DEFAULT	220
_	PUCCH-ConfigDedicated-DEFAULT	220
_	PUCCH-ConfigDedicated-v1020-DEFAULT	221
_	PUCCH-ConfigDedicated-v1130-DEFAULT	222
_	PUSCH-ConfigCommon-DEFAULT	222
_	PUSCH-ConfigDedicated-DEFAULT	
_	PUSCH-ConfigDedicated-v1130-DEFAULT	
_	RACH-ConfigCommon-DEFAULT	
_	Rach-ConfigDedicated-DEFAULT	225
_	RadioResourceConfigCommon-DEFAULT	
_	RadioResourceConfigCommonSCell-r10-DEFAULT	
_	RadioResourceConfigCommonSIB-DEFAULT	
_	RadioResourceConfigDedicated-SRB1	227
_	RadioResourceConfigDedicated-SRB2-DRB(n,m)	
_	RadioResourceConfigDedicated-DRB(n,m)	
_	Radio Resource Config Dedicated-HO-TO-EUTRA(n,m)	
-	RadioResourceConfigDedicated-AM-DRB-ADD(bid)	
-	RadioResourceConfigDedicated-UM-DRB-ADD(bid)	
-	RadioResourceConfigDedicated- DRB-REL(bid)	
_	RadioResourceConfigDedicated-SCell_AddMod	
_	RadioResourceConfigDedicated-HO	
_	RadioResourceConfigDedicatedSCell-r10-DEFAULT	
_	RLC-Config-DRB-AM-RECONFIG	
_	RLC-Config-DRB-UM-RECONFIG	
_	RLC-Config-SRB-AM-RECONFIG	
_	SCellToAddMod-r10-DEFAULT	
_	SCellToRelease-r10-DEFAULT	
_	SchedulingRequest-Config-DEFAULT	
_	SoundingRS-UL-ConfigCommon-DEFAULT	
_	SoundingRS-UL-ConfigDedicated-DEFAULT	
_	SoundingRS-UL-ConfigDedicatedAperiodic-r10-DEFAULT	
_	SRB-ToAddModList-RECONFIG	
_	TDD-Config-DEFAULT	
_	TPC-PDCCH-Config-DEFAULT	
_	UplinkPowerControlCommon-DEFAULT	
_	UplinkPowerControlCommonSCell-r10-DEFAULT	238

_	UplinkPowerControlCommon-v1020-DEFAULT	
_	UplinkPowerControlDedicated-DEFAULT	239
_	UplinkPowerControlDedicated-v1020-DEFAULT	239
_	UplinkPowerControlDedicated-v1130-DEFAULT	
_	UplinkPowerControlDedicatedSCell-r10-DEFAULT	240
-	RadioResourceConfigDedicated-DRB-Mod	240
-	RadioResourceConfigDedicated-PCell-PATTERN	
_	OtherConfig-r9	
4.6.4	Security control information elements	
_	SecurityConfigHO-DEFAULT	
_	SecurityConfigSMC-DEFAULT	
4.6.5	Mobility control information elements	
_	MobilityControlInfo-HO	
4.6.6	Measurement information elements	
_	MeasConfig-DEFAULT	
_	MeasGapConfig-GP1	
_	MeasGapConfig-GP2	
_	MeasObjectCDMA2000-GENERIC	
_	ReportConfigToAddModList_DEFAULT	
_		
_	MeasIdToAddModList_DEFAULT	
=	MeasObjectEUTRA-GENERIC	
-	MeasObjectGERAN-GENERIC	
-	MeasObjectUTRA-GENERIC	
-	QuantityConfig-DEFAULT	
-	ReportConfigEUTRA-A1	
-	ReportConfigEUTRA-A2	
-	ReportConfigEUTRA-A3	
-	ReportConfigEUTRA-A4	
-	ReportConfigEUTRA-A5	
-	ReportConfigEUTRA-A6	
-	ReportConfigEUTRA-PERIODICAL	
-	ReportConfigInterRAT-B1-GERAN	
-	ReportConfigInterRAT-B1-UTRA	254
-	ReportConfigInterRAT-B2-CDMA2000	255
-	ReportConfigInterRAT-B2-GERAN	256
-	ReportConfigInterRAT-B2-UTRA	257
=	ReportConfigInterRAT-PERIODICAL	
4.6.7	Other information elements	258
_	RRC-TransactionIdentifier-DL	258
_	RRC-TransactionIdentifier-UL	
4.6.8	Channel-bandwidth-dependent parameters	
4.7	Default NAS message and information element contents	
4.7.1	Security protected NAS messages	
4.7.2	Contents of EMM messages	
-	ATTACH ACCEPT	
	ATTACH COMPLETE	
_	ATTACH COMI LETE	
-	ATTACH REJUEST	
_	AUTHENTICATION FAILURE	
_	AUTHENTICATION PAILUREAUTHENTICATION REJECT	
=		
-	AUTHENTICATION REQUEST	
-	AUTHENTICATION RESPONSE	
=	CS SERVICE NOTIFICATION	
-	DETACH ACCEPT (UE originating detach)	
-	DETACH ACCEPT (UE terminated detach)	
-	DETACH REQUEST (UE originating detach)	
-	DETACH REQUEST (UE terminated detach)	
-	DOWNLINK NAS TRANSPORT	
-	EMM INFORMATION	270
-	EMM STATUS	270
_	EXTENDED SERVICE REQUEST	271
	CUTI DE ALLOCATION COMMAND	271

-	GUTI REALLOCATION COMPLETE	272
_	IDENTITY REQUEST	
_	IDENTITY RESPONSE	
_	SECURITY MODE COMMAND	
_	SECURITY MODE COMPLETE	
_	SECURITY MODE REJECT	
_	SERVICE REJECT	
_	SERVICE REQUEST	
_	TRACKING AREA UPDATE ACCEPT	
_	TRACKING AREA UPDATE COMPLETE	
_	TRACKING AREA UPDATE REJECT	
_	TRACKING AREA UPDATE REQUEST	
_	UPLINK NAS TRANSPORT	
4.7.3	Contents of ESM messages	
4.7.3	ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT	201 201
_	ACTIVATE DEDICATED EPS BEARER CONTEXT REJECT	201 292
_	ACTIVATE DEDICATED EPS BEARER CONTEXT REJECT	
_	ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST	
=		
_	ACTIVATE DEFAULT EPS BEARER CONTEXT REJECT	284
-	ACTIVATE DEFAULT EPS BEARER CONTEXT REQUEST	285
-	BEARER RESOURCE ALLOCATION REJECT	
-	BEARER RESOURCE ALLOCATION REQUEST	
-	BEARER RESOURCE MODIFICATION REJECT	
-	BEARER RESOURCE MODIFICATION REQUEST	
-	DEACTIVATE EPS BEARER CONTEXT ACCEPT	
-	DEACTIVATE EPS BEARER CONTEXT REQUEST	
-	ESM INFORMATION REQUEST	292
-	ESM INFORMATION RESPONSE	
-	ESM STATUS	
-	MODIFY EPS BEARER CONTEXT ACCEPT	
-	MODIFY EPS BEARER CONTEXT REJECT	
=	MODIFY EPS BEARER CONTEXT REQUEST	295
=	NOTIFICATION	296
-	PDN CONNECTIVITY REJECT	296
_	PDN CONNECTIVITY REQUEST	297
=	PDN DISCONNECT REJECT	
_	PDN DISCONNECT REQUEST	
4.7A	Default TC message and information element contents	
-	ACTIVATE TEST MODE	
_	ACTIVATE TEST MODE COMPLETE	
_	CLOSE UE TEST LOOP	
_	CLOSE UE TEST LOOP COMPLETE	
_	DEACTIVATE TEST MODE	
_	DEACTIVATE TEST MODE COMPLETE	
_	OPEN UE TEST LOOP	
_	OPEN UE TEST LOOP COMPLETE	
=	UE TEST LOOP MODE C MBMS PACKET COUNTER REQUEST	
=		
- 4.7D	UE TEST LOOP MODE C MBMS PACKET COUNTER RESPONSE	
4.7B	Default UTRA message and information element contents	
4.7B.1	UTRA RRC messages	303
_	HANDOVER TO UTRAN COMMAND	
-	HANDOVER FROM UTRAN COMMAND	
_	MEASUREMENT CONTROL	
_	MEASUREMENT REPORT	
_	PHYSICAL CHANNEL RECONFIGURATION	
_	PHYSICAL CHANNEL RECONFIGURATION COMPLETE	
_	RRC CONNECTION REQUEST	
_	SECURITY MODE COMMAND	
_	SECURITY MODE COMPLETE	
_	UTRAN MOBILITY INFORMATION	
_	UTRAN MOBILITY INFORMATION CONFIRM	321
4 7R 2	LITRA NAS messages	321

4.7C	Default DS-MIPv6 message and information element contents	331
4.7C.1	IKEv2 messages	
_	IKEv2 IKE_SA_INIT Request	331
-	IKE_SA_INIT Response	334
_	IKE_AUTH_Request	335
-	IKE_AUTH Response	338
4.7C.2	Messages used to perform DS-MIPv6 registration and deregistration	342
-	Router Advertisement	342
_	Binding Update	
_	Binding Acknowledgement	
-	Binding Revocation Indication	
_	Binding Revocation Acknowledgement	
4.7D	Default GERAN message and information element contents	
,	PRS message	
_	PS HANDOVER COMMAND	
4.8	Reference radio bearer configurations.	
4.8.1	General	
4.8.2	SRB and DRB parameters and combinations	
4.8.2.1	*	
	SRB and DRB parameters	
4.8.2.1.1	SRB configurations	
4.8.2.1.2	DRB PDCP configurations	
4.8.2.1.3	DRB RLC configurations	
4.8.2.1.4	DRB Logical Channel configurations	
4.8.2.1.5	MAC configurations	
4.8.2.1.6	Physical Layer configurations	
4.8.2.1.7	DRB configurations	358
4.8.2.2	SRB and DRB combinations	
4.8.2.2.1	Combinations on DL-SCH and UL-SCH	358
4.8.3	UTRA reference radio parameters and combinations	358
4.8.4	GERAN reference PDP context parameters	359
4.9	Common test USIM, CSIM and ISIM parameters	359
4.9.1	General	359
4.9.1.1	Definitions	
4.9.1.2	Definition of the test algorithm for authentication	
4.9.1.2.1	Authentication and key derivation in the test USIM, CSIM and ISIM and SS	
4.9.1.2.2	Generation of re-synchronization parameters in the USIM, CSIM and ISIM	
4.9.1.2.3	Using the authentication test algorithm for UE conformance testing	
4.9.2	Default parameters for the test USIM, CSIM and ISIM	
4.9.3	Default settings for the Elementary Files (EFs)	
	Modified contents of the USIM Elementary Files	
4.9.3.1		
4.9.3.2	Modified contents of the CSIM Elementary Files	360
5 Te	est environment for RF test	372
5.1	Requirements of test equipment	
5.2	RF Reference system configurations	
5.2.1	Common parameters for simulated E-UTRA cells	
5.2.1.1	Combinations of system information blocks	
5.2.1.2	Scheduling of system information blocks	
5.2.1.3		
	Common contents of system information messages	
5.2A	Generic RF procedures	
5.2A.1	UE RF test states	
5.2A.1A	Registered, Idle Mode, UE Test Mode Activated (State 2A-RF)	
5.2A.1A.		
5.2A.1A.2	•	
5.2A.1A.3		
5.2A.1A.4		
5.2A.2	Generic Default Radio Bearer Establishment, UE Test Mode Activated (State 3A-RF)	
5.2A.2.1	Initial conditions	
5.2A.2.2	Definition of system information messages	379
5.2A.2.3	Procedure	379
5.2A.2.4	Specific message contents	379
5 2A 3	Loopback Activation without looped data (State 4A-RF)	379

5.2A.3.1	Initial conditions	379
5.2A.3.2	Definition of system information messages	380
5.2A.3.3		
5.2A.3.4	- I	
5.2A.4	Procedure to configure SCC	
5.2 A.41		
5.2A.4.1	±	
5.2A.4.1	±	
5.2A.5	Exceptions for feICIC tests	
5.2A.5.1		
5.2A.5.1	ϵ	
5.3	Default RRC message and information elements contents	
5.3.1	Radio resource control information elements	
5.4	Default NAS message and information elements contents	
5.5	Reference radio bearer configurations	
5.5.1	SRB and DRB parameters	
5.5.1.1	MAC configurations	
5.5.1.2	Physical Layer configurations	
5.5.1.3	SRB and DRB combinations	
5.5.1.3.1	Combinations on DL-SCH and UL-SCH	387
6 T	est environment for Signalling test	388
6.1	Requirements of test equipment	
6.2	Reference test conditions	
6.2.1	Physical channel allocations	
6.2.1.1	Antennas	
6.2.1.2	Downlink physical channels and physical signals	388
6.2.1.3	Mapping of downlink physical channels and signals to physical resources	389
6.2.1.4	Uplink physical channels and physical signals	389
6.2.1.5	Mapping of uplink physical channels and signals to physical resources	
6.2.2	Signal levels	
6.2.2.1	Downlink signal levels	
6.2.2.2	Measurement accuracy and side conditions	
6.2.3	Default test frequencies	
6.2.3.1	Test frequencies for signalling test	
6.2.3.2	Test frequencies for CA signalling test	
6.3	Reference system configurations	
6.3.1	Default parameter specific for simulated cells	
6.3.1.1	Intra-frequency neighbouring cell list in SIB4 for E-UTRA cells	
6.3.1.2	Inter-frequency carrier frequency list in SIB5 for E-UTRA cells	
6.3.1.3	UTRA carrier frequency list in SIB6 for E-UTRA cells	
6.3.1.4	GERAN carrier frequency group list in SIB7 for E-UTRA cells	
6.3.1.5	CDMA2000 HRPD carrier frequency list in SIB8 for E-UTRA cells	
6.3.1.6	CDMA2000 1xRTT carrier frequency list in SIB8 for E-UTRA cells	
6.3.1.7	E-UTRA carrier frequency list in SIB19 for UTRA cells	
6.3.2	Default configurations for NAS test cases	
6.3.2.1	Simulated network scenarios for NAS test cases	
6.3.2.2	Simulated NAS cells	
6.3.2.3 6.3.2.3.1	Broadcast system information	
6.3.2.3.1	1 , 0	
6.3.2.3.2	2 Inter-frequency carrier frequency list in SIB5 for E-UTRA NAS cells	
6.3.3.1	Full cell configuration.	
6.3.3.2	Minimum uplink cell configuration	
6.3.3.3	Broadcast only cell configuration	
6.3.3.3A		
6.3.3.4	Application of different cell configurations	
6.3.4	SCell configurations	
6.4	Generic procedures	
6.4.1	Initial UE states and setup procedures	
6.4.1.1	Initial UE states and setup procedures	
6412	Dedicated Bearer Establishment (to state 5)	407

6.4.1.2.1	Initial conditions	407
6.4.1.2.2	Definition of system information messages	408
6.4.1.2.3	Procedure	
6.4.1.2.4	Specific message contents	
6.4.1.3	Loopback Activation (to state 6)	
6.4.1.3.1	Initial conditions	
6.4.1.3.2	Definition of system information messages	
6.4.1.3.3	Procedure	
6.4.1.3.4	Specific message contents	
6.4.2	Test procedures	409
6.4.2.1	Introduction	409
6.4.2.2	Test procedure to check RRC_IDLE state	409
6.4.2.3	Test procedure to check RRC_CONNECTED state	410
6.4.2.4	Test procedure Paging (for NAS testing)	
6.4.2.5	Test procedure for no response to paging (for NAS testing)	
6.4.2.6	Test procedure to check that a dedicated EPS bearer context is active (for NAS testing)	
6.4.2.7	Test procedure to check that UE is camped on a new E-UTRAN cell	
6.4.2.7A	Test procedure to check that UE is camped on E-UTRAN cell upon mobility from another RAT	
6.4.2.8	Test procedure to check that UE is camped on a new UTRAN cell	
6.4.2.9	Test procedure to check that UE is camped on a new GERAN cell	416
6.4.2.10	Test procedure to check that UE performs tracking area updating procedure without ISR and	
	security reconfiguration after successful completion of handover from UTRA	
6.4.3	Reference test procedures for TTCN development	419
6.4.3.1	UE triggered establishment of a dedicated EPS bearer context	
6.4.3.2	UE triggered establishment of a default EPS bearer context associated with an additional PDN	421
6.4.3.3	UE triggered modification of an EPS bearer context	
6.4.3.4	UE triggered deletion of an EPS bearer context	
6.4.3.5	UE triggered CS call	
6.4.3.6	UE triggered MO SMS over SGs	
6.4.3.7	CS fallback to UTRAN procedures (LAI of UTRAN cell same as the LAI received in combined	720
0.4.3.7	Attach procedure in EUTRA cell)	126
(1271		
6.4.3.7.1	CS fallback to UTRAN with redirection / MT call (PS bearers not established)	
6.4.3.7.2	CS fallback to UTRAN with redirection / MO call (PS bearers not established)	
6.4.3.7.3	CS fallback to UTRAN with redirection / MT call (PS bearer established)	
6.4.3.7.4	CS fallback to UTRAN with redirection / MO call (PS bearer established)	
6.4.3.7.5	CS fallback to UTRAN with Handover / MT call	
6.4.3.7.5.1		
6.4.3.7.6	CS fallback to UTRAN with Handover / MO call	432
6.4.3.7.6.1		433
6.4.3.7.7	CS fallback to UTRAN with Handover / emergency call	434
6.4.3.7.7.1	and the state of t	
6.4.3.8	CS fallback to GERAN procedures (LAI of GERAN cell same as the LAI received in combined	
	Attach procedure in EUTRA cell)	435
6.4.3.8.1	CS fallback to GERAN with redirection or CCO / MT call (DTM not supported)	
6.4.3.8.2	CS fallback to GERAN with redirection or CCO / MO call (DTM not supported)	
6.4.3.8.3	CS fallback to GERAN with PS Handover / MT call (EDTM not supported)	
6.4.3.8.4	CS fallback to GERAN with PS Handover / MO call (EDTM not supported)	
6.4.3.8.5	CS fallback to GERAN with PS Handover / MT call (EDTM supported)	
6.4.3.9	SRVCC Handover to UTRA	
6.4.3.9.1	Specific message contents	
6.4.3A	Test case postambles	
6.4.3A.1	Introduction	
6.4.3A.2	Reference end states	439
6.5	Default RRC message and information element contents	441
6.5.1	Measurement information elements	441
-	MeasConfig-DEFAULT	
_	MeasGapConfig-GP1	
_	MeasGapConfig-GP2	
6.6	Default NAS message and information element contents	
6.6.1	Reference default EPS bearer contexts	
6.6.2	Reference dedicated EPS bearer contexts	
6.6A	Default SMS over SGs message and information element contents	448

6.6A.1	CM-sublayer messages	
-	CP-ACK	448
-	CP-DATA	
6.6A.2	Short Message Relay Layer (SM-RL) messages	
-	RP-ACK RPDU	
-	RP-DATA RPDU	
6.6A.3	Short Message Transfer Layer (SM-TL) messages	450
-	SMS-DELIVER	450
-	SMS-SUBMIT	450
6.6B	Reference radio bearer configurations	451
6.6B.1	SRB and DRB parameters and combinations	451
6.6B.1.1	SRB and DRB parameters	451
6.6B.1.1	.1 Physical Layer configurations	451
6.7	Timer Tolerances.	451
7 T	est environment for RRM tests	452
7.1	Requirements of <i>test</i> equipment	452
7.2	RRM Reference system configurations	
7.2.1	Common parameters for simulated E-UTRA cells	
7.2.1.1	Combinations of system information blocks	
7.2.1.2	Scheduling of system information blocks	
7.2.1.3	Common contents of system information messages	
7.2.2	Common parameters for simulated GERAN cells	
7.2.2.1	Mapping of GERAN cells	
7.2A	Generic RRM procedures	
7.2A.1	UE RRM test states	
7.2A.2	UE Registration, UE Test Mode Activated (State 2A-RF)	
7.2A.3	Generic Default Radio Bearer Establishment, UE Test Mode Activated (State 3A-RF)	
7.2A.4	Generic Default Radio Bearer Establishment, UE Test Mode Activated, pre-registration on HRPD	
	(State 3B-RF)	
7.2A.4.1	Initial conditions	455
7.2A.4.2	Definition of system information messages	455
7.2A.4.3		
7.2A.4.4	Specific message contents	455
7.2A.5	Procedure to configure SCC	
7.2A.6	Exceptions for feICIC tests	
7.2B	Other generic RRM procedures	
7.2B.1	Tracking area updating procedure	
7.3	Default RRC message and information elements contents	
7.3.1	Contents of RRC messages	
7.3.2	Radio resource control information elements	
7.3.3	Measurement information elements	458
7.4	Default NAS message and information elements contents	458
7.5	Reference radio bearer configurations	
7.5.1	SRB and DRB parameters	
7.5.1.1	MAC configurations.	
Annex	A (informative): Connection Diagrams	459
Annex	B (informative): Change history	529

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

Introduction

The definition of the Conformance Tests for UE in E-UTRAN will be a complex task as the complete test suite covers RF, EMC and Protocol aspects of the UE.

Each test requires a Test Environment to be defined in which the UE has to operate to defined standards, constraints and performance. The overall task can be simplified if there are a number of well defined and agreed Common Test Environments where every one can be used for a number of tests. Hence the present document defines testing conditions that are common to several tests avoiding the need to duplicate the same information for every single test.

The present document defines default values for a variety of common areas. Where values are not specified in test cases, the defaults in the present document will apply. If specified, the test case values will take precedence.

1 Scope

The present document contains definitions of reference conditions and test signals, default parameters, reference radio bearer configurations used in radio bearer interoperability testing, common radio bearer configurations for other test purposes, common requirements for test equipment and generic set-up procedures for use in conformance tests for the 3rd Generation E-UTRAN User Equipment (UE).

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document in the same Release as the present document.

[1]	3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
[2]	3GPP TS 23.003: "Numbering, addressing and identification".
[3]	3GPP TS 23.122: "Non-Access-Stratum functions related to Mobile Station (MS) in idle mode".
[4]	3GPP TS 24.008: "Mobile radio interface Layer 3 specification; Core network protocols; Stage 3".
[5]	3GPP TS 34.108: "Common Test Environments for User Equipment (UE); Conformance testing".
[6]	3GPP TS 34.109: "Terminal logical test interface; Special conformance testing functions".
[7]	3GPP TS 34.123-1: "User Equipment (UE) conformance specification; Part 1: Protocol conformance specification".
[8]	3GPP TS 34.123-2: "User Equipment (UE) conformance specification; Part 2: Implementation conformance statement (ICS) specification".
[9]	3GPP TS 34.123-3: "User Equipment (UE) conformance specification; Part 3: Abstract test suites (ATSs)".
[10]	3GPP TS 36.300: "Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Overall description; Stage 2".
[11]	3GPP TS 36.302: "Evolved Universal Terrestrial Radio Access (E-UTRA); Services provided by the physical layer".
[12]	3GPP TS 36.304: "Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) procedures in idle mode".
[13]	3GPP TS 36.306: "Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) radio access capabilities".
[14]	3GPP TS 36.321: "Evolved Universal Terrestrial Radio Access (E-UTRA); Medium Access Control (MAC) protocol specification".
[15]	3GPP TS 36.322: "Evolved Universal Terrestrial Radio Access (E-UTRA); Radio Link Control (RLC) protocol specification".
[16]	3GPP TS 36.323: "Evolved Universal Terrestrial Radio Access (E-UTRA); Packet Data Convergence Protocol (PDCP) specification".

[17]	3GPP TS 36.331: "Evolved Universal Terrestrial Radio Access (E-UTRA); Radio Resource Control (RRC); Protocol Specification".
[18]	3GPP TS 36. 523-1: "Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Packet Core (EPC); User Equipment (UE) conformance specification; Part 1: Protocol conformance specification".
[19]	3GPP TS 36.523-2: "Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Packet Core (EPC); User Equipment (UE) conformance specification; Part 2: Implementation Conformance Statement (ICS) proforma specification".
[20]	3GPP TS 36.523-3: "Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Packet Core (EPC); User Equipment (UE) conformance specification; Part 3: Abstract Test Suites (ATS)".
[21]	3GPP TS 36.521-1: "Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) conformance specification; Radio transmission and reception; Part 1: conformance testing".
[22]	3GPP TS 36.521-2: "Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) conformance specification; Radio transmission and reception; Part 2: Implementation Conformance Statement (ICS)".
[23]	3GPP TR 24.801: "3GPP System Architecture Evolution; CT WG1 aspects".
[24]	3GPP TS 23.401: "General Packet Radio Service(GPRS) enhancements for Evolved Universal Terrestrial Access Network (E-UTRAN) access".
[25]	3GPP TS 51.010-1: "Mobile Station (MS) conformance specification; Part 1: Conformance specification".
[26]	ISO/IEC 9646 (all parts): "Information technology - Open Systems Interconnection - Conformance testing methodology and framework".
[27]	3GPP TS 36.101: "Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) radio transmission and reception".
[28]	3GPP TS 24.301: "Non-Access-Stratum (NAS) protocol for Evolved Packet System (EPS); Stage 3".
[29]	3GPP TS 36.213: "Evolved Universal Terrestrial Radio Access (E-UTRA); Physical layer procedures".
[30]	3GPP TS 36.104: "Evolved Universal Terrestrial Radio Access (E-UTRA); Base Station (BS) radio transmission and reception".
[31]	3GPP TS 33.401: "3GPP System Architecture Evolution (SAE); Security architecture".
[32]	3GPP TS 31.101: "UICC-terminal interface; Physical and logical characteristics".
[33]	3GPP TS 31.102: "Characteristics of the Universal Subscriber Identity Module (USIM) application".
[34]	3GPP TS 36.521-3: "Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) conformance specification; Radio transmission and reception; Part 3: Radio Resource Management conformance testing".
[35]	3GPP TS 36.211: "Evolved Universal Terrestrial Radio Access (E-UTRA); Physical channels and modulation".
[36]	3GPP2 TSG-C C.S0038-B v1.0: "Signalling Conformance Specification for High Rate Packet Data Air Interface".
[37]	3GPP2 TSG-C C.S0043-A v1.0: "Signalling Conformance Test Specification for cdma2000 Spread Spectrum Systems".

[38]	3GPP TS 36.509: "Evolved Universal Terrestrial Radio Access (E-UTRA); Special conformance testing functions for User Equipment (UE)"
[39]	3GPP TS 36.133: "Evolved Universal Terrestrial Radio Access (E-UTRA); Requirements for support of radio resource management"
[40]	3GPP TS 24.229: "IP multimedia call control protocol based on Session Initiation Protocol (SIP) and Session Description Protocol (SDP); Stage 3"
[41]	3GPP TS 23.402: "Architecture enhancements for non-3GPP accesses"
[42]	3GPP2 X.S0057-0-B v1.0 "E-UTRAN - eHRPD Connectivity and Interworking: Core Network Aspects"
[43]	3GPP TS 34.229-1: "Internet Protocol (IP) multimedia call control protocol based on Session Initiation Protocol (SIP) and Session Description Protocol (SDP); User Equipment (UE) conformance specification; Part 1: Protocol conformance specification ".
[44]	3GPP2 C.S0024-B v3.0: "cdma2000 High Rate Packet Data Air Interface Specification".
[45]	3GPP TS 31.103: "Characteristics of the IP Multimedia Services Identity Module (ISIM) application".
[46]	3GPP TS 34.229-1: "Internet Protocol (IP) multimedia call control protocol based on Session Initiation Protocol (SIP) and Session Description Protocol (SDP); User Equipment (UE) conformance specification; Part 1: Protocol conformance specification".
[47]	3GPP TS 34.229-3: "Internet Protocol (IP) multimedia call control protocol based on Session Initiation Protocol (SIP) and Session Description Protocol (SDP); User Equipment (UE) conformance specification; Part 3: Abstract Test Suite (ATS)".
[48]	3GPP2 C.S0065-B v2.0: "cdma2000 Application on UICC for Spread Spectrum Systems".
[49]	3GPP2 C.S0005-F v1.0: "Upper Layer (Layer 3) Signalling Standard for cdma2000 Spread Spectrum Systems – Release A, Addendum 2".
[50]	3GPP TS 34.121-1: "User Equipment (UE) conformance specification; Radio transmission and reception (FDD);Part 1: Conformance specification ".
[51]	3GPP TS 34.122: "Terminal conformance specification; Radio transmission and reception (TDD)".
[52]	GSMA PRD IR.92: "IMS Profile for Voice and SMS".

3 Definitions, symbols and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in TR 21.905 [1] apply, unless specified below:

B: a value followed by "B" is a binary value.

H: a value followed by "H" is a hexadecimal value.

3.2 Symbols

For the purposes of the present document, the following symbols apply:

N_{DL} Downlink EARFCN

N_{RB} Transmission bandwidth configuration, expressed in units of resource blocks

 N_{RB_agg} Aggregated Transmission Bandwidth Configuration. The number of the aggregated RBs within the

fully allocated Aggregated Channel bandwidth.

N_{UL} Uplink EARFCN

3.3 Abbreviations

For the purposes of the present document, the abbreviations specified in TR 21.905 [1] apply, with any additional abbreviations specified below:

1xRTT 1x Radio Transmission Technology

CA Carrier Aggregation
CC Component Carrier
DRB (user) Data Radio Bearer

EARFCN E-UTRA Absolute Radio Frequency Channel Number

ECM EPS Connection Management EMM EPS Mobility Management

ENB Evolved Node B

EPRE Energy Per Resource Element
ESM EPS Session Management
HRPD High Rate Packet Data
MAC Media Access Control

OFDM Orthogonal Frequency Division Multiplexing

RBs Resource Blocks

ROHC Robust Header Compression

SS System Simulator
TH Temperature High
TL Temperature Low
TP Transmission Point
VH Higher extreme Voltage
VL Lower extreme Voltage

xCH_RA xCH-to-RS EPRE ratio for the channel xCH in all transmitted OFDM symbols not containing RS xCH_RB xCH-to-RS EPRE ratio for the channel xCH in all transmitted OFDM symbols containing RS

4 Common test environment

4.1 Environmental conditions

The requirements in this clause apply to all types of UE(s).

4.1.1 Temperature

The UE shall fulfil all the requirements in the full temperature range of:

Table 4.1.1-1: Temperature Test Environment

+15°C to +35°C	for normal conditions (with relative humidity up to 75 %)	
-10°C to +55°C	for extreme conditions (see IEC publications 68-2-1 and 68-2-2)	

Outside this temperature range the UE, if powered on, shall not make ineffective use of the radio frequency spectrum. In no case shall the UE exceed the transmitted levels as defined in TS 36.101 [27] for extreme operation.

The normative reference for this requirement is TS 36.101 [27] Annex E.1.

Some tests are performed also in extreme temperature conditions. These test conditions are denoted as TL (temperature low, -10° C) and TH (temperature high, $+55^{\circ}$ C).

4.1.2 Voltage

The UE shall fulfil all the requirements in the full voltage range, i.e. the voltage range between the extreme voltages.

The manufacturer shall declare the lower and higher extreme voltages and the approximate shutdown voltage. For the equipment that can be operated from one or more of the power sources listed below, the lower extreme voltage shall not be higher, and the higher extreme voltage shall not be lower than that specified below.

Table 4.1.2-1: Voltage Test Environment

Power source	Lower extreme voltage	Higher extreme voltage	Normal conditions voltage
AC mains	0,9 * nominal	1,1 * nominal	nominal
Regulated lead acid battery	0,9 * nominal	1,3 * nominal	1,1 * nominal
Non regulated batteries:			
Leclanché	0,85 * nominal	Nominal	Nominal
Lithium	0,95 * nominal	1,1 * Nominal	1,1 * Nominal
Mercury/nickel & cadmium	0,90 * nominal		Nominal

Outside this voltage range the UE if powered on, shall not make ineffective use of the radio frequency spectrum. In no case shall the UE exceed the transmitted levels as defined in TS 36.101 [27] for extreme operation. In particular, the UE shall inhibit all RF transmissions when the power supply voltage is below the manufacturer declared shutdown voltage.

The normative reference for this requirement is TS 36.101 [27] Annex E.2.

Some tests are performed also in extreme voltage conditions. These test conditions are denoted as VL (lower extreme voltage) and VH (higher extreme voltage).

4.2 Common requirements of test equipment

Mobile conformance testing can be categorized into 3 distinct areas:

- RF Conformance Testing.
- EMC Conformance Testing.
- Signalling Conformance Testing.

The test equipment required for each category of testing may or not be different, depending on the supplier of the test equipment. However, there will be some generic requirements of the test equipment that are essential for all three categories of test, and these are specified in this clause.

In addition, there will be requirements to test operation in multi-system configurations (e.g. EUTRAN plus UTRAN). However, these would not form a common test equipment requirement for the three test areas and are not considered in the present document.

The test equipment shall use the same number of Tx antennas for all parts of the tests, Initial condition and Test procedure, as specified in the minimum requirement.

4.2.1 General functional requirements

NOTE: This clause has been written such that it does not constrain the implementation of different architectures and designs of test equipment.

All test equipment used to perform conformance testing on a UE shall provide a platform suitable for testing UE's that are either:

- a) FDD Mode; or
- b) TDD Mode; or
- c) both FDD/TDD Modes.

All test equipment shall provide (for the mode(s) supported) the following minimum functionality.

- The capability of emulating a single E-UTRA cell with the appropriate channels to allow the UE to register on the cell.
- The capability to allow the UE to set up an RRC connection with the system simulator, and to maintain the connection for the duration of the test.
- The capability (for the specific test):

- to select and support an appropriate radio bearer for the downlink;
- to set the appropriate downlink power levels;
- to set up and support the appropriate radio bearer for the uplink;
- to set and control the uplink power levels.

4.2.2 Minimum functional requirements

4.2.2.1 Supported Cell Configuration

The System Simulator shall provide the capability to simulate a minimum number of cells (of the appropriate E-UTRA Mode) whose number and capabilities are governed by the test cases that need to be performed (test cases are defined in 3GPP TS 36.523-1 [18](Signalling), 3GPP TS 36.521-1 [21] (RF) and 3GPP TS 36.521-3 [34] (RRM). For this purpose test cases can be split into two different categories: Tests that require only one cell and Tests that require several cells.

To perform test cases requiring one cell, the system simulator must provide a cell offering the capabilities to perform all the test cases in this category.

To perform test cases requiring several cells, additional cells must be provided by the system simulator. The additional cells, however, need only provide a minimum set of capabilities so as to support the first cell in carrying out the multi-cell test cases.

The type and number of channels (especially physical channels) constitute an important set of capabilities for a cell. The following clauses list possible channels that may be supported by the SS. Each channel type, however, and the minimum number of channels needed are only mandatory if specific test cases require them.

The mapping between Logical and Transport channels is as described in 3GPP TS 36.321 [14]. Similarly the mapping between Transport channels and Physical channels is as described in 3GPP TS 36.211, TS 36.302 and TS 36.212. The reference measurement channels (mapping between Transport channels and Physical channels for PDSCH/PDCCH) are defined in 3GPP TS 36.521-1[21] annex A

4.2.2.1.1 Supported Channels

4.2.2.1.1.1 Logical channels

Logical channel	Minimum number	Comments
ВССН	1	
CCCH	1	
DCCH	2	
PCCH	1	
DTCH		Depending on SS's support for RB service testing (See clause 12 of 3GPP TS 36.523-1 [?]

4.2.2.1.1.2 Transport channels

Transport channel	Minimum number	Comments
BCH	1	
PCH	1	
RACH	1	
DL-SCH	n <ffs></ffs>	
UL-SCH	n <ffs></ffs>	

4.2.2.1.1.3 Physical channels

Physical channel	Minimum number	Comments	
PBCH	1	Physical Broadcast Channel	
PCFICH	1	The physical control format indicator channel carries information about the number of OFDM symbols used for transmission of PDCCHs in a subframe	
PDCCH	1	The physical downlink control channel carries scheduling assignments and other control information.	

Physical channel	Minimum number	Comments	
PDSCH	1	Physical Downlink Shared Channel	
PHICH	[1]	The PHICH carries the hybrid-ARQ ACK/NAK	
PUCCH	1	The physical uplink control channel carries uplink control information	
PUSCH	1	Physical Uplink Shared Channel	
PRACH	1	Physical Random Access Channel	

4.2.2.1.1.4 Physical signals

Physical signal	Minimum number	Comments
Demodulation	NA	UL
reference signal		
Sounding Reference signal	NA	UL TBD, if applicable
Cell-specific Reference Signal	NA	DL
UE-specific reference signal	NA	DL
Primary synchronisation signal	NA	DL
Secondary synchronisation signal	NA	DL

4.2.2.2 Support of T_{cell} timing offset

The timing offset in terms of frame start timing between any pair of TDD cells shall be < [3us]. For FDD cells there is no such restriction.

4.3 Reference test conditions

This clause contains the reference test conditions, which apply to all test cases unless otherwise specified.

4.3.1 Test frequencies

The test frequencies are based on the E-UTRA frequency bands defined in the core specifications.

The raster spacing is 100 KHz.

E-UTRA/FDD is designed to operate in paired bands of 3GPP TS 36.101 [27]. The reference test frequencies for the RF and Signalling test environment for each of the operating bands are defined in sub clause 4.3.1.1.

E-UTRA/TDD is designed to operate in unpaired bands of 3GPP TS 36.101 [27]. The reference test frequencies for the RF and Signalling test environment for each of the operating bands are defined in sub clause 4.3.1.2.

For non-CA Signalling testing, E-UTRA frequency to be tested is mid range and E-UTRA channel bandwidth to be tested is 5MHz for all operating bands for all test cases as the default configuration unless specific channel bandwidth is specified for the operating band below:

For Band 11, 13, 18 and 20, channel bandwidth to be tested is 10 MHz as the default configuration.

For Band 38, 39, 40 and 41, channel bandwidth to be tested is 20 MHz as the default configuration.

For CA Signalling testing with two component carriers, E-UTRA frequencies to be tested are according to sub clause 6.2.3.2 and the E-UTRA channel bandwidth combination is according to Table 4.3.1-1.

Table 4.3.1-1: Default E-UTRA channel bandwidth combinations for CA Signalling testing with two component carriers

CA configuration (Band(s),BW Class,BW Combination Set)	CA Channel Bandwidth combination carrier 1 + carrier 2 [MHz + MHz]	Comment
Intra-band contiguous and Bandwidth Class C	20+20	This channel bandwidth combination is used for all Intra-band contiguous CA configurations using Bandwidth Class C unless specific channel bandwidth combination is specified for a CA configuration or CA Bandwidth Combination Set by specific entries in this table below.
Intra-band contiguous and Bandwidth Class B	5+5	This channel bandwidth combination is used for all Intra-band contiguous CA configurations using Bandwidth Class B unless specific channel bandwidth combination is specified for a CA configuration or CA Bandwidth Combination Set by specific entries in this table below.
Inter-band CA and CA Bandwidth Class Combination A-A	10 + 10	This channel bandwidth combination is used for all Inter-band contiguous CA configurations using Bandwidth Class Combination A-A unless specific channel bandwidth combination is specified for a CA configuration or CA Bandwidth Combination Set by specific entries in this table below.
CA_1A-19A	15 + 10	This channel bandwidth combination is used for Inter-band contiguous CA configuration CA_1A-19A.
CA_1A-21A	15 + 15	This channel bandwidth combination is used for Inter-band contiguous CA configuration CA_1A-21A.
CA_3A-19A	20 + 10	This channel bandwidth combination is used for Inter-band contiguous CA configuration CA_3A-19A.
CA_19A-21A	10 + 15	This channel bandwidth combination is used for Inter-band contiguous CA configuration CA_19A-21A.
CA_39A-41A	20+20	This channel bandwidth combination is used for Inter-band CA configuration CA_39A-41A.

For RF testing, E-UTRA frequencies to be tested are low range, mid range and high range for all supported operating bands by default. E-UTRA channel bandwidths to be tested are lowest bandwidth, 5MHz bandwidth and highest bandwidth for all supported operating bands by default. Actual test configurations are specified case by case and stated in test case itself as the initial conditions.

The lowest bandwidth, 5MHz bandwidth and highest bandwidth are selected from the combined table which includes nominal and additional channel bandwidth.

In the case 5MHz bandwidth is not supported by the UE, E-UTRA channel bandwidth to be tested is only lowest bandwidth and highest bandwidth.

If channel bandwidth to be tested is equal to the lowest or highest channel bandwidth, then the same channel bandwidth is not required to be tested twice.

In addition to the default channel bandwidths to be tested specified above, for Bands 2, 4, 18, 19, 20 and 25, an industry requirement of testing in 10MHz channel bandwidth is allowed for test cases in chapters 6 and 7 in TS 36.521-1 [21].

Editor's note: For RF testing, an industry requirement of testing in 10MHz channel bandwidth is requested for Bands 2, 4, 18, 19, 20 and 25 for test cases in chapters 6 and 7 in TS 36.521-1[21], changing the existing test points to address this is being discussed in RAN5 and will be considered pending technical justification.

For A-GNSS testing in TS 37.571-1, the E-UTRA frequency and channel bandwidth to be tested follow the same rules as for Signalling testing above.

For intra-band non-contiguous CA (CA_XA-XA) test frequencies have been defined following the basic assumption that CC1 uses the Low Range frequency of the band, while CC2 the High Range frequency. Additional test frequencies not following this rule, are (should be) identified by notes.

4.3.1.1 FDD Mode Test frequencies

4.3.1.1.1 FDD reference test frequencies for operating band 1

Table 4.3.1.1.1-1: Test frequencies for E-UTRA channel bandwidth for operating band 1

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	5	18025	1922.5	25	2112.5
Low Range	10	18050	1925	50	2115
	15	18075	1927.5	75	2117.5
	20	18100	1930	100	2120
Mid Range	5/10/15/20	18300	1950	300	2140
	5	18575	1977.5	575	2167.5
High Dongs	10	18550	1975	550	2165
High Range	15	18525	1972.5	525	2162.5
	20	18500	1970	500	2160

4.3.1.1.1A FDD reference test frequencies for CA in operating band 1

Table 4.3.1.1.1A-1: Test frequencies for CA_1C

Range	CC- Combo / NRB_agg [RB]			CC1 Note1			CC2 Note1					
		BW [RB]	NuL	f∪∟ [MHz]	N _{DL}	f _{DL} [MHz]	BW [RB]	NuL	f∪∟ [MHz]	N _{DL}	f _{DL} [MHz]	
Low	75+75	75	18075	1927.5	75	2117.5	75	18225	1942.5	225	2132.5	
	100+100	100	18100	1930	100	2120	100	18298	1949.8	298	2139.8	
Mid	75+75	75	18225	1942.5	225	2132.5	75	18375	1957.5	375	2147.5	
	100+100	100	18201	1940.1	201	2130.1	100	18399	1959.9	399	2149.9	
High	75+75	75	18375	1957.5	375	2147.5	75	18525	1972.5	525	2162.5	
	100+100	100	18302	1950.2	302	2140.2	100	18500	1970	500	2160	
Note 1:	Carriers in increasing frequency order.											

4.3.1.1.2 FDD reference test frequencies for operating band 2

Table 4.3.1.1.2-1: Test frequencies for E-UTRA channel bandwidth for operating band 2

Test Frequency ID	Bandwidth [MHz]	N _{UL}	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	18607	1850.7	607	1930.7
	3	18615	1851.5	615	1931.5
Low Pongo	5	18625	1852.5	625	1932.5
Low Range	10	18650	1855	650	1935
	15 ^[1]	18675	1857.5	675	1937.5
	20 [1]	18700	1860	700	1940

Mid Range	1.4/3/5/10 15 ^[1] /20 ^[1]	18900	1880	900	1960
	1.4	19193	1909.3	1193	1989.3
	3	19185	1908.5	1185	1988.5
High Dongo	5	19175	1907.5	1175	1987.5
High Range	10	19150	1905	1150	1985
	15 ^[1]	19125	1902.5	1125	1982.5
	20 [1]	19100	1900	1100	1980

4.3.1.1.2A FDD reference test frequencies for CA in operating band 2

Table 4.3.1.1.2A-1: Test frequencies for CA_2A-2A

Range	CC- Combo / N _{RB_agg} [RB]			CC1 Note1			Wgap [MHz]			CC2 Note1		
		BW [RB]	N _{UL}	f∪∟ [MHz]	N _{DL}	f _{DL} [MHz]		BW [RB]	N _{UL}	f∪∟ [MHz]	N _{DL}	f _{DL} [MHz]
N/A	25+25	25	18625	1852.5	625	1932.5	50	25	19175	1907.5	1175	1987.5
	25+50	25	18625	1852.5	625	1932.5	45	50	19150	1905	1150	1985
	50+50	50	18650	1855	650	1935	40	50	19150	1905	1150	1985
	50+75	50	18650	1855	650	1935	35	75	19125	1902.5	1125	1982.5
	25+100	25	18625	1852.5	625	1932.5	35	100	19100	1900	1100	1980
	50+100	50	18650	1855	650	1935	30	100	19100	1900	1100	1980
	75+100	75	18675	1857.5	675	1937.5	25	100	19100	1900	1100	1980
	100+100	100	18700	1860	700	1940	20	100	19100	1900	1100	1980
Note 1:	1: Carriers in increasing frequency order.											

4.3.1.1.3 FDD reference test frequencies for operating band 3

Table 4.3.1.1.3-1: Test frequencies for E-UTRA channel bandwidth for operating band 3

Test Frequency ID	Bandwidth [MHz]	N _{UL}	Frequency of Uplink [MHz]	N_{DL}	Frequency of Downlink [MHz]
10	1.4	19207	1710.7	1207	1805.7
•	3	19215	1711.5	1215	1806.5
·	5	19225	1711.5	1215	1807.5
Low Range	10	19250	1715	1250	1810
1	15 ^[1]	19275	1717.5	1275	1812.5
İ	20 [1]	19300	1720	1300	1815
Mid Range	1.4/3/5/10 15 ^[1] /20 ^[1]	19575	1747.5	1575	1842.5
	1.4	19943	1784.3	1943	1879.3
	3	19935	1783.5	1935	1878.5
High Dongs	5	19925	1782.5	1925	1877.5
High Range	10	19900	1780	1900	1875
	15 ^[1]	19875	1777.5	1875	1872.5
NOTE 4 D. L.	20 [1]	19850	1775	1850	1870

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.1.3A FDD reference test frequencies for CA in operating band 3

Table 4.3.1.1.3A-1: Test frequencies for CA_3C

	CC-Combo										
Rang e	, N _{RB_agg} [RB]			CC1 Note					CC2 Note1		
		BW [RB]	NuL	f∪∟ [MHz]	N _{DL}	f _{DL} [MHz]	BW [RB]	NuL	f∪∟ [MHz]	N _{DL}	f _{DL} [MHz]
Low	25+100	25	19233	1713.3	1233	1808.3	100	19350	1725	1350	1820
		100	19300	1720	1300	1815	25	19417	1731.7	1417	1826.7
	50+100	50	19255	1715.5	1255	1810.5	100	19399	1729.9	1399	1824.9
		100	19300	1720	1300	1815	50	19444	1734.4	1444	1829.4
	75+100	75	19278	1717.8	1278	1812.8	100	19449	1734.9	1449	1829.9
		100	19300	1720	1300	1815	75	19471	1737.1	1471	1832.1
	100+100	100	19300	1720	1300	1815	100	19498	1739.8	1498	1834.8
Mid	25+100	25	19483	1738.3	1483	1833.3	100	19600	1750.0	1600	1845.0
		100	19550	1745	1550	1840	25	19667	1756.7	1667	1851.7
	50+100	50	19481	1738.1	1481	1833.1	100	19625	1752.5	1625	1847.5
		100	19526	1742.6	1526	1837.6	50	19670	1757.0	1670	1852.0
	75+100	75	19478	1737.8	1478	1832.8	100	19649	1754.9	1649	1849.9
		100	19501	1740.1	1501	1835.1	75	19672	1757.2	1672	1852.2
	100+100	100	19476	1737.6	1476	1832.6	100	19674	1757.4	1674	1852.4
High	25+100	25	19733	1763.3	1733	1858.3	100	19850	1775	1850	1870
		100	19800	1770	1800	1865	25	19917	1781.7	1917	1876.7
	50+100	50	19706	1760.6	1706	1855.6	100	19850	1775	1850	1870
		100	19751	1765.1	1751	1860.1	50	19895	1779.5	1895	1874.5
	75+100	75	19679	1757.9	1679	1852.9	100	19850	1775	1850	1870
		100	19701	1760.1	1701	1855.1	75	19872	1777.2	1872	1872.2
100+100 100 19652 1755.2 1652 1850.2 100 19850 1775 1850 1870											
Note 1:	Carriers in in	creasing	frequenc	y order.							

Table 4.3.1.1.3A-2: Test frequencies for CA_3A-3A

Range	CC- Combo / N _{RB_agg} [RB]			CC1 Note1			Wgap [MHz]			CC2 Note1		
		BW	N.	f∪L	N	fDL		BW		f∪L		fDL
		[RB]	NuL	[MHz]	N _{DL}	[MHz]		[RB]	NuL	[MHz]	N _{DL}	[MHz]
N/A	25+25	25	19225	1712.5	1225	1807.5	65	25	19925	1782.5	1925	1877.5
	25+50	25	19225	1712.5	1225	1807.5	60	50	19900	1780	1900	1875
	50+50	50	19250	1715	1250	1810	55	50	19900	1780	1900	1875
	50+75	50	19250	1715	1250	1810	50	75	19875	1777.5	1875	1872.5
	25+100	25	19225	1712.5	1225	1807.5	50	100	19850	1775	1850	1870
		25	19575	1747.5	1575	1842.5	15	100	19850	1775	1850	1870
							(Note 2)					
	50+100	50	19250	1715	1250	1810	45	100	19850	1775	1850	1870
	75+100	75	19275	1717.5	1275	1812.5	40	100	19850	1775	1850	1870
	100+100	100	19300	1720	1300	1815	35	100	19850	1775	1850	1870
Note 1:	Carriers in		ng frequer									

Note 2: Test point derived with regard to REFSENS requirements.

FDD reference test frequencies for operating band 4 4.3.1.1.4

Table 4.3.1.1.4-1: Test frequencies for E-UTRA channel bandwidth for operating band 4

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	19957	1710.7	1957	2110.7
Low Range	3	19965	1711.5	1965	2111.5
	5	19975	1712.5	1975	2112.5

	10	20000	1715	2000	2115
	15	20025	1717.5	2025	2117.5
	20	20050	1720	2050	2120
Mid Range	1.4/3/5/10/15/20	20175	1732.5	2175	2132.5
	1.4	20393	1754.3	2393	2154.3
	3	20385	1753.5	2385	2153.5
High Dongs	5	20375	1752.5	2375	2152.5
High Range	10	20350	1750	2350	2150
	15	20325	1747.5	2325	2147.5
	20	20300	1745	2300	2145

4.3.1.1.4A FDD reference test frequencies for CA in operating band 4

Table 4.3.1.1.4A-1: Test frequencies for CA_4A-4A

Range	CC- Combo / N _{RB_agg} [RB]			CC1 Note1			Wgap [MHz]			CC2 Note1		
		BW [RB]	NuL	f∪∟ [MHz]	N _{DL}	f _{DL} [MHz]		BW [RB]	NuL	f∪∟ [MHz]	N _{DL}	f _{DL} [MHz]
N/A	25+25	25	19975	1712.5	1975	2112.5	35	25	20375	1752.5	2375	2152.5
	25+50	25	19975	1712.5	1975	2112.5	30	50	20350	1750	2350	2150
	50+50	50	20000	1715	2000	2115	25	50	20350	1750	2350	2150
	50+75	50	20000	1715	2000	2115	20	75	20325	1747.5	2325	2147.5
	25+100	25	19975	1712.5	1975	2112.5	20	100	20300	1745	2300	2145
	50+100	50	20000	1715	2000	2115	15	100	20300	1745	2300	2145
	75+100	75	20025	1717.5	2025	2117.5	10	100	20300	1745	2300	2145
	100+100	100	20050	1720	2050	2120	5	100	20300	1745	2300	2145
Note 1: Carriers in increasing frequency order.												

4.3.1.1.5 FDD reference test frequencies for operating band 5

Table 4.3.1.1.5-1: Test frequencies for E-UTRA channel bandwidth for operating band 5

Test Frequency ID	Bandwidth [MHz]	N _{UL}	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	20407	824.7	2407	869.7
Low Pango	3	20415	825.5	2415	870.5
Low Range	5	20425	826.5	2425	871.5
	10 ^[1]	20450	829	2450	874
Mid Range	1.4/3/5 10 ^[1]	20525	836.5	2525	881.5
	1.4	20643	848.3	2643	893.3
High Dongo	3	20635	847.5	2635	892.5
High Range	5	20625	846.5	2625	891.5
	10 ^[1]	20600	844	2600	889
NOTE 1: Bandwidth	for which a relaxation	on of the spec	ified UE receiver se	ensitivity requir	ement

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.1.6 FDD reference test frequencies for operating band 6

Table 4.3.1.1.6-1: Test frequencies for E-UTRA channel bandwidth for operating band 6

Test Frequency ID	Bandwidth [MHz]	N _{UL}	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
Low Range	5	20675	832.5	2675	877.5
	10 ^[1]	20700	835	2700	880

Mid Range	5 10 ^[1]	20700	835	2700	880
High Range	5	20725	837.5	2725	882.5
	10 ^[1]	20700	835	2700	880
MOTE 4. Developed altho	familials a malacratic		:C		

NOTE: For Band VI testing, the Mobile Country Code shall be set to (MCC = '442/443').

4.3.1.1.7 FDD reference test frequencies for operating band 7

Table 4.3.1.1.7-1: Test frequencies for E-UTRA channel bandwidth for operating band 7

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	5	20775	2502.5	2775	2622.5
Low Bongo	10	20800	2505	2800	2625
Low Range	15	20825	2507.5	2825	2627.5
	20 [1]	20850	2510	2850	2630
Mid Range	5/10/15 20 ^[1]	21100	2535	3100	2655
	5	21425	2567.5	3425	2687.5
High Dongs	10	21400	2565	3400	2685
High Range	15	21375	2562.5	3375	2682.5
	20 [1]	21350	2560	3350	2680

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.1.7A FDD reference test frequencies for CA in operating band 7

Table 4.3.1.1.1A-1: Test frequencies for CA_7C

Range	CC-Combo / N _{RB_agg} [RB]		CC1 Note1				CC2 Note1				
		BW [RB]	NuL	f∪∟ [MHz]	N _{DL}	f _{DL} [MHz]	BW [RB]	NuL	f∪∟ [MHz]	N _{DL}	f _{DL} [MHz]
Low	75+75	75	20825	2507.5	2825	2627.5	75	20975	2522.5	2975	2642.5
	100+100	100	20850	2510	2850	2630	100	21048	2529.8	3048	2649.8
Mid	75+75	75	21025	2527.5	3025	2647.5	75	21175	2542.5	3175	2662.5
	100+100	100	21001	2525.1	3001	2645.1	100	21199	2544.9	3199	2664.9
High	75+75	75	21225	2547.5	3225	2667.5	75	21375	2562.5	3375	2682.5
	100+100	100	21152	2540.2	3152	2660.2	100	21350	2560	3350	2680
Note 1:	Carriers in inc	reasing f	requency	order.							

Table 4.3.1.1.7A-2: Test frequencies for CA_7A-7A

CC- Combo / N _{RB_agg} [RB]			CC1 Note1			Wgap [MHz]			CC2 Note1		
	BW [RB]	NuL	f _{∪L} [MHz]	N _{DL}	f _{DL} [MHz]		BW [RB]	NuL	f∪∟ [MHz]	N _{DL}	f _{DL} [MHz]
50+50	50	20800	2505	2800	2625	50	50	21400	2565	3400	2685
50+75	50	20800	2505	2800	2625	45	75	21375	2562.5	3375	2682.5
75+100	75	20825	2507.5	2825	2627.5	35	100	21350	2560	3350	2680
	75	21025	2527.5	3025	2647.5	15 (Note 2)	100	21350	2560	3350	2680
100+100	100	20850	2510	2850	2630	30	100	21350	2560	3350	2680
	100	21000	2525	3000	2645	15 (Note 2)	100	21350	2560	3350	2680
	Combo / NRB_agg [RB] 50+50 50+75 75+100	Combo / NRB_agg [RB] 50+50 50+75 50 75+100 75 75 100+100 100	BW [RB] Nul 50+50 50 20800 75+100 75 20825 75 21025 100+100 100 20850 100 21000	Combo / N _{RB_agg} [RB] CC1 Note1 BW [RB] NuL [MHz] fuL [MHz] 50+50 50 20800 2505 50+75 50 20825 2507.5 75+100 75 20825 2507.5 75 21025 2527.5 100+100 100 20850 2510 100 21000 2525	Combo / N _{RB_agg} [RB] CC1 Note1 BW [RB] NuL [MHz] MuL [MHz] NuL NDL 50+50 50 20800 2505 2800 50+75 50 20800 2505 2800 75+100 75 20825 2507.5 2825 75 21025 2527.5 3025 100+100 100 20850 2510 2850	Combo / NRB_agg [RB] BW [RB] CC1 Note1 Note1 f _{DL} [MHz] f _{DL} [MHz]	Combo / N _{RB_agg} [RB] CC1 Note1 Wgap [MHz] BW [RB] N _{UL} [MHz] f _{UL} [MHz] f _{DL} [MHz] 50+50 50 20800 2505 2800 2625 50 50+75 50 20800 2505 2800 2625 45 75+100 75 20825 2507.5 2825 2627.5 35 75 21025 2527.5 3025 2647.5 15 (Note 2) 100+100 100 20850 2510 2850 2630 30 100+2000 21000 2525 3000 2645 15 (Note 2)	Combo / N _{RB_agg} [RB] CC1 Note1 Wgap [MHz] Wgap [MHz] BW [RB] BW [RB] Ful [MHz] BW [RB] BW [RB] <t< td=""><td>Combo / N_{RB_agg} [RB] BW [RB] CC1 Note1 Wgap [MHz] BW [RB] BW [RB] BW [RB] N_{UL} [MHz] F_{DL} [MHz] BW [RB] N_{UL} RB] BW [RB] N_{UL} RB] N_{UL} RB]</td><td>Combo / NRB_agg [RB] CC1 Note1 Wgap [MHz] EW [RHz] Note1 Wgap [MHz] BW [RB] Nul [MHz] Ful [MHz] BW [RB] Nul [MHz] BW [RB] Nul [MHz] Image: MHz [MHz] BW [RB] Nul [MHz] Image: MHz [MHz] BW [RB] Nul [MHz] Image: MHz [MHz] Image: MHz [MHz] BW [RB] Nul [MHz] Image: MHz [MHz] Image: MHz [MHz] Image: MHz [MHz] BW [RB] Nul [MHz] Image: MHz [MHz]</td><td> Note /td></t<>	Combo / N _{RB_agg} [RB] BW [RB] CC1 Note1 Wgap [MHz] BW [RB] BW [RB] BW [RB] N _{UL} [MHz] F _{DL} [MHz] BW [RB] N _{UL} RB] BW [RB] N _{UL} RB] N _{UL} RB]	Combo / NRB_agg [RB] CC1 Note1 Wgap [MHz] EW [RHz] Note1 Wgap [MHz] BW [RB] Nul [MHz] Ful [MHz] BW [RB] Nul [MHz] BW [RB] Nul [MHz] Image: MHz [MHz] BW [RB] Nul [MHz] Image: MHz [MHz] BW [RB] Nul [MHz] Image: MHz [MHz] Image: MHz [MHz] BW [RB] Nul [MHz] Image: MHz [MHz] Image: MHz [MHz] Image: MHz [MHz] BW [RB] Nul [MHz] Image: MHz [MHz]	Note Note

Note 2: Test point derived with regard to REFSENS requirements.

4.3.1.1.8 FDD reference test frequencies for operating band 8

Table 4.3.1.1.8-1: Test frequencies for E-UTRA channel bandwidth for operating band 8

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	21457	880.7	3457	925.7
Low Bongo	3	21465	881.5	3465	926.5
Low Range	5	21475	882.5	3475	927.5
	10 ^[1]	21500	885	3500	930
Mid Range	1.4/3/5 10 ^[1]	21625	897.5	3625	942.5
	1.4	21793	914.3	3793	959.3
High Dongo	3	21785	913.5	3785	958.5
High Range	5	21775	912.5	3775	957.5
	10 ^[1]	21750	910	3750	955

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.1.9 FDD reference test frequencies for operating band 9

Table 4.3.1.1.9-1: Test frequencies for E-UTRA channel bandwidth for operating band 9

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	5	21825	1752.4	3825	1847.4
Low Pongo	10	21850	1754.9	3850	1849.9
Low Range	15 ^[1]	21875	1757.4	3875	1852.4
	20 [1]	21900	1759.9	3900	1854.9
Mid Range	5/10 15 ^[1] /20 ^[1]	21975	1767.4	3975	1862.4
	5	22125	1782.4	4125	1877.4
High Dongo	10	22100	1779.9	4100	1874.9
High Range	15 ^[1]	22075	1777.4	4075	1872.4
	20 [1]	22050	1774.9	4050	1869.9

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.1.10 FDD reference test frequencies for operating band 10

Table 4.3.1.1.10-1: Test frequencies for E-UTRA channel bandwidth for operating band 10

Test Frequency ID	Bandwidth [MHz]	N _{UL}	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	5	22175	1712.5	4175	2112.5
Low Range	10	22200	1715	4200	2115
Low Kange	15	22225	1717.5	4225	2117.5
	20	22250	1720	4250	2120
Mid Range	5/10/15/20	22450	1740	4450	2140
	5	22725	1767.5	4725	2167.5
High Range	10	22700	1765	4700	2165
	15	22675	1762.5	4675	2162.5
	20	22650	1760	4650	2160

4.3.1.1.11 FDD reference test frequencies for operating band 11

Table 4.3.1.1.11-1: Test frequencies for E-UTRA channel bandwidth for operating band 11

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
Low Range	5	22775	1430.4	4775	1478.4
	10 ^[1]	22800	1432.9	4800	1480.9
Mid Range	5 / 10 ^[1]	22850	1437.9	4850	1485.9
High Range	5	22925	1445.4	4925	1493.4
	10 ^[1]	22900	1442.9	4900	1490.9

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.1.12 FDD reference test frequencies for operating band 12

Table 4.3.1.1.12-1: Test frequencies for E-UTRA channel bandwidth for operating band 12

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	23017	699.7	5017	729.7
Low Dongs	3	23025	700.5	5025	730.5
Low Range	5 [1]	23035	701.5	5035	731.5
	10 ^[1]	23060	704	5060	734
Mid Range	1.4/3 5 ^[1] /10 ^[1]	23095	707.5	5095	737.5
	1.4	23173	715.3	5173	745.3
High Range	3	23165	714.5	5165	744.5
	5 ^[1]	23155	713.5	5155	743.5
NOTE 4 D. L. W.	10 [1]	23130	711	5130	741

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.1.13 FDD reference test frequencies for operating band 13

Table 4.3.1.1.13-1: Test frequencies for E-UTRA channel bandwidth for operating band 13

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
Low Pongo	5 [1]	23205	779.5	5205	748.5
Low Range	10 ^[1]	23230	782	5230	751
Mid Range	5 ^[1] /10 ^[1]	23230	782	5230	751
High Range	5 [1]	23255	784.5	5255	753.5
r light Range	10 ^[1]	23230	782	5230	751

4.3.1.1.14 FDD reference test frequencies for operating band 14

Table 4.3.1.1.14-1: Test frequencies for E-UTRA channel bandwidth for operating band 14

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
Low Pongo	5 ^[1]	23305	790.5	5305	760.5
Low Range	10 ^[1]	23330	793	5330	763
Mid Range	5 ^[1] /10 ^[1]	23330	793	5330	763
High Range	5 ^[1]	23355	795.5	5355	765.5
	10 ^[1]	23330	793	5330	763

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.1.15 FDD reference test frequencies for operating band 15

[FFS; not yet specified in TS 36.101]

4.3.1.1.16 FDD reference test frequencies for operating band 16

[FFS; not yet specified in TS 36.101]

4.3.1.1.17 FDD reference test frequencies for operating band 17

Table 4.3.1.1.17-1: Test frequencies for E-UTRA channel bandwidth for operating band 17

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
Low Range	5 ^[1]	23755	706.5	5755	736.5
	10 ^[1]	23780	709	5780	739
Mid Range	5 ^[1] /10 ^[1]	23790	710	5790	740
High Range	5 ^[1]	23825	713.5	5825	743.5
	10 ^[1]	23800	711	5800	741

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.1.18 FDD reference test frequencies for operating band 18

Table 4.3.1.1.18-1: Test frequencies for E-UTRA channel bandwidth for operating band 18

Test Frequency ID	Bandwidth [MHz]	N _{UL}	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	5	23875	817.5	5875	862.5
Low Range	10 ^[1]	23900	820	5900	865
	15 ^[1]	23925	822.5	5925	867.5
Mid Range	5/10 ^[1] /15 ^[1]	23925	822.5	5925	867.5
	5	23975	827.5	5975	872.5
High range	10 ^[1]	23950	825	5950	870
	15 ^[1]	23925	822.5	5925	867.5

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.1.19 FDD reference test frequencies for operating band 19

Table 4.3.1.1.19-1: Test frequencies for E-UTRA channel bandwidth for operating band 19

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
Low Range	5	24025	832.5	6025	877.5

	10 ^[1]	24050	835	6050	880
	15 ^[1]	24075	837.5	6075	882.5
Mid Range	5/10 ^[1] /15 ^[1]	24075	837.5	6075	882.5
	5	24125	842.5	6125	887.5
High range	10 ^[1]	24100	840	6100	885
	15 ^[1]	24075	837.5	6075	882.5

4.3.1.1.20 FDD reference test frequencies for operating band 20

Table 4.3.1.1.19-1: Test frequencies for E-UTRA channel bandwidth for operating band 20

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	5	24175	834.5	6175	793.5
Low Dongs	10 ^[1]	24200	837	6200	796
Low Range	15 ^[1]	24225	839.5	6225	798.5
	20[1]	24250	842	6250	801
Mid Range	5/10 ^[1] /15 ^[1] /20 ^[1]	24300	847	6300	806
	5	24425	859.5	6425	818.5
High range	10 ^[1]	24400	857	6400	816
	15 ^[1]	24375	854.5	6375	813.5
	20[1]	24350	852	6350	811

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.1.21 FDD reference test frequencies for operating band 21

Table 4.3.1.1.21-1: Test frequencies for E-UTRA channel bandwidth for operating band 21

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	5	24475	1450.4	6475	1498.4
Low Range	10 ^[1]	24500	1452.9	6500	1500.9
	15 ^[1]	24525	1455.4	6525	1503.4
Mid Range	5/10 ^[1] /15 ^[1]	24525	1455.4	6525	1503.4
	5	24575	1460.4	6575	1508.4
High range	10 ^[1]	24550	1457.9	6550	1505.9
-	15 ^[1]	24525	1455.4	6525	1503.4

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.1.22 FDD reference test frequencies for operating band 22

Table 4.3.1.1.22-1: Test frequencies for E-UTRA channel bandwidth for operating band 22

Test Frequency ID	Bandwidth [MHz]	N _{UL}	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	5	24625	3412.5	6625	3512.5
Low Range	10	24650	3415	6650	3515
Low Range	15	24675	3417.5	6675	3517.5
	20	24700	3420	6700	3520
Mid Range	5/10/15/20	25000	3450	7000	3550
	5	25375	3487.5	7375	3587.5
High Range	10	25350	3485	7350	3585
	15	25325	3482.5	7325	3582.5
	20	25300	3480	7300	3580

4.3.1.1.23 FDD reference test frequencies for operating band 23

Table 4.3.1.1.23-1: Test frequencies for E-UTRA channel bandwidth for operating band 23

Test Frequency ID	Bandwidth [MHz]	N _{UL}	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	25507	2000.7	7507	2180.7
	3	25515	2001.5	7515	2181.5
Low Pongo	5	25525	2002.5	7525	2182.5
Low Range	10	25550	2005	7550	2185
	15	25575	2007.5	7575	2187.5
	20	25600	2010	7600	2190
Mid Range	1.4/3 5 /10 / 15 / 20	25600	2010	7600	2190
	1.4	25693	2019.3	7693	2199.3
	3	25685	2018.5	7685	2198.5
High Range	5	25675	2017.5	7675	2197.5
	10	25650	2015	7650	2195
	15	25625	2012.5	7625	2192.5
	20	25600	2010	7600	2190

4.3.1.1.23A FDD reference test frequencies for CA in operating band 23

Table 4.3.1.1.23A-1: Test frequencies for CA_23A-23A

Range	CC- Combo / N _{RB_agg} [RB]			CC1 Note1			Wgap [MHz]			CC2 Note1		
		BW [RB]	N _{UL}	f∪∟ [MHz]	N _{DL}	f _{DL} [MHz]		BW [RB]	N _{UL}	f∪∟ [MHz]	N _{DL}	f _{DL} [MHz]
N/A	25+50	25	25525	2002.5	7525	2182.5	5	50	25650	2015	7650	2195
Note 1:	Carriers	in increas	ing freque	ency order.			•			•		·

4.3.1.1.24 FDD reference test frequencies for operating band 24

Table 4.3.1.1.24-1: Test frequencies for E-UTRA channel bandwidth for operating band 24

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
Low Range	5	25725	1629	7725	1527.5
	10	25750	1631.5	7750	1530
Mid Range	5/10	25870	1643.5	7870	1542
High Range	5	26015	1658	8015	1556.5
	10	25990	1655.5	7990	1554

4.3.1.1.25 FDD reference test frequencies for operating band 25

Table 4.3.1.1.25-1: Test frequencies for E-UTRA channel bandwidth for operating band 25

Test Frequency ID	Bandwidth [MHz]	N _{UL}	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	26047	1850.7	8047	1930.7
	3	26055	1851.5	8055	1931.5
Low Range	5	26065	1852.5	8065	1932.5
Low Range	10	26090	1855	8090	1935
	15 ^[1]	26115	1857.5	8115	1937.5
	20 [1]	26140	1860	8140	1940
Mid Range	1.4/3/5/10 15 ^[1] /20 ^[1]	26365	1882,5	8365	1962.5

	1.4	26683	1914.3	8683	1994.3
High Days	3	26675	1913.5	8675	1993.5
	5	26665	1912.5	8665	1992.5
High Range	10	26640	1910	8640	1990
	15 ^[1]	26615	1907.5	8615	1987.5
	20 [1]	26590	1905	8590	1985

4.3.1.1.25A FDD reference test frequencies for CA in operating band 25

Table 4.3.1.1.25A-1: Test frequencies for CA_25A-25A

Range	CC- Combo / N _{RB_agg} [RB]	CC1 Note1					Wgap [MHz]	CC2 Note1				
		BW [RB]	NuL	f∪∟ [MHz]	N _{DL}	f _{DL} [MHz]		BW [RB]	NuL	f∪∟ [MHz]	N _{DL}	f _{DL} [MHz]
N/A	25+25	25	26065	1852.5	8065	1932.5	55	25	26665	1912.5	8665	1992.5
	25+50	25	26065	1852.5	8065	1932.5	50	50	26640	1910	8640	1990
		25	26415	1887.5	8415	1967.5	15 (Note 2)	50	26640	1910	8640	1990
	50+50	50	26090	1855	8090	1935	45	50	26640	1910	8640	1990
		50	26440	1890	8440	1970	10 (Note 2)	50	26640	1910	8640	1990
Note 1:	Carriers	Carriers in increasing frequency order.										

Note 2: Test point derived with regard to REFSENS requirements.

4.3.1.1.26 FDD reference test frequencies for operating band 26

Table 4.3.1.1.26-1: Test frequencies for E-UTRA channel bandwidth for operating band 26

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	26697	814.7	8697	859.7
	3	26705	815.5	8705	860.5
Low Range	5	26715	816.5	8715	861.5
	10 ^[1]	26750	820	8750	865
	15 ^[1]	26775	822.5	8775	867.5
Mid Range	1.4/3/5/10 ^[1] 15 ^[1]	26865	831.5	8865	876.5
	1.4	27033	848.3	9033	893.3
	3	27025	847.5	9025	892.5
High Range	5	27015	846.5	9015	891.5
	10 ^[1]	26990	844	8990	889
NOTE 1. Dondwidt	15 ^[1]	26965	841.5	8965	886.5

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.1.27 FDD reference test frequencies for operating band 27

Table 4.3.1.1.27-1: Test frequencies for E-UTRA channel bandwidth for operating band 27

Test Frequency ID	Bandwidth [MHz]	N _{UL}	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	27047	807.7	9047	852.7
Low Pango	3	27055	808.5	9055	853.5
Low Range	5	27065	809.5	9065	854.5
	10 ^[1]	27090	812	9090	857
Mid Range	1.4/3/5/10 ^[1]	27125	815.5	9125	860.5
	1.4	27203	823.3	9203	868.3
High Range	3	27195	822.5	9195	867.5
	5	27185	821.5	9185	866.5
	10 ^[1]	27160	819	9160	864

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.1.27A FDD reference test frequencies for CA in operating band 27

Table 4.3.1.1.27A-1: Test frequencies for CA_27B

Range	CC-Combo / N _{RB_agg} [RB]			CC1 Note1					CC2 Note 1		
_		BW [RB]	NuL	f∪∟ [MHz]	N _{DL}	f _{DL} [MHz]	BW [RB]	NuL	f _{UL} [MHz]	N _{DL}	f _{DL} [MHz]
Low	6+25	6	27048	807.8	9048	852.8	25	27078	810.8	9078	855.8
	15+25	15	27056	808.6	9056	853.6	25	27095	812.5	9095	857.5
	25+25	25	27065	809.5	9065	854.5	25	27113	814.3	9113	859.3
	6+50	6	27051	808.1	9051	853.1	50	27102	813.2	9102	858.2
	15+50	15	27059	808.9	9059	853.9	50	27119	814.9	9119	859.9
Mid	6+25	6	27101	813.1	9101	858.1	25	27131	816.1	9131	861.1
	15+25	15	27101	813.1	9101	858.1	25	27140	817.0	9140	862.0
	25+25	25	27101	813.1	9101	858.1	25	27149	817.9	9149	862.9
	6+50	6	27080	811.0	9080	856.0	50	27131	816.1	9131	861.1
	15+50	15	27079	810.9	9079	855.9	50	27139	816.9	9139	861.9
High	6+25	6	27155	818.5	9155	863.5	25	27185	821.5	9185	866.5
-	15+25	15	27146	817.6	9146	862.6	25	27185	821.5	9185	866.5
	25+25	25	27137	816.7	9137	861.7	25	27185	821.5	9185	866.5
	6+50	6	27109	813.9	9109	858.9	50	27160	819.0	9160	864.0
	15+50	15	27100	813.0	9100	858.0	50	27160	819.0	9160	864.0
Note 1:											

Note 1: Carriers in increasing frequency order.

4.3.1.1.28 FDD reference test frequencies for operating band 28

Table 4.3.1.1.28-1: Test frequencies for E-UTRA channel bandwidth for operating band 28

Test Frequency ID	Bandwidth [MHz]	N _{UL}	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	3	27225	704.5	9225	759.5
	5	27235	705.5	9235	760.5
Low Range	10 ^[1]	27260	708	9260	763
	15 ^[1]	27285	710.5	9285	765.5
Î	20 ^[1]	27310	713	9310	768
	3	27375	719.5	9375	774.5
	5	27385	720.5	9385	775.5
Mid Range	10 ^[1]	27410	723	9410	778
	15 ^[1]	27435	725.5	9435	780.5
Ī	20 ^[1,2]	27460	728	9460	783
	3	27645	746.5	9645	801.5
	5	27635	745.5	9635	800.5
High Range	10[1]	27610	743	9610	798
	15[1]	27585	740.5	9585	795.5
	20[1]	27560	738	9560	793

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

NOTE 2: Mid Range for 20 MHz moved due to note 2 in Table 5.6.1-1 of TS 36.101 [27].

4.3.1.1.29 FDD reference test frequencies for CA in operating band 29

Table 4.3.1.1.29-1: Test frequencies for E-UTRA channel bandwidth for operating band 29

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	3	NA ^[1]	NA	9675	718.5
Low Range	5	NA ^[1]	NA	9685	719.5
Low Italige	10	NA ^[1]	NA	9710	722
Mid Range	3 5 /10	NA ^[1]	NA	9715	722.5
	3	NA ^[1]	NA	9755	726.5
High Range	5	NA ^[1]	NA	9745	725.5
	10	NA ^[1]	NA	9720	723

NOTE 1: Restricted to E-UTRA operation when carrier aggregation is configured. The downlink operating band is paired with the uplink operating band (external) of the carrier aggregation configuration that is supporting the configured Pcell.

4.3.1.1.30 FDD reference test frequencies for operating band 30

Table 4.3.1.1.30-1: Test frequencies for E-UTRA channel bandwidth for operating band 30

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
Low Range	5	27685	2307.5	9795	2352.5
	10	27710	2310	9820	2355
Mid Range	5/10	27710	2310	9820	2355
High Range	5	27735	2312.5	9845	2357.5
	10	27710	2310	9820	2355

4.3.1.1.31 FDD reference test frequencies for operating band 31

Table 4.3.1.1.31-1: Test frequencies for E-UTRA channel bandwidth for operating band 31

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	27767	453.2	9877	463.2
Low Range	3 ^[1]	27775	454	9885	464
	5 ^[1]	27785	455	9895	465
Mid Range	1.4/3 ^[1] / 5 ^[1]	27785	455	9895	465
	1.4	27803	456.8	9913	466.8
High Range	3 ^[1]	27795	456	9905	466
	5 ^[1]	27785	455	9895	465

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.2 TDD Mode Test frequencies

4.3.1.2.1 TDD reference test frequencies for Operating Band 33

Table 4.3.1.2.1-1: Test frequencies for E-UTRA channel bandwidth for operating band 33

Test Frequency ID	Bandwidth [MHz]	EARFCN	Frequency (UL and DL) [MHz]
	5	36025	1902.5
Low Bongo	10	36050	1905
Low Range	15	36075	1907.5
	20	36100	1910
Mid Range	5/10/15/20	36100	1910
	5	36175	1917.5
High Range	10	36150	1915
	15	36125	1912.5
	20	36100	1910

4.3.1.2.2 TDD reference test frequencies for Operating Band 34

Table 4.3.1.2.2-1: Test frequencies for E-UTRA channel bandwidth for operating band 34

Test Frequency ID	Bandwidth [MHz]	EARFCN	Frequency (UL and DL) [MHz]
	5	36225	2012.5
Low Range	10	36250	2015
	15	36275	2017.5
Mid Range	5/10/15	36275	2017.5
	5	36325	2022.5
High Range	10	36300	2020
	15	36275	2017.5

4.3.1.2.3 TDD reference test frequencies for Operating Band 35

Table 4.3.1.2.3-1: Test frequencies for E-UTRA channel bandwidth for operating band 35

Test Frequency ID	Bandwidth	EARFCN	Frequency (UL and DL)
	[MHz]	[MHz]	[MHz]
	1.4	36357	1850.7
	3	36365	1851.5
Low Range	5	36375	1852.5
Low Range	10	36400	1855
	15	36425	1857.5
	20	36450	1860
Mid Range	1.4/3/5/10/15/20	36650	1880
	1.4	36943	1909.3
	3	36935	1908.5
High Range	5	36925	1907.5
	10	36900	1905
	15	36875	1902.5
	20	36850	1900

4.3.1.2.4 TDD reference test frequencies for Operating Band 36

Table 4.3.1.2.4-1: Test frequencies for E-UTRA channel bandwidth for operating band 36

Test Frequency ID	Bandwidth [MHz]	EARFCN [MHz]	Frequency (UL and DL) [MHz]
	1.4	36957	1930.7
	3	36965	1931.5
Low Bongo	5	36975	1932.5
Low Range	10	37000	1935
	15	37025	1937.5
	20	37050	1940
Mid Range	1.4/3/5/10/15/20	37250	1960
	1.4	37543	1989.3
	3	37535	1988.5
High Range	5	37525	1987.5
	10	37500	1985
	15	37475	1982.5
	20	37450	1980

4.3.1.2.5 TDD reference test frequencies for Operating Band 37

Table 4.3.1.2.5-1: Test frequencies for E-UTRA channel bandwidth for operating band 37

Test Frequency ID	Bandwidth [MHz]	EARFCN [MHz]	Frequency (UL and DL) [MHz]
	5	37575	1912.5
Low Bongs	10	37600	1915
Low Range	15	37625	1917.5
	20	37650	1920
Mid Range	5/10/15/20	37650	1920
High Range	5	37725	1927.5
	10	37700	1925
	15	37675	1922.5
	20	37650	1920

4.3.1.2.6 TDD reference test frequencies for Operating Band 38

Table 4.3.1.2.6-1: Test frequencies for E-UTRA channel bandwidth for operating band 38

Test Frequency ID	Bandwidth [MHz]	EARFCN	Frequency (UL and DL) [MHz]
	5	37775	2572.5
Low Pongo	10	37800	2575
Low Range	15	37825	2577.5
	20	37850	2580
Mid Range	5/10/15/20	38000	2595
	5	38225	2617.5
High Range	10	38200	2615
	15	38175	2612.5
	20	38150	2610

4.3.1.2.6A TDD reference test frequencies for CA in operating band 38

Table 4.3.1.2.6A-1: Test frequencies for CA_38C

Range	CC- Combo / N _{RB_agg} [RB]		CC1 Note1			CC2 Note1			
		BW [RB]	N uL/DL	ful/DL [MHz]	BW [RB]	N uL/DL	ful/DL [MHz]		
Low	75+75	75	37825	2577.5	75	37975	2592.5		
	100+100	100	37850	2580	100	38048	2599.8		
Mid	75+75	75	37925	2587.5	75	38075	2602.5		
	100+100	100	37901	2585.1	100	38099	2604.9		
High	75+75	75	38025	2597.5	75	38175	2612.5		
	100+100	100	37952	2590.2	100	38150	2610		
Note 1:	Carriers in i	riers in increasing frequency order.							

4.3.1.2.7 TDD reference test frequencies for Operating Band 39

Table 4.3.1.2.7-1: Test frequencies for E-UTRA channel bandwidth for operating band 39

Test Frequency ID	Bandwidth [MHz]	EARFCN	Frequency (UL and DL) [MHz]
	5	38275	1882.5
Low Bongo	10	38300	1885
Low Range	15	38325	1887.5
	20	38350	1890
Mid Range	5/10/15/20	38450	1900
	5	38625	1917.5
High Range	10	38600	1915
	15	38575	1912.5
	20	38550	1910

4.3.1.2.7A TDD reference test frequencies for CA in Operating Band 39

Table 4.3.1.2.7A-1: Test frequencies for CA_39C

Range	CC- Combo / N _{RB_agg} [RB]		CC1 Note1			CC2 Note1	
		BW [RB]	N ul/dl	f _{UL/DL} [MHz]	BW [RB]	N ul/dl	ful/DL [MHz]
Low	25+100	25	38283	1883.3	100	38400	1895.0
		100	38350	1890	25	38467	1901.7
	50+100	50	38305	1885.5	100	38449	1899.9
		100	38350	1890	50	38494	1904.4
	75+100	75	38328	1887.8	100	38499	1904.9
		100	38350	1890	75	38521	1907.1
Mid	25+100	25	38358	1890.8	100	38475	1902.5
		100	38425	1897.5	25	38542	1909.2
	50+100	50	38356	1890.6	100	38500	1905.0
		100	38401	1895.1	50	38545	1909.5
	75+100	75	38353	1890.3	100	38524	1907.4
		100	38376	1892.6	75	38547	1909.7
High	25+100	25	38433	1898.3	100	38550	1910
		100	38500	1905.0	25	38617	1916.7
	50+100	50	38406	1895.6	100	38550	1910
		100	38451	1900.1	50	38595	1914.5
	75+100	75	38379	1892.9	100	38550	1910
		100	38401	1895.1	75	38572	1912.2
Note 1:	Carriers in in	ncreasing fr	equency order.				

4.3.1.2.8 TDD reference test frequencies for Operating Band 40

Table 4.3.1.2.8-1: Test frequencies for E-UTRA channel bandwidth for operating band 40

Test Frequency ID	Bandwidth [MHz]	EARFCN	Frequency (UL and DL) [MHz]
Low Range	5	38675	2302.5
-	10	38700	2305
	15	38725	2307.5
	20	38750	2310
Mid Range	5/10/15/20	39150	2350
High Range	5	39625	2397.5
	10	39600	2395
	15	39575	2392.5
	20	39550	2390

4.3.1.2.8A TDD reference test frequencies for CA in operating band 40

Table 4.3.1.2.8A-1: Test frequencies for CA_40C

Range	CC- Combo / N _{RB_agg} [RB]		CC1 Note1			CC2 Note1	
		BW [RB]	N ul/dl	f _{UL/DL} [MHz]	BW [RB]	N ul/dl	ful/DL [MHz]
Low	50+100	50	38705	2305.5	100	38849	2319.9
		100	38750	2310	50	38894	2324.4
	75+75	75	38725	2307.5	75	38875	2322.5
	100+100	100	38750	2310	100	38948	2329.8
Mid	50+100	50	39056	2340.6	100	39200	2355.0
		100	39101	2345.1	50	39245	2359.5
	75+75	75	39075	2342.5	75	39225	2357.5
	100+100	100	39051	2340.1	100	39249	2359.9
High	50+100	50	39406	2375.6	100	39550	2390
		100	39451	2380.1	50	39595	2394.5
	75+75	75	39425	2377.5	75	39575	2392.5
	100+100	100	39352	2370.2	100	39550	2390
Note 1:	Carriers in i	ncreasing fr	equency order.				

4.3.1.2.9 TDD reference test frequencies for Operating Band 41

Table 4.3.1.2.9-1: Test frequencies for E-UTRA channel bandwidth for operating band 41

Test Frequency ID	Bandwidth [MHz]	EARFCN	Frequency (UL and DL) [MHz]
Low Range	5	39675	2498.5
	10	39700	2501
	15	39725	2503.5
	20	39750	2506
Mid Range	5/10/15/20	40620	2593
High Range	5	41565	2687.5
	10	41540	2685
	15	41515	2682.5
	20	41490	2680

4.3.1.2.9A TDD reference test frequencies for CA in operating band 41

Table 4.3.1.2.9A-1: Test frequencies for CA_41C

Range	CC- Combo / N _{RB_agg} [RB]		CC1 Note1			CC2 Note1	
		BW [RB]	N ul/dl	ful/dl [MHz]	BW [RB]	N ul/dl	f _{UL/DL} [MHz]
Low	50+100	50	39705	2501.5	100	39849	2515.9
		100	39750	2506	50	39894	2520.4
	75+75	75	39725	2503.5	75	39875	2518.5
	75+100	75	39728	2503.8	100	39899	2520.9
		100	39750	2506	75	39921	2523.1
	100+100	100	39750	2506	100	39948	2525.8
Mid	50+100	50	40526	2583.6	100	40670	2598.0
		100	40571	2588.1	50	40715	2602.5
	75+75	75	40545	2585.5	75	40695	2600.5
	75+100	75	40523	2583.3	100	40694	2600.4
		100	40546	2585.6	75	40717	2602.7
	100+100	100	40521	2583.1	100	40719	2602.9
High	50+100	50	41346	2665.6	100	41490	2680
		100	41391	2670.1	50	41535	2684.5
	75+75	75	41365	2667.5	75	41515	2682.5
	75+100	75	41319	2662.9	100	41490	2680
		100	41341	2665.1	75	41512	2682.2
	100+100	100	41292	2660.2	100	41490	2680
Note 1:	Carriers in in	ncreasing fr	equency order.			·	·

Table 4.3.1.2.9A-2: Test frequencies for CA_41A-41A

Range	CC- Combo / N _{RB_agg} [RB]		CC1 Note1		Wgap [MHz]		CC2 Note1	
		BW [RB]	N _{UL/DL}	ful/DL [MHz]		BW [RB]	N _{UL/DL}	ful/DL [MHz]
N/A	25+25	25	39675	2498.5	184	25	41565	2687.5
	25+50	25	39675	2498.5	179	50	41540	2685
	50+50	50	39700	2501	174	50	41540	2685
	50+75	50	39700	2501	169	75	41515	2682.5
	50+100	50	39700	2501	164	100	41490	2680
	75+100	75	39725	2503.5	159	100	41490	2680
	100+100	100	39750	2506	154	100	41490	2680
Note 1:	Carriers i	n increasi	ng frequer	ncy order.	•			

4.3.1.2.10 TDD reference test frequencies for Operating Band 42

Table 4.3.1.2.10-1: Test frequencies for E-UTRA channel bandwidth for operating band 42

Test Frequency ID	Bandwidth [MHz]	EARFCN	Frequency (UL and DL) [MHz]
Low Range	5	41615	3402.5
	10	41640	3405
	15	41665	3407.5
	20	41690	3410
Mid Range	5/10/15/20	42590	3500
High Range	5	43565	3597.5
	10	43540	3595
	15	43515	3592.5
	20	43490	3590

4.3.1.2.10ATDD reference test frequencies for CA in operating band 42

Table 4.3.1.2.10A-1: Test frequencies for CA_42C

	CC-Combo						
Range	N _{RB_agg} [RB]		CC1 Note1			CC2 Note1	
ivarige	[KD]	BW		ful/DL	BW		f _{UL/DL}
Low	25+100	[RB] 25	N UL/DL 41623	[MHz] 3403.3	[RB]	N UL/DL 41740	[MHz] 3415
Low	25+100						
	50.400	100	41690	3410	25	41807	3421.7
	50+100	50	41645	3405.5	100	41789	3419.9
	75 100	100	41690	3410	50	41834	3424.4
	75+100	75	41668	3407.8	100	41839	3424.9
		100	41690	3410	75	41861	3427.1
	100+100	100	41690	3410	100	41888	3429.8
Mid	25+100	25	42498	3490.8	100	42615	3502.5
		100	42565	3497.5	25	42682	3509.2
	50+100	50	42496	3490.6	100	42640	3505
		100	42541	3495.1	50	42685	3509.5
	75+100	75	42493	3490.3	100	42664	3507.4
		100	42516	3492.6	75	42687	3509.7
	100+100	100	42491	3490.1	100	42689	3509.9
High	25+100	25	43373	3578.3	100	43490	3590
		100	43440	3585	25	43557	3596.7
	50+100	50	43346	3575.6	100	43490	3590
		100	43391	3580.1	50	43535	3594.5
	75+100	75	43319	3572.9	100	43490	3590
		100	43341	3575.1	75	43512	3592.2
	100+100	100	43292	3570.2	100	43490	3590
Note 1:	Carriers in incr	easing freq	uency order			· · · · · · · · · · · · · · · · · · ·	

Table 4.3.1.2.10A-2: Test frequencies for CA_42A-42A

Range	CC- Combo / N _{RB_agg} [RB]		CC1 Note1		Wgap [MHz]		CC2 Note1	
		BW [RB]	NuL/DL	ful/dl [MHz]		BW [RB]	NuL/DL	ful/DL [MHz]
N/A	25+25	25	41615	3402.5	190	25	43565	3597.5
	25+50	25	41615	3402.5	185	50	43540	3595
	50+50	50	41640	3405	180	50	43540	3595
	50+75	50	41640	3405	175	75	43515	3592.5
	50+100	50	41640	3405	170	100	43490	3590
	75+100	75	41665	3407.5	165	100	43490	3590
	100+100	100	41690	3410	160	100	43490	3590
Note 1:	Carriers i	n increasi	ng frequer	ncy order.	•		•	•

4.3.1.2.11 TDD reference test frequencies for Operating Band 43

Table 4.3.1.2.11-1: Test frequencies for E-UTRA channel bandwidth for operating band 43

Test Frequency ID	Bandwidth [MHz]	EARFCN	Frequency (UL and DL) [MHz]
Low Range	5	43615	3602.5
	10	43640	3605
	15	43665	3607.5
	20	43690	3610

Mid Range	5/10/15/20	44590	3700
High Range	5	45565	3797.5
	10	45540	3795
	15	45515	3792.5
	20	45490	3790

4.3.1.2.12 TDD reference test frequencies for Operating Band 44

Table 4.3.1.2.12-1: Test frequencies for E-UTRA channel bandwidth for operating band 44

Test Frequency ID	Bandwidth [MHz]	EARFCN	Frequency (UL and DL) [MHz]
Low Range	3	45605	704.5
	5	45615	705.5
	10	45640	708
	15	45665	710.5
	20	45690	713
Mid Range	3/5/10/15/20	46090	753
High Range	3	46575	801.5
	5	46565	800.5
	10	46540	798
	15	46515	795.5
	20	46490	793

4.3.1.3 HRPD Test frequencies

4.3.1.3.1 HRPD test frequencies for Band Class 0

Table 4.3.1.3.1-1: Test frequencies for HRPD in Band Class 0

Test Frequency ID	Bandwidth [MHz]	Channel Number	Frequency of Uplink [MHz]	Frequency of Downlink [MHz]
Low Range	1.23	1013	824.70	869.70
Mid Range	1.23	356	835.68	880.68
High Range	1.23	779	848.37	893.37

4.3.1.3.2 HRPD test frequencies for Band Class 1

Table 4.3.1.3.2-1: Test frequencies for HRPD in Band Class 1

Test Frequency ID	Bandwidth [MHz]	Channel Number	Frequency of Uplink [MHz]	Frequency of Downlink [MHz]
Low Range	1.25	25	1851.25	1931.25
Mid Range	1.25	600	1880.00	1960.00
High Range	1.25	1175	1908.75	1988.75

4.3.1.3.3 HRPD test frequencies for Band Class 3

Table 4.3.1.3.3-1: Test frequencies for HRPD in Band Class 3

Test Frequency ID	Bandwidth [MHz]	Channel Number	Frequency of Uplink [MHz]	Frequency of Downlink [MHz]
Low Range	1.25	1120	888.00	833.00
Mid Range	1.25	872	898.90	843.90
High Range	1.25	76	915.95	860.95

4.3.1.3.4 HRPD test frequencies for Band Class 4

Table 4.3.1.3.4-1: Test frequencies for HRPD in Band Class 4

Test Frequency ID	Bandwidth [MHz]	Channel Number	Frequency of Uplink [MHz]	Frequency of Downlink [MHz]
Low Range	1.25	100	1755.00	1845.00
Mid Range	1.25	300	1765.00	1855.00
High Range	1.25	525	1776.25	1866.25

4.3.1.3.5 HRPD test frequencies for Band Class 6

Table 4.3.1.3.5-1: Test frequencies for HRPD in Band Class 6

Test Frequency ID	Bandwidth [MHz]	Channel Number	Frequency of Uplink [MHz]	Frequency of Downlink [MHz]
Low Range	1.25	125	1926.25	2116.25
Mid Range	1.25	200	1930.00	2120.00
High Range	1.25	350	1937.50	2127.50

4.3.1.3.6 HRPD test frequencies for Band Class 10

Table 4.3.1.3.6-1: Test frequencies for HRPD in Band Class 10

Test Frequency ID	Bandwidth [MHz]	Channel Number	Frequency of Uplink [MHz]	Frequency of Downlink [MHz]
Low Range	1.25	100	808.50	853.50
Mid Range	1.25	500	821.00	866.00
High Range	1.25	820	898.50	937.50

4.3.1.3.7 HRPD test frequencies for Band Class 15

Table 4.3.1.3.7-1: Test frequencies for HRPD in Band Class 15

Test Frequency ID	Bandwidth [MHz]	Channel Number	Frequency of Uplink [MHz]	Frequency of Downlink [MHz]
Low Range	1.25	75	1713.75	2113.75
Mid Range	1.25	450	1732.50	2132.50
High Range	1.25	800	1750.00	2150.00

4.3.1.4 1xRTT Test frequencies

4.3.1.4.1 1xRTT test frequencies for Band Class 0

Table 4.3.1.4.1-1: Test frequencies for 1xRTT in Band Class 0

Test Frequency ID	Bandwidth [MHz]	Channel Number	Frequency of Uplink [MHz]	Frequency of Downlink [MHz]
Low Range	1.23	1013	824.70	869.70
Mid Range	1.23	356	835.68	880.68
High Range	1.23	779	848.37	893.37

4.3.1.4.2 1xRTT test frequencies for Band Class 1

Table 4.3.1.4.2-1: Test frequencies for 1xRTT in Band Class 1

Test Frequency ID	Bandwidth [MHz]	Channel Number	Frequency of Uplink [MHz]	Frequency of Downlink [MHz]
Low Range	1.25	25	1851.25	1931.25
Mid Range	1.25	600	1880.00	1960.00
High Range	1.25	1175	1908.75	1988.75

4.3.1.4.3 1xRTT test frequencies for Band Class 3

Table 4.3.1.4.3-1: Test frequencies for 1xRTT in Band Class 3

Test Frequency ID	Bandwidth [MHz]	Channel Number	Frequency of Uplink [MHz]	Frequency of Downlink [MHz]
Low Range	1.25	1120	888.00	833.00
Mid Range	1.25	872	898.90	843.90
High Range	1.25	76	915.95	860.95

4.3.1.4.4 1xRTT test frequencies for Band Class 4

Table 4.3.1.4.4-1: Test frequencies for 1xRTT in Band Class 4

Test Frequency ID	Bandwidth [MHz]	Channel Number	Frequency of Uplink [MHz]	Frequency of Downlink [MHz]	
Low Range	1.25	100	1755.00	1845.00	
Mid Range	1.25	300	1765.00	1855.00	
High Range	1.25	525	1776.25	1866.25	

4.3.1.4.5 1xRTT test frequencies for Band Class 6

Table 4.3.1.4.5-1: Test frequencies for 1xRTT in Band Class 6

Test Frequency ID	Bandwidth [MHz]	Channel Number	Frequency of Uplink [MHz]	Frequency of Downlink [MHz]
Low Range	1.25	225	1931.25	2121.25
Mid Range	1.25	275	1933.75	2123.75
High Range	1.25	375	1938.75	2128.75

4.3.1.4.6 1xRTT test frequencies for Band Class 10

Table 4.3.1.4.6-1: Test frequencies for 1xRTT in Band Class 10

Test Frequency ID	Bandwidth [MHz]	Channel Number	Frequency of Uplink [MHz]	Frequency of Downlink [MHz]	
Low Range	1.25	100	808.50	853.50	
Mid Range	1.25	500	821.00	866.00	
High Range	1.25	820	898.50	937.50	

4.3.1.4.7 1xRTT test frequencies for Band Class 15

Table 4.3.1.4.7-1: Test frequencies for 1xRTT in Band Class 15

Test Frequency ID	Bandwidth [MHz]	Channel Number	Frequency of Uplink [MHz]	Frequency of Downlink [MHz]
Low Range	1.25	75	1713.75	2113.75
Mid Range	1.25	450	1732.50	2132.50
High Range	1.25	800	1750.00	2150.00

4.3.1.5 MFBI Test frequencies

Editor's Note: MFBI test frequencies are not used for TS 36.521-1, TS 36.521-3 and TS 37.571-1.

4.3.1.5.1 MFBI Test frequencies for operation band 2 overlapping with band 25

⁻ same as per Table 4.3.1.1.2-1

4.3.1.5.2 MFBI Test frequencies for operation band 3 overlapping with band 9

Table 4.3.1.5.2-1: Test frequencies for E-UTRA channel bandwidth for operating band 3 overlapping with band 9

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	19606	1750.6	1606	1845.6
	3	19614	1751.4	1614	1846.4
Low Bongo	5	19624	1752.4	1624	1847.4
Low Range	10	19649	1754.9	1649	1849.9
	15 ^[1]	19674	1757.4	1674	1852.4
	20 [1]	19699	1759.9	1699	1854.9
Mid Range	1.4/3/5/10 15 ^[1] /20 ^[1]	19774	1767.4	1774	1862.4
	1.4	19942	1784.2	1942	1879.2
	3	19934	1783.4	1934	1878.4
	5	19924	1782.4	1924	1877.4
High Range	10	19899	1779.9	1899	1874.9
	15 ^[1]	19874	1777.4	1874	1872.4
	20 [1]	19849	1774.9	1849	1869.9

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.5.3 MFBI Test frequencies for operation band 4 overlapping with band 10

- same as per Table 4.3.1.1.4-1

4.3.1.5.4 MFBI Test frequencies for operation band 5 overlapping with band 18

Table 4.3.1.5.4-1: Test frequencies for E-UTRA channel bandwidth for operating band 5 overlapping with band 18

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	20407	824.7	2407	869.7
Low Range	3	20415	825.5	2415	870.5
	5	20425	826.5	2425	871.5
Mid Range	1.4/3/5	20430	827	2430	872
	1.4	20453	829.3	2453	874.3
High Range	3	20445	828.5	2445	873.5
	5	20435	827.5	2435	872.5

4.3.1.5.5 MFBI Test frequencies for operation band 5 overlapping with band 19

Table 4.3.1.5.5-1: Test frequencies for E-UTRA channel bandwidth for operating band 5 overlapping with band 19

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	20467	830.7	2467	875.7
Low Bongo	3	20475	831.5	2475	876.5
Low Range	5	20485	832.5	2485	877.5
	10 ^[1]	20510	835	2510	880
Mid Range	1.4/3/5 10 ^[1]	20535	837.5	2535	882.5
	1.4	20603	844.3	2603	889.3
High Dongs	3	20595	843.5	2595	888.5
High Range	5	20585	842.5	2585	887.5
	10 ^[1]	20560	840	2560	885

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.5.6 MFBI Test frequencies for operation band 5 overlapping with band 26

- same as per Table 4.3.1.1.5-1

4.3.1.5.7 MFBI Test frequencies for operation band 9 overlapping with band 3

- same as per Table 4.3.1.1.9-1

4.3.1.5.8 MFBI Test frequencies for operation band 10 overlapping with band 4

Table 4.3.1.5.8-1: Test frequencies for E-UTRA channel bandwidth for operating band 10 overlapping with band 4

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	5	22175	1712.5	4175	2112.5
Low Pongo	10	22200	1715	4200	2115
Low Range	15	22225	1717.5	4225	2117.5
	20	22250	1720	4250	2120
Mid Range	5/10/15/20	22375	1732.5	4375	2132.5
	5	22575	1752.5	4575	2152.5
High Dongs	10	22550	1750	4550	2150
High Range	15	22525	1747.5	4525	2147.5
	20	22500	1745	4500	2145

4.3.1.5.9 MFBI Test frequencies for operation band 12 overlapping with band 17

Table 4.3.1.5.9-1: Test frequencies for E-UTRA channel bandwidth for operating band 12 overlapping with band 17

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	23067	704.7	5067	734.7
Low Bongo	3	23075	705.5	5075	735.5
Low Range	5 [1]	23085	706.5	5085	736.5
	10 ^[1]	23110	709	5110	739
Mid Range	1.4/3 5 ^[1] /10 ^[1]	23120	710	5120	740
	1.4	23173	715.3	5173	745.3
High Dongs	3	23165	714.5	5165	744.5
High Range	5 [1]	23155	713.5	5155	743.5
	10 ^[1]	23130	711	5130	741

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.5.10 MFBI Test frequencies for operation band 17 overlapping with band 12

- same as per Table 4.3.1.1.17-1

4.3.1.5.11 MFBI Test frequencies for operation band 18 overlapping with band 5

Table 4.3.1.5.11-1: Test frequencies for E-UTRA channel bandwidth for operating band 18 overlapping with band 5

Test Frequency ID	Bandwidth [MHz]	N _{UL}	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	23947	824.7	5947	869.7
Low Range	3	23955	825.5	5955	870.5
	5	23965	826.5	5965	871.5
Mid Range	1.4/3/5	23970	827	5970	872
	1.4	23993	829.3	5993	874.3
High Range	3	23985	828.5	5985	873.5
	5	23975	827.5	5975	872.5

4.3.1.5.12 MFBI Test frequencies for operation band 18 overlapping with band 26

- same as per Table 4.3.1.1.18-1

4.3.1.5.13 MFBI Test frequencies for operation band 18 overlapping with band 27

Table 4.3.1.5.13-1: Test frequencies for E-UTRA channel bandwidth for operating band 18 overlapping with band 27

Test Frequency ID	Bandwidth [MHz]	N _{UL}	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	23857	815.7	5857	860.7
Low Range	3	23865	816.5	5865	861.5
	5	23875	817.5	5875	862.5
Mid Range	1.4/3/5	23895	819.5	5895	864.5
	1.4	23933	823.3	5933	868.3
High Range	3	23925	822.5	5925	867.5
	5	23915	821.5	5915	866.5

4.3.1.5.14 MFBI Test frequencies for operation band 19 overlapping with band 5

- same as per Table 4.3.1.1.19-1

4.3.1.5.15 MFBI Test frequencies for operation band 19 overlapping with band 26

- same as per Table 4.3.1.1.19-1

4.3.1.5.16 MFBI Test frequencies for operation band 25 overlapping with band 2

Table 4.3.1.5.16-1: Test frequencies for E-UTRA channel bandwidth for operating band 25 overlapping with band 2

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	26047	1850.7	8047	1930.7
Low Pongo	3	26055	1851.5	8055	1931.5
Low Range	5	26065	1852.5	8065	1932.5
	10	26090	1855	8090	1935

	15 ^[1]	26115	1857.5	8115	1937.5
	20 [1]	26140	1860	8140	1940
Mid Range	1.4/3/5/10 15 ^[1] /20 ^[1]	26340	1880	8340	1960
	1.4	26633	1909.3	8633	1989.3
	3	26625	1908.5	8625	1988.5
High Pango	5	26615	1907.5	8615	1987.5
High Range	10	26590	1905	8590	1985
	15 ^[1]	26565	1902.5	8565	1982.5
	20 [1]	26540	1900	8540	1980

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.5.17 MFBI Test frequencies for operation band 26 overlapping with band 5

Table 4.3.1.5.17-1: Test frequencies for E-UTRA channel bandwidth for operating band 26 overlapping with band 5

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	26797	824.7	8797	869.7
	3	26805	825.5	8805	870.5
Low Range	5	26815	826.5	8815	871.5
	10 ^[1]	26840	829	8840	874
	15 ^[1]	26865	831.5	8865	876.5
Mid Range	1.4/3/5/10 ^[1] 15 ^[1]	26915	836.5	8915	881.5
	1.4	27033	848.3	9033	893.3
	3	27025	847.5	9025	892.5
High Range	5	27015	846.5	9015	891.5
	10 ^[1]	26990	844	8990	889
	15 ^[1]	26965	841.5	8965	886.5

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.5.18 MFBI Test frequencies for operation band 26 overlapping with band 18

Table 4.3.1.5.18-1: Test frequencies for E-UTRA channel bandwidth for operating band 26 overlapping with band 18

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N DL	Frequency of Downlink [MHz]
	1.4	26707	815.7	8707	860.7
Low Pongo	3	26715	816.5	8715	861.5
Low Range	5	26725	817.5	8725	862.5
	10 ^[1]	26750	820	8750	865
Mid Range	1.4/3/5/10 ^[1]	26775	822.5	8775	867.5
	1.4	26843	829.3	8843	874.3
High Dongs	3	26835	828.5	8835	873.5
High Range	5	26825	827.5	8825	872.5
	10 ^[1]	26800	825	8800	870

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.5.19 MFBI Test frequencies for operation band 26 overlapping with band 19

Table 4.3.1.5.19-1: Test frequencies for E-UTRA channel bandwidth for operating band 26 overlapping with band 19

[MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
1.4	26857	830.7	8857	875.7
3	26865	831.5	8865	876.5
5	26875	832.5	8875	877.5
10 ^[1]	26900	835	8900	880
1.4/3/5/10 ^[1] 15 ^[1]	26925	837.5	8925	882.5
1.4	26993	844.3	8993	889.3
3	26985	843.5	8985	888.5
5	26975	842.5	8975	887.5
10 ^[1]	26950	840	8950	885
	1.4 3 5 10 ^[1] 1.4/3/5/10 ^[1] 15 ^[1] 1.4 3 5 10 ^[1]	1.4 26857 3 26865 5 26875 10 ^[1] 26900 1.4/3/5/10 ^[1] 26925 15 ^[1] 1.4 26993 3 26985 5 26975 10 ^[1] 26950	1.4 26857 830.7 3 26865 831.5 5 26875 832.5 10 ^[1] 26900 835 1.4/3/5/10 ^[1] 26925 837.5 15 ^[1] 1.4 26993 844.3 3 26985 843.5 5 26975 842.5 10 ^[1] 26950 840	1.4 26857 830.7 8857 3 26865 831.5 8865 5 26875 832.5 8875 10[1] 26900 835 8900 1.4/3/5/10[1] 26925 837.5 8925 15 [1] 1.4 26993 844.3 8993 3 26985 843.5 8985 5 26975 842.5 8975

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.5.20 MFBI Test frequencies for operation band 26 overlapping with band 27

Table 4.3.1.5.20-1: Test frequencies for E-UTRA channel bandwidth for operating band 26 overlapping with band 27

		Uplink [MHz]		Downlink [MHz]
1.4	26697	814.7	8697	859.7
3	26705	815.5	8705	860.5
5	26715	816.5	8715	861.5
1.4/3/5	26740	819	8740	864
1.4	26783	823.3	8783	868.3
3	26775	822.5	8775	867.5
5	26765	821.5	8765	866.5
	3 5 1.4/3/5 1.4 3 5	3 26705 5 26715 1.4/3/5 26740 1.4 26783 3 26775 5 26765	3 26705 815.5 5 26715 816.5 1.4/3/5 26740 819 1.4 26783 823.3 3 26775 822.5 5 26765 821.5	3 26705 815.5 8705 5 26715 816.5 8715 1.4/3/5 26740 819 8740 1.4 26783 823.3 8783 3 26775 822.5 8775

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.5.21 MFBI Test frequencies for operation band 27 overlapping with band 18

Table 4.3.1.5.21-1: Test frequencies for E-UTRA channel bandwidth for operating band 27 overlapping with band 18

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	27127	815.7	9127	860.7
Low Range	3	27135	816.5	9135	861.5
	5	27145	817.5	9145	862.5
Mid Range	1.4/3/5	27165	819.5	9165	864.5
	1.4	27203	823.3	9203	868.3
High Range	3	27195	822.5	9195	867.5
	5	27185	821.5	9185	866.5

4.3.1.5.22 MFBI Test frequencies for operation band 27 overlapping with band 26

Table 4.3.1.5.22-1: Test frequencies for E-UTRA channel bandwidth for operating band 27 overlapping with band 26

Test Frequency ID	Bandwidth [MHz]	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
	1.4	27117	814.7	9117	859.7
Low Range	3	27125	815.5	9125	860.5
	5	27135	816.5	9135	861.5
Mid Range	1.4/3/5	27160	819	9160	864
	1.4	27203	823.3	9203	868.3
High Range	3	27195	822.5	9195	867.5
	5	27185	821.5	9185	866.5

NOTE 1: Bandwidth for which a relaxation of the specified UE receiver sensitivity requirement (TS 36.101 [27] Clause 7.3) is allowed.

4.3.1.5.23 MFBI Test frequencies for operation band 33 overlapping with band 39

- same as per Table 4.3.1.2.1-1

4.3.1.5.24 MFBI Test frequencies for operation band 38 overlapping with band 41

- same as per Table 4.3.1.2.6-1

4.3.1.5.25 MFBI Test frequencies for operation band 39 overlapping with band 33

Table 4.3.1.5.25-1: Test frequencies for E-UTRA channel bandwidth for operating band 39 overlapping with band 33

Test Frequency ID	Bandwidth [MHz]	EARFCN	Frequency (UL and DL) [MHz]
	5	38475	1902.5
Law Dansa	10	38500	1905
Low Range	15	38525	1907.5
	20	38550	1910
Mid Range	5/10/15/20	38550	1910
	5	38625	1917.5
High Range	10	38600	1915
	15	38575	1912.5
	20	38550	1910

4.3.1.5.26 MFBI Test frequencies for operation band 41 overlapping with band 38

Table 4.3.1.5.26-1: Test frequencies for E-UTRA channel bandwidth for operating band 41 overlapping with band 38

Test Frequency ID	Bandwidth [MHz]	EARFCN	Frequency (UL and DL) [MHz]
	5	40415	2572.5
Law Danse	10	40440	2575
Low Range	15	40465	2577.5
	20	40490	2580
Mid Range	5/10/15/20	40640	2595
	5	40865	2617.5
High Range	10	40840	2615
	15	40815	2612.5
	20	40790	2610

4.3.2 Radio conditions

4.3.2.1 Normal propagation condition

The downlink connection between the System Simulator and the UE is without Additive White Gaussian Noise, and has no fading or multipath effects.

The uplink connection between the UE and System Simulator is without Additive White Gaussian Noise, and has no fading or multipath effects.

4.3.3 Physical channel allocations

4.3.3.1 Antennas

If the UE has two Rx antennas, the same downlink signal is applied to each one. Both UE Rx antennas shall be connected unless otherwise stated in the test case.

If the UE has one Rx antenna, the downlink signal is applied to it.

4.3.3.2 Downlink physical channels and physical signals

The Downlink Physical channels and Physical signals used and their relative powers are specified for single SS Tx antenna in table 4.3.3.2-1 and for two SS Tx antennas in table 4.3.3.2-2. The details of downlink power allocation for PDSCH channel are described in TS 36.213 [29] clause 5.2.

Table 4.3.3.2-1: Power allocation for OFDM symbols and reference signals, single SS Tx antenna

Physical Channel	EPRE Ratio
PBCH	PBCH_RA = 0 dB
	PBCH_RB = 0 dB
PSS	PSS_RA = 0 dB
SSS	$SSS_RA = 0 dB$
PCFICH	PCFICH_RB = 0 dB
PDCCH	PDCCH_RA = 0 dB
	PDCCH_RB = 0 dB
PDSCH	PDSCH_RA = 0 dB
	PDSCH_RB = 0 dB
PHICH	PHICH_RB = 0 dB
PMCH	PMCH_RA = 0 dB
MBSFN RS	MBSFN RS_RA = 0dB

Table 4.3.3.2-2: Power allocation for OFDM symbols and reference signals, two SS Tx antennas

Physical Channel	EPRE Ratio
PBCH	PBCH_RA = 0 dB
	PBCH_RB = 0 dB
PSS	PSS_RA = 0 dB
SSS	$SSS_RA = 0 dB$
PCFICH	PCFICH_RB = 0 dB
PDCCH	PDCCH_RA = 0 dB
	PDCCH_RB = 0 dB
PDSCH	PDSCH_RA = -3 dB
	PDSCH_RB = -3 dB
PHICH	PHICH_RB = 0 dB
PMCH	PMCH_RA = 0 dB
MBSFN RS	MBSFN RS_RA = 0dB

NOTE: MBSFN RS is not defined downlink physical channels in TS 36.211 [35].

4.3.3.3 Mapping of downlink physical channels and signals to physical resources

Parameters for mapping of downlink physical channels and signals are specified as follows.

Normal Cyclic Prefix

 $N_{\rm ID}^{\rm cell}$, Physical layer cell identity = 0 is used as the default physical layer cell identity

CFI = 3 for 1.4, 3 and 5 MHz system bandwidths

= 2 for 10, 15 and 20 MHz system bandwidths

= 2 if PMCH is configured ('mbsfn-SubframeConfiguration' is present in SIB2)

Ng = 1 PHICH duration = Normal

For Signalling testing, the default system bandwidth is 5/10/20 MHz and single SS Tx antenna is used unless specified otherwise in the test case. The mapping of downlink physical channels to physical resources for Single Tx Antenna is described in table 4.3.3.3-1 for 5/10MHz system bandwidth FDD and table 4.3.3.3-2 for 5/20MHz system bandwidth TDD.

For RF testing, the mapping of DL physical channels to resource element is defined TS 36.521-1 [21] Annex C.1.

Table 4.3.3.3-1: Mapping of DL Physical Channels to Resource Elements for Single SS Tx Antenna and 5/10 MHz System Bandwidth (FDD)

Physical channel	Time Domain Location	Frequency Domain Location	Note
PBCH	Symbols 0 to 3 of slot 1 of subframe 0 of each radio frame	Occupies 72 subcarriers centred on the DC subcarrier	Mapping rule is specified in TS36.211 [35] sub clause 6.6.4
PSS	Symbol 6 of slot 0 and 10 of each radio frame	Occupies 62 subcarriers centred on the DC subcarrier. Additional 10 subcarriers (5 on each side) adjacent to the centred 62 subcarriers are reserved.	Mapping rule is specified in TS36.211 [35] sub clause 6.11.1.2
SSS	Symbol 5 of slots 0 and 10 of each radio frame	Occupies 62 subcarriers centred on the DC subcarrier. Additional 10 subcarriers (5 on each side) adjacent to the centred 62 subcarriers are reserved.	Mapping rule is specified in TS36.211 [35] sub clause 6.11.2.2
PCFICH	Symbol 0 of each subframe	Maps into 4 REGs uniformly spread in the frequency domain over the whole system bandwidth.	Mapping rule is specified in TS36.211 [35] sub clause 6.7.4 - CELL_ID = 0
PHICH	Symbol 0 of each subframe	Each PHICH group maps into 3 REGs in the frequency domain on the REGs not assigned to PCFICH over the whole system bandwidth,	Mapping rule is specified in TS36.211 [35] sub clause 6.9.3 - CELL_ID = 0 - Number of PHICH groups = 4(BW=5 MHz)/7(BW=10MHz)
PDCCH	Symbols 0, 1, 2 of each subframe (BW=5MHz)	The remaining REGs not allocated to both PCFICH and PHICH are used for PDCCH	Mapping rule is specified in TS36.211 [35] sub clause 6.8.5 - CFI = 3 (BW=5MHz)
	Symbols 0, 1 of each subframe (BW=10MHz)		Mapping rule is specified in TS36.211 [35] sub clause 6.8.5 - CFI = 2(BW=10MHz)
	Symbols 0, 1 of each MBSFN subframe		Mapping rule is specified in TS36.211 [35] sub clause 6.8.5
PDSCH	All remaining OFDM symbols of each subframe not allocated to PDCCH	For Subframe 0, REs not allocated to RS, PSS, SSS and PBCH is allocated to PDSCH	
		For Subframe 5, REs not allocated to RS, PSS and SSS is allocated to PDSCH	
		For other subframes, REs not allocated to RS is allocated to PDSCH	
PMCH	MBSFN region of MBSFN subframes	REs not allocated to MBSFN RS is allocated to PMCH	

NOTE: In case a single cell-specific RS is configured, cell-specific RS shall be assume to be present on antenna ports 0 and 1 for the purpose of mapping a symbol-quadruplet to a REG (resource element group). (See TS 36.211 [35] sub clause 6.2.4).

Table 4.3.3.3-2: Mapping of DL Physical Channels to Resource Elements for Single SS Tx Antenna and 5/20 MHz System Bandwidth (TDD)

Physical	Time Domain Location	Frequency Domain	Note
channel		Location	
PBCH	Symbols 0 to 3 of slot 1 of subframe 0 of each radio frame	Occupies 72 subcarriers centred on the DC subcarrier	Mapping rule is specified in TS36.211 [35] subclause 6.6.4
PSS	Symbol 2 of slot 2 and 12 of each radio frame	Occupies 62 subcarriers centred on the DC subcarrier. Additional 10 subcarriers (5 on each side) adjacent to the centred 62 subcarriers are reserved.	Mapping rule is specified in TS36.211 [35] subclause 6.11.1.2
SSS	Symbol 6 of slots 1 and 11 of each radio frame	Occupies 62 subcarriers centred on the DC subcarrier. Additional 10 subcarriers (5 on each side) adjacent to the centred 62 subcarriers are reserved.	Mapping rule is specified in TS36.211 [35] subclause 6.11.2.2
PCFICH	Symbol 0 of each downlink subframe and Special subframe	Maps into 4 REGs uniformly spread in the frequency domain over the whole system bandwidth.	Mapping rule is specified in TS36.211 [35] subclause 6.7.4 - CELL_ID = 0
PHICH	Symbol 0 of each downlink subframe and Special subframe	Each PHICH group maps into 3 REGs in the frequency domain on the REGs not assigned to PCFICH over the whole system bandwidth,	Mapping rule is specified in TS36.211 [35] subclause 6.9.3 - CELL_ID = 0 - Number of PHICH groups = 4(BW=5MHz)/13(BW=20MHz)
PDCCH	Symbols 0, 1 of subframe 1, 6 and Symbols 0, 1, 2 of other downlink subframes (BW=5MHz) Symbols 0, 1 of subframe 1, 6 and Symbols 0, 1 of other downlink subframes (BW=20MHz) Symbols 0, 1 of each MBSFN	The remaining REGs not allocated to both PCFICH and PHICH are used for PDCCH	Mapping rule is specified in TS36.211 [35] subclause 6.8.5 - CFI = 3 (BW=5MHz) Mapping rule is specified in TS36.211 [35] subclause 6.8.5 - CFI = 2 (BW=20MHz) Mapping rule is specified in
	subframe		TS36.211 [35] sub clause 6.8.5 - CFI = 2
PDSCH	All remaining OFDM symbols of each downlink subframe and DwPTS not allocated to PDCCH	For Subframe 0, REs not allocated to RS, SSS and PBCH is allocated to PDSCH	
		For Subframe 5, REs not allocated to RS and SSS is allocated to PDSCH	
		For Subframe 1 and 6, REs not allocated to RS, PSS, GP and UpPTS is allocated to PDSCH	
		For other downlink subframes, REs not allocated to RS is allocated to PDSCH	
PMCH	MBSFN region of MBSFN subframes	REs not allocated to MBSFN RS is allocated to PMCH	

NOTE 1: In case a single cell-specific RS is configured, cell-specific RS shall be assume to be present on antenna ports 0 and 1 for the purpose of mapping a symbol-quadruplet to a REG (resource element group). (See TS 36.211 [35] subclause 6.2.4)

NOTE 2: In case the default TDD configuration for subframe assignment and special subframe patterns (see subclause 4.6.3)

4.3.3.4 Uplink physical channels and physical signals

[FFS].

4.3.3.5 Mapping of uplink physical channels and signals to physical resources

[FFS].

Signal levels 4.3.4

4.3.4.1 Downlink signal levels

The downlink power settings in table 4.3.4.1-1 are used unless otherwise specified in a test case.

Table 4.3.4.1-1: Default Downlink power levels

	Unit	Channel bandwidth						
		1.4 MHz 3 MHz 5 MHz 10 MHz 15 MHz 20						
Number of RBs		6	15	25	50	75	100	
Channel BW Power	dBm	-66	-62	-60	-57	-55	-54	
RS EPRE	dBm/15kHz	-85	-85	-85	-85	-85	-85	

The channel bandwidth powers are informative, based on -85dBm/15kHz RS_EPRE, then Note 1: scaled according to the number of RBs and rounded to the nearest integer dBm value. Full RE allocation with no boost or deboost is assumed.

The power level is specified at each UE Rx antenna Note 2:

It is [FFS] whether there is a requirement to specify constant power throughout all OFDM symbols, and if so how unallocated Resource elements should be treated.

The default signal level uncertainty is +/-3dB at each test port, for any level specified. If the uncertainty value is critical for the test purpose a tighter uncertainty is specified for the related test case in TS 36.521-1 [21] Annex F or in TS 36.521-3 [34] Annex F

4.3.4.2 Uplink signal levels

[FFS]

4.3.5 Standard test signals

4.3.5.1 Downlink test signals

[FFS]

Uplink test signals 4.3.5.2

[FFS]

4.3.6 Physical layer parameters

4.3.6.1 Downlink physical layer parameters

4.3.6.1.1 Physical layer parameters for DCI format 0

Default physical layer parameters for DCI format 0 are specified in table 4.3.6.1.1-1.

Table 4.3.6.1.1-1: Physical layer parameters for DCI format 0

Parameter	Value	Value in binary
Flag for format 0/format 1A differentiation	format 0	"0"
Hopping flag	w/o Hopping	"0"
Resource block assignment and hopping resource allocation	Depending on test parameters	-
Modulation and coding scheme and redundancy version	Depending on test parameters	-
New data indicator	Set for every data transmission/retransmission according to the rules specified in TS 36.321	-
TPC command for scheduled PUSCH	0 dB (accumulated TPC)	"01"
Cyclic shift for DM RS	0	"000"
UL index (TDD only)	2 bits as defined in sections 5.1.1.1 and 8 of TS 36.213. This field is present only for TDD configuration 0	-
Downlink Assignment Index (TDD only)	2 bits as defined in Table 7.3-X in TS 36.213. It represents the total number of PDSCH subframes with and without PDCCH and PDCCH indicating downlink SPS release in the window. This field is present only for TDD configuration 1-6	-
CQI request	w/o aperiodic CQI	"0"

4.3.6.1.2 Physical layer parameters for DCI format 1

Default physical layer parameters for DCI format 1 are specified in table 4.3.6.1.2-1.

Table 4.3.6.1.2-1: Physical layer parameters for DCI format 1

Parameter	Value	Value in binary
Resource allocation header	Resource allocation type 0	"0"
Resource block assignment	Depending on test parameters	-
Modulation and coding scheme	Depending on test parameters	•
HARQ process number	Depending on test parameters, 3bits for FDD, 4 bits for TDD.	-
New data indicator	Set for every data transmission/retransmission according to the rules specified in TS 36.321	-
Redundancy version	Depending on test parameters	"00"
TPC command for PUCCH	0 dB (accumulated TPC)	"01"
Downlink Assignment Index (TDD only)	2 bits as defined in Table 7.3-X in TS 36.213. It represents the number of PDSCH with PDCCH and PDCCH indicating downlink SPS release in the window up to the present subframe. This is present for all the uplinkdownlink configurations and only applies to uplink-downlink configuration 1-6	-

4.3.6.1.3 Physical layer parameters for DCI format 1A

Default physical layer parameters for DCI format 1A are specified in table 4.3.6.1.3-1.

Table 4.3.6.1.3-1: Physical layer parameters for DCI format 1A

Parameter	Value	Value in binary
Flag for format 0/format 1A differentiation	format 1A	"1"
Localized/Distributed VRB assignment flag	Localized VRB assignment	"0"
Resource block assignment	Depending on test parameters	=
Modulation and coding scheme	Depending on test parameters	=
HARQ process number	Depending on test parameters, 3bits for FDD, 4 bits for TDD.	•
New data indicator	Set for every data transmission/retransmission according to the rules specified in TS 36.321	-
Redundancy version	Depending on test parameters	"00"
TPC command for PUCCH	0 dB (accumulated TPC)	"01"
Downlink Assignment Index (TDD only)	2 bits as defined in Table 7.3-X in TS 36.213. It represents the number of PDSCH with PDCCH and PDCCH indicating downlink SPS release in the window up to the present subframe. This is present for all the uplinkdownlink configurations and only applies to uplink-downlink configuration 1-6	-

4.3.6.1.3A Physical layer parameters for DCI format 1B

Default physical layer parameters for DCI format 1B are specified in table 4.3.6.1.3A-1.

Table 4.3.6.1.3A-1: Physical layer parameters for DCI format 1B

Parameter	Value	Value in binary
Localized/Distributed VRB assignment flag	Localized VRB assignment	"0"
Resource block assignment	Depending on test parameters	-
Modulation and coding scheme	Depending on test parameters	-
HARQ process number	Depending on test parameters, 3bits for FDD, 4 bits for TDD.	-
New data indicator	Set for every data transmission/retransmission according to the rules specified in TS 36.321	-
Redundancy version	Depending on test parameters	"00"
TPC command for PUCCH	0 dB (accumulated TPC)	"01"
Downlink Assignment Index (TDD only)	2 bits as defined in Table 7.3-X in TS 36.213. It represents the number of PDSCH with PDCCH and PDCCH indicating downlink SPS release in the window up to the present subframe. This is present for all the uplinkdownlink configurations and only applies to uplink-downlink configuration 1-6	-
TPMI information for precoding	Set for codebook index according to TS 36.211 Table 6.3.4.2.3-1 for 2 Tx antenna ports and Table 6.3.4.2.3-2 for 4 Tx antenna ports corresponding to the single layer transmission	-
PMI confirmation for precoding	Set for every transmission, 1 for precoding according to the latest reported PMI on PUSCH,0 for precoding according to the indicated TPMI in the TPMI information field	-

4.3.6.1.4 Physical layer parameters for DCI format 1C

Default physical layer parameters for DCI format 1C are specified in table 4.3.6.1.4-1.

Table 4.3.6.1.4-1: Physical layer parameters for DCI format 1C

Parameter	Value	Value in binary
gap value (N_RB >= 50)	gap1	"0"
Resource block assignment	depending on test parameters	-
Transport block size index	depending on test parameters	-

4.3.6.1.5 Physical layer parameters for DCI format 2

Default physical layer parameters for DCI format 2 are specified in table 4.3.6.1.5-1.

Table 4.3.6.1.5-1: Physical layer parameters for DCI format 2

Parameter	Value	Value in binary
Resource allocation header	Resource allocation type 0	"0"
Resource block assignment	Depending on test parameters	-
TPC command for PUCCH	0 dB (accumulated TPC)	"01"
Downlink Assignment Index (TDD only)	2 bits as defined in Table 7.3-X in TS 36.213. It represents the number of PDSCH with PDCCH and PDCCH indicating downlink SPS release in the window up to the present subframe. This is present for all the uplinkdownlink configurations and only applies to uplink-downlink configuration 1-6	-
HARQ process number	Depending on test parameters, 3bits for FDD, 4 bits for TDD.	-
Transport block to codeword swap flag	No swap	"0"
Modulation and coding scheme (transport block 1)	Depending on test parameters	-
New data indicator (transport block 1)	Set for every data transmission/retransmission according to the rules specified in TS 36.321	-
Redundancy version (transport block 1)	Depending on test parameters	-
Modulation and coding scheme (transport block 2)	Depending on test parameters	-
New data indicator (transport block 2)	Set for every data transmission/retransmission according to the rules specified in TS 36.321	-
Redundancy version (transport block 2)	Depending on test parameters	-
Precoding information	Set for every transmission according to 36.212 Table 5.3.3.1.5-4 for 2 Tx antenna ports and Table 5.3.3.1.5-5 for 4 Tx antenna ports	-

4.3.6.1.6 Physical layer parameters for DCI format 2A

Default physical layer parameters for DCI format 2A are specified in table 4.3.6.1.6-1.

Table 4.3.6.1.6-1: Physical layer parameters for DCI format 2A

Parameter	Value	Value in binary
Resource allocation header	Resource allocation type 0	"0"
Resource block assignment	depending on test parameters	=
TPC command for PUCCH	0 dB (accumulated TPC)	"01"
Downlink Assignment Index (TDD only)	2 bits as defined in Table 7.3-X in TS 36.213. It represents the number of PDSCH with PDCCH and PDCCH indicating downlink SPS release in the window up to the present subframe. This is present for all the uplinkdownlink configurations and only applies to uplink-downlink configuration 1-6	-
HARQ process number	depending on test parameters, 3bits for FDD, and 4 bits for TDD.	-
Transport block to codeword swap flag	No swap	"0"
Modulation and coding scheme (transport block 1)	depending on test parameters	-
New data indicator (transport block 1)	Set for every data transmission/retransmission according to the rules specified in TS 36.321	-
Redundancy version (transport block 1)	depending on test parameters	-
Modulation and coding scheme (transport block 2)	depending on test parameters	-
New data indicator (transport block 2)	Set for every data transmission/retransmission according to the rules specified in TS 36.321	-
Redundancy version (transport block 2)	depending on test parameters	-
Precoding information	N/A for 2 Tx antenna ports. For 4 Tx antenna ports, set for every transmission according to 36.212 Table 5.3.3.1.5A-2	-

4.4 Reference system configurations

The reference system configurations specified in this sub clause apply to all test cases unless otherwise specified.

4.4.1 Simulated network scenarios

The UE will eventually have to operate in either single mode networks (FDD or TDD), dual mode networks (FDD+TDD), or inter-RAT networks ((FDD or TDD) + (UTRA FDD, UTRA TDD, GSM, HRPD or 1xRTT)).

Simulated network scenarios to be tested are listed in this sub clause.

NOTE 1: The number of cells specified does not necessarily correspond to the maximum number of resources to be configured simultaneously in test equipment. Please refer to Table 6.1-1 for such information.

NOTE 2: For NAS test cases see sub clause 6.3.2.

4.4.1.1 Single cell network scenarios

For FDD and TDD basic single cell environment, Cell 1 is used.

4.4.1.2 E-UTRA single mode multi cell network scenarios

For FDD or TDD basic intra-frequency multi cell environment, Cell 1, Cell 2 and Cell 4 are used.

For FDD or TDD basic inter-frequency multi cell environment, Cell 1, Cell 3 and Cell 6 are used.

For FDD or TDD basic inter-band cell environment, Cell 1 and Cell 10 are used.

For FDD or TDD multi tracking area intra-frequency multi cell environment, Cell 1 and Cell 11 are used.

For FDD or TDD multi tracking area inter-frequency multi cell environment, Cell 1 and Cell 23 are used.

For FDD or TDD multi PLMN inter-frequency multi cell environment, Cell 1, Cell 12, Cell 13 and Cell 14 are used.

4.4.1.3 E-UTRA dual mode multi cell network scenarios

For FDD and TDD basic multi cell environment, Cell 1, Cell 10 and Cell 31 are used.

For FDD and TDD multi PLMN multi cell environment, Cell 1, Cell 28, Cell 29 and Cell 30 are used.

In addition, E-UTRA single mode multi cell network scenarios defined in clause 4.4.1.2 are combined with the dual mode scenarios defined in this clause when additional intra or inter-frequency cells are used.

4.4.1.4 3GPP Inter-RAT network scenarios

For FDD and TDD basic inter-RAT cell environment with UTRA FDD or UTRA TDD, Cell 1 and Cell 5 are used.

For FDD and TDD inter-RAT cell environment with multi UTRA FDD or UTRA TDD cells, Cell 1 and Cell 7, Cell 8 and Cell 9 is used.

For FDD and TDD inter-RAT cell environment with GERAN, Cell 1 and Cell 24 are used.

For FDD and TDD inter-RAT cell environment with multi GERAN cells, Cell 1 and Cell 25, Cell 26 are used.

For FDD and TDD inter-RAT cell environment with (UTRA FDD or UTRA TDD) and GERAN, Cell 1, Cell 5 and Cell 24 are used.

4.4.1.5 3GPP2 Inter-RAT network scenarios

For FDD and TDD inter-RAT cell environment with HRPD, Cell 1 and Cell 15 are used.

For FDD and TDD inter-RAT cell environment with multi HRPD cells, Cell 1 and Cell 15, Cell 16 and Cell 17 are used.

For FDD and TDD inter-RAT cell environment with 1xRTT, Cell 1 and Cell 19 are used.

For FDD and TDD inter-RAT cell environment with multi 1xRTT cells, Cell 1 and Cell 19, Cell 20 and Cell 21 are used.

4.4.1.6 WLAN Inter-RAT network scenarios

For FDD and TDD inter-RAT cell environment with WLAN, Cell 1 and Cell 27 are used.

4.4.2 Simulated cells

NOTE: For NAS test cases see subclause 6.3.2.

NOTE: Test frequency and range defined in table 4.4.2-1 do not apply to 36.521-1 test cases.

Test frequencies and simulated cells are defined in table 4.4.2-1. For E-UTRA cells, f1 is the default test frequency. For UTRA cells, f8 is the default test frequency. For GERAN cells, f11 is the default test frequency. For CDMA2000 HRPD cells, f14 is the default test frequency. For CDMA 2000 1xRTT cells, f17 is the default test frequency. For WLAN cells, f20 is the default test frequency.

Default parameters for simulated cells are specified in table 4.4.2-1A and table 4.4.2-2.

Common parameters for simulated cells are specified in subclauses 4.4.3 to 4.4.6A.

Other cell specific parameters are specified in subclause 4.4.7.

Table 4.4.2-1: Definition of test frequencies and simulated cells

Test frequency	RAT	Operating band	Range	Simulated cells
f1	E-UTRA	Operating band under test	Mid (Note 1, Note 5, Note 8)	Cell 1, Cell 2, Cell 4, Cell 11 (Note 4)
f2	E-UTRA	Operating band under test	High (Note 1, Note 6, Note 8)	Cell 3, Cell 12, Cell 23
f3	E-UTRA	Operating band under test	Low (Note 1, Note 7, Note 8)	Cell 6, Cell 13
f4	E-UTRA	Operating band under test	(Note 1)	Cell 14
f5	E-UTRA	Operating band for inter-band cells	Mid (Note 1)	Cell 10, Cell 30, Cell 31
f6	E-UTRA	Operating band for inter-band cells	High (Note 1)	Cell 28, Cell 29
f7	E-UTRA	Operating band for inter-band cells	Low (Note 1)	
f8	UTRA	Operating band for UTRA cells	Mid (Note 2)	Cell 5, Cell 7
f9	UTRA	Operating band for UTRA cells	High (Note 2)	Cell 8
f10	UTRA	Operating band for UTRA cells	Low (Note 2)	Cell 9
f11	GERAN	Operating band for GERAN cells	Mid (Note 3)	Cell 24
f12	GERAN	Operating band for GERAN cells	High (Note 3)	Cell 25
f13	GERAN	Operating band for GERAN cells	Low (Note 3)	Cell 26
f14	CDMA2000 HRPD	Operating band for CDMA2000 HRPD cells	Mid	Cell 15, Cell 16
f15	CDMA2000 HRPD	Operating band for CDMA2000 HRPD cells	High	Cell 17
f16	CDMA2000 HRPD	Operating band for CDMA2000 HRPD cells	Low	Cell 18
f17	CDMA2000 1xRTT	Operating band for CDMA2000 1xRTT cells	Mid	Cell 19, Cell 20
f18	CDMA2000 1xRTT	Operating band for CDMA2000 1xRTT cells	High	Cell 21
f19	CDMA2000 1xRTT	Operating band for CDMA2000 1xRTT cells	Low	Cell 22
f20	WLAN	Operating band for WLAN cells	FFS	Cell 27
Note 1:	For signalling to	st see clause 6.2.3		

- Note 1: For signalling test, see clause 6.2.3.
- Note 2: See TS 34.108 [5] clause 5.1.
- Note 3: For signalling test, see clause 6.3.1.4. For RRM test, see clause 7.2.2.1.
- Note 4: For signalling test, simultaneous co-existence of Cell 2 with Cell 11 is not allowed.
- Note 5: For RRM test with intra-band contiguous CA, both PCC and SCC are "Mid", with the test frequencies specified in clauses 4.3.1.1.xA for FDD and 4.3.1.2.xA for TDD
- Note 6: For RRM test with intra-band contiguous CA, both PCC and SCC are "High", with the test frequencies specified in clauses 4.3.1.1.xA for FDD and 4.3.1.2.xA for TDD
- Note 7: For RRM test with intra-band contiguous CA, both PCC and SCC are "Low", with the test frequencies specified in clauses 4.3.1.1.xA for FDD and 4.3.1.2.xA for TDD.
- Note 8: For RRM test with intra-band non-contiguous CA, the test frequencies are specified in clauses 4.3.1.1.xA for FDD and 4.3.1.2.xA for TDD without any regard to range. Thus "Low", "Mid" and "High" information in this table does not apply. Unless otherwise stated, test point with maximum Wgap is chosen.

Table 4.4.2-1A: Default E-UTRA parameters for simulated cells

cell ID	E-UTRAN Cell Identifier		Physical layer cell identity	rootSequenceIndex FDD	rootSequenceIndex TDD
	eNB Identifier	Cell Identity	_		
Cell 1	'0000 0000 0000 0000 0001'B	'0000 0000'B	0	22	0
Cell 2	'0000 0000 0000 0000 0001'B	'0000 0010'B	2	86	8
Cell 3	'0000 0000 0000 0000 0010'B	'0000 0011'B	3	22	0
Cell 4	'0000 0000 0000 0000 0011'B	'0000 0100'B	4	150	16
Cell 6	'0000 0000 0000 0000 0100'B	'0000 0110'B	6	22	0
Cell 10	'0000 0000 0000 0000 0101'B	'0000 1010'B	10	22	0
Cell 11	'0000 0000 0000 0000 0110'B	'0000 1011'B	11	214	24
Cell 12	'0000 0000 0000 0000 0010'B	'0000 1100'B	12	86	8
Cell 13	'0000 0000 0000 0000 0100'B	'0000 1101'B	13	86	8
Cell 14	'0000 0000 0000 0000 0111'B	'0000 1110'B	14	22	0
Cell 23	'0000 0000 0000 0000 0110'B	'0001 0111'B	23	150	16
Cell 28	'0000 0000 0000 0000 0010'B	'0001 1100'B	28	86	8
Cell 29	'0000 0000 0000 0000 0100'B	'0001 1101'B	29	86	8
Cell 30	'0000 0000 0000 0000 0111'B	'0001 1110'B	30	22	0
Cell 31	'0000 0000 0000 0000 0110'B	'0001 1111'B	31	214	24

Table 4.4.2-2: Default NAS parameters for simulated cells

cell ID		Trackin	g Area		TA# list	GUTI (Note 2)		
	TA#	PL	MN	TAC	(Note 1)	MME Identifier		M-TMSI
		MCC	MNC			MME Group ID	MME Code	
Cell 1	TAI-1	(Not	e 3)	1	TAI-1	32769	1	Arbitrarily
Cell 2	TAI-1	(Not	e 3)	1	TAI-1	32769	1	selected
Cell 3	TAI-1	(Not	e 3)	1	TAI-1	32769	1	according to
Cell 4	TAI-1	(Not	e 3)	1	TAI-1	32769	1	TS 23.003
Cell 6	TAI-1	(Not	e 3)	1	TAI-1	32769	1	subclause 2.8
Cell 10	TAI-1	(Not	e 3)	1	TAI-1	32769	1	[2].
Cell 11	TAI-2	(Not	e 3)	2	TAI-2	32769	1	
Cell 23	TAI-2	(Not	e 3)	2	TAI-2	32769	1	
Cell 12,	TAI-3	002	11	1	TAI-3	32769	1	
Cell 28								
Cell 13,	TAI-4	003	21	1	TAI-4	32769	1	
Cell 29								
Cell 14,	TAI-5	004	31	1	TAI-5	32769	1	
Cell 30								
Cell 31	TAI-2	(Not	e 3)	2	TAI-2	32769	1	

Note 1: The value(s) in the column TA# list indicates TAI(s) included in the response messages of the registration procedure (ATTACH ACCEPT or TRACKING AREA UPDATE ACCEPT) when the UE performs the registration procedure on a corresponding cell.

Note 2: The value in the column GUTI indicates GUTI included in the response messages of the registration procedure (ATTACH ACCEPT or TRACKING AREA UPDATE ACCEPT) when the UE performs the registration procedure on a corresponding cell.

Note 3: Set to the same Mobile Country Code and Mobile Network Code stored in EF_{IMSI} on the test USIM card (subclause 4.9.3).

Table 4.4.2-3: Default HRPD parameters for simulated cells

Cell ID	SectorID	ColorCode	Pilot PN Offset	CountryCode				
Cell 15	Set according to PIXIT parameter	Set according to PIXIT parameter	50	(Note 1)				
Cell 16	Set according to PIXIT parameter	Set according to PIXIT parameter	100	(Note 1)				
Cell 17	Set according to PIXIT parameter	Set according to PIXIT parameter	150	(Note 1)				
Cell 18	Set according to PIXIT parameter	Set according to PIXIT parameter	200	(Note 1)				
Note 1:	Set to the same Mobile Country	Code stored in EFIMSI on th	ne test USIM card (sub					

Table 4.4.2-4: Default 1XRTT parameters for simulated cells

Cell ID	SID	NID	BASE_ID	Pilot PN Offset	REG_ZONE	MCC	IMSI_11_12	
Cell 19	200	Set	Set according	50	1	Note	Note 2	
		according	to PIXIT			1		
		to PIXIT	parameter					
		parameter						
Cell 20	200	Set	Set according	100	1	Note	Note 2	
		according	to PIXIT			1		
		to PIXIT	parameter					
		parameter						
Cell 21	200	Set	Set according	150	2	Note	Note 2	
		according	to PIXIT			1		
		to PIXIT	parameter					
		parameter						
Cell 22	200	Set	Set according	200	3	Note	Note 2	
		according	to PIXIT			1		
		to PIXIT	parameter					
parameter								
Note 1: S	et to the same M	obile Country C	ode stored in EFI	MSI on the test USI	M card (subclaus	se 4.9.3).	_	
Note 2: S	Set to the same M	obile Network (Code stored in EF	IMSI on the test US	IM card (subclau	se 4.9.3).		

Table 4.4.2-5: Neighbouring cell list for 1XRTT cells

Cell ID	Intra Frequency		Inter Frequency Cells	
Cell 19	cell 20	Cell 21	cell 22	X
Cell 20	cell 19	Cell 21	cell 22	X
Cell 21	X	cell 19	cell 20	cell 22
Cell 22	X	cell 19	cell 20	cell 21

4.4.3 Common parameters for simulated E-UTRA cells

The parameters specified in this sub clause apply to all simulated E-UTRA cells unless otherwise specified.

4.4.3.1 Common configurations of system information blocks

4.4.3.1.1 Combinations of system information blocks

The combination of system information blocks required by a test case depends on the test case scenario. In this clause, the following combinations of system information blocks are defined.

Combination 1 is the default combination which applies to the following test case scenarios:

- E-UTRA FDD single cell scenario
- E-UTRA TDD single cell scenario
- E-UTRA FDD intra-frequency multi cell scenario
- E-UTRA TDD intra-frequency multi cell scenario

- E-UTRA FDD and E-UTRA TDD dual mode multi cell roaming scenario

Combination 2 applies to the following test case scenarios:

- E-UTRA FDD intra-frequency multi cell scenario with neighbouring cell related information
- E-UTRA TDD intra-frequency multi cell scenario with neighbouring cell related information

Combination 3 applies to the following test case scenarios:

- E-UTRA FDD inter-frequency multi cell scenario
- E-UTRA TDD inter-frequency multi cell scenario
- E-UTRA FDD inter-band multi cell scenario
- E-UTRA TDD inter-band multi cell scenario
- E-UTRA FDD and E-UTRA TDD dual mode multi cell non-roaming scenario
- E-UTRA FDD intra-band carrier aggregation component carriers cell scenario
- E-UTRA FDD inter-band carrier aggregation component carriers cell scenario
- E-UTRA TDD intra-band carrier aggregation component carriers cell scenario

Combination 4 applies to the following test case scenarios:

- 3GPP inter-RAT E-UTRA FDD + UTRA FDD multi cell scenario
- 3GPP inter-RAT E-UTRA TDD + UTRA LCR TDD multi cell scenario
- 3GPP inter-RAT E-UTRA TDD + UTRA FDD multi cell scenario

Combination 5 applies to the following test case scenarios:

- 3GPP inter-RAT E-UTRA FDD + GERAN multi cell scenario
- 3GPP inter-RAT E-UTRA TDD + GERAN multi cell scenario

Combination 6 applies to the following test case scenarios:

- 3GPP2 inter-RAT E-UTRA FDD + HRPD multi cell scenario
- 3GPP2 inter-RAT E-UTRA TDD + HRPD multi cell scenario
- 3GPP2 inter-RAT E-UTRA FDD + 1xRTT multi cell scenario
- 3GPP2 inter-RAT E-UTRA TDD + 1xRTT multi cell scenario

Editor's note: 3GPP2 Inter-RAT multi cell scenarios with E-UTRA + HRPD + 1xRTT are FFS.

Combination 7 applies to the following test case scenarios:

- E-UTRA FDD + home eNB multi cell scenario
- E-UTRA TDD + home eNB multi cell scenario

Combination 8 applies to the following test case scenarios:

- E-UTRA FDD ETWS single cell scenario
- E-UTRA TDD ETWS single cell scenario

Combination 9 applies to the following test case scenarios:

- E-UTRA FDD inter-frequency + 3GPP inter-RAT UTRA multi-cell scenario
- E-UTRA TDD inter-frequency + 3GPP inter-RAT UTRA multi-cell scenario

Combination 10 applies to the following test case scenarios:

- 3GPP inter-RAT E-UTRA FDD + UTRA FDD + GERAN multi cell scenario
- 3GPP inter-RAT E-UTRA TDD + UTRA LCR TDD + GERAN multi cell scenario.

Combination 10a applies to the following test case scenarios:

- E-UTRA FDD inter-frequency + 3GPP inter-RAT E-UTRA FDD + UTRA FDD + GERAN multi cell scenario
- E-UTRA TDD inter-frequency + 3GPP inter-RAT E-UTRA TDD + UTRA LCR TDD + GERAN multi cell scenario

Combination 11 applies to the following test case scenarios:

- 3GPP inter-RAT E-UTRA FDD + UTRA FDD + home eNB multi cell scenario
- 3GPP inter-RAT E-UTRA TDD + UTRA LCR TDD + home eNB multi cell scenario

Combination 12 applies to the following test case scenarios:

- E-UTRA FDD inter-frequency + GERAN cell scenario
- E-UTRA TDD inter-frequency + GERAN cell scenario

Combination 13 applies to the following test case scenarios:

- E-UTRA FDD inter-frequency + home eNB
- E-UTRA TDD inter-frequency + home eNB

Combination 14 applies to the following test case scenarios:

- 3GPP inter-RAT E-UTRA FDD + GERAN + home eNB multi cell scenario
- 3GPP inter-RAT E-UTRA TDD + GERAN + home eNB multi cell scenario

Combination 15 applies to the following test case scenarios:

- 3GPP E-UTRA FDD single cell scenario + MBMS
- 3GPP E-UTRA TDD single cell scenario + MBMS
- 3GPP E-UTRA FDD intra-frequency multi cell scenario + MBMS
- 3GPP E-UTRA TDD intra-frequency multi cell scenario + MBMS

Combination 16 applies to the following test case scenarios:

- 3GPP E-UTRA FDD inter-frequency multi cell scenario + MBMS
- 3GPP E-UTRA TDD inter-frequency multi cell scenario + MBMS

Combination 17 applies to the following test case scenarios:

- 3GPP E-UTRA FDD + CMAS single cell scenario
- 3GPP E-UTRA TDD + CMAS single cell scenario

Combination 18 applies to the following test case scenarios:

- 3GPP E-UTRA FDD + MBMS inter-frequency multi cell scenario (non-MBMS cell broadcasting SIB15)
- 3GPP E-UTRA TDD + MBMS inter-frequency multi cell scenario (non-MBMS cell broadcasting SIB15)

Combination 19 applies to the following test case scenarios:

- 3GPP E-UTRA FDD + MBMS intra-frequency multi cell scenario (MBMS cell broadcasting SIB15)

- 3GPP E-UTRA TDD + MBMS intra-frequency multi cell scenario (MBMS cell broadcasting SIB15)

Combination 20 applies to the following test case scenarios:

- 3GPP E-UTRA FDD + MBMS inter-frequency multi cell scenario (MBMS cell broadcasting SIB15)
- 3GPP E-UTRA TDD + MBMS inter-frequency multi cell scenario (MBMS cell broadcasting SIB15)
- 3GPP E-UTRA FDD + MBMS inter-band multi cell scenario (MBMS cell broadcasting SIB15)
- 3GPP E-UTRA TDD + MBMS inter-band multi cell scenario (MBMS cell broadcasting SIB15)

Combination 21 applies to the following test case scenarios:

- E-UTRA FDD SIMTC single cell scenario
- E-UTRA TDD SIMTC single cell scenario

Table 4.4.3.1.1-1: Combinations of system information blocks

		System information block type												
Combination	SIB	SIB	SIB	SIB	SIB	SIB	SIB	SIB	SIB	SIB	SIB	SIB	SIB	SIB
No.	2	3	4	5	6	7	8	9	10	11	12	13	14	15
1	Х	X												
2	Χ	Χ	Χ											
3	Х	X		X										
4	Х	Х			Х									
5	Х	Х				Х								
6	Х	Х					Х							
7	Х	Х	Х					Х						
8	Х	Х							Х	Х				
9	Х	Х		Х	Х									
10	Х	Х			Х	Х								
10a	Χ	Χ		Χ	Χ	Χ								
11	Χ	Χ	Χ		Χ			Χ						
12	Х	X		X		X								
13	Х	Х	Х	Х				Х						
14	Х	Х	Х			Х		Х						
15	Х	Х										Х		
16	Х	Х		Х								Х		
17	Х	Х									Х			_
18	Х	Х		Х							_			Х
19	Х	Х				_		_			_	Х	_	Х
20	Х	Х		Х								Х		Х
21	Х	Х											Х	

4.4.3.1.2 Scheduling of system information blocks

The scheduling configurations for combinations of system information blocks are defined in the following tables.

Table 4.4.3.1.2-1: Scheduling for combination 1

Ir	Scheduling nformation No.	Periodicity [radio frames]	Mapping of system information blocks
	1	16	SIB2
	2	See sub clause 4.4.3.4	SIB3

Table 4.4.3.1.2-2: Scheduling for combination 2

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB4

Table 4.4.3.1.2-3: Scheduling for combination 3

	Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
	1	16	SIB2
ĺ	2	See sub clause 4.4.3.4	SIB3
ſ	3	See sub clause 4.4.3.4	SIB5

Table 4.4.3.1.2-4: Scheduling for combination 4

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB6

Table 4.4.3.1.2-5: Scheduling for combination 5

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB7

Table 4.4.3.1.2-6: Scheduling for combination 6

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB8

Table 4.4.3.1.2-7: Scheduling for combination 7

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB4
4	See sub clause 4.4.3.4	SIB9

Table 4.4.3.1.2-8: Scheduling for combination 8

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB11
4	See sub clause 4.4.3.4	SIB10

Table 4.4.3.1.2-9: Scheduling for combination 9

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB5, SIB6

Table 4.4.3.1.2-10: Scheduling for combination 10

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB6
4	See sub clause 4.4.3.4	SIB7

Table 4.4.3.1.2-10a: Scheduling for combination 10a

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB5, SIB6
4	See sub clause 4.4.3.4	SIB7

Table 4.4.3.1.2-11: Scheduling for combination 11

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB4
4	See sub clause 4.4.3.4	SIB6
5	See sub clause 4.4.3.4	SIB9

Table 4.4.3.1.2-12: Scheduling for combination 12

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB5
4	See sub clause 4.4.3.4	SIB7

Table 4.4.3.1.2-13: Scheduling for combination 13

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB4
4	See sub clause 4.4.3.4	SIB5

Table 4.4.3.1.2-14: Scheduling for combination 14

Scheduling	Periodicity	Mapping of system information
Information No.	[radio frames]	blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB4
4	See sub clause 4.4.3.4	SIB7
5	See sub clause 4.4.3.4	SIB9

Table 4.4.3.1.2-15: Scheduling for combination 15

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB13

Table 4.4.3.1.2-16: Scheduling for combination 16

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB5
4	See sub clause 4.4.3.4	SIB13

Table 4.4.3.1.2-17: Scheduling for combination 17

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB12

Table 4.4.3.1.2-18: Scheduling for combination 18

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB5
4	See sub clause 4.4.3.4	SIB15

Table 4.4.3.1.2-19: Scheduling for combination 19

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB13
4	See sub clause 4.4.3.4	SIB15

Table 4.4.3.1.2-20: Scheduling for combination 20

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB5
4	See sub clause 4.4.3.4	SIB13
5	See sub clause 4.4.3.4	SIB15

Table 4.4.3.1.2-21: Scheduling for combination 21

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	16	SIB2
2	See sub clause 4.4.3.4	SIB3
3	See sub clause 4.4.3.4	SIB14

4.4.3.2 Common contents of system information messages

- MasterInformationBlock

The MasterInformationBlock includes the system information transmitted on BCH.

Table 4.4.3.2-1: MasterInformationBlock

Derivation Path: 36.331 clause 6.2.2				
Information Element	Value/remark	Comment	Condition	
MasterInformationBlock ::= SEQUENCE {				
dl-Bandwidth	Downlink system bandwidth under test.			
phich-Config SEQUENCE {}	PHICH-Config-DEFAULT	See subclause 4.6.3		
systemFrameNumber	A valid value as defined in TS 36.331 [17]			
spare	'0000 0000 00'B			
}				

- SystemInformation

The *SystemInformation* message is used to convey one or more System Information Blocks. All the SIBs included are transmitted with the same periodicity.

Table 4.4.3.2-2: SystemInformation

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
SystemInformation ::= SEQUENCE {			
criticalExtensions CHOICE {			
systemInformation-r8 SEQUENCE {			
sib-TypeAndInfo SEQUENCE (SIZE (1maxSIB)) OF CHOICE {}	See subclause 4.4.3.1		
criticalExtensionsFuture SEQUENCE {}	Not present		
}			
}			
}			

SystemInformationBlockType1 contains information relevant when evaluating if a UE is allowed to access a cell and defines the scheduling of other system information.

Table 4.4.3.2-3: SystemInformationBlockType1

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType1 ::=			
SEQUENCE {			
cellAccessRelatedInfo SEQUENCE {			
plmn-IdentityList SEQUENCE (SIZE (16))	1 entry		
OF SEQUENCE {			
plmn-Identity[1] SEQUENCE {			
mcc SEQUENCE (SIZE (3)) OF MCC-	See table 4.4.2-2	For NAS test cases, see table	
NMC-Digit		6.3.2.2-1.	
mnc SEQUENCE (SIZE (23)) OF MCC-	See table 4.4.2-2	For NAS test cases, see table	
NMC-Digit		6.3.2.2-1.	
}			
cellReservedForOperatorUse[1]	notReserved		
}			
trackingAreaCode	See table 4.4.2-2	For NAS test cases, see table 6.3.2.2-1.	
cellIdentity	Cell ID for the		
•	simulated cell		
cellBarred	notBarred		
intraFreqReselection	notAllowed		
csg-Indication	FALSE		
csg-Identity	Not present		
}	'		
cellSelectionInfo SEQUENCE {			
q-RxLevMin	-70 (-140 dBm)	For RF/RRM test cases	
•	-106 dBm	For signalling test cases	
q-RxLevMinOffset	Not present		
}			
p-Max	Not present		
freqBandIndicator	Operating band		
·	under test.		
schedulingInfoList SEQUENCE (SIZE	See subclause		
(1maxSI-Message)) OF SEQUENCE {}	4.4.3.1		
tdd-Config SEQUENCE {}	Not present		FDD
tdd-Config SEQUENCE {}	TDD-Config-	See subclause 4.6.3	TDD
	DEFAULT		
si-WindowLength	ms20	To allow sufficient number of	
		retransmissions.	
systemInfoValueTag	0		
nonCriticalExtension SEQUENCE {			
lateNonCriticalExtension	Not present		
nonCriticalExtension SEQUENCE {			
ims-EmergencySupport-r9	True	Support IMS emergency call in limited service mode.	
cellSelectionInfo-v920 SEQUENCE {}	Not present		
cellSelectionInfo-v920 SEQUENCE {			QBASED
q-QualMin-r9	-20 (-20dB)		
q-QualMinOffset-r9	Not present		
}			
nonCriticalExtension	Not present		
}			
}			
}			
			

FDD	FDD cell environment
TDD	TDD cell environment
QBASED	This condition applies to Quality based cell (re)selection signalling test cases.

4.4.3.3 Common contents of system information blocks

- SystemInformationBlockType2

The IE SystemInformationBlockType2 contains radio resource configuration information that is common for all UEs.

Table 4.4.3.3-1: SystemInformationBlockType2

Derivation Path: 36.331 clause 6.3.1			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType2 ::= SEQUENCE {			
ac-BarringInfo SEQUENCE {}	Not present		
radioResourceConfigCommon SEQUENCE {}	RadioResourceCo nfigCommonSIB- DEFAULT	See subclause 4.6.3	
ue-TimersAndConstants SEQUENCE {			
t300	ms1000	Typical value in real network	
t301	ms1000	Typical value in real network	
t310	ms1000	Typical value in real network	
n310	n1		
t311	ms10000	Typical value in real network	
n311	n1		
}			
freqInfo SEQUENCE {			
ul-CarrierFreq	Not present	Default UL EARFCN applies	
ul-Bandwidth	Not Present		
additionalSpectrumEmission	1 (NS_01)	A-MPR doesn't apply by default. See TS 36.101 table 6.2.4-1.	
}			
mbsfn-SubframeConfigList	Not present		
mbsfn-SubframeConfigList SEQUENCE (SIZE (1maxMBSFN-Allocations)) OF SEQUENCE {			MBMS
radioframeAllocationPeriod	n4		
radioframeAllocationOffset	1		FDD
	0		TDD
subframeAllocation CHOICE{			
oneFrame	'100000' B '000010' B		FDD TDD
}			
}			
timeAlignmentTimerCommon	sf750	'sf750' is applicable to the widest range of mobility (up to about 360km/h).	
}			

Condition	Explanation	
MBMS	MBMS cell environment	
FDD	FDD cell environment	
TDD	TDD cell environment	

The IE *SystemInformationBlockType3* contains cell re-selection information common for intra-frequency, interfrequency and/or inter-RAT cell re-selection (i.e. applicable for more than one type of cell re-selection but not necessarily all) as well as intra-frequency cell re-selection information other than neighbouring cell related.

Table 4.4.3.3-2: SystemInformationBlockType3

Derivation Path: 36.331 clause 6.3.1				
Information Element	Value/remark	Comment	Condition	
SystemInformationBlockType3 ::= SEQUENCE {				
cellReselectionInfoCommon SEQUENCE {				
q-Hyst	dB0	To reduce interference between intra-frequency multiple cells		
speedStateReselectionPars SEQUENCE {}	Not present			
}				
cellReselectionServingFreqInfo SEQUENCE {				
s-NonIntraSearch	Not present			
threshServingLow	0 (0 dB)	Typical value in real network		
cellReselectionPriority	4	A middle value in the range has been selected.		
<u>}</u>				
intraFreqCellReselectionInfo SEQUENCE {	70 (440 JP.)	F DE/DDM :		
q-RxLevMin	-70 (-140 dBm)	For RF/RRM test cases		
	-106 dBm	For signalling test cases		
p-Max	Not present			
s-IntraSearch	Not present			
allowedMeasBandwidth	Not present	The downlink bandwidth of the serving cell applies.		
presenceAntennaPort1	FALSE			
	TRUE	At least two cell- specific antenna ports are used in all neighbouring cells.	All neighCells with port1	
neighCellConfig	'01'B (No MBSFN subframes are present in all neighbour cells)	MBSFN doesn't apply by default.		
t-ReselectionEUTRA	0	Typical value in real network		
t-ReselectionEUTRA-SF	Not present			
}				
lateNonCriticalExtension {				
s-IntraSearch-v920 SEQUENCE {}	Not present			
s-NonIntraSearch-v920 SEQUENCE {}	Not present			
q-QualMin-r9	Not present			
•	-20 (-20dB)		QBASED	
threshServingLowQ-r9	Not present			
			QBASED	
	3 (3dB)		QD/ (OLD	
}	3 (30B)		QD/ (OLD	

Condition	Explanation

QBASED	See the definition below table 4.4.3.2-3.
All neighCells with	Used for all neighbouring cells with at least two cell-specific antenna ports
port1	

The IE *SystemInformationBlockType4* contains neighbouring cell related information relevant only for intra-frequency cell re-selection. The IE includes cells with specific re-selection parameters as well as blacklisted cells.

Table 4.4.3.3-3: SystemInformationBlockType4

Derivation Path: 36.331 clause 6.3.1				
Information Element	Value/remark	Comment	Condition	
SystemInformationBlockType4 ::= SEQUENCE {				
intraFreqNeighCellList SEQUENCE (SIZE (1maxCellIntra)) OF SEQUENCE {}	Not present	Not required unless Qoffset configuration is tested. When Qoffset configuration is tested, see table 6.3.1.1-1.		
intraFreqBlackCellList SEQUENCE (SIZE (1maxCellBlack)) OF SEQUENCE {}	Not present	Not required unless Blacklisted cell list configuration is tested. When Blacklisted cell list configuration is tested, see table 6.3.1.1-1.		
csg-PhysCellIdRange SEQUENCE {}	Not present		NonCSG	
csg-PhysCellIdRange SEQUENCE {			CSG	
start	Physical Cell ID of the cell on which this SIB is transmitted			
range }	Not present	The UE shall apply value 1 in case the field is absent, in which case only the physical cell identity value indicated by start applies.		
}				

Condition	Explanation	
NonCSG	SIB4 transmitted on a non-CSG cell	
CSG	SIB4 transmitted on a CSG cell	

SystemInformationBlockType5

The IE *SystemInformationBlockType5* contains information relevant only for inter-frequency cell re-selection i.e. information about other E-UTRA frequencies and inter-frequency neighbouring cells relevant for cell re-selection. The IE includes cell re-selection parameters common for a frequency as well as cell specific re-selection parameters.

Table 4.4.3.3-4: SystemInformationBlockType5

Derivation Path: 36.331 clause 6.3.1			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType5 ::= SEQUENCE {			
interFreqCarrierFreqList SEQUENCE (SIZE (1maxFreq)) OF SEQUENCE {	The same number of entries as the configured inter-freq carriers. For Signalling test cases except NAS, see table 6.3.1.2-1. For NAS test cases when cells are on same PLMN, see table 6.3.2.3.2-1.	n denotes the index of the entry	
dl-CarrierFreq[<i>n</i>]	Downlink EARFCN under test For Signalling test cases		
	except NAS, see table 6.3.1.2-1. For NAS test cases when cells are on same PLMN, see table 6.3.2.3.2-1.		
q-RxLevMin[<i>n</i>]	-65 (-130 dBm)	For RF/RRM test cases	
	- 100 ubiii	For signalling test cases	
p-Max[n]	Not present		
t-ReselectionEUTRA[n]	0	Typical value in real network	
t-ReselectionEUTRA-SF[n]	Not present	Not required unless speed-dependent cell reselection is tested.	
threshX-High[<i>n</i>]	2 (4 dB)	This value should be higher than threshServingLow of the serving cell to avoid ping-pong with lower priority cells.	
threshX-Low[n]	1 (2 dB)		
allowedMeasBandwidth[<i>n</i>]	See subclause 4.4.3.4	Channel- bandwidth- dependent parameter	
presenceAntennaPort1[n]	FALSE		
	TRUE	At least two cell- specific antenna ports are used in all neighbouring cells.	All neighCells with port1
cellReselectionPriority[n]	4	The same priority as the one used for serving cell in SIB 3.	
neighCellConfig[n]	'01'B (No MBSFN subframes are present in all neighbour cells)	MBSFN doesn't apply by default.	
q-OffsetFreq[n]	dB0	Q _{offset} doesn't apply by default.	
interFreqNeighCellList[n] SEQUENCE (SIZE (1maxCellInter)) OF SEQUENCE {}	Not present	Not required unless Qoffset configuration is tested.	
interFreqBlackCellList[n] SEQUENCE (SIZE (1maxCellBlack)) OF SEQUENCE {}	Not present	Not required unless Blacklisted cell list configuration is tested.	

q-QualMin-r9[<i>n</i>]	Not present	
	-20 (-20dB)	QBASED
threshX-Q-r9[n] SEQUENCE {}	Not present	
threshX-Q-r9[n] SEQUENCE {		QBASED
threshX-HighQ-r9	5 (5dB)	
threshX-LowQ-r9	5 (5dB)	
}		
}		
}		

Condition	Explanation
QBASED	See the definition below table 4.4.3.2-3.
All neighCells with	Used for all neighbouring cells with at least two cell-specific antenna ports
port1	

The IE *SystemInformationBlockType6* contains information relevant only for inter-RAT cell re-selection i.e. information about UTRA frequencies and UTRA neighbouring cells relevant for cell re-selection. The IE includes cell re-selection parameters common for a frequency.

Table 4.4.3.3-5: SystemInformationBlockType6

Derivation Path: 36.331 clause 6.3.1			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType6 ::= SEQUENCE {			
carrierFreqListUTRA-FDD SEQUENCE (SIZE	Not present		UTRA-TDD
(1maxUTRA-FDD-Carrier)) OF SEQUENCE {}	·		
carrierFreqListUTRA-FDD SEQUENCE (SIZE	The same number of	n denotes the	UTRA-FDD
(1maxUTRA-FDD-Carrier)) OF SEQUENCE {	entries as the configured	index of the entry	
	UTRA FDD carriers		
	For Signalling test cases,		
	see table 6.3.1.3-1		
carrierFreq[n]	Downlink UARFCN under		
	test		
	For Signalling test cases,		
and December 1 and December 1 and	see table 6.3.1.3-1		
cellReselectionPriority[n]	3		
threshX-High[n]	2 (4 dB) 1 (2 dB)		
threshX-Low[n]	. ,	The same value	
q-RxLevMin[n]	-40 (-79 dBm)	as defined in TS	
		34.108 [5], table	
		6.1.1.	
p-MaxUTRA[n]	21 (21 dBm)	The same value	
F	(as defined in TS	
		34.108 [5], table	
		6.1.1.	
q-QualMin[<i>n</i>]	-24 (-24 dB)	The same value	
		as defined in TS	
		34.108 [5], table	
		6.1.1.	
threshX-Q-r9[n] SEQUENCE {}	Not present		
threshX-Q-r9[n] SEQUENCE {			QBASED
4 17/15/10 0	0 (0 ID)		
threshX-HighQ-r9 threshX-LowQ-r9	9 (9dB)		
threshx-LowQ-r9	9 (9dB)		
}			
carrierFreqListUTRA-TDD SEQUENCE (SIZE	Not present		UTRA-FDD
(1maxUTRA-TDD-Carrier)) OF SEQUENCE {}	Not present		UTKA-FDD
carrierFreqListUTRA-TDD SEQUENCE (SIZE	The same number of	n denotes the	UTRA-TDD
(1maxUTRA-TDD-Carrier)) OF SEQUENCE {	entries as the configured	index of the entry	O TIVA TOD
(Timiaxe Trave 122 Gamery) or GEQUERTOE (UTRA TDD carriers	maox or the only	
	For Signalling test cases,		
	see table 6.3.1.3-1		
carrierFreq[n]	Downlink UARFCN under		
	test		
	For Signalling test cases,		
	see table 6.3.1.3-1		
cellReselectionPriority[n]	3		
threshX-High[n]	2 (4 dB)		
threshX-Low[n]	1 (2 dB)	The come	
q-RxLevMin[n]	-41 (-81 dBm)	The same value	
		as defined in TS 34.108 [5], table	
		6.1.6a	
p-MaxUTRA[<i>n</i>]	21 (21 dBm)	The same value	
γ παλοτιντήη	21 (21 (21))	as defined in TS	
		34.108 [5], table	
		6.1.6a	
}			
t-ReselectionUTRA	0	Typical value in	
		real network	
t-ReselectionUTRA-SF	Not present		
}			

Condition	on	Explanation
-----------	----	-------------

UTRA-FDD	UTRA FDD cell environment
UTRA-TDD	UTRA TDD cell environment
QBASED	See the definition below table 4.4.3.2-3.

Editor's note: Need for condition 'UTRA-FDD-TDD' where both UTRA FDD cell and UTRA TDD cell exist simultaneously is FFS.

- SystemInformationBlockType7

The IE *SystemInformationBlockType7* contains information relevant only for inter-RAT cell re-selection i.e. information about GERAN frequencies relevant for cell re-selection. The IE includes cell re-selection parameters for each frequency.

Table 4.4.3.3-6: SystemInformationBlockType7

Derivation Path: 36.331 clause 6.3.1			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType7 ::= SEQUENCE {			
t-ReselectionGERAN	0		
t-ReselectionGERAN-SF	Not present		
carrierFreqsInfoListSEQUENCE (SIZE	The same number of	n denotes the	
(1maxGNFG)) OF SEQUENCE (entries as the configured	index of the entry	
, , , , , , , , , , , , , , , , , , , ,	GERAN carriers	ĺ	
	For RRM test cases, see		
	table 7.2.2.1-1		
	For Signalling test cases,		
	see table 6.3.1.4-1		
carrierFreqs [n] SEQUENCE {			
startingARFCN[n]	Set the corresponding		
	starting ARFCN of the		
	GERAN cells under test.		
	For RRM test cases, see		
	table 7.2.2.1-1		
	For Signalling test cases,		
	see table 6.3.1.4-1		
bandIndicator[n]	Set according to the		
	band used for GERAN cells under test		
following A DECNICIAL CHOICE (cells under test		
followingARFCNs[n] CHOICE { explicitListOfARFCNs[n]	Cat the carrie on an direct		
explicitListOfARFCNs[n]	Set the corresponding ARFCN of GERAN cells		
	under test		
	For RRM test cases, see		
	table 7.2.2.1-1		
	For Signalling test cases,		
	see table 6.3.1.4-1		
}	222 13010 0.011111		
}			
commonInfo[n] SEQUENCE {			
cellReselectionPriority[n]	2		
ncc-Permitted[n]	'01000000'B	NCC=1 permitted	
q-RxLevMin[n]	2		
p-MaxGERAN[n]	0		
threshX-High[n]	2		
threshX-Low[n]	2		
}			
}			
}			

The IE *SystemInformationBlockType8* contains information relevant only for inter-RAT cell re-selection i.e. information about CDMA2000 frequencies and CDMA2000 neighbouring cells relevant for cell re-selection. The IE includes cell re-selection parameters common for a frequency as well as cell specific re-selection parameters.

Table 4.4.3.3-7: SystemInformationBlockType8

Derivation Path: 36.331 clause 6.3.1			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType8 ::= SEQUENCE {			
systemTimeInfo SEQUENCE {			
cdma-EUTRA-Synchronisation	TRUE		
cdma-SystemTime CHOICE {			
synchronousSystemTime	A valid value as per TS 36.331 and calculated by		
	the SS		
}			
}			
searchWindowSize	5		
parametersHRPD SEQUENCE {}	Not present		1XRTT
parametersHRPD SEQUENCE {			HRPD
preRegistrationInfoHRPD SEQUENCE {			
preRegistrationAllowed	FALSE		
preRegistrationZoneId	Not present		
secondaryPreRegistrationZoneIdList	Not present		
}			
cellReselectionParametersHRPD SEQUENCE {			
bandClassList SEQUENCE (SIZE (1maxCDMA	1 entry		
-BandClass)) OF SEQUENCE {			
bandClass	Operating band class under test.	ENUMERATED {bc0, bc1, bc2, bc3, bc4, bc5, bc6, bc7, bc8, bc9, bc10, bc11,	
		bc12, bc13, bc14, bc15, bc16, bc17, spare14, spare13, spare12, spare11, spare10, spare9, spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1,	
		}	
cellReselectionPriority	1	,	
threshX-High	30(-30)	INTEGER (063)	
threshX-Low	32(-32)	INTEGER (063)	
}		, ,	
neighCellList SEQUENCE (SIZE (116)) OF SEQUENCE {	1 entry		
bandClass	Operating band class under test	ENUMERATED {bc0, bc1, bc2, bc3, bc4, bc5, bc6, bc7, bc8, bc9, bc10, bc11, bc12, bc13, bc14, bc15, bc16, bc17, spare14, spare13, spare12, spare11, spare6, spare8, spare5, spare4, spare1,}	
neighCellsPerFreqList SEQUENCE (SIZE (116)) OF SEQUENCE {	The same number of entries as the configured CDMA2000 HRPD frequencies For Signalling test cases, see table 6.3.1.5-1	n denotes the index of the entry	

arfcn[n]	ARFCN of the CDMA2000 HRPD frequency For Signalling test cases, see table 6.3.1.5-1	INTEGER (02047)	
physCellIdList[n] SEQUENCE (SIZE (116)) OF {INTEGER (0maxPNOffset) }	Physical Cell ID List of the CDMA2000 HRPD frequency For Signalling test cases, see table 6.3.1.5-1	INTEGER (0maxPNOffset)	
}			
t-ReselectionCDMA2000	0	INTEGER (07)	
t-ReselectionCDMA2000-SF	Not Present	,,	
}			
}	NI (LIDDD
parameters1XRTT SEQUENCE {} parameters1XRTT SEQUENCE {	Not present		HRPD 1XRTT
csfb-RegistrationParam1XRTT SEQUENCE {			IANTI
longCodeState1XRTT	A valid value, calculated and updated by the SS	BIT STRING (SIZE (42)) OPTIONAL	
cellReselectionParameters1XRTT SEQUENCE { bandClassList SEQUENCE (SIZE (1maxCDMA -BandClass)) OF SEQUENCE {	1 entry		
bandClass	Operating band class under test	ENUMERATED {bc0, bc1, bc2, bc3, bc4, bc5, bc6, bc7, bc8, bc9, bc10, bc11, bc12, bc13, bc14, bc15, bc16, bc17, spare14, spare13, spare12, spare9, spare8, spare7, spare6, spare5, spare4, spare1,}	
cellReselectionPriority	0		
threshX-High	30(-30)	INTEGER (063)	
threshX-Low	32(-32)	INTEGER (063)	
neighCellList SEQUENCE (SIZE (116)) OF SEQUENCE {	1 entry		
bandClass	Operating band class under test	ENUMERATED {bc0, bc1, bc2, bc3, bc4, bc5, bc6, bc7, bc8, bc9, bc10, bc11, bc12, bc13, bc14, bc15, bc16, bc17, spare14, spare13, spare12, spare11, spare6, spare8, spare7, spare4, spare1,}	
neighCellsPerFreqList SEQUENCE (SIZE (116)) OF SEQUENCE {	The same number of entries as the configured CDMA2000 1xRTT frequencies For Signalling test cases, see table 6.3.1.6-1	n denotes the index of the entry	

arfcn[n]	ARFCN of the CDMA2000 1xRTT frequency For Signalling test cases, see table 6.3.1.6-1	INTEGER (02047)
physCellIdList[n] SEQUENCE (SIZE (116)) OF {INTEGER (0maxPNOffset) }	Physical Cell ID List of the CDMA2000 1xRTT frequency For Signalling test cases, see table 6.3.1.6-1	INTEGER (0maxPNOffset)
}		
}		
t-ReselectionCDMA2000	0	INTEGER (07)
t-ReselectionCDMA2000-SF	Not Present	
}		
}		
}		

Condition	Explanation
HRPD	CDMA2000 HRPD cell environment
1XRTT	CDMA2000 1XRTT cell environment

Editor's note: Need for condition 'HRPD-1XRTT' where both CDMA2000 HRPD cell and CDMA2000 1xRTT cell exist simultaneously is FFS.

SystemInformationBlockType9

The IE SystemInformationBlockType9 contains a home eNB name (HNB Name).

Table 4.4.3.3-8: SystemInformationBlockType9

Derivation Path: 36.331 clause 6.3.1			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType9 ::= SEQUENCE {			
hnb-Name	"3gppTest"		
}			

SystemInformationBlockType10

The IE SystemInformationBlockType10 contains an ETWS primary notification.

Table 4.4.3.3-9: SystemInformationBlockType10

Derivation Path: 36.331 clause 6.3.1			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType10 ::= SEQUENCE {			
messageldentifier	'0001 0001 0000 0010'B	ETWS message identifier for earthquake and tsunami message [see TS 23.041]	
serialNumber	'0011 0000 0000 0000'B		
- Geographical Scope (2 bit)	Octet 1 bit 7 ~ 6	Cell wide;	
- Message Code (10 bit)	Octet 1 bit 5 ~ Octet 2 bit 4	'11 0000 0000'B	
- Emergency User Alert (1 bit)	Octet 1 bit 5	Activate emergency user alert;	
- Popup (1 bit)	Octet 1 bit 4	Activate popup;	
- Update Number (4 bit)	Octet 2 bit 3 ~ 0	For each update, incremented by one. [see TS 23.041]	
warningType	'0000 0101 1000 0000'B		
- Warning Type Value (7 bit)	Octet 1 bit 7 ~ 1	Earthquake and Tsunami;	
- Emergency User Alert (1 bit)	Octet 1 bit 0	Activate emergency user alert;	
- Popup (1 bit)	Octet 2 bit 7	Activate Popup. [see TS 23.041]	
- Padding (7 bit)	Octet 2 bit 6 ~ bit 0	'000 0000'B	
warningSecurityInfo	Not present		
}			

The IE SystemInformationBlockType11 contains an ETWS secondary notification.

Table 4.4.3.3-10: SystemInformationBlockType11 (1st Segment)

Derivation Path: 36.331 clause 6.3.1			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType11 ::= SEQUENCE {			
messageldentifier	'0001 0001 0000 0010'B	ETWS message identifier for earthquake and tsunami message [see TS 23.041]	
serialNumber	'0011 0000 0000 0000'B		
- Geographical Scope (2 bit)	Octet 1 bit 7 ~ 6	Cell wide;	
- Message Code (10 bit)	Octet 1 bit 5 ~ Octet 2 bit	'11 0000 0000'B	
- Emergency User Alert (1 bit)	Octet 1 bit 5	Activate emergency user alert;	
- Popup (1 bit)	Octet 1 bit 4	Activate popup;	
- Update Number (4 bit)	Octet 2 bit 3 ~ 0	For each update, incremented by one. [see TS 23.041]	
warningMessageSegmentType	notLastSegment		
warningMessageSegmentNumber	0		
warningMessageSegment	Octetstring of N	where N ≥ 1 and less than 1246. [see TS 23.041]	
dataCodingScheme	Bitstring (8) ID of the alphabet/coding and the applied language [see TS 23.041]		
1 7		1	1

Table 4.4.3.3-11: SystemInformationBlockType11 (2nd Segment)

Derivation Path: 36.331 clause 6.3.1			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType11 ::= SEQUENCE {			
messageldentifier	'0001 0001 0000 0010'B	ETWS message identifier for earthquake and tsunami message [see TS 23.041]	
serialNumber	'0011 0000 0000 0000'B		
- Geographical Scope (2 bit)	Octet 1 bit 7 ~ 6	Cell wide;	
- Message Code (10 bit)	Octet 1 bit 5 ~ Octet 2 bit 4	'11 0000 0000'B	
- Emergency User Alert (1 bit)	Octet 1 bit 5	Activate emergency user alert;	
- Popup (1 bit)	Octet 1 bit 4	Activate popup;	
- Update Number (4 bit)	Octet 2 bit 3 ~ 0	For each update, incremented by one. [see TS 23.041]	
warningMessageSegmentType	notLastSegment		
warningMessageSegmentNumber	1		
warningMessageSegment	Octetstring of N	where N ≥ 1 and less than 1246. [see TS 23.041]	
dataCodingScheme	Not present		
}			

Table 4.4.3.3-12: SystemInformationBlockType11 (3rd Segment)

Derivation Path: 36.331 clause 6.3.1			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType11 ::= SEQUENCE {			
messageldentifier	'0001 0001 0000 0010'B	ETWS message identifier for earthquake and tsunami message [see TS 23.041]	
serialNumber	'0011 0000 0000 0000'B		
- Geographical Scope (2 bit)	Octet 1 bit 7 ~ 6	Cell wide;	
- Message Code (10 bit)	Octet 1 bit 5 ~ Octet 2 bit 4	'11 0000 0000'B	
- Emergency User Alert (1 bit)	Octet 1 bit 5	Activate emergency user alert;	
- Popup (1 bit)	Octet 1 bit 4	Activate popup;	
- Update Number (4 bit)	Octet 2 bit 3 ~ 0	For each update, incremented by one. [see TS 23.041]	
warningMessageSegmentType	lastSegment		
warningMessageSegmentNumber	2		
warningMessageSegment	Octetstring of N	where N ≥ 1 and less than 1246. [see TS 23.041]	
dataCodingScheme	Not present		
}			

The IE SystemInformationBlockType12contains an CMAS notification.

Table 4.4.3.3-12a: SystemInformationBlockType12 (1st Segment)

Derivation Path: 36.331 clause 6.3.1			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType11 ::= SEQUENCE {			
messageldentifier-r9	'0001 0001 0001 0010'B	CMAS CBS Message Identifier for CMAS Presidential Level Alerts (see TS 23.041])	
serialNumber-r9	'0011 0000 0000 0000'B		
warningMessageSegmentType	notLastSegment		
warningMessageSegmentNumber	0		
warningMessageSegment	Octetstring of N	where N ≥ 1 and less than 1246. (see TS 23.041)	
dataCodingScheme	-Bitstring (8) ID of the alphabet/coding and the applied language [see TS 23.041]	Provided as PIXITs [see TS 36.523-3 [20] cl. 9]	
lateNonCriticalExtension }	Not present		

Table 4.4.3.3-12b: SystemInformationBlockType12 (2nd Segment)

Derivation Path: 36.331 clause 6.3.1			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType11 ::= SEQUENCE {			
messageIdentifier-r9	'0001 0001 0001 0010'B	CMAS CBS Message Identifier for CMAS Presidential Level Alerts (see TS 23.041)	
serialNumber-r9	'0011 0000 0000 0000'B		
warningMessageSegmentType	notLastSegment		
warningMessageSegmentNumber	1		
warningMessageSegment	Octetstring of N	where N ≥ 1 and less than 1246. (see TS 23.041)	
dataCodingScheme	Not present		
lateNonCriticalExtension	Not present		
}			

Table 4.4.3.3-12c: SystemInformationBlockType12 (3rd Segment)

Derivation Path: 36.331 clause 6.3.1			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType11 ::= SEQUENCE {			
messageldentifier-r9	'0001 0001 0001 0010'B	CMAS CBS Message Identifier for CMAS Presidential Level Alerts (see TS 23.041)	
serialNumber-r9	'0011 0000 0000 0000'B		
warningMessageSegmentType	lastSegment		
warningMessageSegmentNumber	2		
warningMessageSegment	Octetstring of N	where N ≥ 1 and less than 1246. (see TS 23.041)	
dataCodingScheme	Not present		
lateNonCriticalExtension }	Not present		

The IE *SystemInformationBlockType13* contains the information required to acquire the MBMS control information associated with one or more MBSFN areas.

Table 4.4.3.3-13: SystemInformationBlockType13

Derivation Path: 36.331 clause 6.3.1			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType13 ::= SEQUENCE {			
mbsfn-AreaInfoList-r9 SEQUENCE			
(SIZE(1maxMBSFN-Area)) OF SEQUENCE {			
mbsfn-Areald-r9	0		
non-MBSFNregionLength	2		
notificationIndicator-r9	0		
mcch-Config-r9 SEQUENCE {			
mcch-RepetitionPeriod-r9	rf32		
mcch-Offset-r9	1		FDD
	0		TDD
mcch-ModificationPeriod-r9	rf512		
sf-AllocInfo-r9	'100000'B		FDD
	'000010'B		TDD
signallingMCS-r9	n2		
}			
}			
notificationConfig-r9 SEQUENCE {			
notificationRepetitionCoeff-r9	n4		
notificationOffset-r9	1		FDD
	0		TDD
notificationSF-Index-r9	1	Subframe #1	FDD
	5	Subframe #9	TDD
}			
}			

Condition	Explanation
FDD	FDD cell environment
TDD	TDD cell environment

SystemInformationBlockType14

The IE SystemInformationBlockType14 contains the EAB parameters.

Table 4.4.3.3-13A: SystemInformationBlockType14

Derivation Path: 36.331 clause 6.3.1			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType14-r11 ::= SEQUENCE			
{			
eab-Param-r11 CHOICE {			
EAB-Config-r11 ::= SEQUENCE {			
eab-Category-r11	а	EAB applies to all UEs in the PLMN ENUMERATED {a, b, c}	
eab-BarringBitmap-r11	'1111111111'B	All UE classes 0-9 BIT STRING (SIZE (10))	
}			
}			<u> </u>
lateNonCriticalExtension	Not Present		
}			

The IE *SystemInformationBlockType15* contains the MBMS Service Area Identities (SAI) of the current and/ or neighbouring carrier frequencies.

Table 4.4.3.3-14: SystemInformationBlockType15

Derivation Path: 36.331 clause 6.3.1			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType15 ::= SEQUENCE {			
mbms-SAI-IntraFreq-r11[1] SEQUENCE (SIZE (1maxSAI-MBMS-r11)) OF { INTEGER (065535) }	1	1 entry INTEGER (065535)	
mbms-SAI-InterFreqList-r11	Not present		MBMS_intra Freq
mbms-SAI-InterFreqList-r11[n] SEQUENCE (SIZE (1maxFreq)) OF SEQUENCE {	The same number of entries as the configured inter-freq carriers providing the MBMS service in the test case (including additional bands, if any)	n denotes the index of the entry	MBMS_inter Freq,
dl-CarrierFreq-r11	Downlink EARFCN under test, see table 6.3.1.2-1.		
mbms-SAI-List-r11[<i>n</i>] SEQUENCE (SIZE (1maxSAI-MBMS-r11)) OF { INTEGER (065535) }	The same number of entries as the configured MBMS SAIs providing the MBMS service in the test case for the specific frequency	n denotes the index of the entry INTEGER (065535)	
lateNonCriticalExtension	Not present		MBMS_intra Freq, MBMS_inter Freq,

Condition	Explanation
MBMS_intraFreq	SIB15 transmitted for a MBMS intra-band cell environment (MBMS service only provided
	for intra-frequency cells).
MBMS_interFreq	SIB15 transmitted for a MBMS inter-frequency cell environment (MBMS service provided
	on multiple frequencies within a band).

4.4.3.4 Channel-bandwidth-dependent parameters in system information blocks

The default values of parameters in system information blocks which depend on the channel bandwidth are defined in table 4.4.3.4-1.

Table 4.4.3.4-1: Channel-bandwidth-dependent parameters

Information			Channel I	pandwidth			Comment
Element	1.4 MHz	3 MHz	5 MHz	10 MHz	15 MHz	20MHz	
SIB3	64	64	32	32	32	32	
periodicity							
SIB4	128	128	64	64	64	64	
periodicity							
SIB5	128	128	64	64	64	64	
periodicity							
SIB6	128	128	64	64	64	64	
periodicity							
SIB7	128	128	64	64	64	64	
periodicity							
SIB8	128	128	64	64	64	64	
periodicity							
measurement	mbw6	mbw15	mbw25	mbw50	mbw75	mbw100	
Bandwidth in							
SIB5							
SIB9	128	128	64	64	64	64	
periodicity							
SIB10	64	64	32	32	32	32	
periodicity							
SIB11	64	64	32	32	32	32	
periodicity							
SIB12	64	64	32	32	32	32	
periodicity							
SIB13	64	64	32	32	32	32	
periodicity							
SIB15	64	64	32	32	32	32	
periodicity							

4.4.4 Common parameters for simulated UTRA cells

The parameters specified in this subclause apply to all simulated UTRA cells unless otherwise specified.

Default UTRA parameters for simulated cells are specified in table 4.4.4-1 and table 4.4.4-2.

Other parameters are specified in TS 34.108 [5].

Table 4.4.4-1: Default parameters for simulated UTRA cells

cell ID	Primary scrambling code for FDD	Cell parameters ID for TDD
Cell 5	100	0
Cell 7	150	4
Cell 8	200	8
Cell 9	250	12

Table 4.4.4-2: Default NAS parameters for simulated UTRA cells

PLMN Location Area Identification					g Area ication	TMSI	P-TMSI signature
MCC	MNC	LA#	LAC	RA#	RAC		

Cell 5	(Note 1)	LAI-1	1	RAI-1	1	Arbitrarily selected	Arbitrarily selected
Cell 7	(Note 1)	LAI-1	1	RAI-1	1	according to	according to
Cell 8	(Note 1)	LAI-1	1	RAI-1	1	TS 23.003	TS 23.003
Cell 9	(Note 1)	LAI-1	1	RAI-1	1	subclause 2.4 [2].	subclause 2.7 [2].
Note 1:	Set to the same Mob	ile Country	Code and	Mobile Net	work Code	stored in EF _{IMSI} on the	e test USIM card

4.4.4.1 Common contents of system information blocks for UTRA cells

- System Information Block type 19

The system information block type 19 contains Inter-RAT frequency and priority information to be used in the cell.

Table 4.4.4.1-1: System Information Block type 19

Derivation Path: 25.331 clause 11.3			
Information Element	Value/remark	Comment	Condition
SysInfoType19 ::= SEQUENCE {			
utra-PriorityInfoList SEQUENCE {			
utra-ServingCell SEQUENCE {			
priority	3		
s-PrioritySearch1	0 (0dB)		
s-PrioritySearch2	Not present	default value is 0	
threshServingLow	0 (0dB)		
}			
utran-FDD-FrequencyList SEQUENCE	Not present		
(SIZE(1maxNumFDDFreqs)) OF SEQUENCE {}			
utran-TDD-FrequencyList SEQUENCE	Not present		
(SIZE(1maxNumTDDFreqs)) OF SEQUENCE {}			
gsm-PriorityInfoList SEQUENCE (SIZE	Not present		
(1maxNumGSMCellGroup)) OF SEQUENCE {}			
eutra-FrequencyAndPriorityInfoList SEQUENCE	The same number of	n denotes the	
(SIZE (1maxNumEUTRAFreqs)) OF SEQUENCE	entries as the configured	index of the entry	
	eutra carriers		
	For Signalling test cases,		
	see table 6.3.1.7-1		
earfcn[n]	Downlink EARFCN under		
	test		
	For Signalling test cases,		
	see table 6.3.1.7-1		
measurementBandwidth[n]	Set according to EUTRA		
	band ChBw in Table 5.6-		
	1 of TS36.104.		
priority[n]	4		
qRxLevMinEUTRA[<i>n</i>]	-53 (-106 dBm)	For signalling test	
	70 (440 ID)	cases	
	-70 (-140 dBm)	For RF/RRM test	
	0 (4 ID)	cases	
threshXhigh[n]	2 (4 dB)		
threshXlow[n]	1 (2 dB)		
eutra-blackListedCellList[n]	Not present		
eutraDetection[n]	TRUE		
}			
v920NonCriticalExtensions SEQUENCE {}	Not present		ODACED
v920NonCriticalExtensions SEQUENCE {	<u> </u>		QBASED
sysInfoType19-v920ext SEQUENCE {	<u> </u>		
utra-PriorityInfoList-v920ext SEQUENCE {	7 (7-10)	-1-f1t1	
threshServingLow2	7 (7dB)	default value is 0	
}			
eutra-FrequencyAndPriorityInfoList-v920ext			
(SIZE (1maxNumEUTRAFreqs)) OF SEQUENCE {	00 (00 ID)		
qQualMinEUTRA[n]	-20 (-20dB)		
threshXhigh2[n]	5 (5dB)		
threshXlow2[n]	5 (5dB)		
}	<u> </u>		
) man Oritical Extensions OF OUT NOT ()	Not propert		
nonCriticalExtensions SEQUENCE {}	Not present		
,	<u> </u>		
}			

Condition	Explanation
QBASED	See the definition below table 4.4.3.2-3.

4.4.4.2 UTRA SIB scheduling for inter EUTRA - UTRA test

Table 4.4.4.2-1: UTRA SIB schedule

Block	MIB	SB1	SIB1	SIB2	SIB3	SIB4	SIB5/SIB5bis	SIB6	SIB7	SIB11	SIB12	SIB18	SIB19
Type													
SIB_REP	8	16	64	64	64	64	64	64	16	64	64	64	64
SEG_	1	1	1	1	1	1	4	4	1	3	1	1	2
COUNT													

Table 4.4.4.2-2: UTRA SIB-repeat period

Frame No / SIB_POS	S 0 2		4	6	8	10	12	14
Block Type	MIB	SB1	SIB7	SIB6	MIB	SIB6	SIB6	SIB6
Frame No / SIB_POS	16	18	20	22	24	26	28	30
Block Type	MIB	SB1	SIB7/SIB3	SIB1/SIB2	MIB	SIB12	SIB19	SIB19
Frame No / SIB_POS	32	34	36	38	40	42	44	46
Block Type	MIB	SB1	SIB7/SIB18	SIB5/	MIB	SIB5/	SIB5/	SIB5/
				SIB5bis		SIB5bis	SIB5bis	SIB5bis
Frame No / SIB_POS	48	50	52	54	56	58	60	62
Block Type	MIB	SB1	SIB7/SIB4	-	MIB	SIB11	SIB11	SIB11

4.4.4.3 UTRA SIB scheduling for inter EUTRA – UTRA - GERAN test

Table 4.4.4.3-1: UTRA SIB schedule

Block Type	MIB	SB1	SIB1	SIB2	SIB3	SIB4	SIB5/ SIB5bis	SIB7	SIB11	SIB16	SIB18	SIB19
SIB Rep	8	16	128	128	64	64	128	32	128	128	128	128
Max. No of seq.	1	2	1	1	1	1	4	1	3	8	1	3

Table 4.4.4.3-2: UTRA SIB-repeat period

Frame No / SIB_POS	0	2	4	6	8	10	12	14
Block Type	MIB	SB1	SB1	-	MIB	SIB1	SIB18	SIB2
Frame No / SIB_POS	16	18	20	22	24	26	28	30
Block Type	MIB	SB1	SB1	SIB7	MIB	SIB3	-	SIB4
Frame No / SIB_POS	32	34	36	38	40	42	44	46
Block Type	MIB	SB1	SB1	SIB5/ SIB5bis	MIB	SIB5/ SIB5bis	SIB5/ SIB5bis	SIB5/ SIB5bis
·								
Frame No / SIB_POS	48	50	52	54	56	58	60	62
Block Type	MIB	SB1	SB1	SIB7	MIB	SIB11	SIB11	SIB11
Frame No / SIB_POS	64	66	68	70	72	74	76	78
Block Type	MIB	SB1	SB1	SIB16	MIB	SIB16	SIB16	SIB16
Frame No / SIB_POS	80	82	84	86	88	90	92	94
Block Type	MIB	SB1	SB1	SIB7	MIB	SIB3	SIB19	SIB4
Frame No / SIB_POS	96	98	100	102	104	106	108	110
Block Type	MIB	SB1	SB1	SIB16	MIB	SIB16	SIB16	SIB16
Frame No / SIB_POS	112	114	116	118	120	122	124	126
Block Type	MIB	SB1	SB1	SIB7	MIB	SIB19	SIB19	-

4.4.5 Common parameters for simulated GERAN cells

The parameters specified in this subclause apply to all simulated GERAN cells unless otherwise specified.

See TS 51.010 [25].

The contents of SYSTEM INFORMATION TYPE 2 Quarter message specified below are identical for all GERAN cells.

Table 4.4.5-1: System Information 2 Quater

Derivation Path: 44.018 Table 10.5.2.33b.1 Information Element	Value/remark	Comment	Condit ion
System information 2Quater			
L2 pseudo length	1		
PROTOCOL DISCRIMINATOR	'0110'B	RR management Protocol	
SKIP INDICATOR	'0000'B		
MESSAGE TYPE	'00000111'B		
SI 2QUATER REST OCTETS			
BA Indicator	0		
3G BA Indicator	0		
MP Change Mark	0		
SI2Q Index	0		
SI2Q Count	0	N (D	
Measurement_Parameters Description	0	Not Present	
GPRS_Real Time Difference Description	0	Not Present	
GPRS_BSIC Description	0	Not Present	
GPRS_REPORT PRIORITY Description	0	Not Present	
GPRS_MEASUREMENT_Parameters Description NC Measurement Parameters	0	Not Present	
	0	Not Present	
extension length 3G Neighbour Cell Description	0	Not Present Not Present	-
3G Measurement Parameters Description	0	Not Present	
GPRS_3G_MEASUREMENT Parameters	0	Not Present	
Description	0	Not i resent	
Additions in release 5	Н		
3G Additional Measurement Parameters	0	Not Present	
Description		Trott Toodin	
3G ADDITIONAL MEASUREMENT Parameters Description 2	0	Not Present	
Additions in release 6	Н		
3G_CCN_ACTIVE	0		
Additions in release 7	Н		
700_REPORTING_OFFSET	0	Not Present	
810_REPORTING_OFFSET	0	Not Present	
Additions in release 8	Н		
Priority and E-UTRAN Parameters Description	1	Present	
Serving Cell Priority Parameters Description	1	Present Note: Values as defined from TS 45.008, section 10.4 Table 3	
GERAN_PRIORITY	2		
THRESH_Priority_Search	15 (always)		
THRESH_GSM_low	0		
H_PRIO	0		
T_Reselection	0		
3G Priority Parameters Description	0	Not Present	
E-UTRAN Parameters Description	1	Present	
E-UTRAN_CCN_ACTIVE	0	CCN not supported	
E-UTRAN_Start	1		ļ
E-UTRAN_Stop	1		
E-UTRAN Measurement Parameters Description	0	Not Present	
GPRS E-UTRAN Measurement Parameters	0	Not Present	
Description		 	
Repeated E-UTRAN Neighbour Cells	1	Present	
EARFCN	Same as cell 1	This field specifies the E-UTRA Absolute Radio Frequency Channel Number as defined in 3GPP TS 36.104.	

Measurement Bandwidth	Set according to EUTRA	
	band under test	
E-UTRAN_PRIORITY	'100'B	Same as cell 1 as
		defined in
		3GPP TS 36.104.
THRESH_E-UTRAN_high	'00010'B	Actual value =4 dB
THRESH_E-UTRAN_low	'00010'B	Actual value =4 dB
E-UTRAN_QRXLEVMIN	17 (-106 dBm)	For signalling test
		cases
	0 (-140 dBm)	For RF/RRM test
		cases
} ** 0		End of Repeated E-
		UTRAN Neighbour
		cells structure
		Note: When this
		message is used in
		Tics where more than
		one E-UTRA cells are
		active, this structure
		needs to be specified
		for each cell.
		EARFCN and
		EUTRAN_PRIORITY
		will then need to be
		configured to the
		corresponding EUTRAN cell
Repeated E-UTRAN Not Allowed Cells	0	Not Present
	0	
Repeated E-UTRAN PCID to TA mapping	0	Not Present
3G CSG Description		
E-UTRAN CSG Description	0 L	
Additions in release 9		
spare padding	spare padding	

4.4.6 Common parameters for simulated CDMA2000 cells

The parameters specified in this subclause apply to all simulated HRPD or 1xRTT cells unless otherwise specified.

See C.S0038-B [36] for HRPD cells and C.S0043-A [37] for 1xRTT cells.

4.4.7 Default parameters specific for simulated cells

Default parameters specific for simulated cells are specified in this subclause.

4.4.7.1 Common contents of HRPD Overhead messages

- QuickConfig

The QuickConfig message is used to indicate a change in the overhead messages' contents and to provide frequently changing information.

Table 4.4.7.1-1: QuickConfig

Information Element	Value/remark	Comment	Condition
MessageID	0x0	0-255;	
ColorCode	See table 4.4.2-3	0 – 255	
SectorID24	Least significant	24 bits	
	24 bits of Sector		
	ID given in table		
	4.4.2-3		
SectorSignature	A valid value and	16 bits	
•	same as used for		
	SectorParameters		
AccessSignature	A valid value and	16 bits	
3	same as used for		
	AccessParameter		
	S		
Redirect	0X0	0-1	
RPCCount63To0	A valid value	0-63	
	corresponding to		
	the value of		
	px_MACIndex		
ForwardTrafficValid63To0	A valid value	0-1; RPCCount63To0	
	corresponding to	occurrences	
	the value of		
	px_MACIndex		
RPCCount127To64Included	A valid value	0 or 1 bits	
	corresponding to		
	the value of		
	px_MACIndex		
RPCCount127To64	A valid value	0 or 6 bits	
	corresponding to		
	the value of		
	px_MACIndex		
ForwardTrafficValid127To64	A valid value	0 or 1 bits;RPCCount127To64	
	corresponding to	occurrences	
	the value of		
	px_MACIndex		
RPCCount130To383Included	Not Present or a	0 or 1 bits	
	valid value		
	corresponding to		
	the value of		
	px_MACIndex		
RPCCount130To383	Not Present or a	0 or 8 bits	
	valid value		
	corresponding to		
	the value of		
	px_MACIndex		
ForwardTrafficValid130To383	Not Present or a	0 or 1 bits	
	valid value		
	corresponding to		
	the value of		
	px_MACIndex		
Reserved	0X0	0 - 7 bits as needed all set to	
	i	zero	i

- SectorParameters

The SectorParameters message is used to convey sector specific information to the access terminals.

Table 4.4.7.1-2: SectorParameters

Derivation Path: C.S0024-B clause 7.11.6.2. Information Element	Value/remark	Comment	Condition
MessageID	0x01	0-255	
CountryCode	See table 4.4.2-3	0 – 999;Depends on test case	
SectorID	See table 4.4.2-3	128 bit value	
SubnetMask	0x40	8 bits	
SectorSignature	Any valid value	16 bits	
Latitude	Any valid value	22 bits	
Longitude	Any valid value	23 bits	
RouteUpdateRadiusOverhead	0x0	11 bits	
LeapSeconds	'A valid value, calculated and updated by the SS'	8 bits	
LocalTimeOffset	Any valid value	11 bits	
ReverseLinkSilenceDuration	0x1 or 0x0	2 bits	
ReverseLinkSilencePeriod	0x1 or 0x0	2 bits	
ChannelCount	0x1 or 0x0	5 bits	
Channel		24 bits; ChannelCount occurrences; Sub-clause 13.1 in 3GPP2 C.S0024-B v3.0	
SystemType	0x00	8 bits	
BandClass	Set according to PIXIT parameter	5 bits; Depends on test case	
ChannelNumber	Set according to PIXIT parameter	11 bits; Depends on BandClass	
NeighborCount	0x0	5 bits	No_NeighPN Inc
	16		NeighPNInc
NeighborPilotPN	Not Present		No_NeighPN Inc
	Pilots PN's of configured cells [FFS]		NeighPNInc
NeighborChannelIncluded	0x0	1 bit; NeighbourCount occurrences	NeighPNInc
	Not Present		No_NeighPN Inc
NeighborChannel	Not Present	0 or 24 bits; NeighbourCount occurrences	
NeighborSearchWindowSizeIncluded	0x0	1 bit	
NeighborSearchWindowSize	Not Present	0 or 4 bits; NeighbourCount occurrences	
NeighborSearchWindowOffsetIncluded	0x0	1 bit	
NeighborSearchWindowOffset	Not Present	0 or 3 bits; NeighbourCount occurrences	
ExtendedChannelIncluded	0x0 or Not Present	0 or 1 bits; The number of cdma2000 high rate packet data extended channels available to the access terminal on this sector; Note 1;	
ExtendedChannelCount	Not Present	0 or 5 bits	
ExtendedChannel	Not Present	24 bits; 0 or ExtendedChannelCount occurrences	
AccessHashingChannelMaskIncluded	0x0 or Not Present	0 or 1 bits; AccessHashingChannelMaskL ength occurrences of this field and AccessHashingChannelMask if set as AccessHashingChannelMask; Note 1;	

AccessHashingMaskLength	Not Present	0 or 4 bits;
		0<=AccessHashingChannelMa
		skLength<=(ChannelCount +
		ExtendedChannelCount),
AccessHashingChannelMaskSameAsPrevious	Not Present	1 bit;
		AccessHashingChannelMaskL
		ength occurrences of this field
		and
		AccessHashingChannelMask
		if set as
		AccessHashingChannelMask
AccessHashingChannelMask	Not Present	0 or
		AccessHashingMaskLength+1
RouteUpdateTriggerCodeIncluded	0x0 or Not	0 or 1 bits; Note 1;
	Present	
RouteUpdateTriggerCode	Not Present	0 or 12 bits
RouteUpdateTriggerMaxAge	Not Present	0 or 4 bits
PriorSessionGAUP	0x0 or Not	0 or 1 bits; Note 1;
	Present	
FPDCHSupportedInclude	0x0 or Not	0 or 1 bits; Note 1;
	Present	
FPDCHSupported	Not Present	0 or 1 bits
SecondaryColorCodeIncluded	0x0 or Not	0 or 1 bits; Note 1;
	Present	
SecondaryColorCodeCount	Not Present	0 or 3 bits
SecondaryColorCode	Not Present	8 bits
PilotGroupIDLoopIncluded	0x0 or Not	0 or 1 bits; Note 1;
	Present	
PilotGroupIDIncluded	Not Present	0 or 1 bits
PilotGroupID	Not Present	0 or 3 bits
IsSectorMultiCarrierCapable	0x0 or Not	0 or 1 bits; Note 1;
·	Present	
ReverseBandClass	Not Present	0 or 5 bits
ReverseChannelNumber	Not Present	0 or 11 bits
Reserved	0X0	0 - 7 bits as needed all set to
		zero

Note 1: As no Non reserved fields following this are included, it can be Not Present; If not present, AT assumes as 0x0.

Condition	Explanation	
No_NeighPNInc	No neighbour Pilot PN included	
NeighPNInc	Neighbor Pilot PN's included	

AccessParameters

The AccessParameters message is used to convey Access Channel information to the access terminals.

Table 4.4.7.1-3: AccessParameters

Information Element	Value/remark	Comment	Condition
MessageID	0x1	0-255	
Access Cycle Duration	16 slots or 64	16,12,64,128 slots	
	slots		
Access Signature	Any valid value	16 bits	
	-	Note1.	
OpenLoopAdjust	Set according to	8bits(-84 - 115 dB); Actual	
	PIXIT parameter	value is -1 times	
	for default open		
	loop adjust		
ProbelnitialAdjust	0x0(0 dB)	5 bits(-16 – 15 db)	
ProbeNumStep	0x5	4bits(1 – 15)	
PowerStep	0x8(4 dB)	4 bits(0 – 7.5 dB)	
PreambleLength	0x2	3bits(1 – 7)	
CapsuleLengthMax	0x2 or 0x4	4 bits	
APersistence	0x0 or 0x1	6 bits; 'NACMPAPersist = 4'	
		occurrences	
APersistence	0x0 or 0x1	6 bits	
APersistence	0x0 or 0x1	6 bits	
APersistence	0x0 or 0x1	6 bits	
Reserved	0X0	0 - 7 bits as needed all set to	
		zero	

Note 1: The value specified is the value to be used when the AccessParameters is being sent first time. At every change of content of AccessParameters message it is incremented by 1.

- Sync

The access network broadcasts the Sync message to convey basic network and timing information

Table 4.4.7.1-4: Sync

Information Element	Value/remark	Comment	Condition
MessageID	0x0	0-255	
MaximumRevision	0x1	8 bits ; Clause 1.15 of 3GPP2 C.S0024-B v3.0	
MinimumRevision	0x1	8 bits; Clause 1.15 of 3GPP2 C.S0024-B v3.0	
Pilot PN Offset	See table 4.4.2-3	0 – 511	
CDMA System Time	A valid value, calculated and updated by the SS	37 bits	

Editor's Note: This section is reserved for cell specific default parameters.

4.4.7.2 Common contents of 1XRTT Overhead messages

4.4.7.2.1 Configuration sequence number

In general, a base station maintains a configuration sequence number CONFIG_SEQ for configuration messages transmitted on the Paging channel and increments by 1 modulo 64 whenever any of the following messages being transmitted are modified:

System Parameters Message

Neighbor List Message (Band Class 0 only)

CDMA Channel List Message

Extended System Parameters Message

Extended Neighbor List Message (band classes other than Band Class 0).

For simplicity resaons the System Simulator may use any value for this configuration sequence number CONFIG_SEQ.

4.4.7.2.2 Over Head messages

CDMA Channel List Message

Table 4.4.7.2.2-1: CDMA Channel List Message

Information Element	Value/remark	Comment	Condition
PILOT_PN	See table 4.4.2-4	9 bits;	
CONFIG_MSG_SEQ	Set to ' CONFIG_SEQ' of base station as per clause 4.4.7.2.1	6 bits;	
CDMA_FREQ	Set according to PIXIT parameter or as per clause 4.3.1.4	11 bits	

- System Parameters Message

Table 4.4.7.2.2-2: System Parameters Message

Derivation Path: C.S0005 clause 3.7.2.3.2.1 Information Element	Value/remark	Comment	Condition
PILOT_PN	See table 4.4.2-4	9 bits	Condition
CONFIG_MSG_SEQ	Set to '	6 bits	
CON IG_MOG_OLQ	CONFIG_SEQ' of	Oblis	
	base station as		
	per clause		
	4.4.7.2.1		
SID	See table 4.4.2-4	15 bits	
NID	See table 4.4.2-4	16 bits	
REG_ZONE	See table 4.4.2-4	12 bits	
TOTAL ZONES	1	3 bits	
ZONE_TIMER	0 or 1	3 bits; 1 or 2 minutes	
MULT_SIDS	0 or 1	1 bits; Mobile shall not or shall	
WOLT_OIDO	0 01 1	store SID_NID_List containing different SID's	
MULT_NIDS	0 or 1	1 bits; Mobile shall not or shall	
_		store SID_NID_List containing	
		different NID's	
BASE_ID	See table 4.4.2-4	16 bits	
BASE_CLASS	1	4 bits	BandClass1
			_4
	0		Not
			BandClass1
DACE CHAN	1	2 hita: Numban of Dening	_4
PAGE_CHAN	1	3 bits; Number of Paging	
MAY CLOT CYCLE INDEV	1 or 0	Channels 3 bits; Maximum Slot Cycle	
MAX_SLOT_CYCLE_INDEX	1 01 0		
HOME_REG	1	index 1 bits; Home registration	
HOIVIE_REG	1	enabled	
FOR_SID_REG	1	1 bits; SID roamer registration	
FOR_SID_REG	1		
FOR_NID_REG	1	enabled 1 bits; NID roamer registration	
FOR_NID_REG	1	enabled	
POWER_UP_REG	1	1 bits; power-up registration	
FOWER_OF_REG	1	enabled	
POWER_DOWN_REG	Set according to	1 bits; power-down registration	
TOWER_DOWN_REO	PIXIT parameter	enabled as per PIXIT	
PARAMETER_REG	0 or 1	1 bits; parameter change	
TATO WILLEN_NEO	0 01 1	registration disabled or	
		enabled	
REG_PRD	0	7 bits; registration period; No	
1.20_1.1.5	Ğ	timer Based Registration	
BASE_LAT	Any valid value	22 bits; Base Station Latitude	
BASE_LONG		23 bits; Base Station	
B/(GE_EGIVE	Any valid value	Longitude	
REG_DIST	0	11 bits;	
		Distance based registration	
		disabled	
SRCH_WIN_A	8	4 bits; Search Window size for	
	-	Active Set; 60 PN Chips	1
SRCH_WIN_N	8	4 bits; Search Window Size for	
		the neighbor set; 60 PN Chips	
SRCH_WIN_R	8	4 bits; Search window size for	
		the remaining set; 60 PN	1
		Chips	
NGHBR_MAX_AGE	0	4 bits; Minimum Neighbour set	
		age	1
PWR_REP_THRESH	0.4 5	5 bits; Power control reporting	
	0, 1 or 5	threshold	1
PWR_REP_FRAMES	0.47	4 bits; power control reporting	
	0, 4 or 7	frame count; 5 or 28 frames	1
PWR_THRESH_ENABLE		1 bits; threshold report mode	
	0	disabled	1
PWR_PERIOD_ENABLE		1 bits; periodic report mode	
	0	disabled	1

PWR_REP_DELAY	0 or 14	5 bits; 0 or 56 frames	
RESCAN	0	1 bit; re-initialize and re-	
	0	acquire the system	
T_ADD		6bits; Pilot detection threshold	
	28 (-14 dB Ec/lo)	(-14 dB Ec/lo)	
T_DROP	,	6 bits; Pilot drop threshold (-16	
_	32	dB Ec/lo)	
T_COMP		4; Active set versus candidate	
		set comparison threshold (2.5	
	5	dB)	
T_TDROP	3	4 bits; Drop timer value (4 sec)	
EXT_SYS_PARAMETER	4	1 bit; Extended System	
	1	Parameters message present	
EXT_NGHBR_LST	,	1 bit; Extended neighbor list	BandClass1
	1	not present	3_4
			Not
	0		BandClass1
			_3_4
GEN_NGHBR_LST	0	1 bit; General neighbor list not	
		sent	
GLOBAL_REDIRECT	0	1 bit; Global service redirection	
		message not transmitted	
PRI_NGHBR_LST	0	1 bit; Private neighbor list	
		message not transmitted	
USER_ZONE_ID	0	1 bit; User zone Identification	
		not transmitted	
EXT_GLOBAL_REDIRECT	0	1 bit; Extended global	
		redirection not transmitted	
EXT_CHAN_LST	0	1 bit; Extended channel list not	
		sent	

Condition	Explanation
BandClass1_4	If Band Class is 1 or 4
BandClass1 3 4	If Band Class is 1 or 3 or 4

Access Parameters Message

Table 4.4.7.2.2-3: Access Parameters message

Derivation Path: C.S0005 clause 3.7.2.3.2.2			
Information Element	Value/remark	Comment	Condition
PILOT_PN	See table 4.4.2-4	9 bits;	
ACC_MSG_SEQ		6 bits; Access Message	
		Sequence; 0 is used in initial	
		transmission and incremented	
	0,1,263	by 1 modulo 64 every time	
	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	Access Parameters message	
		is modified;	
		for simplicity reasons any	
ACC CHAN		value may be used	
ACC_CHAN	0	5 bits; Number of access channels -1	
NOM DWD			
NOM_PWR	0	4 bits; Nominal transmit power offset in dB	
INIT_PWR	0	5 bits; Initial power offset in dB	
PWR STEP			
	1 or 3	3 bits; Power increment	
NUM_STEP		4 bits; 5 access probes/	
MAY CAR OZ	Any valid value	sequence	
MAX_CAP_SZ	2 or 7	3 bits; Maximum Access	
		channel message capsule size	
DAM CZ	A	=2 or 7 +3 frames	
PAM_SZ	Any valid value	4 bits; Access Channel	
DCICT(0.0)	10	preamble length = 2+1 frames	
PSIST(0-9)	0	6 bits; Persistence value for	
D010T(40)		access overload classes 0-9	
PSIST(10)	0	3 bits; Persistence value for	
DOIOT(44)		access overload classes 10	
PSIST(11)	0	3 bits; Persistence value for	
		access overload classes 11	
DCICT(42)	0	(emergency)	
PSIST(12)	U	3 bits; Persistence value for	
DOIOT(42)	0	access overload classes 12 3 bits; Persistence value for	
PSIST(13)	U	1	
PSIST(14)	0	access overload classes 13 3 bits; Persistence value for	
F3131(14)	U	access overload classes 14	
PSIST(15)	0	3 bits; Persistence value for	
F3131(13)	U	access overload classes 15	
MSG_PSIST	0	3 bits; Persistence modifier for	
W3G_F3I31 	0	access channel attempts for	
		message transmissions	
REG_PSIST	0	3 bits; Persistence modifier for	
NEG_1 0101	O O	Access Channel attempts for	
		registrations	
PROBE_PN_RAN	4 or 0	4 bits; Time Randomization for	
	. 5. 5	Access Channel probes= 0 to	
		15 PN chips	
ACC_TMO	3, 4 or 5	4 bits; Acknowledgement	
	2, . 2. 2	timeout = (value +2) * 80 ms	
PROBE_BKOFF	1 or 0	4 bits; Access Channel probe	
- -		back off = no back off	
BKOFF	1 or 0	4 bits; Access channel probe	
		sequence backoff range =no	
		back off	
MAX_REQ_SEQ	Any valid value	4 bits; Max number of access	
	_	probe sequences for an	
		access channel request	
MAX_RSP_SEQ	Any valid value	4 bits; Max number of access	
_		probe sequences for an	
		access channel response	
AUTH	0	2 bits; No authentication data	
		in access channel messages	
RAND	Not present	0 or 32 bits	
NOM_PWR_EXT	0	1 bits; Extended nominal	
		transmit power	
	_1	adionic powor	

- Extended System Parameters Message

Table 4.4.7.2.2-4: Extended System Parameters Message

Derivation Path: C.S0005 clause 3.7.2.3.2.13			
Information Element	Value/remark	Comment	Condition
PILOT_PN	See table 4.4.2-4	9 bits	
CONFIG_MSG_SEQ	Set to '	6 bits	
	CONFIG_SEQ' of		
	base station as		
	per clause		
	4.4.7.2.1		
DELETE_FOR_TMSI	0	1 bits; Delete foreign TMSI	
USE_TMSI	0 or 1	1 bits; Use TMSI indicator	
PREF_MSID_TYPE	3	2 bits; Preferred Access	
		Channel MSID Type	
MCC	See table 4.4.2-4	10 bits	
IMSI_11_12	See table 4.4.2-4	7 bits; 11th and 12th digits of	
		the IMSI	
TMSI_ZONE_LEN	1 or 0	4 bits	
TMSI_ZONE	1 or Not present	8 bits if present	
BCAST_INDEX	0	3 bits	
IMSI_T_SUPPORTED	0	1 bits	
P_REV	6	8 bits	
MIN_P_REV	6	8 bits	
SOFT_SLOPE	0	6 bits	
ADD_INTERCEPT	0	6 bits; 0 dB	
DROP_INTERCEPT	0	6 bits; 0 dB	
PACKET_ZONE_ID	0	8 bits; Packet data service	
		zone not supported	
MAX_NUM_ALT_SO	0	3 bits	
RESELECT_INCLUDED	0	1 bits; System reselection	
		parameters not included	
EC_THRESH	Not present	0 or 5 bits	
EC_I0_THRESH	Not present	0 or 5 bits	
PILOT_REPORT		1 bits; Pilot Report indicator;	
	1	the MS reports or does not	
	1 or 0	report additional pilots which	
		have strengths exceeding	
NGHBR_SET_ENTRY_INFO		T_ADD 1 bits	
	0		
ACC_ENT_HO_ORDER NGHBR_SET_ACCESS_INFO	Not present 0	0 or 1 bits 1 bits	
ACCESS_HO	•		
ACCESS_HO_MSG_RSP	Not present	0 or 1 bits 0 or 1 bits	
ACCESS_RO_MSG_KSF ACCESS_PROBE_HO	Not present Not present	0 or 1 bits	
ACC_HO_LIST_UPD			
ACC_PROBE_HO_OTHER_MSG	Not present Not present	0 or 1 bits 0 or 1 bits	
MAX_NUM_PROBE_HO	Not present	0 or 3 bits	
NGHBR_SET_SIZE	Not present	0 or 6 bits	
ACCESS_ENTRY_HO	INOT PLESCIII	1 bits; Access Entry Handoff	
AOOLOO_LINIINI_HO	Not present	not permitted	
ACCESS HO ALLOWED	Not present	1 bits	
BROADCAST GPS_ASST	TNOT PLESCIII	1 bits; Broad cast GPS not	
5.13/150/161_01 0_/1001	0	supported	
QPCH_SUPPORTED		1 bits; Quick PCH not	
a. 3.1_33.1 3.1(12)	0	supported	
NUM_QPCH	Not present	0 or 2 bits	
QPCH_RATE	Not present	0 or 1 bits	
QPCH_POWER_LEVEL_PAGE	Not present	0 or 3 bits	
QPCH_CCI_SUPPORTED	Not present	0 or 1 bits	
QPCH_POWER_LEVEL_CONFIG	Not present	0 or 3 bits	
SDB_SUPPORTED	0	1 bits; Short Data burst not	
		supported	
RLGAIN_TRAFFIC_PILOT	0	6 bits; 0 dB Gain adjustment of	
		Reverse traffic channel	
REV_PWR_CNTL_DELAY_INCL	0	1 bits	
REV_PWR_CNTL_DELAY	Not present	0 or 2 bits	
		1	

Neighbor List Message

Table 4.4.7.2.2-6: Neighbor List Message

This message is sent when EXT_NGHBR_LST in Systems parameter message is set as '0'B i.e. the band class is 0;

Value/remark	Comment	Condition
See table 4.4.2-4	9 bits	
Set to ' CONFIG_SEQ' of base station as per clause 4.4.7.2.1	6 bits	
10 or 1	4 bits; Pilot PN Sequence offset index increment = n * 50	
0 or Not present		
See table 4.4.2-4 or Not Present	9 bits if present	
	See table 4.4.2-4 Set to ' CONFIG_SEQ' of base station as per clause 4.4.7.2.1 10 or 1 0 or Not present See table 4.4.2-4	See table 4.4.2-4 Set to ' CONFIG_SEQ' of base station as per clause 4.4.7.2.1 10 or 1 0 or Not present See table 4.4.2-4 9 bits 6 bits 6 bits 7 bits 9 bits 7 bits 9

Extended Neighbor List Message

Table 4.4.7.2.2-7: Extended Neighbor List Message

This message is sent when EXT_NGHBR_LST in Systems parameter message is set as '1'B i.e. the band class is not 0;

Information Element	Value/remark	Comment	Condition
PILOT_PN	See table 4.4.2-4	9 bits	
CONFIG_MSG_SEQ	Set to ' CONFIG_SEQ' of base station as per clause 4.4.7.2.1	6 bits	
PILOT_INC	10 or 1	4 bits; Pilot PN Sequence offset index increment = n * 50	
NGHBR_CONFIG(n)	0 or Not present	3 bits if present; Neighbor configuration where neighbor base station has same number of frequencies having paging channels as the current base station;	
NGHBR_PN(n)	See table 4.4.2-4 or Not present	9 bits if present	
SEARCH_PRIORITY(n)	1, 2 or Not present	2 bits if present; Medium search priority	
FREQ_INCL(n)	1	1 bit	InterFreqCell
	0 or Not present		
NGHBR_BAND(n)	Set according to PIXIT parameter	0 or 5 bits	InterFreqCell
	Not present		
NGHBR_FREQ(n)	Set according to PIXIT parameter	0 or 11 bits	InterFreqCell
	Not Present		

Note 1: The elements with index n are repeated as per table 4.4.2-5. The SS can transmit up to 7 neighbour intra frequency cell information. The parameters for the first cell should be set as per table 4.4.2-4.

Condition	Explanation
InterFreqCell	If the configured neighbour cell is on a different frequency compared to the cell in which
•	Extended Neighbour list message is being transmitted

Sync channel Messages

Table 4.4.7.2.2-8: Sync Channel Message

Derivation Path: C.S0005 clause 3.7.2.3.2	.26		
Information Element	Value/remark	Comment	Condition
P_REV	6	8 bits; Protocol revision level	
MIN_P_REV	6	8 bits; Minimum protocol	
		revision level	
SID	See table 4.4.2-4	15 bits	
NID	See table 4.4.2-4	16 bits	
PILOT_PN	See table 4.4.2-4	9 bits	
LC_STATE	A valid value,	42 bits; Long code State	
	calculated and	_	
	updated by the SS		
SYS_TIME	A valid value,	36 bits; System time	
	calculated and	-	
	updated by the SS		
LP_SEC	A valid value,	8 bits; The number of leap	
	calculated and	seconds	
	updated by the SS		
LTM_OFF	A valid value,	6 bits; Offset of local time from	
	calculated and	System time	
	updated by the SS		
DAYLT	A valid value,	1 bits; Daylight savings	
	calculated and	indicator	
	updated by the SS		
PRAT	0	2 bits; Paging Channel Data	
		rate=9600 bps	
CDMA_FREQ	Set according to	11 bits; Frequency assignment	
	PIXIT parameter		
	or as per clause		
	4.3.1.4		
EXT_CDMA_FREQ	Set according to	11 bits; Extended frequency	
	PIXIT parameter	assignment	
	or as per clause		
	4.3.1.4		

4.5 Generic procedures

This clause describes UE test states which can be used in the initial condition of many test cases defined in TS 36.521-1 [21], TS 36.523-1 [18] and TS 36.523-3 [34] or other procedures defined in this specification. This section also defines a set of procedures to bring the UE into these states.

4.5.1 UE test states

NOTE: The need to have a procedure for the transition from State 4/State 3 to State 2 is for further study and it can added if the technical motivation for this procedure can be justified.

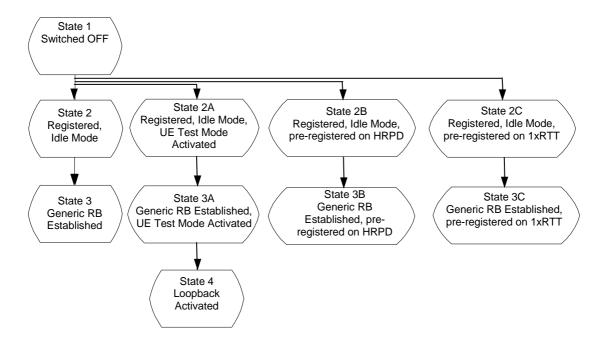


Figure 4.5.1-1: E-UTRAN UE Test States for Basic Generic Procedures

In order that the UE can set up a call or session in E-UTRAN, there are a number of procedures to be undertaken in a hierarchical sequence to move between known states. The sequences are shown in figure 4.5.1-1 and the status of the relevant protocols in the UE in the different states are given in table 4.5.1-1.

Table 4.5.1-1: The E-UTRAN UE states

		RRC	ECM	EMM	ESM	UE Test Mode
State 1	Switched OFF					
State 2	Registered, Idle Mode	RRC_IDLE	ECM-IDLE	EMM-REGISTERED	1 default EPS bearer context active.	Not active
State 2A	Registered, Idle Mode, UE Test Mode Activated	RRC_IDLE	ECM-IDLE	EMM-REGISTERED	1 default EPS bearer context active.	Active
State 2B	Registered, Idle Mode, pre-registered on HRPD	RRC_IDLE	ECM-IDLE	EMM-REGISTERED	1 default EPS bearer context active.	Active
State 2C	Registered, Idle Mode, pre-registered on 1xRTT	RRC_IDLE	ECM-IDLE	EMM-REGISTERED	1 default EPS bearer context active.	Active
State 3	Generic RB Established	RRC_CONNECTED 1 + N (0 ≤ N ≤ 7) data radio bearers configured as specified in the test cases	ECM-CONNECTED	EMM-REGISTERED	1 default EPS bearer context active and N (0 ≤ N ≤ 7) dedicated EPS bearers active as specified in the test cases	Not active
State 3A	Generic RB Established, UE Test Mode Activated	RRC_CONNECTED 1 + N (0 ≤ N ≤ 7) data radio bearers configured as specified in the test cases	ECM-CONNECTED	EMM-REGISTERED	1 default EPS bearer context active and N (0 ≤ N ≤ 7) dedicated EPS bearers active as specified in the test cases	Active
State 3B	Generic RB Established, pre-registered on HRPD	RRC_CONNECTED 1 + N (0 ≤ N ≤ 7) data radio bearers configured as specified in the test cases	ECM-CONNECTED	EMM-REGISTERED	1 default EPS bearer context active and N (0 ≤ N ≤ 7) dedicated EPS bearers active as specified in the test cases	Active
State 3C	Generic RB Established, pre-registered on 1xRTT	RRC_CONNECTED 1 + N (0 ≤ N ≤ 7) data radio bearers configured as specified in the test cases	ECM-CONNECTED	EMM-REGISTERED	1 default EPS bearer context active and N (0 ≤ N ≤ 7) dedicated EPS bearers active as specified in the test cases	Active
State 4	Loopback Activated	RRC_CONNECTED 1 + N (0 ≤ N ≤ 7) data radio bearers configured as specified in the test cases	ECM-CONNECTED	EMM-REGISTERED	1 default EPS bearer context active and N (0 ≤ N ≤ 7) dedicated EPS bearers active as specified in the test cases	Active

NOTE: Refer to TS 24.301 [28] subclause 5.5.1.1 for more details on the ESM state.

NOTE: Refer to TS 36.509 [38] for details regarding UE test mode and UE Loopback.

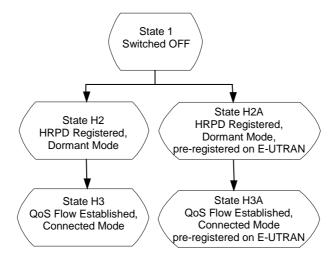


Figure 4.5.1-2: HRPD UE Test States for Basic Generic Procedures

In order for the UE to set up a session in an HRPD RAN, there is a number of procedures that need to be performed in a certain sequence to move between known UE states. These states and sequences are shown in figure 4.5.1-2. HRPD UE states are described in table 4.5.1-2.

Table 4.5.1-2: Description of HRPD UE states

State	Description
H2	The UE is registered on the HRPD network, but has no active connection to the network. The Inter-
	RAT Idle State Protocol (IR-ISP) is in Monitor State. The UE should be ready to perform a non-
	optimised cell reselection to E-UTRAN (as per [41] cl. 8 and [42] cl. 14.1).
H3	The UE is registered on the HRPD network, and has an active network connection. The UE should
	be ready to perform a non-optimised handover to E-UTRAN (as per [41] cl. 8).
H2A	Same state as State H2, but the UE is also pre-registered in E-UTRAN. The UE should be ready to
	perform an optimised cell reselection to E-UTRAN (as per [41] cl. 9.6).
H3A	Same state as State H3, but the UE is also pre-registered in E-UTRAN. The UE should be ready to
	perform an optimised handover to E-UTRAN (as per [41] cl. 9.5).

4.5.2 UE Registration (State 2)

Editor's Note: The UE Registration assumptions below are still in progress - they represent the assumptions on which the test specification is based in the present version of TS 36.508.

UE Registration depends on the specific configuration of a UE, which is expressed by PICS according to TS 36.523-2 [19]. In order to reduce complexity and to achieve testability several assumptions and definitions are made:

- An IMS capable UE is compliant to GSMA PRD IR.92 [52];
- During initial UE registration the UE requests for one or two PDN connectivities;
- When the UE requests for two PDN connectivities:
 - it re-uses the existing RRC connection for signalling regarding the 2nd PDN connectivity;
 - one of the PDN connectivities is for IMS;
- If the UE is configured with an APN for XCAP only usage (pc_XCAP_only_APN==true), connectivity to this PDN is not established during the initial UE registration;
- As for any 2nd PDN connectivity request security protection is already established the UE provides a valid APN in the PDN CONNECTIVITY REQUEST.

In detail the following UE configurations are supported:

Configuration	Condition	Explanation		
IMS_Only	pc_IMS AND NOT	UE is configured to request for IMS PDN connectivity only		
	pc_Provide_Internet_as_second_APN			
	AND NOT			
	pc_Provide_IMS_as_second_APN			
Internet_Only	NOT pc_IMS	UE does not support IMS		
IMS_Internet	pc_IMS AND	UE is configured to request for IMS PDN connectivity first		
	pc_Provide_Internet_as_second_APN	and then to request for an internet PDN connectivity		
Internet_IMS	pc_IMS AND	UE is configured to request for an internet PDN		
	pc_Provide_IMS_as_second_APN	connectivity first and then to request for the IMS PDN		
connectivity		connectivity		
NOTE: pc_Provide_Internet_as_second_APN and pc_Provide_IMS_as_second_APN are mutually exclusive i.e.				
shall not be true at the same time.				

Further auxiliary definitions:

Configuration	Condition
PDN1_IMS	IMS_Only OR IMS_Internet
PDN2_IMS	Internet_IMS
MULTI_PDN	IMS_Internet OR Internet_IMS
XCAP_SIGNALLING	test case requires XCAP signalling

4.5.2.1 Initial conditions

System Simulator:

- 1 cell, default parameters.
- The procedure shall be performed under ideal radio conditions as defined in clause 5

User Equipment:

- The Test UICC shall be inserted. This shall contain either ISIM and USIM applications or only a USIM application on UICC.

4.5.2.2 Definition of system information messages

The default system information messages are used.

4.5.2.3 Procedure

Table 4.5.2.3-1: UE registration procedure (state 1 to state 2)

Step	Procedure		Message Sequence
Cicp	110000010	U-S	Message
1		<	RRC: SYSTEM INFORMATION (BCCH)
2	UE transmits an RRCConnectionRequest	>	RRC: RRCConnectionRequest
3	message. SS transmits an RRCConnectionSetup		RRC: RRCConnectionSetup
3	message.	<	N.C. N.Coomecuonoeup
4	The UE transmits an	>	RRC: RRCConnectionSetupComplete
	RRCConnectionSetupComplete message to confirm the successful completion of the		NAS: ATTACH REQUEST NAS: PDN CONNECTIVITY REQUEST
	connection establishment and to initiate the		NAO. I DIN CONNECTIVITI REQUEST
	Attach procedure by including the ATTACH		
	REQUEST message. The PDN		
	CONNECTIVITY REQUEST message is piggybacked in ATTACH REQUEST		
5	The SS transmits an AUTHENTICATION		RRC: DLInformationTransfer
	REQUEST message to initiate the EPS	<	NAS: AUTHENTICATION REQUEST
	authentication and AKA procedure.		DD0 1111 (
6	The UE transmits an AUTHENTICATION RESPONSE message and establishes mutual	>	RRC: ULInformationTransfer NAS: AUTHENTICATION RESPONSE
	authentication.		1
7	The SS transmits a NAS SECURITY MODE		RRC: DLInformationTransfer
	COMMAND message to activate NAS	<	NAS: SECURITY MODE COMMAND
8	security. The UE transmits a NAS SECURITY MODE	>	RRC: ULInformationTransfer
	COMPLETE message and establishes the		NAS: SECURITY MODE COMPLETE
	initial security configuration.		
-	EXCEPTION: Steps 9a1 to 9a2 describe	-	-
	behaviour that depends on UE configuration; the "lower case letter" identifies a step		
	sequence that take place if the UE has ESM		
	information which needs to be transferred.		220 244
9a1	IF the UE sets the ESM information transfer flag in the last PDN CONNECTIVITY	<	RRC: DLInformationTransfer NAS: ESM INFORMATION REQUEST
	REQUEST message THEN the SS transmits		INAO. LOW IN ORWATION REQUEST
	an ESM INFORMATION REQUEST message		
	to initiate exchange of protocol configuration		
9a2	options and/or APN. The UE transmits an ESM INFORMATION	>	RRC: ULInformationTransfer
542	RESPONSE message to transfer protocol		NAS: ESM INFORMATION RESPONSE
	configuration options and/or APN.		
10	The SS transmits a SecurityModeCommand message to activate AS security.	<	RRC: SecurityModeCommand
11	The UE transmits a SecurityModeComplete	>	RRC: SecurityModeComplete
	message and establishes the initial security		,
10	configuration.		DD0: 1/501''': 5
12	The SS transmits a <i>UECapabilityEnquiry</i> message to initiate the UE radio access	<	RRC: UECapabilityEnquiry
	capability transfer procedure.		
13	The UE transmits a UECapabilityInformation	>	RRC: UECapabilityInformation
	message to transfer UE radio access		
14	capability. The SS transmits an	<	RRC: RRCConnectionReconfiguration
'-	RRCConnectionReconfiguration message to		NAS: ATTACH ACCEPT
	establish the default bearer with condition		NAS: ACTIVATE DEFAULT EPS
	SRB2-DRB(1, 0) according to 4.8.2.2.1.1.		BEARER CONTEXT REQUEST
	This message includes the ATTACH ACCEPT message. The ACTIVATE DEFAULT EPS		
	BEARER CONTEXT REQUEST message is		
	piggybacked in ATTACH ACCEPT.		
15	The UE transmits an RRCConnectionReconfigurationComplete	>	RRC:
	message to confirm the establishment of		RRCConnectionReconfigurationComplete
	default bearer.		

-	EXCEPTION: In parallel to the event described in step 16 below, if initiated by the UE the generic procedure for IP address allocation in the U-plane specified in TS 36.508 subclause 4.5A.1 takes place performing IP address allocation in the U-		
-	plane. EXCEPTION: IF PDN1_IMS THEN in parallel		
	to the event described in step 16 below the generic procedure for IMS signalling in the U-plane specified in TS 36.508 subclause 4.5A.3 takes place if requested by the UE		
16	This message includes the ATTACH	>	RRC: ULInformationTransfer
	COMPLETE message. The ACTIVATE DEFAULT EPS BEARER CONTEXT ACCEPT message is piggybacked in ATTACH COMPLETE.		NAS: ATTACH COMPLETE NAS: ACTIVATE DEFAULT EPS BEARER CONTEXT ACCEPT
-	EXCEPTION: Steps 16a1 to 16c1 describe	-	-
	behaviour that depends on UE configuration; the "lower case letter" identifies a step sequence that takes place when the UE is		
16a1	configured in a certain way. IF IMS voice not supported and	>	RRC: ULInformationTransfer
1001	pc_voice_PS_1_CS_2, pc_attach and pc_TAU_connected _in_IMS are set to TRUE (Note 1) THEN The UE transmits a TRACKING AREA		NAS: TRACKING AREA UPDATE REQUEST
40.0	UPDATE REQUEST message.		DDO DU (; T (
16a2	The SS transmits a TRACKING AREA UPDATE ACCEPT message.	\- -	RRC: DLInformationTransfer NAS: TRACKING AREA UPDATE ACCEPT
16a3	The UE transmits a TRACKING AREA UPDATE COMPLETE message.	>	RRC: ULInformationTransfer NAS: TRACKING AREA UPDATE COMPLETE
16b1	ELSE IF IMS voice not supported and pc_voice_PS_1_CS_2, pc_attach and pc_TAU_idle _in_IMS are set to TRUE (Note 2) THEN The SS transmits an RRCConnectionRelease message to release the RRC connection.	\	RRC: RRCConnectionRelease
16b2	The UE transmits an RRCConnectionRequest message.	>	RRC: RRCConnectionRequest
16b3	The SS transmit an RRCConnectionSetup message.	<	RRC: RRCConnectionSetup
16b4	The UE transmits an RRCConnectionSetupComplete message including a TRACKING AREA UPDATE REQUEST message.	>	RRC: RRCConnectionSetupComplete NAS: TRACKING AREA UPDATE REQUEST
16b5	The SS transmits a TRACKING AREA UPDATE ACCEPT message.	<	RRC: DLInformationTransfer NAS: TRACKING AREA UPDATE ACCEPT
16b6	The UE transmits a TRACKING AREA UPDATE COMPLETE message.	^	RRC: ULInformationTransfer NAS: TRACKING AREA UPDATE COMPLETE
16c1	ELSE IF MULTI_PDN = TRUE THEN The generic procedure for UE establishing additional PDN connectivity as specified in TS 36.508 subclause 4.5A.16 takes place	-	-
17	The SS transmits an RRCConnectionRelease message to release RRC connection and move to RRC_IDLE (State 2).	<	RRC: RRCConnectionRelease
-	EXCEPTION: Steps18a1 to 18b1 describe		
	behaviour that depends on UE		
	capabilities/configuration and test requirements; the "lower case letter" identifies		
	a step sequence that takes place if one of those is supported/configured.		
	mose is supporteu/configured.		

18a1	IF MULTI_PDN AND (pc_XCAP_only_APN OR NOT XCAP_SIGNALLING)	-	-		
	AND				
	pc_UE_supports_user_initiated_PDN_discon nect THEN				
	the non-IMS PDN shall be released as				
	specified in TS 36.508 subclause 4.5A.17				
18a2	IF MULTI_PDN AND (pc_XCAP_only_APN	-	-		
	OR NOT XCAP_SIGNALLING)				
	AND NOT				
	pc_UE_supports_user_initiated_PDN_discon				
	nect THEN				
	the non-IMS PDN shall be released as				
	specified in TS 36.508 subclause 4.5A.18				
NOTE	1: The procedure is used with specific message	with no I	MS voice network support. The UE is		
	configured for voice domain preference IMS F	PS voice	preferred, CS Voice as secondary and to		
	initiate EPS attach. The UE implementation supports TAU in connected mode,				
NOTE	2: The procedure is used with specific message				
	configured for voice domain preference IMS F	PS voice	preferred, CS Voice as secondary and to		
	initiate EPS attach. The UE implementation s	upports 7	ΓAU in idle mode,		

4.5.2.4 Specific message contents

All specific message contents shall be referred to clause 4.6 and 4.7 with the exceptions below.

Table 4.5.2.4-1: RRCConnectionRequest (Step 2)

Derivation Path: Table 4.6.1-16			
Information Element	Value/remark	Comment	Condition
RRCConnectionRequest ::= SEQUENCE {			
criticalExtensions CHOICE {			
rrcConnectionRequest-r8 SEQUENCE {			
ue-Identity	Any allowed value		
}			
}			
}			

Table 4.5.2.4-2: UECapabilityInformation (Step 13)

Derivation Path: Table 4.6.1-23			
Information Element	Value/remark	Comment	Condition
UECapabilityInformation ::= SEQUENCE {			
criticalExtensions CHOICE {			
c1 CHOICE{			
ueCapabilityInformation-r8	Any allowed value		
}			
}			
}			

Table 4.5.2.4-3: ACTIVATE DEFAULT EPS BEARER CONTEXT REQUEST (Step 14)

Derivation Path: Table 4.7.3-6 with condition IM else	IS_PDN_ConnEstab for PDN1_IMS	and NOT IMS_PDN_0	ConnEstab
Information Element	Value/remark	Comment	Condition
EPS bearer identity	'0101'B	arbitrary value used for PDN connectivity being maintained during the test case	PDN1_IMS OR NOT MULTI_PDN
EPS bearer identity	'1100'B	arbitrary value used for additional PDN connectivity which may be released before entering the test procedure of the test case	MULTI_PDN AND NOT PDN1_IMS
PDN address			IPv4_addres s_only
Length of PDN address contents	5 octets		•
PDN type value	'001'B	IPv4	
PDN address information	IPv4 address	The SS provides a valid IPv4 address	NOT IPv4- DHCP
	0.0.0.0	DHCPv4 is to be used to allocate the IPv4 address	IPv4-DHCP
ESM cause	IF "PDN type" IE in step 4 is 'IPv4v6' THEN '00110010'B ELSE Not present	"PDN type IPv4 only allowed"	

NOTE: The default message contents specified in table 4.7.3-6 apply unless the condition IPv4_address_only in table 4.5.2.4-3 is true.

Condition	Explanation
IPv4_address_only	This condition applies if the test case preamble description indicates that the UE is allocated an IPv4 address.
IPv4-DHCP	If in the last PDN CONNECTIVITY REQUEST or ESM INFORMATION RESPONSE sent prior to this message, the IE Protocol configuration options contains a configuration protocol option = '000B00H' ("IPv4 address allocation via DHCPv4", length of contents = 0). Note 1: This condition is used in conjunction with IPv4 or IPv4v6 as indicated in the "PDN address row" just above. Note 2: If both messages, PDN CONNECTIVITY REQUEST and ESM INFORMATION
	RESPONSE, are received and contain a Protocol configuration options IE then the IE from the message which is received later shall be used.

Table 4.5.2.4-4: TRACKING AREA UPDATE REQUEST (Steps 16a1 and 16b4)

Derivation Path: 36.508 Table 4.7.2-27 with condition combined_TA_LA

Table 4.5.2.4-5: TRACKING AREA UPDATE ACCEPT (Steps 16a2 and 16b5)

Derivation Path: 36.508 Table 4.7.2-24 with condition combined_TA_LA

4.5.2A UE Registration, UE Test Mode Activated (State 2A)

The same assumptions and definitions apply as in clause 4.5.2.

4.5.2A.1 Initial conditions

System Simulator:

- 1 cell, default parameters.
- The procedure shall be performed under ideal radio conditions as defined in clause 5

User Equipment:

- The Test USIM shall be inserted.

4.5.2A.2 Definition of system information messages

The default system information messages are used.

4.5.2A.3 Procedure

Table 4.5.2A.3-1: UE registration with test mode activation procedure (state 1 to state 2A)

Step	Procedure		Message Sequence
		U-S	Message
1 to 9a2	Same procedure for steps 1 to 9a2 as specified in the procedure in clause 4.5.2.3	-	-
10	The SS transmits an ACTIVATE TEST MODE	<	RRC: DLInformationTransfer
	message to activate UE radio bearer test		TC: ACTIVATE TEST MODE
44	mode procedure.		DD0 1111 (T. (
11	The UE transmits an ACTIVATE TEST MODE	>	RRC: ULInformationTransfer
12	COMPLETE message. The SS transmits a SecurityModeCommand	<	TC: ACTIVATE TEST MODE COMPLETE RRC: SecurityModeCommand
12	message to activate AS security.		KKC. SecurityivioaeCommana
13	The UE transmits a SecurityModeComplete	>	RRC: SecurityModeComplete
	message and establishes the initial security		,
	configuration.		
14	The SS transmits a UECapabilityEnquiry	<	RRC: UECapabilityEnquiry
	message to initiate the UE radio access		
15	capability transfer procedure. The UE transmits a UECapabilityInformation		RRC: UECapabilityInformation
15	message to transfer UE radio access	>	KKC. OLGapabilityImormation
	capability.		
16	The SS transmits an	<	RRC: RRCConnectionReconfiguration
	RRCConnectionReconfiguration message to		NAS: ATTACH ACCEPT
	establish the default bearer with condition		NAS: ACTIVATE DEFAULT EPS
	SRB2-DRB(1, 0) according to 4.8.2.2.1.1.		BEARER CONTEXT REQUEST
	This message includes the ATTACH ACCEPT message. The ACTIVATE DEFAULT EPS		
	BEARER CONTEXT REQUEST message is		
	piggybacked in ATTACH ACCEPT.		
17	The UE transmits an	>	RRC:
	RRCConnectionReconfigurationComplete		RRCConnectionReconfigurationComplete
	message to confirm the establishment of		
	default bearer. EXCEPTION: In parallel to the event		
-	described in step 18 below the generic		
	procedure for IP address allocation in the U-		
	plane specified in TS 36.508 subclause		
	4.5A.1 takes place performing IP address		
	allocation in the U-plane if requested by the		
	UE. EXCEPTION: IF PDN1_IMS THEN in parallel		
-	to the event described in step 18 below the		
	generic procedure for IMS signalling in the U-		
	plane specified in TS 36.508 subclause		
	4.5A.3 takes place if requested by the UE		
18	This message includes the ATTACH	>	RRC: ULInformationTransfer
	COMPLETE message. The ACTIVATE		NAS: ATTACH COMPLETE
	DEFAULT EPS BEARER CONTEXT ACCEPT message is piggybacked in		NAS: ACTIVATE DEFAULT EPS BEARER CONTEXT ACCEPT
	ACCEPT message is piggybacked in ATTACH COMPLETE.		DEMICE CONTEXT ACCEPT
-	EXCEPTION: Steps18a1 to 18c1 describe	-	-
	behaviour that depends on UE configuration;		
	the "lower case letter" identifies a step		
	sequence that takes place when the UE is	1	
18a1	configured in a certain way. IF IMS voice not supported and	 	RRC: ULInformationTransfer
Ioai	pc_voice_PS_1_CS_2, pc_attach and	>	NAS: TRACKING AREA UPDATE
	pc_TAU_connected _in_IMS are set to TRUE	1	REQUEST
	(Note 1) THEN		
	The UE transmits a TRACKING AREA		
40.7	UPDATE REQUEST message.	ļ	DDO: Dilatera C. T. C.
18a2	The SS transmits a TRACKING AREA	<	RRC: DLInformationTransfer
	UPDATE ACCEPT message.	1	NAS: TRACKING AREA UPDATE ACCEPT
18a3	The UE transmits a TRACKING AREA	>	RRC: ULInformationTransfer
	UPDATE COMPLETE message.		NAS: TRACKING AREA UPDATE
			COMPLETE

18b1	ELSE IF IMS voice not supported and	<	RRC: RRCConnectionRelease
	pc_voice_PS_1_CS_2, pc_attach and		
	pc_TAU_idle _in_IMS are set to TRUE (Note		
	2) THEN		
	The SS transmits an RRCConnectionRelease		
	message to release the RRC connection.		
18b2	The UE transmits an RRCConnectionRequest	>	RRC: RRCConnectionRequest
	message.		,
18b3	The SS transmit an RRCConnectionSetup	<	RRC: RRCConnectionSetup
	message.	,	The second secon
18b4	The UE transmits an	>	RRC: RRCConnectionSetupComplete
1004	RRCConnectionSetupComplete message		NAS: TRACKING AREA UPDATE
	including a TRACKING AREA UPDATE		REQUEST
			REQUEST
401-5	REQUEST message. The SS transmits a TRACKING AREA		DDC: Di lafa mantina Transferi
18b5		<	RRC: DLInformationTransfer
	UPDATE ACCEPT message.		NAS: TRACKING AREA UPDATE
			ACCEPT
18b6	The UE transmits a TRACKING AREA	>	RRC: ULInformationTransfer
	UPDATE COMPLETE message.		NAS: TRACKING AREA UPDATE
			COMPLETE
18c1	ELSE IF MULTI_PDN = TRUE THEN		
	The generic procedure for UE establishing		
	additional PDN connectivity as specified in TS		
	36.508 subclause 4.5A.16 takes place		
19	The SS transmits an RRCConnectionRelease	<	RRC: RRCConnectionRelease
	message to release RRC connection and		
	move to RRC_IDLE (State 2A).		
-	EXCEPTION: Steps 20a1 to 20b1 describe	-	-
	behaviour that depends on UE		
	capabilities/configuration; the "lower case		
	letter" identifies a step sequence that takes		
	place if one of those is supported/configured.		
20a1	IF MULTI PDN	-	-
	AND		
	pc_UE_supports_user_initiated_PDN_discon		
	nect THEN		
	the non-IMS PDN shall be released as		
	specified in TS 36.508 subclause 4.5A.17		
20b1	IF MULTI_PDN	_	-
	AND NOT		
	pc_UE_supports_user_initiated_PDN_discon		
	nect THEN		
	the non-IMS PDN shall be released as		
	specified in TS 36.508 subclause 4.5A.18		
NOTE	The procedure is used with specific message	with no	MS voice network support. The UE is
INOIE	configured for voice domain preference IMS F		
	configured for voice domain preference IMS F	S voice	Dieletieu. Co voice as secondary and to
		unnarta -	
NOTE	initiate EPS attach. The UE implementation solutions: 2: The procedure is used with specific message.		TAU in connected mode,

NOTE 2: The procedure is used with specific message with no IMS voice network support. The UE is configured for voice domain preference IMS PS voice preferred, CS Voice as secondary and to initiate EPS attach. The UE implementation supports TAU in idle mode,

4.5.2A.4 Specific message contents

All specific message contents shall be referred to clause 4.6, 4.7 and 4.7A with the exceptions below.

Table 4.5.2A.4-1: RRCConnectionRequest (Step 2)

Information Element	Value/remark	Comment	Condition
RRCConnectionRequest ::= SEQUENCE {			
criticalExtensions CHOICE {			
rrcConnectionRequest-r8 SEQUENCE {			
ue-Identity	Any allowed value		
}			
}			
}			

Table 4.5.2A.4-2: UECapabilityInformation (Step 15)

Derivation Path: Table 4.6.1-23			
Information Element	Value/remark	Comment	Condition
UECapabilityInformation ::= SEQUENCE {			
criticalExtensions CHOICE {			
c1 CHOICE{			
ueCapabilityInformation-r8	Any allowed value		
}			
}			
}			

Table 4.5.2A.4-3: TRACKING AREA UPDATE REQUEST (Steps 18a1 and 18b4)

Derivation Path: 36.508 Table 4.7.2-27 with condition combined_TA_LA

Table 4.5.2A.4-4: TRACKING AREA UPDATE ACCEPT (Steps 18a2 and 18b5)

Derivation Path: 36.508 Table 4.7.2-24 with condition combined_TA_LA

4.5.2B UE Registration, pre-registration on HRPD (State 2B)

The same assumptions and definitions apply as in clause 4.5.2.

4.5.2B.1 Initial conditions

System Simulator:

- Cell 1
- Cell 1 is transmitting SystemInformationBlockType8

User Equipment:

- The Test USIM shall be inserted.

4.5.2B.2 Definition of system information messages

Table 4.5.2B.2-1: SystemInformationBlockType1 for cell 1 (Steps 1-41, Table 4.5.2B.3-2)

Derivation Path: 36.508 Table 4.4.3.2-3			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType1 ::= SEQUENCE {			
schedulingInformation ::= SEQUENCE (SIZE (1maxSI-Message)) OF SEQUENCE {}	Combination 6 in TS 36.508 section 4.4.3.1	SIB2, SIB3 and SIB 8 are transmitted	
}			

Table 4.5.2B.2-2: SystemInformationBlockType8 for cell 1 (Steps 1-41, Table 4.5.2B.3-2)

Derivation Path: 36.508 Table 4.4.3.3-7, condition HR	PD		
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType8 ::= SEQUENCE {			
parametersHRPD SEQUENCE {			
preRegistrationInfoHRPD SEQUENCE {			
preRegistrationAllowed	TRUE		
preRegistrationZoneId	ColorCode		
secondaryPreRegistrationZoneIdList	Not present		
SEQUENCE (SIZE (12)) OF SEQUENCE {			
PreRegistrationZoneIdHRPD	Not present		
}			
}			
cellReselectionParametersHRPD SEQUENCE {			
bandClassList SEQUENCE (SIZE (1maxCDMA -BandClass)) OF SEQUENCE {	1 entry		
bandClass	Band Class of frequency	ENUMERATED	
	under test	{bc0, bc1, bc2, bc3, bc4, bc5, bc6, bc7, bc8, bc9, bc10, bc11, bc12, bc13, bc14, bc15, bc16, bc17, spare14, spare13, spare12, spare11, spare10, spare9, spare8, spare7, spare6, spare5, spare4, spare3, spare2, spare1, }	
cellReselectionPriority	3		
threshX-High	30(-30)	INTEGER (063)	
threshX-Low	32(-32)	INTEGER (063)	
}			
neighCellList SEQUENCE (SIZE (116)) OF SEQUENCE {	1 entry		
bandClass	Band Class of frequency under test	ENUMERATED {bc0, bc1, bc2, bc3, bc4, bc5, bc6, bc7, bc8, bc9, bc10, bc11, bc12, bc13, bc14, bc15, bc16, bc17, spare14, spare13, spare12, spare11, spare6, spare8, spare7, spare6, spare4, spare1,}	
}			
}			
t-ReselectionCDMA2000	3	INTEGER (07)	
}		` '	
}			
}			

4.5.2B.3 Procedure

Table 4.5.2B.3-1 shows the cell power levels during the procedure.

Table 4.5.2B.3-1: Time instances of cell power level and parameter changes

	Parameter	Unit	Cell 1	Remark
T0	Cell-specific RS EPRE	dBm/15kHz	-75	-

Table 4.5.2B.3-2: UE registration with HRPD pre-registration procedure (state 1 to state 2B)

Step	Procedure	Message Sequence		
		U - S	Message	
1 to 16	Same procedure for steps 1 to 16 as specified in the procedure in clause 4.5.2.3	-	-	
17	The UE transmits an ULInformationTransfer containing a tunneled UATIRequest message	>	ULInformationTransfer	
4.0	Cell 1.		Direction of the control of the cont	
18	The SS transmits a <i>DLInformationTransfer</i> containing a tunneled <i>UATIAssignment</i>	<	DLInformationTransfer	
19	message on Cell 1. The UE transmits an ULInformationTransfer	>	ULInformationTransfer	
19	containing a tunneled UATIComplete	/	OEIMOIMation Transier	
20	message on Cell 1. The UE transmits an ULInformationTransfer	>	ULInformationTransfer	
	containing a tunneled AlternateLinkOpenReqmessage on Cell 1.			
21	The SS transmits a DLInformationTransfer	<	DLInformationTransfer	
	containing a tunneled AlternateLinkOpenConfmessage on Cell 1.			
22	The UE transmits an <i>ULInformationTransfer</i> containing a tunneled	>	ULInformationTransfer	
00	AlternateLinkOpenCompleteon Cell 1.	_	ULInformationTransfer	
23	The UE transmits an ULInformationTransfer containing a tunneled ConfigurationRequest	>	OLITIOTHAUOTT FATISIEF	
24	message for SCP configuration on Cell 1. The SS transmits a DLInformationTransfer	<	DLInformationTransfer	
	containing a tunneled ConfigurationResponse message for SCP configuration on Cell 1.			
25	The UE transmits an ULInformationTransfer	>	ULInformationTransfer	
	containing a tunneled ConfigurationRequest message for Stream protocol on Cell 1.			
26	The SS transmits a <i>DLInformationTransfer</i> containing a tunneled <i>ConfigurationResponse</i>	<	DLInformationTransfer	
	message for Stream protocol accepting EMPA bound to service network on Cell 1.			
27	The UE transmits an ULInformationTransfer containing a tunneled EMPA	>	ULInformationTransfer	
	ConfigurationRequest message or MMPA			
28	ConfigurationRequest message on Cell 1. The SS transmits a DLInformationTransfer	<	DLInformationTransfer	
20	containing a tunneled EMPA	ζ	Demiornation ransier	
	ConfigurationResponse message or MMPA ConfigurationResponse message on Cell 1.			
29	The UE transmits an ULInformationTransfer	>	ULInformationTransfer	
	containing a tunneled ConfigurationComplete message on Cell 1.			
30	The SS transmits a <i>DLInformationTransfer</i> containing a tunneled <i>EMPA</i>	<	DLInformationTransfer	
	ConfigurationRequest message or MMPA ConfigurationRequest message on Cell 1.			
30A	The UE transmits an ULInformationTransfer	>	ULInformationTransfer	
	containing a tunneled EMPA ConfigurationResponse message or MMPA			
30B	ConfigurationResponse message on Cell 1. The SS transmits an DLInformationTransfer	<	DLInformationTransfer	
	containing a tunneled SoftConfigurationComplete message on Cell			
000	1.			
30C	The UE transmits an <i>ULInformationTransfer</i> containing a tunneled <i>AlternateLinkCloseReq</i>	>	ULInformationTransfer	
30D	message on Cell 1. The SS transmits a DLInformationTransfer	<	DLInformationTransfer	
300	containing a tunneled AlternateLinkCloseConf		22omason rando	
31	message on Cell 1. Optionally tunneled device level	<>	-	
	authentication may take place on Cell 1.			

32	Optionally tunneled Location Update procedure may take place if the SS is configured to support it.	<>	-
32A	The UE transmits an <i>ULInformationTransfer</i> containing a tunneled <i>AlternateLinkOpenReq</i> message on Cell 1.	>	ULInformationTransfer
32B	The SS transmits a <i>DLInformationTransfer</i> containing a tunneled <i>AlternateLinkOpenConf</i> message on Cell 1.	<	DLInformationTransfer
32C	The UE transmits an <i>ULInformationTransfer</i> containing a tunneled <i>AlternateLinkOpenComplete</i> message on Cell 1.	>	ULInformationTransfer
33	Tunneled PPP LCP negotiation is performed between the UE and the SS. EAP-AKA' is selected as the authentication protocol.	<>	-
33A	After entering PPP LCP Open State, optionally tunneled PPP Version Capability Indicaiton and/or Max PPP Inactivity Timer negotiation may take place.	<->	-
34	Tunneled EAP-AKA' is performed between the UE and the SS.	<>	-
35	The UE transmits an <i>ULInformationTransfer</i> containing a tunneled <i>VSNCP Configure-Request</i> message, including a PDN-ID, PDN Type, APN, PDN Address, Protocol Configuration Options, and Attach Type = "handover". The Address Allocation Preference option contained in the Protocol Configuration Options indicates whether the UE wants to perform the IP address allocation during the attach procedure or deferred IP address allocation. PDN Type indicates the UE's IP capability (IPv4, IPv6 or IPv4/v6)	>	ULInformationTransfer
36	The SS transmits a <i>DLInformationTransfer</i> containing a tunneled <i>VSNCP Configure-Ack</i> message.	<	DLInformationTransfer
37	The SS transmits a <i>DLInformationTransfer</i> containing a tunneled <i>VSNCP Configure-Request</i> message including the PDN-ID configuration option.	<	DLInformationTransfer
38	The UE transmits an <i>ULInformationTransfer</i> containing a tunneled <i>VSNCP Configure-Ack</i> message.	>	ULInformationTransfer
39	Optionally deferred IP address allocation using tunnelled IETF messages can take place depending on the Address Allocation Preference indicated by the UE at Step 35.	<>	
39A	The UE transmits an <i>ULInformationTransfer</i> containing a tunneled <i>AlternateLinkCloseReq</i> message on Cell 1.	>	ULInformationTransfer
39B	The SS transmits a <i>DLInformationTransfer</i> containing a tunneled <i>AlternateLinkCloseConf</i> message on Cell 1.	<	DLInformationTransfer
40	Void.	<u> </u>	
41	The SS transmits an <i>RRCConnectionRelease</i> message on Cell 1.	<	RRCConnectionRelease
-	EXCEPTION: Steps 42a1 to 42b1 describe behaviour that depends on UE capabilities/configuration; the "lower case letter" identifies a step sequence that takes place if one of those is supported/configured.	-	-

42a1	IF MULTI_PDN	-	-
	AND		
	pc_UE_supports_user_initiated_PDN_discon		
	nect THEN		
	the non-IMS PDN shall be released as		
	specified in TS 36.508 subclause 4.5A.17		
42b1	IF MULTI_PDN	-	-
	AND NOT		
	pc_UE_supports_user_initiated_PDN_discon		
	nect THEN		
	the non-IMS PDN shall be released as		
	specified in TS 36.508 subclause 4.5A.18		
Note 1:	: The sequence in steps 17-40 lists important e	HRPD p	rocedures. More protocol negotiations can
	happen based on UE capability and SS emul	ation.	
Note 2	: Message contents of tunnelled CDMA2000 m	nessages	(steps 17-40) are not checked in terms of
	conformance testing.		

NOTE: If step 31 is performed, an alternative link establishement procedure is also performed.

4.5.2B.4 Specific message contents

All specific message contents shall be referred to clause 4.6, 4.7 and 4.7A with the exceptions below.

Table 4.5.2B.4-1: RRCConnectionRequest (Step 2, Table 4.5.2B.3-2)

Derivation Path: Table 4.6.1-16			
Information Element	Value/remark	Comment	Condition
RRCConnectionRequest ::= SEQUENCE {			
criticalExtensions CHOICE {			
rrcConnectionRequest-r8 SEQUENCE {			
ue-Identity	Any allowed value		
}			
}			
}			

Table 4.5.2B.4-2: UECapabilityInformation (Step13, Table 4.5.2B.3-2)

Information Element	Value/remark	Comment	Condition
UECapabilityInformation ::= SEQUENCE {			
criticalExtensions CHOICE {			
c1 CHOICE{			
ueCapabilityInformation-r8	Any allowed value		
}			
}			
}			

Table 4.5.2B.4-3: UATI Request message (Step 17, Table 4.5.2B.3-2)

Field	Value/remark	Comment	Condition
SAPState	'0'B	SAP Header	
SessionConfigurationToken	16 bits, Set by UE		
ConnectionLayerFormat	1 bit, Set by UE		
ATI Record	34 bits, RATI set by UE		
Reserved	'0000'B		
MessageID	'0000000'B	UATI Request	
TransactionID	8 bits, Set by UE		

Table 4.5.2B.4-4: UATI Assignment message (Step 18, Table 4.5.2B.3-2)

Field	Value/remark	Comment	Condition
SAPState	'1'B	SAP Header	
SessionConfigurationToken	'0'		
ConnectionLayerFormat	1 bit, Set by SS		
ATI Record	34 bits, RATI set in UATI		
	Request		
Reserved	'0000'B		
MessageID	'00000001'B	UATI Assignment	
MessageSequence	8 bits, Set by SS		
Reserved1	'0000000'B		
SubnetIncluded	'1'B		
UATISubnetMask	'1101000'B		
UATI104	104 bits, Set by SS		
UATIColorCode	8 bits, Set to ColorCode		
UATI024	24 bits, Set by SS		
UpperOldUATILength	'0000'B		
Reserved2	'0000'B		

4.5.2C UE Registration, pre-registration on 1xRTT (State 2C)

The same assumptions and definitions apply as in clause 4.5.2.

4.5.2C.1 Initial conditions

System Simulator:

- Cell 1
- Cell 1 is transmitting SystemInformationBlockType8

User Equipment:

- The Test USIM shall be inserted.
- The UE is switched OFF.

4.5.2C.2 Definition of system information messages

Table 4.5.2C.2-1: SystemInformationBlockType1 for cell 1 (Steps 1-19, Table 4.5.2C.3-2)

Derivation Path: 36.508 Table 4.4.3.2-3			
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType1 ::= SEQUENCE {			
schedulingInformation ::= SEQUENCE (SIZE (1maxSI-Message)) OF SEQUENCE {}	Combination 6 in TS 36.508 section 4.4.3.1	SIB2, SIB3 and SIB 8 are transmitted	
}			

Table 4.5.2C.2-2: SystemInformationBlockType8 for cell 1 (Steps 1-19, Table 4.5.2C.3-2)

Derivation Path: 36.508 Table 4.4.3.3-7, condition 1XI	RTT		
Information Element	Value/remark	Comment	Condition
SystemInformationBlockType8 ::= SEQUENCE {			
parameters1XRTT SEQUENCE {			
csfb-RegistrationParam1XRTT SEQUENCE {			
Sid	SID under test	BIT STRING	
	For Signalling test cases,	(SIZE (15))	
	see table 4.4.2-4		
Nid	NID under test	BIT STRING	
	For Signalling test cases,	(SIZE (16))	
	see table 4.4.2-4		
multipleSID	TRUE	BOOLEAN	
multipleNID	TRUE	BOOLEAN	
homeReg	TRUE	BOOLEAN	
foreignSIDReg	TRUE	BOOLEAN	
foreignNIDReg	TRUE	BOOLEAN	
parameterReg	TRUE	BOOLEAN	
powerUpReg	TRUE	BOOLEAN	
registrationPeriod	'000000'	BIT STRING	
- 	<u> </u>	(SIZE (7))	
registrationZone	Registration zone under	BIT STRING	
•	test	(SIZE (12))	
	For Signalling test cases,		
	see table 4.4.2-4		
totalZone	'001'B	BIT STRING	
		(SIZE (3))	
zoneTimer	'000'B or '001'B	BIT STRING	
		(SIZE (3))	
}			
longCodeState1XRTT	A valid value, calculated	BIT STRING	
	and updated by the SS	(SIZE (42))	
		OPTIONAL	
cellReselectionParameters1XRTT SEQUENCE {			
bandClassList SEQUENCE (SIZE (1maxCDMA -BandClass)) OF SEQUENCE {	1 entry		
bandClass	Band Class of frequency	ENUMERATED	
DariuClass	under test		
	under test	{bc0, bc1, bc2, bc3, bc4, bc5,	
		bc6, bc7, bc8,	
		bc9, bc10, bc11,	
		bc12, bc13, bc14,	
		bc15, bc16, bc17,	
		spare14, spare13,	
		spare12, spare11,	
		spare10, spare9,	
		spare8, spare7,	
		spare6, spare5,	
		spared, spare3,	
		spare2, spare1,	
		}	
cellReselectionPriority	3		
threshX-High	30(-30)	INTEGER (063)	
threshX-Low	32(-32)	INTEGER (063)	
}			
}			
csfb-RegistrationParam1XRTT-v920{	TDUE		
powerDownReg-r9	TRUE		
}			
•	•		

4.5.2C.3 Procedure

Table 4.5.2C.3-1 shows the cell power levels after the preamble.

Table 4.5.2C.3-1: Time instances of cell power level and parameter changes

	Parameter	Unit	Cell 1	Remark
T0	Cell-specific RS EPRE	dBm/15kHz	-60	-

Table 4.5.2C.3-2: UE registration with 1xRTT pre-registration procedure (state 1 to state 2C)

Step	Procedure	Message Sequence		
-		U - S	Message	
1 to	Same procedure for steps 1 to 16 as specified	-	-	
16	in the procedure in clause 4.5.2.3			
16A	The UE transmits a CSFBParametersRequestCDMA2000 on Cell	>	CSFBParametersRequestCDMA2000	
	1?			
16B	The SS transmits a	<	CSFBParametersResponseCDMA2000	
	CSFBParametersResponseCDMA2000 on			
	Cell 1.			
17	The UE transmits an ULInformationTransfer	>	ULInformationTransfer	
	containing a 1xRTT GCSNA Encapsulated			
470	Registration message on Cell 1.		DIL C. C. T. C.	
17A	The SS transmits a DLInformationTransfer	<	DLInformationTransfer	
18	containing a GCSNA Ack message on Cell 1. The SS transmits a DLInformationTransfer	_	DLInformationTransfer	
10	containing a 1x RTT GCSNA Encapsulated	<	Delinionnation ransier	
	Registration Accept Order on Cell 1.			
19	The SS transmits an RRCConnectionRelease	<	RRCConnectionRelease	
	message on Cell 1.	`	Till to Commodacim to load	
-	EXCEPTION: Steps 20a1 to 20b1 describe	-	-	
	behaviour that depends on UE			
	capabilities/configuration; the "lower case			
	letter" identifies a step sequence that takes			
	place if one of those is supported/configured.			
20a1	IF MULTI_PDN	-	-	
	AND			
	pc_UE_supports_user_initiated_PDN_discon nect THEN			
	the non-IMS PDN shall be released as			
	specified in TS 36.508 subclause 4.5A.17			
20b1	IF MULTI_PDN	-	-	
	AND NOT			
	pc_UE_supports_user_initiated_PDN_discon			
	nect THEN			
	the non-IMS PDN shall be released as			
	specified in TS 36.508 subclause 4.5A.18			
Note: N	Message contents of tunnelled CDMA2000 message	iges (ste	ps 17-18) are not checked in terms of	
	conformance testing.			

Table 4.5.2C.3-3: Void

4.5.2C.4 Specific message contents

All specific message contents shall be referred to clause 4.6, 4.7 and 4.7A with the exceptions below.

Table 4.5.2C.4-1: RRCConnectionRequest (Step 2, Table 4.5.2C.3-2)

Derivation Path: Table 4.6.1-16			
Information Element	Value/remark	Comment	Condition
RRCConnectionRequest ::= SEQUENCE {			
criticalExtensions CHOICE {			
rrcConnectionRequest-r8 SEQUENCE {			
ue-Identity	Any allowed value		
}			
}			
}			

Table 4.5.2C.4-2: UECapabilityInformation (Step 13, Table 4.5.2C.3-2)

Information Element	Value/remark	Comment	Condition
UECapabilityInformation ::= SEQUENCE {			
criticalExtensions CHOICE {			
c1 CHOICE{			
ueCapabilityInformation-r8	Any allowed value		
}			
}			
}			

Table 4.5.2C.4-3: Void

Table 4.5.2C.4-4: Void

Table 4.5.2C.4-5: CSFBParametersResponseCDMA2000 (Step 16B, Table 4.5.2C.3-2)

Derivation Path: 36.508 Table 4.6.1-2			
Information Element	Value/remark	Comment	Condition
CSFBParametersResponseCDMA2000 ::=			
SEQUENCE {			
criticalExtensions CHOICE {			
csfbParametersResponseCDMA2000-r8			
SEQUENCE {			
Rand	Random Challenge Data		
	set by SS		
mobilityParameters	Set according to Table		
	4.5.2C.4-6		
}			
}			
}			

Table 4.5.2C.4-6: mobilityParameters (CDMA2000Parameters) (Step 16B, Table 4.5.2C.3-2)

Information Element	Value/remark	Comment	Condition
RecordType	'00000000'B		
SIDIncluded	'1'B		
SID	The same as SIB8		
NIDIncluded	'1'B		
NID	The same as SIB8		
REG_ZONEIncluded	'1'B		
REG_ZONE	The same as SIB8		
TOTAL_ZONESIncluded	'1'B		
TOTAL ZONES	The same as SIB8		
ZONE_TIMERIncluded	'1'B		
ZONE_TIMER	The same as SIB8		
PACKET_ZONE_IDIncluded	'0'B		
PACKET_ZONE_ID	Not present		
PZIDHystParametersIncluded	'0'B		
PZ_HYST_ENABLED	Not present		
PZ_HYST_INFO_INCL	Not present		
PZ HYST_LIST_LEN	Not present		
PZ_HYST_ACT_TIMER	Not present		
PZ_HYST_TIMER_MUL	Not present		
PZ_HYST_TIMER_EXP	Not present		
P_REVIncluded	'1'B		
P_REV	'00000110'B		
MIN_P_REVIncluded	'1'B		
MIN_P_REV	'00000110'B		
'0'B NEG_SLOT_CYCLE_INDEX_SUPIncluded			
NEG_SLOT_CYCLE_INDEX_SUP	Not present		
ENCRYPT_MODEIncluded	'0'B		
ENCRYPT_MODE	Not present		
ENC_SUPPORTEDIncluded	'0'B		
ENC_SUPPORTED	Not present		
SIG_ENCRYPT_SUPIncluded	'0'B		
SIG_ENCRYPT_SUP	Not present		
MSG_INTEGRITY_SUPIncluded	'0'B		
MSG_INTEGRITY_SUP	Not present		
SIG_INTEGRITY_SUP_INCLIncluded	'0'B		
SIG_INTEGRITY_SUP_INCL	Not present		
SIG_INTEGRITY_SUPIncluded	'0'B		
SIG_INTEGRITY_SUP	Not present		
AUTHIncluded	'1'B		
AUTH	'00'B		
MAX_NUM_ALT_SOIncluded	'1'B		
MAX NUM ALT SO	'000'B		
USE_SYNC_IDIncluded	'0'B		
USE_SYNC_ID	Not present		
MS_INIT_POS_LOC_SUP_INDIncluded	'0'B		
MS_INIT_POS_LOC_SUP_IND	Not present		
MOB_QOSIncluded	'0'B		
MOB_QOS	Not present		
BAND_CLASS_INFO_REQIncluded	'0'B		
BAND CLASS INFO REQ	Not present		
BAND_CLASSIncluded	'1'B		
BAND_CLASS	'00000'B		
BYPASS_REG_INDIncluded	'0'B		
BYPASS_REG_IND	Not present		
'0'B ALT_BAND_CLASSIncluded			
ALT_BAND_CLASS	Not present		
MAX_ADD_SERV_INSTANCEIncluded	'0'B		
MAX_ADD_SERV_INSTANCE	Not present		
HOME_REGIncluded	'1'B		
HOME_REG	The same as SIB8		
FOR_SID_REGIncluded	'1'B		1
FOR SID REG	The same as SIB8		1
FOR_NID_REGIncluded	'1'B	1	1
FOR_NID_REG	The same as SIB8		
I OK_IND_INEO	THE SAITIE AS CIDO	1	1

DOWED LID DEGLESTED	(AID
POWER_UP_REGIncluded	'1'B
POWER_UP_REG	The same as SIB8
POWER_DOWN_REGIncluded	'1'B
POWER_DOWN_REG	The same as SIB8
PARAMETER_REGIncluded	'1'B
PARAMETER_REG	The same as SIB8
REG_PRDIncluded	'1'B
REG_PRD	The same as SIB8
REG_DISTIncluded	'0'B
REG_DIST	Not present
PREF_MSID_TYPEIncluded	'1'B
PREF_MSID_TYPE	'11'B
EXT_PREF_MSID_TYPEIncluded	'0'B
EXT_PREF_MSID_TYPE	Not present
MEID_REQDIncluded	'0'B
MEID_REQD	Not present
MCCIncluded	'1'B
MCC	See the Table 4.4.2-4
WOO	Note 1, Note 2
IMSI_11_12Included	'1'B
IMSI_11_12Inicidded	See the Table 4.4.2-4
IMCLT CUDDODTEDIndivided	Note 1, Note 2
IMSI_T_SUPPORTEDIncluded	'1'B
IMSI_T_SUPPORTED	'0'B
RECONNECT_MSG_INDIncluded	'0'B
RECONNECT_MSG_IND	Not present
RER_MODE_SUPPORTEDIncluded	'0'B
RER_MODE_SUPPORTED	Not present
TKZ_MODE_SUPPORTEDIncluded	'0'B
TKZ_MODE_SUPPORTED	Not present
TKZ_IDIncluded	'0'B
TKZ_ID	Not present
PILOT_REPORTIncluded PILOT_REPORT	'0'B
PILOT_REPORT	Not present
SDB_SUPPORTEDIncluded	'0'B
SDB SUPPORTED	Not present
AUTO_FCSO_ALLOWEDIncluded	'0'B
AUTO_FCSO_ALLOWED	Not present
SDB_IN_RCNM_INDIncluded	'0'B
SDB_IN_RCNM_IND	Not present
FPC FCH Included	'1'B
FPC_FCH_INIT_SETPT_RC3	'00011000'B
FPC_FCH_INIT_SETPT_RC4	'00011000'B
FPC_FCH_INIT_SETPT_RC5	'00011000'B
FPC_FCH_INIT_SETPT_RC11	'00000000'B
FPC_FCH_INIT_SETPT_RC12	'00000000'B
T_ADD_Included	'0'B
T_ADD	Not present
PILOT_INC_Included	'1'B
PILOT_INC	'0010'B
RAND_Included	'0'B
RAND	Not present
LP_SEC_Included	'1'B
LP_SEC	'00000000'B
LTM_OFF_Included	'1'B
LTM_OFF	'000000'B
DAYLT_Included	'1'B
DAYLT	'0'B
GCSNAL2AckTimer_Included	'1'B
GCSNAL2AckTimer	'00000001'B
GCSNASequenceContextTimer_Incl	'1'B
uded GCSNASequenceContextTimer	
	'00000101'B

Table 4.5.2C.4-7: ULInformationTransfer (Step 17, Table 4.5.2C.3-2)

Derivation Path: 36.508 Table 4.6.1-25			
Information Element	Value/remark	Comment	Condition
ULInformationTransfer ::= SEQUENCE {			
criticalExtensions CHOICE {			
c1 CHOICE {			
ulInformationTransfer-r8 SEQUENCE {			
<pre>dedicatedInformationType CHOICE {</pre>			
dedicatedInfoCDMA2000-1XRTT	Set according to Table 4.5.2C.4-8		
}			
}			
}			
}			
}			

Table 4.5.2C.4-8: 1xRTT GCSNA Encapsulated Registration message (Step 17, Table 4.5.2C.3-2)

Information Element	Value/remark	Comment	Condition
MessageID	'0000001'B	GCSNA1xCircuitS	
-		ervice message	
GCSNAOption	'0000001'B		
AlternativeGCSNAOption_INCL	'0'B		
IWSIDIncl	'0'B		
AckRequired	'1'B		
StopDupDetect	'0'B		
MessageSequence	Set by UE		
NumTLACEncapsulated1xL3PDU	'00'B		
Reserved	'0000'B		
1xLogicalChannel	'0'B		
1xProtocolRevision	'00000110'B		
MsgType	'0000001'B	Registration	
		message	
NumTLACHeaderRecords	'0001'B		
TLACHeaderRecordType	'0000'B		
TLACHeaderRecordLength	8 bits, Set by UE		
MSID_TYPE	'011'B		
MSID_LEN	4 bits, Set by UE		
MSID	Variable, Set by UE		
Reserved	'0000000'B		
1xL3PDULength	16 bits, Set by UE		
REG_TYPE	'0001'B	Power up	
		registration	
SLOT_CYCLE_INDEX	'010'B		
MOB_P_REV	8 bits, Set by UE		
SCM	8 bits, Set by UE		
MOB_TERM	'1'B		
RETURN_CAUSE	'1'B		
QPCH_SUPPORTED	'1'B		
ENHANCED_RC	'1'B		
UZID_INCL	'0'B		

Table 4.5.2C.4-9: 1xRTT CS Registration Accept Order (Step 18, Table 4.5.2C.3-2)

Information Element	Value/remark	Comment	Condition
MessageID	'0000001'B		
GCSNAOption	'0000001'B		
AlternativeGCSNAOption_INCL	'0'B		
IWSIDIncl	'0'B		
AckRequired	'0'B		
StopDupDetect	'0'B		
MessageSequence	6 bits, Set by SS		
NumTLACEncapsulated1xL3PDU	'00'B		
Reserved	'0000'B		
1xLogicalChannel	'0'B		
1xProtocolRevision	'00000110'B		
MsgType	'00000111'B	Order message	
NumTLACHeaderRecords	'0000'B		
Reserved	'000'B		
1xL3PDULength	16 bits, Set by SS		
ORDER	'011011'B	Registration Accept Order	
ADD_RECORD_LEN	'001'B		
ORDQ	'00000000'B		

Table 4.5.2C.4-10: ATTACH ACCEPT (Step 14, Table 4.5.2C.3-2)

Derivation Path: 36.508 clause 4.7.2			
Information Element	Value/remark	Comment	Condition
EPS attach result	'0001'B	EPS only	
EMM cause	'0001 0010'B	#18 "CS domain	combined_E
		not available"	PS_IMSI

4.5.3 Generic Radio Bearer Establishment (State 3)

Editor note: The default parameter and system information will depend on progress in Clause 4.4, once it is finalised RAN5 can refer to them accordingly.

4.5.3.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall be in Registered, Idle Mode state (State 2).

4.5.3.2 Definition of system information messages

4.5.3.3 Procedure

The establishment of generic radio bearer connection is assumed to always be mobile terminated.

Table 4.5.3.3-1: Generic Radio Bearer establishment procedure (state 2 to state 3)

Step	Procedure		Message Sequence
		U-S	Message
1	CC condo a Paning magazina to the UE on the	<	RRC: SYSTEM INFORMATION (BCCH)
2	SS sends a <i>Paging</i> message to the UE on the appropriate paging block, and including the UE identity in one entry of the IE <i>pagingRecordLists</i> .	<	RRC: Paging (PCCH)
3	UE transmits an RRCConnectionRequest message.	>	RRC: RRCConnectionRequest
4	SS transmit an <i>RRCConnectionSetup</i> message.	<	RRC: RRCConnectionSetup
5	The UE transmits an RRCConnectionSetupComplete message to confirm the successful completion of the connection establishment and to initiate the session management procedure by including the SERVICE REQUEST message. (State3)	^	RRC: RRCConnectionSetupComplete NAS: SERVICE REQUEST
6	The SS transmits a SecurityModeCommand message to activate AS security.	<	RRC: SecurityModeCommand
7	The UE transmits a SecurityModeComplete message and establishes the initial security configuration.	>	RRC: SecurityModeComplete
8	The SS configures a new data radio bearer, associated with the default EPS bearer context. IF the test case using state 3 as an initial state is using N additional data radio bearers (0 ≤ N ≤ 7), the RRCConnectionReconfiguration message contains the configuration of these additional data radio bearers in the drb-ToAddModify IE and one ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST message per additional data radio bearer. The RRCConnectionReconfiguration message is using condition SRB2-DRB(1+n, m) where n and m are the number of DRBs associated with dedicated EPS bearer contexts and configured respectively with RLC-AM and RLC-UM (n+m = N).	<	RRC: RRCConnectionReconfiguration NAS: ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST
-	EXCEPTION: the steps 9 and 10a1 to 10a3 (if present) happen in any order.	-	-
9	The UE transmits an RRCConnectionReconfigurationComplete message to confirm the establishment of the new data radio bearer, associated with the default EPS bearer context.	>	RRC: RRCConnectionReconfigurationComplet e
10a1	IF N ≥ 1 (see step 8), the UE transmits an ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT message matching with the 1st ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST message included in step 8.	^	RRC: ULInformationTransfer NAS: ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT
10a2	IF N ≥ 2 (see step 8), the UE transmits an ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT message matching with the 2nd ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST message included in step 8.	>	RRC: ULInformationTransfer NAS: ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT
10a3	IF N ≥ 3 (see step 8), the UE transmits an ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT message matching with the 3rd ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST message included in step 8.	>	RRC: ULInformationTransfer NAS: ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT

10a4	IF N ≥ 4 (see step 8), the UE transmits an ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT message matching with the 4th ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST message included in step 8.	^	RRC: ULInformationTransfer NAS: ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT
10a5	IF N ≥ 5 (see step 8), the UE transmits an ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT message matching with the 5th ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST message included in step 8.	>	RRC: ULInformationTransfer NAS: ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT
10a6	IF N ≥ 6 (see step 8), the UE transmits an ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT message matching with the 6th ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST message included in step 8.	>	RRC: ULInformationTransfer NAS: ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT
10a7	IF N = 7 (see step 8), the UE transmits an ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT message matching with the 7th ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST message included in step 8.	>	RRC: ULInformationTransfer NAS: ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT

4.5.3.4 Specific message contents

All specific message contents shall be referred to clause 4.6 and 4.7.

4.5.3A Generic Radio Bearer Establishment, UE Test Mode Activated (State 3A)

Editor's note: The default parameter and system information will depend on progress in Clause 4.4, once it is finalised RAN5 can refer to them accordingly.

4.5.3A.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall be in Registered, Idle Mode state, UE Test Mode Activated (State 2A for Signalling testing).
- The UE shall be in Registered, Idle Mode state, UE Test Mode Activated (State 2A-RF for RF and RRM testing).

4.5.3A.2 Definition of system information messages

The default system information messages are used.

4.5.3A.3 Procedure

Same procedure as specified in the procedure in clause 4.5.3.3.

4.5.3A.4 Specific message contents

All specific message contents shall be referred to clause 4.6, 4.7 and 4.7A.

4.5.3B Generic Radio Bearer Establishment, pre-registered on HRPD (State 3B)

Editor note: The default parameter and system information will depend on progress in Clause 4.4, once it is finalised RAN5 can refer to them accordingly.

4.5.3B.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall be in Registered, Idle Mode state, pre-registered on HRPD (State 2B).

4.5.3B.2 Definition of system information messages

The default system information messages are used.

4.5.3B.3 Procedure

Same procedure as specified in the procedure in clause 4.5.3.3.

4.5.3B.4 Specific message contents

All specific message contents shall be referred to clause 4.6, 4.7 and 4.7A.

4.5.3C Generic Radio Bearer Establishment, pre-registered on 1xRTT (State 3C)

Editor note: The default parameter and system information will depend on progress in Clause 4.4, once it is finalised RAN5 can refer to them accordingly.

4.5.3C.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall be in Registered, Idle Mode state, pre-registered on 1xRTT (State 2C).

4.5.3C.2 Definition of system information messages

The default system information messages are used.

4.5.3C.3 Procedure

Same procedure as specified in the procedure in clause 4.5.3.3.

4.5.3C.4 Specific message contents

All specific message contents shall be referred to clause 4.6, 4.7 and 4.7A.

4.5.4 Loopback Activation (State 4)

4.5.4.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall be in Generic RB Establishment state, UE Test Mode Activated (State 3A).

4.5.4.2 Definition of system information messages

The default system information messages are used.

4.5.4.3 Procedure

Table 4.5: 4.3-1: Loopback activation procedure (state 3A to state 4)

Step	Procedure	Direction	Message Sequence
		UE - SS	Message
1	The SS transmits a CLOSE UE TEST LOOP	<	RRC: DLInformationTransfer
	message to enter the UE test loop mode.		TC: CLOSE UE TEST LOOP
2	The UE transmits a CLOSE UE TEST LOOP	>	RRC: ULInformationTransfer
	COMPLETE message to confirm that loopback		TC: CLOSE UE TEST LOOP
	entities for the radio bearer(s) have been		COMPLETE
	created and loop back is activated (State 4).		

4.5.4.4 Specific message contents

All specific message contents shall be referred to clause 4.6 and 4.7A.

4.5.5 HRPD registration (State H2)

Editor's note: The default parameter and system information will depend on progress in Clause 4.4, once it is finalised RAN5 can refer to them accordingly.

4.5.5.1 Initial conditions

System Simulator:

- Cell 1 and Cell 15.
- Cell 1 has a lower reselection priority than Cell 15.
- Cell 15 is transmitting default overhead messages.

User Equipment:

- The Test USIM shall be inserted (State 1).

4.5.5.2 Definition of system information messages

The default overhead messages as specified in clause 4.4 are used.

4.5.5.3 Procedure

Editor note: procedure needs to be specified.

4.5.5.4 Specific message contents

Editor's note: message contents need to be specified where necessary.

4.5.5A HRPD registration, pre-registration on E-UTRAN (State H2A)

Editor's note: The default parameter and system information will depend on progress in Clause 4.4, once it is finalised RAN5 can refer to them accordingly.

4.5.5A.1 Initial conditions

System Simulator:

- Cell 1 and Cell 15.
- Cell 1 has a lower reselection priority than Cell 15.
- Cell 15 is transmitting default overhead messages.

User Equipment:

- The Test USIM shall be inserted (State 1).

4.5.5A.2 Definition of system information messages

The default overhead messages as specified in clause 4.4 are used.

4.5.5A.3 Procedure

Editor's note: procedure needs to be specified.

4.5.5A.4 Specific message contents

Editor's note: message contents need to be specified where necessary.

4.5.6 HRPD session establishment (State H3)

Editor's note: The default parameter and system information will depend on progress in Clause 4.4, once it is finalised RAN5 can refer to them accordingly.

4.5.6.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall be in HRPD Registered, Dormant Mode state (State H2).

4.5.6.2 Definition of system information messages

The default overhead messages as specified in clause 4.4 are used.

4.5.6.3 Procedure

Editor's note: procedure needs to be specified.

4.5.6.4 Specific message contents

Editor's note: message contents need to be specified where necessary.

4.5.6A HRPD session establishment, pre-registered on E-UTRAN (State H3A)

Editor's note: The default parameter and system information will depend on progress in Clause 4.4, once it is finalised RAN5 can refer to them accordingly.

4.5.6A.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall be in HRPD Registered, Dormant Mode, pre-registered on E-UTRAN state (State H2A).

4.5.6A.2 Definition of system information messages

The default overhead messages as specified in clause 4.4 are used.

4.5.6A.3 Procedure

Same procedure as specified in the procedure in clause 4.5.6.3

4.5.6A.4 Specific message contents

Editor's note: message contents need to be specified where necessary.

4.5A Other generic procedures

4.5A.1 Procedure for IP address allocation in the U-plane

The purpose of this procedure is to allow the successful completion of IP address allocation if it is initiated by the UE therefore the result from the execution of the Procedure for IP address allocation in the U-plane shall not lead to assignment of a verdict.

Depending on the UE configuration there may be unpredictable delay in the start of the procedure. A guarding time of 1.2 sec is suggested within which the procedure is expected to start. If the timer expires then the test procedure, from which the Procedure for IP address allocation in the U-plane is called, shall advance to the next specified step.

Table 4.5A.1-1: Procedure for IP address allocation in the U-plane

Step	Procedure		Message Sequence
		U-S	Message
-	EXCEPTION: Step 1 below and Step 1 in	-	-
	Table 4.5A.1-2 describe behaviour that		
	depends on the contents of the latest PDN		
	CONNECTIVITY REQUEST message sent by		
	the UE prior to this procedure.		
-	EXCEPTION: In parallel to the event	-	-
	described in step 1 below the step specified in		
	Table 4.5A.1-2 may take place.		
1	If the "PDN type" in the latest PDN	-	-
	CONNECTIVITY REQUEST message prior to		
	this procedure was 'IPv4' or 'IPv4v6' then,		
	IPv4 address allocation by DHCPv4 may		
	occur on the user plane bearer established for		
	the default EPS bearer context activated with		
	the latest ACTIVATE DEFAULT EPS		
	BEARER CONTEXT message prior to this		
	procedure.		

Table 4.5A.1-2: Procedure for IP address allocation in the U-plane, parallel behaviour

Step	Procedure	Message Sequence	
		U - S	Message
1	If the "PDN type" in the latest PDN	-	-
	CONNECTIVITY REQUEST message prior to		
	this procedure was 'IPv6' or 'IPv4v6' then		
	stateless address auto configuration occurs		
	on the user plane bearer established for the		
	default EPS bearer context activated with the		
	latest ACTIVATE DEFAULT EPS BEARER		
	CONTEXT message prior to this procedure.		

4.5A.2 Tracking area updating procedure

The procedure is defined in table 4.5A.2.1-1.

Table 4.5A.2.1-1: Tracking area updating procedure

Step	Procedure	Message Sequence	
		U - S	Message
1	The SS transmits system information on the	<	RRC: SYSTEM INFORMATION (BCCH)
	cell specified in the test case.		
2	The UE transmits an RRCConnectionRequest	>	RRC: RRCConnectionRequest
	message on the cell specified in the test case.		
3	SS transmits an RRCConnectionSetup	<	RRC: RRCConnectionSetup
	message.		
4	The UE transmits an	>	RRC: RRCConnectionSetupComplete
	RRCConnectionSetupComplete message to		NAS: TRACKING AREA UPDATE
	confirm the successful completion of the		REQUEST
	connection establishment and a TRACKING		
	AREA UPDATE REQUEST message is sent to		
	update the registration of the actual tracking		
	area.		
5	SS responds with TRACKING AREA UPDATE	<	RRC: DLInformationTransfer
	ACCEPT message.		NAS: TRACKING AREA UPDATE
			ACCEPT
6	The UE transmits a TRACKING AREA	>	RRC: ULInformationTransfer
	UPDATE COMPLETE		NAS: TRACKING AREA UPDATE
			COMPLETE
7	The SS transmits an RRCConnectionRelease	<	RRC: RRCConnectionRelease
	message to release RRC connection and		
	move to RRC IDLE.	l	

NOTE 1: The periodic tracking area updating timer T3412 is deactivated by default during the attach procedure (TS 36.508 clause 4.7.2).

NOTE 2: The SS does not initiate authentication and NAS SECURITY MODE COMMAND are not performed (reuse of keys allocated during the attach procedure).

4.5A.3 Procedure for IMS signalling

The purpose of this procedure is to allow the successful completion of IMS signalling if it is initiated by the UE.

The UE may initiate IMS registration according TS 24.229 [40] clause 5.1. The procedure is applicable for UEs with IMS support (TS 36.523-2 A.4.4-1/25).

Table 4.5A.3-1: Procedure for IMS signalling in the U-plane

Step	Procedure	Message Sequence	
		U - S	Message
1-9	Void	-	-
-	EXCEPTION: Steps 10a1 to 10a2b1 describe		
	a transaction that depends on the UE capability		
10a1	IF pc_IMS then the SS starts timer Timer_1 = 10 s (Note 1)	-	-
-	EXCEPTION: Steps 10a2a1 to 10a2b1 describe a transaction that depends on the UE implementation	-	-
10a2 a1-	Registration procedure according TS 34.229-1 [43] subclause C.2 (steps 3-11)	-	-
10a2 a9	Note: SS cancels timer Timer_1 at step 10a2a1.		
10a2 b1	The SS waits for Timer_1 expiry	-	-
Note 1: Depending on the UE configuration there may be unpredictable delay in the start of the procedure. A guarding time of [10] sec is suggested within which the procedure is expected to start. If the timer expires then the test procedure, from which the Procedure for IMS signalling Uplane is called, shall advance to the next specified step			

4.5A.4 Generic Test Procedure for IMS Emergency call establishment in EUTRA: Normal Service

4.5A.4.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall be in Registered, Idle Mode state (State 2).

4.5A.4.2 Definition of system information messages

The default system information messages are used.

4.5A.4.3 Procedure

The establishment of IMS emergency call is assumed to always be mobile originated.

Table 4.5A.4.3-1: EUTRA/EPS signalling for IMS Emergency Call

St	Procedure		Message Sequence
		U - S	Message
1	Make the UE attempt an IMS emergency call	-	-
2	The UE transmits an RRCConnectionRequest message with 'establishmentCause' set to 'emergency'.	>	RRCConnectionRequest
3	SS transmit an RRCConnectionSetup message.	<	RRC: RRCConnectionSetup
4	The UE transmits an RRCConnectionSetupComplete message to confirm the successful completion of the connection establishment and to initiate the session management procedure by including the SERVICE REQUEST message.	>	RRC: RRCConnectionSetupComplete NAS: SERVICE REQUEST
5	The SS transmits a SecurityModeCommand message to activate AS security.	<	RRC: SecurityModeCommand
6	The UE transmits a SecurityModeComplete message and establishes the initial security configuration.	>	RRC: SecurityModeComplete
7	The SS configures a new data radio bearer, associated with the default EPS bearer context. The RRCConnectionReconfiguration message is using condition SRB2-DRB(1, 0). The DRB associated with default EPS bearer context obtained during the attach procedure is established	<	RRC: RRCConnectionReconfiguration
8	The UE transmits an RRCConnectionReconfigurationComplete message to confirm the establishment of the new data radio bearer, associated with the default EPS bearer context.	>	RRC: RRCConnectionReconfigurationComplet e
9	The UE transmits a PDN CONNECTIVITY REQUEST message to request an additional PDN, with 'Request type' set to 'emergency ('0100'B)'.	>	PDN CONNECTIVITY REQUEST
10	The SS configures a new data radio bearer, associated with the default EPS bearer context. RRCConnectionReconfiguration message contains the ACTIVATE DEFAULT EPS BEARER CONTEXT REQUEST message. EPS bearer context #2 (QCI 5) according to table 6.6.1-1: Reference default EPS bearer context is used. Note: The APN is set to the test APN defined for emergency bearer services.	<	RRC: RRCConnectionReconfiguration NAS: ACTIVATE DEFAULT EPS BEARER CONTEXT REQUEST
-	EXCEPTION: In parallel to the events described in steps 11 to 15 below, the behaviour in table 4.5A.4.3-2 occurs. (Optional IP address allocation followed by IMS emergency registration and IMS emergency speech call establishment)	-	-
11	The UE transmits an RRCConnectionReconfigurationComplete message to confirm the establishment of the new data radio bearer, associated with the default EPS bearer for emergency call.	>	RRC: RRCConnectionReconfigurationComplet e
12	The UE transmits an ACTIVATE DEFAULT EPS BEARER CONTEXT ACCEPT message.	>	RRC: ULInformationTransfer NAS:ACTIVATE DEFAULT EPS BEARER CONTEXT ACCEPT
13	The SS configures a new RLC-UM data radio bearer, associated with the dedicated EPS bearer context. RRCConnectionReconfiguration message contains the ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST message. EPS bearer context #4 (QCI 1) according to table 6.6.2-1: Reference dedicated EPS bearer contexts is used. Note: the same PDN address is applicable because the linked EPS bearer ID refers to the default EBC allocated in step 10	<	RRC: RRCConnectionReconfiguration NAS: ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST
14	The UE transmits an RRCConnectionReconfigurationComplete message to confirm the establishment of the new data radio bearer, associated with the default EPS bearer for emergency IMS signalling.	>	RRC: RRCConnectionReconfigurationComplet e

15	The UE transmits an ACTIVATE DEDICATED EPS	>	RRC: ULInformationTransfer
	BEARER CONTEXT ACCEPT message.		NAS:ACTIVATE DEDICATED EPS
			BEARER CONTEXT ACCEPT

Table 4.5A.4.3-2: Parallel behaviour

St	Procedure		Message Sequence
		U - S	Message
-	EXCEPTION: Step 1 describes behaviour that depends on the UE behaviour.	-	-
1	If initiated by the UE the generic procedure for IP address allocation in the U-plane specified in TS 36.508 subclause 4.5A.1 takes place performing IP address allocation in the U-plane.	-	-
2-5	Steps 1-4 expected sequence defined in annex C.20 of TS 34.229-1 [35]. Emergency registration procedure is performed.	-	-
6- 10	Steps 1-5 defined in annex C.22 of TS 34.229-1 [35]. IMS Emergency call for EPS is established.	-	-

4.5A.4.4 Specific message contents

All specific message contents shall be referred to clause 4.6 and 4.7 with the exceptions below.

Table 4.5A.4.4-1: Message ACTIVATE DEFAULT EPS BEARER CONTEXT REQUEST (step 10, Table 4.5A.4.3-1)

Derivation path: Table 4.7.3-6 and table 4.6.1-8 with condition AM-DRB-ADD(2)					
Information Element	Value/Remark	Comment	Condition		
Access point name	APN-1	SS uses the test APN defined for emergency bearer services			
EPS QoS	According to reference default EPS bearer context #2 – in table 6.6.1-1	SS defines an additional dedicated EPS QoS			

Table 4.5A.4.4-3: Message ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST (step 13, Table 4.5A.4.3-1)

Derivation path: Table 4.7.3-3 and table 4.6.1-8 with co	Derivation path: Table 4.7.3-3 and table 4.6.1-8 with condition UM-DRB-ADD(3)				
Information Element	Value/Remark	Comment	Condition		
Linked EPS bearer identity	Default EBId-2 (same value like in table 4.5A.4.4-1)				
EPS QoS	According to reference dedicated EPS bearer context #1 - in table 6.6.2-1	SS defines an additional dedicated EPS QoS			
TFT	According to reference dedicated EPS bearer context #1 - in table 6.6.2-1				

4.5A.5 Generic Test Procedure for IMS Emergency call establishment in EUTRA: Limited Service

4.5A.5.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE is switched on and camped on the cell in EMM-DEREGISTERED.LIMITED-SERVICE state.

4.5A.5.2 Definition of system information messages

4.5A.5.3 Procedure

The establishment of IMS emergency call is assumed to always be mobile originated.

Table 4.5A.5.3-1: EUTRA/EPS signalling for IMS Emergency Call in limited service

St	Procedure	Message Sequence		
		U-S	Message	
1	Make the UE attempt an IMS emergency call	-	-	
2	The UE transmits an RRCConnectionRequest	>	RRCConnectionRequest	
	message with 'establishmentCause' set to 'emergency'.			
3	SS transmits an RRCConnectionSetup message.	<	RRC: RRCConnectionSetup	
4	The UE transmits an	>	RRC: RRCConnectionSetupComplete	
	RRCConnectionSetupComplete message to confirm the successful completion of the connection establishment and to initiate the Attach procedure by including the ATTACH REQUEST message, EPS attach type set to "EPS emergency attach" ('0110'B). The PDN CONNECTIVITY REQUEST message is piggybacked in ATTACH REQUEST, with 'Request type' set to 'emergency ('0100'B)'.		NAS: ATTACH REQUEST NAS: PDN CONNECTIVITY REQUEST	
-	EXCEPTION: Steps 5a1 to 5a2b1 describe behaviour that depends on the UE ID sent in the ATTACH REQUEST message in step 4 and take place only if the UE does not send IMEI.	-	-	
5a1	The SS transmits an AUTHENTICATION REQUEST message to initiate the EPS authentication and AKA procedure.	<	RRC: DLInformationTransfer NAS: AUTHENTICATION REQUEST	
-	EXCEPTION: Steps 5a2a1 to 5a2b1 describe		-	
	behaviour that depends on the UE state; the "lower case letter" identifies a step sequence that takes place if the UE is in a particular state.	-		
5a2	UE transmits an AUTHENTICATION	>	RRC: ULInformationTransfer	
a1	RESPONSE message and establishes mutual		NAS: AUTHENTICATION RESPONSE	
<i>F</i> •	authentication.		DDO: III late mass tis. T	
5a2 b1	UE transmits an AUTHENTICATION FAILURE message with EMM cause #20 "MAC failure" or EMM cause #21 "synch failure". (Note 2)	>	RRC: ULInformationTransfer NAS: AUTHENTICATION FAILURE	
6a1	Void	-	-	
6b1	Void	-	-	
7	The SS transmits a NAS SECURITY MODE COMMAND message to activate NAS security selecting. Note: If UE has sent Authentication Failure in step 5a2b16b1 or the behaviour described in steps 5a1 to 5a2b1 does not take place, KSI value is set to "000" and EIA0 (NULL integrity), and EEA0 (NULL ciphering) algorithms are used.	<	RRC: DLInformationTransfer NAS: SECURITY MODE COMMAND	
8	The UE transmits a NAS SECURITY MODE COMPLETE message and establishes the initial security configuration.	>	RRC: ULInformationTransfer NAS: SECURITY MODE COMPLETE	
-	EXCEPTION: Steps 9a1 to 9a2 describe behaviour that depends on UE configuration; the "lower case letter" identifies a step sequence that take place if the UE has ESM information which needs to be transferred.	-	-	
9a1	IF the UE sets the ESM information transfer flag in the last PDN CONNECTIVITY REQUEST message THEN the SS transmits an ESM INFORMATION REQUEST message to initiate exchange of protocol configuration options and/or APN.	<	RRC: DLInformationTransfer NAS: ESM INFORMATION REQUEST	
9a2	The UE transmits an ESM INFORMATION RESPONSE message to transfer protocol configuration options and/or APN.	>	RRC: ULInformationTransfer NAS: ESM INFORMATION RESPONSE	

10	The SS transmits a SecurityModeCommand message to activate AS security. Note: If UE has sent Authentication Failure in step 5a2b1, or the behaviour described in steps 5a1 to 5a2b1 does not take place, then, eia0 (NULL integrity), and eea0 (NULL ciphering) algorithms are used.	~	RRC: SecurityModeCommand
44			DDC: Consult Mada Comments
11	The UE transmits a SecurityModeComplete	>	RRC: SecurityModeComplete
	message and establishes the initial security		
	configuration.		
12	The SS transmits a UECapabilityEnquiry	<	RRC: UECapabilityEnquiry
	message to initiate the UE radio access		
	capability transfer procedure.		
13	The UE transmits a UECapabilityInformation	>	RRC: UECapabilityInformation
	message to transfer UE radio access		, ,
	capability.		
14	The SS transmits an	<	RRC: RRCConnectionReconfiguration
17	RRCConnectionReconfiguration message to		NAS: ATTACH ACCEPT
	establish the default bearer with condition		NAS: ACTIVATE DEFAULT EPS BEARER
	SRB2-DRB(1, 0). The DRB associated with		CONTEXT REQUEST
	default EPS bearer context #2 (QCI 5)		
	according to table 6.6.1-1: Reference default		
	EPS bearer contexts, obtained during the		
	attach procedure, is established.		
	This message includes the ATTACH ACCEPT		
	message with EPS attach result set to "EPS		
	only" ('001'B). The ACTIVATE DEFAULT EPS		
	BEARER CONTEXT REQUEST message is		
	piggybacked in ATTACH ACCEPT.		
	Note: The APN is set to the test APN defined		
	for emergency bearer services		
-	EXCEPTION: In parallel to the events	-	-
	described in steps 15 to 19 below, the		
	behaviour in table 4.5A.5.3-2 occurs. (Optional		
	IP address allocation followed by IMS		
	emergency speech call establishment)		
15	The UE transmits an	>	RRC: RRCConnectionReconfigurationComplete
'0	RRCConnectionReconfigurationComplete		Take Take Commedian Recording and a complete
	message to confirm the establishment of		
	default bearer.		
16	This message includes the ATTACH	>	RRC: ULInformationTransfer
10	COMPLETE message. The ACTIVATE	/	NAS: ATTACH COMPLETE
	DEFAULT EPS BEARER CONTEXT ACCEPT		
			NAS: ACTIVATE DEFAULT EPS BEARER
	message is piggybacked in ATTACH		CONTEXT ACCEPT
4-	COMPLETE.		DDC: DDCCommodica December 1
17	The SS configures a new RLC-UM data radio	<	RRC: RRCConnectionReconfiguration
	bearer, associated with the dedicated EPS		NAS:
	bearer context.		ACTIVATE DEDICATED EPS BEARER CONTEXT
	RRCConnectionReconfiguration message		REQUEST
	contains the ACTIVATE DEDICATED EPS		
	BEARER CONTEXT REQUEST message.		
	EPS bearer context #4 (QCI 1) according to table 6.6.2-1: Reference dedicated EPS bearer		
	contexts is used.		
	Note: the same DDN - data 1 1 11		
	Note: the same PDN address is applicable		
	because the linked EPS bearer ID refers to the		
	default EBC allocated in step 10		
18	The UE transmits an	>	RRC: RRCConnectionReconfigurationComplete
	RRCConnectionReconfigurationComplete		
	message to confirm the establishment of the		
	new data radio bearer, associated with the		
	default EPS bearer for emergency IMS		
	signalling.		
19	The UE transmits an ACTIVATE DEDICATED	>	RRC: ULInformationTransfer
	EPS BEARER CONTEXT ACCEPT message.		NAS:ACTIVATE DEDICATED EPS BEARER
			CONTEXT ACCEPT

Note 1: Void

Note 2: EMM cause #26 "non-EPS authentication unacceptable" is not expected to happen as SS will not set the

"separation bit" in the AMF field of AUTN as 0

Table 4.5A.5.3-2: Parallel behaviour

St	Procedure		Message Sequence		
		U-S	Message		
-	EXCEPTION: Step 1 describes behaviour that depends on the UE behaviour.	-	-		
1	If initiated by the UE the generic procedure for IP address allocation in the U-plane specified in TS 36.508 subclause 4.5A.1 takes place performing IP address allocation in the U-plane.	-	-		
2-6	Steps 1-5 defined in annex C.22 of TS 34.229-1 [35]. IMS Emergency call for EPS is established.	-	-		

4.5A.5.4 Specific message contents

All specific message contents shall be referred to clause 4.6 and 4.7 with the exceptions below.

Table 4.5A.5.4-1: SECURITY MODE COMMAND (step 7, Table 4.5A.5.3-1)

Derivation Path: Table 4.7.2-19			
Information Element	Value/remark	Comment	Condition
Type of integrity protection algorithm	Set according to PIXIT parameter for default integrity protection algorithm		NOT NullAlgorith mUsed
	EIA0		NullAlgorith mUsed
Type of ciphering algorithm	Set according to PIXIT parameter for default ciphering algorithm EEA0		NOT NullAlgorith mUsed NullAlgorith mUsed
NAS key set identifier			
NAS key set identifier	The valid NAS key set identifier.		NOT NullAlgorith mUsed
	'000'B		NullAlgorith mUsed
TSC	'0'B	native security context (for KSI _{ASME})	
Spare half octet	'0000'B		

Condition	Explanation
NullAlgorithmUsed UE has sent Authentication Failure in step <u>5a</u> b1 (Table 4.5A.5.3-1), or the behaviour	
	described in steps 5a1 to 5a2b1 does not take place (Table 4.5A.5.3-1).

Table 4.5A.5.4-2: SecurityModeCommand (step 10, Table 4.5A.5.3-1)

Derivation Path: Table 4.6.1-19			
Information Element	Value/remark	Comment	Condition
SecurityModeCommand ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC-		
	TransactionIdentifier-DL		
criticalExtensions CHOICE {			
c1 CHOICE{			
securityModeCommand-r8 SEQUENCE {			
securityConfigSMC	SecurityConfigSMC- LimitedService	Table 4.5A.5.4-3	
nonCriticalExtension SEQUENCE {}	Not present		
}			
}			
}			
}			

Table 4.5A.5.4-3: SecurityConfigSMC-LimitedService (Table 4.5A.5.4-2)

Derivation Path: Table 4.6.4-2			
Information Element	Value/remark	Comment	Condition
SecurityConfigSMC- LimitedService ::= SEQUENCE {			
securityAlgorithmConfig SEQUENCE {			
cipheringAlgorithm	Set according to PIXIT parameter for default ciphering algorithm		NOT NullAlgorith mUsed
	eea0		NullAlgorith mUsed
integrityProtAlgorithm	Set according to PIXIT parameter for default integrity protection algorithm		NOT NullAlgorith mUsed
}	eia0		NullAlgorith mUsed

Condition	Explanation		
NullAlgorithmUsed	UE has sent Authentication Failure in step 5a2b1 (Table 4.5A.5.3-1), or the behaviour		
	described in steps 5a1 to 5a2b1 (Table 4.5A.5.3-1) does not take place.		

Table 4.5A.5.4-4: Message ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST (step 17, Table 4.5A.5.3-1)

Information Element	Value/Remark	Comment	Condition
Linked EPS bearer identity	Default EBId-2 (same		
	value as in table		
	4.5A.5.4-4)		
EPS QoS	See Reference dedicated		
	EPS bearer context #4 in		
	table 6.6.2-1		
TFT	See Reference dedicated		
	EPS bearer context #4 in		
	table 6.6.2-1		

Table 4.5A.5.4-5: Message ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST (step 14, Table 4.5A.5.3-1)

Derivation path: Table 4.7.3-6 and table 4.6.1-8 with condition AM-DRB-ADD(2)						
Information Element	Value/Remark	Comment	Condition			
Access point name	APN-1	SS uses the test APN defined for emergency bearer services				
EPS QoS	According to reference default EPS bearer context #2 – in table 6.6.1-1	SS defines an additional dedicated EPS bearer				

4.5A.6 Generic Test Procedure for IMS MO speech call establishment in E-UTRA

4.5A.6.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall be in Registered, Idle Mode state (State 2).

4.5A.6.2 Definition of system information messages

4.5A.6.3 Procedure

Table 4.5A.6.3-1: EUTRA/EPS signalling for IMS MO speech call

St	Procedure	Message Sequence		
		U-S	Message	
1	Make the UE attempt an IMS speech call	-	-	
2	The UE transmits an RRCConnectionRequest message	>	RRCConnectionRequest	
	with ' establishmentCause' set to ' mo-Data '.			
3	SS transmit an RRCConnectionSetup message.	<	RRC: RRCConnectionSetup	
4	The UE transmits an RRCConnectionSetupComplete	>	RRC: RRCConnectionSetupComplete	
	message to confirm the successful completion of the		NAS: SERVICE REQUEST	
	connection establishment and to initiate the session			
	management procedure by including the SERVICE			
	REQUEST message.		DD0 0 "144 1 0 1	
5	The SS transmits a SecurityModeCommand message	<	RRC: SecurityModeCommand	
	to activate AS security.		DDC: Consuit Made Commiste	
6	The UE transmits a SecurityModeComplete message	>	RRC: SecurityModeComplete	
7	and establishes the initial security configuration.		DDC: DDCCompostion Deconfiguration	
7	The SS configures a new data radio bearer, associated with the default EPS bearer context.	<	RRC: RRCConnectionReconfiguration	
	The RRCConnectionReconfiguration message is using			
	condition SRB2-DRB(1, 0). The DRB associated with			
	default EPS bearer context obtained during the attach			
	procedure is established			
_	EXCEPTION: In parallel to the events described in	_	-	
	steps 8 below, the behaviour in table 4.5A.6.3-2 occurs.			
	(IMS MTSI MO speech call establishment)			
8	The UE transmits an	>	RRC:	
	RRCConnectionReconfigurationComplete message to		RRCConnectionReconfigurationComplet	
	confirm the establishment of the new data radio bearer,		е	
	associated with the default EPS bearer context.			
9-11	Steps 3-4 expected sequence defined in annex C.21 of	-	-	
	TS 34.229-1 [35]. MTSI MO speech call for EPS.			
12	The SS configures a new RLC-UM data radio bearer	<	RRC: RRCConnectionReconfiguration	
	with condition DRB (0,1), associated with the dedicated		NAS:	
	EPS bearer context. RRCConnectionReconfiguration		ACTIVATE DEDICATED EPS BEARER	
	message contains the ACTIVATE DEDICATED EPS		CONTEXT REQUEST	
	BEARER CONTEXT REQUEST message. EPS bearer			
	context #4 (QCI 1) according to table 6.6.2-1: Reference dedicated EPS bearer contexts.			
	EXCEPTION: In parallel to the events described in	_	_ _	
	steps 13-14 below, the behaviour in table 4.5A.6.3-3	_		
	occurs. (IMS MTSI MO speech call establishment)			
	cost.c. (iiiie iiii o iiii o opooon oan ootabiioiiiioiit)			
13	The UE transmits an	>	RRC:	
	RRCConnectionReconfigurationComplete message to		RRCConnectionReconfigurationComplet	
	confirm the establishment of the new data radio bearer,		е	
	associated with the dedicated EPS bearer.			
14	The UE transmits an ACTIVATE DEDICATED EPS	>	RRC: ULInformationTransfer	
	BEARER CONTEXT ACCEPT message.		NAS:ACTIVATE DEDICATED EPS	
			BEARER CONTEXT ACCEPT	

Table 4.5A.6.3-2: Parallel behaviour

St	Procedure	Message Sequence	
		U-S	Message
1	Step 2 expected sequence defined in annex	-	-
	C.21 of TS 34.229-1 [35]. UE sends INVITE.		

Table 4.5A.6.3-3: Parallel behaviour

St	Procedure	Message Sequence	
		U-S	Message
1-8	Steps 5-13 expected sequence defined in annex C.21 of TS 34.229-1 [35]. MTSI MO	-	-
	speech call for EPS.		

4.5A.6.4 Specific message contents

All specific message contents shall be referred to clause 4.6 and 4.7.

4.5A.7 Generic Test Procedure for IMS MT Speech call establishment in E-UTRA

4.5A.7.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall be in Registered, Idle Mode state (State 2).

4.5A.7.2 Definition of system information messages

4.5A.7.3 Procedure

Table 4.5A.7.3-1: EUTRA/EPS signalling for IMS MT speech call

St	St Procedure		Message Sequence		
		U - S	Message		
1	SS sends a <i>Paging</i> message to the UE on the appropriate paging block, and including the UE identity in one entry of the IE <i>pagingRecordLists</i> .	<	RRC: Paging (PCCH)		
2	The UE transmits an RRCConnectionRequest message with 'establishmentCause' set to 'mt-Access'.	>	RRCConnectionRequest		
3	SS transmit an RRCConnectionSetup message.	<	RRC: RRCConnectionSetup		
4	The UE transmits an RRCConnectionSetupComplete message to confirm the successful completion of the connection establishment and to initiate the session management procedure by including the SERVICE REQUEST message.	>	RRC: RRCConnectionSetupComplete NAS: SERVICE REQUEST		
5	The SS transmits a SecurityModeCommand message to activate AS security.	<	RRC: SecurityModeCommand		
6	The UE transmits a SecurityModeComplete message and establishes the initial security configuration.	>	RRC: SecurityModeComplete		
7	The SS configures a new data radio bearer, associated with the default EPS bearer context. The RRCConnectionReconfiguration message is using condition SRB2-DRB(1, 0). The DRB associated with default EPS bearer context obtained during the attach procedure is established	<	RRC: RRCConnectionReconfiguration		
8	The UE transmits an RRCConnectionReconfigurationComplete message to confirm the establishment of the new data radio bearer, associated with the default EPS bearer context.	^	RRC: RRCConnectionReconfigurationComplet e		
9-12	Steps 1-4 expected sequence defined in annex C.11 of TS 34.229-1 [35]. MTSI MT speech call.	-	-		
13	The SS configures a new RLC-UM data radio bearer with condition DRB (0,1), associated with the dedicated EPS bearer context. <i>RRCConnectionReconfiguration</i> message contains the ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST message.	<	RRC: RRCConnectionReconfiguration NAS: ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST		
14	The UE transmits an RRCConnectionReconfigurationComplete message to confirm the establishment of the new data radio bearer, associated with the dedicated EPS bearer.	>	RRC: RRCConnectionReconfigurationComplet e		
15	The UE transmits an ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT message.	>	RRC: ULInformationTransfer NAS:ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT		
16- 22	Steps 5-11 expected sequence defined in annex C.11 of TS 34.229-1 [35]. MTSI MT speech.	-	-		
23A	Step 11A expected sequence defined in annex C.11 of TS 34.229-1 [35]. MTSI MT speech.	-	-		
23- 24	Steps 12-13 expected sequence defined in annex C.11 of TS 34.229-1 [35]. MTSI MT speech.	-	-		
25- 26	Steps 14-15 expected sequence defined in annex C.11 of TS 34.229-1 [35]. MTSI MT speech.	-	-		

4.5A.7.4 Specific message contents

All specific message contents shall be referred to clause 4.6 and 4.7.

4.5A.8 Generic Test Procedure for IMS MO video call establishment in E-UTRA

4.5A.8.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall be in Registered, Idle Mode state (State 2).

4.5A.8.2 Definition of system information messages

4.5A.8.3 Procedure

Table 4.5A.8.3-1: EUTRA/EPS signalling for IMS MO video call

St	Procedure		Message Sequence		
		U - S	Message		
1	Make the UE attempt an IMS video call	-	-		
2	The UE transmits an RRCConnectionRequest message	>	RRCConnectionRequest		
	with ' establishmentCause' set to ' mo-Data '.		,		
3	SS transmit an RRCConnectionSetup message.	<	RRC: RRCConnectionSetup		
4	The UE transmits an RRCConnectionSetupComplete	>	RRC: RRCConnectionSetupComplete		
	message to confirm the successful completion of the		NAS: SERVICE REQUEST		
	connection establishment and to initiate the session				
	management procedure by including the SERVICE				
	REQUEST message.				
5	The SS transmits a SecurityModeCommand message	<	RRC: SecurityModeCommand		
	to activate AS security.		·		
6	The UE transmits a SecurityModeComplete message	>	RRC: SecurityModeComplete		
	and establishes the initial security configuration.				
7	The SS configures a new data radio bearer, associated	<	RRC: RRCConnectionReconfiguration		
	with the default EPS bearer context.				
	The RRCConnectionReconfiguration message is using				
	condition SRB2-DRB(1, 0). The DRB associated with				
	default EPS bearer context obtained during the attach				
	procedure is established				
-	EXCEPTION: In parallel to the events described in	-	-		
	steps 8 below, the behaviour in table 4.5A.8.3-2 occurs.				
	(IMS_MTSI MO video call establishment)				
8	The UE transmits an	>	RRC:		
	RRCConnectionReconfigurationComplete message to		RRCConnectionReconfigurationComplet		
	confirm the establishment of the new data radio bearer,		е		
0.44	associated with the default EPS bearer context.				
9-11	Steps 3-4 expected sequence defined in annex C.25 of	-	-		
12	TS 34.229-1 [35]. MTSI MO video call for EPS. The SS configures two new RLC-UM data radio bearers		RRC: RRCConnectionReconfiguration		
12	with condition DRB (0,2), associated with the dedicated	<	NAS:		
	EPS bearer context. RRCConnectionReconfiguration		ACTIVATE DEDICATED EPS BEARER		
	message contains one ACTIVATE DEDICATED EPS		CONTEXT REQUEST		
	BEARER CONTEXT REQUEST message per		ACTIVATE DEDICATED EPS BEARER		
	additional data radio bearer. One EPS bearer context		CONTEXT REQUEST		
	#4 (QCI 1) and one EPS bearer context #3 (QCI 2)		CONTEXT REQUEST		
	according table 6.6.2-1: Reference dedicated EPS				
	bearer contexts.				
_	EXCEPTION: In parallel to the events described in	_	-		
	steps 13-14 below, the behaviour in table 4.5A.8.3-3				
	occurs. (IMS MTSI MO video call establishment).				
13	The UE transmits an	>	RRC:		
.	RRCConnectionReconfigurationComplete message to		RRCConnectionReconfigurationComplet		
	confirm the establishment of the new data radio bearer,		e		
	associated with the dedicated EPS bearer. EPS bearer				
	context #4 (QCI 1) according table to 6.6.2-1:				
	Reference dedicated EPS bearer contexts.				
14	The UE transmits an ACTIVATE DEDICATED EPS	>	RRC: ULInformationTransfer		
	BEARER CONTEXT ACCEPT message for the first		NAS:ACTIVATE DEDICATED EPS		
	bearer.		BEARER CONTEXT ACCEPT		
15	The UE transmits an ACTIVATE DEDICATED EPS	>	RRC: ULInformationTransfer		
	BEARER CONTEXT ACCEPT message for the second		NAS:ACTIVATE DEDICATED EPS		
	bearer.		BEARER CONTEXT ACCEPT		

Table 4.5A.8.3-2: Parallel behaviour

St	Procedure	Message Sequence	
		U-S	Message
1	Step 2 expected sequence defined in annex	-	-
	C.25 of TS 34.229-1 [35]. UE sends INVITE.		

Table 4.5A.8.3-3: Parallel behaviour

St	Procedure	Message Sequence	
		U - S	Message
1-8	Steps 5-13 expected sequence defined in	-	-
	annex C.25 of TS 34.229-1 [35]. MTSI MO		
	video call for EPS.		

4.5A.8.4 Specific message contents

All specific message contents shall be referred to clause 4.6 and 4.7.

4.5A.9 Generic Test Procedure for IMS MT video call establishment in E-UTRA

4.5A.9.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall be in Registered, Idle Mode state (State 2).

4.5A.9.2 Definition of system information messages

4.5A.9.3 Procedure

Table 4.5A.9.3-1: EUTRA/EPS signalling for IMS MT video call

St	Procedure		Message Sequence		
		U - S	Message		
1	SS sends a Paging message to the UE on the	<	RRC: Paging (PCCH)		
	appropriate paging block, and including the UE identity				
	in one entry of the IE pagingRecordLists.				
2	The UE transmits an RRCConnectionRequest message	>	RRCConnectionRequest		
	with ' establishmentCause' set to 'mt-Access'.				
3	SS transmit an RRCConnectionSetup message.	<	RRC: RRCConnectionSetup		
4	The UE transmits an RRCConnectionSetupComplete	>	RRC: RRCConnectionSetupComplete		
	message to confirm the successful completion of the		NAS: SERVICE REQUEST		
	connection establishment and to initiate the session				
	management procedure by including the SERVICE				
	REQUEST message.		550.0 ".11.10		
5	The SS transmits a SecurityModeCommand message	<	RRC: SecurityModeCommand		
	to activate AS security.		DDC: Coough MadaCommists		
6	The UE transmits a SecurityModeComplete message	>	RRC: SecurityModeComplete		
7	and establishes the initial security configuration. The SS configures a new data radio bearer, associated		RRC: RRCConnectionReconfiguration		
_ ′	with the default EPS bearer context.	<	RRC. RRCConnectionReconliguration		
	The RRCConnectionReconfiguration message is using				
	condition SRB2-DRB(1, 0). The DRB associated with				
	default EPS bearer context obtained during the attach				
	procedure is established				
8	The UE transmits an	>	RRC:		
	RRCConnectionReconfigurationComplete message to		RRCConnectionReconfigurationComplet		
	confirm the establishment of the new data radio bearer,		е		
	associated with the default EPS bearer context.				
9-12	Steps 1-4 expected sequence defined in annex C.26 of	-	-		
	TS 34.229-1 [35]. MTSI MT video call.				
13	The SS configures a new RLC-UM data radio bearer	<	RRC: RRCConnectionReconfiguration		
	with condition DRB (0,2), associated with the dedicated		NAS:		
	EPS bearer context. RRCConnectionReconfiguration		ACTIVATE DEDICATED EPS BEARER		
	message contains one ACTIVATE DEDICATED EPS		CONTEXT REQUEST		
	BEARER CONTEXT REQUEST message per		ACTIVATE DEDICATED EPS BEARER		
	additional data radio bearer. One EPS bearer context		CONTEXT REQUEST		
	#4 (QCI 1) and one EPS bearer context #3 (QCI 2)				
	according table 6.6.2-1: Reference dedicated EPS bearer contexts.				
14	The UE transmits an		RRC:		
'4	RRCConnectionReconfigurationComplete message to	>	RRCConnectionReconfigurationComplet		
	confirm the establishment of the new data radio bearer,		e		
	associated with the dedicated EPS bearer.				
15	The UE transmits an ACTIVATE DEDICATED EPS	>	RRC: ULInformationTransfer		
.	BEARER CONTEXT ACCEPT message for the first	-	NAS:ACTIVATE DEDICATED EPS		
	bearer.		BEARER CONTEXT ACCEPT		
16	The UE transmits an ACTIVATE DEDICATED EPS	>	RRC: ULInformationTransfer		
	BEARER CONTEXT ACCEPT message for the second		NAS:ACTIVATE DEDICATED EPS		
	bearer.		BEARER CONTEXT ACCEPT		
17-	Steps 5-15 expected sequence defined in annex C.26	-	-		
27	of TS 34.229-1 [35]. MTSI MT video call for EPS.				

4.5A.9.4 Specific message contents

All specific message contents shall be referred to clause 4.6 and 4.7.

4.5A.10 Generic Test Procedure for IMS MO speech and aSRVCC in E-UTRA

4.5A.10.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall be in Registered, Idle Mode state (State 2).

4.5A.10.2 Definition of system information messages

The default system information messages are used.

4.5A.10.3 Procedure

Table 4.5A.10.3-1: EUTRA/EPS signalling for IMS MO speech to alerting state

St	Procedure	Message Sequence		
		U - S	Message	
1	Make the UE attempt an IMS speech call	-	-	
2	The UE transmits an RRCConnectionRequest message	>	RRCConnectionRequest	
	with ' establishmentCause' set to ' mo-Data '.			
3	SS transmit an RRCConnectionSetup message.	<	RRC: RRCConnectionSetup	
4	The UE transmits an RRCConnectionSetupComplete	>	RRC: RRCConnectionSetupComplete	
	message to confirm the successful completion of the		NAS: SERVICE REQUEST	
	connection establishment and to initiate the session			
	management procedure by including the SERVICE			
	REQUEST message.			
5	The SS transmits a SecurityModeCommand message	<	RRC: SecurityModeCommand	
	to activate AS security.			
6	The UE transmits a SecurityModeComplete message	>	RRC: SecurityModeComplete	
	and establishes the initial security configuration.			
7	The SS configures a new data radio bearer, associated	<	RRC: RRCConnectionReconfiguration	
	with the default EPS bearer context.			
	The RRCConnectionReconfiguration message is using			
	condition SRB2-DRB(1, 0). The DRB associated with			
	default EPS bearer context obtained during the attach			
	procedure is established			
-	EXCEPTION: In parallel to the events described in	-	-	
	steps 8 below, the behaviour in table 4.5A.10.3-2			
	occurs. Initiate MTSI MO speech.			
8	The UE transmits an	>	RRC:	
	RRCConnectionReconfigurationComplete message to		RRCConnectionReconfigurationComplet	
	confirm the establishment of the new data radio bearer,		е	
0.44	associated with the default EPS bearer context.			
9-11	Steps 3-4 expected sequence defined in annex C.21 of	-	-	
40	TS 34.229-1 [35]. MTSI MO speech call for EPS.		DDO: DDOO:	
12	The SS configures a new RLC-UM data radio bearer	<	RRC: RRCConnectionReconfiguration	
	with condition DRB (0,1), associated with the dedicated EPS bearer context. RRCConnectionReconfiguration		NAS: ACTIVATE DEDICATED EPS BEARER	
	message contains the ACTIVATE DEDICATED EPS		CONTEXT REQUEST	
	BEARER CONTEXT REQUEST message. EPS bearer		CONTEXT REQUEST	
	context #4 (QCI 1) according to table 6.6.2-1:			
	Reference dedicated EPS bearer contexts.			
	EXCEPTION: In parallel to the events described in	_	_	
	steps 13-14 below, the behaviour in table 4.5A.10.3-3	-		
	occurs. MTSI MO speech call to alerting state.			
13	The UE transmits an	>	RRC:	
.0	RRCConnectionReconfigurationComplete message to		RRCConnectionReconfigurationComplet	
	confirm the establishment of the new data radio bearer,		e	
	associated with the dedicated EPS bearer.			
14	The UE transmits an ACTIVATE DEDICATED EPS	>	RRC: ULInformationTransfer	
, , ,	BEARER CONTEXT ACCEPT message.		NAS:ACTIVATE DEDICATED EPS	
	ZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZZ		BEARER CONTEXT ACCEPT	

Table 4.5A.10.3-2: Parallel behaviour

St	Procedure	Message Sequence	
		U-S	Message
1	Step 2 expected sequence defined in annex	-	-
	C.21 of TS 34.229-1 [35]. UE sends INVITE.		

Table 4.5A.10.3-3: Parallel behaviour

St	Procedure	Message Sequence	
		U - S	Message
1-7	Steps 5-11 expected sequence defined in annex C.21 of TS 34.229-1 [35]. MTSI MO speech call to alerting state for EPS.	-	-

4.5A.10.4 Specific message contents

All specific message contents shall be referred to clause 4.6 and 4.7.

4.5A.11 Generic Test Procedure for IMS MO add video establishment in E-UTRA

4.5A.11.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall execute 4.5A.6.

4.5A.11.2 Definition of system information messages

4.5A.11.3 Procedure

Table 4.5A.11.3-1: EUTRA/EPS signalling for IMS MO add video

St	Procedure	Message Sequence	
		U-S	Message
1	Make the UE attempt add IMS video to the voice call.	1	-
2-4	Steps 2-4 expected sequence defined in expected	-	-
	sequence test case 17.1.4 of TS 34.229-1 [35]. MO		
	Speech, add video remove video.		
5	The SS configures a new RLC-UM data radio bearer	<	RRC: RRCConnectionReconfiguration
	with condition DRB (0,1), associated with the dedicated		NAS:
	EPS bearer context. RRCConnectionReconfiguration		ACTIVATE DEDICATED EPS BEARER
	message contains the ACTIVATE DEDICATED EPS		CONTEXT REQUEST
	BEARER CONTEXT REQUEST message. EPS bearer		
	context #3 (QCI 2) according to table 6.6.2-1:		
	Reference dedicated EPS bearer contexts.		
-	EXCEPTION: In parallel to the events described in	-	-
	steps 6-7 below, the behaviour in table 4.5A.11.3-2		
	occurs. (IMS MTSI MO video call establishment).		
6	The UE transmits an	>	RRC:
	RRCConnectionReconfigurationComplete message to		RRCConnectionReconfigurationComplet
	confirm the establishment of the new data radio bearer,		е
	associated with the dedicated EPS bearer. EPS bearer		
	context #3 (QCI 2) according table to 6.6.2-1:		
	Reference dedicated EPS bearer contexts.		
7	The UE transmits an ACTIVATE DEDICATED EPS	>	RRC: ULInformationTransfer
	BEARER CONTEXT ACCEPT message for the first		NAS:ACTIVATE DEDICATED EPS
	bearer.		BEARER CONTEXT ACCEPT

Table 4.5A.11.3-2: Parallel behaviour

St	Procedure	Message Sequence	
		U - S	Message
1-6	Steps 5-10 expected sequence defined in test case 17.1.4 of TS 34.229-1 [35]. MO Speech, add video remove video.	-	-

4.5A.11.4 Specific message contents

All specific message contents shall be referred to clause 4.6 and 4.7.

4.5A.12 Generic Test Procedure for IMS MT add video establishment in E-UTRA

4.5A.12.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall execute 4.5A.7.

4.5A.12.2 Definition of system information messages

4.5A.12.3 Procedure

Table 4.5A.12.3-1: EUTRA/EPS signalling for IMS MT add video

St	Procedure		Message Sequence
		U - S	Message
1-3	Steps 1-3 expected sequence defined in expected	-	-
	sequence test case 17.2.4 of TS 34.229-1 [35]. MT		
	Speech, add video remove video.		
4	The SS configures a new RLC-UM data radio bearer	<	RRC: RRCConnectionReconfiguration
	with condition DRB (0,1), associated with the dedicated		NAS:
	EPS bearer context. RRCConnectionReconfiguration		ACTIVATE DEDICATED EPS BEARER
	message contains the ACTIVATE DEDICATED EPS		CONTEXT REQUEST
	BEARER CONTEXT REQUEST message. EPS bearer		
	context #3 (QCI 2) according to table 6.6.2-1:		
	Reference dedicated EPS bearer contexts.		
5	The UE transmits an	>	RRC:
	RRCConnectionReconfigurationComplete message to		RRCConnectionReconfigurationComplet
	confirm the establishment of the new data radio bearer,		е
	associated with the dedicated EPS bearer. EPS bearer		
	context #3 (QCI 2) according table to 6.6.2-1:		
	Reference dedicated EPS bearer contexts.		
6	The UE transmits an ACTIVATE DEDICATED EPS	>	RRC: ULInformationTransfer
	BEARER CONTEXT ACCEPT message for the first		NAS:ACTIVATE DEDICATED EPS
	bearer.		BEARER CONTEXT ACCEPT
7-12	Steps 4-9 expected sequence defined in test case		
	17.1.4 of TS 34.229-1 [35]. MT Speech, add video		
	remove video.		

4.5A.12.4 Specific message contents

All specific message contents shall be referred to clause 4.6 and 4.7.

4.5A.13 Void

4.5A.14 Generic Test Procedure for IMS XCAP establishment in EUTRA

4.5A.14.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall be in Registered, Idle Mode state (State 2).
- If pc_XCAP_only_APN==true then the UE is connected to the IMS PDN only
- else the UE is connected to the IMS PDN and the Internet PDN which is used for XCAP signalling.

4.5A.14.2 Definition of system information messages

4.5A.14.3 Procedure

Table 4.5A.14.3-1: EUTRA/EPS signalling for XCAP

St	Procedure		Message Sequence
		U - S	Message
1	Make the UE attempt XCAP signalling.	-	-
2	The UE transmits an RRCConnectionRequest message	>	RRCConnectionRequest
	with ' establishmentCause' set to 'mo-Data '.		
3	SS transmit an RRCConnectionSetup message.	<	RRC: RRCConnectionSetup
4	The UE transmits an RRCConnectionSetupComplete	>	RRC: RRCConnectionSetupComplete
	message to confirm the successful completion of the		NAS: SERVICE REQUEST
	connection establishment and to initiate the session		
	management procedure by including the SERVICE		
	REQUEST message.		
5	The SS transmits a SecurityModeCommand message	<	RRC: SecurityModeCommand
	to activate AS security.		
6	The UE transmits a SecurityModeComplete message	>	RRC: SecurityModeComplete
	and establishes the initial security configuration.		
7	The SS configures a new data radio bearer, associated	<	RRC: RRCConnectionReconfiguration
	with the default EPS bearer context.		
	The RRCConnectionReconfiguration message is using		
	condition SRB2-DRB(1, 0) in case of		
	pc_XCAP_only_APN==true or using condition SRB2-		
	DRB(2, 0) in case of		
	pc_XCAP_over_Internet_APN==true. The DRBs		
	associated with the respective default EPS bearer		
	context obtained during the attach procedure are		
<u> </u>	established		DDC:
8	The UE transmits an	>	RRC:
	RRCConnectionReconfigurationComplete message to		RRCConnectionReconfigurationComplet
	confirm the establishment of the new data radio bearer,		e
	associated with the default EPS bearer context.		
	EXCEPTION:		
	IF pc_XCAP_only_APN THEN		
	additional PDN connectivity shall be established as		
	specified in TS 36.508 subclause 4.5A.16 (condition:		
	NOT ADD_IMS)		

4.5A.14.4 Specific message contents

All specific message contents shall be referred to clause 4.6 and 4.7.

4.5A.15 Generic Test Procedure for EPS Bearer Deactivation

4.5A.15.1 Initial conditions

The EPS bearer to be deactivated has been established before. The EPS bearer has to be specified.

4.5A.15.2 Definition of system information messages

The system information messages applicable in the test case are used.

4.5A.15.3 Procedure

Table 4.5A.15.3-1: Procedure for EPS Bearer Deactivation

Step	Procedure	Message Sequence		
		U - S	Message	
1	The SS transmits an RRCConnectionReconfiguration message to deactivate an EPS bearer.	<	RRC: RRCConnectionReconfiguration NAS: DEACTIVATE EPS BEARER CONTEXT REQUEST	
-	EXCEPTION: In parallel to the event described in step2 the step specified in Table 4.5A.15.3-2 should take place.	-	-	
2	The UE transmits an RRCConnectionReconfigurationComplete message to confirm the deactivation of EPS bearer.	>	RRC: RRCConnectionReconfigurationComplete	
3	Void	-	-	

Table 4.5A.15.3-2: Procedure for EPS Bearer Deactivation (parallel behaviour)

Step	Procedure	Message Sequence		
		U - S	Message	
1	The UE transmits an ULInformationTransfer	>	RRC: ULInformationTransfer	
	message to accept deactivation of the EPS		NAS: DEACTIVATE EPS BEARER CONTEXT	
	bearer.		ACCEPT	

4.5A.15.4 Specific message contents

Table 4.5A.15.4-1: Message DEACTIVATE EPS BEARER CONTEXT REQUEST (step 1, Table 4.5A.15.3-1)

Information Element	Value/Remark	Comment	Condition
EPS bearer identity	EPS bearer identity	Same value as in the activation message.	
ESM cause	00100100	regular deactivation	

Table 4.5A.15.4-2: Message DEACTIVATE EPS BEARER CONTEXT ACCEPT (step 2, Table 4.5A.15.3-1)

Derivation Path:Table 4.7.3-11			
Information Element	Value/remark	Comment	Condition
EPS bearer identity	EPS bearer identity	The same value as the value set in DEACTIVATE EPS BEARER CONTEXT REQUEST message.	
Procedure transaction identity	0	No procedure transaction identity assigned	

4.5A.16 Generic Test Procedure to establish additional PDN connectivity

The same assumptions and definitions apply as in clause 4.5.2and in addition:

Condition	Explanation
ADD_IMS	true if this procedure is part of the intitial registration (step 16c1 in table 4.5.2.3-1 AND
	PDN2_IMS==true;
	false for all other cases

4.5A.16.1 Initial conditions

System Simulator:

- 1 cell, default parameters.
- The procedure shall be performed under ideal radio conditions as defined in clause 5

User Equipment:

- The UE is in Registered, RRC_CONNECTED state (State 2).

4.5A.16.2 Definition of system information messages

The default system information messages are used.

4.5A.16.3 Procedure

Table 4.5A.16.3-1: Establishment of additional PDN connectivity

St	Procedure	Message Sequence	
		U-S	Message
1	The UE transmits a PDN CONNECTIVITY REQUEST	>	RRC: ULInformationTransfer
	message to request an additional PDN.		NAS: PDN CONNECTIVITY REQUEST
2	The SS configures a new data radio bearer, associated	<	RRC: RRCConnectionReconfiguration
	with the additional default EPS bearer context.		NAS:
	RRCConnectionReconfiguration message contains the		ACTIVATE DEFAULT EPS BEARER
	ACTIVATE DEFAULT EPS BEARER CONTEXT		CONTEXT REQUEST
	REQUEST message.		
3	The UE transmits an	>	RRC:
	RRCConnectionReconfigurationComplete message to		RRCConnectionReconfigurationComplet
	confirm the establishment of additional default bearer.		е
-	EXCEPTION: In parallel to the event described in step		
	4 below, if initiated by the UE the generic procedure for		
	IP address allocation in the U-plane specified in TS		
	36.508 subclause 4.5A.1 takes place performing IP		
	address allocation in the U-plane.		
-	EXCEPTION: IF ADD_IMS THEN in parallel to the		
	event described in step 4 below the generic procedure		
	for IMS signalling in the U-plane specified in TS 36.508		
	subclause 4.5A.3 takes place if requested by the UE		
4	The UE transmits an ACTIVATE DEFAULT EPS	>	RRC: ULInformationTransfer
	BEARER CONTEXT ACCEPT message.		NAS:ACTIVATE DEFAULT EPS
			BEARER CONTEXT ACCEPT

4.5A.16.4 Specific message contents

All specific message contents shall be referred to clause 4.6 and 4.7 with the exceptions below.

Table 4.5A.16.4-1: PDN CONNECTIVITY REQUEST (step 1)

Derivation Path: Table 4.7.3-20			
Information Element	Value/remark	Comment	Condition
Access point name	Any allowed value	The UE includes a new APN.	

Table 4.5A.16.4-2: Message ACTIVATE DEFAULT EPS BEARER CONTEXT REQUEST (step 2)

Derivation path: Table 4.7.3-6 with condition IMS_PDN_ConnEs			nd
table 4.6.1-8 with condition AM-DRB-ADD(1) for Information Element	Value/Remark	Comment	Condition
EPS bearer identity	'0101'B	arbitrary value used for PDN connectivity being maintained during the test case	ADD_IMS
EPS bearer identity	'1100'B	arbitrary value used for additional non-IMS PDN connectivity	NOT ADD_IMS
Procedure transaction identity	PTI-1	SS re-uses the particular PTI defined by UE for this present additional PDN connectivity request procedure	

Table 4.5A.16.4-3: Message ACTIVATE DEFAULT EPS BEARER CONTEXT ACCEPT (step 4)

Derivation path: Table 4.7.3-4			
Information Element	Value/Remark	Comment	Condition
EPS bearer identity	(same value as used in step 2)		
Procedure transaction identity	0	No procedure transaction identity assigned	

4.5A.17 Generic Test Procedure for user initiated release of additional PDN connectivity

4.5A.17.1 Initial conditions

System Simulator:

- 1 cell, default parameters.
- The procedure shall be performed under ideal radio conditions as defined in clause 5

User Equipment:

- The UE shall be in Registered, Idle Mode state (State 2) with connectivity at least to two PDNs

4.5A.17.2 Definition of system information messages

The default system information messages are used.

4.5A.17.3 Procedure

Table 4.5A.17.3-1: Release of additional PDN connectivity

St	Procedure		Message Sequence			
		U - S	Message			
1	Cause the UE to request disconnection from the additional PDN (see Note 1)					
2	The UE transmits an RRCConnectionRequest	>	RRCConnectionRequest			
3	SS transmit an RRCConnectionSetup message.	<	RRC: RRCConnectionSetup			
4	The UE transmits an RRCConnectionSetupComplete message to confirm the successful completion of the connection establishment and to initiate the session management procedure by including the SERVICE REQUEST message.	>	RRC: RRCConnectionSetupComplete NAS: SERVICE REQUEST			
5	The SS transmits a SecurityModeCommand message to activate AS security.	<	RRC: SecurityModeCommand			
6	The UE transmits a SecurityModeComplete message and establishes the initial security configuration.	>	RRC: SecurityModeComplete			
7	The SS transmits a RRCConnectionReconfiguration message to establish SRB2 and DRBs associated with all default EPS bearer contexts	<	RRC: RRCConnectionReconfiguration			
8	The UE transmits an RRCConnectionReconfigurationComplete message to confirm the establishment of SRB2 and DRBs associated with all default EPS bearer contexts.	>	RRC: RRCConnectionReconfigurationComplet e			
9	The UE transmits a PDN DISCONNECT REQUEST	>	RRC: ULInformationTransfer PDN DISCONNECT REQUEST			
10	The SS transmits a DEACTIVATE EPS BEARER CONTEXT REQUEST message included in an RRCConnectionReconfiguration message.	<	RRC: RRCConnectionReconfiguration NAS: DEACTIVATE EPS BEARER CONTEXT REQUEST			
11	The UE transmits an RRCConnectionReconfigurationComplete message to confirm the release of the bearer.	>	RRC: RRCConnectionReconfigurationComplet e			
12	The UE transmits a DEACTIVATE EPS BEARER CONTEXT ACCEPT message.	>	RRC: ULInformationTransfer DEACTIVATE EPS BEARER CONTEXT ACCEPT			
13	The SS transmits an RRCConnectionRelease message to release RRC connection	<	RRC: RRCConnectionRelease			
NOTE	NOTE 1: The request to disconnect from a PDN may be performed by MMI or AT command; in any case the EPS bearer identity of the Default EPS Bearer of the PDN to be released needs to be handed over to the UE					

4.5A.17.4 Specific message contents

All specific message contents shall be referred to clause 4.6 and 4.7 with the exceptions below.

Table 4.5A.17.4-1: RRCConnectionReconfiguration (step 7)

Derivation path: 36.508 table 4.6.1-8 using condition SRB2-DRB(2, 0)

NOTE: The bid for the AM DRBs shall be 1 and 8 instead of 1 and 2.

Table 4.5A.17.4-2: PDN DISCONNECT REQUEST (step 9)

Information Element	Value/remark	Comment	Condition
EPS bearer identity	'0000'	"no EPS bearer identity assigned"	
Procedure transaction identity	PTI-1	UE assigns a particular PTI not yet used between 1 and 254	
Linked EPS bearer identity	(bearer identity as handed over at step 1)		

Table 4.5A.17.4-3: RRCConnectionReconfiguration (step 10)

Derivation path: 36.508 table 4.6.1-8 using condition DRB-REL(8)

Table 4.5A.17.4-4: DEACTIVATE EPS BEARER CONTEXT REQUEST (step 10)

Derivation Path: TS 36.508 Table 4.7.3-12			
Information Element	Value/remark	Comment	Condition
EPS bearer identity	(same as in Linked EPS bearer identity of step 9)		
Procedure transaction identity	PTI-1	SS re-uses the particular PTI defined by UE for this present PDN disconnection procedure.	UE- INITIATED
ESM cause	00100100	regular deactivation	

Table 4.5A.17.4-5: DEACTIVATE EPS BEARER CONTEXT ACCEPT (step 12)

Derivation Path: TS 36.508 Table 4.7.3-11			
Information Element	Value/remark	Comment	Condition
EPS bearer identity	(same as in DEACTIVATE EPS BEARER CONTEXT REQUEST of step 10)	The same value as the value set in DEACTIVATE EPS BEARER CONTEXT REQUEST message.	
Procedure transaction identity	0	No procedure transaction identity assigned	

4.5A.18 Generic Test Procedure for network initiated release of additional PDN connectivity

4.5A.18.1 Initial conditions

System Simulator:

- 1 cell, default parameters.
- The procedure shall be performed under ideal radio conditions as defined in clause 5

User Equipment:

- The UE shall be in Registered, Idle Mode state (State 2) with connectivity at least to two PDNs

4.5A.18.2 Definition of system information messages

The default system information messages are used.

4.5A.18.3 Procedure

Table 4.5A.18.3-1: Release of additional PDN connectivity

St	Procedure	Message Sequence	
		U - S	Message
1-7	Steps 1 to 7 of the generic radio bearer establishment		
	procedure (TS 36.508 4.5.3.3-1)		
8	The SS transmits a RRCConnectionReconfiguration	<	RRC: RRCConnectionReconfiguration
	message to establish SRB2 and DRBs associated with		
	all default EPS bearer contexts		
9	The UE transmits an	>	RRC:
	RRCConnectionReconfigurationComplete message to		RRCConnectionReconfigurationComplet
	confirm the establishment of SRB2 and DRBs		е
	associated with all default EPS bearer contexts.		
10	SS releases the PDN connectivity by transmitting a	<	RRC: RRCConnectionReconfiguration
	RRCConnectionReconfiguration containing a		NAS: DEACTIVATE EPS BEARER
	DEACTIVATE EPS BEARER CONTEXT REQUEST		CONTEXT REQUEST
11	The UE transmits an	>	RRC:
	RRCConnectionReconfigurationComplete message to		RRCConnectionReconfigurationComplet
	confirm the release of the bearer.		е
12	The UE transmits a DEACTIVATE EPS BEARER	>	DEACTIVATE EPS BEARER CONTEXT
	CONTEXT ACCEPT message.		ACCEPT
13	The SS transmits an RRCConnectionRelease message	<	RRC: RRCConnectionRelease
	to release RRC connection		

4.5A.18.4 Specific message contents

All specific message contents shall be referred to clause 4.6 and 4.7 with the exceptions below.

Table 4.5A.18.4-1: RRCConnectionReconfiguration (step 8)

Derivation path: 36.508 table 4.6.1-8 using condition SRB2-DRB(2, 0)	
NOTE: The bid for the AM DRBs shall be 1 and 8 instead of 1 and 2.	

Table 4.5A.18.4-2: RRCConnectionReconfiguration (step 10)

Derivation path: 36.508 table 4.6.1-8 using condition DRB-REL(8)

Table 4.5A.18.4-3: DEACTIVATE EPS BEARER CONTEXT REQUEST (step 10)

Derivation Path: TS 36.508 Table 4.7.3-12			
Information Element	Value/remark	Comment	Condition
EPS bearer identity	(identity of default EPS		
	bearer associated with		
	the PDN to be released)		
ESM cause	00011010	Insufficient	
		resources	
T3396	Deactivated		Rel-10

Table 4.5A.18.4-4: DEACTIVATE EPS BEARER CONTEXT ACCEPT (step 12)

Derivation Path: TS 36.508 Table 4.7.3-11			
Information Element	Value/remark	Comment	Condition
EPS bearer identity	(same as in DEACTIVATE EPS BEARER CONTEXT REQUEST of step 10)	The same value as the value set in DEACTIVATE EPS BEARER CONTEXT REQUEST message.	
Procedure transaction identity	0	No procedure transaction identity assigned	

4.6 Default RRC message and information elements contents

This clause contains the default values of common RRC messages and information elements, which unless indicated otherwise in specific clauses of TS 36.521-1 [21], TS 36.521-3 [34], TS 36.523-1 [18] and other clauses in this specification. All the messages and information elements are listed in alphabetical order.

4.6.1 Contents of RRC messages

CounterCheck

Table 4.6.1-0a: CounterCheck

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
CounterCheck ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC-		
	TransactionIdentifier-DL		
criticalExtensions CHOICE {			
c1 CHOICE {			
counterCheck-r8 SEQUENCE {			
drb-CountMSB-InfoList	Set according to specific		
	message content		
nonCriticalExtension SEQUENCE {}	Not present		
}			
}			
}			
}		•	

CounterCheckResponse

Table 4.6.1-0b: CounterCheckResponse

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
CounterCheckResponse ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC- TransactionIdentifier-UL		
criticalExtensions CHOICE {			
counterCheckResponse-r8 SEQUENCE {			
drb-CountInfoList	Set according to specific message content		
nonCriticalExtension SEQUENCE {}	Not checked		
}			
}			
}			

CSFBParametersRequestCDMA2000

Table 4.6.1-1: CSFBParametersRequestCDMA2000

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
CSFBParametersRequestCDMA2000 ::=			
SEQUENCE {			
criticalExtensions CHOICE {			
csfbParametersRequestCDMA2000-r8			
SEQUENCE {			
nonCriticalExtension SEQUENCE {}	Not checked		
}			
}			
}			

CSFBParametersResponseCDMA2000

Table 4.6.1-2: CSFBParametersResponseCDMA2000

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
CSFBParametersResponseCDMA2000 ::=			
SEQUENCE {			
rrc-TransactionIdentifier	RRC-		
	TransactionIdentifier-DL		
criticalExtensions CHOICE {			
csfbParametersResponseCDMA2000-r8			
SEQUENCE {			
rand	Set according to specific		
	message content		
mobilityParameters	Set according to specific		
	message content		
nonCriticalExtension SEQUENCE {}	Not present		
}			
}			
}			

DLInformationTransfer

Table 4.6.1-3: DLInformationTransfer

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
DLInformationTransfer ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC-		
	TransactionIdentifier-DL		
criticalExtensions CHOICE {			
c1 CHOICE {			
dlInformationTransfer-r8 SEQUENCE {			
dedicatedInfoType CHOICE {			
dedicatedInfoNAS	Set according to specific		
	message content		
}			
nonCriticalExtension SEQUENCE {}	Not present		
}			
}			
}			
}		·	

- HandoverFromEUTRAPreparationRequest

Table 4.6.1-4: HandoverFromEUTRAPreparationRequest

Derivation Path: 36.331 clause 6.2.2		•	
Information Element	Value/remark	Comment	Condition
HandoverFromEUTRAPreparationRequest ::=			
SEQUENCE {			
rrc-TransactionIdentifier	RRC-		
	TransactionIdentifier-DL		
criticalExtensions CHOICE {			
c1 CHOICE {			
handoverFromEUTRAPreparationRequest-r8			
SEQUENCE {			
cdma2000-Type	type1XRTT		
rand	A random value,		
	generated by the SS		
mobilityParameters	Set according to specific		
	message content		
nonCriticalExtension SEQUENCE {}	Not present		
}			
}		•	
}			
}			

LoggedMeasurementConfiguration

Table 4.6.1-4.0A: LoggedMeasurementConfiguration

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
LoggedMeasurementConfiguration-r10 ::=			
SEQUENCE {			
criticalExtensions CHOICE {			
c1 CHOICE {			
loggedMeasurementConfiguration-r10 SEQUENCE {			
traceReference-r10 SEQUENCE {			
plmn-Identity-r10 SEQUENCE {			
mcc SEQUENCE (SIZE (3)) OF MCC- NMC-Digit	See table 4.4.2-2		
mnc SEQUENCE (SIZE (23)) OF MCC- NMC-Digit	See table 4.4.2-2		
}			
traceld-r10	ʻ0EF'H	OCTET STRING (SIZE (3))	
}			
traceRecordingSessionRef-r10	'1A'H	OCTET STRING (SIZE (2))	
tce-ld-r10	'5'H	OCTET STRING (SIZE (1))	
absoluteTimeInfo-r10	Set to value corresponding to the absolute time when the	BIT STRING (SIZE (48)), see TS 36.331 clause	
and a Comfiguration at 0	message is sent	6.3.6 for format.	
areaConfiguration-r10 loggingDuration-r10	Not present min120	ENUMERATED {	
loggingDuration-i 10	11111120	min10, min20, min40, min60, min90, min120, spare2, spare1}	
loggingInterval-r10	ms10240	ENUMERATED { ms1280, ms2560, ms5120, ms10240, ms20480, ms30720, ms40960, ms61440}	
nonCriticalExtension SEQUENCE {}	Not present		
}			
}			
}			
}			

MBMSCountingRequest

Table 4.6.1-4AA: MBMSCountingRequest

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
MBMSCountingRequest-r10 ::= SEQUENCE {			
countingRequestList-r10 SEQUENCE (SIZE (1			
maxServiceCount)) OF SEQUENCE {			
tmgi-r10 SEQUENCE {			
plmn-ld-r9 CHOICE{			
plmn-Index-r9	1		
}			
serviceld-r9	'000000'O	MBMS service ID (TS 24.008 clause 10.5.6.13), OCTET STRING (SIZE (3))	
}			
}			
lateNonCriticalExtension	Not present		
nonCriticalExtension SEQUENCE {}	Not present		
}			

MBMSCountingResponse

Table 4.6.1-4AB: MBMSCountingResponse

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
MBMSCountingResponse-r10 ::= SEQUENCE {			
criticalExtensions CHOICE {			
c1 CHOICE{			
countingResponse-r10 OF SEQUENCE {			
mbsfn-AreaIndex-r10	Not present		
countingResponseList-r10 SEQUENCE (SIZE (1 maxServiceCount)) OF SEQUENCE {			
countingResponseService-r10	0		
}			
lateNonCriticalExtension	Not present		
nonCriticalExtension SEQUENCE {}	Not present		
}			
}			
}			
}			

MBMSInterestIndication

Table 4.6.1-4AC: MBMSInterestIndication

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
criticalExtensions CHOICE {			
c1 CHOICE{			
interestIndication-r11 OF SEQUENCE {			
mbms-FreqList-r11[n] SEQUENCE (SIZE	The number of entries is	INTEGER	
(1maxFreqMBMS-r11)) OF { INTEGER	set according to specific	(0maxEARFCN2	
(0maxEARFCN2) }	message content.)	
mbms-Priority-r11	Not checked	ENUMERATED	
		{true}	
lateNonCriticalExtension	Not present		
nonCriticalExtension SEQUENCE {}	Not present		
}			
}			
}			

- MBSFNAreaConfiguration

Table 4.6.1-4A: MBSFNAreaConfiguration

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
MBSFNAreaConfiguration-r9 ::= SEQUENCE {			
commonSF-Alloc-r9 SEQUENCE (SIZE			
(1maxMBSFN-Allocations)) OF SEQUENCE {			
radioframeAllocationPeriod	n4		
radioframeAllocationOffset	1		FDD
	0		TDD
subframeAllocation CHOICE {			
oneFrame	'100000'B		FDD
	'000010'B		TDD
}			
}			
commonSF-AllocPeriod-r9	rf8		
pmch-InfoList-r9 SEQUENCE (SIZE (0maxPMCH-			
PerMBSFN)) OF SEQUENCE {			
pmch-Config-r9 SEQUENCE {			
sf-AllocEnd-r9	1		
dataMCS-r9	0		
mch-SchedulingPeriod-r9	rf8		
}			
mbms-SessionInfoList-r9 SEQUENCE (SIZE			
(0maxSessionPerPMCH)) OF SEQUENCE {			
MBMS-SessionInfo-r9 SEQUENCE {			
tmgi-r9 SEQUENCE {			
plmn-ld-r9 CHOICE{			
plmn-Index-r9	1		
}			
serviceld-r9	'000000'O	OCTET STRING	
		(SIZE (3))	
}			
sessionId-r9	Not present		
logicalChannelIdentity-r9	1		
}			
}			
}			

MeasurementReport

Table 4.6.1-5: MeasurementReport

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
MeasurementReport ::= SEQUENCE {			
criticalExtensions CHOICE {			
c1 CHOICE {			
measurementReport-r8 SEQUENCE {			
measResults	Set according to specific		
	message content		
nonCriticalExtension SEQUENCE {}	Not checked		
}			
}			
}			
}			

MobilityFromEUTRACommand

Table 4.6.1-6: MobilityFromEUTRACommand

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
MobilityFromEUTRACommand ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC-		
	TransactionIdentifier-DL		
criticalExtensions CHOICE {			
c1 CHOICE {			
mobilityFromEUTRACommand-r8 SEQUENCE {			
csFallbackIndicator	Set according to specific		
	message content		
purpose CHOICE {	Set according to specific		
	message content		
handover			
cellChangeOrder			
}			
nonCriticalExtension SEQUENCE {}	Not present		
}			
}			
}			-
}			

Paging

Table 4.6.1-7: Paging

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
Paging ::= SEQUENCE {			
pagingRecordList SEQUENCE (SIZE (1maxPageRec)) OF SEQUENCE {	1 entry		
ue-Identity[1] CHOICE {			
s-TMSI	Set to the value of the S- TMSI of the UE		
}			
cn-Domain[1]	ps		
}			
systemInfoModification	Not present		
etws-Indication	Not present		
nonCriticalExtension SEQUENCE {}	Not present		

RRCConnectionReconfiguration

Table 4.6.1-8: RRCConnectionReconfiguration

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
RRCConnectionReconfiguration ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC- TransactionIdentifier-DL		
criticalExtensions CHOICE {			
c1 CHOICE{			
rrcConnectionReconfiguration-r8 SEQUENCE {	Notarasast		
measConfig	Not present MeasConfig-DEFAULT		MEAS
mobilityControlInfo	Not present		IVIEAS
	MobilityControlInfo-HO		HO, HO-TO- EUTRA
dedicatedInfoNASList	Not present		
	Set according to specific message content		SRB2- DRB(n, m) DRB(n, m) SRB1- SRB2- DRB(n,m) AM-DRB- ADD(bid) UM-DRB- ADD(bid) DRB- REL(bid)
			DRB-Mod
radioResourceConfigDedicated	Not present		
	RadioResourceConfigDe		SRB2-
	dicated-SRB2-DRB(n, m)		DRB(n, m)
	RadioResourceConfigDe		DRB(n, m)
	dicated-DRB(n, m)		1
	RadioResourceConfigDe dicated-AM-DRB-ADD(bid)		AM-DRB- ADD(bid)
	RadioResourceConfigDe dicated-UM-DRB-ADD(bid)		UM-DRB- ADD(bid)
	RadioResourceConfigDe		DRB-
	dicated-DRB-REL(bid)		REL(bid)
	RadioResourceConfigDe dicated-HO		НО
	RadioResourceConfigDe dicated-HO-TO-		HO-TO- EUTRA(n,m
	EUTRA(n, m))
	RadioResourceConfigDe dicated-DRB-Mod		DRB-Mod
	RadioResourceConfigDe		SCell_AddM
	dicated-SCell_AddMod		od od
	RadioResourceConfigDe		PCell-
	dicated-PCell-PATTERN		PATTERN
securityConfigHO	Not present		
	SecurityConfigHO- DEFAULT		HO, HO-TO- EUTRA
nonCriticalExtension SEQUENCE {	JEI NOET		LOTIVA
lateNonCriticalExtension	Not present		1
nonCriticalExtension SEQUENCE {			
otherConfig-r9	Not present		
otherConfig-r9	OtherConfig-r9		OtherConfig
fullConfig-r9	Not present		
nonCriticalExtension SEQUENCE {			
sCellToReleaseList-r10	Not present		
sCellToAddModList-r10	Not present		1
sCellToAddModList-r10 SEQUENCE (SIZE (1maxSCell-r10)) OF SEQUENCE {	1 entry		SCell_AddM od
sCellToAddMod[1]	SCellToAddMod-r10-		
	DEFAULT		

}		
nonCriticalExtension	Not present	
}		
}		
}		
}		
}		
}		
}		

Condition	Explanation
SRB2-DRB(n,m)	Establishment of a SRB and DRB combination with n x AM DRB and m x UM DRB
	(including establishment of SRB2)
DRB(n,m)	Establishment of additional n x AM DRB:s and m x UM DRB:s (SRB2 should already be
	established)
AM-DRB-ADD(bid)	Establishment of a single additional AM DRB with bearer identity bid (SRB2 should already
	be established)
UM-DRB-ADD(bid)	Establishment of a single additional UM DRB with bearer identity bid (SRB2 should already
	be established)
DRB-REL(bid)	Release of the DRB with bearer identity bid
НО	Intra LTE handover
MEAS	A measurement is configured
HO-TO-EUTRA(n,m)	Inter-RAT handover to E-UTRA including the establishment of a SRB1, SRB2 and n x AM
	DRB plus m x UM DRB
DRB-Mod	Modification of already established DRB ID 2 and is used for sending Modify EPS Bearer
	Context Request message (SRB2 should already be established)
SCell_AddMod	Addition or modification of SCell
PCell-PATTERN	elCIC Serving Cell Pattern
OtherConfig	Other Configuration is configured

RRCConnectionReconfigurationComplete

Table 4.6.1-9: RRCConnectionReconfigurationComplete

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
RRCConnectionReconfigurationComplete ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC-		
	TransactionIdentifier-UL		
criticalExtensions CHOICE {			
rrcConnectionReconfigurationComplete-r8 SEQUENCE {			
nonCriticalExtension SEQUENCE {}	Not checked		
}			
}			
}			

RRCConnectionReestablishment

Table 4.6.1-10: RRCConnectionReestablishment

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
RRCConnectionReestablishment ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC- TransactionIdentifier-DL		
criticalExtensions CHOICE {			
c1 CHOICE{			
rrcConnectionReestablishment-r8 SEQUENCE {			
radioResourceConfigDedicated	RadioResourceConfigDe dicated-SRB1		
nextHopChainingCount	0		
nonCriticalExtension SEQUENCE {}	Not present		
}			
}			
}			
}			

- RRCConnectionReestablishmentComplete

Table 4.6.1-11: RRCConnectionReestablishmentComplete

Information Element	Value/remark	Comment	Condition
RRCConnectionReestablishmentComplete ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC- TransactionIdentifier-UL		
criticalExtensions CHOICE {			
rrcConnectionReestablishmentComplete-r8 SEQUENCE {			
nonCriticalExtension SEQUENCE {}	Not checked		
}			
}			
}			

RRCConnectionReestablishmentReject

Table 4.6.1-12: RRCConnectionReestablishmentReject

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
RRCConnectionReestablishmentReject ::= SEQUENCE {			
criticalExtensions CHOICE {			
rrcConnectionReestablishmentReject-r8 SEQUENCE {			
nonCriticalExtension SEQUENCE {}	Not present		
}			
}			
}			

RRCConnectionReestablishmentRequest

Table 4.6.1-13: RRCConnectionReestablishmentRequest

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
RRCConnectionReestablishmentRequest ::= SEQUENCE {			
criticalExtensions CHOICE {			
rrcConnectionReestablishmentRequest-r8 SEQUENCE {			
ue-Identity	Set according to specific message content		
reestablishmentCause	Set according to specific message content		
spare	Present but contents not checked		
}			
}			
}		•	

RRCConnectionReject

Table 4.6.1-14: RRCConnectionReject

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
RRCConnectionReject ::= SEQUENCE {			
criticalExtensions CHOICE {			
c1 CHOICE {			
rrcConnectionReject-r8 SEQUENCE {			
waitTime	3(seconds)		
nonCriticalExtension SEQUENCE {}	Not present		
}			
}			
}			
}			

RRCConnectionRelease

Table 4.6.1-15: RRCConnectionRelease

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
RRCConnectionRelease ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC- TransactionIdentifier-DL		
criticalExtensions CHOICE {			
c1 CHOICE {			
rrcConnectionRelease-r8 SEQUENCE {			
releaseCause	other		
redirectedCarrierInfo	Not present		
idleModeMobilityControlInfo	Not present		
nonCriticalExtension SEQUENCE {}	Not present		
}			
}			
}			
1			

- RRCConnectionRequest

Table 4.6.1-16: RRCConnectionRequest

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
RRCConnectionRequest ::= SEQUENCE {			
criticalExtensions CHOICE {			
rrcConnectionRequest-r8 SEQUENCE {			
ue-Identity CHOICE {			
s-TMSI	Any allowed value		
}			
establishmentCause	Present but contents not checked		
spare	Present but contents not checked		
}			
}			
}			

RRCConnectionSetup

Table 4.6.1-17: RRCConnectionSetup

Information Element	Value/remark	Comment	Condition
RRCConnectionSetup ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC-		
	TransactionIdentifier-DL		
criticalExtensions CHOICE {			
c1 CHOICE {			
rrcConnectionSetup-r8 SEQUENCE {			
radioResourceConfigDedicated	RadioResourceConfigDe		
	dicated-SRB1		
nonCriticalExtension SEQUENCE {}	Not present		
}			
}			
}			
}			

RRCConnectionSetupComplete

Table 4.6.1-18: RRCConnectionSetupComplete

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
RRCConnectionSetupComplete ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC-		
	TransactionIdentifier-UL		
criticalExtensions CHOICE {			
c1 CHOICE {			
rrcConnectionSetupComplete-r8 SEQUENCE {			
selectedPLMN-Identity	1		
registeredMME	Not checked		
dedicatedInfoNAS	Present but contents not checked		
nonCriticalExtension SEQUENCE {}	Not checked		
}			
}			
}			
}			

SecurityModeCommand

Table 4.6.1-19: SecurityModeCommand

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
SecurityModeCommand ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC-		
	TransactionIdentifier-DL		
criticalExtensions CHOICE {			
c1 CHOICE{			
securityModeCommand-r8 SEQUENCE {			
securityConfigSMC	SecurityConfigSMC-		
	DEFAULT		
nonCriticalExtension SEQUENCE {}	Not present		
}			
}			
}			
}			

SecurityModeComplete

Table 4.6.1-20: SecurityModeComplete

Information Element	Value/remark	Comment	Condition
SecurityModeComplete ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC-		
	TransactionIdentifier-UL		
criticalExtensions CHOICE {			
securityModeComplete-r8 SEQUENCE {			
nonCriticalExtension SEQUENCE {}	Not checked		
}			
}			
}			

SecurityModeFailure

Table 4.6.1-21: SecurityModeFailure

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
SecurityModeFailure ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC-		
	TransactionIdentifier-UL		
criticalExtensions CHOICE {			
securityModeFailure-r8 SEQUENCE {			
nonCriticalExtension SEQUENCE {}	Not checked		
}			
}			
}			

UECapabilityEnquiry

Table 4.6.1-22: UECapabilityEnquiry

Derivation Path: 36.331 clause 6.2.2			1
Information Element	Value/remark	Comment	Condition
UECapabilityEnquiry ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC-		
	TransactionIdentifier-DL		
criticalExtensions CHOICE {			
c1 CHOICE {			
ueCapabilityEnquiry-r8 SEQUENCE {			
ue-CapabilityRequest	eutra		
nonCriticalExtension SEQUENCE {}	Not present		
}			
}			
}			
}			

UECapabilityInformation

Table 4.6.1-23: UECapabilityInformation

Value/remark	Comment	Condition
RRC-		
1 entry		
message content		
 		
Not checked		
+		
Not checked		
		ROHC
true		ROHC
Not checked		22
Not checked		
Not checked		
Not checked		
Not shocked		
- 		
- 		
Not checked		
Not checked		
- 		
		1
		1
- 		+
		+
Not checked Not checked		+
INUL CHECKEU		
	Set according to specific message content Same as indicated in TC applicability of 36.523-2 Not checked Not checked true Not checked	TransactionIdentifier-UL 1 entry Set according to specific message content Same as indicated in TC applicability of 36.523-2 Not checked Not checked true Not checked

FGI 29	Not checked		
FGI 30	Not checked		
FGI 31	Not checked		
FGI 32	'0'B (Undefined)		
interRAT-Parameters SEQUENCE {			
utraFDD	Not checked		
utraTDD128	Not checked		
utraTDD384	Not checked		
utraTDD768	Not checked		
geran	Not checked		
cdma2000-HRPD	Not checked		
cdma2000-1xRTT	Not checked		
cdma2000-1xRTT	Not checked		
}			
nonCriticalExtension SEQUENCE {			
phyLayerParameters-v920	Not checked		
interRAT-ParametersGERAN-v920	Not checked		
interRAT-ParametersUTRA-v920	Not checked		
interRAT-ParametersCDMA2000-v920	Not checked		
deviceType-r9	Not checked		
csg-ProximityIndicationParameters-r9	Not checked		
neighCellSI-AcquisitionParameters-r9	Not checked		
son-Parameters-r9	Not checked		
nonCriticalExtension SEQUENCE {			
lateNonCriticalExtension SEQUENCE {			
featureGroupIndRel9Add-r9			
FGI 33	Not checked		
FGI 34	Not checked		
FGI 35	Not checked		
FGI 36	Not checked		
FGI 37	Not checked		
FGI 38	Not checked		
FGI 39	Not checked		
FGI 39 FGI 40	Not checked Not checked		
FGI 40 FGI 41	Not checked Not checked		
FGI 40 FGI 41 FGI 42-64	Not checked		
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9	Not checked Not checked		
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE {	Not checked Not checked '0'B (Undefined)		
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9	Not checked Not checked	RITSTRING 22	
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9	Not checked Not checked '0'B (Undefined) Not checked	BITSTRING 32	
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F	Not checked Not checked '0'B (Undefined) Not checked Not checked	BITSTRING 32	
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F	Not checked Not checked '0'B (Undefined) Not checked Not checked Not checked	BITSTRING 32	
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F	Not checked Not checked '0'B (Undefined) Not checked Not checked Not checked Not checked Not checked	BITSTRING 32	FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F	Not checked Not checked '0'B (Undefined) Not checked Not checked Not checked	BITSTRING 32	
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F	Not checked Not checked '0'B (Undefined) Not checked Not checked Not checked Not checked Not checked	BITSTRING 32	FDD = TDD FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F	Not checked Not checked '0'B (Undefined) Not checked	BITSTRING 32	
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F	Not checked Not checked '0'B (Undefined) Not checked	BITSTRING 32	FDD = TDD FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F	Not checked Not checked '0'B (Undefined) Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked	BITSTRING 32	FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F FGI 8F	Not checked Not checked '0'B (Undefined) Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked	BITSTRING 32	FDD = TDD FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F FGI 8F FGI 9F	Not checked Not checked '0'B (Undefined) Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked	BITSTRING 32	FDD = TDD FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F FGI 8F FGI 9F FGI 10F	Not checked Not checked '0'B (Undefined) Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked	BITSTRING 32	FDD = TDD FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F FGI 8F FGI 9F FGI 10F FGI 11F	Not checked Not checked '0'B (Undefined) Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked	BITSTRING 32	FDD = TDD FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F FGI 8F FGI 9F FGI 10F FGI 11F FGI 12F	Not checked Not checked '0'B (Undefined) Not checked Not checked	BITSTRING 32	FDD = TDD FDD = TDD FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F FGI 8F FGI 9F FGI 11F FGI 11F FGI 12F FGI 13F	Not checked Not checked '0'B (Undefined) Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked Not checked	BITSTRING 32	FDD = TDD FDD = TDD FDD = TDD FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F FGI 8F FGI 9F FGI 11F FGI 11F FGI 12F FGI 13F FGI 13F FGI 14F	Not checked Not checked '0'B (Undefined) Not checked Not checked	BITSTRING 32	FDD = TDD FDD = TDD FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F FGI 8F FGI 9F FGI 11F FGI 11F FGI 12F FGI 13F	Not checked Not checked '0'B (Undefined) Not checked Not checked	BITSTRING 32	FDD = TDD FDD = TDD FDD = TDD FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F FGI 8F FGI 9F FGI 11F FGI 11F FGI 12F FGI 13F FGI 13F FGI 14F	Not checked Not checked '0'B (Undefined) Not checked Not checked	BITSTRING 32	FDD = TDD FDD = TDD FDD = TDD FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F FGI 8F FGI 9F FGI 10F FGI 11F FGI 12F FGI 13F FGI 14F FGI 15F FGI 15F FGI 15F FGI 15F FGI 15F FGI 15F FGI 16F	Not checked Not checked '0'B (Undefined) Not checked	BITSTRING 32	FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F FGI 9F FGI 10F FGI 11F FGI 12F FGI 13F FGI 15F FGI 16F FGI 17F	Not checked Not checked '0'B (Undefined) Not checked	BITSTRING 32	FDD = TDD FDD = TDD FDD = TDD FDD = TDD FDD = TDD FDD = TDD FDD = TDD FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F FGI 9F FGI 10F FGI 11F FGI 12F FGI 13F FGI 14F FGI 15F FGI 15F FGI 15F FGI 15F FGI 15F FGI 15F FGI 16F FGI 17F FGI 18F	Not checked Not checked '0'B (Undefined) Not checked	BITSTRING 32	FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F FGI 9F FGI 10F FGI 11F FGI 12F FGI 13F FGI 14F FGI 15F FGI 15F FGI 15F FGI 15F FGI 15F FGI 15F FGI 16F FGI 17F FGI 18F FGI 19F	Not checked Not checked '0'B (Undefined) Not checked	BITSTRING 32	FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F FGI 8F FGI 10F FGI 11F FGI 12F FGI 12F FGI 15F FGI 16F FGI 17F FGI 18F FGI 19F FGI 19F FGI 19F FGI 20F	Not checked Not checked '0'B (Undefined) Not checked	BITSTRING 32	FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F FGI 9F FGI 10F FGI 11F FGI 12F FGI 14F FGI 15F FGI 15F FGI 15F FGI 15F FGI 15F FGI 16F FGI 16F FGI 17F FGI 18F FGI 19F FGI 19F FGI 20F FGI 20F FGI 21F	Not checked Not checked '0'B (Undefined) Not checked	BITSTRING 32	FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F FGI 9F FGI 10F FGI 11F FGI 12F FGI 14F FGI 15F FGI 16F FGI 17F FGI 18F FGI 19F FGI 20F FGI 21F FGI 21F FGI 22F	Not checked Not checked '0'B (Undefined) Not checked	BITSTRING 32	FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 6F FGI 6F FGI 7F FGI 9F FGI 10F FGI 11F FGI 12F FGI 15F FGI 17F FGI 17F FGI 17F FGI 19F FGI 29F FGI 29F FGI 22F FGI 23F	Not checked Not checked '0'B (Undefined) Not checked	BITSTRING 32	FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 5F FGI 6F FGI 7F FGI 9F FGI 10F FGI 11F FGI 12F FGI 14F FGI 15F FGI 16F FGI 17F FGI 18F FGI 19F FGI 20F FGI 21F FGI 21F FGI 22F	Not checked Not checked '0'B (Undefined) Not checked	BITSTRING 32	FDD = TDD
FGI 40 FGI 41 FGI 42-64 fdd-Add-UE-EUTRA-Capabilities-r9 SEQUENCE { phyLayerParameters-r9 featureGroupIndicators-r9 FGI 1F FGI 2F FGI 3F FGI 4F FGI 6F FGI 6F FGI 7F FGI 9F FGI 10F FGI 11F FGI 12F FGI 15F FGI 17F FGI 17F FGI 17F FGI 19F FGI 29F FGI 29F FGI 22F FGI 23F	Not checked Not checked '0'B (Undefined) Not checked	BITSTRING 32	FDD = TDD

	T	1	1
FGI 26F	Not checked		
FGI 27F	Not checked		
FGI 28F	Not checked		
FGI 29F	Not checked		
FGI 30F	Not checked		FDD = TDD
FGI 31F	Not checked		FDD = TDD
FGI 31F			דטט = דטט
FGI 32F	'0'B (Undefined) if		
	present		
featureGroupIndRel9Add-r9		BITSTRING 32	
FGI 33F	Not checked		
FGI 34F	Not checked		
FGI 35F	Not checked		
FGI 36F	Not checked		
FGI 37F	Not checked		
FGI 38F	Not checked		
FGI 39F	Not checked		
FGI 40F	Not checked		
FGI 41F	Not checked		
FGI 42F-64F	'0'B (Undefined) if		
1 61 121 6 11	present		
interpAT Developed OFDAN 40			
interRAT-ParametersGERAN-r9	Not checked		
interRAT-ParametersUTRA-r9	Not checked		
interRAT-ParametersGERAN-r9	Not checked		
interRAT-ParametersCDMA2000-r9	Not checked		
neighCellSI-AcquisitionParameters-r9	Not checked		
\	1131 011001100		
) 			
tdd-Add-UE-EUTRA-Capabilities-r9			
SEQUENCE {			
phyLayerParameters-r9	Not checked		
featureGroupIndicators-r9		BITSTRING 32	
FGI 1T	Not checked		
FGI 2T	Not checked		
FGI 3T			FDD TDD
	Not checked		FDD = TDD
FGI 4T	Not checked		
FGI 5T	Not checked		FDD = TDD
FGI 6T	Not checked		FDD = TDD
FGI 7T	Not checked		FDD = TDD
FGI 8T	Not checked		
FGI 9T	Not checked		
FGI 10T	Not checked		
FGI 11T	Not checked		
FGI 12T	Not checked		
FGI 13T	Not checked		FDD = TDD
FGI 14T	Not checked		FDD = TDD
FGI 15T	Not checked		1
			FDD TDD
FGI 16T	Not checked		FDD = TDD
FGI 17T	Not checked		FDD = TDD
FGI 18T	Not checked		FDD = TDD
FGI 19T	Not checked		
FGI 20T	Not checked		FDD = TDD
FGI 21T	Not checked		FDD = TDD
			1 22 - 100
FGI 22T	Not checked		
FGI 23T	Not checked		
FGI 24T	Not checked		
FGI 25T	Not checked		FDD = TDD
FGI 26T	Not checked		
FGI 27T	Not checked		
FGI 28T	Not checked		+
			+
FGI 29T	Not checked		
FGI 30T	Not checked		FDD = TDD
FGI 31T	Not checked		FDD = TDD
FGI 32T	'0'B (Undefined) if		
	present		
featureGroupIndRel9Add-r9	1	BITSTRING 32	1
FGI 33T	Not abacked	DITOTIVING 02	+
rui 331	Not checked		1

FGI 34T	Not checked		
FGI 35T	Not checked		
FGI 36T	Not checked		
FGI 37T	Not checked		
FGI 38T	Not checked		
FGI 39T	Not checked		
FGI 40T	Not checked		
FGI 41T	Not checked		
FGI 42T-64T	'0'B (Undefined) if		
FGI 421-041			
into aDAT Do accorde ao CEDAN ao	present		
interRAT-ParametersGERAN-r9	Not checked		
interRAT-ParametersUTRA-r9	Not checked		
interRAT-ParametersGERAN-r9	Not checked		
interRAT-ParametersCDMA2000-r9	Not checked		
neighCellSI-AcquisitionParameters-r9	Not checked		
}			
nonCriticalExtension SEQUENCE {	Not checked		
interRAT-ParametersUTRA-v9c0	Not checked		
nonCriticalExtension SEQUENCE {			
phyLayerParameters-v9d0	Not checked		
nonCriticalExtension SEQUENCE {			
rf-Parameters-v9e0	Not checked		
	Not checked		
nonCriticalExtension SEQUENCE {}	INOL CHECKED		
}			
}			
}			
}			
nonCriticalExtension SEQUENCE {			
ue-Category-v1020	Not checked		
as satisfies the	Trot on concu		
phyLayerParameters-v1020	Not checked		
p.,,_a, o., a.ao.o.o o_o	1101011001100		
rf-Parameters-v1020	Not checked		
rf-Parameters-v1020	Not checked		
rf-Parameters-v1020 measParameters-v1020	Not checked Not checked		
measParameters-v1020		BITSTRING 32	
		BITSTRING 32	
measParameters-v1020		BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101	Not checked Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102	Not checked Not checked Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103	Not checked Not checked Not checked Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104	Not checked Not checked Not checked Not checked Not checked Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 108	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 108 FGI 109	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 108 FGI 109 FGI 110	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 108 FGI 109	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 108 FGI 109 FGI 110 FGI 111	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 108 FGI 109 FGI 110 FGI 111	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 108 FGI 109 FGI 110 FGI 111	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 108 FGI 109 FGI 110 FGI 111 FGI 112 FGI 113 FGI 114	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 108 FGI 109 FGI 110 FGI 111 FGI 112 FGI 113 FGI 114 FGI 115	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 108 FGI 1109 FGI 110 FGI 111 FGI 112 FGI 113 FGI 114 FGI 115 FGI 115	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 108 FGI 109 FGI 110 FGI 111 FGI 112 FGI 113 FGI 114 FGI 115	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 109 FGI 110 FGI 111 FGI 112 FGI 112 FGI 113 FGI 114 FGI 115 FGI 116 FGI 117-132	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 109 FGI 110 FGI 111 FGI 112 FGI 112 FGI 113 FGI 115 FGI 116 FGI 116 FGI 117-132 interRAT-ParametersCDMA2000-v1020	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 109 FGI 110 FGI 111 FGI 112 FGI 112 FGI 113 FGI 115 FGI 116 FGI 117-132 interRAT-ParametersCDMA2000-v1020 ue-BasedNetwPerfMeasParameters-r10	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 109 FGI 110 FGI 111 FGI 112 FGI 112 FGI 113 FGI 115 FGI 116 FGI 116 FGI 117-132 interRAT-ParametersCDMA2000-v1020	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 109 FGI 110 FGI 111 FGI 112 FGI 112 FGI 113 FGI 115 FGI 116 FGI 117-132 interRAT-ParametersCDMA2000-v1020 ue-BasedNetwPerfMeasParameters-r10 interRAT-ParametersUTRA-TDD-v1020	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 109 FGI 110 FGI 111 FGI 112 FGI 112 FGI 113 FGI 114 FGI 115 FGI 116 FGI 117-132 interRAT-ParametersCDMA2000-v1020 ue-BasedNetwPerfMeasParameters-r10 interRAT-ParametersUTRA-TDD-v1020 nonCriticalExtension SEQUENCE {	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 109 FGI 110 FGI 111 FGI 112 FGI 112 FGI 113 FGI 115 FGI 116 FGI 117-132 interRAT-ParametersCDMA2000-v1020 ue-BasedNetwPerfMeasParameters-r10 interRAT-ParametersUTRA-TDD-v1020 nonCriticalExtension SEQUENCE {	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 108 FGI 109 FGI 110 FGI 111 FGI 112 FGI 113 FGI 114 FGI 115 FGI 116 FGI 117-132 interRAT-ParametersCDMA2000-v1020 ue-BasedNetwPerfMeasParameters-r10 interRAT-ParametersUTRA-TDD-v1020 nonCriticalExtension SEQUENCE { fdd-Add-UE-EUTRA-Capabilities-v1060 tdd-Add-UE-EUTRA-Capabilities-v1060	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 109 FGI 110 FGI 111 FGI 112 FGI 112 FGI 115 FGI 116 FGI 116 FGI 117-132 interRAT-ParametersCDMA2000-v1020 ue-BasedNetwPerfMeasParameters-r10 interRAT-ParametersUTRA-TDD-v1020 nonCriticalExtension SEQUENCE { fdd-Add-UE-EUTRA-Capabilities-v1060 tdd-Add-UE-EUTRA-Capabilities-v1060 rf-Parameters-v1060	Not checked	BITSTRING 32	
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 108 FGI 109 FGI 110 FGI 111 FGI 112 FGI 112 FGI 113 FGI 115 FGI 116 FGI 117-132 interRAT-ParametersCDMA2000-v1020 ue-BasedNetwPerfMeasParameters-r10 interRAT-ParametersUTRA-TDD-v1020 nonCriticalExtension SEQUENCE { fdd-Add-UE-EUTRA-Capabilities-v1060 rf-Parameters-v1060 nonCriticalExtension SEQUENCE {	Not checked BITSTRING 32		
measParameters-v1020 featureGroupIndRel10-r10 FGI 101 FGI 102 FGI 103 FGI 104 FGI 105 FGI 106 FGI 107 FGI 109 FGI 110 FGI 111 FGI 112 FGI 112 FGI 115 FGI 116 FGI 116 FGI 117-132 interRAT-ParametersCDMA2000-v1020 ue-BasedNetwPerfMeasParameters-r10 interRAT-ParametersUTRA-TDD-v1020 nonCriticalExtension SEQUENCE { fdd-Add-UE-EUTRA-Capabilities-v1060 tdd-Add-UE-EUTRA-Capabilities-v1060 rf-Parameters-v1060	Not checked	BITSTRING 32	

pdcp-Parameters-v1130	Not checked
phyLayerParameters-v1130	Not checked
rf-Parameters-v1130	Not checked
measParameters-v1130	Not checked
interRAT-ParametersCDMA2000-	Not checked
v1130	
otherParameters-r11	Not checked
fdd-Add-UE-EUTRA-Capabilities-	Not checked
v1130	
tdd-Add-UE-EUTRA-Capabilities-	Not checked
v1130	
nonCriticalExtension SEQUENCE {}	Not checked
}	
}	
}	
}	
}	
}	
}	
}	
nonCriticalExtension SEQUENCE {}	Not checked
1	140t Gricored
1	
1	
}	

Condition	Explanation
ROHC	Support of ROHC profile0x0001 and ROHC profile0x0002 (TS 36.523-2 table A.4.4-1/40 and A.4.4-1/41).
FDD = TDD	UE is not allowed to signal different values for FDD and TDD, is not checked per default

UEInformationRequest

Table 4.6.1-23A: UEInformationRequest

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
UEInformationRequest-r9 ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC-		
	TransactionIdentifier-DL		
criticalExtensions CHOICE {			
c1 CHOICE{			
<pre>ueInformationRequest-r9 SEQUENCE {</pre>			
rach-ReportReq-r9	FALSE		
rlf-ReportReq-r9	FALSE		
	TRUE		RLF report
nonCriticalExtension SEQUENCE {			
lateNonCriticalExtension	Not present		
nonCriticalExtension SEQUENCE {}	Not present		
nonCriticalExtension SEQUENCE {			Logged
			MDT, ConEstFail
logMeasReportReq-r10	true		Logged MDT
	Not present		
nonCriticalExtension SEQUENCE {}	Not present		
nonCriticalExtension SEQUENCE {			
connEstFailReportReq-r11	true		ConEstFail
	Not present		
nonCriticalExtension SEQUENCE {}	Not present		
}			
}			
}			
}			
}			
}			
}			

Condition	Explanation
Logged MDT	Used for Logged MDT test cases
ConEstFail	Used for RRC connection establishment failure report related test cases
RLF report	Used for Radio Link Failure Logging test cases

UEInformationResponse

Table 4.6.1-23B: UEInformationResponse

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
UEInformationResponse-r9 ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC-		
	TransactionIdentifier-UL		
criticalExtensions CHOICE {			
c1 CHOICE{			
ueInformationResponse-r9 SEQUENCE {			
rach-Report-r9 SEQUENCE {}	Not checked		
rlf-Report-r9 SEQUENCE {}	Not checked		
nonCriticalExtension SEQUENCE {			
lateNonCriticalExtension	Not checked		
nonCriticalExtension SEQUENCE {			
logMeasReport-r10 SEQUENCE {}	Not checked		
nonCriticalExtension SEQUENCE {	Not checked		
}			
}			
}			
}			
}		_	
}		<u> </u>	

ULHandoverPreparationTransfer

Table 4.6.1-24: *ULHandoverPreparationTransfer*

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
ULHandoverPreparationTransfer ::= SEQUENCE {			
criticalExtensions CHOICE {			
c1 CHOICE {			
ulHandoverPreparationTransfer-r8 SEQUENCE {			
cdma2000-Type	type1XRTT		
meid	Set to the 56 bit CDMA2000 mobile identification number of the UE		
dedicatedInfo	Set according to specific message content		
nonCriticalExtension SEQUENCE {}	Not checked		
}			
}			
}			
}			

ULInformationTransfer

Table 4.6.1-25: ULInformationTransfer

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
ULInformationTransfer ::= SEQUENCE {			
criticalExtensions CHOICE {			
c1 CHOICE {			
ulInformationTransfer-r8 SEQUENCE {			
dedicatedInfoType CHOICE {			
dedicatedInfoNAS	Present but contents not checked		
}			
nonCriticalExtension SEQUENCE {}	Not checked		
}			
}			
}			
}			

- UEAssistanceInformation

Table 4.6.1-26: UEAssistanceInformation

Derivation Path: 36.331, Clause 6.2.2			
Information Element	Value/remark	Comment	Condition
UEAssistanceInformation-r11 ::= SEQUENCE {			
criticalExtensions CHOICE {			
c1 CHOICE{			
UEAssistanceInformation-r11-IEs SEQUENCE {			
powerPreferenceIndication-r11	IowPowerConsumption		Low_Powe
			r
powerPreferenceIndication-r11	normal		Normal
laterNonCriticalExtension	Not Present		
nonCriticalExtension SEQUENCE {}	Not Present		
}			
}			
}			
}			

Condition	Explanation
Low_Power	The UE indicates that it prefers a configuration primarily optimised for power saving
Normal	The UE indicates that it does not prefer a configuration primarily optimised for power saving

4.6.2 System information blocks

See subclause 4.4.3.3 in this document.

4.6.3 Radio resource control information elements

Table 4.6.3-0A: Void

Table 4.6.3-0B: Void

BCCH-Config-DEFAULT

Table 4.6.3-1: BCCH-Config-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
BCCH-Config-DEFAULT::= SEQUENCE {			
modificationPeriodCoeff	n4	To provide reliable delivery of SI change notifications.	
}			

CQI-ReportAperiodic-r10-DEFAULT

Table 4.6.3-1A: CQI-ReportAperiodic-r10-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
CQI-ReportAperiodic-r10 ::=CHOICE {			
setup SEQUENCE {			
cqi-ReportModeAperiodic-r10	rm30		
aperiodicCSI-Trigger-r10	Not present		
}			
}			

CQI-ReportConfig-DEFAULT

Table 4.6.3-2: CQI-ReportConfig-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
CQI-ReportConfig-DEFAULT ::= SEQUENCE {			
cqi-ReportModeAperiodic	rm30		
nomPDSCH-RS-EPRE-Offset	0		
cqi-ReportPeriodic	Not present		
cqi-ReportPeriodic CHOICE {			CQI_PERIO DIC
setup SEQUENCE {			
cqi-PUCCH-ResourceIndex	0		
cqi-pmi-ConfigIndex	25		FDD
		(see Table 7.2.2- 1A in TS 36.213)	
	24	(see Table 7.2.2- 1C in TS 36.213)	TDD
cqi-FormatIndicatorPeriodic CHOICE {		,	
widebandCQI	NULL		
}			
ri-ConfigIndex	483		FDD
		(see Table 7.2.2- 1B in TS 36.213)	
	484	(see Table 7.2.2- 1B in TS 36.213) This value for TDD is selected together with cqi- pmi-ConfigIndex based on TDD configuration 1.	TDD
simultaneousAckNackAndCQI	FALSE	2294.44.41	
}			
}			
}			

Condition	Explanation
CQI_PERIODIC	When periodic CQI reporting should be enabled
FDD	FDD cell environment
TDD	TDD cell environment

CQI-ReportConfig-r10-DEFAULT

Table 4.6.3-2AA: CQI-ReportConfig-r10-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
CQI-ReportConfig-r10 ::= SEQUENCE {			
cqi-ReportAperiodic-r10	CQI-ReportAperiodic-r10- DEFAULT		
nomPDSCH-RS-EPRE-Offset	0		
cqi-ReportPeriodic-r10	Not present		
	CQI-ReportPeriodic-r10- DEFAULT		CQI_PERI ODIC
pmi-RI-Report-r9	Not present		
csi-SubframePatternConfig-r10	Not present		

Condition	Explanation
CQI PERIODIC	When periodic CQI reporting should be enabled

CQI-ReportConfig-v1130-DEFAULT

Table 4.6.3-2ABA: CQI-ReportConfig-v1130-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
CQI-ReportConfig-v1130 ::= SEQUENCE {			
cqi-ReportPeriodic-v1130 SEQUENCE {			
simultaneousAckNackAndCQI-Format3-r11	Not present		
cqi-ReportPeriodicProcExtToReleaseList-r11	Not present		
cqi-ReportPeriodicProcExtToAddModList-r11	1 entry		
SEQUENCE (SIZE (1maxCQI-ProcExt-r11)) OF			
SEQUENCE {			
cqi-ReportPeriodicProcExtId-r11[1] SEQUENCE {			
cqi-ReportPeriodicProcExtId-r11	1		
cqi-pmi-ConfigIndex-r11	Not present		
cqi-FormatIndicatorPeriodic-r11 CHOICE {			
widebandCQI-r11 SEQUENCE {	Not propert		
csi-ReportMode-r11	Not present		
subbandCQI-r11 SEQUENCE {			
k	Not present		
periodicityFactor-r11	Not present		
t	Not present		
}			+
ri-ConfigIndex-r11	Not present		
csi-ConfigIndex-r11 CHOICE {	procont		+
release	NULL		1
setup SEQUENCE {			1
cqi-pmi-ConfigIndex2-r11	Not present		
ri-ConfigIndex2-r11	Not present		
}			
}			
}			
}			
}			
cqi-ReportBoth-r11 SEQUENCE {			
csi-IM-ConfigToReleaseList-r11	Not present		
csi-IM-ConfigToAddModList-r11 SEQUENCE (SIZE	1 entry		
(1maxCSI-IM-r11)) OF SEQUENCE {			
csi-IM-Configld-r11[1]	1		500
resourceConfig-r11[1]	2		FDD
and frame Oraclin madial	2		TDD
subframeConfig-r11[1]	1		FDD
1	3		TDD
csi-ProcessToReleaseList-r11	Not present		
csi-ProcessToAddModList-r11SEQUENCE (SIZE	1 entry		
(1maxCSI-Proc-r11)) OF SEQUENCE {	1 Gilliy		
csi-ProcessId-r11[1]	1		
csi-RS-ConfigNZPId-r11[1]	1		+
csi-IM-Configld-r11[1]	1		
p-C-AndCBSRList-r11[1] SEQUENCE (SIZE	1 entry		
(12)) OF SEQUENCE {			
p-C-r11[1]	-6		
codebookSubsetRestriction-r11[1]	1111111		
}			
cqi-ReportBothProc-r11[1] SEQUENCE {			
ri-Ref-CSI-ProcessId-r11	1		
pmi-RI-Report-r11	Not present		
}			
cqi-ReportPeriodicProcld-r11[1]	1		
cqi-ReportAperiodicProc-r11[1] SEQUENCE {			1
cqi-ReportModeAperiodic-r11	Not present		1
trigger01-r11	Not present		
trigger10-r11	Not present		
trigger11-r11	Not present		+
}			+
}			
}			

Condition	Explanation
FDD	FDD cell environment
TDD	TDD cell environment

CQI-ReportConfigSCell-r10-DEFAULT

Table 4.6.3-2AB: CQI-ReportConfigSCell-r10-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
CQI-ReportConfigSCell-r10 ::= SEQUENCE {			
cqi-ReportModeAperiodic-r10	rm30		
nomPDSCH-RS-EPRE-Offset-r10	0		
cqi-ReportPeriodicSCell-r10	Not present		
	CQI-ReportPeriodic-r10- DEFAULT		CQI_PERI ODIC
pmi-RI-Report-r10	Not present		
}			

Condition	Explanation
CQI_PERIODIC	When periodic CQI reporting should be enabled

CQI-ReportPeriodic-r10-DEFAULT

Table 4.6.3-2AC: CQI-ReportPeriodic-r10-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
CQI-ReportPeriodic-r10 ::= CHOICE {			
setup SEQUENCE {			
cqi-PUCCH-ResourceIndex-r10	0		
cqi-PUCCH-ResourceIndexP1-r10	Not present		
cqi-pmi-ConfigIndex	25		FDD
	24		TDD
cqi-FormatIndicatorPeriodic-r10 CHOICE {			
widebandCQI-r10 SEQUENCE {			
csi-ReportMode-r10	Not present		
}			
}			
ri-ConfigIndex	Not present		SCell_Conf
			ig
	483		FDD and
			NOT
			SCell_Conf
			ig
	484		TDD and
			NOT
			SCell_Conf
			ig
simultaneousAckNackAndCQI	FALSE		
cqi-Mask-r9	Not present		
csi-ConfigIndex-r10	Not present		
}			
}			

• ""	
Condition	Explanation
Condition	

FDD	FDD cell environment
TDD	TDD cell environment
SCell_Config	CQI-ReportPeriodic configuration for SCell.

Table 4.6.3-2AD: Void

Table 4.6.3-2AE: Void

CSI-RS-ConfigNZP-r11-DEFAULT

Table 4.6.3-2AF: CSI-RS-ConfigNZP-r11-DEFAULT

Derivation Dathy 26 224 alouge 6.2.2			
Derivation Path: 36.331 clause 6.3.2		_	T =
Information Element	Value/remark	Comment	Condition
CSI-RS-ConfigNZP-r11 ::= SEQUENCE {			
csi-RS-ConfigNZPId-r11	1		
antennaPortsCount-r11	an2		
resourceConfig-r11	0		FDD
	0		TDD
subframeConfig-r11	1		FDD
	3		TDD
scramblingIdentity-r11	0		
qcl-CRS-Info-r11 SEQUENCE {			
qcl-ScramblingIdentity-r11	0		
crs-PortsCount-r11	n2		
mbsfn-SubframeConfigList-r11 CHOICE {			
release	NULL		
setup SEQUENCE {			
subframeConfigList	Not present		
}			
}			
}			
}			

Condition	Explanation
FDD	FDD cell environment
TDD	TDD cell environment

CSI-RS-ConfigZP-r11-DEFAULT

Table 4.6.3-2AG: CSI-RS-ConfigZP-r11-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
CSI-RS-ConfigZP-r11 ::= SEQUENCE {			
csi-RS-ConfigZPId-r11	1		
resourceConfigList-r11	0010000000000000		
subframeConfig-r11	1		FDD
	3		TDD
}			

Condition	Explanation
FDD	FDD cell environment
TDD	TDD cell environment

DMRS-Config-r11-DEFAULT

Table 4.6.3-2AH: DMRS-Config-r11-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
DMRS-Config-r11 ::= CHOICE {			
release	NULL		
setup SEQUENCE {			
scramblingIdentity-r11	0		
scramblingIdentity2-r11	1		
}			
}			

DRB-ToAddModList-RECONFIG

Table 4.6.3-2A: DRB-ToAddModList-RECONFIG

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
DRB-ToAddModList ::= SEQUENCE (SIZE	2 Entries		
(1maxDRB)) OF SEQUENCE {			
eps-BearerIdentity[1]	Not present		
drb-Identity[1]	1		
pdcp-Config[1]	Not present		
rlc-Config[1]	RLC-Config-DRB-AM-		
2	RECONFIG		
logicalChannelIdentity[1]	Not present		
logicalChannelConfig[1]	Not present		
eps-BearerIdentity[2]	Not present		
drb-Identity[2]	2		
pdcp-Config[2]	Not present		
rlc-Config[2]	RLC-Config-DRB-AM-		
2	RECONFIG		
logicalChannelIdentity[2]	Not present		
logicalChannelConfig[2]	Not present		
}			

EPDCCH-Config-r11-DEFAULT

Table 4.6.3-2B: EPDCCH-Config-r11-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
EPDCCH-Config-r11 ::= SEQUENCE{			
config-r11{			
setup SEQUENCE {			
subframePatternConfig-r11{			
setup SEQUENCE {			
subframePattern-r11 CHOICE {			
subframePatternFDD-r10	0000000000000000000		FDD
	000000000000000000000000000000000000000		500 TM
	111111110		FDD, TM9
	1111111011 1111110111		
subframePatternTDD-r10{	1111111011 1111110111		TDD
subframeConfig1-5-r10	000000000000000000000000000000000000000		טטו
SubiranieConing 1-5-110	1100111001 1100111001		TM9
1	11001110011100111001		11013
}			
}	+		
}	+		
startSymbol-r11	Not present		
	2		TM9
setConfigToReleaseList-r11	Not present		111111
setConfigToAddModList-r11 SEQUENCE {	2 entry		
setConfigld-r11[1]	0		
transmissionType-r11[1]	distributed		
71	localized		TM10
resourceBlockAssignment-r11[1] SEQUENCE{			
numberPRB-Pairs-r11	n4		
	n2		TM9
	n8		TM10
resourceBlockAssignment-r11	101001000101101110		
	10010011000		TM9
	11100100101110110011		TM10
	001101100		
}			
dmrs-ScramblingSequenceInt-r11[1]	0		
pucch-ResourceStartOffset-r11[1]	0		
re-MappingQCL-ConfigListId-r11[1]	Not present		TN440
antConfield r11[0]	0 1		TM10
setConfigld-r11[2]			
transmissionType-r11[2]	distributed localized		TM9, TM10
resourceBlockAssignment-r11[2] SEQUENCE{	IOGAIIZEG		TIVIO, TIVITO
numberPRB-Pairs-r11	n8		
resourceBlockAssignment-r11	11100100101110110011		
1000uroobiook toolgriment 111	001101100		
}			
dmrs-ScramblingSequenceInt-r11[2]	0		
pucch-ResourceStartOffset-r11[2]	0		
re-MappingQCL-ConfigListId-r11[2]	Not present		
, J	0		TM10
}			
}			
}			
}			

Condition	Explanation

FDD	FDD cell environment
TDD	TDD cell environment
TM9	Transmission mode 9
TM10	Transmission mode 10

PCCH-Config-DEFAULT

Table 4.6.3-3: PCCH-Config-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
PCCH-Config-DEFAULT::= SEQUENCE {			
defaultPagingCycle	rf128	Typical value in real network.	
nB	oneT		
}			

PHICH-Config-DEFAULT

Table 4.6.3-4: PHICH-Config-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
PHICH-Config-DEFAULT ::= SEQUENCE {			
phich-Duration	normal		
phich-Resource	one	Ng=1 has been selected to ensure enough PHICH resources from the real network point of view.	
}			

PDSCH-ConfigCommon-DEFAULT

Table 4.6.3-5: PDSCH-ConfigCommon-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
PDSCH-ConfigCommon-DEFAULT ::= SEQUENCE {			
referenceSignalPower	18 (dBm)		
p-b	$0\left(\rho_{B}/\rho_{A}=1\right)$		1TX
	$1 \left(\rho_B / \rho_A = 1 \right)$		2TX, 4TX
}			

Condition	Explanation
1TX	1 SS Tx antenna environment
2TX	2 SS Tx antenna environment
4TX	4 SS Tx antenna environment

PDSCH-ConfigDedicated-DEFAULT

Table 4.6.3-6: PDSCH-ConfigDedicated-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
PDSCH-ConfigDedicated-DEFAULT ::= SEQUENCE			
{			
p-a	dB-3 for signalling test cases; dB0 for others	dB-3 for signalling test cases to reduce interference from PDSCH of intra- frequency neighbour cells	1TX
	dB-3		2TX, 4TX
}			

PDSCH-ConfigDedicated-v1130-DEFAULT

Table 4.6.3-6AA: PDSCH-ConfigDedicated-v1130-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
PDSCH-ConfigDedicated-v1130 ::= SEQUENCE {			
dmrs-ConfigPDSCH-r11	DMRS-Config-r11- DEFAULT		
qcl-Operation	typeB		
re-MappingQCLConfigToReleaseList-r11	Not present		
re-MappingQCLConfigToAddModList-r11 SEQUENCE (SIZE (1maxRE-MapQCL-r11)) OF SEQUENCE {	1 entry		
pdsch-RE-MappingQCL-Configld-r11[1]	1		
	0		TM10
optionalSetOfFields-r11[1] SEQUENCE {			
crs-PortsCount-r11	Not present		
crs-FreqShift-r11	Not present		
mbsfn-SubframeConfigList-r11{			
setup SEQUENCE {			
subframeConfigList	Not present		
}			
}			
pdsch-Start-r11	Not present		
	2		[TM10
}			
csi-RS-ConfigZPld-r11[1]	1		
qcl-CSI-RS-ConfigNZPId-r11[1]	1		
}			
}			

Condition	Explanation
TM10	Transmission mode 10

PhysicalConfigDedicatedSCell-r10-DEFAULT

Table 4.6.3-6A: PhysicalConfigDedicatedSCell-r10-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
PhysicalConfigDedicatedSCell-r10-DEFAULT ::=			
SEQUENCE {			
nonUL-Configuration-r10 SEQUENCE {			
antennalnfo-r10 SEQUENCE {			
transmissionMode-r10	tm1		1TX
	tm2		2TX
codebookSubsetRestriction-r10	Not present		
ue-TransmitAntennaSelection	release		
}			
crossCarrierSchedulingConfig-r10	Not present		
csi-RS-Config-r10	Not present		
pdsch-ConfigDedicated-r10	PDSCH-		
	ConfigDedicated-		
	DEFAULT		
}			
ul-Configuration-r10	Not present		
ul-Configuration-r10 SEQUENCE {			UL CA
antennalnfoUL-r10	Not present		
pusch-ConfigDedicatedSCell-r10	Not present		
uplinkPowerControlDedicatedSCell-r10	UplinkPowerControlDedic		
	atedSCell-r10-DEFAULT		
cqi-ReportConfigSCell-r10	CQI-ReportConfigSCell-		
	r10-DEFAULT		
soundingRS-UL-ConfigDedicated-r10	Not present		
soundingRS-UL-ConfigDedicated-v1020	Not present		
soundingRS-UL-ConfigDedicatedAperiodic-r10	Not present		
}			
}			

Condition	Explanation
UL CA	When UL Carrier Aggregation is used.
1TX	1 SS Tx antenna environment
2TX	2 SS Tx antenna environment

PRACH-Config-DEFAULT

Table 4.6.3-7: PRACH-Config-DEFAULT

Information Element	Value/remark	Comment	Condition
PRACH-Config-DEFAULT ::= SEQUENCE {			
rootSequenceIndex	See clause 4.4.2, Table 4.4.2-1A and clause 6.3.2.2 Table 6.3.2.2-2	See table 5.7.2-4 in TS 36.211for PRACH format 0- 3	FDD
	See clause 4.4.2, Table 4.4.2-1A and clause 6.3.2.2 Table 6.3.2.2-2	See table 5.7.2-5 in TS 36.211 for PRACH format 4	TDD
prach-ConfigInfo SEQUENCE {			
prach-ConfigIndex	3	Typical value in real network for FDD (see table 5.7.1-1 and 5.7.1- 2 in TS 36.211)	FDD
	51	Typical value in real network for TDD (see table 5.7.1-3 and 5.7.1- 4 in TS 36.211)	TDD
highSpeedFlag	FALSE (Unrestricted set)	High speed train configuration doesn't apply by default.	
zeroCorrelationZoneConfig	5 (N _{cs} configuration = 5)	Assuming cell radius is up to approximately 3 km.	FDD
	4 (N _{cs} configuration = 4)	Assuming cell radius is up to approximately 1 km.	TDD
prach-FreqOffset	See subclause 4.6.8	Channel- bandwidth- dependent parameter	
}			

Note: Although PRACH format 0-3 is applicable for both FDD and TDD, the PRACH format 4 is used as default for testing for TDD.

Condition	Explanation
FDD	FDD cell environment
TDD	TDD cell environment

PRACH-ConfigSIB-DEFAULT

Table 4.6.3-7a: PRACH-ConfigSIB-DEFAULT

Derivation Path: 36.508 clause 4.6.3 Table 4.6.3-7 PRACH-Config-DEFAULT

PUCCH-ConfigCommon-DEFAULT

Table 4.6.3-8: PUCCH-ConfigCommon-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
PUCCH-ConfigCommon-DEFAULT ::= SEQUENCE {			
deltaPUCCH-Shift	ds2	Assuming typical values of the maximum delay spread	
nRB-CQI	See subclause 4.6.8	Channel- bandwidth- dependent parameter	
nCS-AN	6		
n1PUCCH-AN	0		
}			

PUCCH-ConfigDedicated-DEFAULT

Table 4.6.3-9: PUCCH-ConfigDedicated-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
PUCCH-ConfigDedicated-DEFAULT ::= SEQUENCE			
{			
ackNackRepetition CHOICE {			
release	NULL		
}			
tddAckNackFeedbackMode	Not present		FDD
	multiplexing	Multiplexing is	TDD
		selected as	
		default to align	
		with RAN4's	
		assumptions in	
		RF tests.	
}			

Condition	Explanation
FDD	FDD cell environment
TDD	TDD cell environment

PUCCH-ConfigDedicated-v1020-DEFAULT

Table 4.6.3-9A: PUCCH-ConfigDedicated-v1020-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
PUCCH-ConfigDedicated-v1020 ::= SEQUENCE {			
pucch-Format-r10 CHOICE {			
channelSelection-r10 SEQUENCE {			
n1PUCCH-AN-CS-r10 CHOICE {			
setup SEQUENCE {			
n1PUCCH-AN-CS-List-r10 SEQUENCE{	1		FDD
N1PUCCH-AN-CS-r10	4		
	101		
	102		
	103		
	104		
}			
n1PUCCH-AN-CS-List-r10 SEQUENCE{	2		2TX AND FDD, TDD
N1PUCCH-AN-CS-r10	4		
	101		
	102		
	103		
	104		
N1PUCCH-AN-CS-r10	4		
	105		
	106		
	107		
	108		
}			
}			
}			
}			
}			
twoAntennaPortActivatedPUCCH-Format1a1b-r10	Not present		
simultaneousPUCCH-PUSCH-r10	Not present		
n1PUCCH-AN-RepP1-r10	Not present		
}	•		

PUCCH-ConfigDedicated-v1130-DEFAULT

Table 4.6.3-9AA: PUCCH-ConfigDedicated-v1130-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
PUCCH-ConfigDedicated-v1130-DEFAULT ::=			
SEQUENCE {			
n1PUCCH-AN-CS-v1130 CHOICE {			
release	NULL		
setup SEQUENCE {	2 entries		
n1PUCCH-AN-CS-ListP1-r11[1]	FFS		
n1PUCCH-AN-CS-ListP1-r11[2]	FFS		
}			
}			
nPUCCH-Param-r11 CHOICE {			
release	NULL		
setup SEQUENCE {			
nPUCCH-Identity-r11	FFS		
n1PUCCH-AN-r11	FFS		
}			
}			
}			

PUSCH-ConfigCommon-DEFAULT

Table 4.6.3-10: PUSCH-ConfigCommon-DEFAULT

Information Element	Value/remark	Comment	Condition
PUSCH-ConfigCommon-DEFAULT ::= SEQUENCE	{		
pusch-ConfigBasic SEQUENCE {			
n-SB	1	Typical configuration in real network	
hoppingMode	interSubFrame	Typical configuration in real network	
pusch-HoppingOffset	See subclause 4.6.8	Channel- bandwidth- dependent parameter	
enable64QAM	FALSE		
}			
ul-ReferenceSignalsPUSCH SEQUENCE {			
groupHoppingEnabled	TRUE	In accordance with "the RAN5 LTE UE Feature list".	
groupAssignmentPUSCH	0	Typical value in real network	
sequenceHoppingEnabled	FALSE	In accordance with "the RAN5 LTE UE Feature list".	
cyclicShift	0		

PUSCH-ConfigDedicated-DEFAULT

Table 4.6.3-11: PUSCH-ConfigDedicated-DEFAULT

Information Element	Value/remark	Comment	Condition
PUSCH-ConfigDedicated-DEFAULT ::= SEQUENCE			
{			
betaOffset-ACK-Index	9		
betaOffset-RI-Index	6		
betaOffset-CQI-Index	6		

Table 4.6.3-11A: Void

PUSCH-ConfigDedicated-v1130-DEFAULT

Table 4.6.3-11AA: PUSCH-ConfigDedicated-v1130-DEFAULT

Information Element	Value/remark	Comment	Condition
PUSCH-ConfigDedicated-v1130-DEFAULT ::=			
SEQUENCE {			
pusch-DMRS-r11 CHOICE {			
release	NULL		
setup SEQUENCE {			
nPUSCH-Identity-r11	FFS		
nDMRS-CSH-Identity-r11	FFS		
}			
}			
}			

RACH-ConfigCommon-DEFAULT

Table 4.6.3-12: RACH-ConfigCommon-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
RACH-ConfigCommon-DEFAULT ::= SEQUENCE {			
preambleInfo SEQUENCE {			
numberOfRA-Preambles	n52	Assuming the number of dedicated preambles is 12.	
preamblesGroupAConfig SEQUENCE {}	Not present		
}			
powerRampingParameters SEQUENCE {			
powerRampingStep	dB2		
preambleInitialReceivedTargetPower	dBm-104 (default)	Thermal noise = - 113 dBm NF = 5 dB IoT = 6 dB Required SNR = - 8 dB (See table 8.4.2-1 in TS 36.104 [30]) -> -110 dB (default value is acceptable)	
}			
ra-SupervisionInfo SEQUENCE {			
preambleTransMax	n6	Under the condition of Case 1 in RAN1 simulation assumptions, an UE with pathloss of CDF = 90% reaches the maximum transmit power in 4 successive retransmissions. 6 has been selected considering the margin of 2.	
ra-ResponseWindowSize	sf10	The maximum value is preferable.	
mac-ContentionResolutionTimer	sf48	Allows for a sufficient number of msg3 retransmissions.	
}		11. 1	
maxHARQ-Msg3Tx	4	Under the condition of Target SIR = 2 dB, the probability of 2 transmissions is less than 1%. 4 has been selected considering the margin of 2.	

Rach-ConfigDedicated-DEFAULT

Table 4.6.3-12A: Rach-ConfigDedicated-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
Rach-ConfigDedicated-DEFAULT ::= SEQUENCE {			
ra-PreambleIndex	52		
ra-PRACH-MaskIndex	0		
}			

RadioResourceConfigCommon-DEFAULT

Table 4.6.3-13: RadioResourceConfigCommon-DEFAULT

Derivation Path: 36.331 clause 6.3.2		<u> </u>	
Information Element	Value/remark	Comment	Condition
RadioResourceConfigCommon-DEFAULT ::= SEQUENCE {			
rach-ConfigCommon	RACH-ConfigCommon- DEFAULT		
prach-Config	PRACH-Config- DEFAULT		
pdsch-ConfigCommon	Not present		
	PDSCH-ConfigCommon- DEFAULT		FullConfig, HO-to- EUTRA
pusch-ConfigCommon	PUSCH-ConfigCommon- DEFAULT		
phich-Config	Not present		
	PHICH-Config-DEFAULT		FullConfig, HO-to- EUTRA
pucch-ConfigCommon	Not present		SAME-BW
	PUCCH-ConfigCommon- DEFAULT		DIFF-BW, FullConfig, HO-to- EUTRA
soundingRSUL-ConfigCommon	SoundingRS-UL- ConfigCommon- DEFAULT		
uplinkPowerControlCommon	Not present		
	UplinkPowerControlCom mon-DEFAULT		FullConfig, HO-to- EUTRA
antennaInfoCommon	Not present		
antennaInfoCommon SEQUENCE {			2TX
antennaPortsCount	an2		
}			
antennalnfoCommon SEQUENCE {			FullConfig, HO-to- EUTRA
antennaPortsCount	an1		
}			
p-Max	Not present		
tdd-Config	Not present		FDD
10 5 5 5 1	TDD-Config-DEFAULT		TDD
ul-CyclicPrefixLength	len1		0.0
uplinkPowerControlCommon-v1020	UplinkPowerControlCom mon-v1020-DEFAULT		CA
	Not present		
}			

Condition	Explanation
Condition	

FDD	FDD cell environment
TDD	TDD cell environment
2TX	Used for cells with two antenna ports
SAME-BW	Source and target cell are configured with same bandwidth
DIFF-BW	Source and target cell are configured with different bandwidth
UL CA	When UL Carrier Aggregation is used.
FullConfig	Handover with full configuration option (Rel-9 or later)
HO-to-EUTRA	Inter-RAT handover to E-UTRA
CA	For Carrier Aggregation Test cases

RadioResourceConfigCommonSCell-r10-DEFAULT

Table 4.6.3-13A: RadioResourceConfigCommonSCell-r10-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
RadioResourceConfigCommonSCell-r10-DEFAULT ::= SEQUENCE {			
nonUL-Configuration-r10 SEQUENCE {			
dl-Bandwidth-r10	Same downlink bandwidth as used for target SCell		
antennalnfoCommon-r10 SEQUENCE {			
antennaPortsCount	an1		1TX
antennaPortsCount	an2		2TX
antennaPortsCount	an4		4TX
}			
mbsfn-SubframeConfigList-r10	Not present		
phich-Config-r10	PHICH-Config-DEFAULT		
pdsch-ConfigCommon-r10	PDSCH-ConfigCommon- DEFAULT		
tdd-Config-r10	Not present		FDD
	TDD-Config-DEFAULT		TDD
}	Ĭ I		
ul-Configuration-r10	Not present		
ul-Configuration-r10 SEQUENCE {			UL CA
ul-FreqInfo-r10 SEQUENCE {			
ul-CarrierFreq-r10	Not present		
ul-Bandwidth-r10	Not present		
additionalSpectrumEmissionSCell-r10	1 (CA_NS_01)		
}			
p-Max-r10	Not present		
uplinkPowerControlCommonSCell-r10	UplinkPowerControlCom monSCell-r10-DEFAULT		
soundingRS-UL-ConfigCommon-r10	SoundingRS-UL- ConfigCommon- DEFAULT		
ul-CyclicPrefixLength-r10	len1		
prach-ConfigSCell-r10	Not present		FDD
	FFS		TDD
pusch-ConfigCommon-r10	PUSCH-ConfigCommon- DEFAULT		
}			
}			

Condition	Explanation
FDD	FDD cell environment
TDD	TDD cell environment
UL CA	When UL Carrier Aggregation is used.
1TX	Used for SCell with one antenna port
2TX	Used for SCell with two antenna ports
4TX	Used for SCell with four antenna ports

RadioResourceConfigCommonSIB-DEFAULT

Table 4.6.3-14: RadioResourceConfigCommonSIB-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
RadioResourceConfigCommonSIB-DEFAULT ::= SEQUENCE {			
rach-ConfigCommon	RACH-ConfigCommon- DEFAULT		
bcch-Config	BCCH-Config-DEFAULT		
pcch-Config	PCCH-Config-DEFAULT		
prach-Config	PRACH-ConfigSIB- DEFAULT		
pdsch-ConfigCommon	PDSCH-ConfigCommon- DEFAULT		
pusch-ConfigCommon	PUSCH-ConfigCommon- DEFAULT		
pucch-ConfigCommon	PUCCH-ConfigCommon- DEFAULT		
soundingRS-UL-ConfigCommon	SoundingRS-UL- ConfigCommon- DEFAULT		
uplinkPowerControlCommon	UplinkPowerControlCom mon-DEFAULT		
ul-CyclicPrefixLength	len1		
uplinkPowerControlCommon-v1020	Not present		
	UplinkPowerControlCom mon-v1020-DEFAULT		CA
}			

Condition	Explanation
CA	For Carrier Aggregation Test cases

RadioResourceConfigDedicated-SRB1

Table 4.6.3-15: RadioResourceConfigDedicated-SRB1

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
RadioResourceConfigDedicated-SRB1 ::=			
SEQUENCE {			
srb-ToAddModList SEQUENCE (SIZE (12)) OF	1 entry, with value SRB-		
SEQUENCE {}	ToAddMod-DEFAULT		
	using condition SRB1		
drb-ToAddModList	Not present		
drb-ToReleaseList	Not present		
mac-MainConfig CHOICE {			
explicitValue	MAC-MainConfig-SRB	See subclause	
	_	4.8.2	
}			
sps-Config	Not present		
physicalConfigDedicated	PhysicalConfigDedicated	See subclause	
	-DEFAULT using	4.8.2	
	condition SRB1		
}			

RadioResourceConfigDedicated-SRB2-DRB(n,m)

Table 4.6.3-16: RadioResourceConfigDedicated-SRB2-DRB(n,m)

Information Element	Value/remark	Comment	Condition
RadioResourceConfigDedicated-SRB2-DRB(n, m) ::= SEQUENCE {		n is the number of AM RLC DRBs (1N) m is the number of UM RLC DRBs (0M)	
srb-ToAddModList SEQUENCE (SIZE (12)) OF SEQUENCE {	1 entry		
srb-ToAddMod[1]	SRB-ToAddMod- DEFAULT using condition SRB2	See subclause 4.8.2	
}			
drb-ToAddModList SEQUENCE (SIZE (1maxDRB)) OF SEQUENCE {	n+m entries		
drb-ToAddMod[k, k=1n]	DRB-ToAddMod- DEFAULT (k) using condition AM	n AM RLC DRBs See subclause 4.8.2	
drb-ToAddMod[k, k=n+1n+m]	DRB-ToAddMod- DEFAULT (k) using condition UM	m UM RLC DRBs See subclause 4.8.2	m>0
}			
drb-ToReleaseList	Not present		
mac-MainConfig CHOICE {			
explicitValue	MAC-MainConfig-RBC using condition DRX_L (note)	See subclause 4.8.2	m=0
	MAC-MainConfig-RBC using condition DRX_S (note)	See subclause 4.8.2	m>0
}			
sps-Config	Not present		
physicalConfigDedicated	PhysicalConfigDedicated - DEFAULT using condition RBC	See subclause 4.8.2	

NOTE: In cases where no RLC-UM bearer is configured, large DRX Cycle length is used. In cases where at least one RLC-UM bearer is configured, small DRX Cycle length is used.

Condition		Explanation	
m=0	m is equal to zero		
m>0	m is greater than zero		

- RadioResourceConfigDedicated-DRB(n,m)

Table 4.6.3-17: RadioResourceConfigDedicated-DRB(n,m)

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
RadioResourceConfigDedicated-DRB(n, m) ::= SEQUENCE {		n is the number of AM RLC DRBs (0N) m is the number of UM RLC DRBs (0M)	
srb-ToAddModList	Not present		
drb-ToAddModList SEQUENCE (SIZE (1maxDRB)) OF SEQUENCE {	n+m entries	BID is the total number of established DRBs in the UE, before applying the contents of this IE	
drb-ToAddMod[k, k=BID+1BID+n]	DRB-ToAddMod- DEFAULT (k) using condition AM	n AM RLC DRBs See subclause 4.8.2	n>0
drb-ToAddMod[k, k= BID+1+n BID+n+m]	DRB-ToAddMod- DEFAULT (k) using condition UM	m UM RLC DRBs See subclause 4.8.2	m>0
}			
drb-ToReleaseList	Not present		
mac-MainConfig	Not present (note)		m=0
mac-MainConfig CHOICE { explicitValue	MAC-MainConfig-RBC using condition DRX_S (note)	See subclause 4.8.2	m>0
}			
sps-Config	Not present		
physicalConfigDedicated	Not present		
NOTE: In cases where no RLC-UM bearer is added, cases where at least one RLC-UM bearer is			cation. In

Condition	Explanation
n>0	n is greater than zero
m=0	m is equal to zero
m>0	m is greater than zero

- RadioResourceConfigDedicated-HO-TO-EUTRA(n,m)

Table 4.6.3-18: RadioResourceConfigDedicated-HO-TO-EUTRA(n,m)

Information Element	Value/remark	Comment	Condition
RadioResourceConfigDedicated-HO-TO-EUTRA(n,		n is the number of	
m) ::= SEQUENCE {		AM RLC DRBs	
		(1N)	
		m is the number	
		of UM RLC DRBs	
		(0M)	
srb-ToAddModList SEQUENCE (SIZE (12)) OF	2 entries		
SEQUENCE {			
srb-ToAddMod[1]	SRB-ToAddMod-	See subclause	
	DEFAULT using	4.8.2	
	condition SRB1		
srb-ToAddMod[2]	SRB-ToAddMod-	See subclause	
	DEFAULT using	4.8.2	
	condition SRB2		
}			
drb-ToAddModList SEQUENCE (SIZE (1maxDRB)) OF SEQUENCE {	n+m entries		
drb-ToAddMod[k, k=1n]	DRB-ToAddMod-	n AM RLC DRBs	
	DEFAULT (k) using	See subclause	
	condition AM	4.8.2	
drb-ToAddMod[k, k=n+1n+m]	DRB-ToAddMod-	m UM RLC DRBs	m>0
	DEFAULT (k) using	See subclause	
	condition UM	4.8.2	
}			
drb-ToReleaseList	Not present		
mac-MainConfig CHOICE {	MAC Main Cauffin DDC	0	0
explicitValue	MAC-MainConfig-RBC	See subclause	m=0
	using condition DRX_L	4.8.2	
	(note)	0 1 1	
	MAC-MainConfig-RBC	See subclause	m>0
	using condition DRX_S	4.8.2	
1	(note)		
sps-Config	Not present		
physicalConfigDedicated	PhysicalConfigDedicated	See subclause	
priyaicaicoriiigDedicated	- DEFAULT using	4.8.2	
	condition RBC	4.0.2	
	Condition RBC		

NOTE: In cases where no RLC-UM bearer is configured, large DRX Cycle length is used. In cases where at least one RLC-UM bearer is configured, small DRX Cycle length is used.

Condition	Explanation
m=0	m is equal to zero
m>0	m is greater than zero

RadioResourceConfigDedicated-AM-DRB-ADD(bid)

Table 4.6.3-18A: RadioResourceConfigDedicated-AM-DRB-ADD(bid)

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
RadioResourceConfigDedicated-AM-DRB-ADD(bid)		bid is the bearer	
::= SEQUENCE {		identity	
srb-ToAddModList	Not present		
drb-ToAddModList SEQUENCE (SIZE (1maxDRB))	one entry		
OF SEQUENCE {			
drb-ToAddMod[1]	DRB-ToAddMod-	See subclause	
	DEFAULT (bid) using	4.8.2	
	condition AM		
}			
drb-ToReleaseList	Not present		
mac-MainConfig	Not present		
sps-Config	Not present		
physicalConfigDedicated	Not present		
}			

RadioResourceConfigDedicated-UM-DRB-ADD(bid)

Table 4.6.3-18B: RadioResourceConfigDedicated-UM-DRB-ADD(bid)

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
RadioResourceConfigDedicated-UM-DRB-ADD(bid)		bid is the bearer	
::= SEQUENCE {		identity	
srb-ToAddModList	Not present		
drb-ToAddModList SEQUENCE (SIZE (1maxDRB))	one entry		
OF SEQUENCE {	,		
drb-ToAddMod[1]	DRB-ToAddMod-	See subclause	
	DEFAULT (bid) using	4.8.2	
	condition UM		
}			
drb-ToReleaseList	Not present		
mac-MainConfig CHOICE {			
explicitValue	MAC-MainConfig-RBC	See subclause	
	using condition DRX_S	4.8.2	
	(note)		
}			
sps-Config	Not present		
physicalConfigDedicated	Not present		
}			
NOTE: Since one RLC-UM bearer is added, small DRX	Cycle length is used.		

RadioResourceConfigDedicated- DRB-REL(bid)

Table 4.6.3-18C: RadioResourceConfigDedicated-DRB-REL(bid)

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
RadioResourceConfigDedicated-DRB-REL(bid) ::=		bid is the bearer	
SEQUENCE {		identity	
srb-ToAddModList	Not present		
drb-ToAddModList	Not present		
drb-ToReleaseList SEQUENCE (SIZE (1maxDRB))	one entry		
OF	·		
drb-Identity[1]	bid		
mac-MainConfig	Not present		
sps-Config	Not present		
physicalConfigDedicated	Not present		
}			

RadioResourceConfigDedicated-SCell_AddMod

Table 4.6.3-19AAA: RadioResourceConfigDedicated-SCell_AddMod

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
RadioResourceConfigDedicated-SCell_AddMod ::=			
SEQUENCE {			
srb-ToAddModList	Not present		
drb-ToAddModList	Not present		
drb-ToReleaseList	Not present		
mac-MainConfig	MAC-MainConfig-RBC	See subclause	
	using condition	4.8.2	
	SCell_AddMod		
sps-Config	Not present		
physicalConfigDedicated	PhysicalConfigDedicated-	See subclause	
	DEFAULT using	4.8.2	
	condition SCell_AddMod		
}			

RadioResourceConfigDedicated-HO

Table 4.6.3-19: RadioResourceConfigDedicated-HO

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
RadioResourceConfigDedicated-HO ::= SEQUENCE {			
srb-ToAddModList	Not present		
drb-ToAddModList	Not present		
drb-ToReleaseList	Not present		
mac-MainConfig	Not present		
sps-Config	Not present		
physicalConfigDedicated	PhysicalConfigDedicated- DEFAULT using condition RBC-HO	See subclause 4.8.2	
}			

RadioResourceConfigDedicatedSCell-r10-DEFAULT

Table 4.6.3-19AA: RadioResourceConfigDedicatedSCell-r10-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
RadioResourceConfigDedicatedSCell-r10 ::= SEQUENCE {			
physicalConfigDedicatedSCell-r10	PhysicalConfigDedicated SCell-r10-DEFAULT		
}			

RLC-Config-DRB-AM-RECONFIG

Table 4.6.3-19A: RLC-Config-DRB-AM-RECONFIG

Derivation Path: 36.508 table 4.8.2.1.3.2-1: RLC-Config-DRB-AM			
Information Element	Value/remark	Comment	Condition
RLC-Config-DRB-AM-RECONFIG ::= CHOICE {			
am SEQUENCE {			
ul-AM-RLC SEQUENCE {			
t-PollRetransmit	ms855		
poliPDU	p64		
pollByte	kB250		
maxRetxThreshold	t8		
}			
dl-AM-RLC SEQUENCE {			
t-Reordering	ms85		
t-StatusProhibit	ms50		
}			
}			
}			

RLC-Config-DRB-UM-RECONFIG

Table 4.6.3-19B: RLC-Config-DRB-UM-RECONFIG

Derivation Path: 36.508 table 4.8.2.1.3.1-1: RLC-Config-DRB-UM			
Information Element	Value/remark	Comment	Condition
RLC-Config-DRB-UM-RECONFIG ::= CHOICE {			
um-Bi-Directional SEQUENCE {			
ul-UM-RLC SEQUENCE {			
sn-FieldLength	Size10		
}			
dI-UM-RLC SEQUENCE {			
sn-FieldLength	Size10		
t-Reordering	ms55		
}			
}			
}			

RLC-Config-SRB-AM-RECONFIG

Table 4.6.3-19C: RLC-Config-SRB-AM-RECONFIG

Derivation Path: 36.331 clause 6.3.2, 9.2.1			
Information Element	Value/remark	Comment	Condition
RLC-Config-SRB-AM-RECONFIG ::= CHOICE {			
am SEQUENCE {			
ul-AM-RLC SEQUENCE {			
t-PollRetransmit	ms50		
poliPDU	pInfinity	Default	
pollByte	kBinfinity	Default	
maxRetxThreshold	t6		
}			
dl-AM-RLC SEQUENCE {			
t-Reordering	ms40		
t –StatusProhibit	ms0	Default	
}			
}			
}			

- SCellToAddMod-r10-DEFAULT

Table 4.6.3-19D: SCellToAddMod-r10-DEFAULT

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
SCellToAddMod-r10 ::= SEQUENCE {			
sCellIndex-r10	Set according to specific message content		
cellIdentification-r10 SEQUENCE {			
physCellId-r10	Set according to specific message content		
dl-CarrierFreq-r10	Set according to specific message content		
radioResourceConfigCommonSCell-r10	RadioResourceConfigCo mmonSCell-r10- DEFAULT		
radioResourceConfigDedicatedSCell-r10	RadioResourceConfigDe dicatedSCell-r10-DEFAULT		
}			

SCellToRelease-r10-DEFAULT

Table 4.6.3-19E: SCellToRelease-r10-DEFAULT

Derivation Path: 36.331 clause 6.2.2			
Information Element	Value/remark	Comment	Condition
sCellToReleaseList-r10 SEQUENCE (SIZE			
(1maxSCell-r10) OF SEQUENCE {			
sCellIndex-r10[1]	1		
}			

SchedulingRequest-Config-DEFAULT

Table 4.6.3-20: SchedulingRequest-Config-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
SchedulingRequest-Config-DEFAULT ::= CHOICE {			
setup SEQUENCE {			
sr-PUCCH-ResourceIndex	See subclause 4.6.8	Channel- bandwidth- dependent parameter	
sr-ConfigIndex	30		FDD
	27		TDD
dsr-TransMax	n4		
}			
}			

Condition	Explanation
FDD	FDD cell environment
TDD	TDD cell environment

Table 4.6.3-20A: Void

SoundingRS-UL-ConfigCommon-DEFAULT

Table 4.6.3-21: SoundingRS-UL-ConfigCommon-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
SoundingRS-UL-ConfigCommon-DEFAULT ::= SEQUENCE {			
setup SEQUENCE {			
-srs-BandwidthConfig	See subclause 4.6.8	Channel- bandwidth- dependent parameter	
srs-SubframeConfig	sc0	Assuming SRS density is high (see Table 5.5.3.3-1 in TS 36.211)	FDD
	sc4	Assuming SRS density is high (see Table 5.5.3.3-2 in TS 36.211)	TDD
ackNackSRS-SimultaneousTransmission	TRUE	Typical value in real network	
srs-MaxUpPts	Not Present		
}			
}			

Condition	Explanation
FDD	FDD cell environment
TDD	TDD cell environment

SoundingRS-UL-ConfigDedicated-DEFAULT

Table 4.6.3-22: SoundingRS-UL-ConfigDedicated-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
SoundingRS-UL-ConfigDedicated-DEFAULT ::=			
CHOICE {			
setup SEQUENCE {			
srs-Bandwidth	bw0	bw0 used with no frequency hopping. bw3 used with frequency hopping	
srs-HoppingBandwidth	hbw0		
freqDomainPosition	0		
duration	TRUE		
srs-ConfigIndex	20	See Table 8.2-1 in TS 36.213	FDD
	31	INTEGER (01023) See Table 8.2-2 in TS 36.213	TDD
transmissionComb	0		
cyclicShift	cs0		
}			
}			

Condition	Explanation
FDD	FDD cell environment
TDD	TDD cell environment

Table 4.6.3-22AA: Void

SoundingRS-UL-ConfigDedicatedAperiodic-r10-DEFAULT

Table 4.6.3-22AB: SoundingRS-UL-ConfigDedicatedAperiodic-r10-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
SoundingRS-UL-ConfigDedicatedAperiodic-r10 ::=			
CHOICE {			
setup SEQUENCE {			
srs-ConfigIndexAp-r10	10		
srs-ConfigApDCI-Format4-r10	Not present		
srs-ActivateAp-r10	Not present		
}			
}			

SRB-ToAddModList-RECONFIG

Table 4.6.3-22A: SRB-ToAddModList-RECONFIG

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
SRB-ToAddModList ::= SEQUENCE (SIZE (12)) OF	2 Entries		
SEQUENCE {			
srb-Identity[1]	1		
rlc-Config[1] CHOICE {			
explicitValue	RLC-Config-SRB-AM- RECONFIG		
logicalChannelConfig[1] CHOICE {			
defaultValue	NULL		
}			
srb-Identity[2]	2		
rlc-Config[2] CHOICE {			
explicitValue	RLC-Config-SRB-AM- RECONFIG		
}			
logicalChannelConfig[2] CHOICE {			
defaultValue	NULL		
}			
}			

TDD-Config-DEFAULT

Table 4.6.3-23: TDD-Config-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
TDD-Config-DEFAULT ::= SEQUENCE {			
subframeAssignment	sa1		
specialSubframePatterns	Ssp6		
}			

TPC-PDCCH-Config-DEFAULT

Table 4.6.3-24: TPC-PDCCH-Config-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
TPC-PDCCH-Config-DEFAULT ::= CHOICE {			
setup SEQUENCE {			
tpc-RNTI	'03FF'H		PUCCH
	'01FA'H		PUSCH
tpc-Index CHOICE {			
indexOfFormat3	1		
}			
}			
}			

Condition	Explanation
PUCCH	For PUCCH
PUSCH	For PUSCH

UplinkPowerControlCommon-DEFAULT

Table 4.6.3-25: UplinkPowerControlCommon-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
UplinkPowerControlCommon-DEFAULT ::=			
SEQUENCE {			
p0-NominalPUSCH	-85 (-85 dBm)	Typical value in	
		real network	
alpha	al08 (0.8)	Typical value in	
		real network	
p0-NominalPUCCH	-117 (-117 dBm)	Thermal noise = -	
		121 dBm	
		NF = 5 dB	
		IoT = 6 dB	
		Required SNR = -	
		7.5 dB (1-bit A/N)	
		-> -117 dB	
deltaFList-PUCCH SEQUENCE {			
deltaF-PUCCH-Format1	deltaF0	In accordance	
		with RAN1	
		simulation results	
deltaF-PUCCH-Format1b	deltaF3	In accordance	
		with RAN1	
		simulation results	
deltaF-PUCCH-Format2	deltaF0	In accordance	
		with RAN1	
		simulation results	
deltaF-PUCCH-Format2a	deltaF0	In accordance	
		with RAN1	
		simulation results	
deltaF-PUCCH-Format2b	deltaF0	In accordance	
		with RAN1	
		simulation results	
dalta Dra arab la Mara?	1		
deltaPreambleMsg3	4		

UplinkPowerControlCommonSCell-r10-DEFAULT

Table 4.6.3-25A: UplinkPowerControlCommonSCell-r10-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
UplinkPowerControlCommonSCell-r10 ::=			
SEQUENCE {			
p0-NominalPUSCH-r10	-85 (-85 dBm)		
alpha-r10	al08 (0.8)		
}			

UplinkPowerControlCommon-v1020-DEFAULT

Table 4.6.3-25AA: UplinkPowerControlCommon-v1020-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
UplinkPowerControlCommon-v1020-DEFAULT ::=			
SEQUENCE {			
deltaF-PUCCH-Format3-r10	deltaF0		RM coding
	deltaF4		Dual RM
			coding
deltaF-PUCCH-Format1bCS-r10	deltaF1		
}			

Condition	Explanation
RM coding	Used for Reed-Muller coding
Dual RM coding	Used for Dual Reed-Muller coding

UplinkPowerControlDedicated-DEFAULT

Table 4.6.3-26: UplinkPowerControlDedicated-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
UplinkPowerControlDedicated-DEFAULT ::=			
SEQUENCE {			
p0-UE-PUSCH	0		
deltaMCS-Enabled	en0		
accumulationEnabled	TRUE		
p0-UE-PUCCH	0		
pSRS-Offset	3 (-6 dB)		
filterCoefficient	fc4		
}			

UplinkPowerControlDedicated-v1020-DEFAULT

Table 4.6.3-26A: UplinkPowerControlDedicated-v1020-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
UplinkPowerControlDedicated-v1020 ::= SEQUENCE			
{			
deltaTxD-OffsetListPUCCH-r10	Not Present		
<pre>deltaTxD-OffsetListPUCCH-r10 SEQUENCE {</pre>			TxD
deltaTxD-OffsetPUCCH-Format1-r10	dB0		
deltaTxD-OffsetPUCCH-Format1a1b-r10	dB0		
deltaTxD-OffsetPUCCH-Format22a2b-r10	dB0		
deltaTxD-OffsetPUCCH-Format3-r10	dB0		
}			
pSRS-OffsetAp-r10	0		SRSAp
			Not present
}			

Condition	Explanation
TxD	When PUCCH Transmission Diversity is performed.
SRSAp	Aperiodic SRS configured

UplinkPowerControlDedicated-v1130-DEFAULT

Table 4.6.3-26BA: UplinkPowerControlDedicated-v1130-DEFAULT

Information Element	Value/remark	Comment	Condition
UplinkPowerControlDedicated-v1130 -DEFAULT ::=			
SEQUENCE {			
pSRS-Offset-v1130	FFS		
pSRS-OffsetAp-v1130	FFS		
<pre>deltaTxD-OffsetListPUCCH-v1130 = SEQUENCE {</pre>			
deltaTxD-OffsetPUCCH-Format1bCS-r11	FFS		
}			
}			

UplinkPowerControlDedicatedSCell-r10-DEFAULT

Table 4.6.3-26B: UplinkPowerControlDedicatedSCell-r10-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
UplinkPowerControlDedicatedSCell-r10 ::= SEQUENCE {			
p0-UE-PUSCH-r10	0		
deltaMCS-Enabled-r10	en0		
accumulationEnabled-r10	TRUE		
pSRS-Offset-r10	7		
pSRS-OffsetAp-r10	7		
filterCoefficient-r10	fc4		
pathlossReferenceLinking-r10	sCell		
}			

RadioResourceConfigDedicated-DRB-Mod

Table 4.6.3-27: RadioResourceConfigDedicated-DRB-Mod

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
RadioResourceConfigDedicated-DRB ::=			
SEQUENCE {			
srb-ToAddModList	Not present		
drb-ToAddModList	DRB-ToAddModList- RECONFIG		
}			
drb-ToReleaseList	Not present		
mac-MainConfig	Not present		
sps-Config	Not present		
physicalConfigDedicated	Not present		
}			

- RadioResourceConfigDedicated-PCell-PATTERN

Table 4.6.3-28: RadioResourceConfigDedicated-PCell-PATTERN

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
measSubframePatternPCell ::= CHOICE {			
MeasSubframePattern-r10 ::= CHOICE {			
subframePatternFDD-r10	0011001100110011		
	00110011001100110011'		
subframePatternTDD-r10	B FFS		
Subiramerallem 100-110	FFS		
,)			
_i }			

- OtherConfig-r9

Table 4.6.3-29: OtherConfig-r9

Derivation Path: 36.331 clause 6.3.6			
Information Element	Value/remark	Comment	Condition
OtherConfig-r9 ::= SEQUENCE {			
reportProximityConfig-r9 ::= SEQUENCE {			
proximityIndicationEUTRA-r9	Not Present		
proximityIndicationUTRA-r9	Not Present		
}			
IDC-Config-r11 SEQUENCE {			
idc-Indication-r11	Not Present		
autonomouseDenialParameters-r11 ::= SEQUENCE {			
autonomousDenialSubframes-r11	Not Present		
autonomousDenialValidity-r11	Not Present		
}			
}			
PowerPrefIndicationConfig-r11 CHOICE {			
Release	NULL		Release
setup SEQUENCE {			Setup
powerPrefIndicationTimer-r11	s30		
}			
}			
ObtainLocationConfig-r11 ::= SEQUENCE {			
obtainLocation-r11	Not present		
}			
}			

Condition	Explanation
Setup	The UE is allowed to send power preference indications.
Release	The UE is not allowed to send power preference indications

4.6.4 Security control information elements

SecurityConfigHO-DEFAULT

Table 4.6.4-1: SecurityConfigHO-DEFAULT

Derivation Path: 36.331 clause 6.2,2, 6.3.3			
Information Element	Value/remark	Comment	Condition
SecurityConfigHO-DEFAULT ::= SEQUENCE {			
handoverType CHOICE {			
intraLTE SEQUENCE {			
securityAlgorithmConfig	Not present		
keyChangeIndicator	FALSE		
nextHopChainingCount	0		
}			
}			
}			

SecurityConfigSMC-DEFAULT

Table 4.6.4-2: SecurityConfigSMC-DEFAULT

Derivation Path: 36.331 clause 6.2,2, 6.3.3			
Information Element	Value/remark	Comment	Condition
SecurityConfigSMC-DEFAULT ::= SEQUENCE {			
securityAlgorithmConfig SEQUENCE {			
cipheringAlgorithm	Set according to PIXIT parameter for default ciphering algorithm		For SIG
	eea0		For RF
integrityProtAlgorithm	Set according to PIXIT parameter for default integrity protection algorithm		For SIG
	spare1 or eia0-v920	This IE is set to one of the algorithms	For RF
	eia1	supported by the UE as indicated in the IE "UE network	
	eia2	capability" in the ATTACH REQUEST message.	
}			
}			

Condition	Explanation
For SIG	Used for signalling test cases
For RF	Used for RF/RRM test cases

4.6.5 Mobility control information elements

MobilityControlInfo-HO

Table 4.6.5-1: MobilityControlInfo-HO

Information Element	Value/remark	Comment	Condition
MobilityControlInfo-HO ::= SEQUENCE {			
targetPhysCellId	Set according to specific message content		
carrierFreq	Set according to specific message content		
carrierBandwidth	Not present		SAME-BW
carrierBandwidth SEQUENCE {			DIFF-BW
dl-Bandwidth	Same downlink bandwidth as used for target cell		
ul-Bandwidth	Not present		
}			
additionalSpectrumEmission	Not present		
	1		HO-to- EUTRA
t304	ms1000		
newUE-Identity	SS arbitrarily selects a value between '003C'H and 'FFF2'H.		
radioResourceConfigCommon	RadioResourceConfigCo mmon-DEFAULT		
rach-ConfigDedicated	Not present		
	Rach-ConfigDedicated- DEFAULT		FullConfig, HO-to- EUTRA

Condition	Explanation
SAME-BW	Source and target cell are configured with same bandwidth
DIFF-BW	Source and target cell are configured with different bandwidth

4.6.6 Measurement information elements

- MeasConfig-DEFAULT

Table 4.6.6-1: MeasConfig-DEFAULT

Information Element	Value/remark	Comment	Condition
MeasConfig-DEFAULT ::= SEQUENCE {			
measObjectToRemoveList	Not present		
measObjectToAddModList	Not present		
	MeasObjectEUTRA- GENERIC		elClC
reportConfigToRemoveList	Not present		
reportConfigToAddModList	Not present		
	ReportConfigToAddModL ist_DEFAULT		elClC
measIdToRemoveList	Not present		
measIdToAddModList	Not present		
	MeasIdToAddModList_D EFAULT		elClC
quantityConfig	QuantityConfig- DEFAULT		
measGapConfig	Not present		
	MeasGapConfig-GP1		INTER- FREQ, UTRAN
	MeasGapConfig-GP2		GERAN, INTER- RAT
s-Measure	Not present		
preRegistrationInfoHRPD	Not present		
speedStatePars	Not present		
}		·	

Condition	Explanation	
INTER-FREQ	For E-UTRA inter-freq measurements	
INTER-RAT	For inter-RAT measurements with UTRAN and GERAN	
elClC	For eICIC measurements	

- MeasGapConfig-GP1

Table 4.6.6-1A: MeasGapConfig-GP1

Derivation Path: 36.331, clause 6.3.5			
Information Element	Value/remark	Comment	Condition
MeasGapConfig-GP1 ::= CHOICE {			
setup SEQUENCE {			
gapOffset CHOICE {			
gp0	0	TGRP = 40 ms	
}			
}			
}			

- MeasGapConfig-GP2

Table 4.6.6-1B: MeasGapConfig-GP2

Derivation Path: 36.331, clause 6.3.5			
Information Element	Value/remark	Comment	Condition
MeasGapConfig-GP2 ::= CHOICE {			
setup SEQUENCE {			
gapOffset CHOICE {			
gp1	0	TGRP = 80 ms	
}			
}			
}			

MeasObjectCDMA2000-GENERIC

Table 4.6.6-1C: MeasObjectCDMA2000-GENERIC

Derivation Path: 36.331 clause 6.3.5			
Information Element	Value/remark	Comment	Condition
MeasObjectCDMA2000-GENERIC ::= SEQUENCE {			
cdma2000-Type	As per specific message content	[type1XRTT, typeHRPD]	
carrierFreq SEQUENCE {			
bandClass	As per specific message content	Should be one of the following: bc0, bc1, bc2, bc3, bc4, bc5, bc6, bc7, bc8, bc9, bc10, bc11, bc12, bc13, bc14, bc15, bc16, bc17, spare14, spare13, spare12, spare11, spare6, spare5, spare4, spare3, spare2, spare1,	
arfcn	Downlink channel number	INTEGER (0 to 2047)	
searchWindowSize	As per specific message content	INTEGER (015)	
offsetFreq	0 (0 dB)		
cellsToRemoveList	Not present		
cellsToAddModList	[Not present]		
cellForWhichToReportCGI	Not present		
}			

ReportConfigToAddModList_DEFAULT

Table 4.6.6-1D: ReportConfigToAddModList_DEFAULT

Derivation Path: 36.331, clause 6.3.5			
Information Element	Value/remark	Comment	Condition
ReportConfigToAddModList_DEFAULT ::=	1 entry		
SEQUENCE {			
reportConfigId[1]	IdReportConfig-A3		
reportConfig[1]	ReportConfigEUTRA-A3		
}			

MeasIdToAddModList_DEFAULT

Table 4.6.6-1E: MeasIdToAddModList_DEFAULT

Derivation Path: 36.331, clause 6.3.5			
Information Element	Value/remark	Comment	Condition
MeasIdToAddModList_DEFAULT ::= SEQUENCE {	1 entry		
measId[1]	1		
measObjectId[1]	IdMeasObject-f1		
reportConfigId[1]	IdReportConfig-A3		
}			

MeasObjectEUTRA-GENERIC

Table 4.6.6-2: MeasObjectEUTRA-GENERIC(Freq)

Derivation Path: 36.331 clause 6.3.5			
Information Element	Value/remark	Comment	Condition
MeasObjectEUTRA-GENERIC(Freq) ::= SEQUENCE			
{			
carrierFreq	Downlink EARFCN for		
	Freq		
allowedmeasBandwidth	The number of the		
	resource blocks for Freq		
presenceAntennaPort1	FALSE		
	TRUE	At least two cell-	All
		specific antenna	neighCells
		ports are used in	with port1
		all neighbouring	
		cells.	
neighbourCellConfig	'01'B (No MBSFN	MBSFN doesn't	
	subframes are present in	apply by default.	
	all neighbour cells)		
offsetFreq	0 (dB 0)		
cellsToRemoveList	Not present		
cellsToAddModList	Not present		
blackCellsToRemoveList	Not present		
blackCellsToAddModList	Not present		
cellForWhichToReportCGI	Not present		
measCycleSCell-r10	sf512		SCell_EXI
			ST
measSubframePatternConfigNeigh-r10	Not present		
}			

Condition	Explanation
SCell_EXIST	When SCell exists on the carrier frequency indicated by carrierFreq
All neighCells with	Used for all neighbouring cells with at least two cell-specific antenna ports
port1	

MeasObjectGERAN-GENERIC

Table 4.6.6-2A: MeasObjectGERAN-GENERIC(Freq)

Derivation Path: 36.331 clause 6.3.5			
Information Element	Value/remark	Comment	Condition
MeasObjectGERAN-GENERIC(Freq) ::= SEQUENCE			
\{			
carrierFreqs SEQUENCE {			
startingARFCN	Downlink GERAN ARFCN of Freq		
bandIndicator	Set according to the band used for GERAN cells under test		
followingARFCNs CHOICE {			
explicitListOfARFCNs	Set the corresponding ARFCN of GERAN cells under test		
}			
offsetFreq	0 (dB 0)		
ncc-Permitted	'01000000'B	NCC=1 permitted	
cellForWhichToReportCGI	Not present		
}			

MeasObjectUTRA-GENERIC

Table 4.6.6-3: MeasObjectUTRA-GENERIC(Freq)

Derivation Path: 36.331 clause 6.3.5			
Information Element	Value/remark	Comment	Condition
MeasObjectUTRA-GENERIC(Freq) ::= SEQUENCE {			
carrierFreq	Downlink UARFCN of Freq		
offsetFreq	0 (dB 0)		
cellsToRemoveList	Not present		
cellsToAddModList	Not present	For UTRA, the neighbouring cell list needs to be provided in specific test cases.	
cellForWhichToReportCGI	Not present		
}			

QuantityConfig-DEFAULT

Table 4.6.6-3A: QuantityConfig-DEFAULT

Derivation Path: 36.331, clause 6.3.5			
Information Element	Value/remark	Comment	Condition
QuantityConfig-DEFAULT ::= SEQUENCE {			
quantityConfigEUTRA SEQUENCE {			
filterCoefficientRSRP	Not present	DEFAULT fc4	
filterCoefficientRSRQ	Not present	DEFAULT fc4	
}			
quantityConfigUTRA SEQUENCE {}	Not present		
quantityConfigUTRA SEQUENCE {			UTRAN
measQuantityUTRA-FDD	cpich-EcN0		
measQuantityUTRA-FDD	cpich-RSCP	For signalling test cases	
measQuantityUTRA-TDD	pccpch-RSCP		
filterCoefficient	Not present	DEFAULT fc4	
}			
quantityConfigGERAN SEQUENCE {}	Not present		
quantityConfigGERAN SEQUENCE {			GERAN
measQuantityGERAN	rssi		
filterCoefficient	Not present	DEFAULT fc2	
}			
quantityConfigCDMA2000 SEQUENCE {}	Not present		
quantityConfigCDMA2000 SEQUENCE {			CDMA2000
measQuantityCDMA2000	[FFS]		
}			
}			

Condition	Explanation
UTRAN	For inter-RAT measurements with UTRAN
GERAN	For inter-RAT measurements with GERAN
CDMA2000	For inter-RAT measurements with CDMA2000

- ReportConfigEUTRA-A1

Table 4.6.6-4: ReportConfigEUTRA-A1(Thres)

Derivation Path: 36.331 clause 6.3.5			
Information Element	Value/remark	Comment	Condition
ReportConfigEUTRA-A1(Thres) ::= SEQUENCE {			
triggerType CHOICE {			
event SEQUENCE {			
eventId CHOICE {			
eventA1 SEQUENCE {			
a1-Threshold CHOICE {			
threshold-RSRP	Thres+140	Thres is actual threshold value in dBm	
}			
}			
}			
hysteresis	0 (0 dB)		
timeToTrigger	ms256		
}			
}			
triggerQuantity	rsrp		
reportQuantity	both		
maxReportCells	1		
reportInterval	ms1024		
reportAmount	r1		
}			

ReportConfigEUTRA-A2

Table 4.6.6-5: ReportConfigEUTRA-A2(Thres)

Derivation Path: 36.331 clause 6.3.5			
Information Element	Value/remark	Comment	Condition
ReportConfigEUTRA-A2(Thres) ::= SEQUENCE {			
triggerType CHOICE {			
event SEQUENCE {			
eventId CHOICE {			
eventA2 SEQUENCE {			
a2-Threshold CHOICE {			
threshold-RSRP	Thres+140	Thres is actual threshold value in dBm	
}			
}			
}			
hysteresis	0 (0 dB)		
timeToTrigger	ms320		
}			
}			
triggerQuantity	rsrp		
reportQuantity	both		
maxReportCells	1		
reportInterval	ms1024		
reportAmount	r1		
}			

ReportConfigEUTRA-A3

Table 4.6.6-6: ReportConfigEUTRA-A3

Derivation Path: 36.331 clause 6.3.5			
Information Element	Value/remark	Comment	Condition
ReportConfigEUTRA-A3 ::= SEQUENCE {			
triggerType CHOICE {			
event SEQUENCE {			
eventId CHOICE {			
eventA3 SEQUENCE {			
a3-Offset	0 (0 dB)	To reduce interference between intra-frequency multiple cells	
reportOnLeave	FALSE		
}			
}			
hysteresis	0 (0 dB)		
timeToTrigger	ms640		
}			
}			
triggerQuantity	rsrp		
reportQuantity	both		
maxReportCells	1		
reportInterval	ms1024		
reportAmount	r1		
}			

ReportConfigEUTRA-A4

Table 4.6.6-6AA: ReportConfigEUTRA-A4(Thres)

Derivation Path: 36.331 clause 6.3.5			
Information Element	Value/remark	Comment	Condition
ReportConfigEUTRA-A4 ::= SEQUENCE {			
triggerType CHOICE {			
event SEQUENCE {			
eventId CHOICE {			
eventA4 SEQUENCE {			
a4-Threshold CHOICE{			
threshold-RSRP	Thres + 140	Thres is actual threshold value in dBm	Not RSRQ
threshold-RSRQ	Thres * 2 + 40	Thres is actual threshold value in dB	RSRQ
}			
}			
}			
hysteresis	0 (0 dB)		
timeToTrigger	ms0		
}			
}			
triggerQuantity	rsrp		Not RSRQ
	rsrq		RSRQ
reportQuantity	both		
maxReportCells	1		
reportInterval	ms1024		
reportAmount	r1		
si-RequestForHO-r9	Not Present		
ue-RxTxTimeDiffPeriodical-r9	Not Present		
}			

Condition	Explanation
RSRQ	When RSRQ based measurement is applied

ReportConfigEUTRA-A5

Table 4.6.6-6AB: ReportConfigEUTRA-A5(Thres1, Thres2)

Derivation Path: 36.331 clause 6.3.5			
Information Element	Value/remark	Comment	Condition
ReportConfigEUTRA-A5 ::= SEQUENCE {			
triggerType CHOICE {			
event SEQUENCE {			
eventId CHOICE {			
eventA5 SEQUENCE {			
a5-Threshold1 CHOICE{			
threshold-RSRP	Thres1 + 140	Thres1 is actual threshold value in dBm	Not RSRQ
threshold-RSRQ	Thres1 * 2 + 40	Thres1 is actual threshold value in dB	RSRQ
}			
a5-Threshold2 CHOICE{			
threshold-RSRP	Thres2 + 140	Thres2 is actual threshold value in dBm	Not RSRQ
threshold-RSRQ	Thres2 * 2 + 40	Thres2 is actual threshold value in dB	RSRQ
}			
}			
}			
hysteresis	0 (0 dB)		
timeToTrigger	ms0		
}			
}			
triggerQuantity	rsrp		Not RSRQ
	rsrq		RSRQ
reportQuantity	both		
maxReportCells	1		
reportInterval	ms1024		
reportAmount	r1		
si-RequestForHO-r9	Not Present		
ue-RxTxTimeDiffPeriodical-r9	Not Present		
}			

Condition	Explanation
RSRQ	See the definition below table 4.6.6-6AA.

ReportConfigEUTRA-A6

Table 4.6.6-6A: ReportConfigEUTRA-A6

Derivation Path: 36.331 clause 6.3.5			
Information Element	Value/remark	Comment	Condition
ReportConfigEUTRA-A6 ::= SEQUENCE {			
triggerType CHOICE {			
event SEQUENCE {			
eventId CHOICE {			
eventA6-r10 SEQUENCE {			
a6-Offset-r10	0 (0 dB)		
a6-ReportOnLeave-r10	FALSE		
}			
}			
hysteresis	0 (0 dB)		
timeToTrigger	ms640		
}			
}			
triggerQuantity	rsrp		
reportQuantity	both		
maxReportCells	1		
reportInterval	ms1024		
reportAmount	r1		
si-RequestForHO-r9	Not Present		
ue-RxTxTimeDiffPeriodical-r9	Not Present		
includeLocationInfo-r10	Not Present		
reportAddNeighMeas-r10	Not Present		
}			

- ReportConfigEUTRA-PERIODICAL

Table 4.6.6-7: ReportConfigEUTRA-PERIODICAL

Derivation Path: 36.331 clause 6.3.5			
Information Element	Value/remark	Comment	Condition
ReportConfigEUTRA-PERIODICAL ::= SEQUENCE {			
triggerType CHOICE {			
periodical SEQUENCE {			
purpose	reportStrongestCells		
}			
}			
triggerQuantity	rsrp		
reportQuantity	both		
maxReportCells	1		
reportInterval	ms1024		
reportAmount	infinity		
}			

ReportConfigInterRAT-B1-GERAN

Table 4.6.6-7A: ReportConfigInterRAT-B1-GERAN(GERAN-Thres)

Derivation Path: 36.331 clause 6.3.5			
Information Element	Value/remark	Comment	Condition
ReportConfigInterRAT-B1-GERAN(GERAN-Thres) ::=			
SEQUENCE {			
triggerType CHOICE {			
event SEQUENCE {			
eventId CHOICE {			
eventB1 SEQUENCE {			
b1-Threshold CHOICE {			
b1-ThresholdGERAN	(GERAN-Thres + 110)	GERAN-Thres is	
		actual value in	
		dBm	
}			
}			
}			
hysteresis	0	INTEGER(030)	
timeToTrigger	ms0		
}			
}			
maxReportCells	6	In line with RAN4	
		requirement	
reportInterval	ms1024		
reportAmount	r1		
}			

ReportConfigInterRAT-B1-UTRA

Table 4.6.6-7B: ReportConfigInterRAT-B1-UTRA(UTRA-Thres)

Derivation Path: 36.331 clause 6.3.5			
Information Element	Value/remark	Comment	Condition
ReportConfigInterRAT-B1-UTRA(UTRA-Thres) ::=			
SEQUENCE {			
triggerType CHOICE {			
event SEQUENCE {			
eventId CHOICE {			
eventB1 SEQUENCE {			
b1-Threshold CHOICE {			
b1-ThresholdUTRA CHOICE {			
utra-EcN0	(UTRA-Thres * 2 + 49)	UTRA-Thres is actual Ec/NO	UTRA- FDD
		value in dB	
utra-RSCP	UTRA-Thres + 115	For signalling test cases	UTRA- FDD
		UTRA-Thres is actual RSCP value in dBm	
utra-RSCP	UTRA-Thres + 115	UTRA-Thres is actual RSCP value in dBm	UTRA- TDD
}			
}			
}			
}			
hysteresis	3 (1.5 dB)		
timeToTrigger	ms0		
}			
}			
maxReportCells	6	In line with RAN4 requirement	
reportInterval	ms1024		
reportAmount	r1		
}			

Condition	Explanation
UTRA-FDD	UTRA FDD cell environment
UTRA-TDD	UTRA TDD cell environment

ReportConfigInterRAT-B2-CDMA2000

Table 4.6.6-7C: ReportConfigInterRAT-B2-CDMA2000(EUTRA-Thres, CDMA2000-Thres)

Derivation Path: 36.331 clause 6.3.5			
Information Element	Value/remark	Comment	Condition
ReportConfigInterRAT-B2-CDMA2000(EUTRA-Thres,			
CDMA2000-Thres) ::= SEQUENCE {			
triggerType CHOICE {			
event SEQUENCE {			
eventId CHOICE {			
eventB2 SEQUENCE {			
b2-Threshold1 CHOICE {			
threshold-RSRP	EUTRA-Thres+140	EUTRA-Thres is actual threshold value in dBm	
}			
b2-Threshold2 CHOICE {			
b2-Threshold2CDMA2000	[30 (-15 dB)]	Integer (063)	
}			
}			
}			
hysteresis	[2 (1 dB)]	INTEGER(030)	
timeToTrigger	ms0		
}			
}			
maxReportCells	[8]		
reportInterval	[ms2048]	Range: ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, min1, min6, min12, min30, min60, spare3, spare2, spare1	
reportAmount	[r1]	Range: r1, r2, r4, r8, r16, r32, r64, infinity	
}			

Table 4.6.6-7D: void

ReportConfigInterRAT-B2-GERAN

Table 4.6.6-7E: ReportConfigInterRAT-B2-GERAN(EUTRA-Thres, GERAN-Thres)

Value/remark	A	
	Comment	Condition
EUTRA-Thres+140	EUTRA-Thres is	
	actual threshold	
	value in dBm	
GERAN-Thres + 110	0=	
	dBm	
1	INITEOED (C. CC)	
+ -	INTEGER(030)	
ms0		
6		
1001	requirement	
r1		
	EUTRA-Thres+140 GERAN-Thres + 110 0 ms0 6 ms1024 r1	actual threshold value in dBm GERAN-Thres + 110 GERAN-Thres is actual value in dBm 0 INTEGER(030) ms0 In line with RAN4 requirement

- ReportConfigInterRAT-B2-UTRA

Table 4.6.6-8: ReportConfigInterRAT-B2-UTRA(EUTRA-Thres, UTRA-Thres)

Derivation Path: 36.331 clause 6.3.5			
Information Element	Value/remark	Comment	Condition
ReportConfigInterRAT-B2-UTRA(EUTRA-Thres,			
UTRA-Thres) ::= SEQUENCE {			
triggerType CHOICE {			
event SEQUENCE {			
eventId CHOICE {			
eventB2 SEQUENCE {			
b2-Threshold1 CHOICE {			
threshold-RSRP	EUTRA-Thres+140	EUTRA-Thres is	
		actual threshold	
		value in dBm	
}			
b2-Threshold2 CHOICE {			
b2-Threshold2UTRA CHOICE {			
utra-EcN0	UTRA-Thres * 2 + 49	UTRA-Thres is	UTRA-
		actual Ec/NO	FDD
		value in dB	
utra-RSCP	UTRA-Thres + 115	For signalling test	UTRA-
		cases	FDD
		UTRA-Thres is	
		actual RSCP	
		value in dBm	
utra-RSCP	UTRA-Thres + 115	UTRA-Thres is	UTRA-
		actual RSCP	TDD
		value in dBm	
}			
}			
}			
}			
hysteresis	3 (1.5 dB)		
timeToTrigger	ms0		
}			
}			
maxReportCells	6	In line with RAN4	
		requirement	
reportInterval	ms1024		
reportAmount	r1		
}			

Condition	Explanation
UTRA-FDD	UTRA FDD cell environment
UTRA-TDD	UTRA TDD cell environment

ReportConfigInterRAT-PERIODICAL

Table 4.6.6-9: ReportConfigInterRAT-PERIODICAL

Derivation Path: 36.331 clause 6.3.5			
Information Element	Value/remark	Comment	Condition
ReportConfigInterRAT-PERIODICAL ::= SEQUENCE			
{			
triggerType CHOICE {			
periodical SEQUENCE {			
purpose	reportStrongestCells		
}			
}			
maxReportCells	1		
reportInterval	ms1024		
reportAmount	infinity		
}			

4.6.7 Other information elements

RRC-TransactionIdentifier-DL

Table 4.6.7-1: RRC-TransactionIdentifier-DL

Derivation Path: 36.331 clause 6.3.6			
Information Element	Value/remark	Comment	Condition
RRC-TransactionIdentifier-DL ::=	03		

RRC-TransactionIdentifier-UL

Table 4.6.7-2: RRC-TransactionIdentifier-UL

Derivation Path: 36.331 clause 6.3.6			
Information Element	Value/remark	Comment	Condition
RRC-TransactionIdentifier-UL ::=	03	The same value as the value of RRC- TransactionIdentifi er-DL in the downlink message initiating the procedure	

4.6.8 Channel-bandwidth-dependent parameters

The default values of parameters which depend on the channel bandwidth are defined in table 4.6.8-1.

Table 4.6.8-1: Channel-bandwidth-dependent parameters

Information			Channel I	oandwidth			Comment
Element	1.4 MHz	3 MHz	5 MHz	10 MHz	15 MHz	20MHz	
Prach- FrequencyOff set	0	1	2	4	6	8	Typical value in real network
nRB-CQI	0	0	2	4	6	8	Selected based on typical maximum number of UEs.
Pusch- HoppingOffset	0	2	4	8	12	16	Typical value in real network
sr-PUCCH- ResourceInde x	FFS	FFS	20	41	62	84	
srs- BandwidthCo nfig	FFS	FFS	bw3 (msrs,b, Nb) = (20, 1), (4, 5), (4, 1), (4, 1)	bw2 (msrs,b, Nb) = (40, 1), (20, 2), (4, 5), (4, 1)	bw2 (msrs,b, Nb) = (60, 1), (20, 3), (4, 5), (4, 1)	bw2 (msrs,b, Nb) = (80, 1), (40, 2), (20, 2), (4, 5)	Selected in accordance with pucch-ResourceSize.

4.7 Default NAS message and information element contents

This clause contains the default values of common NAS messages and information elements, which apply to all test cases unless otherwise specified. All the messages and information elements are listed in alphabetical order.

4.7.1 Security protected NAS messages

In subclauses 4.7.2 and 4.7.3 in this document, all the NAS messages are described in the plain NAS message format.

When a NAS message is security protected, the message shall be contained by SECURITY PROTECTED NAS MESSAGE unless contained by another NAS message.

The default contents of SECURITY PROTECTED NAS MESSAGE message are defined in table 4.7.1-1.

Table 4.7.1-1: SECURITY PROTECTED NAS MESSAGE

Derivation Path: 24.301 clause 8.2.23			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0001'B	Integrity protected	UNCIPHER ED
	'0010'B	Integrity protected and ciphered	CIPHERED
	'0011'B	Integrity protected with new EPS security context	UNCIPHER ED-NEW
	'0100'B	Integrity protected and ciphered with new EPS security context	CIPHERED- NEW
Message authentication code	The calculated value of MAC-I for this message.	The value of MAC-I is calculated by SS using Sequence number sent by UE.	SENT-BY- SS
	The same value as the XMAC-I value calculated by SS.		SENT-BY- UE
Sequence number	The internal counter of the SS		SENT-BY- SS
	Any allowed value		SENT-BY- UE
NAS message	Set according to specific message content		

Condition	Explanation
UNCIPHERED	This condition applies to unciphered NAS message exchange
CIPHERED	This condition applies to ciphered NAS message exchange
UNCIPHERED-NEW	This condition applies to unciphered NAS message exchange with
	new EPS security context
CIPHERED-NEW	This condition applies to ciphered NAS message exchange with new
	EPS security context
SENT-BY-SS	Use for the message sent from SS to UE
SENT-BY-UE	Use for the message sent from UE to SS

When a valid NAS security context exists, unless specified otherwise in other clauses of the present specification or in a test case, for every DL NAS message sent within SECURITY PROTECTED NAS MESSAGE message, the condition CIPHERED applies.

4.7.2 Contents of EMM messages

ATTACH ACCEPT

This message is sent by the SS to the UE.

Table 4.7.2-1: ATTACH ACCEPT

Derivation Path: 24.301 clause 8.2.1			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS	
		message, not	
Au I	10400.004015	security protected	
Attach accept message identity	'0100 0010'B	Attach accept	
EPS attach result	'0001'B	EPS only	EPS_only
	'0010'B	combined	combined_E
	LOGGOID	EPS/IMSI attach	PS_IMSI
Spare half octet	'0000'B		
T3412 value	10.000010		
Timer value	'0 0000'B		
Unit	'111'B	value indicates	
		that the timer is	
TALLink		deactivated.	
TAI list	10000 044010	01-1-	
Length of tracking area identity list contents	'0000 0110'B	6 octets	
Partial tracking area identity list 1	10.000010		
Number of elements	'0 0000'B	1 element	1
Type of list	'00'B	list of TACs	
		belonging to one	
		PLMN, with non-	
		consecutive TAC	
MCC	See table 4.4.2-2 in this	values For NAS test	
MCC	document		
	document	cases, see table	
MNC	See table 4.4.2-2 in this	6.3.2.2-1. For NAS test	
IVINC	document	cases, see table	
	document	6.3.2.2-1.	
TAC 1	See table 4.4.2-2 in this	For NAS test	
IAC I	document	cases, see table	
	document	6.3.2.2-1.	
ESM message container	ACTIVATE DEFAULT	0.3.2.2-1.	
Low message container	EPS BEARER		
	CONTEXT REQUEST		
	message to activate the		
	default bearer		
GUTI			
Length of EPS mobile identity contents	'0000 1011'B	11 octets	
Type of identity	'110'B	GUTI	
Odd/even indication	'0'B	even number of	
		identity digits and	
		also when the	
		GUTI is used	
MCC	See table 4.4.2-2 in this	For NAS test	
	document	cases, see table	
		6.3.2.2-1.	<u> </u>
MNC	See table 4.4.2-2 in this	For NAS test	
	document	cases, see table	
		6.3.2.2-1.	
MME Group ID	See table 4.4.2-2 in this	For NAS test	
·	document	cases, see table	
		6.3.2.2-1.	
MME Code	See table 4.4.2-2 in this	For NAS test	1
	document	cases, see table	
		6.3.2.2-1.	
M-TMSI	See table 4.4.2-2 in this	For NAS test	
	document	cases, see table	
		6.3.2.2-1.	
Location area identification	Not present		EPS_only
Location area identification			combined_E
MCC	MCC of the EUTRA cell		PS_IMSI
	from which this message		
	is sent		

MNC	MCC of the EUTRA cell from which this message is sent		
LAC	1		
MS identity	Not present		EPS_only
MS identity			combined_E
Length of mobile identity contents	'0000 0101'B	5 octets	PS_IMSI
Type of identity	'100'B	TMSI/P-TMSI/M- TMSI	
Odd/even indication	'0'B	even number of identity digits and also when the TMSI/P-TMSI or TMGI and optional MBMS Session Identity is used	
TMSI	TMSI-1		
EMM cause	Not present		
T3402 value	Not present		
T3423 value	Not present		
Equivalent PLMNs	Not present		
Emergency number list	Not present		
EPS network feature support	'0000 0001'B	IMS voice over PS session in S1 mode supported	
EPS network feature support	'0000 0011'B	IMS voice over PS session in S1 mode supported, emergency bearer services in S1 mode supported	Rel-9
Additional update result	Not present		
Additional update result	'10' B	"SMS only"	additional_u pdate_result _SMS
T3412 extended value	Not present		Rel-10

Condition	Explanation
EPS_only	This condition applies if the UE is configured to initiate EPS attach or if explicitly specified.
combined_EPS_IMSI	This condition applies if the UE is configured to initiate combined EPS/IMSI attach or if explicitly specified.
additional_update_result_SMS	If the UE requested "SMS only" in the Additional update type IE and combined_EPS_IMSI condition applies

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

- ATTACH COMPLETE

This message is sent by the UE to the SS.

Table 4.7.2-2: ATTACH COMPLETE

Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
Attach complete message identity	'0100 0011'B	Attach complete	
ESM message container	ACTIVATE DEFAULT EPS BEARER CONTEXT ACCEPT message		

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

- ATTACH REJECT

This message is sent by the SS to the UE.

Table 4.7.2-3: ATTACH REJECT

Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
Attach reject message identity	'0100 0100'B	Attach reject	
EMM cause	Set according to specific message content.		
ESM message container	Set according to specific message content.		

NOTE: If this message includes the EMM cause set to #25, it is sent within SECURITY PROTECTED NAS MESSAGE message. Otherwise this message is sent without integrity protection.

ATTACH REQUEST

This message is sent by the UE to the SS.

Table 4.7.2-4: ATTACH REQUEST

Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS	
, ,,		message, not	
		security protected	
Attach request message identity	'0100 0001'B	Attach request	
EPS attach type	'0001'B	EPS attach	EPS_only
	'0010'B	combined	combined_E
		EPS/IMSI attach	PS_IMSI
NAS key set identifier	Any allowed value		
Old GUTI or IMSI	Any allowed value		
UE network capability	Any allowed value		
ESM message container	PDN CONNECTIVITY		
-	REQUEST message to		
	request PDN connectivity		
	to the default PDN		
Old P-TMSI signature	Not present or any		
	allowed value		
Additional GUTI	Not present or any		
	allowed value		
Last visited registered TAI	Not present or any		
	allowed value		
DRX parameter	Not present or any		
	allowed value		
MS network capability	Not present or any		
	allowed value		
Old location area identification	Not present or any		
	allowed value		
TMSI status	Not present or any		
	allowed value		
Mobile station classmark 2	Not present or any		
	allowed value		
Mobile station classmark 3	Not present or any		
	allowed value		
Supported Codecs	Not present or any		
	allowed value		
Additional update type	Not present		EPS_only
Additional update type	Not present or any		combined_E
	allowed value		PS_IMSI
Old GUTI type	Not present or any		
	allowed value]	

Condition	Explanation
EPS_only	See the definition below table 4.7.2-1.
combined_EPS_IMSI	See the definition below table 4.7.2-1.

NOTE: This message is sent integrity protected when a valid security context exists and without integrity protection otherwise.

AUTHENTICATION FAILURE

This message is sent by the UE to the SS.

Table 4.7.2-5: AUTHENTICATION FAILURE

Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
Authentication failure message type	'0101 1100'B	Authentication failure	
EMM cause	'0001 0100'B	Mac failure	
Authentication failure parameter	Not present	See TS 24.301 [28] subclause 8.2.5.2	

NOTE: The security protection of this message is the same as the previous AUTHENTICATION REQUEST message.

- AUTHENTICATION REJECT

This message is sent by the SS to the UE.

Table 4.7.2-6: AUTHENTICATION REJECT

Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
Authentication reject message type	'0101 0100'B	Authentication reject	

NOTE: This message is sent without integrity protection.

AUTHENTICATION REQUEST

This message is sent by the SS to the UE.

Table 4.7.2-7: AUTHENTICATION REQUEST

Derivation Path: 24.301 clause 8.2.7		T	
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
Authentication request message type	'0101 0010'B	Authentication request	
NAS key set identifier _{ASME}	_		
NAS key set identifier	An arbitrarily selected value between '000'B and '110'B, different from the valid NAS key set identifier of the UE if such a value exists.		
TSC	'0'B	native security context (for KSI _{ASME})	
Spare half octet	'0000'B		
Authentication parameter RAND (EPS challenge)	An arbitrarily selected 128 bits value		
Authentication parameter AUTN (EPS challenge)	See TS 24.301 [28] subclause 9.9.3.2		

NOTE: Within a test execution this message is sent without integrity protection before NAS security mode control procedure has been successfully completed; and sent integrity protected and ciphered within SECURITY PROTECTED NAS MESSAGE message after NAS security mode control procedure has been successfully completed. SS does not maintain information for NAS security mode control procedure after a TC is completed.

AUTHENTICATION RESPONSE

This message is sent by the UE to the SS.

Table 4.7.2-8: AUTHENTICATION RESPONSE

Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
Authentication response message type	'0101 0011'B	Authentication response	
Authentication response parameter	See TS 24.301 [28] subclause 9.9.3.4		

NOTE: When sent in response to an AUTHENTICATION REQUEST message which is not integrity protected and not ciphered, the AUTHENTICATION RESPONSE message may be sent integrity protected when a valid security context exists and without integrity protection otherwise.

CS SERVICE NOTIFICATION

This message is sent by the SS to the UE.

Table 4.7.2-8A: CS SERVICE NOTIFICATION

Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
CS service notification message identity	'01100100'B	CS Service notification	
Paging identity	'1'B	TMSI	
CLI	Not present		
SS Code	Not present		
LCS indicator	Not present		
LCS client identity	Not present		

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

- DETACH ACCEPT (UE originating detach)

This message is sent by the SS to the UE.

Table 4.7.2-9: DETACH ACCEPT

Derivation Path: 24.301 clause 8.2.10.1			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS	
		message, not security protected	
Detach accept message identity	'0100 0110'B	Detach accept	

NOTE: This message is sent using the same security protection as in the previous DETACH REQUEST message received from the UE.

DETACH ACCEPT (UE terminated detach)

This message is sent by the UE to the SS.

Table 4.7.2-10: DETACH ACCEPT

Derivation Path: 24.301 clause 8.2.10.2			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
Detach accept message identity	'0100 0110'B	Detach accept	

NOTE: This message is sent without integrity protection before NAS security mode control procedure has been successfully completed and sent within SECURITY PROTECTED NAS MESSAGE message after NAS security mode control procedure has been successfully completed.

- DETACH REQUEST (UE originating detach)

This message is sent by the UE to the SS.

Table 4.7.2-11: DETACH REQUEST

Derivation Path: 24.301 clause 8.2.11.1			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS	
		message, not security protected	
Detach request message identity	'0100 0101'B	Detach request	
Detach type			
Type of detach	'001'B	EPS detach	EPS_only
	'011'B	combined EPS/IMSI detach	Combined_ EPS_IMSI
Switch off	'1'B	switch off	
NAS key set identifier			
NAS key set identifier	The valid NAS key set identifier.		
TSC	Any Value		
GUTI or IMSI	If the UE has a valid GUTI, set to the GUTI, otherwise set to the IMSI of the UE.		

Condition	Explanation
EPS_only	See the definition below table 4.7.2-1.
Combined_EPS_IMSI	See the definition below table 4.7.2-1.

NOTE: This message is sent with integrity protection before SS has started the ciphering and integrity and ciphered protected after SS has started the ciphering.

- DETACH REQUEST (UE terminated detach)

This message is sent by the SS to the UE.

Table 4.7.2-12: DETACH REQUEST

Derivation Path: 24.301 clause 8.2.11.2			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not	
		security protected	
Detach request message identity	'0100 0101'B	Detach request	
Detach type	Set according to specific message content.		
Spare half octet	'0000'B		
EMM cause	Set according to specific message content.		

DOWNLINK NAS TRANSPORT

This message is sent by the SS to the UE.

Table 4.7.2-12A: DOWNLINK NAS TRANSPORT

Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
Downlink NAS transport message identity	'0110 0010'B	Downlink NAS transport	
NAS message container	Set according to specific message content		

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

- EMM INFORMATION

This message is sent by the SS to the UE.

Table 4.7.2-13: EMM INFORMATION

Derivation Path: 24.301 clause 8.2.13			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS	
		message, not	
		security protected	
EMM information message identity	'0110 0001'B	EMM information	
Full name for network	Set according to specific		
	message content.		
Short name for network	Set according to specific		
	message content.		
Local time zone	Set according to specific		
	message content.		
Universal time and local time zone	Set according to specific		
	message content.		
Network daylight saving time	Set according to specific		
	message content.		

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

- EMM STATUS

This message is sent by the UE or by the SS.

Table 4.7.2-14: EMM STATUS

Derivation Path: 24.301 clause 8.2.14			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS	
		message, not security protected	
EMM status message identity	'0110 0000'B	EMM status	
EMM cause	Set according to specific		
	message content.		

EXTENDED SERVICE REQUEST

This message is sent by the UE to the SS.

Table 4.7.2-14A: EXTENDED SERVICE REQUEST

Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
Extended service request message identity	'0100 1100'B	Extended service request	
Service type	'0001'B	mobile terminating CS fallback or 1xCS fallback	
NAS key set identifier			
NAS key set identifier	The valid NAS key set identifier.		
TSC	'0'B	native security context (for KSI _{ASME})	
M-TMSI	If the UE has a valid M- TMSI, set to the M-TMSI, otherwise set to the IMSI of the UE.		
CSFB response	'001'B	CS fallback accepted by the UE	

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

- GUTI REALLOCATION COMMAND

This message is sent by the SS to the UE.

Table 4.7.2-15: GUTI REALLOCATION COMMAND

Derivation Path: 24.301 clause 8.2.16			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS	
		message, not	
		security protected	
GUTI reallocation command message identity	'0101 0000'B	GUTI reallocation	
		command	
GUTI	Set according to specific		
	message content.		
TAI list	Set according to specific		
	message content.		

GUTI REALLOCATION COMPLETE

This message is sent by the UE to the SS.

Table 4.7.2-16: GUTI REALLOCATION COMPLETE

Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
GUTI reallocation complete message identity	'0101 0001'B	GUTI reallocation complete	

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

IDENTITY REQUEST

This message is sent by the SS to the UE.

Table 4.7.2-17: IDENTITY REQUEST

Derivation Path: 24.301 clause 8.2.18			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS	
		message, not security protected	
Identity request message identity	'0101 0101'B	Identity request	
Identity type	'0001'B	IMSI	
Spare half octet	'0000'B		

NOTE: This message is sent without integrity protection before NAS security mode control procedure has been successfully completed and sent within SECURITY PROTECTED NAS MESSAGE message after NAS security mode control procedure has been successfully completed.

IDENTITY RESPONSE

This message is sent by the UE to the SS.

Table 4.7.2-18: IDENTITY RESPONSE

Derivation Path: 24.301 clause 8.2.19			T
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
Identity response message	'0101 0110'B	Identity response	
Mobile identity	IMSI of the UE		

NOTE: This message is sent without integrity protection before NAS security mode control procedure has been successfully completed and sent within SECURITY PROTECTED NAS MESSAGE message after NAS security mode control procedure has been successfully completed.

- SECURITY MODE COMMAND

This message is sent by the SS to the UE.

Table 4.7.2-19: SECURITY MODE COMMAND

Derivation Path: 24.301 clause 8.2.20			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
Security mode command message identity	'0101 1101'B	Security mode command	
Selected NAS security algorithms			
Type of integrity protection algorithm	Set according to PIXIT parameter for default integrity protection algorithm		For SIG
	0(reserved or eia0)	This IE is set to one of the algorithms	For RF
	eia1	supported by the UE as indicated in the IE "UE network capability" in the	
	eia2	ATTACH REQUEST message.	
Type of ciphering algorithm	Set according to PIXIT parameter for default ciphering algorithm		For SIG
	eea0		For RF
NAS key set identifier			
NAS key set identifier	The valid NAS key set identifier.		
TSC	'0'B	native security context (for KSIASME)	
Spare half octet	'0000'B		
Replayed UE security capabilities	Set according to the received UE security capabilities		
IMEISV request	Not present		
Replayed nonceus	Not present		
Noncemme	Not present		

Condition	Explanation
For SIG	Used for signalling test cases
For RF	Used for RF/RRM test cases

NOTE: This message is always sent integrity protected with new EPS security context.

SECURITY MODE COMPLETE

This message is sent by the UE to the SS.

Table 4.7.2-20: SECURITY MODE COMPLETE

Derivation Path: 24.301 clause 8.2.21	·		
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
Security mode complete message identity	'0101 1110'B	Security mode complete	
IMEISV	Not present		

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message with new EPS security context.

SECURITY MODE REJECT

This message is sent by the UE to the SS.

Table 4.7.2-21: SECURITY MODE REJECT

Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
Security mode reject message identity	'0101 1111'B	Security mode reject	
EMM cause	The value is set according to specific message content.		

NOTE: This message is sent without integrity protection before NAS security mode control procedure has been successfully completed and sent within SECURITY PROTECTED NAS MESSAGE message after NAS security mode control procedure has been successfully completed.

SERVICE REJECT

This message is sent by the SS to the UE.

Table 4.7.2-22: SERVICE REJECT

Derivation Path: 24.301 clause 8.2.24			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
Service reject message identity	'0100 1110'B	Service reject	
EMM cause	Set according to specific message content.		
T3442 value	Not present		

NOTE: If this message includes the EMM cause set to #25, it is sent within SECURITY PROTECTED NAS MESSAGE message. Otherwise this message is sent without integrity protection.

- SERVICE REQUEST

This message is sent by the UE to the SS.

Table 4.7.2-23: SERVICE REQUEST

Derivation Path: 24.301 clause 8.2.25 Information Element	Value/remark	Comment	Condition
		Comment	Condition
Protocol discriminator	EMM		
Security header type	'1100'B	Security header	
, ,,		for the SERVICE	
		REQUEST	
		message	
KSI and sequence number			
Sequence number (short)	The 5 least significant		
. ,	bits of the NAS COUNT		
	value applicable when		
	this message is sent for		
	sequence number.		
KSI	The effective KSI value.		
Message authentication code (short)	The 2 least significant		
	octets of the resulting		
	message authentication		
	code		

- TRACKING AREA UPDATE ACCEPT

This message is sent by the SS to the UE.

Table 4.7.2-24: TRACKING AREA UPDATE ACCEPT

Derivation Path: 24.301 clause 8.2.26			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM	5	
Security header type	'0000'B	Plain NAS	
		message, not	
Tracking area undata accept magazine identity	'0100 1001'B	security protected Tracking area	
Tracking area update accept message identity	0100 1001 B		
EPS update result	'0000'B	update accept TA updated	TA_only
EFS upuate result	'0001'B	combined TA/LA	combined_T
	00016	updated	A_LA
Spare half octet	'0000'B	upuateu	Λ_LΛ
T3412 value	Not present		Periodic
T3412 value	Not present		1 CHOOLC
Timer value	'0 0000'B		
Unit	'111'B	value indicates	
O'III	''''	that the timer is	
		deactivated.	
GUTI		dodotivatodi	
Length of EPS mobile identity contents	'0000 1011'B	11 octets	1
Type of identity	'110'B	GUTI	
Odd/even indication	'0'B	even number of	1
		identity digits and	
		also when the	
		GUTI is used	
MCC	See table 4.4.2-2 in this	For NAS test	
	document	cases, see table	
		6.3.2.2-1.	
MNC	See table 4.4.2-2 in this	For NAS test	
	document	cases, see table	
		6.3.2.2-1.	
MME Group ID	See table 4.4.2-2 in this	For NAS test	
•	document	cases, see table	
		6.3.2.2-1.	
MME Code	See table 4.4.2-2 in this	For NAS test	
	document	cases, see table	
		6.3.2.2-1.	
M-TMSI	See table 4.4.2-2 in this	For NAS test	
	document	cases, see table	
		6.3.2.2-1.	
TAI list			
Length of tracking area identity list contents	'0000 0110'B	6 octets	
Partial tracking area identity list 1			
Number of elements	'0 0000'B	1 element	
Type of list	'00'B	list of TACs	
		belonging to one	
		PLMN, with non-	
		consecutive TAC	
1100	0 11 1100: 11:	values	
MCC	See table 4.4.2-2 in this	For NAS test	
	document	cases, see table	
MNIC	Contable 4.4.0.0 in this	6.3.2.2-1.	1
MNC	See table 4.4.2-2 in this	For NAS test	
	document	cases, see table	
TAC 1	See table 4.4.2-2 in this	6.3.2.2-1. For NAS test	1
IAUT	document	cases, see table	
	document	6.3.2.2-1.	
EPS bearer context status	The same value as the	J.J.Z.Z 1.	
2. 3 Social context status	value set in TRACKING		
	AREA UPDATE		
	REQUEST message		
Location area identification	Not present		TA_only
Location area identification	140t prodefit		combined_T
MCC	MCC of the EUTRA cell		A_LA
moo			' `' `
	from which this message		

MNC	MCC of the EUTRA cell from which this message is sent		
LAC	1		
MS identity	Not present		TA_only
MS identity			combined_T
Length of mobile identity contents	'0000 0101'B	5 octets	A_LA
Type of identity	'100'B	TMSI/P-TMSI/M- TMSI	
Odd/even indication	'0'B	even number of identity digits and also when the TMSI/P-TMSI or TMGI and optional MBMS Session Identity is used	
TMSI	TMSI-1		
EMM cause	Not present		
T3402 value	Not present		
T3423 value	Not present		
Equivalent PLMNs	Not present		
Emergency number list	Not present		
EPS network feature support	0000 0001'B	IMS voice over PS session in S1 mode supported	
Additional update result	Not present		
Additional update result	'10' B	"SMS only"	TAU_additio nal_update_ result_SMS
T3412 extended value	Not present		Rel-10

Condition	Explanation
TA_only	This condition applies if the UE is configured to initiate EPS attach or if explicitly specified.
combined_TA_LA	This condition applies if the UE is configured to initiate combined EPS/IMSI attach or if explicitly specified.
Periodic	This condition applies if in the last TRACKING AREA UPDATE REQUEST sent prior to this message, the EPS update type Value = '011'B (periodic updating).
TAU_additional_update_result_SMS	If the UE requested "SMS only" in the Additional update type IE and combined_TA_LA.

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

TRACKING AREA UPDATE COMPLETE

This message is sent by the UE to the SS.

Table 4.7.2-25: TRACKING AREA UPDATE COMPLETE

Derivation Path: 24.301 clause 8.2.27			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
Tracking area update complete message identity	'0100 1010'B	Tracking area update complete	

TRACKING AREA UPDATE REJECT

This message is sent by the SS to the UE.

Table 4.7.2-26: TRACKING AREA UPDATE REJECT

Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS message, not security protected	
Tracking area update reject message identity	'0100 1011'B	Tracking area update reject	
EMM cause	Set according to specific message content.		

NOTE: If this message includes the EMM cause set to #25, it is sent within SECURITY PROTECTED NAS MESSAGE message. Otherwise this message is sent without integrity protection.

- TRACKING AREA UPDATE REQUEST

This message is sent by the UE to the SS.

Table 4.7.2-27: TRACKING AREA UPDATE REQUEST

Derivation Path: 24.301 clause 8.2.29			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS	
, ,,		message, not	
		security protected	
Tracking area update request message identity	'0100 1000'B	Tracking area	
		update request	
EPS update type			
EPS update type Value	'000'B	TA updating	TA_only
	'001'B	Combined TA/LA	combined_T
		updating	A_LA
"Active" flag	'0'B	No bearer	
		establishment	
		requested	
NAS key set identifier			
NAS key set identifier	The valid NAS key set		
	identifier of the UE		
TSC	'0'B	native security	
		context (for	
		KSI _{ASME})	
Old GUTI	Any allowed value		
Non-current native NAS key set identifier	Not present		
GPRS ciphering key sequence number	Not present		
Old P-TMSI signature	Not present		
Additional GUTI	Not present		
NonceuE	Not present		
UE network capability	Not present or any		
	allowed value		
Last visited registered TAI	Not present or any		
	allowed value		
DRX parameter	Not present or any		
	allowed value		
UE radio capability information update needed	Not present or any		
	allowed value		
EPS bearer context status	Not present or (octet 3 =		
	'00100000'B and octet 4		
	= '00000000'B)		
MS network capability	Not present or any		
	allowed value		
Old location area identification	Not present or any		
THOU	allowed value		
TMSI status	Not present or any		
Mahila station alexandul C	allowed value		
Mobile station classmark 2	Not present or any		
Mobile station classmark 3	allowed value		-
INIODITE STATION CIASSIMARK 3	Not present or any allowed value		
Supported Codocs	Not present or any		1
Supported Codecs	allowed value		
Additional update type	Not present		TA_only
Additional update type Additional update type	Not present or any		combined_T
Additional apaate type	allowed value		A_LA
Old GUTI type	Not present or any		\ _L\\
	allowed value		
	l allowed value	1	I

Condition	Explanation
-----------	-------------

TA_only	See the definition below table 4.7.2-24.
combined_TA_LA	See the definition below table 4.7.2-24.

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

UPLINK NAS TRANSPORT

This message is sent by the UE to the SS.

Table 4.7.2-27A: UPLINK NAS TRANSPORT

Derivation Path: 24.301 clause 8.2.30			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	EMM		
Security header type	'0000'B	Plain NAS	
		message, not	
		security protected	
Uplink NAS transport message identity	'0100 0011'B	Uplink NAS	
		transport	
NAS message container	Set according to specific		
	message content		

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

4.7.3 Contents of ESM messages

- ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT

This message is sent by the UE to the SS.

Table 4.7.3-1: ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT

Derivation Path: 24.301 clause 8.3.1			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	The same value as the value set in ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST message		
Procedure transaction identity	'0000 0000'B	No procedure transaction identity assigned	
Activate dedicated EPS bearer context accept message identity	'1100 0110'B	Activate dedicated EPS bearer context accept	
Protocol configuration options	Not present or any allowed value		

ACTIVATE DEDICATED EPS BEARER CONTEXT REJECT

This message is sent by UE to the SS.

Table 4.7.3-2: ACTIVATE DEDICATED EPS BEARER CONTEXT REJECT

Derivation Path: 24.301 clause 8.3.2			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	The same value as the value set in ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST message.		
Procedure transaction identity	'0000 0000'B	No procedure transaction identity assigned	
Activate dedicated EPS bearer context reject message identity	'1100 0111'B	Activate dedicated EPS bearer context reject	
ESM cause	The value is set according to specific message content.		
Protocol configuration options	Not present		

ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST

This message is sent by the SS to the UE.

Table 4.7.3-3: ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST

Derivation Path: 24.301 clause 8.3.3	-		
Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	Arbitrarily selected value		
	between '0101'B and		
D 1 (c :1 c	'1111'B.	A. I	NETWORK
Procedure transaction identity	'0000 0000'B	No procedure	NETWORK-
		transaction	INITIATED
	The correction on the	identity assigned	115
	The same value as the		UE- INITIATED
	value set in BEARER RESOURCE		INITIATED
	MODIFICATION		
	REQUEST message or		
	BEARER RESOURCE		
	ALLOCATION		
	REQUEST message		
Activate dedicated EPS bearer context request	'1100 0101'B	Activate dedicated	
message identity		EPS bearer	
g,		context request	
Linked EPS bearer identity	The EPS bearer identity		
,	of the associated default		
	bearer		
Spare half octet	'0000'B		
EPS QoS	See Reference dedicated		
	EPS bearer context #1 in		
	table 6.6.2-1		
TFT	See Reference dedicated		
	EPS bearer context #1 in		
	table 6.6.2-1		
Transaction identifier	Not present		
	Distinct value between 0		pc_UTRAN
	and 127 calculated on		AND/OR
	basis of the EPS bearer		pc_GERAN
No maticate d O = O	identity. See Reference dedicated		
Negotiated QoS	EPS bearer context #1 in		
	table 6.6.2-1		
Negotiated LLC SAPI	See Reference dedicated		
regulated LLO SALT	EPS bearer context #1 in		
	table 6.6.2-1		
Radio priority	See Reference dedicated		
· · · · · · · · · · · · · · · · · · ·	EPS bearer context #1 in		
	table 6.6.2-1		
Packet flow Identifier	Not present		
	'0000 0000'B	Best Effort	pc_GERAN
Protocol configuration options	See Reference dedicated		
	EPS bearer context #1 in		
	table 6.6.2-1		

Condition	Explanation
NETWORK-INITIATED	Network initiated ESM procedures
UE-INITIATED	UE initiated ESM procedures

ACTIVATE DEFAULT EPS BEARER CONTEXT ACCEPT

This message is sent by the UE to the SS.

Table 4.7.3-4: ACTIVATE DEFAULT EPS BEARER CONTEXT ACCEPT

Derivation Path: 24.301 clause 8.3.4			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	The same value as the value set in ACTIVATE DEFAULT EPS BEARER CONTEXT REQUEST message		
Procedure transaction identity	'0000 0000'B	No procedure transaction identity assigned	
Activate default EPS bearer context accept message identity	'1100 0010'B	Activate default EPS bearer context accept	
Protocol configuration options	Not present or any allowed value		

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

- ACTIVATE DEFAULT EPS BEARER CONTEXT REJECT

This message is sent by UE to the SS.

Table 4.7.3-5: ACTIVATE DEFAULT EPS BEARER CONTEXT REJECT

Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	The same value as the value set in ACTIVATE DEFAULT EPS BEARER CONTEXT REQUEST message.		
Procedure transaction identity	'0000 0000'B	No procedure transaction identity assigned	
Activate default EPS bearer context reject message identity	'1100 0011'B	Activate default EPS bearer context reject	
ESM cause	The value is set according to specific message content.		
Protocol configuration options	Not present		

- ACTIVATE DEFAULT EPS BEARER CONTEXT REQUEST

This message is sent by the SS to the UE.

Table 4.7.3-6: ACTIVATE DEFAULT EPS BEARER CONTEXT REQUEST

Derivation Path: 24.301 clause 8.3.6			0
Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	An arbitrarily selected value between '0101'B and '1111'B.		
Procedure transaction identity	The same value as the value set in the latest PDN CONNECTIVITY REQUEST message sent prior to this message.		
Activate default EPS bearer context request message identity		Activate default EPS bearer context request	
EPS QoS	See Reference default EPS bearer context #1 in table 6.6.1-1		NOT IMS_PDN_ ConnEstab
EPS QoS	See Reference default EPS bearer context #2 in table 6.6.1-1		IMS_PDN_ ConnEstab
Access point name	The SS defines a Default APN		NOT IMS_PDN_ ConnEstab AND NOT APN_Provid ed
Access point name	APN as provided in ESM INFORMATION RESPONSE or PDN CONNECTIVITY REQUEST		NOT IMS_PDN_ ConnEstab AND APN_Provid ed
Access point name	IMS. apn.epc.mnc <mnc>.mcc <mcc>.3gppnetwork.org The <mnc> and <mcc> are set to the same values as in IMSI.</mcc></mnc></mcc></mnc>		IMS_PDN_ ConnEstab AND NOT APN_Provid ed
Access point name	Use APN Network Identifier provided in ESM INFORMATION RESPONSE or PDN CONNECTIVITY REQUEST message and the APN Operator Identifier mnc <mnc>.mcc<mcc>. 3gppnetwork.org. The <mnc> and <mcc> are set to the same values as in IMSI.</mcc></mnc></mcc></mnc>		IMS_PDN_ ConnEstab AND APN_Provid ed
PDN address			IPv4
Length of PDN address contents	5 octets	ID 4	
PDN type value	'001'B	IPv4	NOT ID: 4
PDN address information	IPv4 address 0.0.0.0	The SS provides a valid IPv4 address DHCPv4 is to be	NOT IPv4- DHCP IPv4-DHCP
		used to allocate the IPv4 address	
PDN address	0		IPv6
Length of PDN address contents	9 octets	ID. C	
PDN type value PDN address information	'010'B IPv6 interface identifier	IPv6 The SS provides a valid IPv6 interface identifier	
PDN address			IPv4v6
Length of PDN address contents	13 octets		

PDN type value	'011'B	IPv4v6	
PDN address information (Octets 4 to 11)	IPv6 interface identifier	The SS provides a valid IPv6	
PDN address information (Octets 12 to 15)	IPv4 address	interface identifier The SS provides a	NOT IPv4-
	ii v4 address	valid IPv4 address	DHCP
	0.0.0.0	DHCPv4 is to be	IPv4-DHCP
		used to allocate	
	Not propert	the IPv4 address	
Transaction identifier	Not present Distinct value between 0		pc_UTRAN
	and 127 calculated on		AND/OR
	basis of the EPS bearer		pc_GERAN
	identity.		•
Negotiated QoS	See Reference default		
	EPS bearer context #1 in		
Negotiated LLC SAPI	table 6.6.1-1 See Reference default		
Negotiated LLC SAFT	EPS bearer context #1 in		
	table 6.6.1-1		
Radio priority	See Reference default		
	EPS bearer context #1 in		
	table 6.6.1-1		
Packet flow Identifier	Not present '0000 0000'B	Best Effort	pc GERAN
APN-AMBR	See Reference default	Dest Elloit	pc_GERAN
7 TO TO TOUR	EPS bearer context #1 in		
	table 6.6.1-1		
ESM cause	Not present		
Protocol configuration options			
Configuration protocol	See Reference default		
	EPS bearer context #1 in table 6.6.1-1		
Container ID 1	'0001'H		P-CSCF
			IPv6
Length of container ID 1 contents		Length value	
		determined by the	
		TTCN	
Container ID 1 contents	IPv6 address	implementation P-CSCF IPv6	
Container 15 1 contents	ii vo address	Address	
Container ID 2	'000C'H		P-CSCF
			IPv4
Length of container ID 2 contents		Length value	
		determined by the TTCN	
		implementation	
Container ID 2 contents	IPv4 address	P-CSCF IPv4	
		Address	
Container ID n	'0003'H	n assigned to next	DNS IPv6
Langth of container ID a containts		available number	
Length of container ID n contents		Length value determined by the	
		TTCN	
		implementation	
Container ID n contents	IPv6 address	DNS IPv6	
	(0000)	Address	DNC :5
Container ID n+1	'000D'H	n assigned to next available number	DNS IPv4
Length of container ID n+1 contents		Length value	
23.19.1 of container in 11 contents		determined by the	
		TTCN	
		implementation	
Container ID n+1 contents	IPv4 address	DNS IPv4	
		Address	

Condition	Explanation
IPv4	If in the last PDN CONNECTIVITY REQUEST sent prior to this message, the PDN type = '001'B
IPv6	If in the last PDN CONNECTIVITY REQUEST sent prior to this message, the PDN type = '010'B
IPv4v6	If in the last PDN CONNECTIVITY REQUEST sent prior to this message, the PDN type = '011'B
IPv4-DHCP	If in the last PDN CONNECTIVITY REQUEST or ESM INFORMATION RESPONSE sent prior to this message, the IE Protocol configuration options contains a configuration protocol option = '000B00H' ("IPv4 address allocation via DHCPv4", length of contents = 0).
	Note 1: This condition is used in conjunction with IPv4 or IPv4v6 as indicated in the "PDN address row" just above.
	Note 2: If both messages, PDN CONNECTIVITY REQUEST and ESM INFORMATION RESPONSE, are received and contain a Protocol configuration options IE then the IE from the message which is received later shall be used.
P-CSCF IPv6	If in the last PDN CONNECTIVITY REQUEST or ESM INFORMATION RESPONSE sent prior to this message, the Protocol configuration options and the additional parameter list was included with a "P-CSCF IPv6 Address Request"
	Note 1: This condition is only applicable for UEs with IMS support (TS 36.523-2 A.4.4-1/25).
	Note 2: If both messages, PDN CONNECTIVITY REQUEST and ESM INFORMATION RESPONSE, are received and contain a Protocol configuration options IE then the IE from the message which is received later shall be used.
P-CSCF IPv4	If in the last PDN CONNECTIVITY REQUEST or ESM INFORMATION RESPONSE sent prior to this message, the Protocol configuration options and the additional parameter list was included with a "P-CSCF IPv4 Address Request"
	Note 1: This condition is only applicable for UEs with IMS support (TS 36.523-2 A.4.4-1/25).
	Note 2: If both messages, PDN CONNECTIVITY REQUEST and ESM INFORMATION RESPONSE, are received and contain a Protocol configuration options IE then the IE from the message which is received later shall be used.
DNS IPv6	If in the last PDN CONNECTIVITY REQUEST or ESM INFORMATION RESPONSE sent prior to this message, the Protocol configuration options and the additional parameter list was included with a "DNS IPv6 Address Request".
	Note: If both messages, PDN CONNECTIVITY REQUEST and ESM INFORMATION RESPONSE, are received and contain a Protocol configuration options IE then the IE from the message which is received later shall be used.
DNS IPv4	If in the last PDN CONNECTIVITY REQUEST or ESM INFORMATION RESPONSE sent prior to this message, the Protocol configuration options and the additional parameter list was included with a "DNS IPv4 Address Request".
	Note: If both messages, PDN CONNECTIVITY REQUEST and ESM INFORMATION RESPONSE, are received and contain a Protocol configuration options IE then the IE from the message which is received later shall be used.
APN_Provided	If in the last PDN CONNECTIVITY REQUEST or ESM INFORMATION RESPONSE sent prior to this message an Access Point Name was included NOTE: APN_Provided is equivalent to pc_Provide_IMS_APN for establishment of the first PDN connectivity during initial registration and if the first PDN is IMS (see table 4.7.3-14)
IMS_PDN_ConnEstab	If this message refers to establishment of connectivity to the IMS PDN (only applicable if the UE supports IMS according to TS 36.523-2 A.4.4-1/25).

BEARER RESOURCE ALLOCATION REJECT

This message is sent by the SS to the UE.

Table 4.7.3-6A: BEARER RESOURCE ALLOCATION REJECT

Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	'0000'B	No EPS bearer identity assigned	
Procedure transaction identity	The value indicated in BEARER RESOURCE ALLOCATION REQUEST message.		
Bearer resource allocation reject message identity	'1101 0101'B	Bearer resource allocation reject	
ESM cause	Set according to specific message content.		
Protocol configuration options	Not present		

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

- BEARER RESOURCE ALLOCATION REQUEST

This message is sent by the UE to the SS.

Table 4.7.3-6B: BEARER RESOURCE ALLOCATION REQUEST

Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	'0000'B	No EPS bearer identity assigned	
Procedure transaction identity	Any value from 1 to 254		
Bearer resource allocation request message identity	'1101 0100'B	Bearer resource allocation request	
Linked EPS bearer identity	The EPS bearer identity of the associated default bearer.		
Spare half octet	'0000'B		
Traffic flow aggregate			
Number of packet filters	Greater than 0 and less than or equal to 16		
E bit	Any allowed value		
TFT operation code	'001'B	Create new TFT	
Packet filter list	Any allowed value		
Parameters list	Not present or any		
	allowed value		
Required traffic flow QoS	Any allowed value		
Protocol configuration options	Not present or any allowed value		

BEARER RESOURCE MODIFICATION REJECT

This message is sent by the SS to the UE.

Table 4.7.3-7: BEARER RESOURCE MODIFICATION REJECT

Derivation Path: 24.301 clause 8.3.9				
Information Element	Value/remark	Comment	Condition	
Protocol discriminator	ESM			
EPS bearer identity	'0000'B	No EPS bearer identity assigned		
Procedure transaction identity	The value indicated in BEARER RESOURCE MODIFICATION REQUEST message.	, ,		
Bearer resource modification reject message identity	'1101 0111'B	Bearer resource modification reject		
ESM cause	Set according to specific message content.			
Protocol configuration options	Not present			

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

- BEARER RESOURCE MODIFICATION REQUEST

This message is sent by the UE to the SS.

Table 4.7.3-8: BEARER RESOURCE MODIFICATION REQUEST

Derivation Path: 24.301 clause 8.3.10			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	'0000'B	No EPS bearer identity assigned	
Procedure transaction identity	Any value from 1 to 254		
Bearer resource modification request message identity	'1101 0110'B	Bearer resource modification request	
EPS bearer identity for packet filter	The EPS bearer identity of the associated dedicated EPS bearer related with packet filter.		
Spare half octet	'0000'B		
Traffic flow aggregate	Any allowed value		
Traffic flow aggregate			RELEASE-
Number of packet filters	Greater than 0 and less than or equal to 16		REQUESTE D
E bit	Any allowed value		1
TFT operation code	'101'B	Delete packet filters from existing TFT	
Packet filter list	Any allowed value		
Parameters list	Not present or any allowed value		
Required traffic flow QoS	Not present or any allowed value		
ESM cause	Not present		
	'0010 0100'B	Regular deactivation	RELEASE- REQUESTE D
Protocol configuration options	Not present or any allowed value		

	Condition	Explanation
--	-----------	-------------

RELEASE-REQUESTED	UE requests the release of bearer resources.
NELEASE-NEQUESTED	DE requests the release of bearer resources.

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

Table 4.7.3-9: (Void)

Table 4.7.3-10: (Void)

DEACTIVATE EPS BEARER CONTEXT ACCEPT

This message is sent by the UE to the SS.

Table 4.7.3-11: DEACTIVATE EPS BEARER CONTEXT ACCEPT

Derivation Path: 24.301 clause 8.3.9			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	The same value as the value set in DEACTIVATE EPS BEARER CONTEXT REQUEST message.		
Procedure transaction identity	'0000 0000'B	No procedure transaction identity assigned	
Deactivate EPS bearer context accept message identity	'1100 1110'B	Deactivate EPS bearer context accept	
Protocol configuration options	Not present or any allowed value		

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

DEACTIVATE EPS BEARER CONTEXT REQUEST

This message is sent by the SS to the UE.

Table 4.7.3-12: DEACTIVATE EPS BEARER CONTEXT REQUEST

Derivation Path: 24.301 clause 8.3.10			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	Set according to specific message content.		
Procedure transaction identity	'0000 0000'B	No procedure transaction identity assigned	NETWORK- INITIATED
	The same value as the value set in PDN DISCONNECT REQUEST message or BEARER RESOURCE MODIFICATION REQUEST message.		UE- INITIATED
Deactivate EPS bearer context request message identity	'1100 1101'B	Deactivate EPS bearer context request	
ESM cause	Set according to specific message content.		
Protocol configuration options	Not present		

	Explanation
Condition	

NETWORK-INITIATED	Network initiated ESM procedures
UE-INITIATED	UE initiated ESM procedures

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

ESM INFORMATION REQUEST

This message is sent by the SS to the UE.

Table 4.7.3-13: ESM INFORMATION REQUEST

Derivation Path: 24.301 clause 8.3.11			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	'0000'B	No EPS bearer	
		identity assigned	
Procedure transaction identity	The value indicated in		
	PDN CONNECTIVITY		
	REQUEST message.		
ESM information request message identity	'1101 1001'B	ESM information	
		request	

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

- ESM INFORMATION RESPONSE

This message is sent by the UE to the SS.

Table 4.7.3-14: ESM INFORMATION RESPONSE

Derivation Path: 24.301 clause 8.3.12			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	'0000'B	No EPS bearer identity assigned	
Procedure transaction identity	The same value as the value set in ESM INFORMATION REQUEST message.		
ESM information response message identity	'1101 1010'B	ESM information response	
Access point name	Not present or any allowed value		Internet_AP N
Access point name	Not present		IMS_APN_D efault
Access point name	Any allowed value		IMS_APN_P rovided
Protocol configuration options	Not present or any allowed value		

Condition	Expression	Explanation
IMS_APN_Provided	pc_IMS AND	IMS APN shall be provided by the UE:
	NOT pc_Provide_IMS_as_second_APN AND	
	pc_Provide_IMS_APN	
IMS_APN_Default	pc_IMS AND	No IMS APN shall be provided by the UE;
	NOT pc_Provide_IMS_as_second_APN AND	IMS APN is default APN
	NOT pc_Provide_IMS_APN	
Internet_APN	NOT pc_IMS OR	
	pc_Provide_Internet_as_second_APN	

- ESM STATUS

This message is sent by the UE or by the SS.

Table 4.7.3-15: ESM STATUS

Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	Set according to specific		
•	message content.		
Procedure transaction identity	'0000 0000'B	No procedure	
		transaction	
		identity assigned	
ESM status message identity	'1110 1000'B	ESM status	
ESM cause	Set according to specific		
	message content.		

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

MODIFY EPS BEARER CONTEXT ACCEPT

This message is sent by the UE to the SS.

Table 4.7.3-16: MODIFY EPS BEARER CONTEXT ACCEPT

Derivation Path: 24.301 clause 8.3.14			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	The same value as the value set in MODIFY EPS BEARER CONTEXT REQUEST message.		
Procedure transaction identity	'0000 0000'B	No procedure transaction identity assigned	
Modify EPS bearer context accept message identity	'1100 1010'B	Modify EPS bearer context accept	
Protocol configuration options	Not present or any allowed value		

MODIFY EPS BEARER CONTEXT REJECT

This message is sent by the UE to the SS.

Table 4.7.3-17: MODIFY EPS BEARER CONTEXT REJECT

Derivation Path: 24.301 clause 8.3.15	,		
Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	The same value as the value set in MODIFY EPS BEARER CONTEXT REQUEST message.		
Procedure transaction identity	'0000 0000'B	No procedure transaction identity assigned	
Modify EPS bearer context reject message identity	'1100 1011'B	Modify EPS bearer context reject	
ESM cause	The value is set according to specific message content.		
Protocol configuration options	Not present		

MODIFY EPS BEARER CONTEXT REQUEST

This message is sent by the SS to the UE.

Table 4.7.3-18: MODIFY EPS BEARER CONTEXT REQUEST

Derivation Path: 24.301 clause 8.3.16			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	Set according to specific		
	message content.		
Procedure transaction identity	'0000 0000'B	No procedure	NETWORK-
		transaction	INITIATED
		identity assigned	
	The same value as the		UE-
	value set in BEARER		INITIATED
	RESOURCE		
	MODIFICATION		
	REQUEST message or		
	BEARER RESOURCE		
	ALLOCATION		
M 17 FD01	REQUEST message.	14 " 500	
Modify EPS bearer context request message identity	'1100 1001'B	Modify EPS	
		bearer context	
N	11. 4	request	
New EPS QoS	Use the same value as		
	used in Activate EPS		
	Bearer Context Request		
TFT	message According to reference		
IFI	dedicated EPS bearer		
	context #2 except for TFT		
	operation code which is		
	set to '100'B and TFT		
	identifier is set to		
	'00110000'B		
New QoS	Not Present.		
Negotiated LLC SAPI	Not Present.		
Radio priority	Not Present.		
Packet flow Identifier	Not Present.		
	'0000 0000'B	Best Effort	pc_GERAN
APN-AMBR	Not Present.		· -
Protocol configuration options	Not present		

Condition	Explanation
NETWORK-INITIATED	Network initiated ESM procedures
UE-INITIATED	UE initiated ESM procedures

- NOTIFICATION

This message is sent by the SS to the UE.

Table 4.7.3-18A: NOTIFICATION

Derivation Path: 24.301 clause 8.3.18A			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	'0000'B	No EPS bearer identity assigned	
	The same value as the value set in ACTIVATE DEFAULT EPS BEARER CONTEXT REQUEST message for IMS signalling.		SRVCC-HO- CANCELLE D
Procedure transaction identity	'0000 0000'B	No procedure transaction identity assigned	
Notification message identity	'1101 1011'B	Notification	
Notification indicator	'0000 0001'B	SRVCC handover cancelled, IMS session re- establishment required	SRVCC-HO- CANCELLE D

Condition	Explanation
SRVCC-HO-CANCELLED	Used if SRVCC handover is cancelled.

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

PDN CONNECTIVITY REJECT

This message is sent by the SS to the UE.

Table 4.7.3-19: PDN CONNECTIVITY REJECT

Derivation Path: 24.301 clause 8.3.17 Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	'0000'B	No EPS bearer identity assigned	
Procedure transaction identity	The same value as the value set in PDN CONNECTIVITY REQUEST message.		
PDN connectivity reject message identity	'1101 0001'B	PDN connectivity reject	
ESM cause	The value is set according to specific message content.		
Protocol configuration options	Not present		

NOTE: This message is sent without integrity protection before NAS security mode control procedure has been successfully completed and sent within SECURITY PROTECTED NAS MESSAGE message after NAS security mode control procedure has been successfully completed.

PDN CONNECTIVITY REQUEST

This message is sent by the UE to the SS.

Table 4.7.3-20: PDN CONNECTIVITY REQUEST

Derivation Path: 24.301 clause 8.3.18 Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	'0000'B	No EPS bearer identity assigned	
Procedure transaction identity	Any value from 1 to 254		
PDN connectivity request message identity	'1101 0000'B	PDN connectivity request	
Request type	'0001'B	initial request	
PDN type	Any value between '001'B, '010'B, '011'B and '100'B	The allowed values are respectively IPv4, IPv6, IPv4v6 and "unused but interpreted as IPv6 by the network"	
ESM information transfer flag	Not present or any allowed value		
Access point name	Not present	The value is mandatory when the PDN CONNECTIVITY REQUEST message is sent together with an ATTACH REQUEST message.	
Protocol configuration options	Not present or any allowed value	The value received from the UE does not affect the possible verdict associated with the message when received by the SS. The SS shall remember if this IE is present and its contents because this affects subsequent SS behaviour, e.g. coding of ACTIVATE DEFAULT EPS BEARER CONTEXT REQUEST.	

NOTE: This message is sent without integrity protection before NAS security mode control procedure has been successfully completed and sent within SECURITY PROTECTED NAS MESSAGE message after NAS security mode control procedure has been successfully completed.

PDN DISCONNECT REJECT

This message is sent by the SS to the UE.

Table 4.7.3-21: PDN DISCONNECT REJECT

Derivation Path: 24.301 clause 8.3.19			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	'0000'B	No EPS bearer identity assigned	
Procedure transaction identity	The value indicated in PDN DISCONNECT REQUEST message.		
PDN disconnect reject message identity	'1101 0011'B	PDN disconnect reject	
ESM cause	Set according to specific message content.		
Protocol configuration options	Not present		

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

PDN DISCONNECT REQUEST

This message is sent by the UE to the SS.

Table 4.7.3-22: PDN DISCONNECT REQUEST

Derivation Path: 24.301 clause 8.3.20			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	ESM		
EPS bearer identity	'0000'B	No EPS bearer identity assigned	
Procedure transaction identity	Any value from 1 to 254		
PDN disconnect request message identity	'1101 0010'B	PDN disconnect request	
Linked EPS bearer identity	The EPS bearer identity of the associated default bearer.		
Spare half octet	'0000'B		
Protocol configuration options	Not present or any allowed value		

NOTE: This message is always sent within SECURITY PROTECTED NAS MESSAGE message.

4.7A Default TC message and information element contents

This clause contains the default values of common TC (Test Control, see [38]) messages and information elements, which apply to all test cases unless otherwise specified. All the messages and information elements are listed in alphabetical order.

- ACTIVATE TEST MODE

This message is sent by the SS to the UE embedded in a RRC DLInformationTransfer message.

Table 4.7A-1: ACTIVATE TEST MODE

Derivation Path: 36.509 clause 6.5 Information Element	Value/remark	Comment	Condition
Protocol discriminator	1111		
Skip indicator	0000		
Message type	10000100		
UE test loop mode	0000000	UE test loop mode A	UE TEST LOOP MODE A (default)
UE test loop mode	0000001	UE test loop mode B	UE TEST LOOP MODE B
UE test loop mode	0000010	UE test loop mode C	UE TEST LOOP MODE C

Condition	Explanation
UE TEST LOOP MODE A	UE test loop function configured for UE test loop mode A operation.
UE TEST LOOP MODE B	UE test loop function configured for UE test loop mode B operation.
UE TEST LOOP MODE C	UE test loop function configured for UE test loop mode C operation.

- ACTIVATE TEST MODE COMPLETE

This message is sent by the UE to the SS embedded in a RRC ULInformationTransfer message.

Table 4.7A-2: ACTIVATE TEST MODE COMPLETE

Derivation Path: 36.509 clause 6.6			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	1111		
Skip indicator	0000		
Message type	10000101		

CLOSE UE TEST LOOP

This message is sent by the SS to the UE embedded in a RRC DLInformationTransfer message.

Table 4.7A-3: CLOSE UE TEST LOOP

Information Element	Value/remark	Comment	Condition
Protocol discriminator	1111		
Skip indicator	0000		
Message type	10000000		
UE test loop mode	0000000	UE test loop mode A	UE TEST
UE test loop mode A LB setup			LOOP
Length of UE test loop mode A LB setup list in bytes	0	No LB setup list. No	MODE A
		scaling (UL RLC SDU	(default)
		size will be equal to the	
		received DL SDU size)	
UE test loop mode B LB setup	Not present		
UE test loop mode C LB setup	Not present		
UE test loop mode	00000001	UE test loop mode B	UE TEST
UE test loop mode A LB setup	Not present		LOOP
UE test loop mode B LB setup			MODE B
IP PDU delay	0000000	No delay	
UE test loop mode C LB setup	Not present		
UE test loop mode	00000010	UE test loop mode C	UE TEST
UE test loop mode A LB setup	Not present		LOOP
UE test loop mode B LB setup	Not present		MODE C
UE test loop mode C LB setup		MTCH ID	
MBSFN area identity	0000000	0, same value as	
		broadcasted in the	
		default	
		SystemInformationBlock	
MOLLidontitu	0000000	Type13 message	
MCH identity	0000000	0, same value as indicated in the default	
		MBSFNAreaConfigurati	
		on message	
Logical channel identity	00000001	1, same value as	
Logical orialities identity	0000001	indicated in the default	
		MBSFNAreaConfigurati	
		on message	

Condition	Explanation
UE TEST LOOP MODE A	UE test loop function configured for UE test loop mode A operation.
UE TEST LOOP MODE B	UE test loop function configured for UE test loop mode B operation.
UE TEST LOOP MODE C	UE test loop function configured for UE test loop mode C operation.

- CLOSE UE TEST LOOP COMPLETE

This message is sent by the UE to the SS embedded in a RRC ULInformationTransfer message.

Table 4.7A-4: CLOSE UE TEST LOOP

Derivation Path: 36.509 clause 6.2			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	1111		
Skip indicator	0000		
Message type	1000001		

DEACTIVATE TEST MODE

This message is sent by the SS to the UE embedded in a RRC DLInformationTransfer message.

Table 4.7A-5: DEACTIVATE TEST MODE

Derivation Path: 36.509 clause 6.7			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	1111		
Skip indicator	0000		
Message type	10000110		

- DEACTIVATE TEST MODE COMPLETE

This message is sent by the UE to the SS embedded in a RRC ULInformationTransfer message.

Table 4.7A-6: DEACTIVATE TEST MODE COMPLETE

Derivation Path: 36.509 clause 6.8			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	1111		
Skip indicator	0000		
Message type	10000111		

OPEN UE TEST LOOP

This message is sent by the SS to the UE embedded in a RRC DLInformationTransfer message.

Table 4.7A-7: OPEN UE TEST LOOP

Derivation Path: 36.509 clause 6.3			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	1111		
Skip indicator	0000		
Message type	1000010		

OPEN UE TEST LOOP COMPLETE

This message is sent by the UE to the SS embedded in a RRC ULInformationTransfer message.

Table 4.7A-8: OPEN UE TEST LOOP COMPLETE

Derivation Path: 36.509 clause 6.4			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	1111		
Skip indicator	0000		
Message type	10000011		

UE TEST LOOP MODE C MBMS PACKET COUNTER REQUEST

This message is sent by the SS to the UE embedded in a RRC DLInformationTransfer message.

Table 4.7A-9: UE TEST LOOP MODE C MBMS PACKET COUNTER REQUEST

Derivation Path: 36.509 clause 6.10			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	1111		
Skip indicator	0000		
Message type	10001001		

UE TEST LOOP MODE C MBMS PACKET COUNTER RESPONSE

This message is sent by the UE to the SS embedded in a RRC ULInformationTransfer message.

Table 4.7A-10: UE TEST LOOP MODE C MBMS PACKET COUNTER RESPONSE

Information Element	Value/remark	Comment	Condition
Protocol discriminator	1111		
Skip indicator	0000		
Message type	10001011		
MBMS Packet Counter Value			

- 4.7B Default UTRA message and information element contents
- 4.7B.1 UTRA RRC messages
- HANDOVER TO UTRAN COMMAND

Table 4.7B.1-1: HANDOVER TO UTRAN COMMAND

Derivation Path: 25.331, clause 10.2.16a			
Information Element	Value/remark	Comment	Condition
New U-RNTI	U-RNTI-Short		
- SRNC identity	0000 0000 0001B 00 0000 0001B		
- S-RNTI-2 Ciphering algorithm	UEA0 or UEA1. The		
Ophering algorithm	indicated algorithm must		
	be one of the algorithms		
	supported by the UE.		
RNC support for change of UE capability	FALSE		
New H-RNTI	Not present		UTRA FDD PS RB, UTRA TDD PS RB, UTRA Speech, UTRA PS RB + Speech, UTRA Speech + Packet RAB Setup
	'1010 1010 1010 1010'		after Speech RAB Setup in CELL_DC H UTRA
			HSDPA RB, UTRA HSUPA/H SDPA RB
New Primary E-RNTI	'1010 1010 1010 1010'		UTRA FDD PS RB, UTRA TDD PS RB, UTRA HSDPA RB, UTRA Speech, UTRA PS RB + Speech + Packet RAB Setup after Speech RAB Setup in CELL_DC H
			HSUPA/H SDPA RB
New Secondary E-RNTI	Not present		
Default configuration for CELL_FACH	Not present		
CHOICE specification mode	Complete specification		

Cincolling DD information to 1111	Cama c- th-	1.TD 4 ED 5
- Signalling RB information to setup List	Same as the corresponding IE in the RRC CONNECTION SETUP message (Transition to CELL_DCH or HS-PDSCH in CELL_FACH) using condition A1 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RRC CONNECTION SETUP message in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA FDD PS RB, UTRA HSDPA RB, UTRA Speech, UTRA PS RB + Speech, ,UTRA Speech + Packet RAB Setup after Speech RAB Setup in CELL_DC H
	Same as the corresponding IE in the RRC CONNECTION SETUP message in TS 34.108 clause 9.2.2	UTRA TDD PS RB
	Same as the corresponding IE in the RRC CONNECTION SETUP message (Transition to CELL_DCH or HS-PDSCH in CELL_FACH) using condition A3 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RRC CONNECTION SETUP (Transition to CELL_DCH) (1.28 Mcps TDD option) message in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA HSUPA/H SDPA RB
- RAB information to setup list	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A2 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A2 in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA Speech, UTRA PS RB + Speech, UTRA Speech + Packet RAB Setup after Speech RAB Setup in CELL_DC H

Same as the	UTRA FDD
corresponding IE in the	PS RB,
RADIO BEARER SETUP	UTRA PS
message using condition	RB+
A3 in TS 34.108 clause	Speech
9.1.1 for UTRA-FDD.	
Same as the	
corresponding IE in the	
RADIO BEARER SETUP	
message (1.28 Mcps	
TDD) using condition A3	
in TS 34.108 clause 9.1.2	
for UTRA-TDD.	
Same as the	UTRA
corresponding IE in the	Speech +
RADIO BEARER SETUP	Packet
message using condition	RAB Setup
A11 in TS 34.108 clause	after
9.1.1 for UTRA-FDD.	Speech
Same as the	RAB Setup
corresponding IE in the	in Setup
RADIO BEARER SETUP	CELL_DC
message (1.28 Mcps	H CELL_DC
TDD) using condition	' '
A11 in TS 34.108 clause	
9.1.2 for UTRA-TDD.	
Same as the	UTRA TDD
corresponding IE in the	PS RB
RADIO BEARER SETUP	
message (1.28 Mcps	
TDD) using condition A3	
in TS 34.108 clause 9.2.2	
for UTRA-TDD.	1,750
Same as the	UTRA
corresponding IE in the	HSDPA
RADIO BEARER SETUP	RB
message using condition	
A10 in TS 34.108 clause	
9.1.1 for UTRA-FDD.	
Same as the	
corresponding IE in the	
RADIO BEARER SETUP	
message (1.28 Mcps	
TDD) using condition	
A10 in TS 34.108 clause	
9.1.2 for UTRA-TDD.	
Same as the	UTRA
corresponding IE in the	HSUPA/H
RADIO BEARER SETUP	SDPA RB
message using condition	
A14 in TS 34.108 clause	
9.1.1 for UTRA-FDD.	
Same as the	
corresponding IE in the	
RADIO BEARER SETUP	
message (1.28 Mcps	
TDD) using condition	
A13 in TS 34.108 clause	
9.1.2 for UTRA-TDD.	

10 T (1 1) (2 (2 (2 (2 (2 (2 (2 (2 (2 (2 (2 (2 (2		Т	LITDA
- UL Transport channel information common for all transport channels	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A2 in TS 34.108 clause 9.1.1 for UTRA-FDD Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A2 in TS 34.108 clause 9.1.2 for UTRA-TDD		UTRA Speech, UTRA PS RB + Speech, UTRA Speech + Packet RAB Setup after Speech RAB Setup in CELL_DC H
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A3 in TS 34.108 clause 9.1.1 UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A3 in TS 34.108 clause 9.2.2 UTRA-TDD.		UTRA FDD PS RB, UTRA TDD PS RB
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD.		UTRA HSDPA RB
	Same content as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same content as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD.		UTRA HSUPA/H SDPA RB

	1	
- Added or Reconfigured UL TrCH information	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A2 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A2 in TS 34.108 clause 9.1.2 for UTRA-TDD	UTRA Speech, UTRA PS RB + Speech, UTRA Speech + Packet RAB Setup after Speech RAB Setup in CELL_DC H UTRA FDD
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A3 in TS 34.108 clause 9.1.1	PS RB
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA HSDPA RB
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A11 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA Speech + Packet RAB Setup after Speech RAB Setup in CELL_DC H
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA HSUPA/H SDPA RB
- Added or Reconfigured UL TrCH information	2 Entries	UTRA TDD PS RB
- Added or Reconfigured UL TrCH information[1]	Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108 clause 9.2.2.	UTRA TDD PS RB

Added on December mod III Troll intermed 101	Compagnetha	LITDA TOD
- Added or Reconfigured UL TrCH information[2]	Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A3 in TS 34.108 clause 9.2.2. Same as the	UTRA TDD PS RB UTRA
- DL Transport channel information common for all transport channels	corresponding IE in the RADIO BEARER SETUP message using condition A2 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A2 in TS 34.108 clause 9.1.2 for UTRA-TDD.	Speech, UTRA PS RB + Speech, UTRA Speech + Packet RAB Setup after Speech RAB Setup in CELL_DC H
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A3 in TS 34.108 clause 9.1.1	UTRA FDD PS RB
	Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A3 in TS 34.108 clause 9.2.2.	UTRA TDD PS RB
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRAT-TDD.	UTRA HSDPA RB
	Same content as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA HSUPA/H SDPA RB

- Added or Reconfigured DL TrCH information Same as the corresponding IE in the RADIO BEARER SETUP message using condition A2 in T3 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A2 in T3 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A2 in T3 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A3 in T3 34.108 clause 9.1.1 for UTRA-FDD. Some passing the RADIO BEARER SETUP message using condition A3 in T3 34.108 clause 9.1.1 for UTRA-FDD. Some passing using condition A3 in T3 34.108 clause 9.1.1 for UTRA-FDD. Some passing using condition A1 in T3 34.108 clause 9.1.1 for UTRA-FDD. Some passing using condition A1 in T3 34.108 clause 9.1.2 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in T3 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A1 in T3 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A1 in T3 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in T3 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in T3 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in T3 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in T3 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in T3 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in T3 34.108 clause 9.1.1 for UTRA-FDD. Same as the		<u> </u>	
AZ in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A2 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A3 in TS 34.108 clause 9.1.1 Same as the corresponding IE in the RADIO BEARER SETUP message using condition A1 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A1 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A1 in TS 34.108 clause 9.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in TS 34.108 clause 9.1 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in TS 34.108 clause 9.1 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in TS 34.108 clause 9.1 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in TS 34.108 clause 9.1.1 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in TS 34.108 clause 9.1.1 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in TS 34.108 clause 9.1.1 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in TS 34.108 clause 9.1.1 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in TS 34.108 clause 9.1.2 for UTRA-TDD. PS RB	- Added or Reconfigured DL TrCH information	corresponding IE in the RADIO BEARER SETUP	Speech, UTRA PS
9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Meps TDD) using condition A2 in T5 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A3 in T5 34.108 clause 9.1.1 Same as the corresponding IE in the RADIO BEARER SETUP message using condition A3 in T5 34.108 clause 9.1.1 Same as the corresponding IE in the COMPANIENT OF THE PROPERTY OF THE P			
Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A2 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A3 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A1 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A11 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. PS RB			
corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A2 in Ts 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A3 in Ts 34.108 clause 9.1.1 Same as the corresponding IE in the RADIO BEARER SETUP message using condition A3 in Ts 34.108 clause 9.1.1 Same as the corresponding IE in the RADIO BEARER SETUP message using condition A1 in Ts 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in Ts 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in Ts 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in Ts 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in Ts 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in Ts 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in Ts 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A11 in Ts 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in Ts 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A13 in Ts 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A13 in Ts 34.108 clause 9.1.1 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A13 in Ts 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the corresponding IE in the corresponding IE in the RADIO BEARER SET			_
message (1.28 Mcps TDD) using condition A2 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A3 in TS 34.108 clause 9.1.1 Same as the corresponding IE in the RADIO BEARER SETUP message using condition A11 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. FS RB FARSERD - Added or Reconfigured DL TrCH information [1] Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A15 in TS 34.108 clause 9.1.1 for UTRA-TDD. FS RB			
TDD) using condition A2 in TS 34-108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A3 in TS 34-108 clause 9.1.1 Same as the corresponding IE in the RADIO BEARER SETUP message using condition A1 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A11 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) as a same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34-108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A15 in TS 34-108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) in TS 34-108 clause 9.1.2 for UTRA-TDD.		RADIO BEARER SETUP	
in TS 34.108 clause 9.1.2 for UTRA-TDD. RAB Setup for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A3 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the corresponding IE in the RADIO BEARER SETUP message using condition A1 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A15 in TS 34.108 clause 9.1.2 for UTRA-TDD. **Added or Reconfigured DL TrCH information (1.5 Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A15 at 10.8 Mcps TDD using condition A15 at 10.8 Mcps TDD using condition A1			
for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A1 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A1 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in TS 34-108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A1 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A1 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A15 in TS 34-108 clause 9.1.2 for UTRA-TDD. Fare as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) in TS 34-108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) in TS 34-108 clause 9.1.2 for UTRA-TDD.			
Same as the corresponding IE in the RADIO BEARER SETUP message using condition A3 in TS 34.108 clause 9.1.1 Same as the corresponding IE in the RADIO BEARER SETUP message using condition A1 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A11 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. Using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. UTRA-TDD. UTRA-TDD PS RB			l
corresponding IE in the RADIO BEARER SETUP message using condition A3 in TS 34-108 clause 9.1.1 Same as the corresponding IE in the RADIO BEARER SETUP message using condition RADI TS 34-108 clause 9.1.1 for UTRA-FDD. Sepech + Packet in TS 34-108 clause 9.1.1 for UTRA-FDD. Sepech RAB Setup after corresponding IE in the RADIO BEARER SETUP message using condition RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34-108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A11 in TS 34-108 clause 9.1.2 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34-108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34-108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34-108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34-108 clause 9.1.1 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34-108 clause 9.1.1 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34-108 clause 9.1.1 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34-108 clause 9.1.2 for UTRA-TDD. Added or Reconfigured DL TrCH information 2 Entries UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34-108 clause 9.1.2 for UTRA-TDD. Added or Reconfigured DL TrCH information 11 Recorresponding IE in the RADIO BEARER SETUP MCPs RB		lor error rab.	CELL_DC
RADIÓ BEARER SETUP message using condition A3 in TS 34.108 clause 9.1.1 Same as the corresponding IE in the RADIO BEARER SETUP message using condition A11 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A1 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A13 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. 4.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA TDD PS RB UTRA TDD PS RB UTRA TDD PS RB UTRA TDD PS RB		Same as the	
message using condition A3 in TS 34.108 clause 9.11 Same as the corresponding IE in the RADIO BEARER SETUP message using condition A11 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.1 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.1 for UTRA-TDD. Jame as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.1 for UTRA-TDD. Jame as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. JUTRA TDD PS RB UTRA TDD PS RB UTRA TDD PS RB UTRA TDD PS RB		corresponding IE in the	PS RB
AS in TS 34.108 clause 9.1.1 Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Speech RAB Setup corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.2 for UTRA-TDD. Speech RAB Setup in CELL_DC message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. UTRA-TDD. UTRA-TDD. - Added or Reconfigured DL TrCH information [1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) using condition A15 in TS 34.108 clause 9.1.2 for UTRA-TDD. UTRA-TDD. UTRA-TDD. PS RB			
9.1.1 Same as the corresponding IE in the RADIO BEARER SETUP message using condition A11 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.2 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A11 in TS 34.108 clause 9.1.2 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.2 for UTRA-TDD.			
corresponding IE in the RADIO BEARER SETUP message using condition A11 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.1 for UTRA-FDD. The RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. The RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-FDD. The RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. The RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. The RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. The RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. The RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD.			
RADIO BEARER SETUP message using condition A11 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. UTRA Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A15 in TS 34.108 clause 9.1.2 for UTRA-TDD. UTRA UTRA TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. Added or Reconfigured DL TrCH information 2 Entries UTRA TDD PS RB - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108		Same as the	-
message using condition A11 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. 4 Added or Reconfigured DL TrCH information 2 Entries - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
A11 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information - Added or Reconfigured DL TrCH information[1] - Added or Reconfigured DL TrCH information[1] - Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			•
Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA-TDD. - Added or Reconfigured DL TrCH information 1 Same as the corresponding IE in the RC CONNECTION SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD.			
RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA TDD PS RB			RAB Setup
message (1.28 Mcps TDD) using condition A11 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA-TDD. - Added or Reconfigured DL TrCH information 1 Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108 clause 9.1.2 m the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108 SE			
TDD) using condition A11 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A14 in TS 34.108 clause 9.1.1 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information - Added or Reconfigured DL TrCH information Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
A11 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA TDD PS RB - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			П
Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA TDD PS RB - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA-TDD. - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
RADIÓ BEARER SETUP message using condition A10 in TS 34,108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34,108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34,108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34,108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34,108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA TDD PS RB - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34,108			
message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA TDD PS RB - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			IND.
Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA TDD PS RB - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA TDD PS RB - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. UTRA TDD PS RB - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. UTRA TDD PS RB - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108		TDD) using condition	
Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA TDD PS RB - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA TDD PS RB - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			IITD^
RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA TDD PS RB - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108		RADIO BEARER SETUP	
9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA TDD PS RB - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA TDD PS RB - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information 2 Entries UTRA TDD PS RB - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information - Added or Reconfigured DL TrCH information[1] - Added or Reconfigured DL TrCH information[1] - Added or Reconfigured DL TrCH information[1] - Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information - Added or Reconfigured DL TrCH information[1] - Added or Reconfigured DL TrCH information[1] - Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108		RADIO BEARER SETUP	
A13 in TS 34.108 clause 9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information - Added or Reconfigured DL TrCH information[1] - Added or Reconfigured DL TrCH information[1] - Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
9.1.2 for UTRA-TDD. - Added or Reconfigured DL TrCH information - Added or Reconfigured DL TrCH information[1] - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108			
- Added or Reconfigured DL TrCH information 2 Entries UTRA TDD PS RB - Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108 UTRA TDD PS RB			
- Added or Reconfigured DL TrCH information[1] Same as the corresponding IE in the RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108 UTRA TDD PS RB	- Added or Reconfigured DL TrCH information		
RRC CONNECTION SETUP message (1.28 Mcps TDD) in TS 34.108	- Added or Reconfigured DL TrCH information[1]	Same as the	
SETUP message (1.28 Mcps TDD) in TS 34.108			PS RB
Mcps TDD) in TS 34.108			

- Added or Reconfigured DL TrCH information[2]	Same as the	UTRA TDD
- Added or Reconfigured DL TrCH information[2]	corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A3 in TS 34.108 clause 9.2.2.	PS RB
- Uplink DPCH info	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A2 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA Speech, UTRA PS RB + Speech, UTRA Speech + Packet RAB Setup after Speech RAB Setup in CELL_DC H
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A3 in TS 34.108 clause 9.1.1	UTRA FDD PS RB
	Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A3 in TS 34.108 clause 9.2.2.	UTRA TDD PS RB
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA HSDPA RB
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA HSUPA/H SDPA RB

		,
- E-DCH Info	Not present	UTRA FDD PS RB, UTRA TDD PS RB, UTRA HSDPA RB, UTRA Speech, UTRA PS RB + Speech, UTRA Speech + Packet RAB Setup after Speech RAB Setup in CELL_DC H
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA HSUPA/H SDPA RB
- Downlink HS-PDSCH Information	Not present	UTRA FDD PS RB, UTRA TDD PS RB, UTRA Speech, UTRA PS RB + Speech + Packet RAB Setup after Speech RAB Setup in CELL_DC H
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA HSDPA RB

	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA HSUPA/H SDPA RB
- Downlink information common for all radio links	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A2 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A2 in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA Speech, UTRA PS RB + Speech, UTRA Speech + Packet RAB Setup after Speech RAB Setup in CELL_DC H
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A4 in TS 34.108 clause 9.1.1 Same as the	UTRA FDD PS RB UTRA TDD
	corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A3 in TS 34.108 clause 9.2.2.	PS RB
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA HSDPA RB
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA HSUPA/H SDPA RB

- Downlink information for each radio link list	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A2 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A2 in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA Speech, UTRA PS RB + Speech, UTRA Speech + Packet RAB Setup after Speech RAB Setup in CELL_DC
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A3 in TS 34.108 clause 9.1.1	H UTRA FDD PS RB
	Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A3 in TS 34.108 clause 9.2.2.	UTRA TDD PS RB
	Same as the corresponding IE in the RADIO BEARER SETUP message using condition A10 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A10 in TS 34.108 clause	UTRA HSDPA RB
	9.1.2 for UTRA-TDD. Same as the corresponding IE in the RADIO BEARER SETUP message using condition A14 in TS 34.108 clause 9.1.1 for UTRA-FDD. Same as the corresponding IE in the RADIO BEARER SETUP message (1.28 Mcps TDD) using condition A13 in TS 34.108 clause 9.1.2 for UTRA-TDD.	UTRA HSUPA/H SDPA RB
Frequency info	Set according to the frequency of the target UTRA cell.	
Multi-frequency Info Maximum allowed UL TX power	Not present 21dBm	

Condition	Explanation

UTRA Speech	Establishment of the UTRA reference configuration as specified in Table 4.8.3-1 using the condition "UTRA Speech".
UTRA FDD PS RB	Establishment of the UTRA FDD reference configuration as specified in Table 4.8.3-1 using the condition "UTRA FDD PS RB".
UTRA TDD PS RB	Establishment of the UTRA TDD reference configuration as specified in Table 4.8.3-1 using the condition "UTRA TDD PS RB".
UTRA HSDPA RB	Establishment of the UTRA reference configuration as specified in Table 4.8.3-1 using the condition "UTRA HSDPA RB".
UTRA HSUPA/HSDPA RB	Establishment of the UTRA reference configuration as specified in Table 4.8.3-1 using the condition "UTRA HSUPA/HSDPA RB".
UTRA PS RB + Speech	Establishment of the UTRA reference configuration as specified in Table 4.8.3-1 using the condition "UTRA PS RB + Speech".
UTRA Speech + Packet RAB Setup after Speech RAB Setup in CELL DCH	Establishment of the UTRA reference configuration as specified in Table 4.8.3-1 using the condition "UTRA Speech + Packet RAB Setup after Speech RAB Setup in Cell DCH".

HANDOVER FROM UTRAN COMMAND

Table 4.7B.1-2: HANDOVER FROM UTRAN COMMAND

Derivation Path: 25.331, clause 10.2.15			
Information Element	Value/remark	Comment	Condition
Message Type			
Integrity check info			
- Message authentication code	SS calculates the value of MAC-I for this message and writes to this IE. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I.		
- RRC Message sequence number	SS provides the value of this IE, from its internal counter.		
SR-VCC Info	Not present		
Activation time	Now		
RAB Info			
- RAB identity	0000 0101B The first/ leftmost bit of the bit string contains the most significant bit of the RAB identity.		
- CN domain identity	PS domain		
- NAS Synchronization Indicator	Not present		
- Re-establishment timer	Use T315		
Inter-system message			
- CHOICE System type	E-UTRA		
- E-UTRA message	RRCConnectionReconfig uration using condition HO-TO-EUTRA(1,0)	See Table 4.6.1-8	

MEASUREMENT CONTROL

Table 4.7B.1-3: MEASUREMENT CONTROL

Derivation Path: 25.331, clause 10.2.17			
Information Element	Value/remark	Comment	Condition
Message Type			
RRC transaction identifier	Arbitrarily selects an unused integer between 0		
	to 3		

T	1		
Integrity check info			
- Message authentication code	SS calculates the value of		
	MAC-I for this message		
	and writes to this IE. The		
	first/ leftmost bit of the bit		
	string contains the most		
	significant bit of the MAC-		
	I.		
- RRC message sequence number	SS provides the value of		
	this IE, from its internal		
	counter.		
Measurement Identity	3		
Measurement Command	Setup		
Measurement Reporting Mode			
- Measurement Report Transfer Mode	Acknowledged mode RLC		
- Periodical Reporting/Event Trigger Reporting			
	Event trigger		
Mode	N		
Additional measurement list	Not present		
CHOICE Measurement type	Inter-RAT measurement		
- CHOICE Inter-RAT measurement objects	E-UTRA frequency list		
- CHOICE E-UTRA frequency removal	Remove no frequencies		
- New frequencies	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		
- E-UTRA carrier frequency	Downlink EARFCN of E-	<u> </u>	
- L-0 TVA carrier frequency	UTRA Cell		
- Measurement bandwidth	Same downlink system		
- Measurement bandwidth			
	bandwidth as used for E-		
	UTRA Cell		
- Blacklisted cells list	Not present		
- Inter-RAT measurement quantity			
- Measurement quantity for UTRAN quality			
estimate			
	1_	†	1
- Filter coefficient	10		
- Filter coefficient	0 EDD		EDD LITEA
- CHOICE mode	FDD		FDD_UTRA
- CHOICE mode - Measurement quantity	FDD CPICH Ec/N0		FDD_UTRA
- CHOICE mode	FDD	For signalling tests	FDD_UTRA
- CHOICE mode - Measurement quantity - Measurement quantity	FDD CPICH Ec/N0 CPICH RSCP	For signalling tests cases.	
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode	FDD CPICH Ec/N0 CPICH RSCP TDD		FDD_UTRA TDD_UTRA
- CHOICE mode - Measurement quantity - Measurement quantity	FDD CPICH Ec/N0 CPICH RSCP		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity	FDD CPICH Ec/N0 CPICH RSCP TDD		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting quantity	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting cell status - CHOICE report criteria	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting cell status - CHOICE report criteria	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria 1 entry		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting cell status - CHOICE report criteria	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria 1 entry Set according to		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting quantity - Reporting cell status - CHOICE report criteria - Parameters required for each event - Inter-RAT event identity	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria 1 entry Set according to specific test.		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting quantity - Reporting cell status - CHOICE report criteria - Parameters required for each event - Inter-RAT event identity - Threshold own system	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria 1 entry Set according to		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting quantity - Reporting cell status - CHOICE report criteria - Parameters required for each event - Inter-RAT event identity	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria 1 entry Set according to specific test66 dB 0		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting quantity - Reporting cell status - CHOICE report criteria - Parameters required for each event - Inter-RAT event identity - Threshold own system - W	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria 1 entry Set according to specific test66 dB 0		
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting quantity - Reporting cell status - CHOICE report criteria - Parameters required for each event - Inter-RAT event identity - Threshold own system	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria 1 entry Set according to specific test66 dB	cases.	
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting quantity - Reporting cell status - CHOICE report criteria - Parameters required for each event - Inter-RAT event identity - Threshold own system - W	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria 1 entry Set according to specific test66 dB 0	When	
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting quantity - Reporting cell status - CHOICE report criteria - Parameters required for each event - Inter-RAT event identity - Threshold own system - W	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria 1 entry Set according to specific test66 dB 0	When measurement quantity is RSRP,	
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting quantity - Reporting cell status - CHOICE report criteria - Parameters required for each event - Inter-RAT event identity - Threshold own system - W	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria 1 entry Set according to specific test66 dB 0	When measurement quantity is RSRP, range should be (-	
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting quantity - Reporting cell status - CHOICE report criteria - Parameters required for each event - Inter-RAT event identity - Threshold own system - W	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria 1 entry Set according to specific test66 dB 0	When measurement quantity is RSRP, range should be (-11519), the	
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting quantity - Reporting cell status - CHOICE report criteria - Parameters required for each event - Inter-RAT event identity - Threshold own system - W	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria 1 entry Set according to specific test66 dB 0	When measurement quantity is RSRP, range should be (-11519), the actual value =	
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting quantity - Reporting cell status - CHOICE report criteria - Parameters required for each event - Inter-RAT event identity - Threshold own system - W	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria 1 entry Set according to specific test66 dB 0	When measurement quantity is RSRP, range should be (- 11519), the actual value = Threshold other	
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting quantity - Reporting cell status - CHOICE report criteria - Parameters required for each event - Inter-RAT event identity - Threshold own system - W	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria 1 entry Set according to specific test66 dB 0	When measurement quantity is RSRP, range should be (-11519), the actual value =	
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting cell status - CHOICE report criteria - Parameters required for each event - Inter-RAT event identity - Threshold own system - W - Threshold other system	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria 1 entry Set according to specific test66 dB 0 -55 (-80 dBm)	When measurement quantity is RSRP, range should be (- 11519), the actual value = Threshold other	
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting cell status - CHOICE report criteria - Parameters required for each event - Inter-RAT event identity - Threshold own system - W - Threshold other system	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria 1 entry Set according to specific test66 dB 0 -55 (-80 dBm)	When measurement quantity is RSRP, range should be (- 11519), the actual value = Threshold other	
- CHOICE mode - Measurement quantity - Measurement quantity - CHOICE mode - Measurement quantity - CHOICE system - Measurement quantity - Filter coefficient - Inter-RAT reporting quantity - UTRAN estimated quality - CHOICE system - Reporting quantity - Reporting cell status - CHOICE report criteria - Parameters required for each event - Inter-RAT event identity - Threshold own system - W - Threshold other system	FDD CPICH Ec/N0 CPICH RSCP TDD Primary CCPCH RSCP E-UTRA RSRP 0 FALSE E-UTRA both Not present Inter-RAT measurement reporting criteria 1 entry Set according to specific test66 dB 0 -55 (-80 dBm)	When measurement quantity is RSRP, range should be (- 11519), the actual value = Threshold other	

- CHOICE reported cell	Report cells within active set or within virtual active	
	set or of the other RAT	
- Maximum number of reported cells	2	
- Idle Interval Information	Not present	
CELL_DCH measurement occasion info LCR		LCR_TDD_U TRA
- cellDCHMeasOccasionSequence	1 entry	
- Pattern sequence identifier	0	
- Status Flag	activate	
- Measurement purpose	'00001'	
- Measurement occasion pattern sequence		
parameters		
- k	3	
- Offset	0	
- M_Length	1	
- Timeslot Bitmap	Not Present	
DPCH Compressed mode status info	Not Present	FDD_UTRA AND NOT
		Compressed_ mode
DPCH Compressed mode status info		FDD_UTRA
		AND
		Compressed_
		mode
- TGPS reconfiguration CFN	(Current CFN + (250 –	
	TTI/10msec)) mod 256	
- Transmission gap pattern sequence	1 entry	
- TGPSI	1	
- TGPS Status Flag	activate	
- TGCFN	(Current CFN + (252 –	
	TTI/10msec)) mod 256	
DPCH Compressed mode status info	Not present	TDD_UTRA

Condition	Explanation	
FDD_UTRA	FDD UTRA cell environment	
TDD_UTRA	TDD UTRA cell environment	
LCR_TDD_UTRA	LCR TDD UTRA cell environment	
Compressed_mode	The UE Support of Compressed mode (TS 36.523-2 table A.4.4-1/28).	

MEASUREMENT REPORT

Table 4.7B.1-4: MEASUREMENT REPORT

Derivation Path: 25.331, clause 10.2.19			
Information Element	Value/remark	Comment	Condition
Message Type			
Integrity check info			
- Message authentication code	This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I.		
- RRC Message sequence number	This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value.		
Activation time	(256+CFN-(CFN MOD 8 + 8)) MOD 256		
Measurement identity	3		
Measured Results	Not present		

Measured results on RACH	Not present	
Additional measured results	Not present	
Event results	Not present	
Inter-RAT cell info indication	Not present	
E-UTRA Measured Results		
 E-UTRA measured results list 	1 entry	
- E-UTRA Carrier Frequency		
- Measured E-UTRA cells	1 entry	
- Physical Cell Identity	PhysicalCellIdentity of E- UTRA Cell	
- RSRP	Set according to specific test.	
- RSRQ	Set according to specific test.	
E-UTRA Event Results		
- Inter-RAT event identity	Set according to specific test.	
- E-UTRA events results list	1 entry	
- E-UTRA Carrier Frequency	Downlink EARFCN of E- UTRA Cell	
- Reported cells	1 entry	
- Physical Cell Identity	PhysicalCellIdentity of E- UTRA Cell	

PHYSICAL CHANNEL RECONFIGURATION

Table 4.7B.1-5: PHYSICAL CHANNEL RECONFIGURATION

Derivation Path: 25.331, clause 10.2.22			
Information Element	Value/remark	Comment	Condition
Message Type			
RRC transaction identifier	Arbitrarily selects an unused integer between 0 to 3		
Integrity check info			
- Message authentication code	SS calculates the value of MAC-I for this message and writes to this IE. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I.		
- RRC message sequence number	SS provides the value of this IE, from its internal counter.		
Integrity protection mode info	Not Present		
Ciphering mode info	Not Present		
Activation time	Not Present		
Delay restriction flag	Not Present		
New U-RNTI	Not Present		
New C-RNTI	Not Present		
New H-RNTI	Not Present		
New Primary E-RNTI	Not Present		
New Secondary E-RNTI	Not Present		
RRC State indicator	CELL_DCH		
UE Mobility State Indicator	Not Present		
UTRAN DRX cycle length coefficient	Not Present		
CN information info	Not Present		
URA identity	Not Present		
RNC support for change of UE capability	Not Present		
Reconfiguration in response to requested change of UE capability	Not Present		
Downlink counter synchronization info	Not Present		

Frequency info	Not Present	
DTX-DRX timing information DTX-DRX Information	Not Present Not Present	
HS-SCCH less Information	Not Present	
MIMO parameters	Not Present	
HARQ Info	Not Present	
Maximum allowed UL TX power	Not Present	
CHOICE channel requirement	Not Present	
E-DCH Info	Not Present	
Downlink HS-PDSCH Information	Not Present	
Downlink information common for all radio links	N. D.	
- Downlink DPCH info common for all RL	Not Present	
- DPCH compressed mode info	Not Present	 TDD
- DPCH compressed mode info		 FDD
- TGPSI	1	
- TGPS Status Flag	Deactivate	
- TGCFN	Not Present	
- Transmission gap pattern sequence		
configuration parameters		
- TGMP	E-UTRA measurement	
- TGPRC	Infinity	
- TGSN	8	
- TGL1	10	
- TGL2	Not Present	
- TGD	undefined	
- TGPL1	12	
- TGPL2	Not Present	
- RPP	Mode 0	
- ITP	Mode 0	
- CHOICE UL/DL Mode	UL and DL, UL only or DL	
	only (depending on the	
	UE capability)	
 Downlink compressed mode method 	HLS(or not sent,	
	depending on the UE	
	capability)	
 Uplink compressed mode method 	HLS(or not sent,	
	depending on the UE	
	capability)	
- Downlink frame type	B	
- DeltaSIR1	20 (2.0)	
- DeltaSIRAfter1	10 (1.0)	
- DeltaSIR2	Not Present	
- DeltaSIRAfter2	Not Present	
- N identify abort	Not Present	
- T Reconfirm abort	Not Present	
- TX Diversity mode	Not Present	
- SSDT information	Not Present	
- Default DPCH Offset Value	Not Present	
Downlink information for each radio link	Not Present	
MBMS PL Service Restriction Information	Not Present	

PHYSICAL CHANNEL RECONFIGURATION COMPLETE

Table 4.7B.1-6: PHYSICAL CHANNEL RECONFIGURATION COMPLETE

Derivation Path: 25.331, clause 10.2.23			
Information Element	Value/remark	Comment	Condition
Message Type			
Integrity check info			

- Message authentication code	This IE is checked to see if it is present. The value is compared against the XMAC-I value computed by SS. The first/ leftmost bit of the bit string contains the most significant bit of the MAC-I.	
- RRC Message sequence number	This IE is checked to see if it is present. The value is used by SS to compute the XMAC-I value.	
Uplink integrity protection activation info	Not checked	
COUNT-C activation time	Not checked	
Uplink counter synchronization info	Not checked	

RRC CONNECTION REQUEST

Table 4.7B.1-7: RRC CONNECTION REQUEST

Derivation Path: 25.331, clause 10.2.39		_	
Information Element	Value/remark	Comment	Condition
Message Type			
Predefined configuration status information	To be checked against		
	requirement if specified		
Initial UE identity			
- CHOICE UE id type			
- TMSI and LAI (GSM-MAP)	Set to the UE's TMSI and LAI.		
Establishment cause	To be checked against requirement if specified		
Protocol error indicator	FALSE		
UE Specific Behaviour Information 1 idle	This IE will not be checked by default behaviour, but in specific test case.		
Domain indicator	Not checked		
Call type	Not checked		
UE capability indication	Not checked		
MBMS Selected Services	Not checked		
Support for F-DPCH	Not checked		
UE Mobility State Indicator	Not Present		
Support for Enhanced F-DPCH	Not checked		
HS-PDSCH in CELL_FACH	Not checked		
MAC-ehs support	Not checked		
DPCCH Discontinuous Transmission support	Not checked		
Support of common E-DCH	Not checked	REL-8	
Multi cell support	Not checked	REL-8	
Pre-redirection info	Not checked	REL-8	
Support of MAC-i/is	Not checked	REL-8	
Support of SPS operation	Not checked	REL-8	
Support for CS Voice over HSPA	Not checked	REL-8	
Dual cell MIMO support	Not checked	REL-9	
System Information Container Stored Indicator	Not checked	REL-9	
Measured results on RACH	Not checked		
Access stratum release indicator	Not checked		

SECURITY MODE COMMAND

Table 4.7B.1-n: SECURITY MODE COMMAND

Derivation Path: 25.331, clause 10.2.43			
Information Element	Value/remark	Comment	Condition
FFS			

SECURITY MODE COMPLETE

Table 4.7B.1-n: SECURITY MODE COMPLETE

Derivation Path: 25.331, clause 10.2.44			
Information Element	Value/remark	Comment	Condition
FFS			

UTRAN MOBILITY INFORMATION

Table 4.7B.1-n: UTRAN MOBILITY INFORMATION

Derivation Path: 34.108 clause 9.1.1 (UTRAN MOBILITY INFORMATION message)			
Information Element	Value/remark	Comment	Condition
UTRAN MOBILITY INFORMATION			
CN information info			
- PLMN identity	Not present		
- CN common GSM-MAP NAS system information			
- GSM-MAP NAS system information	00 01H		
- CN domain related information			
- CN domain identity	PS		
 CN domain specific NAS system information 			
- GSM-MAP NAS system information	01 00H		
- CN domain specific DRX cycle length coefficient	7		
- CN domain identity	CS		
 CN domain specific NAS system information 			
- GSM-MAP NAS system information	1E 01H		
- CN domain specific DRX cycle length coefficient	7		

UTRAN MOBILITY INFORMATION CONFIRM

Table 4.7B.1-n: UTRAN MOBILITY INFORMATION CONFIRM

Derivation Path: 34.108 clause 9.1.1 (UTRAN MOBILITY INFORMATION CONFIRM message)

4.7B.2 UTRA NAS messages

This section contains default message contents for UTRA NAS messages.

In 3GPP TS 36.523-1 [18]:

- UTRA NAS messages are defined as exceptions, IE by IE, to the messages defined in this section;
- UTRA NAS messages not defined in this section are specified completely.

The following messages are not specified in this section:

- AUTHENTICATION REQUEST (CS)
- AUTHENTICATION RESPONSE (CS)
- DETACH REQUEST (CS & PS)
- DETACH ACCEPT (CS & PS)

- IDENTITY REQUEST (CS & PS)
- IDENTITY RESPONSE (CS & PS)
- P-TMSI REALLOCATION COMMAND (PS)
- P-TMSI REALLOCATION COMPLETE (PS)
- SERVICE REQUEST (PS)

Table 4.7B.2-1: ROUTING AREA UPDATE REQUEST

Derivation path: 24.008 table 9.4.14			
Information Element	Value/Remark	Comment	Condition
Update type	000 'RA updating' or 001 'combined RA/LA updating' 010 'combined RA/LA updating with IMSI attach'	In NMO I, depending on capability and domain preference for voice and SMS,	
		the UE may initiate either PS only or CS/PS registration procedures.	
GPRS ciphering key sequence number	Any allowed value		
Old routing area identification	Any allowed value	<u> </u>	
MS Radio Access capability	Any allowed value	The checking of this IE is expected to be covered in UMTS test cases.	
Old P-TMSI signature	Not present or any allowed value	For test cases where no "UE" statement indicates that a P-TMSI signature was previously registered, whether or not the UE includes this IE depends on previous USIM contents.	
Requested READY timer value	Not present or any allowed value	The checking of this IE is expected to be covered in UMTS test cases.	
DRX parameter	Not present or any allowed value	The checking of this IE is expected to be covered in UMTS test cases.	
TMSI status	0 'no valid TMSI available' or not present		
P-TMSI	Not present or any allowed value		
MS network capability	Any allowed value	The checking of this IE is expected to be covered in UMTS test cases.	
PDP context status	Any allowed value	The checking of this IE is expected to be covered in UMTS test cases.	
PS LCS Capability	Not present or any allowed value	The checking of this IE is expected to be covered in UMTS test cases.	
MBMS context status UE network capability	Not present Any allowed value (must be present)	No detailed checking by default but should be aligned with PICS	
Additional mobile identity	Not present or any allowed value		
Additional old routing area identification	Not present or any allowed value		

Mobile station classmark 2	Not present or any allowed value	This IE shall be included if the MS supports SRVCC to GERAN or UTRAN.
Mobile station classmark 3	Not present or any allowed value	This IE shall be included if the MS supports SRVCC to GERAN.
Supported Codecs	Not present or any allowed value	
Voice domain preference and UE's usage setting	Not present or any allowed value	Rel-9
P-TMSI type	Any allowed value	Rel-10

Table 4.7B.2-2: ROUTING AREA UPDATE ACCEPT

Derivation path: 24.008 table 9.4.15			
Information Element	Value/Remark	Comment	Condition
Force to standby	0 'Force to standby not indicated'		
Update result	000 'RA updated'		IF the UE indicated 000 'RA updating' in the previous RAU request message
	001 'combined RA/LA updated'		IF the UE indicated 001 'combined RA/LA updating' in the previous RAU request message
D : 1' DA 1 4 4'	1 'No follow-on proceed'		
Periodic RA update timer Routing area identification	111 (deactivated)	Value in table 4.4.4-2 for simulated UTRA cells.	
P-TMSI signature	Arbitrary value	0001	
Allocated P-TMSI	Arbitrary value	2 most significant bits = 11 to indicate SGSN	
MS identity	Not present	Is never present in case of RA only procedure, and RA/LA procedures do not necessarily change TMSI	
List of Receive N PDU Numbers	Not present	Realistic network value	
Negotiated READY timer value	Not present		
GMM cause	Not present		
T3302 value	Not present		
Cell Notification	Not present	This IE is for A/Gb mode only.	
Equivalent PLMNs	Not present		
PDP context status	Same value as the one received in the RAU request message		
Network feature support	Not present		
Emergency Number List	Not present		
MBMS context status	Not present		
Requested MS Information	Not present		
T3319 value	Not present		
T3323 value	Not present		

Table 4.7B.2-3: ROUTING AREA UPDATE COMPLETE

Derivation path: 24.008 table 9.4.16			
Information Element	Value/Remark	Comment	Condition
List of Receive N PDU Numbers	Not present		
Inter RAT handover information	Not present		
E-UTRAN inter RAT handover information	Not present		

Table 4.7B.2-4: LOCATION UPDATING REQUEST

Information Element	Value/Remark	Comment	Condition
Location updating type	Any allowed value		
Ciphering key sequence number	Any allowed value		
Location area identification	Any allowed value		
Mobile station classmark	Any allowed value		
Mobile identity	Any allowed value		
Mobile station classmark for UMTS	Any allowed value		
Additional update parameters	Not present or any allowed value		

Table 4.7B.2-5: LOCATION UPDATING ACCEPT

Derivation path: 24.008 table 9.2.15			
Information Element	Value/Remark	Comment	Condition
Location area identification	1		
Mobile identity			
TMSI	Arbitrary value	2 most significant bits = 00 to indicate VLR	
Follow on proceed	Present	This IE is unncessary in non-CS fallback test cases.	
CTS permission	Absent		
Equivalent PLMNs	Absent		
Emergency Number List	Absent		

Table 4.7B.2-6: ATTACH REQUEST

Derivation path: 24.008 table 9.4.1		1	1
Information Element	Value/Remark	Comment	Condition
MS network capability	Any allowed value		
Attach type	001 'GPRS attach' or		
	011 'Combiner		
	GPRS/IMS attach'		
GPRS ciphering key sequence number	Any allowed value		
DRX parameter	Any allowed value		
P-TMSI or IMSI	Any allowed value		
Old routing area identification	Any allowed value		
MS Radio Access capability	Any allowed value		
Old P-TMSI signature	Not present or any		
· ·	allowed value		
Requested READY timer value	Not present or any		
·	allowed value		
TMSI status	0 'no valid TMSI		
	available' or not present		
PS LCS Capability	Not present or any		
•	allowed value		
Mobile station classmark 2	Not present or any		
	allowed value		
Mobile station classmark 3	Not present or any		
	allowed value		
Supported Codecs	Not present or any		
	allowed value		
UE network capability	Any allowed value (must		
	be present)		
Additional mobile identity	Not present or any		
	allowed value		
Additional old routing area identification	Not present or any		
	allowed value		
Voice domain preference and UE's usage setting	Not present or any	Rel-9	
	allowed value		
P-TMSI type	Not present or any	Rel-10	
	allowed value		

Table 4.7B.2-7: ATTACH ACCEPT

Derivation path: 24.008 table 9.4.2 Information Element	Valua/Damark	Commont	Condition
	Value/Remark	Comment	
Attach result	001 'GPRS only attached'		IF the UE
			indicated
			001 'GPR
			attach' in
			the
			previous
			attach
			request
			message
	011 'combined		IF the UE
	GPRS/IMSI attached		indicated
			011
			'Combined
			GPRS/IM
			I attach' ir
			the
			previous
			attach
			request
			message
Force to standby	000 'Force to standby not		- message
David dia DA variable dia an	indicated'		
Periodic RA update timer	111 (deactivated)		
Radio priority for SMS	100 'priority level 4		
	(lowest)'		
Radio priority for TOM8	100 'priority level 4		
	(lowest)'		
Routing area identification	1		
P-TMSI signature	Arbitrary value		
Negotiated READY timer value	Not present		
Allocated P-TMSI	Arbitrary value	2 most significant	
Allocated F-TiviSi	Arbitrary value	bits = 11 to	
		indicate SGSN	
MS identity	Not present	indicate 303iv	IF the UE
M3 Identity	Not present		indicated
			001 'GPR
			attach' in
			the
			previous
			attach
			request
			message
	Arbitrary value	2 most significant	IF the UE
	, asias, value	bits = 00 to	indicated
		indicate VLR	011
		mulcate VLK	
			'Combine
			GPRS/IM
			I attach' ir
			the
			previous
			attach
			request
			message
GMM cause	Not present		
T3302 value	Not present		
Cell Notification	Not present		
Equivalent PLMNs	Not present		
Network feature support	Not present		
			<u> </u>
Emergency Number List Requested MS Information	Not present		
Keduested IVIS Information	Not present		
T3319 value T3323 value	Not present Not present		

Table 4.7B.2-8: ATTACH COMPLETE

Derivation path: 24.008 table 9.4.3			
Information Element	Value/Remark	Comment	Condition
Inter RAT handover information	Not present		
E-UTRAN inter RAT handover information	Not present		

Table 4.7B.2-9: AUTHENTICATION AND CIPHERING REQUEST

Derivation path: 24.008 table 9.4.9			
Information Element	Value/Remark	Comment	Condition
Ciphering algorithm	Any allowed value		
IMEISV request	000 'IMEISV not requested'		
Force to standby	000 'Force to standby not indicated'		
A&C reference number	Any allowed value		

Table 4.7B.2-10: AUTHENTICATION AND CIPHERING RESPONSE

Derivation path: 24.008 table 9.4.10			
Information Element	Value/Remark	Comment	Condition
A&C reference number	Arbitrary value		
Spare half octet	0000		

Table 4.7B.2-11: TMSI REALLOCATION COMMAND

Derivation path: 24.008 table 9.2.20			
Information Element	Value/Remark	Comment	Condition
Location area identification	Any allowed value		
Mobile identity	Any allowed value		

Table 4.7B.2-12: TMSI REALLOCATION COMPLETE

Derivation path: 24.008 table 9.2.21

Table 4.7B.2-13: CM SERVICE REQUEST

Derivation path: 24.008 table 9.2.11			
Information Element	Value/Remark	Comment	Condition
CM service type	Any allowed value		
Ciphering key sequence number	Any allowed value		
Mobile station classmark	Any allowed value		
Mobile identity	Any allowed value		
Priority	Not present or any allowed value		
Additional update parameters	Not present or any allowed value		

4.7C Default DS-MIPv6 message and information element contents

- 4.7C.1 IKEv2 messages
- IKEv2 IKE_SA_INIT Request

Table 4.7C.1-1: Message IKE_SA_INIT Request

Field	Value/remark	Comment	Condition
IKE Header			
Initiator's IKE_SA SPI	Set by the UE	First massage in	
Responder's IKE_SA SPI	0	First message jn IKE_SA_INIT exchange	
Next Payload	'00100001'B	SA	
Exchange Type	'00100010'B	IKE_SA_INIT	
Security Association Payload			
Next Payload	'00100010'B	KE	
More proposal	'0000010'B		
Proposal #	'00000001'B	First cryptographic suite (section 6.5 of TS 33.234)	
Protocol ID	'0000001'B	IKE	
SPI size	'00000000'B		
Number of transforms	'0000010'B		
More transform	'00000011'B	This is the transform for confidentiality	
Transform type	'0000001'B	Encryption	
Transform ID	'00000011'B	3DES in CBC mode (ENCR_3DES)	
More transform	'00000011'B	This is the transform for prf	
Transform type	'0000010'B	PRF	
Transform ID	'00000010'B	PRF_HMAC_SHA 1 (HMAC-SHA1)	
More transform	'00000011'B	This is the transform for integrity	
Transform type	'0000011'B	Integrity	
Transform ID	'00000010'B	HMAC-SHA1-96 (AUTH_HMAC_S HA1_96)	
Last transform	(00000000)B	This is the transform for DH	
Transform type	'00000100'B	DH	
Transform ID	'00000010'B	Diffie-Hellman group 2 (1024-bit MODP)	
Last proposal	'0000000'B		
Proposal #	'00000010'B	Second cryptographic suite (section 6.5 of TS 33.234)	
Protocol ID	'0000001'B	IKE	
SPI size	'00000000'B		
Number of transforms	'0000010'B	TI 1 1 1	
More transform	'00000011'B	This is the transform for confidentiality	
Transform type	'0000001'B	Encryption	
Transform ID	'00001011'B	AES with 128-bit keys in CBC mode (ENCR_AES_CB C)	
More transform	'00000011'B	This is the transform for prf	
Transform type	'0000010'B	PRF	
Transform ID	'00000100'B	PRF_AES128_XC BC_ AES-XCBC- PRF-128	

More transform	'00000011'B	This is the transform for	
		integrity	
Transform type	'0000011'B	Integrity	
Transform ID	'00000101'B	AES-XCBC-MAC- 96 (AUTH_ AES- XCBC -96)	
Last transform	'00000000'B	This is the transform for DH	
Transform type	'00000100'B	DH	
Transform ID	'00000010'B	Diffie-Hellman group 2 (1024-bit MODP)	
Key Exchange Payload			
Next Payload	'00101000'B	Nonce	
DH Group #	'000000000000010'B	DH group 2	
Key Exchange data	Set by the UE		
Nonce Payload	(001010010		
Next Payload	'00101001'B	Notify	UE IKE INIT HA
Nonce data	Random number set by the UE		
REDIRECT_SUPPORTED Notify Payload			UE IKE INIT HA
Next Payload	'00000000'B	No Next Payload	UE IKE INIT HA
Protocol ID	'00000000'B	Notification is not specific to a particular security association	UE IKE INIT HA
SPI size	'00000000'B	SPI field not present	UE IKE INIT HA
Notify Message Type	'010000000010110'B	REDIRECT_SUP PORTED	UE IKE INIT HA
REDIRECT_FROM Notify Payload			UE IKE INIT HA Redirected
Next Payload	'00000000'B	No next payload	UE IKE INIT HA Redirected
Protocol ID	'00000000'B	Notification is not specific to a particular security association	UE IKE INIT HA Redirected
SPI size	'00000000'B	SPI field not present	UE IKE INIT HA Redirected
Notify Message Type	'0100000000010110'B	REDIRECT_FRO M	UE IKE INIT HA Redirected
GW Ident Type	Any allowed value (IPv6 or IPv4 or HA FQDN)	Set depending on how the UE has discovered the HA in the preamble	UE IKE INIT HA Redirected
New Responder GW Identity	Depends on GW Ident type		UE IKE INIT HA Redirected

Condition	Explanation
UE IKE INIT HA	Part of IKE_INIT_SA request message sent to HA only
UE IKE INIT HA Redirected	Part of IKE_INIT_SA request message sent to HA only after a REDIRECT
	payload was received in a previous IKEV2 messages exchange

- IKE_SA_INIT Response

Table 4.7C.1-2: Message IKE_SA_INIT Response

Field	Value/remark	Comment	Condition
IKE Header			
Initiator's IKE_SA SPI	Same as that set by the UE in IKE_SA_INIT request		
Responder's IKE_SA SPI	Set by the SS		
Next Payload	'00100001'B	SA	
Exchange Type	'00100010'B	IKE_SA_INIT	
Security Association Payload			
Next Payload	'00100010'B	KE	
Proposal	One of the 2 proposals included in IKE_SA_INIT at Step 1		
Key Exchange Payload			
Next payload	'00 101000'B	Nonce	
DH Group #	'000000000000010'B	DH group 2	
Key Exchange data	Set by the SS		
Nonce Payload			
Next t payload	'00000000'B	No Next Payload	
Nonce data	Set by the SS		

- IKE_AUTH_Request

Table 4.7C.1-3: Message IKE_AUTH Request

Field	Value/remark	Comment	Condition
IKE Header			
Initiator's IKE_SA SPI	Same as that set by the UE in IKE_INIT_SA Request		
Responder's IKE_SA SPI	Same as that set by the SS in IKE_INIT_SA Response		
Next Payload	'00101110'B	E	
Exchange Type	'00100011'B	IKE_AUTH	
Encrypted Payload			
Next Payload	'00100011'B	IDi	UE IKE AUTH1
Initialization Vector	Random value set by the UE		UE IKE AUTH1
Encrypted IKE Payloads			UE IKE AUTH1
Identification – Initiator Payload			UE IKE AUTH1
Next Payload	'00101111'B	СР	UE IKE AUTH1
ID Type	00000010B		UE IKE AUTH1
ID	Set to MN-NAI		UE IKE AUTH1
Configuration Payload			UE IKE AUTH1
Next Payload	'00100001'B	SA	UE IKE
CFG Type	'00000001'B	Request	AUTH1 UE IKE
Configuration Attribute	'00010000'B	MIP6_HOME_PR EFIX attribute	UE IKE AUTH1 HA
Length	'000000000000000'B		UE IKE AUTH1 HA
Security Association Payload			UE IKE AUTH1
Next Payload	'00101100'B	TSi	UE IKE AUTH1
Proposals	Any set of allowed values		UE IKE AUTH1
Traffic Selector – Initiator Payload			UE IKE AUTH1
Next Payload	'00101100'B	TSr	UE IKE AUTH1
Traffic selector data	Any allowed set of values		UE IKE AUTH1
Traffic Selector – Responder Payload			UE IKE AUTH1
Next Payload	'00100100'B	IDr	UE IKE AUTH1
Traffic selector data	Any allowed set of values		UE IKE AUTH1
Identification – Responder Payload			UE IKE AUTH1
Next Payload	'00000000'B	No Next Payload	UE IKE AUTH1
ID Type	'0000010'B		UE IKE AUTH1
ID	APN		UE IKE AUTH1
Next Payload	'00110000'B	EAP	UE IKE AUTH2
Initialization Vector	Random value set by the UE		UE IKE AUTH2
Encrypted IKE Payloads			UE IKE AUTH2

Extensible Authentication Payload			UE IKE
·			AUTH2
Next Payload	'00000000'B	No Next Payload	UE IKE
			AUTH2
Code	'00000010'B	Response	UE IKE
			AUTH2
Type	'00010111'B	AKA	UE IKE
			AUTH2
Subtype		AKA-Challenge	UE IKE
			AUTH2
Attribute type	'00000011'B	AT_RES	UE IKE
			AUTH2
AT_RES	See TS 24.301 [28]		UE IKE
	subclause 9.9.3.4		AUTH2
Next Payload	'00100111'B	AUTH	UE IKE
			AUTH3
Initialization Vector	Random value set by the		UE IKE
	UE		AUTH3
Encrypted IKE Payloads			UE IKE
			AUTH3
Authentication Payload			UE IKE
			AUTH3
Next Payload	'00000000'B	No Next Payload	UE IKE
			AUTH3
Auth Method	'00000010'B	Shared Key	UE IKE
		Integrity code	AUTH3
Auth Data	derived from the MSK	RFC 4306 defines	UE IKE
	obtained from AKA	the function to	AUTH3
	exchange	derive this key	
		(section 2.15)	
Padding	Set by the UE	Fields from	
		Encrypted	
	0	payload	
Pad Length	Set by the UE	Fields from	
		Encrypted	
	0.11.11.11.	payload	
Integrity checksum data	Set by the UE	Fields from	
		Encrypted	
		payload	

Condition	Explanation
UE IKE AUTH1	Part of IKE_AUTH request message sent to HA or ePDG after the reception
	of IKE_INIT_SA response
UE IKE AUTH1 HA	Part of IKE_AUTH request message sent to HA after the reception of
	IKE_INIT_SA response
UE IKE AUTH2	Part of IKE_AUTH request message sent to HA or ePDG after the reception
	of IKE_ SA response message containing the certificate payload CERT
UE IKE AUTH3	Part of IKE_AUTH request message sent to HA or ePDG after the reception
	of IKE_SA response containing EAP and encryption payloads only

- IKE_AUTH Response

Table 4.7C.1-4: Message IKE_AUTH Response

Field	Value/remark	Comment	Condition
IKE Header			
Initiator's IKE_SA SPI	Same as that set by the UE in IKE_SA_INIT request		
Responder's IKE_SA SPI	Same as that set by the SS in IKE_SA_INIT response		
Next Payload	'00101110'B	E	
Exchange Type	'00100011'B	IKE_AUTH	
Encrypted Payload			
Next Payload	'00100100'B	IDr	SS IKE AUTH1
Initialization Vector	Set by the SS		SS IKE AUTH1 SS IKE
Encrypted IKE Payloads			AUTH1
Identification – Responder Payload	(22.22.22.22		SS IKE AUTH1
Next Payload	'00100101'B	CERT	SS IKE AUTH1
ID Type	'00000010'B		SS IKE AUTH1
ID	APN		SS IKE AUTH1
Certificate Payload			SS IKE AUTH1
Next Payload	'00110000'B	EAP	SS IKE AUTH1
Cert encoding	'00000100'B	X.509 certificate - signature	SS IKE AUTH1
Certificate data	Set by the SS	DER encoded X.509 certificate	SS IKE AUTH1
Extensible Authentication Payload			SS IKE AUTH1
Next Payload	'00000000'B	No Next Payload	SS IKE AUTH1
Code	'00000001'B	Request	SS IKE AUTH1
Туре	'00010111'B	AKA	SS IKE AUTH1
Subtype		AKA-Challenge	SS IKE AUTH1
Attribute type	'00000001'B	AT_RAND	SS IKE AUTH1
AT_RAND	An arbitrarily selected 128 bits value		SS IKE AUTH1
Attribute Type	'00000010'B	AT_AUTN	SS IKE AUTH1
AT_AUTN	See TS 24.301 [28] subclause 9.9.3.2		SS IKE AUTH1
Next Payload	'00110000'B	EAP	SS IKE AUTH2
Initialization Vector	Set by the SS		SS IKE AUTH2
Encrypted IKE Payloads			SS IKE AUTH2
Extensible Authentication Payload			SS IKE AUTH2
Next Payload	'00000000'B	No Next Payload	SS IKE AUTH2
Code	'00000011'B	Success	SS IKE AUTH2
Next Payload	'00101111'B	СР	SS IKE AUTH3
Auth Method	'00000010'B	Shared Key Integrity code	SS IKE AUTH3

Auth Data	derived from the MSK obtained from AKA	RFC 4306 defines	SS IKE AUTH3
	exchange	derive this key (section 2.15)	AUTHS
Configuration Payload		(Section 2.13)	SS IKE
			AUTH3
Next Payload	'00100001'B	SA	SS IKE AUTH3
CFG Type	'00000010'B	Reply	SS IKE AUTH3
Configuration Attribute	'00010000'B	MIP6_HOME_PR EFIX attribute	SS IKE AUTH3 HA
Length	'000000000010101'B	Li ix dittibuto	SS IKE AUTH3 HA
Prefix lifetime	Any allowed value		SS IKE AUTH3 HA
Home Prefix	IPv6 prefix – 16 bytes		SS IKE AUTH3 HA
Prefix length	'10000000'B	Prefix length must be 64	SS IKE AUTH3 HA
Notify Payload			SS IKE
			AUTH3 HA
Next Payload	'00100001'B	SA	redirect SS IKE
			AUTH3 HA redirect
Protocol ID	'0000000'B	Notification is not	SS IKE
	-	specific to a particular security association	AUTH3 HA redirect
SPI Size	'0000000'B	SPI field not	SS IKE
		present	AUTH3 HA redirect
Notify Message Type Length	'010000000010111'B	REDIRECT	SS IKE
			AUTH3 HA redirect
GW Ident Type	'00000101'B		SS IKE
,			AUTH3 HA redirect
New Responder GW Identity	IPv6 address of the HA		SS IKE
	to relocate		AUTH3 HA
GW Ident Type	'0000001'B		redirect SS IKE
••			AUTH3 HA
New Responder GW Identity	IPv4 address of the HA	Optional	redirect SS IKE
New Responder GW Identity	to relocate	Ориона	AUTH3 HA
			redirect
Security Association Payload			SS IKE
Next Payload	'00101101'	TSi	SS IKE
Durange	0.5 (1) 0		AUTH3
Proposal	One of the 2 proposals included in IKE_AUTH Request at Step 3		SS IKE AUTH3
Traffic Selector – Initiator Payload	,, -		SS IKE AUTH3
Next Payload	'00101100'B	TSr	SS IKE AUTH3
Traffic Selector data	Any allowed set of values		SS IKE AUTH3
Traffic Selector – Responder Payload			SS IKE AUTH3
Next Payload	'00000000'B	No Next Payload	SS IKE AUTH3

Padding	Set by the SS	Fields from Encryption payload
Pad Length	Set by the SS	Fields from Encryption payload
Integrity checksum data	Set by the SS	Fields from Encryption payload

Condition	Explanation
SS IKE AUTH1	Part of IKE_AUTH request message sent to the UE as part of the first
	IKE_AUTH Response message
SS IKE AUTH2	Part of IKE_AUTH request message sent to the UE as part of the second
	IKE_AUTH Response message
SS IKE AUTH3	Part of IKE_AUTH request message sent to the UE as part of the third
	IKE_AUTH Response message
SS IKE AUTH3 HA	Part of IKE_AUTH request message sent to the UE as part of the third
	IKE_AUTH Response message when the UE interacts with HA
SS IKE AUTH3 HA_redirect	Part of IKE_AUTH request message sent to the UE as part of the third
	IKE_AUTH Response message when the UE interacts with HA and the UE
	gets redirected

4.7C.2 Messages used to perform DS-MIPv6 registration and deregistration

- Router Advertisement

Table 4.7C.2-1: Message Router Advertisement

Field	Value/remark	Comment	Condition
Type	'10000110'B		
Code	'00000000'B		
Checksum	Set by SS	ICMP checksum	
Cur Hop Limit	'0000000'B	Unspecified	
M	Set by the SS		
0	Set by the SS	Depends on access network specific settings	
Н	'0'B		
Prf	Set by the SS	Depends on access network specific settings	
Prf	Set by the SS	Depends on access network specific settings	
Р	Set by the SS	Depends on access network specific settings	
Reserved	'00000'B		
Router Lifetime	Set by the SS		
Reachable Time	Set by the SS		
Retrans Timer	Set by the SS		
type	'00000011'B	Prefix Information Option	
Length	'00000100'B		
Prefix length	Set by the SS		
L	'1'B		
A	Set by the SS		
Valid Lifetime	Set by the SS		
Preferred Lifetime	Set by the SS		
Prefix	Set as per specific message content		

- Binding Update

Table 4.7C.2-2: Message Binding Update

Information Element	Value/remark	Comment	Condition
IPv4 Source Address	UE IPv4 CoA (IPv4		UE IPv4
	address acquired by UE		
	during network		
	attachment)		
IPv4 Destination Address	IPv4 of Home Agent		UE IPv4
	discovered during		
	preamble		
UDP header	prod.more		UE IPv4
Source Port	Set by UE		UE IPv4
Destination port	'0001000001011111'B		UE IPv4
IPv6 Source Address	UE IPv6 CoA (IPv6		IPv6
n vo Godioo / tadiooo	address acquired by the		visited
	UE during network		Visited
	attachment)		
	IPv6 Home Address		UE IPv6-
	configured by the UE		home, UE
	from Home Network		IPv4
	Prefix assigned to UE		15 /4
IDuc Destination Address	during preamble		
IPv6 Destination Address	IPv6 of Home Agent		
	discovered during		
5 6 6 11 1	preamble		15.0
Destination Header	IPv6 Home Address		IPv6
	configured by the UE		visited
	from Home Network		
	Prefix assigned to the UE		
	during preamble		
Payload Proto	'00111011'B		
МН Туре	'00000101'B	Binding Update message	
Sequence Number	Any allowed value		
Lifetime	Any allowed non-zero		IPv6
	value		visited
	'000000000000000'B		UE IPv6-
			home
A	'1'B		
Н	'1'B		
L	Not checked		
K	'1'B		
M	'0'B		
R	'1'B		
P	'0'B		
F	'0'B		
IPv4 Home Address option	Set to the value "0.0.0.0"	Optional	
ii virioine Addiess option	to request allocation for	Optional	
	the UE. The "P" flag is		
	set to '0'B.		
	The Prefix Length is set		
	to the requested prefix		1
Altamata Cara of Address	length of '32'.		LIE ID:-0
Alternate Care-of Address option	Same IPv6 address as		UE IPv6-
	that inserted in the IP	1	visited
	Source Address field		

Condition	— . 1
Condition	Explanation

UE IPv4	UE is in an IPv4 visited network (see RFC 5555)
UE IPv6-home	UE is in an IPv6 home network (see RFC 5555)
UE IPv6-visited	UE is in an IPv6 visited network (see RFC 5555)

- Binding Acknowledgement

Table 4.7C.2-3: Message Binding Acknowledgement

Information Element	Value/remark	Comment	Condition
IPv4 Source Address	IPv4 Home Agent		UE IPv4
	address		
IPv4 Destination Address	Same value as UE IPv4		UE IPv4
	CoA in IP Source		
	Address from Binding		
	Update		
UDP header			UE IPv4
Source Port	'0001000001011111'B		UE IPv4
Destination port	Same as Source port in		UE IPv4
	Binding Update		
IPv6 Source Address	IPv6 Home Agent		
	address		
IPv6 Destination Address	Same value as UE IPv6		UE IPv6-
	CoA in IP Source		visited
	Address from Binding		
	Update		
	IPv6 Home Address		UE IPv6-
			home, UE
			IPv4
Routing Header	Same value as UE IPv6		UE IPv6-
3	Home Address in		visited
	Destination Header from		
	Binding Update		
Payload Proto	'00111011'B		
MH Type	'00000110'B	Binding	
,,		Acknowledgement	
		message	
Status	'00000000'B	Binding Update	
		accepted	
K	Set by the SS	•	
R	'1'B		
P	'0'B		
Sequence Number	Same value as that sent		
•	by the UE in the Binding		
	Update		
Lifetime	'000000010010110'B	10 min	UE IPv6-
			visited, UE
			IPv4
	'000000000000000'B		UE IPv6-
			home
IPv4 Address Acknowledgement option	IPv4 Home Address	Present if IPv4	
	allocated to the UE	Home Address	
		option was	
		included by the	
		UE in Binding	
		Update	
Binding Refresh Advice option	'0000000010010110'B		
Binding Refresh Advice option	'000000010010110'B	10 min	

Condition	Explanation
UE IPv4	UE is in an IPv4 visited network (see RFC 5555)
UE IPv6-home	UE is in an IPv6 home network (see RFC 5555)
UE IPv6-visited	UE is in an IPv6 visited network (see RFC 5555)

- Binding Revocation Indication

Table 4.7C.2-4: Binding Revocation Indication

Field	Value/remark	Comment	Condition
IPv4 Header			UE IPv4
IPv4 Source Address	UE IPv4 Home Agent address		UE IPv4
UDP header			UE IPv4
Source Port	Set by SS		UE IPv4
Destination port	'0001000001011111'B		UE IPv4
IPv6 Header			
IPv6 Source Address	IPv6 Home Agent address		
IPv6 Destination Address	IPv6 Home Address configured by UE from Home Network Prefix assigned to UE during preamble		UE IPv4
	IPv6 CoA		UE IPv6- visited
Routing Header	IPv6 Home Address configured by the UE from Home Network Prefix assigned to the UE during preamble		UE IPv6- visited
B.R. Type	'0000001'B	B.R.I	
Sequence Number	Set by the SS		
Revocation Trigger	'0000001'B		
P	'0'B		
G	'0'B		
V	'0'B		

Condition	Explanation
UE IPv4	UE is in an IPv4 visited network (see RFC 5555)
UE IPv6-visited	UE is in an IPv6 visited network (see RFC 5555)

- Binding Revocation Acknowledgement

Table 4.7C.2-5: Binding Revocation Acknowledgement

Information Element	Value/remark	Comment	Condition
IPv4 Header			UE IPv4
IPv4 Source Address	IPv4 CoA		UE IPv4
IPv4 Destination Address	UE IPv4 Home Agent Address		UE IPv4
UDP header		UDP header	UE IPv4
Source Port	'0001000001011111'B	Source Port	UE IPv4
Destination port	Same as Source port in Binding Revocation	Destination port	UE IPv4
IPv6 Header			
IPv6 Source Address	IPv6 Home Address configured by UE		UE IPv4
	IPv6 CoA		UE IPv6- visited
IPv6 Destination Address	IPv6 of Home Agent address	IPv6 Destination Address	
Destination Header	IPv6 Home Address configured by the UE		UE IPv6- visited
B.R. Type	'0000010'B	B.R.A	
Sequence Number	Same value as Sequence Number sent by the SS in Binding Revocation		
Status	'00000000'B	Success	
Р	'0'B		
G	'0'B		
V	'0'B		

Condition	Explanation
UE IPv4	UE is in an IPv4 visited network (see RFC 5555)
UE IPv6-visited	UE is in an IPv6 visited network (see RFC 5555)

4.7D Default GERAN message and information element contents

4.7D.1 GPRS message

PS HANDOVER COMMAND

Table 4.7D.1-1: PS HANDOVER COMMAND

Derivation Path: 44.060 clause 11.2.43.1		1 • .	
Information Element	Value/remark	Comment	Condition
PAGE_MODE	Default		
Global TFI	TFI of mobile station		
	uplink TBF		
CONTAINER_ID	00		
PS Handover to A/Gb Mode Payload	00	PS Handover RR Info	
PS Handover RR Info flag	00		
PS Handover Radio Resources IE	Present		
Handover Reference	0		
ARFCN	default ARFCN for BCCH of GERAN cell		
SI	00	Non-synchronized	
NCI	0		
BSIC	BSIC of GERAN cell		
0 <ccn_active></ccn_active>	not present		
0 <3G_CCN_ACTIVE>	not present		
0 <ccn description="" support=""></ccn>	not present		
Frequency Parameters	default PDTCH of		
	GERAN cell		
NETWORK_CONTROL_ORDER	2		
0 <global advance="" packet="" timing=""></global>	not present		
EXTENDED_DYNAMIC_ALLOCATION	0		
RLC_RESET	1	RLC is reset	
0 <po></po>	not present		
0 < Uplink Control Timeslot>	not present		
0 GPRS mode	Uplink TBF assignment		
	for default PDTCH of		
	GERAN cell		
0 <nas container="" for="" handover="" ie="" ps=""></nas>	not present		

4.8 Reference radio bearer configurations

4.8.1 General

4.8.2 SRB and DRB parameters and combinations

4.8.2.1 SRB and DRB parameters

4.8.2.1.1 SRB configurations

Table 4.8.2.1.1-1: SRB-ToAddMod-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
SRB-ToAddMod-DEFAULT ::= SEQUENCE {			
srb-Identity	1		SRB1
	2		SRB2
rlc-Config CHOICE {			
defaultValue			
}			
logicalChannelConfig CHOICE {			
defaultValue			
}			
}			

4.8.2.1.2 DRB PDCP configurations

4.8.2.1.2.1 DRB PDCP configurations for UM RLC

Table 4.8.2.1.2.1-1: PDCP-Config-DRB-UM

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
PDCP-Config-DRB-UM ::= SEQUENCE {			
discardTimer	ms100	Suitable for real time services	
rlc-AM SEQUENCE {}	Not present		
rlc-UM SEQUENCE {			
pdcp-SN-Size	Len12bits		
}			
headerCompression CHOICE {			
notUsed	NULL		
}			
}			

4.8.2.1.2.2 DRB PDCP configurations for AM RLC

Table 4.8.2.1.2.2-1: PDCP-Config-DRB-AM

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
PDCP-Config-DRB-AM ::= SEQUENCE {			
discardTimer	Infinity		
rlc-AM SEQUENCE {			
statusReportRequired	TRUE		
}			
rlc-UM SEQUENCE {}	Not present		
headerCompression CHOICE {			
notUsed	NULL		
}			
}			

4.8.2.1.3 DRB RLC configurations

4.8.2.1.3.1 DRB UM RLC configurations

Table 4.8.2.1.3.1-1: RLC-Config-DRB-UM

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
RLC-Config-DRB-UM ::= CHOICE {			
um-Bi-Directional SEQUENCE {			
ul-UM-RLC SEQUENCE {			
sn-FieldLength	Size10		
}			
dI-UM-RLC SEQUENCE {			
sn-FieldLength	Size10		
t-Reordering	ms50	ms50 provides	
		sufficient margin	
}			
}			
}			

4.8.2.1.3.2 DRB AM RLC configurations

Table 4.8.2.1.3.2-1: RLC-Config-DRB-AM

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
RLC-Config-DRB-AM ::= CHOICE {			
am SEQUENCE {			
ul-AM-RLC SEQUENCE {			
t-PollRetransmit	ms80		
pollPDU	p128		
pollByte	kB125		
maxRetxThreshold	t4		
}			
dl-AM-RLC SEQUENCE {			
t-Reordering	ms80	Is sufficient for 5	
		HARQ	
		transmissions	
t-StatusProhibit	Ms60	Should be equal	
		to or smaller than	
		t-PollRetransmit.	
}			
}			
}			

4.8.2.1.4 DRB Logical Channel configurations

Table 4.8.2.1.4-1: LogicalChannelConfig-DRB

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
LogicalChannelConfig-DRB ::= SEQUENCE {			
ul-SpecificParameters SEQUENCE {			
priority	6		HI
	13		LO
prioritisedBitRate	kBps0	PBR is disabled.	
bucketSizeDuration	ms100		
logicalChannelGroup	1		HI
	2		LO
}			
}			

Condition	Explanation
HI	Used for DRBs with high logical channel priority
LO	Used for DRBs with low logical channel priority

4.8.2.1.5 MAC configurations

Table 4.8.2.1.5-1: MAC-MainConfig-RBC

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
MAC-MainConfig-RBC ::= SEQUENCE {			
ul-SCH-Config	Not present		SCell_AddM od
ul-SCH-Config SEQUENCE {			
maxHARQ-Tx	n5		
periodicBSR-Timer	sf20		
	Infinity		no_periodi c_BSR_or_ PHR
retxBSR-Timer	sf320		
	sf10240		no_periodi c_BSR_or_ PHR
ttiBundling	FALSE		
}			
drx-Config drx-Config CHOICE {	Not present		NOT pc_FeatrGrp _5 or SCell_AddM od pc_FeatrGrp _5 AND
. 0501151105 (DRX_S
setup SEQUENCE {	10		
onDurationTimer	psf2		
drx-InactivityTimer	psf100		
drx-RetransmissionTimer IongDRX-CycleStartOffset CHOICE {	psf16	sf40 typical value in real network for real-time services.	
sf40	4		For SIG
	0		For RF
}	-		
shortDRX	Not present		
}			
}			
drx-Config CHOICE {			pc_FeatrGrp _5 AND DRX_L
setup SEQUENCE {			
onDurationTimer	psf6		
drx-InactivityTimer	psf1920		
drx-RetransmissionTimer longDRX-CycleStartOffset CHOICE {	psf16	sf1280 typical value in real network for best- effort services.	
sf1280	0		For SIG For RF
}			7 0. 10
shortDRX	Not present		
}	110t prodefit		
}			
timeAlignmentTimerDedicated	sf750		
phr-Config CHOICE {			no_periodi c_BSR_or_ PHR
release	NULL		
}			
phr-Config	Not present		SCell_AddM od and RF
phr-Config CHOICE { setup SEQUENCE {			

periodicPHR-Timer	sf500	
prohibitPHR-Timer	sf200	
dl-PathlossChange	dB3	
}		
}		
sr-ProhibitTimer-r9	Not present	
mac-MainConfig-v1020	Not present	
mac-MainConfig-v1020SEQUENCE {		SCell_AddM od
sCellDeactivationTimer-r10	rf32	
extendedBSR-Sizes-r10	setup	
extendedPHR-r10	setup	
}		
}		

Condition	Explanation
DRX_S	Used for DRX configuration with small DRX cycle length
DRX_L	Used for DRX configuration with large DRX cycle length
no_periodic_BSR_or_PHR	Used to disable BSR and PHR
For SIG	Used for DRX configuration in Protocol testing
For RF	Used for DRX configuration in RRM testing
SCell_AddMod	Addition or modification of SCell

Table 4.8.2.1.5-2: MAC-MainConfig-SRB

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
MAC-MainConfig-SRB ::= SEQUENCE {			
ul-SCH-Config SEQUENCE {			
maxHARQ-Tx	n5		
periodicBSR-Timer	sf20		
retxBSR-Timer	sf320		
ttiBundling	FALSE		
}			
drx-Config CHOICE {			
release	NULL		
}			
timeAlignmentTimerDedicated	sf750		
phr-Config CHOICE {			
setup SEQUENCE {			
periodicPHR-Timer	sf500		
prohibitPHR-Timer	sf200		
dl-PathlossChange	dB3		
}			
}			
}			

4.8.2.1.6 Physical Layer configurations

Table 4.8.2.1.6-1: PhysicalConfigDedicated-DEFAULT

Derivation Path: 36.331 clause 6.3.2			
Information Element	Value/remark	Comment	Condition
PhysicalConfigDedicated-DEFAULT ::= SEQUENCE {			
pdsch-ConfigDedicated	PDSCH-	See subclause	SRB1 or
-	ConfigDedicated-	4.6.3	НО-ТО-
	DEFAULT		EUTRA
	Not present		RBC or
			RBC-HO
			SCell_AddM
			od
pucch-ConfigDedicated	PUCCH-	See subclause	SRB1 or
	ConfigDedicated-	4.6.3	RBC-HO or
	DEFAULT		HO-TO-
	N		EUTRA
	Not present		RBC
			SCell_AddM od
pusch-ConfigDedicated	PUSCH-	See subclause	SRB1 or
puscri-CornigDedicated	ConfigDedicated-	4.6.3	HO-TO-
	DEFAULT	4.0.5	EUTRA
	Not present		RBC or
	Not present		RBC-HO
			SCell_AddM
			od
uplinkPowerControlDedicated	UplinkPowerControlDedic	See subclause	SRB1 or
	ated-DEFAULT	4.6.3	НО-ТО-
			EUTRA
	Not present		RBC or
			RBC-HO
			SCell_AddM
			od
tpc-PDCCH-ConfigPUCCH	Not present		SRB1
			SCell_AddM
			od
	TPC-PDCCH-Config-	See subclause	RBC or
	DEFAULT using	4.6.3	RBC-HO or
	condition PUCCH		НО-ТО-
			EUTRA
tpc-PDCCH-ConfigPUSCH	Not present		SRB1
			SCell_AddM
	TDC DDCCH Cartia	Cooperations	od DDC or
	TPC-PDCCH-Config-	See subclause	RBC or
	DEFAULT using condition PUSCH	4.6.3	RBC-HO or HO-TO-
	Condition Posch		EUTRA
cqi-ReportConfig	CQI-ReportConfig-	See subclause	SRB1 or
- cqi-rteportooniig	DEFAULT	4.6.3	HO-TO-
	DEI AGEI	7.0.0	EUTRA
	CQI-ReportConfig-	See subclause	RBC or
	DEFAULT using	4.6.3	RBC-HO
	condition		
	CQI_PERIODIC		
	Not present		CA
soundingRS-UL-ConfigDedicated	Not present		SRB1 or
J - J			HO-TO-
			EUTRA
			SCell_AddM
			od
	SoundingRS-UI-	See subclause	RBC or
	ConfigDedicated-	4.6.3	RBC-HO
	DEFAULT		1
antennalnfo CHOICE {			<u> </u>
explicitValue SEQUENCE {			2TX
transmissionMode	tm3		
codebookSubsetRestriction CHOICE {		5.5 6555	1
n2TxAntenna-tm3	'11'	BIT STRING	
		(SIZE (2))	

}			
ue-TransmitAntennaSelection CHOICE {			
Release	NULL		
}			
}			
defaultValue	NULL		
}			
schedulingRequestConfig	SchedulingRequest- Config-DEFAULT	See subclause 4.6.3	SRB1 or RBC-H or HO-TO- EUTRA
	Not present		RBC SCell_AddM od
cqi-ReportConfig-v920	Not present		
antennalnfo-v920	Not present		
antennalnfo-r10	Not present		
antennaInfoUL-r10	Not present		
cif-Presence-r10	FALSE		SCell_AddM od
	Not present		
cqi-ReportConfig-r10	CQI-ReportConfig-r10- DEFAULT		SCell_AddM od
	Not present		
csi-RS-Config-r10	Not present		
pucch-ConfigDedicated-v1020	PUCCH- ConfigDedicated-v1020- DEFAULT		SCell_AddM od
pusch-ConfigDedicated-v1020	Not present		

schedulingRequestConfig-v1020	Not present	
soundingRS-UL-ConfigDedicated-v1020	Not present	
soundingRS-UL-ConfigDedicatedAperiodic-r10	Not present	
uplinkPowerControlDedicated-v1020	UplinkPowerControlDedic ated-v1020-DEFAULT	SCell_AddM od and (TxD or SRSAp)
	Not present	
additionalSpectrumEmissionCA-r10	Not present	
additionalSpectrumEmissionCA-r10	Not present	SCell_AddM od and Intra- BC CA
additionalSpectrumEmissionCA-r10 CHOICE {		SCell_AddM od and Inter- B CA and UL CA
setup SEQUENCE {		
additionalSpectrumEmissionPCell-r10	1 (CA_NS_01)	
}		
}	EDDOOLLO # 11	
epdcch-Config-r11	EPDCCH-Config-r11- DEFAULT	ePDCCH
	Not present	
csi-RS-ConfigNZPToReleaseList-r11	Not present	
csi-RS-ConfigNZPToAddModList-r11	Not present	DI 0 MD
csi-RS-ConfigNZPToAddModList-r11 SEQUENCE (SIZE (1maxCSI-RS-NZP-r11)) OF {	1 entry	DL_CoMP
CSI-RS-ConfigNZP-r11[1]	CSI-RS-ConfigNZP-r11- DEFAULT	
oci DC ConfigZDToDologool jot r11	Not propert	
csi-RS-ConfigZPToReleaseList-r11	Not present Not present	
csi-RS-ConfigZPToAddModList-r11 csi-RS-ConfigZPToAddModList-r11 SEQUENCE	1 entry	DL_CoMP
(SIZE (1maxCSI-RS-ZP-r11)) OF {		DL_COIVIF
CSI-RS-ConfigZP-r11[1]	CSI-RS-ConfigZP-r11- DEFAULT	
pdsch-ConfigDedicated-v1130	PDSCH- ConfigDedicated-v1130- DEFAULT	DL_CoMP
15 10 11 110	Not present	
cqi-ReportConfig-v1130	CQI-ReportConfig-v1130- DEFAULT	DL_CoMP
and OrafaDadicated (4400	Not present	10 0 10
pucch-ConfigDedicated-v1130	PUCCH- ConfigDedicated-v1130- DEFAULT	UL_CoMP
musch ConfinDadio-1-1-14400	Not present	111 0 145
pusch-ConfigDedicated-v1130	PUSCH- ConfigDedicated-v1130- DEFAULT	UL_CoMP
	Not present	
uplinkPowerControlDedicated-v1130	UplinkPowerControlDedic ated-v1130-DEFAULT	UL_CoMP
	Not present	

A 1141	= , ,,
Condition	Explanation

SRB1	Used at configuration of SRB1 during RRC connection (re-)establishment
RBC	Used at configuration of a radio bearer combination during SRB2+DRB establishment
2TX	Used for cells with two antenna ports
RBC-HO	Used during Handover
SCell_AddMod	Addition or modification of SCell
HO-TO-EUTRA	Inter-RAT handover to E-UTRA
ePDCCH	Used at configuration of ePDCCH
DL_CoMP	Used for DL CoMP
UL_CoMP	Used for UL CoMP
CA	For Carrier Aggregation Test cases
TxD	When PUCCH Transmission Diversity is performed.
SRSAp	Aperiodic SRS configured
Intra-BC CA	Intra-band contiguous Carrier Aggregation
Inter-B CA	Inter-band Carrier Aggregation
UL CA	When UL Carrier Aggregation is used.

4.8.2.1.7 DRB configurations

Table 4.8.2.1.7-1: DRB-ToAddMod-DEFAULT(bid)

Information Element	Value/remark	Comment	Condition
DRB-ToAddMod-DEFAULT(bid) ::= SEQUENCE {		bid is the bearer identity (18)	
eps-BearerIdentity	bid+4		
drb-Identity drb-Identity	bid		
pdcp-Config	PDCP-Config-DRB-AM		AM
	PDCP-Config-DRB-UM		UM
rlc-Config	RLC-Config-DRB-AM		AM
	RLC-Config-DRB-UM		UM
logicalChannelIdentity	bid+2		
logicalChannelConfig	LogicalChannelConfig- DRB using condition HI		UM
	LogicalChannelConfig- DRB using condition LO		AM

Condition	Explanation
AM	Used for AM DRB
UM	Used for UM DRB

4.8.2.2 SRB and DRB combinations

4.8.2.2.1 Combinations on DL-SCH and UL-SCH

4.8.2.2.1.1 SRB1 and SRB2 for DCCH + n x AM DRB + m x UM DRB, where n=1..N and m=0..M

This SRB and DRB combination is setup with UE Registration procedure and the Generic Radio Bearer Establishment or Generic Radio Bearer Establishment, UE Test Mode Activated procedure using specific message content - the default *RRCConnectionReconfiguration* message with condition SRB2-DRB(n, m).

4.8.3 UTRA reference radio parameters and combinations

Table 4.8.3-1 defines UTRA reference radio parameters and combinations to be used in E-UTRA and UTRA inter-RAT test cases.

Table 4.8.3-1: UTRA reference radio parameters and combinations

Condition	Reference configuration	Comment
UTRA Speech	TS 34.108 subclause 6.10.2.4.1.4	Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH
UTRA FDD PS RB	TS 34.108 subclause 6.10.2.4.1.26	Interactive or background / UL:64 DL: 64 kbps / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH
UTRA HSDPA RB	TS 34.108 subclause 6.10.2.4.5.1	Interactive or background / UL:64 DL: [max bit rate depending on UE category] / PS RAB + UL:3.4 DL:3.4 kbps SRBs for DCCH
UTRA HSUPA/HSDPA RB	TS 34.108 subclause 6.10.2.4.6.3	Streaming or interactive or background / UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] / PS RAB + UL: [max bit rate depending on UE category and TTI] DL: [max bit rate depending on UE category] SRBs for DCCH on E-DCH and HS-DSCH
UTRA PS RB + Speech	TS 34.108 subclause 6.10.2.4.1.40	Conversational / speech / UL:12.2 DL:12.2 kbps / CS RAB + Interactive or background / UL:64 DL:64 kbps / PS RAB+ UL:3.4 DL: 3.4 kbps SRBs for DCCH

4.8.4 GERAN reference PDP context parameters

Table 4.8.4-1 defines GERAN reference PDP context parameters to be used in E-UTRA and GERAN inter-RAT test cases.

Table 4.8.4-1: GERAN reference PDP context parameters

Condition	Reference configuration	Comment
GPRS	TS 51.010-1 subclause 40.5, Test PDP context3.	Test PDP context3 is the default Test PDP context which is used in the GERAN Inter-RAT GPRS test cases where no particular Test PDP contexts are specified. Compression is always turned off if nothing else is stated explicitly in the test case.

4.9 Common test USIM, CSIM and ISIM parameters

This clause defines default parameters for programming the elementary files of the test UICC when running conformance test cases defined in 3GPP TS 36.523-1[18].

4.9.1 General

See clause 8.1 in 3GPP TS 34.108 [5].

4.9.1.1 Definitions

See clause 8.1.1 in 3GPP TS 34.108 [5].

4.9.1.2 Definition of the test algorithm for authentication

Same as clause 8.1.2 in 3GPP TS 34.108[5].

4.9.1.2.1 Authentication and key derivation in the test USIM, CSIM and ISIM and SS

UE and SS calculate Ck, Ik, AUTN, RES[XRES] as in clause 8.1.2.1 in 3GPP TS 34.108 [5]. Derivation of K_{ASME} and other E-UTRA Keys shall be as defined in Annex A of 3GPP TS 33.401 [31], using Key derivation function HMAC-SHA-256 algorithm.

4.9.1.2.2 Generation of re-synchronization parameters in the USIM, CSIM and ISIM

Same as clause 8.1.2.1 in 3GPP TS 34.108[5].

4.9.1.2.3 Using the authentication test algorithm for UE conformance testing

See clause 8.1.2.3 in 3GPP TS 34.108 [5].

4.9.2 Default parameters for the test USIM, CSIM and ISIM

Same as clause 8.2 in 3GPP TS 34.108 [5].

4.9.3 Default settings for the Elementary Files (EFs)

The format and coding of elementary files of the USIM are defined in 3GPP TS 31.101 [32] and 3GPP TS 31.102 [33]. Those of the ISIM are defined in 3GPP TS 31.101 [32] and 3GPP TS 31.103 [45]. Those of the CSIM are defined in 3GPP2 C.S0065-B [48].

The settings of the elementary files at the MF and USIM ADF (Application DF) level resp. the ISIM ADF (Application DF) level are the same as section 8.3 in 3GPP TS 34.108 [5] resp. section 4.2 in 3GPP TS 34.229-1 Annex E [46] and 3GPP TS 34.229-3 Annex B.1 [47] with the exceptions listed below. The settings of the elementary files at the CSIM ADF (Application DF) level as specified below. Note that some files may be updated by the UE based on information received from the SS.

4.9.3.1 Modified contents of the USIM Elementary Files

EF_{EPSLOCI} (EPS location information)

File size: 18 Bytes

Bytes 13 to 17 (HEX): 42 F6 18 FF FE (Last visited registered TAI)

Byte 18 (BIN): 00000001 (EPS update status = "not updated")

Bytes 13 to 17: TAI-MCC = 246 (bytes 13 to 14) and TAI-MNC = 81 (byte 15) are frequently used. The TAC (bytes 16 to 17) is set to "FF FE" since this, in conjunction with byte 18 setting of "01", is used to ensure that the UE performs Attach at the beginning of a test.

Bytes in this file (e.g. GUTI in bytes 1 to 12) may be updated as a result of a tracking area update attempt by the UE.

EFEPSNSC (EPS NAS Security Context)

The programming of this EF follows default parameter written in 3GPP TS 31.102 [23], annex E.

EFNASCONFIG (Non Access Stratum Configuration)

File size: 28 Bytes

Default values: Bytes 1 to 28 (HEX): FF FF ... FF

The programming of this EF follows the specific USIM requirements given in 3GPP TS 36.523-1 [18].

EFUST (USIM Service Table):

Services		Activated	Version
Service n°15:	Cell Broadcast Message Identifier	Optional	
Service n°16:	Cell Broadcast Message Identifier Ranges	Optional	
Service n°85	EPS Mobility Management Information	Yes	
Service n°87	Call control on EPS PDN connection by USIM	No	
Service n°96	Non Access Stratum Configuration	Optional	

4.9.3.2 Modified contents of the CSIM Elementary Files

EFCOUNT (Call Count)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EFIMSI M (IMSI_M)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

```
EFIMSI_T (IMSI_T)
```

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EFTMSI (TMSI)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EFAH (Analog Home SID)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EFAOP (Analog Operational Parameters)

The programming of this EF is a test house option.

EFALOC (Analog Location and Registration Indicators)

The programming of this EF is a test house option.

EFCDMAHOME (CDMA Home SID, NID)

Record size: 5 Bytes

Record count:6

Record 1:

Default values: Bytes 1 to 2 (HEX): E8 03 (CDMA Home SID (SIDp): 1000)

Bytes 3 to 4 (HEX): AE 08 (CDMA Home NID (NIDp): 2222)

Bytes 5 (HEX): 00 (Band Class: 0 (800 MHz cellular band))

Record 2:

Default values: Bytes 1 to 2 (HEX): E8 03 (CDMA Home SID (SIDp): 1000)

Bytes 3 to 4 (HEX): AE 08 (CDMA Home NID (NIDp): 2222)

Bytes 5 (HEX): 01 (Band Class: 1 (1.8 to 2.0 GHz PCS band))

Record 3:

Default values: Bytes 1 to 2 (HEX): E8 03 (CDMA Home SID (SIDp): 1000)

Bytes 3 to 4 (HEX): AE 08 (CDMA Home NID (NIDp): 2222)

Bytes 5 (HEX): 03 (Band Class: 3 (832 to 925 MHz JTACS band))

Record 4:

Default values: Bytes 1 to 2 (HEX): E8 03 (CDMA Home SID (SIDp): 1000)

Bytes 3 to 4 (HEX): AE 08 (CDMA Home NID (NIDp): 2222)

Bytes 5 (HEX): 04 (Band Class: 4 (1.75 to 1.87 GHz Korean PCS band))

Record 5:

Default values: Bytes 1 to 2 (HEX): E8 03 (CDMA Home SID (SIDp): 1000)

Bytes 3 to 4 (HEX): AE 08 (CDMA Home NID (NIDp): 2222)

Bytes 5 (HEX): 05 (Band Class: 5 (450 MHz NMT band))

Record 6:

Default values: Bytes 1 to 2 (HEX): E8 03 (CDMA Home SID (SIDp): 1000)

Bytes 3 to 4 (HEX): AE 08 (CDMA Home NID (NIDp): 2222)

Bytes 5 (HEX): 06 (Band Class: 6 (2 GHz IMT-2000 band))

EFZNREGI (CDMA Zone-Based Registration Indicators)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EF_{SNREGI} (CDMA System-Network Registration Indicators)

The programming of this EF is a test house option.

EFDISTREGI (CDMA Distance-Based Registration Indicators)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EFACCOLC (Access Overload Class ACCOLCp)

The 4 LSB of this 1 byte file are der-bit access overload class indicator is derived from the last digit of the associated decimal representation of the IMSI_M vis decimal to binary conversion.

File size: 1 byte

Default value: Bits 4 to 7 are reserved and set to '0000'. Bits 0 to 3 are derived from the last digit of the

associated decimal representation of the IMSI_M via decimal to binary conversion.

EFTERM (Call Termination Mode Preferences)

The programming of this EF is a test house option.

EFssci (Suggested Slot Cycle Index)

The programming of this EF is a test house option.

EFACP (Analog Channel Preferences)

The programming of this EF is a test house option.

EF_{PRL} (Preferred Roaming List)

File size: 18 Bytes

Default values: Bytes 1 to 18 (HEX): 00 12 00 00 00 40 01 21 00 02 80 00 50 00 00 6E DB

The interpretation of the default values read as follows:

PRL ID - 0

Preferred only – 0

Default roaming indication – 0

Number of Acquisition Records – 1

Number of system records – 1

EF_{RUIMID} (Removable UIMID)

This EF stores a 32-bit electronic identification number (ID) unique to the CSIM or a 32-bit pseudo-UIMID of the CSIM. It is specified by the CSIM manufacturer.

EFcsim_st (CSIM Service Table)

Services will be allocated and activated as follows.

Services		Activated	Version
Service n°1:	Local Phone Book	Option	
Service n°2 :	Fixed Dialling Numbers (FDN)	Option	_

Services		Activated	Version
Service n°3:	Extension 2	Option	
Service n°4 :	Service Dialling Numbers (SDN)	Option	
Service n°5 :	Extension3	Option	
Service n°6:	Short Message Storage	Yes	
Service n°7:	Short Message Parameters (SMP)	Yes	
Service n°8:	HRPD	Yes	
Service n°9:	Service Category Program for BC-SMS	Option	
Service n°10:	CDMA Home Service Provider Name	Yes	
Service n°11:	Data Download via SMS Broadcast (for CCAT)	Option	
Service n°12:	Data Download via SMS-PP (for CCAT)	Option	
Service n°13:	Call Control (for CCAT)	Option	
Service n°14:	3GPD-SIP	Option	
Service n°15:	3GPD-MIP	Option	
Service n°16:	AKA	Yes	
Service n°17:	IP-based Location Services (LCS)	Option	
Service n°18:	BCMCS	Option	
Service n°19:	Multimedia Messaging Service (MMS)	Option	
Service n°20:	Extension 8	Option	
Service n°21:	MMS User Connectivity Parameters	Option	
Service n°22:	Application Authentication	Option	
Service n°23:	Group Identifier Level 1	Option	
Service n°24:	Group Identifier Level 2	Option	
Service n°25:	De-Personalization Control Keys	Option	
Service n°26:	Cooperative Network List	Option	
Service n°27:	Outgoing Call Information (OCI)	Option	
Service n°28:	Incoming Call Information (ICI)	Option	
Service n°29:	Extension 5	Option	
Service n°30:	Multimedia Storage	Option	
Service n°31:	Image (EFIMG)	Option	
Service n°32:	Enabled Services Table	Yes	
Service n°33:	Capability Configuration Parameters (CCP)	Option	
Service n°34:	SF_EUIMID-based EUIMID	Option	
Service n°35:	Messaging and 3GPD Extensions	Option	
Service n°36:	Root Certificates	Option	
Service n°37:	WAP Browser	Option	
Service n°38:	Java	Option	
Service n°39:	Reserved for CDG	No	
Service n°40:	Reserved for CDG	No	
Service n°41:	IPv6	Option	
Service n°42:	Proactive CSIM (for CCAT)	Option	

EF_{SPC} (Service Programming Code)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EFOTAPASPC (OTAPA/SPC_Enabled)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EFNAMLOCK (NAM_LOCK)

The programming of this EF is a test house option.

EF_{OTA} (OTASP/OTAPA Features)

The programming of this EF is a test house option.

EF_{SP} (Service Preferences)

The programming of this EF is a test house option.

EFESN_MEID_ME (ESN_ME or MEID_ME)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EFLI (Language Indication)

The programming of this EF is a test house option.

EFFDN (Fixed Dialling Numbers)

The programming of this EF is a test house option.

EF_{SMS} (Short Messages)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EF_{SMSP} (Short Message Service Parameters)

Record size: 12 Bytes

Record count: 1

Record 1:

Default values: Bytes 1 to 23 (HEX): 00 02 10 02 5D FE FF FF 02 F5 FF FF FF FF FF FF FF FF

08 03 08 01 C0

The interpretation of the default values in this record read as follows:

Teleservice Identifier: CDMA Cellular Messaging Teleservice [CMT-95]

Parameter Indicators: MSG_ENCODING, Validity Period, Bearer Data

Message Encoding: 7-bit ASCII

Validity Period: Indefinite

Bearer Data:

Priority Indicator: Emergency

EF_{SMSS} (SMS Status)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EF_{SSFC} (Supplementary Services Feature Code Table)

The programming of this EF is a test house option.

EF_{SPN} (CDMA Home Service Provider Name)

File size: 35 Bytes

Default values: Bytes 1 to 35 (HEX): 01 02 01 44 65 66 61 75 6C 74 20 53 65 72 76 69 63 65 20 50 72 6F

76 69 64 65 72 20 4E 61 6D 65 FF FF FF

The interpretation of the default values read as follows:

Display Condition: Display of registered system is required

Character Encoding: 7-bit ASCII Language Indicator: 1 (English)

Service Provider Name: "Default Service Provider Name"

EFUSGIND (UIMID/SF_EUIMID Usage Indicator)

EF_{AD} (Administrative Data)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EF_{MDN} (Mobile Directory Number)

The programming of this EF is a test house option.

EFMAXPRL (Maximum PRL)

The programming of this EF is a test house option.

EFSPCS (SPC Status)

If EF_{SPC} is set to default value of '00 00 00', then EF_{SPCS} shall be set to '00', otherwise it shall be set to '01'.

EF_{ECC} (Emergency Call Codes)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EFME3GPDOPC (ME 3GPD Operation Capability)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EF_{3GPDOPM} (3GPD Operation Mode)

The programming of this EF is a test house option.

EF_{SIPCAP} (SimpleIP Capability Parameters)

The programming of this EF is a test house option.

EFMIPCAP (MobileIP Capability Parameters)

The programming of this EF is a test house option.

EFSIPUPP (SimpleIP User Profile Parameters)

The programming of this EF is a test house option.

EF_{MIPUPP} (MobileIP User Profile Parameters)

The programming of this EF is a test house option.

EF_{SIPSP} (SimpleIP Status Parameters)

The programming of this EF is a test house option.

EFMIPSP (MobileIP Status Parameters)

The programming of this EF is a test house option.

EF_{SIPPAPSS} (SimpleIP PAP SS Parameters)

The programming of this EF is a test house option.

EFPUZL (Preferred User Zone List)

The programming of this EF is a test house option.

EFMAXPUZL (Maximum PUZL)

The programming of this EF is a test house option.

EFMECRP (ME-specific Configuration Request Parameters)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EFHRPDCAP (HRPD Access Authentication Capability Parameters)

File size: 3 Bytes

Default values: Bytes 1 to 3 (HEX): 20 F8 80

The interpretation of the default values read as follows:

Maximum NAI Length: 32

Maximum Length of Shared Secret: 31

Authentication Algorithms: PPP CHAP

EFHRPDUPP (HRPD Access Authentication User Profile Parameters)

File size: 14 Bytes

Default values: Bytes 1 to 14 (HEX): 0D 0B 61 62 63 40 78 79 7A 2E 63 6F 6D 10

The interpretation of the default values read as follows:

HRPD Profile NAI: "abc@xyz.com"

HRPD Profile Authentication Algorithm: CHAP

EFcsspr (CUR_SSPR_P_REV)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EF_{ATC} (Access Terminal Class)

The programming of this EF is a test house option.

EFERL (Extended Preferred Roaming List)

File size: 129 Bytes

Default values: Bytes 1 to 16 (HEX): 00 81 00 00 03 00 01 80 00 04 00 0A 04 01 64 03

Bytes 17 to 32 (HEX): 0B 0B 04 01 64 03 F5 0A 04 0A 58 08 19 0B 04 0A

Bytes 33 to 48 (HEX): 58 0C 97 0A 02 31 13 0B 02 30 C8 71 C0 02 00 10

Bytes 49 to 64 (HEX): 1F 01 00 C8 FF FF 00 80 00 38 E0 08 00 00 80 00

Bytes 65 to 80 (HEX): 71 E0 12 00 10 1F 01 00 C8 FF FF 00 80 00 38 E0

Bytes 81 to 96 (HEX): 18 00 00 80 00 71 C0 22 00 10 1F 01 00 C8 FF FF

Bytes 97 to 112 (HEX): 00 80 80 38 E0 28 00 00 80 80 71 E0 02 00 10 1F

Bytes 113 to 128 (HEX):01 00 C8 FF FF 00 80 80 38 E0 08 00 00 80 80 2B

Byte 129 (HEX): 6B

The interpretation of the default values read as follows:

PRL ID - 0

List Type: IS-683D

Preferred only – 0

Default roaming indication – 0

Number of acquisition records – 6

- Index: 0, Type: CDMA Generic, Band: 0, Channel: 356 and 779

- Index: 1, Type: HDR Generic Band: 0, Channel: 356 and 1013
- Index: 2, Type: CDMA Generic, Band: 1, Channel: 600 and 25
- Index: 3, Type: HDR Generic, Band: 1, Channel: 600 and 1175
- Index: 4, Type: CDMA Generic, Band: 6, Channel: 275
- Index: 5, Type: HDR Generic, Band: 6, Channel: 200

Number of records in the Common Subnet Table – 0

Number of system records – 8

- Acquisition Index: 1, Type: IS-856, Roam Indicator: 0, Subnet ID: /0, Association Tag: 0
- Acquisition Index: 3, Type: IS-856, Roam Indicator: 0, Subnet ID: /0, Association Tag: 0
- Acquisition Index: 5, Type: IS-856, Roam Indicator: 0, Subnet ID: /0, Association Tag: 1
- Acquisition Index: 1, Type: IS-856, Roam Indicator: 0, Subnet ID: /0, Association Tag: 1
- Acquisition Index: 0, Type: MCC-MNC-based, Roam Indicator: 0, Subnet ID: MCC-MNC SID/NID, MCC: 001, MNC: 01, SID: 200, NID: 65535100, Association Tag: 0
- Acquisition Index: 2, Type: MCC-MNC-based, Roam Indicator: 0, Subnet ID: MCC-MNC SID/NID, MCC: 001, MNC: 01, SID: 200, NID: 65535100, Association Tag: 0
- Acquisition Index: 4, Type: MCC-MNC-based, Roam Indicator: 0, Subnet ID: MCC-MNC SID/NID, MCC: 001, MNC: 01, SID: 200, NID: 65535100, Association Tag: 1
- Acquisition Index: 0, Type: MCC-MNC-based, Roam Indicator: 0, Subnet ID: MCC-MNC SID/NID, MCC: 001, MNC: 01, SID: 200, NID: 65535, Association Tag: 1

EF_{MSPL} (Multimode system selection System Priority List)

File size: 18 Bytes

Default values: Bytes 1 to 18 (HEX): 00 0F 01 00 01 01 01 03 07 08 02 0C 00 3E 00 FF FF FF

The interpretation of the default values read as follows:

Current MMSS_P_REV - 1

MLPL Version ID - 1

MLPL Identification – 1

Number of MLPL Records – 1

- Index: 1, Location Parameter Type Value: default, MSPL Index: 1

EF_{MLPL} (Multimode system selection Location associated Priority List)

File size: 18 Bytes

The interpretation of the default values read as follows:

Current MMSS_P_REV - 1

MSPL Version ID - 1

MSPL Block 1:

MSPL Identification – 1,

Number of MSPL ID1 records – 3

- Index 1: System Type: EUTRA, Priority Class: Home Only, System Priority: 1, Higher Priority Search Time: 64 minutes, Network Capability Indicator: no Network CAP used
- Index 2: System Type: cdma2000 HRPD, Priority Class: Home + Preferred, System Priority: 1, Higher Priority Search Time: 64 minutes, Network Capability Indicator: no Network CAP used
- Index 3: System Type: cdma2000 AI, Priority Class: Any, System Priority: 1, Higher Priority Search Time: 64 minutes, Network Capability Indicator: no Network CAP used

EFBCSMScfg (Broadcast Short Message Configuration)

The programming of this EF is a test house option.

EFBCSMSpref (Broadcast Short Message Preference)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EF_{BCSMStable} (Broadcast Short Message Table)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EF_{BCSMSP} (Broadcast Short Message Parameter)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EF_{BAKPARA} (Currently used BAK Parameters)

The programming of this EF is a test house option.

EFupBakpara (Updated BAK Parameters)

The programming of this EF is a test house option.

EF_{MMSN} (MMS Notification)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EF_{EXT8} (Extension 8)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EF_{MMSICP} (MMS Issuer Connectivity Parameters)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EFMMSUP (MMS User Preferences)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EF_{MMSUCP} (MMS User Connectivity Parameters)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EF_{AuthCapability} (Authentication Capability)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EF3GCIK (3G Cipher and Integrity Keys)

The programming of this EF is a test house option.

EFDCK (De-Personalization Control Keys)

The programming of this EF is a test house option.

EF_{GID1} (Group Identifier Level 1)

EF_{GID2} (Group Identifier Level 2)

The programming of this EF is a test house option.

EFCDMACNL (CDMA Co-operative Network List)

The programming of this EF is a test house option.

EFHOME_TAG (Home System Tag)

The programming of this EF is a test house option.

EFGROUP_TAG (Group Tag List)

The programming of this EF is a test house option.

EFspecific_tag (Specific Tag List)

The programming of this EF is a test house option.

EFCALL_PROMPT (Call Prompt List)

The programming of this EF is a test house option.

EF_{SF_EUIMID} (Short Form EUIMID)

Specified by CSIM Manufacturer.

EF_{EST} (Enabled Service Table)

The programming of this EF is a test house option.

EF_{HiddenKey} (Key for hidden phone book entries)

The programming of this EF is a test house option.

EFLCSVER (LCS Protocol Version)

The programming of this EF is a test house option.

EF_{LCSCP} (LCS Connectivity Parameter)

The programming of this EF is a test house option.

EF_{SDN} (Service Dialling Numbers)

The programming of this EF is a test house option.

EF_{EXT2}(Extension2)

The programming of this EF is a test house option.

EF_{EXT3}(Extension3)

The programming of this EF is a test house option.

EFICI (Incoming Call Information)

The programming of this EF is a test house option.

EFoci (Outgoing Call Information)

The programming of this EF is a test house option.

EFEXT5 (Extension 5)

EFCCP2 (Capability Configuration Parameters 2)

The programming of this EF is a test house option.

EF_{AppLabels} (Application Labels)

The programming of this EF is a test house option.

EF_{Model} (Device Model Information)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EFRC (Root Certificates)

The programming of this EF is a test house option.

EFSMSCAP (SMS Capabilities)

File size: 4 Bytes

Default values: Bytes 1 to 4 (HEX): 3C 08 07 01

The interpretation of the default values read as follows:

SMS Retry Period: 60 seconds

SMS Retry Interval: 8 seconds

SMS Flags:

Send On Access: True

Send on Traffic: True

Send as Standard EMS: True

SMS Preferred Service Option: SO 6

EF_{MIPFlags} (MobileIP Flags)

The programming of this EF is a test house option.

EF_{3GPDUPPExt} (3GPD User Profile Parameters Extension)

The programming of this EF is a test house option.

EFIPV6CAP (IPv6 Capabilities)

The programming of this EF is a test house option.

EFTCPConfig (TCp Configurations)

The programming of this EF is a test house option.

EF_{DGC} (Data Generic Configurations)

The programming of this EF is a test house option.

EFWAPBrowserCP (WAP Browser Connectivity Parameters)

The programming of this EF is a test house option.

EFWAPBrowserBM (WAP Browser Bookmarks)

The programming of this EF follows default parameter written in 3GPP2 C.S0065-B [48], Annex E.

EF_{MMSConfig} (MMS Configuration)

EFJDL (Java Download URL)

5 Test environment for RF test

This section contains all the exceptions of the common test parameters specified in clause 4 for specific needs of test cases defined in TS 36.521-1 [21]. Exceptions specified in clause 5 overwrite the parameter settings of clause 4; exceptions defined within the test cases overwrite parameter settings of clause 4 and 5.

5.1 Requirements of test equipment

No common RF test environment requirements are specified in addition to the common requirements described in clause 4.2. Specific RF requirements are indicated within the test cases defined in TS 36.521-1 [21].

5.2 RF Reference system configurations

5.2.1 Common parameters for simulated E-UTRA cells

5.2.1.1 Combinations of system information blocks

The combination of system information blocks required by a test case depends on the test case scenario. In this clause, the following combinations of system information blocks are defined.

Combination 1 is the default combination which applies to the following test case scenarios:

- E-UTRA FDD single cell scenario
- E-UTRA TDD single cell scenario
- E-UTRA FDD intra-frequency multi cell scenario
- E-UTRA TDD intra-frequency multi cell scenario

Combination 2 applies to the following test case scenarios:

- -E-UTRA FDD + MBMS
- E-UTRA TDD + MBMS

Combination 3 applies to the following test case scenarios:

- E-UTRA FDD intra-band carrier aggregation component carriers cell scenario
- E-UTRA FDD inter-band carrier aggregation component carriers cell scenario
- E-UTRA TDD intra-band carrier aggregation component carriers cell scenario

The combinations of system information blocks for test cases in TS 36.521-1 [21] is defined in table 5.2-1.1-1.

Table 5.2.1.1-1: Combinations of system information blocks

			System information block type									
Combination No.	SIB2	SIB3	SIB4	SIB5	SIB6	SIB7	SIB8	SIB9	SIB10	SIB11	SIB12	SIB13
1	Χ	Х										
2	Χ	Χ										Χ
3	Χ	X		Χ								

5.2.1.2 Scheduling of system information blocks

The scheduling configurations for combinations of system information blocks are defined in the following tables. SIB1 will be transmitted during subframes#5 which SFN mod 2 = 0, and SIB2+SIB3 will be transmitted during subframes#5

which SFN mod 2 = 1 with 8 radio frames periodicity. SIB5 will be transmitted during subframes#5 which SFN mod 2 = 1 with 64 radio frames periodicity

Table 5.2.1.2-1: Scheduling for combination 1

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	8	SIB2, SIB3

Table 5.2.1.2-2: Scheduling for combination 2

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks	
1	8	SIB2, SIB3	
2	64	SIB13	

Table 5.2.1.2-3: Scheduling for combination 3

Scheduling Information No.	Periodicity [radio frames]	Mapping of system information blocks
1	8	SIB2, SIB3
2	64	SIB5

5.2.1.3 Common contents of system information messages

- MasterInformationBlock

As defined in Table 4.4.3.2-1 without exceptions.

- SystemInformation

As defined in Table 5.2.1.3-1As defined in Table without exceptions.

Table 5.2.1.3-1: SystemInformation

Derivation Path: Clause 4.4.3.2 Table 4.4.3.2-2			
Information Element	Value/remark	Comment	Condition
SystemInformation ::= SEQUENCE {			
criticalExtensions CHOICE {			
systemInformation-r8 SEQUENCE {			
sib-TypeAndInfo SEQUENCE (SIZE	See subclause 5.2.1.1		
(1maxSIB)) OF CHOICE {}	and 5.2.1.2		
criticalExtensionsFuture SEQUENCE {}	Not present		
}			
}			
}			

- SystemInformationBlockType1

As defined in Table 4.4.3.2-3 with the following exceptions:

Table 5.2.1.3-2: SystemInformationBlockType1 exceptions

Derivation Path: Clause 4.4.3.2 Table 4.4.3.2-3					
Information Element	Value/remark	Comment	Condition		
SystemInformationBlockType1 ::=					
SEQUENCE {					
si-WindowLength	ms40				
}					

- SystemInformationBlockType2

As defined in Table 4.4.3.3-1 with the following exceptions:

Table 5.2.1.3-3: SystemInformationBlockType2 exceptions

Derivation Path: Clause 4.4.3.3 Table 4.4.3.3-1				
Information Element	Value/remark	Comment	Condition	
SystemInformationBlockType2 ::= SEQUENCE {				
timeAlignmentTimerCommon	infinity			
}				

5.2A Generic RF procedures

The UE test state used for testing is specified in the individual test cases in the corresponding test specification TS 36.521-1 [21] or TS 36.521-3 [34].

This clause describes UE test states which can be used in the initial condition of many test cases defined in TS 36.521-1 [21] and TS 36.521-3 [34].

5.2A.1 UE RF test states

Table 5.2A.1-1: The E-UTRAN UE states

		RRC	ECM	ЕММ	ESM	UE Test Mode
State 2A-RF	Registered, Idle Mode, UE Test Mode Activated	RRC_IDLE	ECM-IDLE	EMM-REGISTERED	1 default EPS bearer context active	Active
State 3A-RF	Default RB	RRC_CONNECTED 1 data radio bearer configured	ECM-CONNECTED	EMM-REGISTERED	1 default EPS bearer context active	Active

5.2A.1A Registered, Idle Mode, UE Test Mode Activated (State 2A-RF)

Editor's notes:

- State 2A as defined in Section 4.5.2A of TS 36.508 version 12.3.1 is allowed to be used instead of State 2A-RF for a transition period until RAN#68 (June 2015).
- Handling of UEs that set pc_Disable_E-UTRA_NOIMSVoIP to TRUE is still pending discussion.

5.2A.1A.1 Initial conditions

System Simulator:

- 1 cell, default parameters.
- The procedure shall be performed under ideal radio conditions as defined in clause 5

User Equipment:

- The Test USIM shall be inserted.

5.2A.1A.2 Definition of system information messages

The default system information messages are used.

5.2A.1A.3 Procedure

Table 5.2A.1A.3-1: UE registration with test mode activation procedure (state 1 to state 2A-RF)

Step	Procedure	Message Sequence		
		U - S	Message	
1 to 9a2	Steps 1 to 9a2 as specified in the procedure in clause 4.5.2.3 take place	-	-	
10	The SS transmits an ACTIVATE TEST MODE message to activate UE radio bearer test	<	RRC: DLInformationTransfer TC: ACTIVATE TEST MODE	
11	mode procedure. The UE transmits an ACTIVATE TEST MODE COMPLETE message.	>	RRC: ULInformationTransfer TC: ACTIVATE TEST MODE COMPLETE	
12	The SS transmits a SecurityModeCommand message to activate AS security.	<	RRC: SecurityModeCommand	
13	The UE transmits a SecurityModeComplete message and establishes the initial security configuration.	>	RRC: SecurityModeComplete	
14	The SS transmits a <i>UECapabilityEnquiry</i> message to initiate the UE radio access capability transfer procedure.	<	RRC: UECapabilityEnquiry	
15	The UE transmits a <i>UECapabilityInformation</i> message to transfer UE radio access capability.	>	RRC: UECapabilityInformation	
16	The SS transmits an RRCConnectionReconfiguration message to establish the default bearer with condition SRB2-DRB(1, 0) according to 4.8.2.2.1.1. This message includes the ATTACH ACCEPT message. The ACTIVATE DEFAULT EPS BEARER CONTEXT REQUEST message is piggybacked in ATTACH ACCEPT.	<	RRC: RRCConnectionReconfiguration NAS: ATTACH ACCEPT NAS: ACTIVATE DEFAULT EPS BEARER CONTEXT REQUEST	
17	The UE transmits an RRCConnectionReconfigurationComplete message to confirm the establishment of default bearer.	>	RRC: RRCConnectionReconfigurationComplete	
-	EXCEPTION: IF pc_Disable_E- UTRA_NOIMSVoIP is set to TRUE THEN in parallel to the event described in step 18 below the generic procedure for IMS signalling in the U-plane specified in TS 36.508 subclause 4.5A.3 takes place if requested by the UE	-	-	
18	This message includes the ATTACH COMPLETE message. The ACTIVATE DEFAULT EPS BEARER CONTEXT ACCEPT message is piggybacked in ATTACH COMPLETE.	>	RRC: ULInformationTransfer NAS: ATTACH COMPLETE NAS: ACTIVATE DEFAULT EPS BEARER CONTEXT ACCEPT	
-	EXCEPTION: Steps19a1 to 19b6 describe behaviour that depends on UE configuration; the "lower case letter" identifies a step sequence that takes place if a particular configuration has been chosen	-	-	
19a1	IF IMS voice not supported and pc_voice_PS_1_CS_2, pc_attach and pc_TAU_connected_in_IMS are set to TRUE (Note 1) THEN the UE transmits a TRACKING AREA UPDATE REQUEST message.	>	RRC: ULInformationTransfer NAS: TRACKING AREA UPDATE REQUEST	
19a2	The SS transmits a TRACKING AREA UPDATE ACCEPT message.	<	RRC: DLInformationTransfer NAS: TRACKING AREA UPDATE ACCEPT	
19a3	The UE transmits a TRACKING AREA UPDATE COMPLETE message.	>	RRC: ULInformationTransfer NAS: TRACKING AREA UPDATE COMPLETE	
19b1	ELSE IF IMS voice not supported and pc_voice_PS_1_CS_2, pc_attach and	<	RRC: RRCConnectionRelease	

	pc_TAU_idle_in_IMS are set to TRUE (Note 2) THEN the SS transmits an			
	RRCConnectionRelease message to release the RRC connection.			
19b2	The UE transmits an RRCConnectionRequest message.	>	RRC: RRCConnectionRequest	
19b3	The SS transmit an RRCConnectionSetup message.	<	RRC: RRCConnectionSetup	
19b4	The UE transmits an RRCConnectionSetupComplete message including a TRACKING AREA UPDATE REQUEST message.	>	RRC: RRCConnectionSetupComplete NAS: TRACKING AREA UPDATE REQUEST	
19b5	The SS transmits a TRACKING AREA UPDATE ACCEPT message.	<	RRC: DLInformationTransfer NAS: TRACKING AREA UPDATE ACCEPT	
19b6	The UE transmits a TRACKING AREA UPDATE COMPLETE message.	>	RRC: ULInformationTransfer NAS: TRACKING AREA UPDATE COMPLETE	
20	The SS transmits an RRCConnectionRelease message to release RRC connection and move to RRC_IDLE (State 2A-RF).	<	RRC: RRCConnectionRelease	
NOTE 1: The procedure is used with specific message with no IMS voice network support. The UE is configured for voice domain preference IMS PS voice preferred, CS Voice as secondary and to initiate EPS attach. The UE implementation supports TAU in connected mode.				
NOTE 2: The procedure is used with specific message with no IMS voice network support. The UE is configured for voice domain preference IMS PS voice preferred, CS Voice as secondary and to initiate EPS attach. The UE implementation supports TAU in idle mode.				
NOTE 3: As assumed in section 4.5.2, an IMS capable UE is compliant to GSMA PRD IR.92 [52]. According to IR.92 cl. 4.3.1, Note 4, a UE implementation could still request PDN connection				

5.2A.1A.4 Specific message contents

All specific message contents shall be referred to clause 4.6, 4.7 and 4.7A with the exceptions below.

indication. If such request is received by the SS, it will be ignored.

Table 5.2A.1A.4-1: RRCConnectionRequest (Step 2 and 19b2)

establishment caused by a SIP registration request despite the IMS voice over PS not supported

Information Element	Value/remark	Comment	Condition
RRCConnectionRequest ::= SEQUENCE {			
criticalExtensions CHOICE {			
rrcConnectionRequest-r8 SEQUENCE {			
ue-Identity	Any allowed value		
}	·		
}			
}			

Table 5.2A.1A.4-2: UECapabilityInformation (Step 15)

Derivation Path: Table 4.6.1-23			
Information Element	Value/remark	Comment	Condition
UECapabilityInformation ::= SEQUENCE {			
criticalExtensions CHOICE {			
c1 CHOICE{			
ueCapabilityInformation-r8	Any allowed value		
}			
}			
}			

Table 5.2A.1A.4-3: ATTACH ACCEPT (Step 16)

Derivation Path: TS 36.508 Table 4.7.2-1				
Information Element	Value/remark	Comment	Condition	
EPS network feature support	'0000 0000'B	IMS voice over PS session in S1 mode not supported	NON pc_Disable_ E- UTRA_NOI MSVoIP	
	'0000 0001'B	IMS voice over PS session in S1 mode supported	pc_Disable_ E- UTRA_NOI MSVoIP	
Additional update result	Not present			

Table 5.2A.1A.4-4: ACTIVATE DEFAULT EPS BEARER CONTEXT REQUEST (Step 16)

Derivation Path: Table 4.7.3-6			
Information Element	Value/remark	Comment	Condition
EPS QoS	See Reference default EPS bearer context #1 in table 6.6.1-1		NON pc_Disable_ E- UTRA_NOI MSVoIP
	See Reference default EPS bearer context #2 in table 6.6.1-1		pc_Disable_ E- UTRA_NOI MSVoIP
Access point name	The SS defines a Default APN or, if the UE transmits an ESM INFORMATION RESPONSE message providing an APN, the SS shall use this value if it is not the IMS APN. If it is the default IMS APN, the SS defines a Default APN.		NON pc_Disable_ E- UTRA_NOI MSVoIP
	IMS.apn.epc.mnc <mnc> .mcc<mcc>.3gppnetwor k.org The <mnc> and <mcc> are set to the same values as in IMSI.</mcc></mnc></mcc></mnc>		pc_Disable_ E- UTRA_NOI MSVoIP
PDN address			
Length of PDN address contents	5 octets		
PDN type value	'001'B	IPv4	
PDN address information	IPv4 address	The SS provides a valid IPv4 address	
ESM cause	IF "PDN type" IE in step 4 is 'IPv4v6' THEN '00110010'B ELSE Not present	"PDN type IPv4 only allowed"	

Table 5.2A.1A.4-5: TRACKING AREA UPDATE REQUEST (Steps 19a1 and 19b4)

Derivation Path: 36.508 Table 4.7.2-27 with condition combined_TA_LA

Table 5.2A.1A.4-6: TRACKING AREA UPDATE ACCEPT (Steps 19a2 and 19b5)

Derivation Path: 36.508 Table 4.7.2-24 with condition combined_TA_LA			
Information Element	Value/remark	Comment	Condition
EPS network feature support	'0000 0000'B	IMS voice over PS session in S1 mode not supported	
Additional update result	Not present		_

5.2A.2 Generic Default Radio Bearer Establishment, UE Test Mode Activated (State 3A-RF)

In tests referring to test mode State 3A-RF, in order to avoid any uncontrollable transmission of uplink U-plane data, test mode State 4A-RF (specified in 5.2A.3) may be used and configured instead.

5.2A.2.1 Initial conditions

System Simulator:

- 1 cell, default parameters.
- The procedure shall be performed under ideal radio conditions as defined in clause 5

User Equipment:

The Test USIM shall be inserted.

5.2A.2.2 Definition of system information messages

The default system information messages are used.

5.2A.2.3 Procedure

Table 5.2A.2.3-1: UE registration with default EPS bearer establishment and test mode activation procedures

Step	Procedure	Message Sequence	
		U-S	Message
1 to	Steps 1 to 19 as specified in the procedure in	-	-
19	clause 5.2A.1A.3 take place.		

5.2A.2.4 Specific message contents

All specific message contents shall be referred to clause 5.2A.1A.4.

5.2A.3 Loopback Activation without looped data (State 4A-RF)

Editor's note: Test mode State 4A-RF is used and configured as an alternative to test mode State 3A-RF, to avoid any uncontrollable transmission of uplink U-plane data.

5.2A.3.1 Initial conditions

System Simulator:

- 1 cell, default parameters.

- The procedure shall be performed under ideal radio conditions as defined in clause 5

User Equipment:

- The UE shall be in Generic RB Establishment state, UE Test Mode Activated (State 3A-RF).

5.2A.3.2 Definition of system information messages

The default system information messages are used.

5.2A.3.3 Procedure

Table 5.2A.3.3-1: UE registration with default EPS bearer establishment and test mode activation procedures

Step	Procedure	Message Sequence	
		U - S	Message
1	The SS transmits a CLOSE UE TEST LOOP	<	RRC: DLInformationTransfer
	message to enter the UE test loop mode.		TC: CLOSE UE TEST LOOP
2	The UE transmits a CLOSE UE TEST LOOP	>	RRC: ULInformationTransfer
	COMPLETE message to confirm that		TC: CLOSE UE TEST LOOP COMPLETE
	loopback entities for the radio bearer(s) have		
	been created and loop back is activated.		

5.2A.3.4 Specific message contents

All specific message contents shall be referred to clause 4.5.4.4, with the exceptions below.

Table 5.2A.3.4-1: CLOSE UE TEST LOOP (in the preamble) (Step 1 in Table 5.2A.3.3-1)

Derivation Path: 36.509 clause 6.1			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	1111		
Skip indicator	0000		
Message type	10000000		
UE test loop mode	0000000	UE test loop mode A	
UE test loop mode A LB setup			1
Length of UE test loop mode A LB setup list in bytes	00000011	Length of one LB setup DRB (3 bytes)]
LB setup DRB	0 0 0 0 0 0 0 0, 0 0 0 0 0 0 0 0, 0 0 0 0	UL PDCP SDU size = 0 bits (0 bytes) Q4Q0 = Data Radio Bearer identity number for the default radio bearer. See 36.509 clause 6.1	
UE test loop mode B LB setup	Not present		
UE test loop mode B LB setup	Not present		

5.2A.4 Procedure to configure SCC

Table 5.2A.4.-1: UE RRC reconfiguration with sCELLToAdd

Step	Procedure	Message Sequence	
-		U-S	Message
1	The SS transmits an RRCConnectionReconfiguration(sCellToAdd ModList) message to establish the SCC.	<	RRC: RRCConnectionReconfiguration
2	The UE transmits an	>	RRC:
	RRCConnectionReconfigurationComplete		RRCConnectionReconfigurationComplete

5.2 A.41. Specific message contents

All specific message contents shall be referred to clause 4.5.2A.4, with exceptions as below.

5.2A.4.1.1 Exceptions for all CA tests

RRCConnectionReconfiguration

Table 5.2A.4.1.1-1: RRCConnectionReconfiguration

Derivation Path: Clause 4.6.1 Table 4.6.1-8, condition SCell_AddMod

MAC configurations

Table 5.2A.4.1.1-2: MAC-MainConfig-RBC

Derivation Path: Clause 4.8.2.1.5 Table 5.5.1.1-1, condition Scell_AddMod			
Information Element	Value/remark	Comment	Condition
MAC-MainConfig-RBC ::= SEQUENCE {			
mac-MainConfig-v1020SEQUENCE {			SCell_AddM od
sCellDeactivationTimer-r10	Not present		
extendedBSR-Sizes-r10	Not Present		
extendedPHR-r10	Not Present		
}			
}			

Condition	Explanation
SCell_AddMod	Addition or modification of Scell

5.2A.4.1.2 Exceptions for UL CA tests

Radio Resource Config Common SCell-r 10-DEFAULT

Table 5.2A.4.1.2-1: RadioResourceConfigCommonSCell-r10-DEFAULT

Derivation Path: Clause 4.6.3 Table 4.6.3-13A			
Information Element	Value/remark	Comment	Condition
RadioResourceConfigCommonSCell-r10 ::= SEQUENCE {			
ul-Configuration-r10 SEQUENCE {			UL CA
ul-FreqInfo-r10 SEQUENCE {			
ul-CarrierFreq-r10	Not Present	For FDD: If absent, the (default) value determined from the default TX-RX frequency separation defined in 3GPP TS 36.101 [27], table 5.7.3-1 applies. For TDD: This parameter is absent and it is equal to the downlink frequency.	
ul-Bandwidth-r10	Not Present	Same downlink bandwidth as used for target SCell	
additionalSpectrumEmissionSCell-r10	1 (CA_NS_01)		
soundingRS-UL-ConfigCommon-r10 }	release		
}			

Condition	Explanation	
UL CA	When UL Carrier Aggregation is used.	

Physical Config Dedicated SCell-r 10-DEFAULT

Table 5.2A.4.1.2-2: PhysicalConfigDedicatedSCell-r10-DEFAULT

Derivation Path: Clause 4.6.3 Table 4.6.3-6A			
Information Element	Value/remark	Comment	Condition
PhysicalConfigDedicatedSCell-r10 ::= SEQUENCE {			
ul-Configuration-r10	Present		
ul-Configuration-r10 SEQUENCE {			UL CA
antennalnfoUL-r10	Not Present		
pusch-ConfigDedicatedSCell-r10	Not present		
uplinkPowerControlDedicatedSCell-r10	UplinkPowerControlDedic atedSCell-r10-DEFAULT		
cqi-ReportConfigSCell-r10	Not present		
soundingRS-UL-ConfigDedicated-r10	Not present		
soundingRS-UL-ConfigDedicated-v1020	Not present		
soundingRS-UL-ConfigDedicatedAperiodic-r10	Not present		
}			

Condition	Explanation

UL CA When UL Carrier Aggregation is used.

5.2A.5 Exceptions for felCIC tests

5.2A.5.1 Specific message contents

All specific message contents shall be referred to clause 4.6, with exceptions as below.

5.2A.5.1.1 Neighbour cell info for all felCIC test cases

Table 5.2A.5.1.1-1: RRCConnectionReconfiguration

Derivation Path: clause 4.6.1, Table 4.6.1-8: RRCConnectionReconfiguration			
Information Element	Value/remark	Comment	Condition
RRCConnectionReconfiguration ::= SEQUENCE {			
rrc-TransactionIdentifier	RRC-		
	TransactionIdentifier-DL		
criticalExtensions CHOICE {			
c1 CHOICE{			
rrcConnectionReconfiguration-r8 SEQUENCE {			
radioResourceConfigDedicated	RadioResourceConfigDe		SRB2-
	dicated-SRB2-DRB(n, m)		DRB(n, m)
securityConfigHO	Not present		
nonCriticalExtension SEQUENCE {			
lateNonCriticalExtension	Not present		
nonCriticalExtension SEQUENCE {	·		
otherConfig-r9	Not present		
fullConfig-r9	Not present		
nonCriticalExtension SEQUENCE {	•		
sCellToReleaseList-r10	Not present		
sCellToAddModList-r10	Not present		
nonCriticalExtension SEQUENCE {	•		
systemInfomationBlockType1Dedicated-r11{			
SystemInformationBlockType1	See Table 4.4.3.2-3	Octet string signalling SIB-1 based on simulated serving cell	
}			
}			
}			
}			
}			
}			
}			
}			

Table 5.2A.5.1.1-2: RadioResourceConfigDedicated-SRB2-DRB(n, m)

Derivation Path: clause 4.6.3, Table 4.6.3-16 RadioResourceConfigDedicated-SRB2-DRB(n,m)				
Information Element	Value/remark	Comment	Condition	
RadioResourceConfigDedicated-SRB2-DRB(n, m) ::= SEQUENCE {				
neighCellsCRS-Info-r11 ::= CHOICE {				
setup SEQUENCE {				
CRS-AssistancedInfoList-r11 ::= SEQUENCE (SIZE (1maxCellReport)) OF CRS-AssistanceInfo-r11				
CRS-AssistanceInfo-r11 :: = SEQUENCE {		CRS information for all the configured neighbour cells		
physCellId-r11	Based on simulated cell requirements			
antennaPortsCount-r11	Based on simulated cell requirements			
mbsfn-SubframeConfigList-r11	Based on simulated cell requirements			
}				
}				
}				
}				

5.3 Default RRC message and information elements contents

5.3.1 Radio resource control information elements

As defined in clause 4.6.3 with the following exceptions:

Table 5.3.1-1: TDD-Config-DEFAULT

Derivation Path: Clause 4.6.3 Table 4.6.3-23			
Information Element	Value/remark	Comment	Condition
TDD-Config-DEFAULT ::= SEQUENCE {			
subframeAssignment	sa1		
specialSubframePatterns	ssp4		RF
}			

Condition	Explanation
RF	For all the RF tests specified in 36 521-1

Table 5.3.1-2: RadioResourceConfigCommonSIB-DEFAULT

Derivation Path: Clause 4.6.3 Table 4.6.3-14			
Information Element	Value/remark	Comment	Condition
RadioResourceConfigCommonSIB-DEFAULT ::=			
SEQUENCE {			
rach-ConfigCommon	RACH-ConfigCommon-		
	DEFAULT		
bcch-Config	BCCH-Config-DEFAULT		
pcch-Config	PCCH-Config-DEFAULT		
prach-Config	PRACH-ConfigSIB-		
	DEFAULT		
pdsch-ConfigCommon	PDSCH-ConfigCommon-		
	DEFAULT		
pusch-ConfigCommon	PUSCH-ConfigCommon-		
	DEFAULT		
pucch-ConfigCommon	PUCCH-ConfigCommon-		
	DEFAULT		
soundingRS-UL-ConfigCommon CHOICE {			
release	NULL		
}			
uplinkPowerControlCommon	UplinkPowerControlCom		
	mon-DEFAULT		
ul-CyclicPrefixLength	len1		
}			

Table 5.3.1-3: PRACH-Config-DEFAULT

Derivation Path: Clause 4.6.3 Table 4.6.3-7			
Information Element	Value/remark	Comment	Condition
PRACH-Config-DEFAULT ::= SEQUENCE {			
prach-ConfigInfo SEQUENCE {			
prach-ConfigIndex	3		TDD
}			
}			

Condition	Explanation
TDD	TDD cell environment

Table 5.3.1-4: RadioResourceConfigCommonSCell-r10-DEFAULT

Derivation Path: Clause 4.6.3 Table 4.6.3-13A			
Information Element	Value/remark	Comment	Condition
RadioResourceConfigCommonSCell-r10 ::=			
SEQUENCE {			
ul-Configuration-r10	Not Present		
ul-Configuration-r10 SEQUENCE {	Not Present		
}			

Table 5.3.1-5: PhysicalConfigDedicatedSCell-r10-DEFAULT

Derivation Path: Clause 4.6.3 Table 4.6.3-6A			
Information Element	Value/remark	Comment	Condition
PhysicalConfigDedicatedSCell-r10 ::= SEQUENCE {			
ul-Configuration-r10	Not Present		
ul-Configuration-r10 SEQUENCE {	Not Present		
}			

5.4 Default NAS message and information elements contents

5.5 Reference radio bearer configurations

5.5.1 SRB and DRB parameters

5.5.1.1 MAC configurations

As defined in clause 4.8.2.1.5 with the following exceptions:

Table 5.5.1.1-1: MAC-MainConfig-RBC

Derivation Path: Clause 4.8.2.1.5, Table 4.8.2.1.5-1			
Information Element	Value/remark	Comment	Condition
MAC-MainConfig-RBC ::= SEQUENCE {			
ul-SCH-Config	Not present		SCell_AddM od
ul-SCH-Config SEQUENCE {			
maxHARQ-Tx	n1	Only one transmission per UL HARQ	
}			
drx-Config	Not present		SCell_AddM od
drx-Config CHOICE {			
release	NULL		
}			
timeAlignmentTimerDedicated	infinity		
}			

Condition	Explanation
SCell_AddMod	Addition or modification of Scell

5.5.1.2 Physical Layer configurations

Table 5.5.1.2-1: PhysicalConfigDedicated-DEFAULT

Derivation Path: Clause 4.8.2.1.6 Table 4.8.2.1.6-1			1
Information Element	Value/remark	Comment	Condition
PhysicalConfigDedicated-DEFAULT ::= SEQUENCE {			
pdsch-ConfigDedicated	PDSCH-	See subclause	SRB1
	ConfigDedicated-	4.6.3	
	DEFAULT		
	Not present		RBC
pucch-ConfigDedicated	PUCCH-	See subclause	SRB1
	ConfigDedicated-	4.6.3	
	DEFAULT		
	Not present		RBC
pusch-ConfigDedicated	PUSCH-	See subclause	SRB1
	ConfigDedicated-	4.6.3	
	DEFAULT		
	Not present		RBC
uplinkPowerControlDedicated	UplinkPowerControlDedic	See subclause	SRB1
	ated-DEFAULT	4.6.3	
	Not present		RBC
tpc-PDCCH-ConfigPUCCH	Not present		SRB1
	TPC-PDCCH-Config-	See subclause	RBC
	DEFAULT using	4.6.3	
	condition PUCCH		
tpc-PDCCH-ConfigPUSCH	Not present		SRB1
	TPC-PDCCH-Config-	See subclause	RBC
	DEFAULT using	4.6.3	
	condition PUSCH		
cqi-ReportConfig	Not present		SRB1
	Not present		RBC
soundingRS-UL-ConfigDedicated	Not present		SRB1
<u> </u>	Not present		RBC
antennalnfo CHOICE {			
defaultValue	NULL		
}			
schedulingRequestConfig	Not present		SRB1
	Not present	See subclause	RBC
		4.6.3	
}			
cqi-ReportConfig-r10	Not present		SCell_AddM
			od

Condition	Explanation
SRB1	Used at configuration of SRB1 during RRC connection (re-)establishment
RBC	Used at configuration of a radio bearer combination during SRB2+DRB establishment
SCell_AddMod	Addition or modification of SCell

5.5.1.3 SRB and DRB combinations

5.5.1.3.1 Combinations on DL-SCH and UL-SCH

5.5.1.3.1.1 SRB1 and SRB2 for DCCH + n x AM DRB + m x UM DRB, where n=1 and m=0

This SRB and DRB combination is setup in UE Registration procedure and the Generic Radio Bearer Establishment with UE Test Mode Activated using specific message content - the default RRCConnectionReconfiguration message with condition SRB2-DRB(n, m).

6 Test environment for Signalling test

6.1 Requirements of test equipment

The requirements of test equipment specified in this subclause apply to Signalling test cases defined in TS 36.523-1 [18], in addition to the common requirements of test equipment specified in cause 4.2 of this specification.

Test equipment shall be able to simulate cells of Radio Access Technology (RAT) E-UTRA, UTRA, GSM or HRPD / 1xRTT. Regardless of respective RAT, the overall number and configuration of cells to be simulated simultaneously by test equipment shall not exceed the resources specified in the following Table 6.1-1:

Table 6.1-1: Maximum resources in terms of number / configuration of cells to be simulated simultaneously in a test setup

Simulation of	Max. number / configuration of cells (SISO / SIMO)	Max. number / configuration of cells (MIMO)
E-UTRA single-mode networks (FDD or TDD)	3x cells	n/a
E-UTRA dual-mode networks (FDD and TDD)	3x cells	n/a
E-UTRA networks involving Carrier Aggregation	4x cells	n/a
Mixed E-UTRA / UTRA networks	3x cells	n/a
Mixed E-UTRA / GSM networks	3x cells	n/a
Mixed E-UTRA / HRPD or 1xRTT networks	3x cells	n/a
Mixed E-UTRA / UTRA / GSM networks	3x cells	n/a
Note 1: No differentiation between cell configuration types (as defined in clause 6.3.3) here, because these		

- Note 1: No differentiation between cell configuration types (as defined in clause 6.3.3) here, because these types are relevant to specific test cases and their TTCN-3 implementation only.
- Note 2: Only network scenarios specified in clause 4.4.1 and 6.3.2.1 have been covered.
- Note 3: In case of Carrier Aggregation, each cell can act as a PCell, an SCell, or a standalone cell (not used as a CA component carrier). In Release 10 a maximum of 1 SCell can be aggregated with a PCell.
- Note 4: Virtual Cells are not included in the maximum cell number as they do not require resources in the SS.

Exceptions to the requirements outlined above are possible but need special evidence to be provided explicitly in the test case prose and should be allowed only if the test case purpose cannot be met otherwise.

6.2 Reference test conditions

The reference test conditions specified in this subclause apply to all Signalling test cases defined in TS 36.523-1 [18] unless otherwise specified, in addition to the common reference test conditions specified in subclause 4.3 of this specification.

6.2.1 Physical channel allocations

6.2.1.1 Antennas

If the UE has two Rx antennas, the same downlink signal is applied to each one, except if MIMO is tested. Both UE Rx antennas shall be connected.

If the UE has one Rx antenna, the downlink signal is applied to it.

6.2.1.2 Downlink physical channels and physical signals

Power allocation of downlink physical channels for Signalling test cases is specified in table 6.2.1.2-1.

Table 6.2.1.2-1: Power allocation for OFDM symbols and reference signals for Signalling test cases

Physical Channel	EPRE Ratio	Comment
PBCH	PBCH_RA = 0 dB	
	PBCH_RB = 0 dB	
PSS	PSS_RA = 0 dB	
SSS	SSS_RA = 0 dB	
PCFICH	PCFICH_RB = 0 dB	
PDCCH	PDCCH_RA = 0 dB	
	PDCCH_RB = 0 dB	
PDSCH (BCCH, CCCH, PCCH)	PDCCH_RA = 0 dB	To be consistent with default physical channel
,	PDCCH_RB = 0 dB	configuration in 36.331 [17], 9.2.4
PDSCH (DCCH, DTCH)	PDSCH_RA = -3 dB	To reduce interference from PDSCH of intra- frequency neighbour cells
	PDSCH_RB = -3 dB	To reduce interference from PDSCH of intra-
		frequency neighbour cells
PHICH	PHICH_RB = 0 dB	
PMCH	PMCH_RA = 0 dB	
MBSFN RS	MBSFN RS_RA = 0dB	

NOTE: MBSFN RS is not defined downlink physical channels in TS 36.211 [35].

6.2.1.3 Mapping of downlink physical channels and signals to physical resources

Same as clause 4.3.3.3

6.2.1.4 Uplink physical channels and physical signals

[FFS].

6.2.1.5 Mapping of uplink physical channels and signals to physical resources

[FFS].

6.2.2 Signal levels

6.2.2.1 Downlink signal levels

The default settings of suitable cells and non-suitable cells for E-UTRA are specified in table 6.2.2.1-1.

Cells which are expected to be undetectable for UE under test shall fulfil the condition of non-suitable "Off" cell in table 6.2.2.1-1.

Power level type	E-UTRAN (Note 1-3)		UTRAN	GERAN
	Unit	Power level		
Serving cell	dBm/15kHz	-85	Table 6.1.1 (FDD) / 6.1.6a (TDD) [5]	Table 6.1.10 [5]
Suitable neighbour intra-frequency cell	dBm/15kHz	-91	Table 6.1.2 (FDD) / 6.1.7 (TDD) [5]	n/a
Suitable neighbour inter-frequency cell	dBm/15kHz	-97	Table 6.1.2 (FDD) / 6.1.7 (TDD) [5]	Table 6.1.10 [5]
Non-suitable cell	dBm/15kHz	-115	Table 6.1.3 (FDD) / 6.1.8 (TDD) [5]	Table 6.1.11 [5]
Non-suitable "Off" cell	dBm/15kHz	≤ -145	Table 6.1.4 (FDD) /	Cell is switched-off

Table 6.2.2.1-1: Default settings of suitable / non-suitable cells

Note 1: The power level is specified in terms of cell-specific RS EPRE instead of RSRP as RSRP is a measured value and cannot be directly controlled by the SS.

6.1.9 (TDD) [5]

- Note 2: Power levels are specified based on the precondition that q-Hyst, a3-Offset and hysteresis are 0 dB.
- Note 3: The power level is specified at each UE Rx antenna.

The default signal level uncertainty is specified in table 6.2.2.1-2 for any level specified, unless a tighter uncertainty is specified by a test case in TS 36.523-1 [18].

Table 6.2.2.1-2: SS signal level uncertainty

	Absolute signal level uncertainty for each cell	Relative signal level uncertainty between multiple cells
Intra-frequency	+/-3 dB at each test port	+/-3 dB
Inter-frequency	+/-3 dB at each test port	See Note 1
Note 1: For Inter-frequency cells the relative signal level uncertainty between		

Note 1: For Inter-frequency cells the relative signal level uncertainty between multiple cells is determined by the absolute uncertainty of each cell, and does not have any additional constraint.

Cell-specific RS EPRE setting should be equal to or higher than -115 dBm except for Non-suitable "Off" cell. The figure is chosen to ensure that for all bands the DL signal is within the RSRP measurement range specified in TS 36.133 [39] clauses 9.1.2 and 9.1.3, taking into account the SS default absolute signal level uncertainty.

NOTE: (The power spectral density of a white noise source; specified in TS 36.133 [39]) can be assumed to be - Infinity [dBm/15kHz] for all intra and inter frequency test cases. It is applicable to both idle mode and connected mode in TS 36.523-1 [18], unless otherwise specified in specific test cases.

For test cases requiring AWGN (Noc), the default level uncertainty is specified in table 6.2.2.1-3 for any level specified, unless a tighter uncertainty is specified by a test case in TS 36.523-1 [18].

Table 6.2.2.1-3: SS AWGN level uncertainty

	Absolute AWGN level uncertainty for each frequency
Intra-frequency	+/-3 dB at each test port
Inter-frequency	+/-3 dB at each test port

6.2.2.2 Measurement accuracy and side conditions

Measurement accuracy shall be considered in setting downlink power levels.

RSRP measurement accuracy in E-UTRA RRC_IDLE state is specified in table 6.2.2.2-1, derived from TS 36.133 [39] clauses 4.2.2.3 and 4.2.2.4. This measurement accuracy is applicable to idle mode test cases specified in TS 36.523-1 [18]. For the serving cell and suitable neighbour cells, the following side conditions shall be satisfied including the effect of signal level uncertainty.

- RSRP ≥ -121 dBm
- RSRP Ês/Iot ≥ -4 dB
- SCH_RP ≥ -121 dBm
- SCH Ês/Iot ≥ -4 dB

Table 6.2.2.2-1: RSRP measurement accuracy in E-UTRA RRC_IDLE state

	Absolute RSRP measurement accuracy	Relative RSRP measurement accuracy
Intra-frequency	+/-6 dB	+/-3 dB
Inter-frequency	+/-6 dB	+/-5 dB

RSRP measurement accuracy in E-UTRA RRC_CONNECTED state is specified in table 6.2.2.2-2, derived from TS 36.133 [39] clauses 9.1.2 and 9.1.3 selecting Normal condition. The ranges and side conditions in TS 36.133 [39] clauses 9.1.2 and 9.1.3 apply. This measurement accuracy is applicable to connected mode test cases specified in TS 36.523-1 [18]. For the serving cell and suitable neighbour cells, the following side conditions shall be satisfied including the effect of signal level uncertainty.

- RSRP ≥ -124 dBm
- RSRP £s/Iot > -6 dB- Io : -118 dBm/15kHz ... -70 dBm/BWChannel (for absolute RSRP measurement accuracy)
- Io: -118 dBm/15kHz ... -50 dBm/BWChannel (for relative RSRP measurement accuracy)

Table 6.2.2.2-2: RSRP measurement accuracy in E-UTRA RRC_CONNECTED state

	Absolute RSRP measurement accuracy	Relative RSRP measurement accuracy
Intra-frequency	+/-6 dB	+/-3 dB
Inter-frequency	+/-6 dB	+/-6 dB

Signal level difference between the serving cell and any suitable intra-frequency neighbour cell shall be nominally 6 dB to satisfy the measurement accuracy requirement and its side conditions specified in TS 36.133 [39]. This figure is chosen based on the following preconditions for intra-frequency cells.

- Interference to reference signals from reference signals of other cells is eliminated by Physical Cell Identity shifting as specified in TS 36.523-3 [20].
- Interference to reference signals from PDSCH with SI-RNTI of other cells is negligible because it's sparse enough.
- Interference to reference signals from PDSCH of the serving cell is controlled by satisfying the conditions of clauses 6.2.2.1 and 6.2.2.2.
- Interference to P-SS/S-SS from P-SS/S-SS of other cells is eliminated by frame timing shifting as specified in TS 36.523-3 [20].
- Interference to P-SS/S-SS from PDSCH of other cells is eliminated by PDSCH resource allocation as specified in TS 36.523-3 [20].

6.2.3 Default test frequencies

The default channel bandwidth of 5/10/20 MHz is applied to the signalling test. The test frequencies are defined so that no frequency overlapping takes place, in order to avoid unnecessary inter-frequency interference.

For Band 13, Band 18 and Band 31, only one test frequency f1 is defined. All operating Bands except Band 13, Band 18 and Band 31 can accommodate at least two test frequencies f1 and f2 (f1<f2). An additional test frequency f3 can be defined for the operating Bands with at least triple of the default bandwidth. The fourth test frequency f4 (f3<f1<f4<f2) is applicable to the operating Bands which have at least quadruple of the default bandwidth.

To the single cell signalling test with channel bandwidth different from the default bandwidths of the operating bands, Mid Range defined in clause 4.3.1 is applied.

6.2.3.1 Test frequencies for signalling test

Test frequencies for signalling test are specified in table 6.2.3.1-1 and 6.2.3.1-1a for FDD and table 6.2.3.1-2 and 6.2.3.1-2a for TDD. Except f4 and a few f1, f5 which are specified according to EARFCN of the concerned operating Bands, the majority of the test frequencies in table 6.2.3.1-1, 6.2.3.1-1a, 6.2.3.1-2 and 6.2.3.1-2a are specified in terms of Low, Mid and High which are referred to the Low Range, Mid Range and High Range in clause 4.3.1.

Test frequencies for signalling test of MFBI are specified in table 6.2.3.1-1b and 6.2.3.1-1c for FDD and table 6.2.3.1-2b and 6.2.3.1-2c for TDD. Except f4 and a few f1, f5 which are specified according to EARFCN of the concerned operating Bands, the majority of the test frequencies in table 6.2.3.1-1b, 6.2.3.1-1c, 6.2.3.1-2b and 6.2.3.1-2c are specified in terms of Low, Mid and High which are referred to the Low Range, Mid Range and High Range in clause 4.3.1.

F-UTRA Bandwidth f1. f5 f2. f6 Operating [MHz] N_{UL} N_{DL} N_{UL} N_{DL} N_{UL} N_{DL} N_{UL} Nn **Band** 60 Mid 18350 350 Mid High High Low Low 2 Mid 18950 950 60 Mid High High Low Low 3 19625 1625 75 Mid Mid High High Low Low 20225 2225 4 45 Mid Mid High High Low Low High 5 25 Mid Mid High 20575 2575 Low Low 10 N/A 6 Low Low High High N/A N/A N/A 7 Mid Mid High 21150 3150 70 High Low Low 8 35 Mid Mid High High Low Low 21675 3675 9 35 Mid Mid High High Low Low 22025 4025 10 Mid Mid High 22500 4500 60 High Low Low High 12 17 Low Low High Mid Mid N/A N/A High 14 10 Low Low High N/A N/A N/A N/A 17 12 Low Low High High N/A N/A N/A N/A 19 15 Mid Mid High Low Low N/A N/A High 21 15 Mid Mid High High Low Low N/A N/A 22 Mid Mid High High 24950 6950 80 Low Low 23 20 25575 7575 7625 High High Low Low 25625 24 34 Mid Mid High High 25920 7920 Low Low 25 65 Mid Mid High High Low Low 26390 8390 8865 26 35 Mid Mid High High Low Low 26865 27 17 Mid Mid High High Low Low N/A N/A 27560 9560 28 45 Mid Mid High High Low Low 30 10 N/A Low Low High High N/A N/A N/A 5 Mid Mid N/A N/A N/A N/A N/A N/A 31

Table 6.2.3.1-1: Test frequencies for E-UTRA FDD(5MHz)

Table 6.2.3.1-1a: Test frequencies for E-UTRA FDD(10MHz)

E-UTRA Bandwidth		f1, f5		f2, f6		f3, f7		f4	
Operating Band	[MHz]	N _{UL}	N _{DL}						
11	20	Low	Low	High	High	N/A	N/A	N/A	N/A
13	10	Mid	Mid	N/A	N/A	N/A	N/A	N/A	N/A
18	15	Low	Low	N/A	N/A	N/A	N/A	N/A	N/A
20	30	Mid	Mid	High	High	Low	Low	N/A	N/A
23	20	Low	Low	High	High	N/A	N/A	N/A	N/A

Table 6.2.3.1-1b: Test frequencies for E-UTRA FDD(5MHz) MFBI

E-UTRA	MFBI	Bandwidth	f1,	f5	f2,	f6	f3,	f7	f4	1
Operating Band	Overlapping Band	[MHz]	N _{UL}	N _{DL}						
2	25	60	Mid	Mid	High	High	Low	Low	18950	950
3	9	35	Mid	Mid	High	High	Low	Low	19824	1824
4	10	45	Mid	Mid	High	High	Low	Low	20225	2225
5	18	6	Mid	Mid	N/A	N/A	N/A	N/A	N/A	N/A
5	19	25	Mid	Mid	High	High	Low	Low	20585	2585
5	26	25	Mid	Mid	High	High	Low	Low	20575	2575
9	3	35	Mid	Mid	High	High	Low	Low	22025	4025
10	4	45	Mid	Mid	High	High	Low	Low	22425	4425
12	17	12	Low	Low	High	High	N/A	N/A	N/A	N/A
17	12	12	Low	Low	High	High	N/A	N/A	N/A	N/A
19	5	15	Mid	Mid	High	High	Low	Low	N/A	N/A
19	26	15	Mid	Mid	High	High	Low	Low	N/A	N/A
25	2	60	Mid	Mid	High	High	Low	Low	26390	8390
26	5	25	Mid	Mid	High	High	Low	Low	26865	8865
26	18	15	Mid	Mid	High	High	Low	Low	N/A	N/A
26	19	15	Low	Low	High	High	N/A	N/A	N/A	N/A
26	27	10	Mid	Mid	High	High	Low	Low	N/A	N/A
27	18	9	Low	Low	High	High	N/A	N/A	N/A	N/A
27	26	10	Low	Low	High	High	N/A	N/A	N/A	N/A

Table 6.2.3.1-1c: Test frequencies for E-UTRA FDD(10MHz) MFBI

E-UTRA	MFBI	Bandwidth	Bandwidth f1, f5		f2, f6		f3, f7		f4	
Operating Band	Overlapping Band	[MHz]	N _{UL}	N _{DL}	N _{UL}	N _{DL}	N _{UL}	N _{DL}	N _{UL}	N _{DL}
18	5	6	Low	Low	N/A	N/A	N/A	N/A	N/A	N/A
18	26	15	Low	Low	N/A	N/A	N/A	N/A	N/A	N/A
18	27	9	Low	Low	N/A	N/A	N/A	N/A	N/A	N/A

Table 6.2.3.1-2: Test frequencies for E-UTRA TDD (5MHz)

E-UTRA Operating Band	Bandwidth [MHz]	f1, f5	f2, f6	F3, f7	f4
33	20	36075	High	Low	36125
34	15	Mid	High	Low	N/A
35	60	Mid	High	Low	36700
36	60	Mid	High	Low	37300
37	20	37625	High	Low	37675
•••					
42	100	Mid	High	Low	42640
43	100	Mid	High	Low	44640
44	50	Mid	High	Low	46115

Table 6.2.3.1-2a: Test frequencies for E-UTRA TDD(20MHz)

E-UTRA Operating Band	Bandwidth [MHz]	f1, f5	f2, f6	f3, f7	f4
38	50	Low	High	N/A	N/A
39	40	Low	High	N/A	N/A
40	100	Mid	High	Low	39350
41	194	Mid	High	Low	40970

Table 6.2.3.1-2b: Test frequencies for E-UTRA TDD (5MHz) MFBI

E-UTRA Operating Band	MFBI Overlapping Band	Bandwidth [MHz]	f1, f5	f2, f6	F3, f7	f4
33	39	20	36075	High	Low	36125

Table 6.2.3.1-2c: Test frequencies for E-UTRA TDD(20MHz) MFBI

E-UTRA Operating Band	MFBI Overlapping Band	Bandwidth [MHz]	f1, f5	f2, f6	f3, f7	f4
38	41	50	Low	High	N/A	N/A
39	33	20	Low	High	N/A	N/A
41	38	50	Mid	High	Low	N/A

6.2.3.2 Test frequencies for CA signalling test

Test frequencies for CA signalling testing are specified in Table 6.2.3.2-1 for CA Intra-Band contiguous case; in Tables 6.2.3.2-2 for CA Inter-band case and in Table 6.2.3.2-4 for Intra-Band Non-Contiguous case.

NOTE 1: Alternative test frequencies for additional channel bandwidth combinations may need to be specified when new CA configurations or CA Bandwidth Combination Sets are introduced in TS 36.101 subclause 5.6A.

For CA Intra-Band contiguous scenarios then f1, f2 and f3 are used.

NOTE 2: f2 and f3 are not adjacent frequencies; hence those cannot be used simultaneously as Pcell and Scell for CA Intra-Band contiguous scenarios.

For CA Inter-Band scenarios then f1, f2, f5 and f6 are used.

NOTE 3: Table 6.2.3.2-2 specifies the test frequencies for operation with PCell in the frequency band mentioned first (= carrier 1) and SCell in the frequency band mentioned second (= carrier 2) in the E-UTRA CA Configuration name acc. to TS 36.101 subclause 5.6A (e.g. PCell in band 1 and SCell in band 5 for CA_1A-5A configuration), for operation with switched allocation of PCell and SCell. SCell in the frequency band mentioned first (= carrier 1) and PCell in the frequency band mentioned second (= carrier 2) in the E-UTRA CA Configuration name (given that UL is supported in both frequency bands in question).

NOTE 4: For operation with switched allocation f1 is mapped to f5, f2 is mapped to f6, f5 is mapped to f1, f6 is mapped to f2

For CA Intra-Band non-contiguous scenarios then f1, f2 and f3 are used.

Table 6.2.3.2-1: Test frequencies for E-UTRA PCell and SCell for CA contiguous Intra-band operation

E-UTRA CA Configuration	Width of Operating band [MHz]	CC Combination / N _{RB_agg}	Test Frequency	CC N _{RB}	NuL	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MH;
CA_1C	60	100 + 100	f1	CC 100	18300	1950	300	2140
			f2	CC 100	18498	1969.8	498	2159.8
			f3	CC 100	18102	1930.2	102	2120.2
CA_3C	60	100 + 100	f1	CC 100	19475	1737.5	1475	1832.5
			f2	CC 100	19673	1757.3	1673	1852.3
			f3	CC 100	19277	1717.7	1277	1812.7

CA 7C	70	I 100 + 100 [f1	CC 100	21000	2525	3000	2645
CA_/C	70	100 + 100						
			f2	CC 100	21198	2544.8	3198	2664.8
			f3	CC 100	20802	2505.2	2802	2625.2
CA_27B	17	25+25	f1	CC_25	27100	813	9100	858
			f2	CC_25	27148	817.8	9148	862.8
			f3	CC_25	27050	808	9050	853
CA_38C	50	100 + 100	f1	CC 100	37900	2585	37900	2585
			f2	CC 100	38098	2604.8	38098	2604.8
			f3	N/A	N/A	N/A	N/A	N/A
CA_39C	CA 39C 40	100 + 75	f1	CC 100	38377	1892.7	38377	1892.7
			f2	CC 75	38548	1909.8	38548	1909.8
			f3	NA	NA	NA	NA	NA
CA_40C	100	100 + 100	f1	CC 100	39050	2340	39050	2340
			f2	CC 100	39248	2359.8	39248	2359.8
			f3	CC 100	38852	2320,2	38852	2320,2
CA_41C	194	100 + 100	f1	CC 100	40520	2583	40520	2583
			f2	CC 100	40718	2602.8	40718	2602.8
			f3	CC 100	40322	2563.2	40322	2563.2
CA_42C	200	100+100	f1	CC 100	42490	3490	42490	3490
			f2	CC 100	42688	3509.8	42688	3509.8
			f3	CC 100	42292	3470.2	42292	3470.2

Table 6.2.3.2-2: Test frequencies for E-UTRA PCell and SCell for CA Inter-band operation

E-UTRA CA Configuration	Width of Operating bands [MHz+MHz]	CC Combination / N _{RB_agg}	Test Frequency	CC N _{RB}	N _{UL}	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz]
CA_1A-3A	60+75	50 + 50	f1	CC 50	18300	1950	300	2140
			f2	CC 50	18550	1975	550	2165
			f5	CC 50	19575	1747.5	1575	1842.5
			f6	CC 50	19900	1780	1900	1875
CA_1A-5A	60+25	50 + 50	f1	CC 50	18300	1950	300	2140
			f2	CC 50	[18550]	[1975]	[550]	[2165]
			f5	CC 50	20450	829	2450	874
			f6	CC 50	20600	844	2600	889
CA_1A-8A	60 + 35	50 + 50	f1	CC 50	18300	1950	300	2140
			f2	CC 50	18550	1975	550	2165
			f5	CC 50	21625	897.5	3625	942.5
CA 1A 11A	60 + 20	100 . 50	f6	CC 50	21750	910	3750	955
CA_1A-11A	60 + 20	100 + 50	f1 f2	CC 100 CC 100	18300 18500	1950 1970	300 500	2140 2160
			f5	CC 100	22800	1432.9	4800	1480.9
			f6	CC 50	22900	1442.9	4900	1490.9
CA_1A-18A	60 + 15	50 + 50	f1	CC 50	18300	1950	300	2140
OA_IA-IOA	00 + 13	30 + 30	f2	CC 50	18550	1975	550	2165
			f5	CC 50	23900	820	5900	865
			f6	N/A	N/A	N/A	N/A	N/A
CA_2A-4A	60 + 45	50 + 50	f1	CC 50	18900	1880	900	1960
• · · · · · · · · · · · · · · · · · · ·			f2	CC 50	19150	1905	1150	1985
			f5	CC 50	20175	1732.5	2175	2132.5
			f6	CC 50	20350	1750	2350	2150
CA_1A-19A	60+15	75 + 50	f1	CC 75	18324	1952.4	324	2142.4
			f2	CC 75	18525	1972.5	525	2162.5
			f5	CC 50	24100	840	6100	885
			f6	N/A	N/A	N/A	N/A	N/A
CA_1A-21A	60+15	75 + 75	f1	CC 75	18324	1952.4	324	2142.4
			f2	CC 75	18525	1972.5	525	2162.5
			f5	CC 75	24525	1455.4	6525	1503.4
			f6	N/A	N/A	N/A	N/A	N/A
CA_1A-26A	60 + 35	50 + 50	f1	CC 50	18300	1950	300	2140
			f2	CC 50	18550	1975	550	2165
			f5	CC 50	26865	831.5	8865	876.5
CA 4A 20A	60.45	FO . FO	f6	CC 50	26990	844	8990	889
CA_1A-28A	60+45	50 + 50	f1 f2	CC 50 CC 50	18300 18550	1950 1975	300 550	2140 2165
			f5	CC 50	27410	723	9410	778
			f6	CC 50	27610	743	9610	798
CA_3A-5A	75+25	50 + 50	f1	CC 50	19575	1747.5	1575	1842.5
0/1_0/1 0/1	70120	00 1 00	f2	CC 50	[19900]	[1780]	[1900]	[1875]
			f5	CC 50	20450	829	2450	874
			f6	CC 50	20600	844	2600	889
CA_3A-7A	75+70	50 + 50	f1	CC 50	19575	1747.5	1575	1842.5
_			f2	CC 50	[19900]	[1780]	[1900]	[1875]
			f5	CC 50	20800	2505	2800	2625
			f6	CC 50	21400	2565	3400	2685
			f1	CC 50	19575	1747.5	1575	1842.5
CA_3A-8A	75+35	50+50	f2	CC 50	19900	1780	1900	1875
OA_0A*0A	7.07.00	30+30	f5	CC 50	21625	897.5	3625	942.5
	1		f6	CC 50	21750	910	3750	955
			f1	CC 100	19575	1747.5	1575	1842.5
CA_3A-19A	75+15	100+50	f2	CC 100	19850	1775	1850	1870
5/ <u>5</u> / 13/	, 5, 15	130130	f5	CC 50	24100	840	6100	885
	_		f6	N/A	N/A	N/A	N/A	N/A
CA_3A-26A	75 + 35	50 + 50	f1	CC 50	19575	1747.5	1575	1842.5
		1	f2	CC 50	19900	1780	1900	1875

	I		f5	CC 50	26865	831.5	8865	876.5
			f6	CC 50	26990	844	8990	889
			f1	CC 50	19575	1747.5	1575	1842.5
			f2	CC 50	19900	1780	1900	1875
CA_3A-27A	75 + 17	50 + 50	f5	CC 50	27125	815.5	9125	860.5
			f6	CC 50	27160	819	9160	864
			f1	CC 50	19575	1747.5	1575	1842.5
04 04 004	75.45	50.50	f2	CC 50	19900	1780	1900	1875
CA_3A-28A	75+45	50+50	f5	CC 50	27435	725.5	9435	780.5
			f6	CC 50	27610	743	9610	798
CA_5A-7A	25+70	50 + 50	f1	CC 50	20450	829	2450	874
			f2	CC 50	20600	844	2600	889
			f5	CC 50	20800	2505	2800	2625
			f6	CC 50	21400	2565	3400	2685
CA_7A-20A	70+30	50 + 50	f1	CC 50	21100	2535	3100	2655
			f2	CC 50	[21400]	[2565]	[3400]	[2685]
			f5	CC 50	24200	837	6200	796
			f6	CC 50	24400	857	6400	816
CA_8A-11A	35 + 20	50 + 50	f1	CC 50	21750	910	3750	955
			f2	N/A	N/A	N/A	N/A	N/A
			f5	CC 50	22800	1432.9	4800	1480.9
CA 4A 5A	45.05	50 . 50	f6	N/A	N/A	N/A	N/A	N/A
CA_4A-5A	45+25	50 + 50	f1 f2	CC 50 CC 50	20175 20350	1732.5 1750	2175 2350	2132.5 2150
			f5	CC 50	20350	829	2450	874
			f6	CC 50	20600	844	2600	889
CA_4A-12A	45+17	50+50	f1	CC 50	20175	1732.5	2175	2132.5
OA_ 1 A-12A	45+17	30+30	f2	CC 50	20350	1750	2350	2150
			f5	CC 50	23130	711	5130	741
			f6	N/A	N/A	N/A	N/A	N/A
CA_4A-13A	45+10	50 + 50	f1	CC 50	20175	1732.5	2175	2132.5
_			f2	CC 50	20350	1750	2350	2150
			f5	CC 50	23230	782	5230	751
			f6	N/A	N/A	N/A	N/A	N/A
CA_2A-17A	60+12	50 + 50	f1	CC 50	18900	1880	900	1960
			f2	CC 50	19150	1905	1150	1985
			f5	CC 50	23790	710	5790	740
			f6	N/A	N/A	N/A	N/A	N/A
CA_4A-17A	45+12	50 + 50	f1	CC 50	20175	1732.5	2175	2132.5
			f2	CC 50	20350	1750	2350	2150
			f5	CC 50	23790	710	5790	740
CA	25 : 47	F0 - F0	f6	N/A CC 50	N/A	N/A	N/A	N/A
CA_5A-12A	25+17	50+50	f1 f2	CC 50	20525 20600	836.5 844	2525 2600	881.5 889
			f5	CC 50	23130	711	5130	741
			f6	N/A	N/A	N/A	N/A	N/A
CA_2A-5A	60+25	50 + 50	f1	CC 50	18900	1880	900	1960
071_271071	00.20	00 . 00	f2	CC 50	19150	1905	1150	1985
			f5	CC 50	20450	829	2450	874
			f6	CC 50	20600	844	2600	889
CA_2A-29A	60+11	50 + 50	f1	CC 50	18900	1880	900	1960
_			f2	CC 50	19150	1905	1150	1985
			f5	CC 50	N/A	N/A	9720	723
			f6	N/A	N/A	N/A	N/A	N/A
CA_4A-29A	45+11	50 + 50	f1	CC 50	20175	1732.5	2175	2132.5
			f2	CC 50	20350	1750	2350	2150
			f5	CC 50	N/A	N/A	9720	723
		<u> </u>	f6	N/A	N/A	N/A	N/A	N/A
	05.40	50 + 50	f1	CC 50	20525	836.5	2525	881.5
CA_5A-17A	25+12				00000			000
CA_5A-17A	25+12		f2	CC 50	20600	844	2600	889
CA_5A-17A	25+12		f5	CC 50	23790	710	5790	740
CA_5A-17A CA_11A-18A	20+12	50 + 50						

			f5	CC 50	23900	820	5900	865
			f6	N/A	N/A	N/A	N/A	N/A
CA_18A-28A	15+30	50 + 50	f1	CC 50	23900	820	5900	865
			f2	N/A	N/A	N/A	N/A	N/A
			f5	CC 50	27410	723	9410	778
			f6	N/A	N/A	N/A	N/A	N/A
			f1	CC 50	24075	837.5	6075	882.5
CA 19A-21A	10+15	50+75	f2	CC 50	24100	840	6100	885
CA_19A-21A	10+15	30+73	f5	CC 75	24525	1455.4	6525	1503.4
			f6	N/A	N/A	N/A	N/A	N/A
			f1	CC 50	20175	1732.5	2175	2132.5
CA 4A-7A	45+70	50+50	f2	CC 50	20350	1750	2350	2150
CA_4A-7A	45+70	30+30	f5	CC 50	21100	2535	3100	2655
			f6	CC 50	21400	2565	3400	2685
			f1	CC 50	19575	1747.5	1575	1842.5
CA 3A-20A	75+30	50+50	f2	CC 50	19900	1780	1900	1875
CA_3A-20A	75+30	30+30	f5	CC 50	24200	837	6200	796
			f6	CC 50	24400	857	6400	816
CA_39A-41A	20+20	100+100	f1	CC 100	38350	1890	38350	1890
			f2	CC 100	38550	1910	38550	1910
			f5	CC 100	40620	2593	40620	2593
			f6	CC 100	41490	2680	41490	2680

Table 6.2.3.2-3: Void

Table 6.2.3.2-4: Test frequencies for E-UTRA PCell and SCell for CA non-contiguous Intra-band operation

E-UTRA CA Configuration	Width of Operating band [MHz]	CC Combination / N _{RB_agg}	Test Frequency	CC N _{RB}	N _{UL}	Frequency of Uplink [MHz]	N _{DL}	Frequency of Downlink [MHz
CA 2A-2A	60	50 + 50	f1	CC 50	18650	1855	650	1935
O/ (_Z/ (Z/ (00 1 00	f2	CC 50	19150	1905	1150	1985
			f3	CC 50	18900	1880	900	1960
CA_3A-3A	75	50 + 50	f1	CC 50	19250	1715	1250	1810
<i>0,</i> 1_0, 1 0, 1			f2	CC 50	19900	1780	1900	1875
			f3	CC 50	19575	1747.5	1575	1842.5
CA_4A-4A	45	50 + 50	f1	CC 50	20000	1715	2000	2115
			f2	CC 50	20350	1750	2350	2150
			f3	CC 50	20175	1732.5	2175	2132.5
CA_7A-7A	70	50 + 50	f1	CC 50	20800	2505	2800	2625
_			f2	CC 50	21400	2565	3400	2685
			f3	CC 50	21100	2535	3100	2655
CA_23A-23A	20	25 + 50	f1	CC 25	25525	2002.5	7525	2182.5
			f2	CC 50	25650	2015	7650	2195
			f3	N/A	N/A	N/A	N/A	N/A
CA_25A-25A	65	50 + 50	f1	CC 50	26090	1855	8090	1935
			f2	CC 50	26640	1910	8640	1990
			f3	CC 50	26365	1882,5	8365	1962.5
CA_41A-41A	194	100 + 100	f1	CC 100	39750	2506	39750	2506
			f2	CC 100	41490	2680	41490	2680
			f3	CC 100	40620	2593	40620	2593
CA_42A-42A	200	100 + 100	f1	CC 100	41690	3410	41690	3410
			f2	CC 100	43490	3590	43490	3590
			f3	CC 100	42590	3500	42590	3500

Cell 23

6.3 Reference system configurations

The reference system configurations specified in this subclause apply to all Signalling test cases defined in TS 36.523-1 [18] unless otherwise specified, in addition to the common reference system configurations specified in subclause 4.4 of this specification.

For Signalling testing, MIMO (Multiple Input Multiple Output) is not applied for all cell configurations regardless of UE MIMO functionality. Only one SS Tx antenna is used.

One or two UE antennas are used for all signalling test cases. (*1)

(*1) Two UE antennas configuration is possible for UE diversity case.

6.3.1 Default parameter specific for simulated cells

Default parameters specific for simulated cells are specified in this subclause.

6.3.1.1 Intra-frequency neighbouring cell list in SIB4 for E-UTRA cells

Intra-frequency neighbouring cell list for signalling test cases is defined in table 6.3.1.1-1. This table is referred to in the default contents of IE *intraFreqNeighbouringCellList* in *SystemInformationBlockType4* defined in table 4.4.3.3-3.

cell ID Test intra-frequency neighbouring cell list Frequency number of physCellId[n] q-OffsetCell [n] entries 1 2 3 2 3 Cell 1 f1 3 Cell 2 Cell 4 Cell 11 dB0 dB0 dB0 Cell 4 Cell 2 f1 3 Cell 1 Cell 11 dB0 dB0 dB0 Cell 4 f1 3 Cell 1 Cell 2 Cell 11 dB0 dB0 dB0 Cell 11 f1 3 dB0 dB0 Cell 1 Cell 2 Cell 4 dB0 f2 1 Cell 3 Cell 23 dB0

Table 6.3.1.1-1: Intra-frequency neighbouring cell lists for E-UTRA cells

NOTE: The intra-frequency E-UTRA neighbouring cell list for signalling NAS test cases when cells are on same PLMN is defined in table 6.3.2.3.1-1.

dB0

6.3.1.2 Inter-frequency carrier frequency list in SIB5 for E-UTRA cells

Cell 3

Inter-frequency E-UTRA carrier frequency list for signalling test cases is defined in table 6.3.1.2-1. This table is referred to in the default contents of IE *interFreqCarrierFreqList* in *SystemInformationBlockType5* defined in table 4.4.3.3-4.

Table 6.3.1.2-1: Inter-frequency carrier frequency lists for E-UTRA cells

cell ID	Test	interFreqCarrierFreqList				
	Frequency	number of	dl-CarrierFreq[<i>n</i>]			
		entries	1	2	3	
Cell 1	f1	3	f2	f3	f5	
Cell 2						
Cell 4						
Cell 11						
Cell 3	f2	3	f1	f3	f5	
Cell 23						
Cell 6	f3	3	f1	f2	f5	
Cell 10	f5	3	f1	f2	f3	
Note 1:	•	uency E-UTRA s when cells a -1.	•	•	•	
Note 2:	Depending on	the Band und	er test, f3 ma	y not be app	olicable.	
Note 3:	In case of Test frequency f1, f2 and f3, dl-CarrierFreq f5 as part of inter-frequency list is applicable only in case of multi-band scenarios.					
Note 4:	In case of Test frequency f5, dl-CarrierFreq f1 as part of inter- frequency list is applicable only in case of multi-band scenarios.					

In the case of dual mode multi-cell network scenarios as defined in subclause 4.4.1.3, inter-frequency E-UTRA carrier frequency list for signalling test cases is defined in table 6.3.1.2-2.

Table 6.3.1.2-2: Inter-frequency carrier frequency lists for E-UTRA cells in dual mode scenario

cell ID	Test	interFreqCarrierFreqList					
	Frequency	number of	dl-0	CarrierFreq	[<i>n</i>]		
		entries	1	2	3		
Cell 1	f1	3	f2	f5	f6		
Cell 2							
Cell 4							
Cell 3	f2	3	f1	f5	f6		
Cell 10,	f5	3	f1	f2	f6		
Cell 30,							
Cell 31							
Cell 28,	f6	3	f1	f2	f5		
Cell 29							

6.3.1.3 UTRA carrier frequency list in SIB6 for E-UTRA cells

UTRA carrier frequency list for signalling test cases is defined in table 6.3.1.3-1. This table is referred to in the default contents of IE *carrierFreqListUTRA-FDD* and *carrierFreqListUTRA-TDD* in *SystemInformationBlockType6* defined in table 4.4.3.3-5.

Table 6.3.1.3-1: UTRA carrier frequency lists for E-UTRA cells

interFreqCarrierFreqList							
number of carrierFreq[n]							
entries 1 2 3							
3 f8 f9 f10							
Note: Band VI has	two entries	Note: Band VI has two entries.					

Table 6.3.1.3-2: Mapping of UTRA cell with TS 34.108 [5]

UTRA c	ell Frequency	UTRA cell in TS	UTRA frequency in				
		34.108, clause 6.1	TS 34.108				
Cell 5	f8	Cell 1	High (Note 2)				
Cell 7	f8	Cell 2	High (Note 2)				
Cell 8	f9	Cell 4	Mid (Note 2)				
Cell 9	f10	Cell 7	Low				
Note 1:	The following simu	wing simultaneous co-existences in the test are not					
	allowed:						
	- cells on f1 (eUT	RA cell 1, cell 2, cell 4, cell	ell 11) and f9 (UTRA				
	cell 8);						
	- cells on f2 (eUT	RA cell 3, cell 12, cell 23) and f8 (UTRA cell 5,				
	cell 7);						
	- cells on f3 (eUT	RA cell 6, Cell 13) and f	10 (UTRA cell 9).				
Note 2:	On UTRA Band VI,	On UTRA Band VI, the Low range test frequency is applied to f9 for					
	Cell 8, and f8 for C	Cell 8, and f8 for Cell 5 and Cell 7.					
Note 3:	The combinations	ne combinations of the referred TS 34.108 UTRA Cell index and					
	frequency in this ta	ble override that specified	l in TS 34.108.				

6.3.1.4 GERAN carrier frequency group list in SIB7 for E-UTRA cells

GERAN carrier frequency group list for signalling test cases is defined in table 6.3.1.4-1. This table is referred to in the default contents of IE *carrierFreqsInfoList* in *SystemInformationBlockType7* defined in table 4.4.3.3-6.

Table 6.3.1.4-1: GERAN carrier frequency group list for E-UTRA cells

carrierFreqsInfoList							
number of	number of index carrierFreqs[n]						
entries	(<i>n</i>)	startingARFCN[n] explicitListOfARFCNs[n]					
		number of entries ARFCN-ValueGERAN					
1	1	f11 2 f12, f13					

Table 6.3.1.4-2: Mapping of GERAN cells with TS 51.010-1 [25]

GERAN cell	Frequency	GERAN cell in TS 51.010-1, clause 4			
Cell 24	f11	Cell A			
Cell 25	f12	Cell D			
Cell 26	f13	Cell B			

NOTE 2: Unless otherwise stated, GERAN cells 24/25/26 take the default values of GERAN cells A/B/D as defined in TS 51.010 clause 40.

6.3.1.5 CDMA2000 HRPD carrier frequency list in SIB8 for E-UTRA cells

CDMA2000 HRPD carrier frequency list for signalling test cases is defined in table 6.3.1.5-1. This table is referred to in the default contents of IE *cellReselectionParametersHRPD* in *SystemInformationBlockTyp8* defined in table 4.4.3.3-7.

Table 6.3.1.5-1: CDMA2000 HRPD carrier frequency list for E-UTRA cells

	neighCellsPerFreqList								
number of	index	arfcn[n]		physCell	ldList[<i>n</i>]				
entries	(<i>n</i>)		number of entries	index	PhysCellIdCDMA2000				
3	1	f14	2	1	Cell 15				
				2	Cell 16				
	2	f15	1	1	Cell 17				
	3	f16	1	1	Cell 18				

6.3.1.6 CDMA2000 1xRTT carrier frequency list in SIB8 for E-UTRA cells

CDMA2000 1xRTT carrier frequency list for signalling test cases is defined in table 6.3.1.6-1. This table is referred to in the default contents of IE *cellReselectionParameters1XRTT* in *SystemInformationBlockTyp8* defined in table 4.4.3.3-7.

Table 6.3.1.6-1: CDMA2000 1xRTT carrier frequency list for E-UTRA cells

	neighCellsPerFreqList							
number of	index	arfcn[n]		physCelll	dList[<i>n</i>]			
entries	(<i>n</i>)		number of entries	index	PhysCellIdCDMA2000			
3	1	f17	2	1	Cell 19			
				2	Cell 20			
	2	f18	1	1	Cell 21			
	3	f19	1	1	Cell 22			

6.3.1.7 E-UTRA carrier frequency list in SIB19 for UTRA cells

E-UTRA carrier frequency list for signalling test cases is defined in table 6.3.1.7-1. This table is referred to in the default contents of IE eutra-FrequencyAndPriorityInfoList in System Information Block type 19 defined in table 4.4.4.1-1.

Table 6.3.1.7-1: E-UTRA carrier frequency list for UTRA cells

eutra-FrequencyAndPriorityInfoList						
number of	number of earfcn[n]					
entries	1	2	3	4	-	
4	f1	f2	f3	f4	-	
Note: De	Note: Depending on the Band under test, f2, f3 and f4 may not be applicable.					

6.3.2 Default configurations for NAS test cases

The default configurations specified in this subclause apply only to NAS test cases. They apply to all NAS test cases unless otherwise specified.

6.3.2.1 Simulated network scenarios for NAS test cases

Simulated network scenarios for NAS test cases to be tested are specified in the pre-test conditions of each individual test case.

NOTE: The number of cells specified does not necessarily correspond to the maximum number of resources to be configured simultaneously in test equipment. Please refer to Table 6.1-1 for such information.

Any combination is allowed with the following restrictions:

- Cell E should not be used if Cell G or Cell H is used, otherwise two different PLMNs will be operated on the same frequency
- a maximum 3 cells on the same frequency can be used, i.e. only 3 cells out of cells A, B, C, D and M may be used simultaneously in each individual test case when cells in the test case are in different PLMNs (refer to Table 6.3.2.2-3).

6.3.2.2 Simulated NAS cells

Simulated NAS cells and default parameters are specified in table 6.3.2.2-1.

Unless otherwise specified, the default parameters specified in section 4 also apply to all NAS cells.

Table 6.3.2.2-1: Default parameters for simulated NAS cells

NAS cell		Tracking	Area		TA# list	GUTI (Note 2)		
ID	TA#	PLM	N	TAC	(Note 1)	MME Ide	MME Identifier	
		MCC	MNC			MME Group ID	MME Code	
Cell A	TAI-1	(Note	3)	1	TAI-1	32769	1	Arbitrarily
Cell B	TAI-2	(Note	3)	2	TAI-2	32770	1	selected
Cell C	TAI-3	(Note	3)	3	TAI-3	32771	1	according to
Cell D	TAI-4	(Note	3)	4	TAI-4	32772	1	TS 23.003
Cell E	TAI-12	002	101	3	TAI-12	32777	1	subclause 2.8
Cell F								[2].
Cell G	TAI-7	(Note 4)	02	1	TAI-7	32775	1	
Cell H	TAI-8	(Note 4)	02	2	TAI-8	32776	1	
Cell I	TAI-9	002	101	1	TAI-9	32777	1	
Cell J	TAI-10	003	101	1	TAI-10	32778	1	
Cell K	TAI-9	002	101	1	TAI-9	32777	1	
Cell L	TAI-11	002	101	2	TAI-11	32779	1	
Cell M	TAI-1	(Note	3)	1	TAI-1	32769	1	

- Note 1: The value(s) in the column TA# list indicates TAI(s) included in the response messages of the registration procedure (ATTACH ACCEPT or TRACKING AREA UPDATE ACCEPT) when the UE performs the registration procedure on a corresponding cell.
- Note 2: The value in the column GUTI indicates GUTI included in the response messages of the registration procedure (ATTACH ACCEPT or TRACKING AREA UPDATE ACCEPT) when the UE performs the registration procedure on a corresponding cell.
- Note 3: Set to the same Mobile Country Code and Mobile Network Code stored in EF_{IMSI} on the test USIM card (subclause 4.9.3).
- Note 4: Set to the same Mobile Country Code stored in EF_{IMSI} on the test USIM card (subclause 4.9.3).
- Note 5: Cell A is a serving cell and the other cells are suitable neighbour cells. The definitions are specified in subclause 6.2.2.1.

Table 6.3.2.2-2: Default cell identifiers for simulated NAS cells when cells are in same PLMN

NAS	Frequency	E-UTRAN Cell I	dentifier	Physical	rootSequenceIndex	rootSequenceIndex
cell ID		eNB Identifier	Cell	layer cell	FDD	TDD
			Identity	identity		
Cell A	f1	,0000 0000 0000	'0000	1	22	0
		0001 0001'B	0001'B			
Cell B	f1	,0000 0000 0000	'0000	2	86	8
		0001 0001'B	0010'B			
Cell C	f2	,0000 0000 0000	'0000	3	22	0
		0001 0010'B	0011'B			
Cell D	f1	,0000 0000 0000	'0000	4	150	16
		0001 0001'B	0100'B			
Cell E	NA	NA	NA	NA	NA	NA
Cell F	NA	NA	NA	NA	NA	NA
Cell G	NA	NA	NA	NA	NA	NA
Cell H	NA	NA	NA	NA	NA	NA
Cell I	NA	NA	NA	NA	NA	NA
Cell J	NA	NA	NA	NA	NA	NA
Cell M	f2	'0000 0000 0000	'0001	17	86	8
		0010 0001'B	0001'B			

Table 6.3.2.2-3: Default cell identifiers for simulated NAS cells when cells are in different PLMNs

NAS cell			E-UTRAN Cell lo	dentifier	Physical	rootSeque	rootSeque
ID	PLMN	Frequency	eNB Identifier	Cell	layer cell	ncelndex	nceIndex
				Identity	identity	FDD	TDD
Cell A	MCC/MNC=	f1	'0000 0000 0000	'0000	1	22	0
	MCC/MNC in USIM		0010 0001'B	0001'B			
Cell B	MCC/MNC=	f1	'0000 0000 0000	'0000	2	86	8
	MCC/MNC in USIM		0010 0001'B	0010'B			
Cell C	MCC/MNC=	f1	'0000 0000 0000	'0000	3	150	16
	MCC/MNC in USIM		0010 0001'B	0011'B			
Cell D	MCC/MNC=	f1	'0000 0000 0000	'0000	4	214	24
	MCC/MNC in USIM		0010 0001'B	0100'B			
Cell E	MCC=002	f2	,0000 0000 0000	'0001	23	22	0
	MNC=101		0011 0101'B	0111'B			
Cell F	NA	NA	NA	NA	NA	NA	NA
Cell G	MCC = MCC in USIM	f2	'0000 0000 0000	'0000	11	86	8
	MNC=02		0010 0010'B	1011'B			
Cell H	MCC= MCC in USIM	f2	'0000 0000 0000	'0000	12	150	16
	MNC=02		0010 0010'B	1100'B			
Cell I	MCC=002	f3 (Note 1)	'0000 0000 0000	'0000	13	22	0
	MNC=101		0010 0011'B	1101'B			
Cell J	MCC=003	f4 (Note 1)	'0000 0000 0000	'0000	14	22	0
	MNC=101		0010 0100'B	1110'B			
Cell K	MCC=002	f3 (Note 1)	'0000 0000 0000	'0000	15	86	8
	MNC=101		0010 0011'B	1111'B			
Cell L	MCC=002	f3 (Note 1)	'0000 0000 0000	'0001	16	150	16
	MNC=101		0010 0011'B	0000'B			
Cell M	MCC/MNC=	f1	'0000 0000 0000	'0001	17	278	32
	MCC/MNC in USIM		0010 0001'B	0001'B			
Note 1:	The test frequency f3 or f	4 is allocated t	o the cell if f1 and f2	are alread	v allocated to	the cells in th	ie test.

Note 1: The test frequency f3 or f4 is allocated to the cell if f1 and f2 are already allocated to the cells in the test. Otherwise, f1 or f2 is allocated, instead.

6.3.2.3 Broadcast system information

6.3.2.3.1 Intra-frequency neighbouring cell list in SIB4 for E-UTRA NAS cells

Intra-frequency neighbouring cell list of the same PLMN for the NAS signalling test is defined in table 6.3.2.3.1-1 when SIB4 to be broadcast.

Table 6.3.2.3.1-1: Intra-freq. lists in SIB4 for NAS test cases (same PLMN)

NAS cell ID	Test	Intra-frequency neighbouring cell list				
	Frequency	number of	physC	ellid[n]		
		entries	1	2		
Cell A	f1	2	Cell B	Cell D		
Cell B	f1	2	Cell A	Cell D		
Cell D	f1	2	Cell A	Cell B		
Cell C	f2	1	Cell M	N/A		
Cell M	f2	1	Cell C	N/A		

6.3.2.3.2 Inter-frequency carrier frequency list in SIB5 for E-UTRA NAS cells

Inter-frequency neighbouring carrier and cell lists for NAS signalling test cases are defined in table 6.3.2.3.2-1 for same PLMN and table 6.3.2.3.2-2 for different PLMN.

Table 6.3.2.3.2-1: Inter-freq. lists in SIB5 for NAS test cases (same PLMN)

NAS cell ID	Test	interFreqCarrierFreqList			
	Frequency	number of	dl-Carrie	erFreq[<i>n</i>]	
		entries	1	2	
Cell A	f1	1	f2	NA	
Cell B					
Cell D					
Cell C	f2	1	f1	NA	
Cell M					
NOTE: Ope	erating on Band	13, SIB5 is not l	oroadcast.		

Table 6.3.2.3.2-2: Inter-freq. lists in SIB5 for NAS test cases (different PLMN)

NAS cell ID	Test Frequency	interF	interFreqCarrierFreqList		
		number of	dl-Carr	ierFreq[n]	
		entries	1	2	
Cell A	f1	0	NA	NA	
Cell B					
Cell C					
Cell D					
Cell M					
Cell G	f2	0	NA	NA	
Cell H					
Cell I	f3	0	NA	NA	E-NOT-CONF
Cell K					
Cell L		1	f2		E-CONF
Cell J	f4	0	NA	NA	
Cell E	f2	1	f3	NA	

Condition	Explanation
E-NOT-CONF	cell E is not configured in the test
E-CONF	cell E is configured in the test

6.3.3 Cell configurations

For the purpose of test not involving Carrier Aggregation, three types of SS cell configurations are defined, full (Active) cell configuration, broadcast only cell configuration and minimum uplink cell configuration.

The abovementioned configurations can also be used in Carrier Aggregation test cases, either for PCells or SCells. However another configuration, the virtual cell configuration, can additionally be used for an SCell that is not active.

6.3.3.1 Full cell configuration

Full cell configuration is also called active cell configuration. The cell configuration, in minimum, has all defined DL and UL physical channels configured, i.e.

in DL: PBCH, PCFICH, PDCCH, PDSCH, PHICH,

in UL: PRACH, PUCCH, PUSCH.

The DL and UL Reference and synchronization (both primary and secondary) signals are also configured.

6.3.3.2 Minimum uplink cell configuration

In this cell configuration,

in DL: physical channels capable of transmission, i.e. PBCH, PCFICH, PDCCH, PDSCH are configured;

DL physical reference and synchronization (both primary and secondary) signals are also configured.

In UL: PRACH is configured. SS shall report any detection of PRACH preambles, in order to assign test verdicts. Decoding the preambles is not required.

6.3.3.3 Broadcast only cell configuration

In this cell configuration,

in DL: physical channels capable of transmission, i.e. PBCH, PCFICH, PDCCH, PDSCH are configured;

DL physical reference and synchronization (both primary and secondary) signals are also configured.

in UL: no physical resources are configured, neither channels, nor signals.

6.3.3.3A Virtual cell configuration

In this cell configuration,

in DL: no physical resources are configured, neither channels, nor signals;

in UL: no physical resources are configured, neither channels, nor signals.

6.3.3.4 Application of different cell configurations

By default, the cells specified in 36.523-1 are defined with the full cell configuration, unless it is explicitly specified as either the broadcast only, minimum uplink, or virtual cell configuration. The full cell configuration is suitable for UE to start camping, establish RRC connection or hand over from another active cell.

The broadcast only cells identified as 'DL only' can be applied in some RRC measurement test cases to those neighbour cells which UE shall not camp on during the test case execution.

The capability of a minimum uplink cell is much weaker than a full cell, but stronger than a broadcast only cell in UL. This cell configuration identified as 'min UL' can be applied in the idle mode test cases to those neighbour cells which a conformant UE shall not camp on during the test case execution.

The virtual cell configuration can only be used in Carrier Aggregation test cases as an SCell which is not active, i.e. the UE has it configured via RRC signalling but does not need to send or receive anything in this SCell.

If a cell configuration is specified in a test case it shall remain unchanged throughout the test case specification. In addition, there shall not be any requirement in the test specification or test implementation for a cell reconfiguration from one of the above configurations to the other.

For the UE conformance test, the broadcast only cell configuration can be replaced and implemented with the minimum uplink or full cell configurations. The minimum uplink cell configuration can also be implemented with the full cell configuration. The replacements in the implementation have no impact on the test purposes and the test requirements. The implementation guidelines are referred to 36.523-3.

6.3.4 SCell configurations

For the purpose of System Simulator resource management for Carrier Aggregation testing the following types of SCell configurations are defined:

- Active SCell: A cell that becomes an SCell at any point of time during the test case and which, while being an SCell, is activated .
- Inactive SCell: A cell that becomes an SCell at any point of time during the test case, but is never activated while being an SCell.

SCell activation is defined as sending an Activation/Deactivation MAC Control Element (ref. 36.321 cl. 6.1.3.8) to the UE to activate the SCell.

The SCell type does not depend on what the cell is used for in the test case while not being an SCell, and does not directly relate to the cell type specified in section 6.3.3. In particular an Inactive SCell can still be used as full cell or

broadcast only cell (e.g. for measurements to be performed on such a cell), and may be used for UE dedicated traffic while not acting as an SCell.

Also note that an Active SCell will not become an Inactive SCell if the SCell is deactivated via Activation/Deactivation MAC Control Element or after the *sCellDeactivationTimer* timer expires.

6.4 Generic procedures

This clause describes UE test states which can be used in the initial condition of many test cases defined in TS 36.523-1 [18] in addition to the states already specified in clause 4.5 of this specification.

6.4.1 Initial UE states and setup procedures

6.4.1.1 Initial UE states and setup procedures

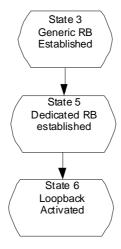


Figure 6.4.1.1-1: Initial UE states

In order that the UE can set up a call or session in E-UTRAN, there are a number of setup procedures to be undertaken in a hierarchical sequence to move between known states. The sequences are shown in figure 6.4.1.1-1 and the status of the relevant protocols in the UE in the different states are given in table 6.4.1.1-1. State 3 is defined in clause 4.5.1.

Table 6.4.1.1-1: Protocol state for each initial UE state

		RRC	ECM	EMM	ESM
State 5	Dedicated RB established	RRC_CONNECTED	ECM_CONNECTED	EMM-REGISTERED	1 default EPS bearer context active N dedicated EPS bearer context(s) active
State 6	Loopback Activated	RRC_CONNECTED	ECM_CONNECTED	EMM-REGISTERED	1 default EPS bearer context active N dedicated EPS bearer context(s) active

6.4.1.2 Dedicated Bearer Establishment (to state 5)

6.4.1.2.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall be in Generic RB established (State 3).

6.4.1.2.2 Definition of system information messages

The default system information messages are used.

6.4.1.2.3 Procedure

The establishment of dedicated radio bearer connection is assumed to always be mobile terminated.

Table 6.4.1.2.3-1: Procedure for dedicated bearer establishment

Step	Procedure		Message Sequence
		U-S	Message
1	The SS configures new data radio bearer(s) and the associated dedicated EPS bearer context(s).	<	RRC: RRCConnectionReconfiguration NAS: ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST
2	The UE transmits an RRCConnectionReconfigurationComplete message to confirm the establishment of the new data radio bearer(s), associated with the dedicated EPS bearer context(s) in the NAS message.	>	RRC: RRCConnectionReconfigurationComplet e
3	The UE transmits an ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT message.	>	NAS: ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT

6.4.1.2.4 Specific message contents

All specific message contents shall be referred to clause 4.6 and 4.7.

6.4.1.3 Loopback Activation (to state 6)

Editor's Note: This section will be completed when message for loopback activation is defined in TS 36.509. The table below is just an example and should be aligned with TS 36.509.

6.4.1.3.1 Initial conditions

System Simulator:

- Parameters are set to the default parameters for the basic single cell environment, as defined in subclause 4.4, unless otherwise specified in the test case.

User Equipment:

- The UE shall be in Dedicated Radio Bearer Established (State 5).

6.4.1.3.2 Definition of system information messages

The default system information messages are used.

6.4.1.3.3 Procedure

Table 6.4.1.3.3-1: Procedure for loopback activation

Step	Procedure		Message Sequence
		U-S	Message
1	The SS transmits an ACTIVATE RB TEST MODE message to activate UE radio bearer test mode procedure.	<	RRC: DLInformationTransfer TC: ACTIVATE RB TEST MODE
2	The UE transmits an ACTIVATE RB TEST MODE COMPLETE message.	>	RRC: ULInformationTransfer TC: ACTIVATE RB TEST MODE COMPLETE
3	The SS transmits a CLOSE UE TEST LOOP message to enter the UE test loop mode.	<	RRC: DLInformationTransfer TC: CLOSE UE TEST LOOP
4	The UE transmits a CLOSE UE TEST LOOP COMPLETE message to confirm that loopback entities for the radio bearer(s) have been created and loop back is activated (State 6).	>	RRC: ULInformationTransfer TC: CLOSE UE TEST LOOP COMPLETE

6.4.1.3.4 Specific message contents

All specific message contents shall be referred to clause 4.6, 4.7 and 4.7A.

6.4.2 Test procedures

6.4.2.1 Introduction

This section defines test procedures which can be used within test procedure sequences for test steps where checking the UE state is needed.

For each test procedure,

- at the start of the test procedure,
 - the System Simulator condition and the value of system information messages are the ones applicable in the test case referring to this test procedure, as they are after the execution of the test step immediately preceding the test step where the test procedure is used;
 - the initial UE condition is one indicated in the test case referring to this procedure, as it is after the execution of the test step immediately preceding the test step where the test procedure is used.
- at the end of the test procedure,
 - the System Simulator condition after the test procedure execution is complete is the same as before it is started (this should not be changed by the test procedure).

6.4.2.2 Test procedure to check RRC_IDLE state

This procedure aims at checking whether the UE is in RRC_IDLE on a certain cell of a test case or not.

Table 6.4.2.2-1: Test procedure sequence

St	Procedure		Message Sequence	TP	Verdict
		U-S	Message/PDU/SDU		
0	The SS waits 1 second.	-	-	-	-
1	The SS sends RRC <i>Paging</i> message with UE S-TMSI on the cell(s) specified in the test case.	<	RRC: Paging (PCCH)	-	-
2	Check: Does the UE send an RRCConnectionRequest message on the cell specified in the test case ?	>	RRC: RRCConnectionRequest		Р
3	The SS transmits a RRCConnectionSetup message	<	RRC: RRCConnectionSetup	-	-
4	The UE transmits an RRCConnectionSetupComplete message to confirm the successful completion of the connection establishment and to initiate the session management procedure by including the SERVICE REQUEST message.	>	RRC: RRCConnectionSetup Complete NAS: SERVICE REQUEST	-	-
5 - 6	Void	-	-	-	-
7	The SS transmits a SecurityModeCommand message to activate AS security.	<	RRC: SecurityModeCommand	-	-
8	The UE transmits a SecurityModeComplete message.	>	RRC: SecurityModeComplete	-	-
9	The SS transmits a RRCConnectionReconfiguration message to establish the default bearer with condition SRB2-DRB(1, 0) according to 4.8.2.2.1.1,	<	RRC: RRCConnectionReconfiguration	-	-
10	The UE transmits an RRCConnectionReconfiguration complete message.	>	RRC: RRCConnectionReconfigurationC omplete	-	-
11	The SS release the RRC connection.	<	RRC: RRCConnectionRelease	-	-

6.4.2.3 Test procedure to check RRC_CONNECTED state

Table 6.4.2.3-1: Test procedure sequence

St	Procedure		Message Sequence		Verdict
		U-S	Message/PDU/SDU		
1	The SS sends <i>UECapabilityEnquiry</i> message to the UE.	<	UECapabilityEnquiry	-	-
2	Check: Does the UE send a UECapabilityInformation message?	>	UECapabilityInformation		Р

6.4.2.4 Test procedure Paging (for NAS testing)

This procedure aims at checking whether the UE is in registered with a certain S-TMSI.

For the PS domain this procedure is identical to the procedure in 6.4.2.2 except that the S-TMSI as indicated in step 1 is the one explicitly specified in the test step calling this procedure.

For the CS domain the test procedure is FFS (i.e. it shall be avoided to make use of CS paging in the test case design).

6.4.2.5 Test procedure for no response to paging (for NAS testing)

This procedure aims at checking that the UE ignores paging messages with a specified identity.

The procedure is defined in table 6.4.2.5-1.

Table 6.4.2.5-1: Test procedure sequence

St	Procedure		Message Sequence	TP	Verdict
		U-S	Message		
0	The SS waits 1 second.	-	-	-	-
1	The SS transmits a paging message using the UE identity and the CN domain which are both specified in the referring test step, and on the cell which is specified in the referring test step.	<	Paging	-	-
2	Check: Does the UE send an RRCConnectionRequest message on the cell where the paging was transmitted within the next 3s?	>	RRCConnectionRequest		F

6.4.2.6 Test procedure to check that a dedicated EPS bearer context is active (for NAS testing)

This procedure aims at checking that a dedicated EPS bearer context is active.

The procedure is defined in table 6.4.2.6-1.

Table 6.4.2.6-1: Test procedure sequence

St	Procedure		Message Sequence	TP	Verdict
		U-S	Message		
1	The SS modifies existing data radio bearer(s) and the associated EPS bearer context(s) with Bearer QoS update.	<	RRC: RRCConnectionReconfiguration NAS: MODIFY EPS BEARER CONTEXT REQUEST	-	-
2	The UE transmits an RRCConnectionReconfigurationComplete message to confirm the modification of the existing data radio bearer(s), associated with the EPS bearer context(s) in the NAS message.	>	RRC: RRCConnectionReconfigurationC omplete	-	-
3	Check: Does the UE transmit a MODIFY EPS BEARER CONTEXT ACCEPT message?	>	RRC: ULInformationTransfer NAS: MODIFY EPS BEARER CONTEXT ACCEPT		Р

6.4.2.7 Test procedure to check that UE is camped on a new E-UTRAN cell

This procedure aims at checking whether the UE is camping on a new E-UTRAN cell with different TAI of a test case or not.

The procedure is defined in table 6.4.2.7-1.

Table 6.4.2.7-1: Test procedure sequence

St	Procedure		Message Sequence	TP	Verdict
		U-S	Message		
1	The UE transmits an <i>RRCConnectionRequest</i> message on the cell specified in the test case.	>	RRC: RRCConnectionRequest	-	-
2	SS transmit an <i>RRCConnectionSetup</i> message.	<	RRC: RRCConnectionSetup	-	-
3	The UE transmits an RRCConnectionSetupComplete message to confirm the successful completion of the connection establishment and a TRACKING AREA UPDATE REQUEST message is sent to update the registration of the actual tracking area.	>	RRC: RRCConnectionSetupComplete NAS: TRACKING AREA UPDATE REQUEST	-	-
4	SS responds with TRACKING AREA UPDATE ACCEPT message.	<	RRC: DLInformationTransfer NAS: TRACKING AREA UPDATE ACCEPT	-	-
5	Check: Does the UE send a TRACKING AREA UPDATE COMPLETE on the cell specified in the test case?	>	RRC: <i>ULInformationTransfer</i> NAS: TRACKING AREA UPDATE COMPLETE	-	Р
6	The SS transmits an RRCConnectionRelease message to release RRC connection and move to RRC_IDLE.	<	RRC: RRCConnectionRelease	-	-

NOTE 1: The periodic tracking area updating timer T3412 is deactivated by default during the attach procedure (TS 36.508 clause 4.7.2).

NOTE 2: The SS does not initiate authentication and NAS SECURITY MODE COMMAND are not performed (reuse of keys allocated during the attach procedure).

6.4.2.7A Test procedure to check that UE is camped on E-UTRAN cell upon mobility from another RAT

This procedure aims at checking whether the UE is camping on a E-UTRAN cell upon mobility from another RAT after Inter RAT reselection.

The procedure if PDP context was established before inter RAT reselection, is defined in table 6.4.2.7A-1.

Table 6.4.2.7A-1: Test procedure sequence

St	t Procedure Me		Message Sequence		Verdict
		U-S	Message		
1	The UE transmits a <i>RRCConnectionRequest</i> message on the cell specified in the test case.	>	RRC: RRCConnectionRequest	-	-
2	SS transmit an <i>RRCConnectionSetup</i> message.	<	RRC: RRCConnectionSetup	-	-
3	The UE transmits a RRCConnectionSetupComplete message to confirm the successful completion of the connection establishment and a TRACKING AREA UPDATE REQUEST message is sent to update the registration of the actual tracking area.	>	RRC: RRCConnectionSetupComplete NAS: TRACKING AREA UPDATE REQUEST	-	-
4	The SS transmits a NAS SECURITY MODE COMMAND message to activate NAS security (mapped security context) (Note 1).	<	RRC: DLInformationTransfer NAS: SECURITY MODE COMMAND	-	-
5	The UE transmits a NAS SECURITY MODE COMPLETE message and establishes the initial security configuration.	>	RRC: <i>ULInformationTransfer</i> NAS: SECURITY MODE COMPLETE	-	-
6	SS responds with TRACKING AREA UPDATE ACCEPT message.	<	RRC: DLInformationTransfer NAS: TRACKING AREA UPDATE ACCEPT	-	-
7	Check: Does the UE send a TRACKING AREA UPDATE COMPLETE on the cell specified in the test case?	>	RRC: <i>ULInformationTransfer</i> NAS: TRACKING AREA UPDATE COMPLETE	-	Р
8	The SS transmits an RRCConnectionRelease message to release RRC connection and move to RRC_IDLE. 1: Step 4 and 5 are executed only when UE and S	<	RRC: RRCConnectionRelease	-	-

The procedure if PDP context was not established before inter RAT reselection, is defined in table 6.4.2.7A-2.

Table 6.4.2.7A-2: Test procedure sequence

St	Procedure	Message Sequence		TP	Verdict
		U-S	Message	1	
-	EXCEPTION: For Rel-8 and Rel-9 steps 1 to 6 are optional and depend on UE implementation. A Rel-10 UE directly starts attach procedure from step 6.	-	-	-	-
1	The UE transmits a RRCConnectionRequest message on the cell specified in the test case.	>	RRC: RRCConnectionRequest	-	-
2	SS transmit an <i>RRCConnectionSetup</i> message.	<	RRC: RRCConnectionSetup	-	-
3	The UE transmits a RRCConnectionSetupComplete message to confirm the successful completion of the connection establishment and a TRACKING AREA UPDATE REQUEST message is sent to update the registration of the actual tracking area.	>	RRC: RRCConnectionSetupComplete NAS: TRACKING AREA UPDATE REQUEST	-	-
4	The SS transmits a TRACKING AREA UPDATE REJECT message with cause #40 (No EPS bearer context activated) to force attach the UE	<	RRC: DLInformationTransfer NAS: TRACKING AREA UPDATE REJECT		
-	EXCEPTION: Step 5 describes the behaviour that depends on UE behaviour (Note 1).	-	-	-	-
5	The SS transmits an RRCConnectionRelease message to release RRC connection and move to RRC_IDLE.	<	RRC: RRCConnectionRelease	-	-
-	EXCEPTION: Step 6 describes a behaviour which depends on the UE capability	-	-	-	-
6	IF NOT pc_Auto_PDN_Connectivity, the user initiates an attach by MMI or by AT command. (Note 2)	-	-	-	-
7- 22	Steps 2 to 17 of the generic UE Registration procedure (4.5 .2.3-1) are executed to successfully complete the Attach procedure.	-	-	-	-

SS waits for 1.5 second to receive the Attach Request on the existing RRC Connection. In case Attach Request is not received within 1.5 second, existing RRC Connection is released.

The request is assumed to be triggered by AT command AT+CGDCONT=1,"IP" followed by AT+CGACT=1 Note 1:

6.4.2.7A.1 Specific message contents

Table 6.4.2.7A.1-1: TRACKING AREA UPDATE REQUEST (Step 3, table 6.4.2.7A-1, 6.4.2.7A-2)

Derivation Path: 36.508 clause 4.7.2 Information Element	Value/remark	Comment	Condition
	value/remark	Comment	Condition
EPS update type EPS update type Value	'000'B	TA undating	TA only
EFS update type value	'001'B or '010'B	TA updating Combined TA/LA updating or combined TA/LA updating with IMSI attach	TA_only No_LAU_Co mbinedRAU _GERAN_U TRA
	'010'B	Combined TA/LA updating with IMSI attach	LAU_Combi nedRAU_G ERAN_UTR A
"Active" flag	Any allowed value		
NAS key set identifier			
NAS key set identifier	The valid NAS key set identifier of the UE		
TSC	'0'B	native security context (for KSI _{ASME})	Native_Secu irty_Context
	'1'B	mapped security context (for KSI _{SGSN})	Mapped_Se cuirty_Conte xt
GPRS ciphering key sequence number	Not present or any allowed value		
Old P-TMSI signature	Any allowed value		
Additional GUTI	Not present or any allowed value		
Nonce _{UE}	Not present or any allowed value		
UE radio capability information update needed	Not present or any allowed value		
EPS bearer context status	Not present or (octet 3 = '00100000'B and octet 4 = '00000000'B)		Bearer_Esta blished
	Not present or (octet 3 = '000000000'B and octet 4 = '00000000'B)		No_Bearer_ Established

Condition	Explanation
TA_only	See the definition below table 4.7.2-24.
combined_TA_LA	See the definition below table 4.7.2-24.
Native_Secuirty_Context	UE has performed AKA on the EUTRA Cell
Mapped_Secuirty_Context	UE has performed AKA on the UTRA/GERAN Cell
No_LAU_CombinedRAU_GERAN_UTRA	UE has not performed location area update procedure or a combined routing area update procedure in A/Gb or lu mode
LAU_CombinedRAU_GERAN_UTRA	UE has performed location area update procedure or a combined routing area update procedure in A/Gb or lu mode
Bearer_Established	Bearer is Established when UE earlier camped at UTRAN/GERAN cell or UE previously successfully camped in EUTRA cell.
No_Bearer_Established	Bearer is not Established when UE earlier camped at UTRAN/GERAN cell and UE did not previously camped in EUTRA cell.

This message is sent integrity protected when a valid security context exists and without integrity protection otherwise.

6.4.2.8 Test procedure to check that UE is camped on a new UTRAN cell

This procedure aims at checking whether the UE is camping on a new UTRAN cell of a test case or not.

The procedure is defined in table 6.4.2.8-1.

Table 6.4.2.8-1: Test procedure sequence

St	Procedure	Message Sequence		TP	Verdict
		U-S	Message		
1	The UE transmits a RRC CONNECTION REQUEST message on the cell specified in the test case.	>	RRC: RRC CONNECTION REQUEST	-	-
2	The SS transmits an RRC CONNECTION SETUP message.	<	< RRC: RRC CONNECTION SETUP		-
3	The UE transmits an RRC CONNECTION SETUP COMPLETE message.	>	RRC: RRC CONNECTION SETUP COMPLETE	-	-
4	The UE transmits a ROUTING AREA UPDATE REQUEST message.	>	-> RRC: INITIAL DIRECT TRANSFER NAS: ROUTING AREA UPDATE REQUEST		-
5	The SS transmits a SECURITY MODE COMMAND message.	<	RRC: SECURITY MODE COMMAND	-	-
6	The UE transmits a SECURITY MODE COMPLETE message.	>	RRC: SECURITY MODE COMPLETE	-	-
7	The SS transmits a ROUTING AREA UPDATE ACCEPT message.	<	RRC: DOWNLINK DIRECT TRANSFER NAS: ROUTING AREA UPDATE ACCEPT	-	-
8	The UE transmits a ROUTING AREA UPDATE COMPLETE message.	>	RRC: UPLINK DIRECT TRANSFER NAS: ROUTING AREA UPDATE COMPLETE	-	-
9	The SS transmits a RRC CONNECTION RELEASE message.	<	RRC: RRC CONNECTION RELEASE	-	-
10	Check: Does the UE transmit an RRC CONNECTION RELEASE COMPLETE message on the cell specified in the test?	>	RRC: RRC CONNECTION RELEASE COMPLETE	-	Р

NOTE: The TS 34.108 [5] and TS 34.123-1 [7] use Network Mode of Operation I as default, for this reason a combined MM/GMM procedure is performed.

6.4.2.9 Test procedure to check that UE is camped on a new GERAN cell

This procedure aims at checking whether the UE is camping on a new GERAN cell of a test case or not.

The procedure is defined in table 6.4.2.9-1.

Table 6.4.2.9-1: Test procedure sequence

St	Procedure		Message Sequence	TP	Verdict
		U-S	Message		
1	Check: Does the UE send a CHANNEL	>	CHANNEL REQUEST	-	-
	REQUEST message on the cell(s) specified in the test case?				
2	An uplink TBF is established in order to allow the UE to transmit a ROUTING AREA UPDATE REQUEST message signalling.	-	-	-	-
3	The UE transmits a ROUTING AREA UPDATE REQUEST message.	>	ROUTING AREA UPDATING REQUEST	-	-
4	A downlink TBF is established by the SS in order to transmit the AUTHENTICATION AND CIPHERING REQUEST message	-	-	-	-
5	The SS transmits an AUTHENTICATION AND CIPHERING REQUEST message.	<	AUTHENTICATION AND CIPHERING REQUEST	-	-
6	An uplink TBF is established in order to allow the UE to transmit an AUTHENTICATION AND CIPHERING RESPONSE message	-	-	-	-
7	The UE transmits a AUTHENTICATION AND CIPHERING RESPONSE message.	>	AUTHENTICATION AND CIPHERING RESPONSE	-	-
8	A downlink TBF is established by the SS in order to transmit the ROUTING AREA UPDATE ACCEPT message	-	-	-	-
9	The SS transmits a ROUTING AREA UPDATE ACCEPT message.	<	ROUTING AREA UPDATING ACCEPT	-	-
10	An uplink TBF is established in order to allow the UE to transmit a ROUTING AREA UPDATE COMPLETE message			-	-
11	The UE transmits a ROUTING AREA UPDATE COMPLETE message.	>	ROUTING AREA UPDATING COMPLETE	-	Р

NOTE: The TS 51.010-1 [25] uses Network Mode of Operation I as default, for this reason a combined MM/GMM procedure is performed.

6.4.2.10 Test procedure to check that UE performs tracking area updating procedure without ISR and security reconfiguration after successful completion of handover from UTRA

This procedure aims at checking whether the UE performs tracking area updating procedure where ISR is not activated and security reconfiguration after successful completion of handover from UTRA.

The procedure is defined in table 6.4.2.10-1.

Table 6.4.2.10-1: Test procedure sequence

St	Procedure	Message Sequence		TP	Verdict
		U - S	Message		
1	The UE transmits an <i>ULInformationTransfer</i> message on the cell specified in the test case. This message includes a TRACKING AREA UPDATE REQUEST message.	>	RRC: ULInformationTransfer NAS: TRACKING AREA UPDATE REQUEST	-	-
2	The SS transmits a <i>DLInformationTransfer</i> message on the cell specified in the test case. This message includes a TRACKING AREA UPDATE ACCEPT message.	<	RRC:DLInformationTransfer NAS: TRACKING AREA UPDATE ACCEPT	-	-
3	The UE transmits an <i>ULInformationTransfer</i> message on the cell specified in the test case. This message includes a TRACKING AREA UPDATE COMPLETE message.	>	> RRC: ULInformationTransfer NAS: TRACKING AREA UPDATE COMPLETE		-
-	EXCEPTION: Steps 4a1 to 4a2 describe behaviour that depends on the IE included in TRACKING AREA UPDATE REQUEST in step 1.	-	-	-	-
4a1	IF TRACKING AREA UPDATE REQUEST transmitted in step 1 does not contain a valid KSI _{ASME} THEN the SS transmits a <i>DLInformationTransfer</i> message on the cell specified in the test case. This message includes an AUTHENTICATION REQUEST message.	<	RRC:DLInformationTransfer NAS: AUTHENTICATION REQUEST	-	-
4a2	The UE transmits an <i>ULInformationTransfer</i> message on the cell specified in the test case. This message includes an AUTHENTICATION RESPONSE message.	>	RRC:ULInformationTransfer NAS: AUTHENTICATION RESPONSE	-	-
5	The SS transmits a <i>DLInformationTransfer</i> message on the cell specified in the test case. This message includes a SECURITY MODE COMMAND message to take the native EPS security context into use.	<	RRC:DLInformationTransfer NAS: SECURITY MODE COMMAND	-	-
6	The UE transmits an <i>ULInformationTransfer</i> message on the cell specified in the test case. This message includes a SECURITY MODE COMPLETE message.	>	RRC:ULInformationTransfer NAS: SECURITY MODE COMPLETE	-	-
7	The SS transmits an RRCConnectionReconfiguration message to perform intra cell handover and security reconfiguration on the cell specified in the test case.	<	RRC:RRCConnectionReconfigura tion	-	-
8	Check: Does the UE transmit an RRCConnectionReconfigurationComplete message on the cell specified in the test case?	>	RRC:RRCConnectionReconfigura tionComplete	-	Р

Table 6.4.2.10-2: Message TRACKING AREA UPDATE REQUEST (step 1, Table 6.4.2.10-1)

Derivation Path: 36.508 clause 4.7.2-27			
Information Element	Value/remark	Comment	Condition
NAS key set identifier			
NAS key set identifier	The valid NAS key set identifier of the UE	mapped security context (for KSI _{SGSN})	
TSC	1		
Non-current native NAS key set identifier			
NAS key set identifier	The valid NAS key set identifier of the UE	native security context (for KSI _{ASME})	
TSC	0	•	
Old P-TMSI signature	any allowed value		
Additional GUTI	any allowed value		

Table 6.4.2.10-3: RRCConnectionReconfiguration (step 7, Table 6.4.2.10-1)

Derivation Path: 36.508, Table 4.6.1-8

Table 6.4.2.10-4: SecurityConfigHO (IE in RRCConnectionReconfiguration, Table 6.4.2.10-3)

Information Element	Value/remark	Comment	Condition
SecurityConfigHO ::= SEQUENCE {			
handoverType CHOICE {			
intraLTE SEQUENCE {			
keyChangeIndicator	TRUE		
nextHopChainingCount	0		
}			
}			
}			

6.4.3 Reference test procedures for TTCN development

This clause describes reference test procedures for the purpose of TTCN development.

6.4.3.1 UE triggered establishment of a dedicated EPS bearer context

Table 6.4.3.1-1: Test procedure sequence

St Procedure Message Sequence			Message Sequence
		U - S	Message
1	Cause the UE to request bearer resource allocation of dedicated EPS bearer associated with first PDN connectivity. (see Note 1)	-	-
-	EXCEPTION: Steps 2a1 to 2a7 describe behaviour that depends on RRC state; the "lower case letter" identifies a step sequence that takes place if the UE is in RRC_IDLE state.	-	-
2a1	IF the UE is in RRC_IDLE state THEN the UE transmits an <i>RRCConnectionRequest</i> message.	>	RRC: RRCConnectionRequest
2a2	The SS transmits an <i>RRCConnectionSetup</i> message.	<	RRC: RRCConnectionSetup
2a3	The UE transmits an RRCConnectionSetupComplete including the SERVICE REQUEST message.	>	RRC: RRCConnectionSetupComplete NAS: SERVICE REQUEST
2a4	The SS transmits a SecurityModeCommand message to activate AS security.	<	RRC: SecurityModeCommand
2a5	The UE transmits a SecurityModeComplete message and establishes the initial security configuration.	>	RRC: SecurityModeComplete
2a6	The SS transmits an RRCConnectionReconfiguration message to configure data radio bearer(s) associated with the existing EPS bearer context. The RRCConnectionReconfiguration message is using condition SRB2-DRB(n, m) where n and m are the number of DRBs associated with existing EPS bearer contexts and configured respectively with RLC-AM and RLC-UM.	<	RRC: RRCConnectionReconfiguration
2a7	The UE transmits an RRCConnectionReconfigurationComplete message.	>	RRC: RRCConnectionReconfigurationComplete
3	The UE transmits an <i>ULInformationTransfer</i> message including the BEARER RESOURCE ALLOCATION REQUEST message.	>	RRC: ULInformationTransfer NAS: BEARER RESOURCE ALLOCATION REQUEST
4	The SS transmits an RRCConnectionReconfiguration message including the ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST message to establish the dedicated EPS bearer context.	<	RRC: RRCConnectionReconfiguration NAS: ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST
5	The UE transmits an RRCConnectionReconfigurationComplete message.	>	RRC: RRCConnectionReconfigurationComplete
6 Note	The UE transmits an <i>ULInformationTransfer</i> message including the ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT message.	>	RRC: ULInformationTransfer NAS: ACTIVATE DEDICATED EPS BEARER CONTEXT ACCEPT and +CGDSCONT, and +CGACT (activated).

Note 1: The request is assumed to be triggered by AT command +CGDSCONT, and +CGACT (activated).

Note 2: If UE sends IP related data this shall be handled by the SS.

UE triggered establishment of a default EPS bearer context associated with 6.4.3.2 an additional PDN

Table 6.4.3.2-1: Test procedure sequence

St	Procedure		Message Sequence
		U-S	Message
1	Cause the UE to request connectivity to an additional PDN. (see Note 1)	-	-
-	EXCEPTION: Steps 2a1 to 2a7 describe behaviour that depends on RRC state; the "lower case letter" identifies a step sequence that takes place if the UE is in RRC_IDLE state.	-	-
2a1	IF the UE is in RRC_IDLE state THEN the UE transmits an <i>RRCConnectionRequest</i> message.	>	RRC: RRCConnectionRequest
2a2	The SS transmits an <i>RRCConnectionSetup</i> message.	<	RRC: RRCConnectionSetup
2a3	The UE transmits an RRCConnectionSetupComplete including the SERVICE REQUEST message.	>	RRC: RRCConnectionSetupComplete NAS: SERVICE REQUEST
2a4	The SS transmits a SecurityModeCommand message to activate AS security.	<	RRC: SecurityModeCommand
2a5	The UE transmits a SecurityModeComplete message and establishes the initial security configuration.	>	RRC: SecurityModeComplete
2a6	The SS transmits an RRCConnectionReconfiguration message to configure data radio bearer(s) associated with the existing EPS bearer context. The RRCConnectionReconfiguration message is using condition SRB2-DRB(n, m) where n and m are the number of DRBs associated with existing EPS bearer contexts and configured respectively with RLC-AM and RLC-UM.	<	RRC: RRCConnectionReconfiguration
2a7	The UE transmits an RRCConnectionReconfigurationComplete message.	>	RRC: RRCConnectionReconfigurationComplete
3	The UE transmits an <i>ULInformationTransfer</i> message including the PDN CONNECTIVITY REQUEST message.	>	RRC: ULInformationTransfer NAS: PDN CONNECTIVITY REQUEST
4	The SS transmits an RRCConnectionReconfiguration message including the ACTIVATE DEFAULT EPS BEARER CONTEXT REQUEST message to establish the default EPS bearer context.	<	RRC: RRCConnectionReconfiguration NAS: ACTIVATE DEFAULT EPS BEARER CONTEXT REQUEST
5	The UE transmits an RRCConnectionReconfigurationComplete message.	>	RRC: RRCConnectionReconfigurationComplete
6	The UE transmits an <i>ULInformationTransfer</i> message including the ACTIVATE DEFAULT EPS BEARER CONTEXT ACCEPT message.	>	RRC: ULInformationTransfer NAS: ACTIVATE DEFAULT EPS BEARER CONTEXT ACCEPT
Note	1: The request is assumed to be triggered by A	T comma	and +CGDCONT and +CGACT (activated).

Note 2: If UE sends IP related data this shall be handled by the SS.

Table 6.4.3.2-2: Message PDN CONNECTIVITY REQUEST (step 3, Table 6.4.3.2-1)

Derivation Path: TS 36.508 Table 4.7.3-20 Information Element	Value/remark	Comment	Condition
EPS bearer identity	0000	No EPS bearer identity assigned	
Procedure transaction identity	PTI-1	UE assigns a particular PTI not yet used between 1 and 254	
ESM information transfer flag	Not present	This IE is only used during an attach procedure.	
Access point name	APN-1(New PDN name)	The requested PDN is different from default PDN	

UE triggered modification of an EPS bearer context 6.4.3.3

Table 6.4.3.3-1: Test procedure sequence

St	Procedure		Message Sequence
		U-S	Message
1	Cause the UE to request bearer resource modification of EPS bearer associated with first PDN connectivity. (see Note 1)	-	-
-	EXCEPTION: Steps 2a1 to 2a7 describe behaviour that depends on RRC state; the "lower case letter" identifies a step sequence that takes place if the UE is in RRC_IDLE state.	-	-
2a1	IF the UE is in RRC_IDLE state THEN the UE transmits an <i>RRCConnectionRequest</i> message.	>	RRC: RRCConnectionRequest
2a2	The SS transmits an <i>RRCConnectionSetup</i> message.	<	RRC: RRCConnectionSetup
2a3	The UE transmits an RRCConnectionSetupComplete including the SERVICE REQUEST message.	>	RRC: RRCConnectionSetupComplete NAS: SERVICE REQUEST
2a4	The SS transmits a SecurityModeCommand message to activate AS security.	<	RRC: SecurityModeCommand
2a5	The UE transmits a SecurityModeComplete message and establishes the initial security configuration.	>	RRC: SecurityModeComplete
2a6	The SS transmits an RRCConnectionReconfiguration message to configure data radio bearer(s) associated with the existing EPS bearer context. The RRCConnectionReconfiguration message is using condition SRB2-DRB(n, m) where n and m are the number of DRBs associated with existing EPS bearer contexts and configured respectively with RLC-AM and RLC-UM.	<	RRC: RRCConnectionReconfiguration
2a7	The UE transmits an RRCConnectionReconfigurationComplete message.	>	RRC: RRCConnectionReconfigurationComplete
3	The UE transmits an <i>ULInformationTransfer</i> message including the BEARER RESOURCE MODIFICATION REQUEST message.	>	RRC: ULInformationTransfer NAS: BEARER RESOURCE MODIFICATION REQUEST
4	The SS transmits an RRCConnectionReconfiguration message including the MODIFY EPS BEARER CONTEXT REQUEST message to modify the EPS bearer context.	<	RRC: RRCConnectionReconfiguration NAS: MODIFY EPS BEARER CONTEXT REQUEST
5	The UE transmits an RRCConnectionReconfigurationComplete message.	>	RRC: RRCConnectionReconfigurationComplete
6 Note	Check: Does the UE transmit an ULInformationTransfer message including the MODIFY EPS BEARER CONTEXT ACCEPT message?	>	RRC: ULInformationTransfer NAS: MODIFY EPS BEARER CONTEXT ACCEPT

The request is assumed to be triggered by AT command +CGCMOD. If UE sends IP related data this shall be handled by the SS.

Note 2:

UE triggered deletion of an EPS bearer context 6.4.3.4

Table 6.4.3.4-1: Test procedure sequence

St	Procedure		Message Sequence
		U - S	Message
1	Cause the UE to request bearer resource release of dedicated EPS bearer associated with first PDN connectivity. (see Note 1)	-	-
-	EXCEPTION: Steps 2a1 to 2a7 describe behaviour that depends on RRC state; the "lower case letter" identifies a step sequence that takes place if the UE is in RRC_IDLE state.	-	-
2a1	IF the UE is in RRC_IDLE state THEN the UE transmits an <i>RRCConnectionRequest</i> message.	>	RRC: RRCConnectionRequest
2a2	The SS transmits an <i>RRCConnectionSetup</i> message.	<	RRC: RRCConnectionSetup
2a3	The UE transmits an RRCConnectionSetupComplete including the SERVICE REQUEST message.	>	RRC: RRCConnectionSetupComplete NAS: SERVICE REQUEST
2a4	The SS transmits a SecurityModeCommand message to activate AS security.	<	RRC: SecurityModeCommand
2a5	The UE transmits a SecurityModeComplete message and establishes the initial security configuration.	>	RRC: SecurityModeComplete
2a6	The SS transmits an RRCConnectionReconfiguration message to configure data radio bearer(s) associated with the existing EPS bearer context. The RRCConnectionReconfiguration message is using condition SRB2-DRB(n, m) where n and m are the number of DRBs associated with existing EPS bearer contexts and configured respectively with RLC-AM and RLC-UM.	<	RRC: RRCConnectionReconfiguration
2a7	The UE transmits an RRCConnectionReconfigurationComplete message.	>	RRC: RRCConnectionReconfigurationComplete
3	The UE transmits an <i>ULInformationTransfer</i> message including the BEARER RESOURCE MODIFICATION REQUEST message.	>	RRC: ULInformationTransfer NAS: BEARER RESOURCE MODIFICATION REQUEST
4	The SS transmits an RRCConnectionReconfiguration message including the DEACTIVATE EPS BEARER CONTEXT REQUEST message to delete EPS bearer context.	<	RRC: RRCConnectionReconfiguration NAS: DEACTIVATE EPS BEARER CONTEXT REQUEST
5	The UE transmits an RRCConnectionReconfigurationComplete message	>	RRC: RRCConnectionReconfigurationComplete
6	The UE transmits an <i>ULInformationTransfer</i> message including the DEACTIVATE EPS BEARER CONTEXT ACCEPT message.	>	RRC: ULInformationTransfer NAS: DEACTIVATE EPS BEARER CONTEXT ACCEPT and +CGACT (deactivated).

Note 2: If UE sends IP related data this shall be handled by the SS.

6.4.3.5 UE triggered CS call

Table 6.4.3.5-1: Test procedure sequence

St	Procedure		Message Sequence
		U-S	Message
1	Cause the UE to originate CS call. (see Note 1)	-	-
-	EXCEPTION: Steps 2a1 to 2b1 describe behaviour that depends on RRC state; the "lower case letter" identifies a step sequence that takes place depending on RRC state.	-	-
2a1	IF the UE is in RRC_IDLE state THEN the UE transmits an <i>RRCConnectionRequest</i> message.	>	RRC: RRCConnectionRequest
2a2	The SS transmits an RRCConnectionSetup message.	<	RRC: RRCConnectionSetup
2a3	The UE transmits an RRCConnectionSetupComplete including the EXTENDED SERVICE REQUEST message.	>	RRC: RRCConnectionSetupComplete NAS: EXTENDED SERVICE REQUEST
2b1	ELSE The UE transmits an ULInformationTransfer message including the EXTENDED SERVICE REQUEST message.	>	RRC: ULInformationTransfer NAS: EXTENDED SERVICE REQUEST
Note	1: The request is assumed to be triggered by A	T comma	and D.

6.4.3.6 UE triggered MO SMS over SGs

Table 6.4.3.6-1: Test procedure sequence

St	Procedure		Message Sequence
		U - S	Message
1	Cause the UE to originate SMS message. (see Note 1)	-	-
-	EXCEPTION: Steps 2a1 to 2a7 describe behaviour that depends on RRC state; the "lower case letter" identifies a step sequence that takes place if the UE is in RRC_IDLE state.	-	-
2a1	IF the UE is in RRC_IDLE state THEN the UE transmits an <i>RRCConnectionRequest</i> message.	>	RRC: RRCConnectionRequest
2a2	The SS transmits an <i>RRCConnectionSetup</i> message.	<	RRC: RRCConnectionSetup
2a3	The UE transmits an RRCConnectionSetupComplete including the SERVICE REQUEST message.	>	RRC: RRCConnectionSetupComplete NAS: SERVICE REQUEST
2a4	The SS transmits a SecurityModeCommand message to activate AS security.	<	RRC: SecurityModeCommand
2a5	The UE transmits a SecurityModeComplete message and establishes the initial security configuration.	>	RRC: SecurityModeComplete
2a6	The SS transmits an RRCConnectionReconfiguration message to configure data radio bearer(s) associated with the existing EPS bearer context. The RRCConnectionReconfiguration message is using condition SRB2-DRB(n, m) where n and m are the number of DRBs associated with existing EPS bearer contexts and configured respectively with RLC-AM and RLC-UM.	<	RRC: RRCConnectionReconfiguration
2a7	The UE transmits an RRCConnectionReconfigurationComplete message.	>	RRC: RRCConnectionReconfigurationComplete
3	The UE transmits an <i>ULInformationTransfer</i> message including the UPLINK NAS TRANSPORT message to send the SMS message.	>	RRC: ULInformationTransfer NAS: UPLINK NAS TRANSPORT
4	The SS transmits a <i>DLInformationTransfer</i> message including the DOWNLINK NAS TRANSPORT message to acknowledge receipt of the SMS message.	<	RRC: DLInformationTransfer NAS: DOWNLINK NAS TRANSPORT
5	The SS transmits a <i>DLInformationTransfer</i> message including the DOWNLINK NAS TRANSPORT message to send the delivery report.	<	RRC: DLInformationTransfer NAS: DOWNLINK NAS TRANSPORT
6 Note	The UE transmits an <i>ULInformationTransfer</i> message including the UPLINK NAS TRANSPORT message to acknowledge receipt of the delivery report. 1: The request is assumed to be triggered by A	>	RRC: ULInformationTransfer NAS: UPLINK NAS TRANSPORT

6.4.3.7 CS fallback to UTRAN procedures (LAI of UTRAN cell same as the LAI received in combined Attach procedure in EUTRA cell)

All procedures specified in this clause are referred to the UTRA target cell where the UE has been redirected or handed over from the EUTRA cell after a CS call requested. The default message contents are found in TS 34.108 [5], clause 9.

The procedures in 6.4.3.7.1 - 6.4.3.7.4 are applied if the UE supports (EUTRA) RRC connection release with redirection and Multi Cell System Information to UTRAN. The procedures in 6.4.3.7.5 - 6.4.3.7.7 are applied if the UE supports PS HO from EUTRA to UTRAN.

6.4.3.7.1 CS fallback to UTRAN with redirection / MT call (PS bearers not established)

Table 6.4.3.7.1-1: Test procedure sequence

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	The UE transmits an RRC CONNECTION REQUEST message.	>	RRC CONNECTION REQUEST	ı	-
2	The SS transmits an RRC CONNECTION SETUP message.	<	RRC CONNECTION SETUP	ı	-
3	The UE transmits an RRC CONNECTION SETUP COMPLETE message.	>	RRC CONNECTION SETUP COMPLETE	-	-
-	EXCEPTION: In parallel to the events described in step 4 to 15 the step specified in Table 6.4.3.7.1-2 takes place.	-	-	-	-
4	Check: Does the UE transmit a PAGING RESPONSE message?	>	PAGING RESPONSE	-	Р
5-15	Steps 7 to 17 of the generic test procedure in TS 34.108 [5] subclause 7.2.3.1.3 are performed using the UTRA reference radio bearer parameters and combination "UTRA Speech" according to subclause 4.8.3 and Table 4.8.3-1. NOTE: Mobile terminating CS call is established.	-	-	-	-
16	The SS transmits a SECURITY MODE COMMAND message for the PS domain. See Note 1.	<	SECURITY MODE COMMAND	-	-
17	The UE transmits a SECURITY MODE COMPLETE message.	>	SECURITY MODE COMPLETE	-	-
18	The SS transmits a ROUTING AREA UPDATE ACCEPT message.	<	ROUTING AREA UPDATE ACCEPT	-	-
19	The UE transmits a ROUTING AREA UPDATE COMPLETE message.	>	ROUTING AREA UPDATE COMPLETE	-	-

Note 1: A real network will initiate the security mode command procedure for the PS domain immediately after receiving the ROUTING AREA UPDATE REQUEST, but in this test procedure it was chosen to complete the procedure for CS domain first, in order to avoid the possibility of a security mode command procedure running in parallel with another RRC procedure.

Table 6.4.3.7.1-2: Parallel behaviour

St	Procedure	Message Sequence		TP	Verdict
		U-S	Message		
1	The UE transmits a ROUTING AREA UPDATE	>	ROUTING AREA UPDATE	-	-
	REQUEST message.		REQUEST		

6.4.3.7.2 CS fallback to UTRAN with redirection / MO call (PS bearers not established)

Table 6.4.3.7.2-1: Test procedure sequence

St	Procedure		Message Sequence	TP	Verdict
		U - S	Message		
1	The UE transmits an RRC CONNECTION REQUEST message.	>	RRC CONNECTION REQUEST	-	-
2	The SS transmits an RRC CONNECTION SETUP message.	<	RRC CONNECTION SETUP	-	-
3	The UE transmits an RRC CONNECTION SETUP COMPLETE message.	>	RRC CONNECTION SETUP COMPLETE	-	-
-	EXCEPTION: In parallel to the events described in step 4 to 15 the step specified in Table 6.4.3.7.2-2 takes place.	-	-	-	-
4	Check: Does the UE transmit a CM SERVICE REQUEST message?	>	CM SERVICE REQUEST	-	Р
5-15	Steps 6 to 16 of the generic test procedure in TS 34.108 [5] subclause 7.2.3.2.3 are performed using the UTRA reference radio bearer parameters and combination "UTRA Speech" according to subclause 4.8.3 and Table 4.8.3-1. NOTE: Mobile originating CS call is established.	-	-	-	-
16	The SS transmits a SECURITY MODE COMMAND message for the PS domain. See Note 1.	<	SECURITY MODE COMMAND	-	-
17	The UE transmits a SECURITY MODE COMPLETE message.	>	SECURITY MODE COMPLETE	-	-
18	The SS transmits a ROUTING AREA UPDATE ACCEPT message.	<	ROUTING AREA UPDATE ACCEPT	-	-
19	The UE transmits a ROUTING AREA UPDATE	>	ROUTING AREA UPDATE COMPLETE	-	-

receiving the ROUTING AREA UPDATE REQUEST, but in this test procedure it was chosen to complete the procedure for CS domain first, in order to avoid the possibility of a security mode command procedure running in parallel with another RRC procedure.

Table 6.4.3.7.2-2: Parallel behaviour

St	Procedure	Message Sequence		TP	Verdict
		U-S	Message		
1	The UE transmits a ROUTING AREA UPDATE	>	ROUTING AREA UPDATE	-	-
	REQUEST message.		REQUEST		

6.4.3.7.3 CS fallback to UTRAN with redirection / MT call (PS bearer established)

Table 6.4.3.7.3-1: Test procedure sequence

St	Procedure	Message Sequence		TP	Verdict
		U-S	Message		
1-19	Steps 1-19 of table 6.4.3.7.1-1. NOTE: Mobile terminating CS call is established and Routing Area Update procedure is performed			-	-
20	Check: Does the UE transmit a SERVICE REQUEST message?	>	SERVICE REQUEST	-	Р
21	SS transmits a RADIO BEARER SETUP message, using the UTRA reference radio bearer parameters and combination "UTRA PS RB + Speech" according to subclause 4.8.3 and Table 4.8.3-1. NOTE: Mobile originating packet switched session is established.	<	RADIO BEARER SETUP	-	-
22	The UE transmits a RADIO BEARER SETUP COMPLETE message	>	RADIO BEARER SETUP COMPLETE	-	-

6.4.3.7.4 CS fallback to UTRAN with redirection / MO call (PS bearer established)

Table 6.4.3.7.4-1: Test procedure sequence

St	Procedure	Message Sequence		TP	Verdict
		U-S	Message		
1-19	Steps 1-19 of table 6.4.3.7.2-1. NOTE: Mobile originating CS call is set up and Routing Area Update procedure is performed	-	-	-	-
20	Check: Does the UE transmit a SERVICE REQUEST message?	>	SERVICE REQUEST	-	Р
21	SS transmits a RADIO BEARER SETUP message, using the UTRA reference radio bearer parameters and combination "UTRA PS RB + Speech" according to subclause 4.8.3 and Table 4.8.3-1. NOTE: Mobile originating packet switched session is established.	<	RADIO BEARER SETUP	-	-
22	The UE transmits a RADIO BEARER SETUP COMPLETE message	>	RADIO BEARER SETUP COMPLETE	-	-

6.4.3.7.5 CS fallback to UTRAN with Handover / MT call

Table 6.4.3.7.5-1: Test procedure sequence

St	Procedure		Message Sequence	TP	Verdict
		U-S	Message		10.0.0
1	Check: Does the UE transmit a HANDOVER TO UTRAN COMPLETE message?	>	HANDOVER TO UTRAN COMPLETE	-	Р
-	EXCEPTION: In parallel to the events described in step 2a1 to 9 the steps specified in table 6.4.3.7.5-2 takes place.	-	-	-	-
-	Exception: Steps 2a1 to 2a10 and 2b1 to 2b9 describe behaviour that depends on the UE capability; the "lower case letter" identifies a step sequence that takes place if a capability is supported. Note: One sequence of steps 2a1 to 2a10 or 2b1 to 2b9 are executed	-	-	-	-
2a1	IF the UE does not determine the LAI of the new UTRAN cell, THEN Check: Does the UE transmit a LOCATION UPDATING REQUEST message?	>	LOCATION UPDATING REQUEST	-	Р
2a2	The SS transmits AUTHENTICATION REQUEST	<	AUTHENTICATION REQUEST	-	-
2a3	The UE transmits AUTHENTICATION RESPONSE	>	AUTHENTICATION RESPONSE	-	-
2a4	The SS transmits a SECURITY MODE COMMAND message for the CS domain.	<	SECURITY MODE COMMAND	-	-
2a5	The UE transmits a SECURITY MODE COMPLETE message.	>	SECURITY MODE COMPLETE	-	-
2a6	The SS transmits a LOCATION UPDATING ACCEPT message.	<	LOCATION UPDATING ACCEPT	-	-
2a7	The SS transmits a SECURITY MODE COMMAND message for the PS domain.	<	SECURITY MODE COMMAND	-	-
2a8	The UE transmits a SECURITY MODE COMPLETE message.	>	SECURITY MODE COMPLETE	-	-
2a9	The SS transmits an UTRAN MOBILITY INFORMATION message to notify CN information.	<	UTRAN MOBILITY INFORMATION	-	-
2a10	The UE transmits an UTRAN MOBILITY INFORMATION CONFIRM message.	>	UTRAN MOBILITY INFORMATION CONFIRM	-	-
	Exception: Steps 2b1 to 2b4 takes place if pc_UMI_ProcNeeded_DuringCSFB				
2b1	The SS transmits a SECURITY MODE COMMAND message for the PS domain.	<	SECURITY MODE COMMAND	-	-
2b2	The UE transmits a SECURITY MODE COMPLETE message.	>	SECURITY MODE COMPLETE	-	-
2b3	The SS transmits an UTRAN MOBILITY INFORMATION message to notify CN information.	<	UTRAN MOBILITY INFORMATION		-
2b4	The UE transmits an UTRAN MOBILITY INFORMATION CONFIRM message.	>	UTRAN MOBILITY INFORMATION CONFIRM		-
2b5	Check: Does the UE transmit a PAGING RESPONSE?	>	PAGING RESPONSE		Р
2b6	The SS transmits AUTHENTICATION REQUEST	<	AUTHENTICATION REQUEST	-	-
2b7	The UE transmits AUTHENTICATION RESPONSE	>	AUTHENTICATION RESPONSE	-	-
2b8	The SS transmits a SECURITY MODE COMMAND message for the CS domain.	<	SECURITY MODE COMMAND	-	-
2b9	The UE transmits a SECURITY MODE COMPLETE message.	>	SECURITY MODE COMPLETE	-	-
3-9	Steps 11 to 17 of the generic test procedure in TS 34.108 subclause 7.2.3.1.3 are performed using the UTRA reference radio bearer parameters and combination "UTRA PS RB + Speech" according to subclause 4.8.3 and	-	-	-	-

		Table 4.8.3-1. NOTE: Mobile terminating CS call is established.				
	10	The SS transmits a ROUTING AREA UPDATE	<	ROUTING AREA UPDATE	-	-
		ACCEPT.		ACCEPT		
ſ	11	The UE sends ROUTING AREA UPDATE	>	ROUTING AREA UPDATE	-	-
		COMPLETE.		COMPLETE		

Table 6.4.3.7.5-2: Parallel behaviour

St	Procedure	Message Sequence		TP	Verdict
		U - S	Message		
1	The UE transmits a ROUTING AREA UPDATE	>	ROUTING AREA UPDATE	-	-
	REQUEST message.		REQUEST		

6.4.3.7.5.1 Specific message contents

Table 6.4.3.7.5.1-1: Void

Table 6.4.3.7.5.1-2: LOCATION UPDATING ACCEPT (step 2a6 of table 6.4.3.7.5-1)

Derivation Path: TS 36.508 Table 4.7B.2-5			
Information Element	Value/remark	Comment	Condition
Mobile identity	Not present		

6.4.3.7.6 CS fallback to UTRAN with Handover / MO call

Table 6.4.3.7.6-1: Test procedure sequence

St	t Procedure Message Sequence			TP	Verdict
		U-S	Message		
1	Check: Does the UE transmit a HANDOVER TO UTRAN COMPLETE message?	>	HANDOVER TO UTRAN COMPLETE	-	Р
-	EXCEPTION: In parallel to the events described in step 2a1 to 9 the steps specified in table 6.4.3.7.6-2 takes place.	-	-	-	-
-	Exception: Steps 2a1 to 2a12 and 2b1 to 2b9 describe behaviour that depends on the UE capability; the "lower case letter" identifies a step sequence that takes place if a capability is supported. Note: One sequence of steps 2a1 to 2a12 or 2b1 to 2b9 are executed	-	-	-	-
2a1	IF the UE does not determine the LAI of the new UTRAN cell, THEN Check: Does the UE transmit a LOCATION UPDATING REQUEST message?	>	LOCATION UPDATING REQUEST	-	Р
2a2	The SS transmits AUTHENTICATION REQUEST	<	AUTHENTICATION REQUEST	-	-
2a3	The UE transmits AUTHENTICATION RESPONSE	>	AUTHENTICATION RESPONSE	-	-
2a4	The SS transmits a SECURITY MODE COMMAND message for the CS domain.	<	SECURITY MODE COMMAND	-	-
2a5	The UE transmits a SECURITY MODE COMPLETE message.	>	SECURITY MODE COMPLETE	-	-
2a6	The SS transmits a LOCATION UPDATING ACCEPT message.	<	LOCATION UPDATING ACCEPT	-	-
2a7	Check: Does the UE transmit a CM SERVICE REQUEST?	>	CM SERVICE REQUEST	-	Р
2a8	The SS transmits a SECURITY MODE COMMAND message for the PS domain.	<	SECURITY MODE COMMAND	-	-
2a9	The UE transmits a SECURITY MODE COMPLETE message.	>	SECURITY MODE COMPLETE	-	-
2a10	The SS transmits an UTRAN MOBILITY INFORMATION message to notify CN information.	<	UTRAN MOBILITY INFORMATION	-	-
2a11	The UE transmits an UTRAN MOBILITY INFORMATION CONFIRM message.	>	UTRAN MOBILITY INFORMATION CONFIRM	-	-
2a12	The SS transmits a CM SERVICE ACCEPT message.	<	CM SERVICE ACCEPT	-	-
	Exception: Steps 2b1 to 2b4 takes place if pc_UMI_ProcNeeded_DuringCSFB				
2b1	The SS transmits a SECURITY MODE COMMAND message for the PS domain.	<	SECURITY MODE COMMAND	-	-
2b2	The UE transmits a SECURITY MODE COMPLETE message.	>	SECURITY MODE COMPLETE	-	-
2b3	The SS transmits an UTRAN MOBILITY INFORMATION message to notify CN information.	<	UTRAN MOBILITY INFORMATION	-	-
2b4	The UE transmits an UTRAN MOBILITY INFORMATION CONFIRM message.	>	UTRAN MOBILITY INFORMATION CONFIRM	-	-
2b5	Check: Does the UE transmit a CM SERVICE REQUEST?	>	CM SERVICE REQUEST	-	Р
2b6	The SS transmits AUTHENTICATION REQUEST	<	AUTHENTICATION REQUEST	-	-
2b7	The UE transmits AUTHENTICATION RESPONSE	>	AUTHENTICATION RESPONSE	-	-
2b8	The SS transmits a SECURITY MODE COMMAND message for the CS domain.	<	SECURITY MODE COMMAND	-	-
2b9	The UE transmits a SECURITY MODE COMPLETE message.	>	SECURITY MODE COMPLETE	-	-
3	The UE transmits a SETUP message.	>	SETUP	-	-

4-9	Steps 11 to 16 of the generic test procedure in TS 34.108 subclause 7.2.3.2.3 are performed using the UTRA reference radio bearer parameters and combination "UTRA PS RB + Speech" according to subclause 4.8.3 and Table 4.8.3-1. NOTE: Mobile originating CS call is established.	-	-	-	-
10	The SS transmits a ROUTING AREA UPDATE ACCEPT.	<	ROUTING AREA UPDATE ACCEPT	-	-
11	The UE sends ROUTING AREA UPDATE COMPLETE.	>	ROUTING AREA UPDATE COMPLETE	-	-

Table 6.4.3.7.6-2: Parallel behaviour

St	Procedure	Message Sequence		TP	Verdict
		U-S	Message		
1	The UE transmits a ROUTING AREA UPDATE	>	ROUTING AREA UPDATE	-	-
	REQUEST message.		REQUEST		

6.4.3.7.6.1 Specific message contents

None.

Table 6.4.3.7.6.1-1: LOCATION UPDATING ACCEPT (step 2a6 of table 6.4.3.7.6-1)

Derivation Path: TS 36.508 Table 4.7B.2-5			
Information Element	Value/remark	Comment	Condition
Mobile identity	Not present		

6.4.3.7.7 CS fallback to UTRAN with Handover / emergency call

Table 6.4.3.7.7-1: Test procedure sequence

St	Procedure	Message Sequence			Verdict
		U-S	Message	TP	
1	Check: Does the UE transmit a HANDOVER TO UTRAN COMPLETE message?	>	HANDOVER TO UTRAN COMPLETE	-	Р
-	EXCEPTION: In parallel to the events described in step 2a1 to 9 the steps specified in table 6.4.3.7.7-2 takes place.	-	-	-	-
-	Exception: Steps 2a1 to 2a12 and 2b1 to 2b9 describe behaviour that depends on the UE capability; the "lower case letter" identifies a step sequence that takes place if a capability is supported. Note: One sequence of steps 2a1 to 2a12 or 2b1 to 2b9 are executed	-		-	-
2a1	IF the UE does not determine the LAI of the new UTRAN cell, THEN Check: Does the UE transmit a LOCATION UPDATING REQUEST message?	>	LOCATION UPDATING REQUEST	-	Р
2a2	The SS transmits AUTHENTICATION REQUEST	<	AUTHENTICATION REQUEST	-	-
2a3	The UE transmits AUTHENTICATION RESPONSE	>	AUTHENTICATION RESPONSE	-	-
2a4	The SS transmits a SECURITY MODE COMMAND message for the CS domain.	<	SECURITY MODE COMMAND	-	-
2a5	The UE transmits a SECURITY MODE COMPLETE message.	>	SECURITY MODE COMPLETE	-	-
2a6	The SS transmits a LOCATION UPDATING ACCEPT message.	<	LOCATION UPDATING ACCEPT	-	-
2a7	Check: Does the UE transmit a CM SERVICE REQUEST?	>	CM SERVICE REQUEST	-	Р
2a8	The SS transmits a SECURITY MODE COMMAND message for the PS domain.	<	SECURITY MODE COMMAND	-	-
2a9	The UE transmits a SECURITY MODE COMPLETE message.	>	SECURITY MODE COMPLETE	-	-
2a10	The SS transmits an UTRAN MOBILITY INFORMATION message to notify CN information.	<	UTRAN MOBILITY INFORMATION	-	-
2a11	The UE transmits an UTRAN MOBILITY INFORMATION CONFIRM message.	>	UTRAN MOBILITY INFORMATION CONFIRM	-	-
2a12	The SS transmits a CM SERVICE ACCEPT message.	<	CM SERVICE ACCEPT	-	-
	Exception: Steps 2b1 to 2b4 takes place if pc_UMI_ProcNeeded_DuringCSFB				
2b1	The SS transmits a SECURITY MODE COMMAND message for the PS domain.	<	SECURITY MODE COMMAND	-	-
2b2	The UE transmits a SECURITY MODE COMPLETE message.	>	SECURITY MODE COMPLETE	-	-
2b3	The SS transmits an UTRAN MOBILITY INFORMATION message to notify CN information.	<	UTRAN MOBILITY INFORMATION	-	-
2b4	The UE transmits an UTRAN MOBILITY INFORMATION CONFIRM message.	>	UTRAN MOBILITY INFORMATION CONFIRM	-	-
2b5	Check: Does the UE transmit a CM SERVICE REQUEST?	>	CM SERVICE REQUEST	-	Р
2b6	The SS transmits AUTHENTICATION REQUEST	<	AUTHENTICATION REQUEST	-	-
2b7	The UE transmits AUTHENTICATION RESPONSE	>	AUTHENTICATION RESPONSE	-	-
2b8	The SS transmits a SECURITY MODE COMMAND message for the CS domain.	<	SECURITY MODE COMMAND	-	-
2b9	The UE transmits a SECURITY MODE COMPLETE message.	>	SECURITY MODE COMPLETE	-	-
3	The UE transmits an EMERGENCY SETUP	>	EMERGENCY SETUP	-	-

	message.				
4-9	Steps 12 to 17 of the test procedure in TS	-	-	-	-
	34.123-1 [7] subclause 13.2.1.1 are performed				
	using the UTRA reference radio bearer parameters and combination "UTRA PS RB +				
	Speech" according to subclause 4.8.3 and				
	Table 4.8.3-1.				
	NOTE: Emergency call is established				
10	The SS transmits a ROUTING AREA UPDATE	<	ROUTING AREA UPDATE	-	-
	ACCEPT.		ACCEPT		
11	The UE sends ROUTING AREA UPDATE	>	ROUTING AREA UPDATE	-	-
	COMPLETE.		COMPLETE		

Table 6.4.3.7.7-2: Parallel behaviour

St	Procedure	Message Sequence		TP	Verdict
		U - S	Message		
1	The UE transmits a ROUTING AREA UPDATE	>	ROUTING AREA UPDATE	-	-
	REQUEST message.		REQUEST		

6.4.3.7.7.1 Specific message contents

UTRAN MOBILITY INFORMATION (step 2a10 & 2b1 of table 6.4.3.7.7-1): same as Table 6.4.3.7.5.1-1

Table 6.4.3.7.7.1-1: LOCATION UPDATING ACCEPT (step 2a6 of table 6.4.3.7.7-1)

Derivation Path: TS 36.508 Table 4.7B.2-5			
Information Element	Value/remark	Comment	Condition
Mobile identity	Not present		

6.4.3.8 CS fallback to GERAN procedures (LAI of GERAN cell same as the LAI received in combined Attach procedure in EUTRA cell)

All procedures specified in this clause are referred to the GERAN target cell where the UE has been redirected or handed over from the EUTRA cell after a CS call requested. The default message contents are found in TS 34.108 [5], clause 9.

The procedures in 6.4.3.8.1 - 6.4.3.8.4 are applied if the UE supports (EUTRA) RRC connection release with redirection or Cell Change order and Multi Cell System Information to GERAN.

6.4.3.8.1 CS fallback to GERAN with redirection or CCO / MT call (DTM not supported)

Table 6.4.3.8.1-1: Test procedure sequence

St	Procedure		Message Sequence	TP	Verdict
		U-S	Message		
1	The UE transmits a CHANNEL REQUEST message.	>	CHANNEL REQUEST	-	-
2	The SS transmits an IMMEDIATE ASSIGNMENT message.	<	IMMEDIATE ASSIGNMENT	-	-
3	Void	-	-	-	-
-	EXCEPTION: In parallel to the events described in step 4 to 19 the steps specified in table 6.4.3.8.1-2 takes place	-	-	-	-
4	Check: Does the UE transmit a PAGING RESPONSE message?	>	PAGING RESPONSE	-	Р
4A	The UE transmits a Classmark Change message	>	CLASSMARK CHANGE	-	-
-	EXCEPTION: Step 4B describes behaviour that depends on the UE capability.	-	-	-	-
4B	IF pc_UTRA then the UE transmits a Utran Classmark message	>	UTRAN CLASSMARK CHANGE	ı	-
5-19	Steps 5 to 19 of the generic test procedure in TS 51.010-1 sub clause 10.3.3 are performed NOTE: Mobile terminating CS call is established.	-	-	-	-
20	The SS transmits DISCONNECT.	<	DISCONNECT	-	-
21	The UE transmits RELEASE	>	RELEASE	-	-
22	The SS transmits RELEASE COMPLETE.	<	RELEASE COMPLETE	-	-
23	The SS transmits CHANNEL RELEASE, with GPRS Resumption Field set to 1	<	CHANNEL RELEASE	-	-
24- 34	Steps 1 to 11 of the generic test procedure in sub clause 6.4.2.9 are performed.	-	-	-	-

Table 6.4.3.8.1-2: Parallel behaviour

St	Procedure	Message Sequence		TP	Verdict
		U-S	Message		
1	The UE transmits a GPRS SUSPENSION REQUEST message.	>	GPRS SUSPENSION REQUEST	-	-

6.4.3.8.2 CS fallback to GERAN with redirection or CCO / MO call (DTM not supported)

Table 6.4.3.8.2-1: Test procedure sequence

St	Procedure	Message Sequence		TP	Verdict
		U-S	Message		
1	The UE transmits a CHANNEL REQUEST message.	>	CHANNEL REQUEST	-	-
2	The SS transmits an IMMEDIATE ASSIGNMENT message.	<	IMMEDIATE ASSIGNMENT	-	-
3	Void	-	-	-	-
-	EXCEPTION: In parallel to the events described in step 4 to 17 the steps specified in table 6.4.3.8.2-2 takes place	-	-	-	-
4	Check: Does the UE transmit a CM SERVICE REQUEST message?	>	CM SERVICE REQUEST	-	Р
4A	The UE transmits a Classmark Change message	>	CLASSMARK CHANGE	-	-
-	EXCEPTION: Step 4B describes behaviour that depends on the UE capability.	-	-	-	-
4B	IF pc_UTRA then the UE transmits a Utran Classmark message	>	UTRAN CLASSMARK CHANGE	-	-
5-17	Steps 5 to 17 of the generic test procedure in TS 51.010-1 sub clause 10.2.3 are performed NOTE: Mobile originating CS call is established.	-	-	-	-
18	The SS transmits DISCONNECT.	<	DISCONNECT	-	-
19	The UE transmits RELEASE	>	RELEASE	-	-
20	The SS transmits RELEASE COMPLETE.	<	RELEASE COMPLETE	-	-
21	The SS transmits CHANNEL RELEASE, with GPRS Resumption Field set to 1	<	CHANNEL RELEASE	-	-
22- 32	Steps 1 to 11 of the generic test procedure in sub clause 6.4.2.9 are performed.	-	-	-	-

Table 6.4.3.8.2-2: Parallel behaviour

St	Procedure	Message Sequence		TP	Verdict
		U-S	Message		
1	The UE transmits a GPRS SUSPENSION REQUEST message.	>	GPRS SUSPENSION REQUEST	-	-

6.4.3.8.3 CS fallback to GERAN with PS Handover / MT call (EDTM not supported)

Same as test procedure sequence in 36.523-1 [18] clause 13.1.11.3.2 from steps 11 to end.

6.4.3.8.4 CS fallback to GERAN with PS Handover / MO call (EDTM not supported)

Same as test procedure sequence in 36.523-1 [18] clause 13.1.12.3.2 from steps 4 to end.

6.4.3.8.5 CS fallback to GERAN with PS Handover / MT call (EDTM supported)

Same as test procedure sequence in 36.523-1 [18] clause 13.1.13.3.2 from steps 7 to end.

6.4.3.9 SRVCC Handover to UTRA

The procedure specified in this clause are referred to the UTRA target cell where the UE has been SRVCC handed over from the EUTRA cell. The default message contents are found in TS 34.108 [5], clause 9.

Table 6.4.3.9-1: Test procedure sequence

St	Procedure	Message Sequence		TP	Verdict
		U - S	Message		
1	Check: Does the UE transmit a HANDOVER	>	HANDOVER TO UTRAN	-	Р
	TO UTRAN COMPLETE message?		COMPLETE		
-	EXCEPTION: In parallel to the events	-	-	-	-
	described in step 2 to 7 the steps specified in				
	table 6.4.3.9-2 takes place.				
2	The SS transmits a SECURITY MODE	<	SECURITY MODE COMMAND	-	-
	COMMAND message for the CS domain.				
3	The UE transmits a SECURITY MODE	>	SECURITY MODE COMPLETE	-	-
	COMPLETE message.				
4	The SS transmits an UTRAN MOBILITY	<	UTRAN MOBILITY	-	-
	INFORMATION message to notify CN		INFORMATION		
	information.				
5	The UE transmits an UTRAN MOBILITY	>	UTRAN MOBILITY	-	-
	INFORMATION CONFIRM message.		INFORMATION CONFIRM		
6	The SS transmits a TMSI REALLOCATION	<	TMSI REALLOCATION	-	-
	COMMAND message.		COMMAND		
7	The UE transmits a TMSI REALLOCATION	>	TMSI REALLOCATION	-	-
	COMPLETE message.		COMPLETE		
8	The SS transmits a ROUTING AREA UPDATE	<	ROUTING AREA UPDATE	-	-
	ACCEPT.		ACCEPT		
9	The UE sends ROUTING AREA UPDATE	>	ROUTING AREA UPDATE	-	-
	COMPLETE.		COMPLETE		

Table 6.4.3.9-2: Parallel behaviour

St	Procedure	Message Sequence		TP	Verdict
		U-S	Message		
1	The UE transmits a ROUTING AREA UPDATE REQUEST message.	>	ROUTING AREA UPDATE REQUEST	-	-

6.4.3.9.1 Specific message contents

Table 6.4.3.9.1-1: SECURITY MODE COMMAND (step 2, Table 8.4.1.2.3.2-1)

Derivation Path: 34.108 clause 9.1.1 (SECURITY MODE COMMAND message)			
Information Element	Condition	Value/remark	
Ciphering mode info		Not Present	

6.4.3A Test case postambles

6.4.3A.1 Introduction

In order to make test cases perfectly reproducible, the UE under test is switched off after the test procedure sequence of a test case is complete. In order to make it possible to run a number of test cases without any manual operation, it is important that the SS can properly handle any possible signalling from the UE between the end of the test procedure sequence and until the UE is off.

After the last verdict of a test procedure sequence is assigned, it is necessary to:

- terminate any ongoing signalling procedure,
- switch off the UE.

Usually, this can be performed by completing necessary TAU/LAU/RAU procedures, completing any ongoing voice call (CS or IMS), and switching off the UE with a detach procedure.

6.4.3A.2 Reference end states

Test procedures in TS 36.523-1 may only partially terminate ongoing signalling procedures, provided they indicate a reference end state at the end of the test procedure sequence, so that a matching procedure in TS 36.523-3 can be executed to switch off the UE.

Reference end states definitions include the necessary pieces of information to predict UE behaviour during the postambles.

If any extra information was stored in the UE or the USIM due to the test procedure sequence, it should be removed explicitly by the test procedure sequence, before the UE can be left in a reference end state.

Table 6.4.3A.2-1: Reference end states

Name	Description	Optional information
E-UTRA idle (E1)	The UE:	The test case may indicate
	- is camped on an E-UTRA cell, and RRC idle and	that the UE is not
	- registered for EPS services and EPS update status is	registered for non-EPS
	"updated" and	services, though the UE
	- is registered for non-EPS services and update status is	supports CS fallback or
	updated (if CS fallback or SMS over SGs is supported) and	SMS over SGs.
	- has one or more default EPS bearer context are active,	
	zero or more dedicated EPS bearer contexts are active.	
E-UTRA connected	Same as E-UTRA idle , except that:	Same as for E-UTRA idle .
(E2)	- the UE is RRC connected and	
E LITDA composted	- DRBs for all active EPS bearer contexts are established.	Same as for E-UTRA idle .
E-UTRA connected, T3440 started	Same as E-UTRA idle , except that: - the UE is RRC connected and	Same as for E-UTRA Idle .
(E2_T3440) E-UTRA test mode	- Timer T3440 is started in UE. Same as E-UTRA connected and	Same as for E-UTRA idle .
(E3)	- test mode is active and	Same as for E-OTRA fule.
(L3)	- test loop is closed.	
E-UTRA deregistered	The UE is:	
(E4)	- camped on an E-UTRA cell, and idle and	
\(- \)	- not registered of EPS services and	
	- not registered for non-EPS services.	
UTRA idle (U1)	The UE is:	The test case may indicate
, ,	- camped on a UTRA cell, RRC idle and	that the UE is not IMSI
	- IMSI attached and update status is "updated" (if the UE	attached though the UE
	supports CS domain) and	supports CS domain.
	- GPRS attached, GPRS update state is "updated", and zero	
	or one or several PDP context(s) with interactive or	
	background QoS are active.	
UTRA connected (U2)	Same as UTRA idle, except that:	The test case may indicate
	- the UE is in CELL_DCH state and	that the UE is not IMSI
	- a RAB associated with the active PDP context is	attached though the UE
UTRA handover (U3)	established. The UE:	supports CS domain. Same as for UTRA
OTRA Halldovel (03)	- was E-UTRA connected and	connected.
	- has completed a handover to UMTS and	connected.
	- hasn't yet sent or received any NAS signalling on the target	
	UTRAN cell.	
UTRA CS fallback (U4)	The UE:	
, ,	- was E-UTRA idle or E-UTRA connected and	
	- has transmitted an EXTENDED SERVICE REQUEST	
	message due to MO or MT CS fallback call and	
	- either the UE has completed a handover to UMTS or	
	the UE has been redirected to UMTS and has established	
	the RRC connection to a UTRA cell, and the target UTRA	
	cell has activated security and RABs for all previously active	
	EPS bearer contexts were established and	
	- the UE hasn't yet sent or received any NAS signalling on	
UTRA CS call (U5)	the target UTRAN cell The UE was in UTRAN CS fallback and the UE has	
OTIVA GO CAII (GO)	completed LAU/RAU procedure if necessary and has	
	established a CS call or the UE was in E-UTRAN connected	
	and the UE has completed LAU/RAU procedure if necessary	
	and has performed a handover to UTRAN with SRVCC.	
UTRA deregistered	The UE is:	
(U6)	- camped on a UTRA cell, and idle and	
	- not registered GPRS/non-GPRS services	
GERAN idle (G1)	The UE:	
	- is camped on an GERAN cell, in idle mode and GPRS idle	
	state and	
	- is registered for PS services and GPRS update status is	
	"updated" and zero or one or several PDP context(s) with	
	interactive or background QoS are active.	
GERAN PS handover	- is IMSI attached (if CS domain is supported) The UE:	
	one ∪E: - was E-UTRA connected and	
(G2)	- was E-UTNA CONNECTEU AND	

	- has performed a PS handover procedure to a GERAN cell and - hasn't yet sent or received any NAS signalling on the target GERAN cell.	
GERAN CS fallback	The UE:	
(G3)	- was E-UTRA idle or E-UTRA connected and - has transmitted an EXTENDED SERVICE REQUEST message due to MO or MT CS fallback call and - either the UE has completed a PS handover to GERAN or a CCO to GERAN or the UE has been redirected to GERAN	
	and has entered dedicated mode, and if DTM is supported, - the UE hasn't yet sent or received any NAS signalling on the target GERAN cell	
GERAN CS call (G4)	The UE was in GERAN CS fallback and the UE has established a CS call or the UE was in E-UTRAN connected and has performed a handover to GERAN with SRVCC.	
GERAN deregistered	The UE is:	
(G5)	- camped on a GERAN cell, and idle and	
	- not registered GPRS/non-GPRS services	
1xRTT state 1 (1x1)	FFS	
HRPD state 1 (H1)	FFS	

6.5 Default RRC message and information element contents

The default RRC message and information element contents specified in this subclause apply to all Signalling test cases defined in TS 36.523-1 [18] unless otherwise specified, in addition to the default RRC message and information element contents specified in subclause 4.6 of this specification.

6.5.1 Measurement information elements

MeasConfig-DEFAULT

Table 6.5.1-1: MeasConfig-DEFAULT

Derivation Path: 36.331, clause 6.3.5			
Information Element	Value/remark	Comment	Condition
MeasConfig-DEFAULT ::= SEQUENCE {			
measObjectToRemoveList	Not present		
measObjectToAddModList	Not present		
reportConfigToRemoveList	Not present		
reportConfigToAddModList	Not present		
measIdToRemoveList	Not present		
measIdToAddModList	Not present		
quantityConfig	QuantityConfig- DEFAULT		
measGapConfig	Not present		
	MeasGapConfig-GP1		INTER- FREQ, UTRAN
	MeasGapConfig-GP2		GERAN, INTER- RAT
s-Measure	Not present		
preRegistrationInfoHRPD	Not present		
speedStatePars	Not present		
}			

Condition Explanation	
-----------------------	--

INTER-FREQ	For E-UTRA inter-freq measurements
UTRAN	For inter-RAT measurements with UTRAN
GERAN	For inter-RAT measurements with GERAN
INTER-RAT	For inter-RAT measurements with UTRAN and GERAN

MeasGapConfig-GP1

Table 6.5.1-2: MeasGapConfig-GP1

Derivation Path: 36.331, clause 6.3.5			
Information Element	Value/remark	Comment	Condition
MeasGapConfig-GP1 ::= CHOICE {			
setup SEQUENCE {			
gapOffset CHOICE {			
gp0	30	TGRP = 40 ms	
}			
}			
}			

MeasGapConfig-GP2

Table 6.5.1-3: MeasGapConfig-GP2

Derivation Path: 36.331, clause 6.3.5			
Information Element	Value/remark	Comment	Condition
MeasGapConfig-GP2 ::= CHOICE {			
setup SEQUENCE {			
gapOffset CHOICE {			
gp1	30	TGRP = 80 ms	
}			
}			
}			

6.6 Default NAS message and information element contents

The default NAS message and information element contents specified in this subclause apply to all Signalling test cases defined in TS 36.523-1 [18] unless otherwise specified, in addition to the default NAS message and information element contents specified in subclause 4.7 of this specification.

6.6.1 Reference default EPS bearer contexts

The following table defines Reference default EPS bearer contexts. Default EPS bearer context1 is the default "default EPS bearer context" which is used in the common procedures and test cases where no particular default EPS bearer context is specified.

Table 6.6.1-1: Reference default EPS bearer contexts

Parameters	Reference default EPS bearer context #1	Reference default EPS bearer context #2	Reference default EPS bearer context #3
EPS QoS			
QCI	9	5	FFS
(Note 1)	(non-GBR QCI)	(non-GBR QCI)	
Maximum bit rate for uplink	64 kbps (Note 2)	64 kbps (Note 2)	FFS
Maximum bit rate for downlink	64 kbps (Note 2)	64 kbps (Note 2)	FFS
Guaranteed bit rate for uplink	64 kbps (Note 2)	64 kbps (Note 2)	FFS
Guaranteed bit rate for downlink	64 kbps (Note 2)	64 kbps (Note 2)	FFS
Maximum bit rate for uplink (extended)	0	0	FFS
Maximum bit rate for downlink (extended)	0	0	FFS
Guaranteed bit rate for uplink (extended)	0	0	FFS
Guaranteed bit rate for downlink (extended)	0	0	FFS
Negotiated QoS	Note 3, Note 4	Note 3, Note 4	FFS
Negotiated LLC SAPI	Note 4	Note 4	FFS
Radio priority	Note 4	Note 4	FFS
APN-AMBR	Not present	Not present	FFS
Configuration protocol	PPP	PPP	FFS

Note 1: For all non-GBR QCIs, the maximum and guaranteed bit rates shall be ignored.

6.6.2 Reference dedicated EPS bearer contexts

The following table defines Reference dedicated EPS bearer contexts. Dedicated EPS bearer context #1 is the default "dedicated EPS bearer context" which is used in the common procedures and test cases where no particular dedicated EPS bearer context is specified.

Note 2: According to TS 24.301, the UE ignores these parameters for a non-GBR QCI.

Note 3: Parameters included for UEs capable of UTRAN according to TS 34.123-3 clause 8.10.

Note 4: Parameters included for UEs capable of GERAN according to TS 51.010 subclause 40.5.

Table 6.6.2-1: Reference dedicated EPS bearer contexts

Dearer #1 Dearer #1 Dearer #2 Dearer #2 Dearer #3	Parameters	Reference dedicated EPS bearer context #1	Reference dedicated EPS bearer context #2	Reference dedicated EPS bearer context #3	Reference dec EPS bearer co
CFS QCS C (Rote 1)	Linked EPS bearer identity				Reference defa
CCI 1	EPS QoS	boardi mi	50010171	500.01 1/2	boaror n
Maximum bit rate for uplink 384 kbps 334 kbps 334 kbps 384 kbps 3		1	5	2	1
Maximum bit rate for downlink	(Note 1)	(GBR QCI)	(non-GBR QCI)	(GBR QCI)	(GBR QC
Maximum bit rate for uplink (Note 2) (Note 3) (Note 6) (Note 3) (Note 6) (Maximum bit rate for uplink	384 kbps	•	432 kbps	384 kbp
Cauranteed bit rate for 128 kbps 128 kbps 128 kbps (Note 2) 128 kbps (Note 2) 128 kbps (Note 2) 128 kbps 128 k		384 kbps	384 kbps	432 kbps	384 kbp
Causanteed bit rate for 128 kbps 128 kbps 128 kbps (Note 2)		128 kbps	128 kbps	432 kbps	128 kbp
Maximum bit rate for uplink (extended) 0 0 0 0 Maximum bit rate for downlink (extended) 0	Guaranteed bit rate for	128 kbps	128 kbps	432 kbps	128 kbp
Maximum bit rate for downlink (extended)	Maximum bit rate for uplink	0	· · · · · · · · · · · · · · · · · · ·	0	0
Quaranteed bit rate for uplink (extended)	Maximum bit rate for	0	0	0	0
Quaranteed bit rate for downlink (extended)	Guaranteed bit rate for	0	0	0	0
TFT	Guaranteed bit rate for	0	0	0	0
TFT operation code		ı	I	I	1
Ebit		"create new TFT"	"create new TFT"	"create new TFT"	"create new
Negotiated QoS Traffic Class Conversational See "PDP ContextDchFort.TE" (Note 3); See "PDP ContextDchFort.TE" (Note 6) See "PDP A32 kbps 384 kbp See "PDP ContextDchFort.TE" (Note 3); See "PDP context3" (Note 6) See "PDP ContextDchFort.TE" (Note 3); See "PDP context3" (Note 6) See "PDP ContextDchFort.TE" (Note 3); See "PDP context3" (Note 6) See "PDP	E bit	0	0	0	
Conversational See "PDP Conversational Conversati		1, 2	3	5	4
ContextDchForLTE" (Note 3); See "PDP context3" (Note 6)					
Delivery Order	Traffic Class	conversational	ContextDchForLTE" (Note 3); See "PDP context3"	conversational	conversation
ContextDchForLTE" (Note 3); See "PDP context3" (Note 6)	Dolivory Order	'no'		'no'	'no'
Delivery of erroneous SDU	Delivery Order	no	ContextDchForLTE" (Note 3); See "PDP context3"	no	no
ContextDchForLTE" (Note 3); See "PDP context3" (Note 6)	Delivery of erroneous SDU	'no'		'no'	'no'
ContextDchForLTE" (Note 3); See "PDP context3" (Note 6)	·		ContextDchForLTE" (Note 3); See "PDP context3" (Note 6)		
Maximum bit rate for uplink 384 kbps See "PDP ContextDchForLTE" (Note 3); See "PDP context3" (Note 6) 432 kbps 384 kbp Maximum bit rate for downlink 384 kbps See "PDP ContextDchForLTE" (Note 3); See "PDP context3" (Note 6) 432 kbps 384 kbp Residual BER 5*10 ⁻² See "PDP ContextDchForLTE" (Note 3); See "PDP ContextDchForLTE" (Note 3); See "PDP context3" (Note 6) 10 ⁻⁵ 5*10 ⁻²	Maximum SDU size	150	ContextDchForLTE" (Note 3); See "PDP context3"	1400	150
Maximum bit rate for downlink 384 kbps See "PDP ContextDchForLTE" (Note 3); See "PDP context3" (Note 6) 432 kbps 384 kbp Residual BER 5*10 ⁻² See "PDP See "	Maximum bit rate for uplink	384 kbps	See "PDP ContextDchForLTE" (Note 3); See "PDP context3"	432 kbps	384 kbp
Residual BER 5*10 ⁻² See "PDP 10 ⁻⁵ 5*10 ⁻² ContextDchForLTE" (Note 3); See "PDP context3" (Note 6)		384 kbps	See "PDP ContextDchForLTE" (Note 3); See "PDP context3"	432 kbps	384 kbp
	Residual BER	5*10 ⁻²	See "PDP ContextDchForLTE" (Note 3); See "PDP context3"	10 ⁻⁵	5*10 ⁻²
	SDU error ratio	10 ⁻²	See "PDP	7*10 ⁻³	10 ⁻²

		ContextDchForLTE"		
		(Note 3);		
		See "PDP context3"		
-		(Note 6)	400	
Transfer delay	80 ms	See "PDP	130 ms	80 ms
		ContextDchForLTE"		
		(Note 3); See "PDP context3"		
		(Note 6)		
Traffic Handling priority	0	See "PDP	0	0
Traine Flanding priority	O	ContextDchForLTE"	O	
		(Note 3);		
		See "PDP context3"		
		(Note 6)		
Guaranteed bit rate for	0	See "PDP	0	0
uplink		ContextDchForLTE"		
		(Note 3);		
		See "PDP context3"		
		(Note 6)		
Guaranteed bit rate for	0	See "PDP	0	0
downlink		ContextDchForLTE"		
		(Note 3); See "PDP context3"		
Cignalling Indication	0	(Note 6) See "PDP	0	0
Signalling Indication	U	ContextDchForLTE"	U	0
		(Note 3);		
		See "PDP context3"		
		(Note 6)		
Source Statistics Descriptor	0	See "PDP	0	1
	-	ContextDchForLTE"	•	
		(Note 3);		
		See "PDP context3"		
		(Note 6)		
Maximum bit rate for	0	See "PDP	0	0
downlink (extended)		ContextDchForLTE"		
		(Note 3);		
		See "PDP context3"		
		(Note 6)	_	
Guaranteed bit rate for	0	See "PDP	0	0
downlink (extended)		ContextDchForLTE"		
		(Note 3); See "PDP context3"		
		(Note 6)		
Maximum bit rate for uplink	0	See "PDP	0	0
(extended)	U	ContextDchForLTE"	O	0
(exterided)		(Note 3);		
		See "PDP context3"		
		(Note 6)		
Guaranteed bit rate for	0	See "PDP	0	0
uplink (extended)	•	ContextDchForLTE"	•	
' '		(Note 3);		
		See "PDP context3"		
		(Note 6)		
Negotiated LLC SAPI	3 (Note 6)	See "PDP context3"	-	3 (Note 6
		(Note 6)		
Radio priority	1 (Note 6)	See "PDP context3"	-	1 (Note 6
		(Note 6)		
Protocol configuration	-	-	-	-
options				

Note 1: For all non-GBR QCIs, the maximum and guaranteed bit rates shall be ignored.

Note 2: According to TS 24.301, the UE ignores these parameters for a non-GBR QCI.

Note 3: Parameters included for UEs capable of UTRAN according to TS 34.123-3 clause 8.10 (table 8.10.1 and 8.10.2).

Note 5: This row refers to the reference packet filters defined in the tables below. For each reference dedicated EPS bearer conte of reference packet filter numbers is provided.

Note 6: Parameter included for UEs capable of GERAN; when value is not provided then value from TS 51.010 subclause 40.5 is

Table 6.6.2-2: Reference packet filter #1

Information Element	Value/Remark	Comment	Condition
Identifier	00010000	DL only filter,ID=0	
Evaluation precedence	(0 0 0 0 0 0 0 0) + EPS	0 to 7	
	Bearer ID - 6		
Component type 1 ID	00010000	IPv4 remote	remotelPv
		address type	4
	0010000	IPv6 remote	remotelPv
		address type	6
Component type 1 Value	remoteAddress	See note 1	remotelPv
	255.255.255		4
	remoteAddress	See note 1	remotelPv
	ff:ff:ff:ff:ff:ff:ff:		6
	ff:ff:ff:ff:ff:ff:ff		
Component type 2 ID	0101000	Single remote port	
		type	
Component type 2 Value	31 160 + EPS Bearer ID -		
	6		
Component type 3 ID	00110000	Protocol	
		identifier/Next	
		header type	
Component type 3 Value	17	UDP	

Note 1: remoteAddress should be set to the address of an IP server able to send a flow of downlink IP/UDP packets to the UE. remoteIPv4 applies if the UE has acquired an IPv4 address only, remoteIPv6 applies if the UE has acquired an IPv6 address only, or both an IPv6 and an IPv4 address.

Table 6.6.2-3: Reference packet filter #2

Derivation path: 24.008 table 10.5.162			
Information Element	Value/Remark	Comment	Condition
Identifier	00100001	UL only filter, ID=1	
Evaluation precedence	(0 0 0 0 0 0 0 0) + EPS Bearer ID - 6 + 8	8 to 15	
Component type 1 ID	00010000	IPv4 remote address type	remotelPv 4
	0010000	IPv6 remote address type	remotelPv 6
Component type 1 Value	remoteAddress 255.255.255.255	See note 1	remotelPv 4
	remoteAddress ff:ff:ff:ff:ff:ff:ff: ff:ff:ff:ff:ff:ff	See note 1	remotelPv 6
Component type 2 ID	01010000	Single remote port type	
Component type 2 Value	61 000 + EPS Bearer ID - 6		
Component type 3 ID	00110000	Protocol identifier/Next header type	
Component type 3 Value	17	UDP	

Note 1: remoteAddress should be set to the address of an IP server able to process a flow of uplink IP/UDP packets received from the UE. When configured together with packet filter #1, remoteAddress is the same as that for packet filter #1. remoteIPv4 applies if the UE has acquired an IPv4 address only, remoteIPv6 applies if the UE has acquired an IPv6 address.

Table 6.6.2-4: Reference packet filter #3

Information Element	Value/Remark	Comment	Condition
Identifier	00110010	Bidirectional filter,	
		ID=2	
Evaluation precedence	00001111	Lowest priority	
Component type 1 ID	00010000	IPv4 remote	remotelPv
		address type	4
	0010000	IPv6 remote	remotelPv
		address type	6
Component type 1 Value	remoteAddress	See note 1	remotelPv
	255.255.255.255		4
	remoteAddress	See note 1	remotelPv
	ff:ff:ff:ff:ff:ff:ff:		6
	ff:ff:ff:ff:ff:ff:ff		

Note 1: remoteAddress should be set to the address of an IP server able to process a uplink IP packets from the UE and transmit downlink IP packets to the UE. remoteIPv4 applies if the UE has acquired an IPv4 address only, remoteIPv6 applies if the UE has acquired an IPv6 address only, or both an IPv6 and an IPv4 address.

Table 6.6.2-5: Reference packet filter #4

Information Element	Value/Remark	Comment	Condition
Identifier	00110011	Bidirectional,ID=3	
Evaluation precedence	(0 0 0 0 0 0 0 0) + EPS Bearer ID - 6	0 to 7	
Component type 1 ID	01010001	Remote port range type	
Component type 1 Value	media port	SS speech media port as used in the SDP negotiation (RTP remote port); see Note 1	
	media port + 1	RTCP remote port; see Note 1	
Component type 2 ID	00110000	Protocol identifier/Next header type	
Component type 2 Value	17	UDP	

Note 1: Acc. to TS 26.114 and RFC 4566 a "media port" can be understood as the transport port to which a media stream is sent.

Table 6.6.2-6: Reference packet filter #5

Information Element	Value/Remark	Comment	Condition
Identifier	00110100	Bidirectional,ID=4	
Evaluation precedence	(0 0 0 0 0 0 0 0) + EPS	0 to 7	
	Bearer ID – 6		
Component type 1 ID	01010001	Remote port	
		range type	
Component type 1 Value	media port	SS video media	
		port as used in the	
		SDP negotiation	
		(RTP remote	
		port); see Note 1	
	media port + 1	RTCP remote	
		port; see Note 1	
Component type 2 ID	00110000	Protocol	
		identifier/Next	
		header type	
Component type 2 Value	17	UDP	
Note 1: Acc. to TS 26.114 and RFC 4566 a "n stream is sent.			ch a media

6.6A Default SMS over SGs message and information element contents

The default SMS over SGs message and information element contents specified in this subclause apply to all SMS over SGs Signalling test cases defined in TS 36.523-1 [18] unless otherwise specified. All the messages and information elements are listed in alphabetical order.

6.6A.1 CM-sublayer messages

- CP-ACK

This message is sent between the SS and the UE, in both directions.

Table 6.6A.1-1: Message CP-ACK

Derivation Path: 24.011 clause 7.2.2			
Information Element	Value/remark	Comment	Condition
Protocol discriminator	'1001'B	SMS messages	
Transaction identifier	Any allowed value		
Message type	'00000100'B	CP-ACK	

- CP-DATA

This message is sent between the SS and the UE, in both directions.

Table 6.6A.1-2: Message CP-DATA

Value/remark	Comment	Condition
'1001'B	SMS messages	
Any allowed value		
'0000001'B	CP-DATA	
RP-ACK RPDU or RP- DATA RPDU (as		
	'1001'B Any allowed value '00000001'B RP-ACK RPDU or RP-	'1001'B SMS messages Any allowed value '00000001'B CP-DATA RP-ACK RPDU or RP-DATA RPDU (as

6.6A.2 Short Message Relay Layer (SM-RL) messages

- RP-ACK RPDU

This message is sent between the SS and the UE, in both directions.

Table 6.6A.2-1: Message RP-ACK RPDU

Derivation Path: 24.011 clause 7.3.3			
Information Element	Value/remark	Comment	Condition
RP-Message Type	'010'B	RP-ACK_PDU uplink	Uplink_SMS
	'011'B	RP-ACK_PDU downlink	Downlink_S MS
RP-Message Reference	Same as in associated (preceding) RP-DATA RPDU		
RP-User Data	Not present or any allowed value		Uplink_SMS
	Not present		Downlink_S MS

Condition	Explanation
Uplink_SMS	This condition applies when the message is sent by the UE to the SS.
Downlink_SMS	This condition applies when the message is sent by the SS to the UE.

- RP-DATA RPDU

This message is sent between the SS and the UE, in both directions.

Table 6.6A.2-2: Message RP-DATA RPDU

Derivation Path: 24.301 clause 8.2.23			
Information Element	Value/remark	Comment	Condition
RP-Message Type	'001'B	RP-DATA_PDU downlink	Downlink_S MS
	'000'B	RP-DATA_PDU uplink	Uplink_SMS
RP-Message Reference	Any allowed value		
RP-Originator Address	Any allowed value	originating Service Centre address	Downlink_S MS
	Not present		Uplink_SMS
RP-Destination Address	Not present		Downlink_S MS
	Any allowed value	destination Service Centre address	Uplink_SMS
RP-User Data	SMS-SUBMIT or SMS- DELIVER (as set in the test case)		

Condition	Explanation
Uplink_SMS	See the definition below table 6.6A.2-1.
Downlink SMS	See the definition below table 6.6A.2-1.

6.6A.3 Short Message Transfer Layer (SM-TL) messages

- SMS-DELIVER

This message is sent by the SS to the UE.

Table 6.6A.3-1: Message SMS-DELIVER

Derivation Path: 23.040 clause 9.2.2.1 Information Element	Value/remark	Comment	Condition
TP-MTI	'00'B	SMS-DELIVER	Condition
TP-MMS	'1'B	No more	
	. 5	messages are	
		waiting for the MS	
		in this SC	
TP-RP	Any allowed value		
TP-UDHI	'0'B		
TP-SRI	'0'B		
TP-OA	Any allowed value		
TP-PID	'00000000'B		
TP-DCS	Any allowed value		
TP-SCTS	Any allowed value		
TP-UDL	160		
TP-UD (140 octets)	text of message (160	The 160	
	characters)	characters in TP-	
		UD shall include	
		at least one	
		occurrence of	
		each character in	
		the default	
		alphabet (see	
		3GPP TS 23.038,	
		clause 6.2.1).	

- SMS-SUBMIT

This message is sent by the UE to the SS.

Table 6.6A.3-2: Message SMS-SUBMIT

Derivation Path: 23.040 clause 9.2.2.2			
Information Element	Value/remark	Comment	Condition
TP-MTI	'01'B	SMS-SUBMIT	
TP-RD	Any allowed value		
TP-VPF	Any allowed value		
TP-RP	Any allowed value		
TP-UDHI	Not present or any		
	allowed value		
TP-SRR	Not present or any		
	allowed value		
TP-MR	Any allowed value		
TP-DA	Any allowed value		
TP-PID	'00000000'B		
TP-DCS	Any allowed value		
TP-VP	Not present or any		
	allowed value		
TP-UDL	160		
TP-UD (140 octets)	text of message (160		
	characters)		

6.6B Reference radio bearer configurations

6.6B.1 SRB and DRB parameters and combinations

6.6B.1.1 SRB and DRB parameters

6.6B.1.1.1 Physical Layer configurations

Table 6.6B.1.1.1-1: PhysicalConfigDedicated-DEFAULT

Derivation Path: TS 36.508 clause 4.8.2.1.6, Table 4.8.2.1.6-1					
Information Element	Value/remark	Comment	Condition		
PhysicalConfigDedicated-DEFAULT ::= SEQUENCE {					
cqi-ReportConfig	CQI-ReportConfig- DEFAULT using condition CQI_PERIODIC	See subclause 4.6.3	SRB1 or RBC or RBC-HO or HO-TO- EUTRA		
soundingRS-UL-ConfigDedicated	SoundingRS-UL- ConfigDedicated- DEFAULT	See subclause 4.6.3	SRB1 or RBC or RBC-HO or HO-TO- EUTRA		
}			EUIRA		

Condition	Explanation
	Used at configuration of SRB1 during RRC connection (re-)establishment
	Used at configuration of a radio bearer combination during SRB2+DRB establishment
2TX	Used for cells with two antenna ports
RBC-HO	Used during Handover
HO-TO-EUTRA	Inter-RAT handover to E-UTRA

6.7 Timer Tolerances

The timer tolerances specified for the test environment in this subclause apply to all Signalling test cases defined in TS 36.523-1 [18] unless otherwise specified

All the timers used during testing are within a tolerance margin given by the equation below. If for a specific test a different tolerance value is required then this should be specified in the relevant test document (i.e. the document where the test is described).

Timer tolerance = 10%, or $5 \times RTT$, whichever value is the greater.

Where RTT = 8 TTIs for FDD, and RTT= Maximum RTT from Table 6.7-1 for TDD (see Note).

NOTE: Since the exact RTT for TDD varies depending on the UL/DL configurations and subframe number [29], the maximum RTT is defined in Table 6.7-1.

Table 6.7-1: Maximum RTT for TDD UL/DL configurations

UL/DL Configuration	Maximum RTT (TTIs)			
0	10			
1*	11			
2	12			
3	15			
4	16			
5	TBD			
6	11			
*Note: Default UL/DL configuration defined in Table 4.6.3-				
23 of TS 36.508				

7 Test environment for RRM tests

This section contains all the exceptions of the common test parameters specified in clause 4 for specific needs of test cases defined in TS 36.521-3 [34], TS 34.121-1 [50] and TS 34.122[51]. Exceptions specified in clause 7 overwrite the parameter settings of clause 4; exceptions defined within the test cases overwrite parameter settings of clause 4 and 7.

This clause describes UE test states which can be used in the initial condition for TS 36.521-3 [34], TS 34.121-1 [50] and TS 34.122[51].

7.1 Requirements of *test* equipment

<void>

7.2 RRM Reference system configurations

7.2.1 Common parameters for simulated E-UTRA cells

7.2.1.1 Combinations of system information blocks

<void>

7.2.1.2 Scheduling of system information blocks

<void>

7.2.1.3 Common contents of system information messages

- SystemInformationBlockType 2

As defined in Table 4.4.3.3-1 with the following exceptions:

Table 7.2.1.3-1: SystemInformationBlockType2 exceptions

Derivation Path: Clause 4.4.3.3, Table 4.4.3.3-1 SystemInformationBlockType2					
Information Element	Value/remark	Comment	Condition		
mbsfn-SubframeConfigList ::= SEQUENCE (SIZE			FDD		
(1maxMBSFN-Allocations)) OF SEQUENCE {					
radioframeAllocationPeriod	n1	Every radio frame is with MBSFN subframe			
radioframeAllocationOffset	0	Capitalio			
subframeAllocation CHOICE {					
oneFrame	'111111'B	Subframe 1, 2, 3, 6, 7, 8 is used for MBSFN			
}					
}					

- SystemInformationBlockType3

As defined in Table 4.4.3.3-2 with the following exceptions:

Table 7.2.1.3-2: SystemInformationBlockType3 exceptions

Derivation Path: Clause 4.4.3.3, Table 4.4.3.3-2 SystemInformationBlockType3					
Information Element	Value/remark	Comment	Condition		
neighCellConfig	'10'B (The MBSFN		FDD with E-		
	subframe allocations of		UTRA FDD		
	all neighbour cells are		neighbour		
	identical to or subsets of		cell		
	that in the serving cell)				

- SystemInformationBlockType5

As defined in Table 4.4.3.3-3 with the following exceptions:

Table 7.2.1.3-3: SystemInformationBlockType5 exceptions

Derivation Path: Clause 4.4.3.3, Table 4.4.3.3-4 SystemInformationBlockType5						
Information Element	Comment	Condition				
neighCellConfig[n]	'10'B (The MBSFN		FDD with E-			
	subframe allocations of		UTRA FDD			
	all neighbour cells are		neighbour			
	identical to or subsets of		cell			
	that in the serving cell)					
	'11'B (Different UL/DL		FDD with E-			
	allocation in neighbouring		UTRA TDD			
	cells for TDD compared		neighbour			
	to the serving cell)		cell,			
			TDD with E-			
			UTRA FDD			
			neighbour			
			cell			

- SystemInformationBlockType7

As defined in Table 4.4.3.3-6 with the following exceptions:

Table 7.2.1.3-4: SystemInformationBlockType7 exceptions

Derivation Path: Clause 4.4.3.3, Table 4.4.3.3-6 SystemInformationBlockType7					
Information Element	Value/remark	Comment	Condition		
commonInfo SEQUENCE {					
p-MaxGERAN	33 (33 dBm)		GSM 400 &		
			GSM 900 &		
			GSM 850 &		
			GSM 700		
	30 (30 dBm)		DCS 1800 &		
			PCS 1900		
}					

7.2.2 Common parameters for simulated GERAN cells

7.2.2.1 Mapping of GERAN cells

Unless otherwise stated, GERAN cells take the default values defined in Table 7.2.2.1-1.

Table 7.2.2.1-1: Mapping of GERAN cells with TS 51.010-1 [25]

GERAN cell	Frequency	GERAN cell in TS 51.010-1, clause 40
Cell 24	f11	Cell A
Cell 25	f12	Cell D
Cell 26	f13	Cell B

7.2A Generic RRM procedures

7.2A.1 UE RRM test states

Table 7.2A.1-1: The E-UTRAN UE states

		RRC	ЕСМ	ЕММ	ESM	UE Test Mode
State 2A-RF	3 ,	Refer to Table 5.2A.1-1	Refer to Table 5.2A.1-1	Refer to Table 5.2A.1-1	Refer to Table 5.2A.1-1	Refer to Table 5.2A.1-1
State 3A-RF	Generic Default RB Established, UE Test Mode Activated	Refer to Table 5.2A.1-1	Refer to Table 5.2A.1-1	Refer to Table 5.2A.1-1	Refer to Table 5.2A.1-1	Refer to Table 5.2A.1-1
State 3B-RF	Generic Default RB Established, UE Test Mode Activated, pre- registered on HRPD	RRC_CONNECTED 1 data radio bearer configured	ECM-CONNECTED	EMM-REGISTERED	1 default EPS bearer context active	Active

7.2A.2 UE Registration, UE Test Mode Activated (State 2A-RF)

As described in clause 5.2A.1A.

7.2A.3 Generic Default Radio Bearer Establishment, UE Test Mode Activated (State 3A-RF)

As described in clause 5.2A.2.

7.2A.4 Generic Default Radio Bearer Establishment, UE Test Mode Activated, pre-registration on HRPD (State 3B-RF)

Editor's note: This section is incomplete. The following aspects are either missing or not yet determined:

Other than UATI Request message and UATI Assignment message are FFS

7.2A.4.1 Initial conditions

System Simulator:

- Cell 1
- Cell 1 is transmitting SystemInformationBlockType8

User Equipment:

- The Test USIM shall be inserted.

7.2A.4.2 Definition of system information messages

As described in clause 4.5.2B.2.

7.2A.4.3 Procedure

Table 7.2A.4.3-1: UE registration with default EPS bearer establishment, test mode activation and HRPD pre-registration procedures (state 1 to state 3B-RF)

Step	Procedure	Message Sequence		Message Sequence
		U-S		Message
1 to	Steps 1 to 19 as specified in the procedure in	-	-	
19	clause 5.2A.1A.3 take place.			
20 to	Same procedure for steps 17 to 30D as			
37	specified in the procedure in clause 4.5.2B.3.			

7.2A.4.4 Specific message contents

As described in clauses 4.5.2B.4 and 7.2A.2.

7.2A.5 Procedure to configure SCC

As described in clause 5.2A.4.

7.2A.6 Exceptions for felCIC tests

As described in clause 5.2A.5.

7.2B Other generic RRM procedures

7.2B.1 Tracking area updating procedure

The procedure is defined in table 7.2B.1-1.

Table 7.2B.1-1: Tracking area updating procedure

Step	Procedure		Message Sequence		
		U-S	Message		
1	The SS transmits system information on the cell specified in the test case.	<	RRC: SYSTEM INFORMATION (BCCH)		
-	EXCEPTION: If all EPS bearer contexts are inactive in UE, for Rel-8 and Rel-9, steps 2 to 8a are optional and depend on UE implementation. If all EPS bearer contexts are inactive in UE, a Rel-10 or higher UE directly starts attach procedure from step 9a.	-	-		
2	The UE transmits an RRCConnectionRequest message on the cell specified in the test case.	>	RRC: RRCConnectionRequest		
3	The SS transmits an <i>RRCConnectionSetup</i> message.	<	RRC: RRCConnectionSetup		
4	The UE transmits an RRCConnectionSetupComplete message to confirm the successful completion of the connection establishment and a TRACKING AREA UPDATE REQUEST message is sent to update the registration of the actual tracking area.	>	RRC: RRCConnectionSetupComplete NAS: TRACKING AREA UPDATE REQUEST		
-	EXCEPTION: If all EPS bearer contexts are marked as inactive in the EPS bearer context status IE included in the TRACKING AREA UPDATE REQUEST message then, events described in steps 5a to 26a. Otherwise, events described in steps 5 to 7.	-	-		
5	The SS responds with TRACKING AREA UPDATE ACCEPT message.	<	RRC: DLInformationTransfer NAS: TRACKING AREA UPDATE ACCEPT		
6	The UE transmits a TRACKING AREA UPDATE COMPLETE	>	RRC: ULInformationTransfer NAS: TRACKING AREA UPDATE COMPLETE		
7	The SS transmits an RRCConnectionRelease message to release RRC connection and move to RRC_IDLE.	<	RRC: RRCConnectionRelease		
5a	The SS responds with TRACKING AREA UPDATE REJECT message with cause #40 (No EPS bearer context activated) to force attach the UE.	<	RRC: DLInformationTransfer NAS: TRACKING AREA UPDATE REJECT		
6a	EXCEPTION: Step 7a describes the behaviour that depends on UE behaviour (Note 3).	-	-		
7a	The SS transmits an RRCConnectionRelease message to release RRC connection and move to RRC_IDLE.	<	RRC: RRCConnectionRelease		
-	EXCEPTION: Step 8a describes a behaviour which depends on the UE capability	-	-		
8a	IF NOT pc_Auto_PDN_Connectivity, the user initiates an attach by MMI or by AT command (NOTE 4).	-	-		
9a to 27a	Steps 2 to 20 of the generic UE Registration procedure (5.2A.1A.3) take place to complete the Attach procedure	-	-		
	 The periodic tracking area updating timer T34 procedure (TS 36.508 clause 4.7.2). The SS does not initiate authentication and NA performed (reuse of keys allocated during the 	AS SECL	JRITY MODE COMMAND are not		

NOTE 3: The SS waits for 1.5 second to receive the Attach Request on the existing RRC Connection. In case Attach Request is not received within 1.5 second, existing RRC Connection is released.

NOTE 4: The request is assumed to be triggered by AT command AT+CGDCONT=1,"IP" followed by AT+CGACT=1.

Specific message contents

Table 7.2B.1-2: TRACKING AREA UPDATE ACCEPT (Step 5)

Derivation Path: 36.508 Table 4.7.2-24			
Information Element	Value/remark	Comment	Condition
EPS network feature support	'0000 0000'B	IMS voice over PS session in S1 mode not supported	
Additional update result	Not present		

7.3 Default RRC message and information elements contents

7.3.1 Contents of RRC messages

FFS.

7.3.2 Radio resource control information elements

Editor's note: Unless otherwise stated in the test parameters or messages exceptions in the respective test cases in TS 36.521-3 [34], PRACH configuration index and exceptional message as specified in Table 7.3.2-1 is used.

As defined in clause 4.6.3 with the following exceptions:

Table 7.3.2-1: PRACH-Config-DEFAULT

Derivation Path: Clause 4.6.3 Table 4.6.3-7			
Information Element	Value/remark	Comment	Condition
PRACH-Config-DEFAULT ::= SEQUENCE {			
prach-ConfigIndex	3		TDD
}			

Condition	Explanation
TDD	TDD cell environment

Table 7.3.2-2: RadioResourceConfigCommonSCell-r10-DEFAULT

Derivation Path: Clause 4.6.3 Table 4.6.3-13A			
Information Element	Value/remark	Comment	Condition
RadioResourceConfigCommonSCell-r10 ::= SEQUENCE {			
mbsfn-SubframeConfigList-r10 SEQUENCE (SIZE (1maxMBSFN-Allocations)) OF SEQUENCE {			FDD
radioframeAllocationPeriod	n1	Every radio frame is with MBSFN subframe	
radioframeAllocationOffset	0		
subframeAllocation CHOICE {			
oneFrame	'111111'B	Subframe 1, 2, 3, 6, 7, 8 is used for MBSFN	
}			
}			
ul-Configuration-r10	Not Present		

Condition	Condition	Explanation
-----------	-----------	-------------

FDD	FDD cell environment
טט ון	I DD cell environment

Table 7.3.2-3: PhysicalConfigDedicatedSCell-r10-DEFAULT

Derivation Path: Clause 4.6.3 Table 4.6.3-6A			
Information Element	Value/remark	Comment	Condition
PhysicalConfigDedicatedSCell-r10 ::= SEQUENCE {			
ul-Configuration-r10	Not Present		
}			

7.3.3 Measurement information elements

As defined in clause 4.6.6 with the following exceptions:

Table 7.3.4-1: MeasObjectEUTRA-GENERIC (Freq)

Derivation Path: Clause 4.6.6, Table 4.6.6-2			
Information Element	Value/remark	Comment	Condition
neighCellConfig	10'B (The MBSFN		FDD with E-
	subframe allocations of		UTRA FDD
	all neighbour cells are		neighbour cell
	identical to or subsets of		
	that in the serving cell)		
	'11'B (Different UL/DL		FDD with E-
	allocation in neighbouring		UTRA TDD
	cells for TDD compared		neighbour cell,
	to the serving cell)		TDD with E-
			UTRA FDD
			neighbour cell

7.4 Default NAS message and information elements contents

7.5 Reference radio bearer configurations

7.5.1 SRB and DRB parameters

7.5.1.1 MAC configurations

As defined in clause 4.8.2.1.5 with the following exceptions:

Table 7.5.1.1-1: MAC-MainConfig-RBC

Derivation Path: Clause 4.8.2.1.5 Table 4.8.2.1.5	-1		
Information Element	Value/remark	Comment	Condition
MAC-MainConfig-RBC ::= SEQUENCE {			
mac-MainConfig-v1020SEQUENCE {			SCell_AddM od
sCellDeactivationTimer-r10	Not present		
extendedBSR-Sizes-r10	Not Present		
extendedPHR-r10	Not Present		
}			
}			

Condition Explanation	
SCell_AddMod	Addition or modification of Scell

Annex A (informative): Connection Diagrams

Definition of Terms

System Simulator or SS – A device or system, that is capable of generating simulated Node B signalling and analysing UE signalling responses on one or more RF channels, in order to create the required test environment for the UE under test. It will also include the following capabilities:


- 1. Measurement and control of the UE Tx output power through TPC commands
- 2. Measurement of Throughput
- 3. Measurement of signalling timing and delays
- 4. Ability to simulate UTRAN and/or E-UTRAN and/or GERAN signalling

Test System – A combination of devices brought together into a system for the purpose of making one or more measurements on a UE in accordance with the test case requirements. A test system may include one or more System Simulators if additional signalling is required for the test case. The following diagrams are all examples of Test Systems.

NOTE 1: The above terms are logical definitions to be used to describe the test methods used in the documents TS36.521-1, TS 36.523-1 and TS36.521-3 in practice, real devices called 'System Simulators' may also include additional measurement capabilities or may only support those features required for the test cases they are designed to perform.

NOTE 2: Components in the connection diagrams:

The components in the connection diagrams represent ideal components. They are intended to display the wanted signal flow. They don't mandate real implementations. An alternative to Figure A3 is shown below as an example: It is nearer to real implementations. The signal levels are the same as in Figure A3. The signal flow cannot be displayed as detailed as in Figure A.3.

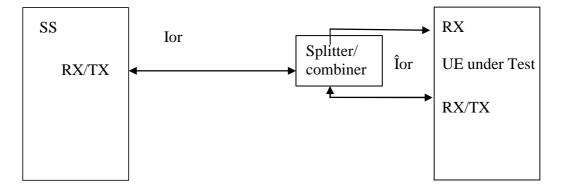

Alternative to Figure A.3

Connection: Each connection is displayed as a one or two sided arrow, showing the intended signal flow. In some cases, for some tests, some connections shown may not be necessary (for example UL RX connection for a second cell).

Circulator: The signal, entering one port, is conducted to the adjacent port, indicated by the arrow. The attenuation among the above mentioned ports is ideally 0 and the isolation among the other ports is ideally ∞ .

Splitter: a splitter has one input and 2 or more outputs. The signal at the input is equally divided to the outputs. The attenuation from input to the outputs is ideally 0 and the isolation between the outputs is ideally ∞ .

Combiner: a combiner has one output and 2 or more inputs. The signals at the inputs are conducted to the output, all with the same, ideally 0 attenuation. The isolation between the inputs is ideally ∞ .

Switch: contacts a sink (or source) alternatively to two or more sources (or sinks).

Fader: The fader has one input and one output. The MIMO fading channel is represented by several single faders (e.g. 8 in case of a MIMO antenna configuration 4x2) The correlation among the faders is described in TS 36.521-1 clause B.2.2. In some cases, for some tests, diagrams with fader(s) are referenced when no fading is required; in this case the fader(s) is omitted.

Attenuator: TBD

General considerations on connections for CA testing

Figures A.32<x> to A.37<x> and A.41<x> to A.46<x> contain connection diagrams for CA testing. Different options (<x> = a, b, c) have been defined for each connection, to consider different UE employments with respect to UE antenna connectors and signal mapping:

- a: Separate antenna connectors for each CC. An optional *Combiner* may be used in case the UE employs one common wide band antenna only for the receive diversity for both CC-s.
- b: Common antenna connectors for both CC-s with same UL transmit antenna connector.
- c: Common antenna connectors for both CC-s with different UL transmit antenna connectors.

The connections are referred in tests as *Figure group* which imply figures with the same Arabic numeral in the number, but different Latin letter extension (e.g. Figure A.32a, A.32b etc.). The selection of the connection option for testing is done according to the UE employment as appropriate.

Following symbolic is used in the connection diagrams to distinguish CC-s and paths:

- p: primary CC
- s: secondary CC
- $\langle j \rangle$: (integer) defines the receive antenna and the path to it $\langle j \rangle$ for a given CC
- $\langle i \rangle \langle j \rangle$: (integer) defines the path between transmit antenna $\langle i \rangle$ and receive antenna $\langle j \rangle$ for a given CC

The connections are general and support CA both in DL and UL. According to the test conditions, if the UL CA is not used, the "secondary CC of UL" in the connections may be ignored.

For contiguous CA, AWGN_p and AWGN_s affecting the same UE antenna connector can be unified to a single AWGN_p/s with higher bandwidth.

Figure A.1: Void

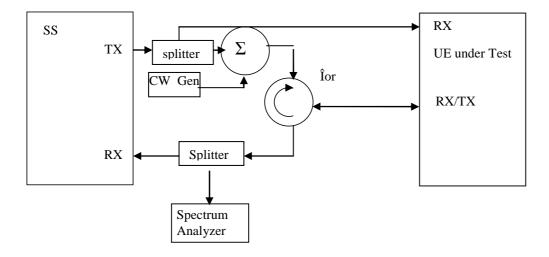


Figure A.2: Connection for Transmitter Intermodulation tests

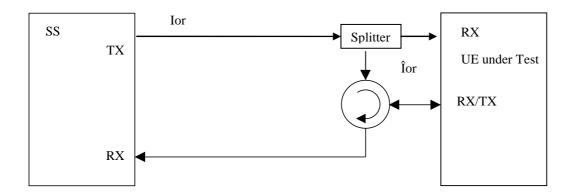


Figure A.3: Connection for basic single cell, RX and TX tests

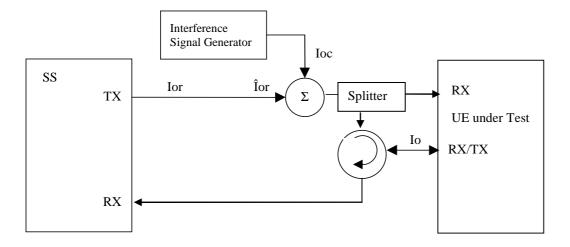


Figure A.4: Connection for Receiver tests with E-UTRA-Interference

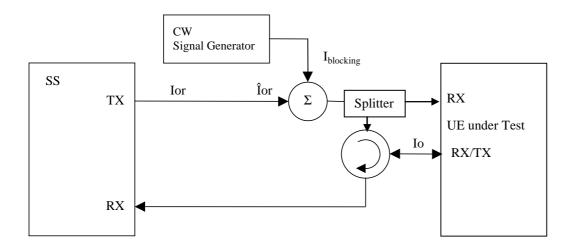


Figure A.5: Connection for Receiver tests with CW interferer

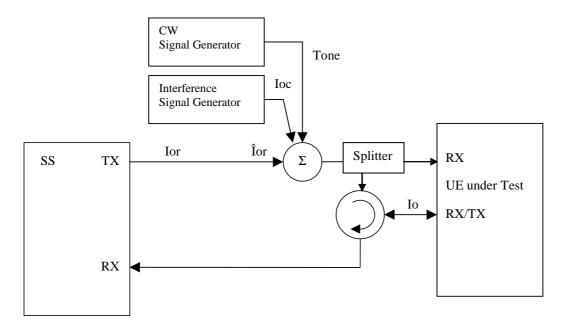


Figure A.6: Connection for Receiver tests with both E-UTRA Interference and additional CW signal

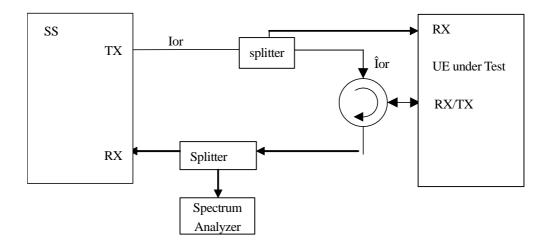


Figure A.7: Connection for TX-tests with additional Spectrum Analyzer

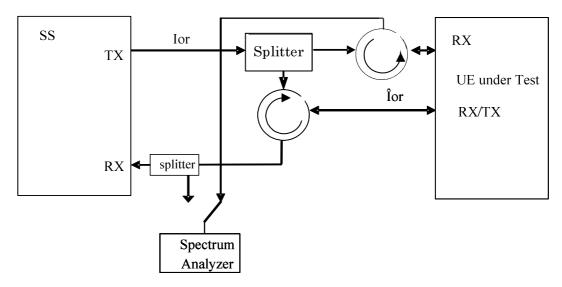


Figure A.8: Connection for RX-tests with additional Spectrum Analyzer

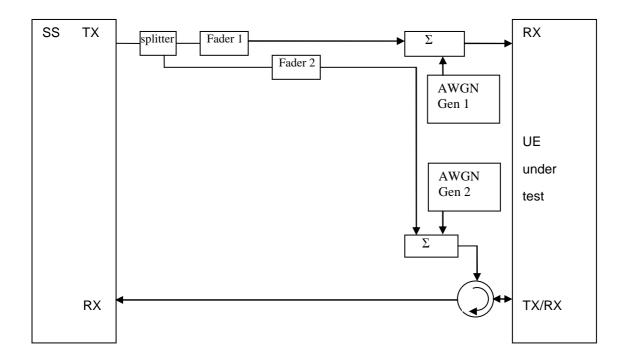


Figure A.9: Connection for RX performance tests with antenna configuration 1x2 (single antenna port)

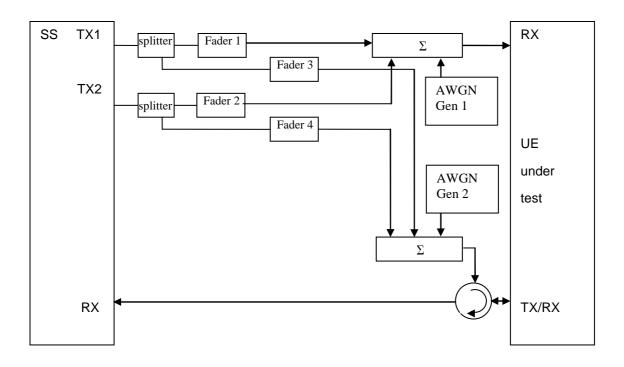


Figure A.10: Connection for RX performance tests with antenna configuration 2x2

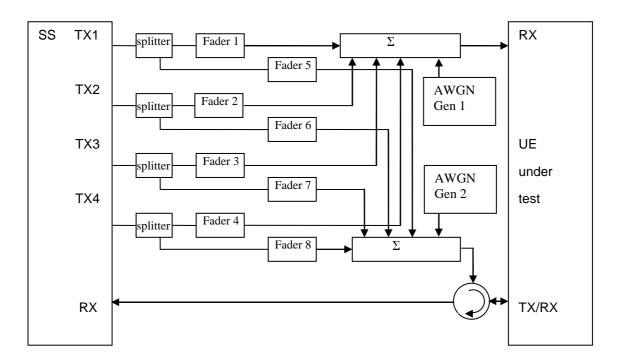


Figure A.11: Connection for RX performance tests with antenna configuration 4x2

Figure A.12: Void

Figure A.13: Void

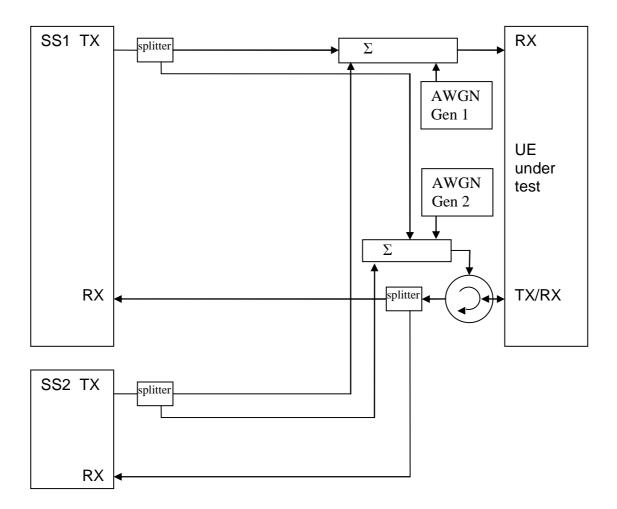


Figure A.14: Connection for 2 cells with static propagation and receive diversity

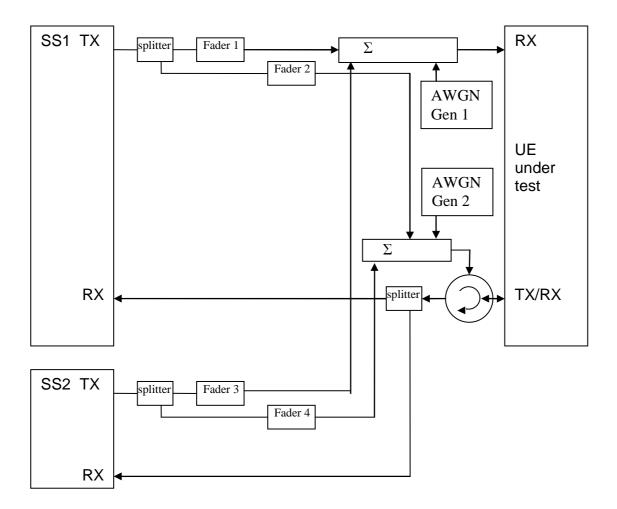


Figure A.15: Connection for 2 cells with multipath fading propagation and receive diversity

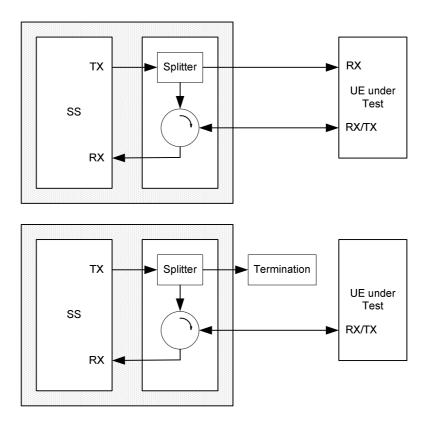


Figure A.16: Connection for single cell Signalling tests

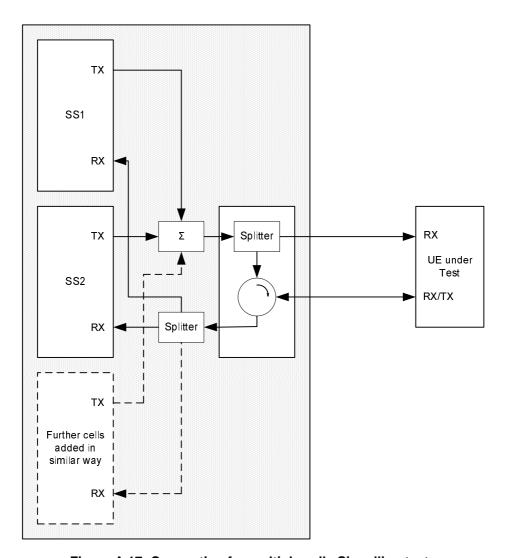


Figure A.17: Connection for multiple cells Signalling tests

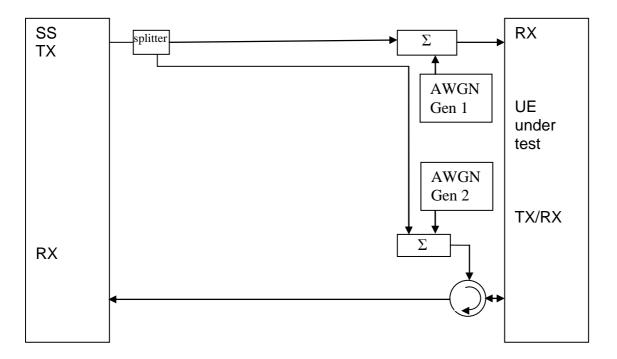


Figure A.18: Connection for 1 cell with antenna configuration 1x2 in static propagation conditions

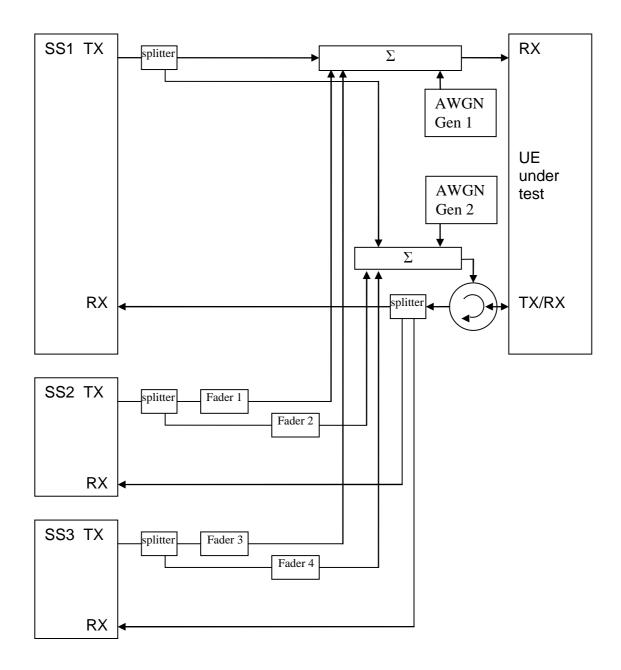


Figure A.19: Connection for 3 cells with antenna configuration 1x2 in static (cell 1) and multipath fading (cell 2 and 3) propagation conditions and receive diversity

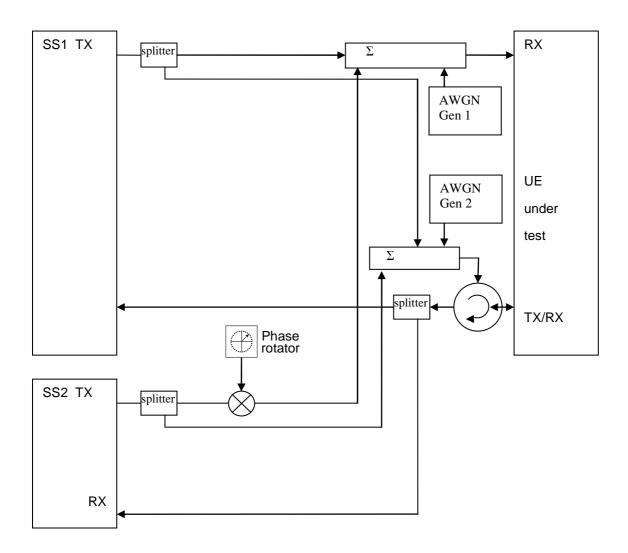


Figure A.20: Connection for 2 cells with static propagation and receive diversity with phase rotator (The frequency offset used in phase rotator is 5 Hz)

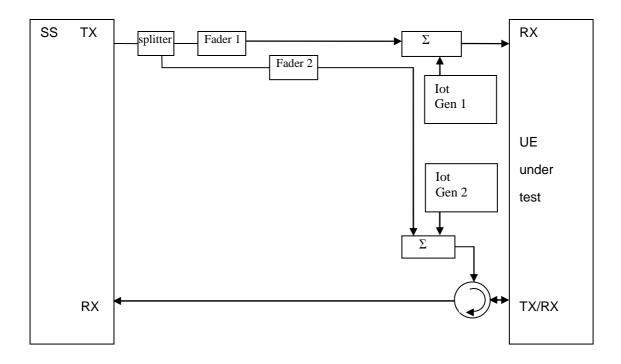


Figure A.21: Connection for frequency-selective interference with multipath fading propagation and receive diversity

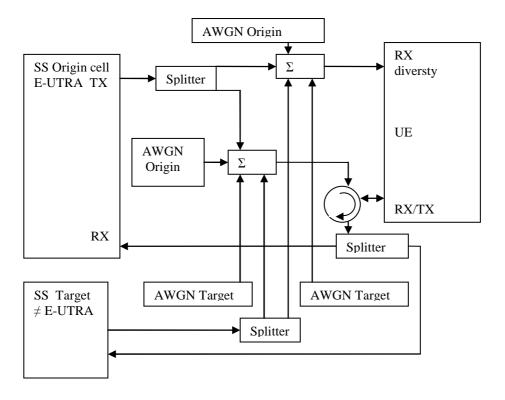


Figure A.22: Connection for 2 cells with static propagation condition. Origin (E-UTRAN) and target cell (≠ E-UTRAN) received with RX diversity

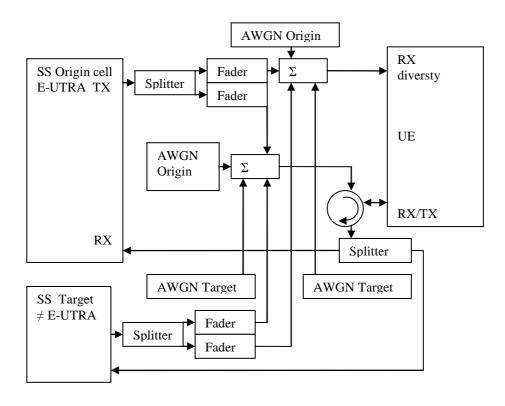


Figure A.23: Connection for 2 cells with multipath fading propagation condition. Origin (E-UTRAN) and target cell (≠ E-UTRAN) received with RX diversity

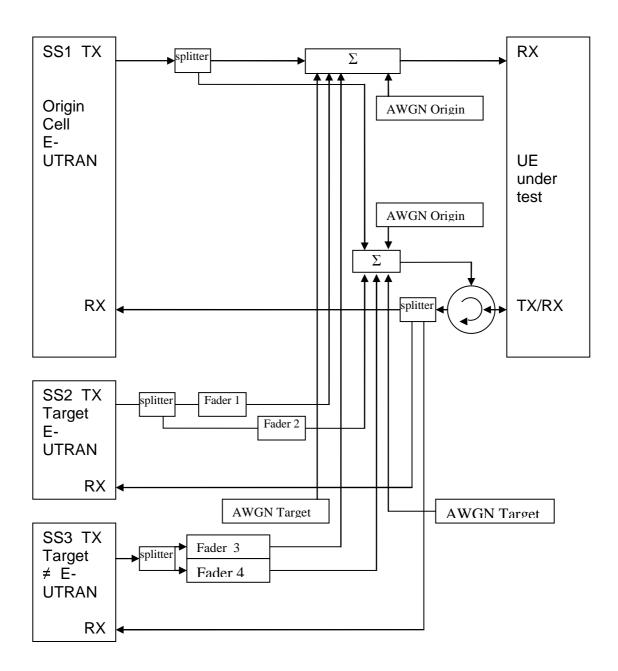


Figure A.24: Connection for 3 cells with antenna configuration 1x2 in static (cell 1) and multipath fading conditions (cell 2 and 3) and multiple RAT and receive diversity

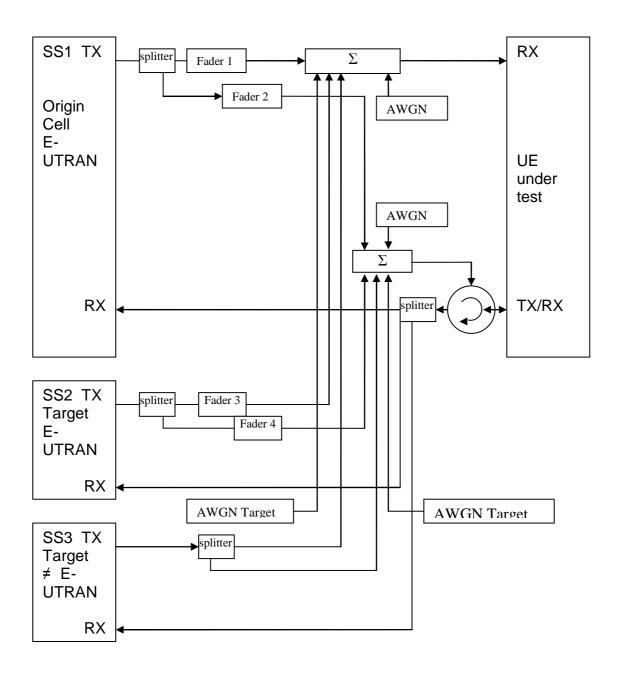


Figure A.25: Connection for 3 cells with antenna configuration 1x2 in multipath fading (cell 1 and 2) and multiple RAT (cell 3 static) and receive diversity

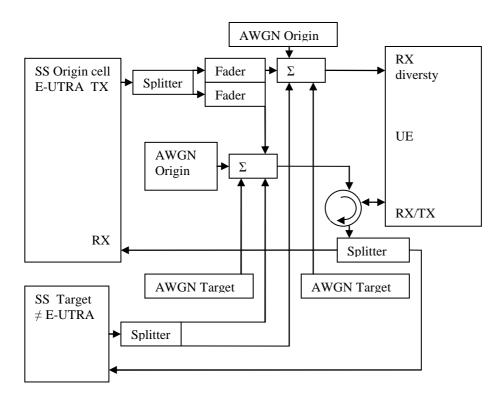


Figure A.26: Connection for 2 cells. Origin (E-UTRAN, multipath fading) and target cell (≠ E-UTRAN, static) received with RX diversity

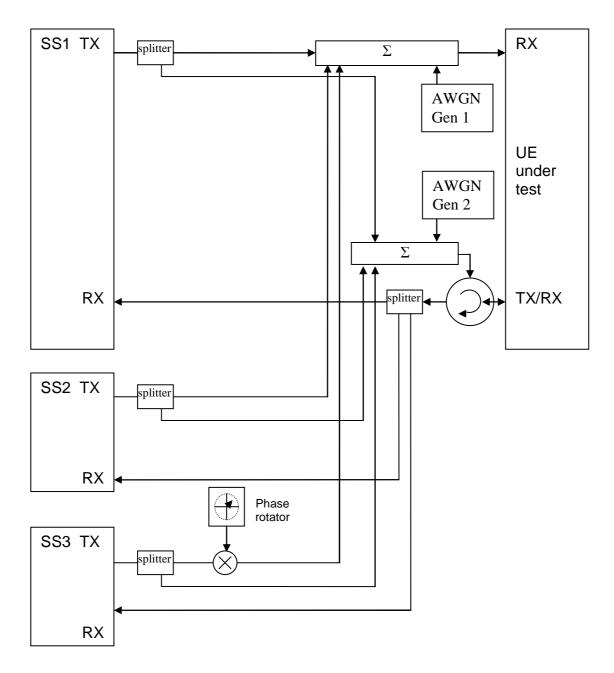


Figure A.27: Connection for 3 cells with static propagation and receive diversity

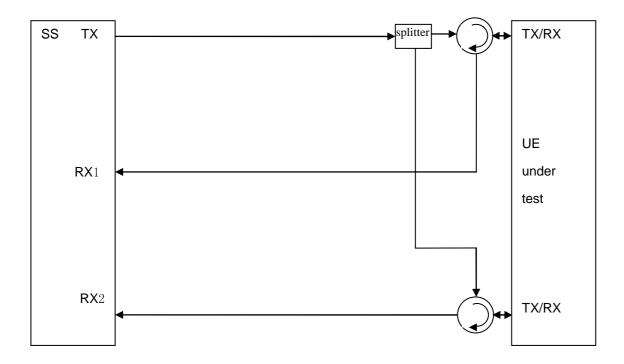


Figure A.28: Connection for basic UL MIMO with receive diversity

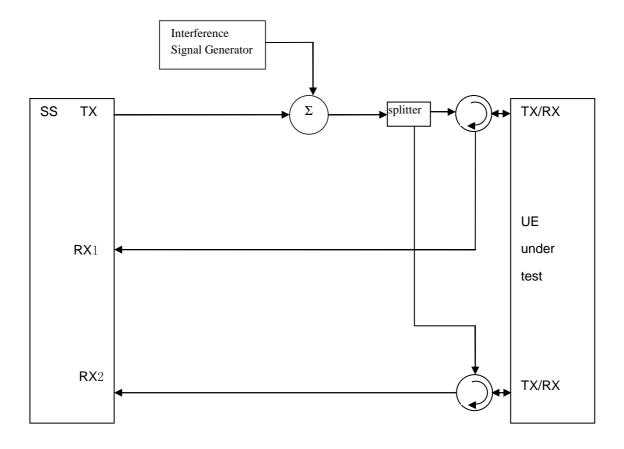


Figure A.29: Connection for UL MIMO Receiver tests with E-UTRA-Interference

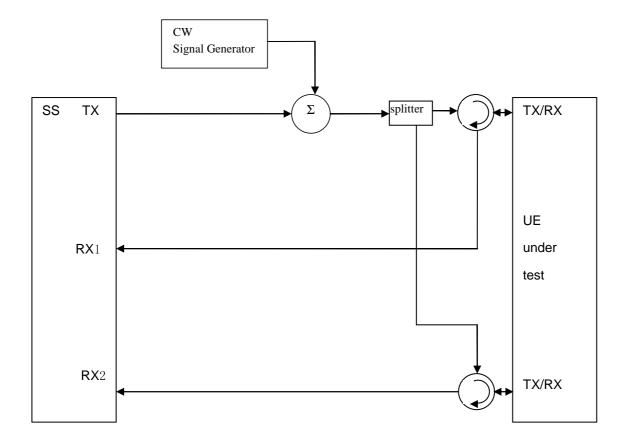


Figure A.30: Connection for UL MIMO Receiver tests with CW Interference

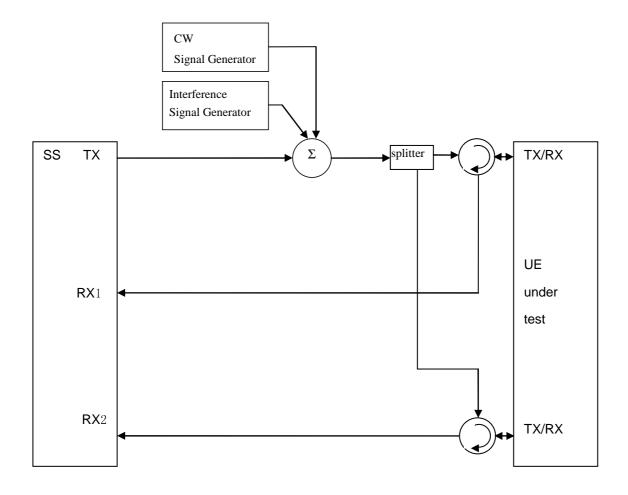


Figure A.31: Connection for UL MIMO Receiver tests with both E-UTRA-Interference and additional CW signal

Figure group A.32: Connections for basic Tx and Rx tests for CA

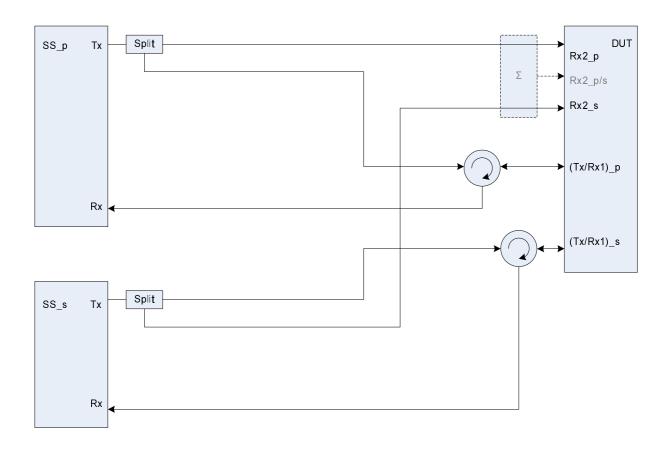


Figure A.32a: Connection for basic Tx and Rx tests for CA (separate connectors)

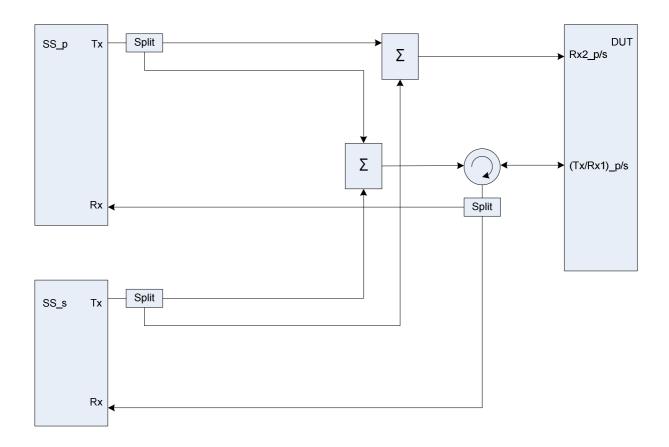


Figure A.32b: Connection for basic Tx and Rx tests for CA (common connectors, same UL antenna)

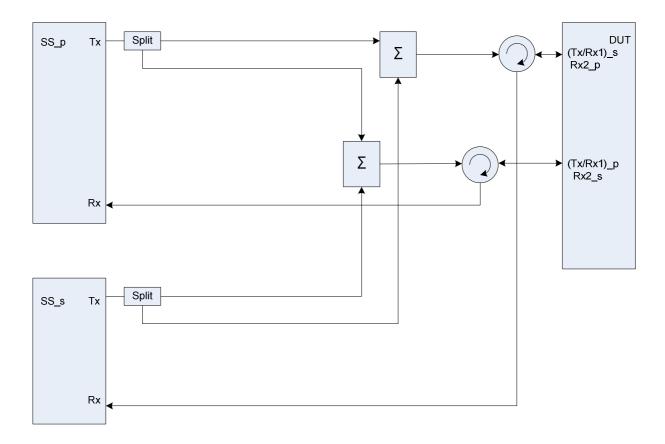


Figure A.32c: Connection for basic Tx and Rx tests for CA (common connectors, different UL antennas)

Figure group A.33: Connection for Tx tests for CA with additional Spectrum Analyzer

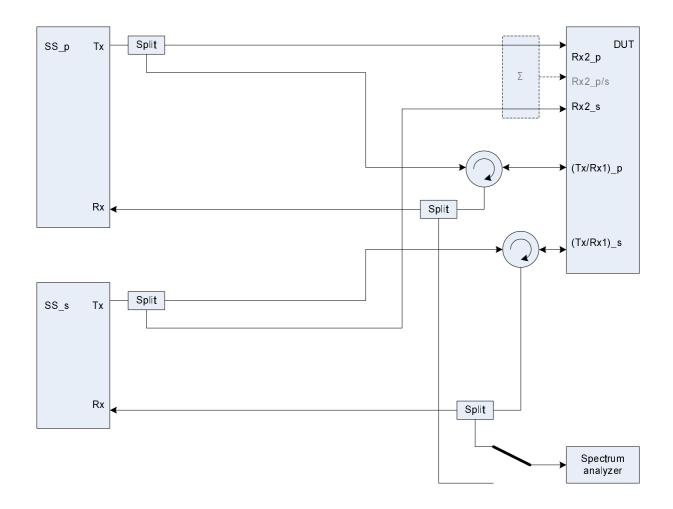


Figure A.33a: Connection for Tx tests for CA with additional Spectrum Analyzer (separate connectors)

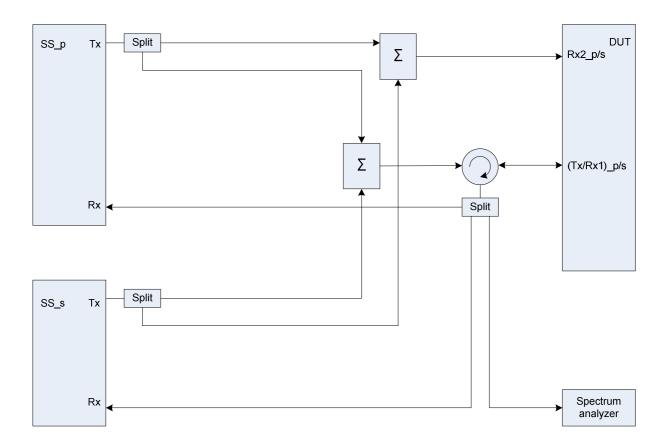


Figure A.33b: Connection for Tx tests for CA with additional Spectrum Analyzer (common connectors, same UL antenna)

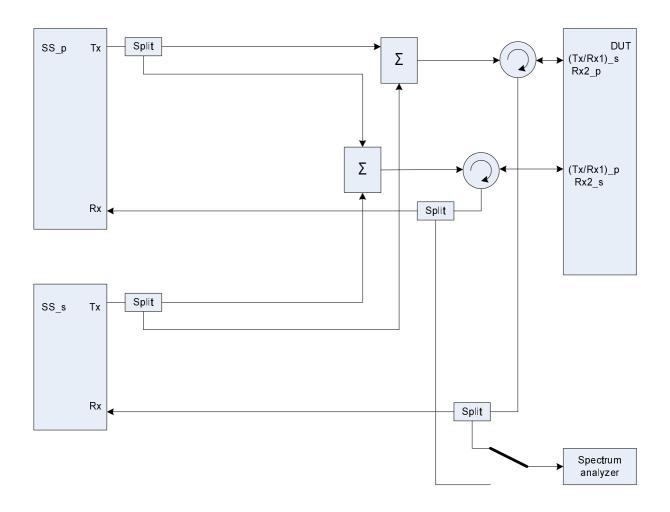


Figure A.33c: Connection for Tx tests for CA with additional Spectrum Analyzer (common connectors, different UL antennas)

Figure group A.34: Connection for Rx tests for CA with additional Interferer / CW

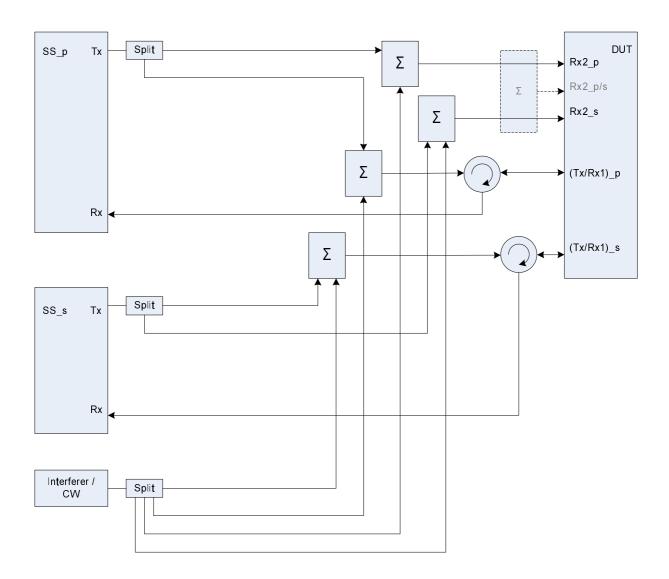


Figure A.34a: Connection for Rx tests for CA with additional Interferer / CW (separate connectors)

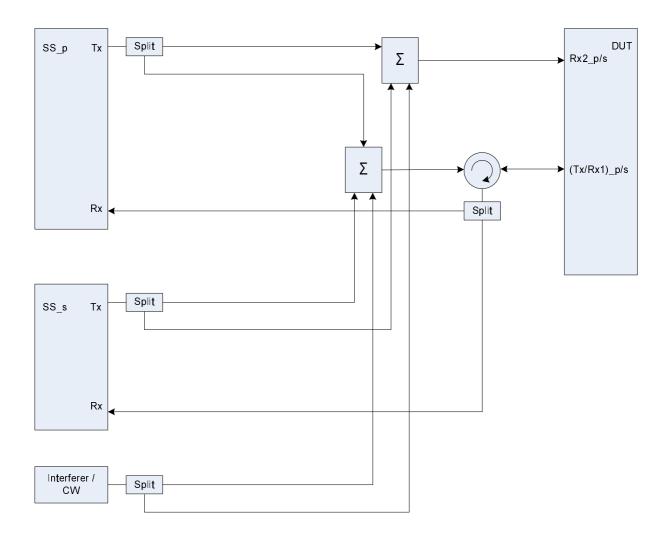


Figure A.34b: Connection for Rx tests for CA with additional Interferer / CW (common connectors, same UL antenna)

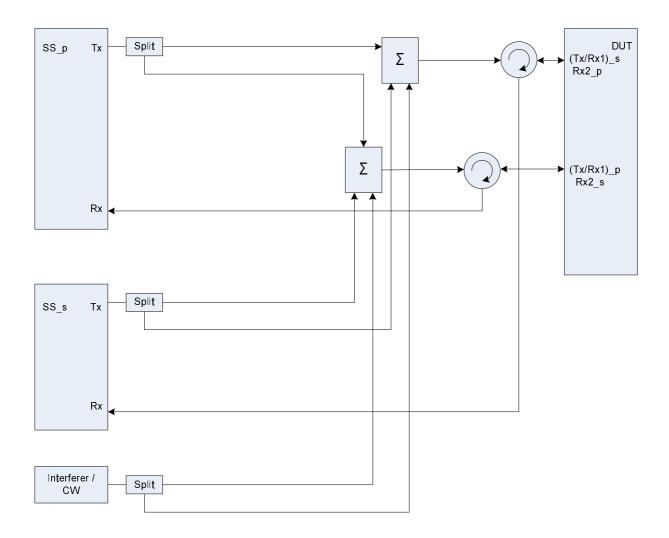


Figure A.34c: Connection for Rx tests for CA with additional Interferer / CW (common connectors, different UL antennas)

Figure group A.35: Connection for Rx performance tests for CA with antenna configuration 1x2

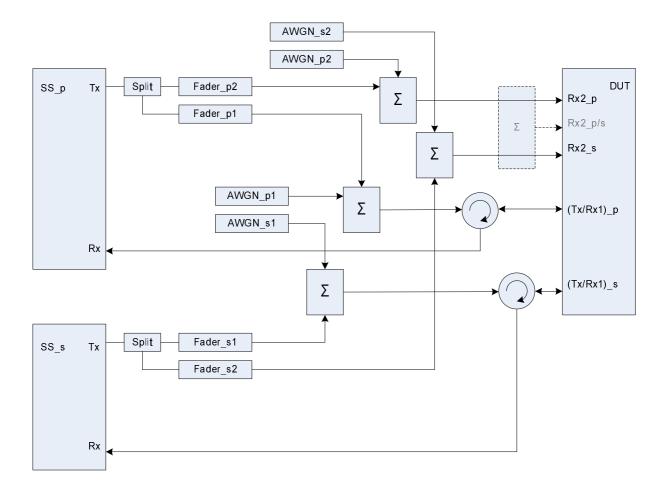


Figure A.35a: Connection for Rx performance tests for CA with antenna configuration 1x2 (separate connectors)

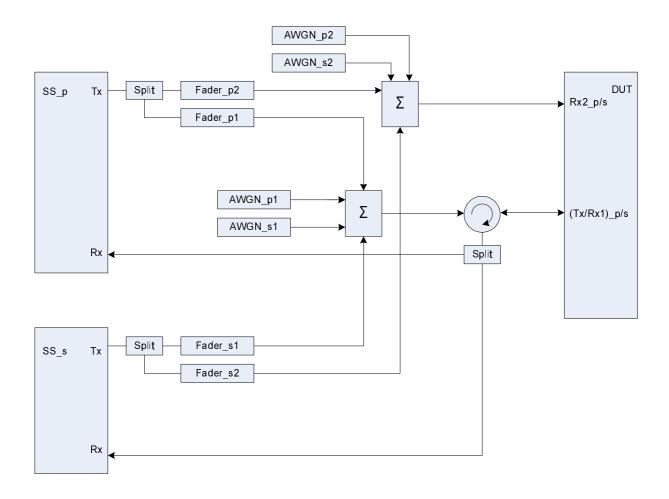


Figure A.35b: Connection for Rx performance tests for CA with antenna configuration 1x2 (common connectors, same UL antenna)

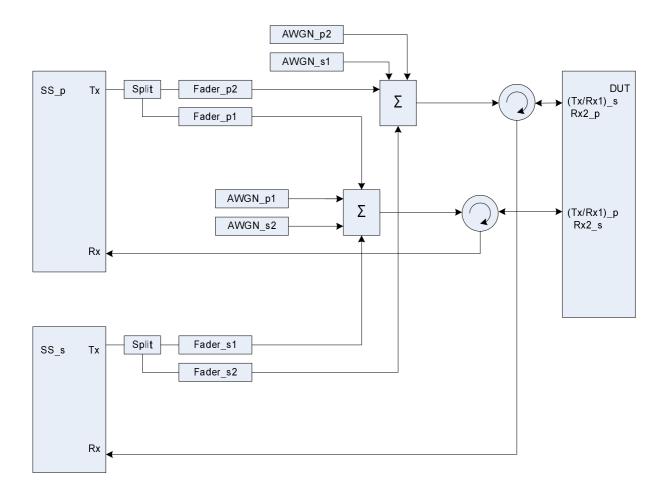


Figure A.35c: Connection for Rx performance tests for CA with antenna configuration 1x2 (common connectors, different UL antennas)

Figure group A.36: Connection for Rx performance tests for CA with antenna configuration 2x2

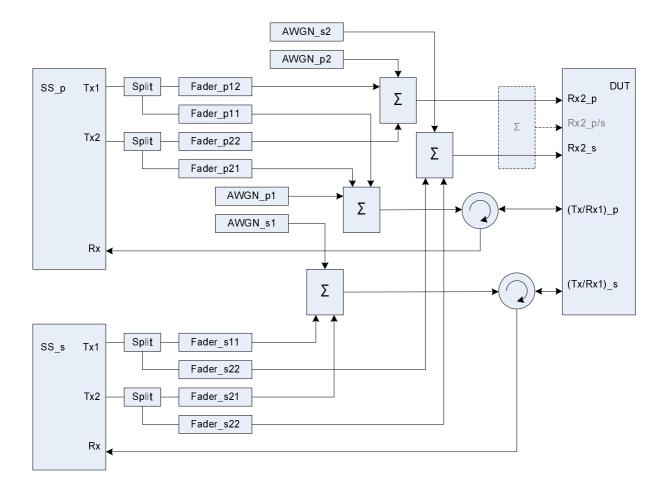


Figure A.36a: Connection for Rx performance tests for CA with antenna configuration 2x2 (separate connectors)

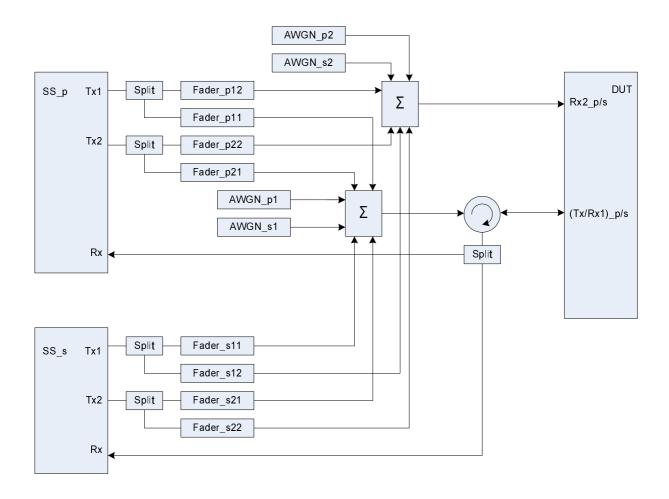


Figure A.36b: Connection for Rx performance tests for CA with antenna configuration 2x2 (common connectors, same UL antenna)

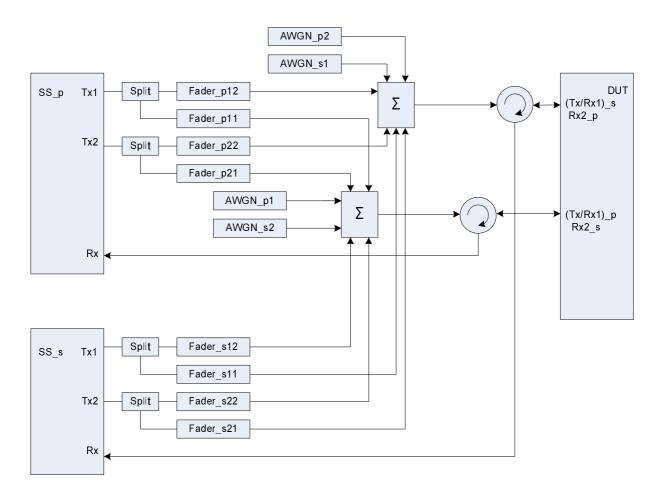


Figure A.36c: Connection for Rx performance tests for CA with antenna configuration 2x2 (common connectors, different UL antennas)

Figure group A.37: Connection for Tx tests for CA with additional CW and Spectrum Analyzer

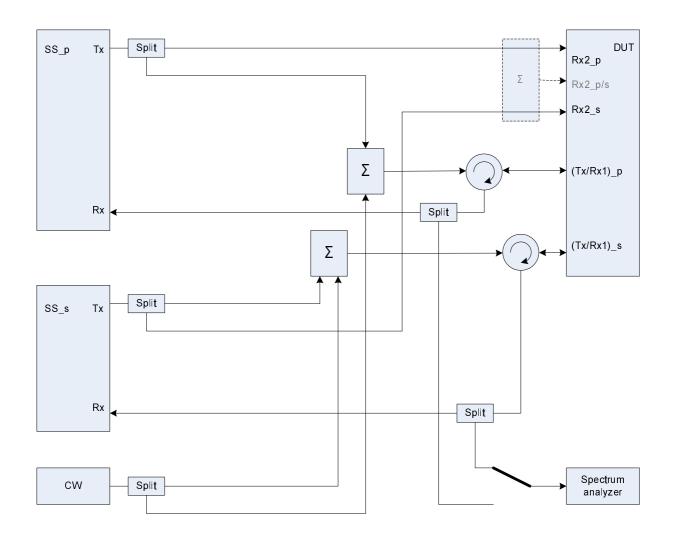


Figure A.37a: Connection for Tx tests for CA with additional CW and Spectrum Analyzer (separate connectors)

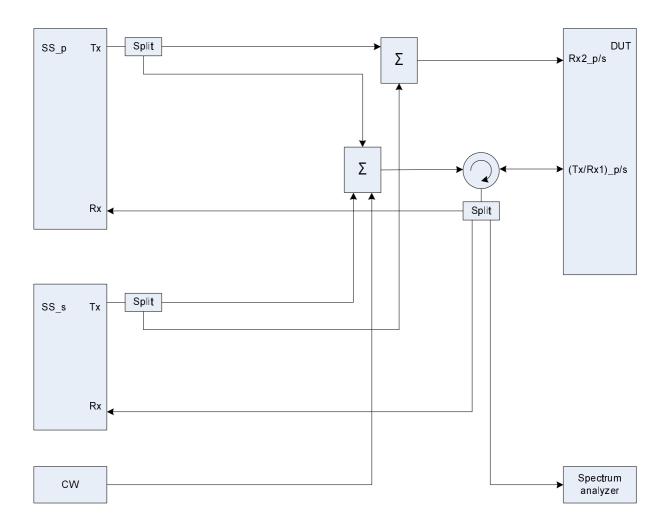


Figure A.37b: Connection for Tx tests for CA with additional CW and Spectrum Analyzer (common connectors, same UL antenna)

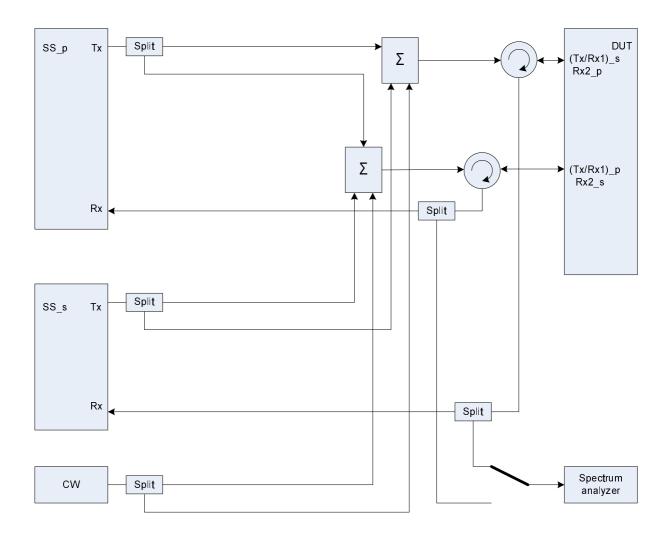


Figure A.37c: Connection for Tx tests for CA with additional CW and Spectrum Analyzer (common connectors, different UL antennas)

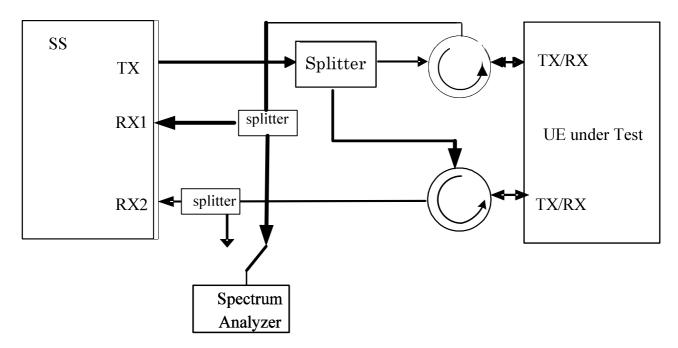


Figure A.38: Connection for UL MIMO tests with additional Spectrum Analyzer

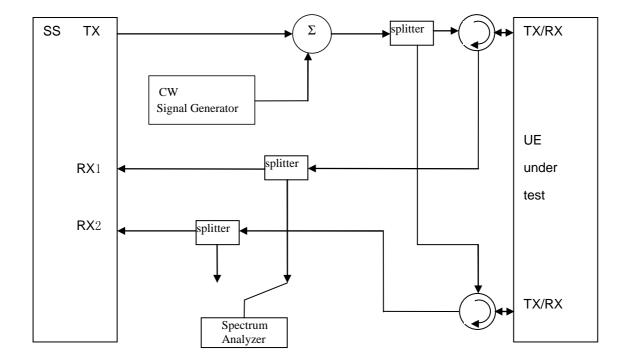


Figure A.39: Connection for Transmitter Intermodulation tests for UL-MIMO

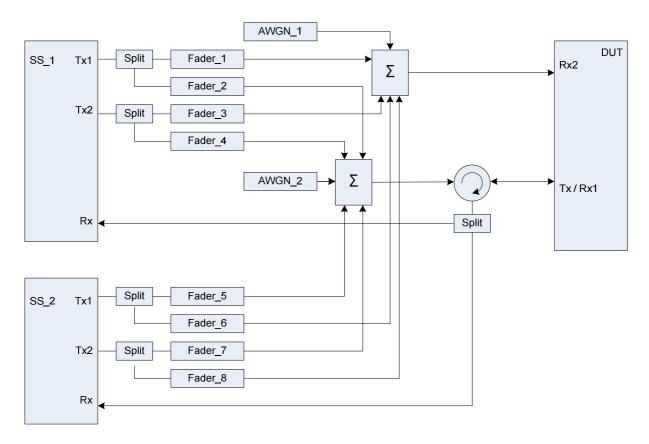


Figure A.40: Connection for 2 cells, antenna configuration 2x2, multipath fading and receive diversity

Figure group A.41: Connection for CA with additional intra-frequency cell and static propagation channel

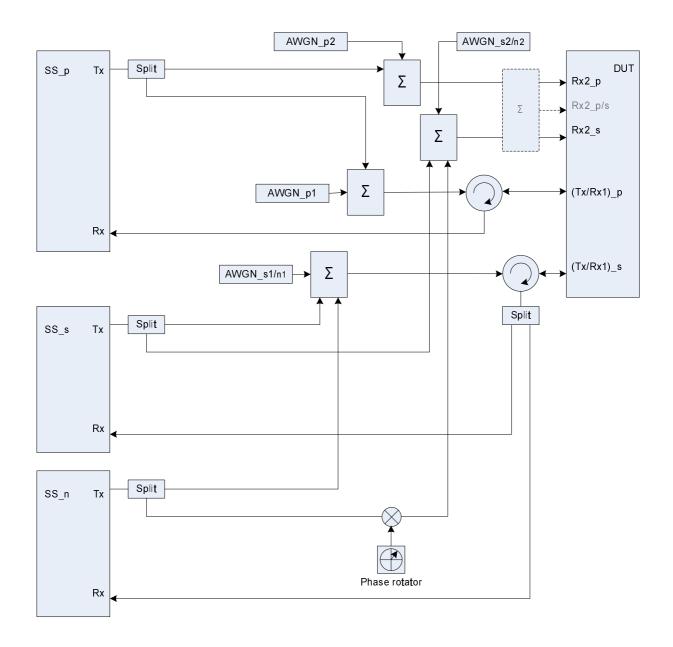


Figure A.41a: Connection for CA with additional intra-frequency cell and static propagation channel (separate connectors) (The frequency offset used in phase rotator is 5 Hz)

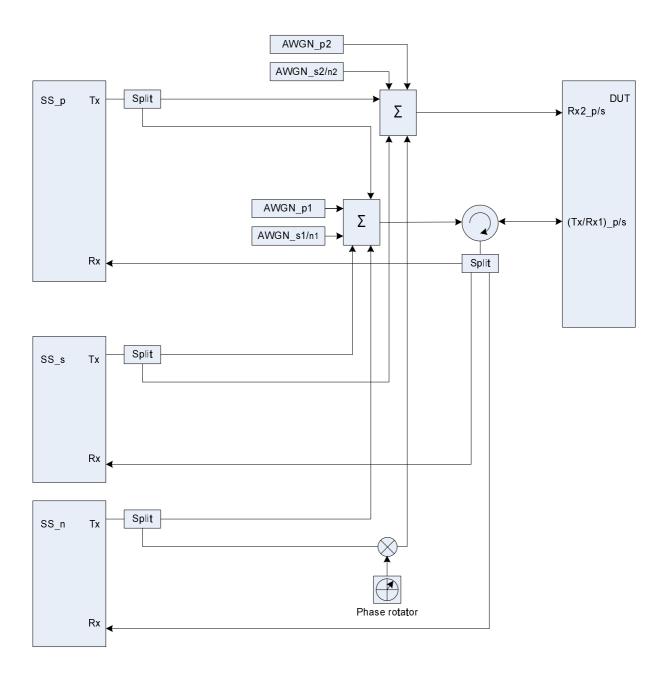


Figure A.41b: Connection for CA with additional intra-frequency cell and static propagation channel (common connectors, same UL antenna) (The frequency offset used in phase rotator is 5 Hz)

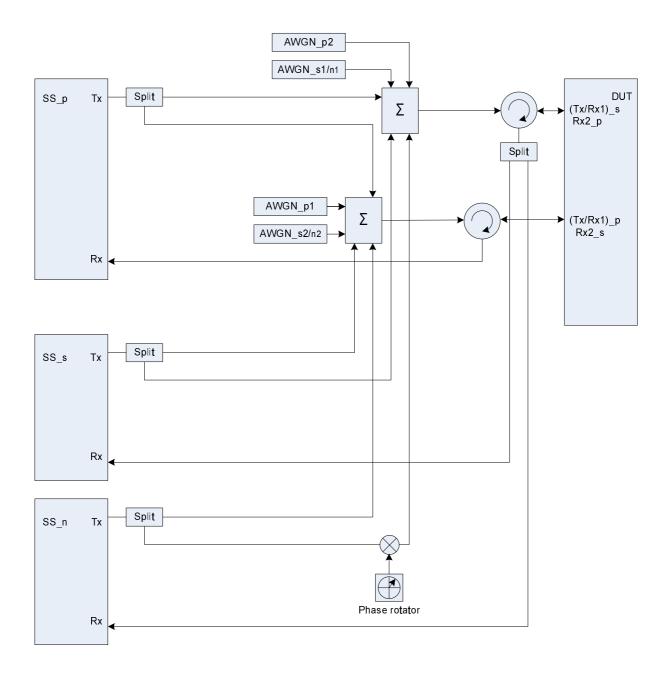


Figure A.41c: Connection for CA with additional intra-frequency cell and static propagation channel (common connectors, different UL antennas) (The frequency offset used in phase rotator is 5 Hz)

Figure group A.42: Connection for CA with additional intra-frequency cell and multipath fading propagation

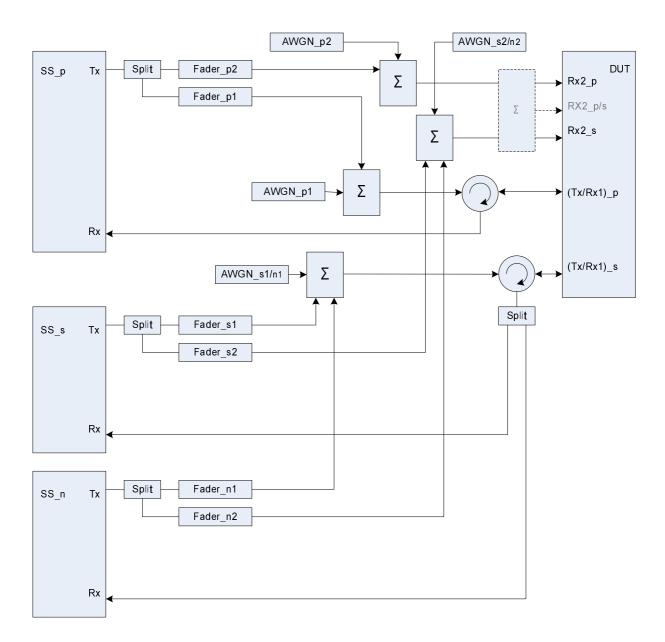


Figure A.42a: Connection for CA with additional intra-frequency cell and multipath fading propagation (separate connectors)

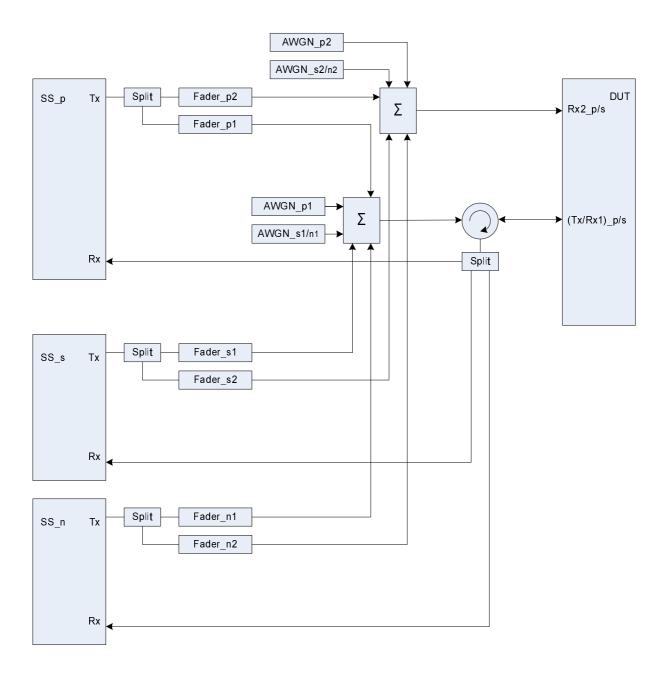


Figure A.42b: Connection for CA with additional intra-frequency cell and multipath fading propagation (common connectors, same UL antenna)

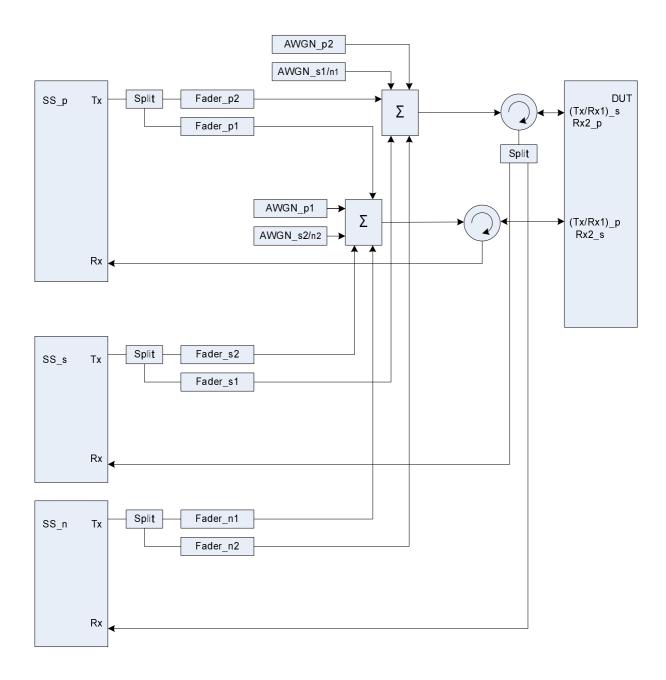


Figure A.42c: Connection for CA with additional intra-frequency cell and multipath fading propagation (common connectors, different UL antennas)

Figure group A.43: Connection for CA with additional inter-frequency cell and multipath fading propagation

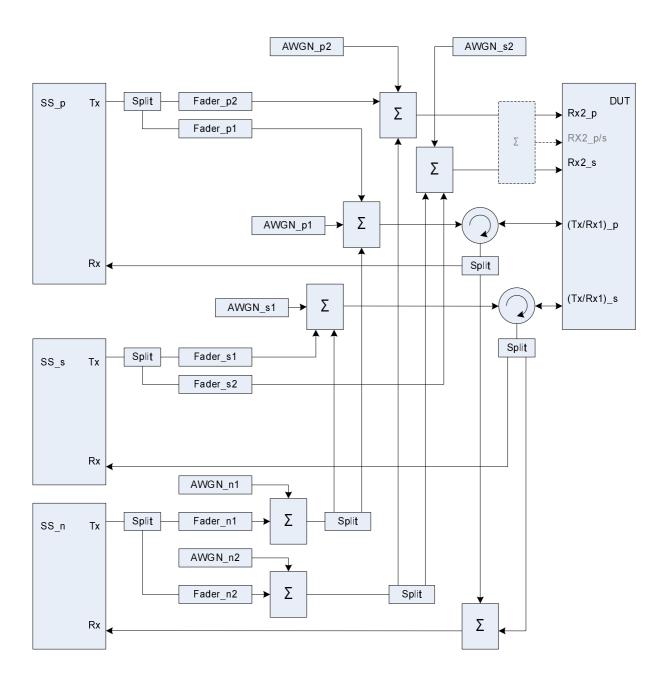


Figure A.43a: Connection for CA with additional inter-frequency cell and multipath fading propagation (separate connectors)

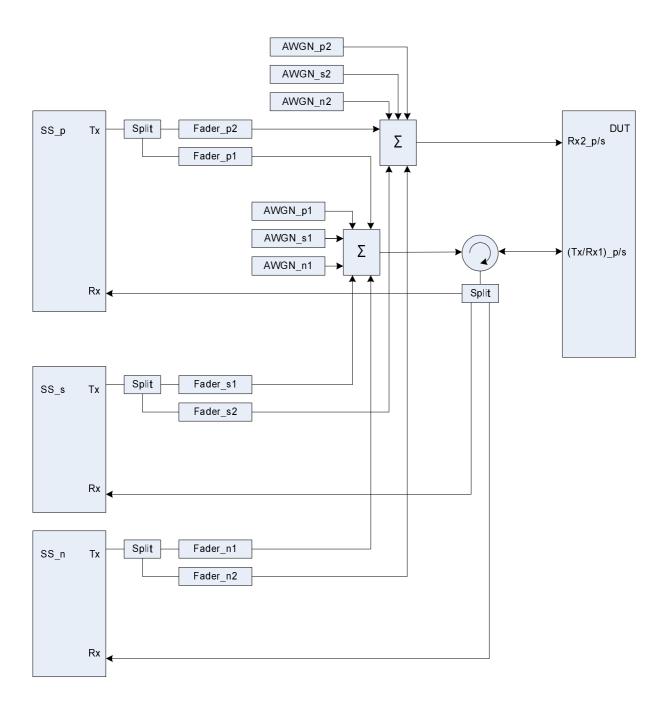


Figure A.43b: Connection for CA with additional inter-frequency cell and multipath fading propagation (common connectors, same UL antenna)

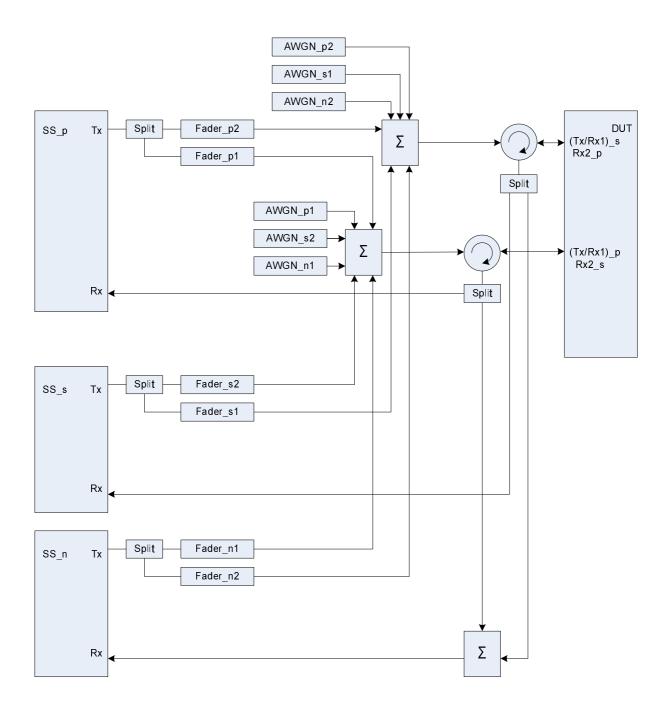


Figure A.43c: Connection for CA with additional inter-frequency cell and multipath fading propagation (common connectors, different UL antennas)

Figure group A.44: Connection for CA with additional inter-RAT cell and multipath fading propagation

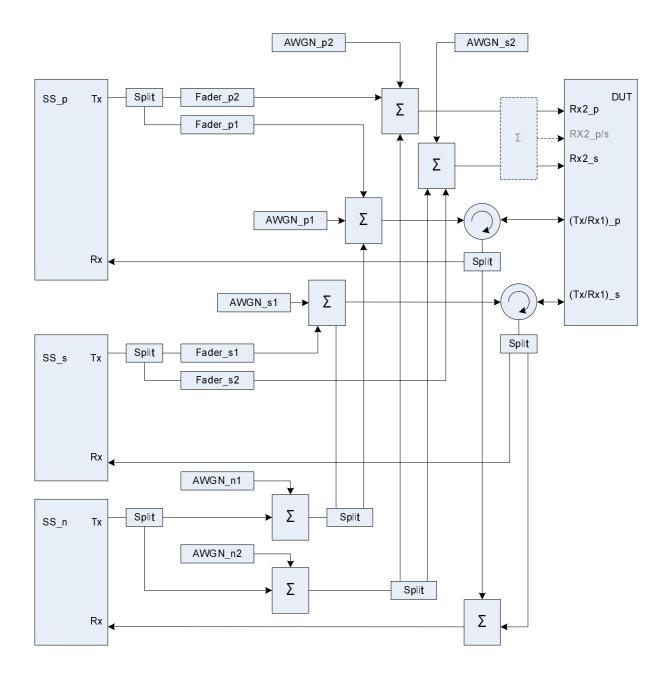


Figure A.44a: Connection for CA with additional inter-RAT cell and multipath fading propagation (separate connectors)

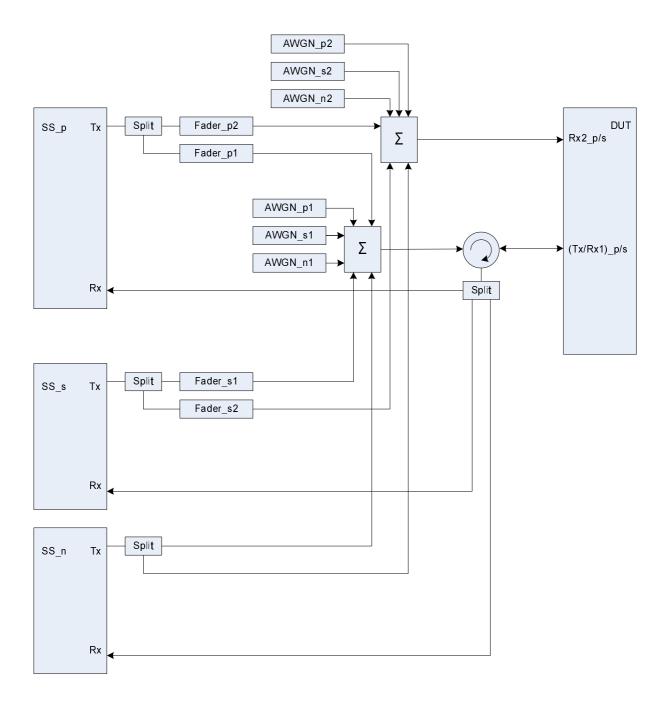


Figure A.44b: Connection for CA with additional inter-RAT cell and multipath fading propagation (common connectors, same UL antenna)

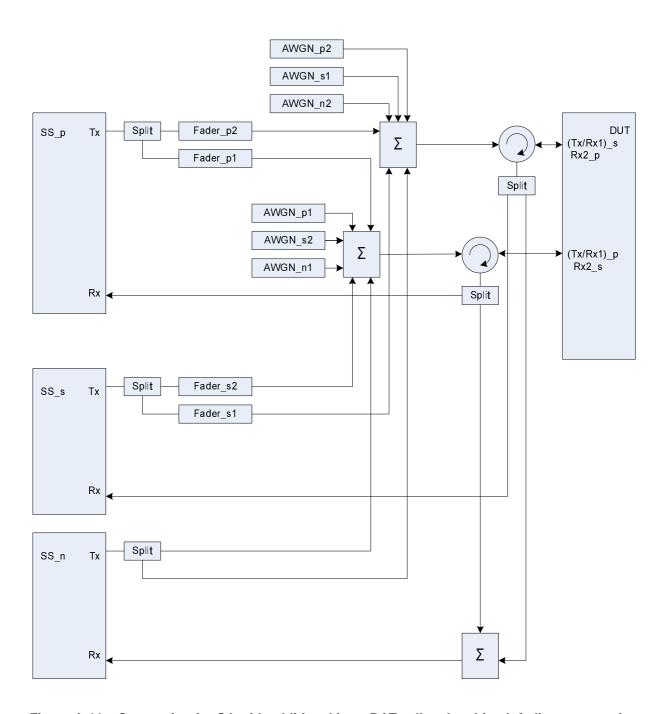


Figure A.44c: Connection for CA with additional inter-RAT cell and multipath fading propagation (common connectors, different UL antennas)

Figure group A.45: Connection for 2 cells with antenna configuration 1x2 and static propagation

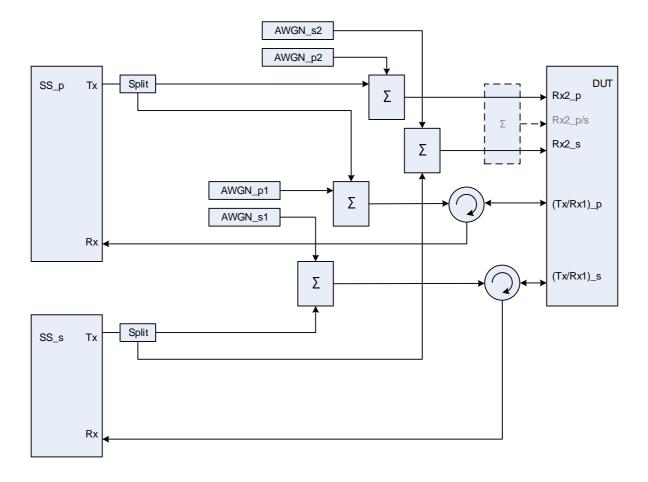


Figure A.45a: Connection for 2 cells with antenna configuration 1x2 and static propagation (separate connectors)

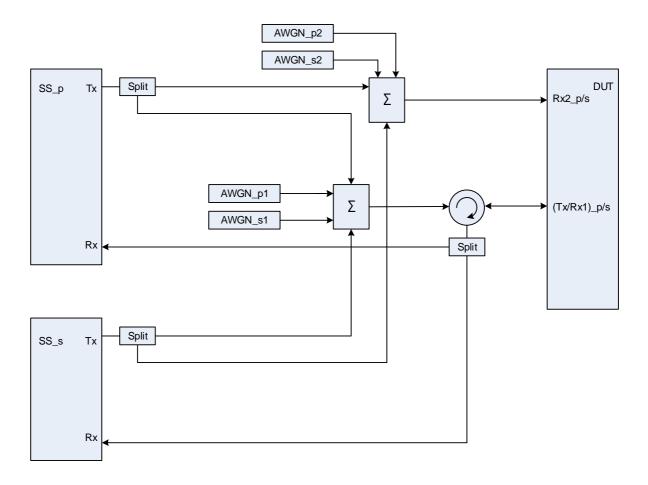


Figure A.45b: Connection for 2 cells with antenna configuration 1x2 and static propagation (common connectors, same UL antenna)

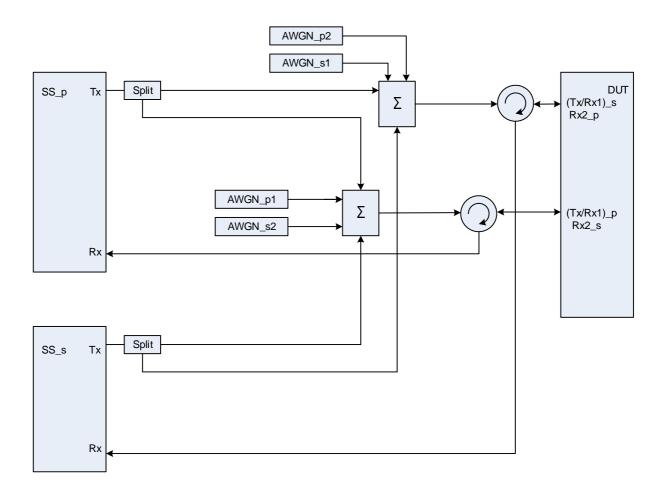


Figure A.45c: Connection for 2 cells with antenna configuration 1x2 and static propagation (common connectors, different UL antennas)

Figure group A.46: Connection for Rx performance tests for CA with antenna configuration 4x2

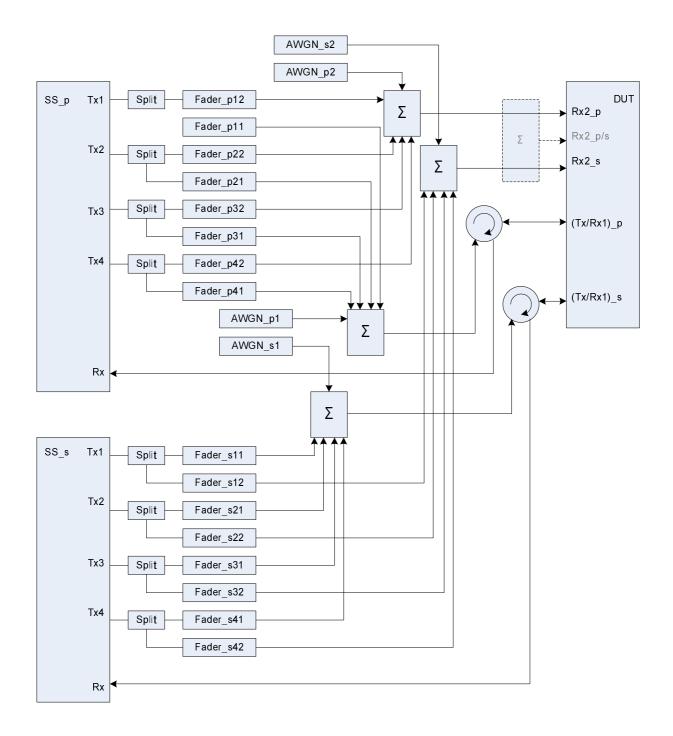


Figure A.46a: Connection for Rx performance tests for CA with antenna configuration 4x2 (separate connectors)

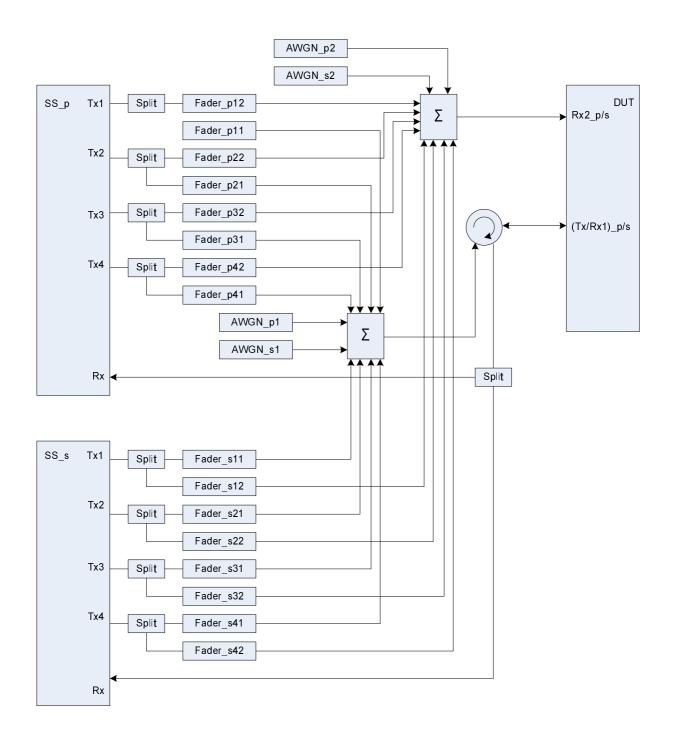


Figure A.46b: Connection for Rx performance tests for CA with antenna configuration 4x2 (common connectors, same UL antenna)

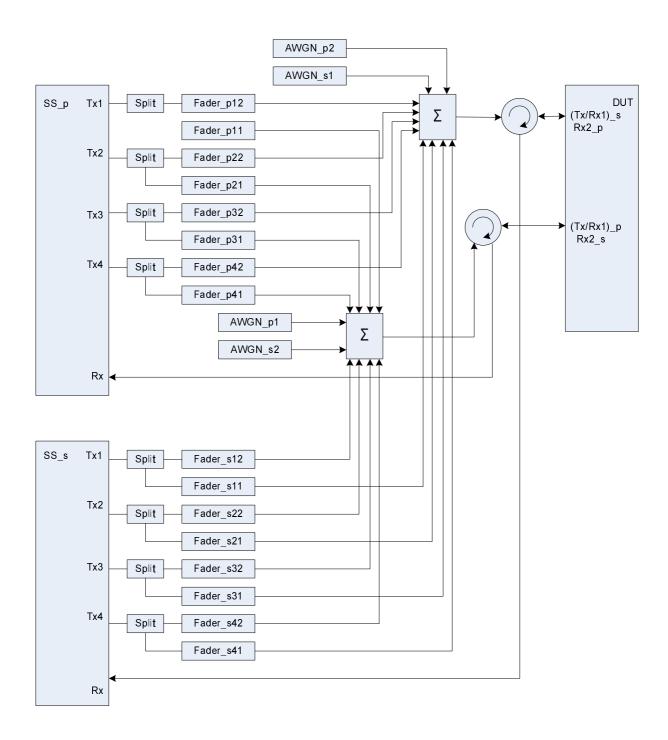


Figure A.46c: Connection for Rx performance tests for CA with antenna configuration 4x2 (common connectors, different UL antennas)

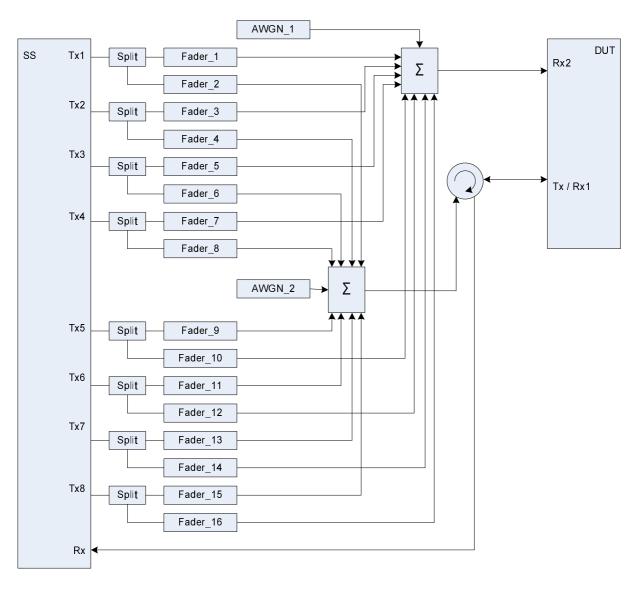


Figure A.47: Connection for RX performance tests with antenna configuration 8x2

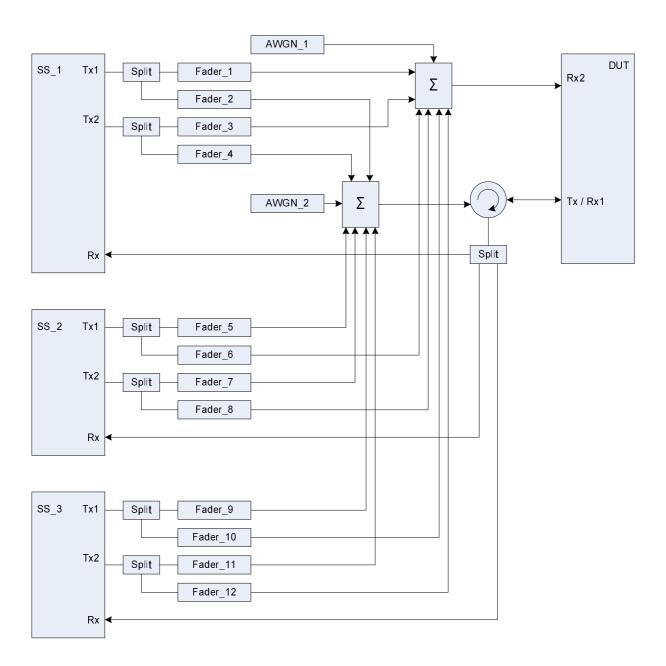


Figure A.48: Connection for 3 Cells (TPs) with antenna configuration 2x2 and fading

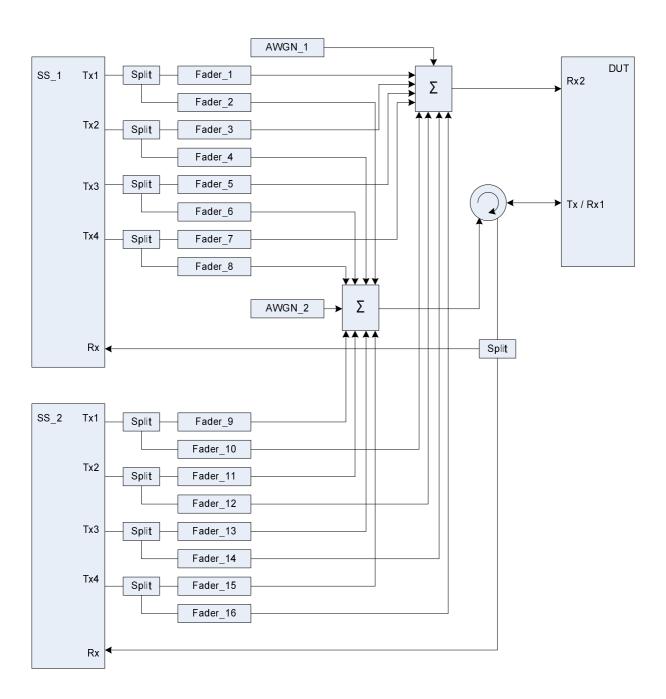


Figure A.49: Connection for 2 Cells (TPs) with antenna configuration 4x2 and fading

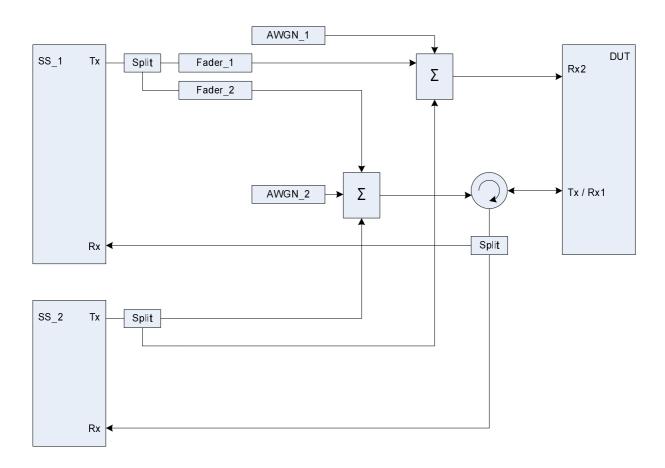


Figure A.50: Connection for 2 Cells (TPs) with antenna configuration 1x2 and fading for one Cell (TP)

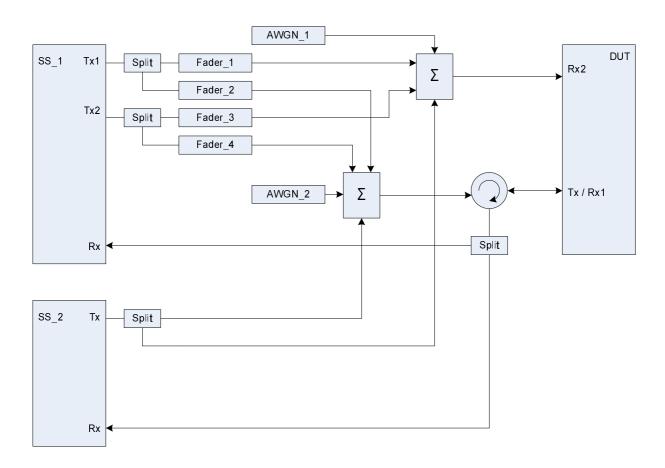


Figure A.51: Connection for 2 Cells (TPs) with antenna configuration 2x2 / 1x2 and fading for the 2x2 Cell (TP)

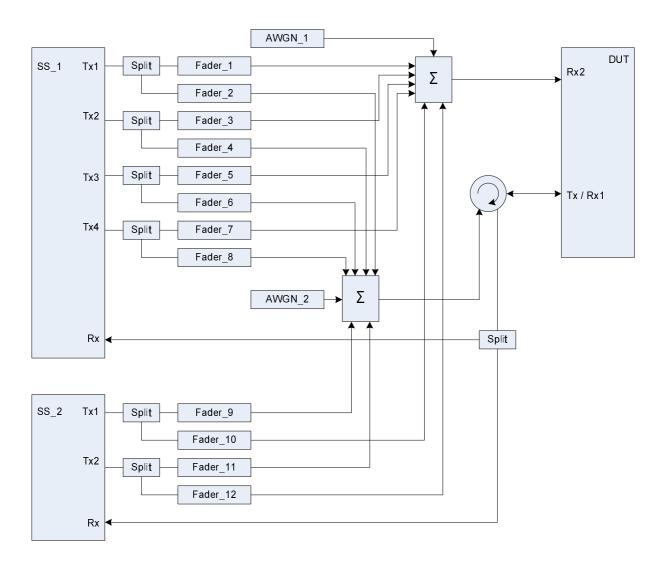


Figure A.52: Connection for 2 Cells (TPs) with antenna configuration 4x2 / 2x2 and fading

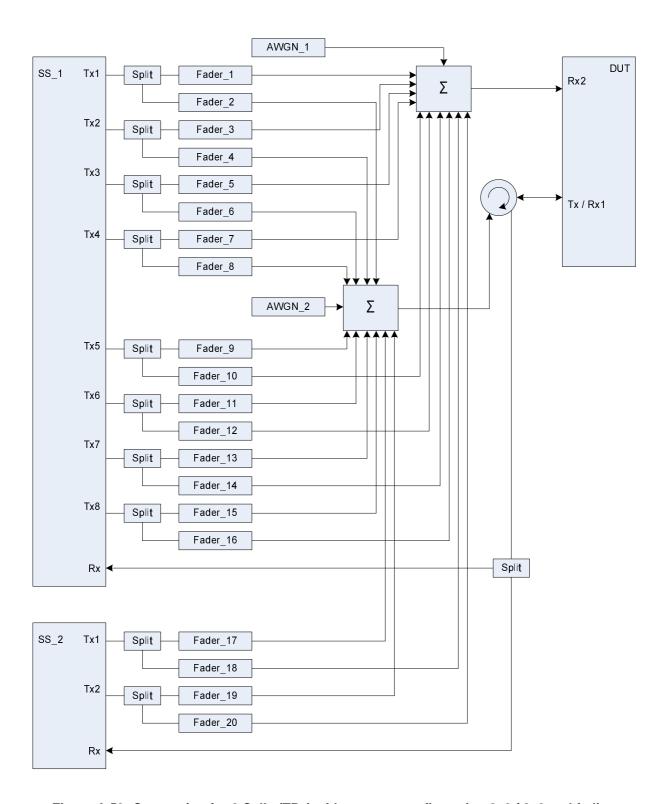


Figure A.53: Connection for 2 Cells (TPs) with antenna configuration 8x2 / 2x2 and fading

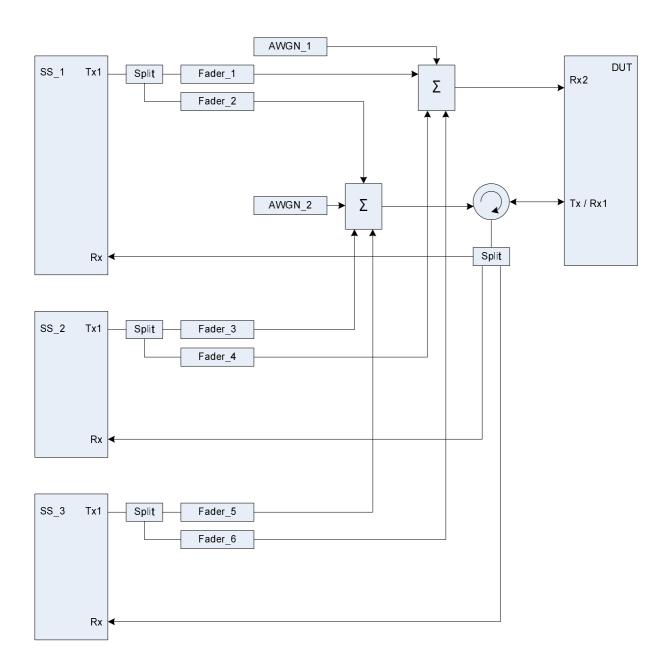


Figure A.54: Connection for 3 Cells (TPs) with antenna configuration 1x2 and fading

Annex B (informative): Change history

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current	Version -New	Doc-2nd- Level
RAN5 #37	R5-073107			Skeleton proposed for RAN5#37 Jeju			0.0.1	
RAN5 LTE worksh	R5w080007			Proposed for RAN5 LTE workshop, Sophia Antipolis		0.0.1	0.0.2	
RAN5 #39	R5-081167			Following proposals have been incorporated: R5w080046 R5w080026 R5w080036		0.0.2	0.0.3	
RAN5 #39	R5-081615			Following proposals and many editorial corrections have been incorporated: R5-081564, R5-081561, R5-081248, R5-081530, R5-081126, R5-081443, R5-081382, R5-081200		0.0.3	0.1.0	
RAN5 #39bis	R5-082141			Following proposals and many editorial corrections have been incorporated: R5-082149, "Updates of reference test conditions for TS 36.508" R5-082148, "Addition of E-UTRA TDD Test frequencies for TS36.508" R5-082150, "Default downlink signal channel powers for LTE UE test" R5-082146, "Addition of Cell Environment for multi Cell Configuration" R5-082140, "Proposal of LTE reference system configurations for TS 36.508" R5-082204, "Addition of Cell and UE configuration for TS 36.508" R5-082090, "Update of default RRC message contents" R5-082100, "Proposal on Structure of Default Message Contents for TS 36.508" R5-082091, "Addition of SRB and DRB radio bearer combinations to 36.508" R5-082173, "Connection Diagrams for TX and RX tests"		0.1.0	0.2.0	
RAN5 #40	R5-083399			Following proposals have been incorporated: R5-083800, "Mapping of DL physical channels to physical resources for TS 36.508", NEC R5-083403, "Addition of New Cell Environment for multi Cell Configuration", NTT DOCOMO R5-083529, "Proposal on default system information contents for TS 36.508", NTT DOCOMO R5-083395, "Corrections to generic procedures in TS 36.508", NTT DOCOMO R5-083623, "Update of RRC default message contents and RB combination parameters", Ericsson R5-083622, "Radio Resource Configuration specification for TS 36.508", NEC R5-083397, "Addition of Default NAS message contents in TS 36.508", NTT DOCOMO		0.2.0	1.0.0	
RAN5 #40bis	R5-084102			Following proposals have been incorporated: R5-084101, "Missing corrections to TS 36.508" R5-084110, "Updates of Test frequencies for TS 36.508" R5-084144, "The mapping of DL physical channels to physical resources for TS 36.508" R5-084198, "Update of RA and RB power ratios definition in TS 36.508" R5-084199, "Update of Reference System Configuration in 36.508" R5-084109, "Addition of default RRC message contents to TS 36.508" R5-084202, "Update of RRC Message Contents and RB Configurations in 36.508" R5-084205, "Addition of default RRC message contents for handover" R5-084162, "Connection Diagrams for performance		1.0.0	1.1.0	

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current		Doc-2nd- Level
				tests"				
RAN5 #41	R5-085145			Following proposals have been incorporated: R5-085087, "Updates of Test frequencies for TS 36.508" R5-085701, "Cleaning up section 5 in TS 36.508" R5-085252, "Correction to Section 4.3.3.2 of TS 36.508" R5-085315, "Connection Diagrams: delete the editorial note" R5-085454, "Addition of timer tolerances" R5-085566, "Addition of default settings of suitable / non-suitable cells in TS 36.508" R5-085541, "Update to default configurations of simulated cells in TS 36.508" R5-085514, "Update to default configurations of system information blocks in TS 36.508" R5-085472, "Addition of default settings of suitable / non-suitable cells in TS 36.508" R5-085472, "Addition of default settings of suitable / non-suitable cells in TS 36.508" R5-085472, "Update of Reference system configurations in 36.508" R5-085457, "Update to generic procedure in TS 36.508" R5-085458, "Addition of new generic procedure to check the UE does not answer to paging" R5-08523, "Update of default RRC message contents" R5-085381, "Addition to default RRC IE contents for measurement configuration" R5-085469, "Update to default NAS message contents in TS 36.508" R5-085451, "Parameter settings for reference RB configurations"		1.1.0	2.0.0	
				R5-085556, "Common test USIM parameters for EPS				
				testing"				
RAN#4 2	RP-085145			Approval of version 2.0.0 at RAN#42, then updated to v 8.0.0.		2.0.0	8.0.0	
RAN5	R5-086021	0001		Editorial corrections. Introduction of half cell configurations in eUTRA SS		8.0.0 8.0.1	8.0.1 8.1.0	
#41bis	K5-066021	0001	-	Introduction of half cell configurations in eo FRA 55		0.0.1	6.1.0	
RAN5 #41bis	R5-086166	0002	-	Removal of Redundant Environmental Conditions		8.0.1	8.1.0	
RAN5 #41bis	R5-086221	0003	-	CR to 36.508: correction of EARFCN		8.0.1	8.1.0	
RAN5 #41bis	R5-086226	0004	-	Correction to the default system informations in TS 36.508		8.0.1	8.1.0	
RAN5 #41bis	R5-086236	0005	-	Connection diagrams for RRM		8.0.1	8.1.0	
RAN5 #41bis	R5-086346	0006	-	Update of the default message AUTHENTICATION FAILURE		8.0.1	8.1.0	
RAN5 #41bis	R5-086362	0007	-	update of reference configuration systems for CDMA2000 in 36.508		8.0.1	8.1.0	
RAN5 #41bis	R5-086363	8000	-	Updated of common and default parameters for CDMA2000 cells		8.0.1	8.1.0	
RAN5 #41bis	R5-086364	0009	-	Update of SystemInformationBlockType8 in 36.508		8.0.1	8.1.0	
RAN5 #41bis	R5-086369	0010	-	Addition of reference EPS bearer contexts		8.0.1	8.1.0	
RAN5	R5-086370	0011	-	Mapping of default DL Physical Channels for TDD in		8.0.1	8.1.0	
#41bis RAN5 #41bis	R5-086400	0012	-	Addition of RS_EPRE powers to default DL signal levels		8.0.1	8.1.0	
RAN5 #42	R5-090084	0013	-	Test procedure to verify that an EPS bearer context is active		8.0.1	8.1.0	
RAN5 #42	R5-090362	0014	-	Correction to the definition of simulated NAS cells in TS 36.508		8.0.1	8.1.0	
RAN5 #42	R5-090464	0015	-	Clean up the test algorithm for authentication		8.0.1	8.1.0	
RAN5 #42	R5-090586	0016	-	Add specific information elements for RRC reconfiguration		8.0.1	8.1.0	
RAN5 #42	R5-090630	0017	-	Introduction of alternative DRX configurations		8.0.1	8.1.0	
RAN5 #42	R5-090681	0018	-	Correction to the default NAS message contents in TS 36.508		8.0.1	8.1.0	
RAN5 #42	R5-090682	0019	-	Correction to the definition of simulated cells in TS 36.508		8.0.1	8.1.0	

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current	Version -New	Doc-2nd- Level
RAN5 #42	R5-090698	0020	-	Update of 4.5 generic procedures in 36.508		8.0.1	8.1.0	
RAN5 #42	R5-090699	0021	-	TDD RTT correction for timer tolerance		8.0.1	8.1.0	
RAN5 #42	R5-090759	0022	-	Correction to the default RRC message contents in TS 36.508		8.0.1	8.1.0	
RAN5 #42	R5-091000	0023	-	Correction to clause 4.3.3.3		8.0.1	8.1.0	
RAN5 #42	R5-091001	0024	-	LTE-RF: Clarification to 36.508 Simulated Cells for RF tests		8.0.1	8.1.0	
RAN5 #43	RP-090447	0025	-	Correction to Cell off power		8.1.0	8.2.0	R5-092086
RAN5 #43	RP-090447	0026	-	LTE Signalling Tests: UE Rx antenna connection		8.1.0	8.2.0	R5-092087
RAN5 #43	RP-090448	0027	-	CR to 36.508 for subclause 4.3.1 channel bandwidth clarification for RF tests (re-submit no changes)		8.1.0	8.2.0	R5-092124
RAN5 #43	RP-090448	0028	-	Text for 4.2.2: Minimum functional requirements		8.1.0	8.2.0	R5-092128
RAN5 #43	RP-090448	0029	-	Annex A: transition from 1 to 2 RX antenna		8.1.0	8.2.0	R5-092132
RAN5 #43	RP-090447	0030	-	Update of SN length in UM RLC default configuration		8.1.0	8.2.0	R5-092202
RAN5 #43	RP-090448	0031	-	TP for simulated UTRA TDD cell parameter		8.1.0	8.2.0	R5-092275
RAN5 #43	RP-090447	0032	-	Correction to specific message contents in setup procedure in TS 36.508		8.1.0	8.2.0	R5-092349
RAN5 #43	RP-090447	0033	-	Correction to the definition of simulated NAS cells in TS 36.508		8.1.0	8.2.0	R5-092352
RAN5 #43	RP-090447	0034	-	CR on 6.7 TDD Timer Tolerance in 36.508		8.1.0	8.2.0	R5-092363
RAN5 #43	RP-090448	0044	-	Update of 4.5.2A in 36.508 (Re-submit not change)		8.1.0	8.2.0	R5-092457
RAN5 #43	RP-090448	0035	-	Default value of q-RxLevMin for RF TCs		8.1.0	8.2.0	R5-092458
RAN5 #43	RP-090598	0045	-	CR to 36.508 Addition of test frequencies for band 18 and band 19		8.1.0	8.2.0	R5-092535
RAN5 #43	RP-090447	0036	-	Update of the default NAS message contents in TS 36.508		8.1.0	8.2.0	R5-092708
RAN5 #43	RP-090447	0037	-	Correction to reference radio bearer configurations		8.1.0	8.2.0	R5-092721
RAN5 #43	RP-090447	0038	-	Definition of default Test Control (TC) messages		8.1.0	8.2.0	R5-092734
RAN5 #43	RP-090448	0039	-	Modification of procedures in section 4.5.2.3 /4.5.2A		8.1.0	8.2.0	R5-092735
RAN5 #43	RP-090447	0040	-	Addition of default physical layer parameters		8.1.0	8.2.0	R5-092736
RAN5 #43	RP-090447	0041	-	Correction to default RRC message contents		8.1.0	8.2.0	R5-092738
RAN5 #43	RP-090447	0042	-	Introduction in 36.508 of a common tracking/routing area update procedure for Idle mode and RRC connection release test cases		8.1.0	8.2.0	R5-092765
RAN5 #43	RP-090447	0043	-	Corrections to default system configurations in TS 36.508		8.1.0	8.2.0	R5-092773
RAN5 #43	RP-090447	0046	-	Max. resources for signalling test cases		8.1.0	8.2.0	R5-092723
-	-	-	-	Editorial corrections and merging of all sections together		8.2.0	8.2.1	-
RAN5 #44	RP-090802	0047	-	Correction to the default value of ul-Bandwidth in TS 36.508	F	8.2.1	8.3.0	R5-094059
RAN5 #44	RP-090802	0048	-	UTRAN SIB scheduling for LTE interRAT test	F	8.2.1	8.3.0	R5-094072
RAN5 #44	RP-090802	0049	-	Correction to the default NAS message contents	F	8.2.1	8.3.0	R5-094141
RAN5 #44	RP-090802	0050	-	TDD fields in default physical layer parameters	F	8.2.1	8.3.0	R5-094279
RAN5 #44	RP-090802	0051	-	Addition of UTRA reference radio bearer parameters and GERAN reference PDP context parameters for E- UTRA Inter-RAT testing	F	8.2.1	8.3.0	R5-094304
RAN5 #44	RP-090801	0052	-	System information scheduling for RF testing	F	8.2.1	8.3.0	R5-094311
RAN5 #44	RP-090801	0053	-	Connection for 1 cell with antenna configuration 1x2 in static propagation conditions	F	8.2.1	8.3.0	R5-094364
RAN5	RP-090801	0054	-	Correction to 4.3.1.2.5 TDD reference test frequencies	F	8.2.1	8.3.0	R5-094373

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current		Doc-2nd- Level
#44				for Operating Band 37				
RAN5 #44	RP-090801	0055	-	LTE RF: Physical Layer configurations for RF/RRM testing	F	8.2.1	8.3.0	R5-094421
RAN5 #44	RP-090802	0056	-	Update of SN length in PDCP default configuration	F	8.2.1	8.3.0	R5-094533
RAN5 #44	RP-090802	0057	-	Corrections to default RRC message and IE contents	F	8.2.1	8.3.0	R5-094639
RAN5 #44	RP-090801	0058	-	Update of TDD reference test frequencies for operating band 40	F	8.2.1	8.3.0	R5-094786
RAN5 #44	RP-090810	0059	-	TDD special subframe pattern update	F	8.2.1	8.3.0	R5-094901
RAN5 #44	RP-090802	0060	-	corrections to reference RB configurations	F	8.2.1	8.3.0	R5-095064
#44	RP-090802	0061	-	Correction of test procedure 6.4.2.7 in TS 36.508	F	8.2.1	8.3.0	R5-095093
#44	RP-090802	0062		Adding new elementary files to the default USIM settings	F	8.2.1	8.3.0	R5-095100
RAN5 #44	RP-090802	0063	-	Correction to the Test procedure to check RRC_IDLE state	F	8.2.1	8.3.0	R5-095102
RAN5 #44	RP-090802	0064	-	Introduction of UE mode of operation into NAS default message contents	F	8.2.1	8.3.0	R5-095138
#44	RP-090802	0065	-	TDD ACK/NACK feedback mode update	F	8.2.1	8.3.0	R5-095152
#44	RP-090802	0066	-	Corrections to default signal levels	F	8.2.1	8.3.0	R5-095206
#44	RP-090802	0067	-	Update to default messages in regard to IP address allocation	F	8.2.1	8.3.0	R5-095218
#45	RP-091121	0068	-	Correction to 4.3.1.2.6 TDD reference test frequencies for Operating Band 38	F	8.3.0	8.4.0	R5-095486
#45	RP-091121	0069	-	Correction CR to 36.508: Set the default parameter for offsetFreq in MeasObjectGERAN Information Element	F	8.3.0	8.4.0	R5-095514
#45	RP-091470	0070		Addition of HSPA UTRA reference radio bearer parameters for E-UTRA Inter-RAT testing	F	8.3.0	8.4.0	R5-095555
#45	RP-091122	0071		Introduction of RS power boosting to reduce interference	F	8.3.0	8.4.0	R5-095594
RAN5 #45	RP-091122	0072	-	Corrections to default RRC message contents	F	8.3.0	8.4.0	R5-095651
RAN5 #45	RP-091122	0073	-	Clarification for Cell Configuration Identifiers in 36.508	F	8.3.0	8.4.0	R5-096005
RAN5 #45	RP-091122	0074	-	Correction to the generic procedure for IP allocation and more	F	8.3.0	8.4.0	R5-096114
#45	RP-091122	0075		Addition of new generic procedure for TAU after inter- RAT HO from UTRA	F	8.3.0	8.4.0	R5-096115
RAN5 #45	RP-091122	0076	-	Update of header chapter 5.2 in 36.508	F	8.3.0	8.4.0	R5-096202
RAN5 #45	RP-091122	0077	-	Correction to the default NAS message contents	F	8.3.0	8.4.0	R5-096403
#45	RP-091122	0078	-	cell frequency allocation	F	8.3.0	8.4.0	R5-096440
RAN5 #45	RP-091122	0079	-	Correction for IP address allocation	F	8.3.0	8.4.0	R5-096447
#45	RP-091122	0800	-	messages	F	8.3.0	8.4.0	R5-096449
RAN5 #45	RP-091122	0081	-	configuration in U-plane	F	8.3.0	8.4.0	R5-096455
#45	RP-091122	0082	-	Correction of test procedures in TS 36.508	F	8.3.0	8.4.0	R5-096456
RAN5 #45	RP-091122	0083	-	Update of MAC configuration for disabling PHR and BSR for L2 test cases	F	8.3.0	8.4.0	R5-096458
RAN5 #45	RP-091122	0084	-	Addition of default UTRA message contents to TS 36.508	F	8.3.0	8.4.0	R5-096461
#45	RP-091122	0085	-	Clarification to the mapping of GERAN cells and the default parameter values	F	8.3.0	8.4.0	R5-096462
RAN5 #45	RP-091122	0086	-	Correction of TFTs for reference dedicated EPS bearer contexts	F	8.3.0	8.4.0	R5-096464
#45	RP-091122	0087	-	Cleanup of default NAS message contents	F	8.3.0	8.4.0	R5-096465
#45	RP-091122	8800	-	LTE-Sig: Assignment of different rootSequenceIndex for cells at the same frequency		8.3.0	8.4.0	R5-096641
RAN5 #46	RP-100143	0089	-	Correction of SIB19 scheduling position in the neighbouring UTRA cell	F	8.4.0	8.5.0	R5-100086

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current		Doc-2nd- Level
	RP-100143	0091	-	Correction of Quantity Configuration for EUTRA	F	8.4.0	8.5.0	R5-100110
	RP-100143	0092	-	Correction for the offset value of RSRP in EUTRA	F	8.4.0	8.5.0	R5-100111
	RP-100143	0093	-	SIB10 and SIB11 periodicity	F	8.4.0	8.5.0	R5-100112
RAN5 #46	RP-100143	0094	-	Assignment of rootSequenceIndex for simulated NAS cells in different PLMNs	F	8.4.0	8.5.0	R5-100260
RAN5 #46	RP-100143	0095	-	Editorial correction to the default value of 'p-a'	F	8.4.0	8.5.0	R5-100261
RAN5 #46	RP-100142	0096	-	New chapter: Test environment for RRM tests	F	8.4.0	8.5.0	R5-100396
RAN5 #46	RP-100143	0097	-	Remove UM in DRB reconfiguration	F	8.4.0	8.5.0	R5-100487
RAN5 #46	RP-100143	0098	-	Addition of default power allocation for two TX antennas	F	8.4.0	8.5.0	R5-100518
RAN5 #46	RP-100143	0099	1	Correction to TFT parameters used in ACTIVATE DEDICATED EPS BEARER CONTEXT REQUEST message	F	8.4.0	8.5.0	R5-100771
RAN5 #46	RP-100143	0100	-	Update to RRC common messages for support of test cases for MIMO	F	8.4.0	8.5.0	R5-100786
RAN5 #46	RP-100152	0101	-	Adding band 20 in 36.508	F	8.4.0	8.5.0	R5-100846
	RP-100154	0102	-	CR to 36.508: Update test frequencies with extended LTE1500 operating bands	F	8.4.0	8.5.0	R5-100847
RAN5 #46	RP-100143	0103	-	Defining default message contents for ATTACH/TAU REQUEST/ACCEPT messages according to UE capability	F	8.4.0	8.5.0	R5-101021
RAN5 #46	RP-100143	0104	-	Limitation of simultaneous co-existence of intra-freq cells to reduce interference	F	8.4.0	8.5.0	R5-101029
	RP-100143	0105	-	An additional option for IP address allocation in test cases using UE test mode	F	8.4.0	8.5.0	R5-101045
	RP-100143	0106	-	Specify default UL NAS check	F	8.4.0	8.5.0	R5-101051
RAN5 #46	RP-100143	0107	-	Correct default requirement for some mandatory information elements	F	8.4.0	8.5.0	R5-101052
RAN5 #46	RP-100142	0108	-	Addition of Tracking area updating procedure	F	8.4.0	8.5.0	R5-101136
	RP-100143	0109	-	Clarification of Security Protection for NAS Messages	F	8.4.0	8.5.0	R5-101147
RAN5 #46	RP-100143	0110	-	Update to layer 2 UM test cases to increase the drx- Inactivity Timer to psf200	F	8.4.0	8.5.0	R5-101178
RAN5 #46	RP-100143	0111	-	Addition of new generic procedure for bearer establishment for MO call.	F	8.4.0	8.5.0	R5-101187
RAN5 #46	RP-100143	0112	-	update of default bandwidth configuration for signalling	F	8.4.0	8.5.0	R5-101207
RP#47	-	-	-	Moved to v9.0.0 with no change	-	8.5.0	9.0.0	-
RP#48	RP-100510	0143	-	Clarification of security protection when NAS security mode procedure has taken place outside of a TC sequence	F	9.0.0	9.1.0	R5-103085
RP#48	RP-100523	0113	-	CR to 36.508: Update of EARFCN for band 21	F	9.0.0	9.1.0	R5-103101
RP#48	RP-100510	0114	-	Correction to the default message contents of EXTENDED SERVICE REQUEST	F	9.0.0	9.1.0	R5-103128
RP#48	RP-100510	0115	-	Removal of unrealistic network behaviour from generic procedures	F	9.0.0	9.1.0	R5-103223
RP#48	RP-100510	0116	-	Correction of table numbers in clause 6.2.3.1	F	9.0.0	9.1.0	R5-103232
RP#48	RP-100510	0117	-	Correction to default values for PhysicalConfigDedicated and MIMO	F	9.0.0	9.1.0	R5-103287
RP#48	RP-100510	0118	-	Correction to SR-ConfigIndex for LTE TDD signalling test cases	F	9.0.0	9.1.0	R5-103290
RP#48	RP-100510	0119	-	Correction to MME Group ID to set MSB to 1	F	9.0.0	9.1.0	R5-103298
RP#48	RP-100500	0144	-	Connection diagram for test 8.11.2 (3 cells)	F	9.0.0	9.1.0	R5-103311
RP#48	RP-100510	0120	-	New combination of system information blocks for CSG Cell in TS 36.508	F	9.0.0	9.1.0	R5-103363
RP#48	RP-100510	0121	-	Clarification of security protection for detach request message	F	9.0.0	9.1.0	R5-103368

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current		Doc-2nd- Level
	RP-100510	0122	-	Corrections to cell numbers for 3GPP2 Inter-RAT network scenarios	F	9.0.0	9.1.0	R5-103374
RP#48	RP-100510	0140	-	Bearer Context Request message	F	9.0.0	9.1.0	R5-103625
RP#48	RP-100510	0141	-	Clarification to default message content for RRC Connection Reconfiguration message	F	9.0.0	9.1.0	R5-103626
RP#48	RP-100524	0123	-	Addition of WLAN test cell	F	9.0.0	9.1.0	R5-103647
RP#48	RP-100524	0124	-	Addition of default message contents for mobility management based on DSMIPv6 testing	F	9.0.0	9.1.0	R5-103648
RP#48	RP-100510	0125	-	Update default message contents for EPS attach conditions	F	9.0.0	9.1.0	R5-103673
RP#48	RP-100510	0126	-	Update default message with network support for IMS voice	F	9.0.0	9.1.0	R5-103674
RP#48	RP-100510	0127	-	Correction to Generic Test Procedure in TS 36.508	F	9.0.0	9.1.0	R5-103675
RP#48	RP-100510	0128	-	Default settings of suitable - non-suitable cells for UTRAN/GERAN	F	9.0.0	9.1.0	R5-103677
RP#48	RP-100510	0129	-	Correction to IE schedulingRequestConfig during Handover	F	9.0.0	9.1.0	R5-103678
RP#48	RP-100510	0130	-	Update generic procedures for IMS	F	9.0.0	9.1.0	R5-103679
RP#48	RP-100510	0131	-	Aligning E-UTRAN USIM parameters for multi-RAT devices	F	9.0.0	9.1.0	R5-103680
RP#48	RP-100510	0132	-	Adding Additional Update Result handling to the default messages	F	9.0.0	9.1.0	R5-103681
RP#48	RP-100509	0133	-		F	9.0.0	9.1.0	R5-103770
RP#48	RP-100509	0134	-	Update of default bandwidth configuration for Signalling for Band 38	F	9.0.0	9.1.0	R5-103813
RP#48	RP-100524	0135	-	Addition of generic procedures for mobility management based on DSMIPv6 testing	F	9.0.0	9.1.0	R5-103858
RP#48	RP-100510	0136	-	Addition of new generic procedure for MO SMS over SGs and clarifications	F	9.0.0	9.1.0	R5-103869
RP#48	RP-100510	0137	-	Addition of generic procedures for HRPD and 1xRTT pre-registration	F	9.0.0	9.1.0	R5-103870
RP#48	RP-100510	0138	-	Introduction of reference information for test case postambles	F	9.0.0	9.1.0	R5-103875
RP#48	RP-100509	0139	-	Physical layer parameter correction to DCI formats used in RF tests	F	9.0.0	9.1.0	R5-103885
RP#49	RP-100812	0145	-		F	9.1.0	9.2.0	R5-104089
RP#49	RP-100816	0146	-	Correction to remove special configurations for UM Bearer test cases	F	9.1.0	9.2.0	R5-104106
RP#49	RP-100816	0147	-	Clarification to the procedure: UE triggered establishment of a default EPS bearer context	F	9.1.0	9.2.0	R5-104128
RP#49	RP-100816	0148		associated with an additional PDN Correction to Inter-frequency carrier frequency list in	F	9.1.0	9.2.0	R5-104169
				SIB5 and E-UTRA carrier frequency list in SIB19				
	RP-100816	0149	-	Update of 6.2.3 of 36.508 - description of default frequency for the single cell signalling test	F	9.1.0	9.2.0	R5-104220
RP#49	RP-100831	0150	-	Update of default message contents for DSMIPv6 testing	F	9.1.0	9.2.0	R5-104392
RP#49	RP-100837	0151	-	Addition of UE test state model for HRPD	F	9.1.0	9.2.0	R5-104454
RP#49	RP-100812	0152	-	Correction to Qrxlevmin in SIB 1 for RF and RRM	F	9.1.0	9.2.0	R5-104503
RP#49	RP-100816	0153	-	Specification of HRPD specific values in SIB8	F	9.1.0	9.2.0	R5-104547
RP#49	RP-100816	0154	-	Update of default bandwidth configuration for signalling	F	9.1.0	9.2.0	R5-104685
RP#49	RP-100816	0155	-	Clarification to packet filter identifier and precedence in TFT	F	9.1.0	9.2.0	R5-104702
RP#49	RP-100816	0156	-	Add P-CSCF method II for IMS	F	9.1.0	9.2.0	R5-104703
RP#49	RP-100816	0157	-	Update generic procedures for IMS	F	9.1.0	9.2.0	R5-104704
RP#49	RP-100816	0158	-	Correction of clause 4.3.3.4	F	9.1.0	9.2.0	R5-104705
RP#49	RP-100816	0159	-	Correction to Downlink Frequency for N_DL 4850	F	9.1.0	9.2.0	R5-104706

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current	Version -New	Doc-2nd- Level
	RP-100816	0160	-	Default message contents for UTRAN and GERAN	F	9.1.0	9.2.0	R5-104707
RP#49	RP-100812	0161	-	Addition of the new connection diagram for the CSI test case	F	9.1.0	9.2.0	R5-104884
RP#49	RP-100816	0162	-	Correction to reference end states	F	9.1.0	9.2.0	R5-105003
RP#49	RP-100837	0163	-	Correction for Timer Tolerances	F	9.1.0	9.2.0	R5-105050
RP#49	RP-100885	0165	-	Introduction of default message contents for HRPD overhead messages	F	9.1.0	9.2.0	-
GP#49	GP-101743	0166	_	Update of Common parameters for simulated GERAN cells for supporting GERAN-EUTRAN Inter-RAT cell reselection	F	9.2.0	9.3.0	GP-101743
RP#50	RP-101138	0167	-	MBSFN configuration for RRM tests using E-UTRA FDD cells	F	9.2.0	9.3.0	R5-106070
RP#50	RP-101155	0169	-	CR to 36.508: Update test frequencies for EUTRA TDD LTE band 41.	F	9.2.0	9.3.0	R5-106105
RP#50	RP-101142	0168	-	CR to 36.508: Correction to HRPD Overhead messages (subclause 4.4.7.1)	F	9.2.0	9.3.0	R5-106116
RP#50	RP-101142	0170	-	Addition of test frequencies for LTE-C2k interworking test cases	F	9.2.0	9.3.0	R5-106298
RP#50	RP-101142	0172	-	Addition of UTRA reference radio parameters and combination for PS RB and Speech	F	9.2.0	9.3.0	R5-106383
RP#50	RP-101142	0175	-	Correction to EUTRA carrier frequency list in SIB19	F	9.2.0	9.3.0	R5-106421
RP#50	RP-101142	0171	-	Correction to the IDENTITY RESPONSE (with IMSI) message	F	9.2.0	9.3.0	R5-106551
RP#50	RP-101142	0178	-	Correction for DRX offset start time	F	9.2.0	9.3.0	R5-106552
RP#50	RP-101142	0177	-	Correction of specific message content for generic procedures (state 2 and state 2A)	F	9.2.0	9.3.0	R5-106596
RP#50	RP-101138	0180	-	LTE-RF state 3A	F	9.2.0	9.3.0	R5-106597
RP#50	RP-101142	0176	-	Correction to security protection header for Identity Request message	F	9.2.0	9.3.0	R5-106611
RP#50	RP-101142	0173	-	Addition of new system information combinations	F	9.2.0	9.3.0	R5-106616
RP#50	RP-101142	0174	-	Remove SS requirement for IMS in UTRA	F	9.2.0	9.3.0	R5-106690
RP#50	RP-101159	0179	-	Corrections to default settings for Elementary Files (EFs) on Test USIM	F	9.2.0	9.3.0	R5-106819
RP#50	RP-101138	0181	-	Update of the RF exceptional RRC message	F	9.2.0	9.3.0	R5-106820
RP#51	RP-110161	0182	-	Update of HRPD overhead message parameters AccessSignature, SectorSignature	F	9.3.0	9.4.0	R5-110069
RP#51	RP-110161	0183	-	Add a new eUTRA sub-end state E2_T3440	F	9.3.0	9.4.0	R5-110105
RP#51	RP-110161	0184	-	Correction for NAS message NOTE	F	9.3.0	9.4.0	R5-110229
RP#51	RP-110161	0185	-	Addition of CSIM default contents	F	9.3.0	9.4.0	R5-110331
RP#51	RP-110161	0186	-	Update of Table 4.4.2-1 with HRPD/1xRTT frequency range info	F	9.3.0	9.4.0	R5-110332
RP#51	RP-110157	0187	-	Update of the RF exceptional RRC message	F	9.3.0	9.4.0	R5-110410
RP#51	RP-110161	0188	-	Editorial correction for IMS signalling	F	9.3.0	9.4.0	R5-110433
RP#51	RP-110161	0189	-	Correction to SIB combinations related to HeNB Cells	F	9.3.0	9.4.0	R5-110471
RP#51	RP-110161	0190	-	Correction to default message content for Detach Request message	F	9.3.0	9.4.0	R5-110472

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current		Doc-2nd- Level
	RP-110157	0191	-	Removal of Lower Humidity Limit in Normal Conditions	F	9.3.0	9.4.0	R5-110534
RP#51	RP-110157	0192	-	Correction of EARFCN numbers for band 41	F	9.3.0	9.4.0	R5-110542
RP#51	RP-110161	0193	-	Removal of "Modified contents of the EFs at the ISIM ADF (application DF) level"	F	9.3.0	9.4.0	R5-110593
RP#51	RP-110161	0194	-	Correction of the IEs for compressed mode in table 4.7B.1-5	F	9.3.0	9.4.0	R5-110601
RP#51	RP-110161	0195	-	Update to default message content for TRACKING AREA UPDATE REQUEST message	F	9.3.0	9.4.0	R5-110703
RP#51	RP-110161	0196	-	Add default APN for IMS	F	9.3.0	9.4.0	R5-110708
RP#51	RP-110161	0197	-	Introduction of over head messages for CDMA2000 1XRTT	F	9.3.0	9.4.0	R5-110710
RP#51	RP-110161	0198	-	Addition of default SMS over SGs message contents	F	9.3.0	9.4.0	R5-110875
RP#51	RP-110161	0199	-	Correction to 'Test procedure to check that UE is camped on E-UTRAN cell upon mobility from another RAT'	F	9.3.0	9.4.0	R5-110746
RP#51	RP-110161	0200	-	Correction of frequency allocations	F	9.3.0	9.4.0	R5-110788
RP#51	RP-110161	0201	-	Update of Reference packet filters contents	F	9.3.0	9.4.0	R5-110789
RP#51	RP-110157	0202	-	Correction to FDD Reference Test Frequencies for Operating Band 12	F	9.3.0	9.4.0	R5-110846
RP#51	RP-110157	0203	-	LTE RF: state 3A-RF update	F	9.3.0	9.4.0	R5-110937
RP#51	RP-110172	0204	-	Add test frequencies for bands 42, 43 (3500MHz)	F	9.3.0	9.4.0	R5-110968
RP#52	RP-110647	0205	-	Correction to default message content of LOCATION UPDATING REQUEST message	F	9.4.0	9.5.0	R5-112114
RP#52	RP-110647	0206	-	Correction to default message content of TRACKING AREA UPDATE REQUEST message	F	9.4.0	9.5.0	R5-112120
RP#52	RP-110643	0207	-	PRACH-Config-DEFAULT for RF-tests TDD: Correction to derivation path	F	9.4.0	9.5.0	R5-112146
RP#52	RP-110643	0208	-	Correction to connection diagram for CQI with uneven interference test (A.21)	F	9.4.0	9.5.0	R5-112147
RP#52	RP-110647	0209	-	Update to Common contents of system information blocks	F	9.4.0	9.5.0	R5-112161
RP#52	RP-110647	0210	-	Addition of missing labels in Figure 4.5.1-1	F	9.4.0	9.5.0	R5-112278
RP#52	RP-110647	0211	-	Corrections to Table 4.3.7-6	F	9.4.0	9.5.0	R5-112279
RP#52	RP-110647	0212	-	Update of CSIM default contents	F	9.4.0	9.5.0	R5-112285
RP#52	RP-110660	0213	-	Add emergency bearer support	F	9.4.0	9.5.0	R5-112289
RP#52	RP-110667	0214	-	Band 24 Addition to TS 36.508	F	9.4.0	9.5.0	R5-112381
RP#52	RP-110643	0215	-	New connection diagrams to Annex A	F	9.4.0	9.5.0	R5-112458
RP#52	RP-110647	0216	-	Correction to Derivation Path for RB Setup on UTRA side (condition UTRA PS RB)	F	9.4.0	9.5.0	R5-112571
RP#52	RP-110647	0217	-	Update APN check at attach	F	9.4.0	9.5.0	R5-112598
RP#52	RP-110647	0218	-	Update of SIB7 default message contents	F	9.4.0	9.5.0	R5-112599
RP#52	RP-110647	0219	-	Clarification to conditions for IP address configuration over user plane	F	9.4.0	9.5.0	R5-112600

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current	Version -New	Doc-2nd- Level
	RP-110666	0220	-	Introduction of UE Test Loop Mode C for LTE MBMS testing	F	9.4.0	9.5.0	R5-112675
RP#52	RP-110647	0222	-	Update 36.508 QoS definition for InterRat test cases	F	9.4.0	9.5.0	R5-112698
RP#52	RP-110666	0221	-	Addition of some MBMS related message definitions in TS36.508	F	9.4.0	9.5.0	R5-112748
RP#52	RP-110647	0223	-	Introduction of generic CS fall back procedures for UTRAN and GERAN	F	9.4.0	9.5.0	R5-112751
RP#52	RP-110643	0224	-	Default Bandwidth Configuration for RF Testing	F	9.4.0	9.5.0	R5-112760
RP#52	RP-110643	0225	-	Update for PRACH-Config-DEFAULT for the default TDD RRM message	F	9.4.0	9.5.0	R5-112872
RP#52	RP-110647	0205	-	Correction to default message content of LOCATION UPDATING REQUEST message	F	9.4.0	9.5.0	R5-112114
RP#52	RP-110647	0206	-	Correction to default message content of TRACKING AREA UPDATE REQUEST message	F	9.4.0	9.5.0	R5-112120
RP#52	RP-110643	0207	-	PRACH-Config-DEFAULT for RF-tests TDD: Correction to derivation path	F	9.4.0	9.5.0	R5-112146
RP#52	RP-110643	0208	-	Correction to connection diagram for CQI with uneven interference test (A.21)	F	9.4.0	9.5.0	R5-112147
RP#52	RP-110647	0209	-	Update to Common contents of system information blocks	F	9.4.0	9.5.0	R5-112161
RP#52	RP-110647	0210	-	Addition of missing labels in Figure 4.5.1-1	F	9.4.0	9.5.0	R5-112278
RP#52	RP-110647	0211	-	Corrections to Table 4.3.7-6	F	9.4.0	9.5.0	R5-112279
RP#52	RP-110647	0212	-	Update of CSIM default contents	F	9.4.0	9.5.0	R5-112285
RP#52	RP-110660	0213	-	Add emergency bearer support	F	9.4.0	9.5.0	R5-112289
RP#52	RP-110667	0214	-	Band 24 Addition to TS 36.508	F	9.4.0	9.5.0	R5-112381
RP#52	RP-110643	0215	-	New connection diagrams to Annex A	F	9.4.0	9.5.0	R5-112458
RP#52	RP-110647	0216	-	Correction to Derivation Path for RB Setup on UTRA side (condition UTRA PS RB)	F	9.4.0	9.5.0	R5-112571
RP#52	RP-110647	0217	-	Update APN check at attach	F	9.4.0	9.5.0	R5-112598
RP#52	RP-110647	0218	-	Update of SIB7 default message contents	F	9.4.0	9.5.0	R5-112599
RP#52	RP-110647	0219	-	Clarification to conditions for IP address configuration over user plane	F	9.4.0	9.5.0	R5-112600
RP#52	RP-110647	0222	-	Update 36.508 QoS definition for InterRat test cases	F	9.4.0	9.5.0	R5-112698
RP#52	RP-110666	0221	-	Addition of some MBMS related message definitions in TS36.508	F	9.4.0	9.5.0	R5-112748
RP#52	RP-110647	0223	-	Introduction of generic CS fall back procedures for UTRAN and GERAN	F	9.4.0	9.5.0	R5-112751
RP#52	RP-110643	0224	-	Default Bandwidth Configuration for RF Testing	F	9.4.0	9.5.0	R5-112760
RP#52	RP-110643	0225	-	Update for PRACH-Config-DEFAULT for the default TDD RRM message	F	9.4.0	9.5.0	R5-112872
RP#53	RP-111138	0226	-	Correction for generic CS fallback procedures for UTRAN	F	9.5.0	9.6.0	R5-113033
RP#53	RP-111138	0227	-	Correction to paging test procedure	F	9.5.0	9.6.0	R5-113163
RP#53	RP-111138	0228	-	Deletion of 'EPSOnlyAttachForced' in common part	F	9.5.0	9.6.0	R5-113195

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current		Doc-2nd- Level
RP#53	RP-111135	0229	-	Deletion of 'EPSOnlyAttachForced' in RF part	F	9.5.0	9.6.0	R5-113213
RP#53	RP-111135	0230	-	Correction to PhysicalConfigDedicated-DEFAULT for HO case	F	9.5.0	9.6.0	R5-113450
RP#53	RP-111138	0231	-	Addition of the 'Expanded 1900 MHz band' as operating band 25 to TS 36.508	F	9.5.0	9.6.0	R5-113500
RP#53	RP-111153	0232	-	Band 24 Details for Signalling part of 36.508	F	9.5.0	9.6.0	R5-113521
RP#53	RP-111138	0233	-	Add new SI combination	F	9.5.0	9.6.0	R5-113658
RP#53	RP-111138	0234	-	Update of HRPD/1xRTT test frequencies, pre- registration procedures and message contents	F	9.5.0	9.6.0	R5-113659
RP#53	RP-111138	0235	-	Correction to test procedures specific message contents	F	9.5.0	9.6.0	R5-113660
RP#53	RP-111138	0236	-	Correction to 'Test procedure to check that UE is camped on E-UTRAN cell upon mobility from another RAT'	F	9.5.0	9.6.0	R5-113661
RP#53	RP-111138	0237	-	Correction for the default NAS message contents	F	9.5.0	9.6.0	R5-113662
RP#53	RP-111138	0238	-	Update UTRA RRC messages	F	9.5.0	9.6.0	R5-113663
RP#53	RP-111138	0239	-	Update UTRA NAS messages	F	9.5.0	9.6.0	R5-113664
RP#53	RP-111138	0240	-	Addition of default GERAN message PS HANDOVER COMMAND	F	9.5.0	9.6.0	R5-113665
RP#53	RP-111138	0241	-	Update test procedure 6.4.3.7.6	F	9.5.0	9.6.0	R5-113666
RP#53	RP-111138	0242	-	Update test procedure 6.4.3.7.5	F	9.5.0	9.6.0	R5-113667
RP#53	RP-111155	0243	-	Update test frequencies for FDD LTE Band 23 in 36.508	F	9.5.0	9.6.0	R5-113749
RP#53	RP-111138	0244	-	Correction on the IE ReportConfigEUTRA-PERIODICAL definition	F	9.5.0	9.6.0	R5-113751
RP#53	RP-111148	0245	-	Correction to TS36.508 subclause 4.6.1	F	9.5.0	9.6.0	R5-113761
RP#53	RP-111145	0246	-	Combined parallel procedures between EUTRA/EPC and IMS emergency call	F	9.5.0	9.6.0	R5-113801
RP#53	RP-111135	0247	-	RF/RRM State 3A-RF: Editors note	F	9.5.0	9.6.0	R5-114037
RP#54	RP-111579	0248	-	Correction of the default message contents of Transaction Identifiers in Activate Default EPS Bearer Context and Activate Dedicated EPS Bearer Context messages	F	9.6.0	9.7.0	R5-115091
RP#54	RP-111596	0250	-	Adding band 22 (3500MHz FDD) to 36.508	F	9.6.0	9.7.0	R5-115185
RP#54	RP-111579	0251	-	Update of UE Registration pre-registration on 1xRTT registrationPeriod	F	9.6.0	9.7.0	R5-115264
RP#54	RP-111579	0252	-	Update UTRA RRC message for handover to UTRAN	F	9.6.0	9.7.0	R5-115533
RP#54	RP-111579	0253	-	Add reference default EPS bearer context for QCI 5	F	9.6.0	9.7.0	R5-115537
RP#54	RP-111579	0254	-	Correction of EPS Bearer Contexts	F	9.6.0	9.7.0	R5-115585
RP#54	RP-111579	0255	-	Correction to ESM default messages	F	9.6.0	9.7.0	R5-115618
RP#54	RP-111579	0256	_	Introduction of Combined Generic test procedure for IMS Speech call	F	9.6.0	9.7.0	R5-115619
RP#54	RP-111576	0257	-	default band configuration for RF testing in band 25	F	9.6.0	9.7.0	R5-115633
RP#54	RP-111579	0258	-	Complete the system configuration for dual mode network scenario	F	9.6.0	9.7.0	R5-115694

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current		Doc-2nd- Level
RP#54	RP-111579	0259	-	Correction to IE PhysicalConfigDedicated-DEFAULT definition in Table 4.8.2.1.6-1	F	9.6.0	9.7.0	R5-115696
RP#54	RP-111579	0260	-	Updates for 1xRTT pre-registration scenario	F	9.6.0	9.7.0	R5-115708
RP#54	RP-111579	0261	-	Update of UE 1xRTT registrationPeriod in SystemInformationBlock type8	F	9.6.0	9.7.0	R5-115750
RP#54	RP-111579	0262	-	Correction to 1xRTT Overhead Message contents	F	9.6.0	9.7.0	R5-115791
RP#55	RP-120176	0263	-	Correction to measurement control and report in default UTRA message	F	9.7.0	9.8.0	R5-120311
RP#55	RP-120176	0264	-	Update of E-UTRAN_QRXLEVMIN in SIB19 and SI2 Quater	F	9.7.0	9.8.0	R5-120312
RP#55	RP-120176	0265	-	Update of RF Reference system configurations	F	9.7.0	9.8.0	R5-120313
RP#55	RP-120179	0266	-	Correction of Physical Layer configurations	F	9.7.0	9.8.0	R5-120497
RP#55	RP-120179	0267	-	Correction of E2_T3440 state definition	F	9.7.0	9.8.0	R5-120566
RP#55	RP-120179	0268	-	Correction of default PCO value in some ESM messages	F	9.7.0	9.8.0	R5-120572
RP#55	RP-120179	0269	-	Correction to the default message content of GERAN carrier frequency group list for E-UTRA cells	F	9.7.0	9.8.0	R5-120604
RP#55	RP-120179	0270	-	Update of SystemInformationBlockType1	F	9.7.0	9.8.0	R5-120616
RP#55	RP-120179	0271	-	Update the default configuration of channel bandwidth for Band 39 for signalling testing	F	9.7.0	9.8.0	R5-120617
RP#55	RP-120179	0272	-	Correction for UE pre-registration on CDMA2000 system	F	9.7.0	9.8.0	R5-120618
RP#55	RP-120179	0273	-	Update to Reference default EPS bearer context #2	F	9.7.0	9.8.0	R5-120619
RP#55	RP-120179	0274	-	Correction to the default (UTRA) Physical Channel Reconfiguration message	F	9.7.0	9.8.0	R5-120620
RP#55	RP-120179	0275	-	Correction of default measurement gap offset	F	9.7.0	9.8.0	R5-120621
RP#55	RP-120179	0276	-	Correction to carrier bandwidth	F	9.7.0	9.8.0	R5-120677
RP#55	RP-120192	0277	-	Update generic procedure 4.5A.4	F	9.7.0	9.8.0	R5-120693
RP#55	RP-120192	0278	-	Update generic procedure 4.5A.5	F	9.7.0	9.8.0	R5-120694
RP#55	RP-120200	0280	-	Addition of the default value of Carrier Aggregation parameters	F	9.7.0	9.8.0	R5-120726
RP#55	RP-120179	0282	-	Correction of UE Release in UE capability	F	9.7.0	9.8.0	R5-120752
RP#55	RP-120179	0283	-	Introduction of generic test procedure for SRVCC call handover to UTRA	F	9.7.0	9.8.0	R5-120753
RP#55	RP-120179	0284	-	Correction to test procedure sequence 6.4.2.7A for check that UE is camped on E-UTRAN cell upon mobility from another RAT	F	9.7.0	9.8.0	R5-120754
RP#55	RP-120179	0285	-	Addition of Default UTRA RRC Connection Request message	F	9.7.0	9.8.0	R5-120756
RP#55	RP-120176	0286	-	TS 36.508: Band 23 test frequencies correction	F	9.7.0	9.8.0	R5-120800
RP#55	RP-120179	0287	-	Remove IPv4viaNAS_TestMode	F	9.7.0	9.8.0	R5-120908
RP#55	GP-120009	0288	-	Section 4.4.5 Common parameters for simulated GERAN cells – Correction to SI2 Quarter	F	9.7.0	9.8.0	GP-120009
RP#55	RP-120203	0279	-	Addition of two MBMS counting related messages in TS	F	9.8.0	10.0.0	R5-120723

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current		Doc-2nd- Level
				36.508				
RP#55	RP-120199	0281	-	Introduction of new RRC default messages for Rel-10 and MDT	F	9.8.0	10.0.0	R5-120737
RP#56	RP-120644	0290	-	Correction of power ratio allocation on PDSCH for common logical channels	F	10.0.0	10.1.0	R5-121089
RP#56	RP-120644	0291	-	Correction to default mobilityParameters message contents	F	10.0.0	10.1.0	R5-121121
RP#56	RP-120644	0292	-	Corrections to default overhead messages for HRPD	F	10.0.0	10.1.0	R5-121122
RP#56	RP-120644	0293	-	Corrections to default overhead messages for 1xRTT	F	10.0.0	10.1.0	R5-121123
RP#56	RP-120644	0294	-	Update of CSFBParametersRequest/ResponseCDMA2000 process in Registration	F	10.0.0	10.1.0	R5-121276
RP#56	RP-120641	0295	-	RRM: Definition of parameters for simulated GSM cells	F	10.0.0	10.1.0	R5-121357
RP#56	RP-120662	0296	-	SIB Combination for CA test scenarios	F	10.0.0	10.1.0	R5-121383
RP#56	RP-120644	0297	-	Addition of default value of RSRQ Cell Reselection parameters	F	10.0.0	10.1.0	R5-121384
RP#56	RP-120641	0298	-	Test frequencies for inter-band cells in RRM tests	F	10.0.0	10.1.0	R5-121407
RP#56	RP-120644	0299	-	Update generic procedure 4.5A.6	F	10.0.0	10.1.0	R5-121413
RP#56	RP-120644	0300	-	Update generic procedure 4.5A.7	F	10.0.0	10.1.0	R5-121414
RP#56	RP-120644	0301	-	Update generic procedure 4.5A.3	F	10.0.0	10.1.0	R5-121439
RP#56	RP-120644	0302	-	Correction to RadioResourceConfigCommon-DEFAULT	F	10.0.0	10.1.0	R5-121447
RP#56	RP-120641	0304	-	Removing 5.2A.3 for State 2A	F	10.0.0	10.1.0	R5-121521
RP#56	RP-120641	0305	-	Addition of A-GNSS testing to Test frequencies clause 4.3.1	F	10.0.0	10.1.0	R5-121543
RP#56	RP-120641	0306	-	Ensuring all SS TX antennas are in use for whole test sequence	F	10.0.0	10.1.0	R5-121544
RP#56	RP-120641	0307	-	Connection diagram for RRM 3 cell TCs with static propagation	F	10.0.0	10.1.0	R5-121556
RP#56	RP-120644	0308	-	Correction of Physical Layer configurations tables	F	10.0.0	10.1.0	R5-121665
RP#56	RP-120644	0309	-	Update of default bandwidth configuration for E-UTRA FDD band 11 and 18	F	10.0.0	10.1.0	R5-121712
RP#56	RP-120644	0310	-	Correction to default SIB4 contents for CSG cells	F	10.0.0	10.1.0	R5-121733
RP#56	RP-120644	0311	-	Update of CDMA2000 Band Class data and addition of CDMA2000 Band Class 10	F	10.0.0	10.1.0	R5-121734
RP#56	RP-120644	0312	-	Update to Reference dedicated EPS bearer context #3	F	10.0.0	10.1.0	R5-121735
RP#56	RP-120644	0313	-	Add generic procedure MO video call	F	10.0.0	10.1.0	R5-121736
RP#56	RP-120644	0314	-	Add generic procedure MT video call	F	10.0.0	10.1.0	R5-121737
RP#56	RP-120644	0315	-	Clarifications to UICC requirements for LTE-C2K testing	F	10.0.0	10.1.0	R5-121809
RP#56	RP-120644	0316	-	Update UE capability information	F	10.0.0	10.1.0	R5-121847
RP#56	RP-120658	0317	-	Introduction of System information for PWS	F	10.0.0	10.1.0	R5-121854
RP#56	RP-120662	0318	-	Update of the default value of Carrier Aggregation parameters	F	10.0.0	10.1.0	R5-121856

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current		Doc-2nd- Level
	RP-120644	0319	-	Correction to reference system configurations for dual mode scenarios	F	10.0.0	10.1.0	R5-121888
RP#56	RP-120667	0320	-	Adding operating band 26 to TS 36.508	F	10.0.0	10.1.0	R5-121905
RP#56	RP-120641	0321	-	Addition of State 3B-RF in 36.508	F	10.0.0	10.1.0	R5-121919
RP#56	RP-120641	0322	-	Correction to Tracking area updating procedure in 36.508	F	10.0.0	10.1.0	R5-121936
RP#56	RP-120662	0323	-	Addition of Test mode call procedure for CA test cases	F	10.0.0	10.1.0	R5-121982
RP#56	RP-120641	0303	-	Correction to Handover to UTRAN commands for UTRA RRC messages in 36.508	F	10.0.0	10.1.0	R5-122018
RP#56	RP-120662	0324	-	36.508 - Test frequencies for CA_1C and CA_40C	F	10.0.0	10.1.0	R5-122134
RP#56	RP-120649	0289	-	Removal of technical content in 36.508 v9.8.0 and substitution with pointer to the next Release	F	10.0.0	10.1.0	R5-121078
RP#56	RP-120644	0290	-	Correction of power ratio allocation on PDSCH for common logical channels	F	10.0.0	10.1.0	R5-121089
RP#56	RP-120644	0291	-	Correction to default mobilityParameters message contents	F	10.0.0	10.1.0	R5-121121
RP#56	RP-120644	0292	-	Corrections to default overhead messages for HRPD	F	10.0.0	10.1.0	R5-121122
RP#56	RP-120644	0293	-	Corrections to default overhead messages for 1xRTT	F	10.0.0	10.1.0	R5-121123
RP#56	RP-120644	0294	-	Update of CSFBParametersRequest/ResponseCDMA2000 process in Registration	F	10.0.0	10.1.0	R5-121276
RP#56	RP-120641	0295	-	RRM: Definition of parameters for simulated GSM cells	F	10.0.0	10.1.0	R5-121357
RP#56	RP-120662	0296	-	SIB Combination for CA test scenarios	F	10.0.0	10.1.0	R5-121383
RP#56	RP-120644	0297	-	Addition of default value of RSRQ Cell Reselection parameters	F	10.0.0	10.1.0	R5-121384
RP#56	RP-120641	0298	-	Test frequencies for inter-band cells in RRM tests	F	10.0.0	10.1.0	R5-121407
RP#56	RP-120644	0299	-	Update generic procedure 4.5A.6	F	10.0.0	10.1.0	R5-121413
RP#56	RP-120644	0300	-	Update generic procedure 4.5A.7	F	10.0.0	10.1.0	R5-121414
RP#56	RP-120644	0301	-	Update generic procedure 4.5A.3	F	10.0.0	10.1.0	R5-121439
RP#56	RP-120644	0302	-	Correction to RadioResourceConfigCommon-DEFAULT	F	10.0.0	10.1.0	R5-121447
RP#56	RP-120641	0304	-	Removing 5.2A.3 for State 2A	F	10.0.0	10.1.0	R5-121521
RP#56	RP-120641	0305	-	Addition of A-GNSS testing to Test frequencies clause 4.3.1	F	10.0.0	10.1.0	R5-121543
RP#56	RP-120641	0306	-	Ensuring all SS TX antennas are in use for whole test sequence	F	10.0.0	10.1.0	R5-121544
RP#56	RP-120641	0307	-	Connection diagram for RRM 3 cell TCs with static propagation	F	10.0.0	10.1.0	R5-121556
RP#56	RP-120644	0308	-	Correction of Physical Layer configurations tables	F	10.0.0	10.1.0	R5-121665
RP#56	RP-120644	0309	-	Update of default bandwidth configuration for E-UTRA FDD band 11 and 18	F	10.0.0	10.1.0	R5-121712
RP#56	RP-120644	0310	-	Correction to default SIB4 contents for CSG cells	F	10.0.0	10.1.0	R5-121733
RP#56	RP-120644	0311	-	Update of CDMA2000 Band Class data and addition of CDMA2000 Band Class 10	F	10.0.0	10.1.0	R5-121734

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current	Version -New	Doc-2nd- Level
RP#56	RP-120644	0312	-	Update to Reference dedicated EPS bearer context #3	F	10.0.0	10.1.0	R5-121735
RP#56	RP-120644	0313	-	Add generic procedure MO video call	F	10.0.0	10.1.0	R5-121736
RP#56	RP-120644	0314	-	Add generic procedure MT video call	F	10.0.0	10.1.0	R5-121737
RP#56	RP-120644	0315	-	Clarifications to UICC requirements for LTE-C2K testing	F	10.0.0	10.1.0	R5-121809
RP#56	RP-120644	0316	-	Update UE capability information	F	10.0.0	10.1.0	R5-121847
RP#56	RP-120658	0317	-	Introduction of System information for PWS	F	10.0.0	10.1.0	R5-121854
RP#56	RP-120662	0318	-	Update of the default value of Carrier Aggregation parameters	F	10.0.0	10.1.0	R5-121856
RP#56	RP-120644	0319	-	Correction to reference system configurations for dual mode scenarios	F	10.0.0	10.1.0	R5-121888
RP#56	RP-120667	0320	-	Adding operating band 26 to TS 36.508	F	10.0.0	10.1.0	R5-121905
RP#56	RP-120641	0321	-	Addition of State 3B-RF in 36.508	F	10.0.0	10.1.0	R5-121919
RP#56	RP-120641	0322	-	Correction to Tracking area updating procedure in 36.508	F	10.0.0	10.1.0	R5-121936
RP#56	RP-120662	0323	-	Addition of Test mode call procedure for CA test cases	F	10.0.0	10.1.0	R5-121982
RP#56	RP-120641	0303	-	Correction to Handover to UTRAN commands for UTRA RRC messages in 36.508	F	10.0.0	10.1.0	R5-122018
RP#56	RP-120662	0324	-	36.508 - Test frequencies for CA_1C and CA_40C	F	10.0.0	10.1.0	R5-122134
RP#57	RP-121098	0325	-	Correction to default message content of UTRA NAS attach accept message	F	10.1.0	10.2.0	R5-123114
RP#57	RP-121098	0326	-	Correction default message content for Tracking Area Update Request message	F	10.1.0	10.2.0	R5-123117
RP#57	RP-121095	0327	-	RF: Addition of messages and SIB combination informations for RF MBMS tests	F	10.1.0	10.2.0	R5-123211
RP#57	RP-121098	0328	-	Clarify requirements for ROHC	F	10.1.0	10.2.0	R5-123259
RP#57	RP-121098	0329	-	Updates to cl 6.x regarding use of MIMO	F	10.1.0	10.2.0	R5-123304
RP#57	RP-121113	0330	-	Update of default parameters for Carrier Aggregation	F	10.1.0	10.2.0	R5-123305
RP#57	RP-121098	0331	-	Addition of default value of Additional update parameters	F	10.1.0	10.2.0	R5-123306
RP#57	RP-121098	0332	-	Addition of default value of Explicit Signalling Indication parameters	F	10.1.0	10.2.0	R5-123307
RP#57	RP-121095	0333	-	Update of NeighCellConfig for RRM tests	F	10.1.0	10.2.0	R5-123328
RP#57	RP-121095	0334	-	Correction to HO commands for UTRAN TDD	F	10.1.0	10.2.0	R5-123329
RP#57	RP-121116	0335	-	Addition of new connection diagrams for UL-MIMO Testing	F	10.1.0	10.2.0	R5-123390
RP#57	RP-121098	0336	-	Correction to generic test procedure CS fallback to GERAN with redirection or CCO / MT call(DTM not supported)	F	10.1.0	10.2.0	R5-123629
RP#57	RP-121098	0337	-	Correction to RRC Connection Reconfiguration message during Handover from UTRA to EUTRA	F	10.1.0	10.2.0	R5-123630
RP#57	RP-121098	0338	-	Update to Reference dedicated EPS bearer context #3	F	10.1.0	10.2.0	R5-123632
RP#57	RP-121098	0339	-	Update generic procedure 4.5A.6	F	10.1.0	10.2.0	R5-123633
RP#57	RP-121098	0340	-	Update generic procedure 4.5A.7	F	10.1.0	10.2.0	R5-123634

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current		Doc-2nd- Level
RP#57	RP-121098	0341	-	Update generic procedure 4.5A.8	F	10.1.0	10.2.0	R5-123635
RP#57	RP-121098	0342	-	Update generic procedure 4.5A.9	F	10.1.0	10.2.0	R5-123636
RP#57	RP-121098	0343	-	Update the default value of IE RadioResourceConfigCommon and IE additionalSpectrumEmission	F	10.1.0	10.2.0	R5-123712
RP#57	RP-121098	0344	-	Correction to test procedure 6.4.2.10	F	10.1.0	10.2.0	R5-123720
RP#57	RP-121098	0345	-	Corrections to CDMA2000 message sequences	F	10.1.0	10.2.0	R5-123728
RP#57	RP-121098	0346	-	Update of UE Capability Information	F	10.1.0	10.2.0	R5-123729
RP#57	RP-121098	0347	-	Update of Paging test procedure (for NAS test cases)	F	10.1.0	10.2.0	R5-123730
RP#57	RP-121098	0348	-	Addition of guard timer to the procedure for IMS signalling	F	10.1.0	10.2.0	R5-123731
RP#57	RP-121098	0349	-	Update to cl. 6.4.2.7A and 7.2B.1	F	10.1.0	10.2.0	R5-123734
RP#57	RP-121113	0351	-	Extension of cell configurations for Carrier Aggregation	F	10.1.0	10.2.0	R5-123751
RP#57	RP-121113	0352	-	Maximum number of cells simultaneously used in Carrier Aggregation test cases	F	10.1.0	10.2.0	R5-123752
RP#57	RP-121098	0353	-	Update of default MSPL and MLPL contents in Test UICC	F	10.1.0	10.2.0	R5-123767
RP#57	RP-121113	0354	-	Correction to the CA test state references	F	10.1.0	10.2.0	R5-123949
RP#58	RP-121681	0356	-	Addition of new connection diagram for UL-MIMO testing	F	10.2.0	10.3.0	R5-125107
RP#58	RP-121659	0357	-	Update to test procedure sequence 6.4.2.7A for check that UE is camped on E-UTRAN cell upon mobility from another RAT	F	10.2.0	10.3.0	R5-125116
RP#58	RP-121677	0358	-	Introduction of connection diagrams for CA tests	F	10.2.0	10.3.0	R5-125187
RP#58	RP-121685	0359	-	Addition of default message contents for ESM NOTIFICATION message	F	10.2.0	10.3.0	R5-125219
RP#58	RP-121659	0360	-	Modification of measurement configuration for UTRAN FDD SIG	F	10.2.0	10.3.0	R5-125283
RP#58	RP-121659	0361	-	Clarification of table 6.6.2-1	F	10.2.0	10.3.0	R5-125287
RP#58	RP-121656	0362	-	Addition of channel bandwidth tested for E-UTRA FDD band 19	F	10.2.0	10.3.0	R5-125303
RP#58	RP-121656	0363	-	Correction of circulator in connection diagrams	F	10.2.0	10.3.0	R5-125370
RP#58	RP-121656	0364	-	Correction to test channel numbers for Band 26	F	10.2.0	10.3.0	R5-125372
RP#58	RP-121656	0365	-	Update of Chw Bw Parameters for 1.4MHz and 3MHz	F	10.2.0	10.3.0	R5-125373
RP#58	RP-121659	0366	-	Update generic procedure 4.5A.7	F	10.2.0	10.3.0	R5-125530
RP#58	RP-121659	0367	-	Update of default ROUTING AREA UPDATE REQUEST message	F	10.2.0	10.3.0	R5-125545
RP#58	RP-121690	0368	-	CA_38: Addition of new test frequency for CA band 38	F	10.2.0	10.3.0	R5-125573
RP#58	RP-121689	0369	-	Addition of Band 28 definition	F	10.2.0	10.3.0	R5-125778
RP#58	RP-121685	0370	-	Add generic procedure for IMS MO speech and aSRVCC	F	10.2.0	10.3.0	R5-125792
RP#58	RP-121677	0371	-	Modification to state 3A-RF-CA initial conditions of clause 5.2A.4	F	10.2.0	10.3.0	R5-125800

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current		Doc-2nd- Level
	RP-121688	0372	-	Introduction of Band 27 to TS 36.508	F	10.2.0	10.3.0	R5-125832
RP#58	RP-121677	0373	-	Update of RF Reference system configurations in 36.508	F	10.2.0	10.3.0	R5-125933
RP#58	RP-121659	0374	-	Using not null integrity protection and ciphering algorithms by default	F	10.2.0	10.3.0	R5-126020
RP#58	RP-121677	0375	-	Introducing default channel bandwidth for CA signalling testing	F	10.2.0	10.3.0	R5-126053
RP#59	RP-130156	0377	-	Addition of new connection diagram for UL-MIMO testing	F	10.3.0	10.4.0	R5-130136
RP#59	RP-130145	0378	-	AWGN Level uncertainty for Signalling test cases	F	10.3.0	10.4.0	R5-130201
RP#59	RP-130144	0379	-	Correction to CDMA2000Parameters message contents	F	10.3.0	10.4.0	R5-130202
RP#59	RP-130167	0380	-	Addition of SCell configuration type	F	10.3.0	10.4.0	R5-130311
RP#59	RP-130145	0382	-	Addition of default message contents of measurement information elements for event A4 and A5 measurement test cases	F	10.3.0	10.4.0	R5-130363
RP#59	RP-130144	0383	-	Correction to ncc-Permitted value to TS 36.508	F	10.3.0	10.4.0	R5-130453
RP#59	RP-130167	0384	-	Correction to EARFCN definition for CA_40C	F	10.3.0	10.4.0	R5-130477
RP#59	RP-130144	0385	-	Addition of combination A2+A11 and condition "UTRA Speech + Packet RAB Setup after Speech RAB Setup in CELL_DCH in Table 4.7B.1-1: HANDOVER TO UTRAN COMMAND	F	10.3.0	10.4.0	R5-130561
RP#59	RP-130144	0386	-	Update of Band 18 configuration	F	10.3.0	10.4.0	R5-130619
RP#59	RP-130144	0387	-	Update generic procedure 4.5.2	F	10.3.0	10.4.0	R5-130620
RP#59	RP-130144	0388	-	Update generic procedure 4.5.2A	F	10.3.0	10.4.0	R5-130621
RP#59	RP-130144	0389	-	Add generic procedure MO add video	F	10.3.0	10.4.0	R5-130622
RP#59	RP-130144	0390	-	Add generic procedure MT add video	F	10.3.0	10.4.0	R5-130623
RP#59	RP-130167	0391	-	Correction of test frequencies for CA signalling tests	F	10.3.0	10.4.0	R5-130692
RP#59	RP-130146	0395	-	Addition of simulated cell for E-UTRA dual mode multi cell network scenarios	F	10.3.0	10.4.0	R5-130709
RP#59	RP-130167	0397	-	Corrections to Annex A general considerations on connections for CA testing	F	10.3.0	10.4.0	R5-130900
RP#59	RP-130165	0376	-	Addition of test frequencies of CA_1A-19A and CA_1A- 21A for CA signalling testing	F	10.4.0	11.0.0	R5-130087
RP#59	RP-130165	0381	-	Addition of test frequencies for CA_7C and CA_41C signalling test	F	10.4.0	11.0.0	R5-130343
RP#59	RP-130165	0392	-	Addition of test frequencies of CA_38, CA_3-7 and CA_7-20 for CA signalling test	F	10.4.0	11.0.0	R5-130694
RP#59	RP-130165	0393	-	Addition of test frequencies of CA_4A-5A and CA_4A- 13A for CA signalling testing	F	10.4.0	11.0.0	R5-130695
RP#59	RP-130165	0394	-	Updates of 6.2.3.2 Test frequency for CA_1A-18A and 11A-18A	F	10.4.0	11.0.0	R5-130696
RP#59	RP-130164	0396	-	Adding operating band 44 to TS36.508	F	10.4.0	11.0.0	R5-130710
RP#59	RP-130165	0398	-	Addition of new test frequencies for CA band 7 and band 41	F	10.4.0	11.0.0	R5-130955
RP#60	RP-130609	0399	-	Update of CDMA2000 specification references: TS	F	10.4.0	11.1.0	R5-131067

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current		Doc-2nd- Level
				36.508				
RP#60	RP-130609	0401	-	Editorial Fix Hysteris values for event B1&B2 ReportConfigInterRAT for GERAN	F	10.4.0	11.1.0	R5-131090
RP#60	RP-130622	0402	-	elCIC: Connection diagram for 2x2 antenna configuration scenarios	F	10.4.0	11.1.0	R5-131116
RP#60	RP-130636	0403	-	CA: Connection diagrams for RRM tests	F	10.4.0	11.1.0	R5-131117
RP#60	RP-130609	0404	-	Clarification to ncc-Permitted value interpretation in TS 36.508	F	10.4.0	11.1.0	R5-131322
RP#60	RP-130626	0405	-	Maintenance of Band 23 Requirements in TS 36.508	F	10.4.0	11.1.0	R5-131462
RP#60	RP-130626	0406	-	Adding IE T3412 extended value	F	10.4.0	11.1.0	R5-131474
RP#60	RP-130611	0408	-	Addition of exception for p-MaxGERAN of SIB7	F	10.4.0	11.1.0	R5-131583
RP#60	RP-130627	0409	-	Correction of test bandwidth for band 44	F	10.4.0	11.1.0	R5-131611
RP#60	RP-130631	0410	-	Addition of default parameters for ePDCCH	F	10.4.0	11.1.0	R5-131638
RP#60	RP-130630	0411	-	Addition of default parameters for CoMP	F	10.4.0	11.1.0	R5-131667
RP#60	RP-130628	0412	-	Addition of test frequencies for CA_2A-17A and CA_4A-17A for signalling testing	F	10.4.0	11.1.0	R5-131704
RP#60	RP-130611	0413	-	Editorial update of generic procedure 4.5.2	F	10.4.0	11.1.0	R5-131804
RP#60	RP-130611	0414	-	Editorial update of generic procedure 4.5.2A	F	10.4.0	11.1.0	R5-131805
RP#60	RP-130609	0415	-	Correction of DRB Logical Channel configuration	F	10.4.0	11.1.0	R5-131806
RP#60	RP-130611	0416	-	Add generic procedure for XCAP establishment	F	10.4.0	11.1.0	R5-131807
RP#60	RP-130611	0417	-	Corrections to default messages for eMBMS testing	F	10.4.0	11.1.0	R5-131809
RP#60	RP-130611	0418	-	Complete the default MEASUREMENT CONTROL MESSAGE for LCR_TDD_UTRAN	F	10.4.0	11.1.0	R5-131872
RP#60	RP-130636	0419	-	Carrier Aggregation: PCC and SCC Configuration Update	F	10.4.0	11.1.0	R5-131885
RP#60	RP-130609	0420	-	Update of UECapabilityInformation for Rel-11 UEs	F	10.4.0	11.1.0	R5-131888
RP#60	RP-130636	0421	-	Modifications to Common Section CA settings	F	10.4.0	11.1.0	R5-132002
RP#60	RP-130636	0422	-	Correction to test frequencies for CA signalling test	F	10.4.0	11.1.0	R5-132027
RP#60	RP-130629	0423	-	Modification of default contents for UEInformationRequest message	F	10.4.0	11.1.0	R5-132029
RP#60	RP-130628	0424	-	Addition of test frequencies of CA_4-12, CA_5-12 for CA signalling test	F	10.4.0	11.1.0	R5-132041
RP#60	RP-130611	0426	-	Addition of generic procedure for IMS call release	F	10.4.0	11.1.0	R5-132066
RP#60	RP-130609	0425	-	Update of CSIM and USIM EFs	F	10.4.0	11.1.0	R5-132082
RP#60	RP-130609	0427	-	Corrections to setup of dedicated EPS bearer contexts in IMS generic procedures	F	10.4.0	11.1.0	R5-132085
RP#60	RP-130636	0428	-	Modifications to RF Section CA settings	F	10.4.0	11.1.0	R5-132106
RP#60	RP-130610	0429	-	Correction to generic MO CSFB procedures	F	10.4.0	11.1.0	R5-131496
RP#60	-	-	-	Correction in history table from v11.0.0 to v11.1.0	F	11.0.0	11.1.1	
RP#61	RP-131115	0460	-	Addition of frequency f2 to band combinations CA_2A-17A and CA_4A-17A	F	11.1.1	11.2.0	R5-133094

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current		Doc-2nd- Level
	RP-131115	0430	-	Addition of test frequencies of CA_3-8 for CA signaling test	F	11.1.1	11.2.0	R5-133113
RP#61	RP-131103	0431	-	Addition of option to use IP addresses from PCO IE in ESM INFORMATION RESPONSE	F	11.1.1	11.2.0	R5-133116
RP#61	RP-131101	0432	-	Update of CSIM Elementary File for EPRL	F	11.1.1	11.2.0	R5-133118
RP#61	RP-131103	0433	-	Correction to SystemInformationBlockType13 message (eMBMS testing)	F	11.1.1	11.2.0	R5-133159
RP#61	RP-131114	0434	-	Correction to default MBMS Counting messages	F	11.1.1	11.2.0	R5-133160
RP#61	RP-131111	0435	-	CA RRM: Phase rotator for intra-frequency static scenarios	F	11.1.1	11.2.0	R5-133224
RP#61	RP-131125	0436	-	Addition of Band 31 to 36.508	F	11.1.1	11.2.0	R5-133246
RP#61	RP-131111	0437	-	Test frequencies for RF intra-band contiguous CA tests	F	11.1.1	11.2.0	R5-133270
RP#61	RP-131115	0438	-	Update of PUCCH-ConfigDedicated-v1020-DEFAULT for TDD	F	11.1.1	11.2.0	R5-133275
RP#61	RP-131101	0439	-	Default Bandwidth Configuration for E-UTRA Band 2 RF Testing	F	11.1.1	11.2.0	R5-133306
RP#61	RP-131116	0440	-	Modification of default contents for UEInformationRequest message	F	11.1.1	11.2.0	R5-133321
RP#61	RP-131115	0441	-	Correction of reference to cell frequencies for CA signalling test cases	F	11.1.1	11.2.0	R5-133348
RP#61	RP-131101	0442	-	Correction to SID value	F	11.1.1	11.2.0	R5-133365
RP#61	RP-131101	0443	-	Update of generic procedure 4.5A.7	F	11.1.1	11.2.0	R5-133366
RP#61	RP-131101	0444	-	Update of generic procedure 4.5A.14	F	11.1.1	11.2.0	R5-133367
RP#61	RP-131111	0445	-	Update of Generic RRM procedures for CA	F	11.1.1	11.2.0	R5-133451
RP#61	RP-131113	0446	-	Default Message Contents for elCIC PCell Pattern	F	11.1.1	11.2.0	R5-133453
RP#61	RP-131103	0447	-	Corrections to the reference dedicated EPS bearer contexts	F	11.1.1	11.2.0	R5-133509
RP#61	RP-131101	0448	-	Extension of default contents of ACTIVATE DEFAULT EPS BEARER CONTEXT REQUESTS message	F	11.1.1	11.2.0	R5-133554
RP#61	RP-131101	0449	-	Corrections to allow ISIM or USIM to be used in test cases using IMS	F	11.1.1	11.2.0	R5-133582
RP#61	RP-131101	0450	-	Correction of Feature Group Indicators in Table 4.6.1-23	F	11.1.1	11.2.0	R5-133583
RP#61	RP-131101	0451	-	Correction to ROUTING AREA UPDATE ACCEPT default message contents	F	11.1.1	11.2.0	R5-133584
RP#61	RP-131115	0452	-	Addition of test frequencies of CA_3A-5A for CA signalling test	F	11.1.1	11.2.0	R5-133614
RP#61	RP-131115	0453	-	Extension of EUTRA CA test frequency configurations	F	11.1.1	11.2.0	R5-133615
RP#61	RP-131113	0454	-	Update of Measurement information element	F	11.1.1	11.2.0	R5-133645
RP#61	RP-131117	0455	-	Introduction of new default messages for eMBMS service continuity testing	F	11.1.1	11.2.0	R5-133661
RP#61	RP-131117	0456	-	Introduction of system information combinations for eMBMS service continuity testing	F	11.1.1	11.2.0	R5-133662
RP#61	RP-131118	0457	-	Addition of specific message formats for eDDA test cases.	F	11.1.1	11.2.0	R5-133674

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current		Doc-2nd- Level
RP#61	RP-131101	0458	-	Missing agreed change in 36.508	F	11.1.1	11.2.0	R5-133704
RP#61	RP-131101	0459	-	Clean up of 36.508	F	11.1.1	11.2.0	R5-133714
RP#62	RP-131864	0461	-	Correction of MBSFNAreaConfiguration and SIB combination 15	F	11.2.0	11.3.0	R5-134152
RP#62	RP-131874	0465	-	Correction to MeasConfig-DEFAULT	F	11.2.0	11.3.0	R5-134459
RP#62	RP-131876	0466	-	General clarification to CA test frequency tables for signalling	F	11.2.0	11.3.0	R5-134642
RP#62	RP-131861	0467	-	Update to MeasConfig-DEFAULT	F	11.2.0	11.3.0	R5-134645
RP#62	RP-131861	0469	-	Editorial correction to generic MO CSFB procedures	F	11.2.0	11.3.0	R5-134726
RP#62	RP-131864	0470	-	Corrections to default message contents of MBMSCountingRequest	F	11.2.0	11.3.0	R5-134727
RP#62	RP-131876	0471	-	Extension of default settings for the Elementary Files on Test UICC	F	11.2.0	11.3.0	R5-134730
RP#62	RP-131877	0472	-	Addition of CA band combinations CA_2A_29A, CA_4A_29A and CA_5A_17A	F	11.2.0	11.3.0	R5-134786
RP#62	RP-131873	0475	-	Addition of connection diagrams for CA CSI tests	F	11.2.0	11.3.0	R5-134803
RP#62	RP-131873	0477	-	Correction to PhysicalConfigDedicated-DEFAULT for SCell_AddMod	F	11.2.0	11.3.0	R5-134903
RP#62	RP-131873	0478	-	Clarification of multi antenna ports for all neighboring cells	F	11.2.0	11.3.0	R5-134904
RP#62	RP-131877	0480	-	Addition of B29 test frequencies to 36.508	F	11.2.0	11.3.0	R5-134986
RP#62	RP-131861	0481	-	Corrections to procedures for State 3A-RF	F	11.2.0	11.3.0	R5-135013
RP#62	RP-131864	0468	-	Correction to Generic Test Procedure for IMS Emergency call establishment in EUTRA: Limited Service	F	11.2.0	11.3.0	R5-135069
RP#62	RP-131864	0479	-	Correction of generic test procedure for IMS Emergency Call establishment in EUTRA limited service	F	11.2.0	11.3.0	R5-135070
RP#62	RP-131890	0462	-	Addition of test frequencies for CA_3C	F	11.3.0	12.0.0	R5-134336
RP#62	RP-131890	0463	-	Updates of 6.2.3.2 Test frequencies for CA_1A-26A	F	11.3.0	12.0.0	R5-134368
RP#62	RP-131890	0464	-	Addition of CA band combination CA_2A_5A	F	11.3.0	12.0.0	R5-134426
RP#62	RP-131873	0473	-	Addition of test frequencies of CA_3A-19A and CA_19A-21A for CA signalling testing	F	11.3.0	12.0.0	R5-134790
RP#62	RP-131890	0474	-	Addition of test frequencies for CA_3C signalling test	F	11.3.0	12.0.0	R5-134791
RP#63	RP-140329	0482	-	Adding default message content for SystemInformationBlockType14	F	12.0.0	12.1.0	R5-140075
RP#63	RP-140307	0484	-	Correction of UTRA cell carrier frequency in Table 6.3.1.3-2	F	12.0.0	12.1.0	R5-140136
RP#63	R5-140319	0485	-	CA RF: Adding connection diagram for CA 4x2 MIMO with fading scenarios	F	12.0.0	12.1.0	R5-140242
RP#63	R5-140319	0486	-	eDL-MIMO RF: Adding connection diagram for 8x2 MIMO scenarios	F	12.0.0	12.1.0	R5-140243
RP#63	RP-140307	0487	-	Correction to Table 6.4.2.7A.1-1 for TAU Request	F	12.0.0	12.1.0	R5-140325
RP#63	RP-140308	0488	-	Update of MBMS configurations	F	12.0.0	12.1.0	R5-140394
RP#63	RP-140332	0489	-	Addtion of test frequencies for CA_1A-8A	F	12.0.0	12.1.0	R5-140406

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current		Doc-2nd- Level
RP#63	R5-140319	0490	-	Correction to UL CA message exceptions	F	12.0.0	12.1.0	R5-140503
RP#63	RP-140308	0492	-	Correction to Generic Test Procedure for IMS Emergency call establishment in EUTRA: Limited Service	F	12.0.0	12.1.0	R5-140536
RP#63	R5-140319	0493	-	Update to QuantityConfig in MeasConfig DEFAULT	F	12.0.0	12.1.0	R5-140743
RP#63	RP-140331	0494	-	Correction of CA band combinations CA_1A_18A and CA_11A_18A	F	12.0.0	12.1.0	R5-140744
RP#63	R5-140319	0495	-	Adding test frequencies for CA reverse inter band combination for bands 4 and 13	F	12.0.0	12.1.0	R5-140745
RP#63	RP-140307	0496	-	Update to Generic test procedure in TS 36.508 Table 6.4.2.7A-2	F	12.0.0	12.1.0	R5-140746
RP#63	RP-140307	0497	-	Addition of procedure for EPS Bearer Deactivaton and deletion of procedure for MT release of IMS call	F	12.0.0	12.1.0	R5-140747
RP#63	RP-140332	0498	-	Addition of Rel12 reverse band combination CA_2A-5A	F	12.0.0	12.1.0	R5-140789
RP#63	RP-140325	0499	-	Addition of neighbour cell CRS and dedicated SIB-1 IE for fEICIC test cases	F	12.0.0	12.1.0	R5-140830
RP#63	R5-140319	0500	-	Addition of transmissionMode-r10 for SCC	F	12.0.0	12.1.0	R5-140928
RP#63	RP-140331	0501	-	Addition of Rel11 reverse band combinations CA_2A-29A, CA_4A-5A, CA_4A-29A, CA_5A-17A	F	12.0.0	12.1.0	R5-140998
RP#63	RP-140302	0502	-	Change of test frequencies for Band 28	F	12.0.0	12.1.0	R5-141039
RP#64	RP-140838	0503	-	Addition of CA 3A-28A to 36.508	F	12.1.0	12.2.0	R5-142114
RP#64	RP-140812	0504	-	Update to MEASUREMENT CONTROL	F	12.1.0	12.2.0	R5-142126
RP#64	RP-140815	0505	-	Update to default non-MBSFNregionLength in SystemInformationBlockType13	F	12.1.0	12.2.0	R5-142127
RP#64	RP-140815	0506	-	Editorial Update to Table 4.6.1-4A: MBSFNAreaConfiguration	F	12.1.0	12.2.0	R5-142128
RP#64	RP-140837	0507	-	Correction to default SystemInformationBlockType15 message for eMBMS testing	F	12.1.0	12.2.0	R5-142254
RP#64	RP-140838	0508	-	Updates of 6.2.3.2 Test frequency for CA_3A-26A and CA_3A-27A	F	12.1.0	12.2.0	R5-142299
RP#64	RP-140832	0509	-	Adding connection diagramms for RF/RRM Rel-11 WI-s tests	F	12.1.0	12.2.0	R5-142318
RP#64	RP-140832	0510	-	Addition of exceptions for felCIC RRM test cases	F	12.1.0	12.2.0	R5-142336
RP#64	RP-140812	0511	-	Correction to NAS UTRA Routing Area Update Accept message	F	12.1.0	12.2.0	R5-142397
RP#64	RP-140812	0512	-	Correction to the exception of SIB2	F	12.1.0	12.2.0	R5-142602
RP#64	RP-140812	0513	-	Addition of 4Tx for RF demodulation test cases	F	12.1.0	12.2.0	R5-142603
RP#64	RP-140838	0514	-	Addtion of test frequencies for CA_2A-4A and CA_5A-7A	F	12.1.0	12.2.0	R5-142768
RP#64	RP-140837	0515	-	Correction to system information combination 16 and 19 for eMBMS testing	F	12.1.0	12.2.0	R5-142844
RP#64	RP-140817	0516	-	Update to ri-ConfigIndex in Table 4.6.3-2AC CQI- ReportPeriodic-r10-DEFAULT	F	12.1.0	12.2.0	R5-142845
RP#64	RP-140815	0517	-	Correction to MFBI Frequencies in 36.508	F	12.1.0	12.2.0	R5-142846
RP#64	RP-140838	0518	-	Addition of test frequencies of CA_39A-41A for CA	F	12.1.0	12.2.0	R5-142928

Meetin g-1st- Level	Doc-1st-Level	CR	Rev	Subject	Cat	Version -Current		Doc-2nd- Level
				signalling testing in TS 36.508				
RP#64	RP-140838	0519	_	Updates to TS 36.508 for CA_27B sianlling test frequencies defined in section 6.2.3.2	F	12.1.0	12.2.0	R5-142930
RP#64	RP-140817	0520	-	Clarification of RRC message definitions	F	12.1.0	12.2.0	R5-143001
RP#64	RP-140817	0521	-	Corrections to MBMS information elements in SIB2 and SIB13	F	12.1.0	12.2.0	R5-143002
RP#64	RP-140838	0522	-	Addition of new test frequency for CA_39C	F	12.1.0	12.2.0	R5-143132
RP#64	RP-140838	0523	-	Updates to TS 36.508 for CA_27B test frequencies defined in section 4.3.1.1	F	12.1.0	12.2.0	R5-143171
RP#65	RP-141573	0524	-	Correction to notificationSF-Index-r9 in Sib13	F	12.2.0	12.3.0	R5-144185
RP#65	RP-141571	0525	-	IMS APN pre-configured IR.92 devices	F	12.2.0	12.3.0	R5-144370
RP#65	RP-141571	0526	-	Removal of transition period for Band 28 test frequency definition in 36.508	F	12.2.0	12.3.0	R5-144459
RP#65	RP-141593	0527	-	Addition of Rel11 reverse band combinations CA_1A-18A, CA_11A-18A	F	12.2.0	12.3.0	R5-144543
RP#65	RP-141594	0528	-	Addition of Rel12 reverse band combination CA_1A-26A	F	12.2.0	12.3.0	R5-144544
RP#65	RP-141593	0529	-	Editorial correction to Table 6.2.3.2-2	F	12.2.0	12.3.0	R5-144644
RP#65	RP-141594	0530	-	Addition of reverse band combinations, CA_1A-19A, CA_1A-21A, CA_3A-19A and CA_19A-21A	F	12.2.0	12.3.0	R5-144685
RP#65	RP-141587	0531	-	Addition of default parameters for Enhanced downlink control channel(s) for LTE Advanced	F	12.2.0	12.3.0	R5-144711
RP#65	RP-141593	0532	-	Removal of FFS from IEs triggered by CoMP related TCs specification	F	12.2.0	12.3.0	R5-144712
RP#65	RP-141571	0533	-	Clarification on the default setting of Security header type in SECURITY PROTECTED NAS MESSAGE	F	12.2.0	12.3.0	R5-144750
RP#65	RP-141571	0534	-	Support of 2nd PDN connectivity at UE registration	F	12.2.0	12.3.0	R5-144797
RP#65	RP-141575	0535	-	CA: New structure for test frequencies for intra-band contiguous CA	F	12.2.0	12.3.0	R5-144890
RP#65	RP-141575	0536	-	Correction to 7.2B.1 Tracking Area Updating procedure	F	12.2.0	12.3.0	R5-144929
RP#65	-	-	-	Correction concerning R5-144797 to resolve the 4.5A.X, 4.5A.Y, 4.5A.Z reference in Table 4.5.2.3-1	-	12.3.0	12.3.1	-
RP#66	RP-142075	0538	-	New CA band combination CA_1A-3A - Updates of 6.2.3.2 Test Frequency		12.3.1	12.4.0	R5-145181
RP#66	RP-142076	0539	-	Addition of E-UTRA FDD Band 30 to TS 36.508, subclause 6.2.3.1.		12.3.1	12.4.0	R5-145606
RP#66	RP-142054	0540	-	Correction to SIB8 Default Message Contents for LTE<>1XRTT		12.3.1	12.4.0	R5-145657
RP#66	RP-142057	0541	-	Correction to Test frequencies for E-UTRA FDD(5MHz) for MFBI		12.3.1	12.4.0	R5-145658
RP#66	RP-142057	0542	-	Updating dataCodingScheme of CMAS TC in 36.508		12.3.1	12.4.0	R5-145659
RP#66	RP-142074	0543	-	Correction of default parameters for Enhanced downlink control channel(s) for LTE Advanced		12.3.1	12.4.0	R5-145661
RP#66	RP-142074	0544	-	Correction to eMBMS multiband test cases		12.3.1	12.4.0	R5-145662
RP#66	RP-142059	0545	-	Harmonization of CA terminology (36.508)		12.3.1	12.4.0	R5-145663

Meetin	Doc-1st-Level	CR	Rev	Subject	Cat	Version	Version	Doc-2nd-
g-1st- Level						-Current	-New	Level
RP#66	RP-142054	0546	-	Correction to Test Frequencies for FDD Band 12->17 for 5MHZ		12.3.1	12.4.0	R5-145686
RP#66	RP-142075	0547	-	Addition of CA_1A-28A in 36.508		12.3.1	12.4.0	R5-145715
RP#66	RP-142075	0548	-	Introduction of 1+11 and 8+11 in 36.508		12.3.1	12.4.0	R5-145716
RP#66	RP-142075	0549	-	Addition of Intra-Band Non-Contiguous Default Frequencies to 36.508 Chapter 6		12.3.1	12.4.0	R5-145717
RP#66	RP-142078	0550	-	Addition of CA_18A-28A in 36.508		12.3.1	12.4.0	R5-145718
RP#66	RP-142075	0551	-	Existing CA band combination CA_39C: update test frequencies for CA_39C signalling test		12.3.1	12.4.0	R5-145739
RP#66	RP-142054	0552	-	Correction to generic procedure for EPS Bearer Deactivation		12.3.1	12.4.0	R5-145774
RP#66	RP-142054	0553	-	Corrections for Generic Test Procedure for IMS MO/MT add video establishment in E-UTRA (clause 4.5A.11 and 4.5A.12)		12.3.1	12.4.0	R5-145779
RP#66	RP-142054	0554	-	Support of 2nd PDN connectivity at UE registration - XCAP		12.3.1	12.4.0	R5-145787
RP#66	RP-142054	0555	-	Correction of CSIM Elementary File for EPRL		12.3.1	12.4.0	R5-145792
RP#66	RP-142059	0556	-	Correction of SCell_AddMod condition in MAC Configurations		12.3.1	12.4.0	R5-145793
RP#66	RP-142059	0557	-	Addition of CA_4A-7A and CA_3A-20A Test Frequencies		12.3.1	12.4.0	R5-145799
RP#66	RP-142076	0558	-	Addition of operating band 30 to TS 36.508, subclause 4.3.1.1.30		12.3.1	12.4.0	R5-145850
RP#66	RP-142059	0559	-	Addition of editor's note for MFBI Test frequencies		12.3.1	12.4.0	R5-145879
RP#66	RP-142079	0560	-	Clarifications to connection diagrams		12.3.1	12.4.0	R5-145897
RP#66	RP-142059	0562	-	Correction to message exceptions for felCIC tests		12.3.1	12.4.0	R5-145916
RP#66	RP-142075	0563	-	CA: Test frequencies for intra-band non-contiguous		12.3.1	12.4.0	R5-145923
RP#66	RP-142075	0564	-	Introduction of CA_42C for TS36.508		12.3.1	12.4.0	R5-145959
RP#66	RP-142059	0565	-	TS 36.508: Correction to CA intra-band contiguous test frequencies		12.3.1	12.4.0	R5-145962
RP#66	RP-142054	0566	-	Correction to generic procedure for UE Registration, pre-registration on 1xRTT (State 2C)		12.3.1	12.4.0	R5-145971
RP#66	RP-142054	0561	-	UE registration for RF and RRM testing		12.3.1	12.4.0	R5-145979
-	-	-	-	correction of closing bracket in Table 5.2A.5.1.1-2 of R5-145916		12.4.0	12.4.1	-
-	-	-	-	correction of missing changes of R5-145787		12.4.0	12.4.1	-

History

		Document history
V12.3.1	November 2014	Publication
V12.4.1	April 2015	Publication