ETSI TS 136 423 V15.2.0 (2018-07)



LTE;

Evolved Universal Terrestrial Radio
Access Network (E-UTRAN);
X2 Application Protocol (X2AP)
(3GPP TS 36.423 version 15.2.0 Release 15)



Reference RTS/TSGR-0336423vf20 Keywords LTE

ETSI

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

Important notice

The present document can be downloaded from: http://www.etsi.org/standards-search

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the only prevailing document is the print of the Portable Document Format (PDF) version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at https://portal.etsi.org/TB/ETSIDeliverableStatus.aspx

If you find errors in the present document, please send your comment to one of the following services: https://portal.etsi.org/People/CommitteeSupportStaff.aspx

Copyright Notification

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© ETSI 2018. All rights reserved.

DECT[™], PLUGTESTS[™], UMTS[™] and the ETSI logo are trademarks of ETSI registered for the benefit of its Members.

3GPP[™] and LTE[™] are trademarks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

oneM2M logo is protected for the benefit of its Members.

GSM[®] and the GSM logo are trademarks registered and owned by the GSM Association.

Intellectual Property Rights

Essential patents

IPRs essential or potentially essential to normative deliverables may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (https://ipr.etsi.org/).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

Trademarks

The present document may include trademarks and/or tradenames which are asserted and/or registered by their owners. ETSI claims no ownership of these except for any which are indicated as being the property of ETSI, and conveys no right to use or reproduce any trademark and/or tradename. Mention of those trademarks in the present document does not constitute an endorsement by ETSI of products, services or organizations associated with those trademarks.

Foreword

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under http://webapp.etsi.org/key/queryform.asp.

Modal verbs terminology

In the present document "shall", "shall not", "should", "should not", "may", "need not", "will", "will not", "can" and "cannot" are to be interpreted as described in clause 3.2 of the <u>ETSI Drafting Rules</u> (Verbal forms for the expression of provisions).

"must" and "must not" are NOT allowed in ETSI deliverables except when used in direct citation.

Contents

| Intell | lectual Property Rights | 2 |
|----------------------------------|---|----|
| Forev | word | 2 |
| Moda | al verbs terminology | 2 |
| | word | |
| 1 | Scope | |
| 2 | References | |
| 3 | Definitions, symbols and abbreviations | |
| 3.1 | Definitions | |
| 3.2 | Symbols | 14 |
| 3.3 | Abbreviations | 14 |
| 4 | General | |
| 4.1 | Procedure specification principles | |
| 4.2 4.3 | Forwards and backwards compatibility | |
| | Specification notations | |
| 5 | X2AP services | |
| 5.1 | X2AP procedure modules | |
| 5.2 | Parallel transactions | |
| 6 | Services expected from signalling transport | 16 |
| 7 | Functions of X2AP | 16 |
| 8 | X2AP procedures | 18 |
| 8.1 | Elementary procedures | |
| 8.2 | Basic mobility procedures | |
| 8.2.1 | Handover Preparation | |
| 8.2.1. 8.2.1. | | |
| 8.2.1 8.2.1 | 1 | |
| 8.2.1. | 1 | |
| 8.2.2 | | |
| 8.2.2. | 1 General | 25 |
| 8.2.2.2 | 1 | |
| 8.2.2. | | |
| 8.2.3 | | |
| 8.2.3. | | |
| 8.2.3 <i>.</i> . 8.2.3. | 1 | |
| 8.2.3. | 1 | |
| 8.2.4 | | |
| 8.2.4. | | |
| 8.2.4. | 1 | 29 |
| 8.2.4. | | |
| 8.2.4. | | |
| 8.3 | Global Procedures | |
| 8.3.1 8.3.1. | Load Indication | |
| 8.3.1 <i>.</i> 8.3.1 <i>.</i> | | |
| 8.3.1 8.3.1 | | |
| 8.3.1. | | |
| 8.3.2 | Error Indication | |
| 8.3.2. | | 31 |
| 8.3.2. | 1 | |
| 8.3.2. | | |
| 8.3.2. | 4 Abnormal Conditions | |

| 8.3.3 | X2 Setup | |
|--------------------|---|----|
| 8.3.3.1 | General | 33 |
| 8.3.3.2 | Successful Operation | 33 |
| 8.3.3.3 | Unsuccessful Operation | 34 |
| 8.3.3.4 | Abnormal Conditions | 34 |
| 8.3.4 | Reset | 35 |
| 8.3.4.1 | General | 35 |
| 8.3.4.2 | Successful Operation | 35 |
| 8.3.4.3 | Unsuccessful Operation | |
| 8.3.4.4 | Abnormal Conditions | |
| 8.3.5 | eNB Configuration Update | |
| 8.3.5.1 | General | |
| 8.3.5.2 | Successful Operation | |
| 8.3.5.3 | Unsuccessful Operation | |
| 8.3.5.4 | Abnormal Conditions | |
| 8.3.6 | Resource Status Reporting Initiation | |
| 8.3.6.1 | General | |
| 8.3.6.2 | Successful Operation | |
| 8.3.6.3 | Unsuccessful Operation | |
| 8.3.6.4 | Abnormal Conditions | |
| 8.3.7 | Resource Status Reporting | |
| 8.3.7.1 | General | |
| 8.3.7.2 | Successful Operation | |
| 8.3.7.3 | Unsuccessful Operation | |
| 8.3.7.4 | Abnormal Conditions | |
| 8.3.8 | Mobility Settings Change | |
| 8.3.8.1 | General | |
| 8.3.8.2 | Successful Operation | |
| 8.3.8.3 | Unsuccessful Operation | |
| 8.3.8.4 | Abnormal Conditions | |
| 8.3.9 | Radio Link Failure Indication | |
| 8.3.9.1 | General | |
| 8.3.9.1 | | |
| 8.3.9.2 8.3.9.3 | Successful Operation Unsuccessful Operation | |
| | Abnormal Conditions | |
| 8.3.9.4 | | |
| 8.3.10 | Handover Report | |
| 8.3.10.1 | General Suggestion | |
| 8.3.10.2 | Successful Operation | |
| 8.3.10.3 | Unsuccessful Operation | |
| 8.3.10.4 | Abnormal Conditions | |
| 8.3.11 | Cell Activation | |
| 8.3.11.1 | General | |
| 8.3.11.2 | Successful Operation | |
| 8.3.11.3 | Unsuccessful Operation | |
| 8.3.11.4 | Abnormal Conditions | |
| 8.3.12 | X2 Removal | |
| 8.3.12.1 | General | |
| 8.3.12.2 | Successful Operation | |
| 8.3.12.3 | Unsuccessful Operation | |
| 8.3.12.4 | Abnormal Conditions | |
| 8.3.13 | Retrieve UE Context | |
| 8.3.13.1 | General | |
| 8.3.13.2 | Successful Operation | |
| 8.3.13.3 | Unsuccessful Operation | |
| 8.3.13.4 | Abnormal Conditions | |
| 8.3.14 | EN-DC X2 Removal | |
| 8.3.14.1 | General | |
| 8.3.14.2 | Successful Operation | |
| 8.3.14.3 | Unsuccessful Operation | 49 |
| 8.3.14.4 | Abnormal Conditions | 50 |
| 8.4 | X2 Release | |
| 8.4.1 | General | 50 |

| 8.4.2 | Consequential Organization | 50 |
|--------------------|--|----|
| 8.4.2 8.4.3 | Successful Operation | |
| 8.4.3 8.4.4 | Unsuccessful Operation | |
| 8.5 | Abnormal Condition | |
| 8.5.1 | X2AP Message Transfer | |
| 8.5.2 | General | |
| 8.5.2 8.5.3 | Successful Operation | |
| 8.5.4 | Unsuccessful Operation | |
| 8.5.4 8.6 | Abnormal Condition | |
| | Procedures for Dual Connectivity | |
| 8.6.1 8.6.1.1 | SeNB Addition Preparation | |
| 0.0.1.1 | General | |
| 8.6.1.2 | Successful Operation | |
| 8.6.1.3 | Unsuccessful Operation | |
| 8.6.1.4 | Abnormal Conditions | |
| 8.6.2 | SeNB Reconfiguration Completion | |
| 8.6.2.1 | General | |
| 8.6.2.2 8.6.2.3 | Successful Operation | |
| | Abnormal Conditions | |
| 8.6.3 | MeNB initiated SeNB Modification Preparation | |
| 8.6.3.1 | General | |
| 8.6.3.2 8.6.3.3 | Successful Operation | |
| | Unsuccessful Operation | |
| 8.6.3.4 8.6.4 | Abnormal Conditions | |
| 8.6.4.1 | | |
| 8.6.4.2 | General Suppose ful Operation | |
| 8.6.4.3 | Successful Operation | |
| 8.6.4.4 | Unsuccessful Operation | |
| 8.6.5 | MeNB initiated SeNB Release | |
| 8.6.5.1 | General | |
| 8.6.5.2 | Successful Operation | |
| 8.6.5.3 | Unsuccessful Operation | |
| 8.6.5.4 | Abnormal Conditions | |
| 8.6.6 | SeNB initiated SeNB Release | |
| 8.6.6.1 | General | |
| 8.6.6.2 | Successful Operation | |
| 8.6.6.3 | Unsuccessful Operation | |
| 8.6.6.4 | Abnormal Conditions | |
| 8.6.7 | SeNB Counter Check | |
| 8.6.7.1 | General | |
| 8.6.7.2 | Successful Operation | |
| 8.6.7.3 | Unsuccessful Operation | |
| 8.6.7.4 | Abnormal Conditions | |
| 8.7 | Procedures for E-UTRAN-NR Dual Connectivity | |
| 8.7.1 | EN-DC X2 Setup | |
| 8.7.1.1 | General | |
| 8.7.1.2 | Successful Operation | |
| 8.7.1.3 | Unsuccessful Operation | |
| 8.7.1.4 | Abnormal Conditions | |
| 8.7.2 | EN-DC Configuration Update | |
| 8.7.2.1 | General | |
| 8.7.2.2 | Successful Operation | |
| 8.7.2.3 | Unsuccessful Operation | |
| 8.7.2.4 | Abnormal Conditions | |
| 8.7.3 | EN-DC Cell Activation | |
| 8.7.3.1 | General | |
| 8.7.3.2 | Successful Operation | |
| 8.7.3.3 | Unsuccessful Operation | |
| 8.7.3.4 | Abnormal Conditions | |
| 8.7.4 | SgNB Addition Preparation | |
| 8.7.4.1 | General | |
| 8712 | Successful Operation | 67 |

| 8.7.4.3 | Unsuccessful Operation | |
|--------------------|--|-----|
| 8.7.4.4 | Abnormal Conditions | |
| 8.7.5 | SgNB Reconfiguration Completion | |
| 8.7.5.1 | General | |
| 8.7.5.2 | Successful Operation | |
| 8.7.5.3 | Abnormal Conditions | |
| 8.7.6 | MeNB initiated SgNB Modification Preparation | |
| 8.7.6.1 | General | |
| 8.7.6.2 | Successful Operation | |
| 8.7.6.3 | Unsuccessful Operation | |
| 8.7.6.4 | Abnormal Conditions | |
| 8.7.7 | SgNB initiated SgNB Modification | |
| 8.7.7.1 | General | |
| 8.7.7.2 | Successful Operation | |
| 8.7.7.3 | Unsuccessful Operation | |
| 8.7.7.4 | Abnormal Conditions | |
| 8.7.8 | SgNB Change | |
| 8.7.8.1 | General | |
| 8.7.8.2 | Successful Operation | |
| 8.7.8.3 | Unsuccessful Operation | |
| 8.7.8.4 8.7.9 | Abnormal Conditions | |
| 8.7.9 8.7.9.1 | MeNB initiated SgNB Release | |
| 8.7.9.1 | Successful Operation. | |
| 8.7.9.3 | Unsuccessful Operation | |
| 8.7.9.4 | Abnormal Conditions | |
| 8.7.10 | SgNB initiated SgNB Release | |
| 8.7.10.1 | General | |
| 8.7.10.2 | Successful Operation | |
| 8.7.10.3 | Unsuccessful Operation | |
| 8.7.10.4 | | |
| 8.7.11 | SgNB Counter Check | 80 |
| 8.7.11.1 | General | 80 |
| 8.7.11.2 | Successful Operation | 81 |
| 8.7.11.3 | Unsuccessful Operation | 81 |
| 8.7.11.4 | | |
| 8.7.12 | RRC Transfer | |
| 8.7.12.1 | General | |
| 8.7.12.2 | | |
| 8.7.12.3 | | 82 |
| 8.7.13 | Secondary RAT Data Usage Report | |
| 8.7.13.1 | General | |
| 8.7.13.2 | 1 | |
| 8.7.13.3 | Unsuccessful Operation | |
| 8.7.13.4 8.7.14 | Abnormal Conditions Partial reset of EN-DC | |
| 8.7.14 8.7.14.1 | General | |
| 8.7.14.1 | | |
| 8.7.14.3 | Unsuccessful Operation | |
| 8.7.14.4 | | |
| 8.7.15 | E-UTRA – NR Cell Resource Coordination | |
| 8.7.15.1 | General | |
| 8.7.15.2 | | |
| 8.7.16 | SgNB Activity Notification | |
| 8.7.16.1 | General | |
| 8.7.16.2 | Successful Operation | 85 |
| 8.7.16.3 | Abnormal Conditions | 85 |
| 9 E | Elements for X2AP Communication | 0.5 |
| 9 с 9.0 | General | |
| 9.0 9.1 | Message Functional Definition and Content | |
| 9.1.1 | Messages for Basic Mobility Procedures | |

| 9.1.1.1 | HANDOVER REQUEST | |
|----------------------|---|--|
| 9.1.1.2 | HANDOVER REQUEST ACKNOWLEDGE | |
| 9.1.1.3 | HANDOVER PREPARATION FAILURE | |
| 9.1.1.4 | SN STATUS TRANSFER | |
| 9.1.1.5 | UE CONTEXT RELEASE | |
| 9.1.1.6 | HANDOVER CANCEL | |
| 9.1.2 | Messages for global procedures | |
| 9.1.2.1 | LOAD INFORMATION | |
| 9.1.2.2 | ERROR INDICATION | |
| 9.1.2.3 | X2 SETUP REQUEST | |
| 9.1.2.4 | X2 SETUP RESPONSE | |
| 9.1.2.5 | X2 SETUP FAILURE | |
| 9.1.2.6 | RESET REQUEST | |
| 9.1.2.7 | RESET RESPONSE | |
| 9.1.2.8 | ENB CONFIGURATION UPDATE | |
| 9.1.2.9 | ENB CONFIGURATION UPDATE ACKNOWLEDGE | |
| 9.1.2.10 | ENB CONFIGURATION UPDATE FAILURE | |
| 9.1.2.11 | RESOURCE STATUS REQUEST | |
| 9.1.2.12 | RESOURCE STATUS RESPONSE | |
| 9.1.2.13 | RESOURCE STATUS FAILURE | |
| 9.1.2.14 | RESOURCE STATUS UPDATE | |
| 9.1.2.15 | MOBILITY CHANGE REQUEST | |
| 9.1.2.16 | MOBILITY CHANGE ACKNOWLEDGE | |
| 9.1.2.17 | MOBILITY CHANGE FAILURE | |
| 9.1.2.18 | RLF INDICATION | |
| 9.1.2.19 | HANDOVER REPORT | |
| 9.1.2.20 | CELL ACTIVATION REQUEST | |
| 9.1.2.21 | CELL ACTIVATION RESPONSE | |
| 9.1.2.22 | CELL ACTIVATION FAILURE | |
| 9.1.2.23 | X2 RELEASE | |
| 9.1.2.24 | X2AP MESSAGE TRANSFER | |
| 9.1.2.25 | X2 REMOVAL REQUEST | |
| 9.1.2.26 | X2 REMOVAL EARLYPE | |
| 9.1.2.27 | X2 REMOVAL FAILURERETRIEVE UE CONTEXT REQUEST | |
| 9.1.2.28 9.1.2.29 | RETRIEVE UE CONTEXT REQUESTRETRIEVE UE CONTEXT RESPONSE | |
| 9.1.2.29 | RETRIEVE UE CONTEXT RESPONSE | |
| 9.1.2.30 | EN-DC X2 SETUP REQUEST | |
| 9.1.2.31 | EN-DC X2 SETUP RESPONSE | |
| 9.1.2.32 | EN-DC X2 SETUP FAILURE | |
| 9.1.2.34 | EN-DC A2 SETUT PAILURE EN-DC CONFIGURATION UPDATE | |
| 9.1.2.34 | EN-DC CONFIGURATION UPDATE ACKNOWLEDGE | |
| 9.1.2.36 | EN-DC CONFIGURATION UPDATE FAILURE | |
| 9.1.2.37 | EN-DC CELL ACTIVATION REQUEST | |
| 9.1.2.38 | EN-DC CELL ACTIVATION RESPONSE | |
| 9.1.2.39 | EN-DC CELL ACTIVATION FAILURE | |
| 9.1.2.40 | EN-DC X2 REMOVAL REQUEST | |
| 9.1.2.41 | EN-DC X2 REMOVAL RESPONSE | |
| 9.1.2.42 | EN-DC X2 REMOVAL FAILURE | |
| 9.1.3 | Messages for Dual Connectivity Procedures | |
| 9.1.3.1 | SENB ADDITION REQUEST | |
| 9.1.3.2 | SENB ADDITION REQUEST ACKNOWLEDGE | |
| 9.1.3.3 | SENB ADDITION REQUEST REJECT | |
| 9.1.3.4 | SENB RECONFIGURATION COMPLETE | |
| 9.1.3.5 | SENB MODIFICATION REQUEST | |
| 9.1.3.6 | SENB MODIFICATION REQUEST ACKNOWLEDGE | |
| 9.1.3.7 | SENB MODIFICATION REQUEST REJECT | |
| 9.1.3.8 | SENB MODIFICATION REQUIRED | |
| 9.1.3.9 | SENB MODIFICATION CONFIRM | |
| 9.1.3.10 | SENB MODIFICATION REFUSE | |
| 9.1.3.11 | SENB RELEASE REQUEST | |
| 9.1.3.12 | SENB RELEASE REQUIRED | |

| 9.1.3.13 | SENB RELEASE CONFIRM | |
|--------------------------|---|-----|
| 9.1.3.14 | SENB COUNTER CHECK REQUEST | 134 |
| 9.1.4 | Messages for E-UTRAN-NR Dual Connectivity Procedures | |
| 9.1.4.1 | SGNB ADDITION REQUEST | |
| 9.1.4.2 | SGNB ADDITION REQUEST ACKNOWLEDGE | |
| 9.1.4.3 | SGNB ADDITION REQUEST REJECT | |
| 9.1.4.4 | SGNB RECONFIGURATION COMPLETE | |
| 9.1.4.5 | SGNB MODIFICATION REQUEST | |
| 9.1.4.6 | SGNB MODIFICATION REQUEST ACKNOWLEDGE | |
| 9.1.4.7 | SGNB MODIFICATION REQUEST REJECT | |
| 9.1.4.8 | SGNB MODIFICATION REQUIRED | |
| 9.1.4.9 | SGNB MODIFICATION CONFIRM | |
| 9.1.4.10 | SGNB MODIFICATION REFUSE | |
| 9.1.4.11 | SGNB RELEASE REQUEST | |
| 9.1.4.12 9.1.4.13 | SGNB RELEASE REQUEST ACKNOWLEDGESGNB RELEASE REQUEST REJECT | |
| 9.1.4.13 | SGNB RELEASE REQUEST REJECT | |
| 9.1.4.14 | SGNB RELEASE CONFIRM | |
| 9.1.4.16 | SGNB COUNTER CHECK REQUEST | |
| 9.1.4.10 | SGNB CHANGE REQUIRED | |
| 9.1.4.17 | SGNB CHANGE CONFIRM | |
| 9.1.4.19 | SGNB CHANGE CONTINU | |
| 9.1.4.20 | SECONDARY RAT DATA USAGE REPORT | |
| 9.1.4.21 | RRC TRANSFER | |
| 9.1.4.22 | PARTIAL RESET REQUIRED | |
| 9.1.4.23 | PARTIAL RESET CONFIRM | |
| 9.1.4.24 | E-UTRA – NR CELL RESOURCE COORDINATION REQUEST | |
| 9.1.4.25 | E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE | |
| 9.1.4.26 | SGNB ACTIVITY NOTIFICATION | |
| 9.2 | Information Element definitions | |
| 9.2.0 | General | |
| 9.2.1 | GTP Tunnel Endpoint | |
| 9.2.2 | Trace Activation | |
| 9.2.3 | Handover Restriction List | 167 |
| 9.2.4 | PLMN Identity | 169 |
| 9.2.5 | DL Forwarding | |
| 9.2.6 | Cause | |
| 9.2.7 | Criticality Diagnostics | |
| 9.2.8 | Served Cell Information | |
| 9.2.9 | E-RAB Level QoS Parameters | |
| 9.2.10 | GBR QoS Information | |
| 9.2.11 | Bit Rate | |
| 9.2.12 | UE Aggregate Maximum Bit Rate | |
| 9.2.13 | Message Type | |
| 9.2.14 | ECGI | |
| 9.2.15 | COUNT Value | |
| 9.2.16 | GUMMEI | |
| 9.2.17 | UL Interference Overload Indication | |
| 9.2.18 | UL High Interference Indication | |
| 9.2.19 | Relative Narrowband Tx Power (RNTP) | |
| 9.2.20 | GU Group Id | |
| 9.2.21 | Location Reporting Information | |
| 9.2.22 | Global eNB ID. | |
| 9.2.23 | E-RAB ID | |
| 9.2.24 | eNB UE X2AP ID | |
| 9.2.25 | Subscriber Profile ID for RAT/Frequency priority | |
| 9.2.26 9.2.27 | EARFCN | |
| 9.2.2 <i>1</i> 9.2.28 | Transmission Bandwidth | |
| 9.2.28 9.2.29 | E-RAB List | |
| | | |
| 9.2.30 | AS Security Information | |
| 9.2.31 | Allocation and Retention Priority | |

| 9.2.32 | Time To Wait | 190 |
|--------|--|-----|
| 9.2.33 | SRVCC Operation Possible | 190 |
| 9.2.34 | Hardware Load Indicator | |
| 9.2.35 | S1 TNL Load Indicator | |
| 9.2.36 | Load Indicator | |
| 9.2.37 | Radio Resource Status | |
| 9.2.38 | UE History Information | |
| 9.2.39 | Last Visited Cell Information | |
| 9.2.40 | Last Visited E-UTRAN Cell Information | |
| 9.2.41 | Last Visited GERAN Cell Information | |
| 9.2.42 | Cell Type | |
| 9.2.43 | Number of Antenna Ports | |
| 9.2.44 | Composite Available Capacity Group | |
| 9.2.45 | Composite Available Capacity | |
| 9.2.46 | Cell Capacity Class Value | |
| 9.2.47 | Capacity Value | |
| 9.2.48 | Mobility Parameters Information | |
| 9.2.49 | Mobility Parameters Modification Range | |
| 9.2.50 | PRACH Configuration | |
| 9.2.51 | Subframe Allocation | |
| 9.2.52 | CSG Membership Status | |
| 9.2.53 | CSG ID | |
| 9.2.54 | ABS Information | |
| 9.2.55 | Invoke Indication | |
| 9.2.56 | MDT Configuration | |
| 9.2.57 | Void | |
| 9.2.58 | ABS Status | |
| 9.2.59 | Management Based MDT Allowed | |
| 9.2.60 | MultibandInfoList | |
| 9.2.61 | M3 Configuration | |
| 9.2.62 | M4 Configuration | |
| 9.2.63 | M5 Configuration | |
| 9.2.64 | MDT PLMN List | |
| 9.2.65 | EARFCN Extension. | |
| 9.2.66 | COUNT Value Extended | |
| 9.2.67 | Extended UL Interference Overload Info | |
| 9.2.68 | RNL Header | |
| 9.2.69 | Masked IMEISV | |
| 9.2.70 | Expected UE Behaviour | |
| 9.2.71 | Expected UE Activity Behaviour | |
| 9.2.72 | SeNB Security Key | |
| 9.2.73 | SCG Change Indication | |
| 9.2.74 | CoMP Information | |
| 9.2.75 | CoMP Hypothesis Set | |
| 9.2.76 | RSRP Measurement Report List | |
| 9.2.77 | Dynamic DL transmission information | |
| 9.2.78 | ProSe Authorized | |
| 9.2.79 | CSI Report | |
| 9.2.80 | Wideband CQI | |
| 9.2.81 | Subband CQI | |
| 9.2.82 | COUNT Value for PDCP SN Length 18 | |
| 9.2.83 | LHN ID | |
| 9.2.84 | Correlation ID. | |
| 9.2.85 | UE Context Kept Indicator | |
| 9.2.86 | eNB UE X2AP ID Extension. | |
| 9.2.87 | M6 Configuration | |
| 9.2.88 | M7 Configuration | |
| 9.2.89 | Tunnel Information | |
| 9.2.90 | X2 Benefit Value | |
| 9.2.91 | Resume ID | |
| 9.2.92 | Bearer Type | |
| 9 2 93 | V2X Services Authorized | 211 |

| History | | 389 |
|---------|--|-----|
| Annex A | A (informative): Change history | 383 |
| 10 H | andling of unknown, unforeseen and erroneous protocol data | 382 |
| 9.5 | Timers | 382 |
| 9.4 | Message transfer syntax | |
| 9.3.8 | Container definitions | |
| 9.3.7 | Constant definitions | |
| 9.3.6 | Common definitions | |
| 9.3.5 | Information Element definitions | |
| 9.3.4 | PDU Definitions | |
| 9.3.3 | Elementary Procedure Definitions | |
| 9.3.2 | Usage of Private Message Mechanism for Non-standard Use | |
| 9.3.1 | General | |
| 9.3 | Message and Information Element Abstract Syntax (with ASN.1) | |
| 9.2.130 | User plane traffic activity report | |
| 9.2.129 | Aerial UE subscription information | |
| 9.2.128 | Reserved Subframe Pattern | |
| 9.2.127 | Data Traffic Resources | |
| 9.2.126 | Data Traffic Resource Indication | |
| 9.2.125 | Protected E-UTRA Resource Indication | |
| 9.2.124 | Packet Loss Rate | |
| 9.2.123 | SUL Information | |
| 9.2.122 | DRB ID | |
| 9.2.121 | UE Application layer measurement configuration | |
| 9.2.120 | Secondary RAT Usage Report List | |
| 9.2.119 | RLC Mode | |
| 9.2.118 | UL Configuration | |
| 9.2.117 | SgNB Resource Coordination Information | |
| 9.2.116 | MeNB Resource Coordination Information | |
| 9.2.115 | Cell Assistance Information | |
| 9.2.114 | NR Transmission Bandwidth | |
| 9.2.113 | NR Carrier Information | |
| 9.2.112 | Global en-gNB ID. | |
| 9.2.111 | NR CGI | |
| 9.2.110 | Served NR Cell Information | |
| 9.2.109 | PDCP Change Indication | |
| 9.2.108 | EN-DC Resource Configuration | |
| 9.2.107 | NR UE Security Capabilities | |
| 9.2.106 | NR Frequency Info | |
| 9.2.105 | Void | |
| 9.2.104 | Delivery Status | |
| 9.2.103 | SCG Configuration Query | |
| 9.2.102 | Target SgNB ID Information | |
| 9.2.101 | SgNB Security Key | |
| 9.2.100 | en-gNB UE X2AP ID | |
| 9.2.99 | Extended Bit Rate | |
| 9.2.97 | UE Sidelink Aggregate Maximum Bit Rate | |
| 9.2.96 | WT UE XwAP ID | |
| 9.2.95 | WT ID | |
| 9.2.94 | Offset of NB-IoT Channel Number to EARFCN | 212 |

Foreword

This Technical Specification has been produced by the 3rd Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

where:

- x the first digit:
 - 1 presented to TSG for information;
 - 2 presented to TSG for approval;
 - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

1 Scope

[16]

The present document specifies the radio network layer signalling procedures of the control plane between eNBs in E-UTRAN. X2AP supports the functions of X2 interface by signalling procedures defined in this document. X2AP is developed in accordance to the general principles stated in TS 36.401 [2] and TS 36.420 [3].

2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.
- 3GPP TR 21.905: "Vocabulary for 3GPP Specifications". [1] 3GPP TS 36.401: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); [2] Architecture Description". 3GPP TS 36.420: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); X2 General [3] Aspects and Principles". [4] 3GPP TS 36.413: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); S1 Application Protocol (S1AP)". [5] ITU-T Recommendation X.691 (2002-07): "Information technology - ASN.1 encoding rules -Specification of Packed Encoding Rules (PER) ". [6] 3GPP TS 32.422: "Telecommunication Management; Subscriber and Equipment Trace; Trace Control and Configuration Management". [7] 3GPP TS 32.421: "Telecommunication Management; Subscriber and Equipment Trace; Trace concepts and requirements". [8] 3GPP TS 36.424: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); X2 data transport". [9] 3GPP TS 36.331: "Evolved Universal Terrestrial Radio Access (E-UTRAN); Radio Resource Control (RRC) Protocol Specification". [10] 3GPP TS 36.211: "Evolved Universal Terrestrial Radio Access (E-UTRA); Physical Channels and Modulation". 3GPP TS 36.213: "Evolved Universal Terrestrial Radio Access (E-UTRA); Physical layer [11] procedures ". 3GPP TS 23.401: "General Packet Radio Service (GPRS) enhancements for Evolved Universal [12] Terrestrial Radio Access Network (E-UTRAN) access". 3GPP TS 23.203: "Policy and charging control architecture". [13] [14] 3GPP TS 24.301: "Non-Access-Stratum (NAS) protocol for Evolved Packet System; Stage 3". 3GPP TS 36.300: "Evolved Universal Terrestrial Radio Access (E-UTRA), Evolved Universal [15] Terrestrial Radio Access Network (E-UTRAN); Overall description; stage 2".

3GPP TS 36.104: "Base Station (BS) radio transmission and reception ".

| [17] | Void. |
|------|---|
| [18] | 3GPP TS 33.401: "Security architecture". |
| [19] | 3GPP TS 36.414: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); S1 data transport". |
| [20] | 3GPP TS 23.216: "Single Radio Voice Call Continuity (SRVCC)". |
| [21] | 3GPP TS 36.422: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); X2 signaling transport". |
| [22] | 3GPP TS 36.314: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Layer 2 - Measurements". |
| [23] | Void. |
| [24] | 3GPP TS 25.413: "UTRAN Iu interface RANAP signalling" |
| [25] | 3GPP TS 37.320: "Universal Terrestrial Radio Access (UTRA) and Evolved Universal Terrestrial Radio Access (E-UTRA); Radio measurement collection for Minimization of Drive Tests (MDT);Overall description; Stage 2". |
| [26] | 3GPP TS 29.281: "General Packet Radio Service (GPRS); Tunnelling Protocol User Plane (GTPv1-U)". |
| [27] | ITU-T Recommendation X.680 (2002-07): "Information technology – Abstract Syntax Notation One (ASN.1): Specification of basic notation". |
| [28] | ITU-T Recommendation X.681 (2002-07): "Information technology – Abstract Syntax Notation One (ASN.1): Information object specification". |
| [29] | 3GPP TS 23.003: "Technical Specification Group Core Network and Terminals; Numbering, addressing and identification". |
| [30] | 3GPP TR 25.921 (version.7.0.0): "Guidelines and principles for protocol description and error handling". |
| [31] | 3GPP TS 38.331: "NR; Radio Resource Control (RRC); Protocol Specification". |
| [32] | 3GPP TS 37.340: "Evolved Universal Terrestrial Radio Access (E-UTRA) and NR; Multiconnectivity; Stage 2". |
| [33] | 3GPP TS 38.323: "NR; Packet Data Convergence Protocol (PDCP) specification". |
| [34] | 3GPP TS 38.401: "NG-RAN; Architecture description". |
| [35] | IETF RFC 5905: "Network Time Protocol Version 4: Protocol and Algorithms Specification". |
| [36] | 3GPP TS 26.247: "Transparent end-to-end Packet-switched Streaming Service (PSS); Progressive Download and Dynamic Adaptive Streaming over HTTP (3GP-DASH)". |
| [37] | 3GPP TS 38.104: "NR; Base Station (BS) radio transmission and reception". |
| [38] | 3GPP TS 23.501: "System Architecture for the 5G System" |

3 Definitions, symbols and abbreviations

3.1 Definitions

For the purposes of the present document, the terms and definitions given in TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in TR 21.905 [1].

Elementary Procedure: X2AP protocol consists of Elementary Procedures (EPs). An X2AP Elementary Procedure is a unit of interaction between two eNBs. An EP consists of an initiating message and possibly a response message. Two kinds of EPs are used:

- Class 1: Elementary Procedures with response (success or failure),

- Class 2: Elementary Procedures without response.

E-RAB: Defined in TS 36.401 [2].

CSG Cell: as defined in TS 36.300 [15].

Dual Connectivity: as defined in TS 36.300 [15].

E-UTRA-NR Dual Connectivity: as defined in TS 37.340 [32].

Hybrid cell: as defined in TS 36.300 [15].

Master eNB: as defined in TS 36.300 [15].

Secondary Cell Group: as defined in TS 36.300 [15].

Secondary eNB: as defined in TS 36.300 [15].

en-gNB: as defined in TS 37.340 [32].

3.2 Symbols

For the purposes of the present document, the following symbols apply:

<symbol> <Explanation>

3.3 Abbreviations

For the purposes of the present document, the abbreviations given in TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in TR 21.905 [1].

ABS Almost Blank Subframe BBF Broadband Forum

BL Bandwidth reduced Low complexity

CCO Cell Change Order
CE Coverage Enhancement
CoMP Coordinated Multi Point
DC Dual Connectivity

DL Downlink

EARFCN E-UTRA Absolute Radio Frequency Channel Number

E-CID Enhanced Cell-ID (positioning method)

eNB E-UTRAN NodeB

EN-DC E-UTRA-NR Dual Connectivity

EP Elementary Procedure EPC Evolved Packet Core

E-RAB E-UTRAN Radio Access Bearer

E-UTRAN Evolved UTRAN

GNSS Global Navigation Satellite System GUMMEI Globally Unique MME Identifier

HFN Hyper Frame Number IE Information Element L-GW Local GateWay

LWA LTE-WLAN Aggregation MCG Master Cell Group

MDT Minimization of Drive Tests

MeNB Master eNB

MME Mobility Management Entity

MTSI Multimedia Telephony Service for IMS

NAICS Network-Assisted Interference Cancellation and Suppression

NR New Radio

PDCP Packet Data Convergence Protocol PLMN Public Land Mobile Network

ProSe Proximity Service

QMC QoE Measurement Collection

QoE Quality of Experience SCG Secondary Cell Group S-GW Serving Gateway SeNB Secondary eNB SgNB Secondary gNB

SIPTO Selected IP Traffic Offload

SIPTO@LN Selected IP Traffic Offload at the Local Network

SN Sequence Number TAC Tracking Area Code UE User Equipment

UL Uplink

V2X Vehicle-to-Everything WLAN Wireless Local Area Network

WT WLAN Termination

4 General

4.1 Procedure specification principles

The principle for specifying the procedure logic is to specify the functional behaviour of the terminating eNB exactly and completely. Any rule that specifies the behaviour of the originating eNB shall be possible to be verified with information that is visible within the system.

The following specification principles have been applied for the procedure text in clause 8:

- The procedure text discriminates between:
 - 1) Functionality which "shall" be executed

The procedure text indicates that the receiving node "shall" perform a certain function Y under a certain condition. If the receiving node supports procedure X but cannot perform functionality Y requested in the initiating message of a Class 1 EP, the receiving node shall respond with the message used to report unsuccessful outcome for this procedure, containing an appropriate cause value.

2) Functionality which "shall, if supported" be executed

The procedure text indicates that the receiving node "shall, if supported," perform a certain function Y under a certain condition. If the receiving node supports procedure X, but does not support functionality Y, the receiving node shall proceed with the execution of the EP, possibly informing the requesting node about the not supported functionality.

- Any required inclusion of an optional IE in a response message is explicitly indicated in the procedure text. If the procedure text does not explicitly indicate that an optional IE shall be included in a response message, the optional IE shall not be included. For requirements on including *Criticality Diagnostics* IE, see section 10.

4.2 Forwards and backwards compatibility

The forwards and backwards compatibility of the protocol is assured by a mechanism where all current and future messages, and IEs or groups of related IEs, include ID and criticality fields that are coded in a standard format that will not be changed in the future. These parts can always be decoded regardless of the standard version.

4.3 Specification notations

For the purposes of the present document, the following notations apply:

Procedure When referring to an elementary procedure in the specification the Procedure Name is written with

the first letters in each word in upper case characters followed by the word "procedure", e.g.

Handover Preparation procedure.

Message When referring to a message in the specification the MESSAGE NAME is written with all letters

in upper case characters followed by the word "message", e.g. HANDOVER REQUEST message.

IE When referring to an information element (IE) in the specification the *Information Element Name*

is written with the first letters in each word in upper case characters and all letters in Italic font

followed by the abbreviation "IE", e.g. E-RAB ID IE.

Value of an IE When referring to the value of an information element (IE) in the specification the "Value" is

written as it is specified in sub clause 9.2 enclosed by quotation marks, e.g. "Value".

5 X2AP services

The present clause describes the services an eNB offers to its neighbours.

5.1 X2AP procedure modules

The X2 interface X2AP procedures are divided into two modules as follows:

- 1. X2AP Basic Mobility Procedures;
- 2. X2AP Global Procedures;

The X2AP Basic Mobility Procedures module contains procedures used to handle the UE mobility within E-UTRAN.

The Global Procedures module contains procedures that are not related to a specific UE. The procedures in this module are in contrast to the above module involving two peer eNBs.

5.2 Parallel transactions

Unless explicitly indicated in the procedure specification, at any instance in time one protocol peer shall have a maximum of one ongoing X2AP procedure related to a certain UE.

6 Services expected from signalling transport

The signalling connection shall provide in sequence delivery of X2AP messages. X2AP shall be notified if the signalling connection breaks.

X2 signalling transport is described in TS 36.422 [21].

7 Functions of X2AP

The X2AP protocol provides the following functions:

- Mobility Management. This function allows the eNB to move the responsibility of a certain UE to another eNB.
 Forwarding of user plane data, Status Transfer and UE Context Release function are parts of the mobility management.
- Dual Connectivity. This function allows the eNB to request another eNB to provide radio resources for a certain UE while keeping responsibility for that UE.
- E-UTRA-NR Dual Connectivity. This function allows the eNB to request another en-gNB to provide radio resources for a certain UE while keeping responsibility for that UE.

- Load Management. This function is used by eNBs to indicate resource status, overload and traffic load to each other.
- Reporting of General Error Situations. This function allows reporting of general error situations, for which function specific error messages have not been defined.
- Resetting the X2. This function is used to reset the X2 interface.
- Setting up the X2. This function is used to exchange necessary data for the eNB or en-gNB for setup the X2 interface and implicitly perform an X2 Reset.
- eNB Configuration Update. This function allows updating of application level data needed for two eNBs to interoperate correctly over the X2 interface.
- Mobility Parameters Management. This function allows the eNB to coordinate adaptation of mobility parameter settings with a peer eNB.
- Mobility Robustness Optimisation. This function allows reporting of information related to mobility failure events.
- Energy Saving. This function allows decreasing energy consumption by enabling indication of cell activation/deactivation over the X2 interface.
- X2 Release. This function allows an eNB to be aware that the signalling connection to a peer eNB is unavailable.
- Message Transfer. This function allows indirect transport of X2AP messages to a peer eNB.
- Registration. This function allows registration of eNB in case indirect transport of X2AP messages is supported.
- Removing the X2. This function allows removing the signalling connection between two eNBs or between eNB and en-gNB in a controlled manner.
- Inter-eNB UE Context Resume. This function allows retrieval of a suspended UE context.
- Secondary RAT Data Usage Report. This function allows eNB to get the uplink and downlink data volumes for the Secondary RAT on a per E-RAB basis.
- E-UTRA NR Spectrum Sharing. This function allows uplink and downlink spectrum sharing between a number of E UTRA and a number of NR cells with overlapping coverage.

The mapping between the above functions and X2 EPs is shown in the table below.

Table 7-1: Mapping between X2AP functions and X2AP EPs

| Function | Elementary Procedure(s) |
|---------------------------------------|---|
| Mobility Management | a) Handover Preparation |
| Wobinty Wariagomone | b) SN Status Transfer |
| | c) UE Context Release |
| | d) Handover Cancel |
| Dual Connectivity | a) SeNB Addition Preparation |
| Buai Commodivity | b) SeNB Reconfiguration Completion |
| | c) MeNB initiated SeNB Modification |
| | Preparation |
| | d) SeNB initiated SeNB Modification |
| | e) MeNB initiated SeNB Release |
| | f) SeNB initiated SeNB Release |
| | g) SeNB Counter Check |
| E-UTRA-NR Dual Connectivity | a) SgNB Addition Preparation |
| L-0 TKA-NK Buai Connectivity | b) SgNB Reconfiguration Completion |
| | c) MeNB initiated SgNB Modification |
| | Preparation |
| | d) SgNB initiated SgNB Modification |
| | e) SgNB change |
| | f) MeNB initiated SgNB Release |
| | g) SgNB initiated SgNB Release |
| | h) SgNB Counter Check |
| | i) RRC transfer |
| | j) EN-DC X2 Setup |
| | k) EN-DC Configuration Update |
| | I) EN-DC Cell Activation |
| | m) SgNB Activity Notification |
| | n) EN-DC X2 Removal |
| Load Management | a) Load Indication |
| Load Management | b) Resource Status Reporting Initiation |
| | c) Resource Status Reporting |
| Reporting of General Error Situations | Error Indication |
| Resetting the X2 | Reset |
| Setting up the X2 | X2 Setup |
| eNB Configuration Update | a) eNB Configuration Update |
| eND Configuration Opuate | b) Cell Activation |
| Mobility Parameters Management | Mobility Settings Change |
| Mobility Robustness Optimisation | a) Radio Link Failure Indication |
| Modality Robustioos Optimoditori | b) Handover Report |
| Energy Saving | a) eNB Configuration Update |
| Lifergy Cavilly | b) Cell Activation |
| X2 Release | X2 Release |
| Message Transfer Registration | X2AP Message Transfer |
| Removing the X2 | X2 Removal |
| | |
| Inter-eNB UE Context Resume | Retrieve UE Context |
| Secondary RAT Data Usage Report | Secondary RAT Data Usage Report |
| E-UTRA – NR Spectrum Sharing | E-UTRA - NR Cell Resource Coordination |

8 X2AP procedures

8.1 Elementary procedures

In the following tables, all EPs are divided into Class 1 and Class 2 EPs.

Table 8.1-1: Class 1 Elementary Procedures

| Elementary | Initiating Message | Successful Outcome | Unsuccessful Outcome |
|--|---|--|-------------------------------------|
| Procedure | | Response message | Response message |
| Handover Preparation | HANDOVER REQUEST | HANDOVER REQUEST | HANDOVER PREPARATION FAILURE |
| | | ACKNOWLEDGE | |
| Reset | RESET REQUEST | RESET RESPONSE | |
| X2 Setup | X2 SETUP REQUEST | X2 SETUP RESPONSE | X2 SETUP FAILURE |
| eNB | ENB | ENB | ENB CONFIGURATION |
| Configuration Update | CONFIGURATION UPDATE | CONFIGURATION UPDATE | UPDATE FAILURE |
| ' | | ACKNOWLEDGE | |
| Resource Status Reporting Initiation | RESOURCE STATUS REQUEST | RESOURCE STATUS RESPONSE | RESOURCE STATUS FAILURE |
| Mobility Settings | MOBILITY CHANGE | MOBILITY CHANGE | MOBILITY CHANGE |
| Change | REQUEST | ACKNOWLEDGE | FAILURE |
| Cell Activation | CELL ACTIVATION REQUEST | CELL ACTIVATION RESPONSE | CELL ACTIVATION FAILURE |
| SeNB Addition | SENB ADDITION | SENB ADDITION | SENB ADDITION |
| Preparation | REQUEST | REQUEST ACKNOWLEDGE | REQUEST REJECT |
| MeNB initiated SeNB Modification | SENB MODIFICATION REQUEST | SENB MODIFICATION REQUEST ACKNOWLEDGE | SENB MODIFICATION REQUEST REJECT |
| Preparation | | | |
| SeNB initiated SeNB Modification | SENB MODIFICATION REQUIRED | SENB MODIFICATION CONFIRM | SENB MODIFICATION REFUSE |
| SeNB initiated | SENB RELEASE | SENB RELEASE | |
| SeNB Release | REQUIRED | CONFIRM | |
| X2 Removal | X2 REMOVAL REQUEST | X2 REMOVAL RESPONSE | X2 REMOVAL FAILURE |
| Retrieve UE | RETRIEVE UE | RETRIEVE UE | RETRIEVE UE CONTEXT |
| Context | CONTEXT REQUEST | CONTEXT RESPONSE | FAILURE |
| SgNB Addition | SGNB ADDITION | SGNB ADDITION | SGNB ADDITION |
| Preparation | REQUEST | REQUEST ACKNOWLEDGE | REQUEST REJECT |
| MeNB initiated SgNB Modification Preparation | SGNB MODIFICATION REQUEST | SGNB MODIFICATION REQUEST ACKNOWLEDGE | SGNB MODIFICATION REQUEST REJECT |
| SgNB initiated SgNB Modification | SGNB MODIFICATION REQUIRED | SGNB MODIFICATION CONFIRM | SGNB MODIFICATION REFUSE |
| SgNB change | SGNB CHANGE REQUIRED | SGNB CHANGE CONFIRM | SGNB CHANGE REFUSE |
| MeNB initiated SgNB Release | SGNB RELEASE REQUEST | SGNB RELEASE REQUEST ACKNOWLEDGE | SGNB RELEASE REQUEST REJECT |
| SgNB initiated | SGNB RELEASE | SGNB RELEASE | |
| SgNB Release | REQUIRED | CONFIRM | |
| EN-DC X2 Setup | EN-DC X2 SETUP REQUEST | EN-DC X2 SETUP RESPONSE | EN-DC X2 SETUP FAILURE |
| EN-DC Configuration Update | EN-DC CONFIGURATION UPDATE | EN-DC CONFIGURATION UPDATE | EN-DC CONFIGURATION UPDATE FAILURE |
| EN-DC Cell Activation | EN-DC CELL ACTIVATION REQUEST | ACKNOWLEDGE EN-DC CELL ACTIVATION RESPONSE | EN-DC CELL ACTIVATION FAILURE |
| E-UTRA - NR Cell Resource Coordination | E-UTRA - NR CELL RESOURCE COORDINATION REQUEST | E-UTRA - NR CELL RESOURCE COORDINATION RESPONSE | |

| Elementary | Initiating Message | Successful Outcome | Unsuccessful Outcome |
|------------|--------------------|--------------------|----------------------|
| Procedure | | Response message | Response message |
| EN-DC X2 | EN-DC X2 REMOVAL | EN-DC X2 REMOVAL | EN-DC X2 REMOVAL |
| Removal | REQUEST | RESPONSE | FAILURE |

Table 8.1-2: Class 2 Elementary Procedures

| Elementary Procedure | Initiating Message |
|---------------------------------|----------------------------|
| Load Indication | LOAD INFORMATION |
| Handover Cancel | HANDOVER CANCEL |
| SN Status Transfer | SN STATUS TRANSFER |
| UE Context Release | UE CONTEXT RELEASE |
| Resource Status Reporting | RESOURCE STATUS UPDATE |
| Error Indication | ERROR INDICATION |
| Radio Link Failure Indication | RLF INDICATION |
| Handover Report | HANDOVER REPORT |
| X2 Release | X2 RELEASE |
| X2AP Message Transfer | X2AP MESSAGE TRANSFER |
| SeNB Reconfiguration Completion | SENB RECONFIGURATION |
| | COMPLETE |
| MeNB initiated SeNB Release | SENB RELEASE REQUEST |
| SeNB Counter Check | SENB COUNTER CHECK REQUEST |
| SgNB Reconfiguration Completion | SGNB RECONFIGURATION |
| | COMPLETE |
| SgNB Counter Check | SGNB COUNTER CHECK |
| | REQUEST |
| RRC Transfer | RRC TRANSFER |
| Secondary RAT Data Usage Report | SECONDARY RAT DATA USAGE |
| | REPORT |
| SgNB Activity Notification | SGNB ACTIVITY NOTIFICATION |

8.2 Basic mobility procedures

8.2.1 Handover Preparation

8.2.1.1 General

This procedure is used to establish necessary resources in an eNB for an incoming handover.

The procedure uses UE-associated signalling.

8.2.1.2 Successful Operation

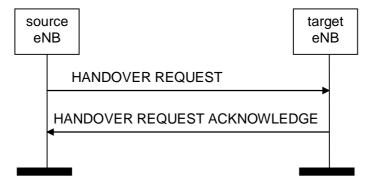


Figure 8.2.1.2-1: Handover Preparation, successful operation

The source eNB initiates the procedure by sending the HANDOVER REQUEST message to the target eNB. When the source eNB sends the HANDOVER REQUEST message, it shall start the timer $T_{RELOCprep.}$

The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

The source eNB may include in the GUMMEI IE any GUMMEI corresponding to the source MME node.

If at least one of the requested non-GBR E-RABs is admitted to the cell indicated by the *Target Cell ID* IE, the target eNB shall reserve necessary resources, and send the HANDOVER REQUEST ACKNOWLEDGE message back to the source eNB. The target eNB shall include the E-RABs for which resources have been prepared at the target cell in the *E-RABs Admitted List* IE. The target eNB shall include the E-RABs that have not been admitted in the *E-RABs Not Admitted List* IE with an appropriate cause value.

At reception of the HANDOVER REQUEST message the target eNB shall:

- prepare the configuration of the AS security relation between the UE and the target eNB by using the information in the *UE Security Capabilities* IE and the *AS Security Information* IE in the *UE Context Information* IE.

For each E-RAB for which the source eNB proposes to do forwarding of downlink data, the source eNB shall include the *DL Forwarding* IE within the *E-RABs To be Setup Item* IE of the HANDOVER REQUEST message. For each E-RAB that it has decided to admit, the target eNB may include the *DL GTP Tunnel Endpoint* IE within the *E-RABs Admitted Item* IE of the HANDOVER REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this bearer. This GTP tunnel endpoint may be different from the corresponding *GTP TEID* IE in the *E-RAB To Be Switched in Downlink List* IE of the PATH SWITCH REQUEST message (see TS 36.413 [4]) depending on implementation choice.

For each bearer in the *E-RABs Admitted List* IE, the target eNB may include the *UL GTP Tunnel Endpoint* IE to indicate that it requests data forwarding of uplink packets to be performed for that bearer.

Upon reception of the HANDOVER REQUEST ACKNOWLEDGE message the source eNB shall stop the timer $T_{RELOC_{prep}}$, start the timer $TX2_{RELOC_{overall}}$ and terminate the Handover Preparation procedure. The source eNB is then defined to have a Prepared Handover for that X2 UE-associated signalling.

If the *Trace Activation* IE is included in the HANDOVER REQUEST message then the target eNB shall, if supported, initiate the requested trace function as described in TS 32.422 [6]. In particular, the target eNB shall, if supported:

- if the *Trace Activation* IE does not include the *MDT Configuration* IE, initiate the requested trace session as described in TS 32.422 [6];
- if the *Trace Activation* IE includes the *MDT Activation* IE, within the *MDT Configuration* IE, set to "Immediate MDT and Trace" initiate the requested trace session and MDT session as described in TS 32.422 [6];
- if the *Trace Activation* IE includes the *MDT Activation* IE, within the *MDT Configuration* IE, set to "Immediate MDT Only" initiate the requested MDT session as described in TS 32.422 [6] and the target eNB shall ignore *Interfaces To Trace* IE, and *Trace Depth* IE;
- if the *Trace Activation* IE includes the *MDT Location Information* IE, within the *MDT Configuration* IE, store this information and take it into account in the requested MDT session;
- if the *Trace Activation* IE includes the *Signalling based MDT PLMN List* IE, within the *MDT Configuration* IE, the eNB may use it to propagate the MDT Configuration as described in TS 37.320 [31];
- if the *Trace Activation* IE includes the *UE Application layer measurement configuration* IE, initiate the requested trace session and QoE Measurement Collection function as described in TS 36.300 [15].

If the *Management Based MDT Allowed* IE only or the *Management Based MDT Allowed* IE and the *Management Based MDT PLMN List* IE is contained in the HANDOVER REQUEST message, the target eNB shall, if supported, store the received information in the UE context, and use this information to allow subsequent selection of the UE for management based MDT defined in TS 32.422 [6].

If the *Masked IMEISV* IE is contained in the HANDOVER REQUEST message the target eNB shall, if supported, use it to determine the characteristics of the UE for subsequent handling.

The source eNB shall, if supported and available in the UE context, include the *Management Based MDT Allowed* IE and the *Management Based MDT PLMN List* IE in the HANDOVER REQUEST message, except if the source eNB selects a serving PLMN in the target eNB which is not included in the Management Based MDT PLMN List. If the *Management Based MDT PLMN List* IE is not present, the source eNB shall, if supported, include the *Management Based MDT Allowed* IE, if this information is available in the UE context, in the HANDOVER REQUEST message, except if the source eNB selects a serving PLMN in the target eNB different from the serving PLMN in the source eNB.

If the Handover Restriction List IE is

- contained in the HANDOVER REQUEST message, the target eNB shall
 - store the information received in the *Handover Restriction List* IE in the UE context;
 - use this information to determine a target for the UE during subsequent mobility action for which the eNB provides information about the target of the mobility action towards the UE, except when one of the E-RABs has a particular ARP value (TS 23.401 [12]) in which case the information shall not apply;
 - use this information to select a proper SCG during dual connectivity operation.
- not contained in the HANDOVER REQUEST message, the target eNB shall consider that no roaming and no access restriction apply to the UE.

If the *Location Reporting Information* IE is included in the HANDOVER REQUEST message then the target eNB should initiate the requested location reporting functionality as defined in TS 36.413 [4].

If the SRVCC Operation Possible IE is included in the HANDOVER REQUEST message, the target eNB shall store the content of such IE in the UE context and use it as defined in TS 23.216 [20].

If the *UE Security Capabilities* IE included in the HANDOVER REQUEST message only contains the EIA0 algorithm as defined in TS 33.401 [18] and if this EIA0 algorithm is defined in the configured list of allowed integrity protection algorithms in the eNB (TS 33.401 [18]), the eNB shall take it into use and ignore the keys received in the *AS Security Information* IE.

The HANDOVER REQUEST message shall contain the Subscriber Profile ID for RAT/Frequency priority IE, if available.

If the *Subscriber Profile ID for RAT/Frequency priority* IE is contained in the HANDOVER REQUEST message, the target eNB shall store this information and the target eNB should use the information as defined in TS 36.300 [15].

Upon reception of *UE History Information* IE in the HANDOVER REQUEST message, the target eNB shall collect the information defined as mandatory in the *UE History Information* IE and shall, if supported, collect the information defined as optional in the *UE History Information* IE, for as long as the UE stays in one of its cells, and store the collected information to be used for future handover preparations.

Upon reception of the *UE History Information from the UE* IE in the HANDOVER REQUEST message, the target eNB shall, if supported, store the collected information to be used for future handover preparations.

If the *Mobility Information* IE is provided in the HANDOVER REQUEST message, the target eNB shall, if supported, store this information and use it as defined in TS 36.300 [15]. The target eNB shall, if supported, store the C-RNTI of the source cell received in the HANDOVER REQUEST message.

If the *Expected UE Behaviour* IE is provided in the HANDOVER REQUEST message, the target eNB shall, if supported, store this information and may use it to determine the RRC connection time.

If the *ProSe Authorized* IE is contained in the HANDOVER REQUEST message and it contains one or more IEs set to "authorized", the eNB shall, if supported, consider that the UE is authorized for the relevant ProSe service(s).

If the *V2X Services Authorized* IE is contained in the HANDOVER REQUEST message and it contains one or more IEs set to "authorized", the eNB shall, if supported, consider that the UE is authorized for the relevant service(s).

If the *UE Context Reference at the SeNB* IE is contained in the HANDOVER REQUEST message the target eNB may use it as specified in TS 36.300 [15]. In this case, the source eNB may expect the target eNB to include the *UE Context Kept Indicator* IE set to "True" in the HANDOVER REQUEST ACKNOWLEDGE message, which shall use this information as specified in TS 36.300 [15]. If the *UE Context Reference at the WT* IE is contained in the HANDOVER REQUEST message, the target eNB may use it as specified in TS 36.300 [15]. In this case, the source eNB may expect the target eNB to include the *WT UE Context Kept Indicator* IE set to "True" in the HANDOVER REQUEST ACKNOWLEDGE message; the source eNB shall use this information as specified in TS 36.300 [15].

If the *UE Context Reference at the SgNB* IE is contained in the HANDOVER REQUEST message the target eNB may use it as specified in TS 37.340 [32]. In this case, the source eNB may expect the target eNB to include the *UE Context Kept Indicator* IE set to "True" in the HANDOVER REQUEST ACKNOWLEDGE message, which shall use this information as specified in TS 37.340 [32].

If the *Bearer Type* IE is included in the HANDOVER REQUEST message and is set to "non IP", then the target eNB shall not perform header compression for the concerned E-RAB. If the *UE Sidelink Aggregate Maximum Bit Rate* IE is contained in the HANDOVER REQUEST message, the target eNB shall, if supported, use it for the concerned UE's sidelink communication in network scheduled mode for V2X services.

If the *NR UE Security Capabilities* IE is included in the HANDOVER REQUEST message, the target eNB shall, if supported, store this information in the UE context and send it to the respective peer node during subsequent handover preparations and/or EN-DC operations for the UE as defined in TS 33.401 [15].

If the *Aerial UE subscription information* IE is included in the HANDOVER REQUEST message, the target eNB shall, if supported, store this information in the UE context and use it as defined in TS 36.300 [15].

8.2.1.3 Unsuccessful Operation

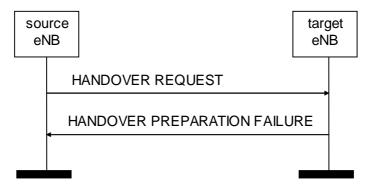


Figure 8.2.1.3-1: Handover Preparation, unsuccessful operation

If the target eNB does not admit at least one non-GBR E-RAB, or a failure occurs during the Handover Preparation, the target eNB shall send the HANDOVER PREPARATION FAILURE message to the source eNB. The message shall contain the *Cause* IE with an appropriate value.

If the target eNB receives a HANDOVER REQUEST message containing *RRC Context* IE that does not include required information as specified in TS 36.331 [9], the target eNB shall send the HANDOVER PREPARATION FAILURE message to the source eNB.

Interactions with Handover Cancel procedure:

If there is no response from the target eNB to the HANDOVER REQUEST message before timer T_{RELOCprep} expires in the source eNB, the source eNB should cancel the Handover Preparation procedure towards the target eNB by initiating the Handover Cancel procedure with the appropriate value for the *Cause* IE. The source eNB shall ignore any HANDOVER REQUEST ACKNOWLEDGE or HANDOVER PREPARATION FAILURE message received after the initiation of the Handover Cancel procedure and remove any reference and release any resources related to the concerned X2 UE-associated signalling.

8.2.1.4 Abnormal Conditions

If the target eNB receives a HANDOVER REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RABs To Be Setup List* IE) set to the same value, the target eNB shall not admit the corresponding E-RABs.

If the target eNB receives a HANDOVER REQUEST message containing a *E-RAB Level QoS Parameters* IE which contains a *QCI* IE indicating a GBR bearer (as defined in TS 23.203 [13]), and which does not contain the *GBR QoS Information* IE, the target eNB shall not admit the corresponding E-RAB.

If the supported algorithms for encryption defined in the *Encryption Algorithms* IE in the *UE Security Capabilities* IE in the *UE Context Information* IE, plus the mandated support of EEA0 in all UEs (TS 33.401 [18]), do not match any algorithms defined in the configured list of allowed encryption algorithms in the target eNB (TS 33.401 [18]), the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the supported algorithms for integrity defined in the *Integrity Protection Algorithms* IE in the *UE Security Capabilities* IE in the *UE Context Information* IE, plus the mandated support of the EIAO algorithm in all UEs (TS 33.401 [18]), do not match any algorithms defined in the configured list of allowed integrity protection algorithms in the eNB (TS 33.401 [18]), the eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the target eNB receives a HANDOVER REQUEST message which does not contain the *Handover Restriction List* IE, and the PLMN to be used cannot be determined otherwise, the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the target eNB receives a HANDOVER REQUEST message containing the *Handover Restriction List* IE, and the serving PLMN is not supported by the target cell, the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the target eNB receives a HANDOVER REQUEST message which does not contain the *CSG Membership Status* IE, and the target cell is a hybrid cell, the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the target cell is a CSG cell and the target eNB has not received any CSG ID of the source cell, the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the target cell is a CSG cell with a different CSG from the source cell, the target eNB shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

8.2.2 SN Status Transfer

8.2.2.1 General

The purpose of the SN Status Transfer procedure is to transfer the uplink PDCP SN and HFN receiver status and the downlink PDCP SN and HFN transmitter status either, from the source to the target eNB during an X2 handover, between the eNBs involved in dual connectivity and/or LWA, or between eNB and en-gNB involved in EN-DC, for each respective E-RAB for which PDCP SN and HFN status preservation applies.

If the SN Status Transfer procedure is applied in the course of dual connectivity, LWA, or EN-DC, in the subsequent specification text

- the behaviour of the eNB from which the E-RAB context is transferred, i.e., the eNB involved in dual connectivity, LWA, or EN-DC from which data forwarding, is specified by the behaviour of the "source eNB",
- the behaviour of the eNB to which the E-RAB context is transferred, i.e., the eNB involved in dual connectivity, LWA, or EN-DC to which data is forwarded, is specified by the behaviour of the "target eNB".
- the behaviour of the en-gNB from which the E-RAB context is transferred, i.e., the en-gNB involved in EN-DC from which data forwarding, is specified by the behaviour of the "source en-gNB",
- the behaviour of the en-gNB to which the E-RAB context is transferred, i.e., the en-gNB involved in EN-DC to which data is forwarded, is specified by the behaviour of the "target en-gNB".

The procedure uses UE-associated signalling.

8.2.2.2 Successful Operation

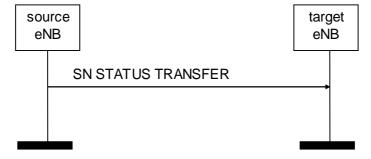


Figure 8.2.2.2-1: SN Status Transfer, successful operation

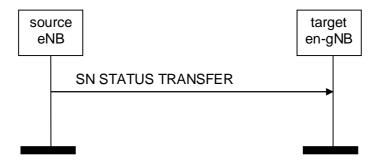


Figure 8.2.2.2-2: eNB initiated SN Status Transfer for EN-DC, successful operation



Figure 8.2.2.2-3: en-gNB initiated SN Status Transfer for EN-DC, successful operation

The source eNB initiates the procedure by stop assigning PDCP SNs to downlink SDUs and stop delivering UL SDUs towards the EPC and sending the SN STATUS TRANSFER message to the target eNB at the time point when it considers the transmitter/receiver status to be frozen. The target eNB using Full Configuration for this handover as per TS 36.300 [15] shall ignore the information received in this message.

The *E-RABs Subject To Status Transfer List* IE included in the SN STATUS TRANSFER message contains the E-RAB ID(s) corresponding to the E-RAB(s) for which PDCP SN and HFN status preservation shall be applied.

If the source eNB includes in the SN STATUS TRANSFER message, the information on the missing and received uplink SDUs in the *Receive Status Of UL PDCP SDUs* IE or *Receive Status Of UL PDCP SDUs Extended* IE or *Receive Status Of UL PDCP SDUs for PDCP SN Length 18* IE for each E-RAB for which the source eNB has accepted the request from the target eNB for uplink forwarding, then the target eNB may use it in a Status Report message sent to the UE over the radio.

For each E-RAB for which the *DL COUNT Value* IE is received in the SN STATUS TRANSFER message, the target eNB shall use it to mark with the value contained in the *PDCP-SN* IE of this IE the first downlink packet for which there is no PDCP SN yet assigned. If the *DL COUNT Value Extended* IE or *DL COUNT Value for PDCP SN Length 18* IE is included in the *E-RABs Subject To Status Transfer Item* IE, the target eNB shall, if supported, use the value contained in the *PDCP-SN Extended* IE of the *DL COUNT Value Extended* IE or *PDCP-SN Length 18* IE instead of the value contained in the *PDCP-SN* IE of the *DL COUNT Value* IE.

For each E-RAB for which the *UL COUNT Value* IE is received in the SN STATUS TRANSFER message, the target eNB shall not deliver any uplink packet which has a PDCP SN lower than the value contained in the *PDCP-SN* IE of this IE. If the *UL COUNT Value Extended* IE or *UL COUNT Value for PDCP SN Length 18* IE is included in the *E-RABs Subject To Status Transfer Item* IE, the target eNB shall, if supported, use the value contained in the *PDCP-SN Extended* IE of the *UL COUNT Value Extended* IE or *PDCP-SN Length 18* IE of the *UL COUNT Value for PDCP SN Length 18* IE instead of the value contained in the *PDCP-SN* IE of the *UL COUNT Value* IE.

EN-DC

If the en-gNB sends the message to the MeNB, then the *SgNB UE X2AP ID* IE shall be included in the SN STATUS TRANSFER message, while the *Old eNB UE X2AP ID* IE is ignored. The *SgNB UE X2AP ID* IE is used as the old UE ID.

If the MeNB sends the message to the en-gNB, then the *SgNB UE X2AP ID* IE shall be included in the SN STATUS TRANSFER message, while the *New eNB UE X2AP ID* IE is ignored. The *SgNB UE X2AP ID* IE is used as the new UE ID

8.2.2.3 Abnormal Conditions

If the target eNB receives this message for a UE for which no prepared handover exists at the target eNB, the target eNB shall ignore the message.

8.2.3 UE Context Release

8.2.3.1 General

For handover, the UE Context Release procedure is initiated by the target eNB to indicate to the source eNB that radio and control plane resources for the associated UE context are allowed to be released.

For dual connectivity, UE Context Release procedure is initiated by the MeNB to finally release the UE context at the SeNB. For dual connectivity specific mobility scenarios specified in TS 36.300 [15] only resources related to the UE-associated signalling connection between the MeNB and the SeNB are released. For EN-DC, the UE Context Release procedure is initiated by the MeNB to finally release the UE context at the en-gNB. For EN-DC specific mobility scenarios specified in TS 37.340 [32] where SCG radio resources in the en-gNB are kept, only resources related to the UE-associated signalling connection between the MeNB and the en-gNB are released.

The procedure uses UE-associated signalling.

8.2.3.2 Successful Operation



Figure 8.2.3.2-1: UE Context Release, successful operation for handover



Figure 8.2.3.2-2: UE Context Release, successful operation for dual connectivity



Figure 8.2.3.2-3: UE Context Release, successful operation for EN-DC

Handover

The UE Context Release procedure is initiated by the target eNB. By sending the UE CONTEXT RELEASE message the target eNB informs the source eNB of Handover success and triggers the release of resources.

Upon reception of the UE CONTEXT RELEASE message, the source eNB may release radio and control plane related resources associated to the UE context. For E-RABs for which data forwarding has been performed, the source eNB should continue forwarding of U-plane data as long as packets are received at the source eNB from the EPC or the source eNB buffer has not been emptied (an implementation dependent mechanism decides that data forwarding can be stopped). When the eNB supporting L-GW function for SIPTO@LN operation releases radio and control plane related resources associated to the UE context, it shall also request using intra-node signalling the collocated L-GW to release the SIPTO@LN PDN connection as defined in TS 23.401 [12].

Dual Connectivity

The UE Context Release procedure is initiated by the MeNB. By sending the UE CONTEXT RELEASE message the MeNB informs the SeNB that the UE Context can be removed.

Upon reception of the UE CONTEXT RELEASE message, the SeNB may release radio and control plane related resources associated to the UE context. For E-RABs for which data forwarding has been performed, the SeNB should continue forwarding of U-plane data as long as packets are received at the SeNB from the EPC or the SeNB buffer has not been emptied (an implementation dependent mechanism decides that data forwarding can be stopped). The SeNB supporting L-GW function for LIPA operation shall also request using intra-node signalling the collocated L-GW to release the LIPA PDN connection as defined in TS 23.401 [12]. If the SIPTO Bearer Deactivation Indication IE is received in the UE CONTEXT RELEASE message, the SeNB supporting L-GW function for SIPTO@LN operation shall also request using intra-node signalling the collocated L-GW to release the SIPTO@LN PDN connection as defined in TS 23.401 [12].

EN-DC

The UE Context Release procedure is initiated by the MeNB. By sending the UE CONTEXT RELEASE message the MeNB informs the en-gNB that the UE Context can be removed.

Upon reception of the UE CONTEXT RELEASE message, the en-gNB may release radio and control plane related resources associated to the UE context. For E-RABs for which data forwarding has been performed, the en-gNB should continue forwarding of U-plane data as long as packets are received at the en-gNB from the EPC or the en-gNB buffer has not been emptied (an implementation dependent mechanism decides that data forwarding can be stopped).

In the course of signalling for EN-DC, the *SgNB UE X2AP ID* IE shall be included in the UE CONTEXT RELEASE message, while the *Old eNB UE X2AP ID* IE is ignored. The *SgNB UE X2AP ID* IE is used as the new UE ID.

Interaction with the MeNB initiated SeNB Release procedure:

The SeNB may receive the SENB RELEASE REQUEST message including the *UE Context Kept Indicator* IE set to "True", upon which the SeNB shall, if supported, only release the resources related to the UE-associated signalling connection between the MeNB and the SeNB, as specified in TS 36.300 [15].

Interaction with the MeNB initiated SgNB Release procedure:

The en-gNB may receive the SGNB RELEASE REQUEST message including the *UE Context Kept Indicator* IE set to "True", upon which the en-gNB shall, if supported, only release the resources related to the UE-associated signalling connection between the MeNB and the en-gNB, as specified in TS 37.340 [32].

8.2.3.3 Unsuccessful Operation

Not applicable.

8.2.3.4 Abnormal Conditions

If the UE Context Release procedure is not initiated towards the source eNB from any prepared eNB before the expiry of the timer $TX2_{RELOCoverall}$, the source eNB shall request the MME to release the UE context.

If the UE returns to source eNB before the reception of the UE CONTEXT RELEASE message or the expiry of the timer $TX2_{RELOCoverall}$, the source eNB shall stop the $TX2_{RELOCoverall}$ and continue to serve the UE.

8.2.4 Handover Cancel

8.2.4.1 General

The Handover Cancel procedure is used to enable a source eNB to cancel an ongoing handover preparation or an already prepared handover.

The procedure uses UE-associated signalling.

8.2.4.2 Successful Operation



Figure 8.2.4.2-1: Handover Cancel, successful operation

The source eNB initiates the procedure by sending the HANDOVER CANCEL message to the target eNB. The source eNB shall indicate the reason for cancelling the handover by means of an appropriate cause value.

At the reception of the HANDOVER CANCEL message, the target eNB shall remove any reference to, and release any resources previously reserved to the concerned UE context.

The New eNB UE X2AP ID IE and, if available, the New eNB UE X2AP ID Extension IE shall be included if it has been obtained from the target eNB.

8.2.4.3 Unsuccessful Operation

Not applicable.

8.2.4.4 Abnormal Conditions

Should the HANDOVER CANCEL message refer to a context that does not exist, the target eNB shall ignore the message.

8.3 Global Procedures

8.3.1 Load Indication

8.3.1.1 General

The purpose of the Load Indication procedure is to transfer load and interference co-ordination information between eNBs controlling intra-frequency neighboring cells, and additionally between eNBs controlling inter-frequency neighboring cells for TDD.

The procedure uses non UE-associated signalling.

8.3.1.2 Successful Operation

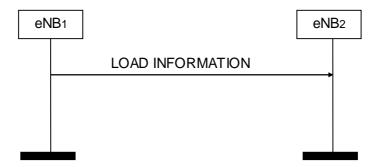


Figure 8.3.1.2-1: Load Indication, successful operation

An eNB₁ initiates the procedure by sending LOAD INFORMATION message to a peer eNB₂.

If the *UL Interference Overload Indication* IE is received in the LOAD INFORMATION message, it indicates the interference level experienced by the indicated cell on all resource blocks, per PRB. If the *Extended UL Interference Overload Info* IE is received in the LOAD INFORMATION message, the *UL Interference Overload Indication* IE indicates the interference level experienced by the indicated cell ignoring the UL subframe(s) represented as value "1" in the *Associated Subframes* IE. The receiving eNB may take such information into account when setting its scheduling policy and shall consider the received *UL Interference Overload Indication* IE value valid until reception of a new LOAD INFORMATION message carrying an update of the same IE.

If the *UL High Interference Indication* IE is received in the LOAD INFORMATION message, it indicates, per PRB, the occurrence of high interference sensitivity, as seen from the sending eNB. The receiving eNB should try to avoid scheduling cell edge UEs in its cells for the concerned PRBs. The *Target Cell ID* IE received within the *UL High Interference Information* IE group in the LOAD INFORMATION message indicates the cell for which the corresponding UL High Interference Indication is meant. The receiving eNB shall consider the value of the *UL High Interference Information* IE group valid until reception of a new LOAD INFORMATION message carrying an update.

If the *Relative Narrowband Tx Power (RNTP)* IE is received in the LOAD INFORMATION message, it indicates, per PRB or per subframe per PRB (Enhanced RNTP), whether downlink transmission power is lower than the value indicated by the *RNTP Threshold* IE. If the *Enhanced RNTP* IE is included in the *Relative Narrowband Tx Power (RNTP)* IE, it additionally indicates whether the downlink transmission power is lower than the value specified by the *RNTP High Power Threshold* IE. The receiving eNB may take such information into account when setting its scheduling policy and shall consider the received *Relative Narrowband Tx Power (RNTP)* IE value valid until reception of a new LOAD INFORMATION message carrying an update. If the *Enhanced RNTP* IE included in the *Relative Narrowband Tx Power (RNTP)* IE is present, the receiving eNB shall consider the received *Enhanced RNTP* IE value valid starting from the subframe indicated by the *Start SFN* IE and *Start Subframe Number* IE, if present.

If the ABS Information IE is included in the LOAD INFORMATION message, the ABS Pattern Info IE indicates the subframes designated as almost blank subframes by the sending eNB for the purpose of interference coordination. The receiving eNB may take such information into consideration when scheduling UEs.

The receiving eNB may use the *Measurement Subset* IE received in the LOAD INFORMATION message, for the configuration of specific measurements towards the UE.

The receiving eNB shall consider the received information as immediately applicable. The receiving eNB shall consider the value of the *ABS Information* IE valid until reception of a new LOAD INFORMATION message carrying an update.

If an ABS indicated in the ABS pattern info IE coincides with a MBSFN subframe, the receiving eNB shall consider that the subframe is designated as almost blank subframe by the sending eNB.

If the *Invoke Indication* IE is included in the LOAD INFORMATION message, it indicates which type of information the sending eNB would like the receiving eNB to send back. The receiving eNB may take such request into account.

If the *Invoke Indication* IE is set to "ABS Information", it indicates the sending eNB would like the receiving eNB to initiate the Load Indication procedure, with the LOAD INFORMATION message containing the *ABS Information* IE indicating non-zero ABS patterns in the relevant cells. If the *Invoke Indication* IE is set to "Start NAICS Information", it indicates the sending eNB would like the receiving eNB to initiate the Load Indication procedure with the LOAD INFORMATION message containing the *Dynamic DL transmission information* IE. The first time the *Dynamic DL transmission information* IE is signalled after receiving the *Invoke Indication* IE set to "Start NAICS Information", all the NAICS parameters in the *NAICS Information* IE shall be included. If the *Invoke Indication* IE is set to "Stop NAICS Information", it indicates the sending eNB does not need NAICS information and therefore the receiving eNB should stop signalling NAICS parameters for the concerned cell.

If the *NAICS Information* IE is set to "NAICS Active", the receiving eNB may use it for the configuration of DL interference mitigation assistance information towards the UE. Information included in the *NAICS Information* IE shall replace corresponding NAICS information existing at the receiver. If the *NAICS Information* IE is set to "NAICS Inactive", the receiving eNB shall consider the existing NAICS information as invalid.

If the *Intended UL-DL Configuration* IE is included in the LOAD INFORMATION message, it indicates the UL-DL configuration intended to be used by the indicated cell. The receiving eNB may take such information into account when setting its scheduling policy and shall consider the received *Intended UL-DL Configuration* IE value valid until reception of a new LOAD INFORMATION message carrying an update of the same IE.

If the Extended UL Interference Overload Info IE is received in the LOAD INFORMATION message, the Extended UL Interference Overload Indication IE indicates the interference level experienced by the indicated cell on all resource blocks, per PRB, in the UL subframe(s) which is represented as value "1" in the Associated Subframes IE. The receiving eNB may take such information into account when setting its scheduling policy and shall consider the received Extended UL Interference Overload Info IE value valid until reception of a new LOAD INFORMATION message carrying an update of the same IE.

If the *CoMP Information* IE is received in the LOAD INFORMATION message, the receiving eNB may take the IE into account for RRM. The receiving eNB shall consider the *CoMP Information* IE valid starting in the subframe indicated by the *Start SFN* IE and *Start Subframe Number* IE, if present. If the *Start SFN* IE and *Start Subframe Number* IE are not present, then the receiving eNB shall consider the *CoMP Information* IE as immediately valid. The receiving eNB shall consider the *CoMP Information* IE valid until an update of the same IE, received in a new LOAD INFORMATION message, is considered valid.

8.3.1.3 Unsuccessful Operation

Not applicable.

8.3.1.4 Abnormal Conditions

Void.

8.3.2 Error Indication

8.3.2.1 General

The Error Indication procedure is initiated by an eNB to report detected errors in one incoming message, provided they cannot be reported by an appropriate failure message.

If the error situation arises due to reception of a message utilising UE associated signalling, then the Error Indication procedure uses UE-associated signalling. Otherwise the procedure uses non UE-associated signalling.

8.3.2.2 Successful Operation



Figure 8.3.2.2-1: Error Indication, successful operation.



Figure 8.3.2.2-2: eNB initiated Error Indication for EN-DC, successful operation.



Figure 8.3.2.2-3: en-gNB initiated Error Indication for EN-DC, successful operation.

When the conditions defined in clause 10 are fulfilled, the Error Indication procedure is initiated by an ERROR INDICATION message sent from the node detecting the error situation.

The ERROR INDICATION message shall contain at least either the Cause IE or the Criticality Diagnostics IE.

In case the Error Indication procedure is triggered by UE associated signalling, in the course of handover signalling and signalling for dual connectivity, the *Old eNB UE X2AP ID* IE and the *New eNB UE X2AP ID* IE shall be included in the ERROR INDICATION message. In case the Error Indication procedure is triggered by UE associated signalling, in the course of signalling for EN-DC, the *Old en-gNB UE X2AP ID* IE and the *New eNB UE X2AP ID* IE shall be included in the ERROR INDICATION message. If any of *Old eNB UE X2AP ID* IE, *Old en-gNB UE X2AP ID* IE and *New eNB UE X2AP ID* IE is not correct, the cause shall be set to appropriate value e.g. "unknown Old eNB UE X2AP ID", "unknown Old en-gNB UE X2AP ID", "unknown New eNB UE X2AP ID" or "unknown pair of UE X2AP ID".

If the UE-associated signalling connection is identified by extended eNB UE X2AP IDs the specification text above is applicable for the UE X2AP ID Extension accordingly.

8.3.2.3 Unsuccessful Operation

Not applicable.

8.3.2.4 Abnormal Conditions

Not applicable.

8.3.3 X2 Setup

8.3.3.1 General

The purpose of the X2 Setup procedure is to exchange application level configuration data needed for two eNBs to interoperate correctly over the X2 interface. This procedure erases any existing application level configuration data in the two nodes and replaces it by the one received. This procedure also resets the X2 interface like a Reset procedure would do.

The procedure uses non UE-associated signalling.

8.3.3.2 Successful Operation

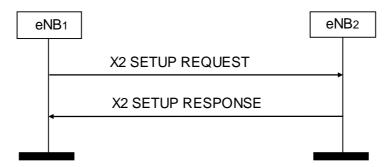


Figure 8.3.3.2-1: X2 Setup, successful operation

An eNB_1 initiates the procedure by sending the X2 SETUP REQUEST message to a candidate eNB_2 . The candidate eNB_2 replies with the X2 SETUP RESPONSE message. The initiating eNB_1 shall transfer the complete list of its served cells and, if available, a list of supported GU Group Ids to the candidate eNB_2 . The candidate eNB_2 shall reply with the complete list of its served cells and shall include, if available, a list of supported GU Group Ids in the reply.

If a cell is switched off for energy savings reasons, it should be activated before initiating or responding to the X2 Setup procedure and shall still be included in the list of served cells.

The initiating eNB₁ may include the *Neighbour Information* IE in the X2 SETUP REQUEST message. The candidate eNB₂ may also include the *Neighbour Information* IE in the X2 SETUP RESPONSE message. The *Neighbour Information* IE shall only include E-UTRAN cells that are direct neighbours of cells in the reporting eNB. A direct neighbour of one cell of a given eNB may be any cell belonging to an eNB that is a neighbour of that given eNB cell e.g. even if the cell has not been reported by a UE. The initiating eNB₁ may include the *TAC* IE with the *Neighbour Information* IE in the X2 SETUP REQUEST message. The candidate eNB₂ may also include the *TAC* IE with the *Neighbour Information* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it according to TS 36.300 [15].

The initiating eNB₁ may include the *Number of Antenna Ports* IE in the X2 SETUP REQUEST message. The candidate eNB₂ may also include the *Number of Antenna Ports* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it according to TS 36.331 [9].

The initiating eNB₁ may include the *PRACH Configuration* IE in the X2 SETUP REQUEST message. The candidate eNB₂ may also include the *PRACH Configuration* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use this information for RACH optimisation.

The initiating eNB_1 may include the MBSFN Subframe Info IE in the X2 SETUP REQUEST message. The candidate eNB_2 may also include the MBSFN Subframe Info IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it according to TS 36.331 [9].

For each CSG cell or hybrid cell served by the initiating eNB₁ the X2 SETUP REQUEST message shall contain the *CSG ID* IE. For each CSG cell or hybrid cell served by the candidate eNB₂ the X2 SETUP RESPONSE message shall contain the *CSG ID* IE. The eNB receiving the IE shall take this information into account when further deciding whether X2 handover between the source cell and the target cell may be performed.

The initiating eNB₁ may include the *MBMS Service Area Identity List* IE in the X2 SETUP REQUEST message. The candidate eNB₂ may also include the *MBMS Service Area Identity List* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it according to TS 36.300 [15].

For each cell served by the initiating eNB₁ the X2 SETUP REQUEST message may contain the *MultibandInfoList* IE and may also contain the *FreqBandIndicatorPriority* IE. For each cell served by the candidate eNB₂ the X2 SETUP RESPONSE message may contain the *MultibandInfoList* IE and may also contain the *FreqBandIndicatorPriority* IE. The eNB receiving the *MultibandInfoList* IE shall, if supported, take this information into account when further deciding whether subsequent mobility actions between the source cell and the target cell may be performed, and use this IE and the *FreqBandIndicatorPriority* IE, if received, as specified in TS 36.331 [9].

The initiating eNB₁ may include the *LHN ID* IE in the X2 SETUP REQUEST message. The candidate eNB₂ may also include *LHN ID* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it according to TS 36.300 [15].

The initiating eNB₁ may include the *BandwidthReducedSI* IE in the X2 SETUP REQUEST message. The candidate eNB₂ may also include *BandwidthReducedSI* IE in the X2 SETUP RESPONSE message. The eNB receiving the IE may use it to determine a suitable target in case of subsequent outgoing mobility involving BL UEs or UEs requiring CE.

8.3.3.3 Unsuccessful Operation

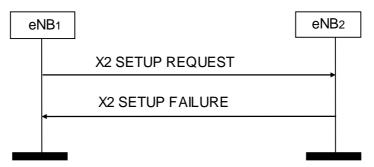


Figure 8.3.3.3-1: X2 Setup, unsuccessful operation

If the candidate eNB_2 cannot accept the setup it shall respond with an X2 SETUP FAILURE message with appropriate cause value.

If the X2 SETUP FAILURE message includes the *Time To Wait* IE the initiating eNB₁ shall wait at least for the indicated time before reinitiating the X2 Setup procedure towards the same eNB₂.

8.3.3.4 Abnormal Conditions

If the first message received for a specific TNL association is not an X2 SETUP REQUEST, X2 SETUP RESPONSE, or X2 SETUP FAILURE message then this shall be treated as a logical error.

If the initiating eNB₁ does not receive either X2 SETUP RESPONSE message or X2 SETUP FAILURE message, the eNB₁ may reinitiate the X2 Setup procedure towards the same eNB, provided that the content of the new X2 SETUP REQUEST message is identical to the content of the previously unacknowledged X2 SETUP REQUEST message.

If the initiating eNB₁ receives an X2 SETUP REQUEST message from the peer entity on the same X2 interface:

- In case the eNB₁ answers with an X2 SETUP RESPONSE message and receives a subsequent X2 SETUP FAILURE message, the eNB₁ shall consider the X2 interface as non operational and the procedure as unsuccessfully terminated according to sub clause 8.3.3.3.
- In case the eNB₁ answers with an X2 SETUP FAILURE message and receives a subsequent X2 SETUP RESPONSE message, the eNB₁ shall ignore the X2 SETUP RESPONSE message and consider the X2 interface as non operational.

8.3.4 Reset

8.3.4.1 General

The purpose of the Reset procedure is to align the resources in eNB_1 and eNB_2 , or the resources in eNB and en-gNB involved in the EN-DC in the event of an abnormal failure. The procedure resets the X2 interface. This procedure doesn't affect the application level configuration data exchanged during, e.g., the X2 Setup procedure, EN-DC X2 Setup procedure.

The procedure uses non UE-associated signalling.

8.3.4.2 Successful Operation

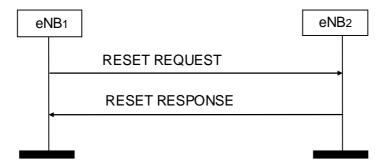


Figure 8.3.4.2-1: Reset, successful operation

The procedure is initiated with a RESET REQUEST message sent from the eNB_1 to the eNB_2 . Upon receipt of this message, eNB_2 shall abort any other ongoing procedures over X2 between eNB_1 and eNB_2 . The eNB_2 shall delete all the context information related to the eNB_1 , except the application level configuration data exchanged during the X2 Setup or eNB Configuration Update procedures, and release the corresponding resources. After completion of release of the resources, the eNB_2 shall respond with a RESET RESPONSE message.

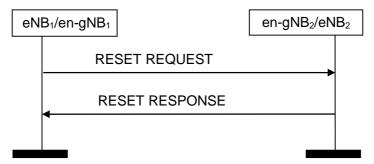


Figure 8.3.4.2-2: Reset, successful operation for EN-DC.

The procedure is initiated with a RESET REQUEST message sent from the $eNB_1/en-gNB_1$ to $en-gNB_2/eNB_2$. Upon receipt of this message, $eNB_2/en-gNB_2$ shall abort any other ongoing procedures over X2 between both nodes. $eNB_2/en-gNB_2$ shall delete all the context information related to $eNB_1/en-gNB_1$, except the application level configuration data exchanged during the EN-DC X2 Setup or EN-DC Configuration Update procedures, and release the corresponding resources. After completion of release of the resources, $eNB_2/en-gNB_2$ shall respond with a RESET RESPONSE message.

8.3.4.3 Unsuccessful Operation

Void.

8.3.4.4 Abnormal Conditions

If the RESET REQUEST message is received, any other ongoing procedure (except another Reset procedure) on the same X2 interface shall be aborted.

If Reset procedure is ongoing and the responding node receives the RESET REQUEST message from the peer entity on the same X2 interface, it shall respond with the RESET RESPONSE message as described in 8.3.4.2.

If the initiating node does not receive RESET RESPONSE message, the initiating node may reinitiate the Reset procedure towards the same eNB/en-gNB, provided that the content of the new RESET REQUEST message is identical to the content of the previously unacknowledged RESET REQUEST message.

8.3.5 eNB Configuration Update

8.3.5.1 General

The purpose of the eNB Configuration Update procedure is to update application level configuration data needed for two eNBs to interoperate correctly over the X2 interface.

The procedure uses non UE-associated signalling.

8.3.5.2 Successful Operation

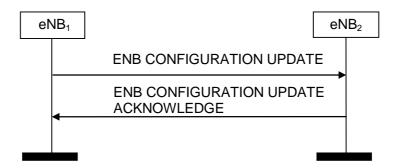


Figure 8.3.5.2-1: eNB Configuration Update, successful operation

An eNB_1 initiates the procedure by sending an ENB CONFIGURATION UPDATE message to a peer eNB_2 . Such message shall include an appropriate set of up-to-date configuration data, including, but not limited to, the complete lists of added, modified and deleted served cells, that eNB_1 has just taken into operational use.

Upon reception of an ENB CONFIGURATION UPDATE message, eNB_2 shall update the information for eNB_1 as follows:

Update of Served Cell Information:

- If Served Cells To Add IE is contained in the ENB CONFIGURATION UPDATE message, eNB₂ shall add cell information according to the information in the Served Cell Information IE.
- If *Number of Antenna Ports* IE is contained in the *Served Cell Information* IE in the ENB CONFIGURATION UPDATE message, eNB₂ may use this information according to TS 36.331 [9].
- If the *PRACH Configuration* IE is contained in the *Served Cell Information* IE in the ENB CONFIGURATION UPDATE message, the eNB receiving the IE may use this information for RACH optimisation.
- If Served Cells To Modify IE is contained in the ENB CONFIGURATION UPDATE message, eNB₂ shall
 modify information of cell indicated by Old ECGI IE according to the information in the Served Cell
 Information IE.
- If MBSFN Subframe Info IE is contained in the Served Cell Information IE in the ENB CONFIGURATION UPDATE message, eNB₂ may use this information according to TS 36.331 [9]. If a MBSFN subframe indicated in the MBSFN Subframe Info IE coincides with an ABS, the eNB₂ shall consider that the subframe is designated as ABS by the sending eNB.
- If *BandwidthReducedSI* IE is contained in the *Served Cell Information* IE in the ENB CONFIGURATION UPDATE message, eNB₂ may use this information to determine a suitable target in case of subsequent outgoing mobility involving BL UEs or UEs requiring CE.

When either served cell information or neighbour information of an existing served cell in eNB_1 need to be updated, the whole list of neighbouring cells, if any, shall be contained in the *Neighbour Information* IE.

If the *Deactivation Indication* IE is contained in *Served Cells To Modify* IE, it indicates that the concerned cell was switched off to lower energy consumption.

The eNB_2 shall overwrite the served cell information and the whole list of neighbour cell information for the affected served cell.

- If *Served Cells To Delete* IE is contained in the ENB CONFIGURATION UPDATE message, eNB₂ shall delete information of cell indicated by *Old ECGI* IE.
- If *MBMS Service Area Identity List* IE is contained in the *Served Cell Information* IE in the ENB CONFIGURATION UPDATE message, the eNB receiving the IE may use it according to TS 36.300 [15].

When the MBMS Service Area Identities of a cell in eNB₁ need to be updated, the whole list of MBMS Service Area Identities of the affected cell shall be contained in the *Served Cell Information* IE.

Update of GU Group Id List:

- If GU Group Id To Add List IE is contained in the ENB CONFIGURATION UPDATE message, eNB₂ shall add the GU Group Id to its GU Group Id List.
- If *GU Group Id To Delete List* IE is contained in the ENB CONFIGURATION UPDATE message, eNB₂ shall remove the GU Group Id from its GU Group Id List.

If *Neighbour Information* IE is contained in the ENB CONFIGURATION UPDATE message, eNB₂ may use this information to update its neighbour cell relations, or use it for other functions, like PCI selection. The *Neighbour Information* IE shall only include E-UTRAN cells that are direct neighbours of cells in the reporting eNB. A direct neighbour of one cell of a given eNB may be any cell belonging to an eNB that is a neighbour of that given eNB cell e.g. even if that cell has not been reported by a UE. The *Neighbour Information* IE may contain the *TAC* IE of the included cells. The receiving eNB may use *TAC* IE, as described in TS 36.300 [15].

After successful update of requested information, eNB₂ shall reply with the ENB CONFIGURATION UPDATE ACKNOWLEDGE message to inform the initiating eNB₁ that the requested update of application data was performed successfully. In case the peer eNB₂ receives an ENB CONFIGURATION UPDATE without any IE except for *Message Type* IE it shall reply with ENB CONFIGURATION UPDATE ACKNOWLEDGE message without performing any updates to the existing configuration.

The eNB_1 may initiate a further eNB Configuration Update procedure only after a previous eNB Configuration Update procedure has been completed.

For each cell served by the initiating eNB_1 the ENB CONFIGURATION UPDATE message may contain the *MultibandInfoList* IE and may also contain the *FreqBandIndicatorPriority* IE. The eNB receiving the *MultibandInfoList* IE shall, if supported, take this information into account when further deciding whether subsequent mobility actions between the source cell and the target cell may be performed, and use this IE and the *FreqBandIndicatorPriority* IE, if received, as specified in TS 36.331 [9].

If the Coverage Modification List IE is present, eNB₂ may use the information in the Cell Coverage State IE to identify the cell deployment configuration enabled by eNB₁ and for configuring the mobility towards the cell(s) indicated by the ECGI IE, as described in TS 36.300 [15]. If the Cell Deployment Status Indicator IE is present in the Coverage Modification List IE, the eNB₂ shall consider the cell deployment configuration of the cell to be modified as the next planned configuration and shall remove any planned configuration stored for this cell. If the Cell Deployment Status Indicator IE is present and the Cell Replacing Info IE contains non-empty cell list, the eNB₂ may use this list to avoid connection or re-establishment failures during the reconfiguration, e.g. consider the cells in the list as possible alternative handover targets. If the Cell Deployment Status Indicator IE is not present, the eNB₂ shall consider the cell deployment configuration of cell to be modified as activated and replace any previous configuration for the cells indicated in the Coverage Modification List IE.

Interaction with the eNB Configuration Update procedure:

If an eNB₂ which has not stored a *FreqBandIndicatorPriority* IE received from eNB₁, but has signaled a *FreqBandIndicatorPriority* IE to eNB₁ after the TNL association has become available, receives an ENB CONFIGURATION UPDATE message from eNB₁ containing the *FreqBandIndicatorPriority* IE, the eNB₂ shall initiate the eNB Configuration Update procedure towards eNB₁ including the *FreqBandIndicatorPriority* IE.

8.3.5.3 Unsuccessful Operation

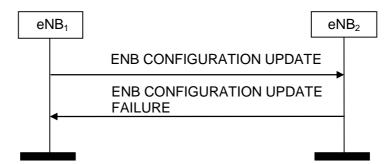


Figure 8.3.5.3-1: eNB Configuration Update, unsuccessful operation

If the eNB_2 can not accept the update it shall respond with an ENB CONFIGURATION UPDATE FAILURE message and appropriate cause value.

If the ENB CONFIGURATION UPDATE FAILURE message includes the *Time To Wait* IE the eNB₁ shall wait at least for the indicated time before reinitiating the eNB Configuration Update procedure towards the same eNB₂. Both nodes shall continue to operate the X2 with their existing configuration data.

8.3.5.4 Abnormal Conditions

If the eNB₁ after initiating eNB Configuration Update procedure receives neither ENB CONFIGURATION UPDATE ACKNOWLEDGE message nor ENB CONFIGURATION UPDATE FAILURE message, the eNB₁ may reinitiate the eNB Configuration Update procedure towards the same eNB₂, provided that the content of the new ENB CONFIGURATION UPDATE message is identical to the content of the previously unacknowledged ENB CONFIGURATION UPDATE message.

8.3.6 Resource Status Reporting Initiation

8.3.6.1 General

This procedure is used by an eNB to request the reporting of load measurements to another eNB.

The procedure uses non UE-associated signalling.

8.3.6.2 Successful Operation

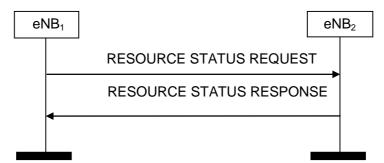


Figure 8.3.6.2-1: Resource Status Reporting Initiation, successful operation

The procedure is initiated with a RESOURCE STATUS REQUEST message sent from eNB₁ to eNB₂. Upon receipt, eNB₂:

- shall initiate the requested measurement according to the parameters given in the request in case the *Registration Request* IE set to "start"; or
- shall stop all cells measurements and terminate the reporting in case the *Registration Request* IE is set to "stop"; or
- if supported, stop cell measurements and terminate the reporting for cells indicated in the *Cell To Report* IE list, in case the *Registration Request* IE is set to "partial stop"; or

- if supported, add cells indicated in the *Cell To Report* IE list to the measurements initiated before for the given measurement IDs, in case the *Registration Request* IE is set to "add".

If the eNB₂ received a RESOURCE STATUS REQUEST message, which includes the *Registration Request* IE set to "stop", the *Cell To Report* IE list shall be ignored.

If the *Registration Request* IE is set to "start" then the *Report Characteristics* IE shall be included in RESOURCE STATUS REQUEST message. The eNB₂ shall ignore the *Report Characteristics* IE, if the *Registration Request* IE is not set to "start".

The *Report Characteristics* IE indicates the type of objects eNB₂ shall perform measurements on. For each cell, the eNB₂ shall include in the RESOURCE STATUS UPDATE message:

- the *Radio Resource Status* IE, if the first bit, "PRB Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1;
- the *S1 TNL Load Indicator* IE, if the second bit, "TNL Load Ind Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1;
- the *Hardware Load Indicator* IE, if the third bit, "HW Load Ind Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1;
- the *Composite Available Capacity Group* IE, if the fourth bit, "Composite Available Capacity Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1. If *Cell Capacity Class Value* IE is included within the *Composite Available Capacity Group* IE, this IE is used to assign weights to the available capacity indicated in the *Capacity Value* IE;
- the *ABS Status* IE, if the fifth bit, "ABS Status Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1 and eNB₁ had indicated the ABS pattern to eNB₂:
- the RSRP Measurement Report List IE, if the sixth bit, "RSRP Measurement Report Periodic" of the Report Characteristics IE included in the RESOURCE STATUS REQUEST message is set to 1;
- the *CSI Report* IE, if the seventh bit, "CSI Report Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1.

If the *Reporting Periodicity* IE is included in the RESOURCE STATUS REQUEST message, eNB₂ shall use its value as the time interval between two subsequent RESOURCE STATUS UPDATE messages that include the *Radio Resource Status* IE, *S1 TNL Load Indicator* IE, *Hardware Load Indicator* IE, *Composite Available Capacity Group* IE, or *ABS Status* IE.

If the *Reporting Periodicity of RSRP Measurement Report* IE is included in the RESOURCE STATUS REQUEST message, eNB₂ shall use its value as the minimum time interval between two subsequent RESOURCE STATUS UPDATE messages that include the *RSRP Measurement Report List* IE.

If the *Reporting Periodicity of CSI Report* IE is included in the RESOURCE STATUS REQUEST message, eNB₂ shall use its value as the minimum time interval between two subsequent RESOURCE STATUS UPDATE messages that include the *CSI Report* IE.

If eNB₂ is capable to provide all requested resource status information, it shall initiate the measurement as requested by eNB₁, and respond with the RESOURCE STATUS RESPONSE message.

If eNB₂ is capable to provide some but not all of the requested resource status information and the *Partial Success Indicator* IE is present in the RESOURCE STATUS REQUEST message, it shall initiate the measurement for the admitted measurement objects and include the *Measurement Initiation Result* IE in the RESOURCE STATUS RESPONSE message.

8.3.6.3 Unsuccessful Operation

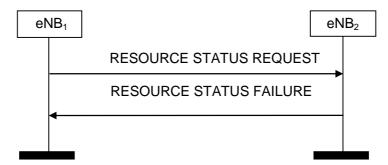


Figure 8.3.6.3-1: Resource Status Reporting Initiation, unsuccessful operation

If none of the requested measurements can be initiated, eNB₂ shall send a RESOURCE STATUS FAILURE message. The *Cause* IE shall be set to an appropriate value e.g. "Measurement Temporarily not Available" or "Measurement not Supported For The Object" for each requested measurement object. The eNB may use the *Complete Failure Cause Information* IE to enhance the failure cause information per measurement in the RESOURCE STATUS FAILURE message.

8.3.6.4 Abnormal Conditions

If the initiating eNB₁ does not receive either RESOURCE STATUS RESPONSE message or RESOURCE STATUS FAILURE message, the eNB₁ may reinitiate the Resource Status Reporting Initiation procedure towards the same eNB, provided that the content of the new RESOURCE STATUS REQUEST message is identical to the content of the previously unacknowledged RESOURCE STATUS REQUEST message.

If the initiating eNB₁ receives the RESOURCE STATUS RESPONSE message including the *Measurement Initiation Result* IE containing no admitted measurements, the eNB₁ shall consider the procedure as failed.

If the Report Characteristics IE bitmap is set to "0" (all bits are set to "0") in the RESOURCE STATUS REQUEST message then eNB_2 shall initiate a RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "ReportCharacteristicsEmpty".

If the *Reporting Periodicity* IE value is not specified when at least one of the bits of the *Report Characteristics* IE, for which semantics is specified, other than the sixth or seventh bit, is set to 1 then eNB₂ shall initiate a RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "NoReportPeriodicity".

If the *Reporting Periodicity of RSRP Measurement Report* IE value is not specified when the sixth bit of the *Report Characteristics* IE is set to 1, then eNB₂ shall initiate the RESOURCE STATUS FAILURE message and the cause shall be set to appropriate value e.g. "NoReportPeriodicity".

If the *Reporting Periodicity of CSI Report* IE value is not specified when the seventh bit of the *Report Characteristics* IE is set to 1, then eNB₂ shall initiate the RESOURCE STATUS FAILURE message and the cause shall be set to appropriate value e.g. "NoReportPeriodicity".

If the eNB₂ received a RESOURCE STATUS REQUEST message which includes the *Registration Request* IE set to "start" and the *eNB1Measurement ID* IE corresponding to an existing on-going load measurement reporting, then eNB₂ shall initiate a RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "ExistingMeasurementID".

If the *Registration Request* IE is set to "stop", "partial stop" or "add" and the RESOURCE STATUS REQUEST message does not contain *eNB2 Measurement ID* IE, eNB₂ shall consider the procedure as failed and respond with the RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "Unknown eNB Measurement ID".

If the *Registration Request* IE is set to "partial stop" and the *Cell To Report* IE contains cells that have not been initiated for the reporting before, eNB₂ shall consider the procedure as failed and respond with the RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "Cell not Available". If the *Registration Request* IE is set to "add" and the *Cell To Report* IE contains cells that have been initiated for the reporting before, eNB₂ shall consider the procedure as failed and respond with the RESOURCE STATUS FAILURE message, the cause shall be set to appropriate value e.g. "Cell not Available".

8.3.7 Resource Status Reporting

8.3.7.1 General

This procedure is initiated by eNB₂ to report the result of measurements admitted by eNB₂ following a successful Resource Status Reporting Initiation procedure.

The procedure uses non UE-associated signalling.

8.3.7.2 Successful Operation



Figure 8.3.7.2-1: Resource Status Reporting, successful operation

The eNB₂ shall report the results of the admitted measurements in RESOURCE STATUS UPDATE message. The admitted measurements are the measurements that were successfully initiated during the preceding Resource Status Reporting Initiation procedure, and thus not reported in the *Measurement Failed Report Characteristics* IE for the concerned cell in the RESOURCE STATUS RESPONSE message.

If the eNB₁ receives the RESOURCE STATUS UPDATE message which includes the *UE ID* IE in the *RSRP Measurement Report List* IE, the eNB₁ may use the *UE ID* IE to link the associated RSRP measurement report with other measurement results (e.g. CSI reports, RSRP measurement reports) of the same UE.

If the *CSI Report* IE including the *CSI Process Configuration Index* IE is received, eNB₁ shall interpret this IE as an index identifying one of the CSI process configurations that can be configured for all UEs within the cell where the CSI measurements were collected. For all UEs within the cell, the maximum number of CSI process configurations is given by the maximum value of the *CSI Process Configuration Index* IE.

If the eNB₁ receives the RESOURCE STATUS UPDATE message, which includes the *Cell Reporting Indicator* IE set to "stop request" in one or more items of the *Cell Measurement Result* IE, the eNB₁ should initialise the Resource Status Reporting Initiation procedure to remove all or some of the corresponding cells from the measurement.

8.3.7.3 Unsuccessful Operation

Not applicable.

8.3.7.4 Abnormal Conditions

If the eNB₁ receives a RESOURCE STATUS UPDATE message which includes the *ABS Status* IE, and all bits in the *Usable ABS Pattern Info* IE are set to '0', the eNB1 shall ignore the *DL ABS Status* IE.

8.3.8 Mobility Settings Change

8.3.8.1 General

This procedure enables an eNB to negotiate the handover trigger settings with a peer eNB controlling neighbouring cells.

8.3.8.2 Successful Operation

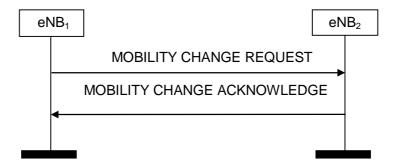


Figure 8.3.8.2-1: Mobility Settings Change, successful operation

The procedure is initiated with a MOBILITY CHANGE REQUEST message sent from eNB₁ to eNB₂.

Upon receipt, eNB_2 shall evaluate if the proposed eNB_2 handover trigger modification may be accepted. If eNB_2 is able to successfully complete the request it shall reply with MOBILITY CHANGE ACKNOWLEDGE.

8.3.8.3 Unsuccessful Operation

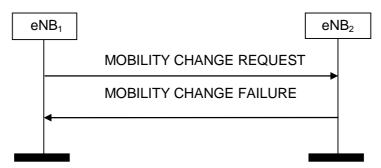


Figure 8.3.8.3-1: Mobility Settings Change, unsuccessful operation

If the requested parameter modification is refused by the eNB_2 , or if the eNB_2 is not able to complete the procedure, the eNB_2 shall send a MOBILITY CHANGE FAILURE message with the *Cause* IE set to an appropriate value. The eNB_2 may include *eNB2 Mobility Parameters Modification Range* IE in MOBILITY CHANGE FAILURE message, for example in cases when the proposed change is out of permitted range.

8.3.8.4 Abnormal Conditions

Void.

8.3.9 Radio Link Failure Indication

8.3.9.1 General

The purpose of the Radio Link Failure Indication procedure is to transfer information regarding RRC re-establishment attempts, or received RLF Reports, between eNBs. The signalling takes place from the eNB at which a re-establishment attempt is made, or an RLF Report is received, to an eNB to which the UE concerned may have previously been attached prior to the connection failure. This may aid the detection of radio link failure and handover failure cases (TS 36.300 [15]).

8.3.9.2 Successful Operation

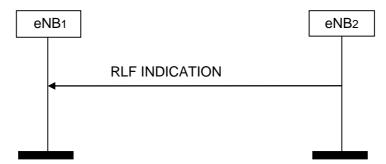


Figure 8.3.9.2-1: Radio Link Failure Indication, successful operation

 eNB_2 initiates the procedure by sending the RLF INDICATION message to eNB_1 following a re-establishment attempt or an RLF Report reception from a UE at eNB_2 , when eNB_2 considers that the UE may have previously suffered a connection failure at a cell controlled by eNB_1 .

 eNB_2 may include the *ShortMAC-I* IE in the RLF INDICATION message, e.g., in order to aid the eNB_1 to resolve a potential PCI confusion situation or to aid the eNB_1 to identify the UE.

eNB₂ may include the *UE RLF Report Container* IE and optionally also the *UE RLF Report Container for extended bands* IE in the RLF INDICATION message, which may be used by the eNB₁ to determine the nature of the failure. If the *UE RLF Report Container* IE is included in the RLF INDICATION message sent after successful re-establishment, the eNB₂ shall use the *Re-establishment Cell ECGI* IE in the RLF INDICATION message to indicate the ECGI of the cell where the re-establishment was successful.

eNB₂ may include the *RRC Conn Setup Indicator* IE in the RLF INDICATION message, which indicates that the RLF Report is retrieved after an RRC connection setup or an incoming successful handover.

If the RRC Conn Setup Indicator IE is present in the RLF INDICATION message, the eNB₁ shall ignore the values in the Failure cell PCI IE, Re-establishment cell ECGI IE, C-RNTI IE and ShortMAC-I IE.

eNB₂ may include the *RRC Conn Reestab Indicator* IE in the RLF INDICATION message, which may be used by the eNB₁ to determine where the failure occurred.

8.3.9.3 Unsuccessful Operation

Not applicable.

8.3.9.4 Abnormal Conditions

Void.

8.3.10 Handover Report

8.3.10.1 General

The purpose of the Handover Report procedure is to transfer mobility related information between eNBs.

8.3.10.2 Successful Operation



Figure 8.3.10.2-1: Handover Report, successful operation

An eNB initiates the procedure by sending an HANDOVER REPORT message to another eNB. By sending the message eNB_1 indicates to eNB_2 that a mobility-related problem was detected.

If the $Handover\ Report\ Type\ IE$ is set to "HO too early" or "HO to wrong cell", then the eNB_1 indicates to eNB_2 that, following a successful handover from a cell of eNB_2 to a cell of eNB_1 , a radio link failure occurred and the UE attempted RRC Re-establishment either at the original cell of eNB_2 (Handover Too Early), or at another cell (Handover to Wrong Cell). The detection of Handover Too Early and Handover to Wrong Cell events is made according to TS 36.300 [15].

If the UE-related information is available in eNB₁, the eNB₁ should include in HANDOVER REPORT message:

- the Mobility Information IE, if the Mobility Information IE was sent for this handover from eNB2;
- the *Source cell C-RNTI* IE.

If received, the eNB₂ uses the above information according to TS 36.300 [15].

If the UE RLF Report received from the eNB sending the RLF INDICATION message, as described in TS 36.300 [15], is available, the eNB₁ may also include it in the HANDOVER REPORT as *UE RLF Report Container* IE and optionally also *UE RLF Report Container for extended bands* IE.

If the *Handover Report Type* IE is set to "InterRAT ping-pong", then the eNB₁ indicates to eNB₂ that a completed handover from a cell of eNB₂ to a cell in other RAT might have resulted in an inter-RAT ping-pong and the UE was successfully handed over to a cell of eNB₁ (indicated with *Failure cell ECGI* IE).

The report contains the source and target cells, and cause of the handover. If the *Handover Report Type* IE is set to "HO to wrong cell", then the *Re-establishment cell ECGI* IE shall be included in the HANDOVER REPORT message. If the *Handover Report Type* IE is set to "InterRAT ping-pong", then the *Target cell in UTRAN* IE shall be included in the HANDOVER REPORT message.

8.3.10.3 Unsuccessful Operation

Not applicable.

8.3.10.4 Abnormal Conditions

Void.

8.3.11 Cell Activation

8.3.11.1 General

The purpose of the Cell Activation procedure is to request to a neighbouring eNB to switch on one or more cells, previously reported as inactive due to energy saving reasons.

8.3.11.2 Successful Operation

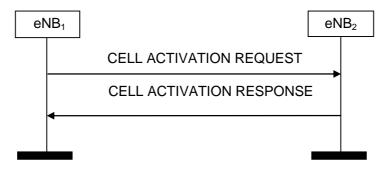


Figure 8.3.11.2-1: Cell Activation, successful operation

An eNB₁ initiates the procedure by sending a CELL ACTIVATION REQUEST message to a peer eNB₂.

Upon receipt of this message, eNB₂ should activate the cell(s) indicated in the CELL ACTIVATION REQUEST message and shall indicate in the CELL ACTIVATION RESPONSE message for which cells the request was fulfilled.

Interactions with eNB Configuration Update procedure:

 eNB_2 shall not send an ENB CONFIGURATION UPDATE message to eNB_1 just for the reason of the cell(s) indicated in the CELL ACTIVATION REQUEST message changing state, as the receipt of the CELL ACTIVATION RESPONSE message by eNB_1 is used to update the information about cell activation state of eNB_2 cells in eNB_1 .

8.3.11.3 Unsuccessful Operation

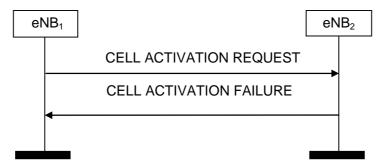


Figure 8.3.11.3-1: Cell Activation, unsuccessful operation

If the eNB_2 cannot activate any of the cells indicated in the CELL ACTIVATION REQUEST message, it shall respond with a CELL ACTIVATION FAILURE message with an appropriate cause value.

8.3.11.4 Abnormal Conditions

Not applicable.

8.3.12 X2 Removal

8.3.12.1 General

The purpose of the X2 Removal procedure is to remove the signaling connection between two eNBs in a controlled manner. If successful, this procedure erases any existing application level configuration data in the two nodes.

The procedure uses non UE-associated signaling.

8.3.12.2 Successful Operation

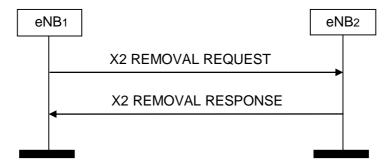


Figure 8.3.12.2-1: X2 Removal, successful operation

An eNB_1 initiates the procedure by sending the X2 REMOVAL REQUEST message to a candidate eNB_2 . Upon reception of the X2 REMOVAL REQUEST message the candidate eNB_2 shall reply with the X2 REMOVAL RESPONSE message. After receiving the X2 REMOVAL RESPONSE message, the initiating eNB_1 shall initiate removal of the TNL association towards eNB_2 and may remove all resources associated with that signaling connection. The candidate eNB_2 may then remove all resources associated with that signaling connection.

If the X2 Removal Threshold IE is included in the X2 REMOVAL REQUEST message, the candidate eNB₂ shall, if supported, accept to remove the signalling connection with eNB₁ if the X2 Benefit Value of the signalling connection determined at the candidate eNB₂ is lower than the value of the X2 Removal Threshold IE.

8.3.12.3 Unsuccessful Operation

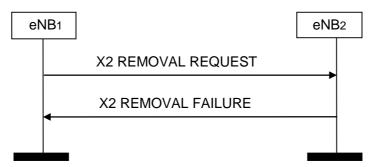


Figure 8.3.12.3-1: X2 Removal, unsuccessful operation

If the candidate eNB_2 cannot accept to remove the signaling connection with eNB_1 it shall respond with an X2 REMOVAL FAILURE message with an appropriate cause value.

8.3.12.4 Abnormal Conditions

Void.

8.3.13 Retrieve UE Context

8.3.13.1 General

The purpose of the Retrieve UE Context procedure is to retrieve the UE context from the eNB where the RRC connection has been suspended (old eNB) and transfer it to the eNB where the RRC Connection has been requested to be resumed (new eNB) or to retrieve the UE context for a UE which attempts to re-establish its RRC connection in an eNB (the new eNB) different from the eNB (the old eNB) where the RRC connection failed, e.g. due to RLF.

8.3.13.2 Successful Operation

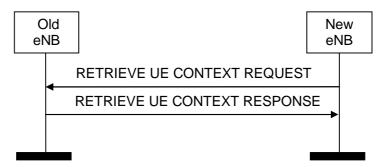


Figure 8.3.13.2-1: Retrieve UE Context, successful operation

The new eNB initiates the procedure by sending the RETRIEVE UE CONTEXT REQUEST message to the old eNB.

If the old eNB is able to identify the UE context and to successfully verify the UE by means of the Resume ID, the ShortMAC-I, optionally the C-RNTI, the failure cell PCI and the E-UTRAN Cell Identifier of the new cell contained in the RETRIEVE UE CONTEXT REQUEST message, it shall respond with the RETRIEVE UE CONTEXT RESPONSE message. The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

If the C-RNTI IE is present in the RETRIEVE UE CONTEXT REQUEST, the old eNB shall ignore the Resume ID IE.

The old eNB may include in the GUMMEI IE any GUMMEI corresponding to the source MME node.

If the PLMN of the new cell is not the Serving PLMN stored in the UE Context the old eNB shall replace the Serving PLMN with the PLMN of the new cell and move the Serving PLMN to the equivalent PLMN list, before propagating the roaming and access restriction information to the new eNB. The new eNB shall act upon reception of the

- UE Security Capabilities IE,
- AS Security Information IE,
- Subscriber Profile ID for RAT/Frequency priority IE,
- Handover Restriction List IE,
- Location Reporting Information IE,
- Management Based MDT Allowed IE
- Management Based MDT PLMN List IE
- Trace Activation IE,
- SRVCC Operation Possible IE,
- Masked IMEISV IE
- Expected UE Behaviour IE,
- ProSe Authorized IE,
- V2X Services Authorized IE,
- Aerial UE subscription information IE,

within the RETRIEVE UE CONTEXT RESPONSE message as specified for the target eNB upon reception of the HANDOVER REQUEST message for the Handover Preparation procedure.

If the *UE Sidelink Aggregate Maximum Bit Rate* IE is contained in the RETRIEVE UE CONTEXT RESPONSE message, the new eNB shall, if supported, use it for the concerned UE's sidelink communication in network scheduled mode for V2X services.

If the *Aerial UE subscription information* IE is included in the RETRIEVE UE CONTEXT RESPONSE message, the target eNB shall, if supported, store this information in the UE context and use it as defined in TS 36.300 [15].

8.3.13.3 Unsuccessful Operation

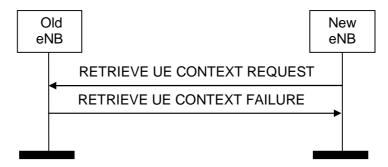


Figure 8.3.13.3-1: Retrieve UE Context, unsuccessful operation

If the old eNB is not able to identify the UE context by means of the Resume ID, or with the ShortMAC-I, C-RNTI, failed cell PCI and new E-UTRAN Cell Identifier contained in the RETRIEVE UE CONTEXT REQUEST message, it shall respond to the new eNB with the RETRIEVE UE CONTEXT FAILURE message.

8.3.13.4 Abnormal Conditions

Void.

8.3.14 EN-DC X2 Removal

8.3.14.1 General

The purpose of the EN-DC X2 Removal procedure is to remove the signaling connection between eNB and en-gNB in a controlled manner. If successful, this procedure erases any existing application level configuration data in the two nodes.

The procedure uses non UE-associated signaling.

8.3.14.2 Successful Operation

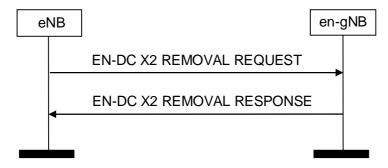


Figure 8.3.14.2-1: eNB Initiated EN-DC X2 Removal, successful operation

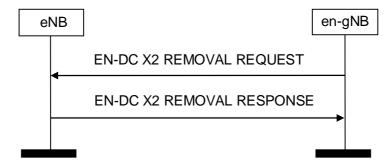


Figure 8.3.14.2-2: en-gNB Initiated EN-DC X2 Removal, successful operation

eNB initiated EN-DC X2 Removal:

An eNB initiates the procedure by sending the EN-DC X2 REMOVAL REQUEST message to a candidate en-gNB. Upon reception of the EN-DC X2 REMOVAL REQUEST message the candidate en-gNB shall reply with the EN-DC X2 REMOVAL RESPONSE message. After receiving the EN-DC X2 REMOVAL RESPONSE message, the initiating eNB shall initiate removal of the TNL association towards en-gNB and may remove all resources associated with that signaling connection. The candidate eNB may then remove all resources associated with that signaling connection.

If the X2 Removal Threshold IE is included in the EN-DC X2 REMOVAL REQUEST message, the candidate en-gNB shall, if supported, accept to remove the signalling connection with eNB if the X2 Benefit Value of the signalling connection determined at the candidate en-gNB is lower than the value of the X2 Removal Threshold IE.

en-gNB initiated EN-DC X2 Removal:

An en-gNB initiates the procedure by sending the EN-DC X2 REMOVAL REQUEST message to a candidate eNB. Upon reception of the EN-DC X2 REMOVAL REQUEST message the candidate eNB shall reply with the EN-DC X2 REMOVAL RESPONSE message. After receiving the EN-DC X2 REMOVAL RESPONSE message, the initiating engNB shall initiate removal of the TNL association towards eNB and may remove all resources associated with that signaling connection. The candidate eNB may then remove all resources associated with that signaling connection.

If the X2 Removal Threshold IE is included in the EN-DC X2 REMOVAL REQUEST message, the candidate eNB shall, if supported, accept to remove the signalling connection with en-gNB if the X2 Benefit Value of the signalling connection determined at the candidate eNB is lower than the value of the X2 Removal Threshold IE.

8.3.14.3 Unsuccessful Operation

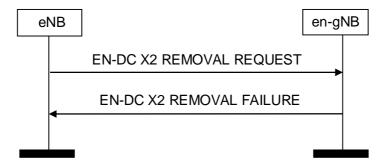


Figure 8.3.14.3-1: eNB Initiated EN-DC X2 Removal, unsuccessful operation

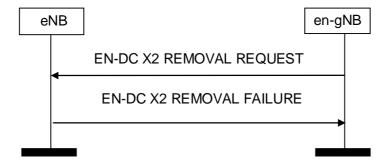


Figure 8.3.14.3-2: en-gNB Initiated EN-DC X2 Removal, unsuccessful operation

If the candidate receiving node cannot accept to remove the signaling connection with initiating node it shall respond with an EN-DC X2 REMOVAL FAILURE message with an appropriate cause value.

8.3.14.4 Abnormal Conditions

Void.

8.4 X2 Release

8.4.1 General

The purpose of the X2 Release procedure is to inform an eNB that the signalling (i.e. SCTP) connection to a peer eNB is unavailable.

8.4.2 Successful Operation



Figure 8.4.2-1: X2AP Release, successful operation

eNB₁ initiates the procedure by sending the X2 RELEASE message to eNB₂. Upon the reception of X2 RELEASE message, eNB₂ shall consider that the signalling connection to an eNB indicated by the *eNB ID* IE is unavailable. eNB₂ may delete all the context information related to the indicated eNB.

8.4.3 Unsuccessful Operation

Not Applicable

8.4.4 Abnormal Condition

Not Applicable.

8.5 X2AP Message Transfer

8.5.1 General

The purpose of the X2AP Message Transfer procedure is to allow indirect transport of an X2AP message (except the X2AP MESSAGE TRANSFER message) between two eNBs and to allow an eNB to perform registration.

8.5.2 Successful Operation



Figure 8.5.2-1: X2AP Message Transfer, successful operation

eNB₁ initiates the procedure by sending the X2AP MESSAGE TRANSFER message to eNB₂.

Upon the reception of X2 MESSAGE TRANSFER message the target eNB may:

- Retrieve the X2AP message included in the X2AP Message IE;
- Consider the target eNB ID contained in the *Target eNB ID* IE, included in the *RNL Header* IE, as the destination for the X2AP message signaled in the *X2AP Message* IE;
- Consider the source eNB ID contained in the *Source eNB ID* IE, included in the *RNL Header* IE, as the source of the X2AP message signaled in the *X2AP Message* IE.

In case the included *RNL Header* IE does not contain the *Target eNB ID* IE, the receiving eNB shall consider the eNB ID included in the *Source eNB ID* IE as the eNB ID corresponding to the TNL address(es) of the sender and update its internal information.

8.5.3 Unsuccessful Operation

Not Applicable.

8.5.4 Abnormal Condition

Not Applicable.

8.6 Procedures for Dual Connectivity

8.6.1 SeNB Addition Preparation

8.6.1.1 General

The purpose of the SeNB Addition Preparation procedure is to request the SeNB to allocate resources for dual connectivity operation for a specific UE.

8.6.1.2 Successful Operation

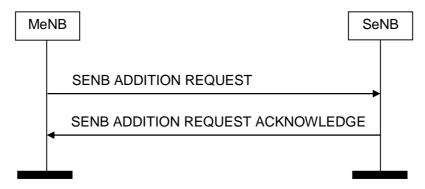


Figure 8.6.1.2-1: SeNB Addition Preparation, successful operation

The MeNB initiates the procedure by sending the SENB ADDITION REQUEST message to the SeNB. When the MeNB sends the SENB ADDITION REQUEST message, it shall start the timer T_{DCprep} .

The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

If the SENB ADDITION REQUEST message contains the Serving PLMN IE, the SeNB may use it for RRM purposes.

If the SENB ADDITION REQUEST message contains the *Expected UE Behaviour* IE, the SeNB shall, if supported, store this information and may use it to optimize resource allocation.

The SeNB shall report to the MeNB, in the SENB ADDITION REQUEST ACKNOWLEDGE message, the result for all the requested E-RABs in the following way:

- A list of E-RABs which are successfully established shall be included in the *E-RABs Admitted To Be Added List* IE.
- A list of E-RABs which failed to be established shall be included in the E-RABs Not Admitted List IE.

NOTE: The MeNB may trigger the SeNB Addition Preparation procedure in the course of the Inter-MeNB handover without SeNB change procedure as described in 36.300 [15]. The deleted E-RABs are not included in the *E-RABs To Be Added List* IE in the SENB ADDITION REQUEST message, from MeNB point of view. If the SeNB reports a certain E-RAB to be successfully established, respective SCG resources, from an SeNB point of view, may be actually successfully established or modified or kept; if a certain E-RAB is reported to be failed to be established, respective SCG resources, from an SeNB point of view, may be actually failed to be established or modified or kept.

For each E-RAB configured with the SCG bearer option

- the SeNB shall choose the ciphering algorithm based on the information in the *UE Security Capabilities* IE and locally configured priority list of AS encryption algorithms and apply the key indicated in the *SeNB Security Key* IE as specified in the TS 33.401 [18].
- the MeNB may propose to apply forwarding of downlink data by including the *DL Forwarding* IE within the *E-RABs To be Added Item* IE of the SENB ADDITION REQUEST message. For each E-RAB that it has decided to admit, the SeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs Admitted To Be Added Item* IE of the SENB ADDITION REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this bearer. This GTP tunnel endpoint may be different from the corresponding *DL GTP TEID* IE in the *E-RAB To Be Modified List* IE of the E-RAB MODIFICATION INDICATION message (see TS 36.413 [4]) depending on implementation choice.
- the SeNB may include for each bearer in the *E-RABs Admitted To Be Added List* IE the *UL Forwarding GTP Tunnel Endpoint* IE to indicate that it requests data forwarding of uplink packets to be performed for that bearer.
- If the *Correlation ID* IE for the concerned E-RAB is received by the SeNB, the SeNB shall use this information for LIPA operation for the concerned E-RAB.
- If the *SIPTO Correlation ID* IE for the concerned E-RAB is received by the SeNB, the SeNB shall use this information for SIPTO@LN operation for the concerned E-RAB.

If the CSG Membership Status IE is included in the SENB ADDITION REQUEST message, the SeNB shall act as specified in TS 36.300 [15].

Upon reception of the SENB ADDITION REQUEST ACKNOWLEDGE message the MeNB shall stop the timer T_{DCDrep} .

If the *GW Transport Layer Address* IE is received in the SENB ADDITION REQUEST ACKNOWLEDGE message, the MeNB stores this information and use it according to TS 36.300 [15].

If the SIPTO L-GW Transport Layer Address IE is received in the SENB ADDITION REQUEST ACKNOWLEDGE message, the MeNB stores this information and use it according to TS 36.300 [15].

If the SeNB UE X2AP ID IE and/or SeNB UE X2AP ID Extension IE are contained in the SENB ADDITION REQUEST message, the SeNB shall, if supported, store this information and use it as defined in TS 36.300 [15].

If the *Tunnel Information for BBF* IE is received in the SENB ADDITION REQUEST ACKNOWLEDGE message, the MeNB shall, if supported, transfer the tunnel information for BBF to the core network.

Interactions with the SeNB Reconfiguration Completion procedure:

If the SeNB admits at least one E-RAB, the SeNB shall start the timer $T_{DCoverall}$ when sending the SENB ADDITION REQUEST ACKNOWLEDGE message to the MeNB. The reception of the SENB RECONFIGURATION COMPLETE message shall stop the timer $T_{DCoverall}$.

8.6.1.3 Unsuccessful Operation

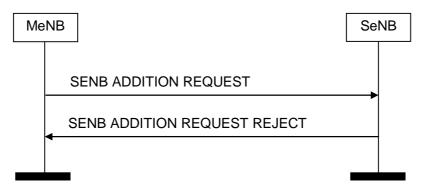


Figure 8.6.1.3-1: SeNB Addition Preparation, unsuccessful operation

If the SeNB is not able to accept any of the bearers or a failure occurs during the SeNB Addition Preparation, the SeNB sends the SENB ADDITION REQUEST REJECT message with an appropriate cause value to the MeNB.

8.6.1.4 Abnormal Conditions

If the SeNB receives a SENB ADDITION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RABs To Be Added List* IE) set to the same value, the SeNB shall consider the establishment of the corresponding E-RAB as failed.

If the SeNB receives a SENB ADDITION REQUEST message containing a *E-RAB Level QoS Parameters* IE which contains a *QCI* IE indicating a GBR bearer (as defined in TS 23.203 [13]), and which does not contain the *GBR QoS Information* IE, the SeNB shall consider the establishment of the corresponding E-RAB as failed.

If the supported algorithms for encryption defined in the *Encryption Algorithms* IE in the *UE Security Capabilities* IE, plus the mandated support of EEA0 in all UEs (TS 33.401 [18]), do not match any algorithms defined in the configured list of allowed encryption algorithms in the SeNB (TS 33.401 [18]), the SeNB shall reject the procedure using the SENB ADDITION REQUEST REJECT message.

If the SeNB receives a SENB ADDITION REQUEST message which does not contain the *CSG Membership Status* IE, and the SCell served by the SeNB is a hybrid cell, the SeNB shall reject the procedure using the SENB ADDITION REQUEST REJECT message.

If the SeNB receives a SENB ADDITION REQUEST message containing a *SeNB UE X2AP ID* IE that does not match any existing UE Context that has such ID, the SeNB shall reject the procedure using the SENB ADDITION REQUEST REJECT message.

If the SeNB receives a SENB ADDITION REQUEST message containing both the *Correlation ID* and the *SIPTO Correlation ID* IEs for the same E-RAB, the SeNB shall consider the establishment of the corresponding E-RAB as failed.

Interactions with the SeNB Reconfiguration Completion and SeNB initiated SeNB Release procedure:

If the timer $T_{DCoverall}$ expires before the SeNB has received the SENB RECONFIGURATION COMPLETE or the SENB RELEASE REQUEST message, the SeNB shall regard the requested RRC connection reconfiguration as being not applied by the UE and shall trigger the SeNB initiated SeNB Release procedure.

Interactions with the MeNB initiated SeNB Release procedure:

If the timer T_{DCprep} expires before the MeNB has received the SENB ADDITION REQUEST ACKNOWLEDGE message, the MeNB shall regard the SeNB Addition Preparation procedure as being failed and shall trigger the MeNB initiated SeNB Release procedure.

8.6.2 SeNB Reconfiguration Completion

8.6.2.1 General

The purpose of the SeNB Reconfiguration Completion procedure is to provide information to the SeNB whether the requested configuration was successfully applied by the UE.

The procedure uses UE-associated signalling.

8.6.2.2 Successful Operation



Figure 8.6.2.2-1: SeNB Reconfiguration Complete procedure, successful operation.

The MeNB initiates the procedure by sending the SENB RECONFIGURATION COMPLETE message to the SeNB.

The SENB RECONFIGURATION COMPLETE message may contain information that

- either the UE has successfully applied the configuration requested by the SeNB. The MeNB may also provide configuration information in the *MeNB to SeNB Container* IE.
- or the MeNB has not triggered configuration requested by the SeNB. The MeNB shall provide information with sufficient precision in the included *Cause* IE to enable the SeNB to know the reason for an unsuccessful reconfiguration. The MeNB may also provide configuration information in the *MeNB to SeNB Container* IE.

Upon reception of the SENB RECONFIGURATION COMPLETE message the SeNB shall stop the timer T_{DCoverall}.

8.6.2.3 Abnormal Conditions

Void.

8.6.3 MeNB initiated SeNB Modification Preparation

8.6.3.1 General

This procedure is used to enable an MeNB to request an SeNB to modify the UE context at the SeNB.

The procedure uses UE-associated signalling.

8.6.3.2 Successful Operation



Figure 8.6.3.2-1: MeNB initiated SeNB Modification Preparation, successful operation

The MeNB initiates the procedure by sending the SENB MODIFICATION REQUEST message to the SeNB. When the MeNB sends the SENB MODIFICATION REQUEST message, it shall start the timer T_{DCprep} .

The SENB MODIFICATION REQUEST message may contain

- within the *UE Context Information* IE;
 - E-RABs to be added within the E-RABs To Be Added Item IE;
 - E-RABs to be modified within the *E-RABs To Be Modified Item* IE;
 - E-RABs to be released within the *E-RABs To Be Released Item* IE;
 - the SeNB UE Aggregate Maximum Bit Rate IE;
- the MeNB to SeNB Container IE;
- the SCG Change Indication IE;
- the CSG Membership Status IE.

If the SENB MODIFICATION REQUEST message contains the *Serving PLMN* IE, the SeNB may use it for RRM purposes.

If the SeNB UE Aggregate Maximum Bit Rate IE is included in the SENB MODIFICATION REQUEST message, the SeNB shall:

- replace the previously provided SeNB UE Aggregate Maximum Bit Rate by the received SeNB UE Aggregate Maximum Bit Rate in the UE context;
- use the received SeNB UE Aggregate Maximum Bit Rate for non-GBR Bearers for the concerned UE as defined in TS 36.300 [15].

The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

If at least one of the requested modifications is admitted by the SeNB, the SeNB shall modify the related part of the UE context accordingly and send the SENB MODIFICATION REQUEST ACKNOWLEDGE message back to the MeNB.

The SeNB shall include the E-RABs for which resources have been either added or modified or released at the SeNB either in the *E-RABs Admitted To Be Added List* IE or the *E-RABs Admitted To Be Modified List* IE or the *E-RABs Admitted To Be Released List* IE. The SeNB shall include the E-RABs that have not been admitted in the *E-RABs Not Admitted List* IE with an appropriate cause value.

For each E-RAB configured with the SCG bearer option

- the SeNB shall, if included, choose the ciphering algorithm based on the information in the *UE Security Capabilities* IE and locally configured priority list of AS encryption algorithms and apply the key indicated in the *SeNB Security Key* IE as specified in the TS 33.401 [18].
- if applicable, the MeNB may propose to apply forwarding of downlink data by including the *DL Forwarding* IE within the *E-RABs To Be Added Item* IE of the SENB MODIFICATION REQUEST message. For each E-RAB that it has decided to admit, the SeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs Admitted To Be Added Item* IE of the SENB MODIFICATION REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this bearer. The MeNB may also provide for an applicable E-RAB to be released the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SENB MODIFICATION REQUEST message.
- if applicable, the SeNB may include for each bearer in the *E-RABs Admitted To Be Added List* IE in the SENB MODIFICATION REQUEST ACKNOWLEDGE message the *UL Forwarding GTP Tunnel Endpoint* IE to indicate that it requests data forwarding of uplink packets to be performed for that bearer.
- If the *Correlation ID* IE for the concerned E-RAB is received by the SeNB, the SeNB shall use this information for LIPA operation for the concerned E-RAB.
- If the *SIPTO Correlation ID* IE for the concerned E-RAB is received by the SeNB, the SeNB shall use this information for SIPTO@LN operation for the concerned E-RAB.

For each E-RAB configured with the split bearer option to be modified, if the SENB MODIFICATION REQUEST message includes the *SCG Change Indication* IE and the *MeNB GTP Tunnel Endpoint* IE in the *E-RABs To Be Modified Item* IE, the SeNB shall act as specified in TS 36.300 [15].

For each E-RAB configured with the split bearer option to be modified (released)

- if applicable, the MeNB may provide for an applicable E-RAB to be released the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SENB MODIFICATION REQUEST message.

If the *E-RAB level QoS parameter* IE is included in the SENB MODIFICATION REQUEST message for an E-RAB to be modified the SeNB shall allocate respective resources and provide corresponding radio configuration information within the *SeNB to MeNB Container* IE as described in TS 36.300 [15].

If the SENB MODIFICATION REQUEST message contains for an E-RAB to be modified which is configured with the SCG bearer option the S1 UL GTP Tunnel Endpoint IE the SeNB shall use it as the new UL S1-U address.

If the SENB MODIFICATION REQUEST message contains for an E-RAB to be modified which is configured with the split bearer option the *MeNB GTP Tunnel Endpoint* IE the SeNB shall use it as the new UL X2-U address.

For an E-RAB to be modified which is configured with the SCG bearer option the SeNB may include in the SENB MODIFICATION REQUEST ACKNOWLEDGE message the *S1 DL GTP Tunnel Endpoint* IE.

For an E-RAB to be modified which is configured with the split bearer option the SeNB may include in the SENB MODIFICATION REQUEST ACKNOWLEDGE message the *SeNB GTP Tunnel Endpoint* IE.

If the SCG Change Indication IE is included in the SENB MODIFICATION REQUEST message, the SeNB shall act as specified in TS 36.300 [15].

If the CSG Membership Status IE is included in the SENB MODIFICAITON REQUEST message, the SeNB shall act as specified in TS 36.300 [15].

Upon reception of the SENB MODIFICATION REQUEST ACKNOWLEDGE message the MeNB shall stop the timer T_{DCprep}. If the SENB MODIFICATION REQUEST ACKNOWLEDGE message has included the *SeNB to MeNB Container* IE the MeNB is then defined to have a Prepared SeNB Modification for that X2 UE-associated signalling.

When the SeNB supporting L-GW function for LIPA operation releases radio and control plane related resources associated to the LIPA bearer, it shall also request using intra-node signalling the collocated L-GW to release the LIPA PDN connection as defined in TS 23.401 [12].

Interactions with the SeNB Reconfiguration Completion procedure:

If the SeNB admits a modification of the UE context requiring the MeNB to report about the success of the RRC connection reconfiguration procedure, the SeNB shall start the timer $T_{DCoverall}$ when sending the SENB

MODIFICATION REQUEST ACKNOWLEDGE message to the MeNB. The reception of the SeNB RECONFIGURATION COMPLETE message shall stop the timer T_{DCoverall}.

8.6.3.3 Unsuccessful Operation



Figure 8.6.3.3-1: MeNB initiated SeNB Modification Preparation, unsuccessful operation

If the SeNB does not admit any modification requested by the MeNB, or a failure occurs during the MeNB initiated SeNB Modification Preparation, the SeNB shall send the SENB MODIFICATION REQUEST REJECT message to the MeNB. The message shall contain the *Cause* IE with an appropriate value.

If the SeNB receives a SENB MODIFICATION REQUEST message containing the *MeNB to SeNB Container* IE that does not include required information as specified in TS 36.331 [9], the SeNB shall send the SENB MODIFICATION REQUEST REJECT message to the MeNB.

8.6.3.4 Abnormal Conditions

If the SeNB receives a SENB MODIFICATION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RABs To Be Added List* IE and/or the *E-RABs To Be Modified List* IE) set to the same value, the SeNB shall not admit the action requested for the corresponding E-RABs.

If the SeNB receives an SENB MODIFICATION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RAB To Be Released List* IE) set to the same value, the SeNB shall initiate the release of one corresponding E-RAB and ignore the duplication of the instances of the selected corresponding E-RABs.

If the SeNB receives a SENB MODIFICATION REQUEST message containing a *E-RAB Level QoS Parameters* IE which contains a *QCI* IE indicating a GBR bearer (as defined in TS 23.203 [13]), and which does not contain the *GBR QoS Information* IE, the SeNB shall not admit the corresponding E-RAB.

If the supported algorithms for encryption defined in the *Encryption Algorithms* IE in the *UE Security Capabilities* IE in the *UE Context Information* IE, plus the mandated support of EEA0 in all UEs (TS 33.401 [18]), do not match any algorithms defined in the configured list of allowed encryption algorithms in the SeNB (TS 33.401 [18]), the SeNB shall reject the procedure using the SENB MODIFICATION REQUEST REJECT message.

If the timer T_{DCprep} expires before the MeNB has received the SENB MODIFICATION REQUEST ACKNOWLEDGE message, the MeNB shall regard the MeNB initiated SeNB Modification Preparation procedure as being failed and shall release the UE Context at the SeNB.

If the SeNB receives a SENB MODIFICATION REQUEST message containing both the *Correlation ID* and the *SIPTO Correlation ID* IEs for the same E-RAB, the SeNB shall consider the establishment of the corresponding E-RAB as failed.

Interactions with the SeNB Reconfiguration Completion and SeNB initiated SeNB Release procedure:

If the timer T_{DCoverall} expires before the SeNB has received the SENB RECONFIGURATION COMPLETE or the SENB RELEASE REQUEST message, the SeNB shall regard the requested modification RRC connection reconfiguration as being not applied by the UE and shall trigger the SeNB initiated SeNB Release procedure.

Interaction with the SeNB initiated SeNB Modification Preparation procedure:

If the MeNB, after having initiated the MeNB initiated SeNB Modification procedure, receives the SENB MODIFICATION REQUIRED message, the MeNB shall refuse the SeNB initiated SeNB Modification procedure with an appropriate cause value in the *Cause* IE.

If the MeNB has a Prepared SeNB Modification and receives the SENB MODIFICATION REQUIRED message, the MeNB shall respond with the SENB MODIFICATION REFUSE message to the SeNB with an appropriate cause value in the *Cause* IE.

8.6.4 SeNB initiated SeNB Modification

8.6.4.1 General

This procedure is used by the SeNB to modify the UE context in the SeNB.

The procedure uses UE-associated signalling.

8.6.4.2 Successful Operation

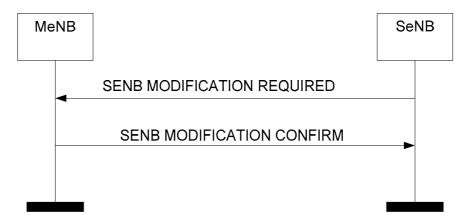


Figure 8.6.4.2-1: SeNB initiated SeNB Modification, successful operation.

The SeNB initiates the procedure by sending the SENB MODIFICATION REQUIRED message to the MeNB. When the SeNB sends the SENB MODIFICATION REQUIRED message, it shall start the timer $T_{DCoverall}$.

The SENB MODIFICATION REQUIRED message may contain

- the SeNB to MeNB Container IE.
- E-RABs to be released within the E-RABs To Be Released Item IE;
- the SCG Change Indication IE.

If the MeNB receives a SENB MODIFICATION REQUIRED message containing the SCG Change Indication IE, the MeNB shall act as specified in TS 36.300 [15].

If the MeNB is able to perform the modifications requested by the SeNB, the MeNB shall send the SENB MODIFICATION CONFIRM message to the SeNB. The SENB MODIFICATION CONFIRM message may contain the *MeNB to SeNB Container* IE.

 $Upon \ reception \ of \ the \ SENB \ MODIFICATION \ CONFIRM \ message \ the \ SeNB \ shall \ stop \ the \ timer \ T_{DCoverall}.$

Interaction with the MeNB initiated SeNB Modification Preparation procedure:

If applicable, as specified in TS 36.300 [15], the SeNB may receive, after having initiated the SeNB initiated SeNB Modification procedure, the SENB MODIFICATION REQUEST message including the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released List* IE.

If applicable, as specified in TS 36.300 [15], the SeNB may receive, after having initiated the SeNB initiated SeNB Modification procedure, the SENB MODIFICATION REQUEST message including the *SeNB Security Key* IE within the *UE Context Information* IE.

If the SeNB has initiated the SeNB initiated SeNB Modification procedure with the SENB MODIFICATION REQUIRED message including the *E-RABs To Be Released Item* IE, it may receive the SENB MODIFICATION REQUEST message including the *SCG Change Indication* IE, upon which the SeNB shall provide respective information in the *SeNB to MeNB Container* IE within the SENB MODIFICATION REQUEST ACKNOWLEDGMENT message, as specified in TS 36.300 [15].

8.6.4.3 Unsuccessful Operation

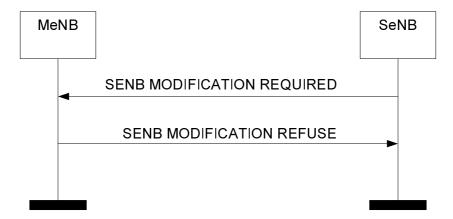


Figure 8.6.4.3-1: SeNB initiated SeNB Modification, unsuccessful operation.

In case the request modification cannot be performed successfully the MeNB shall respond with the SENB MODIFICATION REFUSE message to the SeNB with an appropriate cause value in the *Cause* IE.

The MeNB may also provide configuration information in the MeNB to SeNB Container IE.

8.6.4.4 Abnormal Conditions

If the timer $T_{DCoverall}$ expires before the SeNB has received the SENB MODIFICATION CONFIRM or the SENB MODIFICATION REFUSE message, the SeNB shall regard the requested modification as failed and may take further actions like triggering the SeNB initiated SeNB Release procedure to release all SeNB resources allocated for the UE.

If the MeNB is aware that the SeNB didn't receive the latest configuration information concerning the MCG, the MeNB may respond with the SENB MODIFICATION REFUSE message to the SeNB with an appropriate cause value in the *Cause* IE.

If the value received in the *E-RAB ID* IE of any of the *E-RABs To Be Released Items* IE is not known at the MeNB, the MeNB shall regard the procedure as failed and may take appropriate actions like triggering the MeNB initiated SeNB Release procedure.

Interaction with the MeNB initiated SeNB Modification Preparation procedure:

If the SeNB, after having initiated the SeNB initiated SeNB Modification procedure, receives the SENB MODIFICATION REQUEST message including other IEs than an applicable *SeNB Security Key* IE and/or applicable forwarding addresses and/or the *SCG Change Indication* IE the SeNB shall

- regard the SeNB initiated SeNB Modification Procedure as being failed,
- stop the T_{DCoverall}, which was started to supervise the SeNB initiated SeNB Modification procedure,
- be prepared to receive the SENB MODIFICATION REFUSE message from the MeNB and
- continue with the MeNB initiated SeNB Modification Preparation procedure as specified in section 8.6.3.

8.6.5 MeNB initiated SeNB Release

8.6.5.1 General

The MeNB initiated SeNB Release procedure is triggered by the MeNB to initiate the release of the resources for a specific UE.

The procedure uses UE-associated signalling.

8.6.5.2 Successful Operation



Figure 8.6.5.2-1: MeNB initiated SeNB Release, successful operation

The MeNB initiates the procedure by sending the SENB RELEASE REQUEST message. Upon reception of the SENB RELEASE REQUEST message the SeNB shall stop providing user data to the UE. The SeNB UE X2AP ID IE and, if available, the SeNB UE X2AP ID Extension IE shall be included if it has been obtained from the SeNB. The MeNB may provide appropriate information within the Cause IE.

If the bearer context in the SeNB was configured with the SCG bearer option, for each SCG bearer for which the MeNB requests forwarding of uplink/downlink data, the MeNB includes the *UL Forwarding GTP Tunnel Endpoint/DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SENB RELEASE REQUEST message to indicate that the SeNB should perform data forwarding of uplink/downlink packets for that SCG bearer.

If the bearer context in the SeNB was configured with the split bearer option, for each Split bearer for which the MeNB requests forwarding of downlink data, the MeNB includes the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SENB RELEASE REQUEST message to indicate that the SeNB should perform data forwarding of downlink packets for that split bearer.

Upon reception of the SENB RELEASE REQUEST message containing *UE Context Kept Indicator* IE set to "True", the SeNB shall, if supported, only initiate the release of the resources related to the UE-associated signalling connection between the MeNB and the SeNB.

Upon reception of the SENB RELEASE REQUEST message containing *MakeBeforeBreak Indicator* IE set to "True", the SeNB shall, if supported, perform Make-Before-Break SeNB change as specified in TS 36.300 [15].

8.6.5.3 Unsuccessful Operation

Not applicable.

8.6.5.4 Abnormal Conditions

Should the SENB RELEASE REQUEST message refer to a context that does not exist, the SeNB shall ignore the message.

When the MeNB has initiated the procedure and did not include the *SeNB UE X2AP ID* IE the MeNB shall regard the resources for the UE at the SeNB as being fully released.

8.6.6 SeNB initiated SeNB Release

8.6.6.1 General

This procedure is triggered by the SeNB to initiate the release of the resources for a specific UE.

8.6.6.2 Successful Operation

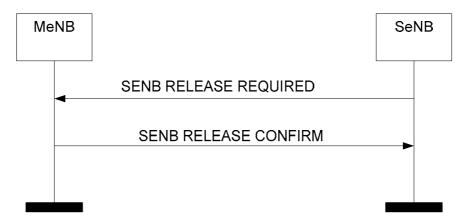


Figure 8.6.6.2-1: SeNB initiated SeNB Release, successful operation.

The SeNB initiates the procedure by sending the SENB RELEASE REQUIRED message to the MeNB.

Upon reception of the SENB RELEASE REQUIRED message, the MeNB replies with the SENB RELEASE CONFIRM message. For each E-RAB configured with the SCG bearer option, the MeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE to indicate that it requests data forwarding of uplink and downlink packets to be performed for that bearer. For each E-RAB configured with the split bearer option, the MeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE to indicate that it requests data forwarding of downlink packets to be performed for that bearer.

The SeNB may start data forwarding and stop providing user data to the UE upon reception of the SENB RELEASE CONFIRM message,

8.6.6.3 Unsuccessful Operation

Not applicable.

8.6.6.4 Abnormal Conditions

Void.

8.6.7 SeNB Counter Check

8.6.7.1 General

This procedure is initiated by the SeNB to request the MeNB to execute a counter check procedure to verify the value of the PDCP COUNTs associated with SCG bearers established in the SeNB.

The procedure uses UE-associated signalling.

8.6.7.2 Successful Operation



Figure 8.6.7.2-1: SeNB Counter Check procedure, successful operation.

The SeNB initiates the procedure by sending the SENB COUNTER CHECK REQUEST message to the MeNB.

Upon reception of the SENB COUNTER CHECK REQUEST message, the MeNB may perform the RRC counter check procedure as defined in TS 33.401 [18].

8.6.7.3 Unsuccessful Operation

Not applicable.

8.6.7.4 Abnormal Conditions

Not applicable.

8.7 Procedures for E-UTRAN-NR Dual Connectivity

8.7.1 EN-DC X2 Setup

8.7.1.1 General

The purpose of the EN-DC X2 Setup procedure is to exchange application level configuration data needed for eNB and en-gNB to interoperate correctly over the X2 interface. This procedure erases any existing application level configuration data in the two nodes and replaces it by the one received. This procedure also resets the X2 interface like a Reset procedure would do.

The procedure uses non UE-associated signalling.

8.7.1.2 Successful Operation

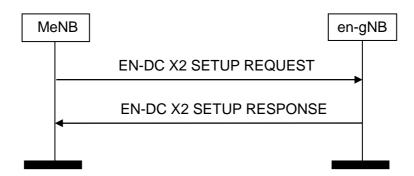


Figure 8.7.1.2-1: eNB Initiated EN-DC X2 Setup, successful operation

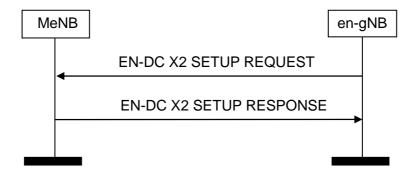


Figure 8.7.1.2-2: en-gNB Initiated EN-DC X2 Setup, successful operation

eNB initiated EN-DC X2 Setup:

An eNB initiates the procedure by sending the EN-DC X2 SETUP REQUEST message to a candidate en-gNB. The candidate en-gNB replies with the EN-DC X2 SETUP RESPONSE message. The initiating eNB shall transfer the complete list of its served cells to the candidate en-gNB. The candidate en-gNB shall reply with the complete list of its served cells. If Supplementary Uplink is configured at the candidate en-gNB, the candidate en-gNB shall include in the

EN-DC X2 SETUP RESPONSE message the *SUL Information* IE and the *Supported SUL band List* IE for each served cell where supplementary uplink is configured.

If the EN-DC X2 SETUP REQUEST message contains the *Protected E-UTRA Resource Indication* IE, the receiving en-gNB should forward it to lower layers and use it for cell-level resource coordination with the eNB. The en-gNB shall consider the received *Protected E-UTRA Resource Indication* IE when expressing its desired resource allocation to the eNB during E-UTRA – NR Cell Resource Coordination procedure. The en-gNB shall consider the received *Protected E-UTRA Resource Indication* IE content valid until reception of a new update of the IE for the same eNB.

The protected resource pattern indicated in the *Protected E-UTRA Resource Indication* IE is not valid in subframes indicated by the *Reserved Subframes* IE, as well as in the non-control region of the MBSFN subframes i.e. it is valid only in the control region therein. The size of the control region of MBSFN subframes is indicated in the *Protected E-UTRA Resource Indication* IE.

en-gNB initiated EN-DC X2 Setup:

An en-gNB initiates the procedure by sending the EN-DC X2 SETUP REQUEST message to a candidate eNB. The candidate eNB replies with the EN-DC X2 SETUP RESPONSE message. The initiating en-gNB shall transfer the complete list of its served cells to the candidate eNB. The candidate eNB shall reply with the complete list of its served cells.

If Supplementary Uplink is configured at the en-gNB, the en-gNB shall include in the EN-DC X2 SETUP REQUEST message the *SUL Information* IE and the *Supported SUL band List* IE for each served cell where supplementary uplink is configured.

8.7.1.3 Unsuccessful Operation

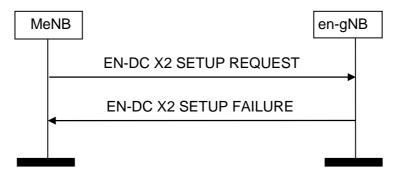


Figure 8.7.1.3-1: eNB Initiated EN-DC X2 Setup, unsuccessful operation

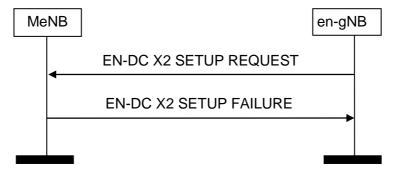


Figure 8.7.1.3-2: en-gNB Initiated EN-DC X2 Setup, unsuccessful operation

If the candidate receving node cannot accept the setup it shall respond with an EN-DC X2 SETUP FAILURE message with appropriate cause value.

8.7.1.4 Abnormal Conditions

If the first message received for a specific TNL association is not an EN-DC X2 SETUP REQUEST, EN-DC X2 SETUP RESPONSE, or EN-DC X2 SETUP FAILURE message then this shall be treated as a logical error.

If the initiating node does not receive either EN-DC X2 SETUP RESPONSE message or EN-DC X2 SETUP FAILURE message, the initiating node may reinitiate the EN-DC X2 Setup procedure towards the same candidate node, provided

that the content of the EN-DC X2 SETUP REQUEST message is identical to the content of the previously unacknowledged EN-DC X2 SETUP REQUEST message.

8.7.2 EN-DC Configuration Update

8.7.2.1 General

The purpose of the EN-DC Configuration Update procedure is to update application level configuration data needed for eNB and en-gNB to interoperate correctly over the X2 interface.

The procedure uses non UE-associated signalling.

8.7.2.2 Successful Operation

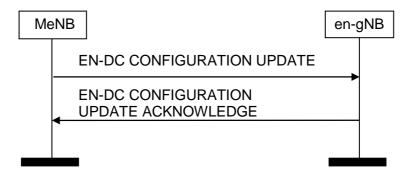


Figure 8.7.2.2-1: eNB Initiated EN-DC Configuration Update, successful operation

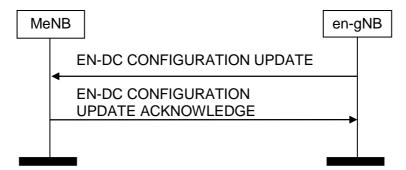


Figure 8.7.2.2-2: en-gNB Initiated EN-DC Configuration Update, successful operation

eNB initiated EN-DC Configuration Update:

An eNB initiates the procedure by sending an EN-DC CONFIGURATION UPDATE message to a peer en-gNB.

After successful update of requested information, en-gNB shall reply with the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message to inform the initiating eNB that the requested update of application data was performed successfully.

If the *Cell Assistance Information* IE is present, the en-gNB may use it to generate the *List of Served NR Cells* IE and include the list in the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message.

If the EN-DC CONFIGURATION UPDATE REQUEST message contains the Protected E-UTRA Resource Indication IE, the receiving en-gNB should forward it to lower layers and use it for cell-level resource coordination with the eNB. The en-gNB shall consider the received Protected E-UTRA Resource Indication IE when expressing its desired resource allocation to the eNB during E-UTRA – NR Cell Resource Coordination procedure. The en-gNB shall consider the received Protected E-UTRA Resource Indication IE content valid until reception of a new update of the IE for the same eNB.

The protected resource pattern indicated in the Protected E-UTRA Resource Indication IE is not valid in subframes indicated by the Reserved Subframes IE, as well as in the non-control region of the MBSFN subframes i.e. it is valid

only in the control region therein. The size of the control region of MBSFN subframes is indicated in the Protected E-UTRA Resource Indication IE.

The eNB may initiate a further EN-DC Configuration Update procedure only after a previous EN-DC Configuration Update procedure has been completed.

If Supplementary Uplink is configured at the en-gNB, the en-gNB shall include in the EN-DC X2 CONFIGURATION UPDATE ACKNOWLEDGE message the *SUL Information* IE and the *Supported SUL band List* IE for each cell added in the Served NR Cells To Add IE and in the Served NR Cells To Modify IE.

en-gNB initiated EN-DC Configuration Update:

An en-gNB initiates the procedure by sending an EN-DC CONFIGURATION UPDATE message to an eNB.

If Supplementary Uplink is configured at the en-gNB, the en-gNB shall include in the EN-DC X2 CONFIGURATION UPDATE message the *SUL Information* IE and the *Supported SUL band List* IE for each served cell added in the Served NR Cells To Add IE and in the Served NR Cells To Modify IE.

If the Deactivation Indication IE is contained in the *Served NR Cells To Modify* IE, it indicates that the concerned NR cell was switched off to lower energy consumption, and is available for activation on request from the eNB, as described in TS 36.300 [15].

After successful update of requested information, eNB shall reply with the EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message to inform the initiating en-gNB that the requested update of application data was performed successfully. In case the eNB receives an EN-DC CONFIGURATION UPDATE without any IE except for *Message Type* IE it shall reply with EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message without performing any updates to the existing configuration.

Upon reception of an EN-DC CONFIGURATION UPDATE message, eNB shall update the information for en-gNB as follows:

Update of Served NR Cell Information:

- If Served NR Cells To Add IE is contained in the EN-DC CONFIGURATION UPDATE message, eNB shall add cell information according to the information in the Served NR Cell Information IE.
- If *Served NR Cells To Modify* IE is contained in the EN-DC CONFIGURATION UPDATE message, eNB shall modify information of cell indicated by *Old NR-CGI* IE according to the information in the *Served NR Cell Information* IE.
- If *Served NR Cells To Delete* IE is contained in the EN-DC CONFIGURATION UPDATE message, eNB shall delete information of cell indicated by *Old NR-CGI* IE.

The en-gNB may initiate a further EN-DC Configuration Update procedure only after a previous EN-DC Configuration Update procedure has been completed.

8.7.2.3 Unsuccessful Operation

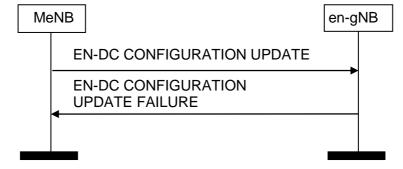


Figure 8.7.2.3-1: eNB Initiated EN-DC Configuration Update, unsuccessful operation

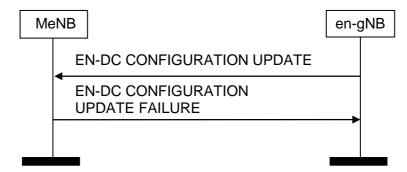


Figure 8.7.2.3-2: en-gNB Initiated EN-DC Configuration Update, unsuccessful operation

If the candidate receving node can not accept the update it shall respond with an EN-DC CONFIGURATION UPDATE FAILURE message and appropriate cause value.

8.7.2.4 Abnormal Conditions

If the initiating node after initiating EN-DC Configuration Update procedure receives neither EN-DC CONFIGURATION UPDATE ACKNOWLEDGE message nor EN-DC CONFIGURATION UPDATE FAILURE message, the initiating node may reinitiate the EN-DC Configuration Update procedure towards the same candidate receiving node, provided that the content of the EN-DC CONFIGURATION UPDATE message is identical to the content of the previously unacknowledged EN-DC CONFIGURATION UPDATE message.

8.7.3 EN-DC Cell Activation

8.7.3.1 General

The purpose of the EN-DC Cell Activation procedure is to enable an eNB to request a neighbouring en-gNB to switch on one or more cells, previously reported as inactive due to energy saving reasons.

The procedure uses non UE-associated signalling.

8.7.3.2 Successful Operation

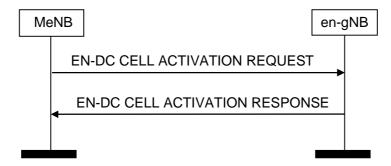


Figure 8.7.3.2-1: EN-DC Cell Activation, successful operation

An eNB initiates the procedure by sending a EN-DC CELL ACTIVATION REQUEST message to a peer en-gNB.

Upon receipt of this message, the en-gNB should activate the cell(s) indicated in the EN-DC CELL ACTIVATION REQUEST message and shall indicate in the EN-DC CELL ACTIVATION RESPONSE message for which cells the request was fulfilled.

Interactions with EN-DC Configuration Update procedure:

The en-gNB shall not send an EN-DC CONFIGURATION UPDATE message to the eNB just for the reason of the cell(s) indicated in the EN-DC CELL ACTIVATION REQUEST message changing cell activation state, as the receipt of the EN-DC CELL ACTIVATION RESPONSE message by the eNB is used to update the information about the activation state of en-gNB cells in the eNB.

8.7.3.3 Unsuccessful Operation

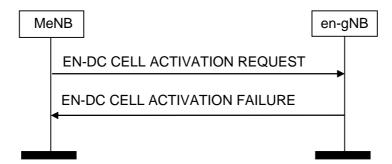


Figure 8.7.3.3-1: EN-DC Cell Activation, unsuccessful operation

If the en-gNB cannot activate any of the cells indicated in the EN-DC CELL ACTIVATION REQUEST message, it shall respond with a EN-DC CELL ACTIVATION FAILURE message with an appropriate cause value.

8.7.3.4 Abnormal Conditions

Not applicable.

8.7.4 SgNB Addition Preparation

8.7.4.1 General

The purpose of the SgNB Addition Preparation procedure is to request the en-gNB to allocate resources for EN-DC connectivity operation for a specific UE.

The procedure uses UE-associated signalling.

8.7.4.2 Successful Operation

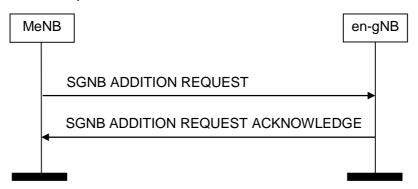


Figure 8.7.4.2-1: SgNB Addition Preparation, successful operation

The MeNB initiates the procedure by sending the SGNB ADDITION REQUEST message to the en-gNB. When the MeNB sends the SGNB ADDITION REQUEST message, it shall start the timer T_{DCprep} .

The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *Full E-RAB Level QoS Parameters* IE or in the *Maximum MCG admittable E-RAB Level QoS Parameters* IE or in the *Requested MCG E-RAB Level QoS Parameters* IE or in the *Requested SCG E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

If the SGNB ADDITION REQUEST message contains the *Serving PLMN* IE, the en-gNB may use it for RRM purposes.

If the SGNB ADDITION REQUEST message contains the *Expected UE Behaviour* IE, the en-gNB shall, if supported, store this information and may use it to optimize resource allocation.

If the SGNB ADDITION REQUEST message contains the *Handover Restriction List* IE, the en-gNB node, if supported, shall store this information and use it to select an appropriate NR cell.

If the SGNB ADDITION REQUEST message contains the *MeNB Resource Coordination Information* IE, the en-gNB should forward it to lower layers and it may use it for the purpose of resource coordination with the MeNB. The engNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The en-gNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same UE.

The en-gNB shall choose the ciphering algorithm based on the information in the *NR UE Security Capabilities* IE and locally configured priority list of AS encryption algorithms and apply the key indicated in the *SgNB Security Key* IE as specified in the TS 33.401 [18].

If the SGNB ADDITION REQUEST message contains the *Subscriber Profile ID for RAT/Frequency Priority* IE, the en-gNB may use it for RRM purposes.

The en-gNB shall search for the target NR cell among the NR neighbour cells of the E-UTRAN cell indicated in *MeNB Cell ID* IE, as specified in the TS 37.340 [32].

The en-gNB shall report to the MeNB, in the SGNB ADDITION REQUEST ACKNOWLEDGE message, the result for all the requested E-RABs in the following way:

- a list of E-RABs which are successfully established shall be included in the *E-RABs Admitted To Be Added List* IE:
- a list of E-RABs which failed to be established shall be included in the E-RABs Not Admitted List IE.

NOTE: The MeNB may trigger the SgNB Addition Preparation procedure in the course of the Inter-MeNB handover without SgNB change procedure as described in TS 37.340 [32]. The deleted E-RABs are not included in the *E-RABs To Be Added List* IE in the SGNB ADDITION REQUEST message, from MeNB point of view. If the en-gNB reports a certain E-RAB to be successfully established, respective SCG resources, from an en-gNB point of view, may be actually successfully established or modified or kept; if a certain E-RAB is reported to be failed to be established, respective SCG resources, from an en-gNB point of view, may be actually failed to be established or modified or kept.

For each E-RAB for which allocation of the PDCP entity is requested at the en-gNB:

- the MeNB may propose to apply forwarding of downlink data by including the *DL Forwarding* IE within the *E-RABs To be Added Item* IE of the SGNB ADDITION REQUEST message. For each E-RAB that it has decided to admit, the en-gNB may include the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs Admitted To Be Added Item* IE of the SGNB ADDITION REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this bearer. This GTP tunnel endpoint may be different from the corresponding *DL GTP TEID* IE in the *E-RAB To Be Modified List* IE of the E-RAB MODIFICATION INDICATION message (see TS 36.413 [4]) depending on implementation choice;
- the en-gNB may include for each bearer in the *E-RABs Admitted To Be Added List* IE the *UL Forwarding GTP Tunnel Endpoint* IE to indicate that it requests data forwarding of uplink packets to be performed for that bearer.
- the en-gNB shall use the *S1 UL GTP Tunnel Endpoint* IE of the SGNB ADDITION REQUEST message as the UL S1-U address.
- the MeNB shall use the *SgNB UL GTP TEID at PDCP* IE of the SGNB ADDITION REQUEST ACKNOWLEDGE message as the UL X2-U address.
- if the SGNB ADDITION REQUEST message contains for an E-RAB to be added which is requested to be configured with MCG resources the *MeNB DL GTP TEID at MCG* IE the en-gNB shall use it as the DL X2-U address for delivery of DL PDCP PDUs.
- the en-gNB shall include in the SGNB ADDITION REQUEST ACKNOWLEDGE message the S1 DL GTP TEID at the SgNB IE.
- the en-gNB shall include in the SGNB ADDITION REQUEST ACKNOWLEDGE message the RLC Mode IE.

Upon reception of the SGNB ADDITION REQUEST ACKNOWLEDGE message the MeNB shall stop the timer T_{DCprep} .

If the SGNB ADDITION ACKNOWLEDGE message contains the *SgNB Resource Coordination Information* IE, the MeNB may use it for the purpose of resource coordination with the en-gNB. The MeNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The MeNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same UE.

If the SgNB UE X2AP ID IE is contained in the SGNB ADDITION REQUEST message, the en-gNB shall, if supported, store this information and use it as defined in TS 37.340 [32].

If the SGNB ADDITION REQUEST message contains the *SGNB Addition Trigger Indication*, the en-gNB shall include the *RRC config indication* IE in the SGNB ADDITION REQUEST ACKNOWLEDGE message to inform the MeNB if the en-gNB applied full or delta configuration, as specified in TS 37.340 [32].

If the en-gNB receives for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary MeNB UL GTP TEID at PDCP* IE in the SGNB ADDITION REQUEST message, it may provide the *Secondary SgNB DL GTP TEID at SCG* IE to the MeNB in the SGNB ADDITION REQUEST ACKNOWLEDGE message if PDCP duplication is configured at the en-gNB.

Interactions with the MeNB initiated SgNB Modification procedure:

If the en-gNB provides for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary SgNB DL GTP TEID at SCG* IE to the MeNB in the SGNB ADDITION REQUEST ACKNOWLEDGE message and the MeNB has not provided the *Secondary MeNB UL GTP TEID at PDCP* IE in the SGNB ADDITION REQUEST message, the MeNB shall trigger the MeNB initiated SgNB Modification procedure to provide the *Secondary MeNB UL GTP TEID at PDCP* IE to the SgNB.

Interactions with the SgNB Reconfiguration Completion procedure:

If the en-gNB admits at least one E-RAB, the en-gNB shall start the timer $T_{DCoverall}$ when sending the SGNB ADDITION REQUEST ACKNOWLEDGE message to the MeNB. The reception of the SGNB RECONFIGURATION COMPLETE message shall stop the timer $T_{DCoverall}$.

8.7.4.3 Unsuccessful Operation

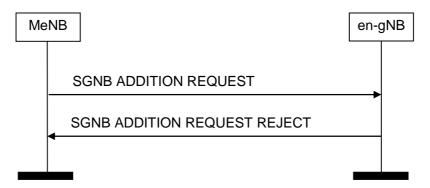


Figure 8.7.4.3-1: SgNB Addition Preparation, unsuccessful operation

If the en-gNB is not able to accept any of the bearers or a failure occurs during the SgNB Addition Preparation, the en-gNB sends the SGNB ADDITION REQUEST REJECT message with an appropriate cause value to the MeNB.

8.7.4.4 Abnormal Conditions

If the en-gNB receives a SGNB ADDITION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RABs To Be Added List* IE) set to the same value, the en-gNB shall consider the establishment of the corresponding E-RAB as failed.

If the en-gNB receives a SGNB ADDITION REQUEST message containing a *E-RAB Level QoS Parameters* IE which contains a *QCI* IE indicating a GBR bearer (as defined in TS 23.203 [13]), and which does not contain the *GBR QoS Information* IE, the en-gNB shall consider the establishment of the corresponding E-RAB as failed.

If the supported algorithms for encryption defined in the *NR Encryption Algorithms* IE in the *NR UE Security Capabilities* IE, plus the mandated support of NEA0 in all UEs (TS 33.401 [18]), do not match any algorithms defined

in the configured list of allowed encryption algorithms in the en-gNB (TS 33.401 [18]), the en-gNB shall reject the procedure using the SGNB ADDITION REQUEST REJECT message.

If the supported algorithms for integrity defined in the *NR Integrity Protection Algorithms* IE in the *NR UE Security Capabilities* IE do not match any algorithms defined in the configured list of allowed integrity protection algorithms in the en-gNB (TS 33.401 [18]), the en-gNB shall reject the procedure using the SGNB ADDITION REQUEST REJECT message.

If the en-gNB receives a SGNB ADDITION REQUEST message containing a *SgNB UE X2AP ID* IE that does not match any existing UE Context that has such ID, the en-gNB shall reject the procedure using the SGNB ADDITION REQUEST REJECT message.

If the MeNB has provided the en-gNB for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary MeNB UL GTP TEID at PDCP* IE in the SGNB ADDITION REQUEST message, and the en-gNB does not provide the *Secondary SgNB DL GTP TEID at SCG* IE to the MeNB in the SGNB ADDITION REQUEST ACKNOWLEDGE message, the MeNB shall assume that PDCP duplication was not configured at the en-gNB and releases duplication resources.

If the en-gNB provides for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary SgNB DL GTP TEID at SCG* IE to the MeNB in the SGNB ADDITION REQUEST ACKNOWLEDGE message and the MeNB has not provided the *Secondary MeNB UL GTP TEID at PDCP* IE in the SGNB ADDITION REQUEST message, and the MeNB does not trigger the MeNB initiated SgNB Modification procedure to provide the *Secondary MeNB UL GTP TEID at PDCP* IE to the SgNB the en-gNB before the SgNB Reconfigurationi Completion procedure was triggered, the en-gNB shall trigger the release of the concerned E-RAB.

Interactions with the SgNB Reconfiguration Completion and SgNB initiated SgNB Release procedure:

If the timer $T_{DCoverall}$ expires before the en-gNB has received the SGNB RECONFIGURATION COMPLETE or the SGNB RELEASE REQUEST message, the en-gNB shall regard the requested RRC connection reconfiguration as being not applied by the UE and shall trigger the SgNB initiated SgNB Release procedure.

Interactions with the MeNB initiated SgNB Release procedure:

If the timer T_{DCprep} expires before the MeNB has received the SGNB ADDITION REQUEST ACKNOWLEDGE message, the MeNB shall regard the SgNB Addition Preparation procedure as being failed and shall trigger the MeNB initiated SgNB Release procedure.

8.7.5 SgNB Reconfiguration Completion

8.7.5.1 General

The purpose of the SgNB Reconfiguration Completion procedure is to provide information to the en-gNB whether the requested configuration was successfully applied by the UE.

The procedure uses UE-associated signalling.

8.7.5.2 Successful Operation



Figure 8.7.5.2-1: SqNB Reconfiguration Complete procedure, successful operation.

The MeNB initiates the procedure by sending the SGNB RECONFIGURATION COMPLETE message to the en-gNB.

The SGNB RECONFIGURATION COMPLETE message may contain information that

- either the UE has successfully applied the configuration requested by the en-gNB. The MeNB may also provide NR *RRCReconfigurationComplete* message in the *MeNB to SgNB Container* IE.
- or the configuration requested by the en-gNB has been rejected. The MeNB shall provide information with sufficient precision in the included *Cause* IE to enable the en-gNB to know the reason for an unsuccessful reconfiguration.

Upon reception of the SGNB RECONFIGURATION COMPLETE message the en-gNB shall stop the timer T_{DCoverall}.

8.7.5.3 Abnormal Conditions

Void.

8.7.6 MeNB initiated SgNB Modification Preparation

8.7.6.1 General

This procedure is used to enable an MeNB to request an en-gNB to modify the UE context at the en-gNB, or to query the current SCG configuration for supporting delta signalling in MeNB initiated SgNB change, or to provide the S-RLF-related information to the en-gNB.

The procedure uses UE-associated signalling.

8.7.6.2 Successful Operation

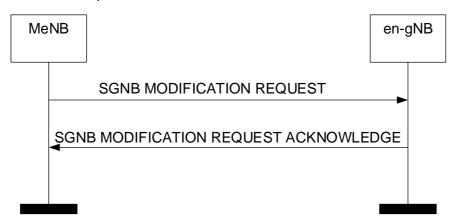


Figure 8.7.6.2-1: MeNB initiated SgNB Modification Preparation, successful operation

The MeNB initiates the procedure by sending the SGNB MODIFICATION REQUEST message to the en-gNB. When the MeNB sends the SGNB MODIFICATION REQUEST message, it shall start the timer T_{DCDrep} .

The SGNB MODIFICATION REQUEST message may contain:

- within the UE Context Information IE (if the modification of the UE context at the en-gNB is requested);
 - E-RABs to be added within the E-RABs To Be Added Item IE;
 - E-RABs to be modified within the E-RABs To Be Modified Item IE;
 - E-RABs to be released within the *E-RABs To Be Released Item* IE;
 - the SgNB UE Aggregate Maximum Bit Rate IE;
- the MeNB to SgNB Container IE;
- the SCG Configuration Query IE;
- the MeNB Resource Coordination Information IE;
- the Requested split SRBs IE;

- the *Requested split SRBs release* IE.

If the SGNB MODIFICATION REQUEST message contains the *Serving PLMN* IE, the en-gNB may use it for RRM purposes.

If the SGNB MODIFICATION REQUEST message contains the Handover Restriction List IE, the en-gNB shall

- replace the previously provided Handover Restriction List by the received Handover Restriction List in the UE context:
- use this information to select an appropriate NR cell.

If the SgNB UE Aggregate Maximum Bit Rate IE is included in the SGNB MODIFICATION REQUEST message, the en-gNB shall:

- replace the previously provided SgNB UE Aggregate Maximum Bit Rate by the received SgNB UE Aggregate Maximum Bit Rate in the UE context;
- use the received SgNB UE Aggregate Maximum Bit Rate for non-GBR Bearers for the concerned UE as defined in TS 37.340 [32].

The allocation of resources according to the values of the *QCI* IE, *Allocation and Retention Priority* IE or *GBR QoS Information* IE included in the *Full E-RAB Level QoS Parameters* IE or in the *Maximum MCG admittable E-RAB Level QoS Parameters* IE or in the *Requested SCG E-RAB Level QoS Parameters* IE shall follow the principles described for the E-RAB Setup procedure in TS 36.413 [4].

If the SGNB MODIFICATION REQUEST message contains the *MeNB Resource Coordination Information* IE, the engNB should forward it to lower layers and it may use it for the purpose of resource coordination with the MeNB. The en-gNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The en-gNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same UE.

If at least one of the requested modifications is admitted by the en-gNB, the en-gNB shall modify the related part of the UE context accordingly and send the SGNB MODIFICATION REQUEST ACKNOWLEDGE message back to the MeNB.

The en-gNB shall include the E-RABs for which resources have been either added or modified or released at the en-gNB either in the *E-RABs Admitted To Be Added List* IE or the *E-RABs Admitted To Be Modified List* IE or the *E-RABs Admitted To Be Released List* IE. The en-gNB shall include the E-RABs that have not been admitted in the *E-RABs Not Admitted List* IE with an appropriate cause value.

The en-gNB shall, if included, choose the ciphering algorithm based on the information in the *NR UE Security Capabilities* IE and locally configured priority list of AS encryption algorithms and apply the key indicated in the *SgNB Security Key* IE as specified in the TS 33.401 [18].

For each E-RAB for which allocation of the PDCP entity is requested at the en-gNB:

- if applicable, the MeNB may propose to apply forwarding of downlink data by including the *DL Forwarding* IE within the *E-RABs To Be Added Item* IE of the SGNB MODIFICATION REQUEST message. For each E-RAB that it has decided to admit, the en-gNB may include the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs Admitted To Be Added Item* IE of the SGNB MODIFICATION REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this bearer. The MeNB may also provide for an applicable E-RAB to be released the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SGNB MODIFICATION REQUEST message.
- if applicable, the en-gNB may include for each bearer in the *E-RABs Admitted To Be Added List* IE in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message the *UL Forwarding GTP Tunnel Endpoint* IE to indicate that it requests data forwarding of uplink packets to be performed for that bearer.
- if applicable, the en-gNB may include for each bearer in the *E-RABs Admitted To Be Modified* List IE which is configured with the SN terminated split bearer option in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message the *UL configuration* IE to indicate that the MCG UL configuration of the UE has changed.

For each E-RAB configured with SCG resources and the PDCP entity is hosted by the MeNB and

- requested to be modified,
 - if the SGNB MODIFICATION REQUEST message includes the *MeNB UL GTP TEID at PDCP* IE in the *E-RABs To Be Modified Item* IE, the en-gNB shall act as specified in TS 37.340 [32].
 - if the SGNB MODIFICATION REQUEST message contains the *MeNB UL GTP TEID at PDCP* IE the engNB shall use it as the new UL X2-U address.
 - the en-gNB may include in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message the *SgNB DL GTP TEID at SCG* IE.

If, dependent on the configured bearer type, the *Full E-RAB Level QoS Parameters* IE or the *Maximum MCG admittable E-RAB Level QoS Parameters* IE or the *Requested SCG E-RAB level QoS Parameters* IE are included in the SGNB MODIFICATION REQUEST message for an E-RAB to be modified the en-gNB shall allocate respective resources and provide corresponding radio configuration information within the *SgNB to MeNB Container* IE as described in TS 37.340 [32].

If the SGNB MODIFICATION REQUEST message contains, for an E-RAB to be modified which is configured with the PDCP entity in the en-gNB, the *S1 UL GTP Tunnel Endpoint* IE, the en-gNB shall use it as the new UL S1-U address.

If the SGNB MODIFICATION REQUEST message contains an E-RAB to be modified which is configured with the MN terminated split bearer option, the MeNB may include the *UL configuration* IE to indicate that the SCG UL configuration of the UE has changed.

If the SGNB MODIFICATION REQUEST message contains for an E-RAB to be modified which is configured with the PDCP enitiy in the en-gNB and MCG resources the *MeNB DL GTP TEID at MCG* IE the en-gNB shall use it as the DL X2-U address.

If the SGNB MODIFICATION REQUEST message contains the *Subscriber Profile ID for RAT/Frequency Priority* IE, the en-gNB may use it for RRM purposes.

For an E-RAB to be modified which is configured with the PDCP entity in the en-gNB the en-gNB may include in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message the *S1 DL GTP TEID at the SgNB* IE.

If the SGNB MODIFICATION REQUEST ACKNOWLEDGE message contains the *SgNB Resource Coordination Information* IE, the MeNB may use it for the purpose of resource coordination with the en-gNB. The MeNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The MeNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same UE.

Upon reception of the SGNB MODIFICATION REQUEST ACKNOWLEDGE message the MeNB shall stop the timer T_{DCprep}. If the SGNB MODIFICATION REQUEST ACKNOWLEDGE message has included the *SgNB to MeNB Container* IE the MeNB is then defined to have a Prepared SgNB Modification for that X2 UE-associated signalling.

If the *SCG Configuration Query* IE is included in the SGNB MODIFICATION REQUEST message, the en-gNB shall provide corresponding radio configuration information within the *SgNB to MeNB Container* IE as described in TS 37.340 [32].

If the SGNB MODIFICATION REQUEST message contains the *Requested split SRBs* IE, the en-gNB may use it to add split SRBs. If the SGNB MODIFICATION REQUEST message contains the *Requested split SRBs release* IE, the en-gNB may use it to release split SRBs.

If the en-gNB receives for an E-RAB to be setup for which the PDCP entity is allocated at the MeNB the *Secondary MeNB UL GTP TEID at PDCP* IE in the SGNB MODIFICATION REQUEST message, it may provide the *Secondary SgNB DL GTP TEID at SCG* IE to the MeNB in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message if PDCP duplication is configured at the en-gNB.

Interactions with the MeNB initiated SgNB Modification procedure:

If the en-gNB provides for an E-RAB to be setup for which the PDCP entity is allocated at the MeNB the *Secondary SgNB DL GTP TEID at SCG* IE to the MeNB in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message and the MeNB has not provided the *Secondary MeNB UL GTP TEID at PDCP* IE in the SGNB MODIFICATION

REQUEST message, the MeNB shall trigger the MeNB initiated SgNB Modification procedure to provide the *Secondary MeNB UL GTP TEID at PDCP* IE to the SgNB.

Interactions with the SgNB Reconfiguration Completion procedure:

If the en-gNB admits a modification of the UE context requiring the MeNB to report about the success of the RRC connection reconfiguration procedure, the en-gNB shall start the timer T_{DCoverall} when sending the SGNB MODIFICATION REQUEST ACKNOWLEDGE message to the MeNB. The reception of the SGNB RECONFIGURATION COMPLETE message shall stop the timer T_{DCoverall}.

8.7.6.3 Unsuccessful Operation



Figure 8.7.6.3-1: MeNB initiated SqNB Modification Preparation, unsuccessful operation

If the en-gNB does not admit any modification requested by the MeNB, or a failure occurs during the MeNB initiated SgNB Modification Preparation, the en-gNB shall send the SGNB MODIFICATION REQUEST REJECT message to the MeNB. The message shall contain the *Cause* IE with an appropriate value.

If the en-gNB receives a SGNB MODIFICATION REQUEST message containing the *MeNB to SgNB Container* IE that does not include required information as specified in TS 38.331 [31], the en-gNB shall send the SGNB MODIFICATION REQUEST REJECT message to the MeNB.

8.7.6.4 Abnormal Conditions

If the en-gNB receives a SGNB MODIFICATION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RABs To Be Added List* IE and/or the *E-RABs To Be Modified List* IE) set to the same value, the en-gNB shall not admit the action requested for the corresponding E-RABs.

If the en-gNB receives an SGNB MODIFICATION REQUEST message containing multiple *E-RAB ID* IEs (in the *E-RAB To Be Released List* IE) set to the same value, the en-gNB shall initiate the release of one corresponding E-RAB and ignore the duplication of the instances of the selected corresponding E-RABs.

If the en-gNB receives a SGNB MODIFICATION REQUEST message containing, dependent on the configured bearer type, the *Full E-RAB Level QoS Parameters* IE or the *Maximum MCG admittable E-RAB Level QoS Parameters* IE or the *Requested SCG E-RAB Level QoS Parameters* IE which contains a *QCI* IE indicating a GBR bearer (as defined in TS 23.203 [13]), and which does not contain the *GBR QoS Information* IE, the en-gNB shall not admit the corresponding E-RAB.

If the supported algorithms for encryption defined in the *NR Encryption Algorithms* IE in the *NR UE Security Capabilities* IE in the *UE Context Information* IE, plus the mandated support of NEA0 in all UEs (TS 33.401 [18]), do not match any algorithms defined in the configured list of allowed encryption algorithms in the en-gNB (TS 33.401 [18]), the en-gNB shall reject the procedure using the SGNB MODIFICATION REQUEST REJECT message.

If the supported algorithms for integrity defined in the *NR Integrity Protection Algorithms* IE in the *NR UE Security Capabilities* IE in the *UE Context Information* IE do not match any algorithms defined in the configured list of allowed integrity protection algorithms in the en-gNB (TS 33.401 [18]), the en-gNB shall reject the procedure using the SGNB MODIFICATION REQUEST REJECT message.

If the timer T_{DCprep} expires before the MeNB has received the SGNB MODIFICATION REQUEST ACKNOWLEDGE message, the MeNB shall regard the MeNB initiated SgNB Modification Preparation procedure as being failed and shall release the UE Context at the en-gNB.

If the MeNB has provided the en-gNB for an E-RAB to be setupr which the PDCP entity is allocated at the MeNB the *Secondary MeNB UL GTP TEID at PDCP* IE in the SGNB MODIFICATION REQUEST message, and the en-gNB does not provide the *Secondary SgNB DL GTP TEID at SCG* IE to the MeNB in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message, the MeNB shall assume that PDCP duplication was not configured at the en-gNB and releases duplication resources.

If the en-gNB provides for an E-RAB to be setup for which the PDCP entity is allocated at the MeNB the *Secondary SgNB DL GTP TEID at SCG* IE to the MeNB in the SGNB MODIFICATION REQUEST ACKNOWLEDGE message and the MeNB has not provided the *Secondary MeNB UL GTP TEID at PDCP* IE in the SGNB MODIFICATION REQUEST message, and the MeNB does not trigger the MeNB initiated SgNB Modification procedure to provide the *Secondary MeNB UL GTP TEID at PDCP* IE to the SgNB the en-gNB before the SgNB Reconfigurationi Completion procedure was triggered, the en-gNB shall trigger the release of the concerned E-RAB.

Interactions with the SgNB Reconfiguration Completion and SgNB initiated SgNB Release procedure:

If the timer $T_{DCoverall}$ expires before the en-gNB has received the SGNB RECONFIGURATION COMPLETE or the SGNB RELEASE REQUEST message, the en-gNB shall regard the requested modification RRC connection reconfiguration as being not applied by the UE and shall trigger the SgNB initiated SgNB Release procedure.

Interaction with the SgNB initiated SgNB Modification Preparation procedure:

If the MeNB, after having initiated the MeNB initiated SgNB Modification procedure, receives the SGNB MODIFICATION REQUIRED message, the MeNB shall refuse the SgNB initiated SgNB Modification procedure with an appropriate cause value in the *Cause* IE.

If the MeNB has a Prepared SgNB Modification and receives the SGNB MODIFICATION REQUIRED message, the MeNB shall respond with the SGNB MODIFICATION REFUSE message to the en-gNB with an appropriate cause value in the *Cause* IE.

Interactions with the MeNB initiated SgNB Release procedure:

If the timer T_{DCprep} expires before the MeNB has received the SGNB MODIFICATION REQUEST ACKNOWLEDGE message, the MeNB shall regard the SgNB Modification Preparation procedure as being failed and may trigger the MeNB initiated SgNB Release procedure.

8.7.7 SgNB initiated SgNB Modification

8.7.7.1 General

This procedure is used by the en-gNB to modify the UE context in the en-gNB.

The procedure uses UE-associated signalling.

8.7.7.2 Successful Operation

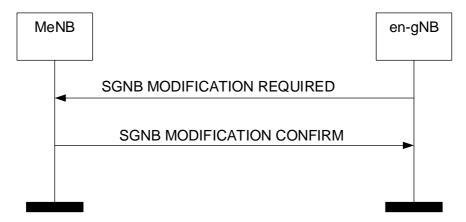


Figure 8.7.7.2-1: SgNB initiated SgNB Modification, successful operation.

The en-gNB initiates the procedure by sending the SGNB MODIFICATION REQUIRED message to the MeNB. When the en-gNB sends the SGNB MODIFICATION REQUIRED message, it shall start the timer T_{DCoverall}.

The SGNB MODIFICATION REQUIRED message may contain

- the PDCP Change Indication IE;
- the SgNB to MeNB Container IE.
- E-RABs to be modified within the *E-RABs To Be Modified Item* IE;
- E-RABs to be released within the E-RABs To Be Released Item IE;
- the SgNB Resource Coordination Information IE.

For the SN terminated split bearers, the en-gNB may include in the SGNB MODIFICATION REQUIRED message the *UL configuration* IE to indicate that the MCG UL configuration of the UE has changed.

If the MeNB is able to perform the change requested by the en-gNB, the MeNB shall send the SGNB MODIFICATION CONFIRM message to the en-gNB. The SGNB MODIFICATION CONFIRM message may contain the *MeNB to SgNB Container* IE.

If the SGNB MODIFICATION REQUIRED message contains the *SgNB Resource Coordination Information* IE, the MeNB may use it for the purpose of resource coordination with the en-gNB. The MeNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The MeNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same UE.

Upon reception of the SGNB MODIFICATION CONFIRM message the en-gNB shall stop the timer T_{DCoverall}.

If the SGNB MODIFICATION CONFIRM message contains the *MeNB Resource Coordination Information* IE, the engNB should forward it to lower layers and it may use it for the purpose of resource coordination with the MeNB. The en-gNB shall consider the received *UL Coordination Information* IE value valid until reception of a new update of the IE for the same UE. The en-gNB shall consider the received *DL Coordination Information* IE value valid until reception of a new update of the IE for the same UE.

If the MeNB receives for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary SgNB DL GTP TEID at SCG* IE in the SGNB MODIFICATION REQUIRED message, it shall provide the *Secondary MeNB UL GTP TEID at PDCP* IE to the en-gNB in the SGNB MODIFICATION CONFIRM message.

Interaction with the MeNB initiated SgNB Modification Preparation procedure:

If applicable, as specified in TS 37.340 [15], the en-gNB may receive, after having initiated the SgNB initiated SgNB Modification procedure, the SGNB MODIFICATION REQUEST message including the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released List* IE.

If applicable, as specified in TS 37.340 [15], the en-gNB may receive, after having initiated the SgNB initiated SgNB Modification procedure, the SGNB MODIFICATION REQUEST message including the *SgNB Security Key* IE within the *UE Context Information* IE.

8.7.7.3 Unsuccessful Operation

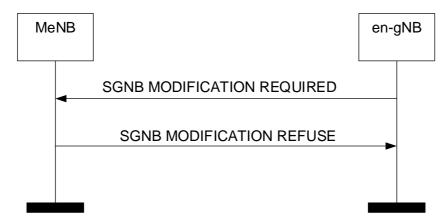


Figure 8.7.7.3-1: SgNB initiated SgNB Modification, unsuccessful operation.

In case the request modification cannot be performed successfully the MeNB shall respond with the SGNB MODIFICATION REFUSE message to the en-gNB with an appropriate cause value in the *Cause* IE.

The MeNB may also provide configuration information in the MeNB to SgNB Container IE.

8.7.7.4 Abnormal Conditions

If the timer T_{DCoverall} expires before the en-gNB has received the SGNB MODIFICATION CONFIRM or the SGNB MODIFICATION REFUSE message, the en-gNB shall regard the requested modification as failed and may take further actions like triggering the SgNB initiated SgNB Release procedure to release all en-gNB resources allocated for the UE.

If the value received in the *E-RAB ID* IE of any of the *E-RABs To Be Released Items* IE is not known at the MeNB, the MeNB shall regard the procedure as failed and may take appropriate actions like triggering the MeNB initiated SgNB Release procedure.

If the en-gNB does not receives for an E-RAB for which the PDCP entity is allocated at the MeNB the *Secondary MeNB UL GTP TEID at PDCP* IE to the en-gNB in the SGNB MODIFICATION CONFIRM message although the *Secondary SgNB DL GTP TEID at SCG* IE was provided to the MeNB in the SGNB MODIFICATION REQUIRED message, it shall assume the setup of the secondary X2-U bearer as being failed.

$Interaction\ with\ the\ MeNB\ initiated\ SgNB\ Modification\ Preparation\ procedure:$

If the en-gNB, after having initiated the SgNB initiated SgNB Modification procedure, receives the SGNB MODIFICATION REQUEST message including other IEs than an applicable *SgNB Security Key* IE and/or applicable forwarding addresses, the en-gNB shall

- regard the SgNB initiated SgNB Modification Procedure as being failed;
- stop the T_{DCoverall}, which was started to supervise the SgNB initiated SgNB Modification procedure;
- be prepared to receive the SGNB MODIFICATION REFUSE message from the MeNB and;
- continue with the MeNB initiated SgNB Modification Preparation procedure as specified in section 8.7.4.

Interaction with the MeNB initiated handover procedure:

If the MeNB, after having initiated the handover procedure, receives the SGNB MODIFICATION REQUIRED message, the MeNB shall refuse the SgNB modification procedure with an appropriate cause value in the *Cause* IE.

8.7.8 SgNB Change

8.7.8.1 General

This procedure is used by the en-gNB to change to another en-gNB.

The procedure uses UE-associated signalling.

8.7.8.2 Successful Operation



Figure 8.7.8.2-1: SgNB Change, successful operation.

The en-gNB initiates the procedure by sending the SGNB CHANGE REQUIRED message to the MeNB including the *Target SgNB ID Information IE*. When the en-gNB sends the SGNB CHANGE REQUIRED message, it shall start the timer T_{DCoverall}.

The SGNB CHANGE REQUIRED message may contain

- the SgNB to MeNB Container IE.

If the MeNB is able to perform the change requested by the en-gNB, the MeNB shall send the SGNB CHANGE CONFIRM message to the en-gNB. For each E-RAB configured with the PDCP entity in the en-gNB, the MeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE to indicate that it requests data forwarding of uplink and downlink packets to be performed for that bearer.

The en-gNB may start data forwarding and stop providing user data to the UE and shall stop the timer $T_{DCoverall}$ upon reception of the SGNB CHANGE CONFIRM message.

8.7.8.3 Unsuccessful Operation

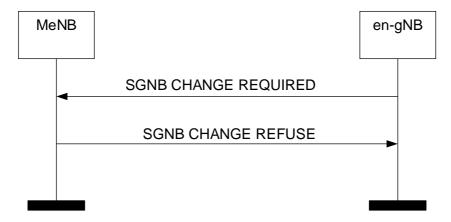


Figure 8.7.8.3-1: SgNB Change, unsuccessful operation.

In case the request change cannot be performed successfully the MeNB shall respond with the SGNB CHANGE REFUSE message to the en-gNB with an appropriate cause value in the *Cause* IE.

8.7.8.4 Abnormal Conditions

If the timer $T_{DCoverall}$ expires before the en-gNB has received the SGNB CHANGE CONFIRM or the SGNB CHANGE REFUSE message, the en-gNB shall regard the requested change as failed and may take further actions like triggering the SgNB initiated SgNB Release procedure to release all en-gNB resources allocated for the UE.

Interaction with the MeNB initiated handover procedure:

If the MeNB, after having initiated the handover procedure, receives the SGNB CHANGE REQUIRED message, the MeNB shall refuse the SgNB change procedure with an appropriate cause value in the Cause IE.

8.7.9 MeNB initiated SgNB Release

8.7.9.1 General

The MeNB initiated SgNB Release procedure is triggered by the MeNB to initiate the release of the resources for a specific UE.

The procedure uses UE-associated signalling.

8.7.9.2 Successful Operation

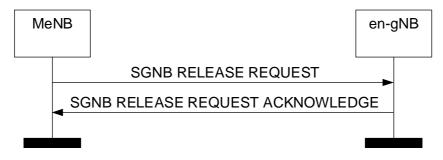


Figure 8.7.9.2-1: MeNB initiated SgNB Release, successful operation

The MeNB initiates the procedure by sending the SGNB RELEASE REQUEST message. Upon reception of the SGNB RELEASE REQUEST message the en-gNB shall stop providing user data to the UE. The *SgNB UE X2AP ID* IE shall be included if it has been obtained from the en-gNB.

If the bearer context in the en-gNB was configured with the PDCP entity in the en-gNB, for E-RAB for which the MeNB requests forwarding of uplink/downlink data, the MeNB includes the *UL Forwarding GTP Tunnel Endpoint/ DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE of the SGNB RELEASE REQUEST message to indicate that the en-gNB should perform data forwarding of uplink/downlink packets for that E-RAB.

Upon reception of the SGNB RELEASE REQUEST message containing *UE Context Kept Indicator* IE set to "True", the en-gNB shall, if supported, only initiate the release of the resources related to the UE-associated signalling connection between the MeNB and the en-gNB.

If the en-gNB confirms the request to release en-gNB resources it shall send the SGNB RELEASE REQUEST ACKNOWLEDGE message to the MeNB.

8.7.9.3 Unsuccessful Operation

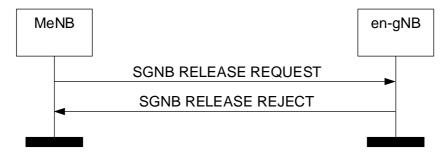


Figure 8.7.9.3-1: MeNB initiated SgNB Release, unsuccessful operation

If the en-gNB cannot confirm the request to release en-gNB resources it shall send the SGNB RELEASE REQUEST REJECT message to the MeNB with an appropriate cause indicated in the *Cause* IE.

8.7.9.4 Abnormal Conditions

If the SGNB RELEASE REQUEST message refer to a context that does not exist, the en-gNB shall ignore the message.

When the MeNB has initiated the procedure and did not include the *SgNB UE X2AP ID* IE the MeNB shall regard the resources for the UE at the en-gNB as being fully released.

Interactions with the UE Context Release procedure:

If the MeNB does not receive the reply from the en-gNB before it has to relase the EN-DC connection, or it receives SGNB RELEASE REQUEST REJECT, it may trigger the UE Context Release procedure. If the en-gNB received the UE CONTEXT RELEASE right after receiving the SGNB RELEASE REQUEST (and before or after responding to it), the en-gNB shall consider the related MeNB initiated SgNB Release procedure as being the resolution of abnormal conditions and release the related UE context immediately.

8.7.10 SgNB initiated SgNB Release

8.7.10.1 General

This procedure is triggered by the en-gNB to initiate the release of the resources for a specific UE.

The procedure uses UE-associated signalling.

8.7.10.2 Successful Operation



Figure 8.7.10.2-1: SgNB initiated SgNB Release, successful operation.

The en-gNB initiates the procedure by sending the SGNB RELEASE REQUIRED message to the MeNB.

Upon reception of the SGNB RELEASE REQUIRED message, the MeNB replies with the SGNB RELEASE CONFIRM message. For each E-RAB configured with the PDCP entity in the en-gNB, the MeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE and the *UL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE to indicate that it requests data forwarding of uplink and downlink packets to be performed for that bearer. For each E-RAB configured with the PDCP entity in the MeNB and SCG resources, the MeNB may include the *DL Forwarding GTP Tunnel Endpoint* IE within the *E-RABs To Be Released Item* IE to indicate that it requests data forwarding of downlink packets to be performed for that bearer.

The en-gNB may start data forwarding and stop providing user data to the UE upon reception of the SGNB RELEASE CONFIRM message.

8.7.10.3 Unsuccessful Operation

Not applicable.

8.7.10.4 Abnormal Conditions

Void.

8.7.11 SgNB Counter Check

8.7.11.1 General

This procedure is initiated by the en-gNB to request the MeNB to execute a counter check procedure to verify the value of the PDCP COUNTs associated with SN terminated bearers.

The procedure uses UE-associated signalling.

8.7.11.2 Successful Operation



Figure 8.7.11.2-1: SgNB Counter Check procedure, successful operation.

The en-gNB initiates the procedure by sending the SGNB COUNTER CHECK REQUEST message to the MeNB.

Upon reception of the SGNB COUNTER CHECK REQUEST message, the MeNB may perform the RRC counter check procedure as defined in TS 33.401 [18].

8.7.11.3 Unsuccessful Operation

Not applicable.

8.7.11.4 Abnormal Conditions

Not applicable.

8.7.12 RRC Transfer

8.7.12.1 General

The purpose of the RRC Transfer procedure is to deliver an LTE RRC message encapsulated in a PDCP-C PDU to the en-gNB so that it may then be forwarded to the UE, or from the en-gNB, if it was received from the UE. Delivery status may also be provided from the en-gNB to the MeNB using the RRC Transfer.

The procedure is also to enable transfer of the NR RRC message container with the NR measurements from the MeNB to the en-gNB, when received from the UE.

The procedure uses UE-associated signalling.

8.7.12.2 Successful Operation



Figure 8.7.12.2-1: RRC Transfer procedure, successful operation.

Either the MeNB initiates the procedure by sending the RRC TRANSFER message to the en-gNB initiates the procedure by sending the RRC TRANSFER message to the MeNB.

If the en-gNB receives an RRC TRANSFER message without the *RRC Container* IE in the *Split SRB* IE, the *Delivery Status* IE in the *Split SRB* IE or the *RRC container* IE in *NR UE Measurement* IE, it shall ignore the message. If the engNB receives the *RRC Container* IE in the *MCG split SRB* IE, it shall deliver the contained RRC message to the UE.

If the MeNB receives the *Delivery Status* IE in the *split SRB* IE the MeNB shall consider RRC messages up to the indicated NR PDCP SN as having been successfully delivered to UE by en-gNB.

8.7.12.3 Abnormal Conditions

In case of the split SRBs, the receiving node may ignore the message, if the MeNB has not indicated possibility of RRC transfer at the bearer setup.

8.7.13 Secondary RAT Data Usage Report

8.7.13.1 General

This procedure is initiated by the en-gNB to report secondary RAT data volume.

The procedure uses UE-associated signalling.

8.7.13.2 Successful Operation

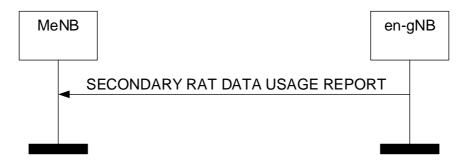


Figure 8.7.13.2-1: Secondary RAT Data Usage Report procedure, successful operation.

The en-gNB initiates the procedure by sending the SECONDARY RAT DATA USAGE REPORT message to the MeNB.

8.7.13.3 Unsuccessful Operation

Not applicable.

8.7.13.4 Abnormal Conditions

Not applicable.

8.7.14 Partial reset of EN-DC

8.7.14.1 General

This procedure is triggered by the en-gNB or the MeNB to initiate the reset of the resources for selected UEs.

The procedure uses non UE-associated signalling.

8.7.14.2 Successful Operation

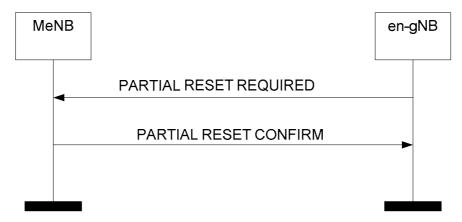


Figure 8.7.14.2-1: en-gNB initiated Partial Reset of EN-DC, successful operation.

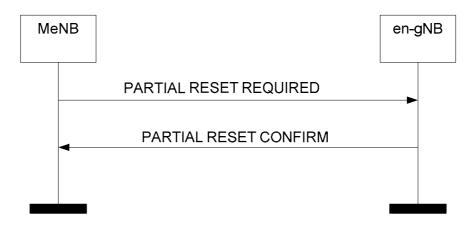


Figure 8.7.14.2-2: eNB initiated Partial Reset of EN-DC, successful operation.

The en-gNB or MeNB initiates the procedure by sending the PARTIAL RESET REQUIRED message to the MeNB or the en-gNB.

In case of the eNB-initiated Partial Reset, at reception of the PARTIAL RESET REQUIRED message, the en-gNB node shall release all allocated resources on X2 and Uu related to the UE association(s) indicated in the PARTIAL RESET REQUIRED message and remove the indicated UE contexts including X2AP ID.

In case of the en-gNB-initiated Partial Reset, at reception of the PARTIAL RESET REQUIRED message, the eNB may decide to release all allocated resources on X2 and Uu related to the UE association(s) indicated in the PARTIAL RESET REQUIRED message and remove the indicated UE contexts including X2AP ID, or to reconfigure the UEs for MN-terminated MCG bearers.

After the receiving node has released or reconfigured all assigned X2 resources and the UE X2AP IDs for all indicated UE associations which can be used for new UE-associated logical X2-connections over the X2 interface, the receiving node shall respond with the PARTIAL RESET CONFIRM message. The node receiving the request does not need to wait for the release or reconfiguration of radio resources to be completed before returning the PARTIAL RESET CONFIRM message.

The node initiating the procedure shall include the *SgNB UE X2AP ID* IE in the PARTIAL RESET REQUIRED message if it has already been allocated for the UE. The node receiving the request shall use the *SgNB UE X2AP ID* IE (if included) and/or the *MeNB UE S1AP ID* IE (and the *MeNB UE S1AP ID Extension* IE, if included) to identify the UE association(s) to be released. If the *SgNB UE X2AP ID* IE was included in the PARTIAL RESET REQUIRED message, the receiving node shall include it also in the PARTIAL RESET CONFIRM message.

The node receiving the request shall include in the PARTIAL RESET CONFIRM message, for each UE association to be released, the same list of UE-associated logical X2-connections over X2. The list shall be in the same order as received in the PARTIAL RESET REQUIRED message and shall include also unknown UE-associated logical X2-connections.

Interactions with other procedures:

If the PARTIAL RESET REQUIRED message is received, any other ongoing procedure (except for a Reset or another Partial Reset of EN-DC procedures) on the same X2 interface related to a UE association, indicated in the PARTIAL RESET REQUIRED message, shall be aborted.

8.7.14.3 Unsuccessful Operation

Not applicable.

8.7.14.4 Abnormal Conditions

Void.

8.7.15 E-UTRA – NR Cell Resource Coordination

8.7.15.1 General

The purpose of the E-UTRA – NR Cell Resource Coordination procedure is to enable coordination of radio resource allocation between an eNB and an en-gNB that are sharing spectrum and whose coverage areas are fully or partially overlapping. During the procedure, the eNB and en-gNB shall exchange their intended resource allocations for data traffic, and, if possible, converge to a shared resource.

The procedure uses non-UE-associated signalling.

8.7.15.2 Successful Operation

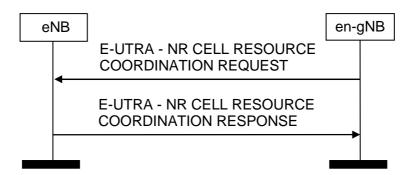


Figure 8.7.15.2-1: eNB-initiated E-UTRA – NR Cell Resource Coordination request, successful operation

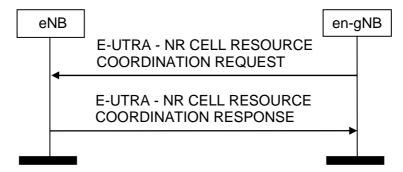


Figure 8.7.15.2-2: en-gNB-initiated E-UTRA – NR Cell Resource Coordination request, successful operation

eNB initiated E-UTRA - NR Cell Resource Coordination:

An eNB initiates the procedure by sending the E-UTRA – NR CELL RESOURCE COORDINATION REQUEST message to an en-gNB over the X2 interface. The en-gNB extracts the *Data Traffic Resource Indication* IE and it replies by sending the E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE message. The en-gNB shall calculate the full eNB resource allocation by combining the *Data Traffic Resource Indication* IE and the *Protected E-UTRA Resource Indication* IE that were most recently received from the eNB.

In case of conflict between the most recently received *Data Traffic Resource Indication* IE and the most recently received *Protected E-UTRA Resource Indication* IE, the en-gNB shall give priority to the *Protected E-UTRA Resource Indication* IE.

en-gNB initiated E-UTRA - NR Cell Resource Coordination:

An en-gNB initiates the procedure by sending the E-UTRA – NR CELL RESOURCE COORDINATION REQUEST message to an eNB. The eNB replies with the E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE message.

In case of conflict between the most recently received *Data Traffic Resource Indication* IE and the most recently received *Protected E-UTRA Resource Indication* IE, the en-gNB shall give priority to the *Protected E-UTRA Resource Indication* IE.

8.7.16 SgNB Activity Notification

8.7.16.1 General

The purpose of the SgNB Activity Notification procedure is to allow an en-gNB to send a notification to an eNB concerning user data traffic activity of already established E-RABs. The procedure uses UE-associated signalling.

8.7.16.2 Successful Operation

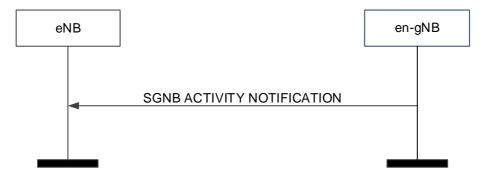


Figure 8.7.16.2-1: Activity Notification procedure, successful operation

The en-gNB initiates the procedure by sending an SGNB ACTIVITY NOTIFICATION message to the eNB.

The SGNB ACTIVITY NOTIFICATION message may contain notification for UE context level user plane activity in the UE Context level user plane activity report IE.

The NOTIFY message may contain notification for activity of E-RABs.

8.7.16.3 Abnormal Conditions

Void,

9 Elements for X2AP Communication

9.0 General

Sub clauses 9.1 and 9.2 describe the structure of the messages and information elements required for the X2AP protocol in tabular format. Sub clause 9.3 provides the corresponding ASN.1 definition.

The following attributes are used for the tabular description of the messages and information elements: Presence, Range Criticality and Assigned Criticality. Their definition and use can be found in TS 36.413 [4].

NOTE: The messages have been defined in accordance to the guidelines specified in TR 25.921 [30].

9.1 Message Functional Definition and Content

9.1.1 Messages for Basic Mobility Procedures

9.1.1.1 HANDOVER REQUEST

This message is sent by the source eNB to the target eNB to request the preparation of resources for a handover.

Direction: source eNB \rightarrow target eNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|--|----------------------------------|--|-------------|----------------------|
| Message Type | М | | 9.2.13 | | YES | reject |
| Old eNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the source eNB | YES | reject |
| Cause | М | | 9.2.6 | | YES | ignore |
| Target Cell ID | M | | ECGI 9.2.14 | | YES | reject |
| GUMMEI | М | | 9.2.16 | | YES | reject |
| UE Context Information | | 1 | | | YES | reject |
| >MME UE S1AP ID | М | | INTEGER (02 ³² -1) | MME UE S1AP ID allocated at the MME | _ | _ |
| >UE Security Capabilities | M | | 9.2.29 | | _ | _ |
| >AS Security Information | M | | 9.2.30 | | _ | _ |
| >UE Aggregate Maximum Bit Rate | М | | 9.2.12 | | _ | _ |
| >Subscriber Profile ID for RAT/Frequency priority | 0 | | 9.2.25 | | _ | _ |
| >E-RABs To Be Setup List | | 1 | | | _ | _ |
| >>E-RABs To Be Setup Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>>E-RAB ID | М | | 9.2.23 | | _ | _ |
| >>>E-RAB Level QoS Parameters | M | | 9.2.9 | Includes necessary QoS parameters | _ | _ |
| >>>DL Forwarding | 0 | | 9.2.5 | ace permitted | _ | _ |
| >>>UL GTP Tunnel Endpoint | M | | GTP Tunnel Endpoint 9.2.1 | SGW endpoint of the S1 transport bearer. For delivery of UL PDUs. | - | - |
| >>>Bearer Type | 0 | | 9.2.92 | | YES | reject |
| >RRC Context | M | | OCTET STRING | Includes the RRC HandoverPreparati onInformation message as defined in subclause 10.2.2 of TS 36.331 [9], or the RRC HandoverPreparati onInformation-NB message as defined in 10.6.2 of TS 36.331 [9]. | _ | _ |
| >Handover Restriction List | 0 | | 9.2.3 | | _ | - |
| >Location Reporting Information | 0 | | 9.2.21 | Includes the necessary parameters for location reporting | _ | _ |
| >Management Based MDT Allowed | 0 | | 9.2.59 | | YES | ignore |
| >Management Based MDT PLMN List | 0 | | MDT PLMN List 9.2.64 | | YES | ignore |
| >UE Sidelink Aggregate Maximum Bit Rate | 0 | | 9.2.97 | This IE applies only if the UE is authorized for V2X services. | YES | Ignore |
| UE History Information | М | | 9.2.38 | Same definition as in TS 36.413 [4] | YES | ignore |
| Trace Activation | 0 | | 9.2.2 | • | YES | ignore |
| SRVCC Operation Possible | 0 | | 9.2.33 | | YES | ignore |
| CSG Membership Status | 0 | | 9.2.52 | | YES | reject |

| Mobility Information | 0 | BIT STRING (SIZE (32)) | Information related to the handover; the source eNB provides it in order to enable later analysis of the conditions that led to a wrong HO. | YES | ignore |
|------------------------------------|---|---|---|-----|--------|
| Masked IMEISV | 0 | 9.2.69 | | YES | ignore |
| UE History Information from the UE | 0 | OCTET STRING | VisitedCellInfoList contained in the UEInformationResp onse message (TS 36.331 [9]) | YES | ignore |
| Expected UE Behaviour | 0 | 9.2.70 | | YES | ignore |
| ProSe Authorized | 0 | 9.2.78 | | YES | ignore |
| UE Context Reference at the SeNB | 0 | | | YES | ignore |
| >Global SeNB ID | M | Global eNB ID 9.2.22 | | | |
| >SeNB UE X2AP ID | M | eNB UE X2AP ID 9.2.24 | Allocated at the SeNB | | |
| >SeNB UE X2AP ID Extension | 0 | Extended eNB UE X2AP ID 9.2.86 | Allocated at the SeNB | | |
| Old eNB UE X2AP ID Extension | 0 | Extended eNB UE X2AP ID 9.2.86 | Allocated at the source eNB | YES | reject |
| V2X Services Authorized | 0 | 9.2.93 | | YES | ignore |
| UE Context Reference at the WT | 0 | | | YES | ignore |
| >WT ID | М | 9.2.95 | | | |
| >WT UE XwAP ID | М | 9.2.96 | | | |
| UE Context Reference at the SgNB | 0 | | | YES | ignore |
| >Global en-gNB ID | М | 9.2.112 | | | |
| >SgNB UE X2AP ID | M | en-gNB UE X2AP ID 9.2.100 | Allocated at the SgNB. | _ | _ |
| NR UE Security Capabilities | 0 | 9.2.107 | | YES | ignore |
| Aerial UE subscription information | 0 | 9.2.129 | | YES | ignore |

| Range bound | Explanation |
|-----------------|---|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 |
| maxnoofMDTPLMNs | PLMNs in the Management Based MDT PLMN list. Value is 16. |

9.1.1.2 HANDOVER REQUEST ACKNOWLEDGE

This message is sent by the target eNB to inform the source eNB about the prepared resources at the target.

Direction: target eNB \rightarrow source eNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|--|---|--|-------------|----------------------|
| Message Type | М | | 9.2.13 | • | YES | reject |
| Old eNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the source eNB | YES | ignore |
| New eNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the target eNB | YES | ignore |
| E-RABs Admitted List | | 1 | | | YES | ignore |
| > E-RABs Admitted Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>E-RAB ID | M | | 9.2.23 | | _ | _ |
| >>UL GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of UL PDUs | - | _ |
| >>DL GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer. used for forwarding of DL PDUs | - | - |
| E-RABs Not Admitted List | 0 | | E-RAB List 9.2.28 | A value for E-RAB ID shall only be present once in E-RABs Admitted List IE and in E- RABs Not Admitted List IE. | YES | ignore |
| Target eNB To Source eNB Transparent Container | M | | OCTET STRING | Includes the RRC E- UTRA Handover Command message as defined in subclause 10.2.2 in TS 36.331 [9] | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| UE Context Kept Indicator | 0 | | 9.2.85 | <u> </u> | YES | ignore |
| Old eNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the source eNB | YES | ignore |
| New eNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the target eNB | YES | reject |
| WT UE Context Kept Indicator | 0 | | UE Context Kept Indicator 9.2.85 | Indicates that the WT has acknowledge d to keep the UE context | YES | ignore |

| Range bound | Explanation |
|----------------|-------------------------------------|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 |

9.1.1.3 HANDOVER PREPARATION FAILURE

This message is sent by the target eNB to inform the source eNB that the Handover Preparation has failed.

Direction: target eNB \rightarrow source eNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------------|----------|-------|---|-----------------------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| Old eNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the source eNB | YES | ignore |
| Cause | M | | 9.2.6 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| Old eNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the source eNB | YES | ignore |

9.1.1.4 SN STATUS TRANSFER

This message is sent by the source eNB to the target eNB to transfer the uplink/downlink PDCP SN and HFN status during a handover or for EN-DC.

Direction: source eNB \rightarrow target eNB (handover), eNB from which the E-RAB context is transferred \rightarrow eNB to which the E-RAB context is transferred (dual connectivity), eNB/en-gNB from which the E-RAB context is transferred \rightarrow engNB/eNB to which the E-RAB context is transferred (EN-DC).

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|---|-----------------------------|--|-------------|----------------------|
| Message Type | М | | 9.2.13 | • | YES | ignore |
| Old eNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated for handover at the source eNB and for dual connectivity/EN-DC at the eNB from which the E-RAB context is transferred | YES | reject |
| New eNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated for handover at the target eNB and for dual connectivity/EN-DC at the eNB to which the E- RAB context is transferred | YES | reject |
| E-RABs Subject To Status Transfer List | | 1 | | | YES | ignore |
| >E-RABs Subject To Status Transfer Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>E-RAB ID | M | | 9.2.23 | | _ | _ |
| >>Receive Status Of UL PDCP SDUs | 0 | | BIT STRING (4096) | PDCP Sequence Number = (First Missing SDU Number + bit position) modulo 4096 0: PDCP SDU has not been received. 1: PDCP SDU has been received correctly. | _ | _ |
| >>UL COUNT Value | M | | COUNT Value 9.2.15 | PDCP-SN and Hyper Frame Number of the first missing UL SDU in case of 12 bit long PDCP-SN | - | _ |
| >>DL COUNT Value | М | | COUNT Value 9.2.15 | PDCP-SN and Hyper frame number that the target eNB/en-gNB should assign for the next DL SDU not having an SN yet in case of 12 bit long PDCP-SN | - | - |
| >>Receive Status Of UL PDCP SDUs Extended | 0 | | BIT STRING (116384) | The IE is used in case of 15 bit long PDCP-SN in this release. The first bit indicates the status of the SDU after the First Missing UL PDCP SDU. The N th bit indicates the status of the UL PDCP SDU in position (N + First Missing SDU Number) modulo (1 + the maximum value of the PDCP-SN). 0: PDCP SDU has not been received. 1: PDCP SDU has been received correctly. | YES | ignore |

| >>UL COUNT Value Extended | 0 | COUNT Value Extended 9.2.66 | PDCP-SN and Hyper Frame Number of the first missing UL SDU in case of 15 bit long PDCP-SN | YES | ignore |
|--|---|--|--|-----|--------|
| >>DL COUNT Value Extended | 0 | COUNT Value Extended 9.2.66 | PDCP-SN and Hyper Frame Number that the target eNB/en-gNB should assign for the next DL SDU not having an SN yet in case of 15 bit long PDCP-SN | YES | ignore |
| >>Receive Status Of UL PDCP SDUs for PDCP SN Length 18 | 0 | BIT STRING (1131072) | The IE is used in case of 18 bit long PDCP-SN. The first bit indicates the status of the SDU after the First Missing UL PDCP SDU. The Nth bit indicates the status of the UL PDCP SDU in position (N + First Missing SDU Number) modulo (1 + the maximum value of the PDCP-SN). 0: PDCP SDU has not been received. 1: PDCP SDU has been received correctly. | YES | ignore |
| >>UL COUNT Value for PDCP SN Length 18 | 0 | COUNT Value for PDCP SN Length 18 9.2.82 | PDCP-SN and Hyper Frame Number of the first missing UL SDU in case of 18 bit long PDCP-SN | YES | ignore |
| >>DL COUNT Value for PDCP SN Length 18 | 0 | COUNT Value for PDCP SN Length 18 9.2.82 | PDCP-SN and Hyper Frame Number that the target eNB/en-gNB should assign for the next DL SDU not having an SN yet in case of 18 bit long PDCP-SN | YES | ignore |
| Old eNB UE X2AP ID Extension | 0 | Extended eNB UE X2AP ID 9.2.86 | Allocated for handover at the source eNB and for dual connectivity/EN-DC at the eNB from which the E-RAB context is transferred. | YES | reject |
| New eNB UE X2AP ID Extension | 0 | Extended eNB UE X2AP ID 9.2.86 | Allocated for handover at the target eNB and for dual connectivity/EN-DC at the eNB to which the E-RAB context is transferred. | YES | reject |
| SgNB UE X2AP ID | 0 | en-gNB UE X2AP ID 9.2.100 | Allocated for EN-DC at the SgNB. | YES | ignore |

| Range bound | Explanation |
|----------------|--------------------------------------|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256. |

9.1.1.5 UE CONTEXT RELEASE

This message is sent by the target eNB to the source eNB to indicate that resources can be released.

 $Direction: target \ eNB \rightarrow source \ eNB \ (handover), \ MeNB \rightarrow SeNB \ (dual \ connectivity), \ MeNB \rightarrow en-gNB \ (EN-DC).$

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------------------|----------|-------|--------------------------------------|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | ignore |
| Old eNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated for handover at the source eNB and for dual connectivity at the SeNB. | YES | reject |
| New eNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated for handover at the target eNB and for dual connectivity/EN-DC at the MeNB. | YES | reject |
| Old eNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated for handover at the source eNB and for dual connectivity at the SeNB. | YES | reject |
| New eNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated for handover at the source eNB and for dual connectivity/EN-DC at the MeNB. | YES | reject |
| SIPTO Bearer Deactivation Indication | 0 | | ENUMERATED (True,,) | Indicates that SIPTO@LN PDN connection deactivation is needed. | YES | ignore |
| SgNB UE X2AP ID | 0 | | en-gNB UE X2AP ID 9.2.100 | Allocated for EN-DC at the SgNB. | YES | ignore |

9.1.1.6 HANDOVER CANCEL

This message is sent by the source eNB to the target eNB to cancel an ongoing handover.

Direction: source eNB \rightarrow target eNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------------|----------|-------|--------------------------------------|-----------------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | ignore |
| Old eNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the source eNB | YES | reject |
| New eNB UE X2AP ID | 0 | | eNB UE X2AP ID 9.2.24 | Allocated at the target eNB | YES | ignore |
| Cause | M | | 9.2.6 | | YES | ignore |
| Old eNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the source eNB | YES | reject |
| New eNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the target eNB | YES | ignore |

9.1.2 Messages for global procedures

9.1.2.1 LOAD INFORMATION

This message is sent by an eNB to neighbouring eNBs to transfer load and interference co-ordination information.

Direction: $eNB_1 \rightarrow eNB_2$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|------------------------------------|---|---|-------------|-------------------------|
| Message Type | M | | 9.2.13 | | YES | ignore |
| Cell Information | M | | | | YES | ignore |
| >Cell Information Item | | 1 <maxcellinenb></maxcellinenb> | | | EACH | ignore |
| >>Cell ID | M | | ECGI 9.2.14 | Id of the source cell | - | _ |
| >>UL Interference Overload Indication | 0 | | 9.2.17 | | _ | _ |
| >>UL High Interference Information | | 0 <maxcellinenb></maxcellinenb> | | | - | _ |
| >>>Target Cell ID | M | | ECGI 9.2.14 | Id of the cell for which the HII is meant | - | _ |
| >>>UL High Interference Indication | M | | 9.2.18 | | _ | _ |
| >>Relative Narrowband Tx Power (RNTP) | 0 | | 9.2.19 | | - | _ |
| >>ABS Information | 0 | | 9.2.54 | | YES | ignore |
| >>Invoke Indication | 0 | | 9.2.55 | | YES | ignore |
| >>Intended UL-DL Configuration | 0 | | ENUMERAT ED(sa0, sa1, sa2, sa3, sa4, sa5, sa6,) | One of the UL-DL configuration s defined in TS 36.211 [10]. The UL subframe(s) in the indicated configuration is subset of those in SIB1 UL-DL configuration . This IE applies to TDD only. | YES | ignore |
| >>Extended UL Interference Overload Info | 0 | | 9.2.67 | This IE applies to TDD only. | YES | ignore |
| >>CoMP Information | 0 | | 9.2.74 | | YES | ignore |
| >>Dynamic DL transmission information | 0 | | 9.2.77 | | YES | ignore |

| Range bound | Explanation |
|--------------|---|
| maxCellineNB | Maximum no. cells that can be served by an eNB. Value is 256. |

9.1.2.2 ERROR INDICATION

This message is used to indicate that some error has been detected in the eNB/en-gNB.

Direction: $eNB_1 \rightarrow eNB_2$ or $eNB \rightarrow en\text{-}gNB$ or $en\text{-}gNB \rightarrow eNB$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------------|----------|-------|--------------------------------------|--|-------------|----------------------|
| Message Type | М | | 9.2.13 | - | YES | ignore |
| Old eNB UE X2AP ID | 0 | | eNB UE X2AP ID 9.2.24 | Allocated for handover at the source eNB and for dual connectivity at the SeNB or the eNB from which the E-RAB context is transferred. | YES | ignore |
| New eNB UE X2AP ID | 0 | | eNB UE X2AP ID 9.2.24 | Allocated for handover at the target eNB and for dual connectivity/EN-DC at the MeNB or the eNB to which the E-RAB context is transferred. | YES | ignore |
| Cause | 0 | | 9.2.6 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| Old eNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated for handover at the source eNB and for dual connectivity at the SeNB or the eNB from which the E-RAB context is transferred. | YES | ignore |
| New eNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated for handover at the target eNB and for dual connectivity at the MeNB or the eNB to which the E-RAB context is transferred. | YES | ignore |
| Old en-gNB UE X2AP ID | 0 | | en-gNB UE X2AP ID 9.2.100 | Allocated for EN-DC at the en-gNB. | YES | ignore |

9.1.2.3 X2 SETUP REQUEST

This message is sent by an eNB to a neighbouring eNB to transfer the initialization information for a TNL association.

Direction: $eNB_1 \rightarrow eNB_2$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------|----------|--|-----------------------|--|-------------|-------------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| Global eNB ID | M | | 9.2.22 | | YES | reject |
| Served Cells | | 1 <maxcellinenb></maxcellinenb> | | Complete list of cells served by the eNB | YES | reject |
| >Served Cell Information | M | | 9.2.8 | | _ | _ |
| >Neighbour Information | | 0 <maxnoofneighb ours></maxnoofneighb | | | _ | _ |
| >>ECGI | М | | ECGI 9.2.14 | E-UTRAN Cell Global Identifier of the neighbour cell | - | - |
| >>PCI | М | | INTEGER (0503,) | Physical Cell Identifier of the neighbour cell | _ | _ |
| >>EARFCN | М | | 9.2.26 | DL EARFCN for FDD or EARFCN for TDD | _ | _ |
| >>TAC | 0 | | OCTET STRING (2) | Tracking Area Code | YES | ignore |
| >>EARFCN Extension | O | | 9.2.65 | DL EARFCN for FDD or EARFCN for TDD. If this IE is present, the value signalled in the EARFCN IE is ignored. | YES | reject |
| GU Group Id List | | 0 <maxfpools></maxfpools> | | List of all the pools to which the eNB belongs | GLOBAL | reject |
| >GU Group Id | M | | 9.2.20 | | - | - |
| LHN ID | 0 | | 9.2.83 | | YES | ignore |

| Range bound | Explanation |
|-------------------|---|
| maxCellineNB | Maximum no. cells that can be served by an eNB. Value is 256. |
| maxnoofNeighbours | Maximum no. of neighbour cells associated to a given served cell. Value is 512. |
| maxPools | Maximum no. of pools an eNB can belong to. Value is 16. |

9.1.2.4 X2 SETUP RESPONSE

This message is sent by an eNB to a neighbouring eNB to transfer the initialization information for a TNL association.

Direction: $eNB_2 \rightarrow eNB_1$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------|----------|--|-----------------------|--|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| Global eNB ID | M | | 9.2.22 | | YES | reject |
| Served Cells | | 1 <maxcellinenb></maxcellinenb> | | Complete list of cells served by the eNB | GLOBAL | reject |
| >Served Cell Information | M | | 9.2.8 | | _ | _ |
| >Neighbour Information | | 0 <maxnoofneighb ours></maxnoofneighb | | | _ | _ |
| >>ECGI | М | | ECGI 9.2.14 | E-UTRAN Cell Global Identifier of the neighbour cell | - | _ |
| >>PCI | М | | INTEGER (0503,) | Physical Cell Identifier of the neighbour cell | - | _ |
| >>EARFCN | M | | 9.2.26 | DL EARFCN for FDD or EARFCN for TDD | _ | _ |
| >>TAC | 0 | | OCTET STRING (2) | Tracking Area Code | YES | ignore |
| >>EARFCN Extension | 0 | | 9.2.65 | DL EARFCN for FDD or EARFCN for TDD. If this IE is present, the value signalled in the EARFCN IE is ignored. | YES | reject |
| GU Group Id List | | 0 <maxpools></maxpools> | | List of all the pools to which the eNB belongs | GLOBAL | reject |
| >GU Group Id | М | | 9.2.20 | | - | - |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| LHN ID | 0 | | 9.2.83 | | YES | ignore |

| Range bound | Explanation |
|-------------------|---|
| maxCellineNB | Maximum no. cells that can be served by an eNB. Value is 256. |
| maxnoofNeighbours | Maximum no. of neighbour cells associated to a given served cell. |
| | Value is 512. |
| maxPools | Maximum no. of pools an eNB can belong to. Value is 16. |

9.1.2.5 X2 SETUP FAILURE

This message is sent by the eNB to indicate X2 Setup failure.

Direction: $eNB_2 \rightarrow eNB_1$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| Cause | M | | 9.2.6 | | YES | ignore |
| Time To Wait | 0 | | 9.2.32 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |

9.1.2.6 RESET REQUEST

This message is sent from one eNB to another eNB/en-gNB or from en-gNB to an eNB and is used to request the X2 interface between the two eNB or between an eNB and an en-gNB to be reset.

Direction: $eNB_1 \rightarrow eNB_2$, $eNB \rightarrow en\text{-}gNB$, $en\text{-}gNB \rightarrow eNB$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | _ | YES | reject |
| Cause | M | | 9.2.6 | | YES | ignore |

9.1.2.7 RESET RESPONSE

This message is sent by a eNB/en-gNB as a response to a RESET REQUEST message.

Direction: $eNB_2 \rightarrow eNB_1$, $eNB \rightarrow en\text{-}gNB$, $en\text{-}gNB \rightarrow eNB$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |

9.1.2.8 ENB CONFIGURATION UPDATE

This message is sent by an eNB to a peer eNB to transfer updated information for a TNL association.

Direction: $eNB_1 \rightarrow eNB_2$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------|----------|--|-----------------------|--|-------------|----------------------|
| Message Type | М | | 9.2.13 | | YES | reject |
| Served Cells To Add | | 0 <maxcellinenb></maxcellinenb> | | Complete list of added cells served by the eNB | GLOBAL | reject |
| >Served Cell Information | M | | 9.2.8 | | _ | I |
| >Neighbour Information | | 0 <maxnoofneighb ours></maxnoofneighb | | | _ | 1 |
| >>ECGI | M | | ECGI 9.2.14 | E-UTRAN Cell Global Identifier of the neighbour cell | - | I |
| >>PCI | M | | INTEGER (0503,) | Physical Cell Identifier of the neighbour cell | - | - |
| >>EARFCN | M | | 9.2.26 | DL EARFCN for FDD or EARFCN for TDD | - | 1 |
| >>TAC | 0 | | OCTET STRING (2) | Tracking Area Code | YES | ignore |
| >>EARFCN Extension | 0 | | 9.2.65 | DL EARFCN for FDD or EARFCN for TDD. If this IE is present, the value signalled in the EARFCN IE is ignored. | YES | reject |
| Served Cells To Modify | | 0 <maxcellinenb></maxcellinenb> | | Complete list of modified cells served by the eNB | GLOBAL | reject |
| >Old ECGI | M | | ECGI 9.2.14 | Old E-UTRAN Cell Global Identifier | - | - |
| >Served Cell Information | М | | 9.2.8 | | _ | _ |
| >Neighbour Information | | 0 <maxnoofneighb ours></maxnoofneighb | | | - | - |
| >>ECGI | M | | ECGI 9.2.14 | E-UTRAN Cell Global Identifier of the neighbour cell | _ | - |
| >>PCI | M | | INTEGER (0503,) | Physical Cell Identifier of the neighbour cell | - | - |
| >>EARFCN | M | | 9.2.26 | DL EARFCN for FDD or EARFCN for TDD | - | - |
| >>TAC | 0 | | OCTET STRING (2) | Tracking Area Code | YES | ignore |
| >>EARFCN Extension | 0 | | 9.2.65 | DL EARFCN for FDD or EARFCN for TDD. If this IE is present, the value signalled in the EARFCN IE is ignored. | YES | reject |

| >Deactivation Indication | 0 | | ENUMERAT ED(deactivat ed,) | Indicates that the concerned cell is switched off for energy saving reasons | YES | ignore |
|--------------------------------------|--|------------------------------------|--|---|--------|--------|
| Served Cells To Delete | | 0 <maxcellinenb></maxcellinenb> | | Complete list of deleted cells served by the eNB | GLOBAL | reject |
| >Old ECGI | M | | ECGI 9.2.14 | Old E-UTRAN Cell Global Identifier of the cell to be deleted | - | - |
| GU Group Id To Add List | | 0 <maxpools></maxpools> | | | GLOBAL | reject |
| >GU Group Id | M | | 9.2.20 | | - | - |
| GU Group Id To Delete List | | 0 <maxpools></maxpools> | | | GLOBAL | reject |
| >GU Group Id | M | | 9.2.20 | | - | - |
| Coverage Modification List | | 0 <maxcellinenb></maxcellinenb> | | List of cells with modified coverage | GLOBAL | reject |
| >ECGI | M | | ECGI 9.2.14 | E-UTRAN Cell Global Identifier of the cell to be modified | - | - |
| >Cell Coverage State | М | | INTEGER (015,) | Value '0' indicates that the cell is inactive. Other values Indicates that the cell is active and also indicates the coverage configuration of the concerned cell | - | - |
| >Cell Deployment Status Indicator | 0 | | ENUMERAT ED(pre- change- notification, .) | Indicates the Cell Coverage State is planned to be used at the next reconfiguration | | |
| >Cell Replacing Info | C- ifCellDeplo ymentStat usIndicator Present | | | | | |
| >>Replacing Cells | | 0 <maxcellinenb></maxcellinenb> | | | | |
| >>>ECGI | | | ECGI 9.2.14 | E-UTRAN Cell Global Identifier of a cell that may replace all or part of the coverage of the cell to be modified | | |

| Range bound | Explanation |
|-------------------|--|
| maxCellineNB | Maximum no. cells that can be served by an eNB. Value is 256. |
| maxnoofNeighbours | Maximum no. of neighbour cells associated to a given served cell. Value is 512. |
| | value is 512. |
| maxPools | Maximum no. of pools an eNB can belong to. Value is 16. |

| Condition | Explanation |
|--|--|
| ifCellDeploymentStatusIndicatorPresent | This IE shall be present if the Cell Deployment Status Indicator IE is |
| | present. |

9.1.2.9 ENB CONFIGURATION UPDATE ACKNOWLEDGE

This message is sent by an eNB to a peer eNB to acknowledge update of information for a TNL association.

Direction: $eNB_2 \rightarrow eNB_1$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |

9.1.2.10 ENB CONFIGURATION UPDATE FAILURE

This message is sent by an eNB to a peer eNB to indicate eNB Configuration Update Failure.

Direction: $eNB_2 \rightarrow eNB_1$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | М | | 9.2.13 | | YES | reject |
| Cause | M | | 9.2.6 | | YES | ignore |
| Time To Wait | 0 | | 9.2.32 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |

9.1.2.11 RESOURCE STATUS REQUEST

This message is sent by an eNB_1 to neighbouring eNB_2 to initiate the requested measurement according to the parameters given in the message.

Direction: $eNB_1 \rightarrow eNB_2$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|---|--|---|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| eNB1 Measurement ID | М | | INTEGER (14095,) | Allocated by eNB₁ | YES | reject |
| eNB2 Measurement ID | C- ifRegistrati onRequest StoporPart ialStoporA dd | | INTEGER (14095,) | Allocated by eNB ₂ | YES | ignore |
| Registration Request | М | | ENUMERAT ED(start, stop, , partial stop, add) | Type of request for which the resource status is required. | YES | reject |
| Report Characteristics | O | | BITSTRING (SIZE(32)) | Each position in the bitmap indicates measurement object the eNB ₂ is requested to report. First Bit = PRB Periodic, Second Bit = TNL load Ind Periodic, Third Bit = HW Load Ind Periodic, Fourth Bit = Composite Available Capacity Periodic, this bit should be set to 1 if at least one of the First, Second or Third bits is set to 1, Fifth Bit = ABS Status Periodic, Sixth Bit = RSRP Measurement Report Periodic, Seventh Bit = CSI Report Periodic. Other bits shall be ignored by the eNB ₂ . | YES | reject |
| Cell To Report | | 1 | | Cell ID list to which the request applies. | YES | ignore |
| >Cell To Report Item | | 1 <maxcel lineNB></maxcel | | | EACH | ignore |
| >>Cell ID | М | | ECGI 9.2.14 | | _ | _ |
| Reporting Periodicity | 0 | | ENUMERAT ED(1000ms, 2000ms, 5000ms,100 00ms,) | Periodicity that can be used for reporting of PRB Periodic, TNL Load Ind Periodic, HW Load Ind Periodic, Composite Available Capacity Periodic or ABS Status Periodic. | YES | ignore |
| Partial Success Indicator | 0 | | ENUMERAT ED(partial success allowed,) | Included if partial success is allowed | YES | ignore |
| Reporting Periodicity of RSRP Measurement Report | 0 | | ENUMERAT ED(120ms, 240ms, 480ms, 640ms,) | Periodicity that can be used for the reporting of RSRP Measurement Report Periodic. | YES | ignore |

| Reporting Periodicity of CSI | 0 | ENUME | RAT Periodi | city that can be | YES | ignore |
|------------------------------|---|---------|--------------|---------------------|-----|--------|
| Report | | ED(5ms | s, used fo | or the reporting of | | |
| | | 10ms, 2 | 20ms, CSI Re | port Periodic. | | |
| | | 40ms, | | | | |
| | | 80ms, . |) | | | |

| Range bound | Explanation | | | | |
|--------------|---|--|--|--|--|
| maxCellineNB | Maximum no. cells that can be served by an eNB. Value is 256. | | | | |

| Condition | Explanation |
|---|---|
| ifRegistrationRequestStoporPartialStoporA | This IE shall be present if the Registration Request IE is set to the |
| dd | value "stop", "partial stop" or "add". |

9.1.2.12 RESOURCE STATUS RESPONSE

This message is sent by the eNB_2 to indicate that the requested measurement, for all or for a subset of the measurement objects included in the measurement is successfully initiated.

Direction: $eNB_2 \rightarrow eNB_1$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|---|-------------------------|--|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| eNB1 Measurement ID | М | | INTEGER (14095,) | Allocated by eNB ₁ | YES | reject |
| eNB2 Measurement ID | М | | INTEGER (14095,) | Allocated by eNB ₂ | YES | reject |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| Measurement Initiation Result | | 01 | | List of all cells in which measurement objects were requested, included when indicating partial success | YES | ignore |
| >Measurement Initiation Result Item | | 1 <maxce IlineNB></maxce | | | EACH | ignore |
| >>Cell ID | М | | ECGI 9.2.14 | | - | _ |
| >>Measurement Failure Cause List | | 01 | | Indicates that eNB ₂ could not initiate the measurement for at least one of the requested measurement objects in the cell | - | - |
| >>>Measurement Failure Cause Item | | 1 <maxfa iledMea sObject s></maxfa | | | EACH | ignore |
| >>>>Measurement Failed Report Characteristics | M | | BITSTRING (SIZE(32)) | Each position in the bitmap indicates measurement object that failed to be initiated in the eNB ₂ . First Bit = PRB Periodic, Second Bit = TNL load Ind Periodic, Third Bit = HW Load Ind Periodic, Fourth Bit = Composite Available Capacity Periodic, Fifth Bit = ABS Status Periodic, Sixth Bit = RSRP Measurement Report Periodic, Seventh Bit = CSI Report Periodic. Other bits shall be ignored by the eNB ₁ . | _ | _ |
| >>>Cause | М | | 9.2.6 | Failure cause for measurement objects for which the measurement cannot be initiated | - | - |

| Range bound | Explanation |
|----------------------|---|
| maxFailedMeasObjects | Maximum number of measurement objects that can fail per measurement. Value is 32. |
| maxCellineNB | Maximum no. cells that can be served by an eNB. Value is 256. |

9.1.2.13 RESOURCE STATUS FAILURE

This message is sent by the eNB_2 to indicate that for none of the requested measurement objects the measurement can be initiated.

Direction: $eNB_2 \rightarrow eNB_1$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|---|-----------------------|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| eNB1 Measurement ID | M | | INTEGER | Allocated by eNB ₁ | YES | reject |
| eND1 Weastrement 15 | IVI | | (14095,) | Allocated by eND | 120 | reject |
| eNB2 Measurement ID | М | | INTEGER | Allocated by eNB ₂ | YES | reject |
| 0.1220000 | | | (14095,) | , saits 2, s. 122 | 0 | . 0,001 |
| Cause | М | | 9.2.6 | Ignored by the receiver when the Complete | YES | ignore |
| | | | | Failure Cause Information IE is included | | |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| Complete Failure Cause | | 01 | , | Complete list of failure | YES | ignore |
| Information | | | | causes for all requested cells | | |
| >Complete Failure | | 1 | | | EACH | ignore |
| Cause Information | | <maxce< td=""><td></td><td></td><td></td><td></td></maxce<> | | | | |
| Item | | IlineNB> | | | | |
| >>Cell ID | M | | ECGI 9.2.14 | | _ | _ |
| >>Measurement | | 1 | | | _ | _ |
| Failure Cause List | | | | | | |
| >>>Measurement | | 1 | | | EACH | ignore |
| Failure Cause Item | | <maxfa iledMea</maxfa | | | | |
| | | sObject | | | | |
| | | S> | | | | |
| >>>Measuremen | М | 0, | BITSTRING | Each position in the | _ | _ |
| t Failed Report | | | (SIZE(32)) | bitmap indicates | | |
| Characteristics | | | (- (- // | measurement object | | |
| | | | | that failed to be initiated | | |
| | | | | in the eNB ₂ . First Bit = | | |
| | | | | PRB Periodic, | | |
| | | | | Second Bit = TNL load | | |
| | | | | Ind Periodic, | | |
| | | | | Third Bit = HW Load Ind | | |
| | | | | Periodic, | | |
| | | | | Fourth Bit = Composite | | |
| | | | | Available Capacity | | |
| | | | | Periodic, | | |
| | | | | Fifth Bit = ABS Status Periodic, | | |
| | | | | Sixth Bit = RSRP | | |
| | | | | Measurement Report | | |
| | | | | Periodic, | | |
| | | | | Seventh Bit = CSI | | |
| | | | | Report Periodic. | | |
| | | | | Other bits shall be | | |
| | | | | ignored by the eNB ₁ . | | |
| >>>Cause | M | | 9.2.6 | Failure cause for | _ | _ |
| | | | | measurements that | | |
| | | | | cannot be initiated | | |

| Range bound | Explanation |
|----------------------|---|
| maxCellineNB | Maximum no. cells that can be served by an eNB. Value is 256. |
| maxFailedMeasObjects | Max number of measurement objects that can fail per measurement. Value is 32. |

9.1.2.14 RESOURCE STATUS UPDATE

This message is sent by eNB₂ to neighbouring eNB₁ to report the results of the requested measurements.

Direction: $eNB_2 \rightarrow eNB_1$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|------------------------------------|----------------------------------|-------------------------------|-------------|----------------------|
| Message Type | М | | 9.2.13 | • | YES | ignore |
| eNB1 Measurement ID | М | | INTEGER (14095,) | Allocated by eNB ₁ | YES | reject |
| eNB2 Measurement ID | М | | INTEGER (14095,) | Allocated by eNB ₂ | YES | reject |
| Cell Measurement Result | | 1 | | | YES | ignore |
| >Cell Measurement Result Item | | 1 <maxcellinenb></maxcellinenb> | | | EACH | ignore |
| >>Cell ID | М | | ECGI 9.2.14 | | | |
| >>Hardware Load Indicator | 0 | | 9.2.34 | | | |
| >>S1 TNL Load Indicator | 0 | | 9.2.35 | | | |
| >>Radio Resource Status | 0 | | 9.2.37 | | | |
| >>Composite Available Capacity Group | 0 | | 9.2.44 | | YES | ignore |
| >>ABS Status | 0 | | 9.2.58 | | YES | ignore |
| >>RSRP Measurement Report List | 0 | | 9.2.76 | | YES | ignore |
| >>CSI Report | 0 | | 9.2.79 | | YES | ignore |
| >>Cell Reporting Indicator | 0 | | ENUMERAT ED(stop request,) | | YES | ignore |

| Range bound | Explanation | | | |
|--------------|---|--|--|--|
| maxCellineNB | Maximum no. cells that can be served by an eNB. Value is 256. | | | |

9.1.2.15 MOBILITY CHANGE REQUEST

This message is sent by an eNB_1 to neighbouring eNB_2 to initiate adaptation of mobility parameters.

Direction: $eNB_1 \rightarrow eNB_2$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------------------|----------|-------|--|--|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| eNB1 Cell ID | M | | ECGI 9.2.14 | | YES | reject |
| eNB2 Cell ID | М | | ECGI 9.2.14 | | YES | reject |
| eNB1 Mobility Parameters | 0 | | Mobility Parameters Information 9.2.48 | Configuration change in eNB ₁ cell | YES | ignore |
| eNB2 Proposed Mobility Parameters | М | | Mobility Parameters Information 9.2.48 | Proposed configuration change in eNB ₂ cell | YES | reject |
| Cause | M | | 9.2.6 | | YES | reject |

9.1.2.16 MOBILITY CHANGE ACKNOWLEDGE

This message is sent by the eNB_2 to indicate that the eNB_2 Proposed Mobility Parameter proposed by eNB_1 was accepted.

Direction: $eNB_2 \rightarrow eNB_1$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| eNB1 Cell ID | M | | ECGI 9.2.14 | | YES | reject |
| eNB2 Cell ID | М | | ECGI 9.2.14 | | YES | reject |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |

9.1.2.17 MOBILITY CHANGE FAILURE

This message is sent by the eNB_2 to indicate that the eNB_2 Proposed Mobility Parameter proposed by eNB_1 was refused.

Direction: $eNB_2 \rightarrow eNB_1$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | М | | 9.2.13 | | YES | reject |
| eNB1 Cell ID | М | | ECGI 9.2.14 | | YES | ignore |
| eNB2 Cell ID | М | | ECGI 9.2.14 | | YES | ignore |
| Cause | M | | 9.2.6 | | YES | ignore |
| Mobility Parameters Modification Range | 0 | | 9.2.49 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |

9.1.2.18 RLF INDICATION

This message is sent by the eNB_2 to indicate an RRC re-establishment attempt or a reception of an RLF Report from a UE that suffered a connection failure at eNB_1 .

Direction: $eNB_2 \rightarrow eNB_1$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|-------|---|--|-------------|----------------------|
| Message Type | M | | 9.2.13 | • | YES | ignore |
| Failure cell PCI | М | | INTEGER (0503,) | Physical Cell Identifier | YES | ignore |
| Re-establishment cell ECGI | M | | ECGI 9.2.14 | | YES | ignore |
| C-RNTI | M | | BIT STRING (SIZE (16)) | C-RNTI contained in the RRC Re- establishment Request message (TS 36.331 [9]) | YES | ignore |
| ShortMAC-I | 0 | | BIT STRING (SIZE (16)) | ShortMAC-I contained in the RRC Re- establishment Request message (TS 36.331 [9]) | YES | ignore |
| UE RLF Report Container | 0 | | OCTET STRING | RLF -Report-r9 IE contained in the UEInformationRe sponse message (TS 36.331 [9]) | YES | ignore |
| RRC Conn Setup Indicator | 0 | | ENUMERATED(RR C Conn Setup,) | Included if the RLF Report within the UE RLF Report Container IE is retrieved after an RRC connection setup or an incoming successful handover | YES | reject |
| RRC Conn Reestab Indicator | 0 | | ENUMERATED(rec onfigurationFailure, handoverFailure, otherFailure,) | The Reestablishment Cause in RRCConnection Reestablishment Request message(TS 36.331 [9]) | YES | ignore |
| UE RLF Report Container for extended bands | 0 | | OCTET STRING | RLF-Report-v9e0 IE contained in the UEInformationRe sponse message (TS 36.331 [9]) | YES | ignore |

9.1.2.19 HANDOVER REPORT

This message is sent by the eNB_1 to report a handover failure event or other critical mobility problem.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|--|-------|---|---|-------------|----------------------|
| Message Type | М | | 9.2.13 | • | YES | ignore |
| Handover Report Type | М | | ENUMERATED (HO too early, HO to wrong cell, , InterRAT ping-pong) | | YES | ignore |
| Handover Cause | M | | Cause 9.2.6 | Indicates handover cause employed for handover from eNB ₂ | YES | ignore |
| Source cell ECGI | M | | ECGI 9.2.14 | ECGI of source cell for handover procedure (in eNB ₂) | YES | ignore |
| Failure cell ECGI | М | | ECGI 9.2.14 | ECGI of target cell for handover procedure (in eNB ₁) | YES | ignore |
| Re-establishment cell ECGI | C- ifHandoverR eportType HoToWrong Cell | | ECGI 9.2.14 | ECGI of cell where UE attempted re- establishment | YES | ignore |
| Target cell in UTRAN | C- ifHandoverR eportType InterRATpin gpong | | OCTET STRING | Encoded according to UTRAN Cell ID in the Last Visited UTRAN Cell Information IE, as defined in in TS 25.413 [24] | YES | ignore |
| Source cell C-RNTI | 0 | | BIT STRING (SIZE (16)) | C-RNTI allocated at the source eNB (in eNB ₂) contained in the AS-config (TS 36.331 [9]). | YES | ignore |
| Mobility Information | 0 | | BIT STRING (SIZE (32)) | Information provided in the HANDOVER REQUEST message from eNB ₂ . | YES | ignore |
| UE RLF Report Container | 0 | | OCTET STRING | The UE RLF Report Container IE received in the RLF INDICATION message. | YES | ignore |
| UE RLF Report Container for extended bands | 0 | | OCTET STRING | The UE RLF Report Container for extended bands IE received in the RLF INDICATION message. | YES | ignore |

| Condition | Explanation |
|---------------------------------------|---|
| ifHandoverReportType HoToWrongCell | This IE shall be present if the Handover Report Type IE is set to the |
| | value "HO to wrong cell" |
| ifHandoverReportType InterRATpingpong | This IE shall be present if the Handover Report Type IE is set to the |
| | value "InterRAT ping-pong" |

9.1.2.20 CELL ACTIVATION REQUEST

This message is sent by an eNB to a peer eNB to request a previously switched-off cell(s) to be re-activated.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------|----------|------------------------------------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| Served Cells To Activate | | 1 <maxcellinenb></maxcellinenb> | | | GLOBAL | reject |
| >ECGI | M | | 9.2.14 | | - | - |

| Range bound | Explanation | | | | | |
|--------------|---|--|--|--|--|--|
| maxCellineNB | Maximum no. cells that can be served by an eNB. Value is 256. | | | | | |

9.1.2.21 CELL ACTIVATION RESPONSE

This message is sent by an eNB to a peer eNB to indicate that one or more cell(s) previously switched-off has(have) been activated.

Direction: $eNB_2 \rightarrow eNB_1$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------------------------------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| Activated Cell List | | 1 | | | GLOBAL | ignore |
| | | <maxcellinenb></maxcellinenb> | | | | · · |
| >ECGI | М | | 9.2.14 | | - | - |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |

| Range bound | Explanation | | | | |
|--------------|---|--|--|--|--|
| maxCellineNB | Maximum no. cells that can be served by an eNB. Value is 256. | | | | |

9.1.2.22 CELL ACTIVATION FAILURE

This message is sent by an eNB to a peer eNB to indicate cell activation failure.

Direction: $eNB_2 \rightarrow eNB_1$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| Cause | M | | 9.2.6 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |

9.1.2.23 X2 RELEASE

This message is used to indicate that the signalling connection to an eNB is unavailable.

Direction: $eNB_1 \rightarrow eNB_2$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| Global eNB ID | M | | 9.2.22 | | YES | reject |

9.1.2.24 X2AP MESSAGE TRANSFER

This message is used for indirect transport of an X2AP message (except the X2AP MESSAGE TRANSFER message) between two eNBs, and to allow an eNB to perform registration.

| IE/Group Name | Presence | Range | IE type and | Semantics | Criticality | Assigned |
|---------------|----------|-------|-----------------|--|-------------|-------------|
| | | | reference | description | | Criticality |
| Message Type | M | | 9.2.13 | | YES | reject |
| RNL Header | M | | 9.2.68 | | YES | reject |
| X2AP Message | 0 | | OCTET STRING | Includes any X2AP message except the X2AP MESSAGE TRANSFER message | YES | reject |

9.1.2.25 X2 REMOVAL REQUEST

This message is sent by an eNB to a neighbouring eNB to initiate the removal of the signaling connection.

Direction: $eNB_1 \rightarrow eNB_2$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------------|----------|-------|----------------------------|-----------------------|-------------|----------------------|
| Message Type | М | | 9.2.13 | | YES | reject |
| Global eNB ID | М | | 9.2.22 | | YES | reject |
| X2 Removal Threshold | 0 | | X2 Benefit Value 9.2.90 | | YES | reject |

9.1.2.26 X2 REMOVAL RESPONSE

This message is sent by an eNB to a neighbouring eNB to acknowledge the initiation of removal of the signaling connection.

Direction: $eNB_2 \rightarrow eNB_1$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|-------------------------|
| Managara Tura | N 4 | | | description | VEC | , |
| Message Type | M | | 9.2.13 | | YES | reject |
| Global eNB ID | M | | 9.2.22 | | YES | reject |
| Criticality Diagnostics | 0 | | 9.2.7 | _ | YES | ignore |

9.1.2.27 X2 REMOVAL FAILURE

This message is sent by the eNB to indicate that removing the signaling connection cannot be accepted.

Direction: $eNB_2 \rightarrow eNB_1$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| Cause | M | | 9.2.6 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |

9.1.2.28 RETRIEVE UE CONTEXT REQUEST

This message is sent by the new eNB to request the old eNB to transfer the UE Context to the new eNB.

Direction: new eNB \rightarrow old eNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------------|----------|-------|--------------------------------------|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | ignore |
| New eNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the new eNB | YES | reject |
| New eNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the new eNB | YES | reject |
| Resume ID | M | | 9.2.91 | | YES | reject |
| ShortMAC-I | М | | BIT STRING (SIZE (16)) | ShortResumeMA C-I contained in the RRCConnection ResumeRequest message (TS 36.331 [9]) | YES | reject |
| New E-UTRAN Cell Identifier | М | | BIT STRING (SIZE (28)) | The E-UTRAN Cell Identifier of the cell where the RRC connection has been requested to be resumed. | YES | reject |
| C-RNTI | 0 | | BIT STRING (SIZE (16)) | C-RNTI contained in the RRC Re- establishment Request message (TS 36.331 [9]). If this IE is present, the Resume ID IE is ignored | YES | reject |
| Failure cell PCI | 0 | | INTEGER (0503,) | Physical Cell Identifier | YES | reject |

9.1.2.29 RETRIEVE UE CONTEXT RESPONSE

This message is sent by the old eNB to transfer the UE context to the new eNB.

Direction: old eNB \rightarrow new eNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|--|--------------------------------------|--|-------------|----------------------|
| Message Type | М | | 9.2.13 | ' | YES | ignore |
| New eNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the new eNB | YES | ignore |
| New eNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the new eNB | YES | ignore |
| Old eNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the old eNB | YES | ignore |
| Old eNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the old eNB | YES | ignore |
| GUMMEI | M | | 9.2.16 | | YES | reject |
| UE Context Information | | 1 | | | YES | reject |
| >MME UE S1AP ID | М | | INTEGER (02 ³² - 1) | MME UE S1AP ID allocated at the MME | - | _ |
| >UE Security Capabilities | М | | 9.2.29 | | _ | _ |
| >AS Security Information | М | | 9.2.30 | | _ | _ |
| >UE Aggregate Maximum Bit Rate | М | | 9.2.12 | | ı | - |
| >Subscriber Profile ID for RAT/Frequency priority | 0 | | 9.2.25 | | I | - |
| >E-RABs To Be Setup List | | 1 | | | 1 | 1 |
| >>E-RABs To Be Setup Item | | 1 <maxno of Bearers</maxno | | | EACH | ignore |
| >>>E-RAB ID | М | | 9.2.23 | | _ | _ |
| >>>E-RAB Level QoS Parameters | М | | 9.2.9 | Includes necessary QoS parameters | _ | _ |
| >>>Bearer Type | 0 | | 9.2.92 | | - | _ |
| >>>UL GTP Tunnel Endpoint | M | | GTP Tunnel Endpoint 9.2.1 | SGW endpoint of the S1 transport bearer. For delivery of UL PDUs. | YES | reject |
| >RRC Context | М | | OCTET STRING | Includes either the RRC Handover Preparation Information message as defined in subclause 10.2.2 of TS 36.331 [9], or the HandoverPrepar ationInformation-NB message as defined in subclause 10.6.2 of TS 36.331 [9]. | _ | _ |
| >Handover Restriction List | 0 | | 9.2.3 | | - | _ |
| >Location Reporting Information | 0 | | 9.2.21 | Includes the necessary parameters for location reporting | - | _ |

| >Management Based MDT Allowed | 0 | 9.2.59 | | - | _ |
|--|---|-------------------------|--|-----|--------|
| >Management Based MDT PLMN List | 0 | MDT PLMN List 9.2.64 | | ı | _ |
| >UE Sidelink Aggregate Maximum Bit Rate | 0 | 9.2.97 | This IE applies only if the UE is authorized for V2X services. | YES | ignore |
| Trace Activation | 0 | 9.2.2 | | YES | ignore |
| SRVCC Operation Possible | 0 | 9.2.33 | | YES | ignore |
| Masked IMEISV | 0 | 9.2.69 | | YES | ignore |
| Expected UE Behaviour | 0 | 9.2.70 | | YES | ignore |
| ProSe Authorized | 0 | 9.2.78 | | YES | ignore |
| Criticality Diagnostics | 0 | 9.2.7 | | YES | ignore |
| V2X Services Authorized | 0 | 9.2.93 | | YES | ignore |
| Aerial UE subscription information | 0 | 9.2.129 | | YES | ignore |

| Range bound | Explanation | | |
|----------------|-------------------------------------|--|--|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 | | |

9.1.2.30 RETRIEVE UE CONTEXT FAILURE

This message is sent by the old eNB to inform the new eNB that the Retrieve UE Context procedure has failed.

Direction: old eNB \rightarrow new eNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------------|----------|-------|---|--------------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| New eNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the new eNB | YES | ignore |
| New eNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the new eNB | YES | ignore |
| Cause | M | | 9.2.6 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |

9.1.2.31 EN-DC X2 SETUP REQUEST

This message is sent by an initiating node to a neighbouring node, both nodes able to interact for EN-DC, to transfer the initialization information for a TNL association.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------------------------|----------|---|-------------------------------------|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| CHOICE Initiating | M | | | | | |
| NodeType | | | | | | |
| >eNB | | | | | | |
| >>Global eNB ID | M | | 9.2.22 | | YES | reject |
| >>List of Served E- UTRA Cells | | 1 <maxcellinenb></maxcellinenb> | | Complete list of cells served by the eNB | YES | reject |
| >>>Served E-UTRA Cell Information | М | | Served Cell Information 9.2.8 | | - | - |
| >>>NR Neighbour Information | 0 | | 9.2.98 | NR neighbours | YES | ignore |
| >en-gNB | | | | | | |
| >>Global en-gNB ID | M | | 9.2.112 | | YES | reject |
| >>List of Served NR Cells | | 1 <maxcellinengn B></maxcellinengn | | Complete list of cells served by the engNB. | YES | reject |
| >>>Served NR Cell Information | М | | 9.2.110 | | _ | |
| >>>NR Neighbour Information | 0 | | 9.2.98 | NR neighbours. | YES | ignore |

| Explanation |
|--|
| Maximum no. cells that can be served by an eNB. Value is 256. |
| Maximum no. cells that can be served by an en-gNB. Value is 16384. |
| ľ |

9.1.2.32 EN-DC X2 SETUP RESPONSE

This message is sent by a neighbouring node to an initiating node, both nodes able to interact for EN-DC, to transfer the initialization information for a TNL association.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------------------------|----------|---|-------------------------------------|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | _ | YES | reject |
| CHOICE Responding NodeType | М | | | | | |
| >eNB | | | | | | |
| >>Global eNB ID | M | | 9.2.22 | | YES | reject |
| >>List of Served E- UTRA Cells | | 1 <maxcellinenb></maxcellinenb> | | Complete list of cells served by the eNB | YES | reject |
| >>>Served E-UTRA Cell Information | М | | Served Cell Information 9.2.8 | | _ | - |
| >>>NR Neighbour Information | 0 | | 9.2.98 | NR neighbours | YES | ignore |
| >en-gNB | | | | | | |
| >>Global en-gNB ID | M | | 9.2.112 | | YES | reject |
| >>List of Served NR Cells | | 1 <maxcellinengn B></maxcellinengn | | Complete list of cells served by the en-gNB | YES | reject |
| >>>Served NR Cell Information | М | | 9.2.110 | | 1 | |
| >>>NR Neighbour Information | 0 | | 9.2.98 | NR neighbours | YES | ignore |

| Range bound | Explanation |
|----------------|--|
| maxCellineNB | Maximum no. cells that can be served by an eNB. Value is 256. |
| maxCellinengNB | Maximum no. cells that can be served by an en-gNB. Value is 16384. |

9.1.2.33 EN-DC X2 SETUP FAILURE

This message is sent by the neighbouring node to indicate EN-DC X2 Setup failure.

Direction: $eNB \rightarrow en-gNB$, $en-gNB \rightarrow eNB$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| Cause | M | | 9.2.6 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |

9.1.2.34 EN-DC CONFIGURATION UPDATE

This message is sent by an initiating node to a peer neighbouring node, both nodes able to interact for EN-DC, to transfer updated information for a TNL association.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------------------|----------|---|--------------------------------------|---|-------------|----------------------|
| Message Type | М | | 9.2.13 | | YES | reject |
| CHOICE Initiating NodeType | M | | | | | |
| >eNB | | | | | | |
| >>Cell Assistance Information | 0 | | 9.2.115 | | YES | ignore |
| >>Served E-UTRA Cells To Add | | 0 <maxcellinenb></maxcellinenb> | | | GLOBAL | reject |
| >>>Served E-UTRA Cell Information | М | | Served Cell Information 9.2.8 | | _ | 1 |
| >>>NR Neighbour Information | 0 | | 9.2.98 | NR neighbours | YES | ignore |
| >>Served E-UTRA Cells To Modify | | 0 <maxcellinenb></maxcellinenb> | | Complete list of modified cells served by the eNB | GLOBAL | reject |
| >>>Old ECGI | M | | ECGI 9.2.14 | Old E-UTRAN Cell Global Identifier | - | _ |
| >>>Served E-UTRA Cell Information | М | | Served Cell Information 9.2.8 | | - | Н |
| >>>NR Neighbour Information | 0 | | 9.2.98 | NR neighbours | YES | ignore |
| >>Served E-UTRA Cells To Delete | | 0 <maxcellinenb></maxcellinenb> | | Complete list of deleted cells served by the eNB | GLOBAL | reject |
| >>>Old ECGI | M | | ECGI 9.2.14 | Old E-UTRAN Cell Global Identifier of the cell to be deleted | - | ı |
| >en-gNB | | | | | | |
| >>Served NR Cells To Add | | 0 <maxcellinen- gNB></maxcellinen- | | | GLOBAL | reject |
| >>>Served NR Cell Information | М | | 9.2.110 | | - | |
| >>>NR Neighbour Information | 0 | | 9.2.98 | NR neighbours | YES | ignore |
| >>Served NR Cells To Modify | | 0 <maxcellinen- gNB></maxcellinen- | | | GLOBAL | reject |
| >>>Old NR-CGI | М | | 9.2.111 | | - | |
| >>>Served NR Cell Information | М | | 9.2.110 | | _ | |
| >>>NR Deactivation Indication | 0 | | ENUMERAT ED(deactivat ed,) | Indicates that the concerned NR cell is switched off for energy saving reasons. If this IE is not included, indicates that the concerned cell is activated. | YES | ignore |
| >>>NR Neighbour Information | 0 | | 9.2.98 | NR neighbours | YES | ignore |

| >>Served NR Cells To Delete | | 0 <maxcellinen- gNB></maxcellinen- | | GLOBAL | reject |
|--------------------------------|---|---|---------|--------|--------|
| >>>Old NR-CGI | M | | 9.2.111 | - | |

| Range bound | Explanation | | | | |
|----------------|---|--|--|--|--|
| maxCellineNB | Maximum no. cells that can be served by an eNB. Value is 256. | | | | |
| maxCellinengNB | Maximum no. cells that can be served by an en-gNB. Value is | | | | |
| | 16384. | | | | |

9.1.2.35 EN-DC CONFIGURATION UPDATE ACKNOWLEDGE

This message is sent by a neighbouring node to a peer node, both nodes able to interact for EN-DC, to acknowledge update of information for a TNL association.

Direction: en-gNB \rightarrow eNB, eNB \rightarrow en-gNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------------------------|----------|---|-----------------------|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| CHOICE Responding NodeType | М | | | | | |
| >eNB | | | | | | |
| >en-gNB | | | | | | |
| >>List of Served NR Cells | | 0 <maxcellinengn B></maxcellinengn | | Complete or limited list of cells served by the engNB, if requested by the eNB. | | |
| >>>Served NR Cell Information | M | | 9.2.110 | | | |
| >>>NR Neighbour Information | 0 | | 9.2.98 | NR neighbours. | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |

| Range bound | Explanation | | | | |
|----------------|---|--|--|--|--|
| maxCellinengNB | Maximum no. cells that can be served by an en-gNB. Value is | | | | |
| | 16384. | | | | |

9.1.2.36 EN-DC CONFIGURATION UPDATE FAILURE

This message is sent by a neighbouring node to a peer node to indicate EN-DC eNB Configuration Update Failure.

Direction: en-gNB \rightarrow eNB, eNB \rightarrow en-gNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|-------------------------|
| Message Type | М | | 9.2.13 | | YES | reject |
| Cause | M | | 9.2.6 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |

9.1.2.37 EN-DC CELL ACTIVATION REQUEST

This message is sent by an eNB to a peer en-gNB to request a previously switched-off cell(s) to be re-activated.

| IE/Group Name | Presence | Range | IE type and | Semantics | Criticality | Assigned |
|---------------------|----------|------------------|-------------|--------------|-------------|-------------|
| | | | reference | description | | Criticality |
| Message Type | M | | 9.2.13 | | YES | reject |
| Served NR Cells To | | 1 | | | GLOBAL | reject |
| Activate | | | | | | |
| >Served NR Cells To | | 1 < | | | | |
| Activate Item | | maxCellinengNB > | | | | |
| >>NR CGI | M | | 9.2.111 | | - | - |
| Activation ID | М | | INTEGER | Allocated by | YES | reject |
| | | | (0255) | the eNB | | |

| Range bound | Explanation | | | | |
|----------------|---|--|--|--|--|
| maxCellinengNB | Maximum no. cells that can be served by an en-gNB. Value is | | | | |
| | 16384. | | | | |

9.1.2.38 EN-DC CELL ACTIVATION RESPONSE

This message is sent by an en-gNB to a peer eNB to indicate that one or more cell(s) previously switched-off has (have) been activated.

Direction: en-gNB \rightarrow eNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------------------------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| Activated NR Cell List | | 1 | | | GLOBAL | ignore |
| >Activated NR Cell Item | | 1 < maxCellinengNB > | | | | |
| >>NR CGI | M | | 9.2.111 | | - | - |
| Activation ID | М | | INTEGER (0255) | Allocated by the eNB | YES | reject |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |

| Range bound | Explanation |
|----------------|---|
| maxCellinengNB | Maximum no. cells that can be served by an en-gNB. Value is |
| | 16384. |

9.1.2.39 EN-DC CELL ACTIVATION FAILURE

This message is sent by an en-gNB to a peer eNB to indicate cell activation failure.

Direction: en-gNB \rightarrow eNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| Activation ID | M | | INTEGER (0255) | Allocated by the eNB | YES | reject |
| Cause | M | | 9.2.6 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |

9.1.2.40 EN-DC X2 REMOVAL REQUEST

This message is sent by an initiating node to a neighbouring node to initiate the removal of the signaling connection.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------|----------|-------|----------------------------|-----------------------|-------------|-------------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| CHOICE Initiating Node | M | | | | | |
| Type | | | | | | |
| >eNB | | | | | | |
| >>Global eNB ID | M | | 9.2.22 | | YES | reject |
| >en-gNB | | | | | | |
| >>Global en-gNB ID | M | | 9.2.112 | | | |
| X2 Removal Threshold | 0 | | X2 Benefit Value 9.2.90 | | YES | reject |

9.1.2.41 EN-DC X2 REMOVAL RESPONSE

This message is sent by an initiating node to a neighbouring node to acknowledge the initiation of removal of the signaling connection.

Direction: $eNB \rightarrow en-gNB$, $en-gNB \rightarrow eNB$.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| CHOICE Initiating Node | M | | | | | |
| Type | | | | | | |
| >eNB | | | | | | |
| >>Global eNB ID | M | | 9.2.22 | | YES | reject |
| >en-gNB | | | | | | |
| >>Global en-gNB ID | M | | 9.2.112 | | YES | reject |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |

9.1.2.42 EN-DC X2 REMOVAL FAILURE

This message is sent by the initiating node to indicate that removing the signaling connection cannot be accepted.

Direction: eNB \rightarrow en-gNB, en-gNB \rightarrow eNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| Cause | М | | 9.2.6 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |

9.1.3 Messages for Dual Connectivity Procedures

9.1.3.1 SENB ADDITION REQUEST

This message is sent by the MeNB to the SeNB to request the preparation of resources for dual connectivity operation for a specific UE

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------------------|-----------------------------|--|--|---|-------------|-------------------------|
| Message Type | М | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB | YES | reject |
| UE Security Capabilities | C- ifSCGBear erOption | | 9.2.29 | | YES | reject |
| SeNB Security Key | C- ifSCGBear erOption | | 9.2.72 | The S-KeNB which is provided by the MeNB, see TS 33.401 [18]. | YES | reject |
| SeNB UE Aggregate Maximum Bit Rate | M | | UE Aggregate Maximum Bit Rate 9.2.12 | The UE Aggregate Maximum Bit Rate is split into MeNB UE Aggregate Maximum Bit Rate and SeNB UE Aggregate Maximum Bit Rate which are enforced by MeNB and SeNB respectively. | YES | reject |
| Serving PLMN | 0 | | PLMN Identity 9.2.4 | The serving PLMN of the SCG in the SeNB. | YES | ignore |
| E-RABs To Be Added List | | 1 | | | YES | reject |
| >E-RABs To Be Added | | 1 <maxnoof Bearers></maxnoof | | | EACH | reject |
| >>CHOICE Bearer Option | М | | | | | |
| >>>SCG Bearer | | | | | | |
| >>>E-RAB ID | M | | 9.2.23 | | _ | _ |
| >>>E-RAB Level QoS Parameters | M | | 9.2.9 | Includes necessary QoS parameters | _ | _ |
| >>>>DL Forwarding | 0 | | 9.2.5 | 00111 | _ | _ |
| >>>S1 UL GTP Tunnel Endpoint | M | | GTP Tunnel Endpoint 9.2.1 | SGW endpoint of the S1 transport bearer. For delivery of UL PDUs. | _ | _ |
| >>>Correlation ID | 0 | | Correlation ID 9.2.84 | | _ | _ |
| >>>SIPTO Correlation ID | 0 | | Correlation ID 9.2.84 | | _ | _ |
| >>>Split Bearer | | | | | | |
| >>>E-RAB ID | M | | 9.2.23 | | _ | _ |
| >>>E-RAB Level QoS Parameters | М | | 9.2.9 | Includes necessary QoS parameters | - | _ |
| >>>>MeNB GTP Tunnel Endpoint | M | | GTP Tunnel Endpoint 9.2.1 | MeNB endpoint of the X2 transport bearer. For delivery of UL PDUs. | _ | _ |
| MeNB to SeNB Container | М | | OCTET STRING | Includes the SCG- ConfigInfo message as defined in TS 36.331 [9] | YES | reject |
| CSG Membership Status | 0 | | 9.2.52 | | YES | reject |
| SeNB UE X2AP ID | 0 | | eNB UE X2AP ID 9.2.24 | Allocated at the SeNB | YES | reject |

| SeNB UE X2AP ID Extension | 0 | Extended eNB UE X2AP ID 9.2.86 | Allocated at the SeNB | YES | reject |
|---------------------------|---|---|-----------------------|-----|--------|
| Expected UE Behaviour | 0 | 9.2.70 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | reject |

| Range bound | Explanation | | |
|----------------|-------------------------------------|--|--|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 | | |

| Condition | Explanation |
|-------------------|--|
| ifSCGBearerOption | This IE shall be present if the Bearer Option IE is set to the value |
| | "SCG bearer". |

9.1.3.2 SENB ADDITION REQUEST ACKNOWLEDGE

This message is sent by the SeNB to confirm the MeNB about the SeNB addition preparation.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------------------|----------|---|--------------------------------------|---|-------------|----------------------|
| Message Type | М | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB | YES | reject |
| SeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the SeNB | YES | reject |
| E-RABs Admitted To Be Added List | | 1 | | | YES | ignore |
| >E-RABs Admitted To Be Added Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>CHOICE Bearer Option | М | | | | | |
| >>>SCG Bearer | | | | | | |
| >>>E-RAB ID | M | | 9.2.23 | | _ | _ |
| >>>S1 DL GTP Tunnel Endpoint | M | | GTP Tunnel Endpoint 9.2.1 | SeNB endpoint of the S1 transport bearer. For delivery of DL PDUs. | _ | - |
| >>>DL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of DL PDUs | _ | _ |
| >>>>UL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of UL PDUs | - | _ |
| >>>Split Bearer | | | | | | |
| >>>E-RAB ID | M | | 9.2.23 | | _ | _ |
| >>>SeNB GTP Tunnel Endpoint | M | | GTP Tunnel Endpoint 9.2.1 | Endpoint of the X2 transport bearer at the SeNB. | _ | - |
| E-RABs Not Admitted List | 0 | | E-RAB List 9.2.28 | A value for E-RAB ID shall only be present once in E- RABs Admitted List IE and in E-RABs Not Admitted List IE. | YES | ignore |
| SeNB to MeNB Container | М | | OCTET STRING | Includes the SCG- Config message as defined in TS 36.331 [9] | YES | reject |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| GW Transport Layer Address | 0 | | BIT STRING (1160,) | Indicating GW Transport Layer Address. | YES | ignore |
| SIPTO L-GW Transport Layer Address | 0 | | BIT STRING (1160,) | Indicating SIPTO L- GW Transport Layer Address. | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | reject |
| SeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the SeNB | YES | reject |
| Tunnel Information for BBF | 0 | | Tunnel Information 9.2.89 | Indicating eNB's Local IP Address assigned by the broadband access provider, UDP port Number. | YES | ignore |

| Range bound | Explanation |
|----------------|-------------------------------------|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 |

9.1.3.3 SENB ADDITION REQUEST REJECT

This message is sent by the SeNB to inform the MeNB that the SeNB Addition Preparation has failed.

Direction: SeNB \rightarrow MeNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------|----------|-------|--------------------------------------|--------------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB | YES | reject |
| SeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the SeNB | YES | reject |
| Cause | M | | 9.2.6 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | reject |
| SeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the SeNB | YES | reject |

9.1.3.4 SENB RECONFIGURATION COMPLETE

This message is sent by the MeNB to the SeNB to indicate whether the configuration requested by the SeNB was applied by the UE.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------------------|----------|-------|--------------------------------------|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | ignore |
| MeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB | YES | reject |
| SeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the SeNB | YES | reject |
| Response Information | M | | | | YES | ignore |
| >CHOICE Response Type | M | | | | | |
| >>Configuration successfully applied | | | | | | |
| >>>MeNB to SeNB Container | 0 | | OCTET STRING | Includes the SCG- ConfigInfo message as defined in TS 36.331 [9] | - | - |
| >>Configuration rejected by the MeNB | | | | | | |
| >>>Cause | M | | 9.2.6 | | ı | - |
| >>>MeNB to SeNB Container | 0 | | OCTET STRING | Includes the SCG- ConfigInfo message as defined in TS 36.331 [9] | 1 | - |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | reject |
| SeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the SeNB | YES | reject |

9.1.3.5 SENB MODIFICATION REQUEST

This message is sent by the MeNB to the SeNB to request the preparation to modify SeNB resources for a specific UE.

| IE/Group Name | Presence | Range | IE type and | Semantics | Criticality | Assigned |
|-----------------------------|----------|---|-----------------|----------------------------------|-------------|-------------|
| - | | J | reference | description | | Criticality |
| Message Type | M | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE | Allocated at the | YES | reject |
| | | | X2AP ID | MeNB | | |
| | | | 9.2.24 | | | |
| SeNB UE X2AP ID | М | | eNB UE | Allocated at the | YES | reject |
| | | | X2AP ID | SeNB | | |
| Cause | M | | 9.2.24 9.2.6 | | YES | ignore |
| SCG Change Indication | O | | 9.2.73 | | YES | ignore |
| Serving PLMN | 0 | | PLMN | The serving PLMN | YES | ignore |
| Serving r Livin | O | | Identity | of the SCG in the | 123 | ignore |
| | | | 9.2.4 | SeNB. | | |
| UE Context Information | | 01 | 0.2.1 | COND. | YES | reject |
| >UE Security Capabilities | 0 | | 9.2.29 | | - | - |
| >SeNB Security Key | 0 | | 9.2.72 | | _ | _ |
| >SeNB UE Aggregate | 0 | | UE | | _ | _ |
| Maximum Bit Rate | | | Aggregate | | | |
| | | | Maximum Bit | | | |
| | | | Rate | | | |
| | | | 9.2.12 | | | |
| >E-RABs To Be Added List | | 01 | | | _ | _ |
| >>E-RABs To Be Added | | 1 <maxnoof< td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxnoof<> | | | EACH | ignore |
| Item | | Bearers> | | | 271011 | ignore |
| >>>CHOICE Bearer | М | 200.0.0 | | | | |
| Option | | | | | | |
| >>>SCG Bearer | | | | | | |
| >>>>E-RAB ID | M | | 9.2.23 | | _ | _ |
| >>>>E-RAB Level | M | | 9.2.9 | Includes necessary | _ | _ |
| QoS Parameters | | | | QoS parameters | | |
| >>>>DL | 0 | | 9.2.5 | | _ | _ |
| Forwarding | | | | | | |
| >>>>S1 UL GTP | М | | GTP Tunnel | SGW endpoint of | _ | _ |
| Tunnel Endpoint | | | Endpoint | the S1 transport | | |
| | | | 9.2.1 | bearer. For delivery of UL PDUs. | | |
| >>>>Correlation ID | 0 | | Correlation | OI OL PDOS. | _ | _ |
| >>>>Correlation ib | O | | ID | | _ | _ |
| | | | 9.2.84 | | | |
| >>>>SIPTO | 0 | | Correlation | | _ | _ |
| Correlation ID | | | ID | | | |
| 001101011112 | | | 9.2.84 | | | |
| >>>Split Bearer | | | | | | |
| >>>>E-RAB ID | M | | 9.2.23 | | _ | _ |
| >>>>E-RAB Level | М | | 9.2.9 | Includes necessary | | _ |
| QoS Parameters | | | | QoS parameters | | |
| >>>>MeNB GTP | M | | GTP Tunnel | MeNB endpoint of | _ | _ |
| Tunnel Endpoint | | | Endpoint | the X2 transport | | |
| | | | 9.2.1 | bearer. For delivery | | |
| | | | | of UL PDUs. | | |
| >E-RABs To Be Modified List | | 01 | | | _ | _ |
| >>E-RABs To Be | | 1 <maxnoof< td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxnoof<> | | | EACH | ignore |
| Modified Item | | Bearers> | | | LACIT | ignore |
| >>>CHOICE Bearer | М | 200.0.0 | | | | |
| Option | '*' | | | | | |
| >>>SCG Bearer | | | | | | |
| >>>>E-RAB ID | М | | 9.2.23 | | _ | _ |
| >>>>E-RAB Level | 0 | | 9.2.9 | Includes QoS | _ | _ |
| QoS Parameters | | | | parameters to be | | |
| | | | | modified | | |
| >>>>S1 UL GTP | 0 | | GTP Tunnel | SGW endpoint of | | |
| Tunnel Endpoint | | | Endpoint | the S1 transport | | |
| | | | 9.2.1 | bearer. For delivery | | |
| | | | | of UL PDUs. | | |

| >>>Split Bearer | | | | | | |
|---|---|--|---|--|------|--------|
| >>>>E-RAB ID | М | | 9.2.23 | | _ | - |
| >>>>E-RAB Level QoS Parameters | 0 | | 9.2.9 | Includes QoS parameters to be modified | - | ı |
| >>>>MeNB GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | MeNB endpoint of the X2 transport bearer. For delivery of UL PDUs. | - | - |
| >E-RABs To Be Released List | | 01 | | | - | _ |
| >>E-RABs To Be Released Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>>CHOICE Bearer Option | М | | | | | |
| >>>SCG Bearer | | | | | | |
| >>>>E-RAB ID | M | | 9.2.23 | 11. 10. 11. | | |
| >>>>DL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of DL PDUs | - | - |
| >>>>UL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer. used for forwarding of UL PDUs | - | - |
| >>>Split Bearer | | | | | | |
| >>>>E-RAB ID | M | | 9.2.23 | | _ | _ |
| >>>>DL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of DL PDUs | - | - |
| MeNB to SeNB Container | 0 | | OCTET STRING | Includes the SCG- ConfigInfo message as defined in TS 36.331 [9] | YES | ignore |
| CSG Membership Status | 0 | | 9.2.52 | | YES | reject |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | reject |
| SeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the SeNB | YES | reject |

| Range bound | Explanation |
|----------------|-------------------------------------|
| maxnoofBearers | Maximum no. of F-RABs. Value is 256 |

9.1.3.6 SENB MODIFICATION REQUEST ACKNOWLEDGE

This message is sent by the SeNB to confirm the MeNB's request to modify the SeNB resources for a specific UE.

| IE/Group Name | Presence | Range | IE type and | Semantics | Criticality | Assigned |
|--|----------|---|---------------------------------|--|-------------|-------------|
| | | | reference | description | \/50 | Criticality |
| Message Type | M | | 9.2.13 | A II t I - t | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB | YES | ignore |
| SeNB UE X2AP ID | М | | eNB UE X2AP ID | Allocated at the SeNB | YES | ignore |
| E-RABs Admitted List | | 0.4 | 9.2.24 | | YES | ianoro |
| >E-RABS Admitted List >E-RABS Admitted To Be | | 01 | | | TES | ignore |
| Added List >>E-RABs Admitted To Be | | 1 <maxnoof< td=""><td></td><td></td><td>EACH</td><td>ignoro</td></maxnoof<> | | | EACH | ignoro |
| Be Added Item | | Bearers> | | | EACH | ignore |
| >>>CHOICE Bearer Option | М | | | | | |
| >>>SCG Bearer | | | | | | |
| >>>>E-RAB ID | M | | 9.2.23 | | - | _ |
| >>>>S1 DL GTP Tunnel Endpoint | М | | GTP Tunnel Endpoint 9.2.1 | SeNB endpoint of the S1 transport bearer. For delivery of DL PDUs. | Ι | _ |
| >>>>DL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of DL PDUs | _ | - |
| >>>>UL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of UL PDUs | Ι | _ |
| >>>Split Bearer | | | | | | |
| >>>>E-RAB ID | M | | 9.2.23 | | _ | _ |
| >>>>SeNB GTP Tunnel Endpoint | M | | GTP Tunnel Endpoint 9.2.1 | Endpoint of the X2 transport bearer at the SeNB. | - | - |
| >E-RABs Admitted To Be Modified List | | 01 | | | _ | - |
| >>E-RABs Admitted To Be Modified Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>>CHOICE Bearer Option | М | | | | | |
| >>>SCG Bearer | | | | | | |
| >>>>E-RAB ID | М | | 9.2.23 | | _ | _ |
| >>>>S1 DL GTP Tunnel Endpoint | O | | GTP Tunnel Endpoint 9.2.1 | SeNB endpoint of the S1 transport bearer. For delivery of DL PDUs. | - | - |
| >>>Split Bearer | | | | | | |
| >>>>E-RAB ID | М | | 9.2.23 | | _ | _ |
| >>>>SeNB GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Endpoint of the X2 transport bearer at the SeNB. | - | - |

| >E-RABs Admitted To Be Released List | | 01 | | | - | _ |
|--|---|--|---|--|------|--------|
| >>E-RABs Admitted To Be Released Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>>CHOICE Bearer Option | М | | | | | |
| >>>SCG Bearer | | | | | | |
| >>>>E-RAB ID | M | | 9.2.23 | | _ | _ |
| >>>Split Bearer | | | | | | |
| >>>>E-RAB ID | M | | 9.2.23 | | _ | _ |
| E-RABs Not Admitted List | 0 | | E-RAB List 9.2.28 | A value for E-RAB ID shall only be present once in E-RABs Admitted List IE and in E- RABs Not Admitted List IE. | YES | ignore |
| SeNB to MeNB Container | 0 | | OCTET STRING | Includes the SCG-Config message as defined in TS 36.331 | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | ignore |
| SeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the SeNB | YES | Ignore |

| Range bound | Explanation | | |
|----------------|-------------------------------------|--|--|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 | | |

9.1.3.7 SENB MODIFICATION REQUEST REJECT

This message is sent by the SeNB to inform the MeNB that the MeNB initiated SeNB Modification Preparation has failed.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------|----------|-------|--------------------------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB | YES | ignore |
| SeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the SeNB | YES | ignore |
| Cause | M | | 9.2.6 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | ignore |
| SeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the SeNB | YES | ignore |

9.1.3.8 SENB MODIFICATION REQUIRED

This message is sent by the SeNB to the MeNB to request the modification of SeNB resources for a specific UE.

Direction: SeNB \rightarrow MeNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------------|----------|--|---|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | • | YES | reject |
| MeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB | YES | reject |
| SeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the SeNB | YES | reject |
| Cause | M | | 9.2.6 | | YES | ignore |
| SCG Change Indication | 0 | | 9.2.73 | | YES | ignore |
| E-RABs To Be Released List | | 01 | | | YES | ignore |
| >E-RABs To Be Released Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>E-RAB ID | M | | 9.2.23 | | _ | _ |
| >>Cause | М | | 9.2.6 | | _ | _ |
| SeNB to MeNB Container | 0 | | OCTET STRING | Includes the SCG- Config message as defined in TS 36.331 [9] | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | reject |
| SeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the SeNB | YES | reject |

| Range bound | Explanation | | | |
|----------------|-------------------------------------|--|--|--|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 | | | |

9.1.3.9 SENB MODIFICATION CONFIRM

This message is sent by the MeNB to inform the SeNB about the successful modification.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------------|----------|-------|---|---|-------------|----------------------|
| Message Type | М | | 9.2.13 | _ | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB | YES | ignore |
| SeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the SeNB | YES | ignore |
| MeNB to SeNB Container | 0 | | OCTET STRING | Includes the SCG-ConfigInfo message as defined in TS 36.331 | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | ignore |
| SeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the SeNB | YES | ignore |

| Range bound | Explanation | | | |
|----------------|-------------------------------------|--|--|--|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 | | | |

9.1.3.10 SENB MODIFICATION REFUSE

This message is sent by the MeNB to inform the SeNB that the SeNB initiated SeNB Modification has failed.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------------|----------|-------|---|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB | YES | ignore |
| SeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the SeNB | YES | ignore |
| Cause | M | | 9.2.6 | | YES | ignore |
| MeNB to SeNB Container | 0 | | OCTET STRING | Includes the SCG-ConfigInfo message as defined in TS 36.331 | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | ignore |
| SeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the SeNB | YES | ignore |

9.1.3.11 SENB RELEASE REQUEST

This message is sent by the MeNB to the SeNB to request the release of resources.

Direction: MeNB \rightarrow SeNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|--|---|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | • | YES | ignore |
| MeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB | YES | reject |
| SeNB UE X2AP ID | 0 | | eNB UE X2AP ID 9.2.24 | Allocated at the SeNB | YES | reject |
| Cause | 0 | | 9.2.6 | | YES | ignore |
| E-RABs To Be Released List | | 01 | | | YES | ignore |
| > E-RABs To Be Released Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>CHOICE Bearer Option | M | | | | | |
| >>>SCG Bearer | | | | | | |
| >>>E-RAB ID | M | | 9.2.23 | | _ | _ |
| >>>>UL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of UL PDUs | - | - |
| >>>>DL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer. used for forwarding of DL PDUs | - | - |
| >>>Split Bearer | | | | | | |
| >>>E-RAB ID | M | | 9.2.23 | | _ | _ |
| >>>>DL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer. used for forwarding of DL PDUs | - | - |
| UE Context Kept Indicator | 0 | | 9.2.85 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | reject |
| SeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the SeNB | YES | reject |
| MakeBeforeBreak Indicator | 0 | | ENUMERAT ED (True, ,) | | YES | ignore |

| Range bound | Explanation | | | |
|----------------|-------------------------------------|--|--|--|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 | | | |

9.1.3.12 SENB RELEASE REQUIRED

This message is sent by the SeNB to request the release of all resources for a specific UE at the SeNB.

Direction: SeNB \rightarrow MeNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------------|----------|-------|--------------------------------------|-----------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB | YES | reject |
| SeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the SeNB | YES | reject |
| Cause | M | | 9.2.6 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | reject |
| SeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the SeNB | YES | reject |

9.1.3.13 SENB RELEASE CONFIRM

This message is sent by the MeNB to confirm the release of all resources for a specific UE at the SeNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|--|---|--|-------------|----------------------|
| Message Type | M | | 9.2.13 | • | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB | YES | ignore |
| SeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the SeNB | YES | ignore |
| E-RABs to be Released List | | 01 | | | YES | ignore |
| >E-RABs To Be Released Item | | 1 <maxnoof Bearers></maxnoof | | | - | _ |
| >>CHOICE Bearer Option >>>SCG Bearer | M | | | | | |
| >>>SCG Bearer | M | | 9.2.23 | | | _ |
| >>>UL Forwarding GTP Tunnel Endpoint | O | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of UL PDUs | - | _ |
| >>>>DL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of DL PDUs | - | _ |
| >>>Split Bearer | | | | DE I DOS | | |
| >>>E-RAB ID | М | | 9.2.23 | | _ | _ |
| >>>>DL Forwarding GTP Tunnel Endpoint | Ö | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of DL PDUs | - | - |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | ignore |
| SeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the SeNB | YES | ignore |

| Range bound | Explanation |
|----------------|-------------------------------------|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 |

9.1.3.14 SENB COUNTER CHECK REQUEST

This message is sent by the SeNB to request the verification of the value of the PDCP COUNTs associated with SCG bearers established in the SeNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|--|---|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | • | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB | YES | ignore |
| SeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the SeNB | YES | ignore |
| E-RABs Subject to Counter Check List | | 1 | | | YES | ignore |
| >E-RABs Subject to Counter Check Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>E-RAB ID | M | | 9.2.23 | | - | - |
| >>UL COUNT | М | INTEGER(0 4294967295) | | Indicates the value of uplink COUNT associated to this E-RAB. | - | - |
| >>DL COUNT | М | INTEGER(0 4294967295) | | Indicates the value of downlink COUNT associated to this E-RAB. | - | - |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | ignore |
| SeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the SeNB | YES | ignore |

| Range bound | Explanation |
|----------------|-------------------------------------|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 |

9.1.4 Messages for E-UTRAN-NR Dual Connectivity Procedures

9.1.4.1 SGNB ADDITION REQUEST

This message is sent by the MeNB to the en-gNB to request the preparation of resources for EN-DC operation for a specific UE

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|--------------------------------------|--|---|--|-------------|----------------------|
| Message Type | М | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID | Allocated at the MeNB | YES | reject |
| ND HE O | | | 9.2.24 | | \/50 | |
| NR UE Security Capabilities | M | | 9.2.107 | The OlderND while | YES | reject |
| SgNB Security Key | M | | 9.2.101 | The S-KgNB which is provided by the MeNB, see TS 33.401 [18]. | YES | reject |
| SgNB UE Aggregate Maximum Bit Rate | М | | UE Aggregate Maximum Bit Rate 9.2.12 | The UE Aggregate Maximum Bit Rate is split into MeNB UE Aggregate Maximum Bit Rate and SgNB UE Aggregate Maximum Bit Rate which are enforced by MeNB and engNB respectively. | YES | reject |
| Selected PLMN | 0 | | PLMN Identity 9.2.4 | The selected PLMN of the SCG in the en-gNB. | YES | ignore |
| Handover Restriction List | 0 | | 9.2.3 | | YES | ignore |
| E-RABs To Be Added List | | 1 | | | YES | reject |
| >E-RABs To Be Added Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | reject |
| >>E-RAB ID | M | | 9.2.23 | | _ | |
| >>DRB ID | М | | 9.2.122 | | _ | |
| >>EN-DC Resource Configuration | M | | EN-DC Resource Configuratio n 9.2.108 | Indicates the PDCP and Lower Layer MCG/SCG configuration. | - | |
| >>CHOICE Resource Configuration | M | | | | | |
| >>>PDCP present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". | | |
| >>>>Full E-RAB Level QoS Parameters | M | | E-RAB Level QoS Parameters 9.2.9 | Includes the E-RAB level QoS parameters as received on S1- MME. | - | |
| >>>>Maximum MCG admittable E-RAB Level QoS Parameters | C- ifMCGand SCGprese nt_GBR | | GBR QoS Information 9.2.10 | Includes the GBR QoS Information admittable by the MCG. | - | |
| >>>>DL Forwarding | 0 | | 9.2.5 | | _ | |
| >>>>MeNB DL GTP TEID at MCG | C- ifMCGpres ent | | GTP Tunnel Endpoint 9.2.1 | MeNB endpoint of the X2-U transport bearer at MCG. For delivery of DL PDCP PDUs. | | |
| >>>S1 UL GTP Tunnel Endpoint | М | | GTP Tunnel Endpoint 9.2.1 | SGW endpoint of the S1-U transport bearer. For delivery of UL PDUs from the en-gNB. | - | |

| >>>PDCP not present in SN | | | This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "not present". | | |
|---|----------------------------------|--|---|-----|--------|
| >>>Requested SCG E-RAB Level QoS Parameters | М | E-RAB Level QoS Parameters 9.2.9 | Includes E-RAB level QoS parameters requested to be provided by the SCG. | - | |
| >>>>MeNB UL GTP TEID at PDCP | М | GTP Tunnel Endpoint 9.2.1 | MeNB endpoint of the X2-U transport bearer. For delivery of UL PDCP PDUs. | _ | |
| >>>>Secondary MeNB UL GTP TEID at PDCP | 0 | GTP Tunnel Endpoint 9.2.1 | MeNB endpoint of the X2-U transport bearer. For delivery of UL PDCP PDUs in case of PDCP duplication. | - | |
| >>>RLC Mode | M | RLC Mode 9.2.119 | Indicates the RLC mode. | _ | |
| >>>UL configuration | C- ifMCGand SCGprese nt | 9.2.118 | Information about UL usage in the engNB. | - | |
| MeNB to SgNB Container | М | OCTET STRING | Includes the CG- ConfigInfo message as defined in TS 38.331 [31]. | YES | reject |
| SgNB UE X2AP ID | 0 | en-gNB UE X2AP ID 9.2.100 | Allocated at the engNB. | YES | reject |
| Expected UE Behaviour | 0 | 9.2.70 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB. | YES | reject |
| Requested split SRBs | 0 | ENUMERAT ED (srb1, srb2, srb1&2,) | Indicates that resources for Split SRB are requested. | YES | reject |
| MeNB Resource Coordination Information | 0 | 9.2.116 | Information used to coordinate resources utilisation between MeNB and en-gNB. | YES | ignore |
| SGNB Addition Trigger Indication | 0 | ENUMERAT ED (SN change, inter-eNB HO, intra- eNB HO,) | This IE indicates the trigger for SGNB Addition procedure. | YES | reject |
| Subscriber Profile ID for RAT/Frequency priority | 0 | 9.2.25 | | YES | ignore |
| MeNB Cell ID | M | ECGI 9.2.14 | Indicates the cell ID for PCell in MeNB. | YES | reject |

| Range bound | Explanation |
|----------------|--------------------------------------|
| maxnoofBearers | Maximum no. of F-RABs. Value is 256. |

| Condition | Explanation |
|--------------------------|---|
| ifMCGandSCGpresent | This IE shall be present if, for the E-RAB requested to be added, the MCG resources and SCG resources IEs in the EN-DC Resource Configuration IE are set to the value "present". |
| ifMCGpresent | This IE shall be present if, for the E-RAB requested to be added, the <i>MCG resources</i> IE in the <i>EN-DC Resource Configuration</i> IE is set to the value "present". |
| C-ifMCGandSCGpresent_GBR | This IE shall be present if, for the E-RAB requested to be added, the MCG resources and SCG resources IEs in the EN-DC Resource Configuration IE are set to the value "present", and GBR QoS Information IE is present in Full E-RAB Level QoS Parameters IE. |

9.1.4.2 SGNB ADDITION REQUEST ACKNOWLEDGE

This message is sent by the en-gNB to confirm the MeNB about the SgNB addition preparation.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|---|---|---|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | reject |
| SgNB UE X2AP ID | M | | en-gNB UE X2AP ID 9.2.100 | Allocated at the engNB. | YES | reject |
| E-RABs Admitted To Be Added List | | 1 | | | YES | ignore |
| >E-RABs Admitted To Be Added Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>E-RAB ID | M | | 9.2.23 | | _ | |
| >>EN-DC Resource Configuration | M | | EN-DC Resource Configuration 9.2.108 | Indicates the PDCP and Lower Layer MCG/SCG configuration. | _ | |
| >>CHOICE Resource Configuration | М | | | | | |
| >>>PDCP present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". | | |
| >>>S1 DL GTP TEID at the SgNB | M | | GTP Tunnel Endpoint 9.2.1 | en-gNB endpoint of the S1 transport bearer. For delivery of DL PDUs. | _ | |
| >>>>SgNB UL GTP TEID at PDCP | C- ifMCGpres ent | | GTP Tunnel Endpoint 9.2.1 | en-gNB endpoint of the X2-U transport bearer at PDCP. For delivery of UL PDCP PDUs. | _ | |
| >>>RLC Mode | C- ifMCGpres ent | | RLC Mode 9.2.119 | Indicates the RLC mode. | - | |
| >>>>DL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of DL PDUs | - | |
| >>>UL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of UL PDUs | - | |
| >>>Requested MCG E-RAB Level QoS Parameters | C- ifMCGand SCGprese nt_GBRpr esent | | E-RAB Level QoS Parameters 9.2.9 | Includes E-RAB level QoS parameters requested to be provided by the MCG. | - | |
| >>>UL configuration | C- ifMCGand SCGprese nt | | 9.2.118 | Information about UL usage in the MeNB. | - | |
| >>>PDCP not present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "not present". | | |

| O NID DI OTD | T | OTD T | l O ND I i i i | l | |
|----------------------------|---|----------------------|--------------------------|-----|--------|
| >>>>SgNB DL GTP | М | GTP Tunne | 1 0 1 | _ | _ |
| TEID at SCG | | Endpoint 9.2 | | | |
| | | | bearer at the SCG. | | |
| | | | For delivery of DL | | |
| | | | PDCP PDUs. | | |
| >>>Secondary | 0 | GTP Tunne | SgNB endpoint of | _ | _ |
| SgNB DL GTP TEID | | Endpoint 9.2 | 2.1 the X2-U transport | | |
| at SCG | | | bearer at the SCG. | | |
| | | | For delivery of DL | | |
| | | | PDCP PDUs in | | |
| | | | case of PDCP | | |
| | | | duplication | | |
| E-RABs Not Admitted List | 0 | E-RAB List | A value for <i>E-RAB</i> | YES | ignore |
| E-NADS NOt Admitted List | | 9.2.28 | ID shall only be | ILS | ignore |
| | | 9.2.20 | present once in E- | | |
| | | | | | |
| | | | RABs Admitted List | | |
| | | | IE and in <i>E-RAB</i> s | | |
| | | | Not Admitted List | | |
| | | | IE. | | |
| SgNB to MeNB Container | M | OCTET | Includes the CG- | YES | reject |
| | | STRING | Config message as | | |
| | | | defined in TS | | |
| | | | 38.331[31]. | | |
| Criticality Diagnostics | 0 | 9.2.7 | | YES | ignore |
| MeNB UE X2AP ID | 0 | Extended el | NB Allocated at the | YES | reject |
| Extension | | UE X2AP ID | MeNB | | - |
| | | 9.2.86 | | | |
| Admitted split SRBs | 0 | ENUMERA ⁻ | TE Indicates admitted | YES | reject |
| · | | D (srb1, srb | 2. SRBs | | , |
| | | srb1&2,) | , | | |
| SgNB Resource Coordination | 0 | 9.2.117 | Information used to | YES | ignore |
| Information | _ | | coordinate | | .5 |
| | | | resources utilisation | | |
| | | | between en-gNB | | |
| | | | and MeNB. | | |
| RRC config indication | 0 | ENUMERA ⁻ | | YES | reject |
| Title coming maleation | ~ | D (full config | | 'LO | reject |
| | | delta | used at the en-gNB. | | |
| | | | used at the en-givb. | | |
| | | config,) | | | |

| Range bound | Explanation |
|----------------|-------------------------------------|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 |

| Condition | Explanation |
|---------------------------------|--|
| ifMCGpresent | This IE shall be present if, for the E-RAB admitted to be added, the |
| | MCG resources IE in the EN-DC Resource Configuration IE is set to |
| | the value "present". |
| ifMCGandSCGpresent | This IE shall be present if, for the E-RAB admitted to be added, the |
| | MCG resources and SCG resources IEs in the EN-DC Resource |
| | Configuration IE are set to the value "present". |
| C-ifMCGandSCGpresent_GBRpresent | This IE shall be present if, for the E-RAB admitted to be added, the |
| | MCG resources and SCG resources IEs in the EN-DC Resource |
| | Configuration IE are set to the value "present", and the GBR QoS |
| | Information IE is present in the Requested MCG E-RAB Level QoS |
| | Parameters IE. |

9.1.4.3 SGNB ADDITION REQUEST REJECT

This message is sent by the en-gNB to inform the MeNB that the SgNB Addition Preparation has failed.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------|----------|-------|--------------------------------------|--------------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | reject |
| SgNB UE X2AP ID | 0 | | en-gNB UE X2AP ID 9.2.100 | Allocated at the en-gNB. | YES | reject |
| Cause | М | | 9.2.6 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB. | YES | reject |

9.1.4.4 SGNB RECONFIGURATION COMPLETE

This message is sent by the MeNB to the en-gNB to indicate whether the configuration requested by the en-gNB was applied by the UE.

Direction: MeNB \rightarrow en-gNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|-------|--------------------------------------|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | ignore |
| MeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | reject |
| SgNB UE X2AP ID | M | | en-gNB UE X2AP ID 9.2.100 | Allocated at the engNB. | YES | reject |
| Response Information | M | | | | YES | ignore |
| >CHOICE Response Type | M | | | | | |
| >>Configuration successfully applied | | | | | | |
| >>>MeNB to SgNB Container | 0 | | OCTET STRING | Includes the NR RRCReconfiguration Complete message as defined in TS 38.331 [31]. | - | |
| >>Configuration rejected | | | | | | |
| >>>Cause | M | | 9.2.6 | | - | |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | reject |

9.1.4.5 SGNB MODIFICATION REQUEST

This message is sent by the MeNB to the en-gNB to request the preparation to modify en-gNB resources for a specific UE, to query for the current SCG configuration, or to provide the S-RLF-related information to the en-gNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|--------------------------------------|--|---|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | - | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | reject |
| SgNB UE X2AP ID | М | | en-gNB UE X2AP ID 9.2.100 | Allocated at the engNB. | YES | reject |
| Cause | М | | 9.2.6 | | YES | ignore |
| Selected PLMN | 0 | | PLMN Identity 9.2.4 | The selected PLMN of the SCG in the en-gNB. | YES | ignore |
| Handover Restriction List | 0 | | 9.2.3 | | YES | ignore |
| SCG Configuration Query | 0 | | 9.2.103 | | YES | ignore |
| UE Context Information | | 01 | | | YES | reject |
| >NR UE Security Capabilities | 0 | | 9.2.107 | | _ | |
| >SgNB Security Key | 0 | | 9.2.101 | | - | |
| >SgNB UE Aggregate Maximum Bit Rate | 0 | | UE Aggregate Maximum Bit Rate 9.2.12 | | _ | |
| >E-RABs To Be Added List | | 01 | | | _ | |
| >>E-RABs To Be Added Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>>E-RAB ID | M | | 9.2.23 | | _ | |
| >>>DRB ID | M | | 9.2.122 | | _ | |
| >>>EN-DC Resource Configuration | M | | EN-DC Resource Configuratio n 9.2.108 | Indicates the PDCP and Lower Layer MCG/SCG configuration. | _ | |
| >>>CHOICE Resource Configuration | М | | 3.200 | | | |
| >>>PDCP present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". | - | |
| >>>>Full E-RAB Level QoS Parameters | M | | E-RAB Level QoS Parameters 9.2.9 | Includes E-RAB level QoS parameters as received on S1- MME. | _ | |
| >>>>Maximum MCG admittable E- RAB Level QoS Parameters | C- ifMCGand SCGprese nt_GBR | | GBR QoS Information 9.2.10 | Includes the GBR QoS Information admittable by the MCG. | _ | |
| >>>>DL Forwarding | 0 | | 9.2.5 | | _ | |
| >>>>MeNB DL GTP TEID at MCG | C- ifMCGpres ent | | GTP Tunnel Endpoint 9.2.1 | MeNB endpoint of the X2-U transport bearer at MCG. For delivery of DL PDCP PDUs. | _ | |
| >>>>S1 UL GTP Tunnel Endpoint | М | | GTP Tunnel Endpoint 9.2.1 | SGW endpoint of the S1-U transport bearer. For delivery of UL PDUs from the en-gNB. | _ | |

| >>>PDCP not | | | | This choice tag is | | |
|---|----------|---|--|--|-----------|--------|
| present in SN | | | | used if the PDCP at | | |
| procent in ort | | | | SgNB IE in the EN- | | |
| | | | | DC Resource | | |
| | | | | | | |
| | | | | Configuration IE is | | |
| | | | | set to the value | | |
| | | | | "present". | | |
| >>>>Requested | М | | E-RAB Level | Includes necessary | ı | |
| SCG E-RAB Level | | | QoS | E-RAB level QoS | | |
| QoS Parameters | | | Parameters | | | |
| Q05 Parameters | | | | parameters | | |
| | | | 9.2.9 | requested to be | | |
| | | | | provided by the | | |
| | | | | SCG. | | |
| >>>>MeNB UL | М | | GTP Tunnel | MeNB endpoint of | _ | |
| GTP TEID at PDCP | | | Endpoint | the X2-U transport | | |
| 311 1212 at 1 201 | | | 9.2.1 | bearer. For delivery | | |
| | | | 9.2.1 | | | |
| | | | | of UL PDCP PDUs. | | |
| >>>>Secondary | 0 | | GTP Tunnel | MeNB endpoint of | _ | |
| MeNB UL GTP | | | Endpoint | the X2-U transport | | |
| TEID at PDCP | | | 9.2.1 | bearer. For delivery | | |
| | | | | of UL PDCP PDUs | | |
| | | | | in case of PDCP | | |
| | | | | | | |
| | . | | | duplication. | | |
| >>>>RLC Mode | M | | RLC Mode | Indicates the RLC | _ | |
| | | | 9.2.119 | mode. | | |
| >>>>UL | C- | | 9.2.118 | Information about | _ | |
| configuration | ifMCGand | | 0.2.110 | | | |
| Comiguration | | | | UL usage in the en- | | |
| | SCGprese | | | gNB. | | |
| | nt | | | | | |
| >E-RABs To Be Modified | | 01 | | | _ | |
| List | | | | | | |
| | | | | | | |
| >>E-RABs To Be | | 1 <maxnoof< td=""><td></td><td></td><td>FACH</td><td>ignore</td></maxnoof<> | | | FACH | ignore |
| >>E-RABs To Be | | 1 <maxnoof< td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxnoof<> | | | EACH | ignore |
| Modified Item | | 1 <maxnoof Bearers></maxnoof | 0.000 | | | ignore |
| Modified Item >>>E-RAB ID | M | | 9.2.23 | | EACH - | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource | M M | | EN-DC | Indicates the PDCP | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource | | | | Indicates the PDCP and Lower Layer | | ignore |
| Modified Item >>>E-RAB ID | | | EN-DC Resource | and Lower Layer | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource | | | EN-DC Resource Configuratio | and Lower Layer MCG/SCG | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource | | | EN-DC Resource Configuratio n | and Lower Layer | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration | M | | EN-DC Resource Configuratio | and Lower Layer MCG/SCG | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource | | | EN-DC Resource Configuratio n | and Lower Layer MCG/SCG | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration | M | | EN-DC Resource Configuratio n | and Lower Layer MCG/SCG | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration | M | | EN-DC Resource Configuratio n | and Lower Layer MCG/SCG | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in | M | | EN-DC Resource Configuratio n | and Lower Layer MCG/SCG configuration. This choice tag is | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration | M | | EN-DC Resource Configuratio n | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in | M | | EN-DC Resource Configuratio n | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the EN- | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in | M | | EN-DC Resource Configuratio n | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in | M | | EN-DC Resource Configuratio n | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the EN- | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in | M | | EN-DC Resource Configuratio n | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in | M | | EN-DC Resource Configuratio n | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN | M | | EN-DC Resource Configuratio n 9.2.108 | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB | M | | EN-DC Resource Configuratio n 9.2.108 | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB Level QoS | M | | EN-DC Resource Configuratio n 9.2.108 | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB level QoS | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB | M | | EN-DC Resource Configuratio n 9.2.108 E-RAB Level QoS Parameters | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB level QoS parameters to be | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB Level QoS | M | | EN-DC Resource Configuratio n 9.2.108 | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB level QoS | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB Level QoS | M | | EN-DC Resource Configuratio n 9.2.108 E-RAB Level QoS Parameters | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB level QoS parameters to be | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB Level QoS | M | | EN-DC Resource Configuratio n 9.2.108 E-RAB Level QoS Parameters | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB level QoS parameters to be modified as received on S1- | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB Level QoS Parameters | M | | EN-DC Resource Configuratio n 9.2.108 E-RAB Level QoS Parameters 9.2.9 | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB level QoS parameters to be modified as received on S1-MME | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB Level QoS Parameters >>>>Maximum | M | | EN-DC Resource Configuratio n 9.2.108 E-RAB Level QoS Parameters 9.2.9 E-RAB Level | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB level QoS parameters to be modified as received on S1-MME Includes the E-RAB | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB Level QoS Parameters >>>>Maximum MCG admittable E- | M | | EN-DC Resource Configuratio n 9.2.108 E-RAB Level QoS Parameters 9.2.9 E-RAB Level QoS | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB level QoS parameters to be modified as received on S1-MME Includes the E-RAB Level QoS | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB Level QoS Parameters >>>>Maximum MCG admittable E- RAB Level QoS | M | | EN-DC Resource Configuratio n 9.2.108 E-RAB Level QoS Parameters 9.2.9 E-RAB Level QoS Parameters | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB level QoS parameters to be modified as received on S1-MME Includes the E-RAB Level QoS parameters | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB Level QoS Parameters >>>>Maximum MCG admittable E- | M | | EN-DC Resource Configuratio n 9.2.108 E-RAB Level QoS Parameters 9.2.9 E-RAB Level QoS | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB level QoS parameters to be modified as received on S1-MME Includes the E-RAB Level QoS parameters admittable by the | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB Level QoS Parameters >>>>Maximum MCG admittable E- RAB Level QoS | M | | EN-DC Resource Configuratio n 9.2.108 E-RAB Level QoS Parameters 9.2.9 E-RAB Level QoS Parameters | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB level QoS parameters to be modified as received on S1-MME Includes the E-RAB Level QoS parameters admittable by the | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB Level QoS Parameters >>>>Maximum MCG admittable E- RAB Level QoS Parameters | M M | | EN-DC Resource Configuratio n 9.2.108 E-RAB Level QoS Parameters 9.2.9 E-RAB Level QoS Parameters 9.2.9 | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB level QoS parameters to be modified as received on S1-MME Includes the E-RAB Level QoS parameters admittable by the MCG | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB Level QoS Parameters >>>>Maximum MCG admittable E- RAB Level QoS Parameters >>>>MeNB GTP | M | | EN-DC Resource Configuratio n 9.2.108 E-RAB Level QoS Parameters 9.2.9 E-RAB Level QoS Parameters 9.2.9 GTP Tunnel | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB level QoS parameters to be modified as received on S1-MME Includes the E-RAB Level QoS parameters admittable by the MCG MeNB endpoint of | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB Level QoS Parameters >>>>Maximum MCG admittable E- RAB Level QoS Parameters | M M | | EN-DC Resource Configuratio n 9.2.108 E-RAB Level QoS Parameters 9.2.9 E-RAB Level QoS Parameters 9.2.9 GTP Tunnel Endpoint | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB level QoS parameters to be modified as received on S1-MME Includes the E-RAB Level QoS parameters admittable by the MCG MeNB endpoint of the X2-U transport | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB Level QoS Parameters >>>>Maximum MCG admittable E- RAB Level QoS Parameters >>>>MeNB GTP | M M | | EN-DC Resource Configuratio n 9.2.108 E-RAB Level QoS Parameters 9.2.9 E-RAB Level QoS Parameters 9.2.9 GTP Tunnel | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB level QoS parameters to be modified as received on S1-MME Includes the E-RAB Level QoS parameters admittable by the MCG MeNB endpoint of the X2-U transport bearer at MCG. For | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB Level QoS Parameters >>>>Maximum MCG admittable E- RAB Level QoS Parameters >>>>MeNB GTP | M M | | EN-DC Resource Configuratio n 9.2.108 E-RAB Level QoS Parameters 9.2.9 E-RAB Level QoS Parameters 9.2.9 GTP Tunnel Endpoint | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB level QoS parameters to be modified as received on S1-MME Includes the E-RAB Level QoS parameters admittable by the MCG MeNB endpoint of the X2-U transport | | ignore |
| Modified Item >>>E-RAB ID >>>EN-DC Resource Configuration >>>CHOICE Resource Configuration >>>PDCP present in SN >>>>Full E-RAB Level QoS Parameters >>>>Maximum MCG admittable E- RAB Level QoS Parameters >>>>MeNB GTP | M M | | EN-DC Resource Configuratio n 9.2.108 E-RAB Level QoS Parameters 9.2.9 E-RAB Level QoS Parameters 9.2.9 GTP Tunnel Endpoint | and Lower Layer MCG/SCG configuration. This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". Includes E-RAB level QoS parameters to be modified as received on S1-MME Includes the E-RAB Level QoS parameters admittable by the MCG MeNB endpoint of the X2-U transport bearer at MCG. For | | ignore |

| >>>>S1 UL GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | SGW endpoint of the S1-U transport bearer. For delivery of UL PDUs from the en-gNB. | _ | |
|---|---|--|---|--|------|--------|
| >>>>PDCP not present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the ENDCP Resource Configuration IE is set to the value "not present". | | |
| >>>>Requested SCG E-RAB Level QoS Parameters | 0 | | E-RAB Level QoS Parameters 9.2.9 | Includes E-RAB level QoS parameters requested to be provided by the SCG. | - | |
| >>>>MeNB UL GTP TEID at PDCP | 0 | | GTP Tunnel Endpoint 9.2.1 | MeNB endpoint of the X2-U transport bearer. For delivery of UL PDCP PDUs. | - | |
| >>>>UL configuration | 0 | | 9.2.118 | Information about UL usage in the engNB. | - | - |
| >E-RABs To Be Released List | | 01 | | | _ | |
| >>E-RABs To Be Released Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>E-RAB ID | M | | 9.2.23 | | 1 | |
| >>>EN-DC Resource Configuration | M | | EN-DC Resource Configuratio n 9.2.108 | Indicates the PDCP and Lower Layer MCG/SCG configuration. | _ | |
| >>>CHOICE Resource Configuration | М | | | | | |
| >>>>PDCP present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". | | |
| >>>>DL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of DL PDUs | I | |
| >>>>UL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer. used for forwarding of UL PDUs | _ | |
| >>>>PDCP not present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the ENDCP Resource Configuration IE is set to the value "not present". | | |
| >Subscriber Profile ID for RAT/Frequency priority | 0 | | 9.2.25 | | - | - |
| MeNB to SgNB Container | 0 | | OCTET STRING | Includes the CG- ConfigInfo message as defined in TS 38.331 [31]. | YES | reject |

| MeNB UE X2AP ID Extension | 0 | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | reject |
|---|---|--|---|-----|--------|
| MeNB Resource Coordination Information | 0 | 9.2.116 | Information used to coordinate resources utilisation between MeNB and en-gNB. | YES | ignore |
| Requested split SRBs | 0 | ENUMERAT ED (srb1, srb2, srb1&2,) | Indicates that resources for Split SRB are requested. | YES | ignore |
| Requested split SRBs release | 0 | ENUMERAT ED (srb1, srb2, srb1&2,) | Indicates that resources for Split SRB are requested to be released. | YES | ignore |

| Range bound | Explanation |
|----------------|-------------------------------------|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 |

| Condition | Explanation |
|--------------------------|---|
| ifMCGandSCGpresent | This IE shall be present if, for the E-RAB requested to be added, the MCG resources and SCG resources IEs in the EN-DC Resource Configuration IE are set to the value "present". |
| ifMCGpresent | This IE shall be present if, for the E-RAB requested to be added, the MCG resources IE in the EN-DC Resource Configuration IE is set to the value "present". |
| C-ifMCGandSCGpresent_GBR | This IE shall be present if, for the E-RAB requested to be added, the MCG resources and SCG resources IEs in the EN-DC Resource Configuration IE are set to the value "present", and GBR QoS Information IE is present in Full E-RAB Level QoS Parameters IE. |

9.1.4.6 SGNB MODIFICATION REQUEST ACKNOWLEDGE

This message is sent by the en-gNB to confirm the MeNB's request to modify the en-gNB resources for a specific UE.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|---|---|---|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | ignore |
| SgNB UE X2AP ID | М | | en-gNB UE X2AP ID 9.2.100 | Allocated at the engns. | YES | ignore |
| E-RABs Admitted List | | 01 | | | YES | ignore |
| >E-RABs Admitted To Be Added List | | 1 | | | _ | |
| >>E-RABs Admitted To Be Added Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>>E-RAB ID | M | | 9.2.23 | | 1 | |
| >>>EN-DC Resource Configuration | M | | EN-DC Resource Configuration 9.2.108 | Indicates the PDCP and Lower Layer MCG/SCG configuration. | 1 | |
| >>>CHOICE Resource Configuration | M | | | | | |
| >>>>PDCP present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". | | |
| >>>>S1 DL GTP TEID at the SgNB | M | | GTP Tunnel Endpoint 9.2.1 | SgNB endpoint of the S1 transport bearer. For delivery of DL PDUs. | - | |
| >>>>SgNB UL GTP TEID at PDCP | C- ifMCGpres ent | | GTP Tunnel Endpoint 9.2.1 | SgNB endpoint of the X2-U transport bearer at PDCP. For delivery of UL PDCP PDUs. | - | |
| >>>>RLC Mode | C- ifMCGpres ent | | RLC Mode 9.2.119 | Indicates the RLC mode. | _ | |
| >>>>DL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of DL PDUs | - | |
| >>>>UL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of UL PDUs | 1 | |
| >>>>Requested MCG E-RAB Level QoS Parameters | C- ifMCGand SCGprese nt_GBRpr esent | | E-RAB Level QoS Parameters 9.2.9 | Includes E-RAB level QoS parameters requested to be provided by the MCG. | - | |
| >>>>UL configuration | C- ifMCGand SCGprese nt | | 9.2.118 | Information about UL usage in the MeNB. | - | |
| >>>>PDCP not present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "not present". | | |
| >>>>SgNB DL GTP TEID at SCG | М | | GTP Tunnel Endpoint 9.2.1 | Endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs. | - | _ |

| _ | | 1 | 1 | | | ı |
|--|---|---|---|---|------|--------|
| >>>>Secondary SgNB DL GTP TEID at SCG | 0 | | GTP Tunnel Endpoint 9.2.1 | Endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs in case of PDCP duplication. | - | _ |
| >E-RABs Admitted To Be Modified List | | 01 | | | - | |
| >>E-RABs Admitted To Be Modified Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>>E-RAB ID | M | | 9.2.23 | | _ | |
| >>>EN-DC Resource Configuration | M | | EN-DC Resource Configuration 9.2.108 | Indicates the PDCP and Lower Layer MCG/SCG configuration. | - | |
| >>>CHOICE Resource Configuration | М | | | | | |
| >>>>PDCP present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "present". | | |
| >>>>S1 DL GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | SgNB endpoint of the S1 transport bearer. For delivery of DL PDUs. | - | |
| >>>>SgNB UL GTP TEID at PDCP | 0 | | GTP Tunnel Endpoint 9.2.1 | SgNB endpoint of the X2-U transport bearer at PDCP. For delivery of UL PDCP PDUs. | - | |
| >>>>Requested MCG E-RAB Level QoS Parameters | 0 | | E-RAB Level QoS Parameters 9.2.9 | Includes E-RAB level QoS parameters requested to be provided by the MCG. | - | |
| >>>>UL configuration | 0 | | 9.2.118 | Information about UL usage in the MeNB. | _ | _ |
| >>>PDCP not present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "not present". | | |
| >>>>SgNB DL GTP TEID at SCG | 0 | | GTP Tunnel Endpoint 9.2.1 | SgNB endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs. | - | |
| >E-RABs Admitted To Be Released List | | 01 | | | _ | |
| >>E-RABs Admitted To Be Released Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>>E-RAB ID | M | <u> </u> | 9.2.23 | | | |
| >>>EN-DC Resource Configuration | M | | EN-DC Resource Configuration 9.2.108 | Indicates the PDCP and Lower Layer MCG/SCG configuration. | _ | |
| >>>CHOICE Resource Configuration | M | | | Note: no further information contained in the IE container | | |

| E-RABs Not Admitted List | 0 | E-RAB List 9.2.28 | A value for E-RAB ID shall only be present once in E-RABs Admitted List IE and in E-RABs Not Admitted List IE. | YES | ignore |
|---|---|---|--|-----|--------|
| SgNB to MeNB Container | 0 | OCTET STRING | Includes the NR <i>CG-Config</i> message as defined in TS 38.331 [31]. | YES | ignore |
| Criticality Diagnostics | 0 | 9.2.7 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | ignore |
| SgNB Resource Coordination Information | 0 | 9.2.117 | Information used to coordinate resources utilisation between en-gNB and MeNB. | YES | ignore |
| Admitted split SRBs | 0 | ENUMERATE D (srb1, srb2, srb1&2,) | Indicates admitted SRBs | YES | ignore |
| Admitted split SRBs release | 0 | ENUMERATE D (srb1, srb2, srb1&2,) | Indicates admitted SRBs release | YES | ignore |

| Range bound | Explanation |
|----------------|-------------------------------------|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 |

| Condition | Explanation |
|---------------------------------|---|
| ifMCGandSCGpresent | This IE shall be present if, for the E-RAB admitted to be added, the MCG resources and SCG resources IEs in the EN-DC Resource Configuration IE are set to the value "present". |
| ifMCGpresent | This IE shall be present if, for the E-RAB admitted to be added, the MCG resources IE in the EN-DC Resource Configuration IE is set to the value "present". |
| C-ifMCGandSCGpresent_GBRpresent | This IE shall be present if, for the E-RAB admitted to be added, the MCG resources and SCG resources IEs in the EN-DC Resource Configuration IE are set to the value "present", and the GBR QoS Information IE is present in the Requested MCG E-RAB Level QoS Parameters IE. |

9.1.4.7 SGNB MODIFICATION REQUEST REJECT

This message is sent by the en-gNB to inform the MeNB that the MeNB initiated SgNB Modification Preparation has failed.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------|----------|-------|--------------------------------------|--------------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | ignore |
| SgNB UE X2AP ID | М | | en-gNB UE X2AP ID 9.2.100 | Allocated at the en-gNB. | YES | ignore |
| Cause | M | | 9.2.6 | | YES | ignore |
| Criticality Diagnostics | О | | 9.2.7 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB. | YES | ignore |

9.1.4.8 SGNB MODIFICATION REQUIRED

This message is sent by the en-gNB to the MeNB to request the modification of en-gNB resources for a specific UE. Direction: en-gNB \rightarrow MeNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|---|---|--|-------------|----------------------|
| Message Type | М | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | reject |
| SgNB UE X2AP ID | М | | en-gNB UE X2AP ID 9.2.100 | Allocated at the engNB. | YES | reject |
| Cause | M | | 9.2.6 | | YES | ignore |
| PDCP Change Indication | 0 | | 9.2.109 | | YES | ignore |
| E-RABs To Be Released List | | 01 | | | YES | ignore |
| >E-RABs To Be Released | | 1 <maxnoof< td=""><td></td><td></td><td>EACH</td><td>ignore</td></maxnoof<> | | | EACH | ignore |
| Item | | Bearers> | | | | |
| >>E-RAB ID | M | | 9.2.23 | | _ | |
| >>Cause | M | | 9.2.6 | 1 1 1 1 1 15 | - | |
| SgNB to MeNB Container | 0 | | OCTET STRING | Includes the NR CG-Config message as defined in TS 38.331 [31]. | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | reject |
| E-RABs To Be Modified List | | 01 | | | YES | ignore |
| >E-RABs To Be Modified Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>E-RAB ID | М | | 9.2.23 | | _ | |
| >>EN-DC Resource Configuration | M | | EN-DC Resource Configuratio n 9.2.108 | Indicates the PDCP and Lower Layer MCG/SCG configuration. | _ | |
| >>CHOICE Resource Configuration | M | | | | | |
| >>>PDCP present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the ENDCP at DC Resource Configuration IE is set to the value "present". | | |
| >>>>Requested MCG E-RAB Level QoS Parameters | 0 | | E-RAB Level QoS Parameters 9.2.9 | Includes E-RAB level QoS parameters requested to be provided by the MCG. | - | |
| >>>>UL configuration | 0 | | 9.2.118 | Information about UL usage in the MeNB. | - | - |
| >>>>SgNB UL GTP TEID at PDCP | 0 | | GTP Tunnel Endpoint 9.2.1 | SgNB endpoint of the X2-U transport bearer at PDCP. For delivery of UL PDCP PDUs. | _ | |
| >>>S1 DL GTP TEID at the SgNB | 0 | | GTP Tunnel Endpoint 9.2.1 | en-gNB endpoint of the S1 transport bearer. For delivery of DL PDUs. | _ | |

| >>>PDCP not present in SN | | | This choice tag is used if the PDCP at SgNB IE in the ENDC Resource Configuration IE is set to the value "not present". | | |
|--|---|---------------------------------|--|-----|--------|
| >>>>SgNB DL GTP TEID at SCG | 0 | GTP Tunnel Endpoint 9.2.1 | SgNB endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs. | - | |
| >>>>Secondary SgNB DL GTP TEID at SCG | 0 | GTP Tunnel Endpoint 9.2.1 | SgNB endpoint of the X2-U transport bearer at the SCG. For delivery of DL PDCP PDUs for PDCP duplication. | - | |
| SgNB Resource Coordination Information | 0 | 9.2.117 | Information used to coordinate resources utilisation between the en-gNB and the MeNB. | YES | ignore |

| Range bound | Explanation | | | |
|----------------|-------------------------------------|--|--|--|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 | | | |

9.1.4.9 SGNB MODIFICATION CONFIRM

This message is sent by the MeNB to inform the en-gNB about the successful modification.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|--|---|--|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | ignore |
| SgNB UE X2AP ID | M | | en-gNB UE X2AP ID 9.2.100 | Allocated at the en-gNB. | YES | ignore |
| E-RABs Admitted To Be Modified List | | 01 | | | YES | ignore |
| >E-RABs To Be Modified Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>E-RAB ID | M | | 9.2.23 | | _ | |
| >>EN-DC Resource Configuration | M | | EN-DC Resource Configuratio n 9.2.108 | Indicates the PDCP and Lower Layer MCG/SCG configuration. | | |
| >>CHOICE Resource Configuration | М | | | | | |
| >>>PDCP not present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuration IE is set to the value "not present". | | |
| >>>>Secondary MeNB UL GTP TEID at PDCP | 0 | | GTP Tunnel Endpoint 9.2.1 | MeNB endpoint of the X2-U transport bearer at the PDCP. For delivery of UL PDCP PDUs for PDCP duplication. | - | |
| MeNB to SgNB Container | 0 | | OCTET STRING | Includes the NR RRCReconfigurati onComplete message as defined in TS 38.331 [31]. | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | • | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB. | YES | ignore |
| MeNB Resource Coordination Information | 0 | | 9.2.116 | Information used to coordinate resources utilisation between the MeNB and the en-gNB. | YES | ignore |

| Range bound | Explanation | | | |
|----------------|-------------------------------------|--|--|--|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 | | | |

9.1.4.10 SGNB MODIFICATION REFUSE

This message is sent by the MeNB to inform the en-gNB that the SgNB initiated SgNB Modification has failed.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------|----------|-------|---|--|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | ignore |
| SgNB UE X2AP ID | M | | en-gNB UE X2AP ID 9.2.100 | Allocated at the en-gNB. | YES | ignore |
| Cause | M | | 9.2.6 | | YES | ignore |
| MeNB to SgNB Container | 0 | | OCTET STRING | Includes the CG-ConfigInfo message as defined in TS 38.331 [31]. | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB. | YES | ignore |

9.1.4.11 SGNB RELEASE REQUEST

This message is sent by the MeNB to the en-gNB to request the release of resources.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|--|---|---|-------------|----------------------|
| Message Type | М | | 9.2.13 | • | YES | ignore |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | reject |
| SgNB UE X2AP ID | 0 | | en-gNB UE X2AP ID 9.2.100 | Allocated at the en-gNB. | YES | reject |
| Cause | М | | 9.2.6 | | YES | ignore |
| E-RABs To Be Released List | | 01 | | | YES | ignore |
| > E-RABs To Be Released Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>E-RAB ID | M | | 9.2.23 | | _ | |
| >>EN-DC Resource Configuration | M | | EN-DC Resource Configuratio n 9.2.108 | Indicates the PDCP and Lower Layer MCG/SCG configuration | - | |
| >>CHOICE Resource Configuration | М | | | | | |
| >>>PDCP present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "present". | | |
| >>>UL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of UL PDUs | - | |
| >>>>DL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer. used for forwarding of DL PDUs | - | |
| >>>PDCP not present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "not present". | | |
| UE Context Kept Indicator | 0 | | 9.2.85 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | reject |
| MeNB to SgNB Container | 0 | | OCTET STRING | Includes the CG-ConfigInfo message as defined in TS 38.331 [31]. | YES | reject |

| Range bound | Explanation | | | |
|----------------|-------------------------------------|--|--|--|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 | | | |

9.1.4.12 SGNB RELEASE REQUEST ACKNOWLEDGE

This message is sent by the en-gNB to the MeNB to confirme the request to release en-gNB resources.

Direction: en-gNB \rightarrow MeNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------|----------|-------|---|--------------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | ignore |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | reject |
| SgNB UE X2AP ID | М | | en-gNB UE X2AP ID 9.2.100 | Allocated at the en-gNB. | YES | reject |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB. | YES | reject |

9.1.4.13 SGNB RELEASE REQUEST REJECT

This message is sent by the en-gNB to the MeNB to reject the request to release en-gNB resources.

Direction: en-gNB \rightarrow MeNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------------|----------|-------|---|--------------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | ignore |
| MeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | reject |
| SgNB UE X2AP ID | 0 | | en-gNB UE X2AP ID 9.2.100 | Allocated at the en-gNB. | YES | reject |
| Cause | M | | 9.2.6 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB. | YES | reject |

9.1.4.14 SGNB RELEASE REQUIRED

This message is sent by the en-gNB to request the release of all resources for a specific UE at the en-gNB.

| IE/Group Name | Presence | Range | IE type and | Semantics | Criticality | Assigned |
|-----------------|----------|-------|-----------------|----------------------|-------------|-------------|
| | | | reference | description | | Criticality |
| Message Type | M | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID | Allocated at the | YES | reject |
| | | | 9.2.24 | MeNB. | | |
| SgNB UE X2AP ID | M | | en-gNB UE X2AP | Allocated at the en- | YES | reject |
| | | | ID | gNB. | | |
| | | | 9.2.100 | | | |
| Cause | М | | 9.2.6 | | YES | ignore |
| MeNB UE X2AP ID | 0 | | Extended eNB UE | Allocated at the | YES | reject |
| Extension | | | X2AP ID | MeNB. | | |
| | | | 9.2.86 | | | |

9.1.4.15 SGNB RELEASE CONFIRM

This message is sent by the MeNB to confirm the release of all resources for a specific UE at the en-gNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|--|---|---|-------------|----------------------|
| Message Type | М | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | ignore |
| SgNB UE X2AP ID | M | | en-gNB UE X2AP ID 9.2.100 | Allocated at the en-gNB. | YES | ignore |
| E-RABs to be Released List | | 01 | | | YES | ignore |
| >E-RABs To Be Released Item | | 1 <maxnoof Bearers></maxnoof | | | - | |
| >>E-RAB ID | M | | 9.2.23 | | _ | |
| >>EN-DC Resource Configuration | M | | EN-DC Resource Configuratio n 9.2.108 | Indicates the PDCP and Lower Layer MCG/SCG configuration | - | |
| >>CHOICE Resource Configuration | М | | | | | |
| >>>PDCP present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "present". | | |
| >>>>DL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of DL PDUs | - | |
| >>>>UL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of UL PDUs | - | |
| >>>PDCP not present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "not present". | | |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | ignore |

| Range bound | Explanation | | | |
|----------------|-------------------------------------|--|--|--|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 | | | |

9.1.4.16 SGNB COUNTER CHECK REQUEST

This message is sent by the en-gNB to request the verification of the value of the PDCP COUNTs associated with the bearers established in the en-gNB.

Direction: en-gNB \rightarrow MeNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|--|---|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | ignore |
| SgNB UE X2AP ID | M | | en-gNB UE X2AP ID 9.2.100 | Allocated at the en-gNB. | YES | ignore |
| E-RABs Subject to Counter Check List | | 1 | | | YES | ignore |
| >E-RABs Subject to Counter Check Item | | 1 <maxnoof Bearers></maxnoof | | | EACH | ignore |
| >>E-RAB ID | M | | 9.2.23 | | - | |
| >>UL COUNT | M | INTEGER(0 4294967295) | | Indicates the value of uplink COUNT associated to this E-RAB. | - | |
| >>DL COUNT | M | INTEGER(0 4294967295) | | Indicates the value of downlink COUNT associated to this E-RAB. | - | |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | ignore |

| Range bound | Explanation | | |
|----------------|-------------------------------------|--|--|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 | | |

9.1.4.17 SGNB CHANGE REQUIRED

This message is sent by the en-gNB to the MeNB to request the change of en-gNB for a specific UE.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------------|----------|-------|---|--|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | reject |
| SgNB UE X2AP ID | M | | en-gNB UE X2AP ID 9.2.100 | Allocated at the engNB. | YES | reject |
| Target SgNB ID Information | M | | 9.2.102 | | YES | reject |
| Cause | M | | 9.2.6 | | YES | ignore |
| SgNB to MeNB Container | 0 | | OCTET STRING | Includes the CG- Config message as defined in TS 38.331 [31]. | YES | reject |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB. | YES | reject |

9.1.4.18 SGNB CHANGE CONFIRM

This message is sent by the MeNB to inform the en-gNB about the successful change.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|--|---|---|--------------|----------------------|
| Message Type | М | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | ignore |
| SgNB UE X2AP ID | M | | en-gNB UE X2AP ID 9.2.100 | Allocated at the en-gNB. | YES | ignore |
| E-RABs to be Released List | | 01 | | | YES | ignore |
| >E-RABs To Be Released Item | | 1 <maxnoof Bearers></maxnoof | | | - | |
| >>E-RAB ID | М | | 9.2.23 | | _ | |
| >>EN-DC Resource Configuration | M | | EN-DC Resource Configuratio n 9.2.108 | Indicates the PDCP and Lower Layer MCG/SCG configuration | _ | |
| >>CHOICE Resource Configuration | М | | | | | |
| >>>PDCP present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "present". | | |
| >>>DL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of DL PDUs | - | |
| >>>>UL Forwarding GTP Tunnel Endpoint | 0 | | GTP Tunnel Endpoint 9.2.1 | Identifies the X2 transport bearer used for forwarding of UL PDUs | - | |
| >>>PDCP not present in SN | | | | This choice tag is used if the PDCP at SgNB IE in the EN-DC Resource Configuratio n IE is set to the value "not present". | | |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB | YES | ignore |

| Range bound | Explanation | | |
|----------------|-------------------------------------|--|--|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 | | |

9.1.4.19 SGNB CHANGE REFUSE

This message is sent by the MeNB to inform the en-gNB that the SgNB initiated SgNB Change has failed.

Direction: MeNB \rightarrow en-gNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------------|----------|-------|---|--------------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | ignore |
| SgNB UE X2AP ID | M | | en-gNB UE X2AP ID 9.2.100 | Allocated at the en-gNB. | YES | ignore |
| Cause | M | | 9.2.6 | | YES | ignore |
| Criticality Diagnostics | 0 | | 9.2.7 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB. | YES | reject |

9.1.4.20 SECONDARY RAT DATA USAGE REPORT

This message is sent by the en-gNB to report data volumes for secondary RAT.

Direction: en-gNB \rightarrow MeNB

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------------------|----------|-------|---|--------------------------|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB | YES | reject |
| SgNB UE X2AP ID | M | | en-gNB UE X2AP ID 9.2.100 | Allocated at the en-gNB. | YES | reject |
| Secondary RAT Usage Report list | M | | 9.2.120 | | YES | ignore |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB. | YES | reject |

9.1.4.21 RRC TRANSFER

This message is sent by the MeNB to the en-gNB or by the en-gNB to the MeNB to transfer an RRC message.

Direction: MeNB \rightarrow en-gNB or en-gNB \rightarrow MeNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------------|----------|-------|---|--|-------------|----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | reject |
| SgNB UE X2AP ID | M | | en-gNB UE X2AP ID 9.2.100 | Allocated at the engNB. | YES | reject |
| split SRB | | 01 | | | | |
| > RRC Container | 0 | | OCTET STRING | RRC message encapsulated in a PDCP-C PDU and ciphered with the key of the MeNB | YES | reject |
| > SRB Type | M | | ENUMERAT ED (srb1, srb2,) | The SRB type | YES | reject |
| > Delivery status | 0 | | 9.2.104 | DL RRC delivery status of split SRB | YES | reject |
| NR UE Measurement Report | | 01 | | | | |
| > RRC Container | M | | OCTET STRING | Includes the UL-DCCH-Message as defined in subclause 6.2.1 of TS 38.331 [31] containing the MeasurementReport message. | YES | reject |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB. | YES | reject |

9.1.4.22 PARTIAL RESET REQUIRED

This message is sent by an initiating node to a neighbouring node, both nodes able to interact for EN-DC, to release all the resources for selected UEs.

Direction: en-gNB \rightarrow MeNB, MeNB \rightarrow en-gNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigne Criticalit |
|--------------------------------|----------|---------------------------------------|--------------------------------------|-------------------------|-------------|-----------------------|
| Message Type | M | | 9.2.13 | | YES | reject |
| UEs to be Reset List | | 1 | | | YES | reject |
| >UEs To Be Reset Item | | 1 <maxnoof UEs></maxnoof | | | | |
| >>MeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | | |
| >>SgNB UE X2AP ID | 0 | | en-gNB UE X2AP ID 9.2.100 | Allocated at the engNB. | | |
| >>MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB. | | |
| Cause | M | | 9.2.6 | | YES | ignore |

| Range bound | Explanation | | | |
|-------------|------------------------------------|--|--|--|
| maxnoofUEs | Maximum no. of UEs. Value is 8192. | | | |

9.1.4.23 PARTIAL RESET CONFIRM

This message is sent by an initiating node to a neighbouring node, both nodes able to interact for EN-DC, to confirm the release all the resources for selected UEs.

Direction: en-gNB \rightarrow MeNB, MeNB \rightarrow en-gNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------------------------|----------|---|--------------------------------------|-------------------------|-------------|----------------------|
| Message Type | М | | 9.2.13 | • | YES | reject |
| UEs Admitted to be Reset List | | 1 | | | YES | reject |
| >UEs Admitted To Be Reset Item | | 1 <maxnoof UEsineng NBDU></maxnoof | | | | |
| >>MeNB UE X2AP ID | М | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | | |
| >>SgNB UE X2AP ID | 0 | | en-gNB UE X2AP ID 9.2.100 | Allocated at the engNB. | | |
| >>MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB. | | |

| Range bound | Explanation | | | |
|---------------------|------------------------------------|--|--|--|
| maxnoofUEsinengNBDU | Maximum no. of UEs. Value is 8192. | | | |

9.1.4.24 E-UTRA – NR CELL RESOURCE COORDINATION REQUEST

Direction: $eNB \rightarrow en-gNB$, $en-gNB \rightarrow eNB$.

This message is sent by a neighbouring eNB to a peer en-gNB or by a neighbouring en-gNB to a peer eNB, both nodes able to interact for EN-DC, to express the desired resource allocation for data traffic, for the sake of E-UTRA - NR Cell Resource Coordination.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|--|------------------------------------|---|-------------|----------------------|
| Message Type | М | | 9.2.13 | | YES | reject |
| CHOICE Initiating Node Type | M | | | | - | • |
| >eNB | | | | | | |
| >>Data Traffic Resource Indication | M | | 9.2.126 | Indicates resource allocations for data traffic. | YES | reject |
| >>Spectrum Sharing Group ID | М | | INTEGER (1 maxCellineN B) | Indicates the E- UTRA cells involved in resource coordination with the NR cells affiliated with the same Spectrum Sharing Group ID. | YES | reject |
| >>List of E-UTRA Cells in E-UTRA Coordination Request | | 0 <maxcellinenb ></maxcellinenb | | List of applicable E- UTRA cells. | YES | reject |
| >>>EUTRA Cell ID | М | | ECGI 9.2.14 | | - | - |
| >en-gNB | | | | | | |
| >>Data Traffic Resource Indication | М | | 9.2.126 | Indicates resource allocations for data traffic. | YES | reject |
| >>List of E-UTRA Cells in NR Coordination Request | | 1 <maxcellinenb ></maxcellinenb | | List of applicable E- UTRA cells | YES | reject |
| >>>EUTRA Cell ID | M | | ECGI 9.2.14 | | _ | _ |
| >>Spectrum Sharing Group ID | M | | INTEGER (1 maxCellineN B) | Indicates the NR cells involved in resource coordination with the E-UTRA cells affiliated with the same Spectrum Sharing Group ID. | YES | reject |
| >>List of NR Cells in NR Coordination Request | | 0 < maxnoNRcellsS pectrumSharing withE-UTRA > | | List of applicable NR cells | YES | reject |
| >>>NR-Cell ID | М | | NR-CGI 9.2.105 | | - | |

| Range bound | Explanation |
|-----------------------------------|---|
| maxCellineNB | Maximum no. of E-UTRA cells in eNB. Value is 256. |
| maxnoNRcellsSpectrumSharingwithE- | Maximum no. of NR cells involved in spectrum sharing with an eNB. |
| UTRA | Value is 64. |

9.1.4.25 E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE

Direction: $eNB \rightarrow en-gNB$, $en-gNB \rightarrow eNB$.

This message is sent by a neighbouring eNB to a peer en-gNB or by a neighbouring en-gNB to a peer eNB, both nodes able to interact for EN-DC, as a response to the E-UTRA – NR CELL RESOURCE COORDINATION REQUEST.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|---|------------------------------------|---|-------------|----------------------|
| Message Type | M | | 9.2.13 | • | YES | reject |
| CHOICE Responding NodeType | М | | | | - | • |
| >eNB | | | 0.0.400 | 1 11 4 | \/=0 | |
| >>Data Traffic Resource Indication | М | | 9.2.126 | Indicates resource allocations for data traffic. | YES | reject |
| >>Spectrum Sharing Group ID | М | | INTEGER (1 maxCellineN B) | Indicates the E- UTRA cells involved in resource coordination with the NR cells affiliated with the same Spectrum Sharing Group ID. | YES | reject |
| >>List of E-UTRA Cells in E-UTRA Coordination Response | | 1 <maxcellinenb ></maxcellinenb | | List of applicable E- UTRA cells | YES | reject |
| >>>EUTRA Cell ID | M | | ECGI 9.2.14 | | - | - |
| >en-gNB | | | | | | |
| >>Data Traffic Resource Indication | М | | 9.2.126 | Indicates resource allocations for data traffic. | YES | reject |
| >>Spectrum Sharing Group ID | M | | INTEGER (1 maxCellineN B) | Indicates the NR cells involved in resource coordination with the E-UTRA cells affiliated with the same Spectrum Sharing Group ID. | YES | reject |
| >>List of NR Cells in NR Coordination Response | | 1 < maxnoNRcellsS pectrumSharing withE-UTRA > | | List of applicable NR cells | YES | reject |
| >>>NR Cell ID | М | | NR-CGI 9.2.105 | | - | |

| Range bound | Explanation |
|---|--|
| maxCellineNB | Maximum no. of E-UTRA cells in eNB. Value is 256. |
| maxnoNRcellsSpectrumSharingwithE- UTRA | Maximum no. of NR cells involved in spectrum sharing with an eNB. Value is 64. |

9.1.4.26 SGNB ACTIVITY NOTIFICATION

This message is sent by the en-gNB to inform the MeNB that resources for E-RABs controlled by the en-gNB have not been used or are in use again.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|---------------------------------------|--|--------------------------|-------------|----------------------|
| Message Type | М | | 9.2.13 | | YES | reject |
| MeNB UE X2AP ID | M | | eNB UE X2AP ID 9.2.24 | Allocated at the MeNB. | YES | ignore |
| SgNB UE X2AP ID | M | | en-gNB UE X2AP ID 9.2.100 | Allocated at the en-gNB. | YES | ignore |
| UE Context level user plane activity report | 0 | | User plane traffic activity report 9.2.130 | | YES | ignore |
| E-RAB Activity Notify Item List | | 0 <maxnoofbeare rs=""></maxnoofbeare> | | | EACH | ignore |
| >E-RAB ID | М | | 9.2.23 | | _ | |
| >User plane traffic activity report | М | | 9.2.130 | | _ | |
| MeNB UE X2AP ID Extension | 0 | | Extended eNB UE X2AP ID 9.2.86 | Allocated at the MeNB. | YES | reject |

| Range bound | Explanation |
|----------------|-------------------------------------|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256 |

9.2 Information Element definitions

9.2.0 General

When specifying information elements which are to be represented by bit strings, if not otherwise specifically stated in the semantics description of the concerned IE or elsewhere, the following principle applies with regards to the ordering of bits:

- The first bit (leftmost bit) contains the most significant bit (MSB);
- The last bit (rightmost bit) contains the least significant bit (LSB);
- When importing bit strings from other specifications, the first bit of the bit string contains the first bit of the concerned information.

9.2.1 GTP Tunnel Endpoint

The *GTP Tunnel Endpoint* IE identifies an X2 transport bearer or the S-GW endpoint of the S1 transport bearer associated to an E-RAB. It contains a Transport Layer Address and a GTP Tunnel Endpoint Identifier. The Transport Layer Address is an IP address to be used for the X2 user plane transport (see TS 36.424 [8]) or for the S1 user plane transport (see TS 36.414 [19]). The GTP Tunnel Endpoint Identifier is to be used for the user plane transport between eNB and the S-GW, between eNBs, between eNB and en-gNB, or between en-gNBs.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|---|-------------|----------------------|
| Transport Layer Address | M | | BIT STRING (1160,) | For details on the Transport Layer Address, see TS 36.424 [8], TS 36.414 [19] | - | _ |
| GTP TEID | М | | OCTET STRING (4) | For details and range, see TS 29.281 [26] | _ | _ |

9.2.2 Trace Activation

Defines parameters related to trace activation.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|-------|---|---|-------------|----------------------|
| E-UTRAN Trace ID | M | | OCTET STRING (8) | The E-UTRAN Trace ID IE is composed of the following: Trace Reference defined in TS 32.422 [6] (leftmost 6 octets, with PLMN information coded as in 9.2.4), and Trace Recording Session Reference defined in TS 32.422 [6] (last 2 octets) | _ | - |
| Interfaces To Trace | M | | BIT STRING (8) | Each position in the bitmap represents a eNB interface: first bit =S1-MME, second bit =X2, third bit =Uu. Other bits reserved for future use. Value '1' indicates 'should be traced'. Value '0' indicates 'should not be traced'. | _ | 1 |
| Trace Depth | M | | ENUMERATED(minimum, medium, maximum, MinimumWithoutVend orSpecificExtension, MediumWithoutVend orSpecificExtension, MaximumWithoutVen dorSpecificExtension,) | Defined in TS 32.421 [7] | - | _ |
| Trace Collection Entity IP Address | M | | BIT STRING (1160,) | For details on the Transport Layer Address, see TS 36.424 [8], TS 36.414 [19] | _ | - |
| MDT Configuration | 0 | | 9.2.56 | | YES | ignore |
| UE Application layer measurement configuration | 0 | | 9.2.121 | | YES | ignore |

9.2.3 Handover Restriction List

This IE defines roaming or access restrictions for subsequent mobility action for which the eNB provides information about the target of the mobility action towards the UE, e.g., handover and CCO, or for SCG selection during dual connectivity operation.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------------------------|----------|---|---|---|-------------|----------------------|
| Serving PLMN | М | | PLMN Identity 9.2.4 | | _ | _ |
| Equivalent PLMNs | | 0 <maxnoof EPLMNs></maxnoof | 3.2.4 | Allowed PLMNs in addition to Serving PLMN. This list corresponds to the list of "equivalent PLMNs list" as defined in TS 24.301 [14]. This list is part of the roaming restriction information. Roaming restrictions apply to PLMNs other than the serving PLMN and Equivalent PLMNs. | _ | _ |
| >PLMN Identity | М | | 9.2.4 | | _ | _ |
| Forbidden TAs | | 0 <maxnoof EPLMNsPlu sOne></maxnoof | | intra E-UTRAN roaming restrictions | _ | _ |
| >PLMN Identity | М | | 9.2.4 | The PLMN of forbidden TACs | _ | _ |
| >Forbidden TACs | | 1 <maxnoof ForbTACs></maxnoof | | | _ | _ |
| >>TAC | М | | OCTET STRING(2) | The forbidden TAC | _ | _ |
| Forbidden LAs | | 0 <maxnoof EPLMNsPlu sOne></maxnoof | | inter-3GPP RAT roaming restrictions | - | - |
| >PLMN Identity | M | | 9.2.4 | | _ | _ |
| >Forbidden LACs | | 1 <maxnoof ForbLACs></maxnoof | | | _ | _ |
| >>LAC | M | | OCTET STRING(2) | | _ | _ |
| Forbidden inter RATs | 0 | | ENUMERATED(ALL, GERAN, UTRAN, CDMA2000,, GERAN and UTRAN, CDMA2000 and UTRAN) | inter-3GPP and 3GPP2 RAT access restrictions. "ALL" means that all RATs mentioned in the enumeration of this IE are restricted. | _ | _ |
| NR restriction | 0 | | ENUMERATED(NRr estricted,) | Restriction to use NR. | YES | ignore |
| Core Network Type Restrictions | | 0 <maxnoof EPLMNsPlu sOne></maxnoof | | Core network type restriction information as specified in TS 23.501 [38]. | | |
| >PLMN Identity | | | 9.2.4 | The PLMN of forbidden core network. | | |
| >Core Network Type | | | ENUMERATED (5GCForbiddden,) | The indication indicates whether UE is allowed to connect to 5GC for this PLMN. | | |

| Range bound | Explanation |
|----------------------|--|
| maxnoofEPLMNs | Maximum no. of equivalent PLMN lds. Value is 15. |
| maxnoofEPLMNsPlusOne | Maximum no. of equivalent PLMN Ids plus one. Value is 16. |
| maxnoofForbTACs | Maximum no. of forbidden Tracking Area Codes. Value is 4096. |
| maxnoofForbLACs | Maximum no. of forbidden Location Area Codes. Value is 4096. |

9.2.4 PLMN Identity

This information element indicates the PLMN Identity.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|--|
| PLMN Identity | M | | OCTET STRING (3) | - digits 0 to 9, encoded 0000 to 1001, - 1111 used as filler digit, two digits per octet, - bits 4 to 1 of octet n encoding digit 2n- 1 - bits 8 to 5 of octet n encoding digit 2n -The PLMN identity consists of 3 digits from MCC followed by either -a filler digit plus 2 digits from MNC (in case of 2 digit MNC) or -3 digits from MNC (in case of a 3 digit MNC). |

9.2.5 DL Forwarding

This element indicates that the E-RAB is proposed for forwarding of downlink packets.

| IE/Group Name | Presence | Range | IE type and | Semantics description |
|---------------|----------|-------|----------------|-----------------------|
| | | | reference | |
| DL Forwarding | M | | ENUMERATED | |
| - | | | (DL forwarding | |
| | | | proposed,) | |

9.2.6 Cause

The purpose of the cause information element is to indicate the reason for a particular event for the whole protocol.

| CHOICE Cause Group →Radio Network Layer →Radio Network Layer Cause M ENUMERATED (Handover Desirable for Radio Reasons, Time Critical Handover, Reduce Load in Serving Cell, Partial Handover, Resource Optimisation Handover, Reduce Load in Serving Cell, Partial Handover, Resource Sprilly, TRELOCOME Expiry, TRELOCOME Expiry, TRELOCOME Expiry, TRELOCOME Expiry, Cell not Available, No Radio Resources Available in Target Cell, Invalid MME Group ID, Unknown MME Code, Encryption And/Or Integrity Protection Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement ID, Measurement Emporarily not Available, Unspecified,Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Orgoing, Not supported Clavalue, Measurement not supported for the object,Tocomer Expiry, Tocome Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid OoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unsported, Procedure Unavailable, Unknown Old en-gNB UE X2AP ID, PDCP Overload) | IE/Group Name | Presence | Range | IE Type and Reference | Semantics |
|---|-------------------------|----------|-------|--|-------------|
| S-Radio Network Layer S-Radio Network Layer Cause ENUMERATED (Handover Desirable for Radio Reasons, Time Critical Handover, Resource Optimisation Handover, Reduce Load in Serving Cell, Partial Handover, Unknown New eNB LE X2AP ID, Unknown Pair of UE X2AP ID, HO Target not Allowed, TX2s:Conese Expiry, Treacconese Expiry, Treacconese Expiry, Cell not Available, No Radio Resources Available in Target Cell, Invalid MME Group ID, Unknown MME Code, Encryption And/Or Integrity Protection Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement Themporarily not Availabled, Unspecified, Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB, ID instances, Switch Off Ongoing, Not supported CI value, Measurement not supported for the object, Tocoweal Expiry, Tocoweal Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid OSS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old eng-NB UE X2AP ID, PDCP Overload) | CHOICE Cause Group | M | | | Description |
| S-Radio Network Layer Cause ENUMERATED Handover Desirable for Radio Reasons, Time Critical Handover, Resource Optimisation Handover, Reduce Load in Serving Cell, Partial Handover, Unknown New MB UE X2AP ID, Unknown New MB UE X2AP ID, Unknown Pair of UE X2AP ID, HO Target not Allowed, TX2etc.Comeat Exptry, Transcoper Exptry, Cell not Available, No Radio Resources Available in Target Cell, Invalid MME Group ID, Unknown MME Code, Encryption Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement Temporarily not Available, Unspecified,Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported COI value, Measurement to supported for the object,Tocomeat Exptry, Tocprep Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed. No Radio Resource Optimisation, Time Critical action, Target not Allowed. No Radio Resource Optimisation, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Oid en-pNB UE X2AP ID, PDCP Overload) **Transport Layer** | | 171 | | | |
| >Transport Layer >>Transport Layer Cause M ENUMERATED (Transport Resource Unavailable, | >>Radio Network Layer | M | | (Handover Desirable for Radio Reasons, Time Critical Handover, Resource Optimisation Handover, Reduce Load in Serving Cell, Partial Handover, Unknown New eNB UE X2AP ID, Unknown Old eNB UE X2AP ID, Unknown Pair of UE X2AP ID, HO Target not Allowed, TX2RELOCoverall Expiry, TRELOCprep Expiry, Cell not Available, No Radio Resources Available in Target Cell, Invalid MME Group ID, Unknown MME Code, Encryption And/Or Integrity Protection Algorithms Not Supported, ReportCharacteristicsEmpty, NoReportPeriodicity, ExistingMeasurementID, Unknown eNB Measurement ID, Measurement Temporarily not Available, Unspecified,,Load Balancing, Handover Optimisation, Value out of allowed range, Multiple E-RAB ID instances, Switch Off Ongoing, Not supported QCI value, Measurement not supported for the object,Tpcoverall Expiry, Tpcprep Expiry, Action Desirable for Radio Reasons, Reduce Load, Resource Optimisation, Time Critical action, Target not Allowed, No Radio Resources Available, Invalid QoS combination, Encryption Algorithms Not Supported, Procedure cancelled, RRM purpose, Improve user bit rate, User Inactivity, Radio Connection With UE Lost, Failure in the Radio Interface Procedure, Bearer Option not Supported, MCG Mobility, SCG Mobility, Count reaches max value, Unknown Old en-gNB UE X2AP ID, | |
| (Transport Resource Unavailable, | | | | | |
| >Protocol | >>Transport Layer Cause | M | | (Transport Resource Unavailable, | |

| >>Protocol Cause | M | ENUMERATED (Transfer Syntax Error, Abstract Syntax Error (Reject), Abstract Syntax Error (Ignore and Notify), Message not Compatible with Receiver State, Semantic Error, Unspecified, Abstract Syntax Error (Falsely Constructed Message),) |
|-----------------------|---|--|
| >Misc | | |
| >>Miscellaneous Cause | M | ENUMERATED (Control Processing Overload, Hardware Failure,O&M Intervention,Not enough User Plane Processing Resources,Unspecified,) |

The meaning of the different cause values is described in the following table. In general, "not supported" cause values indicate that the concerned capability is missing. On the other hand, "not available" cause values indicate that the concerned capability is present, but insufficient resources were available to perform the requested action.

| Radio Network Layer cause | Meaning |
|---|---|
| Cell not Available | The concerned cell is not available. |
| Handover Desirable for Radio Reasons | The reason for requesting handover is radio related. |
| Handover Target not Allowed | Handover to the indicated target cell is not allowed for the UE in question |
| Invalid MME Group ID | The target eNB doesn't belong to the same pool area of the source eNB |
| | i.e. S1 handovers should be attempted instead. |
| No Radio Resources Available in Target Cell | The target cell doesn't have sufficient radio resources available. |
| Partial Handover | Provides a reason for the handover cancellation. The target eNB did not |
| | admit all E-RABs included in the HANDOVER REQUEST and the source |
| | eNB estimated service continuity for the UE would be better by not proceeding with handover towards this particular target eNB. |
| Reduce Load in Serving Cell | Load in serving cell needs to be reduced. When applied to handover preparation, it indicates the handover is triggered due to load balancing. |
| Resource Optimisation Handover | The reason for requesting handover is to improve the load distribution with the neighbour cells. |
| Time Critical Handover | Handover is requested for time critical reason i.e. this cause value is |
| Time Chica Handover | reserved to represent all critical cases where the connection is likely to be |
| | dropped if handover is not performed. |
| TX2 _{RELOCoverall} Expiry | The reason for the action is expiry of timer TX2 _{RELOCoverall} . |
| T _{RELOCprep} Expiry | Handover Preparation procedure is cancelled when timer T _{RELOCprep} |
| | expires. |
| Unknown MME Code | The target eNB belongs to the same pool area of the source eNB and recognizes the MME Group ID. However, the MME Code is unknown to the target eNB. |
| Unknown New eNB UE X2AP ID | The action failed because the New eNB UE X2AP ID or the MeNB UE |
| | X2AP ID is unknown. |
| Unknown Old eNB UE X2AP ID | The action failed because the Old eNB UE X2AP ID or the SeNB UE X2AP ID is unknown. |
| Unknown Pair of UE X2AP ID | The action failed because the pair of UE X2 AP IDs is unknown. |
| Encryption And/Or Integrity | The target eNB is unable to support any of the encryption and/or integrity |
| Protection Algorithms Not | protection algorithms supported by the UE, or the en-gNB is unable to |
| Supported | support any of the NR encryption and/or integrity protection algorithms |
| ReportCharacteristicsEmpty | supported by the UE for EN-DC operation. The action failed because there is no characteristic reported. |
| NoReportPeriodicity | The action failed because the periodicity is not defined. |
| ExistingMeasurementID | The action failed because measurement-ID is already used. |
| Unknown eNB Measurement ID | The action failed because some eNB Measurement-ID is unknown. |
| Measurement Temporarily not Available | The eNB can temporarily not provide the requested measurement object. |
| Load Balancing | The reason for mobility settings change is load balancing. |
| Handover Optimisation | The reason for mobility settings change is handover optimisation. |
| Value out of allowed range | The action failed because the proposed Handover Trigger parameter change in the eNB ₂ Proposed Mobility Parameters IE is too low or too |
| Multiple E DAD ID legiteres | high. |
| Multiple E-RAB ID Instances | The action failed because multiple instances of the same E-RAB had been provided to the eNB. |
| Switch Off Ongoing | The reason for the action is an ongoing switch off i.e. the concerned cell will be switched off after offloading and not be available. It aides the |
| | receiving eNB in taking subsequent actions, e.g. selecting the target cell for subsequent handovers. |
| Not supported QCI value | The action failed because the requested QCI is not supported. |
| Unspecified | Sent when none of the above cause values applies but still the cause is Radio Network Layer related. |
| Measurement not Supported For The Object | At least one of the concerned cell(s) does not support the requested measurement. |
| T _{DCoverall} Expiry | The reason for the action is expiry of timer T _{DCoveral} l. |
| T _{DCprep} Expiry | The reason for the action is expiry of timer T _{DCprep} . |
| Action Desirable for Radio | The reason for requesting the action is radio related. |
| Reasons | In the current version of this specification applicable for Dual Connectivity only. |
| Reduce Load | Load in the cell(group) served by the requesting node needs to be |
| | reduced. In the current version of this specification applicable for Dual Connectivity |
| | only. |

| Resource Optimisation | The reason for requesting this action is to improve the load distribution with the neighbour cells. In the current version of this specification applicable for Dual Connectivity only. |
|---|---|
| Time Critical action | The action is requested for time critical reason i.e. this cause value is reserved to represent all critical cases where radio resources are likely to be dropped if the requested action is not performed. In the current version of this specification applicable for Dual Connectivity only. |
| Target not Allowed | Requested action towards the indicated target cell is not allowed for the UE in question. In the current version of this specification applicable for Dual Connectivity only. |
| No Radio Resources Available | The cell(s) in the requested node don't have sufficient radio resources available. In the current version of this specification applicable for Dual Connectivity only. |
| Invalid QoS combination | The action was failed because of invalid QoS combination. In the current version of this specification applicable for Dual Connectivity only. |
| Encryption Algorithms Not Supported | The requested eNB is unable to support any of the encryption algorithms supported by the UE. In the current version of this specification applicable for Dual Connectivity only. |
| Procedure cancelled | The sending node cancelled the procedure due to other urgent actions to be performed. In the current version of this specification applicable for Dual Connectivity only. |
| RRM purpose | The procedure is initiated due to node internal RRM purposes. In the current version of this specification applicable for Dual Connectivity only. |
| Improve User Bit Rate | The reason for requesting this action is to improve the user bit rate. In the current version of this specification applicable for Dual Connectivity only. |
| User Inactivity | The action is requested due to user inactivity on all E-RABs, e.g., S1 is requested to be released in order to optimise the radio resources; or SeNB/en-gNB didn't see activity on the DRB recently. In the current version of this specification applicable for Dual Connectivity only. |
| Radio Connection With UE Lost | The action is requested due to losing the radio connection to the UE. In the current version of this specification applicable for Dual Connectivity only. |
| Failure in the Radio Interface Procedure | Radio interface procedure has failed. In the current version of this specification applicable for Dual Connectivity only. |
| Bearer Option not Supported | The requested bearer option is not supported by the sending node. In the current version of this specification applicable for Dual Connectivity only. |
| MCG Mobility | The procedure is initiated due to mobility related at MCG radio resource. |
| SCG Mobility | The procedure is initiated due to mobility related at SCG radio resource. |
| Count reaches max value | Indicates the PDCP COUNT for UL or DL reached the max value and the bearer may be released. |
| Unknown Old en-gNB UE X2AP ID | The action failed because the Old en-gNB UE X2AP ID or the SeNB UE X2AP ID is unknown. |
| PDCP Overload | The procedure is initiated due to PDCP/SDAP resource limitation. |

| Transport Network Layer cause | Meaning |
|--------------------------------|---|
| Transport resource unavailable | The required transport resources are not available. |
| Unspecified | Sent when none of the above cause values applies but still the cause is |
| | Transport Network Layer related |

| Protocol cause | Meaning |
|---|--|
| Abstract Syntax Error (Reject) | The received message included an abstract syntax error and the concerned criticality indicated "reject" (see sub clause 10.3 of TS 36.413 [4]). |
| Abstract Syntax Error (Ignore and Notify) | The received message included an abstract syntax error and the concerned criticality indicated "ignore and notify" (see sub clause 10.3 of TS 36.413 [4]). |
| Abstract syntax error (falsely constructed message) | The received message contained IEs or IE groups in wrong order or with too many occurrences (see sub clause 10.3 of TS 36.413 [4]). |
| Message not Compatible with Receiver State | The received message was not compatible with the receiver state (see sub clause 10.4 of TS 36.413 [4]). |
| Semantic Error | The received message included a semantic error (see sub clause 10.4 of TS 36.413 [4]). |
| Transfer Syntax Error | The received message included a transfer syntax error (see sub clause 10.2 of TS 36.413 [4]). |
| Unspecified | Sent when none of the above cause values applies but still the cause is Protocol related |

| Miscellaneous cause | Meaning |
|--|---|
| Control Processing Overload | eNB control processing overload |
| Hardware Failure | eNB hardware failure |
| Not enough User Plane Processing Resources | eNB has insufficient user plane processing resources available. |
| O&M Intervention | Operation and Maintenance intervention related to eNB equipment |
| Unspecified | Sent when none of the above cause values applies and the cause is not related to any of the categories Radio Network Layer, Transport Network Layer or Protocol |

9.2.7 Criticality Diagnostics

The *Criticality Diagnostics* IE is sent by the eNB/en-gNB when parts of a received message have not been comprehended or were missing, or if the message contained logical errors. When applicable, it contains information about which IEs were not comprehended or were missing.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--|----------|--|--|--|
| Procedure Code | 0 | | INTEGER (0255) | Procedure Code is to be used if Criticality Diagnostics is part of Error Indication procedure, and not within the response message of the same procedure that caused the error. |
| Triggering Message | 0 | | ENUMERATED(initiatin g message, successful outcome, unsuccessful outcome) | The Triggering Message is used only if the Criticality Diagnostics is part of Error Indication procedure. |
| Procedure Criticality | 0 | | ENUMERATED(reject, ignore, notify) | This Procedure Criticality is used for reporting the Criticality of the Triggering message (Procedure). |
| Information Element Criticality Diagnostics | | 0 <maxnroferror s></maxnroferror | | |
| >IE Criticality | М | | ENUMERATED(reject, ignore, notify) | The IE Criticality is used for reporting the criticality of the triggering IE. The value "ignore" shall not be used. |
| >IE ID | M | | INTEGER (065535) | The IE ID of the not understood or missing IE |
| >Type Of Error | M | | ENUMERATED(not understood, missing,) | , and the second |

| Range bound | Explanation |
|---------------|---|
| maxNrOfErrors | Maximum no. of IE errors allowed to be reported with a single |
| | message. The value for maxnooferrors is 256. |

9.2.8 Served Cell Information

This IE contains cell configuration information of a cell that a neighbour eNB may need for the X2 AP interface.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|---------------------------------------|--|--|-------------|----------------------|
| PCI | М | | INTEGER (0503,) | Physical Cell ID | - | - |
| Cell ID | М | | ECGI 9.2.14 | | _ | - |
| TAC | М | | OCTET STRING(2) | Tracking Area Code | _ | _ |
| Broadcast PLMNs | | 1 <maxnoof BPLMNs></maxnoof | | Broadcast PLMNs | _ | _ |
| >PLMN Identity | М | | 9.2.4 | | _ | _ |
| CHOICE EUTRA-Mode- Info | М | | | | _ | _ |
| >FDD | | | | | | |
| >>FDD Info | | 1 | | | _ | _ |
| >>>UL EARFCN | M | | EARFCN 9.2.26 | Corresponds to NUL in TS 36.104 [16] for E-UTRA operating bands for which it is defined; ignored for E-UTRA operating bands for which NUL is not defined | _ | - |
| >>>DL EARFCN | М | | EARFCN 9.2.26 | Corresponds to N _{DL} in TS 36.104 [16] | - | - |
| >>>UL Transmission Bandwidth | М | | Transmission Bandwidth 9.2.27 | Same as DL Transmission Bandwidth in this release; ignored in case UL EARFCN value is ignored | - | 1 |
| >>>DL Transmission Bandwidth | M | | Transmission Bandwidth 9.2.27 | | _ | - |
| >>>UL EARFCN Extension | 0 | | EARFCN Extension 9.2.65 | If this IE is present, the value signalled in the <i>UL EARFCN</i> IE is ignored. | YES | reject |
| >>>DL EARFCN Extension | 0 | | EARFCN Extension 9.2.65 | If this IE is present, the value signalled in the <i>DL EARFCN</i> IE is ignored. | YES | reject |
| >>>Offset of NB-IoT Channel Number to DL EARFCN | 0 | | Offset of NB-IoT Channel Number to EARFCN 9.2.94 | Corresponds to M _{DL} in TS 36.104 [16] | YES | reject |
| >>>Offset of NB-IoT Channel Number to UL EARFCN | 0 | | Offset of NB-IoT Channel Number to EARFCN 9.2.94 | Corresponds to M _{UL} in TS 36.104 [16] | YES | reject |
| >>>NRS-NSSS- PowerOffset | 0 | | ENUMERATED (-3, 0, 3,) | NRS to NSSS power ratio, as defined in TS6.213 [11]. | YES | Ignore |

| >>>NSSS- NumOccasionDifferen tPrecoder | 0 | | ENUMERATED (2, 4, 8,) | The number of consecutive NSSS occasions that use different precoders for NSSS transmission, as defined in TS6.213 [11]. | YES | ignore |
|--|---|---|---|---|-----|--------|
| >TDD | | | | | _ | _ |
| >>TDD Info | | 1 | | | _ | _ |
| >>>EARFCN | М | | 9.2.26 | Corresponds to N _{DL} /N _{UL} in TS 36.104 [16] | - | - |
| >>>Transmission Bandwidth | М | | Transmission Bandwidth 9.2.27 | | _ | - |
| >>>Subframe Assignment | М | | ENUMERATED (sa0, sa1, sa2, sa3, sa4, sa5, sa6,) | Uplink-downlink subframe configuration information defined in TS 36.211 [10]. In NB-IOT, sa0 and sa6 are not applicable. | _ | _ |
| >>>Special Subframe Info | | 1 | | Special subframe configuration information defined in TS 36.211 [10] | - | - |
| >>>Special Subframe Patterns | М | | ENUMERATED (ssp0, ssp1, ssp2, ssp3, ssp4, ssp5, ssp6, ssp7, ssp8,) | | - | - |
| >>>Cyclic Prefix DL | М | | ENUMERATED (Normal, Extended,) | | - | - |
| >>>Cyclic Prefix UL | М | | ENUMERATED (Normal, Extended,) | | - | - |
| >>>Additional Special Subframe Info | 0 | | | Special subframe configuration information defined in TS 36.211 [10]. Only for newly defined configuration of special subframe from Release 11. | YES | ignore |
| >>>>Additional Special Subframe Patterns | М | | ENUMERATED (ssp0, ssp1, ssp2, ssp3, ssp4, ssp5, ssp6, ssp7, ssp8, ssp9,) | | - | - |
| >>>Cyclic Prefix DL | М | | ENUMERATED (Normal, Extended,) | | _ | _ |

| | T | | | T | Г | |
|---------------------------|-----|--|------------------|--|--------|--------|
| >>>Cyclic Prefix | M | | ENUMERATED | | _ | _ |
| UL | | | (Normal, | | | |
| E45501 | | | Extended,) | 16.41 * 15. | \/50 | |
| >>>EARFCN | 0 | | 9.2.65 | If this IE is | YES | reject |
| Extension | | | | present, the | | |
| | | | | value signalled | | |
| | | | | in the EARFCN | | |
| | | | | IE is ignored. | | |
| >>>Additional | 0 | | | Special | YES | ignore |
| Special Subframe | | | | subframe | | · · |
| Extension Info | | | | configuration | | |
| | | | | information | | |
| | | | | defined in TS | | |
| | | | | 36.211 [10]. | | |
| | | | | | | |
| | | | | Only for newly | | |
| | | | | defined | | |
| | | | | configuration of | | |
| | | | | special | | |
| | | | | subframe from | | |
| | | | | Release 14. | | |
| >>>>Additional | M | | ENUMERATED | | _ | _ |
| Special Subframe | | | (ssp10,) | | | |
| Patterns Extension | | | | | | |
| >>>Cyclic Prefix DL | M | | ENUMERATED | | _ | _ |
| January Spond From BE | ''' | | (Normal, | | | |
| | | | Extended,) | | | |
| >>>>Cyclic Prefix UL | М | | ENUMERATED | | | |
| >>>>Cyclic Flelix UL | IVI | | - | | _ | _ |
| | | | (Normal, | | | |
| | | | Extended,) | | \(= 0 | |
| Number of Antenna Ports | 0 | | 9.2.43 | | YES | ignore |
| PRACH Configuration | 0 | | PRACH | | YES | ignore |
| | | | Configuration | | | |
| | | | 9.2.50 | | | |
| MBSFN Subframe Info | | 0 <maxnoof< td=""><td></td><td>MBSFN</td><td>GLOBAL</td><td>ignore</td></maxnoof<> | | MBSFN | GLOBAL | ignore |
| | | MBSFN> | | subframe | | - |
| | | | | defined in TS | | |
| | | | | 36.331 [9] | | |
| >Radioframe Allocation | М | | ENUMERATED | • • | _ | _ |
| Period | | | (n1, n2, n4, n8, | | | |
| 1 01100 | | | n16, n32,) | | | |
| >Radioframe Allocation | М | | INTEGER | | | |
| | IVI | | | | _ | _ |
| Offset | N.4 | | (07,) | | | |
| >Subframe Allocation | M | | 9.2.51 | | - | |
| CSG ID | 0 | _ | 9.2.53 | <u> </u> | YES | ignore |
| MBMS Service Area | | 0 <maxnoof< td=""><td></td><td>Supported</td><td>GLOBAL</td><td>ignore</td></maxnoof<> | | Supported | GLOBAL | ignore |
| Identity List | | MBMSServic | | MBMS Service | | |
| | | eArealdentiti | | Area Identities | | |
| | | es > | | in the cell | | |
| >MBMS Service Area | | | OCTET | MBMS Service | | |
| Identity | | | STRING(2) | Area Identities | | |
| ĺ | | | ' ' | as defined in TS | | |
| | | | | 23.003 [29] | | |
| MultibandInfoList | 0 | | 9.2.60 | [] | YES | ignore |
| FreqBandIndicatorPriority | 0 | | ENUMERATED | This IE | YES | ignore |
| | ~ | | (not- | indicates that | 125 | ignore |
| | | | | | | |
| | | | broadcasted, | the eNodeB | | |
| | | | broadcasted,) | supports | | |
| | | | | FreqBandIndica | | |
| 1 | 1 | I | | tionPriority, and | | |
| | | | | 1 1 () | | |
| | | | | whether | | |
| | | | | FreqBandIndica | | |
| | | | | | | |
| | | | | FreqBandIndica | | |
| | | | | FreqBandIndica torPriority is broadcasted in | | |
| | | | | FreqBandIndica torPriority is | | |

| BandwidthReducedSI | 0 | ENUMERATED (scheduled,) | This IE indicates that the SystemInformati onBlockType1- BR is scheduled in the cell (see TS 36.331 [9]) | YES | ignore |
|--------------------------------------|---|-------------------------|---|-----|--------|
| Protected E-UTRA Resource Indication | 0 | 9.2.125 | This IE indicates which E-UTRA control/referenc e signal resources are protected and are not subject to E-UTRA - NR Cell Resource Coordination. | YES | ignore |

| Range bound | Explanation | | |
|----------------------------------|--|--|--|
| maxnoofBPLMNs | Maximum no. of Broadcast PLMN Ids. Value is 6. | | |
| maxnoofMBSFN | Maximum no. of MBSFN frame allocation with different offset. Value is 8. | | |
| maxnoofMBMSServiceArealdentities | Maximum no. of MBMS Service Area Identities. Value is 256. | | |

9.2.9 E-RAB Level QoS Parameters

This IE defines the QoS to be applied to an E-RAB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------------------|----------|-------|--------------------------------|--|-------------|----------------------|
| QCI | M | | INTEGER (0255) | QoS Class Identifier defined in TS 23.401 [12]. Logical range and coding specified in TS 23.203 [13]. | - | |
| Allocation and Retention Priority | M | | 9.2.31 | | _ | _ |
| GBR QoS Information | 0 | | 9.2.10 | This IE applies to GBR bearers only and shall be ignored otherwise. | 1 | 1 |
| Downlink Maximum Packet Loss Rate | 0 | | Packet Loss Rate 9.2.124 | This IE applies only to bearers with specific QCI (see TS 23.401 [12]) and indicates the maximum allowed packet loss rate for downlink as specified in TS 23.401 [12]. | YES | ignore |
| Uplink Maximum Packet Loss Rate | 0 | | Packet Loss Rate 9.2.124 | This IE applies only to bearers with specific QCI (see TS 23.401 [12]) and indicates the maximum allowed packet loss rate for uplink as specified in TS 23.401 [12]. | YES | ignore |

9.2.10 GBR QoS Information

This IE indicates the maximum and guaranteed bit rates of a GBR E-RAB for downlink and uplink.

NOTE: For LTE DC, the SeNB regards the *GBR QoS Information* IE as an E-RAB level parameter also for E-RABs configured with the split bearer option, although for the split bearer option the bitrates signalled by the MeNB are typically not equal to the bitrates signalled by the MME for that E-RAB (see TS 36.300 [15]).

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|-------|-----------------------------|---|-------------|----------------------|
| E-RAB Maximum Bit Rate Downlink | M | | Bit Rate 9.2.11 | Maximum Bit Rate in DL (i.e. from EPC to E-UTRAN) for the bearer. Details in TS 23.401 [12]. If the Extended E-RAB Maximum Bit Rate Downlink IE is included, the E-RAB Maximum Bit Rate Downlink IE shall be ignored. | - | - |
| E-RAB Maximum Bit Rate Uplink | M | | Bit Rate 9.2.11 | Maximum Bit Rate in UL (i.e. from E-UTRAN to EPC) for the bearer. Details in TS 23.401 [12]. If the Extended E-RAB Maximum Bit Rate Uplink IE is included, the E-RAB Maximum Bit Rate Uplink IE shall be ignored. | - | - |
| E-RAB Guaranteed Bit Rate Downlink | M | | Bit Rate 9.2.11 | Guaranteed Bit Rate (provided that there is data to deliver) in DL (i.e. from EPC to E-UTRAN) for the bearer. Details in TS 23.401 [12]. If the Extended E-RAB Guaranteed Bit Rate Downlink IE is included, the E-RAB Guaranteed Bit Rate Downlink IE shall be ignored. | - | - |
| E-RAB Guaranteed Bit Rate Uplink | M | | Bit Rate 9.2.11 | Guaranteed Bit Rate (provided that there is data to deliver) in UL (i.e. from E-UTRAN to EPC) for the bearer. Details in TS 23.401 [12]. If the Extended E-RAB Guaranteed Bit Rate Uplink IE is included, the E-RAB Guaranteed Bit Rate Uplink IE shall be ignored. | - | - |
| Extended E-RAB Maximum Bit Rate Downlink | 0 | | Extended Bit Rate 9.2.99 | Maximum Bit Rate in DL (i.e. from EPC to E-UTRAN) for the bearer. Details in TS 23.401 [12]. | _ | _ |

| Extended E-RAB Maximum Bit Rate Uplink | 0 | Extended Bit Rate 9.2.99 | Maximum Bit Rate in UL (i.e. from E-UTRAN to EPC) for the bearer. Details in TS 23.401 [12]. | - | - |
|---|---|-----------------------------|--|---|---|
| Extended E-RAB Guaranteed Bit Rate Downlink | 0 | Extended Bit Rate 9.2.99 | Guaranteed Bit Rate (provided that there is data to deliver) in DL (i.e. from EPC to E-UTRAN) for the bearer. Details in TS 23.401 [12]. | ľ | - |
| Extended E-RAB Guaranteed Bit Rate Uplink | 0 | Extended Bit Rate 9.2.99 | Guaranteed Bit Rate (provided that there is data to deliver) in UL (i.e. from E-UTRAN to EPC) for the bearer. Details in TS 23.401 [12]. | - | - |

9.2.11 Bit Rate

This IE indicates the number of bits delivered by E-UTRAN in UL or to E-UTRAN in DL or by UE in sidelink within a period of time, divided by the duration of the period. It is used, for example, to indicate the maximum or guaranteed bit rate for a GBR E-RAB, or an aggregated maximum bit rate.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|------------------------------|-----------------------|
| Bit Rate | М | | INTEGER (010,000,000,000) | The unit is: bit/s |

9.2.12 UE Aggregate Maximum Bit Rate

On Handover Aggregate Maximum Bitrate is transferred to the target eNB. In Dual Connectivity, UE Aggregate Maximum Bit Rate is split into MeNB UE Aggregate Maximum Bit Rate and SeNB UE Aggregate Maximum Bit Rate which are enforced by MeNB and SeNB respectively as specified in TS 36.300 [15]. The UE Aggregate Maximum Bitrate is applicable for all Non-GBR bearers per UE which is defined for the Downlink and the Uplink direction and provided by the MME to the eNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|-------|-----------------------------|--|-------------|----------------------|
| UE Aggregate Maximum Bit Rate Downlink | М | | Bit Rate 9.2.11 | If the Extended UE Aggregate Maximum Bit Rate Downlink IE is included, the UE Aggregate Maximum Bit Rate Downlink IE shall be ignored. | - | I |
| UE Aggregate Maximum Bit Rate Uplink | М | | Bit Rate 9.2.11 | If the Extended UE Aggregate Maximum Bit Rate Uplink IE is included, the UE Aggregate Maximum Bit Rate Uplink IE shall be ignored. | - | ŀ |
| Extended UE Aggregate Maximum Bit Rate Downlink | 0 | | Extended Bit Rate 9.2.99 | UE Aggregate Maximum Bit Rate in DL. Details in TS 23.401 [12]. | - | 1 |
| Extended UE Aggregate Maximum Bit Rate Uplink | 0 | | Extended Bit Rate 9.2.99 | UE Aggregate Maximum Bit Rate in UL. Details in TS 23.401 [12]. | _ | _ |

9.2.13 Message Type

The Message Type IE uniquely identifies the message being sent. It is mandatory for all messages.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-----------------|----------|-------|--|-----------------------|
| Procedure Code | M | | INTEGER (0255) | |
| Type of Message | М | | CHOICE (Initiating Message, Successful Outcome, Unsuccessful Outcome,) | |

9.2.14 ECGI

The E-UTRAN Cell Global Identifier (ECGI) is used to globally identify a cell (see TS 36.401 [2]).

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|-------|-----------------------|--|-------------|----------------------|
| PLMN Identity | M | | 9.2.4 | | _ | _ |
| E-UTRAN Cell Identifier | M | | BIT STRING (28) | The leftmost bits of the E-UTRAN Cell Identifier IE value correspond to the value of the eNB ID IE contained in the Global eNB ID IE (defined in section 9.2.22) identifying the eNB that controls the cell. | - | - |

9.2.15 COUNT Value

This information element indicates the 12 bit PDCP sequence number and the corresponding 20 bit Hyper frame number.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------|----------|-------|-----------------------|--------------------------|-------------|-------------------------|
| | | | reference | uescription | | Criticality |
| PDCP-SN | M | | INTEGER | | _ | _ |
| | | | (04095) | | | |
| HFN | M | | INTEGER | | _ | _ |
| | | | (01048575) | | | |

9.2.16 GUMMEI

This information element indicates the globally unique MME identity.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| GU Group Id | M | | 9.2.20 | | _ | _ |
| MME code | М | | OCTET STRING (1) | | _ | - |

9.2.17 UL Interference Overload Indication

This IE provides, per PRB, a report on interference overload. The interaction between the indication of UL Interference Overload and UL High Interference is implementation specific.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--|----------|---|---|---|
| UL Interference Overload Indication List | | 1 <maxnoofprbs ></maxnoofprbs | | |
| >UL Interference Overload Indication | М | | ENUMERATED (high interference, medium interference, low interference,) | Each PRB is identified by its position in the list: the first element in the list corresponds to PRB 0, the second to PRB 1, etc. |

| Range bound | Explanation |
|-------------|---|
| maxnoofPRBs | Maximum no. Physical Resource Blocks. Value is 110. |

9.2.18 UL High Interference Indication

This IE provides, per PRB, a 2 level report on interference sensitivity. The interaction between the indication of UL Overload and UL High Interference is implementation specific.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|---|
| HII | M | | BIT STRING (1110,) | Each position in the bitmap represents a PRB (first bit=PRB 0 and so on), for which value "1" indicates 'high interference sensitivity' and value "0" indicates 'low interference sensitivity'. The maximum number of Physical Resource Blocks is 110. |

9.2.19 Relative Narrowband Tx Power (RNTP)

This IE provides an indication on DL power restriction per PRB or per subframe per PRB (Enhanced RNTP) in a cell and other information needed by a neighbour eNB for interference aware scheduling.

| IE/Group Name | Presence | Range | IE type and | Semantics | Criticality | Assigned |
|---------------------------|----------|-------|---------------------------|--|-------------|-------------|
| DATE Dos DDD | M | | reference BIT STRING | description | | Criticality |
| RNTP Per PRB | IVI | | (6110,) | Each position in the bitmap represents a | _ | _ |
| | | | (6110,) | n _{PRB} value (i.e. first | | |
| | | | | bit=PRB 0 and so | | |
| | | | | on), for which the bit | | |
| | | | | value represents | | |
| | | | | RNTP (n _{PRB}), defined | | |
| | | | | in TS 36.213 [11]. | | |
| | | | | Value 0 indicates "Tx | | |
| | | | | not exceeding RNTP | | |
| | | | | threshold". | | |
| | | | | Value 1 indicates "no | | |
| | | | | promise on the Tx | | |
| | | | | power is given". The | | |
| | | | | IE is ignored if the | | |
| | | | | Enhanced RNTP IE is | | |
| RNTP Threshold | M | | ENUMERATE | included. RNTP _{threshold} is | | |
| RNTP Threshold | IVI | | D (-∞, -11, -10, | defined in TS 36.213 | _ | _ |
| | | | -9, -8, -7, -6, - | [11]. | | |
| | | | 5, -4, -3, -2, -1, | [[, ,], | | |
| | | | | | | |
| Number Of Cell-specific | М | | 0, 1, 2, 3,) ENUMERATE | P (number of antenna | _ | _ |
| Antenna Ports | | | D (1, 2, 4,) | ports for cell-specific | | |
| | | | | reference signals) | | |
| | | | | defined in TS 36.211 | | |
| | | | | [10] | | |
| P_B | M | | INTEGER | P _B is defined in TS | _ | _ |
| | | | (03,) | 36.213 [11]. | | |
| PDCCH Interference Impact | M | | INTEGER | Measured by | _ | _ |
| | | | (04,) | Predicted Number Of | | |
| | | | | Occupied PDCCH | | |
| | | | | OFDM Symbols (see | | |
| | | | | TS 36.211 [10]). | | |
| | | | | Value 0 means "no | | |
| | | | | prediction is | | |
| | | | | available". | | |
| Enhanced RNTP | 0 | | | | YES | ignore |

| | | T | T = .= === · · · - | | Т | |
|-------------------------------|---|----|--|--|---|--|
| >Enhanced RNTP Bitmap | M | | BIT STRING (128800,) | Each position in the bitmap represents a PRB in a subframe; value "00" indicates "Tx not exceeding RNTP Threshold", value "01" indicates "Tx not exceeding RNTP High Power Threshold", value "11" indicates that "no promise on the Tx power is given". Value "10" is ignored by the receiver". Each position is applicable only in positions corresponding to DL subframes. The first 2 bits correspond to PRB 0 of the first subframe for which the IE is valid, the following 2 bits correspond to PRB 1 of the first subframe for which the IE is valid, and so on. The bit string may span across multiple contiguous subframes (maximum 40). The length of the bit string is an integer multiple of $2 \times N_{RB}^{DL}$. N_{RB}^{DL} is defined in TS 36.211 [10]. The Enhanced RNTP pattern is continuously repeated. | | |
| >RNTP High Power Threshold | М | | ENUMERATE D (-∞, -11, -10, -9, -8, -7, -6, - 5, -4, -3, -2, -1, 0, 1, 2, 3,) | Defined as the RNTP _{threshold} in TS 36.213 [11]. | | |
| >Enhanced RNTP Start Time | | 01 | | | | |
| >>Start SFN | М | | INTEGER (01023,) | SFN of the radio frame containing the first subframe when the <i>Enhanced RNTP</i> IE is valid. | | |
| >>Start Subframe Number | М | | INTEGER (09,) | Subframe number, within the radio frame indicated by the Start SFN IE, of the first subframe when the Enhanced RNTP IE is valid. | | |

9.2.20 GU Group Id

The GU Group Id IE is the globally unique group id corresponding to a pool area.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------|----------|-------|------------------------|-----------------------|-------------|----------------------|
| PLMN Id | М | | PLMN Identity 9.2.4 | | _ | _ |
| MME Group Id | M | | OCTET STRING(2) | | _ | _ |

9.2.21 Location Reporting Information

This information element indicates how the location information should be reported.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------|----------|-------|--------------------------------------|-----------------------|-------------|----------------------|
| Event | M | | ENUMERATED (Change of serving cell,) | | - | - |
| Report Area | M | | ENUMERATED (ECGI,) | | _ | _ |

9.2.22 Global eNB ID

This IE is used to globally identify an eNB (see TS 36.401 [2]).

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------|----------|-------|--------------------------|---|-------------|----------------------|
| PLMN Identity | M | | 9.2.4 | | _ | _ |
| CHOICE eNB ID | M | | | | _ | _ |
| >Macro eNB ID | M | | BIT STRING (20) | Equal to the 20 leftmost bits of the value of the <i>E-UTRAN Cell Identifier</i> IE contained in the <i>ECGI</i> IE (see section 9.2.14) identifying each cell controlled by the eNB | ı | - |
| >Home eNB ID | M | | BIT STRING (28) | Equal to the value of the <i>E-UTRAN Cell Identifier</i> IE contained in the <i>ECGI</i> IE (see section 9.2.14) identifying the cell controlled by the eNB | _ | _ |
| >Short Macro eNB ID | M | | BIT STRING (SIZE(18)) | Equal to the 18 leftmost bits of the value of the <i>E-UTRAN Cell Identifier</i> IE contained in the <i>ECGI</i> IE (see section 9.2.14) identifying each cell controlled by the eNB. | - | - |
| >Long Macro eNB ID | M | | BIT STRING (SIZE(21)) | Equal to the 21 leftmost bits of the value of the <i>E-UTRAN Cell Identifier</i> IE contained in the <i>ECGI</i> IE (see section 9.2.14) identifying each cell controlled by the eNB. | | _ |

9.2.23 E-RAB ID

This IE uniquely identifies an E-RAB for a UE.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|-----------------------|
| E-RAB ID | М | | INTEGER (015,) | |

9.2.24 eNB UE X2AP ID

This information element, combined with the eNB UE X2AP ID Extension when present regardless its value, uniquely identifies an UE over the X2 interface within an eNB.

The usage of this IE is defined in TS 36.401 [2].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------|----------|-------|-----------------------|-----------------------|
| eNB UE X2AP ID | M | | INTEGER | |
| | | | (04095) | |

9.2.25 Subscriber Profile ID for RAT/Frequency priority

The Subscriber Profile ID IE for RAT/Frequency Selection Priority is used to define camp priorities in Idle mode and to control inter-RAT/inter-frequency handover in Active mode (TS 36.300 [15]).

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--|----------|-------|-----------------------|-----------------------|
| Subscriber Profile ID for RAT/Frequency Priority | М | | INTEGER (1256) | |

9.2.26 EARFCN

The E-UTRA Absolute Radio Frequency Channel Number defines the carrier frequency used in a cell for a given direction (UL or DL) in FDD or for both UL and DL directions in TDD.

| IE/Group Name | Presence | Range | IE Type and | Semantics Description |
|---------------|----------|-------|--------------|--------------------------------|
| | | | Reference | |
| EARFCN | M | | INTEGER | The relation between EARFCN |
| | | | (0maxEARFCN) | and carrier frequency (in MHz) |
| | | | | are defined in TS 36.104 [16]. |

| Range bound | Explanation |
|-------------|---|
| maxEARFCN | Maximum value of EARFCNs. Value is 65535. |

9.2.27 Transmission Bandwidth

The *Transmission Bandwidth* IE is used to indicate the UL or DL transmission bandwidth expressed in units of resource blocks " N_{RB} " (TS 36.104 [16]). The values bw1, bw6, bw15, bw25, bw50, bw75, bw100 correspond to the number of resource blocks " N_{RB} " 6, 15, 25, 50, 75, 100.

| IE/Group Name | Presence | Range | IE Type and | Semantics Description |
|------------------------|----------|-------|---------------------|-----------------------|
| | | | Reference | |
| Transmission Bandwidth | М | | ENUMERATED (bw6, | |
| | | | bw15, bw25, bw50, | |
| | | | bw75, bw100, , bw1) | |

9.2.28 E-RAB List

The IE contains a list of E-RAB identities with a cause value. It is used for example to indicate not admitted bearers.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------|----------|---------------------------------------|-----------------------|-----------------------|-------------|----------------------|
| E-RAB List Item | | 1 <maxnoofbeare rs=""></maxnoofbeare> | | | EACH | ignore |
| >E-RAB ID | M | | 9.2.23 | | ı | _ |
| >Cause | M | | 9.2.6 | | - | _ |

| Range bound | Explanation |
|----------------|--------------------------------------|
| maxnoofBearers | Maximum no. of E-RABs. Value is 256. |

9.2.29 UE Security Capabilities

The UE Security Capabilities IE defines the supported algorithms for encryption and integrity protection in the UE.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|------------------------------------|----------|-------|-----------------------|--|
| Encryption Algorithms | М | | BIT STRING (16,) | Each position in the bitmap represents an encryption algorithm: "all bits equal to 0" - UE supports no other algorithm than EEA0 "first bit" - 128-EEA1, "second bit" - 128-EEA2, "third bit" - 128-EEA3, other bits reserved for future use. Value '1' indicates support and value "0" indicates no support of the algorithm. Algorithms are defined in TS 33.401 [18]. |
| Integrity Protection Algorithms | M | | BIT STRING (16,) | Each position in the bitmap represents an integrity protection algorithm: all bits equal to 0" - UE supports no other algorithm than EIA0 (TS 33.401 [18]) "first bit" - 128-EIA1, "second bit" - 128-EIA2, "third bit" - 128-EIA3, other bits reserved for future use. Value '1' indicates support and value "0" indicates no support of the algorithm. Algorithms are defined in TS 33.401 [18]. |

9.2.30 AS Security Information

The AS Security Information IE is used to generate the key material to be used for AS security with the UE.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-------------------------|----------|-------|--------------------------|--|
| Key eNodeB Star | М | | BIT STRING (256) | KeNB* defined in TS 33.401 [18]. If the target cell belongs to multiple frequency bands, the source eNB selects the DL-EARFCN for KeNB* calculation as specified in section 10.3 of TS 36.331 [9]. |
| Next Hop Chaining Count | M | | INTEGER (07) | Next Hop Chaining Count (NCC) defined in TS 33.401 [18] |

9.2.31 Allocation and Retention Priority

This IE specifies the relative importance compared to other E-RABs for allocation and retention of the E-UTRAN Radio Access Bearer.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------------------|----------|-------|---|--|
| Priority Level | М | | INTEGER (015) | Desc.: This IE should be understood as "priority of allocation and retention" (see TS 23.401 [12]). Usage: Value 15 means "no priority". Values between 1 and 14 are ordered in decreasing order of priority, i.e. 1 is the highest and 14 the lowest. Value 0 shall be treated as a logical error if received. |
| Pre-emption Capability | M | | ENUMERATED(sh all not trigger pre- emption, may trigger pre-emption) | Descr.: This IE indicates the preemption capability of the request on other E-RABs Usage: The E-RAB shall not pre-empt other E-RABs or, the E-RAB may pre-empt other E-RABs The Pre-emption Capability indicator applies to the allocation of resources for an E-RAB and as such it provides the trigger to the pre-emption procedures/processes of the eNB. |
| Pre-emption Vulnerability | M | | ENUMERATED(not pre-emptable, pre-emptable) | Desc.: This IE indicates the vulnerability of the E-RAB to preemption of other E-RABs. Usage: The E-RAB shall not be pre-empted by other E-RABs or the E-RAB may be pre-empted by other RABs. Pre-emption Vulnerability indicator applies for the entire duration of the E-RAB, unless modified, and as such indicates whether the E-RAB is a target of the pre-emption procedures/processes of the eNB. |

9.2.32 Time To Wait

This IE defines the minimum allowed waiting times.

| IE/Group Name | Presence | Range | IE type and | Semantics description |
|---------------|----------|-------|-------------------|-----------------------|
| | | | reference | |
| Time To Wait | M | | ENUMERATED(1s, | |
| | | | 2s, 5s, 10s, 20s, | |
| | | | 60s,) | |

9.2.33 SRVCC Operation Possible

The IE indicates that both the UE and the MME are SRVCC-capable. E-UTRAN behaviour on reception of this is specified in TS 23.216 [20].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------------|----------|-------|------------------------|-----------------------|
| SRVCC Operation Possible | М | | ENUMERATED(Po ssible,) | |

9.2.34 Hardware Load Indicator

The Hardware Load Indicator IE indicates the status of the Hardware Load experienced by the cell.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------------------|----------|-------|-----------------------|-----------------------|
| DL Hardware Load Indicator | M | | Load Indicator | |
| | | | 9.2.36 | |
| UL Hardware Load Indicator | M | | Load Indicator | |
| | | | 9.2.36 | |

9.2.35 S1 TNL Load Indicator

The S1 TNL Load Indicator IE indicates the status of the S1 Transport Network Load experienced by the cell.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-------------------------|----------|-------|-----------------------|-----------------------|
| DL S1TNL Load Indicator | M | | Load Indicator | |
| | | | 9.2.36 | |
| UL S1TNL Load Indicator | M | | Load Indicator | |
| | | | 9.2.36 | |

9.2.36 Load Indicator

The Load Indicator IE indicates the status of Load.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------|----------|-------|----------------------------------|-----------------------|
| Load Indicator | M | | ENUMERATED (LowLoad, | |
| | | | MediumLoad, HighLoad, Overload,) | |

9.2.37 Radio Resource Status

The *Radio Resource Status* IE indicates the usage of the PRBs for all traffic in Downlink and Uplink (TS 36.314 [22], TS 23.203 [13]) and the usage of PDCCH CCEs for Downlink and Uplink scheduling.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-------------------------------|----------|-------|-----------------------|-----------------------|
| DL GBR PRB usage | M | | INTEGER (0100) | |
| UL GBR PRB usage | M | | INTEGER (0100) | |
| DL non-GBR PRB usage | M | | INTEGER (0100) | |
| UL non-GBR PRB usage | M | | INTEGER (0100) | |
| DL Total PRB usage | M | | INTEGER (0100) | |
| UL Total PRB usage | M | | INTEGER (0100) | |
| DL scheduling PDCCH CCE usage | 0 | | INTEGER (0100) | |
| UL scheduling PDCCH CCE usage | 0 | | INTEGER (0100) | |

9.2.38 UE History Information

The *UE History Information* IE contains information about cells that a UE has been served by in active state prior to the target cell. The overall mechanism is described in TS 36.300 [15].

NOTE: The definition of this IE is aligned with the definition of the *UE History Information* IE in TS 36.413 [4].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------------------------|----------|--|-----------------------|-----------------------|-------------|----------------------|
| Last Visited Cell List | | 1 <maxnoofcells< td=""><td></td><td>Most recent</td><td>-</td><td>_</td></maxnoofcells<> | | Most recent | - | _ |
| | | > | | information is | | |
| | | | | added to the top | | |
| | | | | of this list | | |
| >Last Visited Cell Information | М | | 9.2.39 | | 1 | _ |

| Range bound | Explanation |
|--------------|---|
| maxnoofCells | Maximum number of last visited cell information records that can be |
| | reported in the IE. Value is 16. |

9.2.39 Last Visited Cell Information

The Last Visited Cell Information may contain E-UTRAN or UTRAN or GERAN cell specific information.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|-------|-----------------------|------------------------------|-------------|----------------------|
| CHOICE Last Visited Cell Information | М | | | | - | - |
| >E-UTRAN Cell | | | | | - | - |
| >>Last Visited E-UTRAN Cell Information | M | | 9.2.40 | | - | 1 |
| >UTRAN Cell | | | | | - | - |
| >>Last Visited UTRAN Cell Information | M | | OCTET STRING | Defined in TS 25.413 [24] | | |
| >GERAN Cell | | | | | - | - |
| >>Last Visited GERAN Cell Information | M | | 9.2.41 | | - | - |

9.2.40 Last Visited E-UTRAN Cell Information

The Last Visited E-UTRAN Cell Information contains information about a cell that is to be used for RRM purposes.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|-------|-----------------------|---|-------------|----------------------|
| Global Cell ID | M | | ECGI 9.2.14 | | - | 1 |
| Cell Type | M | | 9.2.42 | | - | - |
| Time UE stayed in Cell | M | | INTEGER (04095) | The duration of the time the UE stayed in the cell in seconds. If the UE stays in a cell more than 4095s, this IE is set to 4095. | - | - |
| Time UE stayed in Cell Enhanced Granularity | 0 | | INTEGER (040950) | The duration of the time the UE stayed in the cell in 1/10 seconds. If the UE stays in a cell more than 4095s, this IE is set to 40950. | YES | ignore |
| HO Cause Value | 0 | | Cause 9.2.6 | The cause for the handover from the E-UTRAN cell. | YES | ignore |

9.2.41 Last Visited GERAN Cell Information

The Last Visited Cell Information for GERAN is currently undefined.

NOTE: If in later Releases this is defined, the choice type may be extended with the actual GERAN specific information.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| CHOICE Last Visited | M | | | | - | - |
| GERAN Cell Information | | | | | | |
| >Undefined | М | | NULL | | - | - |

9.2.42 Cell Type

The cell type provides the cell coverage area.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Cell Size | M | | ENUMERATED | | - | - |
| | | | (verysmall, small, | | | |
| | | | medium, large,) | | | |

9.2.43 Number of Antenna Ports

The Number of Antenna Ports IE is used to indicate the number of cell specific antenna ports.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-------------------------|----------|-------|--------------------------|---|
| Number of Antenna Ports | | | ENUMERATED (an1, | an1 = One antenna port |
| | | | an2, an4,) | an2 = Two antenna ports an4 = Four antenna ports |

9.2.44 Composite Available Capacity Group

The *Composite Available Capacity Group* IE indicates the overall available resource level in the cell in Downlink and Uplink.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--|----------|-------|--|-----------------------|-------------|----------------------|
| Composite Available Capacity Downlink | M | | Composite Available Capacity 9.2.45 | For the Downlink | - | - |
| Composite Available Capacity Uplink | M | | Composite Available Capacity 9.2.45 | For the Uplink | - | - |

9.2.45 Composite Available Capacity

The *Composite Available Capacity* IE indicates the overall available resource level in the cell in either Downlink or Uplink.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------|----------|-------|-----------------------|---|-------------|----------------------|
| Cell Capacity Class Value | 0 | | 9.2.46 | | - | - |
| Capacity Value | M | | 9.2.47 | '0' indicates no resource is available, Measured on a linear scale. | - | - |

9.2.46 Cell Capacity Class Value

The *Cell Capacity Class Value* IE indicates the value that classifies the cell capacity with regards to the other cells. The *Cell Capacity Class Value* IE only indicates resources that are configured for traffic purposes.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------|----------|-------|-----------------------|--|-------------|----------------------|
| Cell Capacity Class Value | М | | INTEGER (1100,) | Value 1 shall indicate the minimum cell capacity, and 100 shall indicate the maximum cell capacity. There should be a linear relation between cell capacity and Cell Capacity Class Value. | - | - |

9.2.47 Capacity Value

The Capacity Value IE indicates the amount of resources that are available relative to the total E-UTRAN resources. The capacity value should be measured and reported so that the minimum E-UTRAN resource usage of existing services is reserved according to implementation. The Capacity Value IE can be weighted according to the ratio of cell capacity class values, if available.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------|----------|-------|-----------------------|--|-------------|----------------------|
| Capacity Value | М | | INTEGER (0100) | Value 0 shall indicate no available capacity, and 100 shall indicate maximum available capacity . Capacity Value should be measured on a linear scale. | - | - |

9.2.48 Mobility Parameters Information

The *Mobility Parameters Information* IE contains the change of the Handover Trigger as compared to its current value. The Handover Trigger corresponds to the threshold at which a cell initialises the handover preparation procedure towards a specific neighbour cell. Positive value of the change means the handover is proposed to take place later.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-------------------------|----------|-------|-----------------------|--|
| Handover Trigger Change | М | | INTEGER (- 2020) | The actual value is IE value * 0.5 dB. |

9.2.49 Mobility Parameters Modification Range

The Mobility Parameters Modification Range IE contains the range of Handover Trigger Change values permitted by the eNB₂ at the moment the MOBILITY CHANGE FAILURE message is sent.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-------------------------|----------|-------|-----------------------|------------------------|
| Handover Trigger Change | M | | INTEGER (- | The actual value is IE |
| Lower Limit | | | 2020) | value * 0.5 dB. |
| Handover Trigger Change | M | | INTEGER (- | The actual value is IE |
| Upper Limit | | | 2020) | value * 0.5 dB. |

9.2.50 PRACH Configuration

This IE indicates the PRACH resources used in neighbor cell.

| IE/Group Name | Presence | Range | IE type and | Semantics | Criticality | Assigned |
|-----------------------------|----------|-------|-------------|-----------------------|-------------|-------------|
| | | | reference | description | | Criticality |
| RootSequenceIndex | M | | INTEGER | See section 5.7.2. in | _ | _ |
| | | | (0837) | TS 36.211 [10] | | |
| ZeroCorrelationZoneConfigur | M | | INTEGER | See section 5.7.2. in | _ | - |
| ation | | | (015) | TS 36.211 [10] | | |
| HighSpeedFlag | M | | BOOLEAN | TRUE corresponds to | _ | _ |
| | | | | Restricted set and | | |
| | | | | FALSE to | | |
| | | | | Unrestricted set. See | | |
| | | | | section 5.7.2 in TS | | |
| | | | | 36.211 [10] | | |
| PRACH-FrequencyOffset | M | | INTEGER | See section 5.7.1 of | _ | _ |
| | | | (094) | TS 36.211 [10] | | |
| PRACH-ConfigurationIndex | 0 | | INTEGER | Mandatory for TDD, | _ | - |
| _ | | | (063) | shall not be present | | |
| | | | ` | for FDD. | | |
| | | | | See section 5.7.1. in | | |
| | | | | TS 36.211 [10] | | |

9.2.51 Subframe Allocation

The *Subframe Allocation* IE is used to indicate the subframes that are allocated for MBSFN within the radio frame allocation period as defined in TS 36.331 [9].

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-----------------|----------|-------|-----------------------|-----------------------|
| CHOICE Subframe | M | | | |
| Allocation | | | | |
| >Oneframe | M | | BITSTRING (SIZE(6)) | |
| >Fourframes | M | | BITSTRING (SIZE(24)) | |

9.2.52 CSG Membership Status

This element indicates the membership status of the UE to a particular CSG.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-----------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| CSG Membership Status | M | | ENUMERATED | | - | - |
| · | | | (member, not- | | | |
| | | | member) | | | |

9.2.53 CSG ID

This element indicates the identifier of the Closed Subscriber Group.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| CSG ID | M | | BIT STRING | | - | - |
| | | | (SIZE (27)) | | | |

9.2.54 ABS Information

This IE provides information about which sub frames the sending eNB is configuring as almost blank subframes and which subset of almost blank subframes are recommended for configuring measurements towards the UE. Almost blank subframes are subframes with reduced power on some physical channels and/or reduced activity.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---|----------|-------|--------------------------|--|
| CHOICE ABS Information | M | | _ | - |
| >FDD | | | _ | _ |
| >>ABS Pattern Info | M | | BIT STRING (SIZE(40)) | Each position in the bitmap represents a DL subframe, for which value "1" indicates 'ABS' and value "0" indicates 'non ABS'. The first position of the ABS pattern corresponds to subframe 0 in a radio frame where SFN = 0. The ABS pattern is continuously repeated in all radio frames. The maximum number of subframes is 40. |
| >>Number Of Cell- specific Antenna Ports | M | | ENUMERATED (1, 2, 4,) | P (number of antenna ports for cell-specific reference signals) defined in TS 36.211 [10] |
| >>Measurement Subset | M | | BIT STRING (SIZE(40)) | Indicates a subset of the ABS Pattern Info above, and is used to configure specific measurements towards the UE. |
| >TDD | | | _ | _ |
| >>ABS Pattern Info | M | | BIT STRING (170,) | Each position in the bitmap represents a subframe. Value "1" indicates 'ABS' and value "0" indicates 'non ABS' which is applicable only in positions corresponding to the DL direction. The maximum number of subframes depends on UL/DL subframe configuration. The maximum number of subframes is 20 for UL/DL subframe configuration 1~5; 60 for UL/DL subframe configuration 0. UL/DL subframe configuration 6; 70 for UL/DL subframe configuration 0. UL/DL subframe configuration 1TS 36.211 [10]. The first position of the ABS pattern corresponds to subframe 0 in a radio frame where SFN = 0. The ABS pattern is continuously repeated in all radio frames, and restarted each time SFN = 0. |
| >>Number Of Cell- specific Antenna Ports | M | | ENUMERATED (1, 2, 4,) | P (number of antenna ports for cell-specific reference signals) defined in TS 36.211 [10] |
| >>Measurement Subset | М | | BIT STRING (170,) | Indicates a subset of the ABS Pattern Info above, and is used to configure specific measurements towards the UE |

| >ABS Inactive | М | NULL | Indicates that interference |
|---------------|---|------|-----------------------------|
| | | | coordination by means of |
| | | | almost blank sub frames is |
| | | | not active |

9.2.55 Invoke Indication

This IE provides an indication about which type of information the sending eNB would like the receiving eNB to send back.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-------------------|----------|-------|--|-----------------------|
| Invoke Indication | M | | ENUMERATED (ABS Information,, Start NAICS Information, Stop NAICS Information) | - |

9.2.56 MDT Configuration

The IE defines the MDT configuration parameters.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|--------------------------------|-------------------------|--|--|--|-------------|----------------------|
| MDT Activation | M | | ENUMERATED(Imme diate MDT only, Immediate MDT and Trace,) | | _ | - |
| CHOICE Area Scope of MDT | М | | | | _ | _ |
| >Cell Based | | | | | _ | _ |
| >>Cell ID List for MDT | | 1 <maxno ofCellIDfor MDT></maxno | | | _ | _ |
| >>>ECGI | M | | 9.2.14 | | _ | _ |
| >TA Based | | | | | _ | _ |
| >>TA List for MDT | | 1 <maxno ofTAforM DT></maxno | | | _ | _ |
| >>>TAC | М | | OCTET STRING (2) | Tracking Area Code. The TAI is derived using the current serving PLMN. | _ | _ |
| >PLMN Wide >TAI based | | | NULL | | - | - |
| >>TAI List for MDT | | 1 <maxno ofTAforM DT></maxno | | | | |
| >>>TAC | M | | OCTET STRING (2) | Tracking Area Code | | |
| >>>PLMN | M | | 9.2.4 | - | | |
| Identity Measurements to | M | | BITSTRING | Each position in the | | |
| Activate | | | (SIZE(8)) | bitmap indicates a MDT measurement, as defined in TS 37.320 [25]. First Bit = M1, Second Bit = M2, Third Bit = M3, Fourth Bit = M4, Fifth Bit = M5, Sixth Bit = logging of M1 from event triggered measurement reports according to existing RRM configuration. Seventh Bit = M6, Eighth Bit = M7. Value "1" indicates "activate" and value "0" indicates "do not activate". | | |
| M1 Reporting Trigger | M | | ENUMERATED (periodic, A2event- triggered,, A2event-triggered periodic) | This IE shall be ignored if the <i>Measurements to Activate</i> IE has the first bit set to "0". | _ | _ |
| M1 Threshold Event A2 | C- ifM1A2trig ger | | | Included in case of event- triggered or event- triggered periodic reporting for measurement M1 | - | - |
| >CHOICE Threshold | М | | | | _ | _ |
| >>RSRP | | | | | _ | - |
| >>>Threshold RSRP >>RSRQ | M | | INTEGER (097) | This IE is defined in TS 36.331 [9]. | _ | _ |
| >>RSRQ >>>Threshold RSRQ | M | | INTEGER (034) | This IE is defined in TS 36.331 [9]. | | |

| M1 Periodic reporting | C- | | Included in case of | | |
|-----------------------------------|-------------------|--|---|-----|--------|
| With a choose reporting | ifperiodic MDT | | periodic or event-triggered periodic reporting for | | |
| | | | measurement M1 | | |
| >Report interval | M | ENUMERATED (ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, min1, min6, min12, min30, min60) | This IE is defined in TS 36.331 [9]. | - | _ |
| >Report amount | M | ENUMERATED (1, 2, 4, 8, 16, 32, 64, infinity) | Number of reports | - | - |
| M3 Configuration | C-ifM3 | 9.2.61 | | YES | ignore |
| M4 Configuration | C-ifM4 | 9.2.62 | | YES | ignore |
| M5 Configuration | C-ifM5 | 9.2.63 | | YES | ignore |
| MDT Location Information | 0 | BITSTRING(SIZE(8)) | Each position in the bitmap represents requested location information as defined in TS 37.320 [31]. First Bit = GNSS Second Bit = E-CID information. Other bits are reserved for future use and are ignored if received. Value "1" indicates "activate" and value "0" indicates "do not activate". The eNB shall ignore the first bit unless the Measurements to Activate IE has the first bit or the sixth bit set to "1". | YES | ignore |
| Signalling based MDT PLMN List | 0 | MDT PLMN List 9.2.64 | | YES | ignore |
| M6 Configuration | C-ifM6 | 9.2.87 | | YES | ignore |
| M7 Configuration | C-ifM7 | 9.2.88 | | YES | ignore |

| Range bound | Explanation |
|---------------------|--|
| maxnoofCellIDforMDT | Maximum no. of Cell ID subject for MDT scope. Value is 32. |
| maxnoofTAforMDT | Maximum no. of TA subject for MDT scope. Value is 8. |

| Condition | Explanation |
|---------------|--|
| ifM1A2trigger | This IE shall be present if the <i>Measurements to Activate</i> IE has the first bit set to "1" and the <i>M1 Reporting Trigger</i> IE is set to "A2event-triggered" or to "A2event-triggered periodic". |
| ifperiodicMDT | This IE shall be present if the <i>M1 Reporting Trigger</i> IE is set to "periodic" or to "A2event-triggered periodic". |
| ifM3 | This IE shall be present if the <i>Measurements to Activate</i> IE has the third bit set to "1". |
| ifM4 | This IE shall be present if the <i>Measurements to Activate</i> IE has the fourth bit set to "1". |
| ifM5 | This IE shall be present if the <i>Measurements to Activate</i> IE has the fifth bit set to "1". |
| ifM6 | This IE shall be present if the <i>Measurements to Activate</i> IE has the seventh bit set to "1". |
| ifM7 | This IE shall be present if the <i>Measurements to Activate</i> IE has the eighth bit set to "1". |

9.2.57 Void

9.2.58 ABS Status

The ABS Status IE is used to aid the eNB designating ABS to evaluate the need for modification of the ABS pattern.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-------------------------------|----------|-------|-----------------------|---|
| DL ABS status | M | | INTEGER (0100) | Percentage of used ABS resources. The numerator of the percentage calculation consists of resource blocks within the ABS indicated in the Usable ABS Pattern Info IE allocated by the eNB2 for DL traffic needing protection by ABS from inter-cell interference for DL scheduling, or allocated by the eNB2 for other reasons (e.g. some control channels). The denominator of the percentage calculation is the total quantity of resource blocks within the ABS indicated in the Usable ABS Pattern Info IE. |
| CHOICE Usable ABS Information | М | | _ | |
| >FDD | | | _ | _ |
| >>Usable ABS Pattern Info | M | | BIT STRING (SIZE(40)) | Each position in the bitmap represents a subframe, for which value "1" indicates 'ABS that has been designated as protected from inter-cell interference by the eNB ₁ , and available to serve this purpose for DL scheduling in the eNB ₂ ' and value "0" is used for all other subframes. The pattern represented by the bitmap is a subset of, or the same as, the corresponding ABS Pattern Info IE conveyed in the LOAD INFORMATION message from the eNB ₁ . |
| >TDD | | | _ | _ |
| >>Usable ABS Pattern Info | M | | BIT STRING (170) | Each position in the bitmap represents a subframe, for which value "1" indicates 'ABS that has been designated as protected from inter-cell interference by the eNB ₁ , and available to serve this purpose for DL scheduling in the eNB ₂ ' and value "0" is used for all other subframes. The pattern represented by the bitmap is a subset of, or the same as, the corresponding ABS Pattern Info IE conveyed in the LOAD INFORMATION message from the eNB ₁ . |

9.2.59 Management Based MDT Allowed

This information element is used by the eNB to allow selection of the UE for management based MDT as described in TS 32.422 [6].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------------|----------|-------|-----------------------|-----------------------|
| Management Based MDT | М | | ENUMERATED | |
| Allowed | | | (Allowed,) | |

9.2.60 MultibandInfoList

The *MultibandInfoList* IE contains the additional frequency band indicators that a cell belongs to listed in decreasing order of preference, see TS 36.331 [9].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|--|-----------------------|---|-------------|----------------------|
| BandInfo | | 1 <maxnoofband s></maxnoofband | | | _ | - |
| >FrequencyBandIndicator | М | | INTEGER (1 256,) | E-UTRA operating band as defined in TS 36.101 [42, table 5.5-1] | - | - |

| Range bound | Explanation |
|--------------|---|
| maxnoofBands | Maximum number of frequency bands that a cell belongs to. The |
| | value is 16. |

9.2.61 M3 Configuration

This IE defines the parameters for M3 measurement collection.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------------|----------|-------|-----------------------|-----------------------|
| M3 Collection Period | M | | ENUMERATED | |
| | | | (ms100, ms1000, | |
| | | | ms10000,) | |

9.2.62 M4 Configuration

This IE defines the parameters for M4 measurement collection.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------------|----------|-------|--|-----------------------|
| M4 Collection Period | M | | ENUMERATED (ms1024, ms2048, ms5120, ms10240, min1,) | |
| M4 Links to log | M | | ENUMERATED(uplin k, downlink, both-uplink-and-downlink,) | |

9.2.63 M5 Configuration

This IE defines the parameters for M5 measurement collection.

| IE/Group Name | Presence | Range | IE type and | Semantics description |
|----------------------|----------|-------|----------------------|-----------------------|
| | | | reference | |
| M5 Collection Period | M | | ENUMERATED | |
| | | | (ms1024, ms2048, | |
| | | | ms5120, ms10240, | |
| | | | min1,) | |
| M5 Links to log | M | | ENUMERATED(uplin | |
| | | | k, downlink, both- | |
| | | | uplink-and-downlink, | |
| | | |) | |

9.2.64 MDT PLMN List

The purpose of the MDT PLMN List IE is to provide the list of PLMNs allowed for MDT.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------|----------|--|-----------------------|-----------------------|
| MDT PLMN List | | 1 <maxnoof MDTPLMNs ></maxnoof | | |
| >PLMN Identity | М | | 9.2.4 | |

| Range bound | Explanation |
|-----------------|---|
| maxnoofMDTPLMNs | Maximum no. of PLMNs in the MDT PLMN list. Value is 16. |

9.2.65 EARFCN Extension

The E-UTRA Absolute Radio Frequency Channel Number Extension defines the carrier frequency used in a cell for a given direction (UL or DL) in FDD or for both UL and DL directions in TDD.

| IE/Group Name | Presence | Range | IE Type and | Semantics Description |
|------------------|----------|-------|-------------------------|--|
| | | | Reference | |
| EARFCN Extension | М | | INTEGER (maxEARFCN+1 | The relation between EARFCN and carrier frequency (in MHz) are defined |
| | | | newmaxEARFCN,) | in TS 36.104 [16]. |

| Range bound | Explanation |
|--------------|--|
| maxEARFCN | Maximum value of EARFCNs. Value is 65535. |
| newmaxEARFCN | New maximum value of EARFCNs. Value is 262143. |

9.2.66 COUNT Value Extended

This information element indicates the 15 bit long PDCP SN and the corresponding 17 bit long Hyper Frame Number.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| PDCP-SN Extended | М | | INTEGER | | - | _ |
| | | | (032767) | | | |
| HFN Modified | M | | INTEGER | | _ | _ |
| | | | (0131071) | | | |

9.2.67 Extended UL Interference Overload Info

This IE provides report on interference overload for the set of subframes that are subject to UL-DL subframe reconfiguration. This IE applies to TDD only.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---|----------|-------|---|---|
| Associated Subframes | M | | BITSTRING (SIZE(5)) | The set of subframe(s) to which the Extended UL interference overload indication is applicable. The bitmap from the least significant bit position to the most significant bit position represents subframes #{3, 4, 7, 8, 9} in a radio frame. Value "1" in a bit position indicates that the Extended UL interference overload indication is applicable to the corresponding subframe; and value "0" indicates otherwise. |
| Extended UL Interference Overload Indication | M | | UL Interference Overload Indication 9.2.17 | |

9.2.68 RNL Header

The RNL Header IE indicates the target eNB ID and source eNB ID.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Source eNB ID | М | | Global eNB ID | | - | - |
| | | | 9.2.22 | | | |
| Target eNB ID | 0 | | Global eNB ID | | - | - |
| | | | 9.2.22 | | | |

9.2.69 Masked IMEISV

This information element contains the IMEISV value with a mask, to identify a terminal model without identifying an individual Mobile Equipment.

| IE/Group Name | Presence | Range | IE type and | Semantics description |
|---------------|----------|-------|--------------------------|--|
| | | | reference | |
| Masked IMEISV | М | | BIT STRING (SIZE(64)) | Coded as the International Mobile station Equipment Identity and Software Version Number (IMEISV) defined in TS 23.003 [29] with the last 4 digits of the SNR masked by setting the corresponding bits to 1. |

9.2.70 Expected UE Behaviour

This IE defines the behaviour of a UE with predictable activity and/or mobility behaviour, to assist the eNB/en-gNB in determining the optimum RRC connection time.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------------------|----------|-------|---|---|
| Expected UE Activity Behaviour | M | | 9.2.71 | |
| Expected HO Interval | 0 | | ENUMERATED (sec15, sec30, sec60, sec90, sec120, sec180, long-time,) | Indicates the expected time interval between inter-eNB handovers. If "long-time" is included, the interval between inter-eNB handovers is expected to be longer than 180 seconds. |

9.2.71 Expected UE Activity Behaviour

Indicates information about the expected "UE activity behaviour" as defined in TS 23.401 [12].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---|----------|-------|---|--|
| Expected Activity Period | 0 | | INTEGER (130 40 50 60 80 100 120 150 180 181,) | If this IE is set to "181" the expected activity time is longer than 180 seconds. The remaining values indicate the expected activity time in [seconds]. |
| Expected Idle Period | 0 | | INTEGER (130 40 50 60 80 100 120 150 180 181,) | If this IE is set to "181" the expected idle time is longer than 180 seconds. The remaining values indicate the expected idle time in [seconds]. |
| Source of UE Activity Behaviour Information | 0 | | ENUMERATED (subscription information, statistics,) | If "subscription information" is indicated, the information contained in the Expected Activity Period IE and the Expected Idle Period IE, if present, is derived from subscription information. If "statistics" is indicated, the information contained in the Expected Activity Period IE and the Expected Idle Period IE, if present, is derived from statistical information. |

9.2.72 SeNB Security Key

The SeNB Security Key IE is used to apply security in the SeNB as defined in TS 33.401 [18].

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------|----------|-------|--------------------------|---|
| SeNB Security | M | | BIT STRING | The S-KeNB which is provided by the MeNB, |
| Key | | | (SIZE(256)) | see TS 33.401 [18]. |

9.2.73 SCG Change Indication

The SCG Change Indication IE is either used to request the SeNB to prepare the SCG Change in the SeNB or to request the MeNB to initiate the SCG Change towards the UE (see TS 36.300 [15]).

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------|----------|-------|-----------------------|-----------------------|
| SCG Change | M | | ENUMERATED | |
| Indication | | | (PDCPCountWrapAround, | |
| | | | PSCellChange, other,) | |

9.2.74 CoMP Information

This IE provides the list of CoMP hypothesis sets, where each CoMP hypothesis set is the collection of CoMP hypothesis(es) of one or multiple cells and each CoMP hypothesis set is associated with a benefit metric.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-----------------------------|----------|--|------------------------|---|
| CoMP Information Item | | 1 <maxnoofcomph ypothesisSet></maxnoofcomph | | |
| >CoMP Hypothesis Set | M | | 9.2.75 | |
| >Benefit Metric | M | | INTEGER (- 101100,) | Value -100 indicates the maximum cost, and 100 indicates the maximum benefit. Value -101 indicates unknown benefit. Values from -100 to 100 should be calculated on a linear scale. |
| CoMP Information Start Time | | 01 | | |
| >Start SFN | М | | INTEGER (01023,) | SFN of the radio frame containing the first subframe when the CoMP Information IE is valid. |
| >Start Subframe Number | M | | INTEGER (09,) | Subframe number, within the radio frame indicated by the <i>Start SFN</i> IE, of the first subframe when the <i>CoMP Information</i> IE is valid. |

| Range bound | Explanation |
|--------------------------|---|
| maxnoofCoMPHypothesisSet | Maximum number of CoMP Hypothesis sets. The value is 256. |

9.2.75 CoMP Hypothesis Set

This IE provides a set of CoMP hypotheses. A CoMP hypothesis is hypothetical PRB-specific resource allocation information for a cell.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------------|----------|---|------------------------|---|
| CoMP Hypothesis Set Item | | 1 <maxnoofcom PCells></maxnoofcom | | |
| >Cell ID | M | | ECGI 9.2.14 | ID of the cell for which the CoMP Hypothesis IE is applied. |
| >CoMP Hypothesis | M | | BIT STRING (64400,) | Each position in the bitmap represents a PRB in a subframe, for which value "1" indicates 'interference protected resource' and value "0" indicates 'resource with no utilization constraints,' which is applicable only in positions corresponding to the DL direction. The first bit corresponds to PRB 0 of the first subframe for which the IE is valid, the second bit corresponds to PRB 1 of the first subframe for which the IE is valid, and so on. The bit string may span across multiple contiguous subframes. The length of the bit string is an integer (maximum 40) multiple of N_{RB}^{DL} . N_{RB}^{DL} is defined in TS 36.211 [10]. The CoMP hypothesis pattern is continuously repeated. |

| Range bound | Explanation |
|------------------|--|
| maxnoofCoMPCells | Maximum number of cells in a CoMP hypothesis set. Value is 32. |

9.2.76 RSRP Measurement Report List

This IE provides RSRP measurement reports of UEs served by the sending eNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------------------|----------|--------------------------------------|--------------------------|---|
| RSRP Measurement Report Item | | 1 <maxuereport></maxuereport> | | |
| >RSRP Measurement Result | | 1 <maxcellreport></maxcellreport> | | |
| >>RSRP Cell ID | М | | ECGI 9.2.14 | ID of the cell on which the RSRP is measured. |
| >>RSRP Measured | М | | INTEGER (097,) | Measured RSRP. Defined in TS 36.331 [9]. |
| >UE ID | 0 | | BIT STRING (SIZE(16)) | ID assigned by eNB ₂ for the UE. |

| Range bound | Explanation |
|---------------|---|
| maxUEReport | Maximum number of UE measurement reports. Value is 128. |
| maxCellReport | Maximum number of reported cells. The value is 9. |

9.2.77 Dynamic DL transmission information

This IE contains assistance information for DL interference mitigation.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------------|----------|---------------------------|--|---|
| CHOICE NAICS Information | M | | | |
| >NAICS Active | | | | |
| >>Transmission Modes | 0 | | BIT STRING (SIZE(8)) | The set bits indicate some or all transmission modes: 1, 2, 3, 4, 6, 8, 9, 10, as defined in TS 36.213 [23, 7.1]. The first/ leftmost bit is for transmission mode 1, the second bit is for transmission mode 2, and so on. |
| >>P_B | 0 | | INTEGER (03) | See TS 36.213 [23, Table 5.2-1] |
| >>P_A_list | | 0 <maxnoofpa></maxnoofpa> | | |
| >>>P_A | M | | ENUMERATED (dB-6, dB- 4dot77, dB-3, dB-1dot77, dB0, dB1, dB2, dB3,) | See P _A TS 36.213 [23, 5.2]. Value dB-6 corresponds to -6 dB, dB- 4dot77 corresponds to - 4.77 dB etc. |
| >NAICS Inactive | | | NULL | |

| Range bound | Explanation |
|-------------|---|
| maxnoofPA | Maximum no of P _A values that can be configured. Value is 3. |

9.2.78 ProSe Authorized

This IE provides information on the authorization status of the UE for ProSe service(s).

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------------------|----------|-------|--|--|-------------|----------------------|
| ProSe Direct Discovery | 0 | | ENUMERATED (authorized, not authorized,) | Indicates whether the UE is authorized for ProSe Direct Discovery | - | - |
| ProSe Direct Communication | 0 | | ENUMERATED (authorized, not authorized,) | Indicates whether the UE is authorized for ProSe Direct Communication | - | - |
| ProSe UE-to- Network Relaying | 0 | | ENUMERATED (authorized, not authorized,) | Indicates whether the UE is authorized to act as ProSe UE-to-Network Relay | YES | ignore |

9.2.79 CSI Report

This IE provides CSI reports of UEs served by the cell for which the information is provided.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------------------------|----------|--------------------------------------|-----------------------------|--|
| CSI Report per Cell | | 1 <maxuereport></maxuereport> | | |
| >UE ID | M | | BIT STRING (SIZE(16)) | ID assigned by eNB ₂ for the UE. |
| >CSI Report per CSI Process | | 1 <maxcsiprocess></maxcsiprocess> | | |
| >>CSI Process Configuration Index | M | | INTEGER (17,) | Indicates one of the possible CSI Process configurations in the serving cell. |
| >>CSI Report per CSI Process Item | | 1 <maxcsireport></maxcsireport> | | |
| >>>RI | М | | INTEGER (18,) | The RI corresponding to the CQI being reported for this CSI process item. Value defined in TS 36.213 [11]. |
| >>>Wideband CQI | M | | 9.2.80 | |
| >>>Subband Size | M | | ENUMERATED (2, 3, 4, 6, 8,) | Corresponds to a value of subband size k defined in TS 36.213 [11] for the system bandwidth $N_{\rm RB}^{\rm DL}$. |
| >>>Subband CQI List | | 0 <maxsubband></maxsubband> | | KB |
| >>>Subband CQI | M | | 9.2.81 | |
| >>>Subband Index | M | | INTEGER (027,) | |

| Range bound | Explanation |
|---------------|--|
| maxUEReport | Maximum number of UE. Value is 128. |
| maxCSIProcess | Maximum number of CSI processes per UE. The value is 4. |
| maxCSIReport | Maximum number of CSI Reports per CSI Process. The value is 2. |
| maxSubband | Maximum number of subbands. The value is 14. |

9.2.80 Wideband CQI

This IE indicates the Wideband CQI as defined in TS 36.213 [11].

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-----------------------------|----------|-------|-----------------------|----------------------------|
| Wideband CQI Codeword | M | | INTEGER (015,) | Value defined in TS 36.213 |
| 0 | | | | [11]. |
| CHOICE Wideband CQI | 0 | | | |
| Codeword 1 | | | | |
| >4-bit CQI | M | | INTEGER (015,) | Value defined in TS 36.213 |
| | | | | [11]. |
| >3-bit spatial differential | M | | INTEGER (07,) | Value defined in TS 36.213 |
| CQI | | | | [11]. |

9.2.81 Subband CQI

This IE indicates the Subband CQI as defined in TS 36.213 [11].

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-----------------------------|----------|-------|-----------------------|----------------------------------|
| CHOICE Subband CQI | M | | | |
| Codeword 0 | | | | |
| >4-bit CQI | М | | INTEGER (015,) | Value defined in TS 36.213 [11]. |
| >2-bit Subband | M | | INTEGER (03,) | Value defined in TS 36.213 |
| differential CQI | | | | [11]. |
| >2-bit differential CQI | M | | INTEGER (03,) | Value defined in TS 36.213 |
| | | | | [11]. |
| CHOICE Subband CQI | 0 | | | |
| Codeword 1 | | | | |
| >4-bit CQI | M | | INTEGER (015,) | Value defined in TS 36.213 |
| | | | | [11]. |
| >3-bit spatial differential | M | | INTEGER (07,) | Value defined in TS 36.213 |
| CQI | | | | [11]. |
| >2-bit Subband | M | | INTEGER (03,) | Value defined in TS 36.213 |
| differential CQI | | | | [11]. |
| >2-bit differential CQI | M | | INTEGER (03,) | Value defined in TS 36.213 |
| | | | | [11]. |

9.2.82 COUNT Value for PDCP SN Length 18

This information element indicates the 18 bit long PDCP SN and the corresponding 14 bit long Hyper Frame Number.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| PDCP-SN Length 18 | M | | INTEGER | | _ | _ |
| _ | | | (0262143) | | | |
| HFN for PDCP-SN | M | | INTEGER | | _ | _ |
| Length 18 | | | (016383) | | | |

9.2.83 LHN ID

The LHN ID IE is used to indicate the LHN ID of the eNB, as defined in TS 23.003 [21].

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-----------------------|----------|-------|-----------------------------|-----------------------|
| Local Home Network ID | М | | OCTET STRING (SIZE (32256)) | Identifies the Local |
| | | | | Home Network. |

9.2.84 Correlation ID

This information element is the GTP Tunnel Endpoint Identifier or GRE key to be used for the user plane transport between eNB and the L-GW described in TS 23.401 [12].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------|----------|-------|-----------------------|-----------------------|
| Correlation ID | M | | OCTET STRING | |
| | | | (SIZE(4)) | |

9.2.85 UE Context Kept Indicator

This IE indicates that the UE Context at the SeNB is kept in case of inter-MeNB handover without SeNB/SgNB Change procedure, as specified in TS 36.300 [15] or TS37.340 [32].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------------------|----------|-------|-----------------------|-----------------------|
| UE Context Kept Indicator | М | | ENUMERATED (True,) | |

9.2.86 eNB UE X2AP ID Extension

This information element combined with the eNB UE X2AP ID uniquely identifies an UE over the X2 interface within an eNB. If the setup of an UE associated signalling connection was initiated including the eNB UE X2AP ID Extension,

the eNB UE X2AP ID Extension shall be used by both peers for the life-time of the respective UE-associated signalling connection.

The usage of this IE is defined in TS 36.401 [2].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------------|----------|-------|-----------------------|-----------------------|
| eNB UE X2AP ID Extension | М | | INTEGER (04095,) | |

9.2.87 M6 Configuration

This IE defines the parameters for M6 measurement collection.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------|----------|-------|--|-----------------------|
| M6 Report Interval | M | | ENUMERATED (ms1024, ms2048, ms5120, ms10240,) | |
| M6 Delay Threshold | C-ifUL | | ENUMERATED (ms30, ms40, ms50, ms60, ms70, ms80, ms90, ms100, ms150, ms300, ms500, ms750,) | |
| M6 Links to log | M | | ENUMERATED(uplin k, downlink, both-uplink-and-downlink,) | |

| Condition | Explanation |
|-----------|---|
| ifUL | This IE shall be present if the M6 Links to log IE is set to "uplink" or to |
| | "both-uplink-and-downlink". |

9.2.88 M7 Configuration

This IE defines the parameters for M7 measurement collection.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|----------------------|----------|-------|--|-----------------------|
| M7 Collection Period | M | | INTEGER (160,) | Unit: minutes |
| M7 Links to log | M | | ENUMERATED(uplin k, downlink, both-uplink-and-downlink,) | |

9.2.89 Tunnel Information

The Tunnel Information IE indicates the transport layer address and UDP port number.

| IE/Group Name | Presence | Range | IE type and | Semantics description |
|-------------------------|----------|-------|-------------|-----------------------------|
| | | | reference | |
| Transport Layer Address | M | | BIT STRING | eNB's Transport Layer |
| | | | (1160,) | Address. |
| UDP Port Numbers | 0 | | OCTET | UDP Port Numbers if |
| | | | STRING | NAT/NAPT is deployed in the |
| | | | (SIZE(2)) | BBF access network. |

9.2.90 X2 Benefit Value

The X2 Benefit Value IE indicates the quantified benefit of the signalling connection.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------|----------|-------|-----------------------|--|
| X2 Benefit Value | М | | INTEGER (18,) | Value 1 indicates low benefit, and 8 indicates high benefit. |

9.2.91 Resume ID

The Resume ID IE is used to address a suspended UE Context within an eNB.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-----------------------------|----------|-------|------------------------|--|
| CHOICE Resume | М | _ | | |
| >Resume ID not truncated | | | | |
| >>Resume ID not truncated | M | | BIT STRING (SIZE (40)) | 40 bit Resume Resume Identity contained in the RRCConnection ResumeRequest message (TS 36.331 [9]). The 20 most significant bits refer to the eNB ID of the eNB that allocated the Resume ID, the 20 least significant bits identify the UE Context stored at the eNB that allocated the Resume ID. |
| >Resume ID truncated | | | | |
| >>Resume ID truncated | М | | BIT STRING (SIZE (24)) | 24 bit Resume Identity contained in the RRCConnection ResumeRequest message (TS 36.331 [9]). The 12 most significant bits refer to the 12 least significant bits of the eNB ID of the eNB that allocated the Resume ID. The 12 least significant bits refer to the 12 least significant bits refer to the 12 least significant bits that identify the UE Context stored at the eNB that allocated the Resume ID. |

9.2.92 Bearer Type

This IE is used to support Non-IP data as specified in TS 23.401 [11].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|-----------------------|
| Bearer Type | M | | ENUMERATED (non IP,) | |

9.2.93 V2X Services Authorized

This IE provides information on the authorization status of the UE to use the sidelink for V2X services.

| IE/Group Name | Presence | Range | IE type and | Semantics description | Criticality | Assigned |
|---------------|----------|-------|------------------|-----------------------|-------------|-------------|
| | | | reference | | | Criticality |
| Vehicle UE | 0 | | ENUMERATED | Indicates whether the | - | - |
| | | | (authorized, not | UE is authorized as | | |
| | | | authorized,) | Vehicle UE | | |
| Pedestrian UE | 0 | | ENUMERATED | Indicates whether the | - | - |
| | | | (authorized, not | UE is authorized as | | |
| | | | authorized,) | Pedestrian UE | | |

9.2.94 Offset of NB-IoT Channel Number to EARFCN

This IE is used to indicate the offset of the NB-IoT Channel Number to the EARFCN (TS 36.104 [16]).

| IE/Group Name | Presence | Range | IE Type and | Semantics Description |
|--------------------------|----------|-------|-----------------------------|-----------------------|
| | | | Reference | |
| Offset of NB-IoT Channel | М | | ENUMERATED (-10,- | |
| Number to EARFCN | | | 9,-8,-7,-6,-5,-4,-3,-2,-1,- | |
| | | | 0.5,0,1,2,3,4,5,6,7,8,9, | |
| | | | .) | |

9.2.95 WT ID

This IE is used to identify a WT.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-------------------|----------|-------|-----------------------|-----------------------|
| CHOICE WT ID Type | M | | | |
| >WT ID Type 1 | | | | |
| >>PLMN ID | M | | PLMN Identity | |
| | | | 9.2.4 | |
| >>Short WT ID | M | | BIT STRING (24) | |
| >WT ID Type 2 | | | | |
| >>Long WT ID | M | | BIT STRING (48) | |

9.2.96 WT UE XwAP ID

The WT UE XwAP ID is allocated by the WT and uniquely identifies a UE over the Xw interface.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|-----------------------|
| WT UE XWAP ID | M | | OCTET STRING | |
| | | | (SIZE(3)) | |

9.2.97 UE Sidelink Aggregate Maximum Bit Rate

This IE indicates the aggregate maximum bit rate for all radio bearers per UE in the sidelink for V2X services.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---|----------|-------|-----------------------|--|
| UE Sidelink Aggregate Maximum Bit Rate | M | | Bit Rate 9.2.11 | Value 0 shall be considered as a logical error by the receiving eNB. |

9.2.98 NR Neighbour Information

This IE contains cell configuration information of NR cells that a neighbour node may need for the X2 AP interface.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|--|---------------------------------------|--|-------------|-------------------------|
| NR Neighbour Information | | 1 <maxnoofnr Neighbours></maxnoofnr | | | - | • |
| >NR Neighbour | | | | | | |
| Information >>NRPCI | M | | INTEGER | NR Physical | _ | |
| >>INTEGI | IVI | | (01007) | Cell ID | _ | |
| >>NR-CGI | M | | 9.2.111 | | _ | |
| >>CHOICE NR- Neighbour-Mode-Info >>>FDD | M | | | | _ | _ |
| >>>FDD Info | | 1 | | | _ | _ |
| >>>>UL ARFCNFreqInfo | M | | NR ARFCN Frequency Info 9.2.106 | | - | _ |
| >>>DL ARFCNFreqInfo | М | | NR ARFCN Frequency Info 9.2.106 | | _ | ı |
| >>>TDD | | | | | | |
| >>>>TDD Info | | 1 | | | _ | |
| >>>>ARFCNNRFr eqInfo | M | | NR ARFCN Frequency Info 9.2.106 | | _ | _ |
| >>5GS-TAC | М | | OCTET STRING(3) | Broadcast 5GS Tracking Area Code | _ | |
| >>Configured TAC | 0 | | TAC 9.2.3.7 | This is the TAC configured in the en-gNB, different from the 5GS TAC broadcast in the NR cell and enables application of Roaming and Access Restrictions for EN-DC as specified in TS 37.340 [32]. | | |
| >>Measurement Timing Configuration | М | | OCTET STRING | Contains the MeasurementTi mingConfigurati on inter-node message for the neighbour cell, as defined in TS 38.331 [31]. | - | - |

| Range bound | Explanation |
|---------------------|--|
| maxnoofNRNeighbours | Maximum no. of neighbour NR cells associated to a given served |
| | cell. Value is 1024. |

9.2.99 Extended Bit Rate

This IE indicates the number of bits delivered by E-UTRAN in UL or to E-UTRAN in DL within a period of time, divided by the duration of the period. It is used, for example, to indicate the maximum or guaranteed bit rate for a GBR bearer, or an aggregated maximum bit rate.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-------------------|----------|-------|-----------------------|-----------------------|
| Extended Bit Rate | | | INTEGER | The unit is: bit/s |
| | | | (10,000,000,0014,00 | |
| | | | 0,000,000,000,) | |

9.2.100 en-gNB UE X2AP ID

This information element uniquely identifies an UE over the X2 interface within an en-gNB.

The usage of this IE is defined in TS 36.401 [2].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-------------------|----------|-------|-----------------------------------|-----------------------|
| en-gNB UE X2AP ID | М | | INTEGER (0 2 ³² -1) | |

9.2.101 SgNB Security Key

The SgNB Security Key IE is used to apply security in the en-gNB as defined in TS 33.401 [18].

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------|----------|-------|--------------------------|---|
| SgNB Security | M | | BIT STRING | The S-KgNB which is provided by the MeNB, |
| Key | | | (SIZE(256)) | see TS 33.401 [18]. |

9.2.102 Target SgNB ID Information

This IE contains the target SgNB ID used by MeNB to find the target en-gNB.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------|----------|-------|-----------------------|-----------------------|-------------|----------------------|
| Target SgNB ID | M | | 9.2.112 | | | |

9.2.103 SCG Configuration Query

The SCG Configuration Query IE is used to request the en-gNB to provide current SCG configuration.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-------------------------|----------|-------|-----------------------|-----------------------|
| SCG Configuration Query | M | | ENUMERATED (True,) | |

9.2.104 Delivery Status

This IE defines the Delivery Status IE of RRC Transfer message.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------------|----------|---------------------|-----------------------|--------------------------|-------------|----------------------|
| Highest successfully | M | 02 ¹² -1 | INTEGER | Highest successfully | _ | |
| delivered NR PDCP | | | $(02^{12}-1)$ | delivered NR PDCP SN, as | | |
| Sequence Number | | | | defined in 38.323 [33]. | | |

9.2.105 Void

Void

9.2.106 NR Frequency Info

The NR Frequency Info defines the carrier frequency and bands used in a cell for a given direction (UL or DL) in FDD or for both UL and DL directions in TDD.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|-------------------------------|----------|---|--------------------------|---|
| NRARFCN | M | | INTEGER (0maxNRARFCN) | RF Reference Frequency as defined in TS 38.104 [37] section 5.4.2.1. The frequency provided in this IE identifies the absolute frequency position of the reference resource block (Common RB 0) of the carrier. Its lowest subcarrier is also known as Point A. |
| SUL Information | 0 | | 9.2.123 | |
| Frequency Band List | | 1 | | |
| >Frequency Band Item | | 1 <ma xnoofNr CellBan ds></ma | | |
| >>NR Frequency Band | М | | INTEGER (1 1024,) | Primary NR Operating Band as defined in TS38.104 [37] section 5.4.2.3. The value 1 corresponds e n1, value 2 corresponds to NR operating band n2, etc. |
| >>Supported SUL band List | | 0 <ma xnoofNr CellBan ds></ma | | |
| >>>Supported SUL band Item | M | | INTEGER (1 1024,) | Supplementary NR Operating Band as defined in TS 38.104 [37] section 5.4.2.3 that can be used for SUL duplex mode as per TS 38.101-1 table 5.21. The value 80 corresponds to NR operating band n80, value 81 corresponds to NR operating band n81, etc. |

| Range bound | Explanation |
|--------------------|--|
| maxNRARFCN | Maximum value of NRARFCNs. Value is 3279165. |
| maxnoofNrCellBands | Maximum no. of frequency bands supported for a NR cell. Value is 32. |

9.2.107 NR UE Security Capabilities

This IE defines the supported algorithms for encryption and integrity protection in NR as defined in TS 33.401 [18].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--|----------|-------|---------------------------|---|
| NR Encryption Algorithms | M | | BIT STRING (SIZE(16,)) | Each position in the bitmap represents an encryption algorithm: "all bits equal to 0" – UE supports no other NR algorithm than NEA0, "first bit" – 128-NEA1, "second bit" – 128-NEA2, "third bit" – 128-NEA3, other bits reserved for future use. Value '1' indicates support and value '0' indicates no support of the algorithm. Algorithms are defined in TS 33.401 [18]. |
| NR Integrity Protection Algorithms | M | | BIT STRING (SIZE(16,)) | Each position in the bitmap represents an integrity protection algorithm: "all bits equal to 0" – UE supports no other NR algorithm than NIA0, "first bit" – 128-NIA1, "second bit" – 128-NIA2, "third bit" – 128-NIA3, other bits reserved for future use. Value '1' indicates support and value '0' indicates no support of the algorithm. Algorithms are defined in TS 33.401 [18]. |

9.2.108 EN-DC Resource Configuration

This IE contains the EN-DC resource configuration for an E-RAB, indicating the presence of PDCP at the en-gNB and Lower Layers at MCG and SCG.

| IE/Group Name | Presence | Range | IE type and | Semantics description | Criticality | Assigned |
|---------------|----------|-------|--------------|-----------------------|-------------|-------------|
| | | | reference | | | Criticality |
| PDCP at SgNB | M | | ENUMERAT | | - | |
| | | | ED (present, | | | |
| | | | not present) | | | |
| MCG resources | M | | ENUMERAT | | _ | |
| | | | ED (present, | | | |
| | | | not present) | | | |
| SCG resources | M | | ENUMERAT | | _ | |
| | | | ED (present, | | | |
| | | | not present) | | | |

9.2.109 PDCP Change Indication

The *PDCP Change Indication* IE is used to require the MeNB to either initiate the security key update or to perform PDCP data recovery towards the UE (see TS 37.340 [15]).

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------|----------|-------|------------------------------|--------------------------------------|
| PDCP Change | M | | ENUMERATED | The value of S-KgNB update |
| Indication | | | (S-KgNB update required, | required indicates that the security |
| | | | PDCP data recovery required, | key in en-gNB needs to be |
| | | |) | updated. |
| | | | | The value of PDCP data recovery |
| | | | | required indicates that MeNB |
| | | | | needs to perform PDCP data |
| | | | | recovery. |

9.2.110 Served NR Cell Information

This IE contains cell configuration information of an NR cell that a neighbour eNB may need for the X2 AP interface.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------------------------|----------|--|---|---|-------------|----------------------|
| NR-PCI | М | | INTEGER (01007,) | NR Physical Cell ID | _ | _ |
| Cell ID | М | | NR CGI 9.2.111 | | _ | _ |
| 5GS-TAC | М | | OCTET STRING(3) | Broadcast 5GS Tracking Area Code | _ | _ |
| Configured TAC | 0 | | OCTET STRING (2) | This is the TAC configured in the engnB, different from the 5GS TAC broadcast in the NR cell and enables application of Roaming and Access Restrictions for EN-DC as specified in TS 37.340 [32]. | - | |
| Served PLMNs | | 1 <max noofBP LMNs></max | | Broadcast PLMNs | _ | _ |
| >PLMN Identity | М | | 9.2.4 | | _ | _ |
| CHOICE NR-Mode- Info | М | | | | _ | _ |
| >FDD | | | | | | |
| >>FDD Info | | 1 | | | _ | _ |
| >>>UL FreqInfo | M | | NR Frequency Info 9.2.106 | | _ | _ |
| >>>DL FreqInfo | М | | NR Frequency Info 9.2.106 | | _ | _ |
| >>>UL Transmission Bandwidth | M | | NR Transmission Bandwidth 9.2.114 | | _ | _ |
| >>>DL Transmission Bandwidth | M | | NR Transmission Bandwidth 9.2.114 | | - | _ |
| >TDD | | | | | | |
| >>TDD Info | | 1 | ND E | | _ | _ |
| >>>NRFreqInfo | М | | NR Frequency Info 9.2.106 | | _ | _ |
| >>> Transmission Bandwidth | M | | NR Transmission Bandwidth 9.2.114 | | _ | _ |
| Measurement Timing Configuration | M | | OCTET STRING | Contains the MeasurementTimingCo nfiguration inter-node message for the served cell, as defined in TS 38.331 [31]. | _ | _ |

| Range bound | Explanation | |
|---------------|--|--|
| maxnoofBPLMNs | Maximum no. of broadcast PLMN lds. Value is 6. | |

9.2.111 NR CGI

The NR Cell Global Identifier (NR CGI) is used to globally identify an NR cell (see TS 38.401 [34]).

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------|----------|-------|-----------------------|---|
| PLMN Identity | M | | 9.2.4 | |
| NR Cell Identity | М | | BIT STRING (36) | The leftmost bits of the NR Cell Identity IE value correspond to the value of the en-gNB ID IE contained in the Global en-gNB ID IE (defined in section 9.2.112) identifying the en-gNB that controls the cell. |

9.2.112 Global en-gNB ID

This IE is used to globally identify an en-gNB (see TS 37.340 [32]).

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------|----------|-------|-------------------------|---|
| PLMN Identity | M | | 9.2.4 | |
| CHOICE en-gNB ID | M | | | |
| >en-gNB ID | | | | |
| >>en-gNB ID | М | | BIT STRING (SIZE(2232)) | Equal to the leftmost bits of the NR Cell Identity IE contained in the NR CGI IE of each cell served by the en-gNB. |

9.2.113 NR Carrier Information

This IE contains information for an NR carrier that a neighbour eNB may need to configure inter-RAT measurements.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|-------------------------|----------|--|-----------------------|-----------------------|-------------|----------------------|
| Broadcast PLMNs | | 1 <max noofBP LMNsin gNB></max | | Broadcast PLMNs | _ | _ |
| >PLMN Identity | M | | 9.2.4 | | _ | _ |
| CHOICE NR-Mode- Info | М | | | | - | _ |
| >FDD | | | | | | |
| >>FDD Info | | 1 | | | _ | _ |
| >>>UL ARFCN | М | | NR ARFCN 9.2.106 | | _ | _ |
| >>>DL ARFCN | М | | NR ARFCN 9.2.106 | | - | _ |
| >>TDD Info | | 1 | | | - | _ |
| >>>ARFCN | М | | NR ARFCN 9.2.106 | | _ | _ |

| Range bound | Explanation | | |
|--------------------|--|--|--|
| maxnoofBPLMNsingNB | Maximum no. of broadcast PLMN lds in the gNB. Value is 6 | | |

9.2.114 NR Transmission Bandwidth

The NR Transmission Bandwidth IE is used to indicate the UL or DL transmission bandwidth.

| IE/Group Name | Presence | Range | IE Type and | Semantics Description |
|---------------|----------|-------|------------------------|---|
| | | | Reference | |
| NR SCS | M | | ENUMERATED (scs15, | The values scs15, scs30, |
| | | | scs30, scs60, scs120, | scs60 and scs120 |
| | | |) | corresponds to the sub carrier |
| | | | | spacing in TS 38.104 [37]. |
| NR NRB | M | | ENUMERATED (nrb11, | This IE is used to indicate the |
| | | | nrb18, nrb24, nrb25, | UL or DL transmission |
| | | | nrb31, nrb32, nrb38, | bandwidth expressed in units |
| | | | nrb51, nrb52, nrb65, | of resource blocks "N _{RB} " (TS |
| | | | nrb66, nrb78, nrb79, | 38.104 [37]). The values |
| | | | nrb93, nrb106, nrb107, | nrb11, nrb18, etc. correspond |
| | | | nrb121, nrb132, | to the number of resource |
| | | | nrb133, nrb135, | blocks "N _{RB} " 11, 18, etc. |
| | | | nrb160, nrb162, | |
| | | | nrb189, nrb216, | |
| | | | nrb217, nrb245, | |
| | | | nrb264, nrb270, | |
| | | | nrb273,) | |

9.2.115 Cell Assistance Information

The Cell Assistance Information IE is used by the eNB to request information about NR cells.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---|----------|---------------------------------|--------------------------------|--|
| CHOICE Cell Assistance Type | M | | | This IE may be refined. |
| >Limited List | | | | |
| >>List of Requested NR Cells | | 1 < maxCel linengN B > | | Included when the eNB requests a limited list of served NR cells. |
| >>>NR-CGI | М | | 9.2.111 | NR cell for which served NR cell information is requested. |
| >Full List | | | | |
| >>Complete Information Request Indicator | M | | ENUMERATED (allServedNRCells,) | Included when the eNB requests the complete list of served NR cells. |

| Range bound | Explanation |
|----------------|---|
| maxCellinengNB | Maximum no. cells that can be served by an en-gNB. Value is |
| _ | 16384. |

9.2.116 MeNB Resource Coordination Information

The *MeNB Resource Coordination Information* IE is LTE resource allocation at MeNB and used at the en-gNB to coordinate resource utilisation between the MeNB and the en-gNB.

| Information) represer subframe | |
|--|---|
| UL Coordination M BIT STRING (64400, represer subframe | |
| used for "1" indication intended transmis spans for of the fire subframe of the sathen more PRBs in subframe Each por only in processor of the bits across of subframe The bits across of subframe The first Coordination corresponding corresponding to the processor of the length of th | anding to UL es. tring may span nultiple contiguous es (maximum 40). position of the UL ation Information ands to subframe 0 in rame where $SFN=0$. Ith of the bit string is er multiple of $N_{\rm RB}^{\rm UL}$. defined in TS 36.211 |

| DL Coordination | 0 | BIT STRING (64400, | Each position in the bitmap |
|-----------------|---|--------------------|--|
| Information | | , | |
| information | |) | represents a PRB pair in a |
| | | | subframe; value "0" indicates |
| | | | "resource not intended to be |
| | | | used for transmission", value |
| | | | "1" indicates "resource |
| | | | intended to be used for |
| | | | transmission ". The bit string |
| | | | spans from the first PRB pair |
| | | | of the first represented |
| | | | subframe to the last PRB pair |
| | | | |
| | | | of the same subframe and |
| | | | then moves to the following |
| | | | PRBs in the following |
| | | | subframes in the same order. |
| | | | Each position is applicable |
| | | | only in positions |
| | | | corresponding to DL |
| | | | subframes. |
| | | | The bit string may span |
| | | | across multiple contiguous |
| | | | subframes (maximum 40). |
| | | | The first position of the DL |
| | | | Coordination Information |
| | | | corresponds to the receiving |
| | | | node's subframe 0 in a |
| | | | receiving node's radio frame |
| | | | where $SFN = 0$. |
| | | | |
| | | | The length of the bit string is |
| | | | an integer multiple of $N_{\mathtt{RS}}^{\mathtt{DL}}$. |
| | | | an integer multiple or |
| | | | $N_{\rm RS}^{\rm DL}$ is defined in TS 36.211 |
| | | | 1401 |
| | | | [10]. |
| | | | The DL Coordination |
| | | | Information is continuously |
| | | | repeated. |
| | | | |

9.2.117 SgNB Resource Coordination Information

The *SgNB Resource Coordination Information* IE is LTE resource allocation at MeNB and used at the MeNB to coordinate resource utilisation between the en-gNB and the MeNB.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|--------------------------------|----------|-------|--------------------------|--|
| NR CGI | М | | 9.2.111 | |
| UL Coordination Information | M | | BIT STRING (64400,) | Each position in the bitmap represents a PRB pair in a subframe; value "0" indicates "resource not intended to be used for transmission", value "1" indicates "resource intended to be used for transmission ". The bit string spans from the first PRB pair of the first represented subframe to the last PRB pair of the same subframe and then moves to the following PRBs in the following PRBs in the following subframes in the same order. Each position is applicable only in positions corresponding to UL subframes. The bit string may span across multiple contiguous subframes (maximum 40). The first position of the UL $Coordination$ $Information$ corresponds to the receiving node's subframe 0 in a receiving node's radio frame where $SFN = 0$. The length of the bit string is an integer multiple of N_{RB}^{UL} is defined in TS 36.211 [10]. The UL Coordination Information Information is continuously repeated. |

| DL Coordination | 0 | BIT STRING (64400, | Each position in the bitmap |
|-----------------|---|--------------------|---|
| Information | |) | represents a PRB in a |
| | | ' | subframe; value "0" indicates |
| | | | "resource not intended to be |
| | | | used for transmission", value |
| | | | "1" indicates "resource |
| | | | intended to be used for |
| | | | transmission ". The bit string |
| | | | spans from the first PRB pair |
| | | | of the first represented |
| | | | |
| | | | subframe to the last PRB pair |
| | | | of the same subframe and |
| | | | then moves to the following |
| | | | PRBs in the following |
| | | | subframes in the same order. |
| | | | Each position is applicable |
| | | | only in positions |
| | | | corresponding to DL |
| | | | subframes. |
| | | | The bit string may span |
| | | | across multiple contiguous |
| | | | subframes (maximum 40). |
| | | | The first position of the <i>DL</i> |
| | | | Coordination Information |
| | | | corresponds to the receiving |
| | | | node's subframe 0 in a |
| | | | receiving node's radio frame |
| | | | where $SFN = 0$. |
| | | | The length of the bit string is |
| | | | $N_{}^{DL}$ |
| | | | an integer multiple of N_{RB}^{DL} . |
| | | | N _{RS} is defined in TS 36.211 |
| | | | ≈ is defined in 15 36.211 |
| | | | [10]. |
| | | | The DL Coordination |
| | | | Information is continuously |
| | | | repeated. |
| | | | |

9.2.118 UL Configuration

This IE indicates how the UL PDCP is configured for the assisting node.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------------|----------|-------|---|---|
| UL UE Configuration | M | | ENUMERATED (no- data, shared, only,) | Indicates how the UE uses the UL at the assisting |
| | | | | node. |

9.2.119 RLC Mode

The RLC Mode IE indicates the RLC Mode used for an E-RAB.

| IE/Group Name | Presence | Range | IE Type and Reference | Semantics Description |
|---------------|----------|-------|---------------------------------|-----------------------|
| RLC Mode | М | | ENUMERATED (RLC-AM, RLC-UM) | |

9.2.120 Secondary RAT Usage Report List

This IE provides information on the NR resources used with EN-DC.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---------------------------------|----------|--|-----------------------------------|--|-------------|----------------------|
| Secondary RAT usage report Item | | 1 <maxn oofE- RABs></maxn | | | EACH | ignore |
| >E-RAB ID | М | | 9.2.23 | | - | - |
| >Secondary RAT Type | М | | ENUMERATED (nR,) | | - | - |
| >E-RAB Usage Report List | | 1 | | | - | - |
| >>E-RAB Usage Report Item | | 1 <maxn oof="" periods="" time=""></maxn> | | | EACH | ignore |
| >>>Start timestamp | M | | OCTET STRING (SIZE(4)) | encoded in the same format as the first four octets of the 64-bit timestamp format as defined in section 6 of IETF RFC 5905 [35]. It indicates the UTC time when the recording of the Secondary RAT Data Volume was started. | - | - |
| >>>End timestamp | M | | OCTET STRING (SIZE(4)) | encoded in the same format as the first four octets of the 64-bit timestamp format as defined in section 6 of IETF RFC 5905 [35]. It indicates the UTC time when the recording of the Secondary RAT Data Volume was ended. | - | - |
| >>>Usage count UL | М | | INTEGER (02 ⁶⁴ - 1) | The unit is: octets. | - | - |
| >>>Usage count DL | М | | INTEGER (02 ⁶⁴ - 1) | The unit is: octets. | - | - |

| Range bound | Explanation |
|----------------------|--|
| maxnoofbearers | Maximum no. of E-RABs. Value is 256. |
| maxnoof time periods | Maximum no. of time reporting periods. Value is 2. |

9.2.121 UE Application layer measurement configuration

The IE defines configuration information for the QoE Measurement Collection (QMC) function.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigne Criticalit |
|---------------------------|----------|--|--|--|-------------|-----------------------|
| Container for application | М | | Octet string (11000) | Indicates application | - | - |
| layer measurement | | | | layer measurement | | |
| configuration | | | | configuration, see | | |
| | | | | Annex L in [36]. | | |
| CHOICE Area Scope of QMC | М | | | | - | - |
| >Cell based | | | | | | - |
| >>Cell ID List for QMC | | 1 <maxno ofCellID forQMC</maxno | | | | - |
| >>>E-CGI | М | | 9.2.1.38 | | - | - |
| >TA based | | | | | | - |
| >>TA List for QMC | | 1 <maxno ofTAfor QMC></maxno | | | | - |
| >>>TAC | M | | 9.2.3.7 | The TAI is derived using the current serving PLMN. | - | - |
| >TAI based | | | | | - | - |
| >>TAI List for QMC | | 1 <maxno ofTAfor QMC></maxno | | | - | - |
| >>>TAI | М | | 9.2.3.16 | | - | - |
| >PLMN area based | | | | | | - |
| >>PLMN List for QMC | | 1 <maxno ofPLMN forQMC ></maxno | | | | - |
| >>>PLMN Identity | M | | 9.2.3.8 | | - | - |
| Service Type | M | | ENUMERATED (QMC for streaming service, QMC for MTSI service,) | This IE indicates the service type of UE application layer measurements. | - | - |

| Range bound | Explanation |
|---------------------|---|
| maxnoofCellIDforQMC | Maximum no. of Cell ID subject for QMC scope. Value is 32. |
| maxnoofTAforQMC | Maximum no. of TA subject for QMC scope. Value is 8. |
| maxnoofPLMNforQMC | Maximum no. of PLMNs in the PLMN list for QMC scope. Value is 16. |

9.2.122 DRB ID

This information element uniquely identifies a DRB over the X2 interface within an en-gNB.

The usage of this IE is defined in TS 36.331 [9].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|---------------|----------|-------|-----------------------|-----------------------|
| DRB ID | М | | INTEGER (1 32) | |

9.2.123 SUL Information

This IE provides information about the SUL carrier.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-------------------------------|----------|-------|--|---|
| SUL ARFCN | M | | INTEGER (0maxNRARF CN) | RF Reference Frequency as defined in TS 38.104 [37] section 5.4.2.1. The frequency provided in this IE identifies the absolute frequency position of the reference resource block (Common RB 0) of the SUL carrier. Its lowest subcarrier is also known as Point A. |
| SUL Transmission Bandwidth | M | | NR Transmission Bandwidth 9.2.114 | |

| Range bound | Explanation |
|-------------|--|
| maxNRARFCN | Maximum value of NRARFCNs. Value is 3279165. |

9.2.124 Packet Loss Rate

This IE indicates the packet loss rate.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|------------------|----------|-------|-----------------------|--|-------------|----------------------|
| Packet Loss Rate | M | | INTEGER(01000) | Ratio of lost packets per number of packets sent, expressed in tenth of percent. | - | |

9.2.125 Protected E-UTRA Resource Indication

This IE indicates the resources allocated for E-UTRA DL and UL reference and control signals (hereby referred to as protected resources). This information is used in the process of E-UTRA – NR Cell Resource Coordination.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|----------------------------------|----------|---|---|---|-------------|-------------------------|
| Activation SFN | M | | INTEGER (01023) | Indicates from which SFN of the receiving node the resource allocation is valid. | | |
| Protected Resource List | | 1 <maxnoofprot ectedResourceP atterns></maxnoofprot | | The protected resource pattern is continuously repeated, and it is valid until stated otherwise or until replaced by a new pattern. The pattern does not apply in reserved subframes. | YES | ignore |
| >Protected Resource List Item | | | | Each item describes one transmission pattern. A pattern may comprise several control signals. | EACH | ignore |
| >>Resource Type | M | | ENUMERAT ED (downlinkno nCRS,CRS, uplink) | Indicates whether the protected resource is E- UTRA DL non- CRS, E-UTRA CRS or E-UTRA UL. | - | - |

| | T | 1 | | | ı | 1 |
|-----------------------|----------|---|------------|-----------------------|---|---|
| >>Intra-PRB Protected | M | | BIT STRING | The bitmap of | | |
| Resource Footprint | | | (84,) | REs occupied | | |
| | | | | by the protected | | |
| | | | | signal within | | |
| | | | | one PRB. Each | | |
| | | | | position in the | | |
| | | | | bitmap | | |
| | | | | represents an | | |
| | | | | | | |
| | | | | RE in one PRB; | | |
| | | | | value "0" | | |
| | | | | indicates | | |
| | | | | "resource not | | |
| | | | | protected", | | |
| | | | | value "1" | | |
| | | | | indicates | | |
| | | | | "resource | | |
| | | | | protected ". The | | |
| | | | | first bit of the | | |
| | | | | string | | |
| | | | | | | |
| | | | | corresponds to | | |
| | | | | the RE with the | | |
| | | | | smallest time | | |
| | | | | and frequency | | |
| | | | | index in the | | |
| | | | | PRB, where the | | |
| | | | | indexing first | | |
| | | | | goes into the | | |
| | | | | frequency | | |
| | | | | domain. The | | |
| | | | | length of the bit | | |
| | | | | string equals | | |
| | | | | the product of | | |
| | | | | the product of | | |
| | | | | N_{RB}^{SC} and the | | |
| | | | | length of PRB in | | |
| | | | | time dimension, | | |
| | | | | measured in | | |
| | | | | REs. N_{RB}^{SC} is | | |
| | | | | defined in TS | | |
| | | | | 36.211 [10]. The | | |
| | | | | intra-PRB | | |
| | | | | | | |
| | | | | pattern | | |
| | | | | consisting of all | | |
| | | | | "1"s is | | |
| | | | | equivalent to | | |
| | | | | PRB-level | | |
| | <u>]</u> | | | granularity. | | |

| >>Protected Footprint Frequency Pattern M STRING(6. 110) In the bit string indicates in which PRBs inside carrier bandwidth the lutra-PRB Protected Resource Footprint and protected Resource Footprint Resource Resource Footprint Resource Resource Footprint Resource Resource Resource Footprint R | | | | | | | |
|--|-----------------------|---------|---|------|----------------------|---|---|
| Frequency Pattern STRING(6. 110) Indicates in which PRBs inside carrier bandwidth the Intra-PRB Protected Resource Footprint applies, How often in time dimension this frequency pattern applies, depends on time periodicity of Intra-PRB Protected Resource Resource Footprint applies, and the protected Resource Footprint Resource Reso | >>Protected Footprint | М | | BIT | The bit string | - | - |
| 110) which PRBs inside carrier bandwidth the Intra-PRB Protected Resource Footprint applies. How often in time dimension this flequency place and the periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the indexing first goes into the indexing first goes into the first part of the protected Resource Footprint appears in PRB. Intra-PRB Protected Resource Footprint does not appear in PRB', value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB', value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB', value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB'. The length of the bit sting equals the protected Resource Footprint appears in PRB'. The length of the bit sting equals the protected Resource Footprint the length of the bit sting equals the protected Resource Footprint appears in PRB'. The length of the bit sting equals the protected Resource Footprint Resource Footprint Resource Footprint Resource Footprint Resource Resource Resource Resource Resource | Frequency Pattern | | | | | | |
| inside carrier bandwidth the Intra-PRB Protected Resource Footprint applies. How often in time dimension this frequency pattern applies, depends on time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string on the protection of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "O' indicates" Intra-PRB Protected Resource Footprint does not appear in PRB; value "I' indicates" Intra-PRB Protected Resource Footprint appear in PRB; value "I' indicates" Intra-PRB Protected Resource Footprint appear in PRB; value "I' indicates" Intra-PRB Protected Resource Footprint appear in PRB; The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint M Time Pattern Description of time periodicity of the Intra-PRB Protected Resource Resource Resource Pandwidth. The description of time periodicity of the Intra-PRB Protected Resource Resource Resource Resource Resource Resource Resource Resource | r requericy r attern | | | | | | |
| bandwidth the Intra-PRB Protected Resource Footprint applies. How often in time dimension this frequency pattern applies, depends on time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB Protected Resource Footprint in the frequencies of the carrier bandwidth, where the indexing first goes into the frequencies of the carrier bandwidth, where the indexing first goes into the frequencies of the carrier bandwidth appears a PRB Protected Resource Footprint does not appear in PRB Protected Resource Footprint does not appear in PRB Protected Resource Footprint appears in PRB. The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint M Time Pattern **Protected Footprint M Time Pattern | | | | 110) | | | |
| Intra-PRB Protected Resource Footprint applies. How often in time dimension this frequency pattern applies, depends on time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB: value "0" indicates "Intra- PRB Protected Resource Footprint does not appear in PRB', value "1" indicates "Intra- PRB Protected Resource Footprint does not appears in PRB's. Intra- PRB Protected Resource Footprint appears in PRB's. The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource Footprint Time Pattern | | | | | inside carrier | | |
| Intra-PRB Protected Resource Footprint applies. How often in time dimension this frequency pattern applies, depends on time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB: value "0" indicates "Intra- PRB Protected Resource Footprint does not appear in PRB', value "1" indicates "Intra- PRB Protected Resource Footprint does not appears in PRB's. Intra- PRB Protected Resource Footprint appears in PRB's. The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource Footprint Time Pattern | | | | | bandwidth the | | |
| Protected Resource Footprint applies. How often in time dimension this frequency pattern applies, depends on time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequencies of the carrier bandwidth, where the indexing first goes into the frequencie of the string represents a PRB protected Resource Footprint does not appear in PRB rotected Resource Footprint does not appear in PRB', value 1" indicates "Intra-PRB Protected Resource Footprint appears in PRB'. The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M Time Pattern M Time Pattern M Time Pattern M Trime Pattern Trime Trime Pat | | | | | | | |
| Resource Footprint applies. How often in time dimension this frequency pattern applies, depends on time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB, value "0" indicates "Intra- PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint does not appear in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. The description of time periodicity of the lintra-PRB Protected Resource | | | | | | | |
| Footprint applies. How often in time dimension this frequency pattern applies, depends on time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB, value "0" indicates "Intra-PRB protected Resource Footprint does not appear in PRB", the length of the bit string equals the number of PRBs in the carrier pandwidth. >>Protected Footprint Time Pattern September September PRB Protected Resource periodicity of the landwidth. | | | | | | | |
| Footprint applies. How often in time dimension this frequency pattern applies, depends on time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB, value "0" indicates "Intra-PRB protected Resource Footprint does not appear in PRB", the length of the bit string equals the number of PRBs in the carrier pandwidth. >>Protected Footprint Time Pattern September September PRB Protected Resource periodicity of the landwidth. | | | | | Resource | | |
| applies. How often in time dimension this frequency pattern applies, depends on time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB, value "0" indicates" intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates" intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", which is the length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| often in time dimension this frequency pattern applies, depends on time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB, value "0" indicates "Intra- PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| dimension this frequency pattern applies, depends on time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB, value "0" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB protected Footprint appears in PRB", value "1" indicates "Intra-PRB protected Footprint Time Pattern | | | | | | | |
| frequency pattern applies, depends on time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB, value "O' indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint M Time Pattern Time Pattern M Time Pattern Time PRB Protected Resource Footprint of the bit string equals the number of PRBs in the carrier bandwidth. The description of time periodicity of the Intra-PRB Protected Resource PRBs in the carrier bandwidth. The description of time periodicity of the Intra-PRB Protected Resource Resource Protected Resource PRBs in the carrier bandwidth. The description of time periodicity of the Intra-PRB Protected Resource | | | | | often in time | | |
| frequency pattern applies, depends on time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB, value "O' indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint M Time Pattern Time Pattern M Time Pattern Time PRB Protected Resource Footprint of the bit string equals the number of PRBs in the carrier bandwidth. The description of time periodicity of the Intra-PRB Protected Resource PRBs in the carrier bandwidth. The description of time periodicity of the Intra-PRB Protected Resource Resource Protected Resource PRBs in the carrier bandwidth. The description of time periodicity of the Intra-PRB Protected Resource | | | | | dimension this | | |
| pattern applies, depends on time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB value "0" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB', value "1" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB'. The length of the bit string appears in PRB'. The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Interaction of time periodicity of the Intra-PRB Protected Resource Footprint appears in PRB'. The length of the bit string equals the number of PRBs in the carrier bandwidth. Time Pattern | | | | | | | |
| depends on time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB, value "0" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string aquals the number of PRBs in the carrier bandwidth. >>Protected Footprint M Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string appears in PRB". The length of the bit string appears in PRB". The length of the bit string appears in PRB". The length of the bit string appears in PRB". The length of the bit string appears in PRB". The length of the bit string appears in PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string appears in PRB". The length of the bit string appears in PRB". The length of the bit string appears in PRB". The length of the bit string appears in PRB". The length of the bit string appears in PRB". The length of the bit string appears in PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | depends on | | |
| of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates" intra- PRB Protected Resource Footprint does not appear in PRB', value "1" indicates "Intra- PRB Protected Resource Footprint does not appears in PRB'. The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M Time Pattern M Time Pattern M Time Protected Resource | | | | | | | |
| Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB, value "0" indicates "Intra- PRB Protected Resource Footprint does not appear in PRB', value "1" indicates "Intra- PRB Protected Resource Footprint does not appears in PRB'', value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB''. The length of the bit string equals the number of PRBs in the carrier bandwidth. The description of time perioticity of the Intra-PRB Protected Resource | | | | | | | |
| Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates " Intra- PRB Protected Resource Footprint does not appear in PRB', value "1" indicates "Intra- PRB Protected Resource Footprint does not appear in PRB', value "1" indicates "Intra- PRB Protected Resource Footprint does not appear in PRB'. The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| Footprint The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Intra-PRB Protected Resource Footprint appears in PRBs". The length of the bit string equals the number of PRBs in the carrier bandwidth. Time Pattern Intra-PRB Protected Resource Footprint appears of PRBs in the carrier bandwidth. | | | | | Protected | | |
| Footprint The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Intra-PRB Protected Resource Footprint appears in PRBs". The length of the bit string equals the number of PRBs in the carrier bandwidth. Time Pattern Intra-PRB Protected Resource Footprint appears of PRBs in the carrier bandwidth. | | | | | | | |
| first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates " Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates " Intra-PRB Protected Resource Footprint appears in PRB", the length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB, value "0" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the intra-PRB Protected Resource | | | 1 | | | | |
| string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB, value "0" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the intra-PRB Protected Resource | | | 1 | | first bit of the bit | | |
| corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| occupying the lowest subcarrier frequencies of the carrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB: value "0" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | 1 | | | | |
| lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates "Intra- PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the lntra-PRB Protected Resource | | | | | the PRB | | |
| lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates "Intra- PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the lntra-PRB Protected Resource | | | | | occupying the | | |
| subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates " Intra- PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates " Intra- PRBP rotected Resource Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint does not appears in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates " Intra- PRBP rotected Resource Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint does not appears in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | frequencies of | | |
| bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates " Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates " Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates " Intra-PRB Protected Resource Footprint des not appear in PRB", value "1" indicates " Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates " Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates " Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | where the | | |
| goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates " Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource Protected Resource | | | | | | | |
| frequency domain. Each position in the string represents a PRB; value "0" indicates " Intra- PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| domain. Each position in the string represents a PRB; value "0" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| domain. Each position in the string represents a PRB; value "0" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | frequency | | |
| position in the string represents a PRB; value "0" indicates " Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of the lintra-PRB Protected Resource Protected Resource | | | | | | | |
| string represents a PRB; value "0" indicates " Intra- PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| represents a PRB; value "0" indicates "Intra- PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| PRB; value "0" indicates " Intra- PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | string | | |
| PRB; value "0" indicates " Intra- PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | represents a | | |
| indicates "Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. The description of time periodicity of the Intra-PRB Protected Resource | | | | | PPR: value "0" | | |
| PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| Resource Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| Resource Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | PRB Protected | | |
| Footprint does not appear in PRB", value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource Note | | | | | | | |
| PRB", value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the lntra-PRB Protected Resource | | | | | | | |
| PRB", value "1" indicates "Intra- PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the lntra-PRB Protected Resource | | | | | | | |
| indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | 1 | | | | |
| PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | indicates "Intro | | |
| Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the lntra-PRB Protected Resource | | | 1 | | | | |
| Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | Resource | | |
| appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | 1 | | | | |
| length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | 1 | | appears in | | |
| length of the bit string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | PRB". The | | |
| string equals the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| the number of PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | suring equals | | |
| PRBs in the carrier bandwidth. >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| >>Protected Footprint Time Pattern M The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| >>Protected Footprint Time Pattern The description of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| Time Pattern of time periodicity of the Intra-PRB Protected Resource | | | | | | | |
| Time Pattern of time periodicity of the Intra-PRB Protected Resource | >>Protected Footprint | M | | | The description | | |
| periodicity of the Intra-PRB Protected Resource | | | | | | | |
| Intra-PRB Protected Resource | Time Fattern | | | | | | |
| Protected Resource | | | | | periodicity of the | | |
| Protected Resource | | | | | Intra-PRB | | |
| Resource | | | 1 | | | | |
| | | | 1 | | | | |
| Footprint. | | | | | | | |
| | | <u></u> | | | Footprint. | | |

| | 1 | | | 1 | |
|--|---|--------------|--|---|---|
| >>>Protected Footprint Time- periodicity | M | INTEGER(180) | which the periodic Intra-PRB Protected Resource Footprint repeats in time-dimension (1= every PRB (i.e. slot), 2=every other PRB (i.e. slot) etc. | - | - |
| >>>Protected Footprint Start Time | M | INTEGER(120) | The time- position of the PRB inside the frame in which the periodic Intra-PRB Protected Resource Footprint appears for the first time. The value "1" corresponds to the receiving node's slot 0 in subframe 0 in the receiving node's radio frame where SFN = Activation SFN. | - | - |
| MBSFN Control Region Length | 0 | INTEGER(03) | Length of control region in MBSFN subframes. Expressed in REs, in the time dimension. | | |
| PDCCH Region Length | M | INTEGER(13) | Length of PDCCH region in regular subframes. Expressed in REs, in the time dimension. | | |

| Range bound | Explanation |
|----------------------------------|---|
| maxnoofProtectedResourcePatterns | Maximum no. protected resource patterns. Value is 16. |

9.2.126 Data Traffic Resource Indication

This IE indicates the intended data traffic resource allocation for E-UTRA - NR Cell Resource Coordination.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description | Criticality | Assigned Criticality |
|---|----------|-------|--------------------------------------|---|-------------|----------------------|
| Activation SFN | М | | INTEGER (01023) | Indicates from which SFN of the receiving node the agreement is valid. | | |
| CHOICE Shared Resource Type | М | | | | - | - |
| > <u>UL Only Sharing</u> >>UL Resource Bitmap | М | | Data Traffic Resources 9.2.127 | | - | - |
| >UL and DL Sharing >>CHOICE UL Resources | M | | | | | |
| >>>Unchanged >>>Changed | | | NULL | | | |
| >>>>UL Resource Bitmap | M | | Data Traffic Resources 9.2.127 | | | |
| >>CHOICE DL Resources | М | | | | | |
| >>>Unchanged >>>Changed | | | NULL | | | |
| >>>DL Resource Bitmap | М | | Data Traffic Resources 9.2.127 | | | |
| Reserved Subframe Pattern | 0 | | 9.2.128 | Indicates subframes in which the resource allocation does not hold. | | |

9.2.127 Data Traffic Resources

The *Data Traffic Resources* IE indicates the intended data traffic resource allocation for E-UTRA - NR Cell Resource Coordination.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------------|----------|-------|------------------------|---|
| Data Traffic Resources | M | | BIT STRING (128800) | The indication of resources allocated to E-UTRA PDSCH/PUSCH. Each position in the bitmap represents a PRB in a subframe; value "0" indicates "resource not intended to be used for transmission", value "1" indicates "resource intended to be used for transmission ". The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier, where the indexing first goes into the frequency domain. The bit string may span across multiple contiguous subframes (maximum 40). The first position of the Data Traffic Resource Indication corresponds to the receiving node's subframe 0 in a receiving node's radio frame where SFN = Activation SFN. The length of the bit string is an integer multiple of NRB or NRB, defined in TS 36.211 [10]. Data Traffic Resource Indication is continuously repeated, and it is valid until stated otherwise, or until replaced by a new pattern. |

9.2.128 Reserved Subframe Pattern

The Reserved Subframe Pattern IE indicates the pattern of subframes in which the Protected E-UTRA Resource Indication and Data Traffic Resource Indication do not hold.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|-----------------------------|----------|-------|--------------------------------------|--|
| Subframe Type | M | | ENUMERATED(MBSFN,non- MBSFN,) | Indicates what type of non-regular subframes the Reserved Subframe Pattern refers to (e.g. MBSFN). |
| Reserved Subframe Pattern | M | | BIT STRING (1040) | Each position in the bitmap represents a subframe. Value '0' indicates "regular subframe". Value '1' indicates "reserved subframe". For MBSFN subframes, the exception refers only to the noncontrol region of the subframe. The bit string may span across multiple contiguous subframes (maximum 40). The first position of the Subframe Configuration IE corresponds to the receiving node's subframe 0 in a receiving node's radio frame where SFN = Activation SFN. The IE is ignored if received by the eNB. |
| MBSFN Control Region Length | 0 | | INTEGER(03) | Length of control region in MBSFN subframes. Expressed in REs, in the time dimension. |

9.2.129 Aerial UE subscription information

This information element is used by the eNB to know if the UE is allowed to use aerial UE function, refer to TS 23.401[12].

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|------------------------|----------|-------|-----------------------|-----------------------|
| Aerial UE subscription | M | | ENUMERATED | |
| information | | | (allowed, not | |
| | | | allowed,) | |

9.2.130 User plane traffic activity report

This IE is used to indicate user plane traffic activity.

| IE/Group Name | Presence | Range | IE type and reference | Semantics description |
|--------------------|----------|-------|-------------------------------|---|
| User plane traffic | М | | ENUMERATED | "re-activated" shall be only set after |
| activity report | | | (inactive, re- activated,) | "inactive" has been reported for the concerned reporting object |

9.3 Message and Information Element Abstract Syntax (with ASN.1)

9.3.1 General

X2AP ASN.1 definition conforms to ITU-T Rec. X.680 [27] and ITU-T Rec. X.681 [28].

Sub clause 9.3 presents the Abstract Syntax of the X2AP protocol with ASN.1. In case there is contradiction between the ASN.1 definition in this sub clause and the tabular format in sub clause 9.1 and 9.2, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional elements, in which the tabular format shall take precedence.

The ASN.1 definition specifies the structure and content of X2AP messages. X2AP messages can contain any IEs specified in the object set definitions for that message without the order or number of occurrence being restricted by ASN.1. However, for this version of the standard, a sending entity shall construct an X2AP message according to the PDU definitions module and with the following additional rules:

- IEs shall be ordered (in an IE container) in the order they appear in object set definitions.
- Object set definitions specify how many times IEs may appear. An IE shall appear exactly once if the presence field in an object has value "mandatory". An IE may appear at most once if the presence field in an object has value "optional" or "conditional". If in a tabular format there is multiplicity specified for an IE (i.e. an IE list) then in the corresponding ASN.1 definition the list definition is separated into two parts. The first part defines an IE container list in which the list elements reside. The second part defines list elements. The IE container list appears as an IE of its own. For this version of the standard an IE container list may contain only one kind of list elements.

NOTE: In the above, "IE" means an IE in the object set with an explicit ID. If one IE needs to appear more than once in one object set, then the different occurrences have different IE IDs.

If an X2AP message that is not constructed as defined above is received, this shall be considered as Abstract Syntax Error, and the message shall be handled as defined for Abstract Syntax Error in clause 10.

9.3.2 Usage of Private Message Mechanism for Non-standard Use

The private message mechanism for non-standard use may be used:

- for special operator (and/or vendor) specific features considered not to be part of the basic functionality, i.e. the functionality required for a complete and high-quality specification in order to guarantee multivendor inter-operability.
- by vendors for research purposes, e.g. to implement and evaluate new algorithms/features before such features are proposed for standardisation.

The private message mechanism shall not be used for basic functionality. Such functionality shall be standardised.

9.3.3 Elementary Procedure Definitions

```
__ *******************
X2AP-PDU-Descriptions {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) x2ap (2) version1 (1) x2ap-PDU-Descriptions (0) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
      ****************
-- IE parameter types from other modules.
__ *********************
IMPORTS
   Criticality,
   ProcedureCode
FROM X2AP-CommonDataTypes
   CellActivationRequest,
   CellActivationResponse,
   CellActivationFailure,
   ENBConfigurationUpdate,
   ENBConfigurationUpdateAcknowledge,
   ENBConfigurationUpdateFailure,
   ErrorIndication,
   HandoverCancel,
   HandoverReport,
   HandoverPreparationFailure,
   HandoverRequest,
   HandoverRequestAcknowledge,
   LoadInformation,
   PrivateMessage,
   ResetRequest,
   ResetResponse,
   ResourceStatusFailure,
   ResourceStatusRequest,
   ResourceStatusResponse,
   ResourceStatusUpdate,
   RLFIndication,
   SNStatusTransfer,
   UEContextRelease,
   X2SetupFailure,
   X2SetupRequest,
   X2SetupResponse,
   MobilityChangeRequest,
   MobilityChangeAcknowledge,
   MobilityChangeFailure,
   X2Release,
   X2APMessageTransfer,
   SeNBAdditionRequest,
```

```
SeNBAdditionRequestAcknowledge,
SeNBAdditionRequestReject,
SeNBReconfigurationComplete,
SeNBModificationRequest,
SeNBModificationRequestAcknowledge,
SeNBModificationRequestReject,
SeNBModificationRequired,
SeNBModificationConfirm,
SeNBModificationRefuse.
SeNBReleaseRequest,
SeNBReleaseRequired,
SeNBReleaseConfirm,
SeNBCounterCheckRequest,
X2RemovalFailure,
X2RemovalRequest,
X2RemovalResponse,
RetrieveUEContextRequest,
RetrieveUEContextResponse,
RetrieveUEContextFailure,
SgNBAdditionRequest,
SgNBAdditionRequestAcknowledge,
SgNBAdditionRequestReject,
SgNBReconfigurationComplete,
SqNBModificationRequest,
SgNBModificationRequestAcknowledge,
SgNBModificationRequestReject,
SqNBModificationRequired,
SqNBModificationConfirm,
SqNBModificationRefuse,
SgNBReleaseRequest,
SqNBReleaseRequestAcknowledge,
SgNBReleaseRequestReject,
SgNBReleaseRequired,
SgNBReleaseConfirm,
SqNBCounterCheckRequest,
SgNBChangeRequired,
SgNBChangeConfirm,
SqNBChangeRefuse,
RRCTransfer,
ENDCX2SetupRequest,
ENDCX2SetupResponse,
ENDCX2SetupFailure,
ENDCConfigurationUpdate,
ENDCConfigurationUpdateAcknowledge,
ENDCConfigurationUpdateFailure,
SecondaryRATDataUsageReport,
ENDCCellActivationRequest,
ENDCCellActivationResponse,
ENDCCellActivationFailure,
ENDCPartialResetRequired,
ENDCPartialResetConfirm,
EUTRANRCellResourceCoordinationRequest,
EUTRANRCellResourceCoordinationResponse,
SgNBActivityNotification,
```

```
ENDCX2RemovalRequest,
    ENDCX2RemovalResponse,
    ENDCX2RemovalFailure
FROM X2AP-PDU-Contents
    id-cellActivation,
    id-eNBConfigurationUpdate,
    id-errorIndication,
    id-handoverCancel,
    id-handoverReport,
    id-handoverPreparation,
    id-loadIndication,
    id-privateMessage,
    id-reset,
    id-resourceStatusReporting,
    id-resourceStatusReportingInitiation,
    id-rLFIndication.
    id-snStatusTransfer,
    id-uEContextRelease,
    id-x2Setup,
    id-mobilitySettingsChange,
    id-x2Release,
    id-x2APMessageTransfer,
    id-seNBAdditionPreparation,
    id-seNBReconfigurationCompletion,
    id-meNBinitiatedSeNBModificationPreparation,
    id-seNBinitiatedSeNBModification,
    id-meNBinitiatedSeNBRelease,
    id-seNBinitiatedSeNBRelease,
    id-seNBCounterCheck,
    id-x2Removal,
    id-retrieveUEContext,
    id-sgNBAdditionPreparation,
    id-sqNBReconfigurationCompletion,
    id-meNBinitiatedSgNBModificationPreparation,
    id-sqNBinitiatedSqNBModification,
    id-meNBinitiatedSgNBRelease,
    id-sgNBinitiatedSgNBRelease,
    id-sgNBChange,
    id-sgNBCounterCheck,
    id-rRCTransfer,
    id-endcX2Setup,
    id-endcConfigurationUpdate,
    id-secondaryRATDataUsageReport,
    id-endcCellActivation,
    id-endcPartialReset,
    id-eUTRANRCellResourceCoordination,
    id-SgNBActivityNotification,
    id-endcX2Removal
```

```
FROM X2AP-Constants;
     ******************
-- Interface Elementary Procedure Class
  X2AP-ELEMENTARY-PROCEDURE ::= CLASS {
   &InitiatingMessage
   &SuccessfulOutcome
                                OPTIONAL,
   &UnsuccessfulOutcome
                                   OPTIONAL,
   &procedureCode
                         ProcedureCode UNIOUE
   &criticality
                         Criticality
                                       DEFAULT ignore
WITH SYNTAX {
                         &InitiatingMessage
   INITIATING MESSAGE
                         &SuccessfulOutcome]
   [SUCCESSFUL OUTCOME
                            &UnsuccessfulOutcome]
   [UNSUCCESSFUL OUTCOME
   PROCEDURE CODE
                         &procedureCode
   [CRITICALITY
                         &criticality]
            -- Interface PDU Definition
    *******************
X2AP-PDU ::= CHOICE {
   initiatingMessage
                     InitiatingMessage,
   successfulOutcome
                     SuccessfulOutcome,
   unsuccessfulOutcome UnsuccessfulOutcome,
   . . .
InitiatingMessage ::= SEQUENCE
   procedureCode X2AP-ELEMENTARY-PROCEDURE.&procedureCode
                                                             ({X2AP-ELEMENTARY-PROCEDURES}),
   criticality
                 X2AP-ELEMENTARY-PROCEDURE.&criticality
                                                             ({X2AP-ELEMENTARY-PROCEDURES}{@procedureCode}),
                                                             ({X2AP-ELEMENTARY-PROCEDURES} {@procedureCode})
   value
                 X2AP-ELEMENTARY-PROCEDURE.&InitiatingMessage
SuccessfulOutcome ::= SEQUENCE {
   procedureCode X2AP-ELEMENTARY-PROCEDURE.&procedureCode
                                                             ({X2AP-ELEMENTARY-PROCEDURES}),
                                                             ({X2AP-ELEMENTARY-PROCEDURES}{@procedureCode}),
   criticality
                 X2AP-ELEMENTARY-PROCEDURE.&criticality
                                                             ({X2AP-ELEMENTARY-PROCEDURES}{@procedureCode})
   value
                 X2AP-ELEMENTARY-PROCEDURE.&SuccessfulOutcome
UnsuccessfulOutcome ::= SEQUENCE {
                                                             ({X2AP-ELEMENTARY-PROCEDURES}),
   procedureCode X2AP-ELEMENTARY-PROCEDURE.&procedureCode
   criticality
                 X2AP-ELEMENTARY-PROCEDURE.&criticality
                                                             ({X2AP-ELEMENTARY-PROCEDURES}{@procedureCode}),
   value
                 X2AP-ELEMENTARY-PROCEDURE.&UnsuccessfulOutcome
                                                             ({X2AP-ELEMENTARY-PROCEDURES}{@procedureCode})
```

```
-- Interface Elementary Procedure List
__ ********************
X2AP-ELEMENTARY-PROCEDURES X2AP-ELEMENTARY-PROCEDURE ::= {
   X2AP-ELEMENTARY-PROCEDURES-CLASS-1
   X2AP-ELEMENTARY-PROCEDURES-CLASS-2
X2AP-ELEMENTARY-PROCEDURES-CLASS-1 X2AP-ELEMENTARY-PROCEDURE ::=
   handoverPreparation
   reset
   x2Setup
   resourceStatusReportingInitiation
   eNBConfigurationUpdate
   mobilitySettingsChange
   cellActivation
   seNBAdditionPreparation
   meNBinitiatedSeNBModificationPreparation
   seNBinitiatedSeNBModification
   seNBinitiatedSeNBRelease
   x2Removal
   retrieveUEContext
   sgNBAdditionPreparation
   meNBinitiatedSgNBModificationPreparation
   sgNBinitiatedSgNBModification
   meNBinitiatedSgNBRelease
   sgNBinitiatedSgNBRelease
   sgNBChange
   endcX2Setup
   endcConfigurationUpdate
   endcCellActivation
    endcPartialReset
   eUTRANRCellResourceCoordination
   endcX2Removal
    . . .
X2AP-ELEMENTARY-PROCEDURES-CLASS-2 X2AP-ELEMENTARY-PROCEDURE ::=
   snStatusTransfer
   uEContextRelease
   handoverCancel
   errorIndication
   resourceStatusReporting
   loadIndication
   privateMessage
   rLFIndication
   handoverReport
   x2Release
   x2APMessageTransfer
```

```
seNBReconfigurationCompletion
    meNBinitiatedSeNBRelease
    seNBCounterCheck
    sgNBReconfigurationCompletion
    sqNBCounterCheck
    rRCTransfer
    secondaryRATDataUsageReport
    sqNBActivityNotification
    . . .
-- Interface Elementary Procedures
handoverPreparation X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            HandoverRequest
                            HandoverRequestAcknowledge
    SUCCESSFUL OUTCOME
                            HandoverPreparationFailure
    UNSUCCESSFUL OUTCOME
                            id-handoverPreparation
    PROCEDURE CODE
    CRITICALITY
                            reject
snStatusTransfer X2AP-ELEMENTARY-PROCEDURE ::= {
                            SNStatusTransfer
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-snStatusTransfer
    CRITICALITY
                            ignore
uEContextRelease X2AP-ELEMENTARY-PROCEDURE ::= {
                            UEContextRelease
    INITIATING MESSAGE
                            id-uEContextRelease
    PROCEDURE CODE
    CRITICALITY
                            ignore
handoverCancel X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            HandoverCancel
    PROCEDURE CODE
                            id-handoverCancel
    CRITICALITY
                            ignore
handoverReport X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            HandoverReport
    PROCEDURE CODE
                            id-handoverReport
    CRITICALITY
                            ignore
errorIndication X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ErrorIndication
```

241

```
id-errorIndication
    PROCEDURE CODE
    CRITICALITY
                            ignore
reset X2AP-ELEMENTARY-PROCEDURE ::= {
                            ResetRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            ResetResponse
                            id-reset
    PROCEDURE CODE
    CRITICALITY
                            reject
x2Setup X2AP-ELEMENTARY-PROCEDURE ::= {
                            X2SetupRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            X2SetupResponse
    UNSUCCESSFUL OUTCOME
                            X2SetupFailure
    PROCEDURE CODE
                            id-x2Setup
                            reject
    CRITICALITY
loadIndication X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            LoadInformation
    PROCEDURE CODE
                            id-loadIndication
    CRITICALITY
                            ignore
eNBConfigurationUpdate
                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ENBConfigurationUpdate
                            ENBConfigurationUpdateAcknowledge
    SUCCESSFUL OUTCOME
                            ENBConfigurationUpdateFailure
    UNSUCCESSFUL OUTCOME
                            id-eNBConfigurationUpdate
    PROCEDURE CODE
    CRITICALITY
                            reject
resourceStatusReportingInitiation
                                    X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                                    ResourceStatusRequest
    SUCCESSFUL OUTCOME
                                    ResourceStatusResponse
                                    ResourceStatusFailure
    UNSUCCESSFUL OUTCOME
                                    id-resourceStatusReportingInitiation
    PROCEDURE CODE
    CRITICALITY
                                    reject
resourceStatusReporting X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ResourceStatusUpdate
    PROCEDURE CODE
                            id-resourceStatusReporting
    CRITICALITY
                            ignore
rLFIndication X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            RLFIndication
    PROCEDURE CODE
                            id-rLFIndication
    CRITICALITY
                            ignore
```

```
X2AP-ELEMENTARY-PROCEDURE ::= {
privateMessage
    INITIATING MESSAGE
                            PrivateMessage
    PROCEDURE CODE
                            id-privateMessage
    CRITICALITY
                            ignore
mobilitySettingsChange X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            MobilityChangeRequest
    SUCCESSFUL OUTCOME
                            MobilityChangeAcknowledge
                            MobilityChangeFailure
    UNSUCCESSFUL OUTCOME
                            id-mobilitySettingsChange
    PROCEDURE CODE
    CRITICALITY
                            reject
cellactivation X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            CellActivationRequest
                            CellActivationResponse
    SUCCESSFUL OUTCOME
                            CellActivationFailure
    UNSUCCESSFUL OUTCOME
                            id-cellActivation
    PROCEDURE CODE
                            reject
    CRITICALITY
x2Release X2AP-ELEMENTARY-PROCEDURE ::= {
                            X2Release
    INITIATING MESSAGE
                            id-x2Release
    PROCEDURE CODE
    CRITICALITY
                            reject
x2APMessageTransfer X2AP-ELEMENTARY-PROCEDURE ::= {
                            X2APMessageTransfer
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-x2APMessageTransfer
    CRITICALITY
                            reject
seNBAdditionPreparation X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SeNBAdditionRequest
    SUCCESSFUL OUTCOME
                            SeNBAdditionRequestAcknowledge
                            SeNBAdditionRequestReject
    UNSUCCESSFUL OUTCOME
                            id-seNBAdditionPreparation
    PROCEDURE CODE
    CRITICALITY
                            reject
senBReconfigurationCompletion X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SeNBReconfigurationComplete
    PROCEDURE CODE
                            id-seNBReconfigurationCompletion
    CRITICALITY
                            ignore
meNBinitiatedSeNBModificationPreparation
                                             X2AP-ELEMENTARY-PROCEDURE ::= {
                            SeNBModificationRequest
    INITIATING MESSAGE
                            SeNBModificationRequestAcknowledge
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            SeNBModificationRequestReject
    PROCEDURE CODE
                            \verb|id-meNB| initiated SeNBModification Preparation|
    CRITICALITY
                            reject
```

```
seNBinitiatedSeNBModification
                                X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SeNBModificationRequired
    SUCCESSFUL OUTCOME
                            SeNBModificationConfirm
                            SeNBModificationRefuse
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-seNBinitiatedSeNBModification
                            reject
    CRITICALITY
meNBinitiatedSeNBRelease
                            X2AP-ELEMENTARY-PROCEDURE ::= {
                            SeNBReleaseRequest
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-meNBinitiatedSeNBRelease
    CRITICALITY
                            ignore
seNBinitiatedSeNBRelease
                            X2AP-ELEMENTARY-PROCEDURE ::=
                            SeNBReleaseRequired
    INITIATING MESSAGE
                            SeNBReleaseConfirm
    SUCCESSFUL OUTCOME
                            id-seNBinitiatedSeNBRelease
    PROCEDURE CODE
    CRITICALITY
                            reject
                    X2AP-ELEMENTARY-PROCEDURE ::= {
seNBCounterCheck
                            SeNBCounterCheckRequest
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-seNBCounterCheck
    CRITICALITY
                            reject
x2Removal X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            X2RemovalRequest
    SUCCESSFUL OUTCOME
                            X2RemovalResponse
    UNSUCCESSFUL OUTCOME
                            X2RemovalFailure
    PROCEDURE CODE
                            id-x2Removal
    CRITICALITY
                            reject
retrieveUEContext X2AP-ELEMENTARY-PROCEDURE ::= {
                            RetrieveUEContextRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            RetrieveUEContextResponse
                            RetrieveUEContextFailure
    UNSUCCESSFUL OUTCOME
                            id-retrieveUEContext
    PROCEDURE CODE
    CRITICALITY
                            reject
sgNBAdditionPreparation
                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SgNBAdditionRequest
                            SgNBAdditionRequestAcknowledge
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            SgNBAdditionRequestReject
    PROCEDURE CODE
                            id-sgNBAdditionPreparation
    CRITICALITY
                            reject
sgNBReconfigurationCompletion
                                X2AP-ELEMENTARY-PROCEDURE ::= {
```

```
SgNBReconfigurationComplete
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-sqNBReconfigurationCompletion
    CRITICALITY
                            ignore
meNBinitiatedSgNBModificationPreparation
                                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SqNBModificationRequest
                            SqNBModificationRequestAcknowledge
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            SgNBModificationRequestReject
                            id-meNBinitiatedSqNBModificationPreparation
    PROCEDURE CODE
    CRITICALITY
                            reject
sgNBinitiatedSgNBModification
                                    X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SqNBModificationRequired
    SUCCESSFUL OUTCOME
                            SqNBModificationConfirm
                            SqNBModificationRefuse
    UNSUCCESSFUL OUTCOME
                            id-sqNBinitiatedSqNBModification
    PROCEDURE CODE
                            reject
    CRITICALITY
meNBinitiatedSqNBRelease
                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SgNBReleaseRequest
                            SgNBReleaseRequestAcknowledge
    SUCCESSFUL OUTCOME
                            SgNBReleaseRequestReject
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-meNBinitiatedSgNBRelease
    CRITICALITY
                            ignore
sgNBinitiatedSgNBRelease
                            X2AP-ELEMENTARY-PROCEDURE ::=
                            SqNBReleaseRequired
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            SgNBReleaseConfirm
    PROCEDURE CODE
                            id-sgNBinitiatedSgNBRelease
    CRITICALITY
                            reject
sgNBCounterCheck
                    X2AP-ELEMENTARY-PROCEDURE ::= {
                            SqNBCounterCheckRequest
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-sqNBCounterCheck
    CRITICALITY
                            reject
sgNBChange X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SgNBChangeRequired
    SUCCESSFUL OUTCOME
                            SqNBChangeConfirm
                            SgNBChangeRefuse
    UNSUCCESSFUL OUTCOME
                            id-sgNBChange
    PROCEDURE CODE
    CRITICALITY
                            reject
rRCTransfer X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            RRCTransfer
    PROCEDURE CODE
                            id-rRCTransfer
    CRITICALITY
                            reject
```

245

```
endcX2Setup X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ENDCX2SetupRequest
    SUCCESSFUL OUTCOME
                            ENDCX2SetupResponse
                            ENDCX2SetupFailure
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-endcX2Setup
                            reject
    CRITICALITY
endcConfigurationUpdate
                            X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ENDCConfigurationUpdate
    SUCCESSFUL OUTCOME
                            ENDCConfigurationUpdateAcknowledge
                            ENDCConfigurationUpdateFailure
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-endcConfigurationUpdate
                            reject
    CRITICALITY
secondaryRATDataUsageReport X2AP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SecondaryRATDataUsageReport
    PROCEDURE CODE
                            id-secondaryRATDataUsageReport
    CRITICALITY
                            reject
endcCellActivation X2AP-ELEMENTARY-PROCEDURE ::= {
                            ENDCCellActivationRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            ENDCCellActivationResponse
                            ENDCCellActivationFailure
    UNSUCCESSFUL OUTCOME
                            id-endcCellActivation
    PROCEDURE CODE
    CRITICALITY
                            reject
                    X2AP-ELEMENTARY-PROCEDURE ::= {
endcPartialReset
                            ENDCPartialResetRequired
    INITIATING MESSAGE
                            ENDCPartialResetConfirm
    SUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-endcPartialReset
    CRITICALITY
                            reject
eUTRANRCellResourceCoordination X2AP-ELEMENTARY-PROCEDURE ::= {
                            EUTRANRCellResourceCoordinationRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            EUTRANRCellResourceCoordinationResponse
    PROCEDURE CODE
                            id-eUTRANRCellResourceCoordination
    CRITICALITY
                            reject
                            X2AP-ELEMENTARY-PROCEDURE ::= {
sgNBActivityNotification
    INITIATING MESSAGE
                            SgNBActivityNotification
    PROCEDURE CODE
                            id-SgNBActivityNotification
    CRITICALITY
                            reject
```

9.3.4 PDU Definitions

```
****************
-- PDU definitions for X2AP.
__ *********************
X2AP-PDU-Contents {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) x2ap (2) version1 (1) x2ap-PDU-Contents (1) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
     -- IE parameter types from other modules.
__ *******************
IMPORTS
   ABSInformation,
   ABS-Status,
   AS-SecurityInformation,
   BearerType,
   CompositeAvailableCapacityGroup,
   Correlation-ID,
   COUNTvalue,
   CellReportingIndicator,
   AerialUEsubscriptionInformation,
   CriticalityDiagnostics,
   CRNTI,
   CSGMembershipStatus,
   CSG-Id,
   DeactivationIndication,
   DL-Forwarding,
   DynamicDLTransmissionInformation,
   ECGI,
   E-RAB-ID,
   E-RAB-Level-QoS-Parameters,
```

```
E-RAB-List,
EUTRANTraceID.
GlobalENB-ID.
GTPtunnelEndpoint,
GUGroupIDList,
GUMMEI,
HandoverReportType,
HandoverRestrictionList,
Masked-IMEISV,
InvokeIndication,
LocationReportingInformation,
MDT-Configuration,
ManagementBasedMDTallowed,
MDTPLMNList,
Neighbour-Information,
PCI,
PDCP-SN,
PLMN-Identity,
ReceiveStatusofULPDCPSDUs,
Registration-Request,
RelativeNarrowbandTxPower,
RadioResourceStatus,
RRCConnReestabIndicator,
RRCConnSetupIndicator,
UE-RLF-Report-Container,
UEAppLayerMeasConfig,
RRC-Context,
ServedCell-Information,
ServedCells,
ShortMAC-I,
SRVCCOperationPossible,
SubscriberProfileIDforRFP,
TargetCellInUTRAN,
TargeteNBtoSource-eNBTransparentContainer,
TimeToWait,
TraceActivation,
TraceDepth,
TransportLayerAddress,
UEAggregateMaximumBitRate,
UE-HistoryInformation,
UE-HistoryInformationFromTheUE,
UE-S1AP-ID,
UESecurityCapabilities,
UEsToBeResetList,
UE-X2AP-ID,
UL-HighInterferenceIndicationInfo,
UL-InterferenceOverloadIndication.
HWLoadIndicator,
S1TNLLoadIndicator,
Measurement-ID,
ReportCharacteristics,
MobilityParametersInformation,
MobilityParametersModificationRange,
ReceiveStatusOfULPDCPSDUsExtended,
```

```
COUNTValueExtended,
SubframeAssignment,
ExtendedULInterferenceOverloadInfo,
ExpectedUEBehaviour,
SeNBSecurityKey,
MeNBtoSeNBContainer,
SeNBtoMeNBContainer,
SCGChangeIndication,
CoMPInformation,
ReportingPeriodicityRSRPMR,
RSRPMRList,
UE-RLF-Report-Container-for-extended-bands,
ProSeAuthorized,
CoverageModificationList,
ReportingPeriodicityCSIR,
CSIReportList,
ReceiveStatusOfULPDCPSDUsPDCP-SNlength18,
COUNTvaluePDCP-SNlength18,
LHN-ID,
UE-ContextKeptIndicator,
UE-X2AP-ID-Extension,
SIPTOBearerDeactivationIndication,
TunnelInformation,
V2XServicesAuthorized,
X2BenefitValue,
ResumeID,
EUTRANCellIdentifier,
MakeBeforeBreakIndicator,
WTID,
WT-UE-XwAP-ID,
UESidelinkAggregateMaximumBitRate,
SgNBSecurityKey,
MeNBtoSgNBContainer,
SgNBtoMeNBContainer,
SplitSRBs,
RRCContainer,
SRBType,
GlobalGNB-ID,
GNB-ID,
SCGConfigurationOuery,
SplitSRB,
UENRMeasurement,
EN-DC-ResourceConfiguration,
TAC,
NRFreqInfo,
NRCGI,
NRPCI,
NRUESecurityCapabilities,
PDCPChangeIndication,
ULConfiguration,
SgNB-UE-X2AP-ID,
SecondaryRATUsageReportList,
ActivationID,
MeNBResourceCoordinationInformation,
```

```
SgNBResourceCoordinationInformation,
    NR-TxBW.
    BroadcastPLMNs-Item.
    RLCMode.
    GBR-OosInformation,
   DRB-ID,
    FiveGS-TAC,
    SULInformation,
    Packet-LossRate,
    ResourceType,
    DataTrafficResourceIndication,
    SpectrumSharingGroupID,
    RRC-Config-Ind,
    SGNB-Addition-Trigger-Ind,
    UserPlaneTrafficActivityReport,
    ERABActivityNotifyItemList
FROM X2AP-IEs
    PrivateIE-Container{},
    ProtocolExtensionContainer{},
    ProtocolIE-Container{},
    ProtocolIE-ContainerList{},
    ProtocolIE-ContainerPair{},
    ProtocolIE-ContainerPairList{},
    ProtocolIE-Single-Container{},
    X2AP-PRIVATE-IES,
    X2AP-PROTOCOL-EXTENSION,
    X2AP-PROTOCOL-IES,
    X2AP-PROTOCOL-IES-PAIR
FROM X2AP-Containers
    id-ABSInformation,
   id-ActivatedCellList,
    id-BearerType,
    id-Cause,
    id-CellInformation,
    id-CellInformation-Item,
    id-CellMeasurementResult,
    id-CellMeasurementResult-Item,
    id-CellToReport,
    id-CellToReport-Item,
    id-CompositeAvailableCapacityGroup,
    id-AerialUEsubscriptionInformation,
    id-CriticalityDiagnostics,
    id-DeactivationIndication,
    id-DynamicDLTransmissionInformation,
    id-E-RABs-Admitted-Item,
    id-E-RABs-Admitted-List,
    id-E-RABs-NotAdmitted-List,
    id-E-RABs-SubjectToStatusTransfer-List,
    id-E-RABs-SubjectToStatusTransfer-Item,
    id-E-RABs-ToBeSetup-Item,
```

```
id-GlobalENB-ID,
id-GUGroupIDList.
id-GUGroupIDToAddList.
id-GUGroupIDToDeleteList,
id-GUMMEI-ID.
id-Masked-IMEISV,
id-InvokeIndication.
id-New-eNB-UE-X2AP-ID,
id-Old-eNB-UE-X2AP-ID,
id-Registration-Request,
id-ReportingPeriodicity,
id-ServedCells,
id-ServedCellsToActivate,
id-ServedCellsToAdd,
id-ServedCellsToModify,
id-ServedCellsToDelete,
id-SRVCCOperationPossible,
id-TargetCell-ID,
id-TargeteNBtoSource-eNBTransparentContainer,
id-TimeToWait.
id-TraceActivation.
id-UE-ContextInformation,
id-UE-HistoryInformation,
id-UE-X2AP-ID,
id-Measurement-ID,
id-ReportCharacteristics,
id-ENB1-Measurement-ID,
id-ENB2-Measurement-ID,
id-ENB1-Cell-ID,
id-ENB2-Cell-ID,
id-ENB2-Proposed-Mobility-Parameters,
id-ENB1-Mobility-Parameters,
id-ENB2-Mobility-Parameters-Modification-Range,
id-FailureCellPCI,
id-Re-establishmentCellECGI,
id-FailureCellCRNTI,
id-ShortMAC-I,
id-SourceCellECGI,
id-FailureCellECGI,
id-HandoverReportType,
id-UE-RLF-Report-Container,
id-PartialSuccessIndicator,
id-MeasurementInitiationResult-List,
id-MeasurementInitiationResult-Item,
id-MeasurementFailureCause-Item,
id-CompleteFailureCauseInformation-List,
id-CompleteFailureCauseInformation-Item,
id-CSGMembershipStatus,
id-CSG-Id,
id-MDTConfiguration,
id-ManagementBasedMDTallowed,
id-ABS-Status,
id-RRCConnSetupIndicator,
id-RRCConnReestabIndicator,
```

```
id-TargetCellInUTRAN,
id-MobilityInformation,
id-SourceCellCRNTI.
id-ManagementBasedMDTPLMNList,
id-ReceiveStatusOfULPDCPSDUsExtended.
id-ULCOUNTValueExtended.
id-DLCOUNTValueExtended.
id-IntendedULDLConfiguration,
id-ExtendedULInterferenceOverloadInfo,
id-RNL-Header,
id-x2APMessage,
id-UE-HistoryInformationFromTheUE,
id-ExpectedUEBehaviour,
id-MeNB-UE-X2AP-ID,
id-SeNB-UE-X2AP-ID,
id-UE-SecurityCapabilities,
id-SeNBSecurityKey,
id-SeNBUEAggregateMaximumBitRate,
id-ServingPLMN,
id-E-RABs-ToBeAdded-List,
id-E-RABs-ToBeAdded-Item,
id-MeNBtoSeNBContainer,
id-E-RABs-Admitted-ToBeAdded-List,
id-E-RABs-Admitted-ToBeAdded-Item,
id-SeNBtoMeNBContainer,
id-ResponseInformationSeNBReconfComp,
id-UE-ContextInformationSeNBModReg,
id-E-RABs-ToBeAdded-ModRegItem,
id-E-RABs-ToBeModified-ModRegItem,
id-E-RABs-ToBeReleased-ModRegItem,
id-E-RABs-Admitted-ToBeAdded-ModAckList,
id-E-RABs-Admitted-ToBeModified-ModAckList,
id-E-RABs-Admitted-ToBeReleased-ModAckList,
id-E-RABs-Admitted-ToBeAdded-ModAckItem,
id-E-RABs-Admitted-ToBeModified-ModAckItem,
id-E-RABs-Admitted-ToBeReleased-ModAckItem,
id-SCGChangeIndication,
id-E-RABs-ToBeReleased-ModRegd,
id-E-RABs-ToBeReleased-ModRegdItem,
id-E-RABs-ToBeReleased-List-RelReg,
id-E-RABs-ToBeReleased-RelRegItem,
id-E-RABs-ToBeReleased-List-RelConf,
id-E-RABs-ToBeReleased-RelConfItem,
id-E-RABs-SubjectToCounterCheck-List,
id-E-RABs-SubjectToCounterCheckItem,
id-CoMPInformation,
id-ReportingPeriodicityRSRPMR,
id-RSRPMRList,
id-UE-RLF-Report-Container-for-extended-bands,
id-ProSeAuthorized,
id-CoverageModificationList,
id-ReportingPeriodicityCSIR,
id-CSIReportList,
id-ReceiveStatusOfULPDCPSDUsPDCP-SNlength18,
```

```
id-ULCOUNTValuePDCP-SNlength18,
id-DLCOUNTValuePDCP-SNlength18,
id-LHN-ID.
id-Correlation-ID.
id-SIPTO-Correlation-ID.
id-UE-ContextReferenceAtSeNB,
id-UE-ContextReferenceAtWT.
id-UE-ContextKeptIndicator,
id-UEs-ToBeReset,
id-UEs-Admitted-ToBeReset,
id-WT-UE-ContextKeptIndicator,
id-New-eNB-UE-X2AP-ID-Extension.
id-Old-eNB-UE-X2AP-ID-Extension,
id-MeNB-UE-X2AP-ID-Extension,
id-SeNB-UE-X2AP-ID-Extension,
id-SIPTO-BearerDeactivationIndication,
id-Tunnel-Information-for-BBF,
id-SIPTO-L-GW-TransportLayerAddress,
id-GW-TransportLayerAddress,
id-X2RemovalThreshold,
id-CellReportingIndicator,
id-V2XServicesAuthorized,
id-resumeID,
id-UE-ContextInformationRetrieve,
id-E-RABs-ToBeSetupRetrieve-Item,
id-NewEUTRANCellIdentifier,
id-MakeBeforeBreakIndicator,
id-UESidelinkAggregateMaximumBitRate,
id-uL-GTPtunnelEndpoint,
id-SqNBSecurityKey,
id-SqNBUEAqqreqateMaximumBitRate,
id-E-RABs-ToBeAdded-SgNBAddRegList,
id-MeNBtoSqNBContainer,
id-SqNB-UE-X2AP-ID,
id-RequestedSplitSRBs,
id-E-RABs-ToBeAdded-SgNBAddReg-Item,
id-E-RABs-Admitted-ToBeAdded-SgNBAddRegAckList,
id-SqNBtoMeNBContainer,
id-AdmittedSplitSRBs
id-E-RABs-Admitted-ToBeAdded-SqNBAddRegAck-Item,
id-ResponseInformationSqNBReconfComp,
id-UE-ContextInformation-SqNBModReq,
id-E-RABs-ToBeAdded-SgNBModReq-Item,
id-E-RABs-ToBeModified-SqNBModReg-Item,
id-E-RABs-ToBeReleased-SqNBModReg-Item,
id-E-RABs-Admitted-ToBeAdded-SgNBModAckList,
id-E-RABs-Admitted-ToBeModified-SqNBModAckList,
id-E-RABs-Admitted-ToBeReleased-SgNBModAckList,
id-E-RABs-Admitted-ToBeAdded-SqNBModAck-Item,
id-E-RABs-Admitted-ToBeModified-SgNBModAck-Item,
id-E-RABs-Admitted-ToBeReleased-SqNBModAck-Item,
id-E-RABs-ToBeReleased-SqNBModRegdList,
id-E-RABs-ToBeModified-SgNBModReqdList,
id-E-RABs-ToBeReleased-SqNBModRegd-Item,
```

```
id-E-RABs-ToBeModified-SgNBModRegd-Item,
id-E-RABs-ToBeReleased-SgNBChaConfList.
id-E-RABs-ToBeReleased-SqNBChaConf-Item.
id-E-RABs-ToBeReleased-SqNBRelRegList,
id-E-RABs-ToBeReleased-SqNBRelReg-Item,
id-E-RABs-ToBeReleased-SqNBRelConfList,
id-E-RABs-ToBeReleased-SqNBRelConf-Item,
id-E-RABs-SubjectToSqNBCounterCheck-List,
id-E-RABs-SubjectToSqNBCounterCheck-Item,
id-Target-SgNB-ID,
id-RRCContainer,
id-SRBTvpe,
id-HandoverRestrictionList,
id-SCGConfigurationOuery,
id-SplitSRB,
id-UENRMeasurement,
id-InitiatingNodeType-EndcX2Setup,
id-InitiatingNodeType-EndcConfigUpdate,
id-RespondingNodeType-EndcX2Setup,
id-RespondingNodeType-EndcConfigUpdate,
id-NRUESecurityCapabilities,
id-PDCPChangeIndication,
id-ServedEUTRAcellsENDCX2ManagementList,
id-ServedEUTRAcellsToModifyListENDCConfUpd.
id-ServedEUTRAcellsToDeleteListENDCConfUpd,
id-ServedNRcellsToModifyListENDCConfUpd,
id-ServedNRcellsToDeleteListENDCConfUpd,
id-CellAssistanceInformation,
id-Globalen-qNB-ID,
id-ServedNRcellsENDCX2ManagementList,
id-Old-SqNB-UE-X2AP-ID,
id-UE-ContextReferenceAtSqNB,
id-SecondaryRATUsageReportList,
id-ActivationID,
id-ServedNRCellsToActivate,
id-ActivatedNRCellList,
id-MeNBResourceCoordinationInformation.
id-SqNBResourceCoordinationInformation,
id-UEAppLayerMeasConfig,
id-SelectedPLMN,
id-SubscriberProfileIDforRFP,
id-InitiatingNodeType-EutranrCellResourceCoordination,
id-RespondingNodeType-EutranrCellResourceCoordination,
id-DataTrafficResourceIndication,
id-SpectrumSharingGroupID,
id-ListofEUTRACellsinEUTRACoordinationReg,
id-ListofEUTRACellsinEUTRACoordinationResp.
id-ListofEUTRACellsinNRCoordinationReg,
id-ListofNRCellsinNRCoordinationReg,
id-ListofNRCellsinNRCoordinationResp,
id-RRCConfigIndication,
id-SGNB-Addition-Trigger-Ind,
id-RequestedSplitSRBsrelease,
id-AdmittedSplitSRBsrelease,
```

```
id-E-RABs-AdmittedToBeModified-SgNBModConfList,
    id-E-RABs-AdmittedToBeModified-SqNBModConf-Item,
    id-UEContextLevelUserPlaneActivity.
    id-ERABActivityNotifyItemList,
    id-MeNBCell-ID.
    id-InitiatingNodeType-EndcX2Removal,
    id-RespondingNodeType-EndcX2Removal,
    maxCellineNB,
    maxnoofBearers,
    maxnoofPDCP-SN,
    maxFailedMeasObjects,
    maxnoofCellIDforMDT,
    maxnoofTAforMDT,
    maxofNRNeighbours,
    maxCellinengNB,
    maxnoofCellIDforOMC,
    maxnoofTAforOMC,
    maxnoofPLMNforOMC,
    maxnoofProtectedResourcePatterns,
    maxnoNRcellsSpectrumSharingWithE-UTRA,
    maxnoofNrCellBands
FROM X2AP-Constants;
-- HANDOVER REQUEST
HandoverRequest ::= SEQUENCE {
                                                {{HandoverRequest-IEs}},
    protocolIEs
                        ProtocolIE-Container
    . . .
HandoverRequest-IEs X2AP-PROTOCOL-IES ::= {
      ID id-Old-eNB-UE-X2AP-ID
                                                                                                            PRESENCE mandatory}
                                                CRITICALITY reject TYPE UE-X2AP-ID
      ID id-Cause
                                                CRITICALITY ignore TYPE Cause
                                                                                                            PRESENCE mandatory
      ID id-TargetCell-ID
                                                                                                            PRESENCE mandatory }
                                                CRITICALITY reject TYPE ECGI
      ID id-GUMMEI-ID
                                                CRITICALITY reject TYPE GUMMEI
                                                                                                            PRESENCE mandatory
      ID id-UE-ContextInformation
                                                CRITICALITY reject TYPE UE-ContextInformation
                                                                                                            PRESENCE mandatory }
      ID id-UE-HistoryInformation
                                                CRITICALITY ignore TYPE UE-HistoryInformation
                                                                                                            PRESENCE mandatory}
      ID id-TraceActivation
                                                CRITICALITY ignore TYPE TraceActivation
                                                                                                            PRESENCE optional}
                                                                                                            PRESENCE optional}
      ID id-SRVCCOperationPossible
                                                CRITICALITY ignore TYPE SRVCCOperationPossible
      ID id-CSGMembershipStatus
                                                CRITICALITY reject TYPE CSGMembershipStatus
                                                                                                            PRESENCE optional }
      ID id-MobilityInformation
                                                CRITICALITY ignore TYPE MobilityInformation
                                                                                                            PRESENCE optional }
      ID id-Masked-IMEISV
                                                CRITICALITY ignore TYPE Masked-IMEISV
                                                                                                            PRESENCE optional }
      ID id-UE-HistoryInformationFromTheUE
                                                CRITICALITY ignore TYPE UE-HistoryInformationFromTheUE
                                                                                                            PRESENCE optional }
                                                                                                            PRESENCE optional}
      ID id-ExpectedUEBehaviour
                                                CRITICALITY ignore TYPE ExpectedUEBehaviour
      ID id-ProSeAuthorized
                                                CRITICALITY ignore TYPE ProSeAuthorized
                                                                                                            PRESENCE optional}
      ID id-UE-ContextReferenceAtSeNB
                                                CRITICALITY ignore TYPE UE-ContextReferenceAtSeNB
                                                                                                            PRESENCE optional}
                                                                                                            PRESENCE optional }
      ID id-Old-eNB-UE-X2AP-ID-Extension
                                                CRITICALITY reject TYPE UE-X2AP-ID-Extension
```

```
ID id-V2XServicesAuthorized
                                                CRITICALITY ignore TYPE V2XServicesAuthorized
                                                                                                            PRESENCE optional }
      ID id-UE-ContextReferenceAtWT
                                                CRITICALITY ignore TYPE UE-ContextReferenceAtWT
                                                                                                            PRESENCE optional }
                                                                                                                  PRESENCE optional }
      ID id-NRUESecurityCapabilities
                                                     CRITICALITY ignore TYPE NRUESecurityCapabilities
      ID id-UE-ContextReferenceAtSqNB
                                                CRITICALITY ignore TYPE UE-ContextReferenceAtSqNB
                                                                                                            PRESENCE optional } |
     ID id-AerialUEsubscriptionInformation
                                                CRITICALITY ignore TYPE AerialUEsubscriptionInformation
                                                                                                            PRESENCE optional }
UE-ContextInformation ::= SEQUENCE {
    mME-UE-S1AP-ID
                                        UE-S1AP-ID,
                                        UESecurityCapabilities,
    uESecurityCapabilities
    aS-SecurityInformation
                                        AS-SecurityInformation,
    uEaggregateMaximumBitRate
                                        UEAggregateMaximumBitRate,
    subscriberProfileIDforRFP
                                        SubscriberProfileIDforRFP
                                                                         OPTIONAL,
    e-RABs-ToBeSetup-List
                                        E-RABs-ToBeSetup-List,
    rRC-Context
                                        RRC-Context,
    handoverRestrictionList
                                        HandoverRestrictionList
                                                                     OPTIONAL,
    locationReportingInformation
                                        LocationReportingInformation
                                                                         OPTIONAL,
    iE-Extensions
                                        ProtocolExtensionContainer { {UE-ContextInformation-ExtIEs} } OPTIONAL,
    . . .
UE-ContextInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
 ID id-ManagementBasedMDTallowed
                                            CRITICALITY ignore EXTENSION ManagementBasedMDTallowed
                                                                                                                  PRESENCE optional
 ID id-ManagementBasedMDTPLMNList
                                            CRITICALITY ignore EXTENSION MDTPLMNList
                                                                                                                  PRESENCE optional }
{ ID id-UESidelinkAggregateMaximumBitRate
                                            CRITICALITY ignore EXTENSION UESidelinkAggregateMaximumBitRate
                                                                                                                  PRESENCE optional },
E-RABs-ToBeSetup-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeSetup-ItemIEs} }
E-RABs-ToBeSetup-ItemIEs
                            X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeSetup-Item
                                     CRITICALITY ignore
                                                             TYPE E-RABs-ToBeSetup-Item PRESENCE mandatory },
    . . .
E-RABs-ToBeSetup-Item ::= SEQUENCE {
    e-RAB-ID
                                E-RAB-ID
    e-RAB-Level-OoS-Parameters
                                    E-RAB-Level-OoS-Parameters,
    dL-Forwarding
                                    DL-Forwarding
                                                                                                   OPTIONAL,
    uL-GTPtunnelEndpoint
                                    GTPtunnelEndpoint,
    iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeSetup-ItemExtIEs} } OPTIONAL,
    . . .
E-RABs-ToBeSetup-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    { ID id-BearerType
                            CRITICALITY reject EXTENSION BearerType
                                                                             PRESENCE optional },
    . . .
MobilityInformation ::= BIT STRING (SIZE(32))
UE-ContextReferenceAtSeNB ::= SEQUENCE {
    source-GlobalSeNB-ID
                                GlobalENB-ID,
```

```
seNB-UE-X2AP-ID
                              UE-X2AP-ID,
   seNB-UE-X2AP-ID-Extension UE-X2AP-ID-Extension,
   iE-Extensions
                              ProtocolExtensionContainer { {UE-ContextReferenceAtSeNB-ItemExtIEs} } OPTIONAL,
UE-ContextReferenceAtSeNB-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::=
UE-ContextReferenceAtWT ::= SEQUENCE {
                          WTID,
   wT-UE-XwAP-ID
                          WT-UE-XwAP-ID,
   iE-Extensions
                          ProtocolExtensionContainer { {UE-ContextReferenceAtWT-ItemExtIEs} } OPTIONAL.
UE-ContextReferenceAtWT-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UE-ContextReferenceAtSqNB ::= SEQUENCE {
    source-GlobalSgNB-ID
                                  GlobalGNB-ID,
    sqNB-UE-X2AP-ID
                              SaNB-UE-X2AP-ID,
                              ProtocolExtensionContainer { {UE-ContextReferenceAtSqNB-ItemExtIEs} } OPTIONAL,
   iE-Extensions
UE-ContextReferenceAtSqNB-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  *****************
-- HANDOVER REQUEST ACKNOWLEDGE
  *****************
HandoverRequestAcknowledge ::= SEOUENCE {
   protocolIEs
                   ProtocolIE-Container
                                          {{HandoverRequestAcknowledge-IEs}},
   . . .
HandoverRequestAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                                     CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                        PRESENCE mandatory
     ID id-New-eNB-UE-X2AP-ID
                                                     CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                        PRESENCE mandatory}
     ID id-E-RABs-Admitted-List
                                                     CRITICALITY ignore TYPE E-RABs-Admitted-List
                                                                                                                        PRESENCE mandatory}
     ID id-E-RABs-NotAdmitted-List
                                                     CRITICALITY ignore TYPE E-RAB-List
                                                                                                                        PRESENCE optional}
     ID id-TargeteNBtoSource-eNBTransparentContainer
                                                     CRITICALITY ignore TYPE TargeteNBtoSource-eNBTransparentContainer
                                                                                                                        PRESENCE mandatory }
     ID id-CriticalityDiagnostics
                                                     CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                        PRESENCE optional }
                                                                                                                        PRESENCE optional }
     ID id-UE-ContextKeptIndicator
                                                     CRITICALITY ignore TYPE UE-ContextKeptIndicator
     ID id-SeNB-UE-X2AP-ID-Extension
                                                     CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                        PRESENCE optional }
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                                     CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                        PRESENCE optional }
                                                                                                                        PRESENCE optional }
     ID id-New-eNB-UE-X2AP-ID-Extension
                                                     CRITICALITY reject TYPE UE-X2AP-ID-Extension
```

```
PRESENCE optional },
   { ID id-WT-UE-ContextKeptIndicator
                                             CRITICALITY ignore TYPE UE-ContextKeptIndicator
E-RABs-Admitted-List
                      ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ItemIEs} }
E-RABs-Admitted-ItemIEs X2AP-PROTOCOL-IES ::= {
   E-RABs-Admitted-Item ::= SEQUENCE {
   e-RAB-ID
                          E-RAB-ID,
   uL-GTP-TunnelEndpoint
                             GTPtunnelEndpoint
                                                                                 OPTIONAL,
   dL-GTP-TunnelEndpoint
                             GTPtunnelEndpoint
                                                                                 OPTIONAL,
   iE-Extensions
                             ProtocolExtensionContainer { {E-RABs-Admitted-Item-ExtIEs} }
                                                                                 OPTIONAL,
E-RABs-Admitted-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- HANDOVER PREPARATION FAILURE
__ **********************
HandoverPreparationFailure ::= SEOUENCE {
                ProtocolIE-Container
                                    {{HandoverPreparationFailure-IEs}},
   protocolIEs
   . . .
HandoverPreparationFailure-IEs X2AP-PROTOCOL-IES ::= {
    ID id-Old-eNB-UE-X2AP-ID
                                                                              PRESENCE mandatory}
                                   CRITICALITY ignore TYPE UE-X2AP-ID
                                                                              PRESENCE mandatory
    ID id-Cause
                                   CRITICALITY ignore TYPE Cause
    ID id-CriticalityDiagnostics
                                 CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                              PRESENCE optional } |
    PRESENCE optional },
    *****************
-- Handover Report
HandoverReport ::= SEQUENCE {
   protocolIEs
              ProtocolIE-Container
                                    {{HandoverReport-IEs}},
HandoverReport-IEs X2AP-PROTOCOL-IES ::= {
```

```
ID id-HandoverReportType
                                                    CRITICALITY ignore TYPE HandoverReportType
                                                                                                                   PRESENCE mandatory }
     ID id-Cause
                                                    CRITICALITY ignore TYPE Cause
                                                                                                                   PRESENCE mandatory
     ID id-SourceCellECGI
                                                    CRITICALITY ignore TYPE ECGI
                                                                                                                   PRESENCE mandatory
     ID id-FailureCellECGI
                                                    CRITICALITY ignore TYPE ECGI
                                                                                                                   PRESENCE mandatory}
     ID id-Re-establishmentCellECGI
                                                   CRITICALITY ignore TYPE ECGI
                                                                                                                   PRESENCE conditional } -
- The IE shall be present if the Handover Report Type IE is set to "HO to Wrong Cell" -- |
     ID id-TargetCellInUTRAN
                                                    CRITICALITY ignore TYPE TargetCellInUTRAN
                                                                                                                   PRESENCE conditional } -
- The IE shall be present if the Handover Report Type IE is set to "InterRAT ping-pong" -- |
     ID id-SourceCellCRNTI
                                                   CRITICALITY ignore TYPE CRNTI
                                                                                                                   PRESENCE optional }
     ID id-MobilityInformation
                                                   CRITICALITY ignore TYPE MobilityInformation
                                                                                                                   PRESENCE optional }
     ID id-UE-RLF-Report-Container
                                                   CRITICALITY ignore TYPE UE-RLF-Report-Container
                                                                                                                   PRESENCE optional
    **********************
-- SN Status Transfer
__ *********************************
SNStatusTransfer ::= SEQUENCE {
                                        {{SNStatusTransfer-IEs}},
   protocolIEs
                  ProtocolIE-Container
   . . .
SNStatusTransfer-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                                CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                          PRESENCE mandatory }
     ID id-New-eNB-UE-X2AP-ID
                                                CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                           PRESENCE mandatory
     ID id-E-RABs-SubjectToStatusTransfer-List
                                                CRITICALITY ignore TYPE E-RABs-SubjectToStatusTransfer-List
                                                                                                          PRESENCE mandatory}
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                                CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                           PRESENCE optional}
     ID id-New-eNB-UE-X2AP-ID-Extension
                                                CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                          PRESENCE optional }
    { ID id-SqNB-UE-X2AP-ID
                                                CRITICALITY ignore TYPE SgNB-UE-X2AP-ID
                                                                                                             PRESENCE optional },
E-RABs-SubjectToStatusTransfer-List ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { { E-RABs-SubjectToStatusTransfer-
ItemIEs} }
E-RABs-SubjectToStatusTransfer-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-SubjectToStatusTransfer-Item CRITICALITY ignore TYPE E-RABs-SubjectToStatusTransfer-Item PRESENCE mandatory }
E-RABs-SubjectToStatusTransfer-Item ::= SEQUENCE {
   e-RAB-ID
                                        E-RAB-ID,
   receiveStatusofULPDCPSDUs
                                        ReceiveStatusofULPDCPSDUs
                                                                          OPTIONAL,
   uL-COUNTvalue
                                 COUNTvalue,
   dL-COUNTvalue
                                 COUNTvalue,
   iE-Extensions
                                        ProtocolExtensionContainer { {E-RABs-SubjectToStatusTransfer-ItemExtIEs} } OPTIONAL,
E-RABs-SubjectToStatusTransfer-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
ID id-ReceiveStatusOfULPDCPSDUsExtended
                                                CRITICALITY ignore EXTENSION ReceiveStatusOfULPDCPSDUsExtended
                                                                                                              PRESENCE optional}
     ID id-ULCOUNTValueExtended
                                                CRITICALITY ignore EXTENSION COUNTValueExtended
                                                                                                              PRESENCE optional}
                                                CRITICALITY ignore EXTENSION COUNTValueExtended
     ID id-DLCOUNTValueExtended
                                                                                                              PRESENCE optional}
     ID id-ReceiveStatusOfULPDCPSDUsPDCP-SNlength18
                                                CRITICALITY ignore EXTENSION ReceiveStatusOfULPDCPSDUsPDCP-SNlength18 PRESENCE optional}
     ID id-ULCOUNTValuePDCP-SNlength18
                                                CRITICALITY ignore EXTENSION COUNTvaluePDCP-SNlength18
                                                                                                               PRESENCE optional}
    ID id-DLCOUNTValuePDCP-SNlength18
                                                CRITICALITY ignore EXTENSION COUNTvaluePDCP-SNlength18
                                                                                                              PRESENCE optional },
  -- UE Context Release
  ····
UEContextRelease ::= SEOUENCE {
                                      {{UEContextRelease-IEs}},
   protocolIEs
                 ProtocolIE-Container
UEContextRelease-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                         CRITICALITY reject TYPE UE-X2AP-ID
                                                                                               PRESENCE mandatory }
     ID id-New-eNB-UE-X2AP-ID
                                                                                               PRESENCE mandatory
                                         CRITICALITY reject TYPE UE-X2AP-ID
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                         CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                               PRESENCE optional}
     ID id-New-eNB-UE-X2AP-ID-Extension
                                         CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                               PRESENCE optional }
     PRESENCE optional } |
   { ID id-SqNB-UE-X2AP-ID
                                         CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                               PRESENCE optional },
  ******************
-- HANDOVER CANCEL
__ ********************
HandoverCancel ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                      {{HandoverCancel-IEs}},
   . . .
HandoverCancel-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Old-eNB-UE-X2AP-ID
                                         CRITICALITY reject TYPE UE-X2AP-ID
                                                                                     PRESENCE mandatory}
     ID id-New-eNB-UE-X2AP-ID
                                         CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                     PRESENCE optional }
     ID id-Cause
                                         CRITICALITY ignore TYPE Cause
                                                                                     PRESENCE mandatory } |
                                         CRITICALITY reject TYPE UE-X2AP-ID-Extension
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                                                                     PRESENCE optional } |
    ID id-New-eNB-UE-X2AP-ID-Extension
                                         CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                     PRESENCE optional },
-- ERROR INDICATION
```

```
ErrorIndication ::= SEQUENCE {
   protocolIEs
              ProtocolIE-Container
                                    {{ErrorIndication-IEs}},
ErrorIndication-IES X2AP-PROTOCOL-IES ::= {
    ID id-Old-eNB-UE-X2AP-ID
                                                                                  PRESENCE optional}
                                        CRITICALITY ignore TYPE UE-X2AP-ID
    ID id-New-eNB-UE-X2AP-ID
                                        CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                  PRESENCE optional
                                                                                  PRESENCE optional
    ID id-Cause
                                        CRITICALITY ignore TYPE Cause
    ID id-CriticalityDiagnostics
                                        CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional
    ID id-Old-eNB-UE-X2AP-ID-Extension
                                        CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                 PRESENCE optional }
    ID id-New-eNB-UE-X2AP-ID-Extension
                                        CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                  PRESENCE optional }
   { ID id-Old-SqNB-UE-X2AP-ID
                                        CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                  PRESENCE optional },
  *******************
-- Reset Request
__ *********************
ResetRequest ::= SEQUENCE {
                                    {{ResetRequest-IEs}},
   protocolIEs ProtocolIE-Container
ResetRequest-IEs X2AP-PROTOCOL-IES ::= {
   { ID id-Cause
                 CRITICALITY ignore TYPE Cause
                                                               PRESENCE mandatory },
   . . .
  -- Reset Response
  ******************
ResetResponse ::= SEQUENCE {
             ProtocolIE-Container
                                    {{ResetResponse-IEs}},
   protocolIEs
ResetResponse-IEs X2AP-PROTOCOL-IES ::= {
   { ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                             PRESENCE optional },
__ *******************************
-- X2 SETUP REOUEST
```

```
X2SetupRequest ::= SEOUENCE {
    protocolIEs
                 ProtocolIE-Container
                                            {{X2SetupRequest-IEs}},
X2SetupRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-GlobalENB-ID CRITICALITY reject TYPE GlobalENB-ID
                                                                                    PRESENCE mandatory }
     ID id-ServedCells CRITICALITY reject TYPE ServedCells
ID id-GUGroupIDList CRITICALITY reject TYPE GUGroupIDList
ID id-LHN-ID CRITICALITY ignore TYPE LHN-ID
                                                                                   PRESENCE mandatory
                                                                                   PRESENCE optional }
     ID id-LHN-ID
                                                                                   PRESENCE optional },
-- X2 SETUP RESPONSE
X2SetupResponse ::= SEQUENCE {
    protocolIEs
                    ProtocolIE-Container
                                            {{X2SetupResponse-IEs}},
X2SetupResponse-IEs X2AP-PROTOCOL-IES ::= {
    { ID id-GlobalENB-ID
                                       CRITICALITY reject TYPE GlobalENB-ID
                                                                                        PRESENCE mandatory}
     ID id-ServedCells
                                       CRITICALITY reject TYPE ServedCells
                                                                                        PRESENCE mandatory }
     ו עו ia-servedCells
ID id-GUGroupIDList
                                       CRITICALITY reject TYPE GUGroupIDList
                                                                                        PRESENCE optional}
    ID id-CriticalityDiagnostics
                                       CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional
                                        CRITICALITY ignore TYPE LHN-ID
                                                                                        PRESENCE optional },
    { ID id-LHN-ID
-- X2 SETUP FAILURE
X2SetupFailure ::= SEQUENCE
                                           {{X2SetupFailure-IEs}},
    protocolIEs ProtocolIE-Container
X2SetupFailure-IES X2AP-PROTOCOL-IES ::= {
    TYPE Cause
                                                                                                 PRESENCE mandatory}
    { ID id-TimeToWait
                                CRITICALITY ignore
                                                           TYPE TimeToWait
                                                                                                 PRESENCE optional }
```

```
{ ID id-CriticalityDiagnostics CRITICALITY ignore
                                                   TYPE CriticalityDiagnostics
                                                                                   PRESENCE optional },
  -- LOAD INFORMATION
  *****************
LoadInformation ::= SEOUENCE {
   protocolIEs
                 ProtocolIE-Container
                                     {{LoadInformation-IEs}},
LoadInformation-IEs X2AP-PROTOCOL-IES ::=
   { ID id-CellInformation
                                                                              PRESENCE mandatory } ,
                                  CRITICALITY ignore TYPE CellInformation-List
   . . .
CellInformation-List ::= SEOUENCE (SIZE (1..maxCellineNB)) OF ProtocolIE-Single-Container { {CellInformation-ItemIEs} }
CellInformation-ItemIEs X2AP-PROTOCOL-IES ::= {
   CellInformation-Item ::= SEQUENCE {
   cell-ID
                               ECGI.
                                     UL-InterferenceOverloadIndication
   ul-InterferenceOverloadIndication
                                                                                           OPTIONAL,
   ul-HighInterferenceIndicationInfo
                                     UL-HighInterferenceIndicationInfo
                                                                                           OPTIONAL,
   relativeNarrowbandTxPower
                                     RelativeNarrowbandTxPower
                                                                                           OPTIONAL,
   iE-Extensions
                                     ProtocolExtensionContainer { {CellInformation-Item-ExtIEs} }
                                                                                           OPTIONAL,
CellInformation-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::=
 ID id-ABSInformation
                                     CRITICALITY ignore EXTENSION ABSInformation
                                                                                             PRESENCE optional
 ID id-InvokeIndication
                                     CRITICALITY ignore EXTENSION InvokeIndication
                                                                                             PRESENCE optional
 ID id-IntendedULDLConfiguration
                                     CRITICALITY ignore EXTENSION SubframeAssignment
                                                                                             PRESENCE optional
 ID id-ExtendedULInterferenceOverloadInfo CRITICALITY ignore EXTENSION ExtendedULInterferenceOverloadInfo PRESENCE optional
 ID id-CoMPInformation
                                     CRITICALITY ignore EXTENSION Complinformation
                                                                                             PRESENCE optional
 ID id-DynamicDLTransmissionInformation
                                     CRITICALITY ignore EXTENSION DynamicDLTransmissionInformation
                                                                                             PRESENCE optional },
-- ENB CONFIGURATION UPDATE
```

```
ENBConfigurationUpdate ::= SEQUENCE {
        protocolIEs
                                         ProtocolIE-Container
                                                                                           {{ENBConfigurationUpdate-IEs}},
        . . .
ENBConfigurationUpdate-IEs X2AP-PROTOCOL-IES ::= {
            ID id-ServedCellsToAdd
                                                                                  CRITICALITY reject TYPE ServedCells
                                                                                                                                                                                                       PRESENCE optional }
            ID id-ServedCellsToModify
                                                                                                                                                                                                       PRESENCE optional }
                                                                                  CRITICALITY reject TYPE ServedCellsToModify
           ID id-ServedCellsToDelete
                                                                                  CRITICALITY reject TYPE Old-ECGIS
                                                                                                                                                                                                       PRESENCE optional }
           ID id-GUGroupIDToAddList
ID id-GUGroupIDToDeleteList
ID id-Common Topic Common Topi
                                                                                                                                                                                                       PRESENCE optional }
                                                                                  CRITICALITY reject TYPE GUGroupIDList
                                                                                                                                                                                                       PRESENCE optional }
                                                                                  CRITICALITY reject TYPE GUGroupIDList
         { ID id-CoverageModificationList
                                                                                  CRITICALITY reject TYPE CoverageModificationList
                                                                                                                                                                                                       PRESENCE optional },
ServedCellsToModify::= SEOUENCE (SIZE (1..maxCellineNB)) OF ServedCellsToModify-Item
ServedCellsToModify-Item::= SEOUENCE
        old-ecgi
                                                                          ECGI,
        servedCellInfo
                                                                          ServedCell-Information,
        neighbour-Info
                                                                          Neighbour-Information
                                                                                                                                             OPTIONAL,
                                                                          ProtocolExtensionContainer { { ServedCellsToModify-Item-ExtIEs} } OPTIONAL,
        iE-Extensions
ServedCellsToModify-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
{ ID id-DeactivationIndication
                                                                                  CRITICALITY ignore EXTENSION DeactivationIndication
                                                                                                                                                                                                                      PRESENCE optional },
Old-ECGIs::= SEQUENCE (SIZE (1..maxCellineNB)) OF ECGI
__ *********************
-- ENB CONFIGURATION UPDATE ACKNOWLEDGE
ENBConfigurationUpdateAcknowledge ::= SEQUENCE
                                                                                      {{ENBConfigurationUpdateAcknowledge-IEs}},
        protocolIEs
                                        ProtocolIE-Container
        . . .
ENBConfigurationUpdateAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
         { ID id-CriticalityDiagnostics
                                                                                  CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                                                                                                      PRESENCE optional },
. . .
          -- ENB CONFIGURATION UPDATE FAIURE
__ **********************
```

```
ENBConfigurationUpdateFailure ::= SEQUENCE {
   protocolIEs
                ProtocolIE-Container
                                         {{ENBConfigurationUpdateFailure-IEs}},
ENBConfigurationUpdateFailure-IES X2AP-PROTOCOL-IES ::= {
     ID id-Cause
                                     CRITICALITY ignore TYPE Cause
                                                                                     PRESENCE mandatory}
     ID id-TimeToWait
                                     CRITICALITY ignore TYPE TimeToWait
                                                                                     PRESENCE optional }
     ID id-CriticalityDiagnostics
                                     CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                     PRESENCE optional },
-- Resource Status Request
  *****************
ResourceStatusRequest ::= SEQUENCE {
                  ProtocolIE-Container
                                         {{ResourceStatusRequest-IEs}},
   protocolIEs
   . . .
ResourceStatusRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ENB1-Measurement-ID
                                     CRITICALITY reject TYPE Measurement-ID
                                                                                         PRESENCE mandatory}
     ID id-ENB2-Measurement-ID
                                     CRITICALITY ignore TYPE Measurement-ID
                                                                                         PRESENCE conditional \ | -- The IE shall be present if
the Registration Request IE is set to "Stop", "Partial stop" or to "Add"--
     ID id-Registration-Request
                                     CRITICALITY reject TYPE Registration-Request
                                                                                         PRESENCE mandatory}
     ID id-ReportCharacteristics
                                     CRITICALITY reject TYPE ReportCharacteristics
                                                                                         PRESENCE optional }
     ID id-CellToReport
                                     CRITICALITY ignore TYPE CellToReport-List
                                                                                         PRESENCE mandatory
     ID id-ReportingPeriodicity
                                     CRITICALITY ignore TYPE ReportingPeriodicity
                                                                                         PRESENCE optional }
     ID id-PartialSuccessIndicator
                                     CRITICALITY ignore TYPE PartialSuccessIndicator
                                                                                         PRESENCE optional}
     ID id-ReportingPeriodicityRSRPMR CRITICALITY ignore TYPE ReportingPeriodicityRSRPMR
                                                                                         PRESENCE optional }
    { ID id-ReportingPeriodicityCSIR
                                     CRITICALITY ignore TYPE ReportingPeriodicityCSIR
                                                                                         PRESENCE optional },
                      ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ProtocolIE-Single-Container { {CellToReport-ItemIEs} }
CellToReport-List
CellToReport-ItemIEs X2AP-PROTOCOL-IES ::= {
   CellToReport-Item ::= SEQUENCE {
   cell-TD
                                         ECGI,
   iE-Extensions
                                         ProtocolExtensionContainer { {CellToReport-Item-ExtIEs} } OPTIONAL,
CellToReport-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
ReportingPeriodicity ::= ENUMERATED {
   one-thousand-ms,
   two-thousand-ms.
   five-thousand-ms,
   ten-thousand-ms,
PartialSuccessIndicator ::= ENUMERATED {
   partial-success-allowed,
    *****************
-- Resource Status Response
__ *********************
ResourceStatusResponse ::= SEOUENCE {
   protocolIEs
                 ProtocolIE-Container
                                      {{ResourceStatusResponse-IEs}},
   . . .
ResourceStatusResponse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ENB1-Measurement-ID
                                                                                             PRESENCE mandatory}
                                         CRITICALITY reject TYPE Measurement-ID
     ID id-ENB2-Measurement-ID
                                         CRITICALITY reject TYPE Measurement-ID
                                                                                             PRESENCE mandatory}
     ID id-CriticalityDiagnostics
                                         CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                             PRESENCE optional } |
   { ID id-MeasurementInitiationResult-List
                                         CRITICALITY ignore TYPE MeasurementInitiationResult-List PRESENCE optional },
   . . .
MeasurementInitiationResult-List ::= SEOUENCE (SIZE (1..maxCellineNB)) OF ProtocolIE-Single-Container { { MeasurementInitiationResult-ItemIEs} }
MeasurementInitiationResult-ItemIEs X2AP-PROTOCOL-IES ::= {
   MeasurementInitiationResult-Item ::= SEQUENCE {
   cell-ID
                                             ECGI,
   measurementFailureCause-List
                                             MeasurementFailureCause-List
                                                                         OPTIONAL,
   iE-Extensions
                                             ProtocolExtensionContainer { { MeasurementInitiationResult-Item-ExtIEs} } OPTIONAL,
MeasurementInitiationResult-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
   . . .
```

```
MeasurementFailureCause-List ::= SEQUENCE (SIZE (1..maxFailedMeasObjects)) OF ProtocolIE-Single-Container { { MeasurementFailureCause-ItemIEs} }
MeasurementFailureCause-ItemIEs X2AP-PROTOCOL-IES ::= {
   MeasurementFailureCause-Item ::= SEOUENCE {
   measurementFailedReportCharacteristics
                                        ReportCharacteristics,
   cause
                                        Cause,
                                        ProtocolExtensionContainer { { MeasurementFailureCause-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
MeasurementFailureCause-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    *****************
-- Resource Status Failure
****************
ResourceStatusFailure ::= SEOUENCE {
   protocolIEs
             ProtocolIE-Container
                                 {{ResourceStatusFailure-IEs}},
   . . .
ResourceStatusFailure-IEs X2AP-PROTOCOL-IES ::= {
    ID id-ENB1-Measurement-ID
                                        CRITICALITY reject TYPE Measurement-ID
                                                                                        PRESENCE mandatory}
    ID id-ENB2-Measurement-ID
                                        CRITICALITY reject TYPE Measurement-ID
                                                                                        PRESENCE mandatory
    ID id-Cause
                                        CRITICALITY ignore TYPE Cause
                                                                                        PRESENCE mandatory}
    ID id-CriticalityDiagnostics
                                        CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                        PRESENCE optional }
   CompleteFailureCauseInformation-List ::= SEOUENCE (SIZE (1..maxCellineNB)) OF ProtocolIE-Single-Container { {CompleteFailureCauseInformation-
ItemIEs} }
CompleteFailureCauseInformation-ItemIEs X2AP-PROTOCOL-IES ::= {
   CompleteFailureCauseInformation-Item ::= SEQUENCE {
   cell-TD
   measurementFailureCause-List
                                        MeasurementFailureCause-List,
   iE-Extensions
                                        ProtocolExtensionContainer { { CompleteFailureCauseInformation-Item-ExtIEs} } OPTIONAL,
CompleteFailureCauseInformation-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
-- Resource Status Update
__ **********************
ResourceStatusUpdate ::= SEOUENCE {
   protocolIEs
                 ProtocolIE-Container
                                      {{ResourceStatusUpdate-IEs}},
   . . .
ResourceStatusUpdate-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ENB1-Measurement-ID
                            CRITICALITY reject TYPE Measurement-ID
                                                                               PRESENCE mandatory}
     ID id-ENB2-Measurement-ID
                              CRITICALITY reject TYPE Measurement-ID
                                                                               PRESENCE mandatory }
   PRESENCE mandatory },
CellMeasurementResult-List ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ProtocolIE-Single-Container { {CellMeasurementResult-ItemIEs} }
CellMeasurementResult-ItemIEs X2AP-PROTOCOL-IES ::= {
   CellMeasurementResult-Item ::= SEOUENCE {
   cell-ID
                           ECGI,
   hWLoadIndicator
                           HWLoadIndicator
                                             OPTIONAL,
   s1TNLLoadIndicator
                           S1TNLLoadIndicator OPTIONAL,
                           RadioResourceStatus OPTIONAL,
   radioResourceStatus
                           ProtocolExtensionContainer { {CellMeasurementResult-Item-ExtIEs} }
   iE-Extensions
                                                                                           OPTIONAL,
CellMeasurementResult-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-CompositeAvailableCapacityGroup CRITICALITY ignore EXTENSION CompositeAvailableCapacityGroup
                                                                                               PRESENCE optional }
     ID id-ABS-Status
                                   CRITICALITY ignore EXTENSION ABS-Status
                                                                                               PRESENCE optional}
     ID id-RSRPMRList
                                                                                               PRESENCE optional}
                                      CRITICALITY ignore EXTENSION RSRPMRList
     ID id-CSIReportList
                                      CRITICALITY ignore EXTENSION CSIReportList
                                                                                               PRESENCE optional }
   { ID id-CellReportingIndicator
                                      CRITICALITY ignore EXTENSION CellReportingIndicator
                                                                                               PRESENCE optional },
-- PRIVATE MESSAGE
PrivateMessage ::= SEQUENCE {
   privateIEs
                 PrivateIE-Container {{PrivateMessage-IEs}},
```

```
PrivateMessage-IEs X2AP-PRIVATE-IES ::= {
  -- MOBILITY CHANGE REQUEST
****************
MobilityChangeRequest ::= SEQUENCE {
             ProtocolIE-Container
                                 {{MobilityChangeRequest-IEs}},
   protocolIEs
   . . .
MobilityChangeRequest-IEs X2AP-PROTOCOL-IES ::= {
    ID id-ENB1-Cell-ID
                                                                                      PRESENCE mandatory
                                     CRITICALITY reject TYPE ECGI
    ID id-ENB2-Cell-ID
                                     CRITICALITY reject TYPE ECGI
                                                                                      PRESENCE mandatory}
                                                                                      PRESENCE optional }
    ID id-ENB1-Mobility-Parameters
                                     CRITICALITY ignore TYPE MobilityParametersInformation
    PRESENCE mandatory |
   { ID id-Cause
                                     CRITICALITY reject TYPE Cause
                                                                                      PRESENCE mandatory },
  *****************
-- MOBILITY CHANGE ACKNOWLEDGE
  ******************
MobilityChangeAcknowledge ::= SEQUENCE {
   protocolIEs
               ProtocolIE-Container
                                  {{MobilityChangeAcknowledge-IEs}},
MobilityChangeAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
    ID id-ENB1-Cell-ID CRITICALITY reject TYPE ECGI
                                                                      PRESENCE mandatory
    ID id-ENB2-Cell-ID
                           CRITICALITY reject TYPE ECGI
                                                                       PRESENCE mandatory }
   { ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                       PRESENCE optional },
   . . .
-- MOBILITY CHANGE FAILURE
  *****************
MobilityChangeFailure ::= SEQUENCE {
   protocolIEs ProtocolIE-Container
                                  {{MobilityChangeFailure-IEs}},
```

```
MobilityChangeFailure-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ENB1-Cell-ID
                                                   CRITICALITY ignore TYPE ECGI
                                                                                                          PRESENCE mandatory}
     ID id-ENB2-Cell-ID
                                                   CRITICALITY ignore TYPE ECGI
                                                                                                          PRESENCE mandatory }
     ID id-Cause
                                                   CRITICALITY ignore TYPE Cause
                                                                                                          PRESENCE mandatory}
    ID id-ENB2-Mobility-Parameters-Modification-Range
                                                                                                          PRESENCE optional)
                                                   CRITICALITY ignore TYPE MobilityParametersModificationRange
    ID id-CriticalityDiagnostics
                                                   CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                          PRESENCE optional },
     -- Radio Link Failure Indication
__ *********************
RLFIndication ::= SEQUENCE {
                                     {{RLFIndication-IEs}},
   protocolIEs
                 ProtocolIE-Container
   . . .
RLFIndication-IEs X2AP-PROTOCOL-IES ::= {
     ID id-FailureCellPCI
                                                CRITICALITY ignore TYPE PCI
                                                                                                             PRESENCE mandatory }
     ID id-Re-establishmentCellECGI
                                                CRITICALITY ignore TYPE ECGI
                                                                                                             PRESENCE mandatory
     ID id-FailureCellCRNTI
                                                CRITICALITY ignore TYPE CRNTI
                                                                                                             PRESENCE mandatory }
     ID id-ShortMAC-I
                                                CRITICALITY ignore TYPE ShortMAC-I
                                                                                                             PRESENCE optional}
    ID id-UE-RLF-Report-Container
                                                                                                             PRESENCE optional}
                                                CRITICALITY ignore TYPE UE-RLF-Report-Container
     ID id-RRCConnSetupIndicator
                                                CRITICALITY reject TYPE RRCConnSetupIndicator
                                                                                                             PRESENCE optional}
     ID id-RRCConnReestabIndicator
                                                CRITICALITY ignore TYPE RRCConnReestabIndicator
                                                                                                             PRESENCE optional }
                                                                                                             PRESENCE optional },
   -- Cell Activation Request
__ *******************************
CellActivationRequest ::= SEQUENCE {
                                     {{CellActivationRequest-IEs}},
   protocolIEs
                 ProtocolIE-Container
   . . .
CellActivationRequest-IEs X2AP-PROTOCOL-IES ::= {
   { ID id-ServedCellsToActivate CRITICALITY reject TYPE ServedCellsToActivate
                                                                           PRESENCE mandatory }.
   . . .
ServedCellsToActivate::= SEOUENCE (SIZE (1..maxCellineNB)) OF ServedCellsToActivate-Item
ServedCellsToActivate-Item::= SEQUENCE {
   ecgi
                           ECGI,
```

ETSI TS 136 423 V15.2.0 (2018-07)

```
ProtocolExtensionContainer { { ServedCellsToActivate-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
ServedCellsToActivate-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
       -- Cell Activation Response
__ *********************
CellActivationResponse ::= SEQUENCE {
   protocolIEs
               ProtocolIE-Container
                                     {{CellActivationResponse-IEs}},
CellActivationResponse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ActivatedCellList
                           CRITICALITY ignore TYPE ActivatedCellList
                                                                              PRESENCE mandatory}
   { ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                              PRESENCE optional },
ActivatedCellList ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ActivatedCellList-Item
ActivatedCellList-Item::= SEQUENCE {
   ecqi
                                  ProtocolExtensionContainer { { ActivatedCellList-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
ActivatedCellList-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    -- CELL ACTIVATION FAILURE
  *******************
CellActivationFailure ::= SEQUENCE {
   protocolIEs ProtocolIE-Container
                                     {{CellActivationFailure-IEs}},
CellActivationFailure-IEs X2AP-PROTOCOL-IES ::= {
   { ID id-Cause
                                  CRITICALITY ignore TYPE Cause
                                                                              PRESENCE mandatory } |
   { ID id-CriticalityDiagnostics
                                  CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                              PRESENCE optional },
   . . .
```

```
__ ********************
-- X2 RELEASE
__ **********************
X2Release ::= SEOUENCE {
   protocolIEs
                                   {{X2Release-IEs}},
                ProtocolIE-Container
X2Release-IES X2AP-PROTOCOL-IES ::= {
   { ID id-GlobalENB-ID
                            CRITICALITY reject TYPE GlobalENB-ID
                                                                   PRESENCE mandatory },
  -- X2AP Message Transfer
__ *********************
X2APMessageTransfer ::= SEQUENCE {
   protocolIEs ProtocolIE-Container
                                   {{X2APMessageTransfer-IEs}},
X2APMessageTransfer-IEs X2AP-PROTOCOL-IES ::= {
    ID id-RNL-Header CRITICALITY reject TYPE RNL-Header
                                                          PRESENCE mandatory}
   { ID id-x2APMessage CRITICALITY reject TYPE X2AP-Message
                                                          PRESENCE optional },
   . . .
RNL-Header ::= SEQUENCE {
   source-GlobalENB-ID GlobalENB-ID,
   target-GlobalENB-ID GlobalENB-ID
                                OPTIONAL,
   iE-Extensions
                                ProtocolExtensionContainer { { RNL-Header-Item-ExtIEs} } OPTIONAL,
RNL-Header-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
X2AP-Message ::= OCTET STRING
__ *********************
-- SENB ADDITION REQUEST
__ *******************************
SenbadditionRequest ::= SEQUENCE {
                                   {{SeNBAdditionRequest-IEs}},
               ProtocolIE-Container
```

```
SeNBAdditionRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                               PRESENCE mandatory } |
                                         CRITICALITY reject TYPE UE-X2AP-ID
                                                                                               PRESENCE conditional } |
   { ID id-UE-SecurityCapabilities
                                         CRITICALITY reject TYPE UESecurityCapabilities
   -- This IE shall be present if the Bearer Option IE is set to the value "SCG bearer" --
                                                                                               PRESENCE conditional } |
   { ID id-SeNBSecurityKey
                                         CRITICALITY reject TYPE SeNBSecurityKey
   -- This IE shall be present if the Bearer Option IE is set to the value "SCG bearer" --
     PRESENCE mandatory }
     ID id-ServingPLMN
                                         CRITICALITY ignore TYPE PLMN-Identity
                                                                                               PRESENCE optional }
     ID id-E-RABs-ToBeAdded-List
                                         CRITICALITY reject TYPE E-RABs-ToBeAdded-List
                                                                                               PRESENCE mandatory }
                                                                                               PRESENCE mandatory
     ID id-MeNBtoSeNBContainer
                                         CRITICALITY reject TYPE MeNBtoSeNBContainer
     ID id-CSGMembershipStatus
                                         CRITICALITY reject TYPE CSGMembershipStatus
                                                                                               PRESENCE optional}
                                                                                               PRESENCE optional}
     ID id-SeNB-UE-X2AP-ID
                                         CRITICALITY reject TYPE UE-X2AP-ID
     ID id-SeNB-UE-X2AP-ID-Extension
                                         CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                               PRESENCE optional}
                                                                                               PRESENCE optional }
     ID id-ExpectedUEBehaviour
                                         CRITICALITY ignore TYPE ExpectedUEBehaviour
     ID id-MeNB-UE-X2AP-ID-Extension
                                         CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                               PRESENCE optional },
E-RABs-ToBeAdded-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { { E-RABs-ToBeAdded-ItemIEs} }
E-RABs-ToBeAdded-ItemIEs X2AP-PROTOCOL-IES ::= {
   PRESENCE mandatory },
   . . .
E-RABs-ToBeAdded-Item ::= CHOICE {
   sCG-Bearer
                  E-RABs-ToBeAdded-Item-SCG-Bearer,
   split-Bearer
                  E-RABs-ToBeAdded-Item-Split-Bearer,
E-RABs-ToBeAdded-Item-SCG-Bearer ::= SEOUENCE {
   e-RAB-ID
                                  E-RAB-ID,
   e-RAB-Level-QoS-Parameters
                                  E-RAB-Level-QoS-Parameters,
                                  DL-Forwarding
   dL-Forwarding
                                                                                                       OPTIONAL,
   s1-UL-GTPtunnelEndpoint
                                  GTPtunnelEndpoint,
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-ToBeAdded-Item-SCG-BearerExtIEs} }
                                                                                                       OPTIONAL,
E-RABs-ToBeAdded-Item-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-Correlation-ID
                                     CRITICALITY ignore EXTENSION Correlation-ID
                                                                                       PRESENCE optional |
     ID id-SIPTO-Correlation-ID
                                     CRITICALITY ignore EXTENSION Correlation-ID
                                                                                      PRESENCE optional },
   . . .
E-RABs-ToBeAdded-Item-Split-Bearer ::= SEQUENCE {
   e-RAB-ID
                                  E-RAB-ID,
   e-RAB-Level-OoS-Parameters
                                  E-RAB-Level-OoS-Parameters,
   meNB-GTPtunnelEndpoint
                                  GTPtunnelEndpoint,
                                  ProtocolExtensionContainer { {E-RABs-ToBeAdded-Item-Split-BearerExtIEs} } OPTIONAL,
   iE-Extensions
```

```
E-RABs-ToBeAdded-Item-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  SENB ADDITION REQUEST ACKNOWLEDGE
  ****************
SeNBAdditionRequestAcknowledge ::= SEQUENCE
   protocolIEs
                  ProtocolIE-Container
                                         {{SeNBAdditionRequestAcknowledge-IEs}},
SeNBAdditionRequestAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                             CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                  PRESENCE mandatory}
     ID id-SeNB-UE-X2AP-ID
                                             CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                  PRESENCE mandatory}
     ID id-E-RABs-Admitted-ToBeAdded-List
                                             CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-List PRESENCE mandatory}
     ID id-E-RABs-NotAdmitted-List
                                             CRITICALITY ignore TYPE E-RAB-List
                                                                                                  PRESENCE optional }
     ID id-SeNBtoMeNBContainer
                                             CRITICALITY reject TYPE SenBtoMenBContainer
                                                                                                  PRESENCE mandatory}
     ID id-CriticalityDiagnostics
                                             CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                  PRESENCE optional }
     ID id-GW-TransportLayerAddress
                                             CRITICALITY ignore TYPE TransportLayerAddress
                                                                                                  PRESENCE optional}
                                                                                                  PRESENCE optional}
     ID id-SIPTO-L-GW-TransportLayerAddress
                                             CRITICALITY ignore TYPE TransportLayerAddress
     ID id-MeNB-UE-X2AP-ID-Extension
                                             CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                  PRESENCE optional}
     ID id-SeNB-UE-X2AP-ID-Extension
                                             CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                  PRESENCE optional }
     ID id-Tunnel-Information-for-BBF
                                             CRITICALITY ignore TYPE TunnelInformation
                                                                                                  PRESENCE optional },
    . . .
E-RABs-Admitted-ToBeAdded-List ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeAdded-ItemIEs} }
E-RABs-Admitted-ToBeAdded-ItemIEs X2AP-PROTOCOL-IES ::= {
    PRESENCE mandatory}
E-RABs-Admitted-ToBeAdded-Item ::= CHOICE
    sCG-Bearer
                  E-RABs-Admitted-ToBeAdded-Item-SCG-Bearer,
    split-Bearer
                  E-RABs-Admitted-ToBeAdded-Item-Split-Bearer,
    . . .
E-RABs-Admitted-ToBeAdded-Item-SCG-Bearer ::= SEQUENCE {
   e-RAB-ID
                                         E-RAB-ID,
   s1-DL-GTPtunnelEndpoint
                                         GTPtunnelEndpoint,
   dL-Forwarding-GTPtunnelEndpoint
                                         GTPtunnelEndpoint
                                                                                                                OPTIONAL.
   uL-Forwarding-GTPtunnelEndpoint
                                         GTPtunnelEndpoint
                                                                                                                OPTIONAL,
                                  ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-Item-SCG-BearerExtIEs} }
    iE-Extensions
                                                                                                                OPTIONAL,
    . . .
```

```
E-RABs-Admitted-ToBeAdded-Item-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeAdded-Item-Split-Bearer ::= SEQUENCE {
                                 E-RAB-ID,
   seNB-GTPtunnelEndpoint
                                 GTPtunnelEndpoint,
                                 ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-Item-Split-BearerExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-Admitted-ToBeAdded-Item-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- SENB ADDITION REQUEST REJECT
__ **********************
SenBAdditionRequestReject ::= SEQUENCE {
                  ProtocolIE-Container
                                         {{SeNBAdditionRequestReject-IEs}},
   protocolIEs
   . . .
SeNBAdditionRequestReject-IES X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                         CRITICALITY reject TYPE UE-X2AP-ID
                                                                                          PRESENCE mandatory}
     ID id-SeNB-UE-X2AP-ID
                                         CRITICALITY reject TYPE UE-X2AP-ID
                                                                                          PRESENCE mandatory
                                                                                          PRESENCE mandatory}
     ID id-Cause
                                         CRITICALITY ignore TYPE Cause
     ID id-CriticalityDiagnostics
                                         CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                          PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                         CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                          PRESENCE optional }
    { ID id-SeNB-UE-X2AP-ID-Extension
                                         CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                          PRESENCE optional },
   -- SENB RECONFIGURATION COMPLETE
__ ********************************
SenbreconfigurationComplete ::= SEQUENCE {
                  ProtocolIE-Container
                                         {{SeNBReconfigurationComplete-IEs}},
   protocolIEs
   . . .
SeNBReconfigurationComplete-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                 CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                         PRESENCE mandatory
     ID id-SeNB-UE-X2AP-ID
                                                CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                         PRESENCE mandatory }
                                                                                                         PRESENCE mandatory }
     ID id-ResponseInformationSeNBReconfComp
                                                CRITICALITY ignore TYPE ResponseInformationSeNBReconfComp
     ID id-MeNB-UE-X2AP-ID-Extension
                                                CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                         PRESENCE optional }
    { ID id-SeNB-UE-X2AP-ID-Extension
                                                CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                         PRESENCE optional },
```

```
ResponseInformationSeNBReconfComp ::= CHOICE
    success
                       ResponseInformationSeNBReconfComp-SuccessItem,
                       ResponseInformationSeNBReconfComp-RejectByMeNBItem,
    reject-by-MeNB
ResponseInformationSeNBReconfComp-SuccessItem ::= SEQUENCE
    meNBtoSeNBContainer
                                   MeNBtoSeNBContainer OPTIONAL,
    iE-Extensions
                                   ProtocolExtensionContainer { {ResponseInformationSeNBReconfComp-SuccessItemExtIEs} } OPTIONAL,
    . . .
ResponseInformationSeNBReconfComp-SuccessItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ResponseInformationSeNBReconfComp-RejectByMeNBItem ::= SEQUENCE {
                                   Cause,
    meNBtoSeNBContainer
                                   MeNBtoSeNBContainer
                                                                                                                             OPTIONAL,
                                   ProtocolExtensionContainer { ResponseInformationSeNBReconfComp-RejectByMeNBItemExtIEs} } OPTIONAL,
    iE-Extensions
ResponseInformationSeNBReconfComp-RejectByMeNBItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- SENB MODIFICATION REQUEST
  *****************
SenbModificationRequest ::= SEQUENCE {
    protocolIEs
                   ProtocolIE-Container
                                           {{ SeNBModificationRequest-IEs}},
    . . .
SeNBModificationRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                               CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                         PRESENCE mandatory
     ID id-SeNB-UE-X2AP-ID
                                               CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                         PRESENCE mandatory
     ID id-Cause
                                               CRITICALITY ignore TYPE Cause
                                                                                                         PRESENCE mandatory }
     ID id-SCGChangeIndication
                                               CRITICALITY ignore TYPE SCGChangeIndication
                                                                                                         PRESENCE optional}
     ID id-ServingPLMN
                                               CRITICALITY ignore TYPE PLMN-Identity
                                                                                                         PRESENCE optional}
     ID id-UE-ContextInformationSeNBModReg
                                               CRITICALITY reject TYPE UE-ContextInformationSeNBModReq
                                                                                                        PRESENCE optional }
     ID id-MeNBtoSeNBContainer
                                               CRITICALITY ignore TYPE MeNBtoSeNBContainer
                                                                                                         PRESENCE optional }
     ID id-CSGMembershipStatus
                                               CRITICALITY reject TYPE CSGMembershipStatus
                                                                                                         PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                                                                         PRESENCE optional }
                                               CRITICALITY reject TYPE UE-X2AP-ID-Extension
     ID id-SeNB-UE-X2AP-ID-Extension
                                               CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                         PRESENCE optional }
```

```
UE-ContextInformationSeNBModReq ::= SEQUENCE {
    uE-SecurityCapabilities
                                    UESecurityCapabilities
                                                                                                               OPTIONAL,
    seNB-SecurityKev
                                    SeNBSecurityKev
                                                                                                               OPTIONAL.
    seNBUEAggregateMaximumBitRate
                                    UEAggregateMaximumBitRate
                                                                                                               OPTIONAL,
    e-RABs-ToBeAdded
                                    E-RABs-ToBeAdded-List-ModReg
                                                                                                               OPTIONAL,
                                    E-RABs-ToBeModified-List-ModReg
    e-RABs-ToBeModified
                                                                                                               OPTIONAL,
    e-RABs-ToBeReleased
                                    E-RABs-ToBeReleased-List-ModReg
                                                                                                               OPTIONAL,
                                    ProtocolExtensionContainer { { UE-ContextInformationSeNBModRegExtIEs} } }
    iE-Extensions
                                                                                                               OPTIONAL,
UE-ContextInformationSenBModReqExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeAdded-List-ModReg ::= SEOUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeAdded-ModRegItemIEs} }
E-RABs-ToBeAdded-ModRegItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeAdded-ModRegItem CRITICALITY ignore TYPE E-RABs-ToBeAdded-ModRegItem
                                                                                                 PRESENCE mandatory },
E-RABs-ToBeAdded-ModRegItem ::= CHOICE {
    sCG-Bearer
                    E-RABs-ToBeAdded-ModRegItem-SCG-Bearer,
                 E-RABs-ToBeAdded-ModRegItem-Split-Bearer,
    split-Bearer
    . . .
E-RABs-ToBeAdded-ModRegItem-SCG-Bearer ::= SEQUENCE {
    e-RAB-ID
                                    E-RAB-ID,
    e-RAB-Level-OoS-Parameters
                                    E-RAB-Level-OoS-Parameters,
                                    DL-Forwarding
    dL-Forwarding
                                                                                                               OPTIONAL,
    s1-UL-GTPtunnelEndpoint
                                    GTPtunnelEndpoint,
                                    ProtocolExtensionContainer { {E-RABs-ToBeAdded-ModReqItem-SCG-BearerExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
E-RABs-ToBeAdded-ModRegItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-Correlation-ID
                                                                                             PRESENCE optional } |
                                        CRITICALITY ignore EXTENSION Correlation-ID
    { ID id-SIPTO-Correlation-ID
                                        CRITICALITY ignore EXTENSION Correlation-ID
                                                                                             PRESENCE optional },
    . . .
E-RABs-ToBeAdded-ModReqItem-Split-Bearer ::= SEQUENCE {
    e-RAB-ID
                                    E-RAB-ID,
    e-RAB-Level-QoS-Parameters
                                    E-RAB-Level-QoS-Parameters,
    meNB-GTPtunnelEndpoint
                                    GTPtunnelEndpoint,
    iE-Extensions
                            ProtocolExtensionContainer { {E-RABs-ToBeAdded-ModReqItem-Split-BearerExtIEs} } OPTIONAL,
    . . .
E-RABs-ToBeAdded-ModRegItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
E-RABs-ToBeModified-List-ModReg ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeModified-ModRegItemIEs} }
E-RABs-ToBeModified-ModReqItemIEs X2AP-PROTOCOL-IES ::=
   PRESENCE mandatory },
E-RABs-ToBeModified-ModRegItem ::= CHOICE
                 E-RABs-ToBeModified-ModReqItem-SCG-Bearer,
   sCG-Bearer
   split-Bearer E-RABs-ToBeModified-ModReqItem-Split-Bearer,
E-RABs-ToBeModified-ModRegItem-SCG-Bearer ::= SEQUENCE {
   e-RAB-ID
                                E-RAB-ID,
   e-RAB-Level-OoS-Parameters
                                E-RAB-Level-OoS-Parameters
                                                                                                  OPTIONAL,
   s1-UL-GTPtunnelEndpoint
                                GTPtunnelEndpoint
                                                                                                  OPTIONAL,
                                ProtocolExtensionContainer { {E-RABs-ToBeModified-ModRegItem-SCG-BearerExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
E-RABs-ToBeModified-ModRegItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeModified-ModRegItem-Split-Bearer ::= SEQUENCE {
   e-RAB-ID
                                E-RAB-ID,
                                E-RAB-Level-OoS-Parameters
   e-RAB-Level-QoS-Parameters
                                                                                                        OPTIONAL,
   meNB-GTPtunnelEndpoint
                                GTPtunnelEndpoint
                                                                                                        OPTIONAL,
                                ProtocolExtensionContainer { {E-RABs-ToBeModified-ModRegItem-Split-BearerExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
E-RABs-ToBeModified-ModReqItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-List-ModReg ::= SEOUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-ModRegItemIEs} }
E-RABs-ToBeReleased-ModReqItemIEs X2AP-PROTOCOL-IES ::= {
   PRESENCE mandatory },
E-RABs-ToBeReleased-ModRegItem ::= CHOICE
                 E-RABs-ToBeReleased-ModRegItem-SCG-Bearer,
   sCG-Bearer
   split-Bearer E-RABs-ToBeReleased-ModReqItem-Split-Bearer,
E-RABs-ToBeReleased-ModReqItem-SCG-Bearer ::= SEQUENCE {
   e-RAB-ID
                                E-RAB-ID,
```

```
dL-Forwarding-GTPtunnelEndpoint
                                            GTPtunnelEndpoint
                                                                                                        OPTIONAL,
    uL-Forwarding-GTPtunnelEndpoint
                                            GTPtunnelEndpoint
                                                                                                        OPTIONAL.
    iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeReleased-ModRegItem-SCG-BearerExtIEs} } OPTIONAL,
E-RABs-ToBeReleased-ModRegItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-ModReqItem-Split-Bearer ::= SEQUENCE {
                                    E-RAB-ID,
    dL-Forwarding-GTPtunnelEndpoint
                                            GTPtunnelEndpoint
                                                                                                        OPTIONAL,
   iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeReleased-ModRegItem-Split-BearerExtIEs} } OPTIONAL.
E-RABs-ToBeReleased-ModRegItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  SENB MODIFICATION REQUEST ACKNOWLEDGE
SeNBModificationRequestAcknowledge ::= SEOUENCE {
                                            {{SeNBModificationRequestAcknowledge-IEs}},
    protocolIEs
                   ProtocolIE-Container
SeNBModificationRequestAcknowledge-IES X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                        CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                         PRESENCE mandatory }
     ID id-SeNB-UE-X2AP-ID
                                                        CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                         PRESENCE mandatory
     ID id-E-RABs-Admitted-ToBeAdded-ModAckList
                                                        CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-ModAckList
                                                                                                                         PRESENCE optional }
     ID id-E-RABs-Admitted-ToBeModified-ModAckList
                                                        CRITICALITY ignore TYPE E-RABs-Admitted-ToBeModified-ModAckList PRESENCE optional
     ID id-E-RABs-Admitted-ToBeReleased-ModAckList
                                                        CRITICALITY ignore TYPE E-RABs-Admitted-ToBeReleased-ModAckList PRESENCE optional}
     ID id-E-RABs-NotAdmitted-List
                                                        CRITICALITY ignore TYPE E-RAB-List
                                                                                                                         PRESENCE optional }
     ID id-SeNBtoMeNBContainer
                                                        CRITICALITY ignore TYPE SenBtoMenBContainer
                                                                                                                         PRESENCE optional}
     ID id-CriticalityDiagnostics
                                                        CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                         PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                        CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                         PRESENCE optional }
    { ID id-SeNB-UE-X2AP-ID-Extension
                                                        CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                         PRESENCE optional },
E-RABs-Admitted-ToBeAdded-ModAckList ::= SEOUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeAdded-
ModAckItemIEs } }
E-RABs-Admitted-ToBeAdded-ModAckItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-Admitted-ToBeAdded-ModAckItem
                                                  CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-ModAckItem
                                                                                                                       PRESENCE mandatory}
E-RABs-Admitted-ToBeAdded-ModAckItem ::= CHOICE {
```

```
E-RABs-Admitted-ToBeAdded-ModAckItem-SCG-Bearer,
    sCG-Bearer
    split-Bearer
                    E-RABs-Admitted-ToBeAdded-ModAckItem-Split-Bearer,
E-RABs-Admitted-ToBeAdded-ModAckItem-SCG-Bearer ::= SEQUENCE {
    e-RAB-ID
                                            E-RAB-ID,
    s1-DL-GTPtunnelEndpoint
                                            GTPtunnelEndpoint,
    dL-Forwarding-GTPtunnelEndpoint
                                            GTPtunnelEndpoint
                                                                                                                       OPTIONAL,
    uL-Forwarding-GTPtunnelEndpoint
                                            GTPtunnelEndpoint
                                                                                                                       OPTIONAL,
    iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-ModAckItem-SCG-BearerExtIEs} } OPTIONAL,
    . . .
E-RABs-Admitted-ToBeAdded-ModAckItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeAdded-ModAckItem-Split-Bearer ::= SEQUENCE {
    e-RAB-ID
                                    E-RAB-ID,
    seNB-GTPtunnelEndpoint
                                    GTPtunnelEndpoint,
                                    ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-ModAckItem-Split-BearerExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-Admitted-ToBeAdded-ModAckItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeModified-ModAckList ::= SEOUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeModified-
ModAckItemIEs}
E-RABs-Admitted-ToBeModified-ModAckItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-Admitted-ToBeModified-ModAckItem
                                                      CRITICALITY ignore TYPE E-RABs-Admitted-ToBeModified-ModAckItem PRESENCE mandatory
E-RABs-Admitted-ToBeModified-ModAckItem ::= CHOICE
    sCG-Bearer
                   E-RABs-Admitted-ToBeModified-ModAckItem-SCG-Bearer.
    split-Bearer
                 E-RABs-Admitted-ToBeModified-ModAckItem-Split-Bearer,
E-RABs-Admitted-ToBeModified-ModAckItem-SCG-Bearer ::= SEQUENCE {
    e-RAB-ID
                                    E-RAB-ID,
    s1-DL-GTPtunnelEndpoint
                                    GTPtunnelEndpoint
                                                                                                                 OPTIONAL,
                                    ProtocolExtensionContainer { {E-RABs-Admitted-ToBeModified-ModAckItem-SCG-BearerExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-Admitted-ToBeModified-ModAckItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeModified-ModAckItem-Split-Bearer ::= SEQUENCE {
    e-RAB-ID
                                    E-RAB-ID,
```

```
seNB-GTPtunnelEndpoint
                                   GTPtunnelEndpoint
   iE-Extensions
                                   ProtocolExtensionContainer { {E-RABs-Admitted-ToBeModified-ModAckItem-Split-BearerExtIEs} } OPTIONAL,
E-RABs-Admitted-ToBeModified-ModAckItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeReleased-ModAckList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeReleased-
ModAckItemIEs } }
E-RABs-Admitted-ToBeReleased-ModAckItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-Admitted-ToBeReleased-ModAckItem
                                                      CRITICALITY ignore TYPE E-RABs-Admitted-ToReleased-ModAckItem PRESENCE mandatory
E-RABs-Admitted-ToReleased-ModAckItem ::= CHOICE {
                  E-RABs-Admitted-ToBeReleased-ModAckItem-SCG-Bearer,
   sCG-Bearer
   split-Bearer E-RABs-Admitted-ToBeReleased-ModAckItem-Split-Bearer,
E-RABs-Admitted-ToBeReleased-ModAckItem-SCG-Bearer ::= SEQUENCE {
   e-RAB-ID
                               E-RAB-ID
   iE-Extensions
                               ProtocolExtensionContainer { {E-RABs-Admitted-ToBeReleased-ModAckItem-SCG-BearerExtIEs} } OPTIONAL,
E-RABs-Admitted-ToBeReleased-ModAckItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeReleased-ModAckItem-Split-Bearer ::= SEQUENCE {
   e-RAB-ID
   iE-Extensions
                               ProtocolExtensionContainer { {E-RABs-Admitted-ToBeReleased-ModAckItem-Split-BearerExtIEs} } OPTIONAL.
E-RABs-Admitted-ToBeReleased-ModAckItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- SENB MODIFICATION REQUEST REJECT
  *****************
SeNBModificationRequestReject ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                          {{SeNBModificationRequestReject-IEs}},
SeNBModificationRequestReject-IEs X2AP-PROTOCOL-IES ::= {
```

```
ID id-MeNB-UE-X2AP-ID
                                           CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                       PRESENCE mandatory } |
     ID id-SeNB-UE-X2AP-ID
                                           CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                       PRESENCE mandatory}
                                           CRITICALITY ignore TYPE Cause
     ID id-Cause
                                                                                       PRESENCE mandatory}
     ID id-CriticalityDiagnostics
                                           CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                           CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                       PRESENCE optional }
                                                                                       PRESENCE optional },
    ID id-SeNB-UE-X2AP-ID-Extension
                                           CRITICALITY ignore TYPE UE-X2AP-ID-Extension
  -- SENB MODIFICATION REQUIRED
  ····
SenbModificationRequired ::= SEOUENCE {
                 ProtocolIE-Container
                                           {{SeNBModificationRequired-IEs}},
   protocolIEs
SeNBModificationRequired-IES X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                            PRESENCE mandatory }
                                          CRITICALITY reject TYPE UE-X2AP-ID
     ID id-SeNB-UE-X2AP-ID
                                           CRITICALITY reject TYPE UE-X2AP-ID
                                                                                            PRESENCE mandatory }
     ID id-Cause
                                           CRITICALITY ignore TYPE Cause
                                                                                            PRESENCE mandatory}
     ID id-SCGChangeIndication
                                           CRITICALITY ignore TYPE SCGChangeIndication
                                                                                            PRESENCE optional }
     ID id-E-RABs-ToBeReleased-ModRegd
                                           CRITICALITY ignore TYPE E-RABs-ToBeReleased-ModRegd
                                                                                            PRESENCE optional }
                                                                                            PRESENCE optional }
     ID id-SeNBtoMeNBContainer
                                           CRITICALITY ignore TYPE SenBtoMenBContainer
     ID id-MeNB-UE-X2AP-ID-Extension
                                          CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                            PRESENCE optional }
                                                                                            PRESENCE optional },
   { ID id-SeNB-UE-X2AP-ID-Extension
                                           CRITICALITY reject TYPE UE-X2AP-ID-Extension
E-RABs-ToBeReleased-ModReqd ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-ModReqdItemIEs} }
E-RABs-ToBeReleased-ModReqdItemIEs X2AP-PROTOCOL-IES ::= {
   TYPE E-RABs-ToBeReleased-ModRegdItem PRESENCE mandatory },
   . . .
E-RABs-ToBeReleased-ModRegdItem ::= SEQUENCE {
   e-RAB-ID
                                E-RAB-ID.
   cause
                                ProtocolExtensionContainer { {E-RABs-ToBeReleased-ModReqdItemExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
E-RABs-ToBeReleased-ModReqdItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  -- SENB MODIFICATION CONFIRM
```

```
SeNBModificationConfirm ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                          {{SeNBModificationConfirm-IEs}},
SeNBModificationConfirm-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                             CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                PRESENCE mandatory }
     ID id-SeNB-UE-X2AP-ID
                                             CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                PRESENCE mandatory
     ID id-MeNBtoSeNBContainer
                                             CRITICALITY ignore TYPE MeNBtoSeNBContainer
                                                                                                PRESENCE optional }
                                                                                                PRESENCE optional
     ID id-CriticalityDiagnostics
                                             CRITICALITY ignore TYPE CriticalityDiagnostics
     ID id-MeNB-UE-X2AP-ID-Extension
                                             CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                PRESENCE optional }
    { ID id-SeNB-UE-X2AP-ID-Extension
                                             CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                PRESENCE optional }
-- SENB MODIFICATION REFUSE
   SeNBModificationRefuse ::= SEQUENCE
                 ProtocolIE-Container
                                              {{SeNBModificationRefuse-IEs}},
   protocolIEs
SeNBModificationRefuse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                             CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                             PRESENCE mandatory
     ID id-SeNB-UE-X2AP-ID
                                             CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                             PRESENCE mandatory }
     ID id-Cause
                                             CRITICALITY ignore TYPE Cause
                                                                                             PRESENCE mandatory }
                                                                                             PRESENCE optional}
     ID id-MeNBtoSeNBContainer
                                             CRITICALITY ignore TYPE MeNBtoSeNBContainer
     ID id-CriticalityDiagnostics
                                             CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                             CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                             PRESENCE optional }
    { ID id-SeNB-UE-X2AP-ID-Extension
                                             CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                              PRESENCE optional },
-- SENB RELEASE REQUEST
Senbreleaserequest ::= SEQUENCE {
   protocolIEs ProtocolIE-Container
                                              {{SeNBReleaseRequest-IEs}},
SeNBReleaseRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                             CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                         PRESENCE mandatory }
    { ID id-SeNB-UE-X2AP-ID
                                                                                                         PRESENCE optional |
                                             CRITICALITY reject TYPE UE-X2AP-ID
```

```
ID id-Cause
                                               CRITICALITY ignore TYPE Cause
                                                                                                            PRESENCE optional } |
     ID id-E-RABs-ToBeReleased-List-RelReg
                                               CRITICALITY ignore TYPE E-RABs-ToBeReleased-List-RelReg
                                                                                                            PRESENCE optional}
     ID id-UE-ContextKeptIndicator
                                               CRITICALITY ignore TYPE UE-ContextKeptIndicator
                                                                                                            PRESENCE optional}
     ID id-MeNB-UE-X2AP-ID-Extension
                                               CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                            PRESENCE optional}
     ID id-SeNB-UE-X2AP-ID-Extension
                                               CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                            PRESENCE optional }
     ID id-MakeBeforeBreakIndicator
                                               CRITICALITY ignore TYPE MakeBeforeBreakIndicator
                                                                                                            PRESENCE optional },
E-RABs-ToBeReleased-List-RelReq ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-RelReqItemIEs} }
E-RABs-ToBeReleased-RelRegItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-RelRegItem
                                               CRITICALITY ignore TYPE E-RABs-ToBeReleased-RelRegItem PRESENCE mandatory },
E-RABs-ToBeReleased-RelRegItem ::= CHOICE {
    sCG-Bearer
                   E-RABs-ToBeReleased-RelRegItem-SCG-Bearer,
                 E-RABs-ToBeReleased-RelRegItem-Split-Bearer,
    split-Bearer
    . . .
E-RABs-ToBeReleased-RelReqItem-SCG-Bearer ::= SEQUENCE {
    e-RAB-ID
                                   E-RAB-ID,
    uL-Forwarding-GTPtunnelEndpoint
                                           GTPtunnelEndpoint
                                                                                                      OPTIONAL,
    dL-Forwarding-GTPtunnelEndpoint
                                           GTPtunnelEndpoint
                                                                                                      OPTIONAL,
    iE-Extensions
                                   ProtocolExtensionContainer { {E-RABs-ToBeReleased-RelRegItem-SCG-BearerExtIEs} } OPTIONAL,
    . . .
E-RABs-ToBeReleased-RelRegItem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
E-RABs-ToBeReleased-RelReqItem-Split-Bearer ::= SEQUENCE {
    e-RAB-ID
                                   E-RAB-ID,
    dL-Forwarding-GTPtunnelEndpoint
                                           GTPtunnelEndpoint
   iE-Extensions
                                   ProtocolExtensionContainer { {E-RABs-ToBeReleased-RelReqItem-Split-BearerExtIEs} } OPTIONAL,
E-RABs-ToBeReleased-RelReqItem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- SENB RELEASE REOUIRED
  ****************
SenbreleaseRequired ::= SEQUENCE {
   protocolIEs
                   ProtocolIE-Container
                                           {{SeNBReleaseRequired-IEs}},
```

```
SenbreleaseRequired-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                          CRITICALITY reject TYPE UE-X2AP-ID
                                                                                            PRESENCE mandatory
     ID id-SeNB-UE-X2AP-ID
                                          CRITICALITY reject TYPE UE-X2AP-ID
                                                                                            PRESENCE mandatory }
     ID id-Cause
                                          CRITICALITY ignore TYPE Cause
                                                                                            PRESENCE mandatory}
                                                                                            PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                          CRITICALITY reject TYPE UE-X2AP-ID-Extension
     ID id-SeNB-UE-X2AP-ID-Extension
                                          CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                            PRESENCE optional },
     -- SENB RELEASE CONFIRM
__ *********************
SenbreleaseConfirm ::= SEQUENCE {
                  ProtocolIE-Container
                                          {{SeNBReleaseConfirm-IEs}},
   protocolIEs
   . . .
SeNBReleaseConfirm-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                  CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                            PRESENCE mandatory
     ID id-SeNB-UE-X2AP-ID
                                                  CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                            PRESENCE mandatory}
     ID id-E-RABs-ToBeReleased-List-RelConf
                                                  CRITICALITY ignore TYPE E-RABs-ToBeReleased-List-RelConf
                                                                                                           PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                  CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                            PRESENCE optional }
                                                                                                            PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                  CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                  CRITICALITY ignore TYPE UE-X2AP-ID-Extension
     ID id-SeNB-UE-X2AP-ID-Extension
                                                                                                            PRESENCE optional },
E-RABs-ToBeReleased-List-RelConf ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-RelConfItemIEs} }
E-RABs-ToBeReleased-RelConfitemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-RelConfItem
                                              CRITICALITY ignore
                                                                     TYPE E-RABs-ToBeReleased-RelConfItem
                                                                                                           PRESENCE mandatory },
   . . .
E-RABs-ToBeReleased-RelConfItem ::= CHOICE {
                  E-RABs-ToBeReleased-RelConfItem-SCG-Bearer,
    sCG-Bearer
    split-Bearer E-RABs-ToBeReleased-RelConfItem-Split-Bearer,
E-RABs-ToBeReleased-RelConfItem-SCG-Bearer ::= SEQUENCE {
   e-RAB-ID
                                  E-RAB-ID,
   uL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
                                                                                                   OPTIONAL,
   dL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-RelConfItem-SCG-BearerExtIEs} } OPTIONAL,
    . . .
E-RABs-ToBeReleased-RelConfitem-SCG-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
E-RABs-ToBeReleased-RelConfItem-Split-Bearer ::= SEQUENCE {
   e-RAB-ID
                              E-RAB-ID.
   dL-Forwarding-GTPtunnelEndpoint
                                     GTPtunnelEndpoint
                                                                                           OPTIONAL.
   iE-Extensions
                              ProtocolExtensionContainer { {E-RABs-ToBeReleased-RelConfItem-Split-BearerExtIEs} } OPTIONAL,
E-RABs-ToBeReleased-RelConfitem-Split-BearerExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    -- SENB COUNTER CHECK REQUEST
SeNBCounterCheckRequest ::= SEOUENCE {
                                     {{SeNBCounterCheckRequest-IEs}},
   protocolIEs
               ProtocolIE-Container
SeNBCounterCheckRequest-IEs X2AP-PROTOCOL-IES ::= {
    ID id-MeNB-UE-X2AP-ID
                                        CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                             PRESENCE mandatory}
     ID id-SeNB-UE-X2AP-ID
                                        CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                             PRESENCE mandatory }
                                                                                             PRESENCE mandatory }
    ID id-MeNB-UE-X2AP-ID-Extension
                                        CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                             PRESENCE optional } |
   { ID id-SeNB-UE-X2AP-ID-Extension
                                        CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                             PRESENCE optional },
E-RABs-SubjectToCounterCheck-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-SubjectToCounterCheckItemIEs} }
E-RABs-SubjectToCounterCheckItemIEs X2AP-PROTOCOL-IES ::= {
   PRESENCE mandatory },
   . . .
E-RABs-SubjectToCounterCheckItem ::= SEQUENCE {
   e-RAB-ID
                              E-RAB-ID,
   uL-Count
                              INTEGER (0..4294967295),
   dL-Count.
                              INTEGER (0..4294967295),
   iE-Extensions
                              ProtocolExtensionContainer { {E-RABs-SubjectToCounterCheckItemExtIEs} } OPTIONAL,
E-RABs-SubjectToCounterCheckItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- X2 REMOVAL REQUEST
```

```
__ *******************
X2RemovalRequest ::= SEQUENCE {
   protocolIEs ProtocolIE-Container
                                     {{X2RemovalRequest-IEs}},
   . . .
X2RemovalRequest-IEs X2AP-PROTOCOL-IES ::= {
   { ID id-GlobalENB-ID
                      CRITICALITY reject TYPE GlobalENB-ID
                                                                           PRESENCE mandatory } |
    ID id-X2RemovalThreshold
                                 CRITICALITY reject TYPE X2BenefitValue
                                                                           PRESENCE optional },
-- X2 REMOVAL RESPONSE
__ **********************
X2RemovalResponse ::= SEQUENCE {
                ProtocolIE-Container {{X2RemovalResponse-IEs}},
   protocolIEs
   . . .
X2RemovalResponse-IEs X2AP-PROTOCOL-IES ::= {
    ID id-GlobalENB-ID CRITICALITY reject TYPE GlobalENB-ID
                                                                               PRESENCE mandatory}
   { ID id-CriticalityDiagnostics
                                  CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                               PRESENCE optional },
-- X2 REMOVAL FAILURE
__ *******************************
X2RemovalFailure ::= SEQUENCE {
                                     {{X2RemovalFailure-IEs}},
   protocolIEs
                 ProtocolIE-Container
X2RemovalFailure-IES X2AP-PROTOCOL-IES ::= {
   { ID id-Cause
                                  CRITICALITY ignore TYPE Cause
                                                                                  PRESENCE mandatory}
                                  CRITICALITY ignore TYPE CriticalityDiagnostics
   { ID id-CriticalityDiagnostics
                                                                                  PRESENCE optional },
```

```
-- RETRIEVE UE CONTEXT REQUEST
RetrieveUEContextRequest ::= SEQUENCE {
                   ProtocolIE-Container
   protocolIEs
                                          {{ RetrieveUEContextRequest-IEs}},
   . . .
RetrieveUEContextRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-New-eNB-UE-X2AP-ID
                                                                                            PRESENCE mandatory}
                                              CRITICALITY reject TYPE UE-X2AP-ID
                                                                                            PRESENCE optional }
     ID id-SeNB-UE-X2AP-ID-Extension
                                              CRITICALITY reject TYPE UE-X2AP-ID-Extension
     ID id-resumeID
                                                                                            PRESENCE mandatory
                                              CRITICALITY reject TYPE ResumeID
     ID id-ShortMAC-I
                                              CRITICALITY reject TYPE ShortMAC-I
                                                                                            PRESENCE mandatory }
     ID id-NewEUTRANCellIdentifier
                                              CRITICALITY reject TYPE EUTRANCellIdentifier
                                                                                            PRESENCE mandatory}
    {ID id-FailureCellCRNTI
                                              CRITICALITY reject TYPE CRNTI
                                                                                            PRESENCE optional } |
                                                                                            PRESENCE optional },
    {ID id-FailureCellPCI
                                              CRITICALITY reject TYPE PCI
    -- RETRIEVE UE CONTEXT RESPONSE
  ····
RetrieveUEContextResponse ::= SEOUENCE {
   protocolIEs
                       ProtocolIE-Container
                                              {{ RetrieveUEContextResponse-IEs}},
RetrieveUEContextResponse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-New-eNB-UE-X2AP-ID
                                          CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                PRESENCE mandatory } |
                                          CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                PRESENCE optional}
     ID id-New-eNB-UE-X2AP-ID-Extension
     ID id-Old-eNB-UE-X2AP-ID
                                          CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                PRESENCE mandatory }
     ID id-Old-eNB-UE-X2AP-ID-Extension
                                          CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                PRESENCE optional }
     ID id-GUMMEI-ID
                                          CRITICALITY reject TYPE GUMMEI
                                                                                                PRESENCE mandatory }
                                          CRITICALITY reject TYPE UE-ContextInformationRetrieve
                                                                                                PRESENCE mandatory }
     ID id-UE-ContextInformationRetrieve
     ID id-TraceActivation
                                          CRITICALITY ignore TYPE TraceActivation
                                                                                                PRESENCE optional}
     ID id-SRVCCOperationPossible
                                          CRITICALITY ignore TYPE SRVCCOperationPossible
                                                                                                PRESENCE optional}
     ID id-Masked-IMEISV
                                                                                                PRESENCE optional }
                                          CRITICALITY ignore TYPE Masked-IMEISV
     ID id-ExpectedUEBehaviour
                                          CRITICALITY ignore TYPE ExpectedUEBehaviour
                                                                                                PRESENCE optional }
     ID id-ProSeAuthorized
                                          CRITICALITY ignore TYPE ProSeAuthorized
                                                                                                PRESENCE optional}
     ID id-CriticalityDiagnostics
                                          CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                PRESENCE optional}
     ID id-V2XServicesAuthorized
                                          CRITICALITY ignore TYPE V2XServicesAuthorized
                                                                                                PRESENCE optional }
     ID id-AerialUEsubscriptionInformation CRITICALITY ignore TYPE AerialUEsubscriptionInformation PRESENCE optional },
UE-ContextInformationRetrieve ::= SEQUENCE {
   mME-UE-S1AP-ID
                                      UE-S1AP-ID,
   uESecurityCapabilities
                                      UESecurityCapabilities,
   aS-SecurityInformation
                                      AS-SecurityInformation,
                                      UEAggregateMaximumBitRate,
   uEaggregateMaximumBitRate
```

```
subscriberProfileIDforRFP
                                  SubscriberProfileIDforRFP
                                                             OPTIONAL,
   e-RABs-ToBeSetup-ListRetrieve
                                  E-RABs-ToBeSetup-ListRetrieve,
   rRC-Context
                                  RRC-Context.
   handoverRestrictionList
                                  HandoverRestrictionList
                                                             OPTIONAL,
   locationReportingInformation
                                  LocationReportingInformation
                                                             OPTIONAL,
   managBasedMDTallowed
                                  ManagementBasedMDTallowed
                                                             OPTIONAL,
   managBasedMDTPLMNList
                                  MDTPLMNList
                                                             OPTIONAL,
                                  ProtocolExtensionContainer { {UE-ContextInformationRetrieve-ExtIEs} } OPTIONAL,
   iE-Extensions
UE-ContextInformationRetrieve-ExtIES X2AP-PROTOCOL-EXTENSION ::= {
PRESENCE optional },
   . . .
E-RABs-ToBeSetup-ListRetrieve ::= SEOUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeSetupRetrieve-ItemIEs} }
E-RABs-ToBeSetupRetrieve-ItemIEs
                              X2AP-PROTOCOL-IES ::= {
   E-RABs-ToBeSetupRetrieve-Item ::= SEQUENCE {
   e-RAB-ID
                               E-RAB-ID,
   e-RAB-Level-OoS-Parameters
                               E-RAB-Level-Oos-Parameters,
   bearerType
                               BearerType OPTIONAL,
   iE-Extensions
                               ProtocolExtensionContainer { {E-RABs-ToBeSetupRetrieve-ItemExtIEs} } OPTIONAL,
   . . .
E-RABs-ToBeSetupRetrieve-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
   { ID id-uL-GTPtunnelEndpoint
                                  CRITICALITY reject EXTENSION GTPtunnelEndpoint
                                                                               PRESENCE mandatory },
   . . .
  -- RETRIEVE UE CONTEXT FAILURE
__ ********************************
RetrieveUEContextFailure ::= SEQUENCE {
                 ProtocolIE-Container
                                     {{ RetrieveUEContextFailure-IEs}},
   protocolIEs
   . . .
RetrieveUEContextFailure-IEs X2AP-PROTOCOL-IES ::= {
     ID id-New-eNB-UE-X2AP-ID
                                     CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                  PRESENCE mandatory}
     ID id-New-eNB-UE-X2AP-ID-Extension
                                     CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                  PRESENCE optional}
    ID id-Cause
                                     CRITICALITY ignore TYPE Cause
                                                                                  PRESENCE mandatory}
    ID id-CriticalityDiagnostics
                                     CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                  PRESENCE optional },
```

```
-- SGNB ADDITION REQUEST
__ **********************
SqNBAdditionRequest ::= SEQUENCE {
    protocolIEs
                   ProtocolIE-Container {{SqNBAdditionRequest-IEs}},
    . . .
SgNBAdditionRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                   CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                  PRESENCE mandatory}
     ID id-NRUESecurityCapabilities
                                                                                                                     PRESENCE mandatory }
                                                       CRITICALITY reject TYPE NRUESecurityCapabilities
     ID id-SqNBSecurityKey
                                                   CRITICALITY reject TYPE SqNBSecurityKey
                                                                                                                     PRESENCE mandatory}
     ID id-SqNBUEAqqreqateMaximumBitRate
                                                   CRITICALITY reject TYPE UEAggregateMaximumBitRate
                                                                                                                  PRESENCE mandatory
     ID id-SelectedPLMN
                                                       CRITICALITY ignore TYPE PLMN-Identity
                                                                                                                     PRESENCE optional }
      ID id-HandoverRestrictionList
                                                   CRITICALITY ignore TYPE HandoverRestrictionList
                                                                                                                  PRESENCE optional |
     ID id-E-RABs-ToBeAdded-SqNBAddRegList
                                                   CRITICALITY reject TYPE E-RABs-ToBeAdded-SgNBAddReqList
                                                                                                                  PRESENCE mandatory}
     ID id-MeNBtoSgNBContainer
                                                   CRITICALITY reject TYPE MeNBtoSqNBContainer
                                                                                                                     PRESENCE mandatory } |
                                                   CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                                                     PRESENCE optional}
     ID id-SqNB-UE-X2AP-ID
     ID id-ExpectedUEBehaviour
                                                   CRITICALITY ignore TYPE ExpectedUEBehaviour
                                                                                                                     PRESENCE optional}
     ID id-MeNB-UE-X2AP-ID-Extension
                                                   CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                  PRESENCE optional }
     ID id-RequestedSplitSRBs
                                                   CRITICALITY reject TYPE SplitSRBs
                                                                                                                  PRESENCE optional }
     ID id-MeNBResourceCoordinationInformation
                                                   CRITICALITY ignore TYPE MeNBResourceCoordinationInformation
                                                                                                                  PRESENCE optional }
                                                   CRITICALITY reject TYPE SGNB-Addition-Trigger-Ind
     ID id-SGNB-Addition-Trigger-Ind
                                                                                                                  PRESENCE optional}
     ID id-SubscriberProfileIDforRFP
                                                   CRITICALITY ignore TYPE SubscriberProfileIDforRFP
                                                                                                                  PRESENCE optional }
     ID id-MeNBCell-ID
                                                   CRITICALITY reject TYPE ECGI
                                                                                                                  PRESENCE mandatory },
E-RABs-ToBeAdded-SqNBAddReqList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeAdded-SqNBAddReq-ItemIEs} }
E-RABs-ToBeAdded-SqNBAddReg-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeAdded-SgNBAddReq-Item
                                                   CRITICALITY reject TYPE E-RABs-ToBeAdded-SqNBAddReq-Item
                                                                                                             PRESENCE mandatory },
E-RABs-ToBeAdded-SqNBAddReq-Item ::= SEQUENCE
    e-RAB-ID
                                           E-RAB-ID,
    drb-ID
                                       DRB-ID.
    en-DC-ResourceConfiguration
                                       EN-DC-ResourceConfiguration,
    resource-configuration
                                       CHOICE {
       sqNBPDCPpresent
                                           E-RABs-ToBeAdded-SqNBAddReg-Item-SqNBPDCPpresent,
       sgNBPDCPnotpresent
                                           E-RABs-ToBeAdded-SgNBAddReq-Item-SgNBPDCPnotpresent,
    iE-Extensions
                                   ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBAddReq-ItemExtIEs} }
E-RABs-ToBeAdded-SgNBAddReq-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
E-RABs-ToBeAdded-SqNBAddReq-Item-SqNBPDCPpresent ::= SEQUENCE {
    full-E-RAB-Level-OoS-Parameters E-RAB-Level-OoS-Parameters,
   max-MCG-admit-E-RAB-Level-OoS-Parameters GBR-OosInformation
-- This IE shall be present if MCG resource and SCG resources IEs in the the EN-DC Resource Configuration IE are set to "present" and GBR QoS
Information IE is present in Full E-RAB Level OoS Parameters IE --
   dL-Forwarding
                                             DL-Forwarding
                                                                                                                    OPTIONAL,
   meNB-DL-GTP-TEIDatMCG
                                             GTPtunnelEndpoint
                                                                                                                    OPTIONAL,
-- This IE shall be present if MCG resource IE in the the EN-DC Resource Configuration IE is set to "present" --
    s1-UL-GTPtunnelEndpoint
                                             GTPtunnelEndpoint,
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBAddReq-Item-SqNBPDCPpresentExtIEs} } OPTIONAL,
E-RABs-ToBeAdded-SqNBAddReq-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeAdded-SgNBAddReq-Item-SgNBPDCPnotpresent ::= SEQUENCE {
   requested-SCG-E-RAB-Level-QoS-Parameters
                                                 E-RAB-Level-QoS-Parameters,
   meNB-UL-GTP-TEIDatPDCP
                                                 GTPtunnelEndpoint,
                                                 GTPtunnelEndpoint OPTIONAL,
   secondary-meNB-UL-GTP-TEIDatPDCP
   rlc-Mode
                                                 RLCMode,
   uL-Configuration
                                                 ULConfiguration OPTIONAL,
-- This IE shall be present if MCG resource and SCG resources IEs in the the EN-DC Resource Configuration IE are set to "present" --
                                  ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBAddReq-Item-SqNBPDCPnotpresentExtIEs} }
   iE-Extensions
                                                                                                                             OPTIONAL,
    . . .
E-RABs-ToBeAdded-SqNBAddReq-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
   -- SGNB ADDITION REQUEST ACKNOWLEDGE
__ ********************************
SgNBAdditionRequestAcknowledge ::= SEQUENCE
   protocolIEs
                   ProtocolIE-Container
                                          {{SgNBAdditionRequestAcknowledge-IEs}},
    . . .
SqNBAdditionRequestAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                     CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                          PRESENCE mandatory } |
     ID id-SgNB-UE-X2AP-ID
                                                     CRITICALITY reject TYPE SqNB-UE-X2AP-ID
                                                                                                                             PRESENCE
mandatory} |
    { ID id-E-RABs-Admitted-ToBeAdded-SqNBAddReqAckList CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-SqNBAddReqAckList
                                                                                                                            PRESENCE
mandatory}
     ID id-E-RABs-NotAdmitted-List
                                                     CRITICALITY ignore TYPE E-RAB-List
                                                                                                                          PRESENCE optional }
     ID id-SgNBtoMeNBContainer
                                                     CRITICALITY reject TYPE SgNBtoMeNBContainer
                                                                                                                          PRESENCE mandatory |
    ID id-CriticalityDiagnostics
                                                                                                                          PRESENCE optional |
                                                     CRITICALITY ignore TYPE CriticalityDiagnostics
```

```
ID id-MeNB-UE-X2AP-ID-Extension
                                                      CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                                          PRESENCE optional }
     ID id-AdmittedSplitSRBs
                                                      CRITICALITY reject TYPE SplitSRBs
                                                                                                                          PRESENCE optional }
     ID id-SqNBResourceCoordinationInformation
                                                      CRITICALITY ignore TYPE SqNBResourceCoordinationInformation
                                                                                                                          PRESENCE optional}
     ID id-RRCConfigIndication
                                                      CRITICALITY reject TYPE RRC-Config-Ind
                                                                                                                          PRESENCE optional },
E-RABs-Admitted-ToBeAdded-SqnBAddRegAckList ::= SEOUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeAdded-
SgNBAddRegAck-ItemIEs } }
E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-ItemIEs X2AP-PROTOCOL-IES ::= {
    PRESENCE
mandatory}
E-RABs-Admitted-ToBeAdded-SqNBAddRegAck-Item ::= SEQUENCE {
    e-RAB-ID
                                          E-RAB-ID,
    en-DC-ResourceConfiguration
                                      EN-DC-ResourceConfiguration,
    resource-configuration
                                      CHOICE {
       sgNBPDCPpresent
                                          E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item-SqNBPDCPpresent,
       sgNBPDCPnotpresent
                                          E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item-SqNBPDCPnotpresent,
    iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBAddRegAck-ItemExtIEs} }
E-RABs-ToBeAdded-SqNBAddRegAck-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item-SqNBPDCPpresent ::= SEQUENCE {
    s1-DL-GTPtunnelEndpoint
                                          GTPtunnelEndpoint,
    sgNB-UL-GTP-TEIDatPDCP
                                          GTPtunnelEndpoint
                                                                                                                                OPTIONAL,
-- This IE shall be present if MCG resource IE in the the EN-DC Resource Configuration IE is set to "present" --
   rlc-Mode
                                          RLCMode
                                                                                                                                OPTIONAL,
-- This IE shall be present if MCG resource IE in the the EN-DC Resource Configuration IE is set to "present" --
    dL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
                                                                                                                                OPTIONAL,
   uL-Forwarding-GTPtunnelEndpoint
                                          GTPtunnelEndpoint
                                                                                                                                OPTIONAL,
    mCG-E-RAB-Level-OoS-Parameters
                                          E-RAB-Level-OoS-Parameters
                                                                                                                                OPTIONAL,
-- This IE shall be present if MCG resource and SCG resource IEs in the the EN-DC Resource Configuration IE are set to "present" and the GBR QoS
Information IE is present in the Requested MCG E-RAB Level QoS Parameters IE --
   uL-Configuration
                                              ULConfiguration
                                                                                                                                   OPTIONAL,
-- This IE shall be present if MCG resource and SCG resources IEs in the the EN-DC Resource Configuration IE are set to "present" --
   iE-Extensions
                                          ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item-SqNBPDCPpresentExtIEs} }
       OPTIONAL,
    . . .
E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeAdded-SgNBAddReqAck-Item-SgNBPDCPnotpresent ::= SEQUENCE
```

```
sgNB-DL-GTP-TEIDatSCG
                                    GTPtunnelEndpoint,
   secondary-sqNB-DL-GTP-TEIDatSCG
                                    GTPtunnelEndpoint
                                                          OPTIONAL,
   iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-SqNBAddRegAck-Item-SqNBPDCPnotpresentExtIEs} }
   OPTIONAL,
   . . .
E-RABs-Admitted-ToBeAdded-SqNBAddReqAck-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  -- SGNB ADDITION REQUEST REJECT
__ *******************************
SgNBAdditionRequestReject ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        {{SqNBAdditionRequestReject-IEs}},
   . . .
SgNBAdditionRequestReject-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                       PRESENCE mandatory}
                                       CRITICALITY reject TYPE UE-X2AP-ID
     ID id-SqNB-UE-X2AP-ID
                                                                                       PRESENCE optional }
                                       CRITICALITY reject TYPE SqNB-UE-X2AP-ID
     ID id-Cause
                                       CRITICALITY ignore TYPE Cause
                                                                                       PRESENCE mandatory |
     ID id-CriticalityDiagnostics
                                       CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                       PRESENCE optional |
    ID id-MeNB-UE-X2AP-ID-Extension
                                                                                       PRESENCE optional },
                                        CRITICALITY reject TYPE UE-X2AP-ID-Extension
   -- SGNB RECONFIGURATION COMPLETE
__ *******************************
SgNBReconfigurationComplete ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        {{SgNBReconfigurationComplete-IEs}},
   . . .
SgNBReconfigurationComplete-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                               CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                           PRESENCE mandatory }
     ID id-SqNB-UE-X2AP-ID
                                               CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                                           PRESENCE mandatory }
     ID id-ResponseInformationSqNBReconfComp
                                               CRITICALITY ignore TYPE ResponseInformationSqNBReconfComp
                                                                                                           PRESENCE mandatory }
    ID id-MeNB-UE-X2AP-ID-Extension
                                               CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                           PRESENCE optional },
ResponseInformationSgNBReconfComp ::= CHOICE {
```

```
success-SqNBReconfComp
                                       ResponseInformationSgNBReconfComp-SuccessItem,
   reject-by-MeNB-SqNBReconfComp
                                      ResponseInformationSqNBReconfComp-RejectByMeNBItem,
ResponseInformationSqNBReconfComp-SuccessItem ::= SEQUENCE {
   meNBtoSqNBContainer
                                   MeNBtoSqNBContainer
                                                                      OPTIONAL.
   iE-Extensions
                                   ProtocolExtensionContainer { ResponseInformationSqNBReconfComp-SuccessItemExtIEs} } OPTIONAL,
ResponseInformationSqNBReconfComp-SuccessItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ResponseInformationSqNBReconfComp-RejectByMeNBItem ::= SEQUENCE {
    cause
                                   Cause,
   iE-Extensions
                                   ProtocolExtensionContainer { ResponseInformationSqNBReconfComp-RejectByMeNBItemExtIEs} }
                                                                                                                               OPTIONAL,
    . . .
ResponseInformationSqNBReconfComp-RejectByMeNBItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  -- SGNB MODIFICATION REQUEST
SgNBModificationRequest ::= SEQUENCE {
   protocolIEs
                   ProtocolIE-Container
                                          {{ SgNBModificationRequest-IEs}},
    . . .
SqNBModificationRequest-IEs X2AP-PROTOCOL-IES ::=
     ID id-MeNB-UE-X2AP-ID
                                              CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                          PRESENCE mandatory }
     ID id-SqNB-UE-X2AP-ID
                                              CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                                          PRESENCE mandatory }
     ID id-Cause
                                              CRITICALITY ignore TYPE Cause
                                                                                                          PRESENCE mandatory}
     ID id-SelectedPLMN
                                              CRITICALITY ignore TYPE PLMN-Identity
                                                                                                          PRESENCE optional }
                                                                                                          PRESENCE optional }
     ID id-HandoverRestrictionList
                                              CRITICALITY ignore TYPE HandoverRestrictionList
     ID id-SCGConfigurationQuery
                                              CRITICALITY ignore TYPE SCGConfigurationQuery
                                                                                                          PRESENCE optional}
     ID id-UE-ContextInformation-SqNBModReq
                                              CRITICALITY reject TYPE UE-ContextInformation-SqNBModReq
                                                                                                          PRESENCE optional}
     ID id-MeNBtoSgNBContainer
                                              CRITICALITY ignore TYPE MeNBtoSgNBContainer
                                                                                                          PRESENCE optional}
     ID id-MeNB-UE-X2AP-ID-Extension
                                              CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                          PRESENCE optional}
     ID id-MeNBResourceCoordinationInformation CRITICALITY ignore TYPE MeNBResourceCoordinationInformation PRESENCE optional}
     ID id-RequestedSplitSRBs
                                              CRITICALITY ignore TYPE SplitSRBs
                                                                                                          PRESENCE optional }
     ID id-RequestedSplitSRBsrelease
                                              CRITICALITY ignore TYPE SplitSRBs
                                                                                                          PRESENCE optional },
UE-ContextInformation-SgNBModReq ::= SEQUENCE {
```

```
nRUE-SecurityCapabilities
                                    NRUESecurityCapabilities
                                                                                                                  OPTIONAL,
    sqNB-SecurityKey
                                    SqNBSecurityKey
                                                                                                                  OPTIONAL.
    sqNBUEAqqreqateMaximumBitRate
                                    UEAggregateMaximumBitRate
                                                                                                                  OPTIONAL.
    e-RABs-ToBeAdded
                                    E-RABs-ToBeAdded-SqNBModReg-List
                                                                                                                  OPTIONAL,
    e-RABs-ToBeModified
                                    E-RABs-ToBeModified-SqNBModReg-List
                                                                                                                  OPTIONAL,
    e-RABs-ToBeReleased
                                    E-RABs-ToBeReleased-SqNBModReg-List
                                                                                                                  OPTIONAL,
                                    ProtocolExtensionContainer { {UE-ContextInformationSqNBModRegExtIEs} }
    iE-Extensions
                                                                                                                  OPTIONAL,
UE-ContextInformationSqNBModReqExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    { ID id-SubscriberProfileIDforRFP
                                                        CRITICALITY ignore EXTENSION SubscriberProfileIDforRFP
                                                                                                                                          PRESENCE
optional},
    . . .
E-RABs-ToBeAdded-SqNBModReq-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeAdded-SqNBModReq-ItemIEs} }
E-RABs-ToBeAdded-SqNBModReg-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeAdded-SqNBModReg-Item
                                                    CRITICALITY ignore TYPE E-RABs-ToBeAdded-SqNBModReg-Item
                                                                                                               PRESENCE mandatory },
    . . .
E-RABs-ToBeAdded-SanbModReg-Item ::= SEOUENCE {
    e-RAB-ID
                                            E-RAB-ID,
    drb-ID
                                            DRB-ID.
    en-DC-ResourceConfiguration
                                            EN-DC-ResourceConfiguration,
    resource-configuration
                                            CHOICE {
        sqNBPDCPpresent
                                            E-RABs-ToBeAdded-SqNBModReg-Item-SqNBPDCPpresent,
       sgNBPDCPnotpresent
                                            E-RABs-ToBeAdded-SgNBModReq-Item-SgNBPDCPnotpresent,
    iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBModReq-ItemExtIEs} }
    . . .
E-RABs-ToBeAdded-SqNBModReq-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeAdded-SgNBModReq-Item-SgNBPDCPpresent ::= SEQUENCE {
    full-E-RAB-Level-OoS-Parameters
                                            E-RAB-Level-OoS-Parameters,
    max-MN-admit-E-RAB-Level-QoS-Parameters GBR-QosInformation
                                                                                                                  OPTIONAL,
-- This IE shall be present if MCG resource and SCG resources IEs in the the EN-DC Resource Configuration IE are set to "present" and GBR QoS
Information IE is present in Full E-RAB Level OoS Parameters IE --
    dL-Forwarding
                                            DL-Forwarding
                                                                                                                        OPTIONAL,
    meNB-DL-GTP-TEIDatMCG
                                            GTPtunnelEndpoint
                                                                                                                        OPTIONAL,
-- This IE shall be present if MCG resource IE in the the EN-DC Resource Configuration IE is set to "present" --
    s1-UL-GTPtunnelEndpoint
                                            GTPtunnelEndpoint,
    iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBModReq-Item-SqNBPDCPpresentExtIEs} }
                                                                                                                                 OPTIONAL,
E-RABs-ToBeAdded-SgNBModReq-Item-SgNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
E-RABs-ToBeAdded-SgNBModReq-Item-SgNBPDCPnotpresent ::= SEQUENCE
    requested-SCG-E-RAB-Level-OoS-Parameters
                                                    E-RAB-Level-OoS-Parameters,
    meNB-UL-GTP-TEIDatPDCP
                                                    GTPtunnelEndpoint,
    secondary-meNB-UL-GTP-TEIDatPDCP
                                                    GTPtunnelEndpoint
                                                                            OPTIONAL
    rlc-Mode
                                                    RLCMode,
    uL-Configuration
                                                    ULConfiguration
                                                                                                                       OPTIONAL,
-- This IE shall be present if MCG resource and SCG resources IEs in the the EN-DC Resource Configuration IE are set to "present" --
                                    ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBModReq-Item-SqNBPDCPnotpresentExtIEs} }
    iE-Extensions
    . . .
E-RABs-ToBeAdded-SqNBModReq-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeModified-SgNBModReq-List ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeModified-SgNBModReq-
ItemIEs} }
E-RABs-ToBeModified-SqNBModReq-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeModified-SqNBModReq-Item CRITICALITY ignore TYPE E-RABs-ToBeModified-SqNBModReq-Item
                                                                                                                 PRESENCE mandatory },
E-RABs-ToBeModified-SqNBModReq-Item ::= SEQUENCE {
    e-RAB-ID
                                            E-RAB-ID,
    en-DC-ResourceConfiguration
                                        EN-DC-ResourceConfiguration,
    resource-configuration
                                        CHOICE {
        sgNBPDCPpresent
                                            E-RABs-ToBeModified-SqNBModReq-Item-SqNBPDCPpresent,
       sgNBPDCPnotpresent
                                            E-RABs-ToBeModified-SgNBModReq-Item-SgNBPDCPnotpresent,
    iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeModified-SqNBModReq-ItemExtIEs} }
E-RABs-ToBeModified-SgNBModReq-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeModified-SqNBModReq-Item-SqNBPDCPpresent ::= SEQUENCE
    full-E-RAB-Level-QoS-Parameters
                                            E-RAB-Level-QoS-Parameters
                                                                                                                                OPTIONAL,
    max-MN-admit-E-RAB-Level-OoS-Parameters E-RAB-Level-OoS-Parameters
                                                                                                                                OPTIONAL,
    meNB-DL-GTP-TEIDatMCG
                                            GTPtunnelEndpoint
                                                                                                                                OPTIONAL,
    s1-UL-GTPtunnelEndpoint
                                            GTPtunnelEndpoint
                                                                                                                                OPTIONAL,
    iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeModified-SgNBModReq-Item-SgNBPDCPpresentExtIEs} } OPTIONAL,
E-RABs-ToBeModified-SgNBModReq-Item-SgNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
E-RABs-ToBeModified-SgNBModReq-Item-SgNBPDCPnotpresent ::= SEQUENCE {
    requested-SCG-E-RAB-Level-OoS-Parameters
                                                    E-RAB-Level-OoS-Parameters
                                                                                                                                          OPTIONAL.
    meNB-UL-GTP-TEIDatPDCP
                                                GTPtunnelEndpoint
                                                                                                                                      OPTIONAL,
    uL-Configuration
                                                    ULConfiguration
                                                                                                                                          OPTIONAL.
    iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeModified-SqNBModReq-Item-SqNBPDCPnotpresentExtIEs} } OPTIONAL,
E-RABs-ToBeModified-SqNBModReq-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SqNBModReg-List ::= SEOUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-SqNBModReg-
ItemIEs} }
E-RABs-ToBeReleased-SqNBModReq-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-SqNBModReq-Item CRITICALITY ignore TYPE E-RABs-ToBeReleased-SqNBModReq-Item
                                                                                                                 PRESENCE mandatory },
    . . .
E-RABs-ToBeReleased-SgNBModReq-Item ::= SEQUENCE {
    e-RAB-ID
                                            E-RAB-ID,
    en-DC-ResourceConfiguration
                                        EN-DC-ResourceConfiguration,
    resource-configuration
                                        CHOICE {
        sqNBPDCPpresent
                                            E-RABs-ToBeReleased-SqNBModReg-Item-SqNBPDCPpresent,
        sqNBPDCPnotpresent
                                            E-RABs-ToBeReleased-SqNBModReq-Item-SqNBPDCPnotpresent,
                                    ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBModReq-ItemExtIEs} }
    iE-Extensions
    . . .
E-RABs-ToBeReleased-SqNBModReq-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SqNBModReq-Item-SqNBPDCPpresent ::= SEQUENCE
    dL-GTPtunnelEndpoint
                                    GTPtunnelEndpoint
                                                                                                                          OPTIONAL,
    uL-GTPtunnelEndpoint
                                    GTPtunnelEndpoint
                                                                                                                          OPTIONAL,
                                    ProtocolExtensionContainer { {E-RABs-ToBeReleased-SgNBModReq-Item-SgNBPDCPpresentExtIEs} } OPTIONAL,
    iE-Extensions
E-RABs-ToBeReleased-SqNBModReq-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SgNBModReq-Item-SgNBPDCPnotpresent ::= SEQUENCE {
   iE-Extensions
                                    ProtocolExtensionContainer { {E-RABs-ToBeReleased-SgNBModReq-Item-SgNBPDCPnotpresentExtIEs} } OPTIONAL,
```

```
E-RABs-ToBeReleased-SqNBModReq-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    -- SGNB MODIFICATION REQUEST ACKNOWLEDGE
  ****************
SgNBModificationRequestAcknowledge ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        {{SqNBModificationRequestAcknowledge-IEs}},
SqNBModificationRequestAcknowledge-IES X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                   CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                    PRESENCE mandatory |
     ID id-SgNB-UE-X2AP-ID
                                                   CRITICALITY ignore TYPE SgNB-UE-X2AP-ID
                                                                                                                       PRESENCE
mandatory} |
    { ID id-E-RABs-Admitted-ToBeAdded-SgNBModAckList
                                                      CRITICALITY ignore TYPE E-RABs-Admitted-ToBeAdded-SqNBModAckList
                                                                                                                         PRESENCE
optional}|
     ID id-E-RABs-Admitted-ToBeModified-SqNBModAckList CRITICALITY ignore TYPE E-RABs-Admitted-ToBeModified-SqNBModAckList
                                                                                                                    PRESENCE optional }
     ID id-E-RABs-Admitted-ToBeReleased-SgNBModAckList CRITICALITY ignore TYPE E-RABs-Admitted-ToBeReleased-SgNBModAckList
                                                                                                                    PRESENCE optional}
     ID id-E-RABs-NotAdmitted-List
                                                                                                                    PRESENCE optional}
                                                   CRITICALITY ignore TYPE E-RAB-List
                                                   CRITICALITY ignore TYPE SgNBtoMeNBContainer
     ID id-SqNBtoMeNBContainer
                                                                                                                    PRESENCE optional}
     ID id-CriticalityDiagnostics
                                                   CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                    PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                   CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                    PRESENCE optional }
     ID id-SqNBResourceCoordinationInformation
                                                   CRITICALITY ignore TYPE SgNBResourceCoordinationInformation
                                                                                                                    PRESENCE optional}
     ID id-AdmittedSplitSRBs
                                                   CRITICALITY ignore TYPE SplitSRBs
                                                                                                                    PRESENCE optional}
     ID id-AdmittedSplitSRBsrelease
                                                      CRITICALITY ignore TYPE SplitSRBs
                                                                                                                       PRESENCE
optional},
E-RABs-Admitted-ToBeAdded-SqnBModAckList ::= SEOUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeAdded-
SqNBModAck-ItemIEs} }
E-RABs-Admitted-ToBeAdded-SgNBModAck-ItemIEs X2AP-PROTOCOL-IES ::= {
    PRESENCE mandatory
E-RABs-Admitted-ToBeAdded-SqNBModAck-Item ::= SEOUENCE {
   e-RAB-ID
                                        E-RAB-ID,
   en-DC-ResourceConfiguration
                                    EN-DC-ResourceConfiguration,
   resource-configuration
                                    CHOICE {
       sgNBPDCPpresent
                                        E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPpresent,
       sgNBPDCPnotpresent
                                        E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPnotpresent,
                                ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-SgNBModAck-ItemExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
```

```
E-RABs-Admitted-ToBeAdded-SqNBModAck-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPpresent ::= SEQUENCE {
    s1-DL-GTPtunnelEndpoint
                                            GTPtunnelEndpoint,
    sgNB-UL-GTP-TEIDatPDCP
                                            GTPtunnelEndpoint
                                                                                                                                   OPTIONAL,
-- This IE shall be present if MCG resource IE in the the EN-DC Resource Configuration IE are set to "present" --
    rlc-Mode
                                                RLCMode
                                                                                                                                      OPTIONAL,
-- This IE shall be present if MCG resource IE in the the EN-DC Resource Configuration IE are set to "present" --
    dL-Forwarding-GTPtunnelEndpoint
                                            GTPtunnelEndpoint
                                                                                                                                   OPTIONAL,
   uL-Forwarding-GTPtunnelEndpoint
                                           GTPtunnelEndpoint
                                                                                                                                   OPTIONAL,
   mCG-E-RAB-Level-OoS-Parameters
                                            E-RAB-Level-OoS-Parameters
                                                                                                                                   OPTIONAL.
-- This IE shall be present if MCG resource and SCG resource IEs in the the EN-DC Resource Configuration IE are set to "present" and the GBR QoS
Information IE is present in the Requested MCG E-RAB Level OoS Parameters IE --
    uL-Configuration
                                           ULConfiguration
                                                                                                                                      OPTIONAL,
-- This IE shall be present if MCG resource and SCG resources IEs in the the EN-DC Resource Configuration IE are set to "present" --
                                    ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPpresentExtIEs} }
    iE-Extensions
                                                                                                                                         OPTIONAL.
    . . .
E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeAdded-SqnBModAck-Item-SqnBPDCPnotpresent ::= SEQUENCE {
    sqNB-DL-GTP-TEIDatSCG
                                            GTPtunnelEndpoint,
                                            GTPtunnelEndpoint
    secondary-sqNB-DL-GTP-TEIDatSCG
                                                                        OPTIONAL,
                                    ProtocolExtensionContainer { {E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPnotpresentExtIEs} } OPTIONAL,
    iE-Extensions
E-RABs-Admitted-ToBeAdded-SqNBModAck-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeModified-SqNBModAckList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeModified-
SqNBModAck-ItemIEs} }
E-RABs-Admitted-ToBeModified-SgNBModAck-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-Admitted-ToBeModified-SgNBModAck-Item
                                                                CRITICALITY ignore TYPE E-RABs-Admitted-ToBeModified-SgNBModAck-Item PRESENCE
mandatory }
E-RABs-Admitted-ToBeModified-SqNBModAck-Item ::= SEQUENCE
    e-RAB-ID
                                            E-RAB-ID,
    en-DC-ResourceConfiguration
                                        EN-DC-ResourceConfiguration,
    resource-configuration
                                        CHOICE {
       sgNBPDCPpresent
                                            E-RABs-Admitted-ToBeModified-SgNBModAck-Item-SgNBPDCPpresent,
       sqNBPDCPnotpresent
                                            E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPnotpresent,
```

```
ProtocolExtensionContainer { {E-RABs-ToBeAdded-SqNBModAck-ItemExtIEs} }
        iE-Extensions
                                                                                                                                                                                                                            OPTIONAL,
E-RABs-ToBeAdded-SqNBModAck-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPpresent ::= SEQUENCE {
                                                                                        GTPtunnelEndpoint
        s1-DL-GTPtunnelEndpoint
                                                                                                                                                                                                                                                                            OPTIONAL,
        sgNB-UL-GTP-TEIDatPDCP
                                                                                        GTPtunnelEndpoint
                                                                                                                                                                                                                                                                            OPTIONAL,
        mCG-E-RAB-Level-OoS-Parameters
                                                                                        E-RAB-Level-QoS-Parameters
                                                                                                                                                                                                                                                                            OPTIONAL,
        uL-Configuration
                                                                                                ULConfiguration
                                                                                                                                                                                                                                                                                  OPTIONAL,
        iE-Extensions
                                                                        ProtocolExtensionContainer { {E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPpresentExtIEs} } OPTIONAL.
E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPnotpresent ::= SEQUENCE
        sgNB-DL-GTP-TEIDatSCG
                                                                                        GTPtunnelEndpoint
        OPTIONAL,
        iE-Extensions
                                                                        ProtocolExtensionContainer { {E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPnotpresentExtIEs} }
        OPTIONAL,
        . . .
E-RABs-Admitted-ToBeModified-SqNBModAck-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
        . . .
E-RABs-Admitted-ToBeReleased-SqNBModAckList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-Admitted-ToBeReleased-SqNBModAckList ::= SEQUENCE (SIZE (1..maxnoofBearer)) OF Single-Container { {E-RABs-Admitted-ToBeReleased-SqNBMModAckList ::= SEQUENCE
SqNBModAck-ItemIEs} }
E-RABs-Admitted-ToBeReleased-SqNBModAck-ItemIEs X2AP-PROTOCOL-IES ::= {
        { ID id-E-RABs-Admitted-ToBeReleased-SqNBModAck-Item
                                                                                                                                CRITICALITY ignore TYPE E-RABs-Admitted-ToReleased-SqNBModAck-Item
                                                                                                                                                                                                                                                                                  PRESENCE
mandatory }
E-RABs-Admitted-ToReleased-SqNBModAck-Item ::= SEQUENCE {
        e-RAB-ID
                                                                                E-RAB-ID,
        en-DC-ResourceConfiguration
                                                                                EN-DC-ResourceConfiguration,
        resource-configuration
                                                                                CHOICE {
                sgNBPDCPpresent
                                                                                        E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPpresent,
                sgNBPDCPnotpresent
                                                                                        E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPnotpresent,
                                                                        ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBModAck-ItemExtIEs} }
        iE-Extensions
                                                                                                                                                                                                                                 OPTIONAL,
E-RABs-ToBeReleased-SgNBModAck-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
E-RABs-Admitted-ToBeReleased-SgNBModAck-Item-SgNBPDCPpresent ::= SEQUENCE {
                              ProtocolExtensionContainer { {E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPpresentExtIEs} }
                                                                                                                                 OPTIONAL.
E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPnotpresent ::= SEQUENCE {
   iE-Extensions
                              ProtocolExtensionContainer { {E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPnotpresentExtIEs} } OPTIONAL.
E-RABs-Admitted-ToBeReleased-SqNBModAck-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- SGNB MODIFICATION REQUEST REJECT
__ ***********************
SqNBModificationRequestReject ::= SEQUENCE {
                  ProtocolIE-Container
                                         {{SgNBModificationRequestReject-IEs}},
   protocolIEs
   . . .
SqNBModificationRequestReject-IES X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                             CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                            PRESENCE mandatory |
     ID id-SgNB-UE-X2AP-ID
                                           CRITICALITY ignore TYPE SgNB-UE-X2AP-ID
                                                                                            PRESENCE mandatory}
     ID id-Cause
                                           CRITICALITY ignore TYPE Cause
                                                                                            PRESENCE mandatory |
     ID id-CriticalityDiagnostics
                                             CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional }
    { ID id-MeNB-UE-X2AP-ID-Extension
                                             CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                            PRESENCE optional },
-- SGNB MODIFICATION REOUIRED
__ *********************
SgNBModificationRequired ::= SEQUENCE {
                  ProtocolIE-Container
                                             {{SgNBModificationRequired-IEs}},
   protocolIEs
    . . .
```

```
SgNBModificationRequired-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                  CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                 PRESENCE mandatory } |
     ID id-SaNB-UE-X2AP-ID
                                                   CRITICALITY reject TYPE SqNB-UE-X2AP-ID
                                                                                                                   PRESENCE mandatory}
     ID id-Cause
                                                   CRITICALITY ignore TYPE Cause
                                                                                                                 PRESENCE mandatory}
     ID id-PDCPChangeIndication
                                                      CRITICALITY ignore TYPE PDCPChangeIndication
                                                                                                                      PRESENCE optional }
     ID id-E-RABs-ToBeReleased-SqNBModRegdList
                                                  CRITICALITY ignore TYPE E-RABs-ToBeReleased-SqNBModReqdList
                                                                                                                PRESENCE optional } |
     ID id-SqNBtoMeNBContainer
                                                   CRITICALITY ignore TYPE SqNBtoMeNBContainer
                                                                                                                   PRESENCE optional }
                                                                                                                 PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                  CRITICALITY reject TYPE UE-X2AP-ID-Extension
     ID id-E-RABs-ToBeModified-SgNBModRegdList
                                                  CRITICALITY ignore TYPE E-RABs-ToBeModified-SqNBModReqdList
                                                                                                                PRESENCE optional }
     ID id-SgNBResourceCoordinationInformation
                                                  CRITICALITY ignore TYPE SqNBResourceCoordinationInformation
                                                                                                                PRESENCE optional },
E-RABs-ToBeReleased-SqNBModRegdList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-SqNBModRegd-
ItemIEs} }
E-RABs-ToBeReleased-SqNBModReqd-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-SqNBModRegd-Item
                                                   CRITICALITY ignore
                                                                          TYPE E-RABs-ToBeReleased-SqNBModReqd-Item
                                                                                                                      PRESENCE mandatory },
E-RABs-ToBeReleased-SqNBModReqd-Item ::= SEQUENCE {
   e-RAB-ID
                                       E-RAB-ID,
   cause
                                   Cause,
                                   ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBModReqd-ItemExtIEs} } OPTIONAL,
    iE-Extensions
E-RABs-ToBeReleased-SqNBModRegd-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
E-RABs-ToBeModified-SgNBModReqdList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeModified-SgNBModReqd-
ItemIEs} }
E-RABs-ToBeModified-SqNBModReqd-ItemIEs X2AP-PROTOCOL-IES ::= {
    TYPE E-RABs-ToBeModified-SqNBModRegd-Item
                                                                                                                      PRESENCE mandatory },
E-RABs-ToBeModified-SqNBModReqd-Item ::= SEQUENCE {
    e-RAB-ID
                                          E-RAB-ID,
    en-DC-ResourceConfiguration
                                       EN-DC-ResourceConfiguration,
   resource-configuration
                                       CHOICE {
       sgNBPDCPpresent
                                          E-RABs-ToBeModified-SgNBModRegd-Item-SgNBPDCPpresent,
       sgNBPDCPnotpresent
                                           E-RABs-ToBeModified-SanBModRead-Item-SanBPDCPnotpresent,
                                   ProtocolExtensionContainer { {E-RABs-ToBeModified-SqNBModReqd-ItemExtIEs} } OPTIONAL,
    iE-Extensions
E-RABs-ToBeModified-SgNBModReqd-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
E-RABs-ToBeModified-SqNBModReqd-Item-SqNBPDCPpresent ::= SEQUENCE {
   requested-MCG-E-RAB-Level-OoS-Parameters
                                                  E-RAB-Level-OoS-Parameters
                                                                                                                  OPTIONAL.
                                                  ULConfiguration
   uL-Configuration
                                                                                                                  OPTIONAL,
    sqNB-UL-GTP-TEIDatPDCP
                                              GTPtunnelEndpoint
                                                                                                               OPTIONAL.
    s1-DL-GTP-TEIDatSqNB
                                                  GTPtunnelEndpoint
                                                                                                                  OPTIONAL,
   iE-Extensions
                              ProtocolExtensionContainer { {E-RABs-ToBeModified-SqNBModReqd-Item-SqNBPDCPpresentExtIEs} }
                                                                                                                           OPTIONAL,
E-RABs-ToBeModified-SqNBModReqd-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeModified-SgNBModReqd-Item-SgNBPDCPnotpresent ::= SEQUENCE {
    sqNB-DL-GTP-TEIDatSCG
                                      GTPtunnelEndpoint
                                                                     OPTIONAL,
                                      GTPtunnelEndpoint
    secondary-sqNB-DL-GTP-TEIDatSCG
                                                                     OPTIONAL,
                              ProtocolExtensionContainer { {E-RABs-ToBeModified-SqNBModReqd-Item-SqNBPDCPnotpresentExtIEs} }
   iE-Extensions
                                                                                                                             OPTIONAL.
    . . .
E-RABs-ToBeModified-SqNBModRead-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  ******************
-- SGNB MODIFICATION CONFIRM
  *****************
SqNBModificationConfirm ::= SEOUENCE {
                                          {{SgNBModificationConfirm-IEs}},
   protocolIEs
                   ProtocolIE-Container
SqNBModificationConfirm-IES X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                          CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                        PRESENCE mandatory
     ID id-SgNB-UE-X2AP-ID
                                                          CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                                                        PRESENCE mandatory
    { ID id-E-RABs-AdmittedToBeModified-SgNBModConfList
                                                          CRITICALITY ignore TYPE E-RABs-AdmittedToBeModified-SgNBModConfList
                                                                                                                                PRESENCE
optional}|
     ID id-MeNBtoSqNBContainer
                                                          CRITICALITY ignore TYPE MeNBtoSqNBContainer
                                                                                                                        PRESENCE optional }
                                                                                                                        PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                          CRITICALITY ignore TYPE CriticalityDiagnostics
     ID id-MeNB-UE-X2AP-ID-Extension
                                                          CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                        PRESENCE optional }
     ID id-MeNBResourceCoordinationInformation
                                                          CRITICALITY ignore TYPE MeNBResourceCoordinationInformation
                                                                                                                        PRESENCE optional },
E-RABs-AdmittedToBeModified-SgNBModConfList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ProtocolIE-Single-Container
    { {E-RABs-AdmittedToBeModified-SgNBModConf-ItemIEs} }
```

```
E-RABs-AdmittedToBeModified-SqNBModConf-ItemIEs X2AP-PROTOCOL-IES ::= {
{ ID id-E-RABs-AdmittedToBeModified-SqNBModConf-Item
                                                       CRITICALITY ignore TYPE E-RABs-AdmittedToBeModified-SqNBModConf-Item
mandatory },
E-RABs-AdmittedToBeModified-SqNBModConf-Item ::= SEQUENCE {
   e-RAB-ID
                                          E-RAB-ID,
   en-DC-ResourceConfiguration
                                       EN-DC-ResourceConfiguration,
   resource-configuration
                                       CHOICE {
                                           E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPpresent,
       sgNBPDCPpresent
       sgNBPDCPnotpresent
                                           E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPnotpresent,
                                   ProtocolExtensionContainer { {E-RABs-AdmittedToBeModified-SqNBModConf-ItemExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-AdmittedToBeModified-SqNBModConf-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPpresent ::= SEQUENCE {
   iE-Extensions
                               ProtocolExtensionContainer { {E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPpresentExtIEs} }
                                                                                                                                     OPTIONAL,
E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPnotpresent ::= SEQUENCE {
   secondary-meNB-UL-GTP-TEIDatPDCP
                                                   GTPtunnelEndpoint
                                                                                  OPTIONAL,
                               ProtocolExtensionContainer { {E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPnotpresentExtIEs} }
   iE-Extensions
   OPTIONAL,
    . . .
E-RABs-AdmittedToBeModified-SqNBModConf-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  SGNB MODIFICATION REFUSE
  *****************
SgNBModificationRefuse ::= SEQUENCE
                   ProtocolIE-Container
                                               {{SgNBModificationRefuse-IEs}},
   protocolIEs
SgNBModificationRefuse-IEs X2AP-PROTOCOL-IES ::=
```

```
ID id-MeNB-UE-X2AP-ID
                                             CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                             PRESENCE mandatory |
     ID id-SqNB-UE-X2AP-ID
                                             CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                               PRESENCE mandatory }
     ID id-Cause
                                             CRITICALITY ignore TYPE Cause
                                                                                             PRESENCE mandatory | |
     ID id-MeNBtoSqNBContainer
                                             CRITICALITY ignore TYPE MeNBtoSqNBContainer
                                                                                               PRESENCE optional } |
     ID id-CriticalityDiagnostics
                                             CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                            PRESENCE optional |
     ID id-MeNB-UE-X2AP-ID-Extension
                                             CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                             PRESENCE optional },
  -- SGNB RELEASE REQUEST
  ····
SqNBReleaseRequest ::= SEQUENCE {
                                             {{SqNBReleaseRequest-IEs}},
   protocolIEs
                  ProtocolIE-Container
SgNBReleaseRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                 CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                             PRESENCE mandatory } |
                                                                                                                PRESENCE optional }
     ID id-SqNB-UE-X2AP-ID
                                                 CRITICALITY reject TYPE SgNB-UE-X2AP-ID
     ID id-Cause
                                                 CRITICALITY ignore TYPE Cause
                                                                                                              PRESENCE mandatory |
     ID id-E-RABs-ToBeReleased-SgNBRelRegList
                                                 CRITICALITY ignore TYPE E-RABs-ToBeReleased-SqNBRelReqList
                                                                                                             PRESENCE optional }
     ID id-UE-ContextKeptIndicator
                                                 CRITICALITY ignore TYPE UE-ContextKeptIndicator
                                                                                                              PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                 CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                             PRESENCE optional }
    ID id-MeNBtoSqNBContainer
                                                 CRITICALITY reject TYPE MenBtoSqnBContainer
                                                                                                                PRESENCE optional },
    . . .
E-RABs-ToBeReleased-SqNBRelReqList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-SqNBRelReq-
ItemIEs} }
E-RABs-ToBeReleased-SqNBRelReq-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-SgNBRelReg-Item
                                               CRITICALITY ignore TYPE E-RABs-ToBeReleased-SgNBRelReq-Item PRESENCE mandatory},
E-RABs-ToBeReleased-SqNBRelReq-Item ::= SEQUENCE
   e-RAB-ID
                                     E-RAB-ID,
                                     EN-DC-ResourceConfiguration,
    en-DC-ResourceConfiguration
   resource-configuration
                                     CHOICE {
       sgNBPDCPpresent
                                         E-RABs-ToBeReleased-SgNBRelReq-Item-SgNBPDCPpresent,
       sqNBPDCPnotpresent
                                         E-RABs-ToBeReleased-SqNBRelReq-Item-SqNBPDCPnotpresent,
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBRelReq-ItemExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-ToBeReleased-SqNBRelReq-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
E-RABs-ToBeReleased-SqNBRelReq-Item-SqNBPDCPpresent ::= SEOUENCE
    uL-GTPtunnelEndpoint
                                   GTPtunnelEndpoint
                                                                                                                OPTIONAL.
    dL-GTPtunnelEndpoint
                                    GTPtunnelEndpoint
                                                                                                                          OPTIONAL.
                                    ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBRelReq-Item-SqNBPDCPpresentExtIEs} } OPTIONAL,
    iE-Extensions
E-RABs-ToBeReleased-SqNBRelReq-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SqNBRelReq-Item-SqNBPDCPnotpresent ::= SEQUENCE {
                                    ProtocolExtensionContainer { {E-RABs-ToBeReleased-SgNBRelReq-Item-SgNBPDCPnotpresentExtIEs} } OPTIONAL,
E-RABs-ToBeReleased-SqNBRelReq-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- SGNB RELEASE REQUEST ACKNOWLEDGE
SqNBReleaseRequestAcknowledge ::= SEQUENCE {
                                                {{SgNBReleaseRequestAcknowledge-IEs}},
   protocolIEs
                   ProtocolIE-Container
    . . .
SqNBReleaseRequestAcknowledge-IES X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                    CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                    PRESENCE mandatory } |
     ID id-SgNB-UE-X2AP-ID
                                                    CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                                                       PRESENCE mandatory } |
     ID id-CriticalityDiagnostics
                                                   CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                    PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                                                                                    PRESENCE optional },
                                                   CRITICALITY reject TYPE UE-X2AP-ID-Extension
-- SGNB RELEASE REQUEST REJECT
SgNBReleaseRequestReject ::= SEQUENCE {
   protocolIEs
                   ProtocolIE-Container
                                                {{SgNBReleaseRequestReject-IEs}},
SgNBReleaseRequestReject-IEs X2AP-PROTOCOL-IES ::= {
    { ID id-MeNB-UE-X2AP-ID
                                                    CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                                    PRESENCE mandatory}
```

```
ID id-SqNB-UE-X2AP-ID
                                               CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                                            PRESENCE mandatory}
     ID id-Cause
                                               CRITICALITY ignore TYPE Cause
                                                                                                         PRESENCE mandatory |
     ID id-CriticalityDiagnostics
                                               CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                         PRESENCE optional}
     ID id-MeNB-UE-X2AP-ID-Extension
                                               CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                         PRESENCE optional },
  -- SGNB RELEASE REOUIRED
  *****************
SqNBReleaseRequired ::= SEOUENCE {
   protocolIEs
                  ProtocolIE-Container
                                        {{SqNBReleaseRequired-IEs}},
SqNBReleaseRequired-IES X2AP-PROTOCOL-IES ::= {
                                                                                        PRESENCE mandatory}
     ID id-MeNB-UE-X2AP-ID
                                        CRITICALITY reject TYPE UE-X2AP-ID
     ID id-SqNB-UE-X2AP-ID
                                        CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                         PRESENCE mandatory}
     ID id-Cause
                                        CRITICALITY ignore TYPE Cause
                                                                                        PRESENCE mandatory } |
                                                                                        PRESENCE optional },
    { ID id-MeNB-UE-X2AP-ID-Extension
                                        CRITICALITY reject TYPE UE-X2AP-ID-Extension
__ **********************
-- SGNB RELEASE CONFIRM
__ **********************
SgNBReleaseConfirm ::= SEQUENCE {
                                        {{SgNBReleaseConfirm-IEs}},
   protocolIEs
                  ProtocolIE-Container
   . . .
SqNBReleaseConfirm-IEs X2AP-PROTOCOL-IES ::= {
                                                                                                         PRESENCE mandatory } |
     ID id-MeNB-UE-X2AP-ID
                                               CRITICALITY ignore TYPE UE-X2AP-ID
     ID id-SqNB-UE-X2AP-ID
                                               CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                                            PRESENCE mandatory } |
     ID id-E-RABs-ToBeReleased-SgNBRelConfList
                                               CRITICALITY ignore TYPE E-RABs-ToBeReleased-SgNBRelConfList
                                                                                                         PRESENCE optional }
                                                                                                         PRESENCE optional }
     ID id-CriticalityDiagnostics
                                               CRITICALITY ignore TYPE CriticalityDiagnostics
    { ID id-MeNB-UE-X2AP-ID-Extension
                                               CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                         PRESENCE optional },
E-RABs-ToBeReleased-SqNBRelConfList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-SqNBRelConf-
ItemIEs} }
E-RABs-ToBeReleased-SqNBRelConf-ItemIEs X2AP-PROTOCOL-IES ::= {
   { ID id-E-RABs-ToBeReleased-SqNBRelConf-Item
                                                   CRITICALITY ignore
                                                                         TYPE E-RABs-ToBeReleased-SgNBRelConf-Item PRESENCE mandatory },
   . . .
```

. . .

```
E-RABs-ToBeReleased-SgNBRelConf-Item ::= SEQUENCE {
   e-RAB-ID
                                      E-RAB-ID,
    en-DC-ResourceConfiguration
                                      EN-DC-ResourceConfiguration,
   resource-configuration
                                      CHOICE {
       sqNBPDCPpresent
                                          E-RABs-ToBeReleased-SqNBRelConf-Item-SqNBPDCPpresent,
       sqNBPDCPnotpresent
                                          E-RABs-ToBeReleased-SqNBRelConf-Item-SqNBPDCPnotpresent,
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBRelConf-ItemExtIEs} } OPTIONAL,
    . . .
E-RABs-ToBeReleased-SqNBRelConf-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SgNBRelConf-Item-SgNBPDCPpresent ::= SEQUENCE {
   uL-GTPtunnelEndpoint
                                  GTPtunnelEndpoint
                                                                                                                     OPTIONAL,
                                  GTPtunnelEndpoint
    dL-GTPtunnelEndpoint
                                                                                                                     OPTIONAL,
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBRelConf-Item-SqNBPDCPpresentExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
E-RABs-ToBeReleased-SqNBRelConf-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SgNBRelConf-Item-SgNBPDCPnotpresent ::= SEQUENCE {
                                  ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBRelConf-Item-SqNBPDCPnotpresentExtIEs} }
   iE-Extensions
                                                                                                                                OPTIONAL,
E-RABs-ToBeReleased-SqNBRelConf-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
   ************************
  SGNB COUNTER CHECK REQUEST
      **********************
SgNBCounterCheckRequest ::= SEQUENCE {
                ProtocolIE-Container
                                          {{SgNBCounterCheckRequest-IEs}},
   protocolIEs
SgNBCounterCheckRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                                                     PRESENCE mandatory}
                                                      CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                        PRESENCE mandatory |
     ID id-SqNB-UE-X2AP-ID
                                                      CRITICALITY ignore TYPE SgNB-UE-X2AP-ID
     ID id-E-RABs-SubjectToSgNBCounterCheck-List
                                                      CRITICALITY ignore TYPE E-RABs-SubjectToSgNBCounterCheck-List
                                                                                                                     PRESENCE mandatory }
    { ID id-MeNB-UE-X2AP-ID-Extension
                                                      CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                     PRESENCE optional },
```

```
E-RABs-SubjectToSqNBCounterCheck-List ::= SEOUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-SubjectToSqNBCounterCheck-
ItemIEs} }
E-RABs-SubjectToSqNBCounterCheck-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-SubjectToSqNBCounterCheck-Item
                                                 CRITICALITY ignore TYPE E-RABs-SubjectToSgNBCounterCheck-Item PRESENCE mandatory},
   . . .
E-RABs-SubjectToSgNBCounterCheck-Item ::= SEQUENCE
   e-RAB-ID
                                  E-RAB-ID,
   uL-Count
                                  INTEGER (0..4294967295),
   dL-Count
                                  INTEGER (0..4294967295),
   iE-Extensions
                                  ProtocolExtensionContainer { {E-RABs-SubjectToSqNBCounterCheck-ItemExtIEs} } OPTIONAL.
E-RABs-SubjectToSqNBCounterCheck-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::=
-- SGNB CHANGE REOUIRED
   ***************
SqNBChangeRequired ::= SEOUENCE {
                                              {{SqNBChangeRequired-IEs}},
   protocolIEs
                 ProtocolIE-Container
SgNBChangeRequired-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                              PRESENCE mandatory}
                                              CRITICALITY ignore TYPE UE-X2AP-ID
     ID id-SqNB-UE-X2AP-ID
                                              CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                              PRESENCE mandatory}
     ID id-Target-SgNB-ID
                                              CRITICALITY ignore TYPE GNB-ID
                                                                                              PRESENCE mandatory }
    { ID id-Cause
                                              CRITICALITY ignore TYPE Cause
                                                                                              PRESENCE mandatory }
     ID id-SqNBtoMeNBContainer
                                              CRITICALITY ignore TYPE SgNBtoMeNBContainer
                                                                                                PRESENCE optional}
    { ID id-MeNB-UE-X2AP-ID-Extension
                                              CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                              PRESENCE optional },
-- SGNB CHANGE CONFIRM
SgNBChangeConfirm ::= SEQUENCE {
   protocolIEs
                ProtocolIE-Container
                                          {{SgNBChangeConfirm-IEs}},
SgNBChangeConfirm-IEs X2AP-PROTOCOL-IES ::= {
```

```
ID id-MeNB-UE-X2AP-ID
                                                   CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                                                 PRESENCE mandatory |
     ID id-SqNB-UE-X2AP-ID
                                                   CRITICALITY ignore TYPE SqNB-UE-X2AP-ID
                                                                                                                    PRESENCE mandatory } |
     ID id-E-RABs-ToBeReleased-SqNBChaConfList
                                                   CRITICALITY ignore TYPE E-RABs-ToBeReleased-SqNBChaConfList
                                                                                                                 PRESENCE optional}
     ID id-CriticalityDiagnostics
                                                   CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                                 PRESENCE optional }
     ID id-MeNB-UE-X2AP-ID-Extension
                                                   CRITICALITY ignore TYPE UE-X2AP-ID-Extension
                                                                                                                 PRESENCE optional },
E-RABs-ToBeReleased-SqNBChaConfList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RABs-ToBeReleased-SqNBChaConf-
ItemIEs} }
E-RABs-ToBeReleased-SqNBChaConf-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-E-RABs-ToBeReleased-SgNBChaConf-Item
                                                       CRITICALITY ignore
                                                                              TYPE E-RABs-ToBeReleased-SqNBChaConf-Item PRESENCE mandatory },
    . . .
E-RABs-ToBeReleased-SqNBChaConf-Item ::= SEQUENCE {
    e-RAB-ID
                                       E-RAB-ID,
    en-DC-ResourceConfiguration
                                       EN-DC-ResourceConfiguration,
    resource-configuration
                                       CHOICE {
       sqNBPDCPpresent
                                           E-RABs-ToBeReleased-SgNBChaConf-Item-SgNBPDCPpresent,
       sgNBPDCPnotpresent
                                           E-RABs-ToBeReleased-SqNBChaConf-Item-SqNBPDCPnotpresent,
    iE-Extensions
                                   ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBChaConf-ItemExtIEs} } OPTIONAL,
E-RABs-ToBeReleased-SqNBChaConf-ItemExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SqNBChaConf-Item-SqNBPDCPpresent ::= SEQUENCE {
    uL-GTPtunnelEndpoint
                                   GTPtunnelEndpoint
                                                                                                                       OPTIONAL,
    dL-GTPtunnelEndpoint
                                   GTPtunnelEndpoint
                                                                                                                       OPTIONAL.
                                   ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBChaConf-Item-SqNBPDCPpresentExtIEs} } OPTIONAL,
   iE-Extensions
E-RABs-ToBeReleased-SqNBChaConf-Item-SqNBPDCPpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABs-ToBeReleased-SgNBChaConf-Item-SgNBPDCPnotpresent ::= SEQUENCE {
    iE-Extensions
                                   ProtocolExtensionContainer { {E-RABs-ToBeReleased-SqNBChaConf-Item-SqNBPDCPnotpresentExtIEs} }
                                                                                                                                   OPTIONAL,
E-RABs-ToBeReleased-SqNBChaConf-Item-SqNBPDCPnotpresentExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  ******************
```

```
-- RRC Transfer
RRCTransfer ::= SEQUENCE {
   protocolIEs
                                            {{RRCTransfer-IEs}},
                  ProtocolIE-Container
RRCTransfer-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                            CRITICALITY reject TYPE UE-X2AP-ID
                                                                                          PRESENCE mandatory}
     ID id-SqNB-UE-X2AP-ID
                                            CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                             PRESENCE mandatory }
                                                CRITICALITY reject TYPE SplitSRB
                                                                                             PRESENCE optional}
     ID id-SplitSRB
     ID id-UENRMeasurement
                                            CRITICALITY reject TYPE UENRMeasurement
                                                                                           PRESENCE optional }
   { ID id-MeNB-UE-X2AP-ID-Extension
                                            CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                          PRESENCE optional },
-- SGNB CHANGE REFUSE
  SqNBChangeRefuse ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                            {{SqNBChangeRefuse-IEs}},
SgNBChangeRefuse-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                            CRITICALITY ignore TYPE UE-X2AP-ID
                                                                                          PRESENCE mandatory |
     ID id-SgNB-UE-X2AP-ID
                                            CRITICALITY ignore TYPE SgNB-UE-X2AP-ID
                                                                                           PRESENCE mandatory}
    ID id-Cause
                                            CRITICALITY ignore TYPE Cause
                                                                                          PRESENCE mandatory } |
    ID id-CriticalityDiagnostics
                                            CRITICALITY ignore TYPE CriticalityDiagnostics PRESENCE optional}
    ID id-MeNB-UE-X2AP-ID-Extension
                                            CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                          PRESENCE optional },
-- EN-DC X2 SETUP REQUEST
__ **********************
ENDCX2SetupRequest ::= SEQUENCE {
   protocolIEs
                ProtocolIE-Container
                                        {{ENDCX2SetupRequest-IEs}},
   . . .
ENDCX2SetupRequest-IEs X2AP-PROTOCOL-IES ::= {
   { ID id-InitiatingNodeType-EndcX2Setup
                                                CRITICALITY reject TYPE InitiatingNodeType-EndcX2Setup
                                                                                                        PRESENCE mandatory },
   . . .
```

```
InitiatingNodeType-EndcX2Setup ::= CHOICE {
    init-eNB
                            ProtocolIE-Container
                                                     {{ENB-ENDCX2SetupRegIEs}},
    init-en-aNB
                        ProtocolIE-Container
                                                {{En-qNB-ENDCX2SetupReqIEs}},
ENB-ENDCX2SetupRegIEs X2AP-PROTOCOL-IES ::= {
     ID id-GlobalENB-ID
                                                         CRITICALITY reject TYPE GlobalENB-ID
                                                                                                                           PRESENCE mandatory |
    { ID id-ServedEUTRAcellsENDCX2ManagementList
                                                         CRITICALITY reject TYPE ServedEUTRAcellsENDCX2ManagementList
                                                                                                                           PRESENCE mandatory },
    . . .
ServedEUTRAcellsENDCX2ManagementList ::= SEQUENCE (SIZE (1.. maxCellineNB)) OF SEQUENCE {
    servedEUTRACellInfo
                                        ServedCell-Information,
    nrNeighbourInfo
                                        NRNeighbour-Information
                                                                     OPTIONAL,
   iE-Extensions
                                        ProtocolExtensionContainer { { ServedEUTRAcellsENDCX2Management-ExtIEs} } OPTIONAL,
    . . .
ServedEUTRAcellsENDCX2Management-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
En-qNB-ENDCX2SetupRegIEs X2AP-PROTOCOL-IES ::= {
     ID id-Globalen-gNB-ID
                                                     CRITICALITY reject TYPE GlobalGNB-ID
                                                                                                                        PRESENCE mandatory } |
    { ID id-ServedNRcellsENDCX2ManagementList
                                                     CRITICALITY reject TYPE ServedNRcellsENDCX2ManagementList
                                                                                                                        PRESENCE mandatory },
    . . .
ServedNRcellsENDCX2ManagementList ::= SEQUENCE (SIZE (1.. maxCellinengNB)) OF SEQUENCE {
    servedNRCellInfo
                                            ServedNRCell-Information,
    nRNeighbourInfo
                                        NRNeighbour-Information OPTIONAL,
    iE-Extensions
                                        ProtocolExtensionContainer { { En-qNBServedCells-ExtIEs} } OPTIONAL,
En-gNBServedCells-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ServedNRCell-Information ::= SEQUENCE {
   nrpCI
                        NRPCI,
    nrCellID
                        NRCGI,
    fiveGS-TAC
                        FiveGS-TAC,
                                    OPTIONAL,
    configured-TAC
                        TAC
    broadcastPLMNs
                        BroadcastPLMNs-Item,
    nrModeInfo
                        CHOICE {
       fdd
                FDD-InfoServedNRCell-Information,
       tdd
                TDD-InfoServedNRCell-Information,
    measurementTimingConfiguration OCTET STRING,
                                        ProtocolExtensionContainer { { ServedNRCell-Information-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
```

```
ServedNRCell-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
FDD-InfoServedNRCell-Information ::= SEQUENCE {
    ul-NRFregInfo
                               NRFregInfo,
   dl-NRFregInfo
                                NRFregInfo,
   ul-NR-TxBW
                            NR-TxBW,
                           NR-TxBW,
   dl-NR-TxBW
                            ProtocolExtensionContainer { { FDD-InfoServedNRCell-Information-ExtIEs } }
   iE-Extensions
                                                                                                           OPTIONAL,
FDD-InfoServedNRCell-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
FDD-InfoNeighbourServedNRCell-Information ::= SEQUENCE {
   ul-NRFregInfo
                           NRFregInfo,
    dl-NRFreqInfo
                            NRFregInfo,
                            ProtocolExtensionContainer { { FDD-InfoNeighbourServedNRCell-Information-ExtIEs } }
   iE-Extensions
                                                                                                                    OPTIONAL,
    . . .
FDD-InfoNeighbourServedNRCell-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TDD-InfoServedNRCell-Information ::= SEQUENCE {
                           NRFregInfo,
   nRFreqInfo
   nR-TxBW
                            NR-TxBW,
                            ProtocolExtensionContainer { { TDD-InfoServedNRCell-Information-ExtIEs } }
   iE-Extensions
                                                                                                           OPTIONAL,
TDD-InfoServedNRCell-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TDD-InfoNeighbourServedNRCell-Information ::= SEQUENCE {
    nRFreqInfo
                            NRFreqInfo,
   iE-Extensions
                            ProtocolExtensionContainer { { TDD-InfoNeighbourServedNRCell-Information-ExtIEs } }
                                                                                                                    OPTIONAL,
    . . .
TDD-InfoNeighbourServedNRCell-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NRNeighbour-Information ::= SEQUENCE (SIZE (1.. maxofNRNeighbours))OF SEQUENCE {
    nrpCI
                       NRPCI,
   nrCellID
                            NRCGI,
```

```
nrFreqInfo
                      NRFregInfo,
   fiveGS-TAC
                      FiveGS-TAC,
   configured-TAC
                      TAC
                                 OPTIONAL.
   measurementTimingConfiguration OCTET STRING,
   nRNeighbourModeInfo
                             CHOICE {
       fdd
              FDD-InfoNeighbourServedNRCell-Information,
       t.dd
              TDD-InfoNeighbourServedNRCell-Information,
                                     ProtocolExtensionContainer { { NRNeighbour-Information-ExtIEs} } OPTIONAL,
   iE-Extensions
NRNeighbour-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CellAssistanceInformation ::= CHOICE {
   limited-list
                             Limited-list,
                         ENUMERATED {allServedNRcells, ...},
   full-list
             ::= SEQUENCE (SIZE (1..maxCellinengNB)) OF SEQUENCE {
Limited-list
   nrCellID
                      NRCGI,
       iE-Extensions
                                        ProtocolExtensionContainer { {Limited-list-ExtIEs} } OPTIONAL,
Limited-list-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
   -- EN-DC X2 SETUP RESPONSE
__ *******************************
ENDCX2SetupResponse ::= SEQUENCE {
                                         {{ENDCX2SetupResponse-IEs}},
   protocolIEs
                  ProtocolIE-Container
    . . .
ENDCX2SetupResponse-IEs X2AP-PROTOCOL-IES ::= {
   { ID id-RespondingNodeType-EndcX2Setup
                                            CRITICALITY reject TYPE RespondingNodeType-EndcX2Setup PRESENCE mandatory },
    . . .
RespondingNodeType-EndcX2Setup ::= CHOICE {
   respond-eNB
                      ProtocolIE-Container
                                             {{ENB-ENDCX2SetupReqAckIEs}},
   respond-en-gNB
                      ProtocolIE-Container
                                            {{En-gNB-ENDCX2SetupReqAckIEs}},
    . . .
```

```
ENB-ENDCX2SetupRegAckIEs X2AP-PROTOCOL-IES ::= {
     ID id-GlobalENB-ID
                                                  CRITICALITY reject TYPE GlobalENB-ID
                                                                                                            PRESENCE mandatory } |
   { ID id-ServedEUTRAcellsENDCX2ManagementList
                                                  CRITICALITY reject TYPE ServedEUTRAcellsENDCX2ManagementList
                                                                                                            PRESENCE mandatory },
En-gNB-ENDCX2SetupReqAckIEs X2AP-PROTOCOL-IES ::= {
     ID id-Globalen-gNB-ID
                                              CRITICALITY reject TYPE GlobalGNB-ID
                                                                                                         PRESENCE mandatory } |
   { ID id-ServedNRcellsENDCX2ManagementList
                                              CRITICALITY reject TYPE ServedNRcellsENDCX2ManagementList
                                                                                                         PRESENCE mandatory },
    -- EN-DC X2 SETUP FAILURE
__ ***********************
ENDCX2SetupFailure ::= SEQUENCE {
                 ProtocolIE-Container
                                       {{ENDCX2SetupFailure-IEs}},
   protocolIEs
   . . .
ENDCX2SetupFailure-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Cause
                                CRITICALITY ignore
                                                     TYPE Cause
                                                                                       PRESENCE mandatory}
   { ID id-CriticalityDiagnostics CRITICALITY ignore
                                                     TYPE CriticalityDiagnostics
                                                                                       PRESENCE optional },
  *****************
-- EN-DC CONFIGURATION UPDATE
  *****************
ENDCConfigurationUpdate ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                       {{ENDCConfigurationUpdate-IEs}},
   . . .
ENDCConfigurationUpdate-IES X2AP-PROTOCOL-IES ::= {
   { ID id-InitiatingNodeType-EndcConfigUpdate
                                                 CRITICALITY reject TYPE InitiatingNodeType-EndcConfigUpdate
                                                                                                               PRESENCE mandatory },
InitiatingNodeType-EndcConfigUpdate::= CHOICE {
   init-eNB
                     ProtocolIE-Container
                                           {{ENB-ENDCConfigUpdateIEs}},
                                          {{En-gNB-ENDCConfigUpdateIEs}},
   init-en-qNB
                     ProtocolIE-Container
   . . .
```

```
ENB-ENDCConfigUpdateIEs X2AP-PROTOCOL-IES ::= {
     ID id-CellAssistanceInformation
                                                  CRITICALITY reject TYPE CellAssistanceInformation
                                                                                                                     PRESENCE optional } |
     ID id-ServedEUTRAcellsENDCX2ManagementList
                                                      CRITICALITY reject TYPE ServedEUTRAcellsENDCX2ManagementList
                                                                                                                        PRESENCE optional }|
     ID id-ServedEUTRAcellsToModifyListENDCConfUpd CRITICALITY reject TYPE ServedEUTRAcellsToModifyListENDCConfUpd
                                                                                                                     PRESENCE optional }
     ID id-ServedEUTRAcellsToDeleteListENDCConfUpd CRITICALITY reject TYPE ServedEUTRAcellsToDeleteListENDCConfUpd
                                                                                                                     PRESENCE optional },
ServedEUTRAcellsToModifyListENDCConfUpd ::= SEQUENCE (SIZE (1.. maxCellineNB)) OF SEQUENCE {
   old-ECGT
                                          ECGI,
   servedEUTRACellInfo
                                      ServedCell-Information,
   nrNeighbourInfo
                                      NRNeighbour-Information
                                                                 OPTIONAL,
                                      ProtocolExtensionContainer { { ServedEUTRAcellsToModifyListENDCConfUpd-ExtIEs} } OPTIONAL,
   iE-Extensions
ServedEUTRAcellsToModifyListENDCConfUpd-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ServedEUTRAcellsToDeleteListENDCConfUpd ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ECGI
En-qNB-ENDCConfigUpdateIEs X2AP-PROTOCOL-IES ::= {
     ID id-ServedNRcellsENDCX2ManagementList
                                                  CRITICALITY reject TYPE ServedNRcellsENDCX2ManagementList
                                                                                                                  PRESENCE optional } |
     ID id-ServedNRcellsToModifyListENDCConfUpd
                                                      CRITICALITY reject TYPE ServedNRcellsToModifyENDCConfUpdList
                                                                                                                     PRESENCE optional } |
     ID id-ServedNRcellsToDeleteListENDCConfUpd
                                                      CRITICALITY reject TYPE ServedNRcellsToDeleteENDCConfUpdList
                                                                                                                     PRESENCE optional },
ServedNRcellsToModifyENDCConfUpdList ::= SEOUENCE (SIZE (1..maxCellinengNB)) OF ServedNRCellsToModify-Item
ServedNRCellsToModify-Item::= SEQUENCE {
   old-nrcgi
                                  NRCGI,
    servedNRCellInformation
                                  ServedNRCell-Information,
   nrNeighbourInformation
                                  NRNeighbour-Information
                                                                 OPTIONAL,
   nrDeactivationIndication
                                      DeactivationIndication
                                                                     OPTIONAL,
                                  ProtocolExtensionContainer { { ServedNRCellsToModify-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
ServedNRCellsToModify-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ServedNRcellsToDeleteENDCConfUpdList ::= SEQUENCE (SIZE (1..maxCellinengNB)) OF NRCGI
__ *********************
-- EN-DC CONFIGURATION UPDATE ACKNOWLEDGE
__ *********************
ENDCConfigurationUpdateAcknowledge ::= SEQUENCE {
```

```
{{ENDCConfigurationUpdateAcknowledge-IEs}},
   protocolIEs
                  ProtocolIE-Container
ENDCConfigurationUpdateAcknowledge-IEs X2AP-PROTOCOL-IES ::= {
   { ID id-RespondingNodeType-EndcConfigUpdate
                                                    CRITICALITY reject TYPE RespondingNodeType-EndcConfigUpdate
                                                                                                                     PRESENCE mandatory },
   . . .
RespondingNodeType-EndcConfigUpdate::= CHOICE {
   respond-eNB
                      ProtocolIE-Container
                                             {{ENB-ENDCConfigUpdateAckIEs}},
                                             {{En-gNB-ENDCConfigUpdateAckIEs}},
   respond-en-qNB
                      ProtocolIE-Container
   . . .
ENB-ENDCConfigUpdateAckIEs X2AP-PROTOCOL-IES ::= {
En-gNB-ENDCConfigUpdateAckIEs X2AP-PROTOCOL-IES ::= {
   { ID id-ServedNRcellsENDCX2ManagementList
                                                 CRITICALITY reject TYPE ServedNRcellsENDCX2ManagementList
                                                                                                            PRESENCE optional },
   . . .
-- EN-DC CONFIGURATION UPDATE FAILURE
__ ********************
ENDCConfigurationUpdateFailure ::= SEQUENCE
   protocolIEs
                  ProtocolIE-Container
                                         {{ENDCConfigurationUpdateFailure-IEs}},
   . . .
ENDCConfigurationUpdateFailure-IES X2AP-PROTOCOL-IES ::= {
     ID id-Cause
                                     CRITICALITY ignore TYPE Cause
                                                                                      PRESENCE mandatory}
    { ID id-CriticalityDiagnostics
                                     CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                      PRESENCE optional },
-- EN-DC CELL ACTIVATION REQUEST
  ENDCCellActivationRequest ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                         {{ENDCCellActivationRequest-IEs}},
   . . .
```

```
ENDCCellActivationRequest-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ServedNRCellsToActivate CRITICALITY reject TYPE ServedNRCellsToActivate
                                                                                    PRESENCE mandatory |
   { ID id-ActivationID
                                  CRITICALITY reject TYPE ActivationID
                                                                                   PRESENCE mandatory },
ServedNRCellsToActivate::= SEQUENCE (SIZE (1.. maxCellinengNB)) OF ServedNRCellsToActivate-Item
ServedNRCellsToActivate-Item::= SEQUENCE {
   nrCellID
                               ProtocolExtensionContainer { { ServedNRCellsToActivate-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
ServedNRCellsToActivate-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
  -- EN-DC CELL ACTIVATION RESPONSE
  ******************
ENDCCellActivationResponse ::= SEOUENCE {
   protocolIEs
                 ProtocolIE-Container
                                      {{ENDCCellActivationResponse-IEs}},
ENDCCellActivationResponse-IEs X2AP-PROTOCOL-IES ::= {
     PRESENCE mandatory }
                                  CRITICALITY reject TYPE ActivationID
                                                                                   PRESENCE mandatory}
     ID id-ActivationID
   { ID id-CriticalityDiagnostics CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                PRESENCE optional }.
   . . .
ActivatedNRCellList ::= SEQUENCE (SIZE (1.. maxCellinenqNB)) OF ActivatedNRCellList-Item
ActivatedNRCellList-Item::= SEQUENCE {
   nrCellID
   iE-Extensions
                                  ProtocolExtensionContainer { { ActivatedNRCellList-Item-ExtIEs} } OPTIONAL,
ActivatedNRCellList-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- EN-DC CELL ACTIVATION FAILURE
```

```
__ *********************
ENDCCellActivationFailure ::= SEQUENCE {
   protocolIEs
                  ProtocolIE-Container
                                         {{ENDCCellActivationFailure-IEs}},
   . . .
ENDCCellActivationFailure-IEs X2AP-PROTOCOL-IES ::= {
     ID id-ActivationID
                                         CRITICALITY reject TYPE ActivationID
                                                                                          PRESENCE mandatory } |
     ID id-Cause
                                     CRITICALITY ignore TYPE Cause
                                                                                      PRESENCE mandatory } |
    ID id-CriticalityDiagnostics
                                     CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                      PRESENCE optional },
  ******************
-- SECONDARY RAT DATA USAGE REPORT
SecondaryRATDataUsageReport ::= SEQUENCE {
                                             {{SecondaryRATDataUsageReport-IEs}},
   protocolIEs
                  ProtocolIE-Container
SecondaryRATDataUsageReport-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                                                                                    PRESENCE mandatory}
                                             CRITICALITY reject TYPE UE-X2AP-ID
     ID id-SqNB-UE-X2AP-ID
                                             CRITICALITY reject TYPE SgNB-UE-X2AP-ID
                                                                                                       PRESENCE mandatory } |
                                                                                                    PRESENCE mandatory } |
     ID id-SecondaryRATUsageReportList
                                             CRITICALITY reject TYPE SecondaryRATUsageReportList
    { ID id-MeNB-UE-X2AP-ID-Extension
                                                                                                    PRESENCE optional },
                                             CRITICALITY reject TYPE UE-X2AP-ID-Extension
   . . .
SgNBActivityNotification ::= SEQUENCE {
                                             {{SqNBActivityNotification-IEs}},
   protocolIEs
                  ProtocolIE-Container
   . . .
SgNBActivityNotification-IEs X2AP-PROTOCOL-IES ::= {
     ID id-MeNB-UE-X2AP-ID
                                             CRITICALITY reject TYPE UE-X2AP-ID
                                                                                                    PRESENCE mandatory |
                                                                                                       PRESENCE mandatory } |
     ID id-SgNB-UE-X2AP-ID
                                             CRITICALITY reject TYPE SgNB-UE-X2AP-ID
     ID id-UEContextLevelUserPlaneActivity
                                             CRITICALITY reject TYPE UserPlaneTrafficActivityReport
                                                                                                    PRESENCE mandatory }
                                                                                                    PRESENCE mandatory}
     ID id-ERABActivityNotifyItemList
                                             CRITICALITY reject TYPE ERABActivityNotifyItemList
    { ID id-MeNB-UE-X2AP-ID-Extension
                                             CRITICALITY reject TYPE UE-X2AP-ID-Extension
                                                                                                    PRESENCE optional },
  ******************
-- EN-DC PARTIAL RESET REQUIRED
ENDCPartialResetRequired ::= SEQUENCE {
```

```
{{ENDCPartialResetRequired-IEs}},
                 ProtocolIE-Container
   protocolIEs
ENDCPartialResetRequired-IEs X2AP-PROTOCOL-IES ::= {
     ID id-UEs-ToBeReset
                                   CRITICALITY reject TYPE UEsToBeResetList
                                                                                      PRESENCE mandatory |
    ID id-Cause
                                   CRITICALITY ignore TYPE Cause
                                                                                      PRESENCE mandatory },
    -- EN-DC PARTIAL RESET CONFIRM
__ *********************
ENDCPartialResetConfirm ::= SEQUENCE {
                 ProtocolIE-Container
                                       {{ENDCPartialResetConfirm-IEs}},
   protocolIEs
   . . .
ENDCPartialResetConfirm-IEs X2AP-PROTOCOL-IES ::= {
   { ID id-UEs-Admitted-ToBeReset
                                          CRITICALITY reject TYPE UEsToBeResetList
                                                                                         PRESENCE mandatory },
   . . .
-- E-UTRA - NR CELL RESOURCE COORDINATION REQUEST
EUTRANRCellResourceCoordinationRequest ::= SEQUENCE {
                 ProtocolIE-Container
                                          {{EUTRANRCellResourceCoordinationRequest-IEs}},
   protocolIEs
   . . .
EUTRANRCellResourceCoordinationRequest-IES X2AP-PROTOCOL-IES ::= {
   { ID id-InitiatingNodeType-EutranrCellResourceCoordination
                                                            CRITICALITY reject TYPE InitiatingNodeType-EutranrCellResourceCoordination
      PRESENCE mandatory },
   . . .
InitiatingNodeType-EutranrCellResourceCoordination ::= CHOICE {
   initiate-eNB
                        ProtocolIE-Container
                                              {{ENB-EUTRA-NRCellResourceCoordinationRegIEs}},
   initiate-en-gNB
                        ProtocolIE-Container
                                              {{En-gNB-EUTRA-NRCellResourceCoordinationRegIEs}},
ENB-EUTRA-NRCellResourceCoordinationReqIEs X2AP-PROTOCOL-IES ::= {
     ID id-SpectrumSharingGroupID CRITICALITY reject TYPE SpectrumSharingGroupID PRESENCE mandatory}
    ID id-ListofEUTRACellsinEUTRACoordinationReq CRITICALITY reject TYPE ListofEUTRACellsinEUTRACoordinationReq PRESENCE mandatory },
```

```
En-qNB-EUTRA-NRCellResourceCoordinationRegIEs X2AP-PROTOCOL-IES ::= {
    ID id-ListofEUTRACellsinNRCoordinationReg CRITICALITY reject TYPE ListofEUTRACellsinNRCoordinationReg PRESENCE mandatory }
    ID id-SpectrumSharingGroupID CRITICALITY reject TYPE SpectrumSharingGroupID PRESENCE mandatory}
   { ID id-ListofNRCellsinNRCoordinationReq CRITICALITY reject TYPE ListofNRCellsinNRCoordinationReq PRESENCE mandatory },
ListofEUTRACellsinEUTRACoordinationReq ::= SEQUENCE (SIZE (0..maxCellineNB)) OF ECGI
ListofEUTRACellsinNRCoordinationReg ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ECGI
ListofNRCellsinNRCoordinationReg ::= SEOUENCE (SIZE (0..maxnoNRcellsSpectrumSharingWithE-UTRA)) OF NRCGI
    ****************
-- E-UTRA - NR CELL RESOURCE COORDINATION RESPONSE
*****************
EUTRANRCellResourceCoordinationResponse ::= SEOUENCE {
   protocolIEs
               ProtocolIE-Container
                                    {{EUTRANRCellResourceCoordinationResponse-IEs}},
   . . .
EUTRANRCellResourceCoordinationResponse-IES X2AP-PROTOCOL-IES ::= {
   { ID id-RespondingNodeType-EutranrCellResourceCoordination
                                                   CRITICALITY reject TYPE RespondingNodeType-EutranrCellResourceCoordination
     PRESENCE mandatory },
RespondingNodeType-EutranrCellResourceCoordination ::= CHOICE {
  respond-eNB
                 ProtocolIE-Container
                                    {{ENB-EUTRA-NRCellResourceCoordinationRegAckIEs}},
   respond-en-qNB
                  ProtocolIE-Container
                                    {{En-gNB-EUTRA-NRCellResourceCoordinationRegAckIEs}},
ENB-EUTRA-NRCellResourceCoordinationReqAckIEs X2AP-PROTOCOL-IES ::= {
    ID id-SpectrumSharingGroupID CRITICALITY reject TYPE SpectrumSharingGroupID PRESENCE mandatory}
    En-qNB-EUTRA-NRCellResourceCoordinationRegAckIEs X2AP-PROTOCOL-IES ::= {
    ID id-SpectrumSharingGroupID CRITICALITY reject TYPE SpectrumSharingGroupID PRESENCE mandatory}
    ID id-ListofNRCellsinNRCoordinationResp
                                       CRITICALITY reject TYPE ListofNRCellsinNRCoordinationResp PRESENCE mandatory },
```

```
ListofEUTRACellsinEUTRACoordinationResp ::= SEQUENCE (SIZE (1..maxCellineNB)) OF ECGI
ListofNRCellsinNRCoordinationResp ::= SEOUENCE (SIZE (1..maxnoNRcellsSpectrumSharingWithE-UTRA)) OF NRCGI
__ ********************
-- EN-DC X2 REMOVAL REOUEST
__ ********************
ENDCX2RemovalRequest ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                       {{ENDCX2RemovalRequest-IEs}},
ENDCX2RemovalRequest-IEs X2AP-PROTOCOL-IES ::= {
   { ID id-InitiatingNodeType-EndcX2Removal
                                                 CRITICALITY reject TYPE InitiatingNodeType-EndcX2Removal
                                                                                                         PRESENCE mandatory },
InitiatingNodeType-EndcX2Removal ::= CHOICE
   init-eNB
                        ProtocolIE-Container
                                              {{ENB-ENDCX2RemovalRegIEs}},
   init-en-gNB
                     ProtocolIE-Container
                                          {{En-gNB-ENDCX2RemovalReqIEs}},
   . . .
ENB-ENDCX2RemovalReqIEs X2AP-PROTOCOL-IES ::= {
   { ID id-GlobalENB-ID
                                                  CRITICALITY reject TYPE GlobalENB-ID
                                                                                                            PRESENCE mandatory },
En-gNB-ENDCX2RemovalReqIEs X2AP-PROTOCOL-IES ::= {
   { ID id-Globalen-gNB-ID
                                              CRITICALITY reject TYPE GlobalGNB-ID
                                                                                                         PRESENCE mandatory },
__ *********************
-- EN-DC X2 REMOVAL RESPONSE
  *****************
ENDCX2RemovalResponse ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                       {{ENDCX2RemovalResponse-IEs}},
ENDCX2RemovalResponse-IEs X2AP-PROTOCOL-IES ::= {
   { ID id-RespondingNodeType-EndcX2Removal
                                              CRITICALITY reject TYPE RespondingNodeType-EndcX2Removal PRESENCE mandatory },
```

```
RespondingNodeType-EndcX2Removal ::= CHOICE {
   respond-eNB
                 ProtocolIE-Container
                                          {{ENB-ENDCX2RemovalRegAckIEs}},
   respond-en-gNB
                    ProtocolIE-Container
                                          {{En-gNB-ENDCX2RemovalReqAckIEs}},
ENB-ENDCX2RemovalRegAckIEs X2AP-PROTOCOL-IES ::= {
   { ID id-GlobalENB-ID
                                                 CRITICALITY reject TYPE GlobalENB-ID
                                                                                                           PRESENCE mandatory },
   . . .
En-gNB-ENDCX2RemovalReqAckIEs X2AP-PROTOCOL-IES ::= {
   { ID id-Globalen-gNB-ID
                                              CRITICALITY reject TYPE GlobalGNB-ID
                                                                                                         PRESENCE mandatory },
  *****************
-- EN-DC X2 REMOVAL FAILURE
__ *********************
ENDCX2RemovalFailure ::= SEOUENCE {
                                      {{ENDCX2RemovalFailure-IEs}},
   protocolIEs ProtocolIE-Container
ENDCX2RemovalFailure-IEs X2AP-PROTOCOL-IES ::= {
     ID id-Cause
                                                                                      PRESENCE mandatory}
                   CRITICALITY ignore
                                                    TYPE Cause
    ID id-CriticalityDiagnostics CRITICALITY ignore
                                                    TYPE CriticalityDiagnostics
                                                                                      PRESENCE optional },
```

9.3.5 Information Element definitions

END

```
id-E-RAB-Item.
id-Number-of-Antennaports,
id-MBSFN-Subframe-Info,
id-PRACH-Configuration,
id-CSG-Id,
id-MDTConfiguration,
id-SignallingBasedMDTPLMNList,
id-MultibandInfoList,
id-FreqBandIndicatorPriority,
id-NeighbourTAC,
id-Time-UE-StayedInCell-EnhancedGranularity,
id-MBMS-Service-Area-List,
id-HO-cause,
id-eARFCNExtension,
id-DL-EARFCNExtension,
id-UL-EARFCNExtension,
id-M3Configuration,
id-M4Configuration,
id-M5Configuration,
id-MDT-Location-Info,
id-NRrestriction,
id-AdditionalSpecialSubframe-Info,
id-UEID,
id-enhancedRNTP,
id-ProSeUEtoNetworkRelaying,
id-M6Configuration,
id-M7Configuration,
id-OffsetOfNbiotChannelNumberToDL-EARFCN,
id-OffsetOfNbiotChannelNumberToUL-EARFCN,
id-AdditionalSpecialSubframeExtension-Info,
id-BandwidthReducedSI,
id-extended-e-RAB-MaximumBitrateDL,
id-extended-e-RAB-MaximumBitrateUL,
id-extended-e-RAB-GuaranteedBitrateDL,
id-extended-e-RAB-GuaranteedBitrateUL,
id-extended-uEaggregateMaximumBitRateDownlink,
id-extended-uEaggregateMaximumBitRateUplink,
id-E-RABUsageReport-Item,
id-SecondaryRATUsageReport-Item,
id-UEAppLayerMeasConfig,
id-DL-scheduling-PDCCH-CCE-usage,
id-UL-scheduling-PDCCH-CCE-usage,
id-DownlinkPacketLossRate,
id-UplinkPacketLossRate,
id-serviceType,
id-ProtectedEUTRAResourceIndication.
id-NRS-NSSS-PowerOffset,
id-NSSS-NumOccasionDifferentPrecoder,
maxnoofBearers,
maxCellineNB,
maxEARFCN,
```

```
maxEARFCNPlusOne,
    newmaxEARFCN.
    maxInterfaces.
    maxnoofBands.
    maxnoofBPLMNs,
    maxnoofCells,
    maxnoofEPLMNs,
    maxnoofEPLMNsPlusOne,
    maxnoofForbLACs,
    maxnoofForbTACs,
    maxnoofNeighbours,
    maxnoofPRBs,
    maxNrOfErrors,
    maxPools,
    maxnoofMBSFN,
    maxnoofTAforMDT,
    maxnoofCellIDforMDT,
    maxnoofMBMSServiceAreaIdentities,
    maxnoofMDTPLMNs,
    maxnoofCoMPHypothesisSet,
    maxnoofCoMPCells,
    maxUEReport,
    maxCellReport,
    maxnoofPA,
    maxCSIProcess,
    maxCSIReport,
    maxSubband,
    maxnooftimeperiods,
    maxnoofCellIDforQMC,
    maxnoofTAforOMC,
    maxnoofPLMNforQMC,
    maxUEsinengNBDU,
    maxnoofProtectedResourcePatterns,
    maxnoNRcellsSpectrumSharingWithE-UTRA,
    maxnoofNrCellBands
FROM X2AP-Constants
    Criticality,
    ProcedureCode,
    ProtocolIE-ID,
    TriggeringMessage
FROM X2AP-CommonDataTypes
    ProtocolExtensionContainer{},
    ProtocolIE-Single-Container{},
    X2AP-PROTOCOL-EXTENSION,
    X2AP-PROTOCOL-IES
FROM X2AP-Containers;
-- A
```

```
ABSInformation ::= CHOICE {
    fdd
                       ABSInformationFDD,
    t.dd
                        ABSInformationTDD.
    abs-inactive
                        NULL,
ABSInformationFDD ::= SEQUENCE {
    abs-pattern-info
                                        BIT STRING (SIZE(40)),
    numberOfCellSpecificAntennaPorts
                                        ENUMERATED {one, two, four, ...},
    measurement-subset
                                        BIT STRING (SIZE(40)),
                                        ProtocolExtensionContainer { { ABSInformationFDD-ExtIEs} } OPTIONAL,
    iE-Extensions
ABSInformationFDD-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ABSInformationTDD ::= SEQUENCE {
    abs-pattern-info
                                        BIT STRING (SIZE(1..70, ...)),
                                        ENUMERATED {one, two, four, ...},
    numberOfCellSpecificAntennaPorts
                                        BIT STRING (SIZE(1..70, ...)),
    measurement-subset
                                        ProtocolExtensionContainer { { ABSInformationTDD-ExtIEs} } OPTIONAL,
    iE-Extensions
ABSInformationTDD-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ABS-Status ::= SEQUENCE {
    dL-ABS-status
                                                DL-ABS-status,
    usableABSInformation
                                                UsableABSInformation,
                                                ProtocolExtensionContainer { {ABS-Status-ExtIEs} } OPTIONAL,
   iE-Extensions
ABS-Status-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ActivationID ::= INTEGER (0..255)
AdditionalSpecialSubframe-Info ::=
                                        SEOUENCE
    additionalspecialSubframePatterns
                                            Additional Special Subframe Patterns,
    cyclicPrefixDL
                                            CyclicPrefixDL,
    cyclicPrefixUL
                                            CyclicPrefixUL,
    iE-Extensions
                                            ProtocolExtensionContainer { { AdditionalSpecialSubframe-Info-ExtIEs} } OPTIONAL,
AdditionalSpecialSubframe-Info-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
AdditionalSpecialSubframePatterns ::= ENUMERATED {
    ,0gaa
    ssp1,
    ssp2,
    ssp3,
    ssp4,
    ssp5,
    ssp6,
    ssp7,
    ssp8,
    ssp9,
    . . .
AdditionalSpecialSubframeExtension-Info ::=
                                                 SEQUENCE {
    additional special Subframe Patterns Extension Additional Special Subframe Patterns Extension,
    cyclicPrefixDL
                                                 CyclicPrefixDL,
    cyclicPrefixUL
                                                 CyclicPrefixUL,
    iE-Extensions
                                                 ProtocolExtensionContainer { { AdditionalSpecialSubframeExtension-Info-ExtIEs} } OPTIONAL,
    . . .
AdditionalSpecialSubframeExtension-Info-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
AdditionalSpecialSubframePatternsExtension ::= ENUMERATED
    ssp10,
    . . .
AerialUEsubscriptionInformation ::= ENUMERATED {
    allowed,
    not-allowed,
AllocationAndRetentionPriority ::= SEQUENCE
                                 PriorityLevel,
    priorityLevel
    pre-emptionCapability
                                 Pre-emptionCapability,
    pre-emptionVulnerability
                                 Pre-emptionVulnerability,
    iE-Extensions
                                 ProtocolExtensionContainer { {AllocationAndRetentionPriority-ExtIEs} } OPTIONAL,
    . . .
AllocationAndRetentionPriority-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
AreaScopeOfMDT ::= CHOICE {
    cellBased
                                 CellBasedMDT,
    tABased
                                 TABasedMDT,
```

```
pLMNWide
                                NULL,
    t.AIBased
                                TAIBasedMDT
AreaScopeOfOMC ::= CHOICE {
    cellBased
                                CellBasedQMC,
    tABased
                                TABasedOMC,
    tAIBased
                                TAIBasedQMC,
                                PLMNAreaBasedQMC,
    pLMNAreaBased
AS-SecurityInformation ::= SEQUENCE {
    key-eNodeB-star
                        Key-eNodeB-Star,
    nextHopChainingCount
                                    NextHopChainingCount,
                                        ProtocolExtensionContainer { { AS-SecurityInformation-ExtIEs} } OPTIONAL,
   iE-Extensions
AS-SecurityInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- B
BandwidthReducedSI::= ENUMERATED {
    scheduled,
    . . .
BearerType ::= ENUMERATED {
    non-IP,
    . . .
BenefitMetric ::= INTEGER (-101..100, ...)
BitRate ::= INTEGER (0..1000000000)
BroadcastPLMNs-Item ::= SEQUENCE (SIZE(1..maxnoofBPLMNs)) OF PLMN-Identity
-- C
CapacityValue ::= INTEGER (0..100)
Cause ::= CHOICE {
   radioNetwork
                        CauseRadioNetwork,
    transport
                        CauseTransport,
    protocol
                        CauseProtocol,
    misc
                        CauseMisc,
```

```
CauseMisc ::= ENUMERATED {
    control-processing-overload,
    hardware-failure,
    om-intervention.
    not-enough-user-plane-processing-resources,
    unspecified,
CauseProtocol ::= ENUMERATED {
    transfer-syntax-error,
    abstract-syntax-error-reject,
    abstract-syntax-error-ignore-and-notify,
    message-not-compatible-with-receiver-state,
    semantic-error,
    unspecified,
    abstract-syntax-error-falsely-constructed-message,
CauseRadioNetwork ::= ENUMERATED {
    handover-desirable-for-radio-reasons,
    time-critical-handover,
    resource-optimisation-handover,
    reduce-load-in-serving-cell,
    partial-handover,
    unknown-new-eNB-UE-X2AP-ID,
    unknown-old-eNB-UE-X2AP-ID,
    unknown-pair-of-UE-X2AP-ID,
    ho-target-not-allowed,
    tx2relocoverall-expiry,
    trelocprep-expiry,
    cell-not-available,
    no-radio-resources-available-in-target-cell,
    invalid-MME-GroupID,
    unknown-MME-Code,
    encryption-and-or-integrity-protection-algorithms-not-supported,
    reportCharacteristicsEmpty,
    noReportPeriodicity,
    existingMeasurementID,
    unknown-eNB-Measurement-ID,
    measurement-temporarily-not-available,
    unspecified,
    . . . ,
    load-balancing,
    handover-optimisation,
    value-out-of-allowed-range,
    multiple-E-RAB-ID-instances,
    switch-off-ongoing,
    not-supported-QCI-value,
    measurement-not-supported-for-the-object,
    tDCoverall-expiry,
    tDCprep-expiry,
```

```
action-desirable-for-radio-reasons,
    reduce-load.
    resource-optimisation,
    time-critical-action,
    target-not-allowed,
    no-radio-resources-available,
    invalid-OoS-combination,
    encryption-algorithms-not-aupported,
    procedure-cancelled,
    rRM-purpose,
    improve-user-bit-rate,
    user-inactivity,
    radio-connection-with-UE-lost,
    failure-in-the-radio-interface-procedure,
    bearer-option-not-supported,
    mCG-Mobility,
    sCG-Mobility,
    count-reaches-max-value,
    unknown-old-en-qNB-UE-X2AP-ID,
    pDCP-Overload
CauseTransport ::= ENUMERATED {
    transport-resource-unavailable,
    unspecified,
    . . .
CellBasedMDT::= SEQUENCE {
    cellIdListforMDT
                       CellIdListforMDT,
    iE-Extensions
                        ProtocolExtensionContainer { {CellBasedMDT-ExtIEs} } OPTIONAL,
    . . .
CellBasedMDT-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CellBasedOMC::= SEQUENCE {
    cellIdListforQMC
                            CellIdListforQMC,
                        ProtocolExtensionContainer { {CellBasedQMC-ExtIEs} } OPTIONAL,
    iE-Extensions
CellBasedQMC-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CellCapacityClassValue ::= INTEGER (1..100, ...)
CellDeploymentStatusIndicator ::= ENUMERATED {pre-change-notification, ...}
CellIdListforMDT ::= SEQUENCE (SIZE(1..maxnoofCellIDforMDT)) OF ECGI
```

```
CellIdListforQMC ::= SEQUENCE (SIZE(1..maxnoofCellIDforQMC)) OF ECGI
CellReplacingInfo ::= SEQUENCE {
                                    ReplacingCellsList,
    replacingCellsList
   iE-Extensions
                                    ProtocolExtensionContainer { { CellReplacingInfo-ExtIEs}} OPTIONAL,
CellReplacingInfo-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CellReportingIndicator ::= ENUMERATED {stop-request, ... }
Cell-Size ::= ENUMERATED {verysmall, small, medium, large, ... }
CellType ::= SEOUENCE {
    cell-Size
                                    Cell-Size.
   iE-Extensions
                                    ProtocolExtensionContainer { { CellType-ExtIEs}}
                                                                                        OPTIONAL,
CellType-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
COMPHypothesisSet ::= SEOUENCE (SIZE(1..maxnoofCoMPCells)) OF CoMPHypothesisSetItem
CompHypothesisSetItem ::= SEQUENCE {
    coMPCellID
    coMPHypothesis
                                    BIT STRING (SIZE(6..4400, ...)),
                                    ProtocolExtensionContainer { { COMPHypothesisSetItem-ExtIEs} } OPTIONAL,
   iE-Extensions
COMPHypothesisSetItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CoMPInformation ::= SEQUENCE {
    coMPInformationItem
                                            CoMPInformationItem,
    coMPInformationStartTime
                                            CoMPInformationStartTime,
   iE-Extensions
                                            ProtocolExtensionContainer { { CoMPInformation-ExtIEs} } OPTIONAL,
CoMPInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CoMPInformationItem ::= SEQUENCE (SIZE(1..maxnoofCoMPHypothesisSet)) OF
    SEQUENCE {
```

```
coMPHypothesisSet
                                            CoMPHypothesisSet,
       benefitMetric
                                            BenefitMetric,
       iE-Extensions
                                            ProtocolExtensionContainer { CoMPInformationItem-ExtIEs} } OPTIONAL,
CoMPInformationItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CoMPInformationStartTime ::= SEQUENCE (SIZE(0..1)) OF
    SEOUENCE ·
       startSFN
                                            INTEGER (0..1023, ...),
       startSubframeNumber
                                            INTEGER (0..9, ...),
       iE-Extensions
                                            ProtocolExtensionContainer { { COMPInformationStartTime-ExtIEs} } OPTIONAL,
CoMPInformationStartTime-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CompositeAvailableCapacity ::= SEQUENCE {
    cellCapacityClassValue
                                                    CellCapacityClassValue
                                                                                         OPTIONAL,
    capacityValue
                                                    CapacityValue,
    iE-Extensions
                                                     ProtocolExtensionContainer { { CompositeAvailableCapacity-ExtIEs} } OPTIONAL,
    . . .
CompositeAvailableCapacity-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
CompositeAvailableCapacityGroup ::= SEQUENCE {
    dL-CompositeAvailableCapacity
                                                    CompositeAvailableCapacity,
    uL-CompositeAvailableCapacity
                                                    CompositeAvailableCapacity,
    iE-Extensions
                                                     ProtocolExtensionContainer { { CompositeAvailableCapacityGroup-ExtIEs} } OPTIONAL,
CompositeAvailableCapacityGroup-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
Correlation-ID ::= OCTET STRING (SIZE (4))
COUNTvalue ::= SEQUENCE {
    pDCP-SN
                            PDCP-SN,
   hFN
    iE-Extensions
                            ProtocolExtensionContainer { { COUNTvalue-ExtIEs} } OPTIONAL,
COUNTvalue-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
COUNTValueExtended ::= SEQUENCE {
   pDCP-SNExtended
                           PDCP-SNExtended,
   hFNModified
                           HFNModified,
   iE-Extensions
                           ProtocolExtensionContainer { { COUNTValueExtended-ExtIEs} } OPTIONAL,
COUNTValueExtended-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
COUNTvaluePDCP-SNlength18 ::= SEQUENCE {
    pDCP-SNlength18
                           PDCP-SNlength18,
   hFNforPDCP-SNlength18 HFNforPDCP-SNlength18,
    iE-Extensions
                           ProtocolExtensionContainer { { COUNTvaluePDCP-SNlength18-ExtIEs} } OPTIONAL,
    . . .
COUNTvaluePDCP-SNlength18-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CoverageModificationList ::= SEQUENCE (SIZE (1..maxCellineNB)) OF CoverageModification-Item
CoverageModification-Item ::= SEQUENCE {
    eCGI
                                    INTEGER (0..15, ...),
    coverageState
    cellDeploymentStatusIndicator CellDeploymentStatusIndicator
                                                                            OPTIONAL,
    cellReplacingInfo
                                   CellReplacingInfo
                                                                            OPTIONAL,
-- Included in case the Cell Deployment Status Indicator IE is present
CriticalityDiagnostics ::= SEQUENCE {
    procedureCode
                                    ProcedureCode
                                                                    OPTIONAL,
    triggeringMessage
                                   TriggeringMessage
                                                                    OPTIONAL,
    procedureCriticality
                                   Criticality
                                                                    OPTIONAL,
    iEsCriticalityDiagnostics
                                   CriticalityDiagnostics-IE-List OPTIONAL,
                                    ProtocolExtensionContainer { {CriticalityDiagnostics-ExtIEs} } OPTIONAL,
    iE-Extensions
CriticalityDiagnostics-ExtIES X2AP-PROTOCOL-EXTENSION ::= {
CriticalityDiagnostics-IE-List ::= SEQUENCE (SIZE (1..maxNrOfErrors)) OF
    SEQUENCE {
       iECriticality
                               Criticality,
       iE-ID
                               ProtocolIE-ID,
```

```
typeOfError
       iE-Extensions
                                ProtocolExtensionContainer { {CriticalityDiagnostics-IE-List-ExtIEs} } OPTIONAL,
CriticalityDiagnostics-IE-List-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CRNTI ::= BIT STRING (SIZE (16))
CSGMembershipStatus ::= ENUMERATED {
   member,
   not-member
CSG-Id ::= BIT STRING (SIZE (27))
CSIReportList ::= SEQUENCE (SIZE(1..maxUEReport)) OF
    SEQUENCE {
       uEID
                                        UEID,
       cSIReportPerCSIProcess
                                        CSIReportPerCSIProcess,
       iE-Extensions
                                        ProtocolExtensionContainer { { CSIReportList-ExtIEs} } OPTIONAL,
CSIReportList-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CSIReportPerCSIProcess ::= SEOUENCE (SIZE(1.. maxCSIProcess)) OF
    SEQUENCE {
       cSIProcessConfigurationIndex
                                       INTEGER (1..7, ...),
       cSIReportPerCSIProcessItem
                                        CSIReportPerCSIProcessItem,
                                        ProtocolExtensionContainer { { CSIReportPerCSIProcess-ExtIEs} } OPTIONAL,
       iE-Extensions
CSIReportPerCSIProcess-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
CSIReportPerCSIProcessItem ::= SEQUENCE (SIZE(1.. maxCSIReport)) OF
    SEQUENCE {
       rI
                                        INTEGER (1..8, ...),
                                        WidebandCQI,
       widebandCQI
       subbandSize
                                        SubbandSize,
       subbandCQIList
                                        SubbandCQIList OPTIONAL,
       iE-Extensions
                                        ProtocolExtensionContainer { { CSIReportPerCSIProcessItem-ExtIEs} } OPTIONAL,
CSIReportPerCSIProcessItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
CyclicPrefixDL ::= ENUMERATED {
   normal,
    extended,
CyclicPrefixUL ::= ENUMERATED {
    normal,
    extended,
    . . .
-- D
DataTrafficResources ::= BIT STRING (SIZE(12..8800))
DataTrafficResourceIndication ::= SEQUENCE {
    activationSFN
                                    INTEGER (0..1023),
    sharedResourceType
                                    SharedResourceType,
    reservedSubframePattern
                                    ReservedSubframePattern OPTIONAL,
DeactivationIndication: = ENUMERATED {
    deactivated,
DeliveryStatus ::= SEQUENCE {
    highestSuccessDeliveredPDCPSN
                                        INTEGER (0..4095),
                        ProtocolExtensionContainer { {DeliveryStatus-ExtIEs} } OPTIONAL,
DeliveryStatus-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
DL-ABS-status::= INTEGER (0..100)
DL-Forwarding ::= ENUMERATED {
    dL-forwardingProposed,
DL-GBR-PRB-usage::= INTEGER (0..100)
DL-non-GBR-PRB-usage::= INTEGER (0..100)
```

```
DLResourceBitmapULandDLSharing ::= DataTrafficResources
DLResourcesULandDLSharing ::= CHOICE {
unchanged
                    NULL,
    changed
                        DLResourceBitmapULandDLSharing,
    . . .
DL-scheduling-PDCCH-CCE-usage::= INTEGER (0..100)
DL-Total-PRB-usage::= INTEGER (0..100)
DRB-ID ::= INTEGER (1..32)
DynamicDLTransmissionInformation ::= CHOICE {
   naics-active
                            DynamicNAICSInformation,
                            NULL,
   naics-inactive
DynamicNAICSInformation ::= SEQUENCE {
    transmissionModes
                                        BIT STRING (SIZE(8))
                                                                                                         OPTIONAL,
   pB-information
                                        INTEGER(0..3)
                                                                                                         OPTIONAL,
   pA-list
                                        SEQUENCE (SIZE(0..maxnoofPA)) OF PA-Values,
                                        ProtocolExtensionContainer { {DynamicNAICSInformation-ExtIEs} } OPTIONAL,
   iE-Extensions
DynamicNAICSInformation-ExtlEs X2AP-PROTOCOL-EXTENSION ::= {
EARFCN ::= INTEGER (0..maxEARFCN)
EARFCNExtension ::= INTEGER(maxEARFCNPlusOne..newmaxEARFCN, ...)
ECGI ::= SEQUENCE {
   pLMN-Identity
                                PLMN-Identity,
    eUTRANcellIdentifier
                                EUTRANCellIdentifier,
                                ProtocolExtensionContainer { {ECGI-ExtIEs} } OPTIONAL,
    iE-Extensions
ECGI-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
EnhancedRNTP ::= SEQUENCE {
    enhancedRNTPBitmap
                                BIT STRING (SIZE(12..8800, ...)),
    rNTP-High-Power-Threshold
                                RNTP-Threshold,
    enhancedRNTPStartTime
                                EnhancedRNTPStartTime OPTIONAL,
    iE-Extensions
                                ProtocolExtensionContainer { { EnhancedRNTP-ExtIEs} } OPTIONAL,
```

```
EnhancedRNTP-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
EnhancedRNTPStartTime ::= SEQUENCE {
       startSFN
                   INTEGER (0..1023, ...),
       startSubframeNumber INTEGER (0..9, ...),
       iE-Extensions
                      ProtocolExtensionContainer { { EnhancedRNTPStartTime-ExtIEs} } OPTIONAL,
       . . .
EnhancedRNTPStartTime-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ENB-ID ::= CHOICE {
   macro-eNB-ID BIT STRING (SIZE (20)),
   home-eNB-ID BIT STRING (SIZE (28)),
   short-Macro-eNB-ID
                          BIT STRING (SIZE(18)),
   long-Macro-eNB-ID
                         BIT STRING (SIZE(21))
EncryptionAlgorithms ::= BIT STRING (SIZE (16, ...))
EN-DC-ResourceConfiguration ::= SEQUENCE {
               ENUMERATED {present, not-present, ...},
   pDCPatSgNB
   mCGresources ENUMERATED {present, not-present, ...},
   sCGresources ENUMERATED {present, not-present, ...},
   iE-Extensions
                                  ProtocolExtensionContainer { { EN-DC-ResourceConfigurationExtIEs} } OPTIONAL,
EN-DC-ResourceConfigurationExtIEs X2AP-PROTOCOL-EXTENSION ::= {
EPLMNs ::= SEQUENCE (SIZE(1..maxnoofEPLMNs)) OF PLMN-Identity
ERABActivityNotifyItemList ::= SEQUENCE (SIZE (1..maxnoofBearers)) OF ERABActivityNotifyItem
ERABActivityNotifyItem ::= SEQUENCE {
   e-RAB-ID
                                  E-RAB-ID,
   activityReport
                                  UserPlaneTrafficActivityReport,
   iE-Extensions
                                  ProtocolExtensionContainer { {ERABActivityNotifyItem-ExtIEs} } OPTIONAL,
ERABActivityNotifyItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
E-RAB-ID ::= INTEGER (0..15, ...)
E-RAB-Level-OoS-Parameters ::= SEQUENCE {
   allocationAndRetentionPriority AllocationAndRetentionPriority,
   qbr0osInformation
                                  GBR-OosInformation
                                                                                                OPTIONAL,
   iE-Extensions
                                  ProtocolExtensionContainer { { E-RAB-Level-QoS-Parameters-ExtIEs} } OPTIONAL,
E-RAB-Level-QoS-Parameters-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- Extended for introduction of downlink and uplink packet loss rate for enhanced Voice performance -
     ID id-DownlinkPacketLossRate
                                     CRITICALITY ignore EXTENSION Packet-LossRate
                                                                                            PRESENCE optional } |
    { ID id-UplinkPacketLossRate
                                          CRITICALITY ignore EXTENSION Packet-LossRate
                                                                                            PRESENCE optional },
    . . .
E-RAB-List ::= SEQUENCE (SIZE(1.. maxnoofBearers)) OF ProtocolIE-Single-Container { {E-RAB-ItemIEs} }
E-RAB-ItemIEs X2AP-PROTOCOL-IES ::= {
   TYPE E-RAB-Item
                                                                 PRESENCE mandatory },
   . . .
E-RAB-Item ::= SEQUENCE {
   e-RAB-ID
                          E-RAB-ID,
   cause
                              ProtocolExtensionContainer { {E-RAB-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
E-RAB-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
E-RABUsageReportList ::= SEQUENCE (SIZE(1..maxnooftimeperiods)) OF ProtocolIE-Single-Container { {E-RABUsageReport-ItemIEs} }
E-RABUsageReport-ItemIEs X2AP-PROTOCOL-IES ::= {
    TYPE E-RABUsageReport-Item PRESENCE mandatory },
   . . .
E-RABUsageReport-Item ::= SEQUENCE {
   startTimeStamp
                        OCTET STRING (SIZE(4)),
   endTimeStamp
                              OCTET STRING (SIZE(4)),
                              INTEGER (0..18446744073709551615),
INTEGER (0..18446744073709551615),
   usageCountUL
   usageCountDL
   iE-Extensions
                              ProtocolExtensionContainer { { E-RABUsageReport-Item-ExtIEs} } OPTIONAL,
E-RABUsageReport-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
EUTRA-Mode-Info ::= CHOICE {
           FDD-Info,
    tDD
           TDD-Info,
EUTRANCellIdentifier ::= BIT STRING (SIZE (28))
EUTRANTraceID
                    ::= OCTET STRING (SIZE (8))
EventType ::= ENUMERATED{
    change-of-serving-cell,
ExpectedUEBehaviour ::= SEOUENCE {
                           ExpectedUEActivityBehaviour OPTIONAL,
    expectedActivity
    expectedH0Interval
                           ExpectedHOInterval
                                                        OPTIONAL,
                            ProtocolExtensionContainer { { ExpectedUEBehaviour-ExtIEs} } OPTIONAL,
   iE-Extensions
ExpectedUEBehaviour-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ExpectedUEActivityBehaviour ::= SEQUENCE {
    expectedActivityPeriod
                                            ExpectedActivityPeriod
                                                                                     OPTIONAL,
    expectedIdlePeriod
                                            ExpectedIdlePeriod
                                                                                    OPTIONAL,
    sourceofUEActivityBehaviourInformation SourceOfUEActivityBehaviourInformation OPTIONAL,
                        ProtocolExtensionContainer { { ExpectedUEActivityBehaviour-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
ExpectedUEActivityBehaviour-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ExpectedActivityPeriod ::= INTEGER (1..30|40|50|60|80|100|120|150|180|181,...)
ExpectedIdlePeriod ::= INTEGER (1..30|40|50|60|80|100|120|150|180|181,...)
ExpectedHOInterval ::= ENUMERATED {
    sec15, sec30, sec60, sec90, sec120, sec180, long-time,
ExtendedULInterferenceOverloadInfo ::= SEQUENCE {
    associatedSubframes
                                                BIT STRING (SIZE (5)),
    extended-ul-InterferenceOverloadIndication UL-InterferenceOverloadIndication,
    iE-Extensions
                                                ProtocolExtensionContainer { { ExtendedULInterferenceOverloadInfo-ExtIEs} } OPTIONAL,
```

```
ExtendedULInterferenceOverloadInfo-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ExtendedBitRate ::= INTEGER (1000000001..400000000000,...)
-- F
FDD-Info ::= SEQUENCE {
    uL-EARFCN
                                    EARFCN,
    dL-EARFCN
                                    EARFCN.
    uL-Transmission-Bandwidth
                                    Transmission-Bandwidth,
    dL-Transmission-Bandwidth
                                    Transmission-Bandwidth,
                                ProtocolExtensionContainer { {FDD-Info-ExtIEs} } OPTIONAL,
   iE-Extensions
FDD-Info-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-UL-EARFCNExtension
                                                    CRITICALITY reject EXTENSION EARFCNExtension
                                                                                                                          PRESENCE optional }
     ID id-DL-EARFCNExtension
                                                    CRITICALITY reject EXTENSION EARFCNExtension
                                                                                                                          PRESENCE optional }
                                                                                                                          PRESENCE optional }
      ID id-OffsetOfNbiotChannelNumberToDL-EARFCN
                                                    CRITICALITY reject EXTENSION OffsetOfNbiotChannelNumberToEARFCN
      ID id-OffsetOfNbiotChannelNumberToUL-EARFCN
                                                                                                                          PRESENCE optional
                                                    CRITICALITY reject EXTENSION OffsetOfNbiotChannelNumberToEARFCN
      ID id-NRS-NSSS-PowerOffset
                                                    CRITICALITY ignore EXTENSION NRS-NSSS-PowerOffset
                                                                                                                          PRESENCE optional |
    { ID id-NSSS-NumOccasionDifferentPrecoder
                                                    CRITICALITY ignore EXTENSION NSSS-NumOccasionDifferentPrecoder
                                                                                                                          PRESENCE optional },
ForbiddenInterRATs ::= ENUMERATED {
    all,
    geran,
    utran,
    cdma2000,
    geranandutran,
    cdma2000andutran
ForbiddenTAs ::= SEQUENCE (SIZE(1.. maxnoofEPLMNsPlusOne)) OF ForbiddenTAs-Item
ForbiddenTAs-Item ::= SEQUENCE {
   pLMN-Identity
                       PLMN-Identity,
    forbiddenTACs
                        ForbiddenTACs,
    iE-Extensions
                        ProtocolExtensionContainer { {ForbiddenTAs-Item-ExtIEs} } OPTIONAL,
ForbiddenTAs-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
ForbiddenTACs ::= SEQUENCE (SIZE(1..maxnoofForbTACs)) OF TAC
ForbiddenLAs ::= SEOUENCE (SIZE(1..maxnoofEPLMNsPlusOne)) OF ForbiddenLAs-Item
ForbiddenLAs-Item ::= SEQUENCE {
                        PLMN-Identity,
    pLMN-Identity
    forbiddenLACs
                        ForbiddenLACs,
                        ProtocolExtensionContainer { {ForbiddenLAs-Item-ExtIEs} } OPTIONAL,
    iE-Extensions
ForbiddenLAs-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ForbiddenLACs ::= SEOUENCE (SIZE(1..maxnoofForbLACs)) OF LAC
Fourframes ::= BIT STRING (SIZE (24))
FregBandIndicator ::= INTEGER (1..256, ...)
FreqBandIndicatorPriority ::= ENUMERATED {
   not-broadcasted,
    broadcasted,
FregBandNrItem ::= SEQUENCE {
    freqBandIndicatorNr
                                    INTEGER (1..1024,...),
    supportedSULBandList
                            SEQUENCE (SIZE(0..maxnoofNrCellBands)) OF SupportedSULFreqBandItem,
    iE-Extensions
                                ProtocolExtensionContainer { {FreqBandNrItem-ExtIEs} } OPTIONAL,
    . . .
FreqBandNrItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- G
GBR-OosInformation ::= SEQUENCE {
    e-RAB-MaximumBitrateDL
                                    BitRate,
    e-RAB-MaximumBitrateUL
                                    BitRate,
    e-RAB-GuaranteedBitrateDL
                                    BitRate,
    e-RAB-GuaranteedBitrateUL
                                    BitRate,
   iE-Extensions
                                    ProtocolExtensionContainer { GBR-QosInformation-ExtIEs} } OPTIONAL,
GBR-QosInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- Extension for maximum bitrate > 10Gbps --
     ID id-extended-e-RAB-MaximumBitrateDL
                                                CRITICALITY ignore EXTENSION ExtendedBitRate
                                                                                                 PRESENCE optional }
    { ID id-extended-e-RAB-MaximumBitrateUL
                                                CRITICALITY ignore EXTENSION ExtendedBitRate
                                                                                                 PRESENCE optional }
```

```
ID id-extended-e-RAB-GuaranteedBitrateDL CRITICALITY ignore EXTENSION ExtendedBitRate
                                                                                                 PRESENCE optional } |
    { ID id-extended-e-RAB-GuaranteedBitrateUL CRITICALITY ignore EXTENSION ExtendedBitRate
                                                                                                PRESENCE optional },
    . . .
GlobalENB-ID ::= SEQUENCE {
    pLMN-Identity
                            PLMN-Identity,
    eNB-ID
                            ENB-ID,
    iE-Extensions
                            ProtocolExtensionContainer { {GlobalENB-ID-ExtIEs} } OPTIONAL,
GlobalENB-ID-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
GlobalGNB-ID ::= SEQUENCE {
    pLMN-Identity
                            PLMN-Identity,
    qNB-ID
                            GNB-ID,
                            ProtocolExtensionContainer { GlobalGNB-ID-ExtIEs} } OPTIONAL,
    iE-Extensions
GlobalGNB-ID-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
GTPtunnelEndpoint ::= SEOUENCE {
                                    TransportLayerAddress,
    transportLayerAddress
    qTP-TEID
                                    GTP-TEI,
                                    ProtocolExtensionContainer { GTPtunnelEndpoint-ExtIEs} } OPTIONAL,
    iE-Extensions
GTPtunnelEndpoint-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
GTP-TEI
                        ::= OCTET STRING (SIZE (4))
GUGroupIDList
                    ::= SEQUENCE (SIZE (1..maxPools)) OF GU-Group-ID
GU-Group-ID
                    ::= SEOUENCE {
    pLMN-Identity
                        PLMN-Identity,
   mME-Group-ID
                        MME-Group-ID,
   iE-Extensions
                        ProtocolExtensionContainer { {GU-Group-ID-ExtIEs} } OPTIONAL,
GU-Group-ID-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
GUMMEI
                ::= SEQUENCE {
    qU-Group-ID
                    GU-Group-ID,
    mME-Code
                        MME-Code,
                                    ProtocolExtensionContainer { {GUMMEI-ExtIEs} } OPTIONAL,
    iE-Extensions
GUMMEI-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
GNB-ID ::= CHOICE {
    gNB-ID BIT STRING (SIZE (22..32)),
HandoverReportType ::= ENUMERATED {
    hoTooEarly,
    hoToWrongCell,
    interRATpingpong
HandoverRestrictionList ::= SEQUENCE {
    servingPLMN
                                PLMN-Identity,
    equivalentPLMNs
                                EPLMNs
                                                         OPTIONAL,
    forbiddenTAs
                                ForbiddenTAs
                                                         OPTIONAL,
    forbiddenLAs
                                ForbiddenLAs
                                                         OPTIONAL,
    forbiddenInterRATs
                                ForbiddenInterRATs
                                                         OPTIONAL,
                                ProtocolExtensionContainer { {HandoverRestrictionList-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
HandoverRestrictionList-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    { ID id-NRrestriction
                                CRITICALITY ignore EXTENSION NRrestriction PRESENCE optional },
    . . .
HFN ::= INTEGER (0..1048575)
HFNModified ::= INTEGER (0..131071)
HFNforPDCP-SNlength18 ::= INTEGER (0..16383)
HWLoadIndicator ::= SEQUENCE {
    dLHWLoadIndicator
                                LoadIndicator,
    uLHWLoadIndicator
                                LoadIndicator,
    iE-Extensions
                                ProtocolExtensionContainer { { HWLoadIndicator-ExtIEs} } OPTIONAL,
```

```
HWLoadIndicator-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- I
IntegrityProtectionAlgorithms ::= BIT STRING (SIZE (16, ...))
InterfacesToTrace ::= BIT STRING (SIZE (8))
InvokeIndication ::= ENUMERATED{
   abs-information,
   naics-information-start,
   naics-information-stop
-- J
Key-eNodeB-Star ::= BIT STRING (SIZE(256))
-- L
                  ::= OCTET STRING (SIZE (2)) --(EXCEPT ('0000'H|'FFFE'H))
LAC
LastVisitedCell-Item ::= CHOICE {
   e-UTRAN-Cell
                                LastVisitedEUTRANCellInformation,
   uTRAN-Cell
                                LastVisitedUTRANCellInformation,
   gERAN-Cell
                                LastVisitedGERANCellInformation,
   . . .
LastVisitedEUTRANCellInformation ::= SEQUENCE {
   global-Cell-ID
                                ECGI,
   cellType
                                CellType,
   time-UE-StayedInCell
                                Time-UE-StayedInCell,
   iE-Extensions
                                ProtocolExtensionContainer { { LastVisitedEUTRANCellInformation-ExtIEs} } OPTIONAL,
LastVisitedEUTRANCellInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- Extension for Rel-11 to support enhanced granularity for time UE stayed in cell --
     PRESENCE optional },
    { ID id-HO-cause
                                                  CRITICALITY ignore EXTENSION Cause
LastVisitedGERANCellInformation ::= CHOICE {
   undefined
                                NULL,
```

```
LastVisitedUTRANCellInformation ::= OCTET STRING
LHN-ID ::= OCTET STRING(SIZE (32..256))
Links-to-log ::= ENUMERATED {uplink, downlink, both-uplink-and-downlink, ...}
LoadIndicator ::= ENUMERATED {
   lowLoad,
    mediumLoad,
   highLoad,
    overLoad,
LocationReportingInformation ::= SEQUENCE {
    eventType
                    EventType,
    reportArea
                    ReportArea,
                        ProtocolExtensionContainer { {LocationReportingInformation-ExtIEs} } OPTIONAL,
    iE-Extensions
LocationReportingInformation-ExtlEs X2AP-PROTOCOL-EXTENSION ::={
M1PeriodicReporting ::= SEQUENCE {
    reportInterval
                                ReportIntervalMDT,
    reportAmount
                                ReportAmountMDT,
    iE-Extensions
                                ProtocolExtensionContainer { { MlPeriodicReporting-ExtIEs} } OPTIONAL,
    . . .
MlPeriodicReporting-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
MlReportingTrigger::= ENUMERATED{
    periodic,
    a2eventtriggered,
    a2eventtriggered-periodic
M1ThresholdEventA2 ::= SEQUENCE {
    measurementThreshold
                                MeasurementThresholdA2
    iE-Extensions
                                ProtocolExtensionContainer { { MlThresholdEventA2-ExtIEs} } OPTIONAL,
MlThresholdEventA2-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
M3Configuration ::= SEQUENCE
    m3period
                       M3period,
    iE-Extensions
                        ProtocolExtensionContainer { { M3Configuration-ExtIEs} } OPTIONAL,
M3Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
M3period ::= ENUMERATED {ms100, ms1000, ms10000, ... }
M4Configuration ::= SEQUENCE {
    m4period
                       M4period,
    m4-links-to-log
                       Links-to-log,
                       ProtocolExtensionContainer { { M4Configuration-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
M4Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
M4period ::= ENUMERATED {ms1024, ms2048, ms5120, ms10240, min1, ... }
M5Configuration ::= SEQUENCE
    m5period
                       M5period,
    m5-links-to-log
                       Links-to-log,
    iE-Extensions
                        ProtocolExtensionContainer { { M5Configuration-ExtIEs} } OPTIONAL,
    . . .
M5Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
M5period ::= ENUMERATED {ms1024, ms2048, ms5120, ms10240, min1, ... }
M6Configuration ::= SEQUENCE {
    m6report-interval M6report-interval,
    m6delay-threshold M6delay-threshold OPTIONAL,
-- This IE shall be present if the M6 Links to log IE is set to "uplink" or to "both-uplink-and-downlink" --
    m6-links-to-log Links-to-log,
    iE-Extensions
                        ProtocolExtensionContainer { { M6Configuration-ExtIEs} } OPTIONAL,
M6Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
M6report-interval ::= ENUMERATED { ms1024, ms2048, ms5120, ms10240, ... }
M6delay-threshold ::= ENUMERATED { ms30, ms40, ms50, ms60, ms70, ms80, ms90, ms100, ms150, ms300, ms500, ms750, ... }
M7Configuration ::= SEOUENCE {
    m7period
                       M7period,
   m7-links-to-log
                       Links-to-log,
    iE-Extensions
                        ProtocolExtensionContainer { { M7Configuration-ExtIEs} } OPTIONAL,
M7Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
M7period ::= INTEGER(1..60, ...)
MakeBeforeBreakIndicator::= ENUMERATED {true, ...}
ManagementBasedMDTallowed ::= ENUMERATED {allowed, ...}
Masked-IMEISV ::= BIT STRING (SIZE (64))
MDT-Activation
                    ::= ENUMERATED {
    immediate-MDT-only,
    immediate-MDT-and-Trace,
MDT-Configuration ::= SEQUENCE {
    mdt-Activation
                                MDT-Activation,
    areaScopeOfMDT
                                AreaScopeOfMDT,
    measurementsToActivate
                                MeasurementsToActivate,
    mlreportingTrigger
                                MlReportingTrigger,
    m1thresholdeventA2
                                M1ThresholdEventA2
                                                            OPTIONAL,
-- Included in case of event-triggered, or event-triggered periodic reporting for measurement M1
    mlperiodicReporting
                                MlPeriodicReporting
                                                            OPTIONAL,
-- Included in case of periodic, or event-triggered periodic reporting for measurement M1
                                ProtocolExtensionContainer { { MDT-Configuration-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
MDT-Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    {ID id-M3Configuration
                                        CRITICALITY ignore EXTENSION M3Configuration
                                                                                            PRESENCE conditional}
    {ID id-M4Configuration
                                        CRITICALITY ignore EXTENSION M4Configuration
                                                                                            PRESENCE conditional}
    {ID id-M5Configuration
                                        CRITICALITY ignore EXTENSION M5Configuration
                                                                                            PRESENCE conditional}
    ID id-MDT-Location-Info
                                        CRITICALITY ignore EXTENSION MDT-Location-Info
                                                                                            PRESENCE optional } |
    ID id-SignallingBasedMDTPLMNList CRITICALITY ignore EXTENSION MDTPLMNList
                                                                                            PRESENCE optional }
    {ID id-M6Configuration
                                        CRITICALITY ignore EXTENSION M6Configuration
                                                                                            PRESENCE conditional }
    ID id-M7Configuration
                                        CRITICALITY ignore EXTENSION M7Configuration
                                                                                            PRESENCE conditional },
MDTPLMNList ::= SEQUENCE (SIZE(1..maxnoofMDTPLMNs)) OF PLMN-Identity
```

```
MDT-Location-Info ::= BIT STRING (SIZE (8))
Measurement-ID ::= INTEGER (1..4095, ...)
MeasurementsToActivate::= BIT STRING (SIZE (8))
MeasurementThresholdA2 ::= CHOICE {
   threshold-RSRP
                             Threshold-RSRP,
                             Threshold-RSRQ,
   threshold-RSRO
MeNBResourceCoordinationInformation ::= SEQUENCE {
   eUTRA-Cell-ID
   uLCoordinationInformation
                                BIT STRING (SIZE(6..4400, ...)),
                                BIT STRING (SIZE(6..4400, ...))
   dLCoordinationInformation
                                                                 OPTIONAL,
   iE-Extensions
                                OPTIONAL,
   . . .
MenbresourceCoordinationInformationExtlEs X2AP-PROTOCOL-EXTENSION ::= {
MeNBtoSeNBContainer ::= OCTET STRING
MME-Group-ID
              ::= OCTET STRING (SIZE (2))
MME-Code
              ::= OCTET STRING (SIZE (1))
MBMS-Service-Area-Identity-List ::= SEQUENCE (SIZE(1.. maxnoofMBMSServiceAreaIdentities)) OF MBMS-Service-Area-Identity
MBMS-Service-Area-Identity ::= OCTET STRING (SIZE (2))
MBSFN-Subframe-Infolist::= SEQUENCE (SIZE(1.. maxnoofMBSFN)) OF MBSFN-Subframe-Info
MBSFN-Subframe-Info ::= SEQUENCE {
   radioframeAllocationPeriod
                                RadioframeAllocationPeriod,
   radioframeAllocationOffset
                                RadioframeAllocationOffset,
   subframeAllocation
                                 SubframeAllocation,
   iE-Extensions
                                 OPTIONAL,
MBSFN-Subframe-Info-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
MobilityParametersModificationRange ::= SEQUENCE {
   handoverTriggerChangeLowerLimit
                                    INTEGER (-20..20),
   handoverTriggerChangeUpperLimit
                                    INTEGER (-20..20),
```

```
MobilityParametersInformation ::= SEQUENCE {
    handoverTriggerChange
                                    INTEGER (-20..20),
MultibandInfoList ::= SEQUENCE (SIZE(1..maxnoofBands)) OF BandInfo
BandInfo ::= SEQUENCE {
    freqBandIndicator
                            FreqBandIndicator,
                            ProtocolExtensionContainer { { BandInfo-ExtIEs } } OPTIONAL,
    iE-Extensions
BandInfo-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
MeNBtoSgNBContainer ::= OCTET STRING
SplitSRBs ::= ENUMERATED {srb1, srb2, srb1and2, ...}
SplitSRB ::= SEQUENCE {
   rrcContainer
                                RRCContainer
                                                        OPTIONAL,
    srbType
                                SRBType,
                                                        OPTIONAL,
    deliveryStatus
                                DeliveryStatus
    iE-Extensions
                                ProtocolExtensionContainer { {SplitSRB-ExtIEs} } OPTIONAL,
SplitSRB-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UENRMeasurement ::= SEQUENCE {
    uENRMeasurements
                                RRCContainer,
                            ProtocolExtensionContainer { (UENRMeasurement-ExtIEs) } OPTIONAL,
    iE-Extensions
UENRMeasurement-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- N
Neighbour-Information ::= SEQUENCE (SIZE (0..maxnoofNeighbours)) OF SEQUENCE {
    eCGI
    pCI
                                PCI,
    eARFCN
                                EARFCN,
    iE-Extensions
                                ProtocolExtensionContainer { {Neighbour-Information-ExtIEs} } OPTIONAL,
```

```
Neighbour-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-NeighbourTAC CRITICALITY ignore EXTENSION TAC
                                                                               PRESENCE optional |
     ID id-eARFCNExtension
                               CRITICALITY reject EXTENSION EARFCNExtension PRESENCE optional },
    . . .
NextHopChainingCount ::= INTEGER (0..7)
Number-of-Antennaports ::= ENUMERATED {
       an1,
       an2,
        an4,
NRFregInfo ::= SEQUENCE{
    nRARFCN
             INTEGER (0.. 3279165),
    nrarfcn-sul integer (0.. 3279165)
                                               OPTIONAL,
    freqBandListNr SEQUENCE (SIZE(1..maxnoofNrCellBands)) OF FreqBandNrItem,
    sULInformation SULInformation
                                       OPTIONAL,
    iE-Extensions ProtocolExtensionContainer { {NRFreqInfo-ExtIEs} } OPTIONAL,
    . . .
NRFregInfo-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NRCellIdentifier ::= BIT STRING (SIZE (36))
NRCGI ::= SEQUENCE {
   pLMN-Identity
                               PLMN-Identity,
   nRcellIdentifier
                                   NRCellIdentifier,
                               ProtocolExtensionContainer { {NRCGI-ExtIEs} } OPTIONAL,
   iE-Extensions
NRCGI-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NRPCI ::= INTEGER (0..1007)
NRrestriction ::= ENUMERATED {
    nRrestricted,
NRencryptionAlgorithms ::= BIT STRING (SIZE (16,...))
NRintegrityProtectionAlgorithms ::= BIT STRING (SIZE (16,...))
NR-TxBW ::= SEQUENCE {
```

```
nRSCS NRSCS,
    nRNRB NRNRB,
    iE-Extensions
                                ProtocolExtensionContainer { { NR-TxbW-ExtIEs} } OPTIONAL,
NR-TxBW-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
NRNRB ::= ENUMERATED { nrb11, nrb18, nrb24, nrb25, nrb31, nrb32, nrb38, nrb51, nrb52, nrb65, nrb66, nrb78, nrb79, nrb93, nrb106, nrb107, nrb121,
nrb132, nrb133, nrb135, nrb160, nrb162, nrb189, nrb216, nrb217, nrb245, nrb264, nrb270, nrb273, ...}
NRSCS ::= ENUMERATED { scs15, scs30, scs60, scs120, ...}
NRS-NSSS-PowerOffset ::= ENUMERATED { minusThree, zero, three, ...}
FiveGS-TAC ::= OCTET STRING (SIZE (3))
NRUESecurityCapabilities ::= SEQUENCE {
    nRencryptionAlgorithms
                                        NRencryptionAlgorithms,
    nRintegrityProtectionAlgorithms
                                        NRintegrityProtectionAlgorithms,
                                        ProtocolExtensionContainer { { NRUESecurityCapabilities-ExtIEs} } OPTIONAL,
    iE-Extensions
NRUESecurityCapabilities-ExtIES X2AP-PROTOCOL-EXTENSION ::= {
NSSS-NumOccasionDifferentPrecoder ::= ENUMERATED { two, four, eight, ...}
-- O
OffsetOfNbiotChannelNumberToEARFCN ::= ENUMERATED {
        minusTen,
       minusNine,
        minusEight,
        minusSeven,
        minusSix,
        minusFive,
        minusFour,
        minusThree,
        minusTwo,
        minusOne,
        minusZeroDotFive,
        zero,
        one,
        two.
        three,
        four,
        five,
        six,
        seven,
```

```
eight,
       nine,
        . . .
Oneframe ::= BIT STRING (SIZE (6))
-- P
Packet-LossRate ::= INTEGER(0..1000)
PA-Values ::= ENUMERATED {
    dB-6,
    dB-4dot77,
    dB-3,
    dB-1dot77,
    dB0,
    dB1,
    dB2,
    dB3,
    . . .
PDCPChangeIndication ::= ENUMERATED {s-KgNB-update-required, pDCP-data-recovery-required,...}
PDCP-SN ::= INTEGER (0..4095)
PDCP-SNExtended ::= INTEGER (0..32767)
PDCP-SNlength18 ::= INTEGER (0..262143)
PCI ::= INTEGER (0..503, ...)
PLMN-Identity ::= OCTET STRING (SIZE(3))
Port-Number ::= OCTET STRING (SIZE (2))
PRACH-Configuration ::= SEQUENCE {
    rootSequenceIndex
                                            INTEGER (0..837),
    zeroCorrelationIndex
                                            INTEGER (0..15),
    highSpeedFlag
                                            BOOLEAN,
    prach-FreqOffset
                                            INTEGER (0..94),
    prach-ConfigIndex
                                            INTEGER (0..63)
                                                                 OPTIONAL, -- present for TDD --
    iE-Extensions
                                            ProtocolExtensionContainer { {PRACH-Configuration-ExtIEs} } OPTIONAL,
    . . .
PLMNAreaBasedQMC ::= SEQUENCE {
    plmnListforQMC
                        PLMNListforQMC,
    iE-Extensions
                        ProtocolExtensionContainer { {PLMNAreaBasedQMC-ExtIEs} } OPTIONAL,
PLMNAreaBasedQMC-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
PLMNListforQMC ::= SEQUENCE (SIZE(1..maxnoofPLMNforQMC)) OF PLMN-Identity
PRACH-Configuration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
Pre-emptionCapability ::= ENUMERATED {
   shall-not-trigger-pre-emption,
   may-trigger-pre-emption
Pre-emptionVulnerability ::= ENUMERATED {
   not-pre-emptable,
   pre-emptable
PriorityLevel
                         ::= INTEGER { spare (0), highest (1), lowest (14), no-priority (15) } (0..15)
ProSeAuthorized ::= SEQUENCE {
   proSeDirectDiscovery
                             ProSeDirectDiscovery
                                                          OPTIONAL,
   proSeDirectCommunication ProSeDirectCommunication
                                                          OPTIONAL,
   iE-Extensions
                             ProtocolExtensionContainer { {ProSeAuthorized-ExtIEs} } OPTIONAL,
ProSeAuthorized-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
   PRESENCE optional },
ProSeDirectDiscovery ::= ENUMERATED {
   authorized,
   not-authorized,
ProSeDirectCommunication ::= ENUMERATED {
   authorized,
   not-authorized,
ProSeUEtoNetworkRelaying ::= ENUMERATED {
   authorized,
   not-authorized,
ProtectedEUTRAResourceIndication::= SEQUENCE
   activationSFN
                                        INTEGER (0..1023),
```

```
protectedResourceList
                                            ProtectedResourceList,
    mBSFNControlRegionLength
                                            INTEGER (0..3) OPTIONAL,
    pDCCHRegionLength
                                            INTEGER (1..3) OPTIONAL,
ProtectedFootprintTimePattern ::= SEQUENCE {
    protectedFootprintTimePeriodicity
                                                     INTEGER (1..80, ...),
    protectedFootprintStartTime
                                                     INTEGER (1..20, ...),
ProtectedResourceList ::= SEOUENCE (SIZE(1.. maxnoofProtectedResourcePatterns)) OF ProtectedResourceList-Item
ProtectedResourceList-Item ::= SEQUENCE {
    resourceType
                                    ResourceType,
    intraPRBProtectedResourceFootprint
                                            BIT STRING (SIZE(84, ...)),
    protectedFootprintFrequencyPattern
                                            BIT STRING (SIZE(6..110, ...)),
    protectedFootprintTimePattern
                                            ProtectedFootprintTimePattern,
OCI ::= INTEGER (0..255)
-- R
RadioframeAllocationOffset ::= INTEGER (0..7, ...)
RadioframeAllocationPeriod ::= ENUMERATED{
    n1,
    n2,
    n4,
    n8,
    n16,
    n32,
    . . .
RadioResourceStatus ::= SEQUENCE {
    dL-GBR-PRB-usage
                                                DL-GBR-PRB-usage,
    uL-GBR-PRB-usage
                                                UL-GBR-PRB-usage,
    dL-non-GBR-PRB-usage
                                                DL-non-GBR-PRB-usage,
    uL-non-GBR-PRB-usage
                                                 UL-non-GBR-PRB-usage,
    dL-Total-PRB-usage
                                                DL-Total-PRB-usage,
    uL-Total-PRB-usage
                                                UL-Total-PRB-usage,
    iE-Extensions
                                                 ProtocolExtensionContainer { {RadioResourceStatus-ExtIEs} } OPTIONAL,
RadioResourceStatus-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
PRESENCE optional |
    {ID id-DL-scheduling-PDCCH-CCE-usage
                                                CRITICALITY ignore EXTENSION DL-scheduling-PDCCH-CCE-usage
    {ID id-UL-scheduling-PDCCH-CCE-usage
                                                CRITICALITY ignore EXTENSION UL-scheduling-PDCCH-CCE-usage
                                                                                                                  PRESENCE optional },
ReceiveStatusofULPDCPSDUs ::= BIT STRING (SIZE(4096))
ReceiveStatusOfULPDCPSDUsExtended ::= BIT STRING (SIZE(1..16384))
ReceiveStatusOfULPDCPSDUsPDCP-SNlength18 ::= BIT STRING (SIZE(1..131072))
Registration-Request
                       ::= ENUMERATED {
    start,
    stop,
    partial-stop,
    add
RelativeNarrowbandTxPower ::= SEQUENCE {
    rNTP-PerPRB
                                        BIT STRING (SIZE(6..110, ...)),
    rNTP-Threshold
                                        RNTP-Threshold,
    numberOfCellSpecificAntennaPorts
                                        ENUMERATED {one, two, four, ...},
                                        INTEGER (0..3,...),
    pDCCH-InterferenceImpact
                                        INTEGER (0..4,...),
    iE-Extensions
                                        ProtocolExtensionContainer { { RelativeNarrowbandTxPower-ExtIEs} } OPTIONAL,
RelativeNarrowbandTxPower-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    { ID id-enhancedRNTP
                           CRITICALITY ignore EXTENSION EnhancedRNTP
                                                                            PRESENCE optional },
    . . .
ReplacingCellsList ::= SEQUENCE (SIZE(0.. maxCellineNB)) OF ReplacingCellsList-Item
ReplacingCellsList-Item ::= SEQUENCE {
    eCGI
                    ECGI,
    . . .
ReportAmountMDT ::= ENUMERATED{r1, r2, r4, r8, r16, r32, r64, rinfinity}
ReportArea ::= ENUMERATED{
    ecgi,
    . . .
ReportCharacteristics ::= BIT STRING (SIZE (32))
ReportingPeriodicityCSIR ::= ENUMERATED {
    ms5,
```

```
ms10,
    ms20,
    ms40,
    ms80,
ReportingPeriodicityRSRPMR ::= ENUMERATED {
    one-hundred-20-ms,
    two-hundred-40-ms,
    four-hundred-80-ms,
    six-hundred-40-ms,
ReportIntervalMDT ::= ENUMERATED {ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, min1, min6, min12, min30, min60}
ReservedSubframePattern ::= SEQUENCE{
    subframeType
                                     SubframeType,
    reservedSubframePattern
                                     BIT STRING (SIZE(10..40)),
    mBSFNControlRegionLength
                                     INTEGER (0..3),
    . . .
ResourceType ::= ENUMERATED {
    downlinknonCRS,
    cRS,
    uplink,
    . . .
ResumeID
           ::= CHOICE {
    non-truncated
                    BIT STRING(SIZE(40)),
                    BIT STRING(SIZE(24)),
    truncated
    . . .
RLCMode ::= ENUMERATED {
    rlc-am,
    rlc-um
RNTP-Threshold ::= ENUMERATED {
    minusInfinity,
    minusEleven,
    minusTen,
    minusNine,
    minusEight,
    minusSeven,
    minusSix,
    minusFive,
    minusFour,
    minusThree,
    minusTwo,
```

355

```
minusOne,
    zero,
    one.
    two,
    three,
RRC-Config-Ind ::= ENUMERATED {
    full-config,
   delta-config,
    . . .
RRC-Context ::= OCTET STRING
RRCConnReestabIndicator ::= ENUMERATED {
    reconfigurationFailure, handoverFailure, otherFailure, ...
-- The values correspond to the values of ReestablishmentCause reported from the UE in the RRCConnectionReestablishmentRequest, as defined in TS
36.331 [9]
RRCConnSetupIndicator::= ENUMERATED {
   rrcConnSetup,
RSRPMeasurementResult ::= SEOUENCE (SIZE(1..maxCellReport)) OF
    SEQUENCE {
       rSRPCellID
                                      ECGI,
                                      INTEGER (0..97, ...),
       rSRPMeasured
       iE-Extensions
                                      ProtocolExtensionContainer { { RSRPMeasurementResult-ExtIEs} } OPTIONAL,
        . . .
RSRPMeasurementResult-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
RSRPMRList ::= SEQUENCE (SIZE(1..maxUEReport)) OF
    SEOUENCE {
       rSRPMeasurementResult
                                      RSRPMeasurementResult,
       iE-Extensions
                                      ProtocolExtensionContainer { { RSRPMRList-ExtIEs} } OPTIONAL,
RSRPMRList-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    PRESENCE optional },
    . . .
RRCContainer ::= OCTET STRING
-- S
```

```
S1TNLLoadIndicator ::= SEQUENCE {
    dLS1TNLLoadIndicator
                                    LoadIndicator.
    uLS1TNLLoadIndicator
                                    LoadIndicator,
    iE-Extensions
                                    ProtocolExtensionContainer { { S1TNLLoadIndicator-ExtIEs} } OPTIONAL,
S1TNLLoadIndicator-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
SCGChangeIndication ::= ENUMERATED {pDCPCountWrapAround, pSCellChange, other, ...}
SecondaryRATUsageReportList ::= SEQUENCE (SIZE(1..maxnoofBearers)) OF ProtocolIE-Single-Container {{SecondaryRATUsageReport-ItemIEs}}
SecondaryRATUsageReport-ItemIEs X2AP-PROTOCOL-IES ::= {
    { ID id-SecondaryRATUsageReport-Item
                                                CRITICALITY reject TYPE SecondaryRATUsageReport-Item
                                                                                                           PRESENCE mandatory },
    . . .
SecondaryRATUsageReport-Item ::= SEQUENCE {
    e-RAB-ID
                                    E-RAB-ID,
    secondaryRATType
                                    ENUMERATED {nr, ...},
    e-RABUsageReportList
                                    E-RABUsageReportList,
    iE-Extensions
                               ProtocolExtensionContainer { { SecondaryRATUsageReport-Item-ExtIEs} } OPTIONAL,
SecondaryRATUsageReport-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
SenBSecurityKey ::= BIT STRING (SIZE(256))
SeNBtoMeNBContainer ::= OCTET STRING
ServedCells ::= SEQUENCE (SIZE (1.. maxCellineNB)) OF SEQUENCE {
    servedCellInfo
                                    ServedCell-Information,
   neighbour-Info
                                    Neighbour-Information
                                                                    OPTIONAL,
   iE-Extensions
                                    ProtocolExtensionContainer { {ServedCell-ExtIEs} } OPTIONAL,
ServedCell-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
ServedCell-Information ::= SEOUENCE {
    pCI
                        PCI,
    cellId
                        ECGI,
    tAC
                        TAC,
    broadcastPLMNs
                        BroadcastPLMNs-Item,
```

358

```
eUTRA-Mode-Info
                       EUTRA-Mode-Info,
   iE-Extensions
                       ProtocolExtensionContainer { {ServedCell-Information-ExtIEs} } OPTIONAL,
ServedCell-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::=
     ID id-Number-of-Antennaports
                                              CRITICALITY ignore EXTENSION Number-of-Antennaports
                                                                                                            PRESENCE optional }
     ID id-PRACH-Configuration
                                              CRITICALITY ignore EXTENSION PRACH-Configuration
                                                                                                            PRESENCE optional}
     ID id-MBSFN-Subframe-Info
                                              CRITICALITY ignore EXTENSION MBSFN-Subframe-Infolist
                                                                                                            PRESENCE optional}
                                              CRITICALITY ignore EXTENSION CSG-Id
                                                                                                            PRESENCE optional
     ID id-CSG-Id
     ID id-MBMS-Service-Area-List
                                              CRITICALITY ignore EXTENSION MBMS-Service-Area-Identity-List
                                                                                                            PRESENCE optional
                                                                                                            PRESENCE optional
     ID id-MultibandInfoList
                                              CRITICALITY ignore EXTENSION MultibandInfoList
                                                                                                            PRESENCE optional
     ID id-FreqBandIndicatorPriority
                                              CRITICALITY ignore EXTENSION FreqBandIndicatorPriority
     ID id-BandwidthReducedSI
                                              CRITICALITY ignore EXTENSION BandwidthReducedSI
                                                                                                            PRESENCE optional }
    { ID id-ProtectedEUTRAResourceIndication
                                              CRITICALITY ignore EXTENSION ProtectedEUTRAResourceIndication PRESENCE optional },
ServiceType ::= ENUMERATED{
   qMC-for-streaming-service,
   qMC-for-MTSI-service,
    . . .
SgNBResourceCoordinationInformation ::= SEQUENCE {
   nR-CGI
                                  NRCGI.
   uLCoordinationInformation
                                  BIT STRING (SIZE(6..4400, ...)),
   dLCoordinationInformation
                                  BIT STRING (SIZE(6..4400, ...)) OPTIONAL,
                                  iE-Extensions
                                                                                                                OPTIONAL.
SqNBResourceCoordinationInformationExtlEs X2AP-PROTOCOL-EXTENSION ::= {
SgNB-UE-X2AP-ID ::= INTEGER (0..4294967295)
SIPTOBearerDeactivationIndication ::= ENUMERATED {
   true,
    . . .
SharedResourceType ::= CHOICE{
   uLOnlySharing
                       ULOnlySharing,
   uLandDLSharing
                       ULandDLSharing,
    . . .
ShortMAC-I ::= BIT STRING (SIZE(16))
SGNB-Addition-Trigger-Ind
                           ::= ENUMERATED
   sn-change,
```

```
inter-eNB-HO,
    intra-eNB-HO,
SourceOfUEActivityBehaviourInformation ::= ENUMERATED {
    subscription-information,
    statistics,
SpecialSubframe-Info ::= SEQUENCE {
    specialSubframePatterns
                                SpecialSubframePatterns,
    cyclicPrefixDL
                                CyclicPrefixDL,
    cyclicPrefixUL
                                CyclicPrefixUL,
    iE-Extensions
                                ProtocolExtensionContainer { { SpecialSubframe-Info-ExtIEs} } OPTIONAL,
SpecialSubframe-Info-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
SpecialSubframePatterns ::= ENUMERATED {
    ssp0,
    ssp1,
    ssp2,
    ssp3,
    ssp4,
    ssp5,
    ssp6,
    ssp7,
    ssp8,
    . . .
SpectrumSharingGroupID ::= INTEGER (1..maxCellineNB)
SubbandCQI ::= SEQUENCE {
    subbandCOICodeword0
                                SubbandCOICodeword0,
    subbandCQICodeword1
                                SubbandCQICodeword1
                                                         OPTIONAL,
                                ProtocolExtensionContainer { { SubbandCQI-ExtIEs} } OPTIONAL,
    iE-Extensions
SRVCCOperationPossible ::= ENUMERATED {
    possible,
SubbandCQI-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
SubbandCQICodeword0 ::= CHOICE {
    four-bitCOI
                                     INTEGER (0..15, ...),
    two-bitSubbandDifferentialCOI
                                     INTEGER (0..3, ...),
    two-bitDifferentialCOI
                                     INTEGER (0..3, ...),
    . . .
SubbandCOICodeword1 ::= CHOICE {
    four-bitCQI
                                         INTEGER (0..15, ...),
    three-bitSpatialDifferentialCQI
                                         INTEGER (0..7, ...),
    two-bitSubbandDifferentialCQI
                                         INTEGER (0..3, ...),
    two-bitDifferentialCQI
                                         INTEGER (0..3, ...),
    . . .
SubbandCQIList ::= SEQUENCE (SIZE(1.. maxSubband)) OF SubbandCQIItem
SubbandCOIItem ::= SEOUENCE {
    subbandCOI
                        SubbandCOI,
    subbandIndex
                        INTEGER (0..27,...),
                        ProtocolExtensionContainer { { SubbandCQIItem-ExtIEs} } OPTIONAL,
    iE-Extensions
SubbandCQIItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
SubbandSize ::= ENUMERATED {
    size2,
    size3,
    size4,
    size6,
    size8,
    . . .
SubscriberProfileIDforRFP ::= INTEGER (1..256)
SubframeAllocation ::= CHOICE {
    oneframe
                                     Oneframe,
    fourframes
                                     Fourframes,
    . . .
SubframeAssignment ::= ENUMERATED {
    sa0,
    sal,
    sa2,
    sa3,
    sa4,
    sa5,
    sa6,
```

360

```
SubframeType ::= ENUMERATED{mbsfn,nonmbsfn,...}
SgNBSecurityKey ::= BIT STRING (SIZE(256))
SqNBtoMeNBContainer ::= OCTET STRING
SRBType ::= ENUMERATED {srb1, srb2, ...}
SCGConfigurationQuery ::= ENUMERATED {true,...}
SULInformation ::= SEQUENCE {
    sUL-ARFCN
                      INTEGER (0.. 3279165),
    sUL-TxBW
                           NR-TxBW,
    iE-Extensions
                         ProtocolExtensionContainer { { SULInformation-ExtIEs } }
                                                                                           OPTIONAL,
SupportedSULFregBandItem ::= SEQUENCE {
    freqBandIndicatorNr
                                   INTEGER (1..1024,...),
    . . .
SupportedSULFreqBandItem-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
SULInformation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
-- Т
TABasedMDT::= SEQUENCE {
    tAListforMDT
                       TAListforMDT,
                   ProtocolExtensionContainer { {TABasedMDT-ExtIEs} } OPTIONAL,
   iE-Extensions
TABasedMDT-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TAC ::= OCTET STRING (SIZE (2))
TAIBasedMDT ::= SEQUENCE {
    tAIListforMDT
                           TAIListforMDT,
    iE-Extensions
                           ProtocolExtensionContainer { {TAIBasedMDT-ExtIEs} } OPTIONAL,
TAIBasedMDT-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
```

```
TAIListforMDT ::= SEQUENCE (SIZE(1..maxnoofTAforMDT)) OF TAI-Item
TAI-Item ::= SEQUENCE {
                        TAC,
                        PLMN-Identity,
    pLMN-Identity
    iE-Extensions
                        ProtocolExtensionContainer { { TAI-Item-ExtIEs} } OPTIONAL,
TAI-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TAListforMDT ::= SEQUENCE (SIZE(1..maxnoofTAforMDT)) OF TAC
TABasedOMC ::= SEQUENCE {
    tAListforOMC
                        TAListforOMC,
                        ProtocolExtensionContainer { TABasedOMC-ExtIEs} } OPTIONAL,
    iE-Extensions
TABasedQMC-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
    . . .
TAListforOMC ::= SEQUENCE (SIZE(1..maxnoofTAforOMC)) OF TAC
TAIBasedOMC ::= SEOUENCE {
    tAIListforQMC
                        TAIListforQMC,
                        ProtocolExtensionContainer { {TAIBasedQMC-ExtIEs} } OPTIONAL,
    iE-Extensions
TAIBasedQMC-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TAIListforQMC ::= SEQUENCE (SIZE(1..maxnoofTAforQMC)) OF TAI-Item
TargetCellInUTRAN ::= OCTET STRING -- This IE is to be encoded according to the UTRAN Cell ID in the Last Visited UTRAN Cell Information IE in TS
25.413 [24]
TargeteNBtoSource-eNBTransparentContainer ::= OCTET STRING
TDD-Info ::= SEQUENCE {
    eARFCN
                                    EARFCN,
    transmission-Bandwidth
                                    Transmission-Bandwidth,
    subframeAssignment
                                    SubframeAssignment,
    specialSubframe-Info
                                    SpecialSubframe-Info,
                                    ProtocolExtensionContainer { {TDD-Info-ExtIEs} } OPTIONAL,
    iE-Extensions
TDD-Info-ExtIEs X2AP-PROTOCOL-EXTENSION ::=
```

```
ID id-AdditionalSpecialSubframe-Info CRITICALITY ignore EXTENSION AdditionalSpecialSubframe-Info PRESENCE optional}
      ID id-eARFCNExtension
                                            CRITICALITY reject EXTENSION EARFCNExtension
                                                                                                           PRESENCE optional }
     ID id-AdditionalSpecialSubframeExtension-Info CRITICALITY ignore EXTENSION AdditionalSpecialSubframeExtension-Info PRESENCE optional},
Threshold-RSRP ::= INTEGER(0..97)
Threshold-RSRQ ::= INTEGER(0..34)
TimeToWait ::= ENUMERATED {
   vls,
    v2s,
    v5s,
    v10s.
    v20s,
    v60s,
Time-UE-StayedInCell ::= INTEGER (0..4095)
Time-UE-StayedInCell-EnhancedGranularity ::= INTEGER (0..40950)
TraceActivation ::= SEQUENCE {
    eUTRANTraceID
                                    EUTRANTraceID.
    interfacesToTrace
                                    InterfacesToTrace,
traceDepth
                                    TraceDepth,
traceCollectionEntityIPAddress
                                    TraceCollectionEntityIPAddress,
    iE-Extensions
                                    ProtocolExtensionContainer { {TraceActivation-ExtIEs} } OPTIONAL,
    . . .
TraceActivation-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-MDTConfiguration
                                        CRITICALITY ignore EXTENSION MDT-Configuration
                                                                                                PRESENCE optional } |
    ID id-UEAppLayerMeasConfig
                                        CRITICALITY ignore EXTENSION UEAppLayerMeasConfig
                                                                                                PRESENCE optional },
TraceCollectionEntityIPAddress ::= BIT STRING (SIZE(1..160, ...))
TraceDepth
                ::= ENUMERATED
   minimum,
    medium,
    maximum,
    minimumWithoutVendorSpecificExtension,
   mediumWithoutVendorSpecificExtension,
    maximumWithoutVendorSpecificExtension,
Transmission-Bandwidth ::= ENUMERATED {
       bw6,
       bw15,
```

```
bw25,
       bw50,
       bw75.
       bw100,
       . . . ,
       bw1
TransportLayerAddress
                             ::= BIT STRING (SIZE(1..160, ...))
TunnelInformation ::= SEQUENCE
   transportLayerAddress
                         TransportLayerAddress,
   uDP-Port-Number
                         Port-Number
                                           OPTIONAL,
   iE-Extensions
                         ProtocolExtensionContainer { {Tunnel-Information-ExtIEs} } OPTIONAL,
Tunnel-Information-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
TypeOfError ::= ENUMERATED {
   not-understood,
   missing,
-- U
UEAggregateMaximumBitRate ::= SEQUENCE {
   uEaggregateMaximumBitRateDownlink BitRate,
   uEaggregateMaximumBitRateUplink
                                    BitRate,
                                    ProtocolExtensionContainer { {UEAggregate-MaximumBitrate-ExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
UEAggregate-MaximumBitrate-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
     ID id-extended-uEaggregateMaximumBitRateDownlink CRITICALITY ignore EXTENSION ExtendedBitRate PRESENCE optional}
    . . .
UEAppLayerMeasConfig ::= SEQUENCE {
   containerForAppLayerMeasConfig
                                        OCTET STRING (SIZE(1..1000)),
   areaScopeOfQMC
                     AreaScopeOfQMC,
   iE-Extensions
                     ProtocolExtensionContainer { {UEAppLayerMeasConfig-ExtIEs} } OPTIONAL,
UEAppLayerMeasConfig-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
   {ID id-serviceType CRITICALITY ignore EXTENSION ServiceType PRESENCE optional},
```

```
UE-ContextKeptIndicator ::= ENUMERATED {
    true.
    . . .
UEID ::= BIT STRING (SIZE (16))
UE-HistoryInformation ::= SEQUENCE (SIZE(1..maxnoofCells)) OF LastVisitedCell-Item
UE-HistoryInformationFromTheUE ::= OCTET STRING
-- This IE is a transparent container and shall be encoded as the VisitedCellInfoList field contained in the UEInformationResponse message as
defined in TS 36.331 [9]
UE-S1AP-ID ::= INTEGER (0.. 4294967295)
UE-X2AP-ID ::= INTEGER (0..4095)
UE-X2AP-ID-Extension ::= INTEGER (0..4095, ...)
UE-RLF-Report-Container::= OCTET STRING
-- This IE is a transparent container and shall be encoded as the RLF-Report-r9 field contained in the UEInformationResponse message as defined in
TS 36.331 [9]
UE-RLF-Report-Container-for-extended-bands ::= OCTET STRING
-- This IE is a transparent container and shall be encoded as the RLF-Report-v9e0 field contained in the UEInformationResponse message as defined
in TS 36.331 [9]
UESecurityCapabilities ::= SEQUENCE {
    encryptionAlgorithms
                                        EncryptionAlgorithms,
                                        IntegrityProtectionAlgorithms,
    integrityProtectionAlgorithms
    iE-Extensions
                                        ProtocolExtensionContainer { { UESecurityCapabilities-ExtIEs} }
                                                                                                           OPTIONAL,
UESecurityCapabilities-ExtIES X2AP-PROTOCOL-EXTENSION ::= {
UESidelinkAggregateMaximumBitRate ::= SEQUENCE
    uESidelinkAggregateMaximumBitRate
                                    ProtocolExtensionContainer { {UE-Sidelink-Aggregate-MaximumBitRate-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
UE-Sidelink-Aggregate-MaximumBitRate-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UEsToBeResetList ::= SEQUENCE (SIZE (1.. maxUEsinengNBDU)) OF UEsToBeResetList-Item
UEsToBeResetList-Item::= SEQUENCE {
    meNB-ID
                           UE-X2AP-ID,
    meNB-ID-ext
                            UE-X2AP-ID-Extension
                                                                                                     OPTIONAL,
```

```
sqNB-ID
                            SqNB-UE-X2AP-ID
                                                                                                     OPTIONAL,
    iE-Extensions
                            ProtocolExtensionContainer { { UEsToBeResetList-Item-ExtIEs} }
                                                                                                     OPTIONAL,
UESTOBERESELLIST-ITEM-EXTIES X2AP-PROTOCOL-EXTENSION ::= {
ULandDLSharing ::= SEQUENCE{
    uLResourcesULandDLSharing
                                            ULResourcesULandDLSharing,
    dLResourcesULandDLSharing
                                            DLResourcesULandDLSharing,
ULConfiguration::= SEOUENCE {
                   UL-UE-Configuration,
    uL-PDCP
                                    ProtocolExtensionContainer { { ULConfiguration-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
ULConfiguration-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UL-UE-Configuration::= ENUMERATED { no-data, shared, only, ... }
UL-GBR-PRB-usage::= INTEGER (0..100)
UL-HighInterferenceIndicationInfo ::= SEQUENCE (SIZE(1..maxCellineNB)) OF UL-HighInterferenceIndicationInfo-Item
UL-HighInterferenceIndicationInfo-Item ::= SEQUENCE {
    target-Cell-ID
                                    ECGI,
    ul-interferenceindication
                                    UL-HighInterferenceIndication,
                                    ProtocolExtensionContainer { { UL-HighInterferenceIndicationInfo-Item-ExtIEs} } OPTIONAL,
    iE-Extensions
UL-HighInterferenceIndicationInfo-Item-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UL-HighInterferenceIndication ::= BIT STRING (SIZE(1..110, ...))
UL-InterferenceOverloadIndication ::= SEOUENCE (SIZE(1..maxnoofPRBs)) OF UL-InterferenceOverloadIndication-Item
UL-InterferenceOverloadIndication-Item ::= ENUMERATED {
    high-interference,
    medium-interference,
    low-interference,
UL-non-GBR-PRB-usage::= INTEGER (0..100)
```

```
ULOnlySharing ::= SEQUENCE{
    uLResourceBitmapULOnlySharing
                                  DataTrafficResources.
ULResourceBitmapULandDLSharing ::= DataTrafficResources
ULResourcesULandDLSharing ::= CHOICE {
    unchanged
    changed
                        ULResourceBitmapULandDLSharing,
    . . .
UL-scheduling-PDCCH-CCE-usage::= INTEGER (0..100)
UL-Total-PRB-usage::= INTEGER (0..100)
UsableABSInformation ::= CHOICE {
    fdd
                       UsableABSInformationFDD
    tdd
                       UsableABSInformationTDD,
UsableABSInformationFDD ::= SEQUENCE {
    usable-abs-pattern-info
                                        BIT STRING (SIZE(40)),
    iE-Extensions
                                        ProtocolExtensionContainer { { UsableABSInformationFDD-ExtIEs} } OPTIONAL,
UsableABSInformationFDD-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UsableABSInformationTDD ::= SEQUENCE {
    usaable-abs-pattern-info
                                        BIT STRING (SIZE(1..70, ...)),
                                        ProtocolExtensionContainer { { UsableABSInformationTDD-ExtIEs} } OPTIONAL,
    iE-Extensions
UsableABSInformationTDD-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
UserPlaneTrafficActivityReport ::= ENUMERATED {inactive, re-activated, ...}
-- V
V2XServicesAuthorized ::= SEQUENCE {
    vehicleUE
                       VehicleUE
                                                                                        OPTIONAL,
pedestrianUE
                       PedestrianUE
                                                                                        OPTIONAL,
   iE-Extensions
                        ProtocolExtensionContainer { {V2XServicesAuthorized-ExtIEs} }
                                                                                        OPTIONAL,
```

```
V2XServicesAuthorized-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
VehicleUE ::= ENUMERATED {
   authorized,
   not-authorized,
PedestrianUE ::= ENUMERATED {
    authorized,
   not-authorized,
-- W
WidebandCQI ::= SEQUENCE {
    widebandCQICodeword0
                                INTEGER (0..15, ...),
    widebandCOICodeword1
                                WidebandCOICodeword1
                                                            OPTIONAL,
    iE-Extensions
                                ProtocolExtensionContainer { { WidebandCQI-ExtIEs} } OPTIONAL,
WidebandCOI-ExtIEs X2AP-PROTOCOL-EXTENSION ::= {
WidebandCQICodeword1::= CHOICE {
    four-bitCQI
                                            INTEGER (0..15, ...),
                                            INTEGER (0..7, ...),
    three-bitSpatialDifferentialCQI
WTID ::= CHOICE {
    wTID-Type1
                        WTID-Type1,
                        WTID-Long-Type2,
    wTID-Type2
    . . .
WTID-Type1 ::= SEQUENCE {
   pLMN-Identity
                                    PLMN-Identity,
    shortWTID
                                    BIT STRING (SIZE(24)),
WTID-Long-Type2 ::= BIT STRING (SIZE(48))
WT-UE-XwAP-ID ::= OCTET STRING (SIZE (3))
```

```
-- X

X2BenefitValue ::= INTEGER (1..8, ...)

-- Y

-- Z

END
```

9.3.6 Common definitions

```
-- Common definitions
__ *********************
X2AP-CommonDataTypes {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) x2ap (2) version1 (1) x2ap-CommonDataTypes (3) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
    ****************
-- Extension constants
__ ********************
maxPrivateIEs
                                  INTEGER ::= 65535
maxProtocolExtensions
                                  INTEGER ::= 65535
maxProtocolIEs
                                  INTEGER ::= 65535
__ ********************
-- Common Data Types
__ ********************
Criticality
           ::= ENUMERATED { reject, ignore, notify }
Presence
           ::= ENUMERATED { optional, conditional, mandatory }
PrivateIE-ID ::= CHOICE {
  local
                 INTEGER (0.. maxPrivateIEs),
  global
                 OBJECT IDENTIFIER
ProcedureCode
            ::= INTEGER (0..255)
```

```
ProtocolIE-ID ::= INTEGER (0..maxProtocolIEs)

TriggeringMessage ::= ENUMERATED { initiating-message, successful-outcome, unsuccessful-outcome}

END
```

9.3.7 Constant definitions

```
******************
-- Constant definitions
  *****************
X2AP-Constants {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) x2ap (2) version1 (1) x2ap-Constants (4) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
IMPORTS
   ProcedureCode,
   ProtocolIE-ID
FROM X2AP-CommonDataTypes;
__ ***********************************
-- Elementary Procedures
id-handoverPreparation
                                                           ProcedureCode ::= 0
id-handoverCancel
                                                           ProcedureCode ::= 1
id-loadIndication
                                                           ProcedureCode ::= 2
id-errorIndication
                                                           ProcedureCode ::= 3
id-snStatusTransfer
                                                           ProcedureCode ::= 4
id-uEContextRelease
                                                           ProcedureCode ::= 5
                                                           ProcedureCode ::= 6
id-x2Setup
                                                           ProcedureCode ::= 7
id-reset
id-eNBConfigurationUpdate
                                                           ProcedureCode ::= 8
id-resourceStatusReportingInitiation
                                                          ProcedureCode ::= 9
id-resourceStatusReporting
                                                           ProcedureCode ::= 10
id-privateMessage
                                                           ProcedureCode ::= 11
id-mobilitySettingsChange
                                                           ProcedureCode ::= 12
id-rLFIndication
                                                           ProcedureCode ::= 13
id-handoverReport
                                                           ProcedureCode ::= 14
id-cellActivation
                                                           ProcedureCode ::= 15
id-x2Release
                                                           ProcedureCode ::= 16
id-x2APMessageTransfer
                                                           ProcedureCode ::= 17
id-x2Removal
                                                           ProcedureCode ::= 18
```

```
id-seNBAdditionPreparation
                                                              ProcedureCode ::= 19
id-seNBReconfigurationCompletion
                                                              ProcedureCode ::= 20
                                                              ProcedureCode ::= 21
id-meNBinitiatedSeNBModificationPreparation
id-seNBinitiatedSeNBModification
                                                              ProcedureCode ::= 22
id-meNBinitiatedSeNBRelease
                                                              ProcedureCode ::= 23
id-seNBinitiatedSeNBRelease
                                                              ProcedureCode ::= 24
id-seNBCounterCheck
                                                              ProcedureCode ::= 25
id-retrieveUEContext
                                                              ProcedureCode ::= 26
id-sgNBAdditionPreparation
                                                              ProcedureCode ::= 27
id-sgNBReconfigurationCompletion
                                                                  ProcedureCode ::= 28
id-meNBinitiatedSgNBModificationPreparation
                                                              ProcedureCode ::= 29
id-sgNBinitiatedSgNBModification
                                                                  ProcedureCode ::= 30
id-meNBinitiatedSqNBRelease
                                                              ProcedureCode ::= 31
id-sgNBinitiatedSgNBRelease
                                                              ProcedureCode ::= 32
id-sqNBCounterCheck
                                                              ProcedureCode ::= 33
id-sqNBChange
                                                              ProcedureCode ::= 34
id-rRCTransfer
                                                              ProcedureCode ::= 35
                                                              ProcedureCode ::= 36
id-endcX2Setup
id-endcConfigurationUpdate
                                                              ProcedureCode ::= 37
id-secondaryRATDataUsageReport
                                                              ProcedureCode ::= 38
id-endcCellActivation
                                                              ProcedureCode ::= 39
id-endcPartialReset
                                                              ProcedureCode ::= 40
id-eUTRANRCellResourceCoordination
                                                              ProcedureCode ::= 41
                                                              ProcedureCode ::= 42
id-SqNBActivityNotification
id-endcX2Removal
                                                              ProcedureCode ::= 43
__ *******************
-- Lists
__ ********************
maxEARFCN
                                          INTEGER ::= 65535
maxEARFCNPlusOne
                                          INTEGER ::= 65536
newmaxEARFCN
                                          INTEGER ::= 262143
maxInterfaces
                                          INTEGER ::= 16
maxCellineNB
                                          INTEGER ::= 256
maxnoofBands
                                          INTEGER ::= 16
maxnoofBearers
                                          INTEGER ::= 256
maxNrOfErrors
                                          INTEGER ::= 256
                                          INTEGER ::= 16
maxnoofPDCP-SN
maxnoofEPLMNs
                                          INTEGER ::= 15
maxnoofEPLMNsPlusOne
                                          INTEGER ::= 16
maxnoofForbLACs
                                          INTEGER ::= 4096
maxnoofForbTACs
                                          INTEGER ::= 4096
maxnoofBPLMNs
                                          INTEGER ::= 6
maxnoofNeighbours
                                          INTEGER ::= 512
maxnoofPRBs
                                          INTEGER ::= 110
maxPools
                                          INTEGER ::= 16
maxnoofCells
                                          INTEGER ::= 16
maxnoofMBSFN
                                          INTEGER ::= 8
                                          INTEGER ::= 32
maxFailedMeasObjects
maxnoofCellIDforMDT
                                          INTEGER ::= 32
maxnoofTAforMDT
                                          INTEGER ::= 8
```

```
maxnoofMBMSServiceAreaIdentities
                                         INTEGER ::= 256
maxnoofMDTPLMNs
                                         INTEGER ::= 16
maxnoofCoMPHypothesisSet
                                         INTEGER ::= 256
maxnoofCoMPCells
                                         INTEGER ::= 32
maxUEReport
                                         INTEGER ::= 128
maxCellReport
                                         INTEGER ::= 9
maxnoofPA
                                         INTEGER ::= 3
maxCSIProcess
                                         INTEGER ::= 4
maxCSIReport
                                         INTEGER ::= 2
maxSubband
                                         INTEGER ::= 14
maxofNRNeighbours
                                         INTEGER ::= 1024
maxCellinengNB
                                         INTEGER ::= 16384
-- maxnoofNRCarriers
                                         INTEGER ::= 32
maxnooftimeperiods
                                         INTEGER ::= 2
maxnoofCellIDforOMC
                                         INTEGER ::= 32
maxnoofTAforOMC
                                         INTEGER ::= 8
                                         INTEGER ::= 16
maxnoofPLMNforOMC
maxUEsinengNBDU
                                         INTEGER ::= 8192
                                         INTEGER ::= 16
maxnoofProtectedResourcePatterns
maxnoNRcellsSpectrumSharingWithE-UTRA
                                         INTEGER ::= 64
maxnoofNrCellBands
                                         INTEGER ::= 32
    -- TES
__ **********************
id-E-RABs-Admitted-Item
id-E-RABs-Admitted-List
id-E-RAB-Item
id-E-RABs-NotAdmitted-List
id-E-RABs-ToBeSetup-Item
id-Cause
id-CellInformation
id-CellInformation-Item
id-New-eNB-UE-X2AP-ID
id-Old-eNB-UE-X2AP-ID
id-TargetCell-ID
id-TargeteNBtoSource-eNBTransparentContainer
id-TraceActivation
id-UE-ContextInformation
id-UE-HistoryInformation
id-UE-X2AP-ID
id-CriticalityDiagnostics
id-E-RABs-SubjectToStatusTransfer-List
id-E-RABs-SubjectToStatusTransfer-Item
id-ServedCells
id-GlobalENB-ID
id-TimeToWait
id-GUMMEI-ID
id-GUGroupIDList
id-ServedCellsToAdd
id-ServedCellsToModify
```

ProtocolIE-ID ::= 0

ProtocolIE-ID ::= 1

ProtocolIE-ID ::= 2

ProtocolIE-ID ::= 3

ProtocolIE-ID ::= 4

ProtocolIE-ID ::= 5

ProtocolIE-ID ::= 6

ProtocolIE-ID ::= 7

ProtocolIE-ID ::= 9

ProtocolIE-ID ::= 10

ProtocolIE-ID ::= 11

ProtocolIE-ID ::= 12

ProtocolIE-ID ::= 13

ProtocolIE-ID ::= 14

ProtocolIE-ID ::= 15

ProtocolIE-ID ::= 16

ProtocolIE-ID ::= 17

ProtocolIE-ID ::= 18

ProtocolIE-ID ::= 19

ProtocolIE-ID ::= 20

ProtocolIE-ID ::= 21

ProtocolIE-ID ::= 22

ProtocolIE-ID ::= 23

ProtocolIE-ID ::= 24

ProtocolIE-ID ::= 25

ProtocolIE-ID ::= 26

| id-ServedCellsToDelete | ProtocolIE-ID ::= 27 |
|--|----------------------|
| id-Registration-Request | ProtocolIE-ID ::= 28 |
| id-CellToReport | ProtocolIE-ID ::= 29 |
| id-ReportingPeriodicity | ProtocolIE-ID ::= 30 |
| id-CellToReport-Item | ProtocolIE-ID ::= 31 |
| id-CellMeasurementResult | ProtocolIE-ID ::= 32 |
| id-CellMeasurementResult-Item | ProtocolIE-ID ::= 33 |
| id-GUGroupIDToAddList | ProtocolIE-ID ::= 34 |
| id-GUGroupIDToDeleteList | ProtocolIE-ID ::= 35 |
| id-SRVCCOperationPossible | ProtocolIE-ID ::= 36 |
| id-Measurement-ID | ProtocolIE-ID ::= 37 |
| id-ReportCharacteristics | ProtocolIE-ID ::= 38 |
| id-ENB1-Measurement-ID | ProtocolIE-ID ::= 39 |
| id-ENB2-Measurement-ID | ProtocolIE-ID ::= 40 |
| id-Number-of-Antennaports | ProtocolIE-ID ::= 41 |
| id-CompositeAvailableCapacityGroup | ProtocolIE-ID ::= 42 |
| id-ENB1-Cell-ID | ProtocolIE-ID ::= 43 |
| id-ENB2-Cell-ID | ProtocolIE-ID ::= 44 |
| id-ENB2-Proposed-Mobility-Parameters | ProtocolIE-ID ::= 45 |
| id-ENB1-Mobility-Parameters | ProtocolIE-ID ::= 46 |
| id-ENB2-Mobility-Parameters-Modification-Range | ProtocolIE-ID ::= 47 |
| id-FailureCellPCI | ProtocolIE-ID ::= 48 |
| id-Re-establishmentCellECGI | ProtocolIE-ID ::= 49 |
| id-FailureCellCRNTI | ProtocolIE-ID ::= 50 |
| id-ShortMAC-I | ProtocolIE-ID ::= 51 |
| id-SourceCellECGI | ProtocolIE-ID ::= 52 |
| id-FailureCellECGI | ProtocolIE-ID ::= 53 |
| id-HandoverReportType | ProtocolIE-ID ::= 54 |
| id-PRACH-Configuration | ProtocolIE-ID ::= 55 |
| id-MBSFN-Subframe-Info | ProtocolIE-ID ::= 56 |
| id-ServedCellsToActivate | ProtocolIE-ID ::= 57 |
| id-ActivatedCellList | ProtocolIE-ID ::= 58 |
| id-DeactivationIndication | ProtocolIE-ID ::= 59 |
| id-UE-RLF-Report-Container | ProtocolIE-ID ::= 60 |
| id-ABSInformation | ProtocolIE-ID ::= 61 |
| id-InvokeIndication | ProtocolIE-ID ::= 62 |
| id-ABS-Status | ProtocolIE-ID ::= 63 |
| id-PartialSuccessIndicator | ProtocolIE-ID ::= 64 |
| id-MeasurementInitiationResult-List | ProtocolIE-ID ::= 65 |
| id-MeasurementInitiationResult-Item | ProtocolIE-ID ::= 66 |
| id-MeasurementFailureCause-Item | ProtocolIE-ID ::= 67 |
| id-CompleteFailureCauseInformation-List | ProtocolIE-ID ::= 68 |
| id-CompleteFailureCauseInformation-Item | ProtocolIE-ID ::= 69 |
| id-CSG-Id | ProtocolIE-ID ::= 70 |
| id-CSGMembershipStatus | ProtocolIE-ID ::= 71 |
| id-MDTConfiguration | ProtocolIE-ID ::= 72 |
| id-ManagementBasedMDTallowed | ProtocolIE-ID ::= 74 |
| id-RRCConnSetupIndicator | ProtocolIE-ID ::= 75 |
| id-NeighbourTAC | ProtocolIE-ID ::= 76 |
| id-Time-UE-StayedInCell-EnhancedGranularity | ProtocolIE-ID ::= 77 |
| id-RRCConnReestabIndicator | ProtocolIE-ID ::= 78 |
| id-MBMS-Service-Area-List | ProtocolIE-ID ::= 79 |
| id-HO-cause | ProtocolIE-ID ::= 80 |
| id-TargetCellInUTRAN | ProtocolIE-ID ::= 81 |
| | |

| id-MobilityInformation | ProtocolIE-ID ::= 82 |
|---|---|
| id-SourceCellCRNTI | ProtocolIE-ID ::= 83 |
| id-MultibandInfoList | ProtocolIE-ID ::= 84 |
| id-M3Configuration | ProtocolIE-ID ::= 85 |
| id-M4Configuration | ProtocolIE-ID ::= 86 |
| id-M5Configuration | ProtocolIE-ID ::= 87 |
| id-MDT-Location-Info | ProtocolIE-ID ::= 88 |
| id-ManagementBasedMDTPLMNList | ProtocolIE-ID ::= 89 |
| id-SignallingBasedMDTPLMNList | ProtocolIE-ID ::= 90 |
| id-ReceiveStatusOfULPDCPSDUsExtended | ProtocolIE-ID ::= 91 |
| id-ULCOUNTValueExtended | ProtocolIE-ID ::= 92 |
| id-DLCOUNTValueExtended | ProtocolIE-ID ::= 93 |
| id-eARFCNExtension | ProtocolIE-ID ::= 94 |
| id-UL-EARFCNExtension | ProtocolIE-ID ::= 95 |
| id-DL-EARFCNExtension | ProtocolIE-ID ::= 96 |
| id-AdditionalSpecialSubframe-Info | ProtocolIE-ID ::= 97 |
| id-Masked-IMEISV | ProtocolIE-ID ::= 98 |
| id-IntendedULDLConfiguration | ProtocolIE-ID ::= 99 |
| id-ExtendedULInterferenceOverloadInfo | ProtocolIE-ID ::= 100 |
| id-RNL-Header | ProtocolIE-ID ::= 101 |
| id-x2APMessage | ProtocolIE-ID ::= 102 |
| id-ProSeAuthorized | ProtocolIE-ID ::= 103 |
| id-ExpectedUEBehaviour | ProtocolIE-ID ::= 104 |
| id-UE-HistoryInformationFromTheUE | ProtocolIE-ID ::= 105 |
| id-DynamicDLTransmissionInformation | ProtocolIE-ID ::= 106 |
| id-UE-RLF-Report-Container-for-extended-bands | ProtocolIE-ID ::= 107 |
| id-CoMPInformation | ProtocolIE-ID ::= 108 |
| id-ReportingPeriodicityRSRPMR | ProtocolIE-ID ::= 109 |
| id-RSRPMRList | ProtocolIE-ID ::= 110 |
| id-MeNB-UE-X2AP-ID | ProtocolIE-ID ::= 111 |
| id-SeNB-UE-X2AP-ID | ProtocolIE-ID ::= 112 |
| id-UE-SecurityCapabilities | ProtocolIE-ID ::= 113 |
| id-SeNBSecurityKey | ProtocolIE-ID ::= 114 |
| id-SenBUEAggregateMaximumBitRate | ProtocoliE-ID ::= 114 ProtocoliE-ID ::= 115 |
| id-ServingPLMN | ProtocolIE-ID ::= 116 |
| id-E-RABs-ToBeAdded-List | ProtocolIE-ID ::= 117 |
| id-E-RABs-ToBeAdded-Item | ProtocoliE-ID ::= 117 ProtocolIE-ID ::= 118 |
| id-MeNBtoSeNBContainer | |
| | ProtocolIE-ID ::= 119 |
| id-E-RABs-Admitted-ToBeAdded-List | ProtocolIE-ID ::= 120 |
| id-E-RABs-Admitted-ToBeAdded-Item | ProtocolIE-ID ::= 121 |
| id-SenBtoMenBContainer | ProtocolIE-ID ::= 122 |
| id-ResponseInformationSeNBReconfComp | ProtocolIE-ID ::= 123 |
| id-UE-ContextInformationSeNBModReq | ProtocolIE-ID ::= 124 |
| id-E-RABs-ToBeAdded-ModReqItem | ProtocolIE-ID ::= 125 |
| id-E-RABs-ToBeModified-ModReqItem | ProtocolIE-ID ::= 126 |
| id-E-RABs-ToBeReleased-ModReqItem | ProtocolIE-ID ::= 127 |
| id-E-RABs-Admitted-ToBeAdded-ModAckList | ProtocolIE-ID ::= 128 |
| id-E-RABs-Admitted-ToBeModified-ModAckList | ProtocolIE-ID ::= 129 |
| id-E-RABs-Admitted-ToBeReleased-ModAckList | ProtocolIE-ID ::= 130 |
| id-E-RABs-Admitted-ToBeAdded-ModAckItem | ProtocolIE-ID ::= 131 |
| id-E-RABs-Admitted-ToBeModified-ModAckItem | ProtocolIE-ID ::= 132 |
| id-E-RABs-Admitted-ToBeReleased-ModAckItem | ProtocolIE-ID ::= 133 |
| id-E-RABs-ToBeReleased-ModReqd | ProtocolIE-ID ::= 134 |
| id-E-RABs-ToBeReleased-ModReqdItem | ProtocolIE-ID ::= 135 |
| | |

| id-SCGChangeIndication | ProtocolIE-ID ::= 136 |
|---|---|
| id-E-RABs-ToBeReleased-List-RelReq | ProtocolIE-ID ::= 137 |
| id-E-RABs-ToBeReleased-RelReqItem | ProtocolIE-ID ::= 138 |
| id-E-RABs-ToBeReleased-List-RelConf | ProtocolIE-ID ::= 139 |
| id-E-RABs-ToBeReleased-RelConfItem | ProtocolIE-ID ::= 140 |
| id-E-RABs-SubjectToCounterCheck-List | ProtocolIE-ID ::= 141 |
| id-E-RABs-SubjectToCounterCheckItem | ProtocolIE-ID ::= 142 |
| id-CoverageModificationList | ProtocolIE-ID ::= 143 |
| id-ReportingPeriodicityCSIR | ProtocolIE-ID ::= 145 |
| id-CSIReportList | ProtocolIE-ID ::= 146 |
| id-UEID | ProtocolIE-ID ::= 147 |
| id-enhancedRNTP | ProtocolIE-ID ::= 148 |
| id-ProSeUEtoNetworkRelaying | ProtocolIE-ID ::= 149 |
| id-ReceiveStatusOfULPDCPSDUsPDCP-SNlength18 | ProtocolIE-ID ::= 150 |
| id-ULCOUNTValuePDCP-SNlength18 | ProtocolIE-ID ::= 151 |
| id-DLCOUNTValuePDCP-SNlength18 | ProtocolIE-ID ::= 152 |
| id-UE-ContextReferenceAtSeNB | ProtocolIE-ID ::= 153 |
| id-UE-ContextKeptIndicator | ProtocolIE-ID ::= 154 |
| id-New-eNB-UE-X2AP-ID-Extension | ProtocolIE-ID ::= 155 |
| id-Old-eNB-UE-X2AP-ID-Extension | ProtocolIE-ID ::= 156 |
| id-MeNB-UE-X2AP-ID-Extension | ProtocolIE-ID ::= 157 |
| id-SeNB-UE-X2AP-ID-Extension | ProtocolIE-ID ::= 158 |
| id-LHN-ID | ProtocolIE-ID ::= 159 |
| id-FreqBandIndicatorPriority | ProtocolIE-ID ::= 160 |
| id-M6Configuration | ProtocolIE-ID ::= 161 |
| id-M7Configuration | ProtocolIE-ID ::= 162 |
| id-Tunnel-Information-for-BBF | ProtocolIE-ID ::= 163 |
| id-SIPTO-BearerDeactivationIndication | ProtocolIE-ID ::= 164 |
| id-GW-TransportLayerAddress | ProtocolIE-ID ::= 165 |
| id-Correlation-ID | ProtocolIE-ID ::= 166 |
| id-SIPTO-Correlation-ID | ProtocolIE-ID ::= 167 |
| id-SIPTO-L-GW-TransportLayerAddress | ProtocolIE-ID ::= 168 |
| id-X2RemovalThreshold | ProtocolIE-ID ::= 169 |
| id-CellReportingIndicator | ProtocolIE-ID ::= 170 |
| id-BearerType | ProtocolIE-ID ::= 171 |
| id-resumeID | ProtocolIE-ID ::= 172 |
| id-UE-ContextInformationRetrieve | ProtocolIE-ID ::= 173 |
| id-E-RABs-ToBeSetupRetrieve-Item | ProtocolIE-ID ::= 174 |
| id-NewEUTRANCellIdentifier | ProtocolIE-ID ::= 175 |
| id-V2XServicesAuthorized | ProtocolIE-ID ::= 176 |
| id-OffsetOfNbiotChannelNumberToDL-EARFCN | ProtocolIE-ID ::= 177 |
| id-OffsetOfNbiotChannelNumberToUL-EARFCN | ProtocolIE-ID ::= 178 |
| id-AdditionalSpecialSubframeExtension-Info | ProtocolIE-ID ::= 179 |
| id-BandwidthReducedSI | ProtocolIE-ID ::= 180 |
| id-MakeBeforeBreakIndicator | ProtocolIE-ID ::= 181 |
| id-UE-ContextReferenceAtWT | ProtocolIE-ID ::= 182 |
| id-WT-UE-ContextKeptIndicator | ProtocolIE-ID ::= 183 |
| id-UESidelinkAggregateMaximumBitRate | ProtocolIE-ID ::= 184 |
| id-uL-GTPtunnelEndpoint id-DL-scheduling-PDCCH-CCE-usage | ProtocolIE-ID ::= 185 ProtocolIE-ID ::= 193 |
| - | ProtocoliE-ID ::= 193 ProtocoliE-ID ::= 194 |
| <pre>id-UL-scheduling-PDCCH-CCE-usage id-UEAppLayerMeasConfig</pre> | ProtocolIE-ID ::= 194 ProtocolIE-ID ::= 195 |
| id-extended-e-RAB-MaximumBitrateDL | ProtocolIE-ID ::= 195 ProtocolIE-ID ::= 196 |
| id-extended-e-RAB-MaximumBitrateUL | ProtocoliE-ID ::= 196 ProtocoliE-ID ::= 197 |
| TA CACCAGGA C IMD PRAXIMAMDICIACCOD | 1100000115 10 197 |

```
id-extended-e-RAB-GuaranteedBitrateDL
id-extended-e-RAB-GuaranteedBitrateIII.
id-extended-uEaggregateMaximumBitRateDownlink
id-extended-uEaggregateMaximumBitRateUplink
id-NRrestriction
id-SqNBSecurityKey
id-SqNBUEAqqreqateMaximumBitRate
id-E-RABs-ToBeAdded-SqNBAddRegList
id-MeNBtoSqNBContainer
id-SaNB-UE-X2AP-ID
id-RequestedSplitSRBs
id-E-RABs-ToBeAdded-SgNBAddReg-Item
id-E-RABs-Admitted-ToBeAdded-SqNBAddRegAckList
id-SqNBtoMeNBContainer
id-AdmittedSplitSRBs
id-E-RABs-Admitted-ToBeAdded-SqNBAddRegAck-Item
id-ResponseInformationSqNBReconfComp
id-UE-ContextInformation-SqNBModReg
id-E-RABs-ToBeAdded-SqNBModReq-Item
id-E-RABs-ToBeModified-SqNBModReg-Item
id-E-RABs-ToBeReleased-SgNBModReg-Item
id-E-RABs-Admitted-ToBeAdded-SgNBModAckList
id-E-RABs-Admitted-ToBeModified-SqNBModAckList
id-E-RABs-Admitted-ToBeReleased-SqNBModAckList
id-E-RABs-Admitted-ToBeAdded-SqNBModAck-Item
id-E-RABs-Admitted-ToBeModified-SqNBModAck-Item
id-E-RABs-Admitted-ToBeReleased-SqNBModAck-Item
id-E-RABs-ToBeReleased-SqNBModRegdList
id-E-RABs-ToBeModified-SqNBModRegdList
id-E-RABs-ToBeReleased-SqNBModRegd-Item
id-E-RABs-ToBeModified-SqNBModRegd-Item
id-E-RABs-ToBeReleased-SgNBChaConfList
id-E-RABs-ToBeReleased-SqNBChaConf-Item
id-E-RABs-ToBeReleased-SgNBRelRegList
id-E-RABs-ToBeReleased-SqNBRelReq-Item
id-E-RABs-ToBeReleased-SqNBRelConfList
id-E-RABs-ToBeReleased-SqNBRelConf-Item
id-E-RABs-SubjectToSqNBCounterCheck-List
id-E-RABs-SubjectToSqNBCounterCheck-Item
id-RRCContainer
id-SRBType
id-Target-SqNB-ID
id-HandoverRestrictionList
id-SCGConfigurationOuery
id-SplitSRB
id-UENRMeasurement
id-InitiatingNodeType-EndcX2Setup
id-InitiatingNodeType-EndcConfigUpdate
id-RespondingNodeType-EndcX2Setup
id-RespondingNodeType-EndcConfigUpdate
id-NRUESecurityCapabilities
id-PDCPChangeIndication
id-ServedEUTRAcellsENDCX2ManagementList
id-CellAssistanceInformation
```

```
ProtocolIE-ID ::= 198
ProtocolIE-ID ::= 199
ProtocolIE-ID ::= 200
ProtocolIE-ID ::= 201
    ProtocolIE-ID ::= 202
ProtocolIE-ID ::= 203
    ProtocolIE-ID ::= 204
ProtocolIE-ID ::= 205
ProtocolIE-ID ::= 206
ProtocolIE-ID ::= 207
ProtocolIE-ID ::= 208
ProtocolIE-ID ::= 209
ProtocolIE-ID ::= 210
ProtocolIE-ID ::= 211
    ProtocolIE-ID ::= 212
ProtocolIE-ID ::= 213
    ProtocolIE-ID ::= 214
ProtocolIE-ID ::= 215
ProtocolIE-ID ::= 216
ProtocolIE-ID ::= 217
ProtocolTE-TD ::= 218
ProtocolIE-ID ::= 219
ProtocolIE-ID ::= 220
ProtocolIE-ID ::= 221
    ProtocolIE-ID ::= 222
ProtocolIE-ID ::= 223
ProtocolIE-ID ::= 224
ProtocolIE-ID ::= 225
ProtocolIE-ID ::= 226
ProtocolIE-ID ::= 227
ProtocolIE-ID ::= 228
ProtocolIE-ID ::= 229
ProtocolIE-ID ::= 230
ProtocolIE-ID ::= 231
ProtocolIE-ID ::= 232
ProtocolIE-ID ::= 233
ProtocolIE-ID ::= 234
    ProtocolIE-ID ::= 235
    ProtocolIE-ID ::= 236
ProtocolIE-ID ::= 237
ProtocolIE-ID ::= 238
ProtocolIE-ID ::= 239
ProtocolIE-ID ::= 240
    ProtocolIE-ID ::= 241
ProtocolIE-ID ::= 242
ProtocolIE-ID ::= 243
ProtocolIE-ID ::= 244
ProtocolIE-ID ::= 245
ProtocolIE-ID ::= 246
ProtocolIE-ID ::= 247
ProtocolIE-ID ::= 248
ProtocolIE-ID ::= 249
ProtocolIE-ID ::= 250
    ProtocolIE-ID ::= 251
```

| id-Globalen-gNB-ID id-ServedNRcellsENDCX2ManagementList id-UE-ContextReferenceAtSgNB id-SecondaryRATUsageReport id-ActivationID id-MenBResourceCoordinationInformation id-SgnResourceCoordinationInformation id-ServedEUTRAcellsToModifyListENDCConfUpd id-ServedRetlsToModifyListENDCConfUpd id-ServedNRcellsToModifyListENDCConfUpd id-ServedNRcellsToDeleteListENDCConfUpd id-ServedNRcellsToDeleteListENDCConfUpd id-ServedNRcellsToDeleteListENDCConfUpd id-ServedNRcellsToDeleteListENDCConfUpd id-ServedNRcellsToDeleteListENDCConfUpd id-ServedNRcellsToDeleteListENDCConfUpd id-ServedNRcellsToDeleteListENDCConfUpd id-SecondaryRATUsageReport-Item id-Old-SgNB-UE-X2AP-ID id-SecondaryRATUsageReport-Item id-SecondaryRATUsageReport-Item id-SecondaryRATUsageReport-Item id-SecondaryRATUsageReport-Item id-SecondaryRATUsageReport-Item id-SecondaryRATUsageReport-Item id-SecondaryRATUsageReport-Item id-SecondaryRATUsageReport-Item id-SecondaryRATUsageReport-Item id-SeletedPLMN id-SeletedPLMN id-Us-ToBeReset id-UEs-Admitted-ToBeReset id-UEs-Admitted-ToBeReset id-UEs-Admitted-ToBeReset id-UB-NamithPacketLossRate id-UplinkPacketLossRate id-SubscriberProfileIDforRFP id-ServiceType id-AerialUEsubscriptionInformation id-SeletureType-EutranrCellresourceCoordination id-MenNECell-ID id-RequestedSplitSRBsrelease id-AMmittedSplitSRBsrelease id-AMmittedSplitSRBsrelease id-ANS-NumOccasionDifferentPrecoder id-ProtectedEUTRAResourceIndication id-TnitiatingNodeType-EutranrCellResourceCoordination id-DataTrafficResourceIndication id-DataTrafficResourceIndication id-SpectrumSharingGroupID id-ListofEUTRACellsinEUTRACoordinationRep id-ListofEUTRACellsinEUTRACoordinationRep id-ListofEUTRACellsinNRCoordinationRep id-ListofNRCellsinNRCoordinationRep id-ListofNRCellsinNRCoordinationRep id-ListofNRCellsinNRCoordinationRep id-ListofNRCellsinNRCoordinationRep |
|--|
| id-ListofEUTRACellsinEUTRACoordinationResp id-ListofEUTRACellsinNRCoordinationReq |
| |
| - |
| id-E-RABs-AdmittedToBeModified-SgNBModConf-Item |
| <pre>id-UEContextLevelUserPlaneActivity id-ERABActivityNotifyItemList</pre> |
| id-InitiatingNodeType-EndcX2Removal |
| id-RespondingNodeType-EndcX2Removal |
| |

ProtocolIE-ID ::= 252 ProtocolIE-ID ::= 253 ProtocolIE-ID ::= 254 ProtocolIE-ID ::= 255 ProtocolIE-ID ::= 256 ProtocolIE-ID ::= 257 ProtocolIE-ID ::= 258 ProtocolIE-ID ::= 259 ProtocolIE-ID ::= 260 ProtocolIE-ID ::= 261 ProtocolIE-ID ::= 262 ProtocolIE-ID ::= 263 ProtocolIE-ID ::= 264 ProtocolIE-ID ::= 265 ProtocolIE-ID ::= 266 ProtocolIE-ID ::= 267 ProtocolIE-ID ::= 268 ProtocolIE-ID ::= 269 ProtocolIE-ID ::= 270 ProtocolIE-ID ::= 271 ProtocolIE-ID ::= 272 ProtocolIE-ID ::= 273 ProtocolIE-ID ::= 274 ProtocolIE-ID ::= 275 ProtocolIE-ID ::= 276 ProtocolIE-ID ::= 277 ProtocolIE-ID ::= 278 ProtocolIE-ID ::= 279 ProtocolIE-ID ::= 280 ProtocolIE-ID ::= 281 ProtocolIE-ID ::= 282 ProtocolIE-ID ::= 283 ProtocolIE-ID ::= 284 ProtocolIE-ID ::= 285 ProtocolIE-ID ::= 286 ProtocolIE-ID ::= 287 ProtocolIE-ID ::= 288 ProtocolIE-ID ::= 289 ProtocolIE-ID ::= 290 ProtocolIE-ID ::= 291 ProtocolIE-ID ::= 292 ProtocolIE-ID ::= 293 ProtocolIE-ID ::= 294 ProtocolIE-ID ::= 295 ProtocolIE-ID ::= 296 ProtocolIE-ID ::= 297 ProtocolIE-ID ::= 298 ProtocolIE-ID ::= 299

9.3.8 Container definitions

```
-- Container definitions
__ *********************
X2AP-Containers {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
eps-Access (21) modules (3) x2ap (2) version1 (1) x2ap-Containers (5) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
      -- IE parameter types from other modules.
__ ********************
IMPORTS
   maxPrivateIEs,
  maxProtocolExtensions,
  maxProtocolIEs,
   Criticality,
   Presence,
  PrivateIE-ID,
   ProtocolIE-ID
FROM X2AP-CommonDataTypes;
  *****************
-- Class Definition for Protocol IEs
__ ********************************
X2AP-PROTOCOL-IES ::= CLASS {
   &id
              ProtocolIE-ID
                                 UNIQUE,
   &criticality Criticality,
   &Value,
   &presence
               Presence
WITH SYNTAX {
               &id
   CRITICALITY
               &criticality
   TYPE
               &Value
   PRESENCE
               &presence
__ ********************************
```

```
-- Class Definition for Protocol IEs
X2AP-PROTOCOL-IES-PAIR ::= CLASS {
                          ProtocolIE-ID
                                              UNIQUE,
    &firstCriticality
                          Criticality,
    &FirstValue,
    &secondCriticality
                          Criticality,
    &SecondValue,
    &presence
                          Presence
WITH SYNTAX {
                           &id
    FIRST CRITICALITY
                          &firstCriticality
   FIRST TYPE
                          &FirstValue
                          &secondCriticality
    SECOND CRITICALITY
                          &SecondValue
    SECOND TYPE
    PRESENCE
                           &presence
   ******************
-- Class Definition for Protocol Extensions
X2AP-PROTOCOL-EXTENSION ::= CLASS {
    &id
                      ProtocolIE-ID
                                          UNIQUE,
    &criticality
                       Criticality,
    &Extension,
    &presence
                       Presence
WITH SYNTAX {
                       &id
                      &criticality
   CRITICALITY
    EXTENSION
                       &Extension
    PRESENCE
                       &presence
-- Class Definition for Private IEs
X2AP-PRIVATE-IES ::= CLASS {
    &id
                      PrivateIE-ID,
    &criticality
                      Criticality,
   &Value,
    &presence
                      Presence
WITH SYNTAX {
                       &id
    ID
```

```
CRITICALITY
                   &criticality
   TYPE
                   &Value
   PRESENCE
                    &presence
    *****************
  Container for Protocol IEs
*****************
ProtocolIE-Container {X2AP-PROTOCOL-IES : IEsSetParam} ::=
   SEQUENCE (SIZE (0..maxProtocolIEs)) OF
   ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-Single-Container {X2AP-PROTOCOL-IES : IEsSetParam} ::=
   ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-Field {X2AP-PROTOCOL-IES : IEsSetParam} ::= SEQUENCE {
              X2AP-PROTOCOL-IES.&id
                                                  ({IEsSetParam}),
   criticality X2AP-PROTOCOL-IES.&criticality
                                                 ({IEsSetParam}{@id}),
                                                 ({IEsSetParam}{@id})
   value
         X2AP-PROTOCOL-IES.&Value
    -- Container for Protocol IE Pairs
  ProtocolIE-ContainerPair {X2AP-PROTOCOL-IES-PAIR : IEsSetParam} ::=
   SEQUENCE (SIZE (0..maxProtocolIEs)) OF
   ProtocolIE-FieldPair {{IEsSetParam}}
ProtocolIE-FieldPair {X2AP-PROTOCOL-IES-PAIR : IESSetParam} ::= SEQUENCE
                 X2AP-PROTOCOL-IES-PAIR.&id
                                                        ({IEsSetParam}),
   firstCriticality X2AP-PROTOCOL-IES-PAIR.&firstCriticality
                                                        ({IEsSetParam}{@id}),
   firstValue
                X2AP-PROTOCOL-IES-PAIR.&FirstValue
                                                        ({IEsSetParam}{@id}),
   secondCriticality X2AP-PROTOCOL-IES-PAIR.&secondCriticality
                                                        ({IEsSetParam}{@id}),
   secondValue
                   X2AP-PROTOCOL-IES-PAIR.&SecondValue
                                                        ({IEsSetParam}{@id})
    ****************
-- Container Lists for Protocol IE Containers
    *****************
ProtocolIE-ContainerList {INTEGER : lowerBound, INTEGER : upperBound, X2AP-PROTOCOL-IES : IEsSetParam} ::=
   SEQUENCE (SIZE (lowerBound..upperBound)) OF
   ProtocolIE-Container {{IEsSetParam}}
ProtocolIE-ContainerPairList {INTEGER : lowerBound, INTEGER : upperBound, X2AP-PROTOCOL-IES-PAIR : IESSetParam} ::=
   SEQUENCE (SIZE (lowerBound..upperBound)) OF
```

```
ProtocolIE-ContainerPair {{IEsSetParam}}
  Container for Protocol Extensions
ProtocolExtensionContainer {X2AP-PROTOCOL-EXTENSION : ExtensionSetParam} ::=
   SEOUENCE (SIZE (1..maxProtocolExtensions)) OF
   ProtocolExtensionField {{ExtensionSetParam}}
ProtocolExtensionField {X2AP-PROTOCOL-EXTENSION : ExtensionSetParam} ::= SEQUENCE {
   id
                     X2AP-PROTOCOL-EXTENSION.&id
                                                           ({ExtensionSetParam}),
                                                           ({ExtensionSetParam}{@id}),
   criticality
                     X2AP-PROTOCOL-EXTENSION.&criticality
   extensionValue
                  X2AP-PROTOCOL-EXTENSION. & Extension
                                                           ({ExtensionSetParam}{@id})
-- Container for Private IEs
     PrivateIE-Container {X2AP-PRIVATE-IES : IEsSetParam} ::=
   SEQUENCE (SIZE (1..maxPrivateIEs)) OF
   PrivateIE-Field {{IEsSetParam}}
PrivateIE-Field {X2AP-PRIVATE-IES : IESSetParam} ::= SEQUENCE {
                X2AP-PRIVATE-IES.&id
                                                ({IEsSetParam}),
   criticality
                  X2AP-PRIVATE-IES.&criticality ({IEsSetParam}{@id}),
   value
                  X2AP-PRIVATE-IES.&Value
                                                ({IEsSetParam}{@id})
END
```

9.4 Message transfer syntax

X2AP shall use the ASN.1 Basic Packed Encoding Rules (BASIC-PER) Aligned Variant as transfer syntax, as specified in ITU-T Rec. X.691 [5].

9.5 Timers

T_{RELOCprep}

- Specifies the maximum time for the Handover Preparation procedure in the source eNB.

TX2_{RELOCoverall}

- Specifies the maximum time for the protection of the overall handover procedure in the source eNB.

$T_{\text{DCprep}} \\$

Specifies the maximum time for the SeNB Addition Preparation, MeNB initiated SeNB Modification
 Preparation, SgNB Addition Preparation, or MeNB initiated SgNB Modification Preparation procedure in the
 MeNB.

$T_{DCoverall}$

- Specifies the maximum time in the SeNB for either the SeNB initiated SeNB Modification procedure or the protection of the E-UTRAN actions necessary to configure UE resources at SeNB Addition or MeNB initiated SeNB Modification. Or specifies the maximum time in the SgNB for either the SgNB initiated SgNB Modification procedure or the protection of the E-UTRAN actions necessary to configure UE resources at SgNB Addition or MeNB initiated SgNB Modification.

Handling of unknown, unforeseen and erroneous protocol data

Section 10 of TS 36.413 [4] is applicable for the purposes of the present document.

Annex A (informative): Change history

| TSG# | TSG Doc. | CR | Rev | Subject/Comment | New |
|---------------|------------------------|--------------|-----|--|--------|
| 09/2009 | | | | Rel-9 version is created based on v.8.7.0 | 9.0.0 |
| 45 | RP-090787 | | 1 | Handling of Emergency Calls in Limited Service Mode | |
| 45 | RP-090787 | 0297 | 1 | Emergency Calls Mobility Handling | |
| 46 | RP-091192 | 0307 | | Introduction of signalling support for Composite Available Capacity with relative units | 9.1.0 |
| 46 | RP-091192 | 0308 | 2 | Configuration adaptation for MLB on X2 | 9.1.0 |
| 46 | | 0310 | | Clarification on operational use of updated configuration data | 9.1.0 |
| 46 | | | 2 | Automatic PRACH information exchange over X2 for SON | 9.1.0 |
| 46 | RP-091192 | | 1 | Introduction of Radio Link Failure Indication procedure | 9.1.0 |
| | RP-091192 | 0334 | | Introduction of Handover Report procedure | 9.1.0 |
| 46 46 | RP-091192 | 0335 | 1 | Introduction of Handover Report procedure Introduction of signalling support for Composite Available Capacity with | 9.1.0 |
| | | | | relative units | |
| 47 | RP-100213 | 0337 | | Correction to the Resource Status Reporting Initiation procedure | 9.2.0 |
| 47 | RP-100229 | | 2 | Addition of MBSFN information on X2 interface | 9.2.0 |
| 47 | RP-100228 | 0344 | 4 | Cell pair identification for Mobility Settings Change procedure | 9.2.0 |
| 47 | RP-100213 | 0352 | | Addition of cause value for not admitted E-RAB | 9.2.0 |
| 47 | RP-100229 | 0355 | 1 | Rapporteur's update of X2AP protocol | 9.2.0 |
| 47 | RP-100230 | 0356 | | RNL-based energy saving solution | 9.2.0 |
| 47 | RP-100228 | 0358 | | Inclusion of UE RLF Report in RLF INDICATION message | 9.2.0 |
| 48 | RP-100599 | 0363 | | Correction of RLF INDICATION message | 9.3.0 |
| 48 | RP-100599 | 0364 | | Missing error cause for Not supported QCI on Handover | 9.3.0 |
| 48 | RP-100599 | 0370 | | Introduction of PLMN-related abnormal conditions during X2 handover in | 9.3.0 |
| 40 | DD 400=05 | 0070 | _ | network sharing scenarios. | 0.0.0 |
| 48 | RP-100599 | 0372 | | Outcome of RAN3#68 review of X2AP | 9.3.0 |
| 48 | RP-100599 | 0373 | | Correction of forbidden inter-RAT | 9.3.0 |
| 49 | RP-100908 | 0376 | | Explicit PLMN coding in Trace IEs | 9.4.0 |
| 49 | RP-100906 | 0380 | | The corrections for Last Visited Cell Information | 9.4.0 |
| 49 | RP-100906 | 0383 | | Handover Restriction List | 9.4.0 |
| 49 | RP-100908 | 0384 | 1 | Complete list of served cells to be provided in X2 SETUP and eNB Configuration Update messages | 9.4.0 |
| 50 | RP-101271 | 0385 | | Clarification on Handover Restriction List | 9.5.0 |
| 50 | RP-101270 | 0403 | 3 | Correction of semantics description | 9.5.0 |
| 12/2010 | | | _ | Rel-10 version created based in v. 9.5.0 | 10.0.0 |
| 50 | RP-101304 | 0393 | 2 | Introduction of partial failure in Resource Status Reporting Initiation | 10.0.0 |
| 50 | RP-101279 | 0407 | 4 | procedure including detailed reporting of failure cause X2 handover support | 10.0.0 |
| SP-49 | | 0407 | 4 | | 10.1.0 |
| | SP-100629 | 0400 | | Clarification on the use of References (TS 21.801 CR#0030) | |
| 51 | RP-110231 | 0408 | | Conditions for Enhanced X2 mobility | 10.1.0 |
| 51 51 | RP-110237 RP-110222 | 0409 0411 | 1 | Introduction of X2 signalling support for eICIC Correction of the usage of optional ShortMAC-I IE in RLF INDICATION | 10.1.0 |
| | | <u> </u> | | message | 1 |
| 51 | RP-110230 | 0413 | | Support for MDT | 10.1.0 |
| 51 | | 0419 | 2 | Clarification on TEID value range for X2AP | 10.1.0 |
| 51 | RP-110231 | 0420 | | Clarify X2 Handover Scenarios | 10.1.0 |
| 51 | RP-110237 | 0427 | | Enabling reporting of ABS resource status for eICIC purposes | 10.1.0 |
| 52 | RP-110695 | 0435 | 1 | MDT correction for TAI | 10.2.0 |
| 52 | RP-110698 | 0436 | 1 | Clarification on Radio Resource Status | 10.2.0 |
| 52 | RP-110700 | 0443 | | X2 support of RLF Report extension for SON MRO defined in R10 | 10.2.0 |
| 52 | RP-110695 | 0447 | | Support for MDT user consent | 10.2.0 |
| 52 | RP-110686 | | 2 | Rapporteur's proposal following review of TS 36.423 | 10.2.0 |
| 52 | RP-110689 | 0452 | | Correction of the partial success mechanism in Resource Status | 10.2.0 |
| F 2 | DD 440005 | 0450 | 2 | Reporting MDT amendments | 10.0.0 |
| 52 | RP-110695 | 0453 | | | 10.2.0 |
| 52 | RP-110685 | 0454 | | Reference review outcome in TS 36.423 | 10.2.0 |
| 52 | RP-110695 | 0456 | 0 | Correction of trace function and trace session | 10.2.0 |
| 53 | RP-111196 | 0464 | | Clarification of procedures defined for MLB purposes | 10.3.0 |
| 53 | RP-111196 | 0469 | | ASN.1 definition conforms to ITU-T Recommendations | 10.3.0 |
| 53 | RP-111194 | 0476 | | Updates of reported quantities for eICIC | 10.3.0 |
| 53 | RP-111195 | 0478 | 1 | Definition of value of bit in Measurements to Activate | 10.3.0 |
| 53 | RP-111197 | 0479 | | Clarification on PLMN Identity | 10.3.0 |
| 54 | RP-111648 | 0480 | 2 | Correction on ABS Information | 10.4.0 |
| 55 | RP-120234 | 0491 | 1 | Correct of reset | 10.5.0 |
| 03/2012 | | 1 | | Rel-11 version created based in v. 10.5.0 | 11.0.0 |

| 55 | RP-120236 | 0487 | 1 | Addition of TAC to the neighbour information of a served cell for X2 setup | 11.0.0 |
|----------|------------------------|--------------|----------|--|------------------|
| 56 | DD 400754 | 0400 | | and eNB update procedures | 11 1 2 |
| 56 56 | RP-120751 | 0496 | - | Introduction of the Security Algorithm (ZUC) | 11.1.0 |
| 56 | RP-120751 RP-120751 | 0498 0501 | 3 | Clarification on TAC in X2 Setup Adding RRC re-establishment cause to RLF indication | 11.1.0 11.1.0 |
| 56 | RP-120751 | 0513 | | Correction on Emergency ARP Value | 11.1.0 |
| 56 | RP-120752 | 0516 | | Improved granularity for the time UE stayed in cell | 11.1.0 |
| 57 | RP-121137 | 0520 | | Support of MBMS Service Continuity | 11.2.0 |
| 57 | RP-121140 | | 3 | Multiband support per cell | 11.2.0 |
| 57 | RP-121135 | | 1 | Enhancement of HO REPORT to enable inter-RAT ping-pong detection | 11.2.0 |
| | 121100 | 00 10 | ' | and addition of HO cause value to the UE history information | 11.2.0 |
| 57 | RP-121139 | 0546 | | Support for new special subframe configurations | 11.2.0 |
| 58 | RP-121731 | 0548 | | Addition of Mobility Information | 11.3.0 |
| 58 | RP-121730 | 0549 | 3 | Introduction of new MDT measurements | 11.3.0 |
| 58 | RP-121732 | 0550 | 1 | HeNB Mobility enhancement when target is hybrid HeNB | 11.3.0 |
| 58 | RP-121730 | 0552 | 2 | Multi-PLMN MDT | 11.3.0 |
| 58 | RP-121731 | 0564 | | Clarification on successful handover for HO report procedure | 11.3.0 |
| 58 | RP-121737 | 0569 | 2 | X2AP Rapporteur Update | 11.3.0 |
| 59 | RP-130208 | 0572 | 3 | Correction on the Special Subframe Pattern | 11.4.0 |
| 59 | RP-130208 | 0580 | 2 | Support for Downlink-Only Bands | 11.4.0 |
| 59 | RP-130207 | 0581 | | Correction on use of Mobility Information | 11.4.0 |
| 59 | RP-130207 | 0582 | | Correction on MRO procedures | 11.4.0 |
| 59 | RP-130237 | 0583 | 2 | Extending maxEARFCN | 11.4.0 |
| 59 | RP-130237 | | 1 | Extending Maximum Frequency Band Index | 11.4.0 |
| 59 | RP-130211 | 0585 | 1 | Rapporteur correction of X2AP | 11.4.0 |
| 59 | RP-130207 | 0586 | | Clarification on Signalling Based MDT PLMN List | 11.4.0 |
| 59 | RP-130210 | 0587 | 1 | X2AP modification for PDCP SN extension | 11.4.0 |
| 60 | RP-130643 | 0588 | | Correction on the Definition of Direct Neighbours | 11.5.0 |
| 60 | RP-130641 | | 1 | Correction for the MDT Location Information IE | 11.5.0 |
| 60 | RP-130640 | 0590 | | Correction on RLF INDICATION procedure | 11.5.0 |
| 60 | RP-130643 | | 1 | Security key generation in case of MFBI | 11.5.0 |
| 60 | RP-130643 | 0593 | | Correction on the Multiple Frequency Band Indicators | 11.5.0 |
| 61 | RP-131181 | 0598 | | Correction on Handover Report procedure | 11.6.0 |
| 61 61 | RP-131179 | 0602 | 1 | Correction on ABS Information | 11.6.0 |
| 62 | RP-131183 | 0606 | | Correction of terminology concerning the mobility restriction function | 11.6.0 |
| 62 | RP-131902 | | 3 | Correction of Handover Restriction List | 11.7.0 |
| 62 | RP-131902 RP-131902 | 0611 0623 | 2 | Correction for Load Balancing Related cause value CR for 36423 Correction for Load Balancing Related IE | 11.7.0 |
| 62 | RP-131902 | | 3 | Handling SIPTO@LN during UE Context Release procedure | 12.0.0 12.0.0 |
| 63 | RP-140294 | 0634 | 3 | Correction to tabular of Served Cell Information IE | 12.0.0 |
| 64 | RP-140901 | 0629 | 1 | TDD eIMTA support on X2AP | 12.1.0 |
| 64 | RP-140906 | 0630 | | Provide IMEISV to eNB to identify UE characteristics | 12.2.0 |
| 64 | RP-140905 | | 1 | Correction of SN STATUS TRANSFER | 12.2.0 |
| 64 | RP-140905 | 0676 | <u> </u> | Clarification of DL ABS status | 12.2.0 |
| 64 | RP-140897 | | 4 | Introduce X2GW procedures in Stage-3 | 12.2.0 |
| 65 | RP-141520 | 0663 | | Introduction of the UE history reported from the UE | 12.3.0 |
| 65 | RP-141518 | 0690 | | Introduction of an indication of the expected UE behaviour | 12.3.0 |
| 66 | RP-142089 | | 8 | Introduction of Dual Connectivity | 12.4.0 |
| 66 | RP-142090 | 0692 | | Introduction of inter-eNB CoMP signalling | 12.4.0 |
| 66 | RP-142092 | 0748 | | X2 support for Network Assisted Interference Cancellation | 12,4.0 |
| 66 | RP-142094 | 0754 | | X2AP Rapporteur Update | 12.4.0 |
| 66 | RP-142094 | 0759 | | Correction on RLF Report Container | 12.4.0 |
| 66 | RP-142094 | 0776 | | Setting of Re-establishment Cell ID in RLF Indication message | 12.4.0 |
| 66 | RP-142094 | | 3 | X2 Removal Signaling | 12.4.0 |
| 12/2014 | | | | History table corrected | 12.4.1 |
| 12/2014 | | | | ASN.1 correction to make it compilable | 12.4.2 |
| 67 | RP-150353 | 0693 | 5 | ProSe authorized indication | 12.5.0 |
| 67 | RP-150351 | 0782 | | Corrections on the usage of SeNB UE AMBR in dual connectivity | 12.5.0 |
| 67 | RP-150351 | 0790 | 1 | Corrections of Dual Connectivity in general | 12.5.0 |
| 67 | RP-150356 | 0797 | 1 | Correction on DC stage3 | 12.5.0 |
| | | 0004 | 4 | Correction of the Usage of the MultibandInfoList IE | 12.5.0 |
| 67 | RP-150348 | | 1 | | |
| 67 | RP-150348 RP-150351 | 0801 | | Introduction of Cause values for Dual Connectivity | 12.5.0 |
| | | | 1 | | |

| 67 | RP-150356 | 0805 | | Miscellaneous Editorials for X2AP | 12.5.0 |
|---------|------------|------|----------|---|------------------|
| 67 | RP-150351 | 0806 | 1 | Correction on SeNB behaviour for distinguishing uplink PDCP PDUs | 12.5.0 |
| 68 | RP-150943 | | 1 | | |
| 68 | RP-150943 | 0827 | 1 | Introduction of a new DC cause for not supported configurations | 12.6.0 12.6.0 |
| 68 | RP-150943 | 0831 | <u>'</u> | | |
| 06/2015 | 141 100010 | 0001 | | Rel-13 version created based in v. 12.6.0 | 12.6.0 |
| 68 | RP-150945 | 0808 | 8 | Addition of Intra-LTE notifications of AAS-based reconfigurations | 13.0.0 |
| 69 | RP-151455 | 0788 | 11 | Introduction of enhanced inter-eNB CoMP signalling | 13.1.0 |
| 69 | RP-151451 | 0854 | 1 | Correction on GBR parameters for dual connectivity | 13.1.0 |
| 69 | RP-151450 | 0877 | 1 | Handling of Unknown or Erroneous AP IDs in Dual Connectivity | 13.1.0 |
| 70 | RP-152100 | 0850 | 5 | UE-to-Network Relay authorization | 13.2.0 |
| 70 | RP-152099 | 0892 | 2 | Extension of PDCP SN | 13.2.0 |
| 70 | RP-152102 | 0901 | 4 | Adding CSG support to DC | 13.2.0 |
| 70 | RP-152086 | 0907 | | Correction on inter eNB CoMP | 13.2.0 |
| 70 | RP-152102 | 0910 | 5 | Support of SIPTO stand-alone architecture in dual connectivity | 13.2.0 |
| 70 | RP-152102 | 0911 | 2 | Support of SIPTO stand-alone architecture in dual connectivity | 13.2.0 |
| 70 | RP-152102 | 0912 | 6 | Support of Sir 10 and Eir A in dual connectivity Support of handover without SeNB change | 13.2.0 |
| 70 | RP-152102 | | 2 | Handling of User Inactivity in the SeNB | 13.2.0 |
| 70 | RP-152086 | 0918 | | Correction of Subband Index | 13.2.0 |
| 70 | RP-152085 | 0918 | 1 | Correction of Subbaria maex Correction of intra cell handovers in multiband deployments | 13.2.0 |
| 70 | RP-152102 | 0927 | 2 | Extension of UE X2AP ID | 13.2.0 |
| 70 | RP-152102 | 0929 | 2 | SIPTO@LN and LIPA bearer deactivation for DC | 13.2.0 |
| 70 | RP-152102 | 0932 | 3 | Introduction of feMDT | 13.2.0 |
| 70 | RP-152108 | 0932 | 2 | Addition of the Cell Deployment Status Indicator and replacing cell | 13.2.0 |
| 70 | KF-132100 | 0930 | _ | information | 13.2.0 |
| 70 | RP-152102 | 0939 | 1 | Tunnel Information of BBAI in Dual Connectivity | 13.2.0 |
| 71 | RP-160449 | 0937 | 3 | Addition of X2 Removal Threshold to the X2 Removal Request message | 13.3.0 |
| 71 | RP-160449 | 0949 | 2 | Modification of an ongoing resource reporting procedure | 13.3.0 |
| 71 | RP-160448 | 0950 | 1 | Correction on SeNB Addition Preparation concerning inter-MeNB | 13.3.0 |
| | | | • | handover without SeNB change | |
| 71 | RP-160448 | 0953 | 1 | | |
| 71 | RP-160448 | 0954 | | Correction for SeNB Addition behaviour Abnormal | 13.3.0 13.3.0 |
| 71 | RP-160451 | 0959 | | | |
| 71 | RP-160449 | 0962 | 1 | Rapporteur's Update | 13.3.0 13.3.0 |
| 71 | RP-160448 | 0963 | 3 | Correction on Old/New eNB UE X2AP ID | 13.3.0 |
| 72 | RP-161042 | 0965 | 7 | Introduction of the inter-eNB UE Context Resume function | 13.4.0 |
| 72 | RP-161043 | 0968 | 1 | Correction on the DC function description | 13.4.0 |
| 72 | RP-161043 | 0969 | 3 | Correction on eNB UE X2AP ID Extension | 13.4.0 |
| 72 | RP-161043 | 0972 | 2 | Indication of Bearer Type for cIOT | 13.4.0 |
| 72 | RP-161047 | 0978 | _ | Correction of RSRP Measurement Report List | 13.4.0 |
| 73 | RP-161551 | 0989 | 1 | Correction on NB-IoT inter node RRC container | 13.5.0 |
| 73 | RP-161550 | 0998 | | Correction on Security Related Information in UE Context Retrieval | 13.5.0 |
| - | 1 131330 | | _ | Request | . 5.5.5 |
| 09/2016 | | | | Rel-14 version created based in v. 13.5.0 | 14.0.0 |
| 73 | RP-161552 | 0975 | 5 | Vehicular Authorization Signaling over X2 | 14.0.0 |
| 74 | RP-162337 | 1007 | _ | Clarification on V2X Services Authorized IE | 14.1.0 |
| 74 | RP-162340 | 1008 | 3 | Target cell selection for low complexity UEs and UEs in enhanced | 14.1.0 |
| |] | | | coverage | |
| 74 | RP-162340 | 1011 | _ | Correction to Served Cell Information for NB-IoT | 14.1.0 |

| | | | | | | Change history | |
|--------------------|----------------|------------------------|--------------|----------------|--------|--|------------------|
| Date | Meeting | TDoc | CR | Rev | Cat | Subject/Comment | New version |
| 03/2017 | RP-75 | RP-170535 | 1023 | | В | X2AP Support for Inter-eNB Mobility without WT Change | 14.2.0 |
| 03/2017 | RP-75 | RP-170537 | 1005 | 3 | В | Introduction of a new special subframe configuration | 14.2.0 |
| 03/2017 | RP-75 | RP-170538 | 1025 | | В | Support of V2X over X2 | 14.2.0 |
| 03/2017 | RP-75 | RP-170542 | 1026 | | В | Introduction of New types of eNB ID | 14.2.0 |
| 03/2017 | RP-75 | RP-170536 | 1024 | 1 | | Introduction of eMOB Stage3 | 14.2.0 |
| 06/2017 09/2017 | RP-75 RP-77 | RP-171329 RP-171974 | 1033 1035 | 1 | A F | Introduction of UL TNL address in CloT UP Solution Correction on NB-IoT UP mobility | 14.3.0 14.4.0 |
| 09/2017 | RP-77 | RP-171974 | 1033 | 1 | | Correction of SeNB Release Confirm | 14.4.0 |
| 12/2017 | RP-78 | RP-172673 | 1044 | 2 | | Introduction of new IEs in X2 for high performing load balance | 14.5.0 |
| 12/2017 | RP-78 | RP-172715 | 1046 | - | F | Correction of mismatched tabular and ASN.1 | 14.5.0 |
| 12/2017 | RP-78 | RP-172672 | 1041 | 6 | В | Baseline CR to TS 36.423 covering agreements of RAN3 #98 | 15.0.0 |
| 12/2017 | RP-78 | RP-172674 | 1045 | 1 | | Introduction of QoE Measurement Collection for LTE | 15.0.0 |
| 03/2018 | RP-79 | RP-180468 | 1050 | - | В | X2AP corrections for agreed EN-DC BL CR | 15.1.0 |
| 03/2018 | RP-79 | RP-180468 | 1051 | 1 | F | Essential corrections for EN-DC | 15.1.0 |
| 03/2018 | RP-79 RP-79 | RP-180468 RP-180468 | 1052 1053 | 1 | F | Clarification on HRL for EN-DC Correction of counter Check procedure for EN-DC | 15.1.0 15.1.0 |
| 03/2018 | RP-79 | RP-180468 | 1053 | - | В | Support for supplementary UL carrier | 15.1.0 |
| 03/2018 | RP-79 | RP-180468 | 1056 | - | F | Correction on SgNB initiated SgNB Modification procedure | 15.1.0 |
| 03/2018 | RP-79 | RP-180468 | 1061 | 1 | F | Correction of mandatory/optional/Conditional IEs in 36.423 | 15.1.0 |
| 03/2018 | RP-79 | RP-180468 | 1067 | 2 | | Support for S-RLF | 15.1.0 |
| 03/2018 | RP-79 | RP-180468 | 1071 | 2 | F | Update of EN-DC X2 Setup and EN-DC Configuration Update | 15.1.0 |
| 03/2018 | RP-79 | RP-180468 | 1073 | - | F | Removal of wrong abnormal behaviour that does not exist in EN-DC | 15.1.0 |
| 03/2018 | RP-79 | RP-180468 | 1078 | 1 | | CR for addition of cause | 15.1.0 |
| 03/2018 03/2018 | RP-79 RP-79 | RP-180468 | 1079 1081 | 1 | F | Clarification and correction on X2 for EN-DC Corrections for EN-DC | 15.1.0 15.1.0 |
| 03/2018 | RP-79 | RP-180468 RP-180468 | 1082 | 1 | F | Resolve the remaining issues over X2 for EN-DC | 15.1.0 |
| 03/2018 | RP-79 | RP-180468 | 1083 | 1 | F | Introduction of DRB ID for EN-DC | 15.1.0 |
| 03/2018 | RP-79 | RP-180314 | 1087 | 1 | F | Removing data forwarding from the corresponding node for EN-DC | 15.1.0 |
| 03/2018 | RP-79 | RP-180472 | 1092 | 1 | F | Rapporteur correction of 36.423 before NSA ASN.1 freeze | 15.1.0 |
| 03/2018 | RP-79 | RP-180473 | 1093 | - | Α | Correction on Offset of NB-IoT Channel Number to EARFCN | 15.1.0 |
| 03/2018 | RP-79 | RP-180468 | 1094 | - | F | Correction of TAC for NG-RAN cells before NSA ASN.1 freeze | 15.1.0 |
| 03/2018 | RP-79 | RP-180468 | 1095 | - | F | Remove PDCP change indication in SN modification request | 15.1.0 |
| 03/2018 | RP-79 | RP-180468 | 1096 | - | F | message Change the presence of container in SgNB reconfiguration complete procedure | 15.1.0 |
| 03/2018 | RP-79 | RP-180468 | 1097 | - | F | Addition of Measurement Timing Configuration information | 15.1.0 |
| 06/2018 | RP-80 | RP-181241 | 1047 | 6 | В | Support of Enhanced VoLTE Performance | 15.2.0 |
| 06/2018 | RP-80 | RP-181239 | 1065 | 4 | | X2 partial reset for EN-DC | 15.2.0 |
| 06/2018 | RP-80 | RP-181238 | 1068 | 1 | F | Clarification of the interactions with the UE Context Release | 15.2.0 |
| 06/2018 06/2018 | RP-80 RP-80 | RP-181241 RP-181237 | 1086 1090 | 9 | C B | Introduction of QMC for MTSI in EUTRAN Baseline CR for E-UTRA - NR Cell Resource Coordination for TS | 15.2.0 15.2.0 |
| | | | | | | 36.423 covering agreements of RAN3#100 | |
| 06/2018 | RP-80 | RP-181238 | 1104 | - | F | Correction of UL link configuration in TS36.423 | 15.2.0 |
| 06/2018 | RP-80 | RP-181410 | 1107 1116 | 1 | F | Addition of the full config indicator | 15.2.0 |
| 06/2018 06/2018 | RP-80 RP-80 | RP-181239 RP-181239 | 1117 | 2 | | Correction of the SeNB Reconfiguration Completion procedure Correction of abnormal conditions for EN-DC security algorithm | 15.2.0 15.2.0 |
| 00/2010 | 111 00 | 101233 | ' ' ' ' | | l ' | selection | 10.2.0 |
| 06/2018 | RP-80 | RP-181238 | 1121 | 1 | F | Correction of reference in RRC Container | 15.2.0 |
| 06/2018 | RP-80 | RP-181238 | 1122 | - | F | Correction of condition presence of E-RAB Level QoS Parameters | 15.2.0 |
| 00/0046 | DD 00 | DD 404000 | 4400 | . | _ | related | 45.0.0 |
| 06/2018 | RP-80 | RP-181238 RP-181237 | 1123 | 1 | F | Support of TEID change at SN | 15.2.0 |
| 06/2018 06/2018 | RP-80 RP-80 | RP-181237 RP-181238 | 1125 1130 | 4 | B F | X2AP CR for support of NR Multiple frequency band in EN-DC Correction of max NR ARFCN value | 15.2.0 15.2.0 |
| 06/2018 | RP-80 | RP-181243 | 1132 | 3 | | Baseline CR: Introduction of the Aerial Usage Indication | 15.2.0 |
| 06/2018 | RP-80 | RP-181238 | 1133 | 1 | F | Use of SPID for EN-DC | 15.2.0 |
| 06/2018 | RP-80 | RP-181238 | 1134 | 1 | F | Correction of references to RRC containers for EN-DC | 15.2.0 |
| 06/2018 | RP-80 | RP-181238 | 1135 | - | F | Corrections on Tabular indentation and ASN.1 criticality | 15.2.0 |
| 06/2018 | RP-80 | RP-181239 | 1138 | - | F | Adding missing relation for the TEID | 15.2.0 |
| 06/2018 | RP-80 | RP-181241 | 1142 | 3 | | Retrieve UE Context at UE Re-establishment | 15.2.0 |
| 06/2018 | RP-80 | RP-181241 | 1143 | - | D F | Rapporteur's corrections on the specification | 15.2.0 |
| 06/2018 06/2018 | RP-80 RP-80 | RP-181239 RP-181239 | 1145 1146 | 2 | | Correction on the same terminology of "Split SRB" in TS36.423 Correction of Split SRB configuration in TS36.423 | 15.2.0 15.2.0 |
| 06/2018 | RP-80 | RP-181239 | 1149 | 3 | | CR for Clarification on resource coordination | 15.2.0 |
| 06/2018 | RP-80 | RP-181239 | 1152 | - | F | Correction for PDCP Duplication | 15.2.0 |
| 06/2018 | RP-80 | RP-181239 | 1153 | - | F | Coordination of Inactivity for EN-DC | 15.2.0 |
| 06/2018 | RP-80 | RP-181239 | 1155 | - | С | Introduction of CN type restriction | 15.2.0 |
| 06/2018 | RP-80 | RP-181239 | 1158 | | F | User Inactivity handling over X2 EN-DC | 15.2.0 |
| 06/2018 | RP-80 | RP-181239 | 1160 | 1 | | Addition of Cause Value | 15.2.0 |
| 06/2018 | RP-80 | RP-181239 | 1161 | 2 | F | Addition of MeNB cell ID to solve the PCI confusion | 15.2.0 |

| 06/2018 | RP-80 | RP-181239 | 1164 | - | F | Corrections on misalignment between tabular and ASN.1 | 15.2.0 |
|---------|-------|-----------|------|---|---|--|--------|
| 06/2018 | RP-80 | RP-181239 | 1165 | 1 | F | Introduction of EN-DC X2 removal procedure | 15.2.0 |
| 06/2018 | RP-80 | RP-181239 | 1167 | - | F | Support of DL TEID change over S1 at SN | 15.2.0 |
| 06/2018 | RP-80 | RP-181242 | 1174 | 2 | В | Support of NB-IoT measurement enhancement and TDD Config | 15.2.0 |
| 06/2018 | RP-80 | RP-181239 | 1175 | - | F | ASN.1 correction for EN-DC support in TS 36.423 | 15.2.0 |
| 06/2018 | RP-80 | RP-181239 | 1176 | 1 | F | Introduction of a Configured TAC into the NR Neighbour Information | 15.2.0 |
| | | | | | | IE and the Served NR Cell Information IE | |
| 06/2018 | RP-80 | RP-181239 | 1178 | - | F | Correction of the Limited List IE encoding to enable extensibility | 15.2.0 |

History

| | Document history | | | | | | |
|---------|------------------|-------------|--|--|--|--|--|
| V15.2.0 | July 2018 | Publication | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |